ETSI TS 129 280 V14.0.0 (2017-04)



Universal Mobile Telecommunications System (UMTS); LTE; Evolved Packet System (EPS); 3GPP Sv interface (MME to MSC, and SGSN to MSC) for SRVCC (3GPP TS 29.280 version 14.0.0 Release 14)



Reference RTS/TSGC-0429280ve00

> Keywords LTE,UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: <u>http://www.etsi.org/standards-search</u>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <u>https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx</u>

If you find errors in the present document, please send your comment to one of the following services: <u>https://portal.etsi.org/People/CommiteeSupportStaff.aspx</u>

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI. The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2017. All rights reserved.

DECT[™], PLUGTESTS[™], UMTS[™] and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**[™] and LTE[™] are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <u>http://webapp.etsi.org/key/queryform.asp</u>.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the ETSI Drafting Rules (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

	Intelle	ectual Property Rights	2
Foreword.	Forew	vord	2
1 Scope 5 2 References 5 3 Definitions, symbols and abbreviations 6 3.1 Definitions 6 3.2 Symbols 6 3.3 Abbreviations 6 4 General Description 6 5 Sv Messages and Information Elements 6 5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request. 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.5 SRVCC PS to CS Cancel Acknowledge 12 5.2.6 SRVCC PS to CS Cancel Notification 12 5.2.7 SRVCC Sto PS Request 13 5.2.9 SRVCC CS to PS Cancel Notification 14 5.2.11 SRVCC Sto PS Cancel Notification 14 5.2.13 SRVCC Sto PS Cancel Notification 15 5.3.1 Introduction 15 5.3.2 Echo Request messag	Moda	l verbs terminology	2
2 References 5 3 Definitions, symbols and abbreviations 6 3.1 Definitions 6 3.3 Abbreviations 6 4 General Description 6 5 S W Messages and Information Elements 6 5.1 Introduction 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 7 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.5 SRVCC PS to CS Cancel Notification 12 5.2.6 SRVCC PS to CS Cancel Notification 12 5.2.7 SRVCC Sto DS Request 13 5.2.9 SRVCC Sto DS SCancel Acknowledge 13 5.2.10 SRVCC CS to PS Cancel Acknowledge 14 5.2.11 SRVCC Sto DS Cancel Acknowledge 15 5.3 Path Management Messages 15 5.3.1 Introduction 14 5.2.12 SRVCC Sto DS Cancel Acknowledge 15 5.3.1 Introduction 14 <t< td=""><td>Forew</td><td>vord</td><td>4</td></t<>	Forew	vord	4
3 Definitions, symbols and abbreviations 6 3.1 Definitions 6 3.2 Symbols 6 3.3 Abbreviations 6 3.4 General Description 6 5 SV Messages and Information Elements 6 5.1 Introduction 6 5.2 V Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Acknowledge 12 5.2.6 SRVCC CS to CS Cancel Acknowledge 13 5.2.9 SRVCC CS to PS Response 13 5.2.9 SRVCC CS to PS Request 13 5.2.1 SRVCC CS to PS Request 13 5.2.1 SRVCC CS to PS Cancel Acknowledge 14 5.2.1 SRVCC CS to PS Cancel Acknowledge 15	1	Scope	5
3.1 Definitions 6 3.2 Symbols 6 3.3 Abbreviations 6 4 General Description 6 5 Sv Messages and Information Elements 6 5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.5 SRVCC PS to CS Cancel Notification 12 5.2.6 SRVCC PS to CS Cancel Acknowledge 12 5.2.1 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Complete Notification 14 5.2.11 SRVCC CS to PS Complete Notification 14 5.2.12 SRVCC CS to PS Cancel Notification 15 5.2.13 SRVCC CS to PS Cancel Notification 15 5.2.13 SRVCC CS to PS Cancel Notification 15 5.3.1 Introduction 15 </td <td>2</td> <td>References</td> <td>5</td>	2	References	5
32 Symbols 6 33 Abbreviations 6 4 General Description 6 5 Sv Messages and Information Elements 6 5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Cancel Acknowledge 12 5.2.5 SRVCC PS to CS Cancel Acknowledge 13 5.2.9 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Response 13 5.2.9 SRVCC CS to PS Response 13 5.2.10 SRVCC CS to PS Complete Notification 14 5.2.11 SRVCC CS to PS Complete Notification 14 5.2.12 SRVCC CS to PS Cancel Acknowledge 14 5.2.13 SRVCC CS to PS Cancel Acknowledge 15 5.3.1 Introduction 15 5.3.2 Echo Request Messages 15 5.3.3 Path Management Messages 15	3		
3.3 Abbreviations			
4 General Description 6 5 Sv Messages and Information Elements 6 5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Acknowledge 12 5.2.6 SRVCC PS to CS Cancel Acknowledge 13 5.2.7 SRVCC CS to CS ancel Acknowledge 13 5.2.9 SRVCC CS to PS Request. 13 5.2.9 SRVCC CS to PS Cancel Acknowledge 14 5.2.10 SRVCC CS to PS Cancel Acknowledge 14 5.2.11 SRVCC CS to PS Cancel Acknowledge 14 5.2.12 SRVCC CS to PS Cancel Acknowledge 15 5.10 SRVCC CS to PS Cancel Acknowledge 15 5.11 SRVCC CS to PS Cancel Acknowledge 15 5.12 SRVCC CS to PS Cancel Acknowledge 15 5.3 Path Management Messages 15 5.3.1 Introduction. 15 5.3.2			
5 Sv Messages and Information Elements 6 5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.5 SRVCC PS to CS Cancel Acknowledge 12 5.2.6 SRVCC PS to CS Cancel Acknowledge 13 5.2.9 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Request 13 5.2.10 SRVCC CS to PS Conplete Notification 14 5.2.11 SRVCC CS to PS Cancel Acknowledge 14 5.2.12 SRVCC CS to PS Cancel Acknowledge 14 5.2.11 SRVCC CS to PS Cancel Acknowledge 15 5.11 SRVCC CS to PS Cancel Acknowledge 15 5.3 Path Management Messages 15 5.3.1 Introduction 15 5.3.2 Echo Request message 15 5.3.3 Echo Request message 16 5.4 Version Not Su	3.3	Abbreviations	6
5.1 Introduction 6 5.2 Sv Messages 7 5.2.1 General 7 5.2.2 SRVCC PS to CS Request 8 5.2.3 SRVCC PS to CS Complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.6 SRVCC PS to CS Cancel Notification 12 5.2.7 SRVCC CS to PS Cancel Acknowledge 13 5.2.9 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Complete Notification 14 5.2.10 SRVCC CS to PS Complete Notification 14 5.2.11 SRVCC CS to PS Complete Notification 14 5.2.12 SRVCC CS to PS Cancel Acknowledge 15 5.3 Path Management Messages 15 5.3.1 Introduction 15 5.3.2 Echo Request message 16 5.4 Version NO Supportel Indication message 16 5.4 Version NO Supportel Indication message 16 5.5 Eror Handling 16 5.6 Restoration and Recovery 16 6.5 Keinab	4	General Description	6
5.2 Sv Messages 7 5.2.1 General. 7 5.2.2 SRVCC PS to CS Request. 8 5.2.3 SRVCC PS to CS complete Notification 11 5.2.4 SRVCC PS to CS Complete Notification 12 5.2.5 SRVCC PS to CS Cancel Notification 12 5.2.6 SRVCC PS to CS Cancel Acknowledge 13 5.2.7 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Response 13 5.2.10 SRVCC CS to PS Complete Acknowledge 14 5.2.11 SRVCC CS to PS Complete Notification 14 5.2.12 SRVCC CS to PS Cancel Notification 15 5.2.13 SRVCC CS to PS Cancel Notification 15 5.3.1 Introduction 15 5.3.2 Echo Request message 15 5.3.3 Echo Request message 15 5.3.4 Version Not Supported Indication message 16 5.4 Version Not Supported Indication message 16 5.5 Error Handling. 16 6.6 Restoration and Recovery 16 6.7 <td>5</td> <td></td> <td></td>	5		
5.2.1 General 7 5.2.2 SRVCC PS to CS Request	5.1	Introduction	6
5.2.2 SRVCC PS to CS Request	5.2	6	
5.2.3 SRVCC P5 to CS Response. 11 5.2.4 SRVCC P5 to CS Complete Notification 11 5.2.5 SRVCC P5 to CS Cancel Notification. 12 5.2.6 SRVCC P5 to CS Cancel Acknowledge 12 5.2.7 SRVCC P5 to CS Cancel Acknowledge 13 5.2.8 SRVCC C5 to P5 Reguest 13 5.2.9 SRVCC C5 to P5 Response. 13 5.2.10 SRVCC C5 to P5 Complete Notification 14 5.2.11 SRVCC C5 to P5 Cancel Acknowledge 14 5.2.12 SRVCC C5 to P5 Cancel Notification. 15 5.3 Path Management Messages. 15 5.3.1 Introduction. 15 5.3.2 Echo Request message 16 5.3.3 Echo Response message 16 5.4 Reliable Delivery of Signalling Messages. 16 5.4 Reliable Delivery of Signalling Messages. 16 5.4 Reliable Delivery of Number 4 Container. 17 6.3 Source to Target Transparent Container. 16 6.4 Target to Source Transparent Container. 16 6.5 MM Contex			
5.2.4SRVCC PS to CS Complete Notification115.2.5SRVCC PS to CS Complete Acknowledge125.2.6SRVCC PS to CS Cancel Notification125.2.7SRVCC PS to CS Cancel Acknowledge135.2.8SRVCC CS to PS Request135.2.9SRVCC CS to PS Complete Notification145.2.10SRVCC CS to PS Complete Notification145.2.11SRVCC CS to PS Complete Acknowledge145.2.13SRVCC CS to PS Complete Acknowledge155.2.13SRVCC CS to PS Cancel Notification155.2.13SRVCC CS to PS Cancel Acknowledge155.3.1Introduction155.3.2Echo Request message165.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling166.6Restoration and Recovery166.6Stringert Transparent Container176.3Source Transparent Container176.4Target To Source Transparent Container186.5MM Context for UTRAN SRVCC186.6MM Context for UTRAN SRVCC196.7Sruce Torasparent Container206.8Target RNC ID206.9Target RNC ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Stringert Cause206.2Srtvec Cause206.3MM Context for CS to PS SRVCC			
5.2.5 SRVCC PS to CS Complete Acknowledge 12 5.2.6 SRVCC PS to CS Cancel Notification 12 5.2.7 SRVCC PS to CS Cancel Acknowledge 13 5.2.8 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Response 13 5.2.10 SRVCC CS to PS Complete Notification 14 5.2.11 SRVCC CS to PS Complete Acknowledge 14 5.2.12 SRVCC CS to PS Cancel Notification 15 5.2.13 SRVCC CS to PS Cancel Acknowledge 15 5.3.1 Introduction 15 5.3.2 Echo Request message 15 5.3.3 Echo Request message 16 5.4 Version Not Supported Indication message 16 5.4 Reliable Delivery of Signalling Messages 16 6.5 Error Handling 16 6.6 Sv Information Elements 16 6.7 Aregit Transparent Container 17 6.8 Source to Target Transparent Container 17 6.4 McIontext for E-UTRAN (v)SRVCC 18 6.5 MM Context for C-UTRAN (v)SRVCC 18<			
5.2.6SRVCC PS to CS Cancel Acknowledge125.2.7SRVCC PS to CS cancel Acknowledge135.2.8SRVCC CS to PS Response135.2.9SRVCC CS to PS Complete Notification145.2.11SRVCC CS to PS Complete Notification145.2.12SRVCC CS to PS Cancel Notification145.2.13SRVCC CS to PS Cancel Acknowledge155.3Path Management Messages155.3.1Introduction155.3.2Echo Request message155.3.3Echo Response message165.4Version Not Supported Indication message165.5Error Handling166.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for E-UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24	- · ·		
5.2.7 SRVCC PS to CS Cancel Acknowledge 13 5.2.8 SRVCC CS to PS Request 13 5.2.9 SRVCC CS to PS Response 13 5.2.10 SRVCC CS to PS Complete Notification 14 5.2.11 SRVCC CS to PS Complete Acknowledge 14 5.2.12 SRVCC CS to PS Cancel Notification 15 5.3.1 SRVCC CS to PS Cancel Acknowledge 15 5.3.3 Path Management Messages 15 5.3.1 Introduction 15 5.3.2 Echo Request message 16 5.3.3 Echo Response message 16 5.4 Reliable Delivery of Signalling Messages 16 5.4 Reliable Delivery of Signalling Messages 16 5.6 Restoration and Recovery 16 6.1 General 16 6.2 STN-SR 17 6.3 MM Context for UTRAN (v)SRVCC 18 6.6 MM Context for UTRAN SRVCC 19 6.7 MM Context for UTRAN SRVCC 19 6.8 Target RNC ID 20 6.9 Target RNC ID <t< td=""><td></td><td></td><td></td></t<>			
5.2.8SRVCC CS to PS Request135.2.9SRVCC CS to PS complete Notification135.2.10SRVCC CS to PS Complete Notification145.2.11SRVCC CS to PS Complete Acknowledge145.2.12SRVCC CS to PS Cancel Notification155.13SRVCC CS to PS Cancel Acknowledge155.3Path Management Messages155.3.1Introduction155.3.2Echo Request message165.3.3Echo Response message165.4Version Not Supported Indication message165.4Version Not Supported Indication message165.5Error Handling165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container186.5MM Context for UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS RSVCC22Annex A (informative):Change history24			
5.2.9SRVCC CS to PS Response.135.2.10SRVCC CS to PS Complete Notification145.2.11SRVCC CS to PS Cancel Notification155.2.12SRVCC CS to PS Cancel Notification155.2.13SRVCC CS to PS Cancel Acknowledge155.3Path Management Messages.155.3.1Introduction155.3.2Echo Request message165.3.3Echo Request message165.4Version Not Supported Indication message165.5Error Handling165.6Restoration and Recovery166.6Sv Information Elements166.7Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for UTRAN (v)SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Sv Flags216.11Sv Flags216.2Strv SR206.3MM Context for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.2.10SRVCC CS to PS Complete Notification145.2.11SRVCC CS to PS Cancel Notification155.2.12SRVCC CS to PS Cancel Notification155.3Path Management Messages155.3.1Introduction155.3.2Echo Request message165.3.3Echo Response message165.4Version Not Supported Indication message165.5Error Handling165.6Restoration and Recovery166.6Restoration and Recovery166.7STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container176.4Target to Surce Transparent Container186.5MM Context for LUTRAN SRVCC186.6MM Context for UTRAN SRVCC206.7SRVCC Cause206.8Target RNC ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.2.11 SRVCC CS to PS Complete Acknowledge 14 5.2.12 SRVCC CS to PS Cancel Notification 15 5.2.13 SRVCC CS to PS Cancel Acknowledge 15 5.3. Path Management Messages 15 5.3.1 Introduction 15 5.3.2 Echo Request message 15 5.3.3 Echo Response message 16 5.4 Version Not Supported Indication message 16 5.4 Version Not Supported Indication message 16 5.4 Reliable Delivery of Signalling Messages 16 5.5 Error Handling 16 5.6 Restoration and Recovery 16 6.6 Sv Information Elements 16 6.7 Sectoration and Recovery 16 6.8 Source to Target Transparent Container 17 6.3 Source to Target Transparent Container 17 6.4 MM Context for E-UTRAN (v)SRVCC 18 6.5 MM Context for UTRAN SRVCC 19 6.7 SRVCC Cause 20 6.8 Target RNC ID 20 6.9 <td< td=""><td></td><td></td><td></td></td<>			
5.2.12SRVCC CS to PS Cancel Notification.155.2.13SRVCC CS to PS Cancel Acknowledge155.3Path Management Messages.155.3.1Introduction.155.3.2Echo Request message165.3.3Echo Response message165.4Version Not Supported Indication message.165.4Reliable Delivery of Signalling Messages.165.5Error Handling.165.6Restoration and Recovery165.6Restoration and Recovery166.1General166.2STN-SR166.3Source to Target Transparent Container.176.3Source to Target Transparent Container.186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause.206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.2.13 SRVCC CS to PS Cancel Acknowledge 15 5.3 Path Management Messages 15 5.3.1 Introduction 15 5.3.2 Echo Request message 15 5.3.3 Echo Response message 16 5.3.4 Version Not Supported Indication message 16 5.4 Reliable Delivery of Signalling Messages 16 5.4 Reliable Delivery of Signalling Messages 16 5.5 Error Handling 16 5.6 Restoration and Recovery 16 6.6 Sv Information Elements 16 6.1 General 16 6.2 STN-SR 17 6.3 Source to Target Transparent Container 17 6.4 Target to Source Transparent Container 18 6.5 MM Context for E-UTRAN (v)SRVCC 18 6.6 MM Context for E-UTRAN SRVCC 19 6.7 SRVCC Cause 20 6.8 Target RNC ID 20 6.9 Target Global Cell ID 21 6.10 Turnel Endpoint Identifier for Control Plane (TEID-C)	- · ·		
5.3Path Management Messages155.3.1Introduction155.3.2Echo Request message155.3.3Echo Response message165.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.3.1Introduction155.3.2Echo Request message155.3.3Echo Response message165.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling165.6Restoration and Recovery165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for LUTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.3.2Echo Request message155.3.3Echo Response message165.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
5.3.3Echo Response message165.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24	5.3.2		
5.3.4Version Not Supported Indication message165.4Reliable Delivery of Signalling Messages165.5Error Handling165.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier22Annex A (informative):Change history24	5.3.3		
5.4Reliable Delivery of Signalling Messages165.5Error Handling	5.3.4		
5.6Restoration and Recovery166Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC206.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier22Annex A (informative):Change history24	5.4	Reliable Delivery of Signalling Messages	16
6Sv Information Elements166.1General166.2STN-SR176.3Source to Target Transparent Container.176.4Target to Source Transparent Container.186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier22Annex A (informative):Change history24	5.5	∂	
6.1General166.2STN-SR176.3Source to Target Transparent Container.176.4Target to Source Transparent Container.186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC.196.7SRVCC Cause.206.8Target RNC ID.206.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24	5.6	Restoration and Recovery	16
6.2STN-SR176.3Source to Target Transparent Container176.4Target to Source Transparent Container186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.3Source to Target Transparent Container.176.4Target to Source Transparent Container.186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID.206.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.4Target to Source Transparent Container.186.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC.196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.5MM Context for E-UTRAN (v)SRVCC186.6MM Context for UTRAN SRVCC196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.6MM Context for UTRAN SRVCC.196.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.7SRVCC Cause206.8Target RNC ID206.9Target Global Cell ID216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative):Change history24			
6.8Target RNC ID.206.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C).216.11Sv Flags.216.12Service Area Identifier			
6.9Target Global Cell ID.216.10Tunnel Endpoint Identifier for Control Plane (TEID-C)216.11Sv Flags.216.12Service Area Identifier226.13MM Context for CS to PS SRVCC22Annex A (informative): Change history			
6.10 Turnel Endpoint Identifier for Control Plane (TEID-C) 21 6.11 Sv Flags 21 6.12 Service Area Identifier 22 6.13 MM Context for CS to PS SRVCC 22 Annex A (informative): Change history 24		6	
6.11Sv Flags		Tunnel Endpoint Identifier for Control Plane (TEID-C)	
6.12 Service Area Identifier 22 6.13 MM Context for CS to PS SRVCC 22 Annex A (informative): Change history 24			
6.13 MM Context for CS to PS SRVCC			
	Anne	x A (informative): Change history	24

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document describes the Sv interface between the Mobility Management Entity (MME) or Serving GPRS Support Node (SGSN) and 3GPP MSC server enhanced for SRVCC. Sv interface is used to support Inter-RAT handover from IMS based voice service over EPS to CS domain over 3GPP UTRAN/GERAN access or from UTRAN (HSPA) to 3GPP UTRAN/GERAN access and to support Inter-RAT handover from IMS based voice and video service over EPS to CS domain over 3GPP UTRAN access. Sv interface is also used to support Inter-RAT handover from voice service in CS domain over 3GPP UTRAN/GERAN access to IMS based service over LTE or UTRAN (HSPA).

If there is no specific indication, the term "MSC server" denotes 3GPP MSC server enhanced for SRVCC or 3GPP MSC server enhanced for vSRVCC as defined in 3GPP TS 23.216 [2].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TR 23.216: "Single Radio Voice Call Continuity (SRVCC)".
- [3] 3GPP TS 29.274: "Evolved GPRS Tunnelling Protocol for Control Plane (GTPv2-C)".
- [4] 3GPP TS 23.003: "Numbering, addressing and identification".
- [5] 3GPP TS 23.007: "Restoration Procedures".
- [6] 3GPP TS 33.401: "3GPP System Architecture Evolution (SAE): Security architecture".
- [7] 3GPP TS 24.008: "Mobile radio interface Layer 3 specification; Core network protocols; Stage 3".
- [8] 3GPP TS 48.008: "Mobile Switching Centre Base Station System (MSC BSS) interface; Layer 3 specification".
- [9] 3GPP TS 25.413: "UTRAN Iu interface Radio Access Network Application Part (RANAP) signalling".
- [10] 3GPP TS 33.102: "3G Security; Security architecture".
- [11] 3GPP TS 29.002: "Mobile Application Part (MAP) specification; Stage 3".
- [12] 3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet".
- [13] 3GPP TS 23.237: "IP Multimedia Subsystem (IMS) Service Continuity: Stage 2".
- [14] 3GPP TS 36.413: "S1 Application Protocol (S1AP)".
- [15] 3GPP TS 33.401: "3GPP System Architecture Evolution (SAE); Security architecture".
- [16] 3GPP TS 23.251: "Network Sharing; Architecture and Functional Description".
- [17] 3GPP TS 29.276: "Optimized Handover Procedures and Protocols between E-UTRAN access and cdma2000 HRPD Access".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

For the purposes of the present document, the following terms and definitions given in 3GPP TS 23.216 [2] apply:

SRVCC vSRVCC

For the purposes of the present document, the following terms and definitions given in 3GPP TS 23.251 [16] apply:

Anchor PLMN

3.2 Symbols

For the purposes of the present document, the following symbols apply:

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

C-MSISDN	Correlation MSISDN.
GWCN	Gateway Core Network
MME/SGSN	MME or SGSN.
MOCN	Multi-Operator Core Network
SRVCC	Single Radio Voice Call Continuity.
STN-SR	Session Transfer Number for SRVCC: see 3GPP TS 23.003 [4].
vSRVCC	Single Radio Video Call Continuity.

4 General Description

This document describes the Sv interface related procedures, message parameters and protocol specifications. The Sv messages are based on GTP. The message format, IE coding, and protocol error handling for Sv is per GTP as specified in 3GPP TS 29.274 [3].

The general rules for IP address and UDP port number handling for the GTP messages on the Sv interface is per 3GPP TS 29.274 [3].

5 Sv Messages and Information Elements

5.1 Introduction

The Sv application defines a set of messages between the MME/SGSN and MSC Server to provide SRVCC as defined in 3GPP TS 23.216 [2]. The Sv message header shall be conformant to the GTPv2-C Message Header, see 3GPP TS 29.274 [3]. The messages to be used and the information elements are described in the following sections.

5.2 Sv Messages

5.2.1 General

Sv Messages are used for both the Inter-RAT handover from IMS based voice service over EPS to CS domain over 3GPP UTRAN/GERAN access or from UTRAN (HSPA) to 3GPP UTRAN/GERAN access and the Inter-RAT handover from IMS based voice and video service over EPS to CS domain over 3GPP UTRAN access.

Sv Messages are also used for the Inter-RAT handover from voice service in CS domain over 3GPP UTRAN/GERAN access to IMS based service over LTE or UTRAN (HSPA).

Sv Message Type value is defined in 3GPP TS 29.274 [3]. The message format is coded as per GTP in 3GPP TS 29.274 [3].

Message Type value (Decimal)	Message	Reference	Initial	Triggered
	Reserved	3GPP TS 29.274 [3]		
1	Echo Request	3GPP TS 29.274 [3]	Х	
2	Echo Response	3GPP TS 29.274 [3]	~	Х
3	Version Not Supported Indication	3GPP TS 29.274 [3]		X
4-16	Reserved for S101 interface	3GPP TS 29.276 [17]		
17-24	Reserved for S121 interface	3GPP TS 29.276 [17]		
25	SRVCC PS to CS Request	5.2.2	Х	
26	SRVCC PS to CS Response	5.2.3		Х
27	SRVCC PS to CS Complete Notification	5.2.4	Х	
28	SRVCC PS to CS Complete Acknowledge	5.2.5		Х
29	SRVCC PS to CS Cancel Notification	5.2.6	Х	
30	SRVCC PS to CS Cancel Acknowledge	5.2.7		Х
31	SRVCC CS to PS Request	5.2.8	Х	
32-239	Reserved for GTPv2	3GPP TS 29.274 [3]		
240	SRVCC CS to PS Response	5.2.9		Х
241	SRVCC CS to PS Complete Notification	5.2.10	Х	
242	SRVCC CS to PS Complete Acknowledge	5.2.11		Х
243	SRVCC CS to PS Cancel Notification	5.2.12	Х	
244	SRVCC CS to PS Cancel Acknowledge	5.2.13		Х
	For future Sv interface use	-		
245 to 247				
248-255	Reserved for GTPv2	3GPP TS 29.274 [3]		

Table 5.2.1: Message types for Sv interface

The GTPv2-C messages shall be sent per UE on the Sv interface.

There shall be one pair of TEID-C per UE on the Sv interface. The same tunnel shall be shared for the control messages related to the same UE operation.

The TEID field in the SRVCC PS to CS Request and in the SRVCC CS to PS Request message header shall be set to "0" because this is the first message sent between the MME/SGSN and the MSC server to establish the tunnel for a UE.

The TEID field in the SRVCC PS to CS Cancel Notification message header shall be set to "0" if the message is sent before reception of the acceptance response to the SRVCC PS to CS Request. If the MME/SGSN sends the SRVCC PS to CS Cancel Notification message after the acceptance response to the SRVCC PS to CS Request, the TEID field of the SRVCC PS to CS Cancel Notification message may be set to the MSC Server's TEID value received in the SRVCC PS to CS Response message. Therefore the MSC Server shall be able to accept the SRVCC PS to CS Cancel Notification message header.

The TEID field in the SRVCC CS to PS Cancel Notification message header shall be set to "0" if the message is sent before reception of the acceptance response to the SRVCC CS to PS Request. If the MSC Server sends the SRVCC CS to PS Cancel Notification message after the acceptance response to the SRVCC CS to PS Request, the TEID field of the SRVCC CS to PS Cancel Notification message may be set to the MME/SGSN TEID value received in the SRVCC CS to PS Response message. Therefore the MME/SGSN shall be able to accept the SRVCC CS to PS Cancel Notification message header.

5.2.2 SRVCC PS to CS Request

A SRVCC PS to CS Request message shall be sent across Sv interface from the MME/SGSN to the target MSC server as part of the MME/SGSN SRVCC procedure in 3GPP TS 23.216 [2].

This message shall also be sent across Sv interface from the MME to the target MSC server as part of the vSRVCC procedure in 3GPP TS 23.216 [2].

Table 5.2.2 specifies the presence requirements and conditions of the IEs in the message.

Table 5.2.2: Information Elements in a SRVCC PS to CS Request

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
IMSI	С	This IE shall be included in the message except for the cases:	IMSI	0
		 The UE is emergency attached and it is UICCless The UE is emergency attached and the IMSI is not authenticated 		
ME Identity (MEI)	С	This IE shall be included in the message for all types of emergency calls by the MME and the SGSN.	MEI	0
		This IE shall be included for all SRVCC calls if available in the MME or SGSN (NOTE 2).		
Sv Flags		 This IE shall be included if any one of the applicable flags is set to 1. The following flags are applicable: EmInd: this flag shall be sent if this session is for an emergency call. ICS: this flag shall be sent to request IMS Centralized Service support. VHO: this flag shall be sent if the MME requests the vSRVCC HO. 	Sv Flags	0
MME/SGSN Sv Address for Control Plane	Μ	This IE specifies the address for control plane Initial message which is chosen by the source MME/SGSN. The target MSC Server shall send subsequent control plane Initial messages related to the GTP tunnel for this UE towards this address.	IP-Address	0
MME/SGSN Sv TEID for Control Plane	М	This IE specifies the tunnel for control plane message which is chosen by the source MME/SGSN. The target MSC Server shall include this TEID in the GTP header of all control plane messages related to the GTP tunnel for this UE.	TEID-C	0
C-MSISDN	С	The MME/SGSN shall include C-MSISDN IE in the message except for the cases: - The UE is emergency attached and it is UICCless - The UE is emergency attached and the IMSI is not authenticated The C-MSISDN is defined in 3GPP TS 23.003 [4].	MSISDN	0
STN-SR	С	The MME/SGSN shall include STN-SR IE if this session is not for an emergency call.	STN-SR	0
MM Context for E- UTRAN (v)SRVCC	С	The MME shall include mobile station classmarks, supported codecs, and CS Security key in MM Context for E-UTRAN (v)SRVCC. The derivation of the CS security keys shall follow the procedures defined 3GPP TS 33.401[7].	MM Context for E- UTRAN (v)SRVCC	0
MM Context for UTRAN SRVCC	С	The SGSN shall include mobile station classmarks, supported codecs, and CS Security key in MM Context for UTRAN (HSPA) SRVCC. The derivation of the CS security keys shall follow the procedures defined 3GPP TS 33.102[10].	MM Context for UTRAN SRVCC	0
Source to Target Transparent Container	М	The MME or SGSN shall include Source to Target Transparent Container IE	Source to Target Transparant Container IE	0
Target RNC ID	С	This IE shall be used to identify the target access for (v)SRVCC handover to UTRAN (NOTE 1).	Target RNC ID	0
Target Cell ID		This IE shall be used to identify the target access for SRVCC handover to GERAN (NOTE 1).	Target Global Cell ID	0
Source SAI	co	The SGSN shall include this IE during a SRVCC Handover from UTRAN to GERAN and shall set it as per the SAI of the Source ID IE received from the source RNC (see 3GPP TS 25.413 [9]). See NOTE 3.	Service Area Identifier	0
Allocation/Retention Priority	CO	The MME shall include this IE if (v)SRVCC with priority is supported and (v)SRVCC is performed for an IMS-based MPS session (see 3GPP TS 23.216 [2]).	ARP	0
Anchor PLMN ID	со	The MME/SGSN shall include this IE during SRVCC from UTRAN/E-UTRAN PS to UTRAN/GERAN CS domain GWCN/MOCN to be used for subsequent SRVCC handover in the reverse direction as specified in 3GPP TS 23.251 [16].	PLMN ID	0

tension	0	None	Private Extension VS
Based upon	the \$	SRVCC Handover procedure, either Target RNC ID or Targ	et Cell ID shall be
present in th	is m	essage	
			Identity for all SRVCC
calls for inte	rcept	tion, charging or Automatic Device Detection in the MSC.	
The Source	SAL	is sent in BSSMAP Handover Request during a SRVCC Ha	ndover from UTRAN to
GERAN. A d	defau	It SAI configured in the MSC Server enhanced for SRVCC	is sent in BSSMAP
Handover R	eque	est during a SRVCC Handover from E-UTRAN to GERAN. T	he default SAI for E-
UTRAN sho	uld b	e different from the SAIs used in UTRAN.	
	present in th An MME or calls for inte The Source GERAN. A c Handover R	Based upon the present in this m An MME or SGS calls for intercept The Source SAI GERAN. A defau Handover Reque	ktension O None Based upon the SRVCC Handover procedure, either Target RNC ID or Targ present in this message An MME or SGSN supporting the Sv interface should attempt to get the ME calls for interception, charging or Automatic Device Detection in the MSC. The Source SAI is sent in BSSMAP Handover Request during a SRVCC Ha GERAN. A default SAI configured in the MSC Server enhanced for SRVCC i Handover Request during a SRVCC Handover from E-UTRAN to GERAN. T UTRAN should be different from the SAIs used in UTRAN.

5.2.3 SRVCC PS to CS Response

A SRVCC PS to CS Response message shall be sent across Sv interface as a response to SRVCC PS to CS Request by the MSC server during SRVCC procedure in 3GPP TS 23.216 [2].

Table 5.2.3 specifies the presence requirements and conditions of the IEs in the message.

Cause IE indicates if the SRVCC PS to CS request has been accepted, or not. The request has not been accepted by the target MSC server if the Cause IE value differs from "Request accepted".

Information	Ρ	Condition / Comment	ІЕ Туре	Ins.
elements	М		Course	0
Cause			Cause	•
(v)SRVCC rejected	CO	This IE shall be sent if Cause value differs from "Request	SRVCC Cause	0
Cause		accepted".		
		MSC Server shall include this information element to		
		indicate the reason for rejecting SRVCC PS to CS request		
MSC Server Sv	0	If the Cause IE contains the value" Request accepted", the	IP Address	0
Address for Control		target MSC server may include MSC server Sv Address for		
Plane		Control Plane IE in SRVCC PS to CS Response message		
		if target MSC Server decides to use different IP address for		
		the subsequent communication. The source MME/SGSN		
		shall store this MSC server address and use it when		
		sending subsequent control plane messages to this GTP-C		
		tunnel.		
MSC Server Sv TEID	С	The target MSC server shall include MSC server Sv	TEID-C	0
for Control Plane		Tunnel Endpoint Identifier for Control Plane IE in SRVCC		
		PS to CS Response message if the Cause IE contains the		
		value "Request accepted". The source MME/SGSN shall		
		include this TEID-C in the GTP-C header of all subsequent		
		uplink control plane messages from the source		
		MME/SGSN to the target MSC servers.		
Target to Source	С	If the Cause IE contains the value "Request accepted ",	Target to Source	0
Transparent		this IE shall be included and shall carry the Target to	Transparant	
Container		Source Transparent Container to be sent within the	Container IE	
		Handover command or the Relocation Command towards		
		the source access network.		
Private Extension	0	None	Private Extension	VS

Table 5.2.3: Information Elements in a SRVCC PS to CS Response

5.2.4 SRVCC PS to CS Complete Notification

A SRVCC PS to CS Complete Notification message shall be sent across Sv interface to the source MME/SGSN during SRVCC procedure as specified in 3GPP TS 23.216 [2]:

- to indicate the SRVCC handover with CS Domain has been successfully finished;
- or to indicate the SRVCC handover with CS Domain has finished (i.e. HO Complete / Relocation Complete message has been received from the target RAN) but the IMS Session Transfer procedure completion in 3GPP TS 23.237 [13] has failed by including the appropriate SRVCC post failure Cause value.

This message shall also be sent on Sv interface to the source MME during vSRVCC procedure in 3GPP TS 23.216 [2].

Table 5.2.4 specifies the presence requirements and conditions of the IEs in the message.

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
IMSI	C	This IE shall be included in the message except for the cases: - The UE is emergency attached and it is UICCless - The UE is emergency attached and the IMSI is not authenticated	IMSI	0
SRVCC post failure Cause	СО	This IE shall be sent if a call is to be released locally in the MSC Server due to IMS session leg establishment failure. The MSC Server shall include this IE to indicate the nature of the failure (i.e, permanent or temporary)	SRVCC Cause	0
Private Extension	0	None	Private Extension	VS

Table 5.2.4: Information Elements in a SRVCC PS to CS Complete Notification

5.2.5 SRVCC PS to CS Complete Acknowledge

A SRVCC PS to CS Complete Acknowledge message shall be sent across Sv interface as a response to SRVCC PS to CS Complete Notification during (v)SRVCC handover with CS Domain in 3GPP TS 23.216 [2].

Table 5.2.5 specifies the presence requirements and conditions of the IEs in the message.

Table 5.2.5: Information Elements in a SRVCC PS to CS Complete Acknowledge

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
Cause	Μ	None	Cause	0
Private Extension	0	None	Private Extension	VS

5.2.6 SRVCC PS to CS Cancel Notification

A SRVCC PS to CS Cancel Notification message shall be sent across Sv interface from the MME/SGSN to the target MSC server to request the cancellation of an ongoing SRVCC handover.

This message shall also be sent across Sv interface from the MME to the target MSC server to request the cancellation of an ongoing vSRVCC handover.

Table 5.2.6 specifies the presence requirements and conditions of the IEs in the message.

Information elements	Р	Condition / Comment	IE Type	Ins.
IMSI	С	This IE shall be included in the message except for the cases: - The UE is emergency attached and it is UICCless - The UE is emergency attached and the IMSI is not authenticated	IMSI	0
Cancel Cause	Μ	MME/SGSN indicates the reason for Handover cancellation	SRVCC Cause	0
ME Identity (MEI)	С	This IE shall be included in the message for the following cases: - The UE is emergency attached and it is UICCless - The UE is emergency attached and the IMSI is not authenticated	MEI	0
Private Extension	0	None	Private Extension	VS

5.2.7 SRVCC PS to CS Cancel Acknowledge

A SRVCC PS to CS Cancel Acknowledge message shall be sent across Sv interface as a response to SRVCC PS to CS Cancel Notification.

Table 5.2.7 specifies the presence requirements and conditions of the IEs in the message.

Table 5.2.7: Information Elements in a SRVCC PS to CS Cancel Acknowledge

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
Cause	Μ	None	Cause	0
Sv Flags	С	 This IE shall be included if any one of the applicable flags is set to 1. The following flags are applicable: STI: this flag shall be sent if the MSC Server has started the IMS session transfer procedure. 	Sv Flags	0
Private Extension	0	None	Private Extension	VS

5.2.8 SRVCC CS to PS Request

A SRVCC CS to PS Request message shall be sent across Sv interface from the MSC Server to the target MME/SGSN as part of UTRAN/GERAN to E-UTRAN/UTRAN (HSPA) SRVCC procedure in 3GPP TS 23.216 [2].

Table 5.28 specifies the presence requirements and conditions of the IEs in the message.

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
IMSI	С	The IE shall be included if available.	IMSI	0
ME Identity (MEI)	C	This IE shall be included if available.	MEI	0
MSC Server Sv Address for Control Plane	М	This IE specifies the address for control plane Initial message which is chosen by the source MSC Server. The target MME/SGSN shall send subsequent control plane Initial messages related to the GTP tunnel for this UE towards this address.	IP Address	0
MSC Server Sv TEID for Control Plane	Μ	This IE specifies the tunnel for control plane message which is chosen by the source MSC Server. The target MME/SGSN shall include this TEID in the GTP header of all control plane messages related to the GTP tunnel for this UE.	TEID-C	0
Source to Target Transparent Container	М	The MSC Server shall include Source to Target Transparent Container IE.	Source to Target Transparent Container	0
Target Identification	М	This IE shall be included to identify the target access.	Target Identification	0
P-TMSI	С	This IE shall be included if available.	P-TMSI	0
Source RAI	С	This IE shall be included if available	ULI	0
P-TMSI Signature	С	This IE shall be included if available	P-TMSI Signature	0
GUTI	С	This IE shall be included if available.	GUTI	0
MM Context for CS to PS SRVCC	Μ		MM Context for CS to PS SRVCC	0
Private Extension	0	None	Private Extension	VS

Table 5.2.8: Information	Elements in a	a SRVCC CS to	PS Request
			/ O nequest

5.2.9 SRVCC CS to PS Response

A SRVCC CS to PS Response message shall be sent across Sv interface as a response to SRVCC CS to PS Request by the MME/SGSN during UTRAN/GERAN to E-UTRAN/UTRAN (HSPA) SRVCC procedure as specified in 3GPP TS 23.216 [2].

Table 5.2.9 specifies the presence requirements and conditions of the IEs in the message.

Cause IE indicates if the SRVCC CS to PS request has been accepted, or not. The request has not been accepted by the target MME/SGSN if the Cause IE value differs from "Request accepted".

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
Cause	М		Cause	0
SRVCC rejected Cause	0	This IE may be sent if Cause value is differs from "Request accepted". MME/SGSN may include additional information to indicate the reason for rejecting SRVCC CS to PS request	SRVCC Cause	0
MME/SGSN Sv Address for Control Plane	0	If the Cause IE contains the value" Request accepted", the target MME/SGSN may include MME/SGSN Sv Address for Control Plane IE in SRVCC CS to PS Response message if target MME/SGSN decides to use different IP address for the subsequent communication. The source MSC Server shall store this MME/SGSN address and use it when sending subsequent control plane initial messages to this GTP-C tunnel.	IP Address	0
MME/SGSN Sv TEID for Control Plane	С	The target MME/SGSN shall include MME/SGSN Sv Tunnel Endpoint Identifier for Control Plane IE in SRVCC CS to PS Response message if the Cause IE contains the value "Request accepted". The source MSC Server shall include this TEID-C in the GTP-C header of all subsequent control plane messages from the source MSC Server to the target MME/SGSN.	TEID-C	0
Target to Source Transparent Container	С	If the Cause IE contains the value "Request accepted", this IE shall be included and shall carry the Target to Source Transparent Container to be sent within the Handover command or the Relocation Command towards the source access network.	Target to Source Transparent Container	0
Private Extension	0	None	Private Extension	VS

5.2.10 SRVCC CS to PS Complete Notification

A SRVCC CS to PS Complete Notification message shall be sent across Sv interface from the target MME/SGSN to the source MSC Server to indicate the SRVCC handover with PS Domain has been finished during UTRAN/GERAN to E-UTRAN/UTRAN (HSPA) SRVCC procedure as specified in 3GPP TS 23.216 [2].

Table 5.2.10 specifies the presence requirements and conditions of the IEs in the message.

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
SRVCC failure Cause		This IE shall be included if there is a failure detected by the target MME/SGSN during UTRAN/GERAN to E-UTRAN/UTRAN (HSPA) SRVCC procedure as specified in 3GPP TS 23.216 [2].		0
Private Extension	0	None	Private Extension	VS

5.2.11 SRVCC CS to PS Complete Acknowledge

A SRVCC CS to PS Complete Acknowledge message shall be sent across Sv interface as a response to SRVCC CS to PS Complete Notification during UTRAN/GERAN to E-UTRAN/UTRAN (HSPA) SRVCC procedure as specified in 3GPP TS 23.216 [2].

Table 5.2.10 specifies the presence requirements and conditions of the IEs in the message.

Information elements	Ρ	Condition / Comment	IE Type	Ins.
Cause	Μ	None	Cause	0
Private Extension	0	None	Private Extension	VS

Table 5.2.11: Information Elements in a SRVCC CS to PS Complete Acknowledge

5.2.12 SRVCC CS to PS Cancel Notification

A SRVCC CS to PS Cancel Notification message shall be sent across Sv interface from the MSC Server to the target MME/SGSN to request the cancellation of an ongoing SRVCC handover.

Table 5.2.12 specifies the presence requirements and conditions of the IEs in the message.

Table 5.2.12: Information Elements in a SRVCC CS to PS Cancel Notification

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
IMSI	С	The IMSI shall be included if available.	IMSI	0
Cancel Cause	М	MSC Server shall indicate the reason for Handover cancellation.	SRVCC Cause	0
ME Identity (MEI)	С	This IE shall be included if available.	MEI	0
Private Extension	0	None	Private Extension	VS

5.2.13 SRVCC CS to PS Cancel Acknowledge

A SRVCC CS to PS Cancel Acknowledge message shall be sent across Sv interface as a response to SRVCC CS to PS Cancel Notification.

Table 5.2.13 specifies the presence requirements and conditions of the IEs in the message.

Table 5.2.13: Information Elements in a SRVCC CS to PS Cancel Acknowledge

Information elements	Ρ	Condition / Comment	ІЕ Туре	Ins.
Cause	Μ	None	Cause	0
Private Extension	0	None	Private Extension	VS

5.3 Path Management Messages

5.3.1 Introduction

The following GTPv2-C messages support path management for the Sv interface:

- Echo Request
- Echo Response
- Version Not Supported Indication

These messages are defined for GTPv2-C and the handling and definition shall also be as defined in GTPv2-C, see 3GPP TS 29.274 [3].

5.3.2 Echo Request message

3GPP TS 29.274 [3] specifies the information elements included in the Echo Request message.

5.3.3 Echo Response message

3GPP TS 29.274 [3] specifies the information elements included in the Echo Response message.

5.3.4 Version Not Supported Indication message

3GPP TS 29.274 [3] specifies the detailed handling and information elements included in the Version Not Supported Indication message.

5.4 Reliable Delivery of Signalling Messages

This is performed as according to GTPv2 in 3GPP TS 29.274 [3].

5.5 Error Handling

This is performed as according to GTPv2 in 3GPP TS 29.274 [3].

5.6 Restoration and Recovery

This is performed as according to GTPv2 in 3GPP TS 23.007 [5].

6 Sv Information Elements

6.1 General

IE type value used in Sv Message is defined in TS 29.274 [3]. The IE format is coded as per GTP in TS 29.274 [3].

Table 6.1 shows the IEs used for SRVCC. Within information elements, certain fields may be described as spare. These bits shall be transmitted with the value set to 0. To allow for future features, the receiver shall not evaluate these bits.

IE Type value	Information elements	Comment /	Number of Fixed
(Decimal)		Reference	Octets
0	Reserved	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]
1	International Mobile Subscriber Identity (IMSI)	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]
2	Cause	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]
3	Recovery (Restart Counter)	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]
4-34	Reserved for S101 interface	3GPP TS 29.276	3GPP TS 29.276
		[17]	[17]
35-50	Reserved for S121 interface	3GPP TS 29.276	3GPP TS 29.276
		[17]	[17]
51	STN-SR	Variable Length / 6.2	Not Applicable
52	Source to Target Transparent Container	Variable Length / 6.3	Not Applicable
53	Target to Source Transparent Container	Variable Length / 6.4	Not Applicable
54	MM Context for E-UTRAN (v)SRVCC	Variable Length / 6.5	Not Applicable
55	MM Context for UTRAN SRVCC	Variable Length / 6.6	Not Applicable
56	SRVCC Cause	Fixed Length / 6.7	1
57	Target RNC ID	Variable Length / 6.8	Not Applicable
58	Target Global Cell ID	Variable Length / 6.9	Not Applicable
59	TEID-C	Extendable / 6.10	4
60	Sv Flags	Extendable / 6.11	1
61	Service Area Identifier	Extendable / 6.12	7
62	MM Context for CS to PS SRVCC	Extendable / 6.13	42
63-70	For future Sv interface use	-	
71-73	Reserved for GTPv2	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]
74	IP Address	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]

Table 6.1-1: Information Elements for SRVCC

IE Type value	Information elements	Comment /	Number of Fixed		
(Decimal)		Reference	Octets		
75	Mobile Equipment Identity (MEI)	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
76	MSISDN	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
77-85	Reserved for GTPv2	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
86	ULI	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
111	P-TMSI	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
112	P-TMSI Signature	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
117	GUTI	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
120	PLMN ID	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
121	Target Identification	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
122-154	Reserved for GTPv2	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
155	Allocation/Retention Priority (ARP)	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
156-254	Reserved for GTPv2	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
255	Private Extension	3GPP TS 29.274 [3]	3GPP TS 29.274 [3]		
	size of the TLI (Type, Length and Instance) fiel number of the fixed octets of the "Fixed Length'				

6.2 STN-SR

STN-SR is defined in 3GPP TS 23.003 [4]. STN-SR is transferred via GTP tunnels. The sending entity copies the value part of the STN-SR into the Value field of the STN-SR IE. The STN-SR IE is coded as depicted in Figure 6.2-1. Octet 5 contains the Nature of Address and Numbering Plan Indicator (NANPI) of the "AddressString" ASN.1 type (see 3GPP TS 29.002 [11]). Octets 6 to (n+4) contain the actual STN-SR (digits of an address encoded as a TBCD-STRING as in the "AddressString" ASN.1 type). For an odd number of STN-SR digits, bits 8 to 5 of the last octet are encoded with the filler "1111".

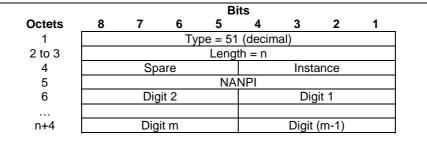


Figure 6.2-1: STN-SR

6.3 Source to Target Transparent Container

The Source to Target Transparent Container contains information that shall be transferred transparently by CN entities from the source RAN to the target RAN.

When the target network is GERAN, the Transparent container field contains the value part of the *Old BSS to New BSS Information* IE defined in 3GPP TS 48.008 [8], i.e. octets 3 to n, excluding octet 1 (Element ID) and octet 2 (Length).

When the target network is UTRAN, this container carries the *Source RNC to Target RNC Transparent Container* IE defined in 3GPP TS 25.413 [9]. The Transparent container field contains a *transparent copy* of the corresponding ASN.1/PER IE (see subclauses 8.2.2 and 8.48 in 3GPP TS 29.274 [3]).

When the target network is E-UTRAN, the container carries the *Source eNB To Target eNB Transparent Container* IE defined in 3GPP TS 36.413 [14]. The Transparent container field contains a *transparent copy* of the corresponding ASN.1/PER IE (see subclauses 8.2.2 and 8.48 in 3GPP TS 29.274 [3]).

The receiver of this Information Element shall ignore the length of the transparent container encoded in octet 5 and shall derive the actual length of the container from the length encoded in octets 2 to 3 minus 1.

For backward compatibility, the sender of this Information Element shall set the octet 5 to the actual length of the transparent container if the size of the container is smaller or equal to 255 octets, and to the value "255" otherwise.




Figure 6.3-1: Source to Target Transparent Container

6.4 Target to Source Transparent Container

The Target to Source Transparent Container contains information that shall be transferred transparently by CN entities from the target RAN to the source RAN.

When the target network is GERAN, the Transparent container field contains the value part of the *Layer 3 Information* IE defined in 3GPP TS 48.008 [8], i.e., octets 3 to n, excluding octet 1 (Element ID) and octet 2 (Length).

When the target network is UTRAN, this container carries the *Target RNC to Source RNC Transparent Container* IE defined in 3GPP TS 25.413 [9]. The Transparent container field contains a *transparent copy* of the corresponding ASN.1/PER IE (see subclauses 8.2.2 and 8.48 in 3GPP TS 29.274 [3]).

When the target network is E-UTRAN, the container carries the *Target eNB To Source eNB Transparent Container* IE defined in 3GPP TS 36.413 [14]. The Transparent container field contains a *transparent copy* of the corresponding ASN.1/PER IE (see subclauses 8.2.2 and 8.48 in 3GPP TS 29.274 [3]).

The receiver of this Information Element shall ignore the length of the transparent container encoded in octet 5 and shall derive the actual length of the container from the length encoded in octets 2 to 3 minus 1.

For backward compatibility, the sender of this Information Element shall set the octet 5 to the actual length of the transparent container if the size of the container is smaller or equal to 255 octets, and to the value "255" otherwise.

				В	its				
Octets	8	7	6	5	4	3	2	1	
1		Type = 53 (decimal)							
2 to 3		Length = n							
4		Spare Instance							
5		Length of the Transparent container							
6 to (n+4)			Tra	nspare	nt conta	iner			

Figure 6.4-1: Target to Source Transparent Container

6.5 MM Context for E-UTRAN (v)SRVCC

The MM Context information element contains mobile station classmarks, supported codec list, and the security parameters that are necessary for the MSC server to setup the ciphering connection (and integrity protection for 3G) with the target access for (v)SRVCC. CS ciphering keys parameters: CK_{SRVCC}, IK_{SRVCC}, and eKSI for E-UTRAN (v)SRVCC are defined in 3GPP TS 33.401 [6].

Mobile Station Classmark 2, Mobile Station Classmark 3, and Supported Codec List information Elements indicate the supported encryption algorithms for GERAN access and CS supported codecs. The coding of Mobile Station Classmarks and Supported Codec List fields include the IE value part as it is specified in 3GPP TS 24.008 [7].

eKSI shall be coded as bits 1 to 3 of the NAS Key Set Identifier IE in TS 24.301 [12]. For an emergency call without an authenticated IMSI, the source MME shall set the key sequence value of the eKSI to the value '111' and CK_{SRVCC} and IK_{SRVCC} to all 0's in binary.

				В	ts				
Octets	8	7	6	5	4	3	2	1	
1			Ту	′pe = 54	(decim	nal)			
2 to 3				Leng	th = n				
4		Sp	are			Inst	ance		
5			Spare				eKSI		
6 to 21		CKSRVCC							
22 to 37				IKs	RVCC				
38		Lengt	h of the	Mobile	Station	n Classr	mark 2		
39 to a			Mobile	e Statio	n Class	mark 2			
b		Lengt	h of the	Mobile	Station	n Classr	mark 3		
(b+1) to c		Mobile Station Classmark 3							
d		Length of the Supported Codec List							
(d+1) to			Su	pported	Codec	List			
(n+4)									

Figure 6.5-1: MM Context for E-UTRAN (v)SRVCC

6.6 MM Context for UTRAN SRVCC

The MM Context information element contains mobile station classmarks, supported codec list, and the security parameters that are necessary for the MSC server to setup the ciphering connection (and integrity protection for 3G) with the target access for SRVCC. The usage of CK'_{CS}, IK'_{CS}, KSI'_{CS}, Kc', CKSN'_{CS} are defined in 3GPP TS 33.102 [10].

Mobile Station Classmark 2, Mobile Station Classmark 3, and Supported Codec List information Elements indicate the supported encryption algorithms for GERAN access and CS supported codecs. The coding of Mobile Station Classmarks and Supported Codec List fields include the IE value part as it is specified in 3GPP TS 24.008 [7].

CKSN'_{cs} shall be coded as bits 1 to 8 of the CKSN IE in TS 24.008 [7]. The KSI'_{cs} shall be coded as bits 1 to 4 of the CKSN IE in TS 24.008 [7].

The source SGSN will send to the MSC Server enhanced for SRVCC either the KSI'_{cs}/CK'_{cs}/IK'_{cs} for an UMTS subscriber or the CKSN'_{cs}/Kc' for a GSM subscriber (see 3GPP TS 33.102 [10]):

- when transferring KSI'cs/CK'cs/IK'cs, the source SGSN shall set the key sequence value of the CKSN'cs to the value '111' and Kc' to all 0's in binary;
- when transferring CKSN'cs/Kc', the source SGSN shall set the key sequence value of the KSI'cs to the value '111', and CK'cs and IK'cs to all 0's in binary.

For an emergency call without an authenticated IMSI, the source SGSN shall set the key sequence value of the CKSN'_{cs} and KSI'_{cs} to all 1's, and Kc', CK'_{cs} and IK'_{cs} to all 0's in binary.

	Bits							
Octets	8	7	6	5	4	3	2	1
1			Ту	/pe = 55	5 (decim	nal)		
2 to 3				Leng	th = n			
4		Sp	are			Inst	ance	
5		Sp	are			KS	l'cs	
6 to 21				Cł	Ссs			
22 to 37				IK	cs			
38 to 45	Kc'							
46				CKS	SN'cs			
47		Lengt	h of the	e Mobile	Station	Classr	nark 2	
48 to a			Mobile	e Statio	n Classi	mark 2		
b	Length of the Mobile Station Classmark 3							
(b+1) to c	Mobile Station Classmark 3							
d	Length of the Supported Codec List							
(d+1) to			Su	pported	Codec	List		
(n+4)								



6.7 SRVCC Cause

SRVCC Cause IE is coded as this is depicted in Figure 6.7-1.




Figure 6.7-1: SRVCC Cause

The SRVCC Cause value indicates the reason for cancellation or the rejection of the SRVCC PS to CS Request or the SRVCC CS to PS Request. The SRVCC Cause is also used by the target MME/SGSN to indicate the reason for a failure in the SRVCC CS to PS Complete Notification message.

Table 6.7-1: SRVCC C	Cause values
----------------------	--------------

Cause value (decimal)	Meaning
0	Reserved. Shall not be sent and if received the Cause shall be treated as an
	invalid IE
1	Unspecified
2	Handover/Relocation cancelled by source system
3	Handover /Relocation Failure with Target system
4	Handover/Relocation Target not allowed
5	Unknown Target ID
6	Target Cell not available
7	No Radio Resources Available in Target Cell
8	Failure in Radio Interface Procedure
9	Permanent session leg establishment error
10	Temporary session leg establishment error
11-255	Spare. This value range is reserved for SRVCC Cause values

6.8 Target RNC ID

This IE shall contain the identity of the target RNC. The encoding of this IE is defined in 3GPP TS 29.002 [11].




Figure 6.8-1: Target RNC ID

6.9 Target Global Cell ID

This IE shall contain the identity of the target GSM Cell ID. The encoding of this IE is defined in 3GPP TS 29.002 [11].




Figure 6.9-1: Target Cell ID

6.10 Tunnel Endpoint Identifier for Control Plane (TEID-C)

Tunnel Endpoint Identifier for Control Plane (TEID-C) is coded as depicted in Figure 6.10-1.

	Bits							
Octets	8	7	6	5	4	3	2	1
1	Type = 59 (decimal)							
2-3		Length = n (decimal)						
4	Spare					Inst	ance	
5-8	Tunnel Endpoint Identifier for Control Plane (TEID-C)							
9-(n+4)	Thes	se octet	(s) is/ar	e prese	nt only	if explic	itly spe	cified

Figure 6.10-1: Tunnel Endpoint Identifier for Control Plane (TEID-C)

6.11 Sv Flags

Sv Flags is coded as depicted in Figure 6.11-1.

	Bits								
Octets	8	7	6	5	4	3	2	1	
1	Type = 60 (decimal)								
2 to 3		Length = n							
4		Sp	are		Instance				
5	Spare	Spare	Spare	Spare	VHO	STI	ICS	EmInd	
6-(n+4)	Thes	These octet(s) is/are present only if explicitly specified							

Figure 6.11-1: Sv Flags

The following bits within Octet 5 indicate:

- Bit 1 – EmInd (Emergency Indicator): This flag is used to indicate the IMS emergency session.

- Bit 2 ICS (IMS Centralized Service): This flag is used to request ICS support.
- Bit 3 STI (Session Transfer Indicator): This flag is used to indicate IMS session transfer has been invoked.
- Bit 4 VHO (vSRVCC flag): This flag is used to indicate that the vSRVCC HO is requested by the MME.

6.12 Service Area Identifier

This IE shall contain the identifier of a service area. The encoding of this IE is defined in Figure 6.12-1.

	Bits									
Octets	8	7	6	5	4	3	2	1		
1			Ту	pe = 6'	l (decin	nal)				
2-3		Length = n								
4		Sp	are		Instance					
5		MCC digit 2				MCC digit 1				
6		MNC	digit 3		MCC digit 3					
7		MNC	digit 2		MNC digit 1					
8 to 9		Location Area Code (LAC)								
10 to 11		Service Area Code (SAC)								
12-(n+4)	The	se octet	(s) is/ar	e prese	ent only	if explic	itly spe	cified		

Figure 6.12-1: Service Area Identifier

The Location Area Code (LAC) consists of 2 octets. Bit 8 of Octet 8 is the most significant bit and bit 1 of Octet 9 the least significant bit. The coding of the location area code is the responsibility of each administration. Coding using full hexadecimal representation shall be used.

The Service Area Code (SAC) consists of 2 octets. Bit 8 of Octet 10 is the most significant bit and bit 1 of Octet 11 the least significant bit. The SAC is defined by the operator. See 3GPP TS 23.003 [4] subclause 12.5 for more information.

6.13 MM Context for CS to PS SRVCC

The MM Context for CS to PS SRVCC information element contains the security parameters that are necessary for the MME/SGSN to setup the ciphering connection and integrity protection with the target access for SRVCC. The usage of CK'_{PS}, IK'_{PS}, KSI'_{PS}, CKSN'_{PS} are defined in 3GPP TS 33.102 [10].

```
Note: Kc'<sub>PS</sub>, is called GPRS Kc in 3GPP TS 33.102 [10].
```

CKSN'_{PS} shall be coded as bits 1 to 8 of the CKSN IE in TS 24.008 [7]. The KSI'_{PS} shall be coded as bits 1 to 4 of the CKSN IE in TS 24.008 [7].

The source MSC Server shall send to the MME/SGSN either the KSI'_{PS} /CK'_{PS} /IK'_{PS} or the CKSN'_{PS} /Kc'_{PS} as specified in 3GPP TS 33.102 [10] and 3GPP TS 33.401[15]:

- when transferring KSI'_{PS} /CK'_{PS} /IK'_{PS}, the source MSC Server shall set the key sequence value of the CKSN'_{PS} to the value '111' and Kc'_{PS} to all 0's in binary;
- when transferring CKSN'_{PS} /Kc'_{PS}, the source MSC Server shall set the key sequence value of the KSI'_{PS} to the value '111', and CK'_{PS} and IK'_{PS} to all 0's in binary.

	Bits								
Octets	8	7	6	5	4	3	2	1	
1		Type = 62 (decimal)							
2 to 3				Lengt	h = n				
4	Spare								
5	Spare Spare S			Spare					
6 to 21				CK	PS				1
22 to 37		IK' _{PS}							
38 to 45	Kc' _{PS}								
46	CKSN' _{PS}								
47 – (n+4)	Thes	se octe	t(s) is/ar	e prese	nt only	if explic	itly spe	cified	

Figure 6.13-1: MM Context for CS to PS SRVCC

Annex A (informative): Change history

Date	TSG #	TSG Doc	CT4 Doc	CR	Rev	Cat	Subject/Comment	Old	New
2008-12	CT#42	CP-080715					V2.0.0 approved in CT#42	2.0.0	8.0.0
2009-03	CT#43	CP-090047	C4-090919	0001	3	F	Finalizing Sv spec	8.0.0	8.1.0
2009-09	CT#45	CP-090544	C4-091655	0003			Definition of TEID-C IE	8.1.0	8.2.0
2009-09	CT#45	CP-090544	C4-091860	0004			Cleanup of ENs		
2009-09	CT#45	CP-090544	C4-092117	0005	2		HSPA security parameter alignment	1	
2009-09	CT#45	CP-090561	C4-091939	0006	2		IMEI Changes for SRVCC	8.2.0	9.0.0
2009-12	CT#46	CP-090777	C4-094068	0011	1		MSISDN Correction	9.0.0	9.1.0
2009-12	CT#46	CP-090825	-	0012	2		Alignment with stage 2 for SRVCC		
							HO cancellation procedure		
2010-03	CT#47	CP-100027	C4-1000422	0015		F	TEID-C, IP Address and UDP Port	9.1.0	9.2.0
							handling on Sv interface		
		CP-100027	C4-100432	0018		F	IE type value correction		
		CP-100047	C4-100425	0016		F	IMSI IE presence corrections		
2010-06	CT#48	CP-100280	C4-101534	0020	1	F	Session continuity terminology is not	9.2.0	9.3.0
							correct		
2010-09	CT#49	CP-100457	C4-102409	0021	2	F	IMEI over the Sv Interface	9.3.0	9.4.0
2010-12	CT#50	CP-100667	C4-103287	0023	1	F	MM Context for UTRAN SRVCC	9.4.0	9.5.0
2011-03	CT#51	CP-110043	C4-110371	0027	1	Α	Length of the Transparent container	9.5.0	9.6.0
		CP-110052	C4-110403	0024	2	F	Target to Source Transparent		
							Container in the SRVCC PS to CS		
							Response message		
2011-03							Update to Rel-10 version (MCC)	9.6.0	10.0.0
2011-06	CT#52	CP-110363	C4-111587	0031	1	Α	Source SAI during SRVCC HO from	10.0.0	10.1.0
							UTRAN to GERAN		
2011-06	CT#52	CP-110355	C4-111548	0034	1	Α	IE Type Extendable Corrections	10.0.0	10.1.0
2011-06	CT#52	CP-110353	C4-111644	0037	3	Α	STN-SR encoding clarification		10.1.0
2011-09	CT#53	CP-110565	C4-112201	0038	2	F	"MME/SGSN Sv Address for Control		10.2.0
							Plane" IE in SRVCC PS to CS		
							Request		
2011-09	CT#53	CP-110584	C4-112214	0039	2	В	Add vSRVCC updates to the Sv	10.2.0	11.0.0
							interface		
2011-12	CT#54	CP-110779	C4-112849	0047		Α	Coding of Source to Target	11.0.0	11.1.0
							Transparent Container		
		CP-110817	C4-112460	0040	1	В	eMPS for SRVCC		
		CP-110784	C4-112526	0043	2	Α	Handing of Extendable IEs		
2012-06	CT#56	CP-120234	C4-120947	0050	2	В	CS to PS SRVCC	11.1.0	11.2.0
		CP-120227	C4-121332	0049	3	A	SRVCC cause values	1	
		CP-120229	C4-121038	0052	-	B	eMPS on vSRVCC		
		CP-120229	C4-121318	0053	2	F	Usage of messages for vSRVCC	-	
2012-09	CT#57	CP-120475	C4-121726	0055		B	CS to PS SRVCC Cancel	1120	11.3.0
2012 00	01#01	01 120110	01121120	0000			Notification/Acknowledge	1.1.2.0	11.0.0
		CP-120475	C4-121727	0056	1	В	Remove NONCE in CS to PS		
		000	••••			_	SRVCC		
		CP-120475	C4-121798	0058	3	В	Anchor PLMN in SRVCC PS to CS		
		000	0.1.2.1.00		Ũ	_	Request		
		CP-120457	C4-121526	0059	-	F	Sv Flags clarifications		
2013-06	CT#60	CP-130286	C4-131029	0060	3	F	MEI over Sv for Emergency Call	1130	11.4.0
2013-00		CP-130200	C4-131023	0061	-	F	GTP-C message types for rSRVCC		11.5.0
2013-09		CP-130431 CP-130470	C4-131101 C4-131427	0062	- 1	В	Update to cover the S121		12.0.0
2013-09		CP-130470 CP-130628	C4-131427 C4-131841	0062	1	F	Clarification on the encoding of		12.0.0
2013-12	01#02	01-130020	04-131041	0003			Transparent Container	12.0.0	12.1.0
2014-06	CT#64	CP-140261	C4-141145	0069	1	F	Version Not Supported Indication	12.1.0	12.2.0
2014-00	01#04	CP-140201 CP-140232	C4-141145 C4-141212	0009	4			12.1.0	12.2.0
201E 02	CT#67				4		Transparent container ambiguity	12.2.0	12.2.0
2015-03		CP-150025	C4-150068	0074	-	F	Correct the wrong reference		12.3.0
		CP-150025	C4-150298	0075	1	F	Usage of the GTPv2-C Header in Sv	12.2.0	12.3.0
L				<u> </u>			interface		
2015-12		-	-	-	-	-	Update to Rel-13 version (MCC)		13.0.0
2017-03	CT#75	-	-	-	-	-	Update to Rel-14 version (MCC)	13.0.0	14.0.0

History

	Document history							
V14.0.0	April 2017	Publication						