
# ETSI TS 148 018 V9.0.0 (2010-02)

Technical Specification

Digital cellular telecommunications system (Phase 2+); General Packet Radio Service (GPRS); Base Station System (BSS) - Serving GPRS Support Node (SGSN); BSS GPRS protocol (BSSGP) (3GPP TS 48.018 version 9.0.0 Release 9)

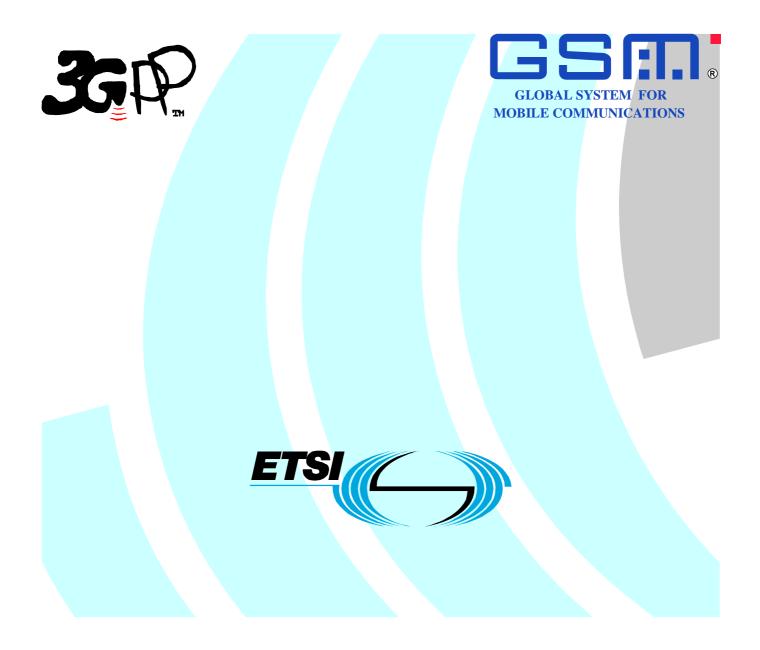

Reference RTS/TSGG-0248018v900

> Keywords GSM

#### ETSI

#### 650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <a href="http://portal.etsi.org/tb/status/status.asp">http://portal.etsi.org/tb/status/status.asp</a>

If you find errors in the present document, please send your comment to one of the following services: <u>http://portal.etsi.org/chaircor/ETSI\_support.asp</u>

#### **Copyright Notification**

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 2010. All rights reserved.

**DECT<sup>TM</sup>**, **PLUGTESTS<sup>TM</sup>**, **UMTS<sup>TM</sup>**, **TIPHON**<sup>TM</sup>, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.

**3GPP**<sup>™</sup> is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

LTE<sup>™</sup> is a Trade Mark of ETSI currently being registered

for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

## Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <u>http://webapp.etsi.org/key/queryform.asp</u>.

## Contents

Foreword.         2           Foreword.         12           I         Scope         13           2         References         13           3         Abbreviations         14           4         Logical configuration of the Gb-interface         15           4.1         High-level characteristics of the Gb-interface         15           5.2         Position of BSSGP within the protocol stack on the Gb-interface         16           5.1         Definition of service model         16           5.2         Rt-DI-UNITDATA.ind         20           5.2.3         R L-UL-UNITDATA.ind         20           5.2.3         R L-UL-MBMS-UNITDATA.ind         20           5.2.3         R L-UL-MBMS-UNITDATA.ind         20           5.2.4         GMM-RA-CAPABILITY-UPDATE.erg         21           5.2.4         GMM-RESUME.rq         21           5.2.1	Intelle	Intellectual Property Rights		
1         Scope	Forew	Foreword		
2         References         13           3         Abbreviations         14           4         Logical configuration of the Gb-interface         15           4.1         High-level characteristics of the Gb-interface         15           5         Elements for layer-to-layer communication         16           5.1         Definition of service model         16           6.1         Definition of service model         20           5.2         RL-DL-UNITDATA ind         20           5.2.3         (void)         20           5.2.3         (void)         20           5.2.3         (void)         20           5.2.4         GMM-RA-CAPABILITY ind         21           5.2.5         RL-UL-MBMS-UNITDATA areq         21           5.2.4         GMM-RA-CAPABILITY UPDATE.enf         21           5.2.5         GMM-RA-CAPABILITY UPDATE.enf         21           5.2.1         GMM-RA-CAPABILITY UPDATE.enf         21           5.2.1         GMM-RADIO-STATUS.req         21           5.2.1         GMM-RADIO-STATUS.req         21           5.2.1         GMM-RADIO-STATUS.req         21           5.2.1         GMM-RADIO-STATUS.req         22           <	Forew	vord	12	
3       Abbreviations       14         4       Logical configuration of the Gb-interface       15         4.1       High-level characteristics of the Gb-interface       15         4.2       Position of BSSGP within the protocol stack on the Gb-interface       15         5       Elements for layer-to-layer communication       16         5.1       Definition of service model       16         5.2       RL-DL UNITDATA ind       20         5.2.3       RL-UL-UNITDATA ind       20         5.2.3       RL-UL-MBMS-UNITDATA ind       20         5.2.3       RL-UL-MBMS-UNITDATA ind       20         5.2.4       GMM-PAGING ind       21         5.2.5       GMM-RA-CAPABILITY-UPDATE req       21         5.2.6       GMM-RA-CAPABILITY-UPDATE req       21         5.2.7       GMM-RA-CAPABILITY-UPDATE req       21         5.2.8       GMM-RADIO-STATUS req       21         5.2.9       GMM-RADIO-STATUS req       21         5.2.10       GMM-RADIO-STATUS req       21         5.2.11       GMM-RESUME enf       21         5.2.12       GMM-RESUME enf       21         5.2.14       MM-FLOW-CONTROL-BWC req       22         5.2.15       NM-FLOW	1	Scope	13	
4         Logical configuration of the Gb-interface         15           4.1         High-level characteristics of the Gb-interface         15           4.2         Position of BSSGP within the protocol stack on the Gb-interface         15           5         Elements for layer-to-layer communication         16           5.1         Definition of service model         16           5.2         Service primitives provided by the BSSGP at a BSS         18           5.2.1         RL-DL-UNITDATA.ind         20           5.2.3         (void)         20           5.2.4         GMM-PAGING ind         21           5.2.5         GMM-RA-CAPABILITY-UPDATE.req         21           5.2.6         GMM-RA-CAPABILITY-UPDATE.req         21           5.2.7         GMM-RA-CAPABILITY-UPDATE.req         21           5.2.8         GMM-RA-CAPABILITY-UPDATE.req         21           5.2.9         GMM-SUSPEND.req         21           5.2.1         RESUPEND.ref         21           5.2.1         GMM-RESUME.ref         21           5.2.1         GMM-RESUME.ref         21           5.2.10         GMM-RESUME.ref         22           5.2.11         GMM-RESUME.ref         22           5.2.12	2	References	13	
4.1       Figh-level characteristics of the Gb-interface       15         4.2       Position of BSSGP within the protocol stack on the Gb-interface       15         5       Elements for layer-to-layer communication       16         5.1       Definition of service model       16         5.2       Service primitives provided by the BSSGP at a BSS       18         5.2.1       RL-DL-UNTDATA.ind       20         5.2.3       (void)       20         5.2.3       (void)       20         5.2.4       GMM-PAGING ind       20         5.2.5       GMM-RA-CAPABILITY VIPDATE.eq       21         5.2.6       GMM-RA-CAPABILITY-UPDATE.eq       21         5.2.7       GMM-RA-CAPABILITY-UPDATE.eq       21         5.2.8       GMM-RA-CAPABILITY-UPDATE.eq       21         5.2.9       GMM-SUSPEND.enf       21         5.2.9       GMM-SUSPEND.enf       21         5.2.10       GMM-RESUME.enf       21         5.2.11       MM-RESUME.enf       21         5.2.12       GMM-RESUME.enf       22         5.2.13       NM-HUSH-LL res       22         5.2.14       NM-FLUW.CONTROL-BVC.enf       22         5.2.15       NM-HUW.ONTROL-BVC.enf       <	3	Abbreviations	14	
4.2       Position of BSSGP within the protocol stack on the Gb-interface       15         5       Elements for layer-to-layer communication       16         5.1       Definition of service model       16         5.2       Service primitives provided by the BSSGP at a BSS       18         5.2.1       RL-UL-UNITDATA.ind       20         5.2.2       RL-UL-UNITDATA.req       20         5.2.3       RL-UL-MBMS-UNITDATA.req       20         5.2.3       RL-UL-MBMS-UNITDATA.req       20         5.2.4       GMM-RA-CAPABILITY ind       21         5.2.5       GMM-RA-CAPABILITY UPDATE.req       21         5.2.6       GMM-RA-CAPABILITY-UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY-UPDATE.req       21         5.2.8       GMM-RA-CAPABILITY-UPDATE.req       21         5.2.9       GMM-RA-CAPABILITY-UPDATE.req       21         5.2.10       GMM-SUSPEND.req       21         5.2.10       GMM-SUSPEND.req       21         5.2.11       GMM-RESUME.req.       21         5.2.12       GMM-RESUME.req.       21         5.2.13       NM-FLUSH-LL ind       21         5.2.14       NM-FLUSH-LL ind       21         5.2.15       NM-F	4	Logical configuration of the Gb-interface	15	
5       Elements for layer-to-layer communication       16         5.1       Definition of service model       16         5.2       Service primitives provided by the BSSGP at a BSS       18         5.2.1       RL-UL-UNITDATA.ind       20         5.2.3       (void)       20         5.2.3       RL-UL-UNITDATA.ind       20         5.2.3       RL-UL-MBMS-UNITDATA.req       20         5.2.3       RL-UL-MBMS-UNITDATA.req       21         5.2.4       GMM-RA-CAPABILITY ind       21         5.2.5       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RADO-STATUS.req       21         5.2.8       GMM-SUSPEND.req       21         5.2.9       GMM-SUSPEND.req       21         5.2.10       GMM-RESUME.req       21         5.2.11       GMM-RESUME.req       21         5.2.12       GMM-RESUME.req       22         5.2.14       NM-FLUSH-LL.res       22         5.2.15       NM-LLC-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-MS.req       22         5.2.17       NM-FLOW-CONTROL-MS.req       22         5.2.19 <td></td> <td></td> <td></td>				
5.1       Definition of service model.       16         5.2       Service primitives provided by the BSSGP at a BSS.       18         5.2.1       RL-UL-UNITDATA ind.       20         5.2.3       (void)       20         5.2.3       RL-UL-UNITDATA ind.       20         5.2.3       RL-UL-MBMS-UNITDATA req.       20         5.2.3       RL-UL-MBMS-UNITDATA req.       21         5.2.4       GMM-PAGING ind.       21         5.2.5       GMM-RA-CAPABILITY ind       21         5.2.6       GMM-RA-CAPABILITY-UPDATE req.       21         5.2.7       GMM-RACAPABILITY-UPDATE req.       21         5.2.8       GMM-RADIO-STATUS.req.       21         5.2.9       GMM-SUSPEND req.       21         5.2.10       GMM-SUSPEND req.       21         5.2.11       GMM-RESUME req.       21         5.2.12       GMM-RESUME req.       21         5.2.13       NM-FLUSH-LLind       21         5.2.14       NM-FLUSH-LLind       21         5.2.15       NM-LC-DISCARDED req.       22         5.2.16       NM-FLOW-CONTROL-BVC.req.       22         5.2.19       NM-FLOW-CONTROL-MS.req       22         5.2.19	4.2			
5.2       Service primitives provided by the BSSGP at a BSS.       18         5.2.1       RL-DL-UNITDATA.ind.       20         5.2.2       RL-UL-UNITDATA.req.       20         5.2.3       (void)       20         5.2.3       RL-UL-MBMS-UNITDATA.req.       20         5.2.3       RL-UL-MBMS-UNITDATA.req.       21         5.2.4       GMM-PAGING.ind.       21         5.2.5       GMM-RA-CAPABILITY.ind       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.8       GMM-RAJO-STATUS.req.       21         5.2.9       GMM-SUSPEND.req       21         5.2.10       GMM-RSUPEND.enf       21         5.2.11       GMM-RESUME.req       21         5.2.12       GMM-RESUME.req       22         5.2.14       NM-FLUSH-LLind       21         5.2.15       NM-LC-DISCARDED.req.       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-BVC.req       22         5.2.18       NM-FLOW-CONTROL-BVC.req       22         5.2.19       NM-FLOW-CONTROL-MS.enf       22         5.2.20				
5.2.1       RL-DL-UNITDATA.ind.       20         5.2.2       RL-UL-UNITDATA.req.       20         5.2.3       (void)       20         5.2.3       RL-DL-MBMS-UNITDATA.ind.       20         5.2.3       RL-UL-MBMS-UNITDATA.req.       21         5.2.4       GMM-RACING.ind.       21         5.2.5       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY.UPDATE.cnf       21         5.2.8       GMM-RADIO-STATUS.req.       21         5.2.9       GMM-SUSPEND.req.       21         5.2.10       GMM-SUSPEND.req.       21         5.2.11       GMM-RESUME.req.       21         5.2.12       GMM-RUSH-LL.ind.       21         5.2.13       NM-FLUSH-LL.ind.       21         5.2.14       NM-FLUSH-LL.ind.       22         5.2.15       NM-FLOW-CONTROL-BVC.req.       22         5.2.16       NM-FLOW-CONTROL-BVC.req.       22         5.2.18       NM-FLOW-CONTROL-MS.ref       22         5.2.19       NM-FLOW-CONTROL-MS.ref       22         5.2.20       NM-FLOW-CONTROL-PC.ref       22         5.2.21       NM-FLOW-				
5.2.2       RL-UL-UNITDATA.req.       .20         5.2.3       (void)       .20         5.2.3       RL-DL-MBMS-UNITDATA.ind       .20         5.2.3       RL-UL-MBMS-UNITDATA.req.       .21         5.2.4       GMM-PAGING.ind.       .21         5.2.5       GMM-RA-CAPABILITY.ind       .21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       .21         5.2.7       GMM-RA-CAPABILITY.UPDATE.cnf       .21         5.2.8       GMM-RADIO-STATUS.req       .21         5.2.9       GMM-SUSPEND.req       .21         5.2.10       GMM-SUSPEND.ref       .21         5.2.11       GMM-RESUME.req.       .21         5.2.12       GMM-RESUME.ref.       .21         5.2.13       NM-FLUSH-LL.ind       .21         5.2.14       NM-FLUSH-LL.res       .22         5.2.15       NM-LOW-CONTROL-BVC.req       .22         5.2.16       NM-FLOW-CONTROL-BVC.req       .22         5.2.19       NM-FLOW-CONTROL-MS.ref.       .22         5.2.19       NM-FLOW-CONTROL-MS.ref.       .22         5.2.19       NM-FLOW-CONTROL-MS.ref.       .22         5.2.20       NM-STATUS.req       .22         5.2.21       NM-FLO				
5.2.3       (vid)       20         5.2.3a       RL-UL-MBMS-UNITDATA.ind       20         5.2.3b       RL-UL-MBMS-UNITDATA.ind       21         5.2.4       GMM-PAGING.ind.       21         5.2.5       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.8       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.9       GMM-RAUSPEND.req       21         5.2.10       GMM-SUSPEND.req       21         5.2.11       GMM-RESUME.ref       21         5.2.12       GMM-RESUME.ref       21         5.2.13       NM-FLUSH-LL.ind       21         5.2.14       NM-FLUSH-LL.ind       21         5.2.15       NM-LO-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-BVC.req       22         5.2.18       NM-FLOW-CONTROL-MS.req       22         5.2.19       NM-FLOW-CONTROL-MS.req       22         5.2.19       NM-FLOW-CONTROL-PFC.req       22         5.2.20       NM-STATUS.ind       22         5.2.21       NM-STOUK.cnf<	- · ·			
5.2.3a       RL-DL-MBMS-UNITDATA.ind       .20         5.2.3b       RL-UL-MBMS-UNITDATA.req       .21         5.2.4       GMM-RA-CAPABILITY ind       .21         5.2.5       GMM-RA-CAPABILITY updATE.req       .21         5.2.6       GMM-RA-CAPABILITY UPDATE.req       .21         5.2.7       GMM-RA-CAPABILITY UPDATE.req       .21         5.2.8       GMM-RADIO-STATUS.req       .21         5.2.9       GMM-SUSPEND.req       .21         5.2.10       GMM-RESUME.req       .21         5.2.11       GMM-RESUME.req       .21         5.2.12       GMM-RESUME.req       .21         5.2.13       NM-FLUSH-LL.res       .21         5.2.14       NM-FLUSH-LL.res       .22         5.2.15       NM-LC-DISCARDED.req       .22         5.2.16       NM-FLOW-CONTROL-BVC.req       .22         5.2.17       NM-FLOW-CONTROL-BVC.req       .22         5.2.18       NM-FLOW-CONTROL-MS.req       .22         5.2.19       NM-FLOW-CONTROL-PC.req       .22         5.2.19       NM-FLOW-CONTROL-PC.req       .22         5.2.20       NM-STATUS req       .22         5.2.21       NM-STATUS req       .22         5.2.22 <td>- · ·</td> <td></td> <td></td>	- · ·			
5.2.3b       RL-UL-MBMS-UNITDATA.req       21         5.2.4       GMM-PAGING.ind       21         5.2.5       GMM-RA-CAPABILITY.ind       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY.UPDATE.cnf       21         5.2.8       GMM-RADIO-STATUS.req       21         5.2.9       GMM-SUSPEND.req       21         5.2.10       GMM-RESUME.req       21         5.2.11       GMM-RESUME.req       21         5.2.12       GMM-RESUME.req       21         5.2.13       NM-FLUSH-LL.ind       21         5.2.14       NM-FLUSH-LL.ind       21         5.2.15       NM-LC-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-BVC.req       22         5.2.18       NM-FLOW-CONTROL-MS.req       22         5.2.19       NM-FLOW-CONTROL-PFC.req       22         5.2.19       NM-FLOW-CONTROL-PFC.req       22         5.2.20       NM-STATUS.req       22         5.2.21       NM-STOWS.req       22         5.2.22       NM-BUC-BLOCK.req       23         5.2.23       NM-BVC-UNBLOCK.req				
5.2.4       GMM-PAGING.ind       21         5.2.5       GMM-RA-CAPABILITY.ind       21         5.2.6       GMM-RA-CAPABILITY.UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY-UPDATE.refq       21         5.2.8       GMM-RA-CAPABILITY-UPDATE.refq       21         5.2.9       GMM-RAJOSTATUS.req       21         5.2.9       GMM-SUSPEND.refq       21         5.2.10       GMM-RESUME.req       21         5.2.11       GMM-RESUME.refq       21         5.2.12       GMM-RESUME.ref       21         5.2.13       NM-FLUSH-LL.ind       21         5.2.14       NM-FLUSH-LL.res       22         5.2.15       NM-LC-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-MS.cnf       22         5.2.19       NM-FLOW-CONTROL-MS.cnf       22         5.2.19       NM-FLOW-CONTROL-PFC.ref       22         5.2.20       NM-STATUS.req       22         5.2.21       NM-FLOW-CONTROL-PFC.ref       22         5.2.22       NM-FLOW-CONTROL-PFC.ref       22         5.2.21       NM-STATUS.req       23         5.2.22       NM-BVC-UNBLOCK.r				
52.5       GMM-RA-CAPABILITY ind       21         52.6       GMM-RA-CAPABILITY -UPDATE.req       21         52.7       GMM-RA-CAPABILITY -UPDATE.cnf       21         52.8       GMM-RADIO-STATUS.req       21         52.9       GMM-SUSPEND.req       21         52.10       GMM-SUSPEND.cnf       21         52.11       GMM-RESUME.req       21         52.12       GMM-RESUME.req       21         52.13       NM-FLUSH-LL.ind       21         52.14       NM-FLUSH-LL.ind       21         52.15       NM-LLC-DISCARDED.req       22         52.16       NM-FLOW-CONTROL-BVC.req       22         52.17       NM-FLOW-CONTROL-BVC.cnf       22         52.18       NM-FLOW-CONTROL-MS.cnf       22         52.19a       NM-FLOW-CONTROL-PFC.req       22         52.19a       NM-FLOW-CONTROL-PFC.req       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-STATUS.req       22         52.23       NM-BUC-CONTROL-PFC.req       23         52.24       NM-BUC-BLOCK.req       23         52.25       NM-BUC-BLOCK.req       23     <				
52.6       GMM-RA-CAPABILITY-UPDATE.req       21         5.2.7       GMM-RA-CAPABILITY-UPDATE.cnf       21         5.2.8       GMM-RADIO-STATUS.req       21         5.2.9       GMM-SUSPEND.req       21         5.2.10       GMM-SUSPEND.ref       21         5.2.11       GMM-RESUME.ref       21         5.2.12       GMM-RESUME.ref       21         5.2.13       NM-FLUSH-LL.ind       21         5.2.14       NM-FLUSH-LL.res       22         5.2.15       NM-LUC-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-MS.ref       22         5.2.18       NM-FLOW-CONTROL-MS.ref       22         5.2.19       NM-FLOW-CONTROL-MS.ref       22         5.2.19       NM-FLOW-CONTROL-PFC.req       22         5.2.20       NM-STATUS.ind       22         5.2.21       NM-STATUS.req       22         5.2.22       NM-BVC-BLOCK.ref       22         5.2.23       NM-BVC-UNBLOCK.ref       22         5.2.24       NM-BVC-RESET.reg       23         5.2.25       NM-BVC-RESET.ref	- · ·			
52.7       GMM-RA-CAPABILITY-UPDATE.cnf       21         52.8       GMM-RADIO-STATUS.req       21         52.9       GMM-RDIO.STATUS.req       21         52.10       GMM-SUSPEND.req       21         52.11       GMM-RESUME.req       21         52.12       GMM-RESUME.req       21         52.13       NM-FLUSH-LL.ind       21         52.14       NM-FLUSH-LL.res       22         52.15       NM-LUC-DISCARDED.req       22         52.16       NM-FLOW-CONTROL-BVC.req       22         52.17       NM-FLOW-CONTROL-BVC.cnf       22         52.18       NM-FLOW-CONTROL-MS.req       22         52.19       NM-FLOW-CONTROL-PFC.req       22         52.19       NM-FLOW-CONTROL-PFC.req       22         52.20       NM-STATUS.ind       22         52.21       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       23         52.24       NM-BVC-BLOCK.req       22         52.25       NM-BVC-UNBLOCK.req       23         52.26       NM-BVC-UNBLOCK.req       23         52.27       NM-BVC-RESET.res       23      5				
52.8       GMM-RADIO-STATUS.req.       21         52.9       GMM-SUSPEND.req.       21         52.10       GMM-SUSPEND.cnf.       21         52.11       GMM-RESUME.req.       21         52.12       GMM-RESUME.req.       21         52.13       NM-FLUSH-LL.ind       21         52.14       NM-FLUSH-LL.ines       22         52.15       NM-LLC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.req.       22         52.18       NM-FLOW-CONTROL-MS.cnf       22         52.19       NM-FLOW-CONTROL-PC.req.       22         52.19a       NM-FLOW-CONTROL-PC.req.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-BVC-BLOCK.ref       22         52.23       NM-BVC-UNBLOCK.ref       23         52.24       NM-BVC-UNBLOCK.ref       23         52.25       NM-BVC-RESET.reg       23         52.26       NM-BVC-RESET.reg       23         52.27       NM-BVC-RESET.ind       23         52.28       NM-BVC-RESET.reg       23				
52.9       GMM-SUSPEND.req       21         5.2.10       GMM-SUSPEND.cnf       21         5.2.11       GMM-RESUME.req       21         5.2.12       GMM-RESUME.ref       21         5.2.13       NM-FLUSH-LL.ind       21         5.2.14       NM-FLUSH-LL.res       22         5.2.15       NM-LC-DISCARDED.req       22         5.2.16       NM-FLOW-CONTROL-BVC.req       22         5.2.17       NM-FLOW-CONTROL-BVC.cnf       22         5.2.18       NM-FLOW-CONTROL-MS.req       22         5.2.19       NM-FLOW-CONTROL-MS.ref       22         5.2.19       NM-FLOW-CONTROL-PFC.req       22         5.2.19a       NM-FLOW-CONTROL-PFC.req       22         5.2.20       NM-STATUS.rind       22         5.2.21       NM-STATUS.rind       22         5.2.22       NM-BVC-BLOCK.req       22         5.2.23       NM-BVC-BLOCK.ref       22         5.2.24       NM-BVC-UNBLOCK.ref       23         5.2.25       NM-BVC-UNBLOCK.ref       23         5.2.26       NM-BVC-RESET.req       23         5.2.27       NM-BVC-RESET.req       23         5.2.26       NM-BVC-RESET.ind       23 <td></td> <td></td> <td></td>				
52.10       GMM-SUSPEND.cnf.       21         52.11       GMM-RESUME.req.       21         52.12       GMM-RESUME.cnf.       21         52.13       NM-FLUSH-LL.ind.       21         52.14       NM-FLUSH-LL.ind.       21         52.15       NM-LC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.req.       22         52.18       NM-FLOW-CONTROL-MS.cnf.       22         52.19       NM-FLOW-CONTROL-PC.req.       22         52.19       NM-FLOW-CONTROL-PC.req.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.20       NM-STATUS.req       22         52.21       NM-SLOCK.cnf       22         52.22       NM-SUCK.cnf       22         52.23       NM-BVC-BLOCK.req       23         52.24       NM-BVC-UNBLOCK.cnf       23         52.25       NM-BVC-RESET.req.       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.req.       23         52.28       NM-BVC-RESET.res       23         52.29       NM-BVC-RESET.res       23		•		
52.11       GMM-RESUME.req.       21         52.12       GMM-RESUME.cnf.       21         52.13       NM-FLUSH-LL.ind.       21         52.14       NM-FLUSH-LL.res.       22         52.15       NM-LLC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.req.       22         52.18       NM-FLOW-CONTROL-MS.req.       22         52.19       NM-FLOW-CONTROL-MS.req.       22         52.19       NM-FLOW-CONTROL-MS.req.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       23         52.24       NM-BVC-NBLOCK.req       23         52.25       NM-BVC-RESET.req.       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.reg.       23         52.28       NM-BVC-RESET.reg.       23         52.29       NM-BVC-RESET.reg.       23         52.29       NM-BVC-RESET.reg.       23      <		1		
52.12       GMM-RESUME.cnf       21         52.13       NM-FLUSH-LLind       21         52.14       NM-FLUSH-LLres       22         52.15       NM-LUC-DISCARDED.req       22         52.16       NM-FLOW-CONTROL-BVC.req       22         52.17       NM-FLOW-CONTROL-BVC.req       22         52.18       NM-FLOW-CONTROL-BVC.ref       22         52.19       NM-FLOW-CONTROL-MS.ref       22         52.19       NM-FLOW-CONTROL-PFC.req       22         52.19       NM-FLOW-CONTROL-PFC.req       22         52.19       NM-FLOW-CONTROL-PFC.ref       22         52.20       NM-STATUS.req       22         52.21       NM-SVC-BLOCK.req       22         52.22       NM-BVC-BLOCK.ref       22         52.23       NM-BVC-UNBLOCK.ref       23         52.24       NM-BVC-UNBLOCK.ref       23         52.25       NM-BVC-RESET req       23         52.26       NM-BVC-RESET req       23         52.27       NM-BVC-RESET req       23         52.28       NM-BVC-RESET req       23         52.29       NM-BVC-RESET req       23         52.29       NM-BVC-RESET ref       23 <tr< td=""><td></td><td></td><td></td></tr<>				
52.13       NM-FLUSH-LL.ind.       21         52.14       NM-FLUSH-LL.res.       22         52.15       NM-LC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.req.       22         52.18       NM-FLOW-CONTROL-MS.req.       22         52.19       NM-FLOW-CONTROL-MS.enf.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-UNBLOCK.ref       23         52.25       NM-BVC-UNBLOCK.ref       23         52.26       NM-BVC-RESET.reg       23         52.27       NM-BVC-RESET.res       23         52.28       NM-BVC-RESET.ref       23         52.29       NM-BVC-RESET.ref       23         52.30       NM-TLOW-CRESET.reg       23				
52.15       NM-LLC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.ref.       22         52.18       NM-FLOW-CONTROL-MS.req       22         52.19       NM-FLOW-CONTROL-MS.ref.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.19a       NM-FLOW-CONTROL-PFC.req.       22         52.19b       NM-FLOW-CONTROL-PFC.ref.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-STATUS.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-BLOCK.req       22         52.25       NM-BVC-UNBLOCK.req       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.reg.       23         52.28       NM-BVC-RESET.reg.       23         52.29       NM-BVC-RESET.reg.       23         52.20       NM-BVC-RESET.reg.       23         52.30       NM-TRACE.ind       23         52.31       PFM-DOWNLOAD-BSS-PFC.req.       23         52.33       PFM-CREATE-BSS-PFC.reg       23<	5.2.13			
52.15       NM-LLC-DISCARDED.req.       22         52.16       NM-FLOW-CONTROL-BVC.req.       22         52.17       NM-FLOW-CONTROL-BVC.ref.       22         52.18       NM-FLOW-CONTROL-MS.req       22         52.19       NM-FLOW-CONTROL-MS.ref.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.19a       NM-FLOW-CONTROL-PFC.req.       22         52.19b       NM-FLOW-CONTROL-PFC.ref.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-STATUS.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-BLOCK.req       22         52.25       NM-BVC-UNBLOCK.req       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.reg.       23         52.28       NM-BVC-RESET.reg.       23         52.29       NM-BVC-RESET.reg.       23         52.20       NM-BVC-RESET.reg.       23         52.30       NM-TRACE.ind       23         52.31       PFM-DOWNLOAD-BSS-PFC.req.       23         52.33       PFM-CREATE-BSS-PFC.reg       23<	5.2.14	NM-FLUSH-LL.res	22	
52.17       NM-FLOW-CONTROL-BVC.cnf.       22         52.18       NM-FLOW-CONTROL-MS.req.       22         52.19       NM-FLOW-CONTROL-MS.cnf.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.19       NM-FLOW-CONTROL-PFC.req.       22         52.20       NM-STATUS req.       22         52.21       NM-STATUS ind       22         52.22       NM-SVC-BLOCK.req.       22         52.23       NM-BVC-BLOCK.cnf       22         52.24       NM-BVC-UNBLOCK.req.       23         52.25       NM-BVC-UNBLOCK.req.       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.req.       23         52.26       NM-BVC-RESET.res.       23         52.27       NM-BVC-RESET.reg.       23         52.28       NM-BVC-RESET.reg.       23         52.29       NM-BVC-RESET.ref.       23         52.30       NM-TRACE.ind       23         52.31       PFM-OWNLOAD-BSS-PFC.req.       23         52.32       PFM-CREATE-BSS-PFC.ind.       23         52.33       PFM-CREATE-BSS-PFC.req.	5.2.15			
52.18       NM-FLOW-CONTROL-MS.req       22         52.19       NM-FLOW-CONTROL-PSC.req       22         52.19a       NM-FLOW-CONTROL-PFC.req       22         52.19b       NM-FLOW-CONTROL-PFC.ref       22         52.19b       NM-FLOW-CONTROL-PFC.ref       22         52.19b       NM-FLOW-CONTROL-PFC.ref       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-UNBLOCK.req       23         52.24       NM-BVC-UNBLOCK.req       23         52.25       NM-BVC-UNBLOCK.cnf       23         52.26       NM-BVC-RESET.req       23         52.27       NM-BVC-RESET.req       23         52.28       NM-BVC-RESET.ref       23         52.29       NM-BVC-RESET.ref       23         52.30       NM-TRACE.ind       23         52.31       PFM-DOWNLOAD-BSS-PFC.req       23         52.32       PFM-CREATE-BSS-PFC.ind       23         52.33       PFM-CREATE-BSS-PFC.reg       23         52.34       PFM-MODIFY-BSS-PFC.req       23 <td>5.2.16</td> <td>NM-FLOW-CONTROL-BVC.req</td> <td>22</td>	5.2.16	NM-FLOW-CONTROL-BVC.req	22	
52.19       NM-FLOW-CONTROL-MS.cnf       22         52.19a       NM-FLOW-CONTROL-PFC.req.       22         52.19b       NM-FLOW-CONTROL-PFC.cnf.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.req       22         52.22       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-UNBLOCK.req       22         52.25       NM-BVC-UNBLOCK.cnf       23         52.26       NM-BVC-RESET.req       23         52.27       NM-BVC-RESET.res       23         52.28       NM-BVC-RESET.res       23         52.29       NM-BVC-RESET.ind       23         52.29       NM-BVC-RESET.ind       23         52.29       NM-BVC-RESET.ind       23         52.30       NM-TRACE.ind       23         52.31       PFM-DOWNLOAD-BSS-PFC.req       23         52.33       PFM-CREATE-BSS-PFC.reg       23         52.33       PFM-CREATE-BSS-PFC.reg       23         52.34       PFM-MODIFY-BSS-PFC.req       23         52.35       (void)       24	5.2.17			
52.19a       NM-FLOW-CONTROL-PFC.req.       22         52.19b       NM-FLOW-CONTROL-PFC.cnf.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-UNBLOCK.req       22         52.25       NM-BVC-UNBLOCK.req       23         52.26       NM-BVC-UNBLOCK.req       23         52.27       NM-BVC-RESET.req       23         52.26       NM-BVC-RESET.req       23         52.27       NM-BVC-RESET.res       23         52.28       NM-BVC-RESET.res       23         52.29       NM-BVC-RESET.cnf       23         52.29       NM-BVC-RESET.req       23         52.30       NM-TRACE.ind       23         52.31       PFM-OWNLOAD-BSS-PFC.req       23         52.32       PFM-CREATE-BSS-PFC.req       23         52.33       PFM-CREATE-BSS-PFC.req       23         52.34       PFM-MODIFY-BSS-PFC.req       23         52.35       (void)       24	5.2.18			
52.19b       NM-FLOW-CONTROL-PFC.cnf.       22         52.20       NM-STATUS.req       22         52.21       NM-STATUS.ind       22         52.22       NM-BVC-BLOCK.req       22         52.23       NM-BVC-BLOCK.req       22         52.24       NM-BVC-BLOCK.req       22         52.25       NM-BVC-UNBLOCK.req.       23         52.26       NM-BVC-UNBLOCK.req.       23         52.27       NM-BVC-RESET.req.       23         52.26       NM-BVC-RESET.req.       23         52.27       NM-BVC-RESET.req.       23         52.28       NM-BVC-RESET.res.       23         52.29       NM-BVC-RESET.cnf.       23         52.29       NM-BVC-RESET.cnf.       23         52.30       NM-TRACE.ind       23         52.31       PFM-DOWNLOAD-BSS-PFC.req.       23         52.32       PFM-CREATE-BSS-PFC.req.       23         52.33       PFM-CREATE-BSS-PFC.req.       23         52.34       PFM-MODIFY-BSS-PFC.req.       23         52.35       (void)       24	5.2.19			
5.2.20       NM-STATUS.req       22         5.2.21       NM-STATUS.ind       22         5.2.22       NM-BVC-BLOCK.req       22         5.2.23       NM-BVC-BLOCK.cnf       22         5.2.24       NM-BVC-UNBLOCK.req       23         5.2.25       NM-BVC-UNBLOCK.cnf       23         5.2.26       NM-BVC-RESET.req       23         5.2.27       NM-BVC-RESET.req       23         5.2.28       NM-BVC-RESET.res       23         5.2.29       NM-BVC-RESET.ind       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req       23         5.2.32       PFM-CREATE-BSS-PFC.req       23         5.2.33       PFM-CREATE-BSS-PFC.req       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24				
5.2.21       NM-STATUS ind       22         5.2.22       NM-BVC-BLOCK.req       22         5.2.23       NM-BVC-BLOCK.cnf       22         5.2.24       NM-BVC-UNBLOCK req       23         5.2.25       NM-BVC-UNBLOCK cnf       23         5.2.26       NM-BVC-RESET req       23         5.2.27       NM-BVC-RESET req       23         5.2.28       NM-BVC-RESET res       23         5.2.29       NM-BVC-RESET ind       23         5.2.29       NM-BVC-RESET cnf       23         5.2.30       NM-TRACE ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req       23         5.2.32       PFM-CREATE-BSS-PFC ind       23         5.2.33       PFM-CREATE-BSS-PFC req       23         5.2.34       PFM-MODIFY-BSS-PFC req       23         5.2.35       (void)       24				
5.2.22       NM-BVC-BLOCK.req       22         5.2.23       NM-BVC-BLOCK.cnf       22         5.2.24       NM-BVC-UNBLOCK.req       23         5.2.25       NM-BVC-UNBLOCK.cnf       23         5.2.26       NM-BVC-RESET.req       23         5.2.27       NM-BVC-RESET.req       23         5.2.28       NM-BVC-RESET.res       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.30       NM-TRACE ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req       23         5.2.32       PFM-CREATE-BSS-PFC.ind       23         5.2.33       PFM-CREATE-BSS-PFC.res       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24		1		
5.2.23       NM-BVC-BLOCK.cnf       22         5.2.24       NM-BVC-UNBLOCK.req       23         5.2.25       NM-BVC-UNBLOCK.cnf       23         5.2.26       NM-BVC-RESET.req       23         5.2.27       NM-BVC-RESET.res       23         5.2.28       NM-BVC-RESET.ind       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req       23         5.2.32       PFM-CREATE-BSS-PFC.req       23         5.2.33       PFM-CREATE-BSS-PFC.req       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24				
5.2.24       NM-BVC-UNBLOCK.req.       23         5.2.25       NM-BVC-UNBLOCK.cnf.       23         5.2.26       NM-BVC-RESET.req.       23         5.2.27       NM-BVC-RESET.res.       23         5.2.28       NM-BVC-RESET.ind.       23         5.2.29       NM-BVC-RESET.cnf.       23         5.2.29       NM-BVC-RESET.cnf.       23         5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind.       23         5.2.33       PFM-CREATE-BSS-PFC.res.       23         5.2.34       PFM-MODIFY-BSS-PFC.req.       23         5.2.35       (void)       24		1		
5.2.25       NM-BVC-UNBLOCK.cnf.       23         5.2.26       NM-BVC-RESET.req.       23         5.2.27       NM-BVC-RESET.res.       23         5.2.28       NM-BVC-RESET.ind.       23         5.2.29       NM-BVC-RESET.cnf.       23         5.2.30       NM-TRACE.ind.       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind.       23         5.2.33       PFM-CREATE-BSS-PFC.res.       23         5.2.34       PFM-MODIFY-BSS-PFC.req.       23         5.2.35       (void)       24				
5.2.26       NM-BVC-RESET.req.       23         5.2.27       NM-BVC-RESET.res       23         5.2.28       NM-BVC-RESET.ind.       23         5.2.29       NM-BVC-RESET.cnf.       23         5.2.30       NM-TRACE.ind.       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind.       23         5.2.33       PFM-CREATE-BSS-PFC.res       23         5.2.34       PFM-MODIFY-BSS-PFC.req.       23         5.2.35       (void)       24		1		
5.2.27       NM-BVC-RESET.res       23         5.2.28       NM-BVC-RESET.ind       23         5.2.29       NM-BVC-RESET.cnf       23         5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req       23         5.2.32       PFM-CREATE-BSS-PFC.ind       23         5.2.33       PFM-CREATE-BSS-PFC.res       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24         5.2.36       (void)       24				
5.2.28       NM-BVC-RESET.ind		1		
5.2.29       NM-BVC-RESET.cnf.       23         5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind       23         5.2.33       PFM-CREATE-BSS-PFC.res.       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24         5.2.36       (void)       24				
5.2.30       NM-TRACE.ind       23         5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind.       23         5.2.33       PFM-CREATE-BSS-PFC.res.       23         5.2.34       PFM-MODIFY-BSS-PFC.req.       23         5.2.35       (void)       24         5.2.36       (void)       24				
5.2.31       PFM-DOWNLOAD-BSS-PFC.req.       23         5.2.32       PFM-CREATE-BSS-PFC.ind.       23         5.2.33       PFM-CREATE-BSS-PFC.res.       23         5.2.34       PFM-MODIFY-BSS-PFC.req.       23         5.2.35       (void)       24         5.2.36       (void)       24				
5.2.32       PFM-CREATE-BSS-PFC.ind				
5.2.33       PFM-CREATE-BSS-PFC.res       23         5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24         5.2.36       (void)       24		1		
5.2.34       PFM-MODIFY-BSS-PFC.req       23         5.2.35       (void)       24         5.2.36       (void)       24				
5.2.35       (void)				
5.2.36 (void)				
5.2.37 PFM-MODIFY-BSS-PFC.cnf	5.2.36	(void)	24	
	5.2.37	PFM-MODIFY-BSS-PFC.cnf	24	

5 2 20	PFM-DELETE-BSS-PFC.ind	24
5.2.38 5.2.39	PFM-DELETE-BSS-PFC.ind	
5.2.39 5.2.39a	PFM-DELETE-BSS-PFC.req	
5.2.39b	PFM-PS-HANDOVER-REQUIRED.req	
5.2.39c	PFM-PS-HANDOVER-REQUIRED.cnf	
5.2.39d	PFM-PS-HANDOVER-REQUEST.ind.	
5.2.39e	PFM-PS-HANDOVER-REQUEST.res	
5.2.39f	PFM-PS-HANDOVER-COMPLETE.req	
5.2.39g	PFM-PS-HANDOVER-CANCEL.req	
5.2.40	LCS-LOCATE.ind	
5.2.41	LCS-LOCATE.res	
5.2.42	LCS-ABORT.ind	
5.2.43	LCS-INFORMATION-TRANSFER.req	
5.2.44	LCS-INFORMATION-TRANSFER.cnf	
5.2.45	RIM-PDU-TRANSFER.req.	
5.2.46	RIM-PDU-TRANSFER.ind	
5.2.47 5.2.48	(void)	
5.2.48 5.2.49	(void)	
5.2.49	(void)	
5.2.50	(void)	
5.2.51	(void)	
5.2.52	MBMS-SESSION-START-REQUEST.ind	
5.2.54	MBMS-SESSION-START-RESPONSE.res	
5.2.55	MBMS-SESSION-STOP-REQUEST.ind	
5.2.56	MBMS-SESSION-STOP-RESPONSE.res	
5.2.57	MBMS-SESSION-UPDATE-REQUEST.ind	
5.2.58	MBMS-SESSION-UPDATE-RESPONSE.res	
5.3	Service primitives provided by the BSSGP at an SGSN	26
5.3.1	BSSGP-DL-UNITDATA.req	
5.3.2	BSSGP-UL-UNITDATA.ind	
5.3.3	(void)	
5.3.3a	BSSGP-DL-MBMS-UNITDATA.req	
5.3.3b	BSSGP-UL-MBMS-UNITDATA.ind	
5.3.4	GMM-PAGING.req	
5.3.5	GMM-RA-CAPABILITY.req	
5.3.6 5.3.7	GMM-RA-CAPABILITY-UPDATE.ind GMM-RA-CAPABILITY-UPDATE.res	
5.3.8	GMM-RADIO-STATUS.ind	
5.3.9	GMM-SUSPEND.ind	
5.3.10	GMM-SUSE ENDing	
5.3.11	NM-FLUSH-LL.req.	
5.3.12	NM-FLUSH-LL.cnf	
5.3.13	NM-LLC-DISCARDED.ind	
5.3.14	NM-FLOW-CONTROL-BVC.ind.	
5.3.15	NM-FLOW-CONTROL-MS.ind	
5.3.15a	NM-FLOW-CONTROL-PFC.ind	
5.3.16	NM-STATUS.req	
5.3.17	NM-STATUS.ind	
5.3.18	NM-BVC-BLOCK.ind	
5.3.19	NM-BVC-UNBLOCK.ind	
5.3.20	NM-BVC-RESET.req	
5.3.21	NM-BVC-RESET.res	
5.3.22	NM-BVC-RESET.ind	
5.3.23	NM-BVC-RESET.cnf.	
5.3.24	NM-TRACE.req	
5.3.25	PFM-DOWNLOAD-BSS-PFC.ind	
5.3.26	PFM-CREATE-BSS-PFC.req	
5.3.27	PFM-CREATE-BSS-PFC.cnf.	
5.3.28	PFM-MODIFY-BSS-PFC.ind	
5.3.29 5.3.30	PFM-MODIFY-BSS-PFC.res	
3.5.50	PFM-DELETE-BSS-PFC.req	

5.3.31	PFM-DELETE-BSS-PFC.cnf	
5.3.31	a PFM-DELETE-BSS-PFC.ind	
5.3.31		
5.3.31		
5.3.31	-	
5.3.31		
5.3.31		
5.3.31		
5.3.32		
5.3.33		
5.3.34		
5.3.35		
5.3.36		
5.3.37	1	
5.3.38		
5.3.39		
5.3.40		
5.3.41	(void)	
5.3.42		
5.3.43	( )	
5.3.44		
5.3.45	MBMS-SESSION-START-REQUEST.req	34
5.3.46	MBMS-SESSION-START-RESPONSE.cnf	
5.3.47	MBMS-SESSION-STOP-REQUEST.req	
5.3.48	MBMS-SESSION-STOP-RESPONSE.cnf.	
5.3.49	MBMS-SESSION-UPDATE-REQUEST.req	
5.3.50		
5.4	Primitive parameters	
5.4.1	BSSGP Virtual Connection Identifier (BVCI)	
5.4.2	Link Selector Parameter (LSP)	
5.4.3	[functional-name] PDU	
5.4.4	Network Service Entity Identifier (NSEI)	
5.4.5	BSS Context	
5.4.6	MBMS Service Context	
5.4.7	TLLI.	
5.4.7		
6	User data and signalling procedures between RL and BSSGP SAPs	
6.1	Downlink UNITDATA procedure	
6.1.1	Abnormal conditions	
6.2	Uplink UNITDATA procedure	
6.2.1	Abnormal conditions	
6.3	RA-CAPABILITY procedure	40
6.3.1	Abnormal conditions	
6.4	Downlink MBMS-UNITDATA procedure	
6.5	Uplink MBMS-UNITDATA procedure	
7	Signalling procedures between GMM SAPs	
7.1	Paging procedure	41
7.2	Radio Access Capability Update procedure	
7.2.1	Abnormal conditions	42
7.3	Radio Status procedure	42
7.4	SUSPEND procedure	
7.4.1	Abnormal conditions	
7.5	RESUME procedure	
7.5.1	Abnormal conditions	
0		
8	Signalling procedures between NM SAPs	
8.1	FLUSH-LL (logical link) procedure	
8.1.1	Abnormal Conditions	
8.2	Flow Control procedure	
8.2.1	General model of operation	
8.2.2	Mode of operation	
8.2.3	Flow Control of Traffic from an SGSN to BSS	

8.2.3.1	Control of the downlink throughput by the SGSN	
8.2.3.2	Flow Control Conformance Definition	
8.2.3.3	Response time within the SGSN to flow control messages	51
8.2.3.4	Frequency of sending BVC or MS or PFC Flow Control PDUs	51
8.2.3.5	FLOW-CONTROL PDUs	51
8.2.3.6	Condition of Bmax for MS after Initial Flow-Control-BVC	
8.2.4	Flow Control of Uplink Traffic from a BSS to an SGSN	
8.3	BVC blocking and unblocking procedure	
8.3.1	PTP BVC	
8.3.2	Signalling BVC	53
8.3.3	Abnormal Conditions	53
8.4	BVC-RESET procedure	54
8.4.1	Signalling BVC	55
8.4.2	PTP BVC	55
8.4.3	Abnormal Conditions	55
8.5	Trace procedure	56
0 0.		E.C.
	ignalling procedures between PFM SAPs	
8a.1	Create BSS PFC procedure	
8a.1.0	General	
8a.1.0a	Allocation/Retention Priority handling	
8a.1.1	Abnormal conditions	
8a.2	Modify BSS PFC procedure	
8a.2.1	Abnormal conditions	
8a.3	Delete BSS PFC procedure	
8a.4	PS Handover Required procedure	
8a.4.1	Abnormal conditions	
8a.5	PS Handover Request procedure	
8a.5.1	Abnormal conditions	
8a.6	PS Handover Complete procedure	
8a.6.1	Abnormal conditions	
8a.7	PS Handover Cancel procedure	
8a.7.1	Abnormal conditions	
8b Si	gnalling Procedures between LCS SAPs	64
8b.1	Location Procedure	
8b.1.1	Unsuccessful Operation	
8b.1.2	Abnormal Conditions	
8b.1.3	Overload	
8b.2		
8b.2.1	Position Command	
8b.2.2	Position Response	
8b.2.3	Unsuccessful Operation	
0 0'	-	
	ignalling procedures between RIM SAPs	
8c.1	General	
8c.1.1	Introduction	
8c.1.2	Definitions	
8c.1.2.1	Controlling and serving nodes	
8c.1.2.2	RIM association	
8c.1.2.3	RIM variables	
8c.1.3	RIM PDUs description	
8c.1.3.1	RAN-INFORMATION-REQUEST PDU	
8c.1.3.2	RAN-INFORMATION PDU	
8c.1.3.3	RAN-INFORMATION-ACK PDU	
8c.1.3.4	RAN-INFORMATION-ERROR PDU	
8c.1.3.5	RAN-INFORMATION-APPLICATION-ERROR PDU	
8c.1.4	RIM addressing and routing principles	
8c.1.4.1	RIM routing address	
8c.1.4.1.1		
8c.1.4.1.2		
8c.1.4.1.3		
8c.1.4.2	Routing via the core network	

8c.1.4.3	Address mirroring	69
8c.1.5	In-order delivery and reliable transfer - RSN	
8c.1.5.1	General	
8c.1.5.2	Allocating RSN values at the sending BSS	
8c.1.5.3	Comparing RSN values at the receiving BSS	
8c.1.6	RIM Protocol Version Number	
8c.2	RIM procedures	
8c.2.1	General	
8c.2.2	RAN Information Request procedure	
8c.2.2.1	RAN Information Request/Single Report procedure	71
8c.2.2.1.1		
8c.2.2.1.2	Reception of a valid RAN-INFORMATION-REQUEST/Single Report PDU by the serving BSS	72
8c.2.2.1.3		
8c.2.2.1.4		
8c.2.2.2	RAN Information Request/Multiple Report procedure	
8c.2.2.2.1	Initiation by the controlling BSS	
8c.2.2.2.2		
8c.2.2.2.3	Reception of a valid RAN-INFORMATION PDU/Initial Multiple Report PDU by the	/ 5
00.2.2.2.3	controlling BSS	74
8c.2.2.2.4		
8c.2.2.3	RAN Information Request/Stop procedure	
8c.2.2.3.1	Initiation by the controlling BSS	
8c.2.2.3.2		
8c.2.2.3.3		
8c.2.2.3.4		
8c.2.3	RAN Information Send procedure	
8c.2.3.1	Initiation by the serving BSS	
8c.2.3.2	Reception of a valid RAN-INFORMATION PDU by the controlling BSS	
8c.2.3.3	Reception of a valid RAN-INFORMATION-ACK PDU in the serving BSS	
8c.2.3.4	Expiration of T(RI) in the serving BSS	
8c.2.4	RAN Information Application Error procedure	
8c.2.4.1	Initiation by the controlling BSS	
8c.2.4.2	Reception of a valid RAN-INFORMATION-APPLICATION-ERROR PDU by the serving BSS	
8c.2.4.3	Reception of a valid RAN-INFORMATION-ACK PDU by the controlling BSS	
8c.2.4.4	Expiration of T(RIAE) in the controlling BSS	79
8c.2.5	RAN Information Error procedure	79
8c.3	Abnormal conditions	79
8c.3.0	General	79
8c.3.1	Abnormal conditions at the BSSGP level	79
8c.3.1.1	General	79
8c.3.1.2	RIM addressing error in BSS	
8c.3.1.3	RIM addressing error in the CN	
8c.3.1.4	RIM PDU addressed to a BSS not supporting RIM	
8c.3.2	Abnormal conditions encountered in the RIM container	
8c.3.2.1	Unknown RIM Application Identity	
8c.3.2.2	Erroneous PDU Type Extension field	
8c.3.2.3	Missing conditional IE	
8c.3.2.4	Missing mandatory IE	
8c.3.2.5	Syntactical error in an expected conditional IE	
8c.3.2.6	Syntactical error in a mandatory IE	
8c.3.2.7	Unexpected conditional IE	
8c.3.2.8	Containers with out-of-sequence information elements	
8c.3.2.9	Container with semantically incorrect content	
8c.3.3	Unexpected RIM PDU	
8c.3.4	RIM error reporting	
8c.3.4.1	General	
8c.3.4.2 8c.3.4.3	Sending of a RAN-INFORMATION-ERROR PDU	
8c.3.4.3 8c.4	Reception of a RAN-INFORMATION-ERROR PDU in the BSS	
8c.4 8c.5	Action upon deletion of a cell in a BSS	
00.0		05

0		-
8c.5.0		
8c.5.1	Actions due to the deletion of the cell	
8c.5.2	Additional actions in the case the deleted cell is used as a source cell by RIM	
8c.6	Specific requirements related to RIM applications	
8c.6.0	General requirements	
8c.6.1	Requirements related to the NACC RIM application	
8c.6.2	SI3 application	
8c.6.3	MBMS data channel application	
00.0.0		
8d	Signalling procedures between MBMS SAPs	85
8d.1	General	85
8d.2	MBMS Session Start	
8d.2.1	Abnormal Conditions	
8d.3	MBMS Session Stop	
8d.3.1	Abnormal Conditions	
8d.4	MBMS Session Update	
8d.4.1	Abnormal Conditions	
04.111		
9	General Protocol Error Handling	90
10	DDU functional definitions and contents	00
10	PDU functional definitions and contents	
10.1	General Structure Of A PDU	
10.2	PDU functional definitions and contents at RL and BSSGP SAPs	
10.2.1	DL-UNITDATA	
10.2.2		
10.2.3		
10.2.4		
10.2.5	DL-MBMS-UNITDATA	92
10.2.6	UL-MBMS-UNITDATA	92
10.3	PDU functional definitions and contents at GMM SAP	93
10.3.1	PAGING PS	
10.3.2	PAGING CS	93
10.3.3	RA-CAPABILITY-UPDATE	94
10.3.4	RA-CAPABILITY-UPDATE-ACK	94
10.3.5		
10.3.6		
10.3.7		
10.3.8	SUSPEND-NACK	
10.3.9	RESUME	
10.3.1		
10.3.1		
10.5.1	PDU functional definitions and contents at NM SAP	
10.4	FLUSH-LL	
10.4.2		
10.4.2		
10.4.4		
10.4.6		
10.4.7		
10.4.8		
10.4.9		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1		
10.4.1	9 CREATE-BSS-PFC-NACK	104
10.4.2	0 MODIFY-BSS-PFC	

10.4.21	MODIFY-BSS-PFC-ACK	
10.4.22	DELETE-BSS-PFC	
10.4.23	DELETE-BSS-PFC-ACK	
10.4.24	FLOW-CONTROL-PFC	
10.4.25		
10.4.26		
10.4.27		
10.4.28		
10.4.29		
10.4.30		
10.4.31		
10.4.32		
10.4.33		
10.4.34		
10.4.35		
10.1.55	PDU functional definitions and contents at LCS SAP	
10.5.1	PERFORM-LOCATION-REQUEST	
10.5.2	PERFORM-LOCATION-RESPONSE	111
10.5.3	PERFORM-LOCATION-ABORT	
10.5.4	POSITION-COMMAND	
10.5.5	POSITION-RESPONSE	
10.5.5	PDU functional definitions and contents at RIM SAP	
10.6.1	RAN-INFORMATION-REQUEST	
10.6.1	RAN-INFORMATION-REQUEST	
10.6.2	RAN-INFORMATION	
10.6.4	RAN-INFORMATION-ERROR	
10.6.5	RAN-INFORMATION-APPLICATION-ERROR	
10.7	PDU functional definitions and contents at MBMS SAP	
10.7.1	MBMS-SESSION-START-REQUEST	
10.7.2	MBMS-SESSION-START-RESPONSE	
10.7.3	MBMS-SESSION-STOP-REQUEST	
10.7.4	MBMS-SESSION-STOP-RESPONSE	
10.7.5	MBMS-SESSION-UPDATE-REQUEST	
10.7.6	MBMS-SESSION-UPDATE-RESPONSE	
11	General information elements coding	
11.1	General structure of the information elements	
11.2	Information element description	
11.3	Information Element Identifier (IEI)	
11.3.1	Alignment octets	
11.3.2	Bmax default MS	
11.3.3	BSS Area Indication	
11.3.4	Bucket Leak Rate (R)	
11.3.5	BVC Bucket Size	
11.3.6	BVCI (BSSGP Virtual Connection Identifier)	
11.3.7	BVC Measurement	
11.3.8	Cause	
11.3.9	Cell Identifier	
11.3.10		
11.3.11		
11.3.12		
11.3.12		
11.3.13		
11.3.14		
11.3.15		
11.3.10		
11.3.17		
11.3.18		
11.3.20		
11.3.21		
11.3.22	1 5	
11.3.23	OMC Id	

11.3.24	PDU In Error	126
11.3.25	PDU Lifetime	
11.3.26	PDU Type	
11.3.27	Priority	
11.3.28	QoS Profile	
11.3.29	Radio Cause	
11.3.30	RA-Cap-UPD-Cause	
11.3.31	Routeing Area	
11.3.32	R_default_MS	
11.3.32	Suspend Reference Number	
11.3.34	Tag	
11.3.34	Temporary logical link Identity (TLLI)	
11.3.36	Temporary Mobile Subscriber Identity (TMSI)	
11.3.30	Trace Reference	
11.3.38	Trace Type	
11.3.39	Transaction Id	
11.3.40	Trigger Id	
11.3.41	Number of octets affected	
11.3.42	Packet Flow Identifier (PFI)	
11.3.42a	(void)	
11.3.43	Aggregate BSS QoS Profile	
11.3.44	GPRS Timer	
11.3.45	Feature Bitmap	
11.3.46	Bucket Full Ratio	
11.3.47	Service UTRAN CCO	
11.3.48	NSEI (Network Service Entity Identifier)	
11.3.49	RRLP APDU	137
11.3.50	LCS QoS	137
11.3.51	LCS Client Type	138
11.3.52	Requested GPS Assistance Data	138
11.3.53	Location Type	138
11.3.54	Location Estimate	138
11.3.55	Positioning Data	139
11.3.56	Deciphering Keys	139
11.3.57	LCS Priority	139
11.3.58	LCS Cause	139
11.3.59	LCS Capability	
11.3.60	RRLP Flags	
11.3.61	RIM Application Identity	
11.3.62	RIM Sequence Number	
11.3.62a	RIM Container	
11.3.62a.0	General	
11.3.62a.1	RAN-INFORMATION-REQUEST RIM Container	
11.3.62a.2	RAN-INFORMATION RIM Container	
11.3.62a.3	RAN-INFORMATION-ACK RIM Container	
11.3.62a.4	RAN-INFORMATION-ERROR RIM Container	
11.3.62a.4	RAN-INFORMATION-APPLICATION-ERROR RIM Container	
11.3.63	Application Container	
11.3.63.1	RAN-INFORMATION-REQUEST Application Container	
11.3.63.1.0	General	
11.3.63.1.1	RAN-INFORMATION-REQUEST Application Container for the NACC Application	
11.3.63.1.2	RAN-INFORMATION-REQUEST Application Container for the SI3 Application	145
11.3.63.1.3	RAN-INFORMATION-REQUEST Application Container for the MBMS data channel	1 / /
112620	Application	144
11.3.63.2	RAN-INFORMATION Application Container Unit	
11.3.63.2.0	General	
11.3.63.2.1	RAN-INFORMATION Application Container for the NACC Application	
11.3.63.2.2	RAN-INFORMATION Application Container for the SI3 Application	
11.3.63.2.3	RAN-INFORMATION Application Container for the MBMS data channel Application	
11.3.64	Application Error Container	
11.3.64.1	Application Error Container layout for the NACC application	
11.3.64.2	Application Error Container for the SI3 application	147

11.3.64.3	Application Error Container for the MBMS data channel application	
11.3.65	RIM PDU Indications	
11.3.65.0	General	
11.3.65.1	RAN-INFORMATION-REQUEST RIM PDU Indications	
11.3.65.2	RAN-INFORMATION RIM PDU Indications	
11.3.65.3	RAN-INFORMATION-APPLICATION-ERROR RIM PDU Indications	
11.3.66	(void)	
11.3.67	RIM Protocol Version Number	
11.3.68	PFC Flow Control parameters	
11.3.69	Global CN-Id	
11.3.70	RIM Routing Information	
11.3.71	MBMS Session Identity	
11.3.72	MBMS Session Duration	
11.3.73	MBMS Service Area Identity List	
11.3.74	MBMS Response	
11.3.75	MBMS Routing Area List	
11.3.76	MBMS Session Information	
11.3.77	TMGI (Temporary Mobile Group Identity)	
11.3.78	MBMS Stop Cause	
11.3.79	Source BSS to Target BSS Transparent Container	
11.3.80	Target BSS to Source BSS Transparent Container	
11.3.81	NAS container for PS Handover	
11.3.82	PFCs to be set-up list	
11.3.83	List of set-up PFCs	
11.3.84	Extended Feature Bitmap	
11.3.85	Source to Target Transparent Container	
11.3.86	Target to Source Transparent Container	
11.3.87	RNC Identifier	
11.3.88	Page Mode	
11.3.89	Container ID	
11.3.90	Global TFI	
11.3.91	IMEI	
11.3.92	Time to MBMS Data Transfer	
11.3.93	MBMS Session Repetition Number	
11.3.94	Inter RAT Handover Info	
11.3.95	PS Handover Command	
11.3.95a	PS Handover Indications	
11.3.95b	SI/PSI Container	
11.3.95c	Active PFCs List	
11.3.96	Velocity Data	
11.3.97	DTM Handover Command	
11.3.98	CS Indication	
11.3.99	Requested GANSS Assistance Data	
11.3.100	GANSS Location Type	
11.3.101	GANSS Positioning Data	
11.3.102	Flow Control Granularity	167
11.3.103	eNB Identifier	167
11.3.104	E-UTRAN Inter RAT Handover Info	
11.3.105	Subscriber Profile ID for RAT/Frequency priority	168
11.3.106	Request for Inter-RAT Handover Info	
11.3.107	Reliable Inter-RAT Handover Info	
12 List	of system variables	
	General Variables	
	Flow control variables	
	(informative): Change history	
History		173

## Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The present document specifies or references procedures used on the Base Station System (BSS) to Serving GPRS Support Node (SGSN) interface for control of GSM packet data services within the digital cellular telecommunications system (Phase 2+).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

#### 1 Scope

The present document specifies or references procedures used on the Base Station System (BSS) to Serving GPRS Support Node (SGSN) interface for control of GSM packet data services.

The functional split between BSS and SGSN is defined in 3GPP TS 23.060 which states that a BSS is responsible for local radio resource allocation. The required procedures between BSS and SGSN are defined in detail in the present document.

#### 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or • non-specific.
- For a specific reference, subsequent revisions do not apply. •
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including ٠ a GSM document), a non-specific reference implicitly refers to the latest version of that document in the same Release as the present document.
- 3GPP TR 21 905: "Vocabulary for 3GPP Specifications" [1]

[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	(void).
[3]	(void).
[4]	(void).
[5]	(void).
[6]	(void).
[7]	3GPP TS 23.060: "General Packet Radio Service (GPRS); Service Description; Stage 2".
[8]	(void).
[9]	(void).
[10]	3GPP TS 43.064: "Overall description of the GPRS radio interface; Stage 2".
[11]	3GPP TS 24.008: "Mobile radio interface Layer 3 specification; Core network protocols; Stage 3".
[12]	3GPP TS 44.064: "Mobile Station - Serving GPRS Support Node (MS-SGSN) Logical Link Control (LLC) Layer Specification".
[13]	(void).
[14]	3GPP TS 48.008: "Mobile Switching Centre - Base Station System (MSC-BSS) interface; Layer 3 specification".
[15]	(void).
[16]	3GPP TS 48.016: "General Packet Radio Service (GPRS); Base Station System (BSS) - Serving GPRS Support Node (SGSN) interface; Network Service"
[17]	3GPP TS 29.018: "General Packet Radio Service (GPRS); Serving GPRS Support Node (SGSN) - Visitors Location Register (VLR); Gs Interface Layer 3 specification".
[18]	3GPP TS 32.008: "Subscriber and equipment trace".

- [19] ITU-T Recommendation X.200 (White Book): "Information technology Open Systems Interconnection - Basic Reference Model: The basic model".
- [20] 3GPP TS 23.107: "Quality of Service (QoS) concept and architecture".
- [21] (void).
- [22] 3GPP TS 44.060: "General Packet Radio Service (GPRS); Mobile Station (MS) Base Station System (BSS) interface; Radio Link Control/Medium Access Control (RLC/MAC) protocol".
- [23] 3GPP TS 43.059: "Functional Stage 2 Description of Location Services (LCS) in GERAN".
- [24] 3GPP TS 49.031: "Location Services (LCS); Base Station System Application Part LCS Extension (BSSAP-LE)".
- [25] 3GPP TS 44.018: "Mobile radio interface layer 3 specification; Radio Resource Control Protocol".
- [26] 3GPP TR 44.901: "External Network Assisted Cell Change (NACC)".
- [27] 3GPP TS 23.236: "Intra-domain connection of Radio Access Network (RAN) nodes to multiple Core Network (CN) nodes".
- [28] 3GPP TS 12.20: "Base Station System (BSS) Management Information".
- [29] 3GPP TS 43.246: "Multimedia Broadcast Multicast Service (MBMS) in the GERAN Stage 2".
- [30] 3GPP TS 26.346: "Multimedia Broadcast Multicast Service Protocols and Codecs".
- [31] 3GPP TS 29.061: "Interworking between the Public Land Mobile Network (PLMN) supporting packet based services and Packet Data Networks (PDN)".
- [32] 3GPP TS 23.246: "Multimedia Broadcast/Multicast Service (MBMS) Architecture and Functional Description".
- [33] IETF RFC 3588: "Diameter Base Protocol".
- [34] 3GPP TS 43.129: "Packet-switched handover for GERAN A/Gb mode; Stage 2".
- [35] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Resource Control (RRC); Protocol specification".
- [36] 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access (E-UTRA); S1 Application Protocol (S1AP)".
- [37] 3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System (EPS); Stage3".
- [38] 3GPP TS 25.413: "UTRAN Iu interface Radio Access Network Application Part (RANAP) signalling".

## 3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 and in 3GPP TS 48.016 and the following apply:

ABQP	Aggregate BSS QoS Profile
CBL	Current Bucket Level
CCN	Cell Change Notification
CS	Circuit switched
DL	Downlink
eNB	E-UTRAN NodeB
E-UTRA	Evolved UTRA
E-UTRAN	Evolved UTRAN
LCS	Location Services

MBMS	Multimedia Broadcast Multicast Service
MME	Mobility Management Entity
NACC	Network Assisted Cell Change
NSE	Network Service Entity
PFC	Packet Flow Context
PFI	Packet Flow Identifier
PFM	Packet Flow Management
PFT	Packet Flow Timer
PS	Packet switched
RAN	Radio Access Network
RIM	RAN Information Management
RRLP	Radio Resource LCS Protocol
RSN	RIM Sequence Number
SPID	Subscriber Profile ID for RAT/Frequency priority
TAI	Tracking Area Identity
TMGI	Temporary Mobile Group Identity
ТОМ	Tunneling of Messages
RIM	RAN Information Management
UL	Uplink
	-

## 4 Logical configuration of the Gb-interface

## 4.1 High-level characteristics of the Gb-interface


In contrast to the A-interface, where a single user has the sole use of a dedicated physical resource throughout the lifetime of a call irrespective of information flow, the Gb-interface allows many users to be multiplexed over a common physical resource.

GPRS signalling and user data may be sent on the same physical resources.

Access rates per user may vary from zero data to the maximum possible bandwidth (e.g. the available bit rate of an E1).

## 4.2 Position of BSSGP within the protocol stack on the Gbinterface

Across the Gb-interface the following peer protocols have been identified: the Base Station Subsystem GPRS Protocol (BSSGP) and the underlying network service (NS). The NS shall transport BSSGP PDUs between a BSS and an SGSN (refer to 3GPP TS 48.016).

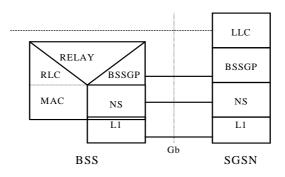

#### Figure 4.1: BSSGP's position within the Gb-interface protocol stack

NOTE: The Relay function provides buffering and parameter mapping between the RLC/MAC and the BSSGP.

EXAMPLE: On the uplink the RLC/MAC shall provide a TLLI. The Relay function shall then make it available to BSSGP. For a definition of the RLC/MAC function refer to 3GPP TS 43.064.

#### 3GPP TS 48.018 version 9.0.0 Release 9

The primary functions of the BSSGP include:

- in the downlink, the provision by an SGSN to a BSS of radio related information used by the RLC/MAC function;
- in the uplink, the provision by a BSS to an SGSN of radio related information derived from the RLC/MAC function; and
- the provision of functionality to enable two physically distinct nodes, an SGSN and a BSS, to operate node management control functions.

The present document describes the service model, service primitives, procedures and PDU formats of the BSSGP.


## 5 Elements for layer-to-layer communication

#### 5.1 Definition of service model

In the present document, the communication between adjacent layers and the services provided by the layers are distributed by use of abstract service primitives. Only externally observable behaviour resulting from the description is normatively prescribed by the present document.

The service primitive model used in the present document is based on the concepts developed in ITU-T Recommendation X.200.

The service model for a BSS and an SGSN is asymmetric. The service models for a BSS and an SGSN are shown in figure 5.1.

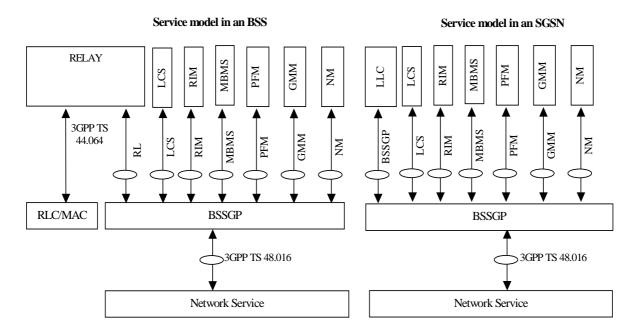

#### Figure 5.1: BSSGP service model

Primitives consist of commands and their respective responses associated with the services requested of another layer. The general syntax of a primitive is:

- XX - Generic name - Type (Parameters);

where XX designates the layer providing or using the service.

In the present document, XX is:

- "BSSGP" for functions controlling the transfer of LLC frames passed between an SGSN and an MS across the Gb interface;
- "RL" (relay) for functions controlling the transfer of LLC frames between the RLC/MAC function and BSSGP;
- "GMM" (GPRS mobility management) for functions associated with mobility management between an SGSN and a BSS; and
- "NM" (network management) for functions associated with Gb-interface and BSS-SGSN node management;
- "PFM" (packet flow management) for functions associated with the management of BSS Packet Flow Contexts (PFCs);
- "LCS" (location services) for functions associated with location services (LCS) procedures;
- "RIM" (RAN Information Management) for functions associated with generic procedures to communicate between two BSSs over the core network.
- "MBMS" (Multimedia Broadcast Multicast Service) for functions associated with Multimedia Broadcast Multicast Service (MBMS) procedures.

## 5.2 Service primitives provided by the BSSGP at a BSS

Generic name		Ту	Parameters		
	REQuest	INDication	RESponse	CoNFirm	
	•	RL ⇔ E	BSSGP		
RL-DL-UNITDATA	-	Х	-	-	BVCI, NSEI, Refer to DL-UNITDATA PDU
RL-UL-UNITDATA	X	-	-	-	BVCI, NSEI, LSP, Refer to UL- UNITDATA PDU
RL-DL-MBMS-UNITDATA	-	Х	-	-	BVCI, NSEI, Refer to DL-MBMS- UNITDATA PDU
RL-UL-MBMS-UNITDATA	Х	-	-	-	BVCI, NSEI, LSP, Refer to UL-MBMS- UNITDATA PDU
		GMM ⇔	BSSGP		•
GMM-PAGING	-	Х	-	-	BVCI, NSEI, Refer to PAGING PS PDU Refer to PDU PAGING CS PDU
GMM-RA-CAPABILITY	-	Х	-	-	BVCI, NSEI, Refer to RA-CAPABILITY PDU
GMM-RA-CAPABILITY- UPDATE	X	-	-	X	BVCI, NSEI, Refer to RA-CAPABILITY- UPDATE PDU, Refer to RA-CAPABILITY- UPDATE-ACK PDU
GMM-RADIO-STATUS	Х	-	-	-	BVCI, NSEI, Refer to RADIO-STATUS PDU
GMM-SUSPEND	Х	-	-	X	BVCI, NSEI, Refer to SUSPEND PDU Refer to SUSPEND- (N)ACK PDU
GMM-RESUME	Х	-	-	X	BVCI, NSEI, Refer to RESUME PDU Refer to RESUME-(N)ACK PDU
	•	NM ⇔ I	BSSGP		
NM-FLUSH-LL	-	Х	Х	-	BVCI, NSEI, Refer to FLUSH-LL PDU Refer to FLUSH-LL-ACK PDU
NM-LLC-DISCARDED	X	-	-	-	BVCI, NSEI, Refer to LLC-DISCARDED PDU
NM-FLOW-CONTROL- BVC	Х	-	-	X	BVCI, NSEI, Refer to FLOW- CONTROL-BVC PDU Refer to FLOW- CONTROL-BVC ACK PDU
NM-FLOW-CONTROL-MS	Х	-	-	X	BVCI, NSEI, Refer to FLOW- CONTROL-MS PDU Refer to FLOW-CONTROL-MS ACK PDU

#### Table 5.2: Service primitives provided by BSSGP at a BSS

Generic name		Τv	ре		Parameters
	REQuest	INDication	RESponse	CoNFirm	
NM-FLOW-CONTROL-PFC	Х	-	-	X	BVCI, NSEI, Refer to FLOW- CONTROL-PFC PDU Refer to FLOW- CONTROL-PFC ACK PDU
NM-STATUS	Х	Х	-	-	BVCI, NSEI, Refer to STATUS PDU
NM-BVC-BLOCK	Х	-	-	X	BVCI, NSEI, Refer to BVC-BLOCK PDU Refer to BVC-BLOCK-ACK PDU
NM-BVC-UNBLOCK	Х	-	-	X	BVCI, NSEI, Refer to BVC-UNBLOCK PDU Refer to BVC-UNBLOCK- ACK PDU
NM-BVC-RESET	Х	Х	Х	X	BVCI, NSEI, Refer to BVC-RESET PDU Refer to BVC-RESET-ACK PDU
NM-TRACE	-	Х	-	-	BVCI, NSEI, Refer to SGSN-INVOKE- TRACE PDU
		PFM ⇔	BSSGP		•
PFM-DOWNLOAD-BSS- PFC	Х	-	-	-	BVCI, NSEI Refer to DOWNLOAD- BSS-PFC PDU
PFM-CREATE-BSS-PFC	-	X	X	-	BVCI, NSEI Refer to CREATE-BSS- PFC PDU Refer to CREATE-BSS- PFC-ACK PDU Refer to CREATE-BSS- PFC-NACK PDU
PFM-MODIFY-BSS-PFC	Х	-	-	Х	BVCI, NSEI Refer to MODIFY-BSS- PFC PDU Refer to MODIFY-BSS- PFC-ACK PDU
PFM-DELETE-BSS-PFC	X	X	X	-	BVCI, NSEI Refer to DELETE-BSS- PFC PDU Refer to DELETE-BSS- PFC-ACK PDU Refer to DELETE-BSS- PFC-REQ PDU
PFM-PS-HANDOVER- REQUIRED	Х	-	-	X	BVCI, NSEI, Refer to PS-HANDOVER- REQUIRED PDU Refer to PS-HANDOVER- REQUIRED-(N)ACK PDU
PFM-PS-HANDOVER- REQUEST	-	Х	Х	-	BVCI, NSEI, Refer to PS-HANDOVER- REQUEST PDU Refer to PS-HANDOVER- REQUEST-(N)ACK PDU
PFM-PS-HANDOVER- COMPLETE	Х	-	-	-	BVCI, NSEI, Refer to PS-HANDOVER- COMPLETE PDU
PFM-PS-HANDOVER- CANCEL	Х	-	-	-	BVCI, NSEI, Refer to PS-HANDOVER- CANCEL PDU
		LCS ⇔	BSSGP	•	

Generic name		Ту	pe	Parameters			
	REQuest	INDication	RESponse	CoNFirm			
LCS-LOCATE	-	Х	X	-	BVCI, NSEI Refer to PERFORM- LOCATION-REQUEST PDU Refer to PERFORM- LOCATION-RESPONSE PDU		
LCS-ABORT	-	Х	-	-	BVCI, NSEI Refer to PERFORM- LOCATION-ABORT PDU		
LCS-INFORMATION- TRANSFER	Х	-	-	Х	BVCI, NSEI Refer to POSITION- COMMAND PDU Refer to POSITION- RESPONSE PDU		
		RIM ⇔	BSSGP				
RIM-PDU-TRANSFER	Х	Х	-	-	BVCI, NSEI Refer to RAN- INFORMATION- REQUEST, RAN- INFORMATION, RAN- INFORMATION-ACK, RAN-INFORMATION- APPLICATION-ERROR, RAN-INFORMATION- ERROR PDUs;		
MBMS ⇔ BSSGP							
MBMS-SESSION-START	-	X	X	-	BVCI, NSEI Refer to MBMS-SESSION- START-REQUEST PDU; Refer to MBMS-SESSION- START-RESPONSE PDU		
MBMS-SESSION-STOP	-	Х	X	-	BVCI, NSEI Refer to MBMS-SESSION- STOP-REQUEST PDU; Refer to MBMS-SESSION- STOP- RESPONSE PDU		
MBMS-SESSION-UPDATE	-	Х	Х	-	BVCI, NSEI Refer to MBMS-SESSION- UPDATE-REQUEST PDU; Refer to MBMS-SESSION- UPDATE-RESPONSE PDU		

### 5.2.1 RL-DL-UNITDATA.ind

Receipt of a DL-UNITDATA PDU from an SGSN by a BSS containing an LLC-PDU and MS control information necessary for the transmission of the LLC-PDU across the radio interface.

### 5.2.2 RL-UL-UNITDATA.req

Request to send a UL-UNITDATA PDU to an SGSN from a BSS containing an LLC-PDU and radio interface derived information.

#### 5.2.3 (void)

#### 5.2.3a RL-DL-MBMS-UNITDATA.ind

Receipt of a DL-MBMS-UNITDATA PDU from an SGSN by a BSS containing an LLC-PDU for the transmission of the LLC-PDU across the radio interface.

## 5.2.3b RL-UL-MBMS-UNITDATA.req

Request to send a UL-MBMS-UNITDATA PDU to an SGSN from a BSS containing an LLC-PDU.

### 5.2.4 GMM-PAGING.ind

Receipt of a PAGING-PS or PAGING-CS PDU from an SGSN by a BSS containing instructions to page an MS within a given group of cells.

#### 5.2.5 GMM-RA-CAPABILITY.ind

Receipt of a RA-CAPABILITY PDU from an SGSN by a BSS providing the new Radio Access capability of an MS.

#### 5.2.6 GMM-RA-CAPABILITY-UPDATE.req

Request to send a RA-CAPABILITY-UPDATE PDU to an SGSN from a BSS in order to receive the current Radio Access capabilities of an MS.

### 5.2.7 GMM-RA-CAPABILITY-UPDATE.cnf

Receipt of a RA-CAPABILITY-UPDATE-ACK PDU from a SGSN by a BSS containing the current Radio Access capabilities of an MS.

#### 5.2.8 GMM-RADIO-STATUS.req

Request to send a RADIO-STATUS PDU to an SGSN from a BSS to report that an exception condition occurred in the operation of the radio interface for an MS.

#### 5.2.9 GMM-SUSPEND.req

Request to send a SUSPEND PDU to an SGSN from a BSS to mark an MS's GPRS service as suspended.

#### 5.2.10 GMM-SUSPEND.cnf

Receipt of a SUSPEND-ACK PDU from an SGSN by a BSS confirming that an SGSN has marked an MS's GPRS service as suspended.

#### 5.2.11 GMM-RESUME.req

Request to send a RESUME PDU to an SGSN from a BSS to mark an MS's GPRS service as resumed.

#### 5.2.12 GMM-RESUME.cnf

Receipt of a RESUME-ACK PDU from an SGSN by a BSS confirming that an SGSN has marked an MS's GPRS service as resumed.

#### 5.2.13 NM-FLUSH-LL.ind

On receipt of a FLUSH-LL PDU by a BSS from an SGSN, the BSS will either delete queued LLC-PDUs for a TLLI or move the queued LLC-PDUs from an old to a new BVC. If there is a BSS context for the Mobile Station identified by the TLLI and the BSS is able to move the queued LLC-PDUs, the BSS has to move the BSS context from the old to the new BVC, even if it is not able to offer the same QoS characteristics in the new BVC.

#### 5.2.14 NM-FLUSH-LL.res

Sending of a FLUSH-LL-ACK PDU to the SGSN from a BSS to report if queued LLC-PDU(s) for an MS were deleted or transferred from the old to the new cell within the routing area. The FLUSH-LL-ACK PDU may also report whether the QoS characteristics of the BSS context associated to the MS could be kept in the new cell.

### 5.2.15 NM-LLC-DISCARDED.req

Request to send a LLC-DISCARDED PDU to an SGSN from a BSS indicating that LLC frames pertaining to an MS have been locally discarded.

#### 5.2.16 NM-FLOW-CONTROL-BVC.req

Request to send a FLOW-CONTROL-BVC PDU to an SGSN from a BSS indicating the ability of a BVC to accept a certain flow of data.

#### 5.2.17 NM-FLOW-CONTROL-BVC.cnf

Confirmation that a FLOW-CONTROL-BVC PDU has been received by an SGSN for a given BVC.

#### 5.2.18 NM-FLOW-CONTROL-MS.req

Request to send a FLOW-CONTROL-MS PDU to an SGSN from a BSS indicating the ability to accept a certain flow of data for a given MS.

#### 5.2.19 NM-FLOW-CONTROL-MS.cnf

Confirmation that a FLOW-CONTROL-MS PDU has been received by an SGSN for a given MS.

### 5.2.19a NM-FLOW-CONTROL-PFC.req

Request to send a FLOW-CONTROL-PFC PDU to an SGSN from a BSS indicating the ability to accept a certain flow of data for a given PFC of a given MS.

### 5.2.19b NM-FLOW-CONTROL-PFC.cnf

Confirmation that a FLOW-CONTROL-PFC PDU has been received by an SGSN for a given PFC of a given MS.

#### 5.2.20 NM-STATUS.req

Request to send a STATUS PDU to an SGSN from a BSS to report that an exception condition occurred within the BSS.

#### 5.2.21 NM-STATUS.ind

Receipt of a STATUS PDU from an SGSN by a BSS indicating that an exception condition occurred within an SGSN.

#### 5.2.22 NM-BVC-BLOCK.req

Request to send a BVC-BLOCK PDU to an SGSN from a BSS to mark a BVC as blocked.

#### 5.2.23 NM-BVC-BLOCK.cnf

Receipt of a BVC-BLOCK-ACK PDU from an SGSN by a BSS confirming that an SGSN has marked a BVC as blocked.

### 5.2.24 NM-BVC-UNBLOCK.req

Request to send a BVC-UNBLOCK PDU to an SGSN from a BSS to mark a BVC as unblocked.

#### 5.2.25 NM-BVC-UNBLOCK.cnf

Receipt of a BVC-UNBLOCK-ACK PDU from an SGSN by a BSS confirming that an SGSN has marked a BVC as unblocked.

#### 5.2.26 NM-BVC-RESET.req

Request to send a BVC-RESET PDU to an SGSN from a BSS to reset an SGSN's GPRS BVC contexts.

#### 5.2.27 NM-BVC-RESET.res

Sending of a BVC-RESET-ACK PDU to the SGSN from an BSS indicating that a GPRS BVC context has been reset in the BSS.

#### 5.2.28 NM-BVC-RESET.ind

Receipt of a BVC-RESET PDU at a BSS from an SGSN indicating that GPRS BVC contexts have been reset at the SGSN.

#### 5.2.29 NM-BVC-RESET.cnf

Receipt of a BVC-RESET-ACK PDU at a BSS confirming that GPRS BVC context has been reset at the SGSN.

#### 5.2.30 NM-TRACE.ind

Receipt of a SGSN-INVOKE-TRACE PDU at a BSS from an SGSN indicating the need to produce a trace record on an MS.

#### 5.2.31 PFM-DOWNLOAD-BSS-PFC.req

Upon a request to transfer an uplink or downlink LLC PDU for which it currently does not have a BSS Packet Flow Context, the BSS may send a DOWNLOAD-BSS-PFC PDU to an SGSN.

#### 5.2.32 PFM-CREATE-BSS-PFC.ind

Receipt of a CREATE-BSS-PFC PDU at a BSS from an SGSN indicating that the BSS should create or modify a BSS Packet Flow Context using the Aggregate BSS QoS Profile.

#### 5.2.33 PFM-CREATE-BSS-PFC.res

Sending of a CREATE-BSS-PFC-ACK PDU to the SGSN from a BSS to respond with an Aggregate BSS QoS Profile, indicating queuing or successful creation of the PFC, or a CREATE-BSS-PFC-NACK in case the BSS was unable to create the PFC.

#### 5.2.34 PFM-MODIFY-BSS-PFC.req

Request to send a MODIFY-BSS-PFC PDU to an SGSN from a BSS to modify an Aggregate BSS QoS Profile.

5.2.35 (void)

5.2.36 (void)

#### 5.2.37 PFM-MODIFY-BSS-PFC.cnf

Reception of a MODIFY-BSS-PFC-ACK PDU at a BSS from an SGSN confirming the modification of an Aggregate BSS QoS Profile.

#### 5.2.38 PFM-DELETE-BSS-PFC.ind

Receipt of a DELETE-BSS-PFC PDU at a BSS from an SGSN to delete an Aggregate BSS QoS Profile.

#### 5.2.39 PFM-DELETE-BSS-PFC.res

Sending of a DELETE-BSS-PFC-ACK PDU to an SGSN from a BSS to respond to a deletion.

### 5.2.39a PFM-DELETE-BSS-PFC.req

Sending of a DELETE-BSS-PFC-REQ PDU to an SGSN from a BSS to request to a deletion of an Aggregate BSS QoS Profile.

### 5.2.39b PFM-PS-HANDOVER-REQUIRED.req

Request to send a PS-HANDOVER-REQUIRED PDU to the SGSN from the source BSS to initiate the allocation of resources in the target system at PS handover.

### 5.2.39c PFM-PS-HANDOVER-REQUIRED.cnf

Receipt of a PS-HANDOVER-REQUIRED-ACK PDU from the SGSN by the source BSS reporting successful allocation of resources in the target system at PS handover.

### 5.2.39d PFM-PS-HANDOVER-REQUEST.ind

Receipt of a PS-HANDOVER-REQUEST PDU from the SGSN by the target BSS to initiate the allocation of resources for one or more PFCs during PS handover.

#### 5.2.39e PFM-PS-HANDOVER-REQUEST.res

Request to send a PS-HANDOVER-REQUEST-ACK PDU to the SGSN from the target BSS to report the successful allocation of resources during PS handover.

### 5.2.39f PFM-PS-HANDOVER-COMPLETE.req

Request to send a PS-HANDOVER-COMPLETE PDU to the SGSN from the target BSS to report a successful channel change during PS handover.

### 5.2.39g PFM-PS-HANDOVER-CANCEL.req

Request to send a PS-HANDOVER-CANCEL PDU to the SGSN from the source BSS to cancel a previously initiated PS handover.

### 5.2.40 LCS-LOCATE.ind

Receipt of a PERFORM-LOCATION-REQUEST PDU at a BSS from an SGSN requesting a location procedure for a target MS.

#### 5.2.41 LCS-LOCATE.res

Sending of a PERFORM-LOCATION-RESPONSE PDU to an SGSN responding to the location request for a target MS.

#### 5.2.42 LCS-ABORT.ind

Receipt of a PERFORM-LOCATION-ABORT PDU at a BSS from an SGSN indicating a request of an abort of a location procedure for a target MS.

#### 5.2.43 LCS-INFORMATION-TRANSFER.req

Request to send a POSITION-COMMAND PDU to an SGSN from a BSS that has LCS related information associated with a higher level protocol available to transfer.

#### 5.2.44 LCS-INFORMATION-TRANSFER.cnf

Confirmation in a POSTION-RESPONSE PDU that the higher layer message has been received and an indication of the result of the message transfer and possibly including a reply with another higher layer protocol message.

#### 5.2.45 RIM-PDU-TRANSFER.req

Sending of a RAN-INFORMATION-REQUEST, RAN-INFORMATION, RAN-INFORMATION-ACK, RAN-INFORMATION-APPLICATION-ERROR, RAN-INFORMATION-ERROR PDU to an SGSN from a BSS for routing of the PDU to another BSS.

#### 5.2.46 RIM-PDU-TRANSFER.ind

Reception of a RAN-INFORMATION-REQUEST, RAN-INFORMATION, RAN-INFORMATION-ACK, RAN-INFORMATION-APPLICATION-ERROR, RAN-INFORMATION-ERROR PDU at a BSS from an SGSN originating from another BSS.

- 5.2.47 (void)
- 5.2.48 (void)
- 5.2.49 (void)
- 5.2.50 (void)
- 5.2.51 (void)
- 5.2.52 (void)

#### 5.2.53 MBMS-SESSION-START-REQUEST.ind

Reception of an MBMS-SESSION-START-REQUEST PDU at a BSS from an SGSN requesting to start an MBMS session.

### 5.2.54 MBMS-SESSION-START-RESPONSE.res

Sending of an MBMS-SESSION-START-RESPONSE PDU to an SGSN from a BSS acknowledging to start an MBMS session.

#### 5.2.55 MBMS-SESSION-STOP-REQUEST.ind

Reception of an MBMS-SESSION-STOP-REQUEST PDU at a BSS from an SGSN requesting to stop an MBMS session.

#### 5.2.56 MBMS-SESSION-STOP-RESPONSE.res

Sending of an MBMS-SESSION-STOP-RESPONSE PDU to an SGSN from a BSS acknowledging to stop an MBMS session.

### 5.2.57 MBMS-SESSION-UPDATE-REQUEST.ind

Reception of an MBMS-SESSION-UPDATE-REQUEST PDU at a BSS from an SGSN requesting to update the MBMS service area list of an ongoing MBMS broadcast service session.

### 5.2.58 MBMS-SESSION-UPDATE-RESPONSE.res

Sending of an MBMS-SESSION-UPDATE-RESPONSE PDU to an SGSN from a BSS acknowledging to update the MBMS service area list of an ongoing MBMS broadcast service session.

## 5.3 Service primitives provided by the BSSGP at an SGSN

#### Table 5.3: Service primitives provided by BSSGP at an SGSN

Generic name	Туре				Parameters
	REQuest	INDication	RESponse	CoNFirm	

Generic name			Туре		Parameters
	REQuest	INDication		CoNFirm	
		LL			
BSSGP-DL-UNITDATA	X	-	-	-	BVCI, NSEI, LSP, Refer to DL-UNITDATA PDU
BSSGP-UL-UNITDATA	-	Х			BVCI, NSEI, Refer to UL-UNITDATA PDU
BSSGP-DL-MBMS- UNITDATA	X	-	-	-	BVCI, NSEI, Refer to DL-MBMS- UNITDATA PDU
BSSGP-UL-MBMS- UNITDATA	-	Х	-	-	BVCI, NSEI, Refer to UL-MBMS- UNITDATA PDU
		GMN	I ⇔ BSSGP		
GMM-PAGING	X	-	-	-	BVCI, NSEI, Refer to PAGING PS PDU Refer to PAGING CS PDU
GMM-RA-CAPABILITY	X				BVCI, NSEI, Refer to RA-CAPABILITY PDU
GMM-RA-CAPABILITY- UPDATE	-	Х	X	-	BVCI, NSEI, Refer to RA-CAPABILITY- UPDATE PDU, Refer to RA-CAPABILITY- UPDATE-ACK PDU
GMM-RADIO-STATUS	-	Х	-	-	BVCI, NSEI, Refer to RADIO-STATUS PDU
GMM-SUSPEND	-	Х	-	-	BVCI, NSEI, Refer to SUSPEND PDU Refer to SUSPEND-(N)ACK PDU
GMM-RESUME	-	Х	-	-	BVCI, NSEI, Refer to RESUME PDU Refer to RESUME-(N)ACK PDU
	1	NM	⇔ BSSGP		
NM-FLUSH-LL	X	-	-	X	BVCI, NSEI, Refer to FLUSH-LL PDU Refer to FLUSH-LL-ACK PDU
NM-LLC-DISCARDED	-	Х	-	-	BVCI, NSEI, Refer to LLC-DISCARDED PDU
NM-FLOW-CONTROL- BVC	-	Х	-	-	BVCI, NSEI, Refer to FLOW-CONTROL- BVC PDU Refer to FLOW- CONTROL-BVC ACK PDU
NM-FLOW-CONTROL- MS	-	Х	-	-	BVCI, NSEI, Refer to FLOW-CONTROL- MS PDU Refer to FLOW- CONTROL-MS ACK PDU
NM-FLOW-CONTROL- PFC	-	Х	-	-	BVCI, NSEI, Refer to FLOW-CONTROL- PFC PDU Refer to FLOW- CONTROL-PFC ACK PDU
NM-STATUS	Х	Х	-	-	BVCI, NSEI, Refer to STATUS PDU
NM-BVC-BLOCK	-	Х	-	-	BVCI, NSEI, Refer to BVC-BLOCK PDU Refer to BVC-BLOCK-ACK PDU

Generic name		T	/ре		Parameters
	REQuest	INDication	RESponse	CoNFirm	
NM-BVC-UNBLOCK	-	Х	-	-	BVCI, NSEI, Refer to BVC-UNBLOCK PDU Refer to BVC-UNBLOCK- ACK PDU
NM-BVC-RESET	X	Х	Х	Х	BVCI, NSEI, Refer to BVC-RESET PDU Refer to BVC-RESET-ACK PDU
NM-TRACE	Х	-	-	-	BVCI, NSEI, Refer to SGSN-INVOKE- TRACE PDU
		PFM ¢	⇒ BSSGP		
PFM-DOWNLOAD-BSS- PFC	-	Х	-	-	BVCI, NSEI Refer to DOWNLOAD-BSS- PFC PDU
PFM-CREATE-BSS-PFC	X	-	-	x	BVCI, NSEI Refer to CREATE-BSS-PFC PDU Refer to CREATE-BSS- PFC-ACK PDU Refer to CREATE-BSS- PFC-NACK PDU
PFM-MODIFY-BSS-PFC		Х	Х		BVCI, NSEI Refer to MODIFY-BSS-PFC PDU Refer to MODIFY-BSS- PFC-ACK PDU
PFM-DELETE-BSS-PFC	X	Х	-	Х	BVCI, NSEI Refer to DELETE-BSS-PFC PDU Refer to DELETE-BSS- PFC-ACK PDU Refer to to DELETE-BSS- PFC-REQ PDU
PFM-PS-HANDOVER- REQUIRED	-	Х	Х	-	BVCI, NSEI, Refer to PS-HANDOVER- REQUIRED PDU Refer to PS-HANDOVER- REQUIRED-(N)ACK PDU
PFM-PS-HANDOVER- REQUEST	X	-	-	Х	BVCI, NSEI, Refer to PS-HANDOVER- REQUEST PDU Refer to PS-HANDOVER- REQUEST-(N)ACK PDU
PFM-PS-HANDOVER- COMPLETE	-	Х	-	-	BVCI, NSEI, Refer to PS-HANDOVER- COMPLETE PDU
PFM-PS-HANDOVER- CANCEL	-	Х	-	-	BVCI, NSEI, Refer to PS-HANDOVER- CANCEL PDU
		LCS ¢	> BSSGP		
LCS-LOCATE	X	-	-	X	BVCI, NSEI Refer to PERFORM- LOCATION-REQUEST PDU Refer to PERFORM- LOCATION-RESPONSE PDU
LCS-ABORT	Х	-	-	-	BVCI, NSEI Refer to PERFORM- LOCATION-ABORT PDU

Generic name	Туре			Parameters	
	REQuest	INDication	RESponse	CoNFirm	
LCS-INFORMATION- TRANSFER	-	Х	X	-	BVCI, NSEI Refer to POSITION- COMMAND PDU Refer to POSITION- RESPONSE PDU
			BSSGP		
RIM-PDU-TRANSFER	X	Х	-	-	BVCI, NSEI Refer to RAN- INFORMATION-REQUEST, RAN-INFORMATION, RAN- INFORMATION-ACK, RAN- INFORMATION- APPLICATION-ERROR, RAN-INFORMATION- ERROR PDUS;
	•	MBMS	⇔ BSSGP	•	
MBMS-SESSION-START	Х	-	-	X	BVCI, NSEI Refer to MBMS-SESSION- START-REQUEST PDU; Refer to MBMS-SESSION- START-RESPONSE PDU
MBMS-SESSION-STOP	Х	-	-	Х	BVCI, NSEI Refer to MBMS-SESSION- STOP-REQUEST PDU; Refer to MBMS-SESSION- STOP- RESPONSE PDU
MBMS-SESSION- UPDATE	Х	-	-	Х	BVCI, NSEI Refer to MBMS-SESSION- UPDATE-REQUEST PDU; Refer to MBMS-SESSION- UPDATE-RESPONSE PDU

NOTE: The parameters in the BSSGP-DL-UNITDATA and BSSGP-UL-UNITDATA primitives that are not included in the corresponding primitives in 3GPP TS 44.064 are provided or extracted by some intermediate function out of the scope of the present document.

### 5.3.1 BSSGP-DL-UNITDATA.req

Request to send a DL-UNITDATA PDU to a BSS from an SGSN containing an LLC-PDU and control information necessary for the transmission of the LLC-PDU across the radio interface.

#### 5.3.2 BSSGP-UL-UNITDATA.ind

Receipt of a UL-UNITDATA PDU from a BSS by an SGSN containing an LLC-PDU and radio interface derived information.

#### 5.3.3 (void)

#### 5.3.3a BSSGP-DL-MBMS-UNITDATA.req

Request to send a DL-MBMS-UNITDATA PDU to a BSS from an SGSN containing an LLC-PDU for the transmission of the LLC-PDU across the radio interface.

#### 5.3.3b BSSGP-UL-MBMS-UNITDATA.ind

Receipt of a UL-MBMS-UNITDATA PDU from a BSS by an SGSN containing an LLC-PDU.

#### 5.3.4 GMM-PAGING.req

Request to send a PAGING-PS or PAGING-CS PDU from an SGSN to a BSS containing instructions to page an MS within a given group of cells.

#### 5.3.5 GMM-RA-CAPABILITY.req

Request to send a RA-CAPABILITY PDU to the BSS from an SGSN containing the Radio Access capability of an MS.

#### 5.3.6 GMM-RA-CAPABILITY-UPDATE.ind

Receipt of a RA-CAPABILITY-UPDATE PDU from a BSS by an SGSN, requesting that the SGSN sends the Radio Access capability of an MS to the BSS.

### 5.3.7 GMM-RA-CAPABILITY-UPDATE.res

Sending of a RA-CAPABILITY-UPDATE-ACK PDU to the BSS from an SGSN containing the current Radio Access capability of an MS.

#### 5.3.8 GMM-RADIO-STATUS.ind

Receipt of a RADIO-STATUS PDU from a BSS by an SGSN to report that an exception condition occurred in the operation of the radio interface for an MS.

#### 5.3.9 GMM-SUSPEND.ind

Receipt of a SUSPEND PDU from a BSS by an SGSN indicating that an MS wishes to suspended its GPRS service.

#### 5.3.10 GMM-RESUME.ind

Receipt of a RESUME PDU from a BSS by an SGSN indicating that an MS wishes to resume its GPRS service.

#### 5.3.11 NM-FLUSH-LL.req

Request to send a FLUSH-LL PDU from an SGSN to a BSS, instructing the BSS to either delete queued LLC-PDUs for a TLLI or move the queued LLC-PDUs from an old to a new BVC.

#### 5.3.12 NM-FLUSH-LL.cnf

Receipt of a FLUSH-LL-ACK PDU at an SGSN informing if the queued LLC-PDU(s) for an MS were deleted or transferred from the old to the new cell within the routing area. The FLUSH-LL-ACK PDU may also report whether the QoS characteristics of the BSS context associated to the MS could be kept in the new cell.

### 5.3.13 NM-LLC-DISCARDED.ind

Receipt of a LLC-DISCARDED PDU from a BSS by an SGSN indicating that LLC frames pertaining to an MS have been locally discarded.

### 5.3.14 NM-FLOW-CONTROL-BVC.ind

Receipt of a FLOW-CONTROL-BVC PDU from a BSS by an SGSN indicating the ability of a BVC to accept a certain flow of data.

### 5.3.15 NM-FLOW-CONTROL-MS.ind

Receipt of a FLOW-CONTROL-MS PDU from a BSS by an SGSN indicating the ability to accept a certain flow of data for a given MS.

#### 5.3.15a NM-FLOW-CONTROL-PFC.ind

Receipt of a FLOW-CONTROL-PFC PDU from a BSS by an SGSN indicating the ability to accept a certain flow of data for a given PFC of a given MS.

#### 5.3.16 NM-STATUS.req

Request to send a STATUS PDU to a BSS from an SGSN to report that an exception condition occurred within an SGSN.

#### 5.3.17 NM-STATUS.ind

Receipt of a STATUS PDU from a BSS by an SGSN indicating an exception condition occurred within the BSS.

#### 5.3.18 NM-BVC-BLOCK.ind

Receipt of a BVC-BLOCK PDU from a BSS by an SGSN indicating that a BVC shall be marked as blocked.

#### 5.3.19 NM-BVC-UNBLOCK.ind

Receipt of a BVC-UNBLOCK PDU from a BSS by an SGSN indicating that a BVC shall be marked as unblocked.

#### 5.3.20 NM-BVC-RESET.req

Request to send a BVC-RESET PDU to a BSS from an SGSN to reset a BSS's GPRS BVC contexts.

#### 5.3.21 NM-BVC-RESET.res

Sending of a BVC-RESET-ACK PDU to the BSS from a SGSN indicating that a GPRS BVC context has been reset in the SGSN.

#### 5.3.22 NM-BVC-RESET.ind

Receipt of a BVC-RESET PDU at an SGSN from a BSS indicating that GPRS BVC contexts have been reset at the BSS.

#### 5.3.23 NM-BVC-RESET.cnf

Receipt of a BVC-RESET-ACK PDU at an SGSN confirming that GPRS BVC contexts have been reset at the BSS.

#### 5.3.24 NM-TRACE.req

Request to send an SGSN-INVOKE-TRACE PDU to a BSS from an SGSN to begin producing a trace record on an MS.

## 5.3.25 PFM-DOWNLOAD-BSS-PFC.ind

Receipt of a DOWNLOAD-BSS-PFC PDU at an SGSN from a BSS.

### 5.3.26 PFM-CREATE-BSS-PFC.req

Sending of a CREATE-BSS-PFC PDU to a BSS from an SGSN requesting that the BSS should create or modify a BSS Packet Flow Context using the Aggregate BSS QoS Profile.

#### 5.3.27 PFM-CREATE-BSS-PFC.cnf

Receipt of a CREATE-BSS-PFC-ACK PDU at an SGSN from a BSS confirming the creation or modification or queuing of a BSS Packet Flow Context using the Aggregate BSS QoS Profile or a CREATE-BSS-PFC-NACK in to indicate the BSS was unable to create the PFC.

#### 5.3.28 PFM-MODIFY-BSS-PFC.ind

Receipt of a MODIFY-BSS-PFC PDU at an SGSN from a BSS to modify an Aggregate BSS QoS Profile.

#### 5.3.29 PFM-MODIFY-BSS-PFC.res

Sending of a MODIFY-BSS-PFC-ACK PDU to a BSS from an SGSN to respond with an Aggregate BSS QoS Profile.

#### 5.3.30 PFM-DELETE-BSS-PFC.req

Sending of a DELETE-BSS-PFC PDU to a BSS from an SGSN to delete an Aggregate BSS QoS Profile.

### 5.3.31 PFM-DELETE-BSS-PFC.cnf

Receipt of a DELETE-BSS-PFC-ACK PDU at an SGSN from a BSS to confirm the deletion of an Aggregate BSS QoS Profile.

### 5.3.31a PFM-DELETE-BSS-PFC.ind

Receipt of a DELETE-BSS-PFC-REQ PDU at an SGSN from a BSS that a deletion of an Aggregate BSS QoS Profile is requested.

#### 5.3.31b PFM-PS-HANDOVER-REQUIRED.ind

Receipt of a PS-HANDOVER-REQUIRED PDU from the source BSS by the SGSN indicating initiation of a PS handover.

#### 5.3.31c PFM-PS-HANDOVER-REQUIRED.res

Request to send a PS-HANDOVER-REQUIRED-ACK PDU from the SGSN to the source BSS to initiate the channel change attempt during PS handover.

### 5.3.31d PFM-PS-HANDOVER-REQUEST.req

Request to send a PS-HANDOVER-REQUEST PDU from the SGSN to the target BSS to initiate the allocation of resources for one or more PFCs during PS handover.

#### 5.3.31e PFM-PS-HANDOVER-REQUEST.cnf

Receipt of a PS-HANDOVER-REQUEST-ACK PDU from the target BSS by the SGSN reporting the successful allocation of resources during PS handover.

### 5.3.31f PFM-PS-HANDOVER-COMPLETE.ind

Receipt of a PS-HANDOVER-COMPLETE PDU from the target BSS by the SGSN reporting a successful channel change during PS handover.

### 5.3.31g PFM-PS-HANDOVER-CANCEL.ind

Receipt of a PS-HANDOVER-CANCEL PDU from the source BSS by the SGSN indicating cancellation of a previously initiated PS handover.

### 5.3.32 LCS-LOCATE.req

Sending of a PERFORM-LOCATION-REQUEST PDU at an SGSN requesting a location procedure for a target MS.

### 5.3.33 LCS-LOCATE.cnf

Receipt of a PERFORM-LOCATION-RESPONSE PDU confirming that the location request for a target MS has been attempted indicating the result of this attempt.

#### 5.3.34 LCS-ABORT.req

Sending of a PERFORM-LOCATION-ABORT PDU from an SGSN to a BSS requesting an abort of a location procedure for a target MS.

#### 5.3.35 LCS-INFORMATION-TRANSFER.ind

Receipt of a POSITION-COMMAND PDU at an SGSN from a BSS requesting a transfer of a higher level protocol message.

#### 5.3.36 LCS-INFORMATION-TRANSFER.res

Sending of a POSITION-RESPONSE PDU from an SGSN to a BSS indicating the result of the message transfer and possibly including the transfer of a new higher layer protocol message.

#### 5.3.37 RIM-PDU-TRANSFER.req

Sending of a RAN-INFORMATION-REQUEST, RAN-INFORMATION, RAN-INFORMATION-ACK, RAN-INFORMATION-APPLICATION-ERROR, RAN-INFORMATION-ERROR PDU to a BSS from an SGSN.

#### 5.3.38 RIM-PDU-TRANSFER.ind

Reception of a RAN-INFORMATION-REQUEST, RAN-INFORMATION, RAN-INFORMATION-ACK, RAN-INFORMATION-APPLICATION-ERROR, RAN-INFORMATION-ERROR PDU at an SGSN from a BSS for routing of the PDU to another BSS.

- 5.3.39 (void)
- 5.3.40 (void)
- 5.3.41 (void)
- 5.3.42 (void)
- 5.3.43 (void)
- 5.3.44 (void)

#### 5.3.45 MBMS-SESSION-START-REQUEST.req

Sending of an MBMS-SESSION-START-REQUEST PDU to a BSS from an SGSN requesting to start an MBMS session.

#### 5.3.46 MBMS-SESSION-START-RESPONSE.cnf

Receipt of an MBMS-SESSION-START-RESPONSE PDU from a BSS acknowledging to start an MBMS session.

#### 5.3.47 MBMS-SESSION-STOP-REQUEST.req

Sending of an MBMS-SESSION-STOP-REQUEST PDU to a BSS from an SGSN requesting to stop an MBMS session.

#### 5.3.48 MBMS-SESSION-STOP-RESPONSE.cnf

Receipt of an MBMS-SESSION-STOP-RESPONSE PDU from a BSS acknowledging to stop an MBMS session.

#### 5.3.49 MBMS-SESSION-UPDATE-REQUEST.req

Sending of an MBMS-SESSION-UPDATE-REQUEST PDU to a BSS from an SGSN requesting to update the MBMS service area list of an ongoing MBMS broadcast service session.

#### 5.3.50 MBMS-SESSION-UPDATE-RESPONSE.cnf

Receipt of an MBMS-SESSION-UPDATE-RESPONSE PDU from a BSS acknowledging to update the MBMS service area list of an ongoing MBMS broadcast service session.

### 5.4 Primitive parameters

#### 5.4.1 BSSGP Virtual Connection Identifier (BVCI)

BSSGP Virtual Connections (BVCs) provide communication paths between BSSGP entities. Each BVC is used in the transport of BSSGP PDUs between peer point-to-point (PTP) functional entities, peer point-to-multipoint (PTM) functional entities and peer signalling functional entities. Table 5.4.1 lists the mapping of the BSSGP PDU to the associated functional entity and the BVCI. The BVCI is used to enable the lower network service layer to efficiently route the BSSGP PDU to the peer entity. This parameter is not part of the BSSGP PDU across the Gb interface, but is used by the network service entity across the Gb.

Any BSSGP PDU received by the BSS or the SGSN containing a PDU type that does not fit, according to the mapping defined in table 5.4.1, with the functional entity identified by the BVCI provided by the network service entity, is discarded and a STATUS PDU with a cause value set to "Protocol error - unspecified" is sent.

A PTP functional entity is responsible for PTP user data transmission. There is one PTP functional entity per cell. Within the present document, a cell is identified by a BVCI unless it is explicitly stated otherwise.

A PTM functional entity is responsible for PTM user data transmission. There is one or more PTM functional entities per BSS.

A signalling functional entity is responsible for other functions e.g. paging. There is only one signalling entity per Network Service Entity (NSE). There is one or more NSEs per BSS.

Each BVC is identified by means of a BSSGP Virtual Connection Identifier (BVCI) which has end-to-end significance across the Gb interface. Each BVCI is unique between two peer Network Service Entities.

In the BSS, it shall be possible to configure BVCIs statically by administrative means, or dynamically. In case of dynamic configuration, the BSSGP shall accept any BVCI passed by the underlying Network Service entity.

At the SGSN side, BVCIs associated with PTP functional entities shall be dynamically configured. The BVCIs associated with signalling functional entities and PTM functional entities are statically configured.

The BVCI value 0000 hex shall be used for the signalling functional entities.

The BVCI value 0001 hex shall be used for the PTM functional entities.

All other values may be used freely by the BSS and shall be accepted by the SGSN.

#### Table 5.4.1: BSSGP PDU, BVCI and functional entity mapping

BSSGP PDU Mapping of BVCI to functional entity

DL-UNITDATA	PTP
UL-UNITDATA	PTP
RA-CAPABILITY	PTP
DL-MBMS-UNITDATA	PTM
UL-MBMS-UNITDATA	PTM
PAGING-PS	PTP or SIGNALLING (note 1)
PAGING-CS	PTP or SIGNALLING (note 2)
RA-CAPABILITY-UPDATE / RA-CAPABILITY-UPDATE-ACK	PTP
RADIO-STATUS	PTP
SUSPEND / SUSPEND-ACK / SUSPEND-NACK	SIGNALLING
RESUME / RESUME-ACK / RESUME-NACK	SIGNALLING
FLUSH-LL / FLUSH-LL-ACK	SIGNALLING
LLC-DISCARDED	SIGNALLING
FLOW-CONTROL-BVC / FLOW-CONTROL-BVC-ACK	PTP
FLOW-CONTROL-MS / FLOW-CONTROL-MS-ACK	PTP
FLOW-CONTROL-PFC / FLOW-CONTROL-PFC-ACK	PTP
STATUS	PTP or PTM or SIGNALLING (note 3)
BVC-BLOCK / BVC-BLOCK-ACK	SIGNALLING
BVC-UNBLOCK / BVC-UNBLOCK-ACK	SIGNALLING
BVC-RESET / BVC-RESET-ACK	SIGNALLING
SGSN-INVOKE-TRACE	SIGNALLING
DOWNLOAD-BSS-PFC	PTP
CREATE-BSS-PFC / CREATE-BSS-PFC-ACK / CREATE-BSS-	РТР
PFC-NACK	
MODIFY-BSS-PFC / MODIFY-BSS-PFC-ACK	РТР
DELETE-BSS-PFC / DELETE-BSS-PFC-ACK / DELETE-BSS-	РТР
PFC-REQ	
PS-HANDOVER-REQUIRED / PS-HANDOVER-REQUIRED-ACK PTP	
/ PS-HANDOVER-REQUIRED-NACK	
PS-HANDOVER-REQUEST / PS-HANDOVER-REQUEST-ACK /	PTP
PS-HANDOVER-REQUEST-NACK	
PS-HANDOVER-COMPLETE/ PS-HANDOVER-COMPLETE-ACK	PTP
PS-HANDOVER-CANCEL	PTP
PERFORM-LOCATION-REQUEST / PERFORM-LOCATION-	SIGNALLING
RESPONSE / PERFORM-LOCATION-ABORT	
POSITION-COMMAND / POSITION-RESPONSE	SIGNALLING
RAN-INFORMATION-REQUEST/ RAN-INFORMATION/ RAN-	SIGNALLING
INFORMATION-ACK/ RAN-INFORMATION-ERROR/ RAN-	
INFORMATION-APPLICATION-ERROR	
	SIGNALLING
RESPONSE/ MBMS-SESSION-STOP-REQUEST/ MBMS-	
SESSION-STOP-RESPONSE/ MBMS-SESSION-UPDATE-	
REQUEST/ MBMS-SESSION-UPDATE-RESPONSE	
NOTE 1: The network may initiate paging of an MS in READY mo	bility management state at an indication of a lower
layer failure (see 3GPP TS 24.008 sub-clause 4.7.9.1). In this case, the BVCI=PTP may be used.	
NOTE 2: If the network initiates circuit-switched paging of a MS in READY mobility management state (e.g. a MS in	
class A or B mode of operation and in packet transfer mode), then the BVCI=PTP. If the MS is in STANDBY	
state, then the BVCI=SIGNALLING.	
NOTE 3: The setting of the BVCI is dependent upon the context within which the STATUS PDU was generated.	

# 5.4.2 Link Selector Parameter (LSP)

The link selector parameter is defined in 3GPP TS 48.016. At one side of the Gb interface, all BSSGP UNITDATA PDUs related to an MS shall be passed with the same LSP, e.g. the LSP contains the MS's TLLI, to the underlying network service. The LSPs used at the BSS and SGSN for the same MS may be set to different values.

# 5.4.3 [functional-name] PDU

The parameters that make up a [functional-name] PDU are defined in clause 10, "PDU Functional Definitions and contents".

# 5.4.4 Network Service Entity Identifier (NSEI)

The Network Service Entity at the BSS and the SGSN provides the network management functionality required for the operation of the Gb interface. The Network Service Entity is described in 3GPP TS 48.016.

Each Network Service Entity is identified by means of a Network Service Entity Identifier (NSEI). The NSEI together with the BVCI uniquely identifies a BSGP Virtual Connection (e.g. a PTP functional entity) within an SGSN. The NSEI is used by the BSS and the SGSN to determine the NS-VCs that provides service to a BVCI.

# 5.4.5 BSS Context

The SGSN can provide a BSS with information related to ongoing user data transmission. The information related to one MS is stored in a BSS context. The BSS may contain BSS contexts for several MSs. A BSS context contains a number of BSS packet flow contexts. A BSS packet flow context is identified by a packet flow identifier assigned by the SGSN. There are four pre-defined packet flows identified by four reserved packet flow identifier values. One pre-defined packet flow is used for best-effort service, one for signalling, one for SMS, and one for TOM8. The BSS shall not negotiate BSS packet flow contexts for these pre-defined packet flows with the SGSN.

- NOTE: The TOM8 PFI is used to transfer LCS RRLP messages between the MS and the SGSN.
- NOTE: PFC procedures (Create BSS PFC, Modify BSS PFC, Delete BSS PFC) and PS Handover procedures (PS Handover Required, PS Handover Request, PS Handover Complete) do not apply to pre-defined packet flows.

# 5.4.6 MBMS Service Context

The SGSN can provide a BSS with information related to ongoing MBMS user data transmission. The information related to one MBMS Session is stored in an MBMS Service Context. A TMGI and optionally an MBMS Session Identity identify an MBMS Service Context. The BSS may contain MBMS Service Contexts for several MBMS Sessions.

# 5.4.7 TLLI

The TLLI is used to uniquely identify a mobile station and needs to be included in a number of BSSGP PDUs across the Gb interface.

A change of TLLI may occur as a consequence of a P-TMSI reallocation. The new TLLI shall be used to address the mobile station after completion on the network side of the related GMM procedure (see 3GPP TS 24.008). However, the SGSN should not use the new TLLI for BSSGP addressing purposes towards the BSS either:

- until having signalled the change of TLLI to the BSS via the Downlink UNITDATA procedure (see sub-clause 6.1) or
- until having received from the BSS any BSSGP PDU including the new TLLI.

# 6 User data and signalling procedures between RL and BSSGP SAPs

# 6.1 Downlink UNITDATA procedure

On the downlink, a DL-UNITDATA PDU shall contain information elements to be used by the RLC/MAC function and an LLC-PDU. There shall be only one LLC-PDU per DL-UNITDATA PDU. The LLC-PDU shall always be the last information element in the DL-UNITDATA PDU, and shall be aligned on a 32 bit boundary for efficient processing.

An SGSN provides the BSSGP with a current TLLI, identifying the MS. If an SGSN provides a second TLLI, indicating that an MS has recently changed its TLLI, this shall be considered as the "old" TLLI. A BSS uses the "old" TLLI to locate an MS's existing context. Subsequent uplink data transfers for this MS shall reference the current TLLI, and not the old TLLI.

The SGSN shall include the IMSI in the PDU. As an exception, the SGSN may omit the IMSI in the PDU if the mobile station identified by the TLLI is in MM non-DRX mode period (i.e. during a GMM procedure for *GPRS attach* or *routing area updating* defined in 3GPP TS 24.008) and the SGSN does not have a valid IMSI.

The SGSN may include the *Service UTRAN CCO* (Cell Change Order) information element in the PDU (relevant if the network initiated cell change order to UTRAN, network initiated cell change order to E-UTRAN, PS handover to UTRAN or PS handover to E-UTRAN procedures are used ). If this information element is received in multiple PDUs (either DL-UNITDATA PDU(s), CREATE-BSS-PFC PDU(s) or PS-HANDOVER-REQUEST PDU(s)), the information element contained in the last received PDU shall take precedence.

If the SGSN has valid DRX Parameters for a TLLI, then the SGSN shall include them in the PDU. Nevertheless, the SGSN can omit the DRX Parameters if the MS identified with the TLLI is in MM non-DRX mode period to speed up the transmission of the LLC-PDU on the radio interface. The SGSN shall not send a DL-UNITDATA PDU without the DRX Parameters IE if the MS identified with the TLLI is not in MM non-DRX mode period.

An SGSN provides the BSSGP with MS specific information, enabling the RLC/MAC entity in a BSS to transmit an LLC-PDU to the MS in a user specific manner. The information made available to the radio interface includes:

- MS Radio Access Capability. This defines the radio capabilities of the ME. If there is valid MS Radio Access Capability information known by the SGSN for the associated MS, the SGSN shall include it in the DL-UNITDATA PDU. Otherwise, MS Radio Access Capability shall not be present;
- Packet Flow Identifier. This identifies the packet flow context associated with the LLC PDU and is included by the SGSN if the packet flow context feature is negotiated. If the mobile station does not support the PFC feature or if the PFI is not known (e.g. the new SGSN did not get the PFI from the old SGSN during a RAU) then the SGSN shall use the pre-defined PFI to indicate best-effort QoS;
- QoS Profile. This defines the (peak) bit rate, the type of BSSGP's SDU (signalling or data), the type of LLC frame (ACK, SACK, or not), the precedence class, and the transmission mode to be used when transmitting the LLC-PDU across the radio interface;
- PDU Lifetime. This defines the remaining time period that the PDU is considered as valid within the BSS. If the PDU is held for a period exceeding the "PDU Lifetime" time period, the PDU shall be locally discarded. The PDU Lifetime is set within the SGSN by the upper layers.

A BSS may incorporate the PDU Lifetime, the Precedence and the (peak) bit rate into its radio resource scheduler. If the PFI is present then the BSS may incorporate the information from the associated ABQP into its radio resource scheduler. The algorithm to do this is out of scope of the present document.

If the PFI is known in the BSS and does not correspond to a predefined PFI, then:

- the (peak) bit rate and the precedence class fields present in the QoS Profile IE shall be ignored by the BSS;
- if the Allocation/Retention Priority was provided at the time the corresponding PFC was created or last modified, then the "Priority" IE, if present in the downlink UNITDATA PDU, is discarded.

Two types of BSSGP SDU are distinguished within the QoS Profile: layer 3 signalling and data. Layer 3 signalling may be transmitted over the Um interface with higher protection. If the MS has an RR connection to the network (see 3GPP TS 44.018), Layer 3 signalling may be transmitted over the Um interface on the main signalling link of the RR connection, provided that the LLC PDU meets length restrictions imposed by the BSS. In this case, the BSS shall include the LLC PDU contained in the BSSGP PDU in the correspondent Layer 3 Um interface message (see 3GPP TS 44.018).

The type of LLC frame indicates if the LLC frame type is an ACK or SACK command/response, or not (see 3GPP TS 44.064). An ACK or SACK command/response frame type may be transmitted over the Um interface with higher protection.

Two transmission modes across the radio interface are possible: acknowledged (using RLC/MAC ARQ functionality) and unacknowledged (using RLC/MAC unitdata functionality). These transmission modes do not apply when the MS has an RR connection to the network and BSS uses the main signalling link of the RR connection, in which case the acknowledged transmission mode is used.

If Priority is present, assuming it shall not be discarded according to the rule above, only the priority-level field shall be regarded. The management of priority levels is implementation dependent and under operator control. The preemption capability indicator, the queuing allowed indicator and preemption vulnerability indicator shall be ignored in this case.

#### 3GPP TS 48.018 version 9.0.0 Release 9

In addition to constructing the DL-UNITDATA, the SGSN supplies the LSP, the BVCI, the NSEI, and for an IP subnetwork the NS Change IP endpoint, associated with the MS to the lower layer network service, enabling network service routeing to the peer entity. These parameters are not transmitted as part of the BSSGP across the Gb-interface for the purpose of identifying the receiving endpoint (they are sent in the BSSGP Perform-Location-Request PDU to identify the serving cell of the target MS).

If the Gb-interface is supported using an IP sub-network, then the Resource Distribution function at the SGSN may transmit a BSSGP DL-UNITDATA PDU with an LLC-PDU Length Indicator set to 0. The BSS uses this DL-UNITDATA to change the IP endpoint at the SGSN to which any future UL-UNITDATA for the TLLI (indicated in the DL-UNITDATA) is sent. The LLC-PDU with a Length Indicator set to 0 is not sent across the radio interface.

In the case where localised service area is supported the SGSN may inform the BSS as to which LSA identities that the mobile has preferences by sending the LSA INFORMATION element. The BSS stores this information and uses it e.g. for network controlled cell re-selection when determining specific cell selection parameters for the mobile. The algorithm for determining specific cell selection parameters for the mobile is not defined further in the present document. The SGSN may inform the BSS about the contents of SPID in the DL-UNITDATA PDU. In this case the SPID is stored in the BSS.

#### 6.1.1 Abnormal conditions

The following actions are defined in periods of congestion.

To satisfy the maximum number of service requests, the BSS may redistribute MSs among cells (i.e. network controlled cell reselection is initiated). If this occurs, the BSS may inform the SGSN through the RADIO-STATUS PDU (Radio Cause value: cell reselection ordered). The BSS shall update any internal references that indicate the location of the MS. The BSS may attempt to internally re-route queued LLC frames to an MS that has been moved to a new cell. If this functionality is not supported, or if it is not possible to internally re-route LLC frames, the LLC frame shall be discarded.

It is the responsibility of the higher layer protocols in the SGSN to cope with discarded LLC frames.

# 6.2 Uplink UNITDATA procedure

On the uplink, a UL-UNITDATA PDU shall contain information elements derived from the RLC/MAC function (except when GTTP is used in the Um interface, see 3GPP TS 44.018), meaningful to higher-layer protocols in an SGSN, and an LLC-PDU. There shall be only one LLC-PDU per UL-UNITDATA PDU. The LLC-PDU shall always be the last information element in the UL-UNITDATA PDU, and shall be aligned on a 32 bit boundary for efficient processing.

The BSS shall provide the TLLI associated to the MS to the SGSN.

The BSS shall provide a BVCI and an NSEI indicating the PTP functional entity (i.e. the cell) upon which the LLC-PDU was received. The SGSN shall obtain the BVCI, the NSEI, and in the case of an IP sub-network may obtain the LSP and the NS Change IP endpoint, from the underlying network service; the BVCI and the NSEI are not visible in the UL-UNITDATA PDU.

The BSS provides the SGSN with the QoS Profile used in the LLC-PDU transmission from the mobile station across the radio interface.

- QoS Profile. This reports the (peak) bit rate, the precedence used at radio access and the transmission mode used across the radio path. The type of the BSSGP SDU, layer 3 signalling or data, and the type of LLC frame, SACK, ACK, or not, are not meaningful on the uplink and shall be ignored.
- Packet Flow Identifier. This identifies the packet flow context that is obtained from the mobile. If the mobile station does not provide a PFI then the BSS shall use the pre-defined PFI to indicate best-effort QoS.

In order to support location based services, the BSS shall include the cell identifier of the cell upon which the LLC-PDU was received.

In the case where localised service area is supported, the BSS shall include the LSA identities of the cell upon which the LLC-SDU was received. The BSS may exclude LSA identities that are not included in the LSA INFORMATION element.

40

In addition to constructing the UL-UNITDATA, the BSS supplies the LSP, the NSEI, the BVCI, and for an IP subnetwork the NS Change IP endpoint, associated with the MS to the lower layer network service, enabling network service routeing to the peer entity. These parameters are not transmitted as part of the BSSGP across the Gb-interface. If the Gb-interface is supported using an IP sub-network, then the Resource Distribution function at the BSS may transmit a BSSGP UL-UNITDATA PDU with an LLC-PDU Length Indicator set to 0. The SGSN uses this UL-UNITDATA to change the IP endpoint at the BSS to which any future DL-UNITDATA for the TLLI (indicated in the UL-UNITDATA) is sent.

### 6.2.1 Abnormal conditions

None specified.

# 6.3 RA-CAPABILITY procedure

The SGSN stores an MS's current radio access capability (which may be changed by higher layer mobility management procedures). An MS's current radio access capability, and the TLLI identifying the MS, are conveyed to a BSS in a RA-CAPABILITY PDU. The received MS's radio access capability, if valid, shall then replace any radio access capability previously associated with the MS.

#### 6.3.1 Abnormal conditions

If the BSS receives an unknown Access Technology Type in the MS Radio Access Capability field, it shall ignore the fields associated with that Access Technology type.

If the BSS receives unknown fields within a known Access Technology Type in the MS Radio Access Capability field, it shall ignore the unknown fields.

# 6.4 Downlink MBMS-UNITDATA procedure

On the downlink, a DL-MBMS-UNITDATA PDU shall contain information elements to be used by an LLC-PDU. There shall be only one LLC-PDU per DL-MBMS-UNITDATA PDU. The LLC-PDU shall always be the last information element in the DL-MBMS-UNITDATA PDU, and shall be aligned on a 32 bit boundary for efficient processing.

An SGSN provides the BSSGP with a current TMGI, if available, and MBMS Session Identity, identifying the MBMS Service Context.

The information made available to the radio interface includes:

- PDU Lifetime. This defines the remaining time period that the PDU is considered as valid within the BSS. If the PDU is held for a period exceeding the "PDU Lifetime" time period, the PDU shall be locally discarded. The PDU Lifetime is set within the SGSN by the upper layers.

A BSS may incorporate the PDU Lifetime into its radio resource scheduler.

In addition to constructing the DL-MBMS-UNITDATA, the SGSN supplies the BVCI and the NSEI to the BSS.

# 6.5 Uplink MBMS-UNITDATA procedure

On the uplink, a UL-MBMS-UNITDATA PDU shall contain an LLC-PDU. There shall be only one LLC-PDU per UL-MBMS-UNITDATA PDU. The LLC-PDU shall always be the last information element in the UL-MBMS-UNITDATA PDU, and shall be aligned on a 32 bit boundary for efficient processing.

The BSS shall provide the TMGI and, if present in the MBMS Service Context, the MBMS Session Identity to the SGSN in order to identify the MBMS session.

The BSS shall provide a BVCI and an NSEI indicating the PTM functional entity upon which the LLC-PDU was received. The SGSN shall obtain the BVCI, the NSEI, and in the case of an IP sub-network may obtain the LSP and the NS Change IP endpoint, from the underlying network service; the BVCI and the NSEI are not visible in the UL-MBMS-UNITDATA PDU.

In addition to constructing the UL-MBMS-UNITDATA, the BSS supplies the LSP, the NSEI, the BVCI, and for an IP sub-network the NS Change IP endpoint, associated with the MBMS session to the lower layer network service, enabling network service routeing to the peer entity. These parameters are not transmitted as part of the BSSGP across the Gb-interface. If the Gb-interface is supported using an IP sub-network, then the resource distribution function at the BSS may transmit a BSSGP UL-MBMS-UNITDATA PDU in order to change the IP endpoint at the BSS to which any future DL-MBMS-UNITDATA for the MBMS session (indicated with TMGI and, if available, MBMS Session Identity in the UL-MBMS-UNITDATA) shall be sent from the SGSN.

NOTE: In this version of the specification, the procedure is used for resource distribution only meaning that the LLC PDU length indicator shall always be set to zero.

# 7 Signalling procedures between GMM SAPs

# 7.1 Paging procedure

When an SGSN initiates the paging procedure for GPRS services as defined in 3GPP TS 24.008, it shall send one or more PAGING-PS PDUs to the BSS.

When instructed by an MSC/VLR to initiate a paging procedure for non-GPRS services as defined in 3GPP TS 24.008, an SGSN shall send one or more PAGING-CS PDUs to the BSS.

These paging PDUs shall contain the information elements necessary for the BSS to initiate paging for an MS within a group of cells.

The SGSN provides an indication of the cells within which the BSS shall page the MS. The levels of resolution within one BSS are: all cells within the BSS, all cells on the BSS within one location area, all cells on the BSS within one routing area, and one BVCI (i.e. cell). A routing area, a location area, or a BSS area is associated with one or more NSEIs. If the cells in which to page the MS are served by several NSEIs then one paging PDU must be sent to each of these NSEIs.

A paging PDU shall be used to generate the corresponding radio interface paging request message(s) to be transmitted at the appropriate time.

It should be noted that each paging PDU relates to only one MS and therefore a BSS may pack pages for different MSs into the relevant 3GPP TS 24.008 or 3GPP TS 44.060 radio interface paging request messages.

In the case of paging for non-GPRS services, the SGSN shall provide the MS's IMSI and DRX Parameters. The SGSN shall also include the Global CN-Id information element in the paging PDU when this information element is received from the MSC/VLR. The Global CN-Id information element is received from the MSC/VLR if paging using only the IMSI parameter as identifier of the MS is performed via the SGSN when the MSC/VLR applies intra domain connection of RAN nodes to multiple CN nodes as described in 3GPP TS 23.236. The BSS shall then buffer this information element until receiving the paging response from the MS in order to route the paging response to the correct MSC/VLR.

In the case of paging for GPRS services, the SGSN shall provide the MS's IMSI. If DRX Parameters are available, the SGSN shall also provide the DRX Parameters.

NOTE: The IMSI and the DRX Parameters enable the BSS to derive the paging population number. Paging without DRX parameters may require a considerable extension of the paging duration.

An SGSN may provide the BSSGP with MS specific information, enabling a BSS to execute the paging procedure in an MS specific manner. This includes:

- QoS Profile. The Precedence parameter is set by the upper layers (in the SGSN). The SGSN shall set the bit rate parameter to "best effort". The SGSN shall set the transmission mode to unacknowledged. The BSS shall ignore the received bit rate, the BSSGP SDU type, LLC type, and transmission mode parameters;
- PFI or an aggregate BSS QoS profile information which indicates if the page is for signalling, for SMS, for TOM8, for best-effort, or for a specific packet flow. The aggregate BSS QoS profile in this case is used for paging only and is not stored by the BSS. If both of the optional PFI and ABQP IEs are present, the ABQP takes precedence.

If an SGSN provides a P-TMSI in a PAGING-PS PDU, then the BSS shall use the P-TMSI to address the MS. If the SGSN does not provide the P-TMSI in the PAGING-PS PDU, then the BSS shall use the IMSI to address the MS.

If an SGSN provides a TLLI in a PAGING-CS PDU and a radio context identified by the TLLI exists within the BSS, then the paging request message shall be directly sent to the MS. If the SGSN does not provide the TLLI in the PAGING-CS PDU or if no radio context identified by the TLLI exists within the BSS, then the BSS shall use the TMSI, if provided in the PAGING-CS PDU, else the IMSI, to address the MS.

The PAGING-CS PDU consists of the parameters described above for a PAGING-PS PDU (except the P-TMSI, PFI, ABQP and QoS profile parameters) and, optionally, some or all of the following parameters; TMSI, TLLI, Global CN-Id, Channel Needed and eMLPP-Priority. The Channel Needed and eMLPP-Priority information shall be handled transparently by the BSS.

# 7.2 Radio Access Capability Update procedure

The BSS may request an MS's current Radio Access capability and/or its IMSI by sending to an SGSN a RA-CAPABILITY-UPDATE PDU which includes the TLLI of the MS and a Tag. The allocation of the Tag is implementation specific. The BSS then starts timer T5.

The SGSN shall respond by sending a RA-CAPABILITY-UPDATE-ACK PDU which includes the TLLI of the MS, the Tag received in the corresponding RA-CAPABILITY-UPDATE PDU, and an RA-Cap-UPD-Cause field; the IMSI of the MS is also included when known. The BSS shall stop timer T5.

If the RA-Cap-UPD-Cause is set to "OK", then an MS Radio Access Capability field and the IMSI shall be present. The received MS's radio access capability, if valid, shall then replace any radio access capability previously associated with the MS. If the RA-Cap-UPD-Cause is not set to "OK", then neither the MS Radio Access Capability nor the IMSI shall be present in the RA-CAPABILITY-UPDATE-ACK PDU.

### 7.2.1 Abnormal conditions

If an SGSN receives a RA-CAPABILITY-UPDATE PDU which includes an unknown TLLI, it shall answer with a RA-CAPABILITY-UPDATE-ACK PDU which includes the RA-CAP-UPD-Cause set to the value "TLLI unknown".

If an SGSN receives a RA-CAPABILITY-UPDATE PDU which includes a known TLLI, but there are no Radio Access parameters or IMSI known to the SGSN for the associated MS, the SGSN shall reply to the request with a RA-CAPABILITY-UPDATE-ACK PDU in which the RA-CAP-UPD-Cause is set to: "no RA capability or IMSI available".

If a BSS receives a RA-CAPABILITY-UPDATE-ACK PDU containing a Tag which is different from the last transmitted Tag by the BSS, it shall ignore the reception of this PDU.

If a BSS sends a RA-CAPABILITY-UPDATE PDU to an SGSN and the RA-CAPABILITY-UPDATE-ACK is not returned within a period T5 with the same Tag value as provided in the request, the RA-CAPABILITY-UPDATE procedure shall be repeated a maximum of RA-CAPABILITY-UPDATE-RETRIES attempts. The Tag value shall be changed by the BSS at each new retry.

# 7.3 Radio Status procedure

A BSS and an MS radio interface communication status may change due to the following:

1) the MS goes out of coverage and is lost;

This condition is signalled by setting the Radio Cause value to "Radio contact lost with MS".

2) the link quality is too bad to continue the communication;

This condition is signalled by setting the Radio Cause value to "Radio link quality insufficient to continue communication".

3) the BSS has ordered the MS to perform a cell reselection.

This condition is signalled by setting the Radio Cause value to "Cell reselection ordered".

4) the BSS is preparing to order the MS to perform a cell-reselection to a new cell and internal re-routing of packets to the new cell is not possible.

This condition is signalled by setting the Radio Cause value to "Cell reselection preparation".

5) the BSS has detected that the packet cell change order has failed.

This condition is signalled by setting the Radio Cause value to "Cell reselection failure".

Conditions 1) and 2) indicate that attempts to communicate between an MS and an SGSN via this cell should be suspended or abandoned. An SGSN shall stop sending LLC-PDUs to the cell for the MS. The criteria for deciding whether condition 1) or 2) has occurred is not in the scope of the present document.

The conditions for resuming a suspended or abandoned communication between an MS and SGSN are defined in 3GPP TS 24.008.

Condition 3) indicates that the SGSN should wait for a cell update before resuming the transmission of LLC-PDUs to the BSS.

Condition 4) indicates that the SGSN shall suspend downlink transmission of LLC-PDUs. This condition shall only be signalled if the Enhanced Radio Status feature has been negotiated. For this condition the SGSN shall wait for either:

- a) a cell update from the MS in a new Cell . In this case the SGSN should resume downlink transmission in the new Cell.
- b) or a new RADIO-STATUS PDU from the BSS with a different Radio Cause value. In this case the SGSN should follow the procedures specified for that Radio Cause value.

Condition 5) indicates that the SGSN shall resume the transmission of LLC-PDUs to the BSS in case the downlink transmission has been suspended. This condition shall only be signalled if the Enhanced Radio Status feature has been negotiated. A BSS shall signal these exception conditions to an SGSN by sending a RADIO-STATUS PDU. It shall contain a reference to the MS, either TLLI or TMSI or IMSI, and an indication of the exception condition, i.e. the Radio Cause value.

After receipt of a RADIO-STATUS PDU with cause value indicating Condition 1-4, the SGSN may try to locate the mobile station in case any downlink LLC PDU needs to be sent to the mobile station, as it can not expect to receive systematically an uplink LLC PDU from the mobile station or a RADIO-STATUS PDU with cause value indicating Condition 5 from the BSS to resume the downlink transfer. To this avail, the SGSN should send a PAGING-PS PDU towards the mobile station.

# 7.4 SUSPEND procedure

If the MS signals to the BSS that it wishes its GPRS service to be suspended, the BSS shall send a SUSPEND PDU to the SGSN and start timer T3. Actions within the SGSN while an MS is suspended are not specified, but paging is typically stopped. The SUSPEND PDU contains:

- the TLLI of the MS; and
- the Routeing Area of the MS as received in the Layer 3 Um interface message GPRS Suspension Request (see 3GPP TS 44.018).

For each SUSPEND PDU received by an SGSN, a SUSPEND-ACK PDU shall be returned to the BSS. Upon reception of the SUSPEND-ACK PDU, the BSS shall stop T3. The SUSPEND-ACK PDU contains:

- the TLLI of the MS as received in the SUSPEND PDU;
- the Routeing Area of the MS as received in the SUSPEND PDU; and
- the Suspend Reference Number.

The SGSN generates the Suspend Reference Number in a manner that it enables it to differentiate between different SUSPEND PDUs relating to the same MS.

# 7.4.1 Abnormal conditions

If a SUSPEND-ACK PDU is not received for a SUSPEND PDU within T3 seconds, then the SUSPEND PDU procedure shall be repeated a maximum of SUSPEND-RETRIES attempts. After SUSPEND-RETRIES attempts the procedure is stopped and the O&M system is informed.

If a SUSPEND-ACK PDU is received for an MS that is already marked as suspended, then the SUSPEND-ACK PDU is ignored.

If a SUSPEND PDU refers to an MS which is unknown in the SGSN, then a SUSPEND-NACK PDU is returned containing a cause value (Cause value: Unknown MS). The BSS shall stop the SUSPEND procedure.

If the Suspend procedure is supported on the Gn interface, in case of an inter-SGSN suspend procedure the MS shall not be treated as unknown in the SGSN when the RA indicated in the SUSPEND PDU is not served by the SGSN.

# 7.5 RESUME procedure

When the reason why a GPRS-attached MS was suspended disappears, i.e.:

- it leaves dedicated mode, disconnecting the MS from the MSC; or
- it is handed over to a cell that supports DTM;

the BSS shall either a) instruct the MS to initiate the Routeing Area Update procedure, or b) signal to the SGSN that an MS's GPRS service shall be resumed.

If the BSS executes a), then no further action is required.

If the BSS executes b), then the BSS shall send a RESUME PDU containing the same Suspend Reference Number received in the SUSPEND-ACK PDU to the SGSN and start timer T4. The RESUME PDU contains:

- the TLLI of the MS;
- the Routeing Area of the MS; and
- the Suspend Reference Number.

For each RESUME PDU received by an SGSN, a RESUME-ACK PDU shall be returned to the BSS. Upon reception of the RESUME-ACK PDU, the BSS shall stop T4. The RESUME-ACK PDU contains:

- the TLLI of the MS; and
- the Routeing Area of the MS.

# 7.5.1 Abnormal conditions

If a RESUME-ACK PDU is not received for a RESUME PDU within T4 seconds, then the RESUME PDU procedure shall be repeated a maximum of RESUME-RETRIES attempts. After RESUME-RETRIES attempts the procedure is stopped, the O&M system is informed and the MS shall be instructed to initiate the Routeing Area Update procedure.

If a RESUME-ACK PDU is received for an MS that is not suspended, then the RESUME-ACK PDU is ignored.

If a RESUME PDU refers to an MS which is unknown in the SGSN, then a RESUME-NACK PDU is returned containing a cause value (Cause value: Unknown MS). The BSS shall stop the RESUME procedure and the MS shall be instructed to initiate the Routeing Area Update procedure.

# 8 Signalling procedures between NM SAPs

# 8.1 FLUSH-LL (logical link) procedure

When an SGSN detects a cell change of an MS from a cell update or a routing area update, the SGSN shall send a FLUSH-LL PDU to the old BVC to initiate the following procedures:

- at a cell change within one NSE (e.g. the BSS is a NSE) and within one routing area, LLC-PDU(s) for a given TLLI stored at an "old" BVCI (corresponding to the old cell) are either deleted or transferred to a "new" BVCI (corresponding to the new cell) with which the TLLI is currently associated; or
- at a cell change between two NSEs within one routing area, LLC PDU(s) for a given TLLI stored at an "old" BVCI (corresponding to the old cell) are either deleted or transferred to a "new" BVCI (corresponding to the new cell) with which the TLLI is currently associated. In that case, transferring of LLC PDU(s) can only be requested by the SGSN if the NSE underlying the "old" BVCI indicated support for the "Inter-NSE re-routing";
- at a cell change within the same routing area, and within one NSE or between two NSEs, the on-going location procedure, if any, is either maintained in the BSS after the cell reselection or aborted by the BSS towards the SMLC; or
- at a cell change between two routing areas, LLC-PDU(s) stored at the "old" BVCI for the TLLI are deleted.

The SGSN provides the BSSGP with:

- a MS's TLLI identifying the MS;
- the "old" BVCI identifying the cell in which to find buffered LLC-PDU(s) for the MS;
- the "new" BVCI identifying the cell to which the MS is currently associated (only when within the same routing area); and
- if the SGSN supports "Inter-NSE re-routing" or "LCS Procedures" and the old NSE supports the "Inter-NSE re-routing" or "LCS Procedures", the "new" NSEI identifying the cell to which the MS is currently associated (only when within the same routing area but between two NSEs). The NSEI associated to the "old" BVCI shall be assumed if the "new NSEI" field is not provided.
- If there is a BSS context for the MS in the "old" BVCI and there is a "new" BVCI in the FLUSH-LL PDU, the BSS shall interpret this as a request to transfer the BSS context to the new cell. The BSS shall assume that the ABQP that was negotiated for each PFC in the "old" BVCI is requested in the "new" BVCI by the SGSN. Also, the values of the Packet Flow Timer and the Service UTRAN CCO Information Elements should be kept for each transferred PFC. If, when receiving the BSS context at the "new" BVCI, the BSS has already obtained the information related to one or several PFC(s) from the SGSN by means of the Create BSS PFC procedure (see sub-clause 8a.1), then the BSS shall disregard the information corresponding to this (these) PFC(s) within the BSS context at the "new" BVCI. If a Create BSS PFC procedure is ongoing when receiving the BSS context at the "new" BVCI procedure is ongoing when receiving the BSS context at the "new" BSS performance of the Create BSS performance of the BSS context transferred from the "old" BVCI. If a Create BSS PFC procedure is ongoing when receiving the BSS context at the "new" BVCI, the BSS shall either apply the received information or carry on with the currently used ABQP until the procedure completes.

If a "new" BVCI is not provided, then the FLUSH-LL PDU shall be interpreted as an instruction to delete the queued LLC-PDU(s) at the old BVC, and also to delete the BSS context associated to the MS identified by the TLLI, if any exists in the "old" BVCI.

Queued BSSGP signalling, e.g. pages, shall not be affected by this procedure.

In response to a FLUSH-LL PDU the BSS shall send a FLUSH-LL-ACK PDU to the SGSN containing:

- the TLLI received in the FLUSH-LL PDU;
- an indication of whether the LLC-PDU(s) were "transferred" or "deleted". In case the SDUs were "transferred" the BVCI (new) IE, and the NSEI (new) IE if present in the FLUSH-LL PDU, shall be included;
- the number of octets that have been transferred or deleted.

#### 3GPP TS 48.018 version 9.0.0 Release 9

NOTE: In situations where the BSS was unable to transfer the queued LLC-PDUs upon a transfer request from the SGSN, the BSS may indicate in the FLUSH-LL-ACK PDU a flush action set to "deleted" together with the number of octets actually deleted.

On receipt of a FLUSH-LL-ACK PDU by the SGSN, indicating that the LLC-PDU(s) associated with the old BVC have been "deleted", the SGSN may choose to:

- immediately retransmit all unacknowledged LLC-PDU(s) (in acknowledged LLC operation) to the MS at the new BVC (i.e. new cell); or
- rely on LLC retransmission mechanism to transmit unacknowledged LLC-PDU(s).

On receipt of a FLUSH-LL-ACK PDU by the SGSN, indicating that the LLC-PDU(s) associated with the old BVC have been "transferred", the SGSN shall not take any of the above actions.

If the "new" BVCI could not accept the QoS characteristics of all PFCs of the BSS context, the BSS context shall still be transferred and the BSS shall then initiate in the "new" BVCI a Modify BSS PFC procedure for each PFC for which the requested ABQP could not be accepted. The BSS may resume the transfer of downlink LLC PDU(s) before the Modify BSS PFC procedure is completed.

In order to avoid desequencing DL LLC PDU (in LLC acknowledged or unacknowledged operation) during the FLUSH procedure, upon sending a FLUSH-LL PDU to the BSS requesting the rerouting of DL LLC PDUs to a new cell, the SGSN should wait for the receipt of the FLUSH-LL-ACK PDU or rely on an internal guard timer, before starting to transmit subsequent DL LLC PDUs on the new BVCI. In the case the SGSN does not request the BSS to reroute DL LLC PDUs to a new cell, it may immediately resume the transmission of subsequent DL LLC PDUs on the new BVCI, or start the Create BSS PFC procedure, without waiting for the receipt of the FLUSH-LL-ACK PDU.

### 8.1.1 Abnormal Conditions

If the BSS receives a FLUSH-LL PDU for an unknown BVCI or TLLI not associated with the given BVCI, then the FLUSH-LL PDU is discarded and no FLUSH-LL-ACK PDU is returned.

If the SGSN does not receive a FLUSH-LL-ACK PDU in response to a FLUSH-LL PDU, no further action is taken.

# 8.2 Flow Control procedure

### 8.2.1 General model of operation

From the perspective of the BSSGP, the flow control mechanism is based on the following model:

- there is a downlink buffer for each BVC, as identified by a BVCI, in a BSS;
- the transfer of BSSGP UNITDATA PDUs for an MS from the SGSN is controlled by the BSS; and
- only downlink BSSGP UNITDATA PDU transfer to the BSS is managed via flow control procedures. Uplink flow control is not performed.

### 8.2.2 Mode of operation

The flow control mechanism manages the transfer of BSSGP UNITDATA PDUs sent by the SGSN on the Gb interface to the BSS.

The BSS shall control the flow of BSSGP UNITDATA PDUs to its BVC buffers by indicating to the SGSN the maximum allowed throughput in total for each BVC. The BSS shall control the flow of BSSGP UNITDATA PDUs to the BVC buffer for an individual MS by indicating to the SGSN the maximum allowed throughput for a certain TLLI. If the PFC Flow Control feature is negotiated, the BSS may control the flow of BSSGP UNITDATA PDUs to the BVC buffer for a certain PFC of an individual MS by indicating to the SGSN the maximum allowed throughput for a certain PFC.

If the Gigabit Interface feature has been negotiated, the granularity of the Flow Control related information elements such as the *BVC Bucket Size* IE, the *BVC Bucket Leak Rate* IE and the *PFC flow control parameters* IE shall be

indicated through the *Flow Control Granularity* IE included in the same PDU (see sub-clauses 10.4.4, 10.4.6 and 10.4.24).

The BSS uses flow control to adjust the flow of BSSGP UNITDATA PDUs to a BVC buffer. The amount of buffered BSSGP UNITDATA PDUs in the BSS should be optimised to efficiently use the available radio resource. The volume of buffered BSSGP UNITDATA PDUs for a BVC or MS or PFC should be low. BSSGP UNITDATA PDUs queued within the BSS that are not transferred across the radio interface before the PDU Lifetime expires shall be locally deleted from the BSS. The local deletion of BSSGP UNITDATA PDUs in the BSS shall be signalled to the SGSN by the transmission of a LLC-DISCARDED PDU.

For each FLOW-CONTROL PDU received by an SGSN, a confirmation shall always be sent across the Gb interface by the SGSN. The confirmation uses the Tag that was received in the FLOW-CONTROL PDU, which was set by the BSS to associate the response with the request. When receiving no confirmation to a FLOW-CONTROL PDU, the reasons that gave rise to the triggering of a flow control message may trigger another message, or, if the condition disappears, it may not. For the repetition of non-confirmed FLOW-CONTROL PDUs, the maximum repetition rate still applies in the BSS.

# 8.2.3 Flow Control of Traffic from an SGSN to BSS

### 8.2.3.1 Control of the downlink throughput by the SGSN

The principle of the BSSGP flow control procedures is that the BSS sends to the SGSN flow control parameters which allow the SGSN to locally control its transmission output in the SGSN to BSS direction. The SGSN shall perform flow control on each BVC, on each MS and optionally on each PFC for an MS. The flow control is performed on each LLC-PDU first by the PFC flow control mechanism if applicable and if negotiated, then by the MS flow control mechanism and then by the BVC flow control mechanism.

If the PFC Flow Control feature has been negotiated and the LLC-PDU corresponds to a PFC for which the SGSN has received some flow control parameters, then the SGSN has to check that the LLC-PDU is passed by the individual PFC flow control. If it is passed or if the PFC flow control has not been negotiated, or if it has been negotiated but no flow control parameter has been received for the PFC corresponding to the LLC-PDU, the SGSN applies the MS flow control. If passed, the SGSN finally applies the BVC flow control to the LLC-PDU. If an LLC-PDU is passed by all flow control mechanisms, the entire LLC-PDU is delivered to the Network Services for transmission to the BSS (see figure 8.1).

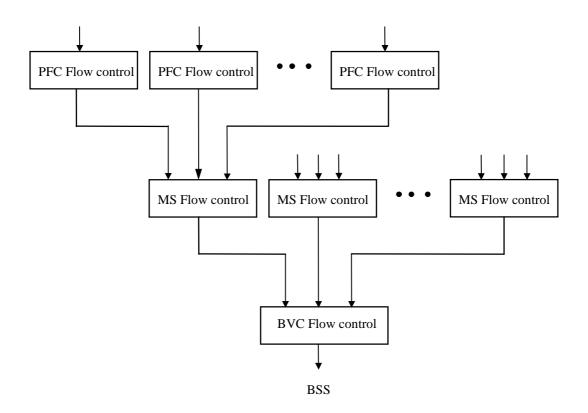


Figure 8.1: BSSGP Flow control

The flow control parameters sent by the BSS to the SGSN consist of the following information:

- the bucket size (Bmax) for a given BVC or MS or PFC in the downlink direction; and
- the bucket leak rate (R) for a given BVC or MS or PFC in the downlink direction; and
- the bucket full ratio for a given BVC or MS or PFC in the downlink direction, if the Current Bucket Level (CBL) feature is negotiated.

NOTE: The information for a given PFC is only received if the PFC flow control feature is negotiated.

The SGSN shall perform flow control on an individual MS using SGSN determined values of Bmax and R unless it receives a FLOW-CONTROL-MS PDU from the BSS regarding that MS. The SGSN shall continue to perform flow control for a particular MS using the Bmax and R values received from the BSS for at least Th seconds after receiving a FLOW-CONTROL-MS PDU from the BSS regarding that MS. When timer Th has expired or when the MS changes cells, the SGSN may reinitialise the SGSN internal flow control variables for that MS and begin to use SGSN generated values for Bmax and R.

The SGSN shall start performing flow control on a given PFC for an individual MS as soon as it receives the first FLOW-CONTROL-PFC PDU for that PFC and the feature has been negotiated; it shall stop applying PFC flow control for a given PFC of an individual MS as soon as it receives subsequently a FLOW-CONTROL-MS PDU for that MS or if more than Tf seconds have elapsed since the last FLOW-CONTROL-PFC PDU was received for that PFC. When the MS changes cells, the SGSN shall stop performing flow control per PFC, until it receives a FLOW-CONTROL-PFC PDU.

In case the MS flow control parameters needs to be updated and the PFC flow control feature is negotiated and the PFC flow control parameters for that MS remains unchanged then the FLOW-CONTROL-PFC PDU is used by the BSS to update the MS flow control parameters. The "Number of PFCs" IE within the "PFC Flow Control parameters" IE shall be set to "0" in this case.

The BSSGP flow control model is the algorithm shown in Figure 8.2. The model of the algorithm is that an LLC-PDU is passed by the algorithm as long as the bucket counter (B) plus the length of the LLC-PDU does not exceed the bucket size Bmax. When the LLC-PDU is passed, the LLC-PDU length is added to B. Any PDU not transmitted is delayed until B plus the LLC-PDU length is less than Bmax.

#### 8.2.3.2 Flow Control Conformance Definition

A BSSGP flow control algorithm shall be implemented in the SGSN. The BSSGP flow control conformance algorithm is defined in figure 8.2.

The conformance definition is used to decide which LLC-PDUs are conforming to the flow to the PFC of an MS, to an MS or in a BSSGP virtual connection (BVC) over the Gb interface. The conformance definition should not be interpreted as the required implementation algorithm, as the SGSN manufacturer may use any algorithm as long as the operation of the BSSGP flow control does not violate the objectives of compliant BVCs or MSs or PFC. That is, the SGSN shall never transmit more data than can be accommodated within the BSS buffer for a BVC or individual MS or for a given PFC of an MS.

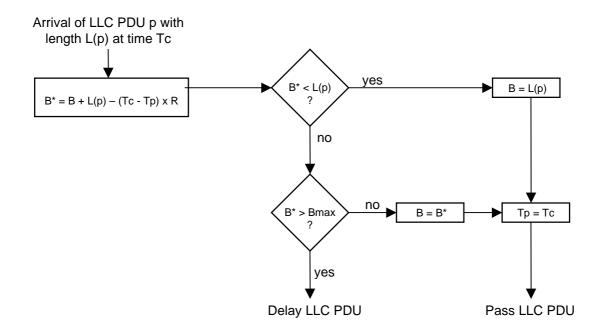


Figure 8.2: Conformance Definition Algorithm for BSSGP Flow Control

50

The variables used by the algorithm are:

Bmax Bucket Size. Set by the BSS for each cell and each mobile station and optionally for each PFC of an MS. Bmax shall be large enough to accommodate at least one LLC-PDU;

R	leak rate of the bucket;
В	bucket counter;
B*	predicted value of the bucket counter;
L(p)	length of LLC-PDU p;
Тр	the time that the last LLC-PDU p was transferred; and
Tc	arrival time of LLC-PDU p.

The initial conditions of these variables in the SGSN are:

- Bmax = 0 for BVCs or MSs. For BVCs, this value is valid until Bmax is received in the FLOW-CONTROL-BVC. For MSs, this value is valid until Bmax\_default\_MS is received in the FLOW-CONTROL-BVC PDU. Thereafter, sub-clause 8.2.3.6, shall apply;
- Bmax = 0 for PFCs until a FLOW-CONTROL-BVC PDU is received for the cell in which the PFC is running. Thereafter, Bmax for a PFC shall not be greater than Bmax of the corresponding MS until PFC flow control applies for the PFC. As long as PFC flow control applies, Bmax shall then not be greater than the value of Bmax provided in the latest valid FLOW-CONTROL-PFC PDU;
- R = 0 for BVC or MSs. For a BVC, this value is valid until a FLOW-CONTROL-BVC PDU is received. For an MS, this value is valid until a FLOW-CONTROL-BVC PDU is received. Thereafter, sub-clause 8.2.3.6 shall apply;
- R = 0 for PFCs until a FLOW-CONTROL-BVC PDU is received for the cell in which the PFC is running. Thereafter, R for a PFC shall not be greater than R of the corresponding MS until PFC flow control applies for the PFC. As long as PFC flow control applies, R shall then not be greater than the value of R provided in the latest valid FLOW-CONTROL-PFC PDU;
- B = 0 (the bucket is empty); and Tp = the current time for the first LLC-PDU.

The SGSN shall not transmit a LLC-PDU on a BVC until a FLOW-CONTROL-BVC PDU is received from the BSS for that BVC.

When a LLC-PDU p arrives at current time Tc, the variable B\* is set to the predicted bucket size if the LLC-PDU were to be transferred to the BSS. This is given by the previous bucket size plus the new LLC-PDU size,  $B^* = B + L(p)$ , less the amount that the bucket will have leaked away since the last compliant LLC-PDU, R x (Tc - Tp). If this is less than L(p) then the LLC-PDU is compliant and the bucket size B is reset to L(p) and the LLC-PDU is passed. When a compliant LLC-PDU is passed the last LLC-PDU transfer time is set to the current time, Tp = Tc.

If the bucket has not completely leaked away then the bucket has to be checked to see if the limit Bmax is going to be exceeded,  $B^* > Bmax$ . If the limit is exceeded then the LLC-PDU is non compliant and is delayed for some time period, and no updates are done on the variables. If the bucket limit Bmax is not exceeded then the LLC-PDU is compliant and the bucket counter (B) is set equal to the value of  $B^*$ . When a conforming LLC-PDU is passed then the last LLC-PDU transfer time is set to the current time, Tp = Tc.

On receipt of a FLUSH-LL-ACK PDU by the SGSN, indicating that the LLC-PDU(s) associated with the old BVC have been "deleted", the SGSN should update the value of the bucket counter (B) for the MS and for the old BVC,  $B = \max (B - N, 0)$ . N is provided by FLUSH-LL-ACK PDU, indicating the number of octets deleted by the BSS.

On receipt of a FLUSH-LL-ACK PDU by the SGSN, indicating that the LLC-PDU(s) associated with the old BVC have been "transferred" within the NSE, the SGSN should update the value of the bucket counter (B) for the old BVC, B = max (B - N, 0). The value of B for the new BVC should also be updated, B = min (B + N, Bmax). N is provided by FLUSH-LL-ACK PDU, indicating the number of octets transferred by the BSS.

On receipt of a LLC-DISCARDED PDU by the SGSN, indicating that the LLC-PDU(s) associated with the MS or the PFC of an MS have been locally deleted by the BSS, the SGSN should update the value of the bucket counter (B) for the MS or the PFC and for the BVC, B = max (B - N, 0). N is provided by LLC-DISCARDED PDU, indicating the number of octets deleted by the BSS.

The BSS may update the values of Bmax and R within the SGSN at any time by transmitting a new Flow Control PDU containing the new Bmax and R values. The variables B, B\*, Tp and Tc are local to the SGSN and are not affected by the reception of a Flow-Control-BVC or Flow Control-MS PDU.

If the Current Bucket Level (CBL) feature is negotiated, the SGSN shall update the variable B based upon the Bucket\_Full\_Ratio information element received in the Flow Control PDU. During the time period when SGSN does not receive a Flow Control PDU, it shall continue computing the bucket counter (B) as defined above.

#### 8.2.3.3 Response time within the SGSN to flow control messages

Upon reception of flow control requests from a BSS, the SGSN shall modify its downlink transmission as instructed within 100 ms.

#### 8.2.3.4 Frequency of sending BVC or MS or PFC Flow Control PDUs

The rate at which the BSS is allowed to send flow control PDUs for a given BVC or MS or PFC is limited and defined by the following rule: the BSS may send a new Flow Control PDU every C seconds, where C is a value which is pre-defined and common to the BSS and SGSN.

If the BSS detects a missing FLOW-CONTROL-ACK PDU from the SGSN and the condition which causes the sending of a FLOW-CONTROL PDU still remains, the FLOW-CONTROL PDU may be retransmitted immediately. In this case the BSS may violate the repetition rate defined by the C value.

After a BVC reset procedure, the BSS may send a BVC-BLOCK PDU. Otherwise, the BSS shall send a BVC-FLOW-CONTROL PDU. When the blocked BVC is unblocked, a BVC-FLOW-CONTROL PDU shall be sent.

#### 8.2.3.5 FLOW-CONTROL PDUs

Based on the criteria for flow control, a BSS shall send to an SGSN a FLOW-CONTROL PDU containing a list of IEs.

For BVC Flow Control, the following information is sent:

- the maximum bucket size (Bmax) for the BVC on the Gb Interface;
- the leak rate parameter (R) to be applied to the bucket;
- the bucket full ratio to resynchronize the bucket counter for the BVC, if the Current Bucket Level (CBL) feature is negotiated;
- the default MS bucket size (Bmax\_default\_MS);
- the default MS leak rate (R\_default\_MS); and
- the optional measurement of the delay for PDU delivery inside that BVC.

For MS Flow Control, the following information is sent:

- the TLLI identifying the MS;
- the maximum bucket size (Bmax) for this MS on the Gb interface;
- the leak rate parameter (R) to be applied to the bucket; and
- the bucket full ratio to resynchronize the bucket counter for the MS, if the Current Bucket Level (CBL) feature is negotiated.

For PFC Flow Control, the following information is sent:

- the TLLI identifying the MS;

- the maximum bucket size (Bmax) for this MS on the Gb interface (optional);
- the leak rate parameter (R) to be applied to the bucket (optional);
- the bucket full ratio to resynchronize the bucket counter for the MS, if the Current Bucket Level (CBL) feature is negotiated (optional);
- the number of PFCs for which flow control parameters are included;

for each PFC:

- the PFI identifying the PFC for that MS;
- the maximum bucket size (Bmax) for this PFC on the Gb interface;
- the leak rate parameter (R) to be applied to the bucket;
- the bucket full ratio to resynchronize the bucket counter for the PFC, if the Current Bucket Level (CBL) feature is negotiated.
- NOTE: The supply of the MS flow control parameters inside the FLOW-CONTROL-PFC PDU allows the SGSN utilising the most up-to-date parameters both for PFC and MS flow control. Also, because the receipt of a FLOW-CONTROL-MS PDU notifies the end of PFC flow control for a given MS, if the MS flow control parameters have changed since the last update, then it is necessary to provide the MS flow control parameters inside the FLOW-CONTROL-PFC PDU.

#### 8.2.3.6 Condition of Bmax for MS after Initial Flow-Control-BVC

The SGSN may use the following (informative) equation to generate an initial bucket size, Bmax, for an MS.

 $Bmax (bits) = min (R_default_MS \text{ for } 1 \text{ s}, 72 \text{ } 000, max \text{ MS throughput for } 1 \text{ s}, (max \text{ MS throughput for } 1 \text{ s} + current throughput of all other MSs in the cell for } 1 \text{ s}) / number of MSs in the cell)$ 

where, the number of MSs in the cell includes the MS being added.

Under no circumstance shall the SGSN use a value of Bmax greater than Bmax\_default\_MS for an MS unless it receives a FLOW-CONTROL-MS PDU from the BSS for that MS.

The SGSN shall not use a leak rate (R) for an MS greater than R\_default\_MS unless it receives a FLOW-CONTROL-MS PDU from the BSS for that MS.

### 8.2.4 Flow Control of Uplink Traffic from a BSS to an SGSN

No flow control procedures are defined between the BSS and the SGSN in uplink direction.

# 8.3 BVC blocking and unblocking procedure

### 8.3.1 PTP BVC

The following statement applies only for PTP BVC.

The BVC blocking and unblocking procedures are initiated by the BSS to remove from use, or bring in to use, a BVC.

A BSS may block one BVC because of:

- operation and Maintenance intervention for a cell;
- equipment failure at the BSS;
- cell equipment failure at the BSS; or
- other causes not regarded in phase 1 of the implementation of GPRS (Cause Value: "reserved for future use").

When a BSS wishes to block a BVC, the BSS shall mark that BVC as blocked, thereafter discarding any traffic sent to the BVC in the uplink direction. The cell associated with the BVC should not accept data in the downlink direction. The BSS shall send a BVC-BLOCK PDU to the SGSN and start timer T1. The BVC-BLOCK PDU contains:

- the BVCI of the BVC to be blocked; and
- a Cause element indicating the reason for blocking (typical cause values: O&M intervention, Equipment failure).

On receipt of a BVC-BLOCK PDU, the SGSN shall mark the indicated BVC as blocked and stop transmitting traffic addressed to this BVC. The SGSN shall then acknowledge the blocking of the BVC by sending a BVC-BLOCK-ACK PDU to the BSS.

The BVC-BLOCK-ACK PDU contains the BVCI received in the BVC-BLOCK PDU.

On receipt of the BVC-BLOCK-ACK PDU the BSS shall stop timer T1.

The BVC shall be seen as blocked by an SGSN until a BVC-UNBLOCK PDU is received indicating that the BVC's status has changed.

During the BVC blocking procedure, traffic in transit to or from a cell is in an indetermined state and may be lost. When unblocking a BVC both the BSS and SGSN shall be in an operational state, i.e. the underlying network service and the BVC shall be available for use.

If a BSS wishes to unblock a blocked BVC it shall send a BVC-UNBLOCK PDU, and start timer T1.

The BVC-UNBLOCK PDU contains:

- the BVCI of the BVC to be unblocked.

If a BVC-UNBLOCK PDU is received by an SGSN for a blocked BVC, the BVC shall be marked as unblocked and a BVC-UNBLOCK-ACK PDU shall be returned to the BSS, containing the BVCI received in the BVC-UNBLOCK PDU.

The BSS shall stop timer T1 on receipt of the BVC-UNBLOCK-ACK PDU and mark the BVC as unblocked.

#### 8.3.2 Signalling BVC

The blocking and unblocking procedure is not applicable for the signalling BVC. The signalling BVC shall never be blocked.

### 8.3.3 Abnormal Conditions

The following statements apply only for a signalling BVC.

If a BVC-BLOCK PDU is received by an SGSN for the signalling BVC, the PDU is ignored.

If a BVC-BLOCK-ACK PDU is received by a BSS for the signalling BVC, the PDU is ignored.

If BVC-UNBLOCK PDU is received by an SGSN for the signalling BVC, the PDU is ignored.

If BVC-UNBLOCK-ACK PDU is received by an BSS for the signalling BVC, the PDU is ignored.

The following statements apply only for PTP BVC.

If a BVC-BLOCK-ACK PDU is not received for a BVC-BLOCK PDU within T1 seconds, then the BVC-BLOCK PDU procedure shall be repeated a maximum of BVC-BLOCK-RETRIES attempts. After BVC-BLOCK-RETRIES attempts the BVC remains blocked, the procedure is stopped and the O&M system is informed.

If a BVC-UNBLOCK-ACK PDU is not received for a BVC-UNBLOCK PDU within T1 seconds, then the BVC-UNBLOCK PDU procedure shall be repeated a maximum of BVC-UNBLOCK-RETRIES attempts. After BVC-UNBLOCK-RETRIES attempts the status of the BVC remains blocked, the procedure is stopped and the O&M system is informed.

If traffic is received on a BVC that is marked at a BSS or at an SGSN as blocked, and no BVC-Unblocking procedure is pending, the received PDU shall not be accepted and a STATUS PDU (Cause value: BVC blocked) shall be sent to the

peer entity on the signalling BVC. The STATUS PDU shall indicate the BVCI of the BVC upon which the error was detected.

If a BVC-BLOCK PDU is received by an SGSN for a blocked BVC, a BVC-BLOCK-ACK PDU shall be returned.

If a BVC-UNBLOCK PDU is received by an SGSN for an unblocked BVC, a BVC-UNBLOCK-ACK PDU shall be returned.

If an unexpected BVC-BLOCK-ACK PDU is received by a BSS, and it is related to a BVC that is locally blocked, the BVC-BLOCK-ACK PDU is discarded. If the BVC-BLOCK-ACK PDU is related to a BVC that is not locally blocked, then a BVC unblock procedure shall be performed.

If an unexpected BVC-UNBLOCK-ACK PDU is received by a BSS and it is related to a BVC that is locally not blocked, the BVC-UNBLOCK-ACK PDU is discarded. If the BVC-UNBLOCK-ACK PDU is related to a BVC that is locally blocked, then a BVC block procedure shall be performed.

# 8.4 BVC-RESET procedure

The purpose of the BVC-RESET procedure is to synchronise the initialisation of GPRS BVC related contexts at a BSS and SGSN. This enables the BSS and SGSN to begin communication in known states. A BVC-RESET procedure is performed because of recovery procedures related to:

- a system failure in the SGSN or BSS that affects GPRS BVC functionality (e.g. processor recovery);
- an underlying network service system failure; or
- a change in the transmission capability of the underlying network service, where the "change" is from zero kbps to greater-than-zero kbps;
- a change in mapping between the BVCI and cell identifier.

The BSS may also send BVC-RESET as a means to create the initial mapping between BVCIs and cell identifications.

After any of the possible events stated above, the status of the affected BVCs may be inconsistent at the SGSN and the BSS. After performing the BVC Reset procedure all affected BVCs are assumed to be unblocked at the SGSN. The reset procedure forces a consistent state upon SGSN and BSS by requiring that after the completion of the BVC-Reset procedure the BSS initiates the block procedure for all affected BVCs that are marked as blocked at the BSS.

Before a BSS (or SGSN) sends a BVC-RESET PDU, the operational status of the associated network service shall be obtained by the BSS (or SGSN).

If the associated network service is operational, the BSS (or SGSN) shall send a BVC-RESET PDU to its peer entity and start timer T2. The BSS (or SGSN) may receive BVC related signalling and UNITDATA PDUs before the procedure is acknowledged, but shall not transmit PDUs.

If the associated network service is not operational, the BVC-RESET procedure is postponed until internal periodic status checks indicate that it is operational.

The BVC-RESET PDU contains:

- the BVCI of the reset BVC;
- a cause element indicating the reason for reset;
- the cell identifier, when the reset is for a PTP BVC and BSS is initiator of the reset;
- feature bitmap, when the reset is for a signalling BVC.

After the SGSN (or BSS) has initialised all affected GPRS related contexts, a BVC-RESET-ACK PDU is returned.

The BVC-RESET-ACK PDU contains:

- the BVCI of the reset BVC;
- the cell identifier, when the reset is for a PTP BVC and SGSN is initiator of the reset.

Upon reception by a BSS (or SGSN) of the BVC-RESET-ACK PDU the timer T2 is stopped.

### 8.4.1 Signalling BVC

After any failure affecting the NSE, the party (BSS or SGSN) where the failure resided shall reset the signalling BVC. After sending or receiving a BVC-RESET PDU for the signalling BVC, the BSS shall stop all traffic and initiate the BVC-RESET procedure for all BVCs corresponding to PTP functional entities of the underlying network service entity. The BSS must complete the BVC-RESET procedure for signalling BVC before starting PTP BVC-RESET procedures.

The Feature bitmap is sent to identify the optional features that can be supported by the network service entity. After completion of the signalling BVC-RESET procedure both entities shall locally determine the common set of optional features supported by both NSEs. This is done by performing the bit AND operation of the received Feature bitmap with its own Feature bitmap.

If the Feature bitmap IE is missing in a signalling BVC-RESET or BVC-RESET-ACK PDU or if the result of the AND operation is '0' then no optional features are activated.

After sending or receiving a BVC-RESET PDU for the signalling BVC, the SGSN shall stop all traffic in the PTP BVCs of the corresponding NSE.

### 8.4.2 PTP BVC

After any failure affecting only part of the BVC functionality not including the signalling BVC the party where the failure resided shall reset only the affected BVCs.

If the BSS was the initiator of the BVC-RESET procedure, the BSS may initiate the blocking procedure upon receipt of a BVC-RESET-ACK PDU. If the SGSN was the initiator of the BVC-RESET procedure while the affected BVC is marked as blocked at the BSS side, the BSS shall initiate the BVC-Blocking procedure after having returned the BVC-RESET-ACK PDU to the SGSN.

Upon reception of a BVC-RESET PDU, the SGSN (or BSS) shall discard UNITDATA PDUs addressed to the reset BVC.

After reset of a PTP BVC, UNITDATA PDUs addressed to the BVC may then be received and transmitted, unless it is blocked.

### 8.4.3 Abnormal Conditions

The following statements are valid for both signalling and PTP BVC.

If a BSS (or SGSN) sends a BVC-RESET PDU to an SGSN (or BSS) and the BVC-RESET-ACK PDU is not returned within a period T2, the BVC-RESET procedure shall be repeated a maximum of BVC-RESET-RETRIES attempts. After BVC-RESET-RETRIES attempts the procedure is stopped and the O&M system is informed. In case of PTP BVC, the status of all affected BVCs at the BSS (or SGSN) shall be blocked as a consequence.

If the BSS receives a BVC-RESET PDU for a BVCI which is unknown in the BSS, then the BSS shall return a STATUS PDU towards the SGSN including the BVCI and the cause value 'BVCI unknown'.

If the BSS (or SGSN) has sent a BVC-RESET PDU for a BVCI to the SGSN (or BSS) and is awaiting a BVC-RESET-ACK PDU in response, but instead receives a BVC-RESET PDU indicating the same BVCI, then this shall be interpreted as a BVC-RESET ACK PDU and the T2 timer shall be stopped.

The BVC\_RESET for signalling BVC overrides all pending procedures for PTP BVC, i.e. other pending procedures are stopped and corresponding running timers are stopped.

If the BSS (or SGSN) receives an unexpected BVC-RESET ACK PDU, this shall be ignored.

If the BSS has sent a BVC-UNBLOCK PDU and receives a BVC-RESET PDU before the BVC-UNBLOCK-ACK PDU has been received from the SGSN, then the BSS shall consider the corresponding BVC marked as unblocked.

# 8.5 Trace procedure

The purpose of the trace invocation procedure is to inform the receiving entity that it should begin producing a trace record on an MS. The trace is invoked by an SGSN by sending an SGSN-INVOKE-TRACE PDU to the peer entity. The SGSN-INVOKE-TRACE PDU is not acknowledged.

The events and parameters to be recorded are indicated in the "Trace type" information element are defined in 3GPP TS 32.008.

The remaining elements, when received, are to be passed transparently to the OMC receiving the trace record.

The element "OMCId", if present, indicates the OMC to which the record is destined.

The PDU includes a trace reference which is allocated by the entity which triggered the trace.

The element "TriggerId", if present, indicates the entity which triggered the trace.

The Trace Reference and TriggerId IEs are used to tag the trace record to allow simpler construction of the total record by the entity which combines trace records.

# 8a Signalling procedures between PFM SAPs

# 8a.1 Create BSS PFC procedure

### 8a.1.0 General

If the BSS receives a request to transfer an uplink or downlink LLC PDU for which it currently does not have a BSS packet flow context and the PFI does not indicate best-effort or SMS or TOM8 or signalling then the BSS should send a DOWNLOAD-BSS-PFC PDU to the SGSN and start timer T6. In the uplink case the TLLI, optional Radio Priority, and optional Packet Flow ID are received from the MS as defined in 3GPP TS 44.060. Until the BSS receives the BSS PFC the BSS shall handle uplink and downlink transfers according to a best-effort default aggregate BSS QoS profile. For uplink transfers the best-effort default profile is specific to the radio priority level.

If the BSS receives a request to transfer an uplink or downlink LLC PDU associated to a PFI indicating best-effort or SMS or TOM8 or signalling then the BSS may handle the corresponding transfer according to an operator-defined aggregate BSS QoS profile. Indeed the latter cannot be negotiated with the SGSN for those flows. It is also up to the implementation what Allocation/Retention Priority is granted to those flows.

If the BSS does not receive a PFI from the MS, e.g. from a R97 or R98 MS, the BSS shall not send a DOWNLOAD-BSS-PFC PDU to the SGSN. In this case the QoS Profile IE is utilized instead.

Following a DOWNLOAD-BSS-PFC PDU if there is not an ongoing Delete PFC procedure for that corresponding PFI, the SGSN shall send a CREATE-BSS-PFC PDU to the BSS with a requested Aggregate BSS QoS Profile and start timer T7. On receipt of CREATE-BSS-PFC PDU the BSS stops timer T6 and responds with a CREATE-BSS-PFC-ACK PDU containing the negotiated Aggregate BSS QoS Profile. The BSS may restrict the requested ABQP given its capabilities and the current load. The SGSN may include the *Service UTRAN CCO* (Cell Change Order) information element in the PDU (relevant if the network initiated cell change order to UTRAN, network initiated cell change order to E-UTRAN, PS handover to UTRAN or PS Handover to E-UTRAN procedures are used). If this information element is received in multiple PDUs (either DL-UNITDATA PDU(s), CREATE-BSS-PFC PDU(s) or PS-HANDOVER-REQUEST PDU(s)), the information element contained in last received PDU shall take precedence. If there is an ongoing Delete PFC procedure the SGSN shall not send a CREATE-BSS-PFC-PDU (see subclause 8a.3).

The SGSN may also initiate the Create BSS PFC procedure. It is not required that the SGSN receive a DOWNLOAD-BSS-PFC PDU before sending a CREATE-BSS-PFC request.

The CREATE-BSS-PFC PDU may trigger a call admission control algorithm in the BSS to check whether the requested ABQP can be served. If there is valid MS Radio Access Capability IE known by the SGSN for the associated MS, the SGSN shall include it in the CREATE-BSS-PFC PDU. If the MS Radio Access Capability IE are not present in the request, then the Radio Access Capability Update procedure may be called.

The BSS may return a CREATE-BSS-PFC-NACK with a cause if it is unable to create or modify the PFC. On receipt of a CREATE-BSS-PFC-ACK PDU which does not convey the cause 'PFC queuing' (cf. sub-clause 8a.1.0a) or of a CREATE-BSS-PFC-NACK PDU the SGSN shall stop timer T7.

The Packet Flow Timer (PFT) is provided to the BSS by the SGSN. It is defined as the maximum time the BSS may hold the PFC during periods of inactivity for a PFC. The timer is started upon the receipt of a CREATE-BSS-PFC PDU and restarted after the transmission of an uplink PDU for that PFC. The timer is also restarted upon the transfer of the corresponding PFC from an old to a new cell.

If a CREATE-BSS-PFC PDU is received for an MS which has a BSS PFC in the BSS, then this shall be interpreted by the BSS as a request to:

- create a new PFC if the PFI included in the PDU is not known in the BSS,
  - modify an existing PFC if the PFI included in the PDU is already known in the BSS.

The SGSN may inform the BSS about the contents of SPID in the CREATE-BSS-PFC PDU. In this case the SPID is stored in the BSS.

# 8a.1.0a Allocation/Retention Priority handling

The SGSN may include the *Allocation/Retention Priority* information element in the CREATE-BSS-PFC- PDU. If this information element is received and the BSS supports ARP handling, the BSS shall establish or modify the resources according to the values of the *Allocation/Retention Priority* IE (priority level, pre-emption indicators, queuing) and the resource situation as follows:

- The BSS shall consider the priority level of the requested PFC, when deciding on the resource allocation.
- If the requested PFC is allowed for queuing and the resource situation so requires, the BSS may place the PFC in the establishment queue.
- The priority levels and the pre-emption indicators may (singularly or in combination) be used to determine whether the PFC assignment has to be performed unconditionally and immediately. If the requested PFC is marked as "may trigger pre-emption" and the resource situation so requires, the BSS may trigger the pre-emption procedure which may then cause the forced release of a lower priority PFC which is marked as "pre-emptable". Whilst the process and the extent of the pre-emption procedure is operator dependent, the pre-emption indicators, if given in the CREATE-BSS-PFC PDU, shall be treated as follows:
  - 1. The values of the last received Pre-emption Vulnerability IE and Priority Level IE shall prevail.
  - 2. If the *Pre-emption Capability* IE is set to "may trigger pre-emption", then this allocation request may trigger the pre-emption procedure.
  - 3. If the *Pre-emption Capability* IE is set to "shall not trigger pre-emption", then this allocation request shall not trigger the pre-emption procedure.
  - 4. If the *Pre-emption Vulnerability* IE is set to "pre-emptable", then this connection shall be included in the pre-emption process.
  - 5. If the *Pre-emption Vulnerability* IE is set to "not pre-emptable", then this connection shall not be included in the pre-emption process.
  - 6. If the *Priority Level* IE is set to "no priority" the given values for the *Pre-emption Capability* IE and *Pre-emption Vulnerability* IE shall not be considered. Instead the values "shall not trigger pre-emption" and "not pre-emptable" shall prevail.
- If the *Allocation/Retention Priority* IE is not given in the CREATE-BSS-PFC -PDU, the allocation request shall not trigger the pre-emption process and the connection may be pre-empted and considered to have the value "lowest" as priority level. Moreover, queuing shall not be allowed.
- The BSS pre-emption process shall keep the following rules:
  - 1. The BSS shall only pre-empt PFCs with lower priority, in ascending order of priority.
  - 2. The pre-emption may be done for PFCs belonging to the same MS or to other MSs.

If the BSS is unable to create the PFC immediately and the ARP IE was present in the CREATE-BSS-PFC PDU indicating that queuing is allowed for the PFC, the BSS may put the PFC creation request or modification in a queue. In that case, it shall send a CREATE-BSS-PFC-ACK PDU including the cause 'PFC queuing' to the SGSN and start the timer T10. This timer specifies the maximum time for queuing of the request of establishment or modification; its value is provided by the SGSN in the CREATE-BSS-PFC PDU. Several PFCs for a given MS may be queued in parallel. While a PFC is queued, the BSS shall handle the corresponding uplink or downlink transfers according to a best-effort default aggregate BSS QoS profile.

For each PFC that is queued the following outcomes shall be possible:

- successfully established or modified;
- failed to establish or modify;
- failed due to expiry of the timer T10.

When the SGSN receives the response that the requested PFC is queued, the SGSN shall expect the BSS to provide the outcome of the queuing function for the PFC before expiry of T7. In case the timer T7 expires, the SGSN shall consider the create BSS PFC procedure terminated and failed.

The BSS shall report the outcome of the queuing for every queued PFC. The BSS shall stop the timer T10 associated to a given PFC when it has been successfully established or modified. The BSS shall then send a CREATE-BSS-PFC-ACK PDU with cause 'PFC created successfully' to the SGSN for that PFC, informing the SGSN of the negotiated ABQP. Upon receipt of the CREATE-BSS-PFC-ACK PDU with cause 'PFC created successfully' from the BSS, the SGSN shall stop timer T7.

In the case the timer T10 expires, the create BSS PFC procedure terminates in the BSS for the corresponding PFC and the BSS shall send a CREATE-BSS-PFC-NACK PDU with cause 'PFC create failure'. The SGSN shall then consider the create BSS PFC procedure terminated and failed.

In case the SGSN wishes to delete a PFC which is being queued, it shall stop timer T7 and start the delete BSS PFC procedure. Upon receipt of the request to delete the PFC, the BSS shall take it out from the queue and proceed with the rest of the procedure, as described in sub-clause 8a.3.

In case the SGSN wishes to modify a PFC which is being queued, it shall restart timer T7 and send a CREATE-BSS-PFC PDU as described in sub-clause 8a.1. Upon receipt of the request to modify the PFC, the BSS shall take it out from the queue and treat the new request.

### 8a.1.1 Abnormal conditions

If the SGSN receives a DOWNLOAD-BSS-PFC PDU with an unknown PFI it shall not respond with a CREATE-BSS-PFC PDU.

If a CREATE-BSS-PFC PDU is not received for a DOWNLOAD-BSS-PFC PDU within T6 seconds, then the DOWNLOAD-BSS-PFC PDU shall be repeated a maximum of DOWNLOAD-BSS-PFC-RETRIES attempts. After DOWNLOAD-BSS-PFC-RETRIES + 1 attempts the procedure is stopped and the O&M system is informed. If a BSS PFC is not received then the BSS shall handle uplink and downlink transfers according to a best-effort default aggregate BSS QoS profile.

If a CREATE-BSS-PFC-ACK or CREATE-BSS-PFC-NACK PDU is not received in response to a CREATE-BSS-PFC PDU within T7 seconds, then the CREATE-BSS-PFC PDU shall be repeated a maximum of CREATE-BSS-PFC-RETRIES attempts. After CREATE-BSS-PFC-RETRIES+1 attempts the procedure is stopped and the O&M is informed.

If a BSS not supporting ARP handling is unable to create the PFC then a CREATE-BSS-PFC-NACK PDU is returned with a cause value (e.g. Cause value: PFC create failure). The SGSN shall stop the Create BSS PFC procedure.

If a BSS supporting ARP handling is unable to create the PFC immediately and the ARP IE was not present in the CREATE-BSS-PFC PDU or the ARP IE was present but queuing is not allowed for the PFC, then a CREATE-BSS-PFC-NACK PDU is returned with cause value 'PFC create failure'. The SGSN shall then stop the Create BSS PFC procedure.

If a CREATE-BSS-PFC PDU is received in the BSS for an MS for which the PS Handover Required procedure is ongoing, the BSS shall ignore the CREATE-BSS-PFC PDU and return a CREATE-BSS-PFC-NACK PDU to the SGSN indicating Cause "MS under PS Handover treatment".

# 8a.2 Modify BSS PFC procedure

The BSS may request modification of the contents of an existing BSS PFC at any time via the MODIFY-BSS-PFC PDU, e.g. due to a change in resource availability at the BSS. The BSS sends the MODIFY-BSS-PFC PDU and start timer T8. The SGSN inserts the modified parameters in the MODIFY-BSS-PFC PDU into the relevant PDP contexts. The SGSN shall respond to a modify request with a MODIFY-BSS-PFC-ACK PDU except when there is an ongoing Delete BSS PFC procedure for that PFI (see sub-clause 8a.3). The SGSN may restrict the requested aggregate BSS QoS profile given its capabilities and current load. The Packet Flow Timer (PFT) may be provided to the BSS by the SGSN. This timer is (started or) restarted upon the receipt of the MODIFY-BSS-PFC-ACK PDU and restarted after the transmission of an uplink PDU for that PFC. On receipt of a response to the Modify procedure the BSS shall stop timer T8.

The SGSN can reject the profile proposed by the BSS by answering with a MODIFY-BSS-PFC-ACK PDU containing the previous ABQP. The SGSN may request the modification of the contents of a BSS PFC at any time via the CREATE-BSS-PFC PDU, e.g. due to the activation, modification, or deactivation of a PDP context. It shall not use the MODIFY-BSS-PFC PDU. If the BSS PFC already exists the BSS shall interpret the PDU as a modification request and the BSS shall reply with a CREATE-BSS-PFC-ACK. The BSS may restrict the requested ABQP given its capabilities and the current load.

The Modify BSS PFC procedure shall never be initiated for an MS for which the PS Handover Required procedure is ongoing.

#### 8a.2.1 Abnormal conditions

If a MODIFY-BSS-PFC-ACK is not received in response to a MODIFY-BSS-PFC PDU within T8 seconds, then the MODIFY-BSS-PFC PDU shall be repeated a maximum of MODIFY-BSS-PFC-RETRIES attempts. After MODIFY-BSS-PFC-RETRIES+1 attempts the procedure is stopped and the O&M is informed.

# 8a.3 Delete BSS PFC procedure

The SGSN may request the deletion of a BSS PFC at any time using the DELETE-BSS-PFC PDU. The BSS shall respond with a DELETE-BSS-PFC-ACK PDU. In case of user inactivity the BSS may delete a BSS packet flow context without notifying the SGSN. In case the BSS is no longer able to support the BSS PFC ABQP, it may send a DELETE-BSS-PFC-REQ PDU with cause "PFC pre-empted" or "ABQP no more supported" to the SGSN. The SGSN may either start the Delete BSS PFC procedure or a new Create BSS PFC procedure. In case the BSS receives neither a DELETE-BSS-PFC PDU nor a CREATE-BSS-PFC PDU the behaviour in the BSS is implementation specific.

The Delete BSS PFC procedure takes precedence over the Modify BSS PFC and the Create BSS PFC procedures, i.e. when the BSS receives a DELETE-BSS-PFC PDU it shall abort any ongoing Create BSS PFC or Modify BSS PFC procedure for that PFI.

If a DELETE-BSS-PFC PDU is received for an MS for which the PS Handover Required procedure is ongoing, the BSS shall initiate the PS Handover Cancel procedure and continue the Delete BSS PFC procedure for the corresponding MS.

# 8a.4 PS Handover Required procedure

In the case of an intra-BSS PS Handover or intra-BSS DTM Handover, the optimized intra-BSS handover procedure may be used (see 3GPP TS 44.060); in such case, the PS Handover Required procedure is not used.

When a BSS initiates a PS handover or DTM Handover it shall initiate the PS Handover Required procedure and send the PS-HANDOVER-REQUIRED PDU to the SGSN. Except in the case of DTM Handover, the BSS shall then start timer T12 (see NOTE).

NOTE: The DTM Handover procedure is guarded at the source BSS by the BSSMAP timer T23 (see 3GPP TS 48.008).

If DTM Handover is ongoing and was initiated for a reason specific to the packet resources, or PS Handover is ongoing, the *Cause* IE of the PS-HANDOVER-REQUIRED PDU should be set to an appropriate value (e.g. "Uplink quality", "Uplink strength", "Downlink strength", "Distance", "Better cell", "Traffic" or "O&M intervention").

NOTE: The radio related cause values are not applicable to the DTM Handover.

If DTM Handover is ongoing, and was initiated for a reason specific to the dedicated resource, the *Cause* IE shall indicate "CS cause".

The reception of a PS-HANDOVER-REQUIRED PDU will initiate the PS Handover Required procedure in the SGSN and the allocation of resources in the target system.

If PS handover to A/Gb mode is required, the source BSS shall include the *Source BSS to Target BSS Transparent Container* IE and the *Target Cell Identifier* IE in the PS-HANDOVER-REQUIRED PDU.

If PS handover to Iu mode is required, the source BSS shall include the *Source to Target Transparent Container* IE and the *Target RNC Identifier* IE in the PS-HANDOVER-REQUIRED PDU. The *Source to Target Transparent Container* IE shall be encoded as the *Source RNC to Target RNC Transparent Container* IE as specified in 3GPP TS 25.413 or 3GPP TS 44.118.

If PS handover to E-UTRAN is required, the source BSS shall include the *Source to Target Transparent Container* IE and the *Target eNB Identifier* IE or the *Target RNC Identifier* IE (carrying the Corresponding RNC-ID of the target eNB) in the PS-HANDOVER-REQUIRED PDU. The *Source to Target Transparent Container* IE shall be encoded as the *Source eNB to Target eNB Transparent Container* IE as specified in 3GPP TS 36.413.

The *Active PFCs List* IE informs the SGSN about which PFCs that are active for the MS in the source cell at the time of sending the PS-HANDOVER-REQUIRED PDU. The concept of "Active PFCs" is defined in 3GPP TS 43.129. The *Active PFCs List* IE shall not contain any pre-defined PFIs.

For DTM Handover to A/Gb mode, the source BSS shall include the *CS Indication IE* in the *Source BSS to Target BSS Transparent Container* IE. The contents of the *CS Indication* IE shall uniquely identify, for this MS, the handover attempt, and shall be identical to the contents of the *PS Indication* IE included in the BSSMAP HANDOVER REQUIRED message (see 3GPP TS 48.008). The *Target Cell Identifier* IE shall identify the same cell as the one specified in the *Cell Identifier List (preferred)* IE in the corresponding BSSMAP HANDOVER REQUIRED message (see 3GPP TS 48.008).

For DTM Handover to UTRAN, the source BSS shall set the *Number of Iu Instances* IE equal to 2 in the *Source RNC to Target RNC Transparent Container* IE (see 3GPP TS 25.413)

When the resource allocation in the target system is complete, the SGSN shall send a PS-HANDOVER-REQUIRED-ACK PDU to the source BSS and end the PS Handover Required procedure.

The *Target BSS to Source BSS Transparent Container* IE, or the *Target to Source Transparent Container* IE as received from the target system, shall be included in the PS-HANDOVER-REQUIRED-ACK PDU.

Except in the case of DTM Handover, the source BSS shall, on reception of the PS-HANDOVER-REQUIRED-ACK PDU from the SGSN, stop timer T12, trigger the transmission of the PS HANDOVER COMMAND message towards the MS (as specified in 3GPP TS 44.060) and end the PS Handover Required procedure. In the case of DTM Handover, the PS Handover Required procedure is terminated when timer T23 is stopped for any reason or expires as specified in 3GPP TS 48.008. The subsequent behaviour of the network is specified in 3GPP TS 48.008.

In case of unsuccessful PS Handover, the source BSS shall be notified through the PS-HANDOVER-REQUIRED-NACK PDU.

When the SGSN terminates the PS Handover Required procedure by sending a PS-HANDOVER-REQUIRED-NACK PDU to the source BSS, the *Cause* IE should be set to an appropriate value (e.g. "PFC create failure", "Cell traffic congestion", "Equipment failure", "O&M intervention", "PS Handover Target not allowed" or "PS Handover not Supported in Target BSS or Target System").

Except in the case of DTM Handover, upon reception of a PS-HANDOVER-REQUIRED-NACK PDU from the SGSN, the source BSS shall stop timer T12 and terminate the ongoing PS Handover Required procedure.

For DTM Handover, the source BSS behaviour on receipt of a PS-HANDOVER-REQUIRED-NACK PDU is described as part of the Handover Required procedure (see 3GPP TS 48.008).

61

The source BSS shall always include the '*Reliable Inter RAT Handover Info*' indicator set to "1" in the PS-HANDOVER-REQUIRED-PDU when the target is a GERAN A/Gb mode BSS if the *Inter RAT Handover Info* IE is available and was received from the SGSN in a PS-HANDOVER-COMPLETE-ACK or a CREATE-BSS-PFC PDU or a PS-HANDOVER-REQUEST PDU with '*Reliable Inter RAT Handover Info Indicator*' set to '1'. It shall be set to "0" otherwise.

### 8a.4.1 Abnormal conditions

Except in the case of DTM Handover, if timer T12 expires in the source BSS and there has been no response from the SGSN to the PS-HANDOVER-REQUIRED PDU, the source BSS may initiate a new PS Handover Required procedure for the same mobile station, either directly or after first having cancelled the previous PS Handover Required procedure by initiating the PS Handover Cancel procedure with the value for the *Cause* IE set to "T12 expiry".

NOTE: For the case of DTM Handover, the abnormal condition caused by the expiry of BSSMAP timer T23 is described in 3GPP TS 48.008.

# 8a.5 PS Handover Request procedure

The SGSN shall initiate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST PDU, including the NAS container for PS Handover corresponding to the PFCs to be set-up (except in the case of intra-SGSN PS handover), to the target BSS and starting timer T13. The PS-HANDOVER-REQUEST PDU shall be sent on the point-to-point BVC indicated by the target Cell identity received from the old system.

On receipt of a PS-HANDOVER-REQUEST PDU containing a *CS Indication* IE (i.e. a DTM Handover procedure is ongoing), then the target BSS shall proceed as follows:

- If the timer T24 (see 3GPP TS 48.008) is not running, then the target BSS shall start timer T24.
- When both PS-HANDOVER-REQUEST PDU and BSSMAP HANDOVER REQUEST messages have been received and the contents of the *CS Indication* IE and *PS Indication* IE are identical, the target BSS shall stop timer T24 (see 3GPP TS 48.008), and, provided that a dedicated resource has been allocated (see 3GPP TS 48.008), attempt to create a new BSS Context for the MS, create PFCs according to the received ABQP parameters and allocate TBF resources within the capabilities of the mobile station.

On receipt of a PS-HANDOVER-REQUEST PDU which does not contain a *CS Indication* IE, the target BSS shall create a new BSS Context for the MS, create PFCs according to the received ABQP parameters and allocate TBFs for uplink and, if needed, for downlink transmission.

The SGSN may include the *Service UTRAN CCO* (Cell Change Order) information element in the PS-HANDOVER-REQUEST PDU (relevant if the network initiated cell change order to UTRAN, network initiated cell change order to E-UTRAN,PS handover to UTRAN or PS Handover to E-UTRAN procedures are used). If this information element is received in multiple PDUs (either DL-UNITDATA PDU(s), CREATE-BSS-PFC PDU(s) or PS-HANDOVER-REQUEST PDU(s)), the information element contained in the last received PDU shall take precedence.

The SGSN receiving the *Reliable Inter RAT Handover Info* IE in the PS-HANDOVER-REQUIRED PDU shall forward this IE to the target BSS in the PS-HANDOVER-REQUEST PDU.

The Packet Flow Timer (PFT) is provided to the target BSS by the SGSN for each corresponding PFC. It is defined as the maximum time the BSS may hold the PFC during periods of inactivity for a PFC. The timer is started upon the initiation of the PS Handover Complete procedure (see sub-clause 8a.7) and restarted after the transmission of an uplink PDU for that PFC. The timer is also restarted upon the transfer of the corresponding PFC from an old to a new cell.

When resources have been successfully allocated by the target BSS, it shall send a PS-HANDOVER-REQUEST-ACK PDU to the SGSN. From this point in time, the target BSS shall be prepared to receive downlink LLC PDUs for the corresponding MS on the allocated resources. The target BSS shall also be prepared to receive uplink RLC data blocks or a PS HANDOVER ACCESS message upon successful MS access in the target cell (as specified in 3GPP TS 44.060).

The PS-HANDOVER-REQUEST-ACK PDU shall include the *Target BSS to Source BSS Transparent Container* IE (see sub-clause 11.3.79) which contains either a complete PS HANDOVER COMMAND message or, in the case of DTM Handover, a complete DTM HANDOVER COMMAND message. For the definition of the PS HANDOVER COMMAND and DTM HANDOVER COMMAND messages, see 3GPP TS 44.060. In addition, the BSS shall include in the *Target BSS to Source BSS Transparent Container* IE the *SI/PSI Container* IE (see sub-clause 11.3.95b) if the *PS* 

Handover Indications IE indicating "SI/PSI requested" was present in the Source BSS to Target BSS Transparent Container of the incoming PS-HANDOVER-REQUEST PDU.

Upon reception of the PS-HANDOVER-REQUEST-ACK PDU, the SGSN shall stop timer T13, end the PS Handover Request procedure and start timer T14 for supervision of the PS Handover Complete procedure.

The target BSS may choose to terminate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST-NACK PDU to the SGSN due to any of the following reasons:

- A BSS Context could not be allocated for the MS;
- None of the PFCs in the *PFCs To Be Set-up List* IE of the PS-HANDOVER-REQUEST PDU could be granted the requested QoS;
- No uplink TBF could be allocated for the MS in the BVCI.

In addition, the target BSS may choose to terminate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST-NACK PDU to the SGSN if at least one of the PFCs in the *PFCs To Be Set-up List* IE of the PS-HANDOVER-REQUEST PDU could not be granted the requested QoS and the *Cause* IE indicates a non-critical PS or DTM handover.

NOTE: The cause values "Better cell", "Traffic" indicate a non-critical PS or DTM handover.

When a PS-HANDOVER-REQUEST-NACK PDU has been sent, no knowledge of the MS should be kept by the target BSS.

Except in case of an attempted DTM Handover, when the target BSS decides to terminate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST-NACK PDU to the SGSN, the *Cause* IE should be set to an appropriate value (e.g. "PFC create failure", "Cell traffic congestion", "Equipment failure" or "O&M intervention").

In the case of an attempted DTM Handover, if the target BSS has failed to allocate PS resources, it shall send a PS-HANDOVER-REQUEST-NACK PDU with cause "DTM Handover - PS Allocation failure" to the SGSN. The target BSS may continue with the corresponding Handover Resource Allocation procedure, allocating only a dedicated resource (see 3GPP TS 48.008).

In the case of an attempted DTM Handover, if the target BSS does not allocate a CS resource, it shall not allocate any PS resources, and shall send a PS-HANDOVER-REQUEST-NACK PDU with cause "DTM Handover - No CS resource" to the SGSN.

The SGSN may inform the BSS about the contents of SPID in the PS-HANDOVER-REQUEST PDU. In this case the SPID is stored in the BSS.

### 8a.5.1 Abnormal conditions

If there is no response from the target BSS to the PS-HANDOVER-REQUEST PDU before timer T13 expires, the SGSN shall initiate the Delete BSS PFC procedure for each of the PFCs in the *PFCs to be Set-up List* IE for the corresponding MS.

If the timer T24 (see 3GPP TS 48.008) expires and the target BSS has received a PS-HANDOVER-REQUEST PDU (i.e. no corresponding BSSMAP HANDOVER REQUEST message has been received) the target BSS shall terminate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST-NACK PDU to the SGSN with cause "DTM Handover - T24 expiry".

If a PS-HANDOVER-REQUEST PDU is received which contains a *CS Indication* IE which corresponds to a DTM Handover attempt which was previously terminated for this MS, then the BSS shall terminate the PS Handover Request procedure by sending a PS-HANDOVER-REQUEST-NACK PDU to the SGSN with cause "DTM Handover - Invalid CS Indication IE". Any ongoing Handover Resource Allocation procedure (see 3GPP TS 48.008) for this mobile shall not be aborted in this case.

NOTE: Other failure cases related to the expiry of the A interface timer T24 are described in 3GPP TS 48.008).

If timer T14 expires before the SGSN receives a PS-HANDOVER-COMPLETE PDU, it shall initiate the Delete BSS PFC procedure for each allocated PFC (i.e. for each PFC included in the *List of Set-up PFCs* IE in the corresponding PS-HANDOVER-REQUEST-ACK PDU) towards the target BSS to release the resources allocated for all PFCs allocated for the MS.

# 8a.6 PS Handover Complete procedure

The target BSS shall initiate the PS Handover Complete procedure:

- in the case of PS Handover, on reception of the first correct RLC data block (sent in normal burst format as defined in 3GPP TS 44.060) from the MS in the target Cell;
- in the case of DTM Handover, on receipt of an RR HANDOVER COMPLETE message on the main DCCH in the target cell (see 3GPP TS 44.018).

The target BSS shall send a PS-HANDOVER-COMPLETE PDU to the SGSN.

From this point in time, the target BSS shall be prepared to receive uplink LLC PDUs from the corresponding MS on the allocated resources. Uplink LLC PDUs shall be sent from the target BSS to the SGSN with the TLLI received through the PS Handover Request procedure.

The target BSS supporting inter-RAT PS handover to UTRAN shall request the *Inter RAT Handover Info* IE from the SGSN upon successful PS handover completion in the following cases:

- PS handover from UTRAN to GERAN; in this case the BSS shall replace the *Inter RAT Handover Info* received from the source RNC with the new value received from the SGSN in the PS-HANDOVER-COMPLETE-ACK PDU.
- PS handover from GERAN *A/Gb mode* if it received PS-HANDOVER-REQUEST PDU with *Reliable Inter RAT Handover Info* IE missing or set to '0'; in this case the BSS shall replace the *Inter RAT Handover Info* received from the source BSS with the new value received from the SGSN in the PS-HANDOVER-COMPLETE-ACK PDU.
- PS handover from GERAN A/Gb mode if the'INTER RAT HANDOVER INFO' is missing in the Source BSS to Target BSS container.

A target BSS supporting inter-RAT PS handover to E-UTRAN and that is missing the *E-UTRAN Inter RAT Handover Info* upon successful PS handover shall request this IE from the SGSN by setting the request for provision of these inter-RAT capabilities in the PS-HANDOVER-COMPLETE PDU.

At reception of the PS-HANDOVER-COMPLETE PDU, the SGSN shall stop timer T14 (if running) and

- in case of non-optimised intra-BSS or intra-SGSN inter-BSS PS Handover, initiate the Delete BSS PFC procedure(s) towards the source BSS for each PFC corresponding to the MS in the source cell as described in sub-clause 8a.3; or
- in case of inter-SGSN PS Handover, send a Forward Relocation Complete message to the old SGSN (see 3GPP TS 29.060). The old SGSN shall initiate a Delete BSS PFC procedure for each PFC corresponding to the MS in the source cell towards the source BSS as described in sub-clause 8a.3.

# 8a.6.1 Abnormal conditions

If the SGSN does not receive a PS-HANDOVER-COMPLETE PDU before timer T14 expires, it shall initiate the Delete BSS PFC procedure towards the target BSS to release the resources for all PFCs allocated for the MS.

If a PS-HANDOVER-COMPLETE PDU refers to an MS which is unknown in the SGSN, it shall be ignored.

# 8a.7 PS Handover Cancel procedure

The source BSS may at any time, up to the time when the PS HANDOVER COMMAND or DTM HANDOVER COMMAND message is sent to the MS (as defined in 3GPP TS 44.060), initiate the PS Handover Cancel procedure. The reasons for cancellation could e.g. be "T12 expiry", "MS back on old channel", "Not all requested PFCs created" or "CS cause".

The source BSS shall initiate the PS Handover Cancel procedure if the cell change attempt fails and the MS returns to the old cell and sends either a PACKET CELL CHANGE FAILURE message as specified in 3GPP TS 44.060 (for PS Handover) or an RR HANDOVER FAILURE message as specified in 3GPP TS 44.018 (for DTM Handover) using the old radio resources.

During the normal intra-BSS or inter-BSS PS Handover, the source BSS shall also initiate the PS Handover Cancel procedure if it detects the loss of radio contact with MS (see 3GPP TS 44.060). The cause value in the PS-HANDOVER-CANCEL PDU shall be set to "Radio contact lost with MS". In the case of DTM Handover, the source BSS shall initiate the PS Handover Cancel procedure in the following additional cases defined in the list of Abnormal Cases for the Handover Required Indication procedure (see 3GPP TS 48.008):

- a) Timer T23 expires and the source BSS has received a PS-HANDOVER-REQUIRED-ACK PDU from the SGSN;
- b) The source BSS receives a PS-HANDOVER-REQUIRED-ACK PDU and a BSSMAP HANDOVER REQUIRED REJECT message (see 3GPP TS 48.008);
- c) If the DTM Handover is ongoing and T8 expires (see 3GPP TS 48.008).

The cause value in the PS-HANDOVER-CANCEL PDU shall be set to:

in case a) above: "DTM Handover - T23 expiry";

in case b) above: "DTM Handover - MSC error";

in case c) above: "Radio contact lost with MS".

When the source BSS decides to cancel an ongoing PS handover or DTM Handover, it shall initiate the PS Handover Cancel procedure by sending a PS-HANDOVER-CANCEL PDU to the SGSN. The source BSS shall regard all procedures related to PS handover or DTM Handover for the given MS as terminated after having sent the PS-HANDOVER-CANCEL PDU to the SGSN.

Upon reception of a PS-HANDOVER-CANCEL PDU, (in the case of Inter-SGSN PS handover or Inter-SGSN DTM handover) the SGSN shall initiate a Forward Relocation Cancel procedure according to 3GPP TS 29.060.

Upon reception of a PS-HANDOVER-CANCEL PDU, (in the case of Intra-SGSN PS handover or Intra-SGSN DTM handover or Inter-RAT PS handover) the SGSN shall

- in case of GERAN A/Gb mode to GERAN A/Gb mode PS/DTM handover, initiate the Delete BSS PFC procedure towards the target BSS to release the resource allocated for the MS.
- in case of GERAN *A/Gb mode* to UTRAN PS/DTM handover, initiate the Iu Release procedure towards the target RNC to release the resource allocated for the UE (see 3GPP TS 25.413).
- in case of GERAN A/Gb mode to E-UTRAN PS handover, initiate the Relocation Cancel procedure towards target MME which initiates the release of the resources allocated for the UE by the target eNB (see 3GPP TS 36.413).
- NOTE: In case of cancellation due to CS call establishment, current behaviour regarding possible suspension of GPRS services applies after the PS Handover Cancel procedure is completed.

#### 8a.7.1 Abnormal conditions

If a PS-HANDOVER-CANCEL PDU refers to an MS/UE which is unknown in the SGSN, it shall be ignored.

An SGSN shall ignore a PS-HANDOVER-CANCEL PDU which refers to an MS for which the SGSN has already received a PS-HANDOVER-COMPLETE PDU from the target BSS (in the case of intra-SGSN PS handover) or a FORWARD RELOCATION COMPLETE message from the new SGSN (in the case of inter-SGSN PS handover).

# 8b Signalling Procedures between LCS SAPs

# 8b.1 Location Procedure

When the SGSN receives a location request, and the BSS supports LCS, the SGSN starts the location procedure by sending a PERFORM-LOCATION-REQUEST PDU.

3GPP TS 48.018 version 9.0.0 Release 9

The SGSN shall provide the BVCI and the NSEI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS as well as the Cell ID received together with that LLC-PDU. The SGSN shall also provide the IMSI. If the SGSN has valid DRX Parameters for a TLLI, then the SGSN shall include them in the PDU.

The Location Type indicates which type of location information the SGSN is requesting. The LCS capability IE reports the PS LCS capabilities of the MS and is included by the SGSN if it has been received from the MS. LCS Priority and LCS QoS are provided if available in the SGSN. The SGSN may provide the IMEI of the Mobile Station.

On receipt of the PERFORM-LOCATION-REQUEST PDU for positioning of the target MS, the BSS transfers the positioning request to the SMLC according to the procedures defined in 3GPP TS 43.059 and 3GPP TS 49.031 and awaits the result. The BSS then returns the result of positioning to the SGSN in the PERFORM-LOCATION-RESPONSE PDU. This PDU contains the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS, a location estimate and optionally positioning data.

If assistance data was instead requested by the SGSN for an MS, the BSS transfers the request to the SMLC according to the procedures defined in 3GPP TS 43.059 and 3GPP TS 49.031 and awaits the result. If the Requested GPS or GANSS Assistance Data IE was received from the MS, it is forwarded to the BSS. If the SMLC indicates to the BSS that it was able successfully to transfer this to the MS, the BSS shall return a PERFORM-LOCATION-RESPONSE PDU to the SGSN. This PDU shall contain the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS but no other optional or conditional information elements. The absence of an LCS Cause parameter in this case implies that the transfer was successful.

Otherwise, if the deciphering keys were requested for LCS broadcast assistance data, the BSS transfers the request to the SMLC according to the procedures defined in 3GPP TS 43.059 and 3GPP TS 49.031 and awaits the result. If the BSS receives the deciphering keys, the BSS shall send them to the SGSN in a PERFORM-LOCATION-RESPONSE PDU containing also the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS.

### 8b.1.1 Unsuccessful Operation

If the BSS fails to respond to the PERFORM-LOCATION-REQUEST PDU it returns a PERFORM-LOCATION-RESPONSE PDU with a LCS cause value indicating the failure cause.

If the BSS receives a failure indication from the SMLC it shall send a PERFORM-LOCATION-RESPONSE PDU to the SGSN with the LCS cause value that it received from the SMLC.

# 8b.1.2 Abnormal Conditions

The following condition may occur:

If the SGSN needs to abort previously initiated location request, it shall send the PERFORM-LOCATION-ABORT PDU to the BSS. This PDU shall include the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS. As a result of reception of this PDU the BSS shall abort activities related to positioning of the target MS or assistance data delivery. The BSS shall return a PERFORM-LOCATION-RESPONSE PDU with a cause value indicating the abortion of location request. The SGSN may reattempt the positioning request after the PERFORM-LOCATION-RESPONSE PDU is received from the BSS, but not before the PDU is received.

If the P-TMSI is reallocated for a target MS during the location procedure, the SGSN shall abort the location procedure.

If a SUSPEND PDU is received for a target MS during the location procedure, the SGSN shall abort the location procedure.

If a Routing Area Update request is received from a target MS during the location procedure, the SGSN shall abort the location procedure.

If an Inter NSE Cell Change, within the same routing area, occurs for a target MS during the location procedure, the SGSN shall provide the new NSEI and new BVCI in the FLUSH-LL PDU sent to the BSS, in order for the BSS to maintain the on-going location procedure, if possible. In case the BSS is unable to maintain the on-going location procedure, then a location abort shall be triggered by the BSS towards the SMLC.

### 8b.1.3 Overload

For location requests initiated by the SGSN, the BSC may employ the same procedures defined for an SMLC in 3GPP TS 49.031 to alleviate an overload condition in the BSS.

# 8b.2 Position Command Procedure

The position command procedure is used to convey an embedded RRLP message between the BSS and the MS.

# 8b.2.1 Position Command

The BSS initiates the position command procedure by sending the POSTION-COMMAND PDU to the SGSN. The procedure is only valid while a location procedure for the target MS is ongoing.

The POSITION-COMMAND PDU shall include the RRLP Flags and the RRLP APDU information elements and the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS. The RRLP APDU information element carries the RRLP message and the RRLP Flags information element carries control information for RRLP.

The SGSN shall extract the RRLP message from the RRLP APDU information element and forward it, together with the RRLP Flags, to the MS in a TOM message carried in an LLC-PDU, see 3GPP TS 44.064.

# 8b.2.2 Position Response

The SGSN initiates the position response procedure when it receives a TOM message in an LLC-PDU carrying an RRLP message for a target MS. The procedure is only valid while a location procedure for the target MS is ongoing.

When the SGSN receives a TOM message in an LLC-PDU carrying an RRLP message for a target MS, the SGSN shall extract the RRLP message and forward it to the BSS in a POSITION-RESPONSE PDU. The RRLP message shall be included in the RRLP APDU information element. The RRLP Flags information shall be extracted from the TOM header and be included in the RRLP Flags information element The POSITION-RESPONSE PDU shall also include the PTP BVCI indicating the PTP functional entity (i.e. the cell) upon which the last LLC-PDU was received from the MS.

# 8b.2.3 Unsuccessful Operation

If the SGSN fails to process the POSITION-COMMAND PDU it returns a POSITION-RESPONSE PDU with a LCS cause value indicating the failure cause.

If a POSITION-COMMAND PDU is received by the SGSN while a location procedure for the target MS is not ongoing a POSITION-RESPONSE PDU with a LCS cause value indicating this failure cause is returned.

If a POSITION-RESPONSE PDU is received by the BSS while a location procedure for the target MS is not ongoing the BSS shall ignore the PDU.

# 8c Signalling procedures between RIM SAPs

# 8c.1 General

### 8c.1.1 Introduction

The following sub-clauses describe the generic RAN Information Management (RIM) procedures which support the exchange of information, via the core network, between peer application entities located in a GERAN, in a UTRAN or in an E-UTRAN access network.

The RIM function is performed through the interaction of the following sub-layers:

- the underlying part of BSSGP used to transport and route the RIM PDUs from a BSS to an SGSN or from an SGSN to a BSS over the Gb interface;
- the RIM protocol allowing the exchange of the information between two BSSs or between a BSS and an RNS or between a BSS and a eNodeB transparently through the core network;
- the application part on the top of the RIM protocol, referred to as the "RIM application" in this specification.
- NOTE: The functional split between the RIM application and the RIM protocol is provided for information in the present specification and should allow for various implementations.

The PDUs conveying the RAN information between two RIM entities are including containers that shall not be interpreted by the core network nodes. The exchange of information is triggered by the application in a controlling BSS.

The support of different applications is achieved by the appropriate definition of specific application containers for those applications.

If the RAN Information Management (RIM) feature is supported by both the BSS and the SGSN, the RIM procedures can be used by any RIM application running on this BSS and requiring information transfer between two BSSs via the core network.

NOTE: Specific requirements applicable to RIM between GERAN and UTRAN or between GERAN and E-UTRAN are specified in sub-clause 8c.1.4.

#### 8c.1.2 Definitions

#### 8c.1.2.1 Controlling and serving nodes

The BSS requesting the information is called the "controlling BSS", the BSS providing the requested information is called the "serving BSS". Considering a pair of BSSs, each may be at the same time both a controlling BSS and a serving BSS.

In the present specification the term "BSS" should be understood as "RNC or eNodeB" in the relevant situations (e. g. NACC from UTRAN/E-UTRAN to GERAN), unless it is explicitly stated otherwise.

#### 8c.1.2.2 RIM association

A RIM association links unambiguously a cell in the serving BSS with the controlling BSS that has initiated an information request related to that cell for a given application, and is identified by the following triplet:

- Controlling BSS identifier
- Cell Identifier in the serving BSS
- RIM Application Identity

#### 8c.1.2.3 RIM variables

In this protocol description, variables are used to represent the status of the relevant entity as a result of an event, such as the reception of an information element in a message. The variables serve the purpose of specifying an abstract model of the protocol entity, and do not therefore impose any particular implementation.

The following variables are defined in the serving BSS:

- MULTIPLE\_REPORTING\_ONGOING: this variable indicates whether event-based multiple reporting is active or not for a given RIM association. This variable is initialised to FALSE prior to the reception of any request related to the corresponding association from the controlling BSS, then it is updated according to the relevant procedure requirements.
- MULTIPLE\_REPORT\_SETTING\_RSN: this variable stores the RSN of the last request having initiated or reinitiated multiple reporting in the serving BSS and is used as a reference to ascertain whether any further request received for this association is outdated or not. The value of this variable is only significant when multiple reporting is active (i.e. MULTIPLE\_REPORTING\_ONGOING set to TRUE).

# 8c.1.3 RIM PDUs description

### 8c.1.3.1 RAN-INFORMATION-REQUEST PDU

The RAN-INFORMATION-REQUEST PDU is used by the controlling BSS to request or interrupt an information transfer from a serving BSS. The RAN-INFORMATION-REQUEST PDU specifies the requested operation and the expected information when applicable. The following RAN-INFORMATION-REQUEST PDU type extensions are defined:

- RAN-INFORMATION-REQUEST/Single Report is used to request a single report.
- RAN-INFORMATION-REQUEST/Multiple Report is used to request event-driven multiple reports.
- RAN-INFORMATION-REQUEST/Stop is used to stop event-driven multiple reports.

#### 8c.1.3.2 RAN-INFORMATION PDU

The RAN-INFORMATION PDU is used by the serving BSS to transmit the requested information to the controlling BSS. The following RAN-INFORMATION PDU type extensions are defined:

- RAN-INFORMATION/Single Report is used to acknowledge the reception of a RAN-INFORMATION-REQUEST/Single Report and to transmit the requested single report information.
- RAN-INFORMATION/Initial Multiple Report is used to acknowledge the reception of a RAN-INFORMATION-REQUEST/Multiple Report and to transmit the initial report of the event-driven multiple reporting.
- RAN-INFORMATION/Multiple Report is used to transmit subsequent reports while event-driven multiple reporting is active.
- RAN-INFORMATION/Stop is used to acknowledge the reception of a RAN-INFORMATION-REQUEST/Stop.
- RAN-INFORMATION/End is used to indicate that the serving BSS will not longer send multiple reports for other reasons than the reception of a RAN-INFORMATION-REQUEST/Stop.

#### 8c.1.3.3 RAN-INFORMATION-ACK PDU

The RAN-INFORMATION-ACK PDU is used by the controlling BSS to acknowledge the reception of a previous RAN-INFORMATION PDU if so requested by the serving BSS and is used by the serving BSS to acknowledge the reception of a previous RAN-INFORMATION-APPLICATION-ERROR PDU if so requested by the controlling BSS.

#### 8c.1.3.4 RAN-INFORMATION-ERROR PDU

The RAN-INFORMATION-ERROR PDU is used, by either the controlling or the serving BSS, to report an error diagnosed at the RIM protocol level to the peer entity.

#### 8c.1.3.5 RAN-INFORMATION-APPLICATION-ERROR PDU

The RAN-INFORMATION-APPLICATION-ERROR PDU is used by the controlling BSS to inform the peer application in the serving BSS about erroneous application information in a previously received RAN-INFORMATION PDU.

### 8c.1.4 RIM addressing and routing principles

8c.1.4.1 RIM routing address

#### 8c.1.4.1.1 GERAN BSS identification

As there is no BSS address identifier defined as such in the 3GPP specifications, RIM makes use of the cell identifier (RAI + CI - see sub-clause 11.3.9 in the present document and 3GPP TS 23.003) of any cell parented by the BSS:

- the cell identifier of the source cell is used to identify the BSS issuing a RIM PDU;
- the cell identifier of the destination cell is used to identify the BSS towards which a RIM PDU is issued.

The source cell identifying the BSS issuing a RAN-INFORMATION-REQUEST PDU may be chosen arbitrarily within all the cells parented by the controlling BSS. The deletion or the re-parenting of any cell used as a source cell in the controlling BSS shall trigger the actions described in sub-clause 8c.5.2.

#### 8c.1.4.1.2 UTRAN RNS identification

When RIM is used to support the exchange of information with a peer application entity located in UTRAN, the RNC identifier (see sub-clause 11.3.70) shall be used as the RIM Routing Address (Source Cell Identifier or Destination Cell Identifier) to identify the corresponding RNS.

#### 8c.1.4.1.3 E-UTRAN eNodeB identification

When RIM is used to support the exchange of information with a peer application entity located in E-UTRAN, an eNB identifier (see sub-clause 11.3.70) shall be used as the RIM Routing Address (Source Cell Identifier or Destination Cell Identifier) to identify the corresponding eNodeB.

#### 8c.1.4.2 Routing via the core network

The RIM PDUs shall be conveyed transparently by the core network toward the destination BSS, RNS or eNodeB. A SGSN or MME shall use the destination address included in each RIM PDU either to send the PDU to the relevant BSS, RNS or eNodeB through the Gb, the Iu or the S1 interface respectively, or to tunnel the PDU towards the target SGSN or MME parenting the destination node through the Gn or S3 interface respectively.

If a RIM PDU has been tunnelled through the Gn or S3 interface to a destination SGSN or MME that does not support RIM the PDU is discarded without further action.

#### 8c.1.4.3 Address mirroring

The following address mirroring principles shall be applied:

- the serving BSS shall mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the received RAN-INFORMATION-REQUEST PDU into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE, respectively, of the related RAN-INFORMATION PDU(s);
- the controlling BSS shall mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the RAN-INFORMATION PDU to be acknowledged into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE, respectively, of the related RAN-INFORMATION-ACK PDU;
- the BSS having identified an error at the RIM protocol level in a received RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU shall mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the erroneous PDU into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE, respectively, of the RAN-INFORMATION-ERROR PDU;
- the controlling BSS having identified an error at application level in a received PDU shall mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the RAN-INFORMATION PDU which carried the erroneous application information into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE, respectively, of the RAN-INFORMATION-APPLICATION-ERROR PDU.

### 8c.1.5 In-order delivery and reliable transfer - RSN


#### 8c.1.5.1 General

A BSS shall allocate a RIM Sequence Number (RSN) to any RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION PDU or RAN-INFORMATION-APPLICATION-ERROR PDU sent by this BSS. The purpose of the RSN is twofold:

#### 3GPP TS 48.018 version 9.0.0 Release 9

- to assess whether a RAN-INFORMATION-REQUEST PDU or a RAN-INFORMATION PDU received for a given RIM association is providing up-to-date information or is outdated if having been overtaken by a PDU received previously;
- to identify the PDU acknowledged with a RAN-INFORMATION-ACK PDU or reported in a RAN-INFORMATION-ERROR PDU.

For the purpose of comparing any RSN value to a given RSN X, the RSN numbering space is halved in two equal parts (see figure 8c.1) located on either sides of RSN X, the half part "below" RSN X (modulo RSN MAX+1) defining the RSN values "older" than RSN X, the half part "above" (modulo RSN MAX+1) RSN X defining the RSN values "newer" than RSN X.

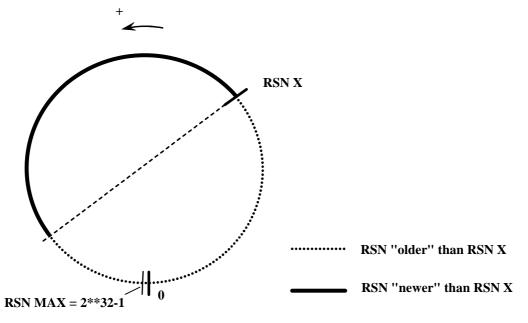



#### 8c.1.5.2 Allocating RSN values at the sending BSS

The RSN allocated to a RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION PDU or RAN-INFORMATION-APPLICATION-ERROR PDU shall be greater (modulo 2\*\*32) than the RSN value allocated to the previous PDU of the same type sent for this association. In case a given PDU needs to be resent, this PDU may be re-issued with either the same RSN value or an increased RSN value (modulo 2\*\*32).

NOTE: The RSN values allocated to two different PDUs sent successively for a given RIM association need not be consecutive (e.g. the RSN values could be uniquely allocated for a given application or within the whole BSS). However, in order to avoid RSN values depletion, the sending BSS should allocate the next higher RSN value (modulo 2\*\*32) to the next PDU to be sent.

To allow a receiving entity to assess whether two PDUs are received in the same relative order they have been sent or not, the difference between the RSN values allocated to those two PDUs should not exceed an RSN window size of  $2^{**31}$  (see sub-clause 8c.1.5.3).

NOTE: In order to cope with RSN values outside the RSN window for a given RIM association, the relevant RIM procedures might be triggered on a timely basis for advancing the RSN window.

#### 8c.1.5.3 Comparing RSN values at the receiving BSS

Let PDU1 and PDU2 be two PDUs received at the BSS and related to the same RIM association, PDU1 is considered as having been sent earlier than PDU2 if the difference between the associated RSNs is less than an RSN window size of  $2^{**31}$  (see sub-clause 8c.1.5.2), i.e.:

(RSN2 - RSN1) mod (2\*\*32) < 2\*\*31

# 8c.1.6 RIM Protocol Version Number

The *RIM Protocol Version Number* Information Element may be included in a RIM PDU. The *RIM Protocol Version Number* IE indicates which version of the RIM protocol is in use in the BSS having issued the PDU. If this Information Element is omitted, the behaviour of the receiving BSS should be the same as if the value of the *RIM Protocol Version Number* IE was "Version 1".

Only "Version 1" is defined in the present version of the specification.

In case the protocol version of the receiving BSS is lower than the version of the sending BSS, and unless otherwise specified in the present specification, the general rules of the BSSGP protocol apply and any unknown parameter shall be ignored.

# 8c.2 RIM procedures

### 8c.2.1 General

The RAN Information Request procedure is initiated by an application in the controlling BSS when it either requires information or wants to stop the transmission of information from a remote peer entity of the same application in the serving BSS. The application on the controlling side indicates the type of operation (Multiple Reports, Single Report, Stop) to the peer entity.


The RAN Information Send procedure is used to transfer application information between two entities of the same application in two BSSs via the core network.

The RAN Information Application Error procedure is initiated by an application in the controlling BSS to transfer application error information to the peer application entity of the same application in the serving BSS.

The RAN Information Error procedure is initiated by the RIM entity in the controlling or the serving BSS to transfer error information to the RIM entity in the peer BSS.

# 8c.2.2 RAN Information Request procedure

#### 8c.2.2.1 RAN Information Request/Single Report procedure



#### Figure 8c.2.2.1: RAN Information Request/Single Report Procedure

8c.2.2.1.1 Initiation by the controlling BSS

Upon initiation of the procedure, the controlling BSS shall:

1> set the content of the RAN-INFORMATION-REQUEST/Single Report PDU as follows:

2> set the PDU type IE, the Destination Cell Identifier IE and the Source Cell Identifier IE;

- 2> set the content of the *RIM Container* IE as follows:
  - 3> set the *RIM Application Identity* IE and the *RIM Sequence Number* IE;
  - 3> set the *PDU Type Extension* field in the *RIM PDU Indications* IE to "RAN-INFORMATION-REQUEST/Single Report";
  - 3> set the *RIM Protocol Version Number* IE if necessary (see sub-clause 8c.1.6);
  - 3> include the Application Container IE according to the requirements of the application;
- 1> send the RAN-INFORMATION-REQUEST/Single Report PDU;

1 >start T(RIR);

#### 8c.2.2.1.2 Reception of a valid RAN-INFORMATION-REQUEST/Single Report PDU by the serving BSS

Upon reception of a valid RAN-INFORMATION-REQUEST/Single Report PDU as defined in sub-clause 8c.3.2 the serving BSS shall:

- 1> set the content of the RAN-INFORMATION/Single Report PDU as follows:
  - 2> set the PDU type IE; mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION-REQUEST/Single Report PDU respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION/Single Report PDU;
  - 2> set the content of the *RIM Container* IE as follows:
    - 3> set the *RIM Application Identity* IE as required by the application;
    - 3> set the *RIM Sequence Number* IE and, if necessary, the *RIM Protocol Version Number* IE (see sub-clause 8c.1.6);
    - 3> set the ACK indicator in the RIM PDU Indications IE to "No ACK requested";
    - 3> set the PDU Type Extension field in the RIM PDU Indications IE to "RAN-INFORMATION/Single Report";
    - 3> include either the RAN-INFORMATION *Application Container* IE or the *Application Error Container* IE according to the requirements of the application;

1> send the RAN-INFORMATION/Single Report PDU to the controlling BSS.

# 8c.2.2.1.3 Reception of a valid RAN-INFORMATION/Single Report PDU by the controlling BSS

Upon reception of a valid RAN-INFORMATION/Single Report PDU as defined in sub-clause 8c.3.2 the controlling BSS shall:


- 1> stop T(RIR) for this RIM association;
- 1> deliver the relevant information to the application;

and the procedure ends.

#### 8c.2.2.1.4 Expiration of T(RIR) in the controlling BSS

If T(RIR) expires the controlling BSS shall as an implementation option either inform the application that the procedure has failed or restart the RAN Information Request/Single Report procedure as described in sub-clause 8c.2.2.1.1.

#### 8c.2.2.2 RAN Information Request/Multiple Report procedure

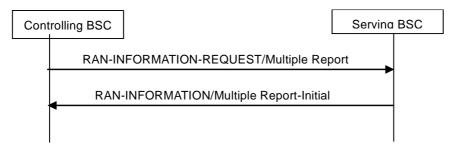

#### Figure 8c.2.2.2: Successful RAN Information Request/Multiple Report Procedure

#### 8c.2.2.2.1 Initiation by the controlling BSS

Upon initiation of the procedure, the controlling BSS shall:

1> set the content of the RAN-INFORMATION-REQUEST/Multiple Report PDU as follows:

2> set the PDU type IE, the Destination Cell Identifier IE and the Source Cell Identifier IE;

- 2> set the content of the *RIM Container* IE as follows:
  - 3> set the *RIM Application Identity* IE and the *RIM Sequence Number* IE;
  - 3> set the *PDU Type Extension* field in the *RIM PDU Indications* IE to "RAN-INFORMATION-REQUEST/Multiple Report";
  - 3> set the *RIM Protocol Version Number* IE if necessary (see sub-clause 8c.1.6);
  - 3> include the Application Container IE according to the requirements of the application;
- 1> send the RAN-INFORMATION-REQUEST/Multiple Report PDU;

1> Start T(RIR);

# 8c.2.2.2.2 Reception of a valid RAN-INFORMATION-REQUEST/Multiple Report PDU by the serving BSS

Upon reception of a valid RAN-INFORMATION-REQUEST/Multiple Report PDU as defined in sub-clauses 8c.3.2 the serving BSS shall:

1> if MULTIPLE\_REPORTING\_ONGOING is set to TRUE for this RIM association and if the received RAN-INFORMATION-REQUEST/Multiple Report PDU is considered as having been sent earlier (see sub-clause 8c.1.5) than the PDU whose RSN is stored in MULTIPLE\_REPORT\_SETTING\_RSN, then:

2> discard the PDU without further actions and the procedure ends;

1> otherwise:

- 2> set the MULTIPLE\_REPORTING\_ONGOING variable to TRUE for this RIM association;
- 2> store the RIM Sequence Number IE value of the received PDU in the MULTIPLE\_REPORT\_SETTING\_RSN variable;
- 2> set the content of the RAN-INFORMATION/Initial Multiple Report PDU as follows:
  - 3> set the PDU type IE; mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION-REQUEST/Multiple Report PDU respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION/Initial Multiple Report PDU;

- 3> set the content of the *RIM Container* IE as follows:
  - 4> set the *RIM Application Identity* IE as required by the application;
  - 4> set the *RIM Sequence Number* IE and, if necessary, the *RIM Protocol Version Number* IE (see subclause 8c.1.6);
  - 4> set the ACK indicator in the RIM PDU Indications IE to "No ACK requested";
  - 4> set the PDU Type Extension field in the RIM PDU Indications IE to "RAN-INFORMATION/Initial Multiple Report";
  - 4> include either the RAN-INFORMATION *Application Container* IE or the *Application Error Container* IE according to the requirements of the application;
- 2> send the RAN-INFORMATION/Initial Multiple Report PDU.

#### 8c.2.2.2.3 Reception of a valid RAN-INFORMATION PDU/Initial Multiple Report PDU by the controlling BSS

Upon reception of a valid RAN-INFORMATION/Initial Multiple Report PDU as defined in sub-clause 8c.3.2 the controlling BSS shall:

1> stop T(RIR) for this RIM association;

1> deliver the relevant information to the application;

and the procedure ends.

#### 8c.2.2.2.4 Expiration of T(RIR) in the controlling BSS

If T(RIR) expires the controlling BSS shall as an implementation option either inform the application that the procedure has failed or restart the RAN Information Request/Multiple Report procedure as described in sub-clause 8c.2.2.2.1.

#### 8c.2.2.3 RAN Information Request/Stop procedure

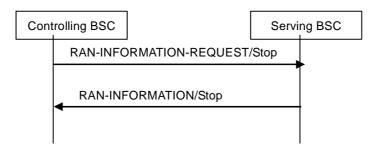


Figure 8c.2.2.3: RAN Information Request/Stop Procedure

8c.2.2.3.1 Initiation by the controlling BSS

Upon initiation of the procedure, the controlling BSS shall:

- 1> set the content of the RAN-INFORMATION-REQUEST/Stop PDU as follows:
- 2> set the PDU type IE, the Destination Cell Identifier IE and the Source Cell Identifier IE;
- 2> set the content of the *RIM Container* IE as follows:
  - 3> set the *RIM Application Identity* IE and the *RIM Sequence Number* IE;
  - 3> set the *PDU Type Extension* field in the *RIM PDU Indications* IE to "RAN-INFORMATION-REQUEST/Stop";

- 3> set the *RIM Protocol Version Number* IE if necessary (see sub-clause 8c.1.6);
- 3> include the *Application Container* IE according to the requirements of the application;

1> send the RAN-INFORMATION-REQUEST/Stop PDU;

1> start T(RIR).

# 8c.2.2.3.2 Reception of a valid RAN-INFORMATION-REQUEST/Stop PDU by the serving BSS

Upon reception of a valid RAN-INFORMATION-REQUEST/Stop PDU as defined in sub-clause 8c.3.2, the serving BSS shall:

- 1> if MULTIPLE\_REPORTING\_ONGOING is set to TRUE for this RIM association and if the received RAN-INFORMATION-REQUEST/Stop PDU is considered as having been sent earlier (see sub-clause 8c.1.5) than the PDU whose RSN is stored in MULTIPLE\_REPORT\_SETTING\_RSN, then:
  - 2> discard the PDU without further actions and the procedure ends;
- 1> otherwise:
  - 2> set the MULTIPLE\_REPORTING\_ONGOING variable to FALSE for this RIM association;
  - 2> set the content of the RAN-INFORMATION/Stop as follows:
    - 3> set the PDU type IE; mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION-REQUEST/Stop PDU respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION/Stop PDU;
    - 3> set the content of the *RIM Container* IE as follows:
      - 4> set the *RIM Application Identity* IE as required by the application;
      - 4> set the *RIM Sequence Number* IE and, if necessary, the *RIM Protocol Version Number* IE (see subclause 8c.1.6);
      - 4> set the ACK indicator in the RIM PDU Indications IE to "No ACK requested";
      - 4> set the PDU Type Extension field in the RIM PDU Indications IE to "RAN-INFORMATION/Stop";
      - 4> include either the *Application Container* IE or the *Application Error Container* IE according to the requirements of the application;

2> send the RAN-INFORMATION/Stop PDU.

#### 8c.2.2.3.3 Reception of a valid RAN-INFORMATION/Stop PDU by the controlling BSS

Upon reception of a valid RAN-INFORMATION/Stop PDU as defined in sub-clause 8c.3.2 the controlling BSS shall:

- 1> stop T(RIR) for this RIM association;
- 1> deliver the relevant information to the application;

and the procedure ends.

#### 8c.2.2.3.4 Expiration of T(RIR) in the controlling BSS

If T(RIR) expires the controlling BSS shall as an implementation option either inform the application that the procedure has failed or restart the RAN Information Request/Stop procedure as described in sub-clause 8c.2.2.3.1.

### 8c.2.3 RAN Information Send procedure

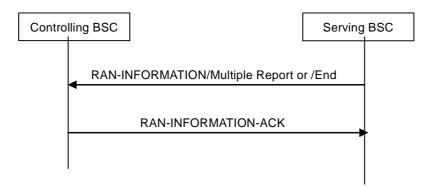


Fig 8c.2.3: Acknowledged RAN Information Send procedure

#### 8c.2.3.1 Initiation by the serving BSS

If multiple reporting has been requested for a given RIM association (i.e. the MULTIPLE\_REPORTING\_ONGOING variable is set to TRUE), the RAN Information Send procedure is initiated by the application in the serving BSS either to send updated information (using the RAN-INFORMATION/Multiple Report PDU) or to indicate that multiple reporting has been deactivated on the serving BSS side (using the RAN-INFORMATION/End PDU).

Upon initiation of the procedure, the serving BSS shall:

- 1> set the content of the RAN-INFORMATION PDU as follows:
  - 2> set the PDU type IE, mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION-REQUEST/Multiple Report PDU that is identified by the RSN stored in the MULTIPLE\_REPORT\_SETTING\_RSN variable respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION PDU;
  - 2> set the content of the *RIM Container* IE as follows:
    - 3> mirror the *RIM Application Identity* IE value of the RAN-INFORMATION-REQUEST/Multiple Report PDU that is identified by the RSN stored in the MULTIPLE\_REPORT\_SETTING\_RSN variable into the *RIM Application Identity* IE of the RAN-INFORMATION PDU;
    - 3> set the *RIM Sequence Number* IE and, if necessary, the *RIM Protocol Version Number* IE (see sub-clause 8c.1.6);
    - 3> set the *PDU Type Extension* field in the *RIM PDU Indications* IE to "RAN-INFORMATION/Multiple Report" or "RAN-INFORMATION/End" as required by the application;
    - 3> for a RAN-INFORMATION/Multiple Report PDU, set the *ACK* indicator to the value required by the application; for a RAN-INFORMATION/End PDU, set the *ACK* indicator to "ACK requested";
    - 3> set the Application Container IE according to the requirements of the application;
- 1> if the RAN-INFORMATION PDU is a RAN-INFORMATION/End (multiple reporting deactivated), set the MULTIPLE\_REPORTING\_ONGOING variable to FALSE;
- 1> send the RAN-INFORMATION PDU;
- 1> if the ACK indicator has been set to "ACK requested", start a T(RI) instance for this RAN-INFORMATION PDU;
- 1> otherwise the procedure ends.

#### 8c.2.3.2 Reception of a valid RAN-INFORMATION PDU by the controlling BSS

Upon reception of a valid RAN-INFORMATION/Multiple Report or RAN-INFORMATION/End PDU as defined in sub-clause 8c.3.2 the controlling BSS shall:

- 1> deliver the relevant information to the application;
- 1> if the *ACK* indicator in the *RIM PDU Indications* IE included in the RIM container of the RAN-INFORMATION PDU is set to "ACK requested", the controlling BSS shall:
  - 2> set the content of the RAN-INFORMATION-ACK PDU as follows:
    - 3> set the PDU type IE; mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION PDU respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION-ACK PDU;
    - 3> set the content of the *RIM Container* IE as follows:
      - 4> mirror the *RIM Sequence Number* IE value and the *RIM Application Identity* IE value included in the RIM container of the RAN-INFORMATION PDU respectively into the *RIM Sequence Number* IE and the *RIM Application Identity* IE of the RAN-INFORMATION-ACK PDU;
      - 4> set, if necessary, the *RIM Protocol Version Number* IE (see sub-clause 8c.1.6);
- NOTE: If the RAN-INFORMATION PDU is a RAN-INFORMATION/End, the controlling BSS shall consider that multiple reporting is deactivated for this RIM association in the serving BSS.
  - 2> send the RAN-INFORMATION-ACK PDU.

1> otherwise, the procedure ends.

#### 8c.2.3.3 Reception of a valid RAN-INFORMATION-ACK PDU in the serving BSS

Upon reception of a valid RAN-INFORMATION-ACK PDU as defined in sub-clause 8c.3.2 the serving BSS shall:

- 1> if the *RIM Sequence Number* IE value contained in the RAN-INFORMATION-ACK PDU matches the RSN of the RAN-INFORMATION PDU having initiated the procedure then:
  - 2> stop the T(RI) instance corresponding to the acknowledged PDU;

and the procedure ends.

#### 8c.2.3.4 Expiration of T(RI) in the serving BSS

Upon expiration of the T(RI) instance the serving BSS shall, as an implementation option, either inform the application that the procedure has failed or restart the RAN Information Send procedure as described in sub-clause 8c.2.3.1.

#### 8c.2.4 RAN Information Application Error procedure

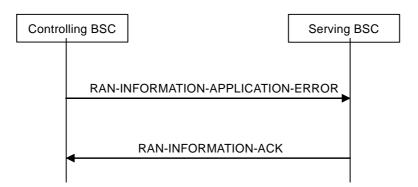


Fig 8c.2.4: RAN Information Application Error procedure

### 8c.2.4.1 Initiation by the controlling BSS

Upon initiation of the procedure, the controlling BSS shall:

- 1> set the content of the RAN-INFORMATION-APPLICATION-ERROR PDU as follows:
  - 2> set the PDU type IE, mirror the Source Cell Identifier IE value and the Destination Cell Identifier IE value of the RAN-INFORMATION PDU with the erroneous application container respectively into the Destination Cell Identifier IE and the Source Cell Identifier IE of the RAN-INFORMATION-APPLICATION-ERROR PDU;
  - 2> set the content of the *RIM Container* IE as follows:
    - 3> set the *RIM Application Identity* IE and the *RIM Sequence Number* IE;
    - 3> set the *RIM Protocol Version Number* IE if necessary (see sub-clause 8c.1.6);
    - 3> set the ACK indicator in the RIM PDU Indications IE according to the requirements of the application;
    - 3> include the Application Error Container IE according to the requirements of the application
- 1> send the RAN-INFORMATION-APPLICATION-ERROR PDU to the serving BSS;
- 1> if the *ACK* indicator has been set to "ACK requested", start a T(RIAE) instance for this RAN-INFORMATION-APPLICATION-ERROR PDU;
- 1> otherwise the procedure ends.

# 8c.2.4.2 Reception of a valid RAN-INFORMATION-APPLICATION-ERROR PDU by the serving BSS

Upon reception of a valid RAN-INFORMATION-APPLICATION-ERROR PDU as defined in sub-clause 8c.3.2 the serving BSS shall:

- 1> deliver the relevant information to the application;
- 1> if the *ACK* indicator in the *RIM PDU Indications* IE included in the RIM container of the RAN-INFORMATION-APPLICATION-ERROR PDU is set to "ACK requested", then the serving BSS shall:
  - 2> set the content of the RAN-INFORMATION-ACK PDU as follows:
    - 3> set the *PDU type* IE, mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the RAN-INFORMATION-APPLICATION-ERROR PDU respectively into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE of the RAN-INFORMATION-ACK PDU;
    - 3> set the content of the *RIM Container* IE as follows:
      - 4> mirror the *RIM Sequence Number* IE value and the *RIM Application Identity* IE value included in the RIM container of the RAN-INFORMATION-APPLICATION-ERROR PDU respectively into the *RIM Sequence Number* IE and the *RIM Application Identity* IE of the RAN-INFORMATION-ACK PDU;
      - 4> set the *RIM Protocol Version Number* IE if necessary (see sub-clause 8c.1.6);
  - 2> send the RAN-INFORMATION-ACK PDU.

1> otherwise, the procedure ends.

#### 8c.2.4.3 Reception of a valid RAN-INFORMATION-ACK PDU by the controlling BSS

Upon reception of a valid RAN-INFORMATION-ACK PDU as defined in sub-clause 8c.3.2, the controlling BSS shall:

1> if the *RIM Sequence Number* IE value contained in the RAN-INFORMATION-ACK PDU matches the RSN of the RAN-INFORMATION-APPLICATION-ERROR PDU having initiated the procedure

2> then stop the T(RIAE) instance corresponding to the acknowledged PDU;

1> else discard the PDU without further action;

and the procedure ends.

#### 8c.2.4.4 Expiration of T(RIAE) in the controlling BSS

At the expiration of the T(RIAE) instance corresponding to the RAN-INFORMATION-APPLICATION-ERROR PDU sent previously by the controlling BSS, the controlling BSS shall, as an implementation option, either inform the application that the procedure has failed or restart the RAN Information Application Error procedure as described in sub-clause 8c.2.4.1.

### 8c.2.5 RAN Information Error procedure

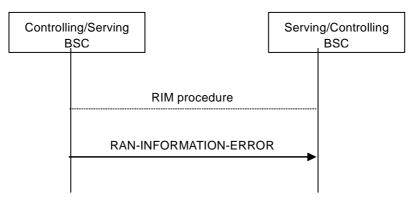


Fig 8c.2.5: RAN Information Error procedure

The RAN Information Error procedure is initiated by the RIM in the source BSS (controlling or serving) to transfer error information to the RIM entity in the associated BSS;

The procedure is described in sub-clause 8c.3.4.

### 8c.3 Abnormal conditions

### 8c.3.0 General

Two levels of abnormal conditions are defined for the RIM function:

- the abnormal conditions encountered at the BSSGP level as described in sub-clause 8c.3.1, affecting the routing mechanisms and the related IEs in the RIM PDUs;
- the abnormal conditions encountered in the RIM container as described in sub-clauses 8c.3.2 and 8c.3.3.

The errors encountered in the application container are handled by the application and are made known to the peer application entity by including the *Application Error container* IE.

### 8c.3.1 Abnormal conditions at the BSSGP level

#### 8c.3.1.1 General

The general protocol error handling as defined in section 9 applies.

However, the RIM containers being defined as general containers for passing field elements transparently between BSSs via the core network are not subject to error handling at the BSSGP level but only at the RIM protocol level (see sub-clause 8c.3.2).

Additionally the abnormal conditions defined in the following sub-clauses apply.

#### 8c.3.1.2 RIM addressing error in BSS

If a BSS receives from an SGSN a RIM PDU with a *Destination Cell Identifier* IE value which does not match the cell identifier of any of its parented cells, the PDU shall be discarded and a STATUS PDU with the cause value set to "Unknown Destination address" shall be sent back to the SGSN.

#### 8c.3.1.3 RIM addressing error in the CN

If an SGSN receives from a BSS a RIM PDU with an invalid destination address, the PDU shall be discarded and a STATUS PDU with the cause value set to "Unknown Destination address" shall be sent back to the BSS.

#### 8c.3.1.4 RIM PDU addressed to a BSS not supporting RIM

If an SGSN receives a RIM PDU addressed to a parented BSS that does not support the RIM procedures, the PDU shall be discarded without further action.

### 8c.3.2 Abnormal conditions encountered in the RIM container

#### 8c.3.2.1 Unknown RIM Application Identity

If the RIM container included in a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU contains an unknown value in the *RIM Application Identity* IE or if the RIM application is disabled when receiving a RAN-INFORMATION-REQUEST PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU with the *RIM Cause* IE set to "Unknown RIM Application Identity or RIM application disabled" back to the originating BSS (see sub-clause 8c.3.4.2) and discard the received PDU.

If the RIM container included in a RAN-INFORMATION-ERROR PDU contains an unknown value in the *RIM Application Identity* IE, the BSS shall discard the RIM PDU without further action.

#### 8c.3.2.2 Erroneous PDU Type Extension field

If the *PDU Type Extension* field in the *RIM PDU Indications* IE included in the RIM container of a RAN-INFORMATION-REQUEST PDU does not indicate "RAN-INFORMATION-REQUEST/Multiple Report", "RAN-INFORMATION-REQUEST/Stop" or "RAN-INFORMATION-REQUEST/Single Report", the serving BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "PDU not compatible with the feature set" back to the originating BSS (see sub-clause 8c.3.4.2) and shall discard the received PDU.

If the *PDU Type Extension* field in the *RIM PDU Indications* IE included in the RIM container of a RAN-INFORMATION PDU does not indicate "RAN-INFORMATION/Single Report", "RAN-INFORMATION/Multiple Report", "RAN-INFORMATION/Initial Multiple Report", "RAN-INFORMATION/Stop" or "RAN-INFORMATION/End", the serving BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "PDU not compatible with the feature set" back to the originating BSS (see sub-clause 8c.3.4.2) and shall discard the received PDU.

#### 8c.3.2.3 Missing conditional IE

If an expected conditional Information Element is not included in the RIM container of a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Missing Conditional IE" back to the originating BSS (see sub-clause 8c.3.4.2) and discard the received PDU.

If an expected conditional Information Element is not included in the RIM container of a RAN-INFORMATION-ERROR PDU, the BSS shall discard the received PDU without further action.

#### 8c.3.2.4 Missing mandatory IE

If a mandatory Information Element is not included in the RIM container of a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Missing Mandatory IE" back to the originating BSS (see sub-clause 8c.3.4.2) and discard the received PDU.

If a mandatory Information Element is not included in the RIM container of a RAN-INFORMATION-ERROR PDU, the BSS shall discard the received PDU without further action.

#### 8c.3.2.5 Syntactical error in an expected conditional IE

If a syntactical error is detected in an expected conditional Information Element included in the RIM container of a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Conditional IE error" back to the originating BSS (see sub-clause 8c.3.4.2) and discard the received PDU.

If a syntactical error is detected in an expected conditional Information Element included in the RIM container of a RAN-INFORMATION-ERROR PDU, the BSS shall discard the received PDU without further action.

#### 8c.3.2.6 Syntactical error in a mandatory IE

If a syntactical error is detected in a mandatory IE included in the RIM container of a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Invalid mandatory information" back to the originating BSS (see subclause 8c.3.4.2) and discard the received PDU.

For this rule the following exceptions apply:

- unknown RIM Application Identity IE (see sub-clause 8c.3.2.1); or
- erroneous *PDU Type Extension* field (see sub-clause 8c.3.2.2)

If a syntactical error is detected in a mandatory IE included in the RIM container of a RAN-INFORMATION-ERROR PDU, the BSS shall discard the received PDU without further action.

#### 8c.3.2.7 Unexpected conditional IE

If an unexpected conditional Information Element is received in the RIM container of a RAN-INFORMATION PDU, RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION-ACK PDU or RAN-INFORMATION-APPLICATION-ERROR PDU, the BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Unexpected Conditional IE" back to the originating BSS (see subclause 8c.3.4.2) and discard the received PDU.

If an unexpected conditional Information Element is received in the RIM container of a RAN-INFORMATION-ERROR PDU, the BSS shall discard the received PDU without further action.

#### 8c.3.2.8 Containers with out-of-sequence information elements

The receiving BSS may accept RIM containers that include information elements that do not appear to be in the correct sequence. Elements that occur more than once in a RIM container shall be assumed to have been transmitted in the correct order. Recipients that do not accept out of sequence information elements shall regard the RIM container as containing unexpected and/or missing information elements and follow the procedures defined in the rest of this subclause 8c.3.2.

#### 8c.3.2.9 Container with semantically incorrect content

When any IE with semantically incorrect contents is received within a RIM container, the receiving BSS shall react according to the relevant protocol specification. If however no such reactions are specified, the receiving BSS shall

ignore that IE and treat the rest of the RIM container. If the rest of the RIM container can no longer be handled because this IE was ignored then the receiving BSS shall send a RAN-INFORMATION-ERROR PDU containing the complete received PDU and with the *RIM Cause* IE set to "Semantically incorrect PDU" back to the originating BSS (see subclause 8c.3.4.2) and discard the received PDU.

### 8c.3.3 Unexpected RIM PDU

If a BSS receives a RIM PDU in a case not covered by the RIM procedures specified in sub-clause 8c.2, it shall discard the RIM PDU without further action.

### 8c.3.4 RIM error reporting

#### 8c.3.4.1 General

A BSS diagnosing any of the abnormal cases identified in sub-clause 8c.3.2 in a received RIM PDU shall inform the originating BSS by sending in return a RAN-INFORMATION-ERROR PDU as described in sub-clause 8c.3.4.2.

The tasks to be performed upon reception of the RAN-INFORMATION-ERROR PDU are described in sub-clause 8c.3.4.3.

#### 8c.3.4.2 Sending of a RAN-INFORMATION-ERROR PDU

A BSS receiving an erroneous RIM PDU according to sub-clause 8c.3.2 shall:

- 1> set the *PDU type* IE, mirror the *Source Cell Identifier* IE value and the *Destination Cell Identifier* IE value of the erroneous RIM PDU respectively into the *Destination Cell Identifier* IE and the *Source Cell Identifier* IE of the RAN-INFORMATION-ERROR PDU
- 1> set the content of *RIM Container* IE as follows:
  - 2> mirror the *RIM Application Identity* IE value of the erroneous RIM PDU into the *RIM Application Identity* IE in the *RIM Container* IE of the RAN-INFORMATION-ERROR PDU;
  - 2> set the RIM Cause IE and, if necessary, the RIM Protocol Version Number IE (see sub-clause 8c.1.6);
  - 2> include the complete erroneous RIM PDU in to the PDU in Error IE;

1> send the RAN-INFORMATION-ERROR PDU.

#### 8c.3.4.3 Reception of a RAN-INFORMATION-ERROR PDU in the BSS

Upon reception of an erroneous RAN-INFORMATION-ERROR PDU according to sub-clause 8c.3.2 the BSS shall discard the received PDU without further action.

The actions to be taken upon reception of a valid RAN-INFORMATION-ERROR PDU are an implementation-dependent option.

### 8c.4 RIM timers

The following RIM timers are defined:

- T(RIR) is used in the controlling BSS to control the reception of the response to a previously transmitted RAN-INFORMATION-REQUEST PDU.
   T(RI) is used in the serving BSS used to control the reception of the acknowledgement of a previously transmitted RAN-INFORMATION PDU.
   T(RIAE) is used in the controlling BSS used to control the reception of the acknowledgement of a previously transmitted RAN-INFORMATION PDU.
- T(RIAE) is used in the controlling BSS used to control the reception of the acknowledgement of a previously transmitted RAN-INFORMATION-APPLICATION-ERROR PDU.

Timer	Start	Stop	Action at expiry
T(RIR)	Transmission of a RAN- INFORMATION- REQUEST/Multiple Report PDU	Reception of the answering RAN- INFORMATION/Initial Multiple Report	Either (implementation option) inform the application that the procedure has failed or restart the procedure
	Transmission of a RAN- INFORMATION-REQUEST/Single Report PDU	Reception of the answering RAN- INFORMATION/Single Report	Either (implementation option) inform the application that the procedure has failed or restart the procedure
	Transmission of a RAN- INFORMATION-REQUEST/Stop PDU	Reception of the answering RAN- INFORMATION/Stop	Either (implementation option) inform the application that the procedure has failed or restart the procedure
T(RI)	Transmission of a RAN- INFORMATION/Multiple Report or RAN-INFORMATION/End PDU	Reception of the answering RAN- INFORMATION-ACK	Either (implementation option) inform the application that the procedure has failed or restart the procedure
T(RIAE)	Transmission of a RAN- INFORMATION-APPLICATION- ERROR PDU	Reception of the answering RAN- INFORMATION-ACK	Either (implementation option) inform the application that the procedure has failed or restart the procedure

#### Table 8c.4: RIM timers

### 8c.5 Action upon deletion of a cell in a BSS

### 8c.5.0 General

The deletion of a cell in a BSS should trigger the actions described in this sub-clause to ensure the proper operation of the RIM procedures for RIM associations related to this cell.

### 8c.5.1 Actions due to the deletion of the cell

If the deleted cell has to report to one or more controlling BSS(s), the serving BSS parenting the deleted cell shall trigger a RAN Information Send procedure to inform each of the corresponding controlling BSS(s) that multiple reporting has been deactivated by the sending of a RAN-INFORMATION/End PDU.

The controlling BSS parenting the deleted cell may also decide that, as a consequence of the deletion of this cell, some multiple reports previously requested from some cells parented by other BSS(s) are no longer needed and shall trigger the relevant RAN Information Request/Stop procedure.

# 8c.5.2 Additional actions in the case the deleted cell is used as a source cell by RIM

If the cell identifier of the cell being deleted has been used as the *Source Cell Identifier* IE value in a previous RAN-INFORMATION-REQUEST/Multiple report PDU, the deletion of this cell shall trigger the following additional actions to update this information in the serving BSS, as the *Source Cell Identifier* IE is used by the serving BSS to address the controlling BSS (address mirroring - see sub-clause 8c.1.4.3):

- The controlling BSS parenting this cell shall trigger a RAN Information Request/Stop procedure for each of the involved cells in the serving BSS;
- After the completion of this procedure the parenting BSS shall, if event-based multiple reporting is still needed from the involved cells, trigger further RAN Information Request/Multiple Report procedure(s) with a different cell identifier as *Source Cell Identifier* IE value.

### 8c.6 Specific requirements related to RIM applications

### 8c.6.0 General requirements

Any error condition detected in the *Application Error Container* IE included in the *RIM Container* IE of a valid RIM PDU shall not be reported to the peer application entity.

Any error condition detected in the *Application Container* IE included in the *RIM Container* IE of an erroneous RIM PDU shall not trigger a RAN Information Application Error procedure.

A controlling BSS shall not send another RAN-INFORMATION-REQUEST PDU for the same association before the first RAN-INFORMATION-REQUEST PDU has been acknowledged or before T(RIR) associated to this request has expired.

### 8c.6.1 Requirements related to the NACC RIM application

The rules specified in this sub-clause apply when the *RIM Application Identity* IE is set to "Network Assisted Cell Change (NACC)":

- The RAN-INFORMATION-REQUEST PDU is used by a controlling BSS to request the system information required for NACC operation in the controlling BSS and related to a single cell parented by a serving BSS. The *Destination Cell Identifier* IE of the RAN-INFORMATION-REQUEST PDU shall be set to the value of the *Reporting Cell Identifier* field contained in the application container of the PDU.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION-REQUEST PDU.
- The RAN-INFORMATION PDU is used by a serving BSS to send the system information required for NACC operation (i.e. if a PBCCH is allocated in the cell, PSI1, a consistent set of PSI2 and PSI14 messages; if no PBCCH is allocated in the cell, SI3, SI13 and, if available, SI1 messages see 3GPP TS 4.060) related to a single reporting cell, to a controlling BSS.
- In the present specification, NACC between UTRAN and GERAN is restricted to the case of a controlling RNS and a serving BSS (i.e. assistance is provided for MSs moving from UTRAN to GERAN) and NACC between E-UTRAN and GERAN is restricted to the case of a controlling eNodeB and a serving BSS (i.e. assistance is provided for MSs moving from E-UTRAN to GERAN). The reporting cell located in the serving BSS is therefore always a GERAN cell and shall be addressed as such (RAI + CI) in the NACC application containers.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION PDU, except in the case of a RAN-INFORMATION/Initial Multiple Report PDU and of a RAN-INFORMATION/Single Report PDU, where the *Application Error Container* IE may be included instead.
- When multiple reports from a certain cell have been requested, the RAN-Information Send procedure shall be triggered every time the set of NACC related (packet) system information for this cell is changed; the NACC application shall request acknowledgements.
- The *Application Container* IE included in the *RIM container* IE of a RAN-INFORMATION/End PDU or of a RAN-INFORMATION/Stop PDU shall contain only the identity of the reporting cell.

### 8c.6.2 SI3 application

The rules specified in this sub-clause apply when the RIM Application Identity IE is set to "SI3":

- the RAN-INFORMATION-REQUEST PDU is used by a controlling BSS to request system information type 3 related to a single cell parented by a serving BSS. The *Destination Cell Identifier* IE of the RAN-INFORMATION-REQUEST PDU shall be set to the value of the *Reporting Cell Identifier* field contained in the application container of the PDU.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION-REQUEST PDU.

- The RAN-INFORMATION PDU is used by a serving BSS to send system information type 3 related to a single reporting cell, to a controlling BSS.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION PDU, except in the case of a RAN-INFORMATION/Initial Multiple Report PDU and of a RAN-INFORMATION/Single Report PDU, where the *Application Error Container* IE may be included instead.
- When multiple reports from a certain cell have been requested, the RAN-Information Send procedure shall be triggered every time the system information type 3 for this cell is changed; the SI3 application shall request acknowledgements.
- The *Application Container* IE included in the *RIM container* IE of a RAN-INFORMATION/End PDU or of a RAN-INFORMATION/Stop PDU shall contain only the identity of the reporting cell.

### 8c.6.3 MBMS data channel application

The rules specified in this sub-clause apply when the RIM Application Identity IE is set to "MBMS data channel":

- The RAN-INFORMATION-REQUEST PDU is used by a controlling BSS to request the information about the MBMS data channels established in a single cell controlled by a serving BSS. The *Destination Cell Identifier* IE of the RAN-INFORMATION-REQUEST PDU shall be set to the value of the *Reporting Cell Identifier* field contained in the application container of the PDU.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION-REQUEST PDU.
- The RAN-INFORMATION PDU is used by a serving BSS to send the information about the MBMS data channels established in a single reporting cell, to a controlling BSS.
- The presence of the *Application Container* IE is mandatory in the *RIM Container* IE of the RAN-INFORMATION PDU, except in the case of a RAN-INFORMATION/Initial Multiple Report PDU and of a RAN-INFORMATION/Single Report PDU, where the *Application Error Container* IE may be included instead.
- When multiple reports from a certain cell have been requested, the RAN-Information Send procedure shall be triggered every time the allocation of the MBMS data channel is changed (i.e. established, reconfigured, abnormally released) for any MBMS session ongoing in the reporting cell. The MBMS data channel application shall request acknowledgements. However the normal release (i.e. resulting from a MBMS-SESSION-STOP-REQUEST PDU received from the SGSN) of the MBMS data channel at the end of a session shall not trigger the RAN-Information Send procedure, but assumed implicitly as done at the end of the session by the the controlling BSS.
- The *Application Container* IE included in the *RIM container* IE of a RAN-INFORMATION/End PDU or of a RAN-INFORMATION/Stop PDU shall contain only the identity of the reporting cell.

## 8d Signalling procedures between MBMS SAPs

### 8d.1 General

Upon receiving an MBMS-SESSION-START-REQUEST PDU from the SGSN, if the BSS controls cells in any of the MBMS Service Areas in the MBMS service area list the BSS creates an MBMS Service Context, and acknowledges the SGSN using an MBMS-SESSION-START-RESPONSE PDU. More than one MBMS-SESSION-START-RESPONSE PDU can be sent from one BSS to the SGSN for the same MBMS-SESSION-START-REQUEST PDU.

Upon receiving an MBMS-SESSION-UPDATE-REQUEST PDU from the SGSN, the BSS updates the MBMS service area list for the ongoing MBMS broadcast service session and acknowledges the SGSN using an MBMS-SESSION-UPDATE-RESPONSE PDU. More than one MBMS-SESSION-UPDATE-RESPONSE PDU can be sent from one BSS to the SGSN for the same MBMS-SESSION-UPDATE-REQUEST PDU.

At the end of the MBMS Session the BSS receives an MBMS-SESSION-STOP-REQUEST PDU from the SGSN indicating that the MBMS Session can be released. The BSS acknowledges the request to end the MBMS Session by sending the MBMS-SESSION-STOP-RESPONSE PDU to the SGSN. See 3GPP TS 43.246 ([29]).

### 8d.2 MBMS Session Start

The BSS creates an MBMS Service Context if the BSS controls cells in the MBMS service area list upon reception of an MBMS-SESSION-START-REQUEST PDU from the SGSN.

If the data is received by the BSS and no MBMS bearer is established on the radio interface for that MBMS Session the BSS may buffer the data.

At reception of an MBMS-SESSION-START-REQUEST PDU that leads to an MBMS Service Context creation in the BSS, the BSS shall respond to the SGSN with an MBMS-SESSION-START-RESPONSE PDU with a Cause Value indicating that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN.

- The SGSN may include the *Allocation/Retention Priority* information element in the MBMS-SESSION-START-REQUEST PDU. If this information element is received and the BSS supports ARP handling, the BSS shall establish or modify the resources according to the values of the *Allocation/Retention Priority* IE (priority level, pre-emption indicators) and the resource situation as follows:
- The BSS shall consider the priority level of the requested MBMS bearer, when deciding on the resource allocation.
- The priority levels and the pre-emption indicators may (singularly or in combination) be used to determine whether the MBMS bearer establishment has to be performed unconditionally and immediately. If the requested MBMS bearer is marked as "may trigger pre-emption" and the resource situation requires so, the BSS may trigger the pre-emption procedure which may then cause the forced release of a lower priority bearer which is marked as "pre-emptable". Whilst the process and the extent of the pre-emption procedure is operator-dependent, the pre-emption indicators, if given in the MBMS-SESSION-START-REQUEST PDU, shall be treated as follows:
  - 1. If the *Pre-emption Capability* IE is set to "may trigger pre-emption", then this allocation request may trigger the pre-emption procedure. The BSS shall only pre-empt bearers (other MBMS bearers or MS specific bearers) with lower priority, in ascending order of priority.
  - 2. If the *Pre-emption Capability* IE is set to "shall not trigger pre-emption", then this allocation request shall not trigger the pre-emption procedure.
  - 3. If the *Pre-emption Vulnerability* IE is set to "pre-emptable", then this connection shall be included in the pre-emption process.
  - 4. If the *Pre-emption Vulnerability* IE is set to "not pre-emptable", then this connection shall not be included in the pre-emption process.
  - 5. If the *Priority Level* IE is set to "no priority" the given values for the *Pre-emption Capability* IE and *Pre-emption Vulnerability* IE shall not be considered. Instead the values "shall not trigger pre-emption" and "not pre-emptable" shall prevail.
- If the *Allocation/Retention Priority* IE is not given in the MBMS-SESSION-START-REQUEST PDU, the allocation request shall not trigger the pre-emption process and the connection may be pre-empted and considered to have the value "lowest" as priority level.
- The SGSN shall not include, and the BSS shall ignore, any queuing allowed indication in the *Allocation/Retention Priority* IE of the MBMS-SESSION-START-REQUEST PDU.

The *MBMS Session Repetition Number* IE shall be included in the MBMS-SESSION-START-REQUEST PDU in case the *MBMS Session Identity* IE is included in the same PDU (and vice versa). The *MBMS Session Repetition Number* IE allows the BSS to recognize retransmissions of a specific session of an MBMS bearer service. The value part of this IE may be used for e.g. deciding whether or not to initiate the counting procedure on a per cell basis (see 3GPP TS 44.018, 3GPP TS 44.060) or, in conjunction with the values of *Allocation/Retention Priority* IE, whether or not to establish an MBMS radio bearer for the session on a per cell basis.

#### 3GPP TS 48.018 version 9.0.0 Release 9

At reception of an MBMS-SESSION-START-REQUEST PDU with the same TMGI IE and MBMS Session Identity IE as an ongoing MBMS Service Context, the BSS shall respond to the SGSN with an MBMS-SESSION-START-RESPONSE PDU with a Cause Value indicating that data transfer has already been initiated on the Point-to-Multipoint BVC from another SGSN.

At reception of an MBMS-SESSION-START-RESPONSE PDU, the SGSN shall either start data transfer or not depending on the received Cause Value.


After transmission of the MBMS-SESSION-START-RESPONSE PDU, the BSS shall wait at least the time specified in the value part of the *Time to MBMS Data Transfer* IE included in the MBMS-SESSION-START-REQUEST PDU and at most a time exceeding by 5 seconds the value part of the *Time to MBMS Data Transfer* IE for the first reception of the associated data before the BSS validates whether or not there is another SGSN that previously has sent an MBMS-SESSION-START-REQUEST PDU.

If after the start of the data flow associated to an MBMS Service Context, the BSS does not receive data for at least 30 seconds and the BSS has not received the MBMS-SESSION-STOP-REQUEST PDU, the BSS validates whether or not there is another SGSN that previously has sent an MBMS-SESSION-START-REQUEST PDU.

If, in any of the two cases mentioned above, another SGSN has sent an MBMS-SESSION-START-REQUEST PDU, the BSS shall send an MBMS-SESSION-START-RESPONSE PDU to such an SGSN with a Cause Value indicating that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN. Otherwise, the BSS shall end the MBMS Service Context.

In any case, the BSS will send an MBMS-SESSION-START-RESPONSE PDU with a Cause Value indicating that the MBMS Service Context has been released due to interrupted data flow to the SGSN that previously has been ordered to perform data transfer.

If the BSS does not support any MBMS Service Area in the MBMS Service Area Identity List the BSS will send an MBMS-SESSION-START-RESPONSE PDU to the SGSN with Cause Value indicating that none of the listed MBMS Service Areas are supported by the BSS.

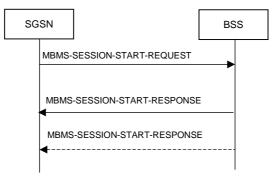

#### Figure 8d.2: MBMS Session Start procedure

### 8d.2.1 Abnormal Conditions

In any failure case in BSS the BSS may send an MBMS-SESSION-START-RESPONSE PDU including a Cause Value indicating the reason for the failure.

If an MBMS-SESSION-START-RESPONSE PDU is not received in response to an MBMS-SESSION-START-REQUEST PDU within T11 seconds, then the MBMS-SESSION-START-REQUEST PDU shall be repeated a maximum of MBMS-SESSION-START-REQUEST-RETRIES attempts. After MBMS-SESSION-START-REQUEST-RETRIES + 1 attempts the procedure is stopped and the O&M is informed.

### 8d.3 MBMS Session Stop

The SGSN may terminate an MBMS Session in the BSS by sending the MBMS-SESSION-STOP-REQUEST PDU to the BSS. The SGSN shall include the *MBMS Stop Cause* IE in the MBMS-SESSION-STOP-REQUEST PDU to indicate to the BSS if the MBMS Session termination has been ordered by an upstream node or if the SGSN itself has

decided to terminate the MBMS Session (due to e.g. that the last MS that has an active MBMS UE Context for the MBMS Session within the SGSN has left the routing area(s) handled by the BSS).

The BSS ends an MBMS Service Context upon reception of an MBMS-SESSION-STOP-REQUEST PDU, including the *MBMS Stop Cause* IE indicating that an upstream node is terminating the MBMS Session, from the SGSN and acknowledges with an MBMS-SESSION-STOP-RESPONSE PDU.

At reception of an MBMS-SESSION-STOP-REQUEST PDU including the *MBMS Stop Cause* IE indicating that the SGSN is terminating the MBMS Session, the BSS shall validate whether or not there is another SGSN that previously has sent an MBMS-SESSION-START-REQUEST PDU or, in case of an MBMS broadcast service session, an MBMS-SESSION-UPDATE-REQUEST PDU.

If another SGSN has sent an MBMS-SESSION-START-REQUEST PDU or an MBMS-SESSION-UPDATE-REQUEST PDU, the BSS shall send an MBMS-SESSION-START-RESPONSE PDU or an MBMS-SESSION-UPDATE-RESPONSE PDU, respectively, to such an SGSN with a Cause Value indicating that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN. Otherwise, the BSS shall end the MBMS Service Context. The BSS shall then acknowledge the MBMS-SESSION-STOP-REQUEST PDU by sending an MBMS-SESSION-STOP-RESPONSE PDU to the SGSN.

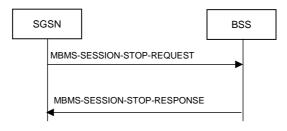


Figure 8d.3: MBMS Session Stop procedure

### 8d.3.1 Abnormal Conditions

If an MBMS-SESSION-STOP-RESPONSE PDU is not received in response to an MBMS-SESSION-STOP-REQUEST PDU within T11 seconds, then the MBMS-SESSION-STOP-REQUEST PDU shall be repeated a maximum of MBMS-SESSION-STOP-REQUEST-RETRIES attempts. After MBMS-SESSION-STOP-REQUEST-RETRIES + 1 attempts the procedure is stopped and the O&M is informed.

### 8d.4 MBMS Session Update

Upon reception of an MBMS-SESSION-UPDATE-REQUEST PDU from the SGSN for an ongoing MBMS broadcast service session, the BSS creates an MBMS Service Context if the BSS controls cells in the MBMS service area list and there is no ongoing MBMS Service Context identified with the same *TMGI* IE and, if available, *MBMS Session Identity* IE in the BSS.

Upon reception of an MBMS-SESSION-UPDATE-REQUEST PDU with the same *TMGI* IE and, if available, *MBMS Session Identity* IE as an ongoing MBMS Service Context but with (a) new MBMS Service Area(s) added to the *MBMS Service Area Identity List* IE, the BSS may send assignments for the ongoing MBMS broadcast service session to the mobile stations in the new MBMS Service Area(s) and repeat notifications to the mobile stations in the old MBMS Service Area(s).

Upon reception of an MBMS-SESSION-UPDATE-REQUEST PDU with the same *TMGI* IE and, if available, *MBMS Session Identity* IE as an ongoing MBMS Service Context but without (an) old MBMS Service Area(s) included any longer in the *MBMS Service Area Identity List* IE, the BSS shall release MBMS radio bearers relevant to the ongoing MBMS broadcast service session in the old MBMS Service Area(s).

The MBMS Session Information IE shall denote a Broadcast MBMS Session.

The *Allocation/Retention Priority* IE, if available, and the *MBMS Session Repetition Number* IE, if available, shall be handled by the BSS as described in the MBMS Session Start procedure (see sub-clause 8d.2).

If the *Allocation/Retention Priority* IE is not present in the MBMS-SESSION-UPDATE-REQUEST PDU, the allocation request shall not trigger the pre-emption process and the connection may be pre-empted and considered to have the value "lowest" as priority level.

If the data is received by the BSS and no MBMS bearer is established on the radio interface for that MBMS Session, the BSS may buffer the data.

At reception of an MBMS-SESSION-UPDATE-REQUEST PDU that leads to an MBMS Service Context creation in the BSS, the BSS shall respond to the SGSN with an MBMS-SESSION-UPDATE-RESPONSE PDU with a Cause Value indicating that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN.

At reception of an MBMS-SESSION-UPDATE-REQUEST PDU with the same *TMGI* IE and, if available, *MBMS Session Identity* IE as an ongoing MBMS Service Context and including new and/or removing old MBMS Service Area(s), the BSS shall respond to the SGSN with an MBMS-SESSION-UPDATE-RESPONSE PDU with a Cause Value indicating either that data transfer shall continue on the Point-to-Multipoint BVC from that SGSN (see note) or that data transfer has already been initiated on the Point-to-Multipoint BVC from another SGSN.

NOTE: The Cause Value indicating that data transfer shall continue on the Point-to-Multipoint BVC from that SGSN is set to the same one denoting that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN, i.e. "0001" (see sub-clause 11.3.74).

If the BSS does not support any MBMS Service Area in the *MBMS Service Area Identity List* IE, the BSS shall send an MBMS-SESSION-UPDATE-RESPONSE PDU to the SGSN with a Cause Value indicating that none of the listed MBMS Service Areas are supported by the BSS.


At reception of an MBMS-SESSION-UPDATE-RESPONSE PDU, the SGSN shall either start/continue data transfer or not depending on the received Cause Value.

After transmission of the MBMS-SESSION-UPDATE-RESPONSE PDU, the BSS shall wait at least the time specified in the value part of the *Time to MBMS Data Transfer* IE included in the MBMS-SESSION-UPDATE-REQUEST PDU and at most a time exceeding by 5 seconds the value part of the *Time to MBMS Data Transfer* IE for the first reception of the associated data before the BSS validates whether or not there is another SGSN that previously has sent an MBMS-SESSION-UPDATE-REQUEST PDU or an MBMS-SESSION-START-REQUEST PDU with the same content of the received MBMS-SESSION-UPDATE-REQUEST PDU.

If after the start of the data flow associated to an MBMS Service Context, the BSS does not receive data for at least 30 seconds and the BSS has not received the MBMS-SESSION-STOP-REQUEST PDU, the BSS validates whether or not there is another SGSN that previously has sent an MBMS-SESSION-UPDATE-REQUEST PDU or an MBMS-SESSION-START-REQUEST PDU with the same content of the received MBMS-SESSION-UPDATE-REQUEST PDU.

If, in any of the two cases mentioned above, another SGSN has sent an MBMS-SESSION-UPDATE-REQUEST PDU or an MBMS-SESSION-START-REQUEST PDU, the BSS shall send an MBMS-SESSION-UPDATE-RESPONSE PDU or an MBMS-SESSION-START-RESPONSE PDU, respectively, to such an SGSN with a Cause Value indicating that data transfer shall be initiated on the Point-to-Multipoint BVC from that SGSN. Otherwise, the BSS shall end the MBMS Service Context.

In any case, the BSS shall send an MBMS-SESSION-UPDATE-RESPONSE PDU with a Cause Value indicating that the MBMS Service Context has been released due to interrupted data flow to the SGSN that previously has been ordered to perform data transfer.

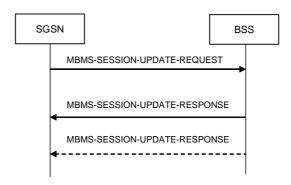

#### Figure 8d.4: MBMS Session Update procedure

### 8d.4.1 Abnormal Conditions

In any failure case in BSS the BSS may send an MBMS-SESSION-UPDATE-RESPONSE PDU including a Cause Value indicating the reason for the failure.

If an MBMS-SESSION-UPDATE-RESPONSE PDU is not received in response to an MBMS-SESSION-UPDATE-REQUEST PDU within T11 seconds, then the MBMS-SESSION-UPDATE-REQUEST PDU shall be repeated a maximum of MBMS-SESSION-UPDATE-REQUEST-RETRIES attempts. After MBMS-SESSION-UPDATE-REQUEST-RETRIES + 1 attempts the procedure is stopped and the O&M is informed.

## 9 General Protocol Error Handling

Refer to General Protocol Error Handling/3GPP TS 48.016. In addition:

- any type of BSSGP PDU received without an expected conditional IE is discarded and a STATUS PDU (cause "Missing conditional IE") is sent;
- any type of BSSGP PDU received without a mandatory IE is discarded and a STATUS PDU (cause "Missing mandatory IE") is sent;
- any type of BSSGP PDU received with a syntactical error in an expected conditional IE is discarded and a STATUS PDU (cause "Conditional IE error") is sent;
- any type of BSSGP PDU received with a syntactical error in a mandatory IE is discarded and a STATUS PDU (cause "Invalid mandatory information") is sent;
- any type of BSSGP PDU received for a feature that is not negotiated is discarded and a STATUS PDU (cause "PDU not compatible with the feature set") is sent.

Some BSSGP PDU shall contain one and only one conditional IE amongst a defined list of possible conditional IE (e.g. PAGING-PS PDU). If such a BSSGP PDU is received with more than one conditional IE amongst the defined list of possible conditional IE, as defined in sub-clause 10, the PDU is discarded and a STATUS PDU (cause "Unexpected conditional IE") is sent.

### 10 PDU functional definitions and contents

### 10.1 General Structure Of A PDU

Refer to General Structure Of A PDU/3GPP TS 48.016.

# 10.2 PDU functional definitions and contents at RL and BSSGP SAPs

### 10.2.1 DL-UNITDATA

This PDU is sent to the BSS to transfer an LLC-PDU across the radio interface to an MS.

PDU type: DL-UNITDATA

Direction: SGSN to BSS

Information element	Type / Reference	Presence	Format	Length	
PDU type	PDU type/11.3.26	M	V	1	
TLLI (current)	TLLI/11.3.35	M	V	4	
QoS Profile (note 1)	QoS Profile/11.3.28	Μ	V	3	
PDU Lifetime	PDU Lifetime/11.3.25	Μ	TLV	4	
MS Radio Access Capability (note 2)	MS Radio Access Capability/11.3.22	0	TLV	7-?	
Priority (note 3)	Priority/11.3.27	0	TLV	3	
DRX Parameters	DRX Parameters/11.3.11	0	TLV	4	
IMSI	IMSI/11.3.14	0	TLV	5-10	
TLLI (old)	TLLI/11.3.35	0	TLV	6	
PFI	PFI/11.3.42	0	TLV	3	
LSA Information	LSA Information/11.3.19	0	TLV	7-?	
Service UTRAN CCO	Service UTRAN CCO/11.3.47	0	TLV	3	
Alignment octets	Alignment octets/11.3.1	0	TLV	2-5	
Subscriber Profile ID for	Subscriber Profile ID for	0	TLV	3	
RAT/Frequency priority (note 5)	RAT/Frequency priority/11.3.105				
LLC-PDU (note 4)	LLC-PDU/11.3.15	Μ	TLV	2-?	
known PFC in the BSS.	S Profile shall be discarded if the PFI f	-			
NOTE 2: The field shall be present SGSN; the field shall not I	if there is valid MS Radio Access Capa oe present otherwise.	ability informatic	on known by	/ the	
NOTE 3: The priority field shall be discarded if the PFI field is present and corresponds to a known PFC in the					
BSS for which the ARP field was received.					
NOTE 4: The LLC-PDU Length Ind					
	NOTE 5: This IE may be included if available in the SGSN. If the Service UTRAN CCO IE is present with the value of "shall not" the Service UTRAN CCO IE takes precedence over this IE.				
	The offering 000 IL lakes precedent				

#### Table 10.2.1: DL-UNITDATA PDU contents

### 10.2.2 UL-UNITDATA

This PDU transfers an MS's LLC-PDU and its associated radio interface information across the Gb-interface.

PDU type: UL-UNITDATA

Direction: BSS to SGSN

Tab	ble 10.2.2: UL-UNITDAT	A PDU conter	ht
lomont	Type / Deference	Dracanaa	Earr

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	Μ	V	4
QoS Profile	QoS Profile/11.3.28	Μ	V	3
Cell Identifier	Cell Identifier/11.3.9	Μ	TLV	10
PFI	PFI/11.3.42	0	TLV	3
LSA Identifier List	LSA Identifier List/11.3.18	0	TLV	3-?
Alignment octets	Alignment octets/11.3.1	0	TLV	2-5
LLC-PDU (note)	LLC-PDU/11.3.15	Μ	TLV	2-?
NOTE: The LLC-PDU Length Indicator may be zero.				

### 10.2.3 RA-CAPABILITY

This PDU informs the BSS of the new Radio Access Capability of an MS.

PDU type: RA-CAPABILITY

Direction: SGSN to BSS

#### Table 10.2.3: RA-CAPABILITY PDU content

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
MS Radio Access Capability	MS Radio Access Capability/11.3.22	М	TLV	7-?

### 10.2.4 (void)

### 10.2.5 DL-MBMS-UNITDATA

This PDU is sent to the BSS to transfer an LLC-PDU across the radio interface.

PDU type: DL-MBMS-UNITDATA

Direction: SGSN to BSS

#### Table 10.2.5: DL-MBMS-UNITDATA PDU contents

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	M	V	1
PDU Lifetime	PDU Lifetime/11.3.25	Μ	TLV	4
TMGI	TMGI/ 11.3.77	M	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
Alignment octets	Alignment octets/11.3.1	0	TLV	2-5
LLC-PDU	LLC-PDU/11.3.15	Μ	TLV	3-?

### 10.2.6 UL-MBMS-UNITDATA

This PDU transfers an LLC-PDU for an MBMS session across the Gb-interface.

PDU type: UL-MBMS-UNITDATA

Direction: BSS to SGSN

#### Table 10.2.6: UL-MBMS-UNITDATA PDU contents

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TMGI	TMGI/ 11.3.77	М	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
Alignment octets	Alignment octets/11.3.1	0	TLV	2-5
LLC-PDU (note 1)	LLC-PDU/11.3.15	М	TLV	2-?
NOTE: The LLC-PDU Length Indicator shall be zero in this version of the specifications.				

### 10.3 PDU functional definitions and contents at GMM SAP

### 10.3.1 PAGING PS

This PDU indicates that a BSS shall initiate the packet paging procedure for an MS within a group of cells.

PDU type:	PAGING-PS
-----------	-----------

Direction: SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
IMSI	IMSI/11.3.14	Μ	TLV	5 -10
DRX Parameters	DRX Parameters/11.3.11	0	TLV	4
BVCI a)	BVCI/11.3.6	С	TLV	4
Location Area (note)	Location Area/11.3.17	С	TLV	7
Routeing Area (note)	Routeing Area/11.3.31	С	TLV	8
BSS Area Indication (note)	BSS Area Indication/11.3.3	С	TLV	3
PFI	PFI/11.3.42	0	TLV	3
ABQP	ABQP/11.3.43	0	TLV	13-?
QoS Profile	QoS Profile/11.3.28	Μ	TLV	5
P-TMSI	TMSI/11.3.36	0	TLV	6
NOTE: One and only one of the conditional IEs shall be present. No repeated instances of the conditional IEs are permissible (e.g. one and only one Location Area shall be present).				

#### Table 10.3.1: PAGING PS PDU content

### 10.3.2 PAGING CS

This PDU indicates that a BSS shall initiate a circuit-switched paging procedure for an MS within a group of cells.

PDU type: PAGING-CS

Direction: SGSN to BSS

#### Table 10.3.2: PAGING CS PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
IMSI	IMSI/11.3.14	M	TLV	5 -10
DRX Parameters	DRX Parameters/11.3.11	Μ	TLV	4
BVCI a)	BVCI/11.3.6	С	TLV	4
Location Area (note 1)	Location Area/11.3.17	С	TLV	7
Routeing Area (note 1)	Routeing Area/11.3.31	С	TLV	8
BSS Area Indication (note 1)	BSS Area Indication/11.3.3	С	TLV	3
TLLI	TLLI/11.3.35	0	TLV	6
Channel needed (note 2)	Channel needed/11.3.10	0	TLV	3
eMLPP-Priority (note 2)	eMLPP-Priority/11.3.12	0	TLV	3
TMSI (note 2)	TMSI/11.3.36	0	TLV	6
Global CN-Id (note 2)	Global CN-Id/11.3.69	0	TLV	7
NOTE 1: One and only one of				
the conditional IEs	are permissible (e.g. one and	l only one Loca	tion Area sł	nall be
present).				
NOTE 2: These fields are pro	ovided by the MSC via the Gs	s-Interface.		

### 10.3.3 RA-CAPABILITY-UPDATE

This PDU requests that the SGSN send an MS's current Radio Access capability or IMSI to the BSS.

PDU type: RA-CAPABILITY-UPDATE

Direction: BSS to SGSN

#### Table 10.3.3: RA-CAPABILITY-UPDATE PDU content

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	Μ	TLV	6
Tag	Tag/11.3.34	Μ	TLV	3

### 10.3.4 RA-CAPABILITY-UPDATE-ACK

This PDU provides the BSS with an MS's current Radio Access capability and IMSI.

PDU type: RA-CAPABILITY-UPDATE-ACK

Direction: SGSN to BSS

#### Table 10.3.4: RA-CAPABILITY-UPDATE-ACK PDU content

Information element	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	Μ	TLV	6
Tag	Tag/11.3.34	Μ	TLV	3
IMSI (note)	IMSI/11.3.14	С	TLV	5 -10
RA-Cap-UPD-CAUSE	RA-Cap-UPD- CAUSE/11.3.30	М	TLV	3
MS Radio Access Capability	MS Radio Access Capability/11.3.22	С	TLV	7-?
NOTE: If RA-Cap-UPD-CAUSE is not set to "OK", then neither the MS Radio Access Capability nor the IMSI shall be present. Otherwise, the IMSI shall be present.				

### 10.3.5 RADIO-STATUS

This PDU indicates that an exception condition related to the radio interface has occurred.

PDU type: RADIO-STATUS

Direction: BSS to SGSN

#### Table 10.3.5: RADIO-STATUS PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI (note)	TLLI/11.3.35	С	TLV	6
TMSI (note)	TMSI/11.3.36	С	TLV	6
IMSI (note)	IMSI/11.3.14	С	TLV	5-10
Radio Cause	Radio Cause/11.3.29	М	TLV	3
NOTE: One and only one of the conditional IEs shall be present.				

### 10.3.6 SUSPEND

This PDU indicates that an MS wishes to suspend its GPRS service.

PDU type: SUSPEND

Direction: BSS to SGSN

#### Table 10.3.6: SUSPEND PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Routeing Area	Routeing Area/11.3.31	М	TLV	8

### 10.3.7 SUSPEND-ACK

This PDU positively acknowledges the reception of a SUSPEND PDU for an MS.

PDU type: SUSPEND-ACK

Direction: SGSN to BSS

#### Table 10.3.7: SUSPEND-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Routeing Area	Routeing Area/11.3.31	М	TLV	8
Suspend Reference Number	Suspend Reference Number/11.3.33	М	TLV	3

### 10.3.8 SUSPEND-NACK

This PDU negatively acknowledges the reception of a SUSPEND PDU for an MS.

PDU type: SUSPEND-NACK

Direction: SGSN to BSS

#### Table 10.3.8: SUSPEND-NACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	M	TLV	6
Routeing Area	Routeing Area/11.3.31	Μ	TLV	8
Cause	Cause/11.3.8	0	TLV	3

### 10.3.9 RESUME

This PDU indicates that an MS wishes to RESUME its GPRS service.

PDU type: RESUME

Direction: BSS to SGSN

#### Table 10.3.9: RESUME PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Routeing Area	Routeing Area/11.3.31	М	TLV	8
Suspend Reference Number	Suspend Reference Number/11.3.33	М	TLV	3

### 10.3.10 RESUME-ACK

This PDU positively acknowledges the reception of a RESUME PDU for an MS.

PDU type: RESUME-ACK

Direction: SGSN to BSS

#### Table 10.3.10: RESUME-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	Μ	TLV	6
Routeing Area	Routeing Area/11.3.31	Μ	TLV	8

### 10.3.11 RESUME-NACK

This PDU negatively acknowledges the reception of a RESUME PDU for an MS.

PDU type: RESUME-NACK

Direction: SGSN to BSS

#### Table 10.3.11: RESUME-NACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	M	TLV	6
Routeing Area	Routeing Area/11.3.31	Μ	TLV	8
Cause	Cause/11.3.8	0	TLV	3

### 10.4 PDU functional definitions and contents at NM SAP

### 10.4.1 FLUSH-LL

This PDU informs a BSS that an MS has moved from one cell to another.

PDU type:	FLUSH-LL
-----------	----------

Direction: SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
BVCI (old)	BVCI/11.3.6	М	TLV	4
BVCI (new)	BVCI/11.3.6	0	TLV	4
NSEI (new)	NSEI/11.3.48	O (note)	TLV	4
NOTE: NSEI (new) is included if the SGSN supports "Inter-NSE re-routing" or "LCS Procedures" and the old NSE supports the "Inter-NSE re-routing" or "LCS Procedures" and the cell change is an Inter-NSE cell change within a routing area.				

#### Table 10.4.1: FLUSH-LL PDU content

### 10.4.2 FLUSH-LL-ACK

This PDU indicates that LLC-PDU(s) buffered for an MS in the old cell have been either deleted or transferred to the new cell within the routing area.

PDU type: FLUSH-LL-ACK

Direction: BSS to SGSN

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Flush Action	Flush Action/11.3.13	М	TLV	3
BVCI (new)	BVCI/11.3.13	C (note 1)	TLV	4
Number of octets affected	Number of octets affected/11.3.41	М	TLV	5
NSEI (new)	NSEI/11.3.48	C (note 2)	TLV	4
<ul> <li>NOTE 1: BVCI (new) is included only if Flush action indicated that LLC-PDUs are transferred.</li> <li>NOTE 2: NSEI (new) is included only if BVCI(new) is included and NSEI (new) is received in the FLUSH-LL PDU.</li> </ul>				

#### Table 10.4.2: FLUSH-LL-ACK PDU content

### 10.4.3 LLC-DISCARDED

This PDU indicates that a number of buffered LLC-PDUs in a cell for an MS have been deleted inside the BSS (because of PDU Lifetime expiration or radio outage for example). The LLC frames and the related octets deleted by the BSS as a consequence of a FLUSH-LL procedure (see sub-clause 8.1) shall not be reported a second time by means of an LLC-DISCARDED PDU.

#### PDU type: LLC-DISCARDED

Direction: BSS to SGSN

#### Table 10.4.3: LLC-DISCARDED PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
LLC Frames Discarded	LLC Frames Discarded/11.3.16	М	TLV	3
BVCI	BVCI/11.3.6	М	TLV	4
Number of octets deleted	Number of octets affected/11.3.41	М	TLV	5
PFI (note)	PFI/11.3.42	0	TLV	3
NOTE: The PFI may be provided in case the PFC flow control feature is negotiated. It corresponds to the Packet Flow Identifier of the PFC for which LLC frames have been discarded.				ve been

### 10.4.4 FLOW-CONTROL-BVC

This PDU informs the flow control mechanism at an SGSN of the status of a BVC's maximum acceptable SGSN to BSS throughput on the Gb interface.

PDU type: FLOW-CONTROL-BVC

Direction: BSS to SGSN

#### Table 10.4.4: FLOW-CONTROL-BVC PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
Tag	Tag/11.3.34	Μ	TLV	3
BVC Bucket Size	BVC Bucket Size/11.3.5	Μ	TLV	4
Bucket Leak Rate	Bucket Leak Rate/11.3.4	Μ	TLV	4
Bmax default MS	Bmax default MS/11.3.2	Μ	TLV	4
R_default_MS	R_default_MS/11.3.32	Μ	TLV	4
Bucket_Full Ratio	Bucket_Full Ratio/11.3.46	С	TLV	3
BVC Measurement	BVC Measurement/11.3.7	0	TLV	4
Flow Control	Flow Control	0	TLV	3
Granularity (note)	Granularity/11.3.102			
NOTE: The Flow Control	Granularity shall be provide	ed in case the G	igabit Inter	face
feature is negotiated.				

### 10.4.5 FLOW-CONTROL-BVC-ACK

This PDU informs the flow control mechanism at the BSS that the SGSN has received the FLOW-CONTROL-BVC PDU indicated by the Tag.

PDU type: FLOW-CONTROL-BVC-ACK

Direction: SGSN to BSS

#### Table 10.4.5: FLOW-CONTROL-BVC-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Tag	Tag/11.3.34	М	TLV	3

### 10.4.6 FLOW-CONTROL-MS

This PDU informs the flow control mechanism at an SGSN of the status of an MS's maximum acceptable SGSN to BSS throughput on the Gb interface.

PDU type: FLOW-CONTROL-MS

Direction: BSS to SGSN

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Tag	Tag/11.3.34	М	TLV	3
MS Bucket Size	MS Bucket Size/11.3.21	М	TLV	4
Bucket Leak rate	Bucket Leak rate/11.3.4	М	TLV	4
Bucket_Full Ratio	Bucket_Full Ratio/11.3.46	С	TLV	3
Flow Control	Flow Control	0	TLV	3
Granularity (note)	Granularity/11.3.102			
NOTE: The Flow Control	l Granularity shall be provide	d in case the	Gigabit Inte	erface
feature is negotiated.				

#### Table 10.4.6: FLOW-CONTROL-MS PDU content

### 10.4.7 FLOW-CONTROL-MS-ACK

This PDU informs the flow control mechanism at the BSS that the SGSN has received the FLOW-CONTROL-MS PDU indicated by the TLLI and the Tag.

PDU type: FLOW-CONTROL-MS-ACK

Direction: SGSN to BSS

#### Table 10.4.7: FLOW-CONTROL-MS-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Tag	Tag/11.3.34	М	TLV	3

### 10.4.8 BVC-BLOCK

This PDU indicates that the contained BVC shall be blocked at the recipient entity.

PDU type: BVC-BLOCK

Direction: BSS to SGSN

#### Table 10.4.8: BVC-BLOCK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4
Cause	Cause/11.3.8	М	TLV	3

### 10.4.9 BVC-BLOCK-ACK

This PDU acknowledges that a BVC has been blocked.

PDU type: BVC-BLOCK-ACK

Direction: SGSN to BSS

#### Table 10.4.9: BVC-BLOCK-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4

### 10.4.10 BVC-UNBLOCK

This PDU indicates that the identified BVC shall be unblocked at the recipient entity.

PDU type: BVC-UNBLOCK

Direction: BSS to SGSN

#### Table 10.4.10: BVC-UNBLOCK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4

### 10.4.11 BVC-UNBLOCK-ACK

This PDU acknowledges that a BVC has been unblocked.

PDU type: BVC-UNBLOCK-ACK

Direction: SGSN to BSS

#### Table 10.4.11: BVC-UNBLOCK-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4

### 10.4.12 BVC-RESET

This PDU indicates that BVC initialisation is required, e.g. because of a BVC failure.

PDU type: BVC-RESET

Direction: SGSN to BSS, BSS to SGSN

#### Table 10.4.12: BVC-RESET PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4
Cause	Cause/11.3.8	М	TLV	3
Cell Identifier (note 1)		С	TLV	10
Feature bitmap (note 2)	Feature bitmap/11.3.45	0	TLV	3
Extended Feature	Extended Feature	0	TLV	3
Bitmap (note 3)	Bitmap/11.3.84			
NOTE 1: The Cell Identifier IE is mandatory in the BVC-RESET PDU sent from BSS to SGSN in order to reset a BVC corresponding to a PTP functional entity. The Cell Identifier IE shall not be used in any other BVC-RESET PDU.				
<ul> <li>NOTE 2: The Feature bitmap is only sent in a BVC-RESET PDU related to the signalling BVC. Absence of this IE implies no optional features are available over the NSE.</li> <li>NOTE 3: The Extended Feature Bitmap is only sent in a BVC-RESET PDU related to</li> </ul>				
the signalling	BVC.			

### 10.4.13 BVC-RESET-ACK

This PDU indicates that BVC initialisation has been executed.

PDU type: BVC-RESET-ACK

Direction: BSS to SGSN, SGSN to BSS

#### Table 10.4.13: BVC-RESET-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
BVCI	BVCI/11.3.6	М	TLV	4
Cell Identifier (note 1)		С	TLV	10
Feature bitmap (note 2)	Feature bitmap/11.3.45	0	TLV	3
Extended Feature Bitmap	Extended Feature	0	TLV	3
(note 3)	Bitmap/11.3.84			
NOTE 1: The Cell Identifier IE is mandatory in the BVC-RESET-ACK PDU sent from BSS to SGSN in response to reset a BVC corresponding to a PTP functional entity. The Cell Identifier IE shall not be used in any other BVC-RESET-ACK PDU.				
NOTE 2: The Feature bitmap is only sent in a BVC-RESET-ACK PDU related to the signalling BVC. Absence of this IE implies no optional features are available over the NSE.				
NOTE 3: The Extended Fea signalling BVC.	ture Bitmap is only sent in a I	BVC-RESET-A	CK PDU relat	ed to the

### 10.4.14 STATUS

This PDU indicates that an exception condition occurred.

PDU type: STATUS

Direction: SGSN to BSS, BSS to SGSN

#### Table 10.4.14: STATUS PDU content

Information elements	Type / Reference	Presence	Format	Length	
PDU type	PDU type/11.3.26	Μ	V	1	
Cause	Cause/11.3.8	Μ	TLV	3	
BVCI	BVCI/11.3.6	С	TLV	4	
PDU In Error (note)	PDU In Error/11.3.24	0	TLV	3-?	
NOTE: This is the whole PDU (starting with the [PDU type]) within which an error was detected. This PDU may be truncated if it exceeds the information carrying capacity of the underlying network service.					

#### 10.4.14.1 Static conditions for BVCI

The "BVCI" IE shall be included when the "Cause" IE is set to one of the following values:

- a) "BVCI blocked";
- b) "BVCI unknown";

and shall not be included otherwise.

### 10.4.15 SGSN-INVOKE-TRACE

This PDU indicates that the BSS shall begin the production of a trace record for an MS.

PDU type: SGSN-INVOKE-TRACE

Direction: SGSN to BSS

Table 10.4.15: SGSN-INVOKE-TRACE PDU content
--

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
Trace Type	Trace Type/11.3.38	Μ	TLV	3
Trace Reference	Trace Reference/11.3.37	Μ	TLV	4
Trigger Id	Trigger Id/11.3.40	0	TLV	4-24
Mobile Id	Mobile Id/11.3.20	0	TLV	3-10
OMC Id	OMC Id/11.3.23	0	TLV	4-24
TransactionId	TransactionId/11.3.39	0	TLV	4

### 10.4.16 DOWNLOAD-BSS-PFC

This PDU requests a SGSN to initiate a CREATE-BSS-PFC procedure.

PDU type: DOWNLOAD-BSS-PFC

Direction: BSS to SGSN

#### Table 10.4.16: DOWNLOAD-BSS-PFC PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3

### 10.4.17 CREATE-BSS-PFC

This PDU allows the SGSN to request that a BSS create or modify a BSS Packet Flow Context.

PDU type: CREATE-BSS-PFC

Direction: SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
IMSI	IMSI/11.3.14	O (note 4)	TLV	5 -10
PFI	PFI/11.3.42	М	TLV	3
PFT	GPRS Timer/11.3.44	М	TLV	3
ABQP	ABQP/11.3.43	М	TLV	13-?
Service UTRAN CCO	Service UTRAN CCO/11.3.47	0	TLV	3
MS Radio Access Capability	MS Radio Access Capability/11.3.22	O (note 1)	TLV	7-?
Allocation/Retention Priority	Priority/11.3.27	0	TLV	3
T10	GPRS Timer/11.3.44	C (note 2)	TLV	3
Inter RAT Handover Info	Inter RAT Handover Info/11.3.94	O (note 3)	TLV	3-?
E-UTRAN Inter RAT Handover Info	E-UTRAN Inter RAT Handover Info/11.3.104	O (note 3)	TLV	3-?
Subscriber Profile ID for RAT/Frequency priority (note 5)	Subscriber Profile ID for RAT/Frequency priority/11.3.105	0	TLV	3
<ul> <li>NOTE 1: This Information Element shall be present if there is valid MS Radio Access Capability information known by the SGSN.</li> <li>NOTE 2: This information element shall be present if the Allocation/Retention Priority IE is present and if queuing is allowed for the PFC.</li> <li>NOTE 3: This information element shall be present if available in the SGSN.</li> <li>NOTE 4: This information element shall be present if the IMSI is available in the SGSN.</li> <li>NOTE 5: This IE may be included if available in the SGSN. If the Service UTRAN CCO IE is present with the value of "shall not" the Service UTRAN CCO IE takes precedence over this IE.</li> </ul>				

#### Table 10.4.17: CREATE-BSS-PFC PDU content

### 10.4.18 CREATE-BSS-PFC-ACK

This PDU allows the BSS to acknowledge a request from the SGSN for the creation or modification of a BSS Packet Flow Context.

PDU type: CREATE-BSS-PFC-ACK

Direction: BSS to SGSN

#### Table 10.4.18: CREATE-BSS-PFC-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TLLI	TLLI/11.3.35	Μ	TLV	6
PFI	PFI/11.3.42	M	TLV	3
ABQP	ABQP/11.3.43	M	TLV	13-?
Cause	Cause/11.3.8	0	TLV	3

### 10.4.19 CREATE-BSS-PFC-NACK

This PDU allows the BSS to Nack a request from the SGSN for the creation of a BSS Packet Flow Context.

PDU type: CREATE-BSS-PFC-NACK

Direction: BSS to SGSN

#### Table 10.4.19: CREATE-BSS-PFC-NACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3
Cause	Cause/11.3.8	М	TLV	3

### 10.4.20 MODIFY-BSS-PFC

This PDU allows the BSS to request a modification of a BSS Packet Flow Context.

PDU type: MODIFY-BSS-PFC

Direction: BSS to SGSN

#### Table 10.4.20: MODIFY-BSS-PFC PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3
ABQP	ABQP/11.3.43	М	TLV	13-?

### 10.4.21 MODIFY-BSS-PFC-ACK

This PDU allows the SGSN to acknowledge a modification to a BSS Packet Flow Context.

PDU type: MODIFY-BSS-PFC-ACK

Direction: SGSN to BSS

#### Table 10.4.21: MODIFY-BSS-PFC-ACK PDU content

Information elements Type / Reference Presence Format Length

PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3
PFT	GPRS Timer/11.3.44	М	TLV	3
ABQP	ABQP/11.3.43	М	TLV	13-?

### 10.4.22 DELETE-BSS-PFC

This PDU allows the SGSN to request that a BSS delete a BSS Packet Flow Context.

PDU type: DELETE-BSS-PFC

Direction: SGSN to BSS

#### Table 10.4.22: DELETE-BSS-PFC PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3

### 10.4.23 DELETE-BSS-PFC-ACK

This PDU allows the BSS to acknowledge a request for the deletion of a BSS Packet Flow Context.

PDU type: DELETE-BSS-PFC-ACK

Direction: BSS to SGSN

#### Table 10.4.23: DELETE-BSS-PFC-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3

### 10.4.24 FLOW-CONTROL-PFC

This PDU provides the SGSN with flow control information regarding one or more PFC(s) of a given Mobile Station.

PDU type: FLOW-CONTROL-PFC

Direction: BSS to SGSN

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Tag	Tag/11.3.34	М	TLV	3
MS Bucket Size	MS Bucket Size/11.3.21	0	TLV	4
Bucket Leak rate	Bucket Leak rate/11.3.4	0	TLV	4
Bucket_Full Ratio	Bucket_Full Ratio/11.3.46	0	TLV	3
PFC flow control parameters	PFC flow control parameters/11.3.68	М	TLV	
Flow Control Granularity (note)	Flow Control Granularity/11.3.102	0	TLV	3
NOTE: The Flow Control Gran negotiated.	ularity shall be provided in case the Gig	abit Interface	feature is	

### 10.4.25 FLOW-CONTROL-PFC-ACK

This PDU informs the flow control mechanism at the BSS that the SGSN has received the FLOW-CONTROL-PFC PDU indicated by the TLLI and the Tag.

PDU type: FLOW-CONTROL-PFC-ACK

Direction: SGSN to BSS

#### Table 10.4.25: FLOW-CONTROL-PFC-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Tag	Tag/11.3.34	М	TLV	3

### 10.4.26 DELETE-BSS-PFC-REQ

This PDU allows the BSS to inform the SGSN that the BSS Packet Flow Context cannot be supported anymore

PDU type: DELETE-BSS-PFC-REQ

Direction: BSS to SGSN

#### Table 10.4.26: DELETE-BSS-PFC-REQ PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
PFI	PFI/11.3.42	М	TLV	3
Cause	Cause/11.3.8	М	TLV	3

### 10.4.27 PS-HANDOVER-REQUIRED

This PDU initiates the allocation of resources in the target system for an MS.

PDU type: PS-HANDOVER-REQUIRED

Direction: BSS to SGSN

#### Table 10.4.27: PS-HANDOVER-REQUIRED PDU content

Information elements	Type / Reference	Presence	Format	Length

PDU type	PDU type/11.3.26	М	V	1	
TLLI	TLLI/11.3.35	М	TLV	6	
Cause	Cause/11.3.8	М	TLV	3	
Source Cell Identifier	Cell Identifier/11.3.9	М	TLV	10	
Target Cell Identifier (note 2)	Cell Identifier/11.3.9	С	TLV	10	
Source BSS to Target BSS Transparent Container (note 1)	Source BSS to Target BSS Transparent Container/11.3.79	С	TLV	10-?	
Target RNC Identifier (note 2) (note 3)	RNC Identifier/11.3.87	С	TLV	10	
Source to Target Transparent Container (note 1)	Source to Target Transparent Container/11.3.85	С	TLV	3-?	
Active PFCs List	Active PFCs List/11.3.95c	М	TLV	3-?	
Target eNB identifier (note 2) (note 3)	eNB Identifier/11.3.103	С	TLV	3-n	
Reliable Inter RAT Handover Info (note 4)	Reliable Inter RAT Handover Info/11.3.107	С	TLV	3	
NOTE 1: One and only one of these two conditional IEs shall be present depending on the target RAT as specified in subclause 8a.4.					
NOTE 2: One and only one of these three conditional IEs shall be present depending on the target RAT as specified in subclause 8a.4.					
NOTE 3: In case of PS handover to E-UTRAN, the Target RNC Identifier IE (carrying the Corresponding RNC-ID) may be present as an alternative to the Target eNB identifier IE.					
NOTE 4: This IE shall be present when the target cell is a GERAN cell.					

### 10.4.28 PS-HANDOVER-REQUIRED-ACK

This PDU indicates that resources have been allocated in the target system and that the BSS may initiate the channel change attempt for the corresponding MS.

PDU type: PS-HANDOVER-REQUIRED-ACK

Direction: SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
List of set-up PFCs	List of set-up PFCs/11.3.83	М	TLV	3-?
Target BSS to Source BSS Transparent Container (note)	Target BSS to Source BSS Transparent Container/11.3.80	С	TLV	3-?
Target to Source Transparent Container (note)	Target to Source Transparent Container/11.3.86	С	TLV	3-?
NOTE: One and only one of these two conditional IEs shall be present depending on the target RAT as specified in subclause 8a.4.				

### 10.4.29 PS-HANDOVER-REQUIRED-NACK

This PDU informs the source BSS about failed resource allocation in the target system.

PDU type: PS-HANDOVER-REQUIRED-NACK

Direction: SGSN to BSS

#### Table 10.4.29: PS-HANDOVER-REQUIRED-NACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Cause	Cause/11.3.8	М	TLV	3

## 10.4.30 PS-HANDOVER-REQUEST

This PDU initiates the allocation of resources for one or more PFCs in the target BSS for an MS.

PDU type: PS-HANDOVER-REQUEST

Direction: SGSN to BSS

<b></b>			· _		
Information elements	Type / Reference	Presence	Format	Length	
PDU type	PDU type/11.3.26	М	V	1	
TLLI	TLLI/11.3.35	М	TLV	6	
IMSI	IMSI/11.3.14	М	TLV	5-10	
Cause	Cause/11.3.8	М	TLV	3	
Source Cell Identifier (note 1)	Cell Identifier/11.3.9	С	TLV	10	
Source RNC Identifier (note 1)	RNC Identifier/11.3.87	С	TLV	10	
Target Cell Identifier	Cell Identifier/11.3.9	М	TLV	10	
Source BSS to Target BSS Transparent Container	Source BSS to Target BSS Transparent Container/11.3.79	М	TLV	7-?	
PFCs to be set-up list	PFCs to be set-up list PFCs to be set-up list/11.3.82 M TLV				
NAS container for PS NAS container for PS O TI Handover Handover/11.3.81		TLV	3-?		
Service UTRAN CCO	Service UTRAN CCO/11.3.47	0	TLV	3	
Subscriber Profile ID for RAT/Frequency priority (note 2)	Subscriber Profile ID for         Subscriber Profile ID for         O         TLV           RAT/Frequency priority         RAT/Frequency priority         TLV			3	
Reliable Inter RAT Handover Info (note 3)	Reliable Inter RAT Handover Info/11.3.107	С	TLV	3	
<ul> <li>NOTE 1: In case of PS handover from GERAN or UTRAN, one and only one of these two conditional IEs shall be present depending on the source RAT. In case of PS handover from E-UTRAN, neither of these two conditional IEs shall be present.</li> <li>NOTE 2: This IE may be included if available in the SGSN. If the Service UTRAN CCO IE is present with the value of "shall not" the Service UTRAN CCO IE takes precedence</li> </ul>					
0.0. uno .=.	over this IE. NOTE 3: This IE shall be included if sent by the source BSS.				

### Table 10.4.30: PS-HANDOVER-REQUEST PDU content

10.4.31 PS-HANDOVER-REQUEST-ACK

This PDU acknowledges the successful allocation of resources in the target BSS.

PDU type: PS-HANDOVER-REQUEST-ACK

Direction: BSS to SGSN

#### Table 10.4.31: PS-HANDOVER-REQUEST-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
List of set-up PFCs	List of set-up PFCs/11.3.83	М	TLV	3-?
Target BSS to Source BSS	Target BSS to Source BSS	М	TLV	3-?
Transparent Container	Transparent Container/11.3.80			

## 10.4.32 PS-HANDOVER-REQUEST-NACK

This PDU informs the SGSN about failed resource allocation in the target BSS.

PDU type: PS-HANDOVER-REQUEST-NACK

Direction: BSS to SGSN

#### Table 10.4.32: PS-HANDOVER-REQUEST-NACK PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
Cause	Cause/11.3.8	М	TLV	3

## 10.4.33 PS-HANDOVER-COMPLETE

This PDU informs the SGSN about successful channel change for an MS.

PDU type: PS-HANDOVER-COMPLETE

Direction: BSS to SGSN

### Table 10.4.33: PS-HANDOVER-COMPLETE PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
IMSI	IMSI/11.3.14	М	TLV	5-10
Target Cell Identifier (note 1)	Cell Identifier/11.3.9	0	TLV	10
Request for Inter RAT Handover Info (note 2)	Request for Inter RAT Handover Info/11.3.106	С	TLV	3
NOTE 1: The Target Cell Identifier IE is included only for optimised Intra-BSS PS Handover. NOTE 2: This IE shall be included if the BSS supports inter-RAT PS handover to UTRAN and/or E-UTRAN.				

### 10.4.34 PS-HANDOVER-CANCEL

This PDU cancels the handover for an MS.

PDU type: PS-HANDOVER-CANCEL

Direction: BSS to SGSN

### Table 10.4.34: PS-HANDOVER-CANCEL PDU content

Information elements Type / Reference Presence Format Length

PDU type	PDU type/11.3.26	М	V	1	
TLLI	TLLI/11.3.35	М	TLV	6	
Cause	Cause/11.3.8	М	TLV	3	
Source Cell Identifier	Cell Identifier/11.3.9	М	TLV	10	
Target Cell Identifier (note 1)	Cell Identifier/11.3.9	С	TLV	10	
Target RNC Identifier (note 1) (note 2)	RNC Identifier/11.3.87	С	TLV	10	
Target eNB Identifier (note 1) (note 2)	eNB Identifier/11.3.103	С	TLV	3-n	
	NOTE 1: One and only one of these three conditional IEs shall be present depending on the target RAT as specified in subclause 8a.7.				
NOTE 2: In case of PS handover to E-UTRAN, the Target RNC Identifier IE (carrying the Corresponding RNC-ID) may be present as an alternative to the Target eNB identifier IE.					

## 10.4.35 PS-HANDOVER-COMPLETE-ACK

This PDU provides to the BSS the *Inter RAT Handover Info* IE or *E-UTRAN Inter RAT Handover Info* IE or both. It is sent only if requested by the BSS and it shall contain at least one of the inter-RAT capabilities.

PDU type: PS-HANDOVER-COMPLETE-ACK

Direction: SGSN to BSS

### Table 10.4.35: PS-HANDOVER-COMPLETE-ACK PDU content

Information elements	Type / Reference	Presence	Format	Length	
PDU type	PDU type/11.3.26	М	V	1	
TLLI	TLLI/11.3.35	М	TLV	6	
Inter RAT Handover	Inter RAT Handover	C (note 1)	TLV	3-?	
Info	Info/11.3.94				
E-UTRAN Inter RAT	E-UTRAN Inter RAT	C (note 1)	TLV	3-?	
Handover Info	Handover Info/11.3.104				
NOTE 1: At least one of these IEs shall be present depending on whether the BSS					
requested Inter RAT Handover Info or E-UTRAN Inter RAT Handover Info or				er Info or	
both.					

## 10.5 PDU functional definitions and contents at LCS SAP

## 10.5.1 PERFORM-LOCATION-REQUEST

This PDU allows the SGSN to request the BSS to perform a location procedure for the target MS.

PDU type: PERFORM-LOCATION-REQUEST

Direction: SGSN to BSS

### Table 10.5.1: PERFORM-LOCATION-REQUEST PDU content

Information elements	Type / Reference	Presence	Format	Length	
PDU type	PDU type/11.3.26	М	V	1	
TLLI	TLLI/11.3.35	М	TLV	6	
IMSI	IMSI/11.3.14	М	TLV	5-10	
DRX Parameters (note 1)	DRX Parameters/11.3.11	0	TLV	4	
BVCI (PCU-PTP)	BVCI/11.3.6	M	TLV	4	
NSEI (PCU-PTP)	NSEI/11.3.48	M	TLV	4-?	
Location Type	Location Type/11.3.53	М	TLV	3-?	
Cell Identifier	Cell Identifier/11.3.9	М	TLV	10	
LCS Capability (note 2)	LCS Capability/11.3.59	0	TLV	3-?	
LCS Priority	LCS Priority/11.3.57	0	TLV	3-?	
LCS QoS	LCS QoS/11.3.50	0	TLV	3-?	
LCS Client Type (note 3)	LCS Client Type/11.3.51	С	TLV	3-?	
Requested GPS Assistance Data (note 4)	Requested GPS Assistance Data/11.3.52	0	TLV	3-?	
IMEI (note 5)	IMEI/11.3.91	0	TLV	10	
GANSS Location Type	GANSS Location Type / 11.3.100	С	TLV	3	
Requested GANSS Assistance Data (note	Requested GANSS Assistance	0	TLV	3-?	
6)	Data/11.3.99				
NOTE 1: This IE is present if the SGSN ha					
NOTE 2: This IE is present if the SGSN ha					
NOTE 3: This IE is present if the location type indicates a request for a location estimate and is optional otherwise.					
NOTE 4: This IE is present if GPS assistance data is requested.					
NOTE 5: The IMEI could be sent in addition to the IMSI for the purpose of allowing correlation between the two identities.					
NOTE 6 This IE is present if GANSS assi	stance data is requested.				

### 10.5.2 PERFORM-LOCATION-RESPONSE

This PDU allows the BSS to respond to the SGSN after the completion of the location procedure.

PDU type: PERFORM-LOCATION-RESPONSE

Direction: BSS to SGSN

### Table 10.5.2: PERFORM-LOCATION-RESPONSE PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
BVCI (PCU-PTP)	BVCI/11.3.6	М	TLV	4
Location Estimate (note 1)	Location Estimate/11.3.54	С	TLV	3-?
Positioning Data	Positioning Data/11.3.55	0	TLV	3-?
Deciphering Keys (note 2)	Deciphering Keys/11.3.56	С	TLV	3-?
LCS Cause (note 3)	LCS Cause/11.3.58	0	TLV	3-?
Velocity Data	Velocity Data/11.3.96	0	TLV	3-?
GANSS Positioning Data GANSS Positioning Data / O TL 11.3.101			TLV	3-?
NOTE 1: This IE is present if the location of the target MS was requested and the procedure succeeded.				
NOTE 2: This IE is present if the deciphering keys were requested and the procedure succeeded.				
NOTE 3: This IE is present if the procedure failed.				

### 10.5.3 PERFORM-LOCATION-ABORT

This PDU allows the SGSN to request the BSS to ABORT the LCS procedure.

PDU type: PERFORM-LOCATION-ABORT

Direction: SGSN to BSS

### Table 10.5.3: PERFORM-LOCATION-ABORT PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
BVCI (PCU-PTP)	BVCI/11.3.6	М	TLV	4
LCS Cause	LCS Cause/11.3.58	М	TLV	3-?

## 10.5.4 POSITION-COMMAND

This PDU allows the BSS to request the SGSN to perform the position command procedure.

PDU type: POSITION-COMMAND

Direction: BSS to SGSN

### Table 10.5.4: POSITION-COMMAND PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
BVCI (PCU-PTP)	BVCI/11.3.6	М	TLV	4
RRLP Flags	RRLP Flags/11.3.60	М	TLV	3
RRLP APDU	RRLP APDU/11.3.49	М	TLV	3-?

## 10.5.5 POSITION-RESPONSE

This PDU allows the SGSN to respond to the position command request procedure.

PDU type: POSITION-RESPONSE

Direction: SGSN to BSS

#### Table 10.5.5: POSITION-RESPONSE PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TLLI	TLLI/11.3.35	М	TLV	6
BVCI (PCU-PTP)	BVCI/11.3.6	М	TLV	4
RRLP Flags a)	RRLP Flags/11.3.60	С	TLV	3
RRLP APDU a)	RRLP APDU/11.3.49	С	TLV	3-?
LCS Cause b)	LCS Cause/11.3.58	0	TLV	3-?
a) This IE is present if the procedure succeeded.				
b) This IE is present if the procedure failed.				

## 10.6 PDU functional definitions and contents at RIM SAP

## 10.6.1 RAN-INFORMATION-REQUEST

The RAN-INFORMATION-REQUEST PDU allows a controlling BSS to request information from another BSS.

PDU type: RAN-INFORMATION-REQUEST

Direction:	BSS to SGSN
	SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Destination Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
Source Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
RIM Container	RAN-INFORMATION-REQUEST RIM	М	TLV	3-?
	Container/11.3.62a.1			

Table 10.6.1: RAN-INFORMATION-REQUEST PDU content

### 10.6.2 RAN-INFORMATION

The RAN-INFORMATION PDU allows a serving BSS to send information to a controlling BSS.

PDU type: RAN-INFORMATION

Direction: BSS to SGSN SGSN to BSS

### Table 10.6.2: RAN-INFORMATION-PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Destination Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
Source Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
RIM Container	RAN-INFORMATION RIM	М	TLV	3-?
	Container/11.3.62a.2			

### 10.6.3 RAN-INFORMATION-ACK

The RAN-INFORMATION-ACK PDU allows a controlling BSS to acknowledge the reception of a RAN-INFORMATION PDU and a serving BSS to acknowledge the reception of a RAN-INFORMATION-APPLICATION-ERROR PDU.

PDU type: RAN-INFORMATION-ACK

Direction: BSS to SGSN SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Destination Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
Source Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
RIM Container	RAN-INFORMATION-ACK RIM	М	TLV	3-?
	Container/11.3.62a.3			

Table 10.6.3: RAN-INFORMATION-ACK PDU content

### 10.6.4 RAN-INFORMATION-ERROR

The RAN-INFORMATION-ERROR PDU allows a BSS to send an error PDU back to an originating BSS as a response to a RAN-INFORMATION, a RAN-INFORMATION-REQUEST, a RAN-INFORMATION-ACK or a RAN-INFORMATION-APPLICATION-ERROR PDU.

PDU type: RAN-INFORMATION-ERROR

Direction: BSS to SGSN

SGSN to BSS

### Table 10.6.4: RAN-INFORMATION-ERROR content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Destination Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
Source Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
RIM Container	RAN-INFORMATION-ERROR RIM Container/11.3.62a.4	М	TLV	3-?

## 10.6.5 RAN-INFORMATION-APPLICATION-ERROR

The RAN-INFORMATION-APPLICATION-ERROR PDU allows a controlling BSS to inform the serving BSS about erroneous application information in a previously received RAN-INFORMATION PDU.

PDU type: RAN-INFORMATION-APPLICATION-ERROR

Direction: BSS to SGSN SGSN to BSS

### Table 10.6.5: RAN-INFORMATION-APPLICATION-ERROR PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
Destination Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
Source Cell Identifier	RIM Routing Information/11.3.70	М	TLV	3-?
RIM Container	RAN-INFORMATION-APPLICATION-	М	TLV	3-?
	ERROR RIM Container/11.3.62a.5			

## 10.7 PDU functional definitions and contents at MBMS SAP

## 10.7.1 MBMS-SESSION-START-REQUEST

This PDU allows a SGSN to request BSS to start an MBMS session.

PDU type: MBMS-SESSION-START-REQUEST

Direction: SGSN to BSS

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TMGI	TMGI/11.3.77	М	TLV	3-8
MBMS Session Identity	MBMS Session Identity/11.3.71	0	TLV	3
ABQP	ABQP/11.3.43	М	TLV	13-?
MBMS Service Area Identity List	MBMS Service Area Identity List/11.3.73	М	TLV	4-?
MBMS Routing Area List	MBMS Routing Area List/11.3.75	М	TLV	3-?
MBMS Session Duration	MBMS Session Duration/11.3.72	М	TLV	3-?
MBMS Session Information	MBMS Session Information/11.3.76	М	TLV	3
Time to MBMS Data Transfer	Time to MBMS Data Transfer/11.3.92	М	TLV	3
Allocation/Retention Priority	Priority/11.3.27	0	TLV	3
MBMS Session Repetition Number	MBMS Session Repetition Number/11.3.93	0	TLV	3

Table 10.7.1: MBMS-SESSION-START-REQUEST PDU content

## 10.7.2 MBMS-SESSION-START-RESPONSE

This PDU allows a BSS to acknowledge to SGSN that it will start an MBMS session or to indicate to SGSN why the MBMS Service Context cannot be created or is released by the BSS.

PDU type: MBMS-SESSION-START-RESPONSE

Direction: BSS to SGSN

#### Table 10.7.2: MBMS-SESSION-START-RESPONSE PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TMGI	TMGI/ 11.3.77	Μ	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
MBMS Response	MBMS Response/ 11.3.74	Μ	TLV	3

## 10.7.3 MBMS-SESSION-STOP-REQUEST

This PDU allows a SGSN to request BSS to stop an MBMS session.

PDU type: MBMS-SESSION-STOP-REQUEST

Direction: SGSN to BSS

#### Table 10.7.3: MBMS-SESSION-STOP-REQUEST PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TMGI	TMGI/ 11.3.77	М	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
MBMS Stop Cause	MBMS Stop Cause/11.3.78	М	TLV	3

## 10.7.4 MBMS-SESSION-STOP-RESPONSE

This PDU allows a BSS to acknowledge to SGSN that it will stop an MBMS session.

PDU type: MBMS-SESSION-STOP-RESPONSE

Direction: BSS to SGSN

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	Μ	V	1
TMGI	TMGI/ 11.3.77	Μ	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
MBMS Response	MBMS Response/ 11.3.74	Μ	TLV	3

#### Table 10.7.4: MBMS-SESSION-STOP-RESPONSE PDU content

## 10.7.5 MBMS-SESSION-UPDATE-REQUEST

This PDU allows an SGSN to request BSS to update the MBMS service area list of an ongoing MBMS broadcast service session.

PDU type: MBMS-SESSION-UPDATE-REQUEST

Direction: SGSN to BSS

#### Table 10.7.5: MBMS-SESSION-UPDATE-REQUEST PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TMGI	TMGI/11.3.77	М	TLV	3-8
MBMS Session Identity	MBMS Session Identity/11.3.71	0	TLV	3
ABQP	ABQP/11.3.43	М	TLV	13-?
MBMS Service Area Identity List	MBMS Service Area Identity List/11.3.73	М	TLV	4-?
MBMS Routing Area List	MBMS Routing Area List/11.3.75	Μ	TLV	3-?
MBMS Session Duration	MBMS Session Duration/11.3.72	Μ	TLV	3-?
MBMS Session Information	MBMS Session Information/11.3.76	М	TLV	3
Time to MBMS Data Transfer	Time to MBMS Data Transfer/11.3.92	Μ	TLV	3
Allocation/Retention Priority	Priority/11.3.27	0	TLV	3
MBMS Session Repetition Number	MBMS Session Repetition Number/11.3.93	0	TLV	3

### 10.7.6 MBMS-SESSION-UPDATE-RESPONSE

This PDU allows a BSS to acknowledge to SGSN that it will update the MBMS service area list of an ongoing MBMS broadcast service session or to indicate to SGSN why the MBMS Service Context cannot be created or is released by the BSS.

PDU type: MBMS-SESSION-UPDATE-RESPONSE

Direction: BSS to SGSN

#### Table 10.7.6: MBMS-SESSION-UPDATE-RESPONSE PDU content

Information elements	Type / Reference	Presence	Format	Length
PDU type	PDU type/11.3.26	М	V	1
TMGI	TMGI/ 11.3.77	М	TLV	3-8
MBMS Session Identity	MBMS Session Identity/ 11.3.71	0	TLV	3
MBMS Response	MBMS Response/ 11.3.74	М	TLV	3

# 11 General information elements coding

The figures and text in this sub-clause describe the Information Elements contents.

## 11.1 General structure of the information elements

Refer to General Structure Of The Information Elements/3GPP TS 48.016.

# 11.2 Information element description

Refer to Information Element Description/3GPP TS 48.016.

# 11.3 Information Element Identifier (IEI)

An Information Element Identifier (IEI) is identified by the same coding in all BSSGP PDUs.

### Table 11.3: IEI types

x00         Alignment Octets           x01         Brax default MS           x02         BSS Area Indication           x03         Bucket Leak Rate           x04         BVCI           x05         BVC Bucket Size           x06         BVC Measurement           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-PDU           x0f         LLC-PDU           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x18         QoS Profile           x19 <th>IEI coding (hexadecimal)</th> <th>IEI Types</th>	IEI coding (hexadecimal)	IEI Types
x01         Brax default MS           x02         BSS Area Indication           x03         Bucket Leak Rate           x04         BVC           x05         BVC Bucket Size           x06         BVC Bucket Size           x07         Cause           x08         Cell Identifier           x09         Channel needed           x00         DRX Parameters           x00         MLPP-Priority           x00         MLPP-Priority           x00         MLPP-Priority           x00         MLPP-Priority           x00         Flush Action           x01         LLC-PDU           x06         LLC-FDU           x07         LLC Frames Discarded           x11         Mobile Id           x12         MS Bucket Size           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause	x00	Alignment Octets
x03         Bucket Leak Rate           x04         BVCI           x05         BVC Bucket Size           x06         BVC Bucket Size           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0c         Flush Action           x0d         IMSI           x0c         LLC-PDU           x0f         LLC-Frames Discarded           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         POU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         RAcio Cause           x12         Tace Reference           x14         RACap-UPD-Cause           x15         Routeing Area           x16         R_default_MS		
x04         BVCI           x05         BVC Measurement           x06         BVC Measurement           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-Prames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU Interror           x16         PDU Interror           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Radio Cause           x12         Radio Cause           x14         Suspend Reference Number           x15         Radio Cause           x16         Suspend Reference           x22         Trace Reference           x24         Trigger Id		
x04         BVCI           x05         BVC Measurement           x06         BVC Measurement           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-Prames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU Interror           x16         PDU Interror           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Radio Cause           x12         Radio Cause           x14         Suspend Reference Number           x15         Radio Cause           x16         Suspend Reference           x22         Trace Reference           x24         Trigger Id	x03	Bucket Leak Rate
x06         BVC Bucket Size           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-FDU           x0f         LLC-FDU           x0f         LLC-FDU           x0f         LLC-FIames Discarded           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x10         Rodeing Area           x11         Suspend Reference Number           x11         Tag           x11         Tack Edvernce           x22         Trace Reference           x23         Trasextonid           x24         Trigger Id           x25		
x06         BVC Measurement           x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-PDU           x0f         LLC-PTOU           x0f         LLC-PDU           x0f         LLC-FDU           x0f         LLC-PDU           x0f         LLC-FDU           x0f         MS Backet Size           x11         Mobile Id           x12         MS Backet Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         Roo S Profile		
x07         Cause           x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC Frames Discarded           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Routeing Area           x12         Reference Number           x14         RA-Cap-UPD-Cause           x15         Routeing Area           x16         Suspend Reference Number           x18         QoS TMSI           x20         TMSI           x21         Trace Reference           x22         Trace Trace Trace           x23         Transactionid           x24         Trigger Id		
x08         Cell Identifier           x09         Channel needed           x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Routeing Area           x12         R default MS           x13         Roteing Area           x14         Suspend Reference Number           x15         Routeing Area           x16         Roteing Area           x17         Trace Reference Number           x14         Tutl           x20         TMSI           x21         Trace Reference           x22         Trace Reference		
x09         Channel needed           x0a         DRX Parameters           x0b         MLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC-PDU           x0f         LLC-PDU           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x1a         RA-Cap-UPD-Cause           x1b         Routeing Area           x1c         R_default_MS           x11         Tage           x16         Tag           x17         Trace Type           x23         TrasactionId           x24         Trage Reference           x25         Number of octets affected           x26         LSA Information           x27         LSA Information           x		
x0a         DRX Parameters           x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LCFrames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x14         RA-Cap-UPD-Cause           x15         Routeing Area           x16         Routeing Area           x17         Radio Cause           x18         QoS Profile           x19         Radio Cause           x14         Routeing Area           x15         Routeing Area           x16         Ruperal Area           x17         Trace Reference Number           x16         Tarea Reference           x22         Trace Reference           x23         TransactionId		
x0b         eMLPP-Priority           x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Radio Cause           x12         Radio Cause           x13         RA-Cap-UPD-Cause           x14         Routeing Area           x15         Routeing Area           x16         Routeing Area           x17         Trace Type           x18         Routeing Area           x10         Race Reference Number           x11         Tubil           x20         TMSI           x21         Trace Type           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected <tr< td=""><td></td><td></td></tr<>		
x0c         Flush Action           x0d         IMSI           x0e         LLC-PDU           x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Roteing Area           x12         Radio Cause           x14         Routeing Area           x15         Routeing Area           x16         Suspend Reference Number           x17         Trace Reference           x18         Suspend Reference           x19         Trace Reference           x11         Trace Reference           x22         Trace Type           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Information           x28         Packe		
x0d         IMSI           x0e         LLC-PDU           x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Robic Cause           x12         R_default_MS           x14         RA-Cap-UPD-Cause           x15         Routeing Area           x16         Rusend Reference Number           x17         Trag           x16         Suspend Reference Number           x16         Tag           x17         Trace Reference           x20         TMSI           x21         Trace Reference           x22         Trace Type           x23         Transactonld           x24         Trigger Id           x25         Number of octets affected           x26         LSA Information <td></td> <td></td>		
x0e         LLC-PDU           x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11a         RA-Cap-UPD-Cause           x1b         Routeing Area           x1c         R_default MS           x1d         Suspend Reference Number           x1e         Tag           x1f         TLLI           x20         TMSI           x21         Trace Reference           x22         Trace Type           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Identifier List           x27         LSA Information           x28         Packet Flow Identifier           x29         GPRS Timer           x3a         Aggregate BSS		
x0f         LLC Frames Discarded           x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         Supend Reference Number           x16         Tag           x11         Suspend Reference Number           x11         Tace Reference           x20         TMSI           x21         Trace Reference           x22         Trace Reference           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Identifier           x27         LSA Information           x28         Packet Flow Identifier           x29         GPRS Timer           x3a         Aggregate BSS QoS Profile (ABQP)           x3b         Feature Bitmap           x3c         Bucket_Full Ratio		
x10         Location Area           x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11a         RA-Cap-UPD-Cause           x1b         Routeing Area           x1c         R_default_MS           x1d         Suspend Reference Number           x11         TLLI           x20         TMSI           x21         Trace Reference           x22         Trace Reference           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Information           x28         Packet Flow Identifier           x29         GPRS Timer           x3a         Aggregate BSS QoS Profile (ABQP)           x3b         Feature Bitmap           x3c         Bucket_Full Ratio           x3d         Service UTRAN CCO (Cell Change Order)		
x11         Mobile Id           x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11         RA-Cap-UPD-Cause           x11         Roteing Area           x11         R_default_MS           x11         R_default_MS           x11         R_default_MS           x11         Suspend Reference Number           x12         R_default_MS           x14         Suspend Reference Number           x15         TLLI           x20         TMSI           x21         Trace Reference           x22         Trace Type           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Identifier List           x27         LSA Information           x28         Packet Flow Identifier           x29         GPRS Timer           x3a <t< td=""><td></td><td></td></t<>		
x12         MS Bucket Size           x13         MS Radio Access Capability           x14         OMC Id           x15         PDU In Error           x16         PDU Lifetime           x17         Priority           x18         QoS Profile           x19         Radio Cause           x11a         RA-Cap-UPD-Cause           x14         Routeing Area           x15         Routeing Area           x16         Suspend Reference Number           x17         Tag           x11         Tag           x11         TLL           x20         TMSI           x21         Trace Reference           x22         Trace Type           x23         TransactionId           x24         Trigger Id           x25         Number of octets affected           x26         LSA Identifier List           x27         LSA Information           x28         Packet Flow Identifier           x29         GPRS Timer           x3a         Aggregate BSS QoS Profile (ABQP)           x3a         Aggregate BSS QoS Profile (ABQP)           x3a         Aggregate GPS Assistance Data		
x13       MS Radio Access Capability         x14       OMC Id         x15       PDU In Error         x16       PDU Lifetime         x17       Priority         x18       QoS Profile         x19       Radio Cause         x11       RA-Cap-UPD-Cause         x11       RA-Cap-UPD-Cause         x11       Routeing Area         x12       R_default_MS         x13       Suspend Reference Number         x14       Suspend Reference Number         x15       Tag         x11       TLLI         x20       TMSI         x21       Trace Reference         x22       Trace Type         x23       TransactionId         x24       Trigger Id         x25       Number of octets affected         x26       LSA Information         x28       Packet Flow Identifier         x29       GPRS Timer         x3a       Aggregate BSS QoS Profile (ABQP)         x3d       Service UTRAN CCO (Cell Change Order)         x3e       NSEI         x3f       ReLP APDU         x40       Location Type         x42       Requested GPS		
x14OMC Idx15PDU In Errorx16PDU Lifetimex17Priorityx18QoS Profilex19Radio Causex1aRA-Cap-UPD-Causex1aRA-Cap-UPD-Causex1aRA-Cap-UPD-Causex1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Referencex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Estimate		
x15PDU In Errorx16PDU Lifetimex17Priorityx18QoS Profilex19Radio Causex11aRA-Cap-UPD-Causex1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Referencex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx3aAggregate BSS QoS Profile (ABQP)x3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Estimate		
x16PDU Lifetimex17Priorityx18QoS Profilex19Radio Causex11RA-Cap-UPD-Causex11Routeing Areax12R_default_MSx14Suspend Reference Numberx16Tagx17TLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx3aAggregate BSS QoS Profile (ABQP)x3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Estimate		
x17Priorityx18QoS Profilex19Radio Causex1aRA-Cap-UPD-Causex1aRA-Cap-UPD-Causex1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Type		
x18QoS Profilex19Radio Causex1aRA-Cap-UPD-Causex1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Type		
x19Radio Causex1aRA-Cap-UPD-Causex1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1dSuspend Reference Numberx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx41LCS Client Typex44Location Typex44Location Typex44Location Estimate		
x1aRA-Cap-UPD-Causex1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Referencex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx41LCS QoSx44Location Typex44Location Typex44Location Estimate		
x1bRouteing Areax1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx27LSA Identifier Listx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx41LCS Client Typex44Locsation Typex44Location Typex44Location Typex44Location Estimate		
x1cR_default_MSx1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Estimate		RA-Cap-UPD-Cause
x1dSuspend Reference Numberx1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Type		
x1eTagx1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx30Feature Bitmapx31Aggregate BSS QoS Profile (ABQP)x32Bucket_Full Ratiox34Service UTRAN CCO (Cell Change Order)x35NSEIx36NSEIx37LCS QoSx41LCS QoSx42Requested GPS Assistance Datax44Location Typex44Location Estimate		
x1fTLLIx20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3aNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex44Location Typex44Location Estimate	x1d	Suspend Reference Number
x20TMSIx21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type	x1e	Tag
x21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex43Location Typex44Location Estimate	x1f	TLLI
x21Trace Referencex22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex43Location Typex44Location Estimate	x20	TMSI
x22Trace Typex23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Typex44Location Estimate		Trace Reference
x23TransactionIdx24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type	x22	Trace Type
x24Trigger Idx25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type		
x25Number of octets affectedx26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type		
x26LSA Identifier Listx27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type		
x27LSA Informationx28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type		
x28Packet Flow Identifierx29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax44Location Type		
x29GPRS Timerx3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3aAggregate BSS QoS Profile (ABQP)x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3bFeature Bitmapx3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3cBucket_Full Ratiox3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3dService UTRAN CCO (Cell Change Order)x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3eNSEIx3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x3fRRLP APDUx40LCS QoSx41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x40     LCS QoS       x41     LCS Client Type       x42     Requested GPS Assistance Data       x43     Location Type       x44     Location Estimate		
x41LCS Client Typex42Requested GPS Assistance Datax43Location Typex44Location Estimate		
x42     Requested GPS Assistance Data       x43     Location Type       x44     Location Estimate		
x43     Location Type       x44     Location Estimate		
x44 Location Estimate		
	x45	Positioning Data
x46 Deciphering Keys	x46	Deciphering Keys

x47         LCS Priority           x48         LCS Cause           x49         LCS Capability           x44         RRLP Flags           x44         RRLP Flags           x44         RAN-INFORMATION-REQUEST Application Container           x50         This value is reserved for future use and shall be treated by the recipie           as an unknown IEI         trins value should not be used, as it has been used in earlier versions of this value should not be used, as it has been used in earlier versions of this value should not be used.           x51         This value should not be used.           x52         PFC flow control parameters           x53         Global CN-Id           x54         RIM Protocol Version Number           x55         Rink Protocol Version Number           x56         Application Error Container           x57         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-REQUEST RIM Container           <	IEI coding (hexadecimal)	IEI Types
x48         LCS Cause           x49         LCS Capability           x4a         RRL P Flags           x4b         RIM Application Identity           x4c         RIM Sequence number           x4d         RAN-INFORMATION Application Container           x50         This value should not be used, as it has been used in earlier versions of this protocol.           x52         PFC flow control parameters           x53         Global CN-10           x54         RIM Routing Information           x55         RIM Protocol Version Number           x56         Application Error Container           x57         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-ACK RIM Container           x58         RAN-INFORMATION-ACK RIM Container           x56         MBMS Session Identity           x56         MBMS Session Identity           x56         MBMS Session Identity           x56 <td< td=""><td>x47</td><td>LCS Priority</td></td<>	x47	LCS Priority
x43       LCS Capability         x44       RRLP Flags         x4b       RIM Application Identity         x4c       RIM Application Identity         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RIM PDU Indications         x50       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x51       This value should not be used, as it has been used in earlier versions of this protocol.         x52       PFC flow control parameters         x53       Global CN-Id         x54       RIM Protocol Version Number         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-APELCATON-ERCR RIM Container         x59       RAN-INFORMATION-REQUEST RIM Container         x54       MBMS Session Identity         x56       MANINFORMATION-REQUEST RIM Container         x56       RAN-INFORMATION-REQUEST RIM Container         x56       RAN-INFORMATION-REQUEST RIM Container         x56       RAN-INFORMATION-REQUEST RIM Container      <	x48	
x4a       RRLP Figgs         x4b       RIM Sequence number         x4c       RAN-INFORMATION-REQUEST Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4f       RIM POU Indications         x50       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x51       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x52       PFC flow control parameters         x53       Global CN-Id         x54       RIM Routing Information         x55       RIM Protocol Version Number         x56       RAN-INFORMATION APPLICATION-ERROR RIM Container         x58       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x56       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x56       RAN-INFORMATION-ERROR RIM Container         x56       RAN-INFORMATION-ERROR RIM Container         x56       RAN-INFORMATION-ERROR RIM Container         x56       RAN-INFORMATION-ERROR RIM Container <t< td=""><td></td><td></td></t<>		
x4b       RIM Application Identity         x4c       RAN-INFORMATION-REQUEST Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RAN-INFORMATION Application Container         x4d       RIM PDU Indications         x50       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x51       This value should not be used, as it has been used in earlier versions of this protocol.         x52       PFC flow control parameters         x53       Global ON-Id         x54       RIM Protocol Version Number         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x59       RAN-INFORMATION-ACK RIM Container         x56       TMGI         x56       RMEMS Session Identity         x56       RMEMS Session Identity         x56       MEMS Session Information         x57       MEMS Session Information         x58       RAN-INFORMATION-REROR RIM Container         x56       TMGI         x56       MEMS Session I		
xid         RNINFORMATION           x4d         RAN-INFORMATION APDIcation Container           x4e         RAN-INFORMATION Application Container           x4f         RIM PDU Indications           x50         This value is reserved for future use and shall be treated by the recipie as an unknown IEI           x51         This value should not be used, as it has been used in earlier versions of this protocol.           x52         PFC flow control parameters           x53         Global CN-Id           x54         RIM Routing Information           x55         RIM Protocol Version Number           x66         Application Error Container           x57         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-APPLICATION-ERROR RIM Container           x58         RAN-INFORMATION-REQUEST RIM Container           x56         RAN-INFORMATION-REQUEST RIM Container           x56         RAN-INFORMATION-REQUEST RIM Container           x56         TMGI           x56         RAN-INFORMATION-REQUEST RIM Container           x56         RAN-INFORMATION-REQUEST RIM Container           x56         TMGI           x56         RAN-INFORMATION-REQUEST RIM Container           x56         TAN-INFORMATION-REROR RIM Container <t< td=""><td></td><td></td></t<>		
x4d         RAN-INFORMATION Application Container           x4e         RNINFORMATION Application Container           x4f         RIM PDU Indications           x50         This value is reserved for future use and shall be treated by the recipie as an unknown IEI           x51         This value should not be used, as it has been used in earlier versions of this protocol.           x52         PFC flow control parameters           x53         Global CN-Id           x54         RIM Routing Information           x55         RIM Protocol Version Number           x56         Application Error Container           x57         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-REQUEST RIM Container           x59         RAN-INFORMATION-ACK RIM Container           x54         RAN-INFORMATION-ACK RIM Container           x56         RMMS Session Identity           x56         RMMS Session Identity           x57         MBMS Session Information           x56         MBMS Session Information           x56         MBMS Session Information           x56         MBMS Session Information           x56         MBMS Set Target BSS Transparent Container           x56         Target BSS to Surce BSS Transparent Container           <		
x4e         RAN-INFORMATION Application Container           x4f         RIM PDU Indications           x50         This value is reserved for future use and shall be treated by the recipie as an unknown IEI           x51         This value should not be used, as it has been used in earlier versions of this protocol.           x52         PPC flow control parameters           x53         Global CN-Id           x54         RIM Routing Information           x55         RIM Protocol Version Number           x56         Application Error Container           x57         RAN-INFORMATION APPLICATION-ERROR RIM Container           x58         RAN-INFORMATION-APPLICATION-ERROR RIM Container           x58         RAN-INFORMATION-APPLICATION-ERROR RIM Container           x58         RAN-INFORMATION-ERROR RIM Container           x56         RAN-INFORMATION-ERROR RIM Container           x56         RAN-INFORMATION-ERROR RIM Container           x56         RANS Session Duration           x56         MBMS Session Information           x57         MBMS Session Information           x58         MBMS Session Information           x59         MBMS Session Information           x51         MBMS Session Information           x52         MBMS Session Source BSS Transparent Container<		PANLINEORMATION_RECUEST Application Container
x4f       RIM PDU Indications         x50       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x51       This value should not be used, as it has been used in earlier versions of this protocol.         x52       PFC flow control parameters         x53       Global CN-Id         x54       RIM Routing Information         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-ACK RIM Container         x59       RAN-INFORMATION-ACK RIM Container         x56       TMGI         x56       RAN-INFORMATION-ACK RIM Container         x56       TMGI         x56       RAN-INFORMATION-EROR RIM Container         x56       TMGI         x56       MBMS Session Identity         x56       MBMS Session Identity         x56       MBMS Session Information         x61       MBMS Session Information         x62       MBMS Session Information         x63       MBMS Sest to Sarget BSS Transparent Container         x64       Source BSS to Sarget BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container		
x50       This value is reserved for future use and shall be treated by the recipie as an unknown IEI         x51       This value should not be used, as it has been used in earlier versions of this protocol.         x52       PFC flow control parameters         x53       Global CN-Id         x54       RIM Routing Information         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x56       TMGI         x56       MANINFORMATION-REQUEST RIM Container         x56       TMGI         x56       MBMS Session Identity         x56       MBMS Session Identity         x56       MBMS Session Information         x51       MBMS Session Information         x62       MBMS Session Information         x63       MBMS Stop Cause         x64       Source BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list		
as an unknown IEI           x51         This value should not be used, as it has been used in earlier versions of this protocol.           x52         PFC flow control parameters           x53         Global CN-Id           x54         RIM Protocol Version Number           x55         RIM Protocol Version Number           x56         Application Error Container           x57         RAN-INFORMATION-REQUEST RIM Container           x58         RAN-INFORMATION-ACK RIM Container           x59         RAN-INFORMATION-ACK RIM Container           x56         RAN-INFORMATION-ACR RIM Container           x56         RAN-INFORMATION-ACR RIM Container           x56         RAN-INFORMATION-ERROR RIM Container           x56         RAM-Session Identity           x56         MBMS Session Identity           x56         MBMS Session Information           x51         MBMS Secore Area Identity List           x60         MBMS Secore Area Identity           x56         MBMS Secore Area Identity           x61         MBMS Secore Case           x62         MBMS Secore Case           x63         MBMS Secore Case           x64         Source BSS to Target BSS Transparent Container           x65         Target BSS to Source		
this protocol.         x52       PFC flow control parameters         x53       Global CN-Id         x54       RIM Rotuting Information         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x50       RAN-INFORMATION-ACK RIM Container         x50       RAN-INFORMATION-REROR RIM Container         x50       RAN-INFORMATION-REROR RIM Container         x51       RBMS Session Identity         x56       TMGI         x57       MBMS Session Identity         x56       MBMS Session Information         x57       MBMS Seponse         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Surget BSS Transparent Container         x65       Target BS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x62       RNC Ide		as an unknown IEI
x53       Global CN-Id         x54       RIM Routing Information         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x59       RAN-INFORMATION-ACK RIM Container         x50       RAN-INFORMATION-ACK RIM Container         x50       RAN-INFORMATION-ACK RIM Container         x56       TMGI         x56       RAN-Session Identity         x56       MBMS Session Identity         x56       MBMS Session Information         x51       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x60       RNC Identifier         x61       Page Mode         x62       RNG Source transparent Container         x64       Source transparent Container         x70	x51	this protocol.
x64       RIM Routing Information         x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-ARPLICATION-ERROR RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x50       RAN-INFORMATION-ACK RIM Container         x56       RAN-INFORMATION-ACK RIM Container         x56       RAN-INFORMATION-ACK RIM Container         x56       RAN-INFORMATION-ACK RIM Container         x56       RANS Session Duration         x56       MBMS Session Duration         x57       RAMINS Step Cause         x61       MBMS Session Information         x62       MBMS Session Information         x63       MBMS Session Information         x64       Source BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x	x52	PFC flow control parameters
x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x59       RAN-INFORMATION-APK RIM Container         x50       RAN-INFORMATION-ACK RIM Container         x5a       RAN-INFORMATION-ACK RIM Container         x5b       RAN-INFORMATION-ACK RIM Container         x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Session Indentity         x56       MBMS Session Information         x51       MBMS Routing Area List         x62       MBMS Setop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f	x53	Global CN-Id
x55       RIM Protocol Version Number         x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION-REQUEST RIM Container         x59       RAN-INFORMATION-APK RIM Container         x56       RAN-INFORMATION-ACK RIM Container         x5a       RAN-INFORMATION-ACK RIM Container         x5c       TIMGI         x5c       TIMGI         x5d       MBMS Session Identity         x5e       MBMS Session Information         x5f       MBMS Session Information         x60       MBMS Response         x61       MBMS Stop Cause         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source transparent Container         x6b       Target to Source Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d	x54	RIM Routing Information
x56       Application Error Container         x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x5a       RAN-INFORMATION-ACK RIM Container         x5b       RAN-INFORMATION-REROR RIM Container         x5c       TMGI         x5c       TMGI         x5c       TMGI         x5d       MBMS Session Duration         x5f       MBMS Session Information         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Target BSS transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x66       Source Transparent Container         x66       RNC Identifier         x61       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info	x55	RIM Protocol Version Number
x57       RAN-INFORMATION-REQUEST RIM Container         x58       RAN-INFORMATION RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x5a       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x5b       RAN-INFORMATION-ERROR RIM Container         x5c       TMGI         x5d       MAN-INFORMATION-ERROR RIM Container         x5c       TMGI         x5d       MBMS Session Information         x5f       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Session Information         x62       MBMS Stop Cause         x84       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target BS         x77       PFCs to Source Transparent Container         x66       Container ID         x66       RNC Identifier         x66       Container ID         x77		
x58       RAN-INFORMATION RIM Container         x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x5a       RAN-INFORMATION-ACK RIM Container         x5b       RAN-INFORMATION-ACK RIM Container         x5c       TMGI         x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Session Duration         x5f       MBMS Session Information         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72 <td></td> <td></td>		
x59       RAN-INFORMATION-APPLICATION-ERROR RIM Container         x5a       RAN-INFORMATION-ACK RIM Container         x5b       RAN-INFORMATION-ACK RIM Container         x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Session Duration         x5f       MBMS Session Duration         x5f       MBMS Response         x61       MBMS Session Information         x62       MBMS Session Information         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info     <		
x5a       RAN-INFORMATION-ACK RIM Container         x5b       RAN-INFORMATION-ERROR RIM Container         x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCS         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6b       Target to Source Transparent Container         x6b       Target Node         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73		
x5b       RAN-INFORMATION-ERROR RIM Container         x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Session Duration         x5f       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS		
x5c       TMGI         x5d       MBMS Session Identity         x5e       MBMS Session Duration         x5f       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Session Information         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SVFSI Container         x77       Active PFCs List		
x5d       MBMS Session Identity         x5e       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SUPSI Container <trd>x77       Active PFCs List</trd>		
x5e       MBMS Session Duration         x5f       MBMS Response         x60       MBMS Routing Area List         x61       MBMS Routing Area List         x62       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6d       Page Mode         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SI/PSI Container         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command		
x5f       MBMS Service Area Identity List         x60       MBMS Response         x61       MBMS Routing Area List         x62       MBMS Session Information         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x68       List of set-up PFCs         x68       List of set-up PFCs         x68       Source to Target Transparent Container         x64       Source to Target Transparent Container         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command <tr< td=""><td></td><td></td></tr<>		
x60       MBMS Response         x61       MBMS Routing Area List         x62       MBMS Session Information         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up Iist         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SI/PSI Container         x77       Active PFCS List         x78       Velocity Data         x79       DTM Handover Command         x74       GANSS Location Type		
x61       MBMS Routing Area List         x62       MBMS Stop Cause         x63       MBMS Stop Cause         x64       Source BSS to Source BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x78       Velocity Data         x79       DTM Handover Command         x74       CS Indication         x75       Requested GANSS Assistance Data         x76       GANSS Location Type         x76       GANSS Location Ty		
x62       MBMS Session Information         x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SI/PSI Container         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command         x74       PS Handover Command         x75       PS Handover Command         x76       SI/PSI Container		
x63       MBMS Stop Cause         x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IIMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command         x74       CS Indication         x75       Requested GANSS Assistance Data         x76       GINSS Location Type         x76       GANSS Location Type         x76       GANSS Location Typ		
x64       Source BSS to Target BSS Transparent Container         x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Command         x76       SUPSI Container         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command         x74       CS Indication         x75       Requested GANSS Assistance Data         x76       GANSS Location Type         x76       GANSS Location Type         x76       GANSS Location Type		
x65       Target BSS to Source BSS Transparent Container         x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Indications         x76       SI/PSI Container         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command         x74       GANSS Assistance Data         x75       Requested GANSS Assistance Data         x76       CS Indication         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command		
x66       NAS container for PS Handover         x67       PFCs to be set-up list         x68       List of set-up PFCs         x69       Extended Feature Bitmap         x6a       Source to Target Transparent Container         x6b       Target to Source Transparent Container         x6c       RNC Identifier         x6d       Page Mode         x6e       Container ID         x6f       Global TFI         x70       IMEI         x71       Time to MBMS Data Transfer         x72       MBMS Session Repetition Number         x73       Inter RAT Handover Info         x74       PS Handover Command         x75       PS Handover Indications         x76       SI/PSI Container         x77       Active PFCs List         x78       Velocity Data         x79       DTM Handover Command         x74       CS Indication         x75       Requested GANSS Assistance Data         x74       GANSS Location Type         x75       Requested GANSS Assistance Data         x76       SI/PSI Container         x77       Active PFCs List         x78       Velocity Data         x79		
x67PFCs to be set-up listx68List of set-up PFCsx69Extended Feature Bitmapx6aSource to Target Transparent Containerx6bTarget to Source Transparent Containerx6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx75PS Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx75Requested GANSS Assistance Datax76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx75Requested GANSS Assistance Datax76GANSS Location Typex71GANSS Positioning Datax72Flow Control Granularityx71eNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x68List of set-up PFCsx69Extended Feature Bitmapx6aSource to Target Transparent Containerx6bTarget to Source Transparent Containerx6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74Requested GANSS Assistance Datax79GANSS Location Typex74Requested GANSS Assistance Datax75Flow Control Granularityx76GANSS Positioning Datax77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76GANSS Location Typex76Flow Control Granularityx77eNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x69Extended Feature Bitmapx6aSource to Target Transparent Containerx6bTarget to Source Transparent Containerx6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx72Requested GANSS Assistance Datax74PS Isolicationx75PS Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority	x67	
x6aSource to Target Transparent Containerx6bTarget to Source Transparent Containerx6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74GANSS Assistance Datax75Requested GANSS Assistance Datax76GANSS Positioning Datax77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx75Requested GANSS Assistance Datax76GANSS Location Typex77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76Requested GANSS Assistance Datax77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76Subsciber Profile ID for RAT/Frequency priority		
x6bTarget to Source Transparent Containerx6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox75PS Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74GANSS Assistance Datax75Requested GANSS Assistance Datax76GANSS Location Typex77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76GANSS Assistance Datax77Requested GANSS Assistance Datax76GANSS Positioning Datax77Kether Information Statex76Flow Control Granularityx77Kother Information Statex78Velocity Datax79DTM Handover Commandx71Requested GANSS Assistance Datax72GANSS Positioning Datax74GANSS Positioning Datax76Flow Control Granularityx71eNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority	x69	Extended Feature Bitmap
x6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority	хба	Source to Target Transparent Container
x6cRNC Identifierx6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74CS Indicationx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority	x6b	Target to Source Transparent Container
x6dPage Modex6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx74SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x6eContainer IDx6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx72Kequested GANSS Assistance Datax76SI/PSI Locationx77Requested GANSS Assistance Datax76SI/S Location Typex77Requested GANSS Assistance Datax76SI/S Location Typex77Kothol Granularityx76Flow Control Granularityx77eNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x6fGlobal TFIx70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7cGANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x70IMEIx71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76SI Indicationx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx76SI Indicationx77Requested GANSS Assistance Datax76GANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x71Time to MBMS Data Transferx72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x72MBMS Session Repetition Numberx73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x73Inter RAT Handover Infox74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x74PS Handover Commandx75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x75PS Handover Indicationsx76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x76SI/PSI Containerx77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x77Active PFCs Listx78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x78Velocity Datax79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x79DTM Handover Commandx7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x7aCS Indicationx7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x7bRequested GANSS Assistance Datax7cGANSS Location Typex7dGANSS Positioning Datax7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x7c       GANSS Location Type         x7d       GANSS Positioning Data         x7e       Flow Control Granularity         x7f       eNB Identifier         x80       E-UTRAN Inter RAT Handover Info         x81       Subscriber Profile ID for RAT/Frequency priority		
x7d       GANSS Positioning Data         x7e       Flow Control Granularity         x7f       eNB Identifier         x80       E-UTRAN Inter RAT Handover Info         x81       Subscriber Profile ID for RAT/Frequency priority		
x7eFlow Control Granularityx7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x7feNB Identifierx80E-UTRAN Inter RAT Handover Infox81Subscriber Profile ID for RAT/Frequency priority		
x80         E-UTRAN Inter RAT Handover Info           x81         Subscriber Profile ID for RAT/Frequency priority		
x81 Subscriber Profile ID for RAT/Frequency priority	x7f	eNB Identifier
x81 Subscriber Profile ID for RAT/Frequency priority		
	x82	Request for Inter RAT Handover Info

IEI coding (hexadecimal)	IEI Types
x83	Reliable Inter RAT Handover Info

### 11.3.1 Alignment octets

The Alignment Octets are used to align a subsequent IEI onto a 32 bit boundary. The element coding is:

Table 11.3.1: Alignment octets IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator	(note)					
octet 3-5	spare or	ctet						
	The Leng present.	th Indica	tor may	indicate	that from	0 to 3 s	pare octe	ets are

### 11.3.2 Bmax default MS

This information element indicates the default bucket size (Bmax) in octets for an MS. The element coding is:

#### Table 11.3.2: Bmax default MS IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3-4	Bmax							

The Bmax field is coded as Bmax of BVC Bucket Size, see sub-clause 11.3.5.

### 11.3.3 BSS Area Indication

This element is used to indicate that the paging shall be done in all the cells within the BSS. The element coding is:

Table 11.3.3: BSS Area Indication IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3	BSS ind	icator						

The coding of octet 2 is a binary number indicating the Length of the remaining element.

The coding of octet 3 shall not be specified. The recipient shall ignore the value of this octet.

### 11.3.4 Bucket Leak Rate (R)

This information element indicates the leak rate (R) to be applied to a flow control bucket. The element coding is:

#### Table 11.3.4: Bucket Leak Rate IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3	R Value	(MSB)						
octet 4	R Value	(LSB)						

If the Gigabit Interface feature has not been negotiated, the R field is the binary encoding of the rate information expressed in 100 bits/s increments, starting from 0 x 100 bits/s until 65 535 x 100 bits/s (6 Mbps).

If the Gigabit Interface feature has been negotiated, the R field is the binary encoding of the rate information expressed in increments as defined by the *Flow Control Granularity* IE.

### 11.3.5 BVC Bucket Size

This information element indicates the maximum bucket size (Bmax) in octets for a BVC. The element coding is:

Table 11.3.5: BVC Bucket Size IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3	Bmax (N	/ISB)						
octet 4	Bmax (L	SB)						

If the Gigabit Interface feature has not been negotiated, the Bmax field is the binary encoding of the bucket-size information expressed in 100 octet increments, starting from 0 x 100 octets until 65 535 x 100 octets (6 Mbytes).

If the Gigabit Interface feature has been negotiated, the Bmax field is the binary encoding of the rate information expressed in increments as defined by the *Flow Control Granularity* IE.

## 11.3.6 BVCI (BSSGP Virtual Connection Identifier)

The BVCI identifies a BVC. The element coding is:

#### Table 11.3.6: BVCI IE

	8	7	6	5	4	3	2	1	
octet 1	IEI								
octet 2, 2a	Length I	ength Indicator							
octet 3-4	Unstruc	tured val	ue						

### 11.3.7 BVC Measurement

This information element describes average queuing delay for a BVC. The element coding is:

Table 11.3.7: BVC Measurement IE


	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3,4	Delay V	alue (in d	centi-sec	onds)				

The Delay Value field is coded as a 16-bit integer value in units of centi-seconds (one hundredth of a second). This coding provides a range of over 10 minutes in increments of 10 ms. As a special case, the hexadecimal value 0xFFFF (decimal 65 535) shall be interpreted as "infinite delay".

### 11.3.8 Cause

The Cause information element indicates the reason for an exception condition. The element coding is:

Table 11.3.8.a: Cause IE



octet 1	IEI
octet 2, 2a	Length Indicator
octet 3	Cause value

Cause value	Semantics of coding
Hexadecimal	
	All values not listed below shall be treated as
	"protocol error - unspecified"
x00	Processor overload
x01	Equipment failure
x02	Transit network service failure
x03	Network service transmission capacity modified
	from zero kbps to greater than zero kbps
x04	Unknown MS
x05	BVCI unknown
x06	cell traffic congestion
x07	SGSN congestion
x08	O&M intervention
x09	BVCI-blocked
x0a	PFC create failure
x0b	PFC preempted
x0c	ABQP no more supported
x20	Semantically incorrect PDU
x21	Invalid mandatory information
x22	Missing mandatory IE
x23	Missing conditional IE
x24	Unexpected conditional IE
x25	Conditional IE error
x26	PDU not compatible with the protocol state
x27	Protocol error - unspecified
x28	PDU not compatible with the feature set
x29	Requested Information not available
x2a	Unknown Destination address
x2b	Unknown RIM Application Identity or RIM
	application disabled
x2c	Invalid Container Unit Information
x2d	PFC queuing
x2e	PFC created successfully
x2f	T12 expiry
x30	MS under PS Handover treatment
x31	Uplink quality
x32	Uplink strength
x33	Downlink quality
x34	Downlink strength
x35	Distance
x36	Better cell
x37	Traffic
x38	Radio contact lost with MS
x39	MS back on old channel
хЗа	T13 expiry
x3b	T14 expiry
x3c	Not all requested PFCs created
x3d	CS cause
x3e	Requested ciphering and/or integrity protection
	algorithms not supported
x3f	Relocation failure in target system
x40	Directed Retry
x41	Time critical relocation
x42	PS Handover Target not allowed
x43	PS Handover not Supported in Target BSS or
	Target System

### Table 11.3.8.b: Cause coding

x44	Incoming relocation not supported due to PUESBINE feature
x45	DTM Handover - No CS resource
x46	DTM Handover - PS Allocation failure
x47	DTM Handover - T24 expiry
x48	DTM Handover - Invalid CS Indication IE
x49	DTM Handover - T23 expiry
x4a	DTM Handover - MSC Error
x80 to x87	Reserved for further definition of non-critical PS handover cause values

NOTE: If received, cause values x80 to x87 inclusive indicate a non-critical PS Handover (see sub-clause 8a.5).

## 11.3.9 Cell Identifier

This information element uniquely identifies one cell. The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octets 3-8	Routing	Octets 3 to 8 contain the value part (starting with octet 2) of the <i>Routing Area Identification IE</i> defined in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI						le t
octets 9-10	Octets 9 and 10 contain the value part (starting with octet 2) of the <i>Cell Identity IE</i> defined in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI					of the		

### Table 11.3.9: Cell Identifier IE

### 11.3.10 Channel needed

This information element is coded as defined in 3GPP TS 29.018. It is relevant to circuit-switched paging requests. The element coding is:

### Table 11.3.10: Channel needed IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
	Rest of PDU de IEI and 3	fined in 3	GPP TS		not inclu			

### 11.3.11 DRX Parameters

This information element contains MS specific DRX information. The element coding is:

### Table 11.3.11: DRX Parameters IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
	Rest of e 3GPP T							
	3GPP T							

## 11.3.12 eMLPP-Priority

This element indicates the eMLPP-Priority of a PDU. The element coding is:

Table 11.3.12: eMLPP-Priority IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3	Rest of	element	coded as	s the valu	ue part o	f the eMl	_PP-Prio	rity IE
	defined	in 3GPP	TS 48.0	08, not ir	ncluding	3GPP T	S 48.008	IEI and
	3GPP T	S 48.008	3 length i	ndicator				

## 11.3.13 Flush Action

The Flush action information element indicates to the SGSN the action taken by the BSS in response to the flush request. The element coding is:

Table '	11.3.13.a:	Flush	Action IE	
---------	------------	-------	-----------	--

_	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3	Action v	alue						

#### Table 11.3.13.b: Action coding

Action value Hexadecimal	Semantics of coding
x00	LLC-PDU(s) deleted
x01	LLC-PDU(s) transferred
	All values not explicitly shown are reserved for
	future use

## 11.3.14 IMSI

This information element contains the International Mobile Subscriber Identity (see 3GPP TS 23.003). The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3-n	Octets 3 Identity (NOTE 2	IE define		SI coded PP TS 24		alue part	t of the A	<i>lobile</i>
NOTE 1: T	The Type		<i>ity</i> field ir	n the <i>Mo</i>	bile Iden	<i>tity</i> IE sh	all be igr	nored by

Table 11.3.14: IMSI IE

### 11.3.15 LLC-PDU

.

This information element contains an LLC-PDU. The element coding is:

Table 11.3.15: LLC-PDU IE

8	7	6	5	4	3	2	1

octet 1	IEI
octet 2, 2a	Length Indicator
octet 3	LLC-PDU (first part)
octet n	LLC-PDU (last part)

### 11.3.16 LLC Frames Discarded

This element describes the number of LLC frames that have been discarded inside a BSS. The element coding is:

Table 11.3.16: LLC Frames Discarded IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3	Number of frames discarded (in hexadecimal)							

## 11.3.17 Location Area

This element uniquely identifies one Location Area. The element coding is:

Table 11.3.17: Location Area IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octets 3-7		Octets 3 to 7 contain the value part (starting with octet 2) of the Location Area Identification IE defined in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI						

The coding of octet 2 is a binary number indicating the Length of the remaining element.

### 11.3.18 LSA Identifier List

This information element uniquely identifies LSAs. The element coding is:

Table 11.3.18: LSA Identifier List IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length Indicator							
octet 3-?	Rest of element coded as in 3GPP TS 48.008, not including 3GPP TS 48.008 IEI and 3GPP TS 48.008 length indicator							

## 11.3.19 LSA Information

This information element uniquely identifies LSAs, the priority of each LSA and the access right outside these LSAs. The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	Length Indicator						
octet 3-?	Rest of element coded as in 3GPP TS 48.008, not including 3GPP TS 48.008 IEI and 3GPP TS 48.008 length indicator							

## 11.3.20 Mobile Id

The element coding is:

Table 11.3.20: Mobile Id IE									
	8	8 7 6 5 4 3 2 1							
octet 1	IEI	El							
octet 2, 2a	Length I	Length Indicator							
octet 3-n	value pa 3GPP T	Octets 3-n contain either the IMSI, IMEISV or IMEI coded as the value part (starting with octet 3) of the <i>Mobile Identity IE</i> defined in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI and 3GPP TS 24.008 length indcator							

### 11.3.21 MS Bucket Size

This information element indicates an MS's bucket size (Bmax). The element coding is:

Table 11.3.21: MS Bucket Size IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	_ength Indicator						
octet 3-4	Bmax							

The Bmax field is coded as Bmax of BVC Bucket Size, see sub-clause 11.3.5.

## 11.3.22 MS Radio Access Capability

This information element contains the capabilities of the ME. The element coding is:

### Table 11.3.22: MS Radio Access Capability IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
	Rest of e 3GPP T 3GPP T	S 24.008	, not inc	luding 30	GPP TS	efined in 24.008 II	EI and	

## 11.3.23 OMC Id

The element coding is:

#### Table 11.3.23: OMC Id IE

	8	7	6	5	4	3	2	1	
octet 1	IEI	El							
octet 2, 2a	Length I	ength Indicator							
octet 3-22	For the OMC identity, see 3GPP TS 12.20								

## 11.3.24 PDU In Error

The element coding is:

### Table 11.3.24: PDU In Error IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3-?	Erroneous BSSGP PDU							

## 11.3.25 PDU Lifetime

This information element describes the PDU Lifetime for a PDU inside the BSS. The element coding is:

### Table 11.3.25: PDU Lifetime IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
octet 3-4	Delay Value							

The Delay Value field is coded as Delay Value of BVC Measurement, see sub-clause 11.3.7.

## 11.3.26 PDU Type

The first octet of a BSSGP PDU shall contain the PDU type IE. The PDU type IE is one octet long.

### Table 11.3.26: PDU Types

PDU type coding (Hexadecimal)	PDU Types
(nexadecimal)	PDUs between RL and BSSGP SAPs
x00	DL-UNITDATA
x01	UL-UNITDATA
x02	RA-CAPABILITY
x03	reserved (Note 1)
x04	DL-MBMS-UNITDATA
x05	UL-MBMS-UNITDATA
	PDUs between GMM SAPs
x06	PAGING-PS
x07	PAGING-CS
x08	RA-CAPABILITY-UPDATE
x09	RA-CAPABILITY-UPDATE-ACK
x0a	RADIO-STATUS
x0b	SUSPEND
х0с	SUSPEND-ACK
x0d	SUSPEND-NACK
x0e	RESUME
x0f	RESUME-ACK
x10	RESUME-NACK
	PDUs between NM SAPs

PDU type coding	PDU Types			
(Hexadecimal)				
x20	BVC-BLOCK			
x21	BVC-BLOCK-ACK			
x22	BVC-RESET			
x23	BVC-RESET-ACK			
x24	BVC-UNBLOCK			
x25	BVC-UNBLOCK-ACK			
x26	FLOW-CONTROL-BVC			
x27	FLOW-CONTROL-BVC-ACK			
x28	FLOW-CONTROL-MS			
x29	FLOW-CONTROL-MS-ACK			
x2a	FLUSH-LL			
x2b	FLUSH-LL-ACK			
x2c	LLC-DISCARDED			
x2d	FLOW-CONTROL-PFC			
x2e	FLOW-CONTROL-PFC-ACK			
x40	SGSN-INVOKE-TRACE			
x41	STATUS			
	PDUs between PFM SAPs			
0x50	DOWNLOAD-BSS-PFC			
0x51	CREATE-BSS-PFC			
0x52	CREATE-BSS-PFC-ACK			
0x53	CREATE-BSS-PFC-NACK			
0x54	MODIFY-BSS-PFC			
0x55	MODIFY-BSS-PFC-ACK			
0x56	DELETE-BSS-PFC			
0x57	DELETE-BSS-PFC-ACK			
0x58	DELETE-BSS-PFC-REQ			
0x59	PS-HANDOVER-REQUIRED			
0x5a	PS-HANDOVER-REQUIRED-ACK			
0x5b	PS-HANDOVER-REQUIRED-NACK			
0x5c	PS-HANDOVER-REQUEST			
0x5d	PS-HANDOVER-REQUEST-ACK			
0x5e	PS-HANDOVER-REQUEST-NACK			
0x91	PS-HANDOVER-COMPLETE			
0x92	PS-HANDOVER-CANCEL			
0x93	PS-HANDOVER-COMPLETE-ACK			
0,000	PDUs between LCS SAPs			
0x60	PERFORM-LOCATION-REQUEST			
0x61	PERFORM-LOCATION-RESPONSE			
0x62	PERFORM-LOCATION-ABORT			
0x63	POSITION-COMMAND			
0x64	POSITION-RESPONSE			
0,04	PDUs between RIM SAPs			
0x70	RAN-INFORMATION			
0x71	RAN-INFORMATION-REQUEST			
0x72	RAN-INFORMATION-ACK			
0x73	RAN-INFORMATION-ERROR			
0x73	RAN-INFORMATION-ERROR			
	PDUs between MBMS SAPs			
0x80	MBMS-SESSION-START-REQUEST			
0x81	MBMS-SESSION-START-REQUEST			
0x82	MBMS-SESSION-STOP-REQUEST			
0x83	MBMS-SESSION-STOP-REQUEST			
0x84	MBMS-SESSION-STOP-RESPONSE MBMS-SESSION-UPDATE-REQUEST			
0x85	MBMS-SESSION-UPDATE-REQUEST			
RESERVED	all values not explicitly shown are reserved for future use			
	Le was allocated in an earlier version of the protocol and shall not			
be used.				

## 11.3.27 Priority

This element indicates the priority of a PDU. The element coding is:

Table 11.3.27: Priority IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
	Rest of element coded as the value part of the Priority IE defined in 3GPP TS 48.008, not including 3GPP TS 48.008 IEI and						efined in	
	3GPP TS 48.008 length indicator							

## 11.3.28 QoS Profile

This information element describes the QoS Profile associated with a PDU. The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length Indicator							
octet 3-4	Peak bit	Peak bit rate provided by the network (note)						
octet 5	Peak Bit Rate C/R T A Precedence Granularity							
NOTE: Th	NOTE: The bit rate 0 (zero) shall mean "best effort" in this IE.							

"Peak bit rate" is coded as shown below:

Table 11.3.28.a1: Peak bit rat	te
--------------------------------	----

	8	7	6	5	4	3	2	1
octet 3	et 3 Peak bit rate value (MSB)							
octet 4 Peak bit rate value (LSB)								

If the Gigabit Interface feature has not been negotiated, the "Peak bit rate" field is the binary encoding of the peak bit rate information expressed in 100 bits/s increments, starting from 0 x 100 bits/s until 65 535 x 100 bits/s (6 Mbps).

If the Gigabit Interface feature has been negotiated, the "Peak bit rate" field is the binary encoding of the peak bit rate information expressed in increments as defined by the *Peak Bit Rate Granularity* field.

"Precedence" is coded as shown below (complying with 3GPP TS 23.060).

Table 1	1.3.28.	b: Preced	dence	coding
---------	---------	-----------	-------	--------

coding	s	semantic				
	DL-UNITDATA	UL-UNITDATA				
000	High priority	Radio priority 1				
001	Normal priority	Radio priority 2				
010	Low priority	Radio priority 3				
011	Reserved	Radio priority 4				
100	Reserved	Radio Priority Unknown				

All values not allocated are reserved. All reserved values shall be interpreted as value 010.

"A-bit" is coded as shown below.

Table 11.3.28.c: "A bit" coding

coding semanti	C
----------------	---

0	Radio interface uses RLC/MAC ARQ functionality
1	Radio interface uses RLC/MAC-UNITDATA functionality

"T-bit" is coded as shown below.

### Table 11.3.28.d: "T bit" coding

coding	semantic
0	The SDU contains signalling (e.g. related to GMM)
1	The SDU contains data

"C/R-bit" is coded as shown below.

### Table 11.3.28.e: "C/R bit" coding

coding	coding semantic		
0	The SDU contains a LLC ACK or SACK command/response		
	frame type		
1	The SDU does not contain a LLC ACK or SACK		
	command/response frame type		

"Peak Bit Rate Granularity" is coded as shown below.

#### Table 11.3.28.f: "Peak Bit Rate Granularity" coding

coding	semantic
00	100 bits/s increments
01	1000 bits/s increments
10	10000 bits/s increments
11	100000 bits/s increments

This field provides the granularity to be used for deriving the peak bit rate value if the Gigabit Interface feature is negotiated.

## 11.3.29 Radio Cause

This information element indicates the reason for an exception condition on the radio interface. The element coding is:

### Table 11.3.29.a: Radio Cause IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3	Radio C	ause val	ue					

Table 11.3.29.b: Radio Cause value

radio cause value	Semantics of coding
Hexadecimal	

continue					
Jonunue					
ote below.					
e below.					
e reserved. If					
as "radio contact					
as not been					
the Radio Cause values in range of x03-x04 should					
eived be handled as "radio contact lost with the MS". This					
order to be backwards compatible with earlier releases of					

### 11.3.30 RA-Cap-UPD-Cause

The RA-Cap-UPD-Cause indicates the success of the RA-CAPABILITY-UPDATE procedure or the reason of the failure. The element coding is:

#### Table 11.3.30.a: RA-Cap-UPD-Cause IE

	8	7	6	5	4	3	2	1	
octet 1	IEI								
octet 2, 2a	Length I	Length Indicator							
octet 3	RA-Cap	-UPD Ca	iuse valu	ie					

#### Table 11.3.30.b: RA-Cap-UPD Cause value

RA-Cap-UPD cause value Hexadecimal	Semantics of coding
x00	OK, RA capability IE present
x01	TLLI unknown in SGSN
x02	No RA Capabilities or IMSI available for this MS
	All values not explicitly listed are reserved. If received, they shall be handled as "TLLI unknown in SGSN".

### 11.3.31 Routeing Area

This element uniquely identifies one routeing area. The element coding is:

### Table 11.3.31: Routeing Area IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	Length Indicator						
octets 3-8	Octets 3 Routing including	Area Ide	entificatio	n IE defi				

The coding of octet 2 is a binary number indicating the Length of the remaining element.

### 11.3.32 R\_default\_MS

This information element indicates the default bucket leak rate (R) to be applied to a flow control bucket for an MS. The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3-4	R_defa	ult_MS v	alue					

Table 11.3.32: R\_default\_MS IE

The R\_default\_MS value field is coded as The "R Value" of Bucket Leak Rate, see sub-clause 11.3.4.

## 11.3.33 Suspend Reference Number

The Suspend Reference Number information element contains an un-formatted reference number for each suspend/resume transaction. The element coding is:

Table 11.3.33: Suspend Reference Number IE

	8	7	6	5	4	3	2	1	
octet 1	IEI								
octet 2, 2a	Length I	ength Indicator							
octet 3	Suspend	Suspend Reference Number							

The Suspend Reference Number is an un-formatted 8 bit field.

## 11.3.34 Tag

This information element is used to correlate request and response PDUs. The element coding is:

#### Table 11.3.34: Tag IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
octet 3	Unstruct	tured val	ue					

## 11.3.35 Temporary logical link Identity (TLLI)

The element coding is:

#### Table 11.3.35: TLLI IE

	8	7	6	5	4	3	2	1		
octet 1		IÉI								
octet 2, 2a		Length Indicator								
octet 3-6							LLI inforr TS 44.0			

## 11.3.36 Temporary Mobile Subscriber Identity (TMSI)

The element coding is:

	8	8 7 6 5 4 3 2 1									
octet 1		IÉI									
octet 2, 2a		Length Indicator									
octet 3-6				d as the							
	ir	information element in 3GPP TS 24.008, not including									
			30	GPP TS	24.008 I	EI.					

#### Table 11.3.36: TMSI IE

### 11.3.37 Trace Reference

This element provides a trace reference number allocated by the triggering entity. The element coding is:

Table 11.3.37: Trace Reference IE

	8 7 6 5 4 3 2 1							
octet 1		IEI						
octet 2, 2a		Length Indicator						
octet 3-4				Trace Re	eference			

### 11.3.38 Trace Type

This element provides the type of trace information to be recorded. The element coding is:

Table	11.3	.38:	Trace	Туре	e IE
-------	------	------	-------	------	------

	8	8 7 6 5 4 3 2 1							
octet 1		IEI							
octet 2, 2a		Length Indicator							
octet 3		This is coded as specified in Technical Specification 3GPP TS 32.008.							

### 11.3.39 Transaction Id

This element indicates a particular transaction within a trace. The element coding is:

### Table 11.3.39: Transaction Id IE

	8	7	6	5	4	3	2	1
octet 1		IEI						
octet 2, 2a		Length Indicator						
octet 3-4				Transa	ction Id			

### 11.3.40 Trigger Id

This element provides the identity of the entity which initiated the trace. The element coding is:

### Table 11.3.40: Trigger Id IE

Γ	8	7	6	5	4	3	2	1
octet 1		IÈI						
octet 2, 2a		Length Indicator						
octet 3-22		Ent	ity Identi	ty ( typic:	ally an C	MC iden	tity)	

## 11.3.41 Number of octets affected

This information element indicates, for an MS, the number of octets transferred or deleted by BSS. The element coding is:

### Table 11.3.41: Number of octets affected IE

8 7	8
-----	---

octet 1	IEI
octet 2, 2a	Length Indicator
octet 3-5	number of octets transferred or deleted

The number of octets transferred or deleted by the BSS may be higher than the maximum Bmax value (6 553 500). SGSN shall handle any value higher than 6 553 500 as the value 6 553 500.

### 11.3.42 Packet Flow Identifier (PFI)

This information element indicates the Packet Flow Identifier for a BSS Packet Flow Context. The element coding is:

Table 11.3.42: Packet Flow Identifier (PFI) IE

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ength Indicator						
	Rest of element coded as the value part of the Packet Flow Identifier information element in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI							

The BSS shall not negotiate BSS PFCs for the following pre-defined PFI values: Best Effort, Signaling, SMS, and TOM8.

PFIs have local significance to a mobile station. A BSS Packet Flow Context shall be uniquely identified by the PFI along with the IMSI or TLLI within a routeing area.

### 11.3.42a (void)

## 11.3.43 Aggregate BSS QoS Profile

This information element indicates the Aggregate BSS QoS Profile (ABQP) for a BSS Packet Flow Context or an MBMS Service Context. The ABQP is considered to be a single parameter with multiple data transfer attributes as defined in 3GPP TS 23.107.

The element coding is:

	8	7	6	5	4	3	2	1
octet 1	IEI							
octet 2, 2a	Length I	ndicator						
	Rest of e element length in allowed	in 3GPF idicator.	P TS 24.0 The sho	008, not i rter 3-byt	ncluding	3GPP T	S 24.008	3 IEI and

Table 11.3.43: Aggregate BSS QoS Profile IE

### 11.3.44 GPRS Timer

The purpose of the *GPRS timer* information element is to specify GPRS specific timer values, e.g. the Packet Flow timer.

	Table	11.3.44:	GPRS	Timer	IE
--	-------	----------	------	-------	----

	8	7	6	5	4	3	2	1
octet 1				IE	El			
octet 2, 2a		Length Indicator						
octet 3		Unit Valu	ie		Г	imer val	ue	

Timer value:	Bits 5 to 1 represent the binary coded timer value.
Unit value:	Bits 6 to 8 defines the timer value unit for the GPRS timer as follows:
Bits 876 000 001 010 011	value is incremented in multiples of 2 s value is incremented in multiples of 1 minute value is incremented in multiples of decihours value is incremented in multiples of 500 msec
111	value indicates that the timer does not expire.
111	value indicates that the timer does not expire.

Other values shall be interpreted as multiples of 1 minute in this version of the protocol.

## 11.3.45 Feature Bitmap

The Feature bitmap information element indicates the optional features supported by the underlying NSE. The element coding is:

	8	7	6	5	4	3	2	1
octet 1				IE	El			
octet 2, 2a				Length I	ndicator			
octet 3	MBMS	Enhanc ed Radio Status	PFC- FC	RIM	LCS	INR	CBL	PFC

Table 11.3.45.a: Feature Bitmap IE

### Table 11.3.45.b: "PFC bit" coding

coding	Semantic
0	Packet Flow Context Procedures not supported
1	Packet Flow Context Procedures supported

### Table 11.3.45.c: "CBL bit" coding

coding	Semantic
0	Current Bucket Level Procedures not supported
1	Current Bucket Level Procedures supported

#### Table 11.3.45.d: "INR bit" coding

coding	Semantic
0	Inter-NSE re-routing not supported
1	Inter-NSE re-routing supported

#### Table 11.3.45.e: "LCS bit" coding

coding	Semantic
0	LCS Procedures not supported
1	LCS Procedures supported

coding	Semantic
0	RAN Information Management (RIM) procedures not
	supported
1	RAN Information Management (RIM) procedures supported

#### Table 11.3.45.f: "RIM bit" coding

#### Table 11.3.45.g: "PFC-FC" coding

coding	Semantic
0	PFC Flow Control Procedures not supported
1	PFC Flow Control Procedures supported

#### Table 11.3.45.h: "Enhanced Radio Status" coding

coding	Semantic
0	Enhanced Radio Status Procedures not supported
1	Enhanced Radio Status Procedures supported

#### Table 11.3.45.i: "MBMS" coding

coding	Semantic
0	MBMS Procedures not supported
1	MBMS Procedures supported

### 11.3.46 Bucket Full Ratio

This information element is used to convey the current bucket counter. It is binary encoded as follows:  $B_{current} x (100 / B_{max})$ . The element coding is:

#### Table 11.3.46: Bucket Full Ratio IE

	8	7	6	5	4	3	2	1
octet 1		IEI						
octet 2, 2a		Length Indicator						
octet 3	Ratio of the bucket that is filled up with data							

The field ranges from zero (00000000) to two hundred and fifty five (11111111). A value of zero means that the bucket is empty. A value of hundred means that the bucket is exactly full, while a value of two hundred and fifty five means that the bucket is at least 2.55 times  $B_{max}$ 

### 11.3.47 Service UTRAN CCO

The Service UTRAN CCO (Cell Change Order) information element indicates whether Network initiated Cell Change Order to UTRAN or E-UTRAN or PS Handover to UTRAN or E-UTRAN should be used for the mobile station or not, and it is relevant if at least one of the procedures is used:

	8	7	6	5	4	3	2	1
octet 1		IÉI						
octet 2, 2a		Length Indicator						
octet 3		Spare Service E- Service UTRAN CCO UTRAN CCO Value part						
		Value part						

### Table 11.3.47.a: Service UTRAN CCO IE

#### Table 11.3.47.b: Service UTRAN CCO Value part coding

coding bits 321	Semantic
000	Network initiated cell change order to UTRAN or PS handover to UTRAN procedure should be performed
001	Network initiated cell change order to UTRAN or PS handover to UTRAN procedure should not be performed
010	Network initiated cell change order to UTRAN or PS handover to UTRAN procedure shall not be performed
111	If received, shall be interpreted as no information available (bits 4-5 valid)
Other values	If received, shall be interpreted as no information available

### Table 11.3.47.c: Service E-UTRAN CCO Value part coding

coding bits 54	Semantic
01	Network initiated cell change order to E-UTRAN or PS handover to E-UTRAN procedure should be performed
10	Network initiated cell change order to E-UTRAN or PS handover to E-UTRAN procedure should not be performed
11	Network initiated cell change order to E-UTRAN or PS handover to E-UTRAN procedure shall not be performed
00	If received, shall be interpreted as no information available

## 11.3.48 NSEI (Network Service Entity Identifier)

The NSEI unambiguously identifies a NSE. The element coding is:

### Table 11.3.48: NSEI IE

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3		most significant octet of NSEI								
octet 4		least significant octet of NSEI								

### 11.3.49 RRLP APDU

This information element conveys an embedded message associated with a higher level protocol. The element coding is:


### Table 11.3.49: RRLP APDU IE

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3-?	messag 3G	e whose PP TS 4	content 4.031. Th	on eleme and enco he RRLP ts in the l	oding are protocol	e defined I is not o	accordir ctet align	ng to the ed.		

## 11.3.50 LCS QoS

This information element provides the LCS QoS. The element coding is:

Table 11.3.50: LCS QOS IE



octet 1	IEI
octet 2, 2a	Length Indicator
octet 3-n	Rest of element coded as the value part defined in 3GPP TS 48.008, not including 3GPP TS 48.008 IEI and 3GPP TS 48.008 octet length indicator

## 11.3.51 LCS Client Type

This information element provides the LCS Client Type. The element coding is:

### Table 11.3.51: LCS Client Type IE

	8	7	6	5	4	3	2	1		
octet 1		IÈI								
octet 2, 2a		Length Indicator								
octet 3-n		Rest of	element	coded as	s the value	ue part d	efined in			
	3G	PP TS 4	9.031, n	ot includ	ing 3GP	P TS 49.	031 IEI a	nd		
		3GPP TS 49.031 octet length indicator								

## 11.3.52 Requested GPS Assistance Data

This information element provides the information on which GPS Assistance Data has been requested. The element coding is:

### Table 11.3.52: Requested GPS Assistance Data IE

	[	8	7	6	5	4	3	2	1		
oc	tet 1	et 1 IEI									
octe	et 2, 2a		Length Indicator								
octe	et 3-n		Rest of	element	coded as	the val	ue part d	efined in			
		3G	PP TS 4	9.031, n	ot includ	ng 3GP	P TS 49.	031 IEI a	nd		
			3GPP TS 49.031 octet length indicator								

## 11.3.53 Location Type

This information element provides the Location Type. The element coding is:


### Table 11.3.53: Location Type IE

		8	7	6	5	4	3	2	1		
	octet 1	IÉI									
C	octet 2, 2a		Length Indicator								
	octet 3-n		Rest of	element	coded as	the valu	ue part d	efined in			
		3G	PP TS 4	9.031, n	ot includ	ing 3GPI	P TS 49.	031 IEI a	nd		
			3GPP TS 49.031 octet length indicator								

## 11.3.54 Location Estimate

This information element provides the Location Estimate. The element coding is:

Table 11.3.54: L	ocation l	Estimate IE
------------------	-----------	-------------



octet 1	IEI
octet 2, 2a	Length Indicator
octet 3-n	Rest of element coded as the value part defined in 3GPP TS 48.008, not including 3GPP TS 48.008 IEI and 3GPP TS 48.008 octet length indicator

## 11.3.55 Positioning Data

This information element provides Positioning Data. The element coding is:

#### Table 11.3.55: Positioning Data IE

	8	7	6	5	4	3	2	1			
octet 1		IEI									
octet 2, 2a		Length Indicator									
octet 3-n		Rest of	element	coded as	the val	ue part d	efined in				
	3G	PP TS 4	9.031, r	not includ	ing 3GP	P TS 49.	031 IEI a	Ind			
		3GPP TS 49.031 octet length indicator									

### 11.3.56 Deciphering Keys

This information element provides the Deciphering Keys. The element coding is:

### Table 11.3.56: Deciphering Keys IE

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3-n		Rest of element coded as the value part defined in								
	3G	3GPP TS 49.031, not including 3GPP TS 49.031 IEI and								
		3GPP TS 49.031 octet length indicator								

### 11.3.57 LCS Priority

This information element provides the data/information on LCS Priority. The element coding is:

#### Table 11.3.57: LCS Priority IE

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3-n		SPP TS 4	9.031, n		ing 3GP	P TS 49.	efined in 031 IEI a tor			

### 11.3.58 LCS Cause

This information element provides the data/information on LCS Cause. The element coding is:

Table 11.3.58: LCS Cause IE

	8	7	6	5	4	3	2	1			
octet 1		IÉI									
octet 2, 2a		Length Indicator									
octet 3-n		Rest of	element	coded as	s the valu	ue part d	efined in				
	30	SPP TS 4	9.031, n	ot includ	ing 3GP	P TS 49.	031 IEI a	ind			
		30	SPP TS 4	49.031 o	ctet leng	th indica	tor				

## 11.3.59 LCS Capability

This information element provides the data/information on LCS Capability. The element coding is:

Table '	11.3.59:	LCS C	apabilit	y IE	

	8	7	6	5	4	3	2	1			
octet 1		IEI									
octet 2, 2a		Length Indicator									
octet 3						of the PS					
	IE defir	ned in 30	SPP TS 2	24.008, n	ot includ	ding 3GP	P TS 24.	008 IEI			
			а	nd length	n indicat	or					

## 11.3.60 RRLP Flags

This information element provides control information for the RRLP APDU. The element coding is:

Table	11.3.	60:	RRLP	Flags II	Ξ
-------	-------	-----	------	----------	---

	8	7	6	5	4	3	2	1	
octet 1		IEI							
octet 2, 2a				Length I	ndicator				
octet 3		Spare							

The fields are coded as follows:

Flag 1 (Octet 3, bit 1):

- 0 Position Command (BSS to SGSN) or final response (SGSN to BSS);
- 1 Not a Positioning Command or final response.

Spare These bits shall be ignored by the receiver and set to zero by the sender.

## 11.3.61 RIM Application Identity

This information element specifies the addressed application within the target BSS node. The element coding is:

Table 11.3.61.a: RIM Application Identity IE

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a				Length	Indicato	r					
Octet 3		RIM Application Identity									

RIM Application Identity is coded as shown below.

Coding	Semantic
0000 0000	Reserved
0000 0001	Network Assisted Cell Change (NACC)
0000 0010	System Information 3 (SI3)
0000 0011	MBMS data channel
0000 0100 - 1111 1111	Reserved

All values not allocated are reserved.

## 11.3.62 RIM Sequence Number

This information element defines the sequence number allocated to the PDU by the source node. The element coding is:

]	8	7	6	5	4	3	2	1		
Octet 1		IEI								
Octet 2, 2a		Length Indicator								
Octet 3		RIM Sequence Number (Higher order octet)								
Octet 4		RIM Sequence Number								
Octet 5			RIN	/I Sequ	ence Nu	mber				
Octet 6		RIM Sequence Number (Lower order octet)								

### 11.3.62a RIM Container

### 11.3.62a.0 General

The coding of the *RIM Container* IE value part depends on the value of the PDU type according to the following subclauses:

### 11.3.62a.1 RAN-INFORMATION-REQUEST RIM Container

This information element defines the RIM container used in the RAN-INFORMATION-REQUEST PDU. The element coding is:

### Table 11.3.62a.1.a: RAN-INFORMATION-REQUEST RIM Container IE

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3-?	RAN-IN	-ORMA	TION-RE	QUEST	RIM Co	ntainer Co	ontents c	oded as			
			define	ed in tal	ole 11.3.6	52a.1b					

Information Elements	Type / Reference	Presence	Format	Length
RIM Application Identity	RIM Application Identity/11.3.61	М	TLV	3
RIM Sequence Number	RIM Sequence Number/11.3.62	М	TLV	6
RIM PDU Indications	RIM PDU Indications/11.3.65	М	TLV	3
RIM Protocol Version Number	RIM Protocol Version Number/11.3.67	0	TLV	3
Application Container (note 1)	RAN-INFORMATION-REQUEST Application Container/11.3.63.1	С	TLV	4-?
NOTE 1: The presence of the Application Co	ntainer depends on the value of the RIM	1 Application	Identity IE	

### 11.3.62a.2 RAN-INFORMATION RIM Container

This information element defines the RIM container used in the RAN-INFORMATION PDU. The element coding is:

Table 11.3.62a.2.a: RAN-INFORMATION RIM Container IE

		8	7	6	5	4	3	2	1			
1	Octet 1		IEI									
1	Octet 2, 2a				Length	n Indicato	or					
1	Octet 3-?	RAN-IN	IFORM/	<b>TION RI</b>	M Cont	ainer Co	ntents co	ded as d	efined in			
					table 1	1.3.62a.2	2b					

Information Elements	Type / Reference	Presence	Format	Length
RIM Application Identity	RIM Application Identity /11.3.61	М	TLV	3
RIM Sequence Number	RIM Sequence Number /11.3.62	М	TLV	6
RIM PDU Indications	RIM PDU Indications /11.3.65.	М	TLV	3
RIM Protocol Version Number	RIM Protocol Version Number/11.3.67	0	TLV	3
Application Container (NOTE 1)	RAN-INFORMATION Application Container	C (Note 1)	TLV	4-?
	/11.3.63.2			
Application Error Container (NOTE 1)		C (Note 1)	TLV	n
NOTE 1: The presence of application	information depends on the value of the RIM A	Application Id	dentity IE.	lf
application information is ma	andatory either the Application Error Container	IE or the Ap	plication (	Container
IE is present.				

Table 11.3.62a.2.b: RAN-INFORMATION RIM Container Contents

### 11.3.62a.3 RAN-INFORMATION-ACK RIM Container

This information element defines the RIM container used in the RAN-INFORMATION-ACK PDU. The element coding is:

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3-16	RAN	INFORI	MATION-	ACK RI	M Conta	iner Cont	ents code	ed as			
		defined in table 11.3.62a.3b									

### Table 11.3.62a.3.b: RAN-INFORMATION-ACK RIM Container Contents

Information Elements	Type / Reference	Presence	Format	Length
RIM Application Identity	RIM Application Identity /11.3.61	М	TLV	3
RIM Sequence Number	RIM Sequence Number /11.3.62	М	TLV	6
RIM Protocol Version Number	RIM Protocol Version Number/11.3.67	0	TLV	4

### 11.3.62a.4 RAN-INFORMATION-ERROR RIM Container

This information element defines the RIM container used in the RAN-INFORMATION-ERROR PDU. The element coding is:

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3-?	RAN-I	RAN-INFORMATION-ERROR RIM Container Contents coded as									
			define	ed in tal	ole 11.3.6	62a.4b					

#### Table 11.3.62a.4.b: RAN-INFORMATION-ERROR RIM Container Contents

Information Elements	Type / Reference	Presence	Format	Length
RIM Application Identity	RIM Application Identity /11.3.61	М	TLV	3
RIM Cause	Cause/11.3.8	М	TLV	3
RIM Protocol Version Number	RIM Protocol Version Number/11.3.67	0	TLV	3
PDU in Error	PDU in Error/11.3.24	М	TLV	3-?

### 11.3.62a.5 RAN-INFORMATION-APPLICATION-ERROR RIM Container

This information element defines the RIM container used in the RAN-INFORMATION-APPLICATION-ERROR PDU. The element coding is:

### Table 11.3.62a.5.a: RAN-INFORMATION-APPLICATION-ERROR RIM Container IE

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3-?	RAN	-INFORI	MATION-	APPLIC	CATION-	ERROR F	RIM Cont	ainer			
		Conte	nts codeo	d as def	ined in ta	able 11.3.	62a.5b				

### Table 11.3.62a.5.b: RAN-INFORMATION-APPLICATION-ERROR RIM Container Contents

Information Elements	Type / Reference	Presence	Format	Length
RIM Application Identity	RIM Application Identity /11.3.61	М	TLV	3
RIM Sequence Number	RIM Sequence Number /11.3.62	М	TLV	6
RIM PDU Indications	RIM PDU Indications /11.3.65.	М	TLV	3
RIM Protocol Version Number	RIM Protocol Version Number/11.3.67	0	TLV	3
Application Error Container	Application Error Container/11.3.64	М	TLV	n

### 11.3.63 Application Container

### 11.3.63.1 RAN-INFORMATION-REQUEST Application Container

### 11.3.63.1.0 General

The coding of the *Application Container* value part within the RAN-INFORMATION-REQUEST RIM container depends on the value of the *RIM Application Identity* IE included into the RIM container according to the following sub-clauses.

### 11.3.63.1.1 RAN-INFORMATION-REQUEST Application Container for the NACC Application

The coding of the *Application Container* IE within the RAN-INFORMATION-REQUEST RIM container for the NACC application is specified as follows:

### Table 11.3.63.1.1: RAN-INFORMATION-REQUEST Application Container coding for NACC

	8	7	6	5	4	3	2	1		
Octet 1		IEI								
Octet 2, 2a		Length Indicator								
Octet 3-10			Re	porting (	Cell Ident	ifier				

Reporting Cell Identifier: This field is encoded as the Cell Identifier defined in sub-clause 11.3.9

11.3.63.1.2 RAN-INFORMATION-REQUEST Application Container for the SI3 Application

The coding of the *Application Container* IE within the RAN-INFORMATION-REQUEST RIM container for the SI3 application is specified as follows:

Table 11.3.63.1.2: RAN-INFORMATION-REQUEST Application Container coding for SI3

	8	7	6	5	4	3	2	1
Octet 1	IEI							
Octet 2, 2a	Length Indicator							
Octet 3-10		Reporting Cell Identifier						

Reporting Cell Identifier: This field is encoded as the Cell Identifier defined in sub-clause 11.3.9

# 11.3.63.1.3 RAN-INFORMATION-REQUEST Application Container for the MBMS data channel Application

The coding of the *Application Container* IE within the RAN-INFORMATION-REQUEST RIM container for the MBMS data channel application is specified as follows:

# Table 11.3.63.1.3: RAN-INFORMATION-REQUEST Application Container coding for MBMS data channel

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3-10		Reporting Cell Identifier						

Reporting Cell Identifier: This field is encoded as the Cell Identifier defined in sub-clause 11.3.9

### 11.3.63.2 RAN-INFORMATION Application Container Unit

### 11.3.63.2.0 General

The coding of the *Application Container* value part within the RAN-INFORMATION RIM container depends on the value of the *RIM Application Identity* IE included into the RIM container according to the following sub-clauses.

### 11.3.63.2.1 RAN-INFORMATION Application Container for the NACC Application

The coding of the *Application Container* IE within the RAN-INFORMATION RIM container for the NACC application is specified as follows:

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3-10		Reporting Cell Identifier						
Octet 11		Number of SI/PSI Type						Туре
Octet 12-n		SI/PSI						

Table 11.3.63.2.1.a: RAN-INFORMATION Application Container coding for NACC

**Reporting Cell Identifier:** This field is encoded as the value part of the Cell Identifier IE defined in sub-clause 11.3.9, not including IEI and Length Indicator.

**Type:** This field indicates the type of SI/PSI messages provided by the reporting cell. The *Type* field is coded as shown below:

#### Table 11.3.63.2.1.b: Type coding

Coding	Semantic
0	SI messages as specified for BCCH (3GPP TS 44.018) follow
1	PSI messages as specified for PBCCH (3GPP TS 44.060) follow

**Number of SI/PSI:** This field indicates the number of SI/PSI provided by the reporting cell contained in the *SI/PSI field*. This number may be zero. For system information messages with multiple instances, each instance is counted as one SI/PSI message. The *Number of SI/PSI* field is coded as shown below:

145

Coding	Semantic
000 0000	0 "SI/PSI" follows
000 0001	1 "SI/PSI" follow
'	"
111 1111	127 "SI/PSI" follow

Table 11.3.63.2.1.c: Number of SI/PSI coding

**SI/PSI:** This field contains a list of either system information or packet system information messages valid for the reporting cell. The number of (packet) system information messages is indicated in the *Number of SI/PSI* field specified above. Furthermore:

- If the *Type* field indicates that "SI messages as specified for BCCH (3GPP TS 44.018) follow" then the *SI/PSI* field contains System Information message instances encoded for BCCH as specified in 3GPP TS 44.018. Each System Information message contains the *Message type* octet followed by all the IEs composing the message payload. Each message is 21 octets long.
- If the *Type* field indicates that "PSI messages as specified for PBCCH (3GPP TS 44.060) follow" then the *SI/PSI* field contains Packet System Information message instances encoded for PBCCH as specified in 3GPP TS 44.060. Each Packet System Information message contains the *MESSAGE\_TYPE* field followed by the PSI message content. Each message is 22 octets long.

### 11.3.63.2.2 RAN-INFORMATION Application Container for the SI3 Application

The coding of the value part of the *Application Container* IE within the RAN-INFORMATION RIM container for the SI3 application is specified as follows:

### Table 11.3.63.2.2: RAN-INFORMATION Application Container coding for SI3

	8	8 7 6 5 4 3 2						1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3-10		Reporting Cell Identifier						
Octet 11-31		SI3						

**Reporting Cell Identifier:** The parameter is encoded as the value part of the Cell Identifier IE defined in sub-clause 11.3.9, not including IEI and Length Indicator.

**SI3:** contains the SYSTEM INFORMATION type 3 message encoded for BCCH as specified in 3GPP TS 44.018. It contains the *Message type* octet followed by all the IEs composing the message payload. The message is 21 octets long.

# 11.3.63.2.3 RAN-INFORMATION Application Container for the MBMS data channel Application

The coding of the *Application Container* IE within the RAN-INFORMATION RIM container for the MBMS data channel application is specified as follows :

### Table 11.3.63.2.3.a: RAN-INFORMATION Application Container coding for MBMS data channel

	8	8 7 6 5 4 3 2 1							
Octet 1		IEI							
Octet 2, 2a		Length Indicator							
Octet 3-10		Reporting Cell Identifier							
Octet 11-n		MBMS data channel report							

**Reporting Cell Identifier:** This field is encoded as the value part of the Cell Identifier IE defined in sub-clause 11.3.9, not including IEI and Length Indicator.

MBMS data channel report: This field contains a CSN1 encoded structure coded as shown below:

Table 11.3.63.1.3.b: MBMS data channel report

< MBMS data channel report struct > ::= { 1 < MBMS Frequency List : < MBMS Frequency List struct > > } \*\*0 {1 < MBMS p-t-m Frequency Parameters : < MBMS p-t-m Frequency Parameters struct > > < DOWNLINK\_TIMESLOT\_ALLOCATION : bit (8) > --default value common to all described bearer Id using this frequency allocation { 1 < TMGI : < TMGI IE > > -- MBMS service identifier { 0 | 1 < **MBMS Session Identity**: bit(8) > } -- session identifier of the particular MBMS service < Length of MBMS Bearer Identity : bit (3) > < MBMS Bearer Identity : bit (val (Length of MBMS Bearer Identity)) > { 0 | 1 < EGPRS Window Size : < EGPRS Window Size IE >> } {0 | 1 < DOWNLINK\_TIMESLOT\_ALLOCATION : bit (8) > } -- dedicated value for this bearer, overwrites the default value {0 | 1 <TIMESLOT\_ALLOCATION\_UPLINK\_FEEDBACK\_CHANNEL : bit (3) > }  $\{0 \mid 1 < MBMS \text{ Radio Bearer Starting Time} : < bit (16) > > \}$ < MBMS In-band Signalling Indicator : < MBMS In-band Signalling Indicator IE >>  $\{ 0 \mid 1 < NPM Transfer Time : bit (5) > \}$ } \*\* 0 -- End of list of MBMS bearer identifiers sharing the same PDCH (frequency parameters) } \*\* 0 -- End of list of PDCHs for this cell { null | 0 bit\*\* = < no string > |1 -- Rel-7 Additions { 1 { 0 | 1 < USF : bit (3) > --choice bit indicates presence or not of parameters for the MBMS bearer {0|1 < MPRACH Control Parameters : < MPRACH Control Parameters IE >> } } } \*\* 0 -- End of list of MBMS bearers. The list of MBMS bearers is ordered as described by the loops in the earlier releases part. < padding bits > -- to fill the last octet

MBMS Frequency List: This field contains a MBMS Frequency List struct as specified in 3GPP TS 44.060

**MBMS p-t-m Frequency Parameters:** This field contains a *MBMS p-t-m Frequency Parameters struct* as specified in 3GPP TS 44.060

**DOWNLINK\_TIMESLOT\_ALLOCATION:** This field contains a *DOWNLINK\_TIMESLOT\_ALLOCATION* field as specified in 3GPP TS 44.060

TMGI: This field contains a TMGI IE as specified in 3GPP TS 44.060

MBMS Session Identity: This field contains a MBMS Session Identity field as specified in 3GPP TS 44.060

MBMS Bearer Identity: This field contains a MBMS Bearer Identity IE as specified in 3GPP TS 44.060

EGPRS Window Size: This field contains a EGPRS Window Size IE as specified in 3GPP TS 44.060

**TIMESLOT\_ALLOCATION\_UPLINK\_FEEDBACK\_CHANNEL:** This field contains a *TIMESLOT\_ALLOCATION\_UPLINK\_FEEDBACK\_CHANNEL* field as specified in 3GPP TS 44.060

**MBMS Radio Bearer Starting Time:** This field is encoded as value part of the type 3 information element *Starting Time* in 3GPP TS 44.018.

**MBMS In-band Signalling Indicator:** This field contains a *MBMS In-band Signalling Indicator* IE as specified in 3GPP TS 44.060. **NPM Transfer Time:** This field contains a *NPM Transfer Time* IE as specified in 3GPP TS 44.060. **USF:** This field contains a *USF* field as specified in 3GPP TS 44.060

**MPRACH Control Parameters:** This field contains a *MPRACH Control Parameters* IE as specified in 3GPP TS 44.060.

## 11.3.64 Application Error Container

## 11.3.64.1 Application Error Container layout for the NACC application

The coding of the Application Error Container IE for the NACC application is specified as follows:

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3		NACC Cause						
Octet 4-n		Erroneous Application Container including IEI and LI						

NACC Cause: This field indicates the cause why the *Application Error Container* IE is sent. The *NACC Cause* field is coded as shown below:

Coding	Semantic
0000 0000	Other unspecified error
0000 0001	Syntax error in the Application Container
0000 0010	Reporting Cell Identifier does not match with the Destination Cell
	Identifier or with the Source Cell Identifier.
0000 0011	SI/PSI type error
0000 0100	Inconsistent length of a SI/PSI message
0000 0101	Inconsistent set of messages
Other	reserved
values	

### Table 11.3.64.1.b: NACC Cause coding

"Other unspecified error": none of the error description below fits with the detected error

"Syntax error in the Application Container": the Application Container IE is syntactically incorrect

"Reporting Cell Identifier does not match with the Destination Cell Identifier or with the Source Cell Identifier": the *Reporting Cell Identifier* in the *Application Container* IE does not match with the *Destination Cell Identifier* IE value (in the case of a RAN-INFORMATION-REQUEST PDU) or with the *Source Cell Identifier* IE value (in the case of a RAN-INFORMATION PDU) of the RIM PDU

"SI/PSI type error": the *Application Container* IE contains system information messages instead of packet system information messages or conversely

"Inconsistent length of a SI/PSI message": the length contained in one SI/PSI message does not fit with the content of the message

"Inconsistent set of messages": the status of the change marks reported in the (packet) system information message set is inconsistent

Erroneous Application Container: this field contains the erroneous Application Container IE

### 11.3.64.2 Application Error Container for the SI3 application

The coding of the Application Error Container IE for the SI3 application is specified as follows:

### Table 11.3.64.2.a: Application Error Container coding for SI3

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3		SI3 Cause						
Octet 4-n		Erroneous Application Container including IEI and LI						

**SI3 Cause:** This field indicates the cause why the *Application Error Container* IE is sent. The *SI3 Cause* field is coded as shown below:

Coding	Semantic
0000 0000	Other unspecified error
0000 0001	Syntax error in the Application Container
0000 0010	Reporting Cell Identifier does not match with the Destination Cell
	Identifier or with the Source Cell Identifier.
0000 0011	Inconsistent length of a SI3 message
Other	Reserved
values	

Table 11.3.64.2.b: SI3 Cause coding

"Other unspecified error": None of the error description below fits with the detected error;

"Syntax error in the Application Container": the Error Application Container is syntactically incorrect;

"Reporting Cell Id does not match with the Destination Cell Identifier or with the Source Cell Identifier": the *Reporting Cell Identifier* in the *Application Container* IE does not match with the *Destination Cell Identifier* IE value (in the case of a RAN-INFORMATION-REQUEST PDU) or with the *Source Cell Identifier* IE value (in the case of a RAN-INFORMATION PDU) of the RIM PDU;

"Inconsistent length of a SI3 message": the length contained in the SI3 message does not fit with the content of the message;

Erroneous Application Container: This field contains the erroneous Application Container IE.

### 11.3.64.3 Application Error Container for the MBMS data channel application

The coding of the Application Error Container IE for the MBMS data channel application is specified as follows:

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3		MBMS data channel Cause									
Octet 4-n		Erroneous Application Container including IEI and LI									

**MBMS data channel Cause:** This field indicates the cause why the *Application Error Container* IE is sent. The *MBMS data channel Cause*" field is coded as shown below:

Coding	Semantic						
0000 0000	Other unspecified error						
0000 0001	Syntax error in the Application Container						
0000 0010	Reporting Cell Identifier does not match with the Destination Cell Identifier or with the Source Cell Identifier.						
0000 0011	RAN-INFORMATION/Initial Multiple Report or RAN- INFORMATION/Single Report PDU exceeds the maximum supported length						
0000 0100	Inconsistent MBMS data channel description						
Other values	reserved						

"Other unspecified error": None of the error description below fits with the detected error.

"Syntax error in the Application Container": the Application Container IE is syntactically incorrect.

"Reporting Cell Id does not match with the Destination Cell Identifier or Source Cell Identifier respectively": the *Reporting Cell Identifier* in the *Application Container* IE does not match with the *Destination Cell Identifier* IE value (in the case of a RAN-INFORMATION-REQUEST PDU) or with the *Source Cell Identifier* IE value (in the case of a RAN-INFORMATION PDU) of the RIM header.

"RAN-INFORMATION/Initial Multiple Report or RAN-INFORMATION/Single Report PDU exceeds the maximum supported length": the RAN-INFORMATION/Initial Multiple Report PDU exceeds the maximum length supported by the system.

"Inconsistent MBMS data channel description": failure in a MBMS data channel description.

Erroneous Application Container: This field contains the erroneous Application Container IE.

### 11.3.65 RIM PDU Indications

### 11.3.65.0 General

This information element contains various indications related to a RAN-INFORMATION-REQUEST PDU, RAN-INFORMATION PDU or RAN-INFORMATION-APPLICATION-ERROR PDU.

The element coding is:

#### Table 11.3.65.a: RIM PDU Indications IE

	8	7	6	5	4	3	2	1		
Octet 1		IEI								
Octet 2, 2a		Length Indicator								
Octet 3		Reserved PDU Type Extens					ension	ACK		

**ACK:** this field indicates whether the source side is requesting a RAN-INFORMATION-ACK PDU as response to a RAN-INFORMATION or to a RAN-INFORMATION-APPLICATION-ERROR PDU. This field is coded as shown below.

### Table 11.3.65.b: ACK coding

Coding	Semantic
0	No ACK requested
1	ACK requested

PDU Type Extension: This field specifies the type extension of the PDU. The defined values depend on the PDU type.

### 11.3.65.1 RAN-INFORMATION-REQUEST RIM PDU Indications

The ACK field is not used and shall be considered as spare.

The following values of the PDU Type Extension field are defined:

### Table 11.3.65.1: RAN-INFORMATION-REQUEST PDU Type Extension coding

Coding	Semantic					
000	RAN-INFORMATION-REQUEST/Stop PDU					
001	RAN-INFORMATION-REQUEST/Single Report PDU					
010	RAN-INFORMATION-REQUEST/Multiple Report PDU					
011	Reserved					
100	Reserved					
101	Reserved					
110	Reserved					
111	Reserved					

### 11.3.65.2 RAN-INFORMATION RIM PDU Indications

The ACK field is defined as specified in sub-clause 11.3.65.0.

The following values of the PDU Type Extension field are defined:

Coding	Semantic
000	RAN-INFORMATION/Stop PDU
001	RAN-INFORMATION/Single Report PDU
010	RAN-INFORMATION/Initial Multiple Report PDU
011	RAN-INFORMATION/Multiple Report PDU
100	RAN-INFORMATION/End PDU
101	Reserved
110	Reserved
111	Reserved

### Table 11.3.65.2: RAN-INFORMATION PDU Type Extension coding

### 11.3.65.3 RAN-INFORMATION-APPLICATION-ERROR RIM PDU Indications

The ACK field is defined as specified in sub-clause 11.3.65.0.

The PDU Type Extension field is not used and shall be considered as spare.

## 11.3.66 (void)

## 11.3.67 RIM Protocol Version Number

This information element defines which version number of the RIM protocol is in use in the PDU. The element coding is:

### Table 11.3.67.a: RIM Protocol Version Number IE

	8	7	6	5	4	3	2	1		
Octet 1		IEI								
Octet 2, 2a		Length Indicator								
Octet 3		RIM Protocol Version Number								

RIM Protocol Version Number is coded as follows:

### Table 11.3.67.b: RIM Protocol Version Number IE coding

Coding	Semantic
0000 0000	Reserved
0000 0001	Version 1
Other values	Reserved

If this Information Element is omitted the value "Version 1" should be assumed.

## 11.3.68 PFC Flow Control parameters

This information element contains the flow control parameters for one or more PFC(s) of a certain MS. The element coding is:

	8	7	6	5	4	3	2	1			
octet 1		IEI									
octet 2, 2a		Length Indicator									
octet 3				Number	of PFCs						
Octet 4				PFI	(1)						
Octet 5-6		Bmax_PFC (1)									
Octet 7-8		R_PFC (1)									
Octet 9		B_PFC (1)									
Octet ?		PFI (2)									
Octet ?-?				Bmax_I	PFC (2)						
Octet ?-?				R_PF	C (2)						
Octet ?				B_PF	C (2)						
"				'							
Octet ?				PFI	(n)						
Octet ?-?				Bmax_I	PFC (n)						
Octet ?-?				R_PF	C (n)						
Octet ?				B_PF	C (n)						

### Table 11.3.68.a: PFC Flow Control parameters IE

**Number of PFCs:** Number of PFCs for which flow control parameters are provided. For each of those PFCs follows its identifier and the value of the flow control parameters. The "Number of PFCs" parameter is coded as shown below:

#### Table 11.3.68.b: Number of PFCs

Coding	Semantic
0000 0000	0 PFC
0000 0001	1 PFC
0000 1011	11 PFCs
0000 1100	Reserved
'	"
1111 1111	Reserved

**PFI:** Packet Flow Identifier. Coded as the value part of the Packet Flow Identifier information element in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI.

Bmax\_PFC: Bucket size of the PFC. Coded like the value part of BVC Bucket Size, see sub-clause 11.3.5.

**R\_PFC:** Bucket Leak Rate of the PFC. Coded as the value part of Bucket Leak Rate (R), see sub-clause 11.3.4.

**B\_PFC:** Bucket Full Ratio of the PFC. This field is only present if the Current Bucket Level (CBL) feature is negotiated. Otherwise, the flow control parameters for the next PFC, if any, are provided instead. This field if coded as the value part of the Bucket Full Ratio, see sub-clause 11.3.46.

### 11.3.69 Global CN-Id

The Global CN-Id consists of a PLMN-Id and a CN-Id, see 3GPP TS 23.003. The value part of the Global CN-Id is coded as defined in 3GPP TS 29.018. The CN-Id is an integer defined by O&M. The element coding is:

	8	7	6	5	4	3	2	1			
octet 1		IEI Length Indicator Coded as octets 3 to 7 of the Global CN-Id IE, defined in									
octet 2, 2a											
octet 3-7	Co										
		3GPP TS 29.018									

### Table 11.3.69: Global CN-Id IE

## 11.3.70 RIM Routing Information

This information element uniquely identifies either a cell within a GERAN BSS, a UTRAN RNC or an E-UTRAN eNodeB. The element coding is:

	8	7	6	5	4	3	2	1	
octet 1				IE	El				
octet 2, 2a				Length I	ndicator				
octet 3		Sp	are		R	IM Routi	ng Addre	SS	
						discrir	ninator		
octet 4-n			R	IM Routir	na Addre	SS			

#### Table 11.3.70: RIM Routing Information IE

The coding of *RIM Routing Address discriminator* (bits 4 to 1 of octet 3) is a binary number indicating which type of address is provided in octet 4-n. The RIM *Routing Address discriminator* is coded as follows:

Bits	
4321	
0000	A Cell Identifier is used to identify a GERAN cell.
0001	An RNC identifier is used to identify a UTRAN RNC.
0010	An eNB identifier is used to identify an E-UTRAN eNodeB or HeNB

All other values are reserved.

The coding of octet 4-n depends on the RIM Routing Address discriminator (octet 3) as it is specified below.

### **<u>RIM Routing Address discriminator = 0000:</u>**

The *RIM Routing Address* field contains a Cell Identifier and is coded as the value part (octet 3 to octet 10) of the *Cell Identifier* information element specified in sub-clause 11.3.9.

#### **<u>RIM Routing Address discriminator = 0001:</u>**

The RIM Routing Address field contains an RNC identifier and is coded as follows:

8	7	6	5	4	3	2	1			
Octets 4 to 9 contain the value part (starting with octet 2) of the <i>Routing Area Identification</i> IE defined in										
3GP	3GPP TS 24.008, not including 3GPP TS 24.008 IEI									
	octet 10									
	RNC-ID	) (or E)	tended	I RNC-I	D) (cor	tinued)		octet 11		

The octets 10-11 contain the RNC-ID (0..4095) or the Extended RNC-ID (4096..65535) - see 3GPP TS 25.413:

- The least significant bit of RNC-ID is octet 11 bit 1 and most significant bit is octet 10 bit 4. In the octet 10 bits 5-8 are set to "0000".
- The least significant bit of Extended RNC-ID is octet 11 bit 1 and most significant bit is octet 10 bit 8.

#### **<u>RIM Routing Address discriminator = 0010:</u>**

153

The *RIM Routing Address* field contains an eNB identifier and is coded as follows:

8	7	6	5	4	3	2	1		
Octets 4 to 8 contain the value part (starting with octet octet 4-8									
2) o									
TS									
			Global	eNB ID				octet 9-n	

Octets 9-n contain the Global eNB ID (see 3GPP TS 36.413 [36]) of the eNodeB.

## 11.3.71 MBMS Session Identity

The MBMS Session Identity is an identification of the MBMS Session as defined in 3GPP TS 23.246 [32]. The element coding is:

	8	7	6	5	4	3	2	1			
octet 1		IÉI									
octet 2, 2a		Length Indicator									
octet 3	MBMS-	Session	-Identity	AVP enc	oded as	in 3GPP	TS 29.0	61 [31],			
	exclud	/IBMS-Session-Identity AVP encoded as in 3GPP TS 29.061 [31], excluding AVP Header fields as defined in IETF RFC 3588 [33].									

## 11.3.72 MBMS Session Duration

The MBMS Session Duration defines the (remaining) duration of the MBMS Session as defined in 3GPP TS 23.246 [32]. The element coding is:

	8	7	6	5	4	3	2	1		
octet 1				IE	El					
octet 2, 2a		Length Indicator								
octet 3-m	MBMS-S	/IBMS-Session-Duration AVP encoded as in 3GPP TS 29.061 [31],								
	excluc	excluding AVP Header fields as defined in IETF RFC 3588 [33].								

## 11.3.73 MBMS Service Area Identity List

The MBMS Service Area Identity List identifies the Service Areas Identities for the Service Areas where the MBMS Session shall be active as defined in 3GPP TS 29.061. The element coding is:

Table 11.3.73: MBMS Service Area Identity List IE

_	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3 -	MBI	MBMS-Service-Area AVP encoded as in 3GPP TS 29.061,								
514	excludi	excluding AVP Header fields (as defined in IETF RFC 3588 [33]).								

### 11.3.74 MBMS Response

The MBMS Response identifies the Cause Values from the BSS regarding MBMS.

Table 11.3.74.a: MBMS Response IE

	8	7	6	5	4	3	2	1
Octet 1					EI			
Octet 2, 2a		Length Indicator						
Octet 3	Spare	Spare	Spare	Spare		Cause	Value	

Table 11.3.74.b: Cause Value

(octet 3) Bits 8	7 6 5 Spare
Bits	
4321	
0000	Acknowledge
0001	Acknowledge, initiate data transfer
0010	Acknowledge, data transfer initiated from other SGSN
0011	Reject - Congestion
0100	Reject - None of the listed MBMS Service Areas are supported by BSS
0101	Reject - MBMS Service Context is released due to interrupted data flow
0110	
:	Unspecified in this version of the protocol
1111	

## 11.3.75 MBMS Routing Area List

The MBMS Routing Area List identifies each Routing Area that contains at least one PMM-IDLE MS that has activated the MBMS bearer service. The list may be empty.

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3	Nun	nber of R	outing	Area	Spare	Spare	Spare	Spare		
		Identific	ations							
octet 4 - 11			Ro	uting Are	ea Identi	fication 1				
octet 12 - 19			Ro	uting Are	a Identi	fication 2				
octet 20 - 27			Ro	uting Are	a Identi	fication 3				
octet 28 - 35		Routing Area Identification 4								
octet 36 - 43		Routing Area Identification 5								
octet 44 - 51			Ro	uting Are	ea Identi	fication 6				
octet 52 - 59			Roi	uting Are	ea Identi	fication 7	,			
octet 60 - 67			Ro	uting Are	ea Identi	fication 8				
octet 68 - 75			Roi	uting Are	ea Identi	fication 9				
octet 76 - 83			Rou	ting Are	a Identif	ication 10	C			
octet 84 - 91			Rou	ting Are	a Identif	ication 1	1			
octet 92 - 99			Rou	ting Are	a Identif	ication 12	2			
octet 100 - 107		Routing Area Identification 13								
octet 108 - 115			Rou	ting Are	a Identif	ication 14	4			

Table 11.3.75.a: MBMS Routing Area List IE

Number of Routing Areas (octet 3) 8765 0000 Notification shall not be sent to any Routing Areas in the BSS 0001 "1" Routing Area Identities : : 1110 "14" Routing Area Identities 1111 Notification shall be sent in all Routing Areas in the BSS 4321 (octet 3) Spare Routing Area Identification i 7 octets (octet 4, 12, 20, 28, 36, 44, 52, 60, 68, 76, 84, 92, 100 and 108) The element is coded as the Routing Area Identification information element in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI and 3GPP TS 24.008 length indicator.

Table 11.3.75.b: MBMS Routing Area List information element details

### 11.3.76 MBMS Session Information

The MBMS Session Information carries information about the MBMS Session from the SGSN to the BSS.

Table 11.3.76.a: MBMS Session Information IE

_		8	7	6	5	4	3	2	1
	octet 1				IE	El			
	octet 2, 2a				Length I	ndicator			
	octet 3	Spare	Spare	Spare	Spare	Spare	Spare	Spare	BC/MC

Table 11.3.76.b: MBMS Session Information information element details

```
BC/MC (octet 3)
This field indicates wheter it is a Broadcast or an Multicast MBMS Session.
Bit
1
0 Broadcast Session
1 Multicast Session
8765432 (octet 3)
Spare
```

## 11.3.77 TMGI (Temporary Mobile Group Identity)

The purpose of TMGI is for group paging in MBMS as defined in 3GPP TS 24.008.

Table 11.3.77: TMGI IE

	8	8 7 6 5 4 3 2 1									
octet 1				IE	El						
octet 2,2a				Length I	ndicator						
octet 3-8	Rest of	element	coded a	s in 3GP	P TS 24	.008, not	includin	g 3GPP			
	٦	LS 24.00	8 IEI and	d 3GPP 1	LS 24.00	8 length	indicator				

## 11.3.78 MBMS Stop Cause

The MBMS Stop Cause identifies the Cause Values for stopping an MBMS Session.

Table 11.3.74.a: MBMS Stop Cause IE

	8	7	6	5	4	3	2	1
Octet 1					EI			
Octet 2, 2a				Length	Indicator	•		
Octet 3	Spare	Spare	Spare	Spare		Cause	Value	

### Table 11.3.74.b: Cause Value

(octet 3)	
Bits 8	7 6 5 Spare
Dite	
Bits	
4321	
0000	MBMS Session terminated by upstream node
0001	MBMS Session terminated by SGSN
0010	
:	Unspecified in this version of the protocol
1111	· · ·

## 11.3.79 Source BSS to Target BSS Transparent Container

This information element contains the information needed in the Target BSS to execute a PS Handover.

The element coding is:

		8	8 7 6 5 4 3 2 1							
ſ	Octet 1					IEI				
ſ	Octet 2, 2a		Length Indicator							
ſ	Octet 3-?	Source	BSS to <sup>-</sup>	Target BS	SS Tran	sparent	Containe	r Conten	ts coded	
				as de	fined in	table 11	.3.79.b			

### Table 11.3.79.a: Source BSS to Target BSS Transparent Container coding

	Information Elements	Type / Reference	Presence	Format	Length		
	MS Radio Access Capability	MS Radio Access Capability/11.3.22	М	TLV	7-?		
	Inter RAT Handover Info	Inter RAT Handover Info/11.3.94	O (note 1)	TLV	3-?		
	Page Mode	Page Mode/11.3.88	O (note 2, note 3)	TLV	3		
	Container ID	Container ID/11.3.89	O (note 2)	TLV	3		
	Global TFI Global TFI/11.3.90 O (note 2, TLV 3 note 3)						
	PS Handover Indications	PS Handover Indications/11.3.95a	0	TLV	3		
	CS Indication	CS Indication/11.3.98	O (note 3)	TLV	3		
E-U	JTRAN Inter RAT Handover Info	Indover Info E-UTRAN Inter RAT Handover O (note 1) TLV 3-?					
NOTE1:	E1: This information element shall be present if available in the source BSS.						
NOTE2: NOTE3:		sent in case of PS Handover from A/G sent in case of DTM Handover from A/					

## 11.3.80 Target BSS to Source BSS Transparent Container

This information element contains the information needed in the Source BSS to execute a PS Handover.

The element coding is:

Table 11.3.80.a: Target BSS to Source BSS Transparent Container coding
--

	8	7	6	5	4	3	2	1
Octet 1				I	EI			
Octet 2 2a				Length	Indicato	r		
Octet 3-?	Target	BSS to S	Source B	SS Trans	sparent	Containe	r Content	ts coded
	_	as defined in table 11.3.80.b						

### Table 11.3.80.b: Target BSS to Source BSS Transparent Container Contents

Information Elements	Type / Reference	Presence	Format	Length	
PS Handover Command	PS Handover Command/11.3.95	O (Note 2)	TLV	4-?	
SI/PSI Container	SI/PSI Container/11.3.95b	O (Note 1)	TLV	3-?	
DTM Handover Command DTM Handover Command/11.3.97 O (Note 2) TLV 22-?					
NOTE 1: This informatic	n element shall be included when requ	uested in the	PS-HAN	DOVER-	
REQUEST PD	U.				
NOTE 2: Only one of the	ese information elements shall be inclu	ided.			

## 11.3.81 NAS container for PS Handover

This information element contains the NAS container for PS Handover. The value part of this IE is to be included in the PS Handover Command message within the *Target BSS to Source BSS Transparent Container* IE.

The element coding is:

Table 11.3.81: NAS contained	r for PS H	landover coding
------------------------------	------------	-----------------

		8	8 7 6 5 4 3 2 1						1
Oc	tet 1					EI			
Octe	t 2, 2a				Length	Indicator			
Octe	ets 3-?	NAS	containe	r for PS I	HO code	d as defi	ned in 30	GPP TS 2	24.008

## 11.3.82 PFCs to be set-up list

This information element contains the Packet Flow Context parameters for one or more PFC(s), that the SGSN requests the target BSS to set-up.

The element coding is:

	8	7	6	5	4	3	2	1				
Octet 1												
Octet 2, 2a		Length Indicator										
Octet 3				-	of PFCs							
Octet 4-6				PFI	(1)							
Octet 7-9				PFT	(1)							
Octet 10-?				ABQ	P (1)							
Octet ?-?		Allocation/Retention Priority (1)										
Octet ?-?		T10 (1)										
Octet ?-?		PFI (2)										
Octet ?-?		PFT (2)										
Octet ?-?				ABQ	P (2)							
Octet ?-?			Allocati	on/Reter	ntion Prio	rity (2)						
Octet ?-?		T10 (2)										
"		1										
Octet ?-?				PFI	(n)							
Octet ?-?				PFT	(n)							
Octet ?-?				ABQ	P (n)							
Octet ?-?			Allocati	on/Reter	ntion Prio	rity (n)						
Octet ?-?				T10	(n)							

#### Table 11.3.82.a: PFCs to be set-up list IE

**Number of PFCs:** Number of PFCs for which packet flow context parameters are provided. For each of those PFCs follows its identifier and the packet flow context parameters. The "Number of PFCs" parameter is coded as shown below:

Coding	Semantic
0000 0000	Reserved
0000 0001	1 PFC
0000 1011	11 PFCs
0000 1100	Reserved
'	II
1111 1111	Reserved

#### Table 11.3.82.b: Number of PFCs

PFI: Packet Flow Identifier. Coded as the Packet Flow Identifier information element, see sub-clause 11.3.42

PFT: Packet Flow Timer. Coded as the GPRS Timer information element, see sub-clause 11.3.44.

**ABQP:** Aggregate BSS QoS Profile. Coded as the Aggregate BSS QoS Profile information element, see sub-clause 11.3.43.

Allocation/Retention Priority: Allocation Retention Priority. Coded as the Priority information element, see subclause 11.3.27. This information element is optionally included.

**T10:** T10. Coded as the GPRS Timer information element, see sub-clause 11.3.44. This information element shall be present for a PFC if the Allocation/Retention Priority is present and if queuing is allowed for the PFC.

## 11.3.83 List of set-up PFCs

This information element contains the Packet Flow Identifiers of the PFCs that were successfully allocated in the target system during a PS handover. The element coding is:

	8	7	6	5	4	3	2	1			
octet 1	-										
octet 2, 2a		Length Indicator									
octet 3		Number of PFCs									
Octet 4		PFI (1)									
Octet 5		PFI (2)									
"		n í									
Octet ?				PFI	(n)						

**Number of PFCs:** Number of PFCs for which corresponding Packet Flow Identifiers are provided. The "Number of PFCs" parameter is coded as shown below:

Coding	Semantic
0000 0000	0 PFC
0000 0001	1 PFC
0000 1011	11 PFCs
0000 1100	Reserved
'	II
1111 1111	Reserved

Table 11.3.83.b: Number of PFCs

**PFI:** Packet Flow Identifier. Coded as the value part of the Packet Flow Identifier information element in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI.

### 11.3.84 Extended Feature Bitmap

The Extended Feature bitmap information element indicates the optional features supported by the underlying NSE. The element coding is:

	8	7	6	5	4	3	2	1
octet 1				IE	El			
octet 2, 2a		Length Indicator						
octet 3	Spare	Spare	Spare	Spare	Spare	Spare	Gigabit	PS
	-	-	-	-	-	-	Interfac	Handov
							е	er

Table 11.3.84.a: Extended Feature Bitmap IE

Table 11.3.84.b:	"PS	Handover"	coding
------------------	-----	-----------	--------

coding	Semantic
0	PS Handover not supported
1	PS Handover supported

### Table 11.3.84.c: "Gigabit Interface" coding

coding	Semantic
0	Gigabit Interface not supported
1	Gigabit Interface supported

## 11.3.85 Source to Target Transparent Container

This information element contains the information needed in the target RAN node to execute a inter-RAT PS or DTM Handover.

The element coding is:

Table 11.3.85: Source to Target Transparent Container coding

	8	7	6	5	4	3	2	1		
Octet 1		IEI								
Octet 2, 2a		Length Indicator								
Octets 3-?	So	Source to Target Transparent Container content coded as								
		specified in 3GPP TS 25.413 or 3GPP TS 36.413.								

In inter-RAT handovers to *Iu* mode this IE includes the Source RNC to Target RNC Transparent container. The Source RNC to Target RNC Transparent Container content structure and encoding is defined in relevant RANAP specification 3GPP TS 25.413, excluding RANAP tag.

In inter-RAT handover to E-UTRAN this IE includes the Source eNB to Target eNB Transparent container. The Source eNB to Target eNB Transparent Container content structure and encoding is defined in 3GPP TS 36.413.

## 11.3.86 Target to Source Transparent Container

This information element contains the information needed in the Source BSS to execute a inter-RAT PS Handover.

The element coding is:

### Table 11.3.86: Target to Source Transparent Container coding

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2, 2a		Length Indicator										
Octets 3-?	Con 25. interfac	nmand ra 331) or a ce messa DL	adio inte a comple age (as o -DCCH- tionReco	rface me ete Radio defined ir <i>Message</i> onfigurati	a compl ssage (a Bearer I 3GPP T including ion radio PP TS 3	s defined Reconfig IS 44.11 g a comp interface	d in 3GP uration r 8) or a co olete	P TS adio omplete				

## 11.3.87 RNC Identifier

This information element contains the identifier of the RNC in case of PS Handover to UTRAN or the Corresponding RNC-ID of the eNB in case of PS handover to E-UTRAN as specified in 3GPP TS 25.413.

The element coding is:

	8	7	6	5	4	3	2	1
Octet 1		IÈI						
Octet 2, 2a		Length Indicator						
Octets 3-8	Octet Rout	Octets 3 to 8 contain the value part (starting with octet 2) of the Routing Area Identification IE defined in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI						
Octet 9	RN	RNC ID (or Extended RNC-ID or Corresponding RNC-ID)						
Octet 10	RN	RNC ID (or Extended RNC-ID or Corresponding RNC-ID) (continued)						

### Table 11.3.87: RNC Identifier coding

**RNC ID** (or **Extended RNC-ID or Corresponding RNC-ID**): The octets 9-10 contain the RNC-ID (0..4095) or the Corresponding RNC-ID (0..4095) or the Extended RNC-ID (4096..65535) - see 3GPP TS 25.413:

- The least significant bit of RNC-ID is octet 10 bit 1 and most significant bit is octet 9 bit 4. In the octet 9 bits 5-8 are set to "0000".
- The least significant bit of Extended RNC-ID is octet 10 bit 1 and most significant bit is octet 9 bit 8.

For detailed definition of the RNC-Id see 3GPP TS 23.003.

## 11.3.88 Page Mode

This information element contains the Page Mode to be used by the MS.

The element coding is:

	8	7	6	5	4	3	2	1
Octet 1					EI			
Octet 2, 2a		Length Indicator						
Octet 3			Res	erved			code speci 3GP	_MODE ed as fied in P TS 060

### 11.3.89 Container ID

This information element contains the identity of the neighbour cell system information container previously sent to the MS.

The element coding is:

#### Table 11.3.89: Container ID coding

	8	7	6	5	4	3	2	1
Octet 1					EI			
Octet 2, 2a		Length Indicator						
Octet 3			Res	erved			code speci 3GP	iner ID ed as fied in P TS 060

### 11.3.90 Global TFI

This information element contains the TFI of the mobile station's downlink or uplink TBF.


The element coding is:

Table 11.3.90: Global TFI coding

	8	7	6	5	4	3	2	1
Octet 1		IÉI						
Octet 2, 2a		Length Indicator						
Octet 3	Rese	Reserved Global TFI coded as specified in 3GPP TS 44.060						

### 11.3.91 IMEI

This information element contains the International Mobile Station Equipment Identity (see 3GPP TS 23.003). The element coding is:

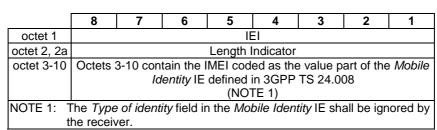

#### Table 11.3.91: IMEI IE

## 11.3.92 Time to MBMS Data Transfer

The Time to MBMS Data Transfer denotes the time occurring between the transmission of the MBMS-SESSION-START-REQUEST PDU or the MBMS-SESSION-UPDATE-REQUEST PDU to the BSS and the actual start of the data transfer at the BM-SC.

### Table 11.3.92.a: Time to MBMS Data Transfer IE

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2, 2a		Length Indicator						
Octet 3		Time to MBMS Data Transfer Value Part						

### Table 11.3.92.b: Time to MBMS Data Transfer Value Part Coding

Bits	
87654321	
00000000	1s
0000001	2s
00000010	3s
:	
11111111	256s

## 11.3.93 MBMS Session Repetition Number

The MBMS Session Repetition Number denotes the repetition number of the MBMS session as defined in 3GPP TS 23.246 [32]. The element coding is:

IE

		8	7	6	5	4	3	2	1	
	Octet 1		IEI							
0	ctet 2, 2a		Length Indicator							
	Octet 3	MBMS	MBMS-Session-Repetition-Number AVP encoded as in 3GPP TS							
		29.061 [31], excluding AVP Header fields as defined in IETF RFC								
				-	3588	3 [33].				

## 11.3.94 Inter RAT Handover Info

This information element contains UTRAN related information needed to be transferred to the target RNC during a PS Handover to UTRAN. The element coding is:

Table 11.3.94: Inter RAT	Handover	Information coding
--------------------------	----------	--------------------

	8	7	6	5	4	3	2	1	
Octet 1		IEI							
Octet 2, 2a		Length Indicator							
Octets 3-?	Inter RAT Handover Information coded as specified in 3GPP Technical Specification 25.331								

## 11.3.95 PS Handover Command

This information element contains the radio interface message to be sent to the mobile station.

The element coding is:

Table 11.3.95: PS Handover	Command coding
----------------------------	----------------

	8	7	6	5	4	3	2	1	
Octet 1		IÉI							
Octet 2 2a		Length Indicator							
Octet 3-?	Rest of element coded as a complete PS Handover Command radio interface message as defined in 3GPP TS 44.060 (carrying the PS Handover to A/Gb Mode Payload)								

## 11.3.95a PS Handover Indications

The *PS Handover Indications* information element provides indications related to the PS Handover procedure. The element coding is:

### Table 11.3.95a.a: PS Handover Indications IE

_		8	7	6	5	4	3	2	1	
	octet 1		IEI							
	octet 2, 2a		Length Indicator							
	octet 3		Spare SI/PSI							

### Table 11.3.95a.b: "SI/PSI" coding

coding	Semantic
0	SI/PSI not requested
1	SI/PSI requested

### 11.3.95b SI/PSI Container

The *SI/PSI Container* information element provides the (Packet) System Information messages of the GSM target cell that are required by the mobile station for PS Handover. The element coding is:

Table 11.3.95b.a: SI/PSI Container coding

	8	7	6	5	4	3	2	1	
Octet 1		IEI							
Octet 2, 2a		Length Indicator							
Octet 3		Number of SI/PSI Type							
Octet 4-n		SI/PSI							

**Type:** This field indicates the type of the (Packet) System Information messages provided by the target cell. The *Type* field is coded as shown below:

Table	11.3.95b.l	o: Type	codina
TUNIC	11.0.000.0	5. I J PC	oounig

Coding	Semantic
0	SI messages as specified for BCCH (3GPP TS 44.018) follow
1	PSI messages as specified for PBCCH (3GPP TS 44.060) follow

**Number of SI/PSI:** This field indicates the number of (Packet) System Information messages contained in the *SI/PSI field*. For (Packet) System Information messages with multiple instances, each instance is counted as one SI/PSI message. The *Number of SI/PSI* field is coded as shown below:

Coding	Semantic	
000 0000	0 "SI/PSI" follows	
000 0001	1 "SI/PSI" follow	
1	п	
111 1111	127 "SI/PSI" follow	

**SI/PSI:** This field contains either a list of System Information or a list of Packet System Information messages of the GSM target cell that are required by the mobile station for PS Handover as specified in 3GPP TS 44.060. The number of (Packet) System Information messages is indicated in the *Number of SI/PSI* field specified above. Furthermore:

- If the *Type* field indicates that "SI messages as specified for BCCH (3GPP TS 44.018) follow" then the *SI/PSI* field contains the subset of System Information message instances encoded for BCCH as specified in 3GPP TS 44.018. Each System Information message contains the *Message type* octet followed by all the IEs composing the message payload. Each message is 21 octets long.
- If the *Type* field indicates that "PSI messages as specified for PBCCH (3GPP TS 44.060) follow" then the *SI/PSI* field contains the subset of Packet System Information message instances encoded for PBCCH as specified in 3GPP TS 44.060. Each Packet System Information message contains the *MESSAGE\_TYPE* field followed by the PSI message content. Each message is 22 octets long.

## 11.3.95c Active PFCs List

This information element contains the Packet Flow Identifiers of the PFCs that are active in the source BSS at the time the PS Handover Required message is sent. The element coding is:

	8	7	6	5	4	3	2	1		
octet 1	-									
octet 2, 2a		Length Indicator								
octet 3		Number of PFCs								
Octet 4		PFI (1)								
Octet 5		PFI (2)								
"		н								
Octet ?				PFI	(n)					

**Number of PFCs:** Number of PFCs for which corresponding Packet Flow Identifiers are provided. The "Number of PFCs" parameter is coded as shown below:

Coding	Semantic
0000 0000	Reserved
0000 0001	1 PFC
0000 1011	11 PFCs
0000 1100	Reserved
	"
1111 1111	Reserved

Table 11.3.95c.b: Number of PFCs

**PFI:** Packet Flow Identifier. Coded as the value part of the Packet Flow Identifier information element in 3GPP TS 24.008, not including 3GPP TS 24.008 IEI. This IE shall not contain any pre-defined PFIs.

### 11.3.96 Velocity Data

This is a variable length information element providing an estimate of a velocity data. The element coding is:

### Table 11.3.96: Velocity Data IE

	8	7	6	5	4	3	2	1		
Octet 1		IÈI								
Octet 2	Length indicator									
Octet 3	The rest of the information element contains an octet sequence									
to	identical to that for Description of Velocity defined in 3GPP TS									
Octet n	23.032.									

## 11.3.97 DTM Handover Command

This information element contains the radio interface message to be sent to the mobile station.

The element coding is:

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2, 2a		Length Indicator									
Octet 3-?		nterface	messag		ned in 30	GPP TS 4	lover Cor 44.060 (c <i>rload</i> )				

Table 11.3.97: DTM Handover Command coding

## 11.3.98 CS Indication

This information element indicates to the target BSS that this PS Handover is part of a DTM Handover Procedure.

The element coding is:

### Table 11.3.98: CS Indication coding

	8	7	6	5	4	3	2	1	
Octet 1		IEI							
Octet 2, 2a		Length Indicator							
Octet 3		CS Indication Contents							

**CS Indication Contents:** This identifies a particular handover attempt for this MS. This shall be identical to the *PS Indication Contents* value in the corresponding *PS Indication IE* included in the *Old BSS to New BSS Information* IE (see 3GPP TS 48.008). The choice of the value of this field is implementation specific, with the requirement that consecutive handover attempts for the same mobile station shall not have the same *CS Indication Contents* value.

## 11.3.99 Requested GANSS Assistance Data

This information element provides the information on which GANSS Assistance Data has been requested. The element coding is:

#### Table 11.3.99: Requested GANSS Assistance Data IE

	8	7	6	5	4	3	2	1			
octet 1		IEI									
octet 2, 2a		Length Indicator									
octet 3-n		Rest of element coded as the value part defined in									
	3G	3GPP TS 49.031, not including 3GPP TS 49.031 IEI and									
		3GPP TS 49.031 octet length indicator									

### 11.3.100 GANSS Location Type

This information element provides the GANSS Location Type. The element coding is:

### Table 11.3.53: Location Type IE

	8	7	6	5	4	3	2	1			
octet 1		IÉI									
octet 2, 2a		Length Indicator									
octet 3		Rest of element coded as the value part defined in									
	3G	3GPP TS 49.031, not including 3GPP TS 49.031 IEI and									
		3GPP TS 49.031 octet length indicator									

## 11.3.101 GANSS Positioning Data

This information element provides GANSS Positioning Data. The element coding is:

	8	7	6	5	4	3	2	1			
octet 1		IEI									
octet 2, 2a		Length Indicator									
octet 3-n	30	SPP TS 4	9.031, n	ot includ	ng 3GP		lefined in .031 IEI a .tor				

Table 11.3.55: Positioning Data IE

## 11.3.102 Flow Control Granularity

This information element provides the granularity to be used for deriving the Flow Control parameters values in the *BVC Bucket Size* IE, the *BVC Bucket Leak Rate* IE and the *PFC flow control parameters* IE when the Gigabit Interface feature is negotiated. The element coding is:

Table 1	1.3.102:	Flow	Control	Granularity	y IE
---------	----------	------	---------	-------------	------

	8	7	6	5	4	3	2	1		
octet 1		IEI								
octet 2, 2a		Length Indicator								
octet 3		Reserved Granularity								

### Table 11.3.102.a: "Granularity" coding

coding	Semantic
00	100 octets or bits/s increments
01	1000 octets or bits/s increments
10	10000 octets or bits/s increments
11	100000 octets or bits/s increments

## 11.3.103 eNB Identifier

This information element contains the information required to identify an eNB within a PLMN.

The element coding is:

### Table 11.3.103: eNB Identifier coding

		8	7	6	5	4	3	2	1				
Ī	Octet 1		IEI										
Ī	Octet 2, 2a		Length Indicator										
	Octets 3-7		Octets 3 to 7 contain the value part (starting with octet 2) of the Tracking Area Identity IE defined in 3GPP TS 24.301 [37], not including 3GPP TS 24.301 IEI [37]										
	Octet 8-n		Global eNB ID										

Octets 8-n contain the Global eNB ID (see 3GPP TS 36.413) of the eNodeB.

## 11.3.104 E-UTRAN Inter RAT Handover Info

This information element contains E-UTRAN related information needed to be transferred to the target eNB during a PS Handover to E-UTRAN. The element coding is:

Table 11.3.104: E-UTRAN Inter RA	Γ Handover Information coding
----------------------------------	-------------------------------

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2, 2a		Length Indicator										
Octets 3-?	def	ined in 3	GPP Teo	Formatted and coded according to the UE-EUTRA-Capability IE defined in 3GPP Technical Specification 36.331. The most significant bit of the first octet of the octet string contains bit 8 of the first octet of the IE.								

## 11.3.105 Subscriber Profile ID for RAT/Frequency priority

This information element may be used by the BSS to provide individual priorities (see 3GPP TS 44.060) to mobile stations.

The element coding is:

Table 11.3.105.1: Subscriber Profile ID for RAT/Frequency priority coding

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2		Length Indicator									
Octet 3	Octe	Octet 3 contains the value part of the Subscriber Profile ID for RAT/Frequency priority IE.									

Octet 3 contains a number in binary representation ranging from 0 to 255. The Subscriber Profile ID for RAT/Frequency priority is given by the indicated value +1.

## 11.3.106 Request for Inter-RAT Handover Info

The *Request for Inter RAT Handover Info* information element provides the request from the BSS to the SGSN for the *Inter RAT Handover Info* IE for UTRAN or *E-UTRAN Inter RAT Handover Info* or both to the BSS necessary for inter-RAT PS Handover procedure to UTRAN or E-UTRAN or both. The element coding is:

Table 11.3.106.a: Request for Inter RAT Handover Info IE
--

	[	8	7	6	5	4	3	2	1
Γ	octet 1				IE	El			
Γ	octet 2, 2a		Length Indicator						
	octet 3		Spare					Inter RAT Handover Info Req	

Coding	Semantic
0	Inter RAT Handover Info not requested
1	Inter RAT Handover Info requested

Table 11.3.106.c: "E-UTRAN Inter RAT Handover Info Req" coding

codina	Semantic

169

0 E-UTRAN Inter RAT Handover Info not requ			
	1	E-UTRAN Inter RAT Handover Info requested	

### 11.3.107 Reliable Inter-RAT Handover Info

The *Reliable Inter RAT Handover Info* information element provides to the target BSS the indication that the source BSS has received the *Inter RAT Handover Info* for UTRAN from the SGSN in the CREATE-BSS-PFC-PDU or in the PS-HANDOVER-COMPLETE-ACK PDU upon successful completion of PS handover or a PS-HANDOVER-REQUEST PDU with '*Reliable Inter RAT Handover Info Indicator*' set to '1'. The element coding is:

#### Table 11.3.107.a: Reliable Inter RAT Handover Info IE

	8	7	6	5	4	3	2	1
octet 1				IE	El			
octet 2, 2a				Length	Indicator			
octet 3				Spare				Reliable Inter RAT Handover Info Indicator

### Table 11.3.107.b: "Reliable Inter RAT Handover Info Indicator' coding

Coding	Semantic		
0	Inter RAT Handover Info not reliable		
1	Inter RAT Handover Info reliable		

# 12 List of system variables

## 12.1 General Variables

### Table 12.1.a: Procedure timers

Timer mnemonic	Value range	Notes	Relation to other timers
T1	1 s < T1 < 30 s	Guards the (un)blocking procedures	none
T2	1 s < T2 < 120 s	Guards the reset procedure	none
Т3	0,1 s < T3 < 10 s	Guards the suspend procedure	none
T4	0.1 s < T4 < 10 s	Guards the resume procedure	none
T5	1 s < T5 < 30 s	Guards the Radio Access Capability Update procedure	none
T6	0,1 s < T6 < 10 s	Guards the DOWNLOAD-BSS-PFC PDU	none
T7	0,1 s < T7 < 10 s	Guards the CREATE-BSS-PFC PDU	none
T8	0,1 s < T8 < 10 s	Guards the MODIFY-BSS-PFC PDU	none
Т9	3GPP TS 24.008.	This is the Packet Flow Timer (PFT) and holds the maximum time the BSS may store a BSS PFC while no uplink data is transmitted	Cannot exceed the value of the READY timer for this MS unless READY timer is less than 6 s.
T10	0,5 s ≤ T10 < 10 s	Guards the PFC queuing procedure	T10 < T7
T11	0,1 s < T11 < 10 s	Guards the MBMS Session Start, MBMS Session Update and MBMS Session Stop procedures	none
T12	0,5 s ≤ T12 < 10 s	Guards the PS Handover Required procedure in the BSS	none
T13	0,5 s ≤ T13< 10 s	Guards the PS Handover Request procedure in the SGSN	none
T14	0,5 s ≤ T14 < 10 s	Guards the PS Handover Complete procedure in the SGSN	none

### Table 12.1.b: Procedure retry counters

Retry mnemonic	Retry value	Notes
BVC-BLOCK-RETRIES	3	none
BVC-UNBLOCK-RETRIES	3	none
BVC-RESET-RETRIES	3	none
SUSPEND-RETRIES	3	none
RESUME-RETRIES	3	none
RA-CAPABILITY-UPDATE-RETRIES	3	none
DOWNLOAD-BSS-PFC-RETRIES	3	none
CREATE-BSS-PFC-RETRIES	3	none
MODIFY-BSS-PFC-RETRIES	3	none
MBMS-SESSION-START-REQUEST-RETRIES	3	none
MBMS-SESSION-STOP-REQUEST-RETRIES	3	none
MBMS-SESSION-UPDATE-REQUEST-RETRIES	3	none

## 12.2 Flow control variables

### Table 12.2: Flow control variables

Variable	Value range	Notes	Relation to other variables
mnemonic			

Th	Interval after Flow-Control-MS before SGSN may use SGSN generated Bmax and R	none
С	Minimum interval between sending of subsequent Flow Control PDUs for a given BVC or MS or PFC	C < Th
Tf	Interval after Flow-Control-PFC before SGSN may use SGSN generated Bmax and R	Tf > C

### 172

# Annex A (informative): Change history

Meeting	Tdoc	CR	Rev	Subject	New Ver
Dec 2009	-	-	-	Generation of Release 9 version based upon v8.5.0	9.0.0

### 173

# History

Document history					
V9.0.0	February 2010	Publication			