

**Digital cellular telecommunications system (Phase 2+);  
Universal Mobile Telecommunications System (UMTS);  
Mobile Application Part (MAP) specification  
(3GPP TS 29.002 version 5.5.0 Release 5)**



---

Reference

RTS/TSGN-0429002v550

---

Keywords

GSM, UMTS

***ETSI***

---

650 Route des Lucioles  
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C  
Association à but non lucratif enregistrée à la  
Sous-Préfecture de Grasse (06) N° 7803/88

---

***Important notice***

Individual copies of the present document can be downloaded from:  
<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.  
Information on the current status of this and other ETSI documents is available at  
<http://portal.etsi.org/tb/status/status.asp>

If you find errors in the present document, send your comment to:  
[editor@etsi.org](mailto:editor@etsi.org)

---

***Copyright Notification***

No part may be reproduced except as authorized by written permission.  
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2003.  
All rights reserved.

**DECT™, PLUGTESTS™ and UMTS™** are Trade Marks of ETSI registered for the benefit of its Members.  
**TIPHON™** and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members.  
**3GPP™** is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

---

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://webapp.etsi.org/IPR/home.asp>).

All published ETSI deliverables shall include information which directs the reader to the above source of information.

---

## Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under  
<http://webapp.etsi.org/key/queryform.asp> .

---

# Contents

Intellectual Property Rights .....	2
Foreword.....	2
Foreword.....	25
1    Scope .....	26
2    References .....	26
3    Abbreviations .....	31
4    Void.....	31
5    Overload and compatibility overview .....	31
5.1    Overload control.....	31
5.1.1    Overload control for MSC (outside MAP) .....	31
5.1.2    Overload control for MAP entities .....	32
5.1.3    Congestion control for Signalling System No. 7 .....	36
5.2    Compatibility.....	36
5.2.1    General.....	36
5.2.2    Strategy for selecting the Application Context (AC) version .....	36
5.2.2.1    Proposed method.....	36
5.2.2.2    Managing the version look-up table .....	37
5.2.2.3    Optimising the method.....	38
6    Requirements concerning the use of SCCP and TC .....	38
6.1    Use of SCCP.....	38
6.1.1    SCCP Class .....	38
6.1.2    Sub-System Number (SSN) .....	38
6.1.3    SCCP addressing .....	39
6.1.3.1    Introduction .....	39
6.1.3.2    The Mobile-services Switching Centre (MSC) .....	41
6.1.3.2.1    MSC interaction during handover or relocation .....	41
6.1.3.2.2    MSC for short message routing .....	41
6.1.3.2.3    MSC for location request routing .....	41
6.1.3.2.4    MSC for LMU Control .....	41
6.1.3.3    The Home Location Register (HLR) .....	41
6.1.3.3.1    During call set-up .....	41
6.1.3.3.2    Before location updating completion .....	42
6.1.3.3.3    After location updating completion .....	42
6.1.3.3.4    VLR restoration .....	43
6.1.3.3.5    During Network-Requested PDP Context Activation .....	43
6.1.3.3.6    Before GPRS location updating completion .....	43
6.1.3.3.7    After GPRS location updating completion .....	44
6.1.3.3.8    Query for a Location Request .....	44
6.1.3.4    The Visitor Location Register (VLR) .....	44
6.1.3.4.1    Inter-VLR information retrieval .....	44
6.1.3.4.2    HLR request .....	44
6.1.3.5    The Interworking MSC (IWMSC) for Short Message Service .....	44
6.1.3.6    The Equipment Identity Register (EIR) .....	44
6.1.3.7    The Shared Inter Working Function (SIWF) .....	45
6.1.3.8    The Serving GPRS Support Node (SGSN) .....	45
6.1.3.9    The Gateway GPRS Support Node (GGSN) .....	45
6.1.3.10    The Gateway MSC (GMSC) for Short Message Service .....	45
6.1.3.10A    Void.....	45
6.1.3.10A.1    Void.....	45
6.1.3.10A.2    Void.....	45
6.1.3.10B    The Gateway Mobile Location Centre (GMLC) .....	45
6.1.3.11    Summary table .....	45

6.2	Use of TC .....	48
7	General on MAP services.....	48
7.1	Terminology and definitions .....	48
7.2	Modelling principles.....	48
7.3	Common MAP services.....	49
7.3.1	MAP-OPEN service.....	50
7.3.2	MAP-CLOSE service .....	53
7.3.3	MAP-DELIMITER service.....	53
7.3.4	MAP-U-ABORT service .....	53
7.3.5	MAP-P-ABORT service .....	54
7.3.6	MAP-NOTICE service .....	55
7.3.7	MAP-SECURE-TRANSPORT-CLASS-1 service .....	55
7.3.8	MAP-SECURE-TRANSPORT-CLASS-2 service .....	56
7.3.9	MAP-SECURE-TRANSPORT-CLASS-3 service .....	56
7.3.10	MAP-SECURE-TRANSPORT-CLASS-4 service .....	57
7.4	Sequencing of services .....	57
7.5	General rules for mapping of services onto TC.....	59
7.5.1	Mapping of common services.....	59
7.5.2	Mapping of user specific services.....	60
7.6	Definition of parameters.....	60
7.6.1	Common parameters .....	63
7.6.1.1	Invoke Id .....	63
7.6.1.2	Linked Id .....	63
7.6.1.3	Provider error .....	63
7.6.1.4	User error .....	63
7.6.2	Numbering and identification parameters.....	66
7.6.2.1	IMSI .....	67
7.6.2.2	TMSI .....	67
7.6.2.3	IMEI .....	67
7.6.2.4	Previous location area Id .....	67
7.6.2.5	Stored location area Id .....	67
7.6.2.6	Current location area Id.....	67
7.6.2.7	Target location area Id .....	67
7.6.2.8	Target cell Id .....	67
7.6.2.8A	Target RNC Id.....	67
7.6.2.9	Void.....	67
7.6.2.10	Originating entity number .....	67
7.6.2.11	MSC number .....	67
7.6.2.12	Target MSC number.....	67
7.6.2.13	HLR number .....	67
7.6.2.14	VLR number .....	67
7.6.2.15	HLR Id .....	68
7.6.2.16	LMSI .....	68
7.6.2.17	MS ISDN .....	68
7.6.2.18	OMC Id .....	68
7.6.2.19	Roaming number .....	68
7.6.2.19A	Relocation Number List .....	68
7.6.2.20	Void.....	68
7.6.2.21	Handover number.....	68
7.6.2.22	Forwarded-to number.....	68
7.6.2.22A	Long forwarded-to number .....	68
7.6.2.22B	Long FTN Supported .....	68
7.6.2.23	Forwarded-to subaddress .....	68
7.6.2.24	Called number .....	68
7.6.2.25	Calling number.....	68
7.6.2.26	Originally dialled number .....	69
7.6.2.27	Service centre address .....	69
7.6.2.28	Zone Code.....	69
7.6.2.29	MSIsdn-Alert .....	69
7.6.2.30	Location Information .....	69
7.6.2.30a	Location Information for GPRS .....	69

7.6.2.31	GMSC Address .....	69
7.6.2.32	VMSC Address .....	69
7.6.2.33	Group Id .....	69
7.6.2.34	North American Equal Access preferred Carrier Id .....	69
7.6.2.35	SIWFS Number .....	69
7.6.2.36	B-subscriber address .....	69
7.6.2.37	Serving cell Id .....	70
7.6.2.38	SGSN number .....	70
7.6.2.39	SGSN address .....	70
7.6.2.40	GGSN address .....	70
7.6.2.41	GGSN number .....	70
7.6.2.42	APN .....	70
7.6.2.43	Network Node number .....	70
7.6.2.44	PDP-Type .....	70
7.6.2.45	PDP-Address .....	70
7.6.2.46	Additional number .....	70
7.6.2.47	P-TMSI .....	70
7.6.2.48	B-subscriber number .....	70
7.6.2.49	B-subscriber subaddress .....	70
7.6.2.50	LMU Number .....	70
7.6.2.51	MLC Number .....	71
7.6.2.52	Multicall Bearer Information .....	71
7.6.2.53	Multiple Bearer Requested .....	71
7.6.2.54	Multiple Bearer Not Supported .....	71
7.6.2.55	PDP-Charging Characteristics .....	71
7.6.2.56	Selected RAB ID .....	71
7.6.2.57	RAB ID .....	71
7.6.2.58	gsmSCF Address .....	71
7.6.3	Subscriber management parameters .....	71
7.6.3.1	Category .....	71
7.6.3.2	Equipment status .....	71
7.6.3.3	Extensible Bearer service .....	71
7.6.3.4	Extensible Teleservice .....	71
7.6.3.5	Extensible Basic Service Group .....	72
7.6.3.6	GSM bearer capability .....	72
7.6.3.7	Subscriber Status .....	72
7.6.3.8	CUG Outgoing Access indicator .....	72
7.6.3.9	Operator Determined Barring General Data .....	72
7.6.3.10	ODB HPLMN Specific Data .....	74
7.6.3.11	Regional Subscription Data .....	74
7.6.3.12	Regional Subscription Response .....	74
7.6.3.13	Roaming Restriction Due To Unsupported Feature .....	75
7.6.3.14	Extensible SS-Info .....	75
7.6.3.15	Extensible forwarding information .....	75
7.6.3.16	Extensible forwarding feature .....	75
7.6.3.17	Extensible SS-Status .....	75
7.6.3.18	Extensible Forwarding Options .....	75
7.6.3.19	Extensible No reply condition timer .....	76
7.6.3.20	Extensible Call barring information .....	76
7.6.3.21	Extensible Call barring feature .....	76
7.6.3.22	CUG info .....	76
7.6.3.23	CUG subscription .....	76
7.6.3.24	CUG interlock .....	76
7.6.3.25	CUG index .....	77
7.6.3.26	CUG feature .....	77
7.6.3.27	Inter CUG options .....	77
7.6.3.28	Intra CUG restrictions .....	77
7.6.3.29	Extensible SS-Data .....	77
7.6.3.30	Subscriber State .....	77
7.6.3.31	Requested Info .....	78
7.6.3.31A	Requested Domain .....	78
7.6.3.32	Suppression of Announcement .....	78

7.6.3.33	Suppress T-CSI .....	78
7.6.3.34	GMSC CAMEL Subscription Info.....	78
7.6.3.35	VLR CAMEL Subscription Info .....	78
7.6.3.36	Supported CAMEL Phases in the VLR.....	78
7.6.3.36A	Supported CAMEL Phases in the SGSN .....	78
7.6.3.36B	Offered CAMEL4 CSIs in the VLR.....	78
7.6.3.36C	Offered CAMEL4 CSIs in the SGSN .....	78
7.6.3.36D	Offered CAMEL4 CSIs.....	78
7.6.3.36E	Offered CAMEL4 CSIs in GMSC .....	78
7.6.3.36F	Offered CAMEL4 CSIs in VMSC .....	78
7.6.3.36G	Offered CAMEL4 Functionalities.....	79
7.6.3.37	CUG Subscription Flag .....	79
7.6.3.38	CAMEL Subscription Info Withdraw .....	79
7.6.3.39	Voice Group Call Service (VGCS) Data.....	79
7.6.3.40	Voice Broadcast Service (VBS) Data .....	79
7.6.3.41	ISDN bearer capability.....	79
7.6.3.42	Lower layer Compatibility .....	79
7.6.3.43	High Layer Compatibility .....	79
7.6.3.44	Alerting Pattern .....	79
7.6.3.45	GPRS Subscription Data Withdraw .....	79
7.6.3.46	GPRS Subscription Data .....	79
7.6.3.47	QoS-Subscribed .....	79
7.6.3.48	VPLMN address allowed .....	79
7.6.3.49	Roaming Restricted In SGSN Due To Unsupported Feature .....	80
7.6.3.50	Network Access Mode .....	80
7.6.3.51	Mobile Not Reachable Reason.....	80
7.6.3.52	Cancellation Type .....	80
7.6.3.53	All GPRS Data .....	80
7.6.3.54	Complete Data List Included.....	80
7.6.3.55	PDP Context Identifier.....	80
7.6.3.56	LSA Information .....	80
7.6.3.57	SoLSA support indicator.....	80
7.6.3.58	LSA Information Withdraw .....	80
7.6.3.59	LMU Indicator .....	80
7.6.3.60	LCS Information .....	80
7.6.3.61	GMLC List.....	81
7.6.3.62	LCS Privacy Exception List.....	81
7.6.3.62A	Additional LCS Privacy Exception List.....	81
7.6.3.63	LCS Privacy Exception Parameters .....	81
7.6.3.64	External Client List .....	81
7.6.3.65	Internal Client List .....	81
7.6.3.65A	MO-LR List.....	82
7.6.3.65B	Privacy Notification to MS User.....	82
7.6.3.65C	GMLC List Withdraw .....	82
7.6.3.65D	Service Type List .....	82
7.6.3.66	IST Alert Timer.....	82
7.6.3.67	Call Termination Indicator .....	82
7.6.3.68	IST Information Withdraw .....	82
7.6.3.69	IST Support Indicator.....	82
7.6.3.70	Super-Charger Supported In HLR.....	82
7.6.3.71	Super-Charger Supported In Serving Network Entity.....	82
7.6.3.72	Age Indicator.....	82
7.6.3.73	GPRS enhancements support indicator .....	83
7.6.3.74	Extensible QoS-Subscribed.....	83
7.6.3.75	SGSN CAMEL Subscription Info .....	83
7.6.3.76	MO-SMS-CSI .....	83
7.6.3.76a	MT-SMS-CSI.....	83
7.6.3.77	GPRS-CSI .....	83
7.6.3.78	CAMEL subscription info .....	83
7.6.3.83	Call Barring Data .....	84
7.6.3.84	Call Forwarding Data.....	84
7.6.3.85	ODB Data.....	84

7.6.3.86	Requested Subscription Info .....	84
7.6.3.87	CS Allocation/Retention priority .....	84
7.6.3.88	ODB Info .....	84
7.6.3.89	Suppress VT-CSI .....	84
7.6.3.90	Suppress Incoming Call Barring .....	84
7.6.3.91	gsmSCF Initiated Call .....	84
7.6.4	Supplementary services parameters .....	84
7.6.4.1	SS-Code .....	84
7.6.4.2	SS-Status .....	85
7.6.4.3	SS-Data .....	85
7.6.4.4	Override Category .....	85
7.6.4.5	CLI Restriction Option .....	85
7.6.4.6	Forwarding Options .....	86
7.6.4.7	No reply condition timer .....	86
7.6.4.8 - 7.6.4.14	Void .....	86
7.6.4.15	Forwarding information .....	86
7.6.4.16	Forwarding feature .....	86
7.6.4.17	Void .....	87
7.6.4.18	Call barring information .....	87
7.6.4.19	Call barring feature .....	87
7.6.4.20	New password .....	87
7.6.4.21	Current password .....	87
7.6.4.22	Guidance information .....	87
7.6.4.23	Void .....	87
7.6.4.24	SS-Info .....	87
7.6.4.25 - 7.6.4.35	Void .....	88
7.6.4.36	USSD Data Coding Scheme .....	88
7.6.4.37	USSD String .....	88
7.6.4.38	Bearer service .....	88
7.6.4.39	Teleservice .....	88
7.6.4.40	Basic Service Group .....	88
7.6.4.41	eMLPP information .....	88
7.6.4.42	SS-event .....	88
7.6.4.43	SS-event data .....	88
7.6.4.44	LCS Privacy Exceptions .....	89
7.6.4.45	Mobile Originating Location Request (MO-LR) .....	89
7.6.4.46	NbrUser .....	89
7.6.4.47	MC Subscription Data .....	89
7.6.4.48	MC Information .....	89
7.6.4.49	CCBS Request State .....	89
7.6.5	Call parameters .....	90
7.6.5.1	Call reference number .....	90
7.6.5.2	Interrogation type .....	90
7.6.5.3	OR interrogation .....	90
7.6.5.4	OR capability .....	90
7.6.5.5	Forwarding reason .....	90
7.6.5.6	Forwarding interrogation required .....	90
7.6.5.7	O-CSI .....	90
7.6.5.7A	D-CSI .....	90
7.6.5.7B	T-CSI .....	91
7.6.5.7C	VT-CSI .....	91
7.6.5.7D	O-IM-CSI .....	91
7.6.5.7E	D-IM-CSI .....	91
7.6.5.7F	VT-IM-CSI .....	91
7.6.5.8	Call Direction .....	91
7.6.5.9	Channel Type .....	91
7.6.5.10	Chosen Channel .....	91
7.6.5.11	CCBS Feature .....	91
7.6.5.12	UU Data .....	91
7.6.5.14	Number Portability Status .....	92
7.6.5.15	Pre-paging supported .....	92
7.6.6	Radio parameters .....	92

7.6.6.1 - 7.6.6.3	Void.....	92
7.6.6.4	GERAN Classmark .....	92
7.6.6.5	BSSMAP Service Handover .....	92
7.6.6.5A	BSSMAP Service Handover List .....	92
7.6.6.6	RANAP Service Handover .....	92
7.6.6.7	HO-Number Not Required .....	92
7.6.6.8	Integrity Protection Information.....	92
7.6.6.9	Encryption Information.....	92
7.6.6.10	Radio Resource Information .....	92
7.6.6.10A	Radio Resource List .....	92
7.6.6.10B	Chosen Radio Resource Information .....	93
7.6.6.11	Key Status .....	93
7.6.6.12	Selected UMTS Algorithms .....	93
7.6.6.13	Allowed GSM Algorithms .....	93
7.6.6.14	Allowed UMTS Algorithms.....	93
7.6.6.15	Selected GSM Algorithm .....	93
7.6.6.16	Currently Used Codec .....	93
7.6.6.17	Available Codecs List .....	93
7.6.6.18	Selected Codec .....	93
7.6.6.19	RAB Configuration Indicator .....	93
7.6.7	Authentication parameters .....	93
7.6.7.1	Authentication set list.....	93
7.6.7.2	Rand .....	93
7.6.7.3	Sres.....	94
7.6.7.4	Kc .....	94
7.6.7.5	Xres .....	94
7.6.7.5A	Ck.....	94
7.6.7.5B	Ik .....	94
7.6.7.5C	Autn.....	94
7.6.7.6	Cksn .....	94
7.6.7.6A	Ksi .....	94
7.6.7.6B	Auts .....	94
7.6.7.7	Ciphering mode.....	94
7.6.7.8	Current Security Context.....	94
7.6.7.9	Failure cause .....	94
7.6.7.10	Re-attempt.....	95
7.6.7.11	Access Type .....	95
7.6.8	Short message parameters.....	95
7.6.8.1	SM-RP-DA.....	95
7.6.8.2	SM-RP-OA.....	95
7.6.8.3	MWD status .....	95
7.6.8.4	SM-RP-UI .....	95
7.6.8.5	SM-RP-PRI .....	95
7.6.8.6	SM Delivery Outcome .....	95
7.6.8.7	More Messages To Send .....	96
7.6.8.8	Alert Reason.....	96
7.6.8.9	Absent Subscriber Diagnostic SM .....	96
7.6.8.10	Alert Reason Indicator .....	96
7.6.8.11	Additional SM Delivery Outcome .....	96
7.6.8.12	Additional Absent Subscriber Diagnostic SM .....	96
7.6.8.13	Delivery Outcome Indicator.....	96
7.6.8.14	GPRS Node Indicator.....	96
7.6.8.15	GPRS Support Indicator.....	96
7.6.8.16	SM-RP-MTI .....	96
7.6.8.17	SM-RP-SMEA .....	96
7.6.9	Access and signalling system related parameters .....	97
7.6.9.1	AN-apdu.....	97
7.6.9.2	CM service type .....	97
7.6.9.3	Access connection status.....	97
7.6.9.4	External Signal Information .....	97
7.6.9.5	Access signalling information.....	97
7.6.9.6	Location update type .....	97

7.6.9.7	Protocol ID .....	97
7.6.9.8	Network signal information .....	98
7.6.9.9	Call Info .....	98
7.6.9.10	Additional signal info.....	98
7.6.10	System operations parameters.....	99
7.6.10.1	Network resources.....	99
7.6.10.2	Trace reference.....	99
7.6.10.3	Trace type.....	99
7.6.11	Location Service Parameters.....	99
7.6.11.1	Age of Location Estimate.....	99
7.6.11.2	Deferred MT-LR Response Indicator.....	99
7.6.11.3	Deferred MT-LR Data.....	99
7.6.11.4	LCS Client ID .....	100
7.6.11.5	LCS Event .....	100
7.6.11.7	LCS Priority .....	100
7.6.11.8	LCS QoS .....	100
7.6.11.9	CS LCS Not Supported by UE.....	100
7.6.11.10	PS LCS Not Supported by UE .....	100
7.6.11.11	Location Estimate .....	100
7.6.11.12	Location Type .....	101
7.6.11.13	NA-ESRD .....	101
7.6.11.14	NA-ESRK .....	101
7.6.11.15	LCS Service Type Id.....	101
7.6.11.16	Privacy Override .....	101
7.6.11.17	Supported LCS Capability Sets.....	101
7.6.11.18	LCS Codeword.....	101
7.6.11.19	Void.....	101
7.6.11.20	Supported GAD Shapes .....	101
7.6.11.21	Additional Location Estimate.....	102
7.6.11.22	Void.....	102
7.6.11.23	LCS-Reference Number .....	102
7.6.12	Secure Transport Parameters .....	102
7.6.12.1	Security Header.....	102
7.7	Representation of a list of a basic parameter in service-primitives .....	102
8	Mobility services .....	103
8.1	Location management services.....	103
8.1.1	Void .....	103
8.1.1.1	Void.....	103
8.1.1.2	Void.....	103
8.1.1.3	Void.....	103
8.1.2	MAP_UPDATE_LOCATION service .....	103
8.1.2.1	Definition .....	103
8.1.2.2	Service primitives .....	103
8.1.2.3	Parameter definitions and use .....	104
8.1.3	MAP_CANCEL_LOCATION service .....	105
8.1.3.1	Definition .....	105
8.1.3.2	Service primitives .....	105
8.1.3.3	Parameter definitions and use .....	106
8.1.4	MAP_SEND_IDENTIFICATION service .....	106
8.1.4.1	Definition .....	106
8.1.4.2	Service primitives .....	106
8.1.4.3	Parameter definitions and use .....	107
8.1.5	Void .....	107
8.1.5.1	Void.....	107
8.1.5.2	Void.....	108
8.1.5.3	Void.....	108
8.1.6	MAP_PURGE_MS service.....	108
8.1.6.1	Definition .....	108
8.1.6.2	Service primitives .....	108
8.1.6.3	Parameter definitions and use .....	108
8.1.7	MAP_UPDATE_GPRS_LOCATION service .....	109

8.1.7.1	Definition .....	109
8.1.7.2	Service primitives .....	109
8.1.7.3	Parameter definitions and use .....	109
8.1.8	MAP-NOTE-MM-EVENT .....	111
8.1.8.1	Definition .....	111
8.1.8.2	Service primitives .....	111
8.1.8.3	Parameter use .....	111
8.2	Paging and search .....	112
8.2.1	MAP_PAGE service .....	112
8.2.1.1	Definition .....	112
8.2.1.2	Service primitives .....	113
8.2.1.3	Parameter definitions and use .....	113
8.2.2	MAP_SEARCH_FOR_MS service .....	113
8.2.2.1	Definition .....	113
8.2.2.2	Service primitives .....	114
8.2.2.3	Parameter definitions and use .....	114
8.3	Access management services .....	114
8.3.1	MAP_PROCESS_ACCESS_REQUEST service .....	114
8.3.1.1	Definition .....	114
8.3.1.2	Service primitives .....	115
8.3.1.3	Parameter definitions and use .....	115
8.4	Handover services .....	116
8.4.1	MAP_PREPARE_HANDOVER service .....	116
8.4.1.1	Definition .....	116
8.4.1.2	Service primitives .....	116
8.4.1.3	Parameter use .....	117
8.4.2	MAP_SEND_END_SIGNAL service .....	120
8.4.2.1	Definition .....	120
8.4.2.2	Service primitives .....	120
8.4.2.3	Parameter use .....	120
8.4.3	MAP_PROCESS_ACCESS_SIGNALLING service .....	120
8.4.3.1	Definition .....	120
8.4.3.2	Service primitives .....	121
8.4.3.3	Parameter use .....	121
8.4.4	MAP_FORWARD_ACCESS_SIGNALLING service .....	121
8.4.4.1	Definition .....	121
8.4.4.2	Service primitives .....	122
8.4.4.3	Parameter use .....	122
8.4.5	MAP_PREPARE_SUBSEQUENT_HANDOVER service .....	123
8.4.5.1	Definition .....	123
8.4.5.2	Service primitives .....	124
8.4.5.3	Parameter use .....	124
8.4.6	MAP_ALLOCATE_HANDOVER_NUMBER service .....	125
8.4.6.1	Definition .....	125
8.4.6.2	Service primitives .....	125
8.4.6.3	Parameter use .....	125
8.4.7	MAP_SEND_HANDOVER_REPORT service .....	125
8.4.7.1	Definition .....	125
8.4.7.2	Service primitives .....	126
8.4.7.3	Parameter use .....	126
8.5	Authentication management services .....	126
8.5.1	MAP_AUTHENTICATE service .....	126
8.5.1.1	Definition .....	126
8.5.1.2	Service primitives .....	126
8.5.1.3	Parameter use .....	127
8.5.2	MAP_SEND_AUTHENTICATION_INFO service .....	127
8.5.2.1	Definition .....	127
8.5.2.2	Service primitives .....	127
8.5.2.3	Parameter use .....	128
8.5.3	MAP_AUTHENTICATION_FAILURE_REPORT service .....	129
8.5.3.1	Definition .....	129
8.5.3.2	Service primitives .....	129

8.5.3.3	Parameter use .....	129
8.6	Security management services .....	130
8.6.1	MAP_SET_CIPHERING_MODE service .....	130
8.6.1.1	Definitions.....	130
8.6.1.2	Service primitives .....	130
8.6.1.3	Parameter use .....	130
8.7	International mobile equipment identities management services .....	130
8.7.1	MAP_CHECK_IMEI service .....	131
8.7.1.1	Definition .....	131
8.7.1.2	Service primitives .....	131
8.7.1.3	Parameter use .....	131
8.7.2	MAP_OBTAIN_IMEI service.....	131
8.7.2.1	Definition .....	131
8.7.2.2	Service primitives .....	132
8.7.2.3	Parameter use .....	132
8.8	Subscriber management services.....	132
8.8.1	MAP-INSERT-SUBSCRIBER-DATA service .....	132
8.8.1.1	Definition .....	132
8.8.1.2	Service primitives .....	133
8.8.1.3	Parameter use .....	133
8.8.1.4	Basic service information related to supplementary services.....	142
8.8.2	MAP-DELETE-SUBSCRIBER-DATA service .....	143
8.8.2.1	Definition .....	143
8.8.2.2	Service primitives .....	143
8.8.2.3	Parameter use .....	143
8.9	Identity management services .....	146
8.9.1	MAP-PROVIDE-IMSI service .....	146
8.9.1.1	Definition .....	146
8.9.1.2	Service primitives .....	146
8.9.1.3	Parameter use .....	146
8.9.2	MAP-FORWARD-NEW-TMSI service.....	146
8.9.2.1	Definition .....	147
8.9.2.2	Service primitives .....	147
8.9.2.3	Parameter use .....	147
8.10	Fault recovery services .....	147
8.10.1	MAP_RESET service .....	147
8.10.1.1	Definition .....	147
8.10.1.2	Service primitives .....	147
8.10.1.3	Parameter definition and use .....	147
8.10.2	MAP_FORWARD_CHECK_SS_INDICATION service .....	147
8.10.2.1	Definition .....	148
8.10.2.2	Service primitives .....	148
8.10.2.3	Parameter definition and use .....	148
8.10.3	MAP_RESTORE_DATA service.....	148
8.10.3.1	Definition .....	148
8.10.3.2	Service primitives .....	148
8.10.3.3	Parameter definitions and use .....	148
8.11	Subscriber Information services .....	150
8.11.1	MAP-ANY-TIME-INTERROGATION service.....	150
8.11.1.1	Definition .....	150
8.11.1.2	Service primitives .....	150
8.11.1.3	Parameter definition and use .....	151
8.11.2	MAP-PROVIDE-SUBSCRIBER-INFO service.....	151
8.11.2.1	Definition .....	151
8.11.2.2	Service primitives .....	151
8.11.2.3	Parameter definition and use .....	151
8.11.3	MAP-ANY-TIME-SUBSCRIPTION-INTERROGATION service .....	152
8.11.3.1	Definition .....	152
8.11.3.2	Service primitives .....	152
8.11.3.3	Parameter definition and use .....	152
8.11.4	MAP-ANY-TIME-MODIFICATION service .....	153
8.11.4.1	Definition .....	153

8.11.4.2	Service primitives .....	153
8.11.4.3	Parameter definition and use .....	153
8.11.5	MAP-NOTE-SUBSCRIBER-DATA-MODIFIED service .....	154
8.11.5.1	Definition .....	154
8.11.5.2	Service primitives .....	154
8.11.5.3	Parameter definition and use .....	154
9	Operation and maintenance services .....	155
9.1	Subscriber tracing services .....	155
9.1.1	MAP-ACTIVATE-TRACE-MODE service .....	155
9.1.1.1	Definition .....	155
9.1.1.2	Service primitives .....	156
9.1.1.3	Parameter use .....	156
9.1.2	MAP-DEACTIVATE-TRACE-MODE service .....	156
9.1.2.1	Definition .....	156
9.1.2.2	Service primitives .....	157
9.1.2.3	Parameter use .....	157
9.1.3	MAP-TRACE-SUBSCRIBER-ACTIVITY service .....	157
9.1.3.1	Definition .....	157
9.1.3.2	Service primitives .....	157
9.1.3.3	Parameter use .....	158
9.2	Other operation and maintenance services .....	158
9.2.1	MAP-SEND-IMSI service .....	158
9.2.1.1	Definition .....	158
9.2.1.2	Service primitives .....	158
9.2.1.3	Parameter use .....	158
10	Call handling services .....	158
10.1	MAP_SEND_ROUTING_INFORMATION service .....	159
10.1.1	Definition .....	159
10.1.2	Service primitives .....	159
10.1.3	Parameter use .....	160
10.2	MAP_PROVIDE_ROAMING_NUMBER service .....	164
10.2.1	Definition .....	164
10.2.2	Service primitives .....	164
10.2.3	Parameter use .....	165
10.3	MAP_RESUME_CALL_HANDLING service .....	167
10.3.1	Definition .....	167
10.3.2	Service primitives .....	167
10.3.3	Parameter use .....	167
10.4	MAP_PREPARE_GROUP_CALL service .....	168
10.4.1	Definition .....	168
10.4.2	Service primitives .....	169
10.4.3	Parameter definitions and use .....	169
10.5	MAP_PROCESS_GROUP_CALL_SIGNALLING service .....	170
10.5.1	Definitions .....	170
10.5.2	Service primitives .....	170
10.5.3	Parameter definitions and use .....	170
10.6	MAP_FORWARD_GROUP_CALL_SIGNALLING service .....	170
10.6.1	Definitions .....	170
10.6.2	Service primitives .....	171
10.6.3	Parameter definitions and use .....	171
10.7	MAP_SEND_GROUP_CALL_END_SIGNAL service .....	171
10.7.1	Definitions .....	171
10.7.2	Service primitives .....	172
10.7.3	Parameter definitions and use .....	172
10.8	MAP_Provide_SIWFNS_Number .....	172
10.8.1	Definition .....	172
10.8.2	Service primitive .....	172
10.8.3	Parameter use .....	173
10.9	MAP_SIWFNS_Signalling_Modify .....	174
10.9.1	Definition .....	174

10.9.2	Service primitive.....	174
10.9.3	Parameter use.....	174
10.10	MAP_SET_REPORTING_STATE service .....	175
10.10.1	Definition.....	175
10.10.2	Service primitives .....	175
10.10.3	Parameter use.....	175
10.11	MAP_STATUS_REPORT service.....	176
10.11.1	Definition.....	176
10.11.2	Service primitives .....	176
10.11.3	Parameter use.....	176
10.12	MAP_REMOTE_USER_FREE service.....	177
10.12.1	Definition.....	177
10.12.2	Service primitives .....	177
10.12.3	Parameter use.....	177
10.13	MAP_IST_ALERT service.....	178
10.13.1	Definition.....	178
10.13.2	Service primitives .....	178
10.13.3	Parameter use.....	178
10.14	MAP_IST_COMMAND service.....	179
10.14.1	Definition.....	179
10.14.2	Service primitives .....	179
10.14.3	Parameter use.....	179
11	Supplementary services related services .....	179
11.1	MAP_REGISTER_SS service.....	179
11.1.1	Definition.....	179
11.1.2	Service primitives .....	180
11.1.3	Parameter use.....	180
11.2	MAP_ERASE_SS service.....	181
11.2.1	Definition.....	181
11.2.2	Service primitives .....	181
11.2.3	Parameter use.....	181
11.3	MAP_ACTIVATE_SS service.....	182
11.3.1	Definition.....	182
11.3.2	Service primitives .....	182
11.3.3	Parameter use.....	183
11.4	MAP_DEACTIVATE_SS service .....	184
11.4.1	Definitions .....	184
11.4.2	Service primitives .....	184
11.4.3	Parameter use.....	184
11.5	MAP_INTERROGATE_SS service.....	185
11.5.1	Definitions .....	185
11.5.2	Service primitives .....	185
11.5.3	Parameter use.....	186
11.6	MAP_INVOKE_SS service .....	187
11.6.1	Definitions .....	187
11.6.2	Service primitives .....	187
11.6.3	Parameter use.....	188
11.7	MAP_REGISTER_PASSWORD service .....	188
11.7.1	Definitions .....	188
11.7.2	Service primitives .....	188
11.7.3	Parameter use.....	189
11.8	MAP_GET_PASSWORD service.....	189
11.8.1	Definitions .....	189
11.8.2	Service primitives .....	189
11.8.3	Parameter use.....	190
11.9	MAP_PROCESS_UNSTRUCTURED_SS_REQUEST service.....	190
11.9.1	Definitions .....	190
11.9.2	Service primitives .....	190
11.9.3	Parameter use.....	190
11.10	MAP_UNSTRUCTURED_SS_REQUEST service .....	191
11.10.1	Definitions .....	191

11.10.2	Service primitives .....	191
11.10.3	Parameter use.....	191
11.11	MAP_UNSTRUCTURED_SS_NOTIFY service .....	192
11.11.1	Definitions .....	192
11.11.2	Service primitives .....	193
11.11.3	Parameter use.....	193
11.12	MAP_SS_INVOCATION_NOTIFY .....	194
11.12.1	Definition.....	194
11.12.2	Service primitives .....	194
11.12.3	Parameter use.....	194
11.13	MAP_REGISTER_CC_ENTRY service .....	194
11.13.1	Definition.....	194
11.13.2	Service primitives .....	195
11.13.3	Parameter use.....	195
11.14	MAP_ERASE_CC_ENTRY service.....	196
11.14.1	Definition.....	196
11.14.2	Service primitives .....	196
11.14.3	Parameter use.....	196
12	Short message service management services .....	197
12.1	MAP-SEND-ROUTING-INFO-FOR-SM service .....	197
12.1.1	Definition.....	197
12.1.2	Service primitives .....	197
12.1.3	Parameter use.....	197
12.2	MAP-MO-FORWARD-SHORT-MESSAGE service.....	199
12.2.1	Definition.....	199
12.2.2	Service primitives .....	199
12.2.3	Parameter use.....	199
12.3	MAP-REPORT-SM-DELIVERY-STATUS service.....	200
12.3.1	Definition.....	200
12.3.2	Service primitives .....	200
12.3.3	Parameter use.....	200
12.4	MAP-READY-FOR-SM service.....	201
12.4.1	Definition.....	201
12.4.2	Service primitives .....	202
12.4.3	Parameter use.....	202
12.5	MAP-ALERT-SERVICE-CENTRE service .....	202
12.5.1	Definition.....	202
12.5.2	Service primitives .....	203
12.5.3	Parameter use.....	203
12.6	MAP-INFORM-SERVICE-CENTRE service.....	203
12.6.1	Definition.....	203
12.6.2	Service primitives .....	204
12.6.3	Parameter use.....	204
12.7	MAP-SEND-INFO-FOR-MT-SMS service .....	204
12.7.1	Definition.....	204
12.7.2	Service primitives .....	204
12.7.3	Parameter use.....	204
12.8	MAP-SEND-INFO-FOR-MO-SMS service.....	205
12.8.1	Definition.....	205
12.8.2	Service primitives .....	205
12.8.3	Parameter use.....	206
12.9	MAP-MT-FORWARD-SHORT-MESSAGE service .....	206
12.9.1	Definition.....	206
12.9.2	Service primitives .....	206
12.9.3	Parameter use.....	206
13	Network-Requested PDP Context Activation services .....	207
13.1	MAP_SEND_ROUTING_INFO_FOR_GPRS service.....	208
13.1.1	Definition.....	208
13.1.2	Service primitives .....	208
13.1.3	Parameter definition and use.....	208

13.2	MAP_FAILURE_REPORT service.....	209
13.2.1	Definition.....	209
13.2.2	Service primitives .....	209
13.2.3	Parameter definition and use.....	209
13.3	MAP_NOTE_MS_PRESENT_FOR_GPRS service.....	210
13.3.1	Definition.....	210
13.3.2	Service primitives .....	210
13.3.3	Parameter definition and use.....	210
13A	Location Service Management Services .....	210
13A.1	MAP-SEND-ROUTING-INFO-FOR-LCS Service .....	210
13A.1.1	Definition.....	210
13A.1.2	Service Primitives .....	211
13A.1.3	Parameter Use.....	211
13A.2	MAP-PROVIDE-SUBSCRIBER-LOCATION Service.....	212
13A.2.1	Definition.....	212
13A.2.2	Service Primitives .....	212
13A.2.3	Parameter Definition and Use .....	212
13A.3	MAP-SUBSCRIBER-LOCATION-REPORT Service.....	214
13A.3.1	Definition.....	214
13A.3.2	Service Primitives .....	214
13A.3.3	Parameter Definition and Use .....	215
13A.4	Void.....	216
13A.4.1	Void .....	216
13A.4.2	Void .....	216
13A.4.3	Void .....	216
13A.5	Void.....	216
13A.5.1	Void .....	216
13A.5.2	Void .....	216
13A.5.3	Void .....	216
13A.6	Void.....	216
13A.6.1	Void .....	216
13A.6.2	Void .....	217
13A.6.3	Void .....	217
13A.7	Void.....	217
13A.7.1	Void .....	217
13A.7.2	Void .....	217
13A.7.3	Void .....	217
13A.8	Void.....	217
13A.8.1	Void .....	217
13A.8.2	Void .....	217
13A.8.3	Void .....	217
13A.9	Void.....	217
13A.9.1	Void .....	217
13A.9.2	Void .....	217
13A.9.3	Void .....	217
14	General .....	217
14.1	Overview .....	217
14.2	Underlying services.....	217
14.3	Model .....	217
14.4	Conventions.....	218
15	Elements of procedure.....	218
15.1	Handling of unknown operations .....	218
15.2	Dialogue establishment .....	219
15.2.1	Behaviour at the initiating side .....	219
15.2.2	Behaviour at the responding side.....	221
15.3	Dialogue continuation .....	222
15.4	Load control .....	222
15.5	Procedures for MAP specific services.....	222
15.5.1	Service invocation for unsecured dialogues.....	222
15.5.2	Service invocation for secured dialogues.....	223

15.5.3	Service invocation receipt for unsecured dialogues.....	223
15.5.4	Service invocation receipt for secured dialogues.....	223
15.5.5	Handling of components received from TC.....	223
15.6	SDL descriptions .....	223
16	Mapping on to TC services .....	263
16.1	Dialogue control.....	263
16.1.1	Directly mapped parameters .....	263
16.1.2	Use of other parameters of dialogue handling primitives .....	263
16.1.2.1	Dialogue Id.....	263
16.1.2.2	Application-context-name.....	263
16.1.2.3	User information .....	263
16.1.2.4	Component present.....	263
16.1.2.5	Termination.....	263
16.1.2.6	P-Abort-Cause.....	263
16.1.2.7	Quality of service .....	263
16.2	Service specific procedures .....	264
16.2.1	Directly mapped parameters .....	264
16.2.2	Use of other parameters of component handling primitives .....	264
16.2.2.1	Dialogue Id.....	264
16.2.2.2	Class .....	264
16.2.2.3	Linked Id.....	264
16.2.2.4	Operation.....	265
16.2.2.5	Error .....	266
16.2.2.6	Parameters.....	266
16.2.2.7	Time out .....	266
16.2.2.8	Last component.....	266
16.2.2.9	Problem code.....	266
16.2.2.9.1	Mapping to MAP User Error .....	266
16.2.2.9.2	Mapping to MAP Provider Error parameter .....	267
16.2.2.9.3	Mapping to diagnostic parameter .....	267
17	Abstract syntax of the MAP protocol.....	268
17.1	General .....	268
17.1.1	Encoding rules .....	268
17.1.2	Use of TC.....	268
17.1.2.1	Use of Global Operation and Error codes defined outside MAP .....	269
17.1.3	Use of information elements defined outside MAP .....	269
17.1.4	Compatibility considerations .....	269
17.1.5	Structure of the Abstract Syntax of MAP .....	270
17.1.6	Application Contexts .....	272
17.2	Operation packages .....	273
17.2.1	General aspects .....	273
17.2.2	Packages specifications.....	274
17.2.2.1	Location updating .....	274
17.2.2.2	Location cancellation .....	274
17.2.2.3	Roaming number enquiry.....	275
17.2.2.4	Information retrieval .....	275
17.2.2.5	Inter-VLR information retrieval.....	275
17.2.2.6	IMSI retrieval.....	275
17.2.2.7	Call control transfer.....	276
17.2.2.8	Secure transport.....	276
17.2.2.9	Void.....	276
17.2.2.10	Interrogation.....	276
17.2.2.11	Void.....	276
17.2.2.12	Handover Control.....	276
17.2.2.13	Subscriber Data management stand alone.....	277
17.2.2.14	Equipment management.....	277
17.2.2.15	Subscriber data management.....	277
17.2.2.16	Location register restart.....	277
17.2.2.17	Tracing stand-alone .....	278
17.2.2.18	Functional SS handling .....	278

17.2.2.19	Tracing .....	278
17.2.2.20	Binding.....	278
17.2.2.21	Unstructured SS handling .....	279
17.2.2.22	MO Short message relay services .....	279
17.2.2.23	Short message gateway services .....	279
17.2.2.24	MT Short message relay services.....	280
17.2.2.25	Void.....	280
17.2.2.26	Message waiting data management.....	280
17.2.2.27	Alerting .....	280
17.2.2.28	Data restoration .....	280
17.2.2.29	Purging .....	281
17.2.2.30	Subscriber information enquiry.....	281
17.2.2.31	Any time information enquiry.....	281
17.2.2.32	Group Call Control.....	281
17.2.2.33	Provide SIWFS number .....	281
17.2.2.34	SIWFS Signalling Modify.....	282
17.2.2.35	Gprs location updating .....	282
17.2.2.36	Gprs Interrogation .....	282
17.2.2.37	Failure reporting.....	282
17.2.2.38	GPRS notifying .....	283
17.2.2.39	Supplementary Service invocation notification.....	283
17.2.2.40	Set Reporting State.....	283
17.2.2.41	Status Report .....	283
17.2.2.42	Remote User Free.....	283
17.2.2.43	Call Completion .....	284
17.2.2.44	Location service gateway services .....	284
17.2.2.45	Location service enquiry .....	284
17.2.2.45A	Location service reporting.....	284
17.2.2.46	Void.....	284
17.2.2.47	Void.....	284
17.2.2.48	Void.....	284
17.2.2.49	IST Alerting .....	284
17.2.2.50	Service Termination.....	285
17.2.2.51	Mobility Management event notification .....	285
17.2.2.53	Subscriber Data modification notification .....	285
17.2.2.54	Authentication Failure Report.....	285
17.3	Application contexts.....	286
17.3.1	General aspects .....	286
17.3.2	Application context definitions.....	286
17.3.2.1	Void.....	286
17.3.2.2	Location Updating.....	286
17.3.2.3	Location Cancellation .....	287
17.3.2.4	Roaming number enquiry.....	287
17.3.2.5	Void.....	287
17.3.2.6	Location Information Retrieval.....	287
17.3.2.7	Call control transfer.....	288
17.3.2.8	Secure transport.....	288
17.3.2.9 - 17.3.2.10	Void.....	288
17.3.2.11	Location registers restart .....	288
17.3.2.12	Handover control.....	288
17.3.2.13	IMSI Retrieval.....	289
17.3.2.14	Equipment Management .....	289
17.3.2.15	Information retrieval .....	289
17.3.2.16	Inter-VLR information retrieval.....	289
17.3.2.17	Stand Alone Subscriber Data Management.....	290
17.3.2.18	Tracing .....	290
17.3.2.19	Network functional SS handling .....	290
17.3.2.20	Network unstructured SS handling .....	291
17.3.2.21	Short Message Gateway .....	291
17.3.2.22	Mobile originating Short Message Relay .....	291
17.3.2.23	Void.....	292
17.3.2.24	Short message alert .....	292

17.3.2.25	Short message waiting data management.....	292
17.3.2.26	Mobile terminating Short Message Relay .....	292
17.3.2.27	MS purging .....	293
17.3.2.28	Subscriber information enquiry.....	293
17.3.2.29	Any time information enquiry.....	293
17.3.2.30	Group Call Control.....	293
17.3.2.31	Provide SIWFS Number .....	293
17.3.2.32	Gprs Location Updating .....	294
17.3.2.33	Gprs Location Information Retrieval .....	294
17.3.2.34	Failure Reporting .....	294
17.3.2.35	GPRS Notifying .....	294
17.3.2.36	Supplementary Service invocation notification.....	294
17.3.2.37	Reporting.....	295
17.3.2.38	Call Completion .....	295
17.3.2.39	Location Service Gateway .....	295
17.3.2.40	Location Service Enquiry.....	295
17.3.2.41	Void.....	296
17.3.2.42	Void.....	296
17.3.2.43	Void.....	296
17.3.2.44	IST Alerting .....	296
17.3.2.45	Service Termination.....	296
17.3.2.46	Mobility Management event notification .....	296
17.3.2.48	Subscriber Data modification notification .....	297
17.3.2.49	Authentication Failure Report.....	297
17.3.3	ASN.1 Module for application-context-names .....	297
17.4	MAP Dialogue Information.....	299
17.5	MAP operation and error codes.....	301
17.6	MAP operations and errors.....	304
17.6.1	Mobile Service Operations .....	304
17.6.2	Operation and Maintenance Operations.....	311
17.6.3	Call Handling Operations .....	312
17.6.4	Supplementary service operations .....	315
17.6.5	Short message service operations .....	319
17.6.6	Errors .....	321
17.6.7	Group Call operations .....	328
17.6.8	Location service operations .....	329
17.6.9	Secure transport operations.....	331
17.7	MAP constants and data types.....	332
17.7.1	Mobile Service data types.....	332
17.7.2	Operation and maintenance data types.....	364
17.7.3	Call handling data types.....	365
17.7.4	Supplementary service data types.....	371
17.7.5	Supplementary service codes .....	376
17.7.6	Short message data types .....	378
17.7.7	Error data types .....	382
17.7.8	Common data types .....	387
17.7.9	Teleservice Codes .....	394
17.7.10	Bearer Service Codes.....	396
17.7.11	Extension data types .....	398
17.7.12	Group Call data types .....	398
17.7.13	Location service data types .....	400
17.7.14	Secure transport data types .....	406
18	General on MAP user procedures .....	408
18.1	Introduction .....	408
18.2	Common aspects of user procedure descriptions.....	408
18.2.1	General conventions .....	408
18.2.2	Naming conventions .....	409
18.2.3	Convention on primitives parameters .....	410
18.2.3.1	Open service.....	410
18.2.3.2	Close service .....	410
18.2.4	Version handling at dialogue establishment .....	410

18.2.4.1	Behaviour at the initiating side.....	410
18.2.4.2	Behaviour at the responding side .....	410
18.2.5	Abort Handling .....	410
18.2.6	SDL conventions .....	411
18.3	Interaction between MAP Provider and MAP Users.....	411
19	Mobility procedures .....	411
19.1	Location management Procedures.....	411
19.1.1	Location updating .....	414
19.1.1.1	General.....	414
19.1.1.3	Detailed procedure in the VLR .....	419
19.1.1.4	Detailed procedure in the HLR .....	428
19.1.1.5	Send Identification .....	435
19.1.1.5.1	General .....	435
19.1.1.5.2	Detailed procedure in the VLR.....	435
19.1.1.5.3	Detailed procedure in the PVLR .....	435
19.1.1.6	Process Update Location VLR.....	440
19.1.1.8	Detailed procedure in the SGSN .....	442
19.1.2	Location Cancellation .....	445
19.1.2.1	General.....	445
19.1.2.2	Detailed procedure in the HLR .....	445
19.1.2.3	Detailed procedure in the VLR .....	445
19.1.2.4	Detailed procedure in the SGSN .....	448
19.1.3	Void .....	451
19.1.3.1	Void.....	452
19.1.3.2	Void.....	452
19.1.3.3	Void.....	452
19.1.4	Purge MS .....	452
19.1.4.1	General.....	452
19.1.4.2	Void.....	452
19.1.4.3	Void.....	452
19.1.4.4	Detailed procedure in the SGSN .....	452
19.2	Handover procedure .....	457
19.2.1	General.....	458
19.2.2	Handover procedure in MSC-A .....	461
19.2.2.1	Basic handover .....	461
19.2.2.2	Handling of access signalling.....	461
19.2.2.3	Other procedures in stable handover situation .....	462
19.2.2.4	Subsequent handover .....	462
19.2.2.5	SDL Diagrams.....	462
19.2.3	Handover procedure in MSC-B .....	475
19.2.3.1	Basic handover .....	476
19.2.3.2	Allocation of handover number.....	476
19.2.3.3	Handling of access signalling.....	476
19.2.3.4	Other procedures in stable handover situation .....	476
19.2.3.5	Subsequent handover .....	476
19.2.3.6	SDL Diagrams.....	476
19.2.4	Handover error handling macro .....	488
19.2.5	Handover procedure in VLR.....	490
19.2.5.1	Allocation of handover number.....	490
19.2.5.2	SDL Diagrams.....	490
19.3	Fault recovery procedures .....	493
19.3.1	VLR fault recovery procedures.....	493
19.3.2	HLR fault recovery procedures.....	495
19.3.3	VLR restoration: the restore data procedure in the HLR .....	503
19.4	Macro Insert_Subs_Data_Framed_HLR .....	505
19.5	Mobility Management Event notification procedure.....	508
19.5.1	General.....	508
19.5.2	Process in the VLR/SGSN .....	508
19.5.3	Process in the gsmSCF .....	510
20	Operation and maintenance procedures.....	512

20.1	General .....	512
20.1.1	Tracing Co-ordinator for the VLR .....	512
20.1.2	Subscriber Data Management Co-ordinator for the VLR .....	514
20.1.3	Tracing Co-ordinator for the SGSN .....	516
20.1.4	Subscriber Data Management Co-ordinator for the SGSN .....	518
20.2	Tracing procedures .....	520
20.2.1	Procedures in the HLR.....	522
20.2.1.1	Subscriber tracing activation procedure .....	522
20.2.1.2	Subscriber tracing deactivation procedure .....	527
20.2.2	Procedures in the VLR.....	532
20.2.2.1	Subscriber tracing activation procedure .....	532
20.2.2.2	Subscriber tracing deactivation procedure .....	534
20.2.2.3	Subscriber tracing procedure.....	536
20.2.3	Procedures in the MSC .....	536
20.2.3.1	Subscriber tracing procedure.....	536
20.2.4	Procedures in the SGSN .....	536
20.2.4.1	Subscriber tracing activation procedure .....	536
20.2.4.2	Subscriber tracing deactivation procedure in SGSN .....	536
20.3	Subscriber data management procedures .....	539
20.3.1	Procedures in the HLR.....	540
20.3.1.1	Subscriber deletion procedure.....	540
20.3.1.2	Subscriber data modification procedure.....	542
20.3.2	Procedures in the VLR.....	547
20.3.2.1	Subscriber deletion procedure.....	547
20.3.2.2	Subscriber data modification procedure.....	547
20.3.3	Procedures in the SGSN .....	550
20.3.3.1	Subscriber deletion procedure.....	550
20.3.3.2	Subscriber data modification procedure.....	550
20.4	Subscriber Identity procedure.....	553
20.4.1	Subscriber identity procedure in the HLR .....	553
20.4.2	Subscriber identity procedure in the VLR .....	555
21	Call handling procedures.....	557
21.1	General .....	557
21.2	Retrieval of routing information.....	557
21.2.1	General.....	557
21.2.2	Process in the GMSC .....	560
21.2.3	Procedures in the HLR.....	564
21.2.4	Process in the VLR to provide a roaming number .....	569
21.2.5	Process in the VLR to restore subscriber data .....	571
21.2.6	Process in the VLR to provide subscriber information .....	573
21.2.7	Process in the HLR for Any Time Interrogation.....	575
21.2.7.1	Process in the gsmSCF.....	575
21.2.7.2	Process in the HLR.....	575
21.2.8	Process in the GMLC for Any Time Interrogation .....	579
21.2.8.1	Process in the gsmSCF.....	579
21.2.8.2	Process in the GMLC .....	579
21.2.9	Process in the gsmSCF .....	581
21.3	Transfer of call handling .....	583
21.3.1	General.....	583
21.3.2	Process in the VMSC .....	583
21.3.3	Process in the GMSC .....	586
21.4	Inter MSC Group Call Procedures .....	588
21.4.1	General.....	588
21.4.2	Process in the Anchor MSC .....	588
21.4.3	Process in the Relay MSC .....	594
21.5	Allocation and modifications of resources in an SIWFS.....	599
21.5.1	General.....	599
21.5.2	Process in the VMSC .....	602
21.5.2.1	Allocation of SIWFS resources.....	602
21.5.2.2	Modification of SIWFS resources initiated by the user .....	603
21.5.2.3	Modification of SIWFS resources initiated by the SIWFS .....	603

21.5.3	Process in the SIWFS .....	611
21.5.3.1	Procedures for allocation of SIWFS resources.....	611
21.5.3.2	Process for modification of SIWFS resources initiated by the user .....	612
21.5.3.3	Process for modification of SIWFS resources initiated by the SIWFS .....	612
21.6	Setting of Reporting State .....	618
21.6.1	General.....	618
21.6.2	Process in the HLR for Set Reporting State stand-alone .....	618
21.6.3	Reporting co-ordinator process in the VLR .....	621
21.6.4	Process in the VLR to set the reporting state .....	623
21.7	Status Reporting .....	626
21.7.1	General.....	626
21.7.2	Process in the VLR for Status Reporting .....	626
21.7.3	Process in the HLR for Status Reporting .....	630
21.8	Remote User Free .....	635
21.8.1	General.....	635
21.8.2	Process in the HLR for Remote User Free.....	635
21.8.3	Process in the VLR for Remote User Free.....	638
21.9	IST Alert.....	641
21.9.1	General.....	641
21.9.2	Procedure in the MSC .....	641
21.9.3	Procedure in the HLR .....	643
21.10	IST Command .....	645
21.10.1	General.....	645
21.10.2	Procedure in the HLR .....	645
21.10.3	Procedure in the MSC .....	647
22	Supplementary services procedures .....	649
22.1	Functional supplementary service processes .....	649
22.1.1	Functional supplementary service process co-ordinator for MSC .....	649
22.1.2	Functional supplementary service process co-ordinator for VLR.....	651
22.1.3	Functional supplementary service process co-ordinator for HLR.....	653
22.1.4	Call completion supplementary service process co-ordinator for HLR .....	655
22.2	Registration procedure .....	657
22.2.1	General.....	657
22.2.2	Procedures in the MSC .....	657
22.2.3	Procedures in the VLR.....	660
22.2.4	Procedures in the HLR.....	662
22.3	Erasure procedure.....	665
22.3.1	General.....	665
22.3.2	Procedures in the MSC .....	665
22.3.3	Procedures in the VLR.....	666
22.3.4	Procedures in the HLR.....	666
22.4	Activation procedure .....	666
22.4.1	General.....	666
22.4.2	Procedures in the MSC .....	667
22.4.3	Procedures in the VLR.....	669
22.4.4	Procedures in the HLR.....	672
22.5	Deactivation procedure.....	674
22.5.1	General.....	674
22.5.2	Procedures in the MSC .....	675
22.5.3	Procedures in the VLR.....	675
22.5.4	Procedures in the HLR.....	675
22.6	Interrogation procedure .....	675
22.6.1	General.....	675
22.6.2	Procedures in the MSC .....	676
22.6.3	Procedures in the VLR.....	676
22.6.4	Procedures in the HLR.....	681
22.7	Invocation procedure .....	683
22.7.1	General.....	683
22.7.2	Procedures in the MSC .....	683
22.7.3	Procedures in the VLR.....	687
22.8	Password registration procedure.....	689

22.8.1	General.....	689
22.8.2	Procedures in the MSC .....	690
22.8.3	Procedures in the VLR.....	690
22.8.4	Procedures in the HLR.....	690
22.9	Mobile Initiated USSD procedure .....	693
22.9.1	General.....	693
22.9.2	Procedures in the MSC .....	693
22.9.3	Procedures in the VLR.....	697
22.9.4	Procedures in the HLR.....	702
22.9.5	Procedures in the gsmSCF/secondary HLR .....	706
22.10	Network initiated USSD procedure.....	709
22.10.1	General.....	709
22.10.2	Procedure in the MSC .....	709
22.10.3	Procedure in the VLR .....	714
22.10.4	Procedure in the HLR .....	721
22.10.5	Procedure in the gsmSCF and secondary HLR .....	727
22.11	Common macros for clause 22 .....	731
22.11.1	SS Password handling macros .....	731
22.11.2	SS Error handling macros .....	734
22.12	Supplementary Service Invocation Notification procedure.....	740
22.12.1	General.....	740
22.12.2	Procedures in the MSC .....	740
22.12.3	Procedures in the gsmSCF.....	742
22.13	Activation of a CCBS request .....	744
22.13.1	General.....	744
22.13.2	Procedure in the VLR .....	744
22.13.3	Procedure in the HLR .....	746
22.14	Deactivation of a CCBS request.....	748
22.14.1	General.....	748
22.14.2	Procedure in the VLR .....	748
22.14.3	Procedure in the HLR .....	750
23	Short message service procedures .....	752
23.1	General .....	752
23.1.1	Mobile originated short message service Co-ordinator for the MSC.....	752
23.1.2	Short message Gateway Co-ordinator for the HLR .....	754
23.2	The mobile originated short message transfer procedure .....	756
23.2.1	Procedure in the serving MSC .....	756
23.2.2	Procedure in the VLR .....	763
23.2.3	Procedure in the SMS Interworking MSC (SMS-IWMSC).....	765
23.2.4	Procedure in the SGSN .....	768
23.3	The mobile terminated short message transfer procedure .....	773
23.3.1	Procedure in the SMS-GMSC.....	775
23.3.2	Procedures in the HLR.....	789
23.3.3	Procedure in the Serving MSC .....	799
23.3.4	Procedures in the VLR.....	812
23.3.5	Procedure in the SGSN .....	815
23.4	The Short Message Alert procedure .....	828
23.4.1	Procedure in the Serving MSC – the MS has memory available .....	830
23.4.2	Procedures in the VLR.....	831
23.4.2.1	The Mobile Subscriber is present.....	831
23.4.2.2	The MS has memory available.....	832
23.4.3	Procedure in the HLR .....	834
23.4.4	Procedures in the SMS Interworking MSC.....	839
23.4.5	Procedures in the SGSN .....	840
23.4.5.1	The Mobile Subscriber is present.....	840
23.4.5.2	The Mobile Equipment has memory available.....	841
23.5	The SM delivery status report procedure .....	843
23.5.1	Procedure in the HLR .....	844
23.5.2	Procedure in the SMS-GMSC.....	845
23.6	The macro Report_SM_Delivery_Stat_HLR .....	847

24	GPRS process description .....	850
24.1	General .....	850
24.1.1	Process in the HLR for Send Routing Information for GPRS .....	851
24.1.2	Process in the GGSN for Send Routing Information for GPRS.....	853
24.2.1	Process in the HLR for Failure Report.....	855
24.2.2	Process in the GGSN for Failure Report.....	857
24.3.1	Process in the GGSN for Note Ms Present For Gprs .....	859
24.3.2	Process in the HLR for Note Ms Present For Gprs .....	861
24A	CSE control of subscriber data.....	863
24A.1	Any Time Subscription Interrogation procedure .....	863
24A.1.1	General.....	863
24A.1.2	Process in the gsmSCF .....	863
24A.1.3	Process in the HLR .....	863
24A.2	Any Time Modification procedure .....	866
24A.2.1	General.....	866
24A.2.2	Process in the gsmSCF .....	866
24A.2.3	Process in the HLR .....	866
24A.3	Subscriber Data Modification Notification procedure.....	869
24A.3.1	General.....	869
24A.3.2	Processes in the MAP Entities .....	869
24A.3.2.1	Process in the HLR.....	869
24A.3.2.2	Process in the gsmSCF.....	872
24B	Location Service process description .....	873
24B.1	Routeing information retrieval procedure for LCS .....	873
24B.1.1	General.....	874
24B.1.2	Process in the GMLC.....	875
24B.1.3	Process in the HLR .....	876
24B.2	Provide Subscriber Location procedure .....	877
24B.2.1	General.....	877
24B.2.2	Process in the GMLC.....	878
24B.2.3	Process in the MSC .....	879
24B.2.4	Process in the SGSN .....	879
24B.3	Subscriber Location Report procedure .....	881
24B.3.1	General.....	881
24B.3.2	Process in the GMLC.....	882
24B.3.3	Process in the MSC .....	883
24B.3.4	Process in the SGSN .....	884
25	General macro description.....	885
25.1	MAP open macros .....	885
25.1.1	Macro Receive_Open_Ind .....	885
25.1.2	Macro Receive_Open_Cnf .....	885
25.2	Macros to check the content of indication and confirmation primitives.....	890
25.2.1	Macro Check_Indication.....	890
25.2.2	Macro Check_Confirmation .....	890
25.3	The page and search macros .....	893
25.3.1	Macro PAGE_MSC .....	893
25.3.2	Macro Search_For_MS_MSC .....	894
25.4	Macros for handling an Access Request.....	897
25.4.1	Macro Process_Access_Request_MSC .....	897
25.4.2	Macro Process_Access_Request_VLR.....	902
25.4.3	Macro Identification Procedure .....	904
25.5	Authentication macros and processes .....	909
25.5.1	Macro Authenticate_MSC .....	909
25.5.2	Macro Authenticate_VLR.....	909
25.5.3	Process Obtain_Authentication_Sets_VLR .....	909
25.5.4	Macro Obtain_Authent_Para_VLR .....	909
25.5.5	Process Obtain_Auth_Sets_HLR .....	910
25.5.6	Process Obtain_Authent_Para_SGSN .....	920
25.5.7	Process Authentication_Failure_Report .....	925
25.5.7.1	General.....	925

25.5.7.2	Process in the VLR.....	925
25.5.7.3	Process in the SGSN .....	927
25.5.7.4	Process in the HLR.....	928
25.6	IMEI Handling Macros .....	929
25.6.1	Macro Check_IMEI_MSC.....	929
25.6.2	Macro Check_IMEI_VLR .....	929
25.6.3	Process Check_IMEI_EIR .....	930
25.6.4	Macro Obtain_IMEI_MSC.....	930
25.6.5	Macro Obtain_IMEI_VLR .....	930
25.6.6	Process Check_IMEI_SGSN .....	937
25.7	Insert Subscriber Data Macros .....	940
25.7.1	Macro Insert_Subs_Data_VLR.....	940
25.7.2	Process Insert_Subs_Data_Stand_Alone_HLR .....	942
25.7.3	Macro Wait_for_Insert_Subs_Data_Cnf .....	948
25.7.4	Process Send_Insert_Subs_Data.....	950
25.7.5	Macro Insert_Subs_Data_SGSN .....	950
25.7.6	Macro Wait_for_Insert_GPRS_Subs_Data_Cnf .....	952
25.8	Request IMSI Macros.....	954
25.8.1	Macro Obtain_IMSI_MSC .....	954
25.8.2	Macro Obtain_IMSI_VLR.....	954
25.9	Tracing macros.....	956
25.9.1	Macro Trace_Subscriber_Activity_MSC .....	956
25.9.2	Macro Trace_Subscriber_Activity_VLR.....	956
25.9.3	Macro Activate_Tracing_VLR .....	957
25.9.4	Macro Control_Tracing_HLR .....	959
25.9.5	Macro Trace_Subscriber_Activity_SGSN.....	962
25.9.6	Macro Activate_Tracing_SGSN.....	962
25.10	Short Message Alert procedures.....	964
25.10.1	Subscriber_Present_VLR process.....	964
25.10.2	Macro Alert_Service_Centre_HLR .....	966
25.10.3	The Mobile Subscriber is present .....	968
<b>Annex A (informative): Cross-reference for abstract syntaxes of MAP .....</b>		<b>970</b>
<b>Annex B (informative): Fully expanded ASN.1 sources for abstract syntaxes of MAP.....</b>		<b>1185</b>
B.1	Fully Expanded ASN.1 Source of MAP-Protocol/TCAPMessages .....	1185
B.2	Fully Expanded ASN.1 Source of MAP-DialogueInformation.....	1317
<b>Annex C : VoidAnnex D (informative): Clause mapping table.....</b>		<b>1322</b>
D.1	Mapping of Clause numbers.....	1323
<b>Annex E (informative): Change History.....</b>		<b>1324</b>
History .....		1333

---

## Foreword

This Technical Specification (TS) has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The present document specifies the Mobile Application Part (MAP), the requirements for the signalling system and procedures within the 3GPP system at application level.

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.


## 1 Scope

It is necessary to transfer between entities of a Public Land Mobile Network (PLMN) information specific to the PLMN in order to deal with the specific behaviour of roaming Mobile Stations (MS)s. The Signalling System No. 7 specified by CCITT is used to transfer this information.

The present document describes the requirements for the signalling system and the procedures needed at the application level in order to fulfil these signalling needs.

Clauses 1 to 6 are related to general aspects such as terminology, mobile network configuration and other protocols required by MAP.

MAP consists of a set of MAP services that are provided to MAP service-users by a MAP service-provider.

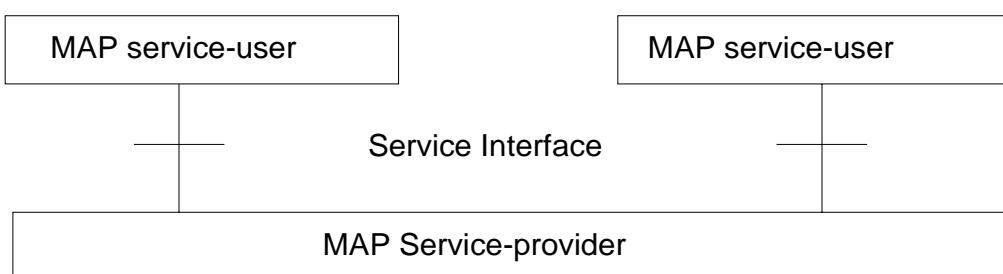

**Figure 1.1/1: Modelling principles**

Clauses 7 to 13A of the present document describe the MAP services.

Clauses 14 to 17 define the MAP protocol specification and the behaviour of service provider (protocol elements to be used to provide MAP services, mapping on to TC service primitives, abstract syntaxes, etc.).

Clauses 18 to 25 describe the MAP user procedures that make use of MAP services.

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TS 21.905: "3G Vocabulary".
- [2] 3GPP TS 22.001: "Digital cellular telecommunications system (Phase 2+); Principles of telecommunication services supported by a Public Land Mobile Network (PLMN)".
- [3] 3GPP TS 22.002: "Bearer Services Supported by a Public Land Mobile Network (PLMN)".
- [4] 3GPP TS 22.003: "Circuit Teleservices Supported by a Public Land Mobile Network (PLMN)".
- [5] 3GPP TS 22.004: "General on Supplementary Services".
- [6] 3GPP TS 42.009: "Digital cellular telecommunications system (Phase 2+); Security aspects".
- [7] 3GPP TS 22.016: "International Mobile station Equipment Identities (IMEI)".

- [8] 3GPP TS 22.041: "Operator Determined Barring".
- [9] 3GPP TS 22.081: "Line identification supplementary services - Stage 1".
- [10] 3GPP TS 22.082: "Call Forwarding (CF) supplementary services - Stage 1".
- [11] 3GPP TS 22.083: "Call Waiting (CW) and Call Hold (HOLD) Supplementary Services - Stage 1".
- [12] 3GPP TS 22.084: "Multi Party (MPTY) Supplementary Services - Stage 1".
- [13] 3GPP TS 22.085: "Closed User Group (CUG) supplementary services - Stage 1".
- [14] 3GPP TS 22.086: "Advice of charge (AoC) Supplementary Services - Stage 1".
- [15] 3GPP TS 22.088: "Call Barring (CB) supplementary services - Stage 1".
- [16] 3GPP TS 22.090: "Unstructured Supplementary Service Data (USSD); - Stage 1".
- [17] 3GPP TS 23.003: "Numbering, addressing and identification".
- [18] Void
- [19] 3GPP TS 23.007: "Restoration procedures".
- [20] 3GPP TS 23.008: "Organisation of subscriber data".
- [21] 3GPP TS 23.009: "Handover procedures".
- [22] 3GPP TS 23.011: "Technical realization of Supplementary Services - General Aspects".
- [23] 3GPP TS 23.012: "Location registration procedures".
- [24] 3GPP TS 43.020: "Security related network functions".
- [25] 3GPP TS 23.038: "Alphabets and language".
- [26] 3GPP TS 23.040: "Technical realization of the Short Message Service (SMS) Point to Point (PP)".
- [26a] 3GPP TS 23.271: "Functional stage2 description of LCS".
- [27] 3GPP TS 23.081: "Line Identification Supplementary Services - Stage 2".
- [28] 3GPP TS 23.082: "Call Forwarding (CF) Supplementary Services - Stage 2".
- [29] 3GPP TS 23.083: "Call Waiting (CW) and Call Hold (HOLD) Supplementary Services - Stage 2".
- [30] 3GPP TS 23.084: "Multi Party (MPTY) Supplementary Services - Stage 2".
- [31] 3GPP TS 23.085: "Closed User Group (CUG) Supplementary Services - Stage 2".
- [32] 3GPP TS 23.086: "Advice of Charge (AoC) Supplementary Services - Stage 2".
- [33] 3GPP TS 23.088: "Call Barring (CB) Supplementary Services - Stage 2".
- [34] 3GPP TS 23.090: "Unstructured Supplementary Services Data (USSD) - Stage 2".
- [34a] 3GPP TS 33.200: "3G Security; Network domain security; MAP application layer security".
- [35] 3GPP TS 24.008: "Mobile Radio Interface Layer 3 specification; Core Network Protocols - Stage 3".
- [36] 3GPP TS 24.010: "Mobile radio interface layer 3 Supplementary Services specification - General aspects".
- [37] 3GPP TS 24.011: "Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".
- [37a] 3GPP TS 44.071: "Location Services (LCS) – stage 3".

- [38] 3GPP TS 24.080: "Mobile radio interface layer 3 supplementary services specification - Formats and coding".
- [39] 3GPP TS 24.081: "Line identification supplementary services - Stage 3".
- [40] 3GPP TS 24.082: "Call Forwarding (CF) Supplementary Services - Stage 3".
- [41] 3GPP TS 24.083: "Call Waiting (CW) and Call Hold (HOLD) supplementary services - Stage 3".
- [42] 3GPP TS 24.084: "Multi Party (MPTY) Supplementary Services - Stage 3".
- [43] 3GPP TS 24.085: "Closed User Group (CUG) Supplementary Services - Stage 3".
- [44] 3GPP TS 24.086: "Advice of Charge (AoC) Supplementary Services - Stage 3".
- [45] 3GPP TS 24.088: "Call Barring (CB) Supplementary Services - Stage 3".
- [46] 3GPP TS 24.090: "Unstructured Supplementary Services Data - Stage 3".
- [47] 3GPP TS 48.002: "Base Station System - Mobile-services Switching Centre (BSS - MSC) interface principles".
- [48] 3GPP TS 48.006: "Signalling transport mechanism specification for the Base Station System - Mobile-services Switching Centre (BSS - MSC) interface".
- [49] 3GPP TS 48.008: "Mobile Switching Centre - Base Station System (MSC - BSS) interface; Layer 3 specification".
- [49a1] 3GPP TS 48.031: "Location Services (LCS); Serving Mobile Location Centre (SMLC) – Serving Mobile Location Centre (SMLC); SMLC Peer Protocol (SMLCPP)".
- [49b] 3GPP TS 48.071: "Location Services (LCS); Serving Mobile Location Centre - Base Station System (SMLC - BSS) interface Layer 3 specification".
- [50] 3GPP TS 49.001: "General network interworking scenarios".
- [51] 3GPP TS 29.002: "Mobile Application Part (MAP) specification".
- [52] Void
- [53] Void
- [54] Void
- [55] 3GPP TS 29.006: "Interworking between a Public Land Mobile Network (PLMN) and a Packet Switched Public Data Network/Integrated Services Digital Network (PSPDN/ISDN) for the support of Packet Switched data transmission services".
- [56] 3GPP TS 29.007: "General requirements on interworking between the Public Land Mobile Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN)".
- [57] 3GPP TS 29.008: "Application of the Base Station System Application Part (BSSAP) on the E-interface".
- [58] 3GPP TS 29.010: "Information element mapping between Mobile Station - Base Station System and BSS - Mobile-services Switching Centre (MS - BSS - MSC) Signalling procedures and the Mobile Application Part (MAP)".
- [59] 3GPP TS 29.011: "Signalling interworking for Supplementary Services".
- [59a] 3GPP TS 49.031: "Digital cellular telecommunications system (Phase 2+); Location Services (LCS); Base Station System Application Part LCS Extension (BSSAP-LE)".
- [60] Void

- [61] GSM 12.08: "Digital cellular telecommunications system (Phase 2); Subscriber and Equipment Trace".
- [62] ETS 300 102-1 (1990): "Integrated Services Digital Network (ISDN); User-network interface layer 3 specifications for basic call control".
- [63] ETS 300 136 (1992): "Integrated Services Digital Network (ISDN); Closed User Group (CUG) supplementary service description".
- [64] ETS 300 138 (1992): "Integrated Services Digital Network (ISDN); Closed User Group (CUG) supplementary service Digital Subscriber Signalling System No.one (DSS1) protocol".
- [65] ETS 300 287: "Integrated Services Digital Network (ISDN); Signalling System No.7; Transaction Capabilities (TC) version 2".
- [66] ETR 060: "Signalling Protocols and Switching (SPS); Guide-lines for using Abstract Syntax Notation One (ASN.1) in telecommunication application protocols".
- [66b] ETR 091: "ETSI object identifier tree; Common domain Mobile domain"
- [67] ITU-T Recommendation E.164: " The international public telecommunication numbering plan".
- [68] ITU-T Recommendation E.212: " The international identification plan for mobile terminals and mobile users".
- [69] ITU-T Recommendation E.213: " Telephone and ISDN numbering plan for land mobile stations in public land mobile networks (PLMN) ".
- [70] ITU-T Recommendation E.214: " Structure of the land mobile global title for the signalling connection control part (SCCP) ".
- [71] ITU-T Recommendation Q.699: " Interworking between ISDN access and non-ISDN access over ISDN User Part of Signalling System No. 7 ".
- [72] ITU-T Recommendation Q.711: "Specifications of Signalling System No.7; Functional description of the Signalling Connection Control Part".
- [73] ITU-T Recommendation Q.712: "Definition and function of SCCP messages".
- [74] ITU-T Recommendation Q.713: "Specifications of Signalling System No.7; SCCP formats and codes".
- [75] ITU-T Recommendation Q.714: "Specifications of Signalling System No.7; Signalling Connection Control Part procedures".
- [76] ITU-T Recommendation Q.716: "Specifications of Signalling System No.7; Signalling connection control part (SCCP) performances".
- [77] ITU-T Recommendation Q.721 (1988): "Specifications of Signalling System No.7; Functional description of the Signalling System No.7 Telephone user part".
- [78] ITU-T Recommendation Q.722 (1988): "Specifications of Signalling System No.7; General function of Telephone messages and signals".
- [79] ITU-T Recommendation Q.723 (1988): "Specifications of Signalling System No.7; Formats and codes".
- [80] ITU-T Recommendation Q.724 (1988): "Specifications of Signalling System No.7; Signalling procedures".
- [81] ITU-T Recommendation Q.725 (1988): "Specifications of Signalling System No.7; Signalling performance in the telephone application".
- [82] ITU-T Recommendation Q.761 (1988): "Specifications of Signalling System No.7; Functional description of the ISDN user part of Signalling System No.7".

- [83] ITU-T Recommendation Q.762 (1988): "Specifications of Signalling System No.7; General function of messages and signals".
- [84] ITU-T Recommendation Q.763 (1988): "Specifications of Signalling System No.7; Formats and codes".
- [85] ITU-T Recommendation Q.764 (1988): "Specifications of Signalling System No.7; Signalling procedures".
- [86] ITU-T Recommendation Q.767: "Specifications of Signalling System No.7; Application of the ISDN user part of CCITT signalling System No.7 for international ISDN interconnections".
- [87] ITU-T Recommendation Q.771: "Specifications of Signalling System No.7; Functional description of transaction capabilities".
- [88] ITU-T Recommendation Q.772: "Specifications of Signalling System No.7; Transaction capabilities information element definitions".
- [89] ITU-T Recommendation Q.773: "Specifications of Signalling System No.7; Transaction capabilities formats and encoding".
- [90] ITU-T Recommendation Q.774: "Specifications of Signalling System No.7; Transaction capabilities procedures".
- [91] ITU-T Recommendation Q.775: "Specifications of Signalling System No.7; Guide-lines for using transaction capabilities".
- [92] ITU-T Recommendation X.200: "Reference Model of Open systems interconnection for CCITT Applications".
- [93] ITU-T Recommendation X.680: "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- [93b] ITU-T Recommendation X.681: "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification"
- [94] ITU-T Recommendation X.690: "Information technology – ASN.1 encoding rules: Specification of Basic Encoding Rules (BER), Canonical Encoding Rules (CER) and Distinguished Encoding Rules (DER)".
- [95] ITU-T Recommendation X.210: "Open systems interconnection layer service definition conventions".
- [97] 3GPP TS 23.018: "Basic Call Handling".
- [98] 3GPP TS 23.078: "Customised Applications for Mobile network Enhanced Logic (CAMEL) Phase 4 - Stage 2".
- [99] 3GPP TS 23.079: "Support of Optimal Routeing (SOR) - Stage 2".
- [100] 3GPP TS 43.068: "Voice Group Call Service (VGCS) - Stage 2".
- [101] 3GPP TS 43.069: "Voice Broadcast service (VBS) - Stage 2".
- [102] ANSI T1.113: "Signaling System No. 7 (SS7) - ISDN User Part".
- [103] Void
- [104] 3GPP TS 23.060: "General Packet Radio Service (GPRS) Description; Stage 2".
- [105] 3GPP TS 29.060: "General Packet Radio Service (GPRS); GPRS Tunnelling Protocol (GTP) across the Gn and Gp Interface".
- [106] 3GPP TS 29.018: "General Packet Radio Service (GPRS); Serving GPRS Support Node (SGSN) - Visitors Location Register (VLR); Gs interface layer 3 specification".

- [107] 3GPP TS 23.093: "Technical Realization of Completion of Calls to Busy Subscriber (CCBS); Stage 2".
- [108] 3GPP TS 23.066: "Support of Mobile Number Portability (MNP); Technical Realisation Stage 2".
- [109] ANSI T1.112 (1996): "Telecommunication – Signalling No. 7 - Signaling Connection Control Part (SCCP)".
- [110] 3GPP TS 23.116: "Super-Charger Technical Realisation; Stage 2."
- [111] Void.
- [112] Void
- [113] Void
- [114] Void
- [115] Void
- [116] ITU-T Recommendation Q.850 (May 1998): "Usage of cause and location in the Digital Subscriber Signalling System No. 1 and the Signalling System No. 7 ISDN User Part".
- [117] 3GPP TS 22.135: "Multicall; Service description; Stage 1".
- [118] 3GPP TS 23.135: "Multicall supplementary service; Stage 2".
- [119] 3GPP TS 24.135: "Multicall supplementary service; Stage 3".
- [120] 3GPP TS 25.413: "UTRAN Iu Interface RANAP Signalling".
- [121] 3GPP TS 29.202: "SS7 signalling transport in core network"
- [122] 3GPP TS 23.032: "Universal Geographical Area Description (GAD)"
- [123] 3GPP TS 22.071: " Location Services (LCS); Service description, Stage 1"
- [124] ITU-T Recommendation X.880: "Data networks and open system communication - Open System Interconnection - Service definitions - Remote operations: Concepts, model and notation".
- [125] 3GPP TS 23.278: "Customised Applications for Mobile Network Enhanced Logic (CAMEL) Phase 4 – Stage 2 IM CN Interworking (Rel-5)"

### 3 Abbreviations

Abbreviations used in the present document are listed in 3GPP TS 21.905.

### 4 Void

## 5 Overload and compatibility overview

### 5.1 Overload control

There is a requirement for an overload/congestion control for all entities of the Public Land Mobile Network and the underlying Signalling System No. 7.

#### 5.1.1 Overload control for MSC (outside MAP)

For the entity MSC the following two procedures (outside MAP) may be applied to control the processor load:

- ISDN  
CCITT Recommendation Q.764 (Automatic Congestion Control), applicable to reduce the mobile terminating traffic;
- BSSAP  
3GPP TS 48.008 [49] (A-interface Flow Control), applicable to reduce the mobile originating traffic.

### 5.1.2 Overload control for MAP entities

For all MAP entities, especially the HLR, the following overload control method is applied.

If overload of a MAP entity is detected requests for certain MAP operations (see tables 5.1/1, 5.1/2, 5.1/3 and 5.1/4) may be ignored by the responder. The decision as to which MAP Operations may be ignored is made by the MAP service provider and is based upon the priority of the application context.

Since most of the affected MAP operations are supervised in the originating entity by TC timers (medium) an additional delay effect is achieved for the incoming traffic.

If overload levels are applicable in the Location Registers the MAP operations should be discarded taking into account the priority of their application context (see table 5.1/1 for HLR, table 5.1/2 for MSC/VLR, table 5.1/3 for the SGSN and table 5.1/4 for the SMLC; the lowest priority is discarded first).

The ranking of priorities given in the tables 5.1/1, 5.1/2, 5.1/3 and 5.1/4 is not normative. The tables can only be seen as a proposal that might be changed due to network operator/implementation matters.

If secure transport is used, the encapsulated application context for the requested dialogue determines the priority for discarding the received MAP operation.

**Table 5.1/1: Priorities of Application Contexts for HLR as Responder**

<b>Responder = HLR</b>		<b>Initiating Entity</b>
<i>Priority high</i>		
	<i>Mobility Management</i>	
networkLocUp	(updateLocation), (restoreData/v2), (sendParameters/v1)	VLR
gprsLocationUpdate	(updateGPRSLocation/v3),	SGSN
infoRetrieval	(sendAuthenticationInfo/v2/v3), (sendParameters/v1)	VLR/SGSN
istAlerting	(istAlert/v3) (purgeMS/v2/v3)	MSC msPurging      VLR
msPurging	(purgeMS/v3)	SGSN
	<i>Short Message Service</i>	
shortMsgGateway	(sendRoutingInfoforSM), (reportSM-DeliveryStatus)	GMSC
mwdMngt	VLR/SGSN (readyForSM/v2/v3), (noteSubscriberPresent/v1)	
	<i>Mobile Terminating Traffic</i>	
locInfoRetrieval	(sendRoutingInfo)	GMSC
anyTimeEnquiry	(anyTimeInterrogation/v3)	gsmSCF
reporting	(statusReport)	VLR
	<i>Location Services</i>	
locationSvcGateway	(sendRoutingInfoforLCS/v3)	GMLC
	<i>Subscriber Controlled Inputs (Supplementary Services)</i>	
networkFunctionalSs	(registerSS), (eraseSS), (activateSS), (deactivateSS), (interrogateSS), (registerPassword), (processUnstructuredSS-Data/v1), (beginSubscriberActivity/v1)	VLR
callCompletion	(registerCCEEntry), (eraseCCEEntry)	VLR
networkUnstructuredSs	(processUnstructuredSS-Request/v2)	VLR
imsiRetrieval	(sendIMSI/v2)	VLR
gprsLocationInfoRetrieval	(sendRoutingInfoForGprs/v3/v4)	GGSN/SGSN
failureReport	(failureReport/v3)	GGSN/SGSN
authenticationFailureReport	(authenticationFailureReport/v3)	VLR/SGSN
<i>Priority low</i>		

NOTE: The application context name is the last component but one of the object identifier.  
 Operation names are given in brackets for information with "/vn" appended to vn only operations.

**Table 5.1/3: Priorities of Application Contexts for SGSN as Responder**

<b>Responder = SGSN</b>	<b>Initiating Entity</b>
<b><i>Priority high</i></b>	
<b><i>Mobility and Location Register Management</i></b>	
locationCancel (cancelLocation v3)	HLR
reset (reset)	HLR
subscriberDataMngt (insertSubscriberData v3), (deleteSubscriberData v3)	HLR
tracing (activateTraceMode), (deactivateTraceMode)	HLR
<b><i>Short Message Service</i></b>	
shortMsgMT-Relay (MT-ForwardSM v3), (forwardSM v1/v2)	MSC
<b><i>Location Services</i></b>	
locationSvcEnquiry (provideSubscriberLocation v3)	GMLC
<b><i>Network-Requested PDP context activation</i></b>	
gprsNotify (noteMsPresentForGprs v3),	HLR
<b><i>(Subscriber Location &amp; State retrieval)</i></b>	
subscriberInfoEnquiry (provideSubscriberInformation/v3)	HLR
<b><i>Priority low</i></b>	

NOTE: The application context name is the last component but one of the object identifier.  
Operation names are given in brackets for information with "/vn" appended to vn.

**Table 5.1/2: Priorities of Application Contexts for MSC/VLR as Responder**

<b>Responder = MSC/VLR</b>	<b>Initiating Entity</b>
<i>Priority high</i>	
<i>Handover</i>	
handoverControl (prepareHandover/v2/v3), (performHandover/v1)	MSC
<i>Group call and Broadcast call</i>	
groupCallControl (prepareGroupCall/v3)	MSC
<i>Mobility and Location Register Management</i>	
locationCancel (cancelLocation)	HLR
reset (reset)	HLR
immediateTermination (istCommand/v3)	HLR
interVlrInfoRetrieval (sendIdentification/v2/v3), (sendParameters/v1)	VLR
subscriberDataMngt (insertSubscriberData), (deleteSubscriberData)	HLR
tracing (activateTraceMode), (deactivateTraceMode)	HLR
<i>Short Message Service</i>	
shortMsgMO-Relay (MO-ForwardSM v3), (forwardSM v1/v2)	MSC/SGSN
shortMsgMT-Relay (MT-ForwardSM v3), (forwardSM v1/v2)	MSC
shortMsgAlert (alertServiceCentre/v2), (alertServiceCentreWithoutResult/v1)	HLR
<i>Mobile Terminating Traffic</i>	
roamingNbEnquiry (provideRoamingNumber)	HLR
callControlTransfer (resumeCallHandling)	MSC
subscriberInfoEnquiry (provideSubscriberInformation/v3)	HLR
reporting (remoteUserFree), (SetReportingState)	HLR
<i>Location Services</i>	
locationSvcEnquiry (provideSubscriberLocation/v3)	GMLC
<i>Network-Initiated USSD</i>	
networkUnstructuredSs (unstructuredSS-Request/v2), (unstructuredSS-Notify/v2)	HLR
<i>Priority low</i>	

NOTE: The application context name is the last component but one of the object identifier.

Operation names are given in brackets for information with "/vn" appended to vn only operations.

### 5.1.3 Congestion control for Signalling System No. 7

The requirements of SS7 Congestion control have to be taken into account as far as possible.

Means that could be applied to achieve the required traffic reductions are described in clauses 5.1.1 and 5.1.2.

## 5.2 Compatibility

### 5.2.1 General

The present document of the Mobile Application Part is designed in such a way that an implementation which conforms to it can also conform to the Mobile Application Part operational version 1 specifications, except on the MSC-VLR interface.

A version negotiation mechanism based on the use of an application-context-name is used to negotiate the protocol version used between two entities for supporting a MAP-user signalling procedure.

When starting a signalling procedure, the MAP-user supplies an application-context-name to the MAP-provider. This name refers to the set of application layer communication capabilities required for this dialogue. This refers to the required TC facilities (e.g. version 1 or 2) and the list of operation packages (i.e. set of operations) from which operations can be invoked during the dialogue.

A version one application-context-name may only be transferred to the peer user in a MAP-U-ABORT to an entity of version two or higher (i.e. to trigger a dialogue which involves only communication capabilities defined for MAP operational version 1).

If the proposed application-context-name can be supported by the responding entity the dialogue continues on this basis otherwise the dialogue is refused and the initiating user needs to start a new dialogue, which involves another application-context-name which requires less communication capabilities but provides similar functionality (if possible).

When a signalling procedure can be supported by several application contexts that differ by their version number, the MAP-User needs to select a name. It can either select the name that corresponds to the highest version it supports or follow a more specific strategy so that the number of protocol fall-backs due to version compatibility problems is minimised.

### 5.2.2 Strategy for selecting the Application Context (AC) version

A method should be used to minimise the number of protocol fall-backs which would occur sometimes if the highest supported AC-Name were always the one selected by GSM entities when initiating a dialogue. The following method is an example that can be used mainly at transitory phase stage when the network is one of mixed phase entities.

#### 5.2.2.1 Proposed method

A table (table 1) may be set up by administrative action to define the highest application context (AC) version supported by each destination; a destination may be another node within the same or a different PLMN, or another PLMN considered as a single entity. The destination may be defined by an E.164 number or an E.214 number derived from an IMSI or in North America (World Zone 1) by an E.164 number or an IMSI (E.212 number). The table also includes the date when each destination is expected to be able to handle at least one AC of the latest version of the MAP protocol. When this date is reached, the application context supported by the node is marked as "unknown", which will trigger the use of table 2.

A second table (table 2) contains an entry for each destination that has an entry in table 1. For a given entity, the entry in table 2 may be a single application context version or a vector of different versions applying to different application contexts for that entity. Table 2 is managed as described in clause 5.2.2.2.

The data for each destination will go through the following states:

- a) the version shown in table 1 is "version n-1", where 'n' is the highest version existing in this specification; table 2 is not used;

- b) the version shown in table 1 is "unknown"; table 2 is used, and maintained as described in clause 5.2.2.2;
- c) when the PLMN operator declares that an entity (single node or entire PLMN) has been upgraded to support all the MAP version n ACs defined for the relevant interface, the version shown in table 1 is set to "version n" by administrative action; table 2 is no longer used, and the storage space may be recovered.

### 5.2.2.2 Managing the version look-up table

**WHEN** it receives a MAP-OPEN ind the MAP-User determines the originating entity number either using the originating address parameter or the originating reference parameter or retrieving it from the subscriber data using the IMSI or the MSISDN.

**IF** the entity number is known:

**THEN**

It updates (if required) the associated list of highest supported ACs.

**ELSE**

It creates an entry for this entity and includes the received AC-name in the list of highest supported ACs.

**WHEN** starting a procedure, the originating MAP-user looks up its version control table.

**IF** the destination address is known and not timed-out.

**THEN**

It retrieves the appropriate AC-name and uses it

**IF** the dialogue is accepted by the peer

**THEN**

It does not modify the version control table

**ELSE** (this should never occur)

It starts a new dialogue with the common highest version supported (based on information implicitly or explicitly provided by the peer).

It replaces the old AC-name by the new one in the list of associated highest AC supported.

**ELSE**

It uses the AC-name that corresponds to the highest version it supports.

**IF** the dialogue is accepted by the peer.

**THEN**

It adds the destination node in its version control table and includes the AC-Name in the list of associated highest AC supported.

**ELSE**

It starts a new dialogue with the common highest version supported (based on information implicitly or explicitly provided by the peer).

**IF** the destination node was not known

**THEN**

It adds the destination node in its version control table and includes the new AC-Name in the list of associated highest AC supported.

**ELSE**

It replaces the old AC-name by the new one in the list of highest supported AC and reset the timer.

### 5.2.2.3 Optimising the method

A table look-up may be avoided in some cases if both the HLR and the VLR or both the HLR and the SGSN store for each subscriber the version of the AC-name used at location updating. Then:

- for procedures which make use of the same application-context, the same AC-name (thus the same version) can be selected (without any table look-up) when the procedure is triggered;
- for procedures which make use of a different application-context but which includes one of the packages used by the location updating AC, the same version can be selected (without any table look-up) when the procedure is triggered;

**for HLR:**

- Subscriber data modification (stand alone);

**for VLR:**

- Data Restoration.

## 6 Requirements concerning the use of SCCP and TC

### 6.1 Use of SCCP

The Mobile Application Part (MAP) makes use of the services offered by the Signalling Connection Control Part (SCCP).

MAP supports the following SCCP versions:

- Signalling Connection Control Part, Signalling System no. 7 CCITT ('Blue Book SCCP');
- Signalling Connection Control Part, Signalling System no. 7 ITU-T Recommendation (07/96) Q.711 to Q.716 ('White Book SCCP'). Support of White Book SCCP at the receiving side shall be mandated from 00:01hrs, 1st July 2002(UTC). However, for signalling over the MAP E-interface to support inter-MSC handover/relocation, the support of White Book SCCP shall be mandated with immediate effect.

A White Book SCCP message will fail if any signalling point used in the transfer of the message does not support White Book SCCP. Therefore it is recommended that the originator of the White Book SCCP message supports a drop back mechanism or route capability determination mechanism to interwork with signalling points that are beyond the control of GSM/UMTS network operators.

In North America (World Zone 1) the national version of SCCP is used as specified in ANSI T1.112. Interworking between a PLMN in North America and a PLMN outside North America will involve an STP to translate between ANSI SCCP and ITU-T/CCITT SCCP.

The SCCP is identified as an MTP3-user and the transport of SCCP messages between two entities shall be accomplished according to the 3GPP TS 29.202 [121].

#### 6.1.1 SCCP Class

MAP will only make use of the connectionless classes (0 or 1) of the SCCP.

#### 6.1.2 Sub-System Number (SSN)

The Application Entities (AEs) defined for MAP consist of several Application Service Elements (ASEs) and are addressed by sub-system numbers (SSNs). The SSNs for MAP are specified in 3GPP TS 23.003 [17].

When the SGSN emulates MSC behaviour for processing messages (MAP-MO-FORWARD-SHORT-MESSAGE, MAP\_CHECK\_IMEI, MAP\_SUBSCRIBER\_LOCATION\_REPORT) towards entities which do not support interworking to SGSNs, it shall use the MSC SSN in the calling party address instead of the SGSN SSN.

## 6.1.3 SCCP addressing

### 6.1.3.1 Introduction

Within the GSM System there will be a need to communicate between entities within the same PLMN and in different PLMNs. Using the Mobile Application Part (MAP) for this function implies the use of Transaction Capabilities (TC) and the Signalling Connection Control Part (SCCP) of CCITT Signalling System No. 7.

Only the entities that should be addressed are described below. If the CCITT or ITU-T SCCP is used, the format and coding of address parameters carried by the SCCP for that purpose shall comply with CCITT Recommendation Q.713 with the following restrictions:

#### 1) Intra-PLMN addressing

For communication between entities within the same PLMN, a MAP SSN shall always be included in the called and calling party addresses. All other aspects of SCCP addressing are network specific.

#### 2) Inter-PLMN addressing

##### a) Called Party Address

- SSN indicator = 1 (MAP SSN always included);
- Global title indicator = 0100 (Global title includes translation type, numbering plan, encoding scheme and nature of address indicator);
- the translation type field will be coded "00000000" (Not used). For call related messages for non-optimal routed calls (as described in 3GPP TS 23.066 [108]) directed to another PLMN the translation type field may be coded "10000000" (CRMNP);
- Routing indicator = 0 (Routing on global title);

##### b) Calling Party Address

- SSN indicator = 1 (MAP SSNs always included);
- Point code indicator = 0;
- Global title indicator = 0100 (Global title includes translation type, numbering plan, encoding scheme and nature of address indicator);
- Numbering Plan = 0001 (ISDN Numbering Plan, E.164; In Case of Inter-PLMN Signalling, the dialogue initiating entity and dialogue responding entity shall always include its own E.164 Global Title as Calling Party Address);
- the translation type field will be coded "00000000" (Not used);
- Routing indicator = 0 (Routing on Global Title).

If ANSI T1.112 SCCP is used, the format and coding of address parameters carried by the SCCP for that purpose shall comply with ANSI specification T1.112 with the following restrictions:

#### 1) Intra-PLMN addressing

For communication between entities within the same PLMN, a MAP SSN shall always be included in the called and calling party addresses. All other aspects of SCCP addressing are network specific.

#### 2) Inter-PLMN addressing

##### a) Called Party Address

- SSN indicator = 1 (MAP SSN always included);
- Global title indicator = 0010 (Global title includes translation type);
- the Translation Type (TT) field will be coded as follows:

TT = 9, if IMSI is included;

TT = 14, if MSISDN is included;

Or TT = 10, if Network Element is included. (If TT=10, then Number Portability GTT is not invoked, if TT=14, then Number Portability GTT may be invoked).

- Routing indicator = 0 (Routing on global title);

b) Calling Party Address

- SSN indicator = 1 (MAP SSNs always included);
- Point code indicator = 0;
- Global Title indicator = 0010 (Global title includes translation type);

TT = 9, if IMSI is included;

TT = 14, if MSISDN is included;

Or TT = 10, if Network Element is included. (If TT=10, then Number Portability GTT is not invoked, if TT=14, then Number Portability GTT may be invoked).

Routing indicator = 0 (Routing on Global Title).

If a Global Title translation is required for obtaining routeing information, one of the numbering plans E.164, E.212 and E.214 is applicable.

- E.212 numbering plan.

When CCITT or ITU-T SCCP is used, an E.212 number must not be included as Global Title in an SCCP UNITDATA message. The translation of an E.212 number into a Mobile Global Title is applicable in a dialogue initiating VLR, SGSN or GGSN if the routeing information towards the HLR is derived from the subscriber's IMSI. In World Zone 1 when ANSI SCCP is used, the IMSI (E.212 number) is used as a Global Title to address the HLR. When an MS moves from one VLR service area to another, the new VLR may derive the address of the previous VLR from the Location Area Identification provided by the MS in the location registration request. The PLMN where the previous VLR is located is identified by the E.212 numbering plan elements of the Location Area Identification, i.e. the Mobile Country Code (MCC) and the Mobile Network Code (MNC).

- E.214 and E.164 numbering plans.

When CCITT or ITU-T SCCP is used, only address information belonging to either E.214 or E.164 numbering plan is allowed to be included as Global Title in the Called and Calling Party Address. In World Zone 1 when ANSI SCCP is used, the IMSI (E.212 number) is used as a Global Title to address the HLR.

If the Calling Party Address associated with the dialogue initiating message contains a Global Title, the sending network entity shall include its E.164 entity number.

When receiving an SCCP UNITDATA message, SCCP shall accept either of the valid numbering plans in the Called Party Address and in the Calling Party Address.

When CCITT or ITU-T SCCP is used and an N-UNITDATA-REQUEST primitive from TC is received, SCCP shall accept an E.164 number or an E.214 number in the Called Address and in the Calling Address. In World Zone 1 when ANSI SCCP is used, the IMSI (E.212 number) is used instead of E.214 number.

The following clauses describe the method of SCCP addressing appropriate for each entity both for the simple intra-PLMN case and where an inter-PLMN communication is required. The following entities are considered:

- the Mobile-services Switching Centre (MSC);

- the Home location Register (HLR);
- the Visitor Location Register (VLR);
- the Gateway Mobile-services Switching Centre (GMSC);
- the GSM Service Control Function (gsmSCF);
- the Interworking Mobile-services Switching Centre (IWMSC);
- the Shared Inter Working Function (SIWF);
- the Serving GPRS Support Node (SGSN);
- the Gateway GPRS Support Node (GGSN);
- the Gateway Mobile Location Centre (GMLC).

### **6.1.3.2 The Mobile-services Switching Centre (MSC)**

There are several cases where it is necessary to address the MSC.

#### **6.1.3.2.1 MSC interaction during handover or relocation**

The address is derived from the target Cell id or from the target RNC id.

#### **6.1.3.2.2 MSC for short message routing**

When a short message has to be routed to an MS, the GMSC addresses the VMSC by an MSC identity received from the HLR that complies with E.164 rules.

For MS originating short message, the IWMSC address is derived from the Service Centre address.

#### **6.1.3.2.3 MSC for location request routing**

When a location request for a particular MS needs to be sent to the MS's VMSC, the GMLC addresses the VMSC using an E.164 address received from the MS's HLR.

#### **6.1.3.2.4 MSC for LMU Control**

When a control message has to be routed to an LMU from an SMLC, the SMLC addresses the serving MSC for the LMU using an E.164 address.

### **6.1.3.3 The Home Location Register (HLR)**

There are several cases where the HLR has to be addressed.

#### **6.1.3.3.1 During call set-up**

When a call is initiated the HLR of the called mobile subscriber will be interrogated to discover the whereabouts of the MS. The addressing required by the SCCP will be derived from the MSISDN dialled by the calling subscriber. The dialled number will be translated into either an SPC, in the case of communications within a PLMN, or a Global Title if other networks are involved (i.e. if the communication is across a PLMN boundary).

If the calling subscriber is a fixed network subscriber, the interrogation can be initiated from the Gateway MSC of the home PLMN in the general case. If the topology of the network allows it, the interrogation could be initiated from any Signalling Point that has MAP capabilities, e.g. local exchange, outgoing International Switching Centre (ISC), etc.

### 6.1.3.3.2 Before location updating completion

When an MS registers for the first time in a VLR, the VLR has to initiate the update location dialogue with the MS's HLR and a preceding dialogue for authentication information retrieval if the authentication information must be retrieved from the HLR. When initiating either of these dialogues, the only data for addressing the HLR that the VLR has available is contained in the IMSI, and addressing information for SCCP must be derived from it. When continuing the established update location dialogue (as with any other dialogue), the VLR must derive the routeing information towards the HLR from the Calling Party Address received with the first responding CONTINUE message until the dialogue terminating message is received. This means that the VLR must be able to address the HLR based on:

- an E.214 Mobile Global Title originally derived by the VLR from the IMSI (when CCITT or ITU-T SCCP is used), or an E.212 number originally derived from IMSI (when ANSI SCCP is used, an IMSI); or
- an E.164 HLR address; or
- in the case of intra-PLMN signalling, an SPC.

When answering with Global Title to the VLR, the HLR shall insert its E.164 address in the Calling Party Address of the SCCP message containing the first responding CONTINUE message.

If the HLR is in the same PLMN as the VLR, local translation tables may exist to derive an SPC. For authentication information retrieval and location updating via the international PSTN/ISDN signalling network that requires the use of CCITT or ITU-T SCCP, the Global Title must be derived from the IMSI, using the principles contained in CCITT Recommendation E.214 and the Numbering Plan Indicator (NPI) value referenced by the SCCP Specifications. In World Zone 1 where the ANSI SCCP is used, IMSI (E.212 number) is used as Global Title. A summary of the translation from the IMSI (CCITT Recommendation E.212) to Mobile Global Title (described in CCITT Recommendation E.214) is shown below:

- E.212 Mobile Country Code translates to E.164 Country Code;
- E.212 Mobile Network Code translates to E.164 National Destination Code;
- E.212 Mobile Subscriber Identification Number (MSIN) is carried unchanged if within the E.164 number maximum length (15 digits). If the Mobile Global Title is more than 15 digits the number is truncated to 15 by deleting the least significant digits.

This translation will be done either at the application or at SCCP level in the VLR. The Mobile Global Title thus derived will be used to address the HLR.

If location updating is triggered by an MS that roams from one MSC Area into a different MSC Area served by the same VLR, the VLR shall address the HLR in the same way as if the MS registers for the first time in the VLR.

### 6.1.3.3.3 After location updating completion

In this case, the subscriber's basic MSISDN has been received from the HLR during the subscriber data retrieval procedure as well as the HLR number constituting a parameter of the MAP message indicating successful completion of the update location dialogue. From either of these E.164 numbers the address information for initiating dialogues with the roaming subscriber's HLR can be derived. Also the subscriber's IMSI may be used for establishing the routeing information towards the HLR. This may apply in particular if the dialogue with the HLR is triggered by subscriber controlled input.

Thus the SCCP address of the roaming subscriber's HLR may be an SPC, or it may be a Global title consisting of the E.164 MSISDN or the E.164 number allocated to the HLR or either the E.214 Mobile Global Title derived from the IMSI if CCITT or ITU-T SCCP is used, or the IMSI if ANSI SCCP is used (ANSI SCCP is used in World Zone 1).

#### 6.1.3.3.4 VLR restoration

If a roaming number is requested by the HLR for an IMSI that has no data record in the interrogated VLR, the VLR provides the roaming number in the dialogue terminating message. Subsequently the VLR must retrieve the authentication data from the MS's HLR, if required, and must then trigger the restore data procedure. For this purpose, the VLR has to initiate in succession two independent dialogues with the MS's HLR. The MTP and SCCP address information needed for routeing towards the HLR can be derived from the IMSI received as a parameter of the MAP message requesting the roaming number. In this case, the IMSI received from the HLR in the roaming number request shall be processed in the same way as the IMSI that is received from an MS that registers for the first time within a VLR. Alternatively to the IMSI, the Calling Party Address associated with the roaming number request may be used to obtain the routeing information towards the HLR.

#### 6.1.3.3.5 During Network-Requested PDP Context Activation

When receiving a PDP PDU the GGSN may interrogate the HLR of the MS for information retrieval. When initiating such a dialogue, the only data for addressing the HLR that the GGSN has available is contained in the IMSI, and addressing information must be derived from it. The IMSI is obtained from the IP address or the X.25 address in the incoming IP message by means of a translation table. This means that the GGSN shall be able to address the HLR based on an E.214, (if CCITT or ITU-T SCCP is used), or E.212 (if ANSI SCCP is used), Mobile Global Title originally derived by the GGSN from the IMSI in the case of inter-PLMN signalling. In the case of intra-PLMN signalling, an SPC may also be used.

If the HLR is in the same PLMN as the GGSN, local translation tables may exist to derive an SPC. For information retrieval via the international PSTN/ISDN signalling network, the Global title must be derived from the IMSI, using the principles contained in CCITT Recommendation E.214 and the Numbering Plan Indicator (NPI) value referenced by the SCCP Specifications. A summary of the translation from the IMSI (CCITT Recommendation E.212) to Mobile Global Title (described in CCITT Recommendation E.214) is shown below:

- E.212 Mobile Country Code translates to E.164 Country Code;
- E.212 Mobile Network Code translates to E.164 National Destination Code;
- E.212 Mobile Subscriber Identification Number (MSIN) is carried unchanged if within the E.164 number maximum length (15 digits). If the Mobile Global Title is more than 15 digits the number is truncated to 15 by deleting the least significant digits.

This translation will be done either at the application or at SCCP level in the GGSN. The Mobile Global Title thus derived will be used to address the HLR.

#### 6.1.3.3.6 Before GPRS location updating completion

When an MS registers for the first time in an SGSN, the SGSN has to initiate the update location dialogue with the MS's HLR and a preceding dialogue for authentication information retrieval if the authentication information must be retrieved from the HLR. When initiating either of these dialogues, the only data for addressing the HLR that the SGSN has available is contained in the IMSI, and addressing information for SCCP must be derived from it. When continuing the established update location dialogue (as with any other dialogue), the SGSN must derive the routeing information towards the HLR from the Calling Party Address received with the first responding CONTINUE message until the dialogue terminating message is received. This means that the SGSN must be able to address the HLR based on:

- an E.214 (if CCITT or ITU-T SCCP is used) or E.212 (if ANSI SCCP is used) Mobile Global Title originally derived by the SGSN from the IMSI; or
- an E.164 HLR address; or
- in the case of intra-PLMN signalling, an SPC.

If the HLR is in the same PLMN as the SGSN, local translation tables may exist to derive an SPC. For authentication information retrieval and location updating via the international PSTN/ISDN signalling network, the Global title must be derived from the IMSI, using the principles contained in CCITT Recommendation E.214 and the Numbering Plan Indicator (NPI) value referenced by the SCCP Specifications. A summary of the translation from the IMSI (CCITT Recommendation E.212) to Mobile Global Title (described in CCITT Recommendation E.214) is shown below:

- E.212 Mobile Country Code translates to E.164 Country Code;

- E.212 Mobile Network Code translates to E.164 National Destination Code;
- E.212 Mobile Subscriber Identification Number (MSIN) is carried unchanged if within the E.164 number maximum length (15 digits). If the Mobile Global Title is more than 15 digits the number is truncated to 15 by deleting the least significant digits.

This translation will be done either at the application or at SCCP level in the SGSN. The Mobile Global Title thus derived will be used to address the HLR.

#### **6.1.3.3.7 After GPRS location updating completion**

In this case, the subscriber's Basic MSISDN has been received from the HLR during the subscriber data retrieval procedure as well as the HLR number constituting a parameter of the MAP message indicating successful completion of the update location dialogue. From either of these E.164 numbers the address information for initiating dialogues with the roaming subscriber's HLR can be derived. Also the subscriber's IMSI may be used for establishing the routeing information towards the HLR.

Thus the SCCP address of the roaming subscriber's HLR may be an SPC, or it may be a Global title consisting of the E.164 MSISDN or the E.164 number allocated to the HLR or the E.214 Mobile Global Title derived from the IMSI.

#### **6.1.3.3.8 Query for a Location Request**

For a location request from an external client, the GMLC needs to address the home HLR of the target MS to obtain the address of the target MS's serving MSC. The GMLC uses either the international E.164 MSISDN, the international E.214 number (if CCITT or ITU-T SCCP is used) or the international E.212 number (if ANSI SCCP is used) of the MS as means to route a query to the HLR.

#### **6.1.3.4 The Visitor Location Register (VLR)**

There are several cases when the VLR needs to be addressed.

##### **6.1.3.4.1 Inter-VLR information retrieval**

When an MS moves from one VLR service area to another, the new VLR may request the IMSI and authentication sets from the previous VLR. The new VLR derives the address of the previous VLR from the Location Area Identification provided by the MS in the location registration request.

##### **6.1.3.4.2 HLR request**

The HLR will only request information from a VLR if it is aware that one of its subscribers is in the VLR service area. This means that a location updating dialogue initiated by the VLR has been successfully completed, i.e. the HLR has indicated successful completion of the update location procedure to the VLR.

When initiating dialogues towards the VLR after successful completion of location updating, the routeing information used by the HLR is derived from the E.164 VLR number received as a parameter of the MAP message initiating the update location dialogue. If the VLR is in the same PLMN as the HLR, the VLR may be addressed directly by an SPC derived from the E.164 VLR number. For dialogues via the international PSTN/ISDN signalling network, presence of the E.164 VLR number in the Called Party Address is required.

#### **6.1.3.5 The Interworking MSC (IWMSC) for Short Message Service**

The IWMSC is the interface between the mobile network and the network to access to the Short Message Service Centre. This exchange has an E.164 address known in the SGSN or in the MSC.

#### **6.1.3.6 The Equipment Identity Register (EIR)**

The EIR address is either unique or could be derived from the IMEI. The type of address is not defined.

### 6.1.3.7 The Shared Inter Working Function (SIWF)

When the Visited MSC detects a data or fax call and the IWF in the V-MSC cannot handle the required service an SIWF can be invoked. The SIWF is addressed with an E.164 number.

### 6.1.3.8 The Serving GPRS Support Node (SGSN)

The HLR will initiate dialogues towards the SGSN if it is aware that one of its subscribers is in the SGSN serving area. This means that a GPRS location updating has been successfully completed, i.e., the HLR has indicated successful completion of the GPRS location update to the SGSN. The routeing information used by the HLR is derived form the E.164 SGSN number received as parameter of the MAP message initiating the GPRS update location procedure. If the SGSN is in the same PLMN as the HLR, the SGSN may be addressed directly by an SPC derived from the E.164 SGSN number. For dialogues via the international PSTN/ISDN signalling network, the presence of the E.164 SGSN number in the Called Party Address is required.

When the GMSC initiates dialogues towards the SGSN the SGSN (MAP) SSN (See 3GPP TS 23.003 [17]) shall be included in the called party address. The routeing information used by the GMSC is derived from the E.164 SGSN number received as a parameter of the MAP message initiating the forward short message procedure. If the GMSC does not support the GPRS functionality the MSC (MAP) SSN value shall be included in the called party address.

**NOTE:** Every VMSC and SGSN shall have uniquely identifiable application using E.164 numbers, for the purpose of SMS over GPRS when the GMSC does not support the GPRS functionality.

### 6.1.3.9 The Gateway GPRS Support Node (GGSN)

The GGSN provides interworking with external packet-switched networks, network screens and routing of the Network-Requested PDP Context activation. If a Network-Requested PDP Context activation fails, the HLR will alert the GGSN when the subscriber becomes reachable. The HLR will use the E.164 GGSN number received as parameter of the MAP message reporting the failure.

### 6.1.3.10 The Gateway MSC (GMSC) for Short Message Service

The GMSC provides interworking with the network to access the Short Message Service Centre, the mobile network and routing of Send Routing Info For SM. The GMSC has on E.164 address known in the HLR, SGSN or MSC.

#### 6.1.3.10A Void

##### 6.1.3.10A.1 Void

##### 6.1.3.10A.2 Void

### 6.1.3.10B The Gateway Mobile Location Centre (GMLC)

The GMLC initiates location requests on behalf of external clients. The E.164 address of the GMLC is provided to an HLR when the GMLC requests a serving MSC address or SGSN address from the HLR for a target MS. The E.164 address of the GMLC is also provided to a serving MSC or SGSN when the GMLC requests the location of a target MS served by this MSC or SGSN.

### 6.1.3.11 Summary table

The following tables summarise the SCCP address used for invoke operations. As a principle, within a PLMN either an SPC or a GT may be used (network operation option), whereas when addressing an entity outside the PLMN the GT must be used. The address type mentioned in the table (e.g. MSISDN) is used as GT or to derive the SPC.

For a response, the originating address passed in the invoke is used as SCCP Called Party Address. For extra-PLMN addressing the own E.164 entity address is used as SCCP Calling Party Address; for intra-PLMN addressing an SPC derived from the entity number may be used instead. When using an SPC, the SPC may be taken directly from MTP.

Table 6.1/1

to from	fixed net work	HLR	VLR	MSC	EIR	gsmSCF	SIWF	SGSN	GGSN
fixed network	---	E:GT T:MSISDN	---	---	---	---	---	---	---
Home Location Register	---	---	I:SPC/GT E:GT T:VLR NUMBER	---	---	I:SPC/GT E:GT T:gsmSCF NUMBER	---	I:SPC/GT E:GT T:SGSN NUMBER	I:SPC/GT E:GT T:GGSN NUMBER
Visitor Location Register	---	I:SPC/GT E:GT T:MGT (outside World Zone 1)/MSISDN (World Zone 1)/HLR NUMBER (note)	I:SPC/GT E:GT T:VLR NUMBER	---	---	I:SPC/GT E:GT T:gsmSCF NUMBER	---	---	---
mobile- services switching centre	---	I:SPC/GT E:GT T:MSISDN	I:SPC/GT E:GT T:VLR NUMBER	I:SPC/GT E:GT T:MSC NUMBER	I:SPC/GT E:GT T:EIR NUMBER	I:SPC/GT E:GT T:gsmSCF NUMBER	I:SPC/GT E:GT T:SIWF NUMBER	I:SPC/GT E:GT T:SGSN NUMBER	---
gsm Service Control Function	---	I:SPC/GT E:GT T:MSISDN	---	---	---	---	---	---	---
Shared Inter Working Function	---	---	---	I:SPC/GT E:GT T:MSC NUMBER	---	---	---	---	---
Serving GPRS Support Node	---	I:SPC/GT E:GT T:MGT/ MSISDN/HL R NUMBER	---	I:SPC/GT E:GT T:MSC NUMBER	I:SPC/GT E:GT T:EIR NUMBER	I:SPC/GT E:GT T:gsmSCF NUMBER	---	---	---
Gateway GPRS Support Node	---	I:SPC/GT E:GT T:MGT	---	---	---	---	---	---	---
Gateway Mobile Location Centre	---	I:SPC/GT E:GT T:MSISDN, MGT (outside World Zone 1) or IMSI (World Zone 1) (note)	---	I:SPC/GT E:GT T:MSC NUMBER	---	---	---	I:SPC/GT E:GT T:SGSN NUMBER	---

I:	Intra-PLMN.
E:	Extra (Inter)-PLMN.
T:	Address Type.
GT:	Global Title.
MGT:	E.214 Mobile Global Title.
SPC:	Signalling Point Code.
NOTE:	<p>For initiating the location updating procedure and an authentication information retrieval from the HLR preceding it, the VLR has to derive the HLR address from the IMSI of the MS. The result can be an SPC or an E.214 Mobile Global Title if CCITT or ITU-T SCCP is used, or IMSI itself if ANSI SCCP is used (ANSI SCCP is used in World Zone 1). When continuing the established update location dialogue (as with any other dialogue) the VLR must derive the routeing information towards the HLR from the Calling Party Address received with the first responding CONTINUE message until the dialogue terminating message is received.</p> <p>For transactions invoked by the VLR after update location completion, the VLR may derive the information for addressing the HLR from addresses received in the course of the update location procedure (MSISDN or HLR number) or from the IMSI.</p> <p>When invoking the Restore Data procedure and an authentication information retrieval from the HLR preceding it, the VLR must derive the information for addressing the HLR from the address information received in association with the roaming number request. This may be either the IMSI received as a parameter of the MAP message requesting the Roaming Number or the Calling Party Address associated with the MAP message requesting the Roaming Number.</p> <p>The gsmSCF shall be addressed using more than one Global Title number. The first Global Title number is used to address a gsmSCF for MAP. The second Global Title number is used to address a gsmSCF for CAP.</p> <p>For querying the HLR to obtain the VMSC address to support location services, the GMLC has to derive the HLR address from either the MSISDN or IMSI of the target MS. When using the IMSI, the result can be an SPC or an E.214 Mobile Global Title if CCITT or ITU-T SCCP is used, or IMSI itself if ANSI SCCP is used (ANSI SCCP is used in World Zone 1).</p>

Table 6.1/2

to from		GMLC
<b>fixed network</b>		---
<b>Home Location Register</b>		---
<b>Visitor Location Register</b>		---
<b>Mobile-services Switching Centre</b>		I:SPC/GT E:GT T:MLC Number
<b>gsm Service Control Function</b>		I:SPC/GT E:GT T:MSISDN
<b>Shared Inter Working Function</b>		---
<b>Serving GPRS Support Node</b>		I:SPC/GT E:GT T:MLC Number
<b>Gateway GPRS Support Node</b>		---
<b>Gateway Mobile Location Centre</b>		
I:	Intra-PLMN.	
E:	Extra (Inter)-PLMN.	
T:	Address Type.	
GT:	Global Title.	
MGT:	E.214 Mobile Global Title.	
SPC:	Signalling Point Code.	

## 6.2 Use of TC

The Mobile Application part makes use of the services offered by the Transaction Capabilities (TC) of Signalling System No. 7. ETS 300 287, which is based on CCITT White Book Recommendations Q.771 to Q.775, should be consulted for the full specification of TC.

The MAP uses all the services provided by TC except the ones related to the unstructured dialogue facility.

From a modelling perspective, the MAP is viewed as a single Application Service Element. Further structuring of it is for further study.

Transaction Capabilities refers to a protocol structure above the network layer interface (i.e., the SCCP service interface) up to the application layer including common application service elements but not the specific application service elements using them.

TC is structured as a Component sub-layer above a Transaction sub-layer.

The Component sub-layer provides two types of application services: services for the control of end-to-end dialogues and services for Remote Operation handling. These services are accessed using the TC-Dialogue handling primitives and TC-Component handling primitives respectively.

Services for dialogue control include the ability to exchange information related to application-context negotiation as well as initialisation data.

Services for Remote Operation handling provide for the exchange of protocol data units invoking tasks (operations), and reporting their outcomes (results or errors) plus any non-application-specific protocol errors detected by the component sub-layer. The reporting of application-specific protocol errors by the TC user, as distinct from application process errors, is also provided. The Transaction sub-layer provides a simple end-to-end connection association service over which several related protocol data units (i.e. built by the Component Sub-Layer) can be exchanged. A Transaction termination can be prearranged (no indication provided to the TC user) or basic (indication provided).


## 7 General on MAP services

### 7.1 Terminology and definitions

The term service is used in clauses 7 to 12 as defined in CCITT Recommendation X.200. The service definition conventions of CCITT Recommendation X.210 are also used.

### 7.2 Modelling principles

MAP provides its users with a specified set of services and can be viewed by its users as a "black box" or abstract machine representing the MAP service-provider. The service interface can then be depicted as shown in figure 7.2/1.

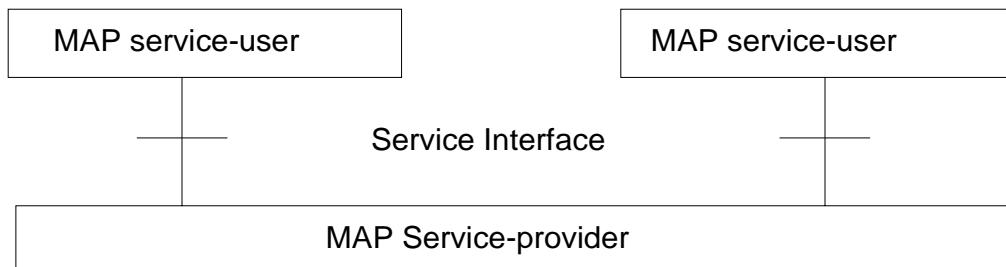

**Figure 7.2/1: Modelling principles**

The MAP service-users interact with the MAP service-provider by issuing or receiving MAP service-primitives at the service interface.

A MAP service-user may receive services from several instances of the MAP service-provider at the same time. In such cases the overall procedure is synchronised by the service-user.

The MAP service-primitives are named using the following notation:

MAP-ServicePrimitiveName **type**

where **type** can be any of: request (req), indication (ind), response (rsp) or confirm (cnf). (In the user arrow diagrams type is not indicated in the case of req/ind and indicated as "ack" in the case of rsp/cnf).

The services are further classified as unconfirmed-service, confirmed-service and provider-initiated-service where the first two categories refer to whether or not the service is confirmed by the service-provider. The confirmation may or may not correspond to a response provided by the other service-user.

MAP services are also classified as common MAP services that are available to all MAP service-users, and MAP service-user specific services, which are services available to one or several, but not all, MAP service-users.

A MAP dialogue is defined as an exchange of information between two MAP users in order to perform a common task. A MAP dialogue will consist of one or several MAP services.

## 7.3 Common MAP services

All MAP service-users require access to services for performing basic application layer functions:

- for establishing and clearing MAP dialogues between peer MAP service-users;
- for accessing functions supported by layers below the applications layer;
- for reporting abnormal situations;
- for handling of different MAP versions;
- for testing whether or not a persistent MAP dialogue is still active at each side.

For these purposes the following common services are defined:

- MAP-OPEN service;
- MAP-CLOSE service;
- MAP-DELIMITER service;
- MAP-U-ABORT service;
- MAP-P-ABORT service;
- MAP-NOTICE service;
- MAP-SECURE-TRANSPORT-CLASS-1 service;
- MAP-SECURE-TRANSPORT-CLASS-2 service;
- MAP-SECURE-TRANSPORT-CLASS-3 service;
- MAP-SECURE-TRANSPORT-CLASS-4 service.

In defining the service-primitives the following convention is used for categorising parameters:

- M** the inclusion of the parameter is mandatory. The M category can be used for any primitive type and specifies that the corresponding parameter must be present in the indicated primitive type;
- O** the inclusion of the parameter is a service-provider option. The O category can be used in indication and confirm type primitives and is used for parameters that may optionally be included by the service-provider;
- U** the inclusion of the parameter is a service-user option. The U category can be used in request and response type primitives. The inclusion of the corresponding parameter is the choice of the service-user;

C the inclusion of the parameter is conditional. The C category can be used for the following purposes:

- to indicate that if the parameter is received from another entity it must be included for the service being considered;
- to indicate that the service user must decide whether to include the parameter, based on the context on which the service is used;
- to indicate that one of a number of mutually exclusive parameters must be included (e.g. parameters indicating a positive result versus parameters indicating a negative result);
- to indicate that a service user optional parameter (marked "U") or a conditional parameter (marked "C") presented by the service user in a request or response type primitive is to be presented to the service user in the corresponding indication or confirm type primitive;

(=) when appended to one of the above, this symbol means that the parameter takes the same value as the parameter appearing immediately to its left;

blank the parameter is not present.

A primitive type may also be without parameters, i.e. no parameter is required with the primitive type; in this case the corresponding column of the table is empty.

### 7.3.1 MAP-OPEN service

This service is used for establishing a MAP dialogue between two MAP service-users. The service is a confirmed service with service primitives as shown in table 7.3/1.

**Table 7.3/1: Service-primitives for the MAP-OPEN service**

Parameters	Request	Indication	Response	Confirm
Application context name	M	M(=)	U	C(=)
Destination address	M	M(=)		
Destination reference	U	C(=)		
Originating address	U	O		
Originating reference	U	C(=)		
Specific information	U	C(=)	U	C(=)
Responding address			U	C(=)
Result			M	M(=)
Refuse-reason			C	C(=)
Provider error				O

#### Application context name:

This parameter identifies the type of application context being established. If the dialogue is accepted the received application context name shall be echoed. In case of refusal of dialogue this parameter shall indicate the highest version supported.

#### Destination address:

A valid SCCP address identifying the destination peer entity (see also clause 6). As an implementation option, this parameter may also, in the indication, be implicitly associated with the service access point at which the primitive is issued.

#### Destination-reference:

This parameter is a reference that refines the identification of the called process. It may be identical to Destination address but its value is to be carried at MAP level. Table 7.3/2 describes the MAP services using this parameter. Only these services are allowed to use it.

**Table 7.3/2: Use of the destination reference**

<b>MAP service</b>	<b>Reference type</b>	<b>Use of the parameter</b>
MAP-REGISTER-SS	IMSI	Subscriber identity
MAP-ERASE-SS	IMSI	Subscriber identity
MAP-ACTIVATE-SS	IMSI	Subscriber identity
MAP-DÉACTIVATION-SS	IMSI	Subscriber identity
MAP-INTERROGATE-SS	IMSI	Subscriber identity
MAP-REGISTER-PASSWORD	IMSI	Subscriber identity
MAP-PROCESS-UNSTRUCTURED-SS-REQUEST	IMSI (note 1)	Subscriber identity
MAP-UNSTRUCTURED-SS-REQUEST	IMSI (note 2)	Subscriber identity
MAP-UNSTRUCTURED-SS-NOTIFY	IMSI (note 2)	Subscriber identity
MAP-FORWARD-SHORT-MESSAGE	IMSI (note 3)	Subscriber identity
MAP-REGISTER-CC-ENTRY	IMSI	Subscriber identity
MAP-ERASE-CC-ENTRY	IMSI	Subscriber identity

NOTE 1: On the HLR - HLR interface and on the HLR - gsmSCF interface the Destination reference shall be either IMSI or MSISDN.

NOTE 2: On the gsmSCF - HLR interface and on the HLR - HLR interface the Destination reference shall be either IMSI or MSISDN.

NOTE 3: Only when the IMSI and the LMSI are received together from the HLR in the mobile terminated short message transfer.

#### Originating address:

A valid SCCP address identifying the requestor of a MAP dialogue (see also clause 6). As an implementation option, this parameter may also, in the request, be implicitly associated with the service access point at which the primitive is issued.

#### Originating-reference:

This parameter is a reference that refines the identification of the calling process. It may be identical to the Originating address but its value is to be carried at MAP level. Table 7.3/3 describes the MAP services using the parameter. Only these services are allowed to use it. Processing of the Originating-reference shall be performed according to the supplementary service descriptions and other service descriptions, e.g. operator determined barring. Furthermore the receiving entity may be able to use the value of the Originating-reference to screen the service indication.

**Table 7.3/3: Use of the originating reference**

<b>MAP service</b>	<b>Reference type</b>	<b>Use of the parameter</b>
MAP-REGISTER-SS	ISDN-Address-String	Originated entity address
MAP-ERASE-SS	ISDN-Address-String	Originated entity address
MAP-ACTIVATE-SS	ISDN-Address-String	Originated entity address
MAP-DEACTIVATE-SS	ISDN-Address-String	Originated entity address
MAP-INTERROGATE-SS	ISDN-Address-String	Originated entity address
MAP-REGISTER-PASSWORD	ISDN-Address-String	Originated entity address
MAP-PROCESS-UNSTRUCTURED-SS-REQUEST	ISDN-Address-String	Originated entity address
MAP-UNSTRUCTURED-SS-REQUEST	ISDN-Address-String (note)	Originated entity address
MAP-UNSTRUCTURED-SS-NOTIFY	ISDN-Address-String (note)	Originated entity address
MAP-REGISTER-CC-ENTRY	ISDN-Address-String	Originated entity address
MAP-ERASE-CC-ENTRY	ISDN-Address-String	Originated entity address

NOTE: The Originating reference may be omitted.

Specific information:

This parameter may be used for passing any user specific information. Establishment and processing of the Specific information is not specified by GSM and shall be performed according to operator specific requirements.

Responding address:

An address identifying the responding entity. The responding address is included if required by the context (e.g. if it is different from the destination address).

Result:

This parameter indicates whether the peer accepts the dialogue.

Refuse reason:

This parameter is present only if the Result parameter indicates that the dialogue is refused. It takes one of the following values:

- Application-context-not-supported;
- Invalid-destination-reference;
- Invalid-originating-reference;
- No-reason-given;
- Remote node not reachable;
- Potential version incompatibility;
- Secured transport not possible;

- Transport protection not adequate.

### 7.3.2 MAP-CLOSE service

This service is used for releasing a previously established MAP dialogue. The service may be invoked by either MAP service-user depending on rules defined within the service-user. The service is an unconfirmed service with parameters as shown in table 7.3/4.

**Table 7.3/4: Service-primitives for the MAP-CLOSE service**

Parameters	Request	Indication
Release method	M	
Specific Information	U	C(=)

Release method:

This parameter can take the following two values:

- normal release; in this case the primitive is mapped onto the protocol and sent to the peer;
- prearranged end; in this case the primitive is not mapped onto the protocol. Prearranged end is managed independently by the two users, i.e. only the request type primitive is required in this case.

Specific information:

This parameter may be used for passing any user specific information. Establishment and processing of the Specific information is not specified by GSM and shall be performed according to operator specific requirements.

### 7.3.3 MAP-DELIMITER service

This service is used to explicitly request the transfer of the MAP protocol data units to the peer entities.

See also clause 7.4 and 7.5 for the detailed use of the MAP-DELIMITER service.

The service is an unconfirmed service with service-primitives as shown in table 7.3/5.

**Table 7.3/5: Service-primitives for the MAP-DELIMITER service**

Parameters	Request	Indication

### 7.3.4 MAP-U-ABORT service

This service enables the service-user to request the MAP dialogue to be aborted. The service is an unconfirmed service with service-primitives as shown in table 7.3/6.

**Table 7.3/6: Service-primitives for the MAP-U-ABORT service**

Parameters	Request	Indication
User reason	M	M(=)
Diagnostic information	U	C(=)
Specific information	U	C(=)

User reason:

This parameter can take the following values:

- resource limitation (congestion);  
the requested user resource is unavailable due to congestion;

- resource unavailable;  
the requested user resource is unavailable for reasons other than congestion;
- application procedure cancellation;  
the procedure is cancelled for reasons detailed in the diagnostic information parameter;
- procedure error;  
processing of the procedure is terminated for procedural reasons.

Diagnostic information:

This parameter may be used to give additional information for some of the values of the user-reason parameter:

**Table 7.3/7: User reason and diagnostic information**

User reason	Diagnostic information
Resource limitation (congestion)	-
Resource unavailable	Short term/long term problem
Application procedure cancellation	Handover cancellation/ Radio Channel release/ Network path release/ Call release/ Associated procedure failure/ Tandem dialogue released/ Remote operations failure
Procedure error	-

Specific information:

This parameter may be used for passing any user specific information. Establishment and processing of the Specific information is not specified by GSM and shall be performed according to operator specific requirements.

### 7.3.5 MAP-P-ABORT service

This service enables the MAP service-provider to abort a MAP dialogue. The service is a provider-initiated service with service-primitives as shown in table 7.3/8.

**Table 7.3/8: Service-primitives for the MAP-P-ABORT service**

Parameters		Indication
Provider reason		M
Source		M

Provider reason:

This parameter indicates the reason for aborting the MAP dialogue:

- provider malfunction;
- supporting dialogue/transaction released;
- resource limitation;
- maintenance activity;
- version incompatibility;
- abnormal MAP dialogue.

Source:

This parameter indicates the source of the abort. For Transaction Capabilities (TC) applications the parameter may take the following values:

- MAP problem;
- TC problem;
- network service problem.

**Table 7.3/9: Values of provider reason and source parameters and examples of corresponding events**

Provider reason	Source	Corresponding event
Provider malfunction	MAP	Malfunction at MAP level at peer entity
	TC	"Unrecognised message type" or "Badly formatted transaction portion" or "Incorrect transaction portion" received in TC-P-ABORT "Abnormal dialogue"
	Network service	Malfunction at network service level at peer entity
Supporting dialogue/transaction released	TC	"Unrecognised transaction ID" received in TC-ABORT
Resource limitation	MAP	Congestion towards MAP peer service-user
Maintenance activity	MAP	Maintenance at MAP peer service-user
Abnormal MAP dialogue	Network service	Maintenance at network peer service level
Version incompatibility	MAP	MAP dialogue is not in accordance with specified application context
	TC	A Provider Abort indicating "No common dialogue portion" is received in the dialogue initiated state

### 7.3.6 MAP-NOTICE service

This service is used to notify the MAP service-user about protocol problems related to a MAP dialogue not affecting the state of the protocol machines.

The service is a provider-initiated service with service-primitive as shown in table 7.3/10.

**Table 7.3/10: Service-primitive for the MAP-NOTICE service**

Parameters	Indication
Problem diagnostic	M

#### Problem diagnostic:

This parameter can take one of the following values:

- abnormal event detected by the peer;
- response rejected by the peer;
- abnormal event received from the peer;
- message cannot be delivered to the peer.

### 7.3.7 MAP-SECURE-TRANSPORT-CLASS-1 service

This service is used for secure transport of a specific confirmed MAP service which is mapped on to a TCAP class 1 operation (i.e. one which can return a result or an error). The service is a confirmed service with service primitives as shown in table 7.3/11.

**Table 7.3/11: Service-primitives for the MAP-SECURE-TRANSPORT-CLASS-1 service**

<b>Parameters</b>	<b>Request</b>	<b>Indication</b>	<b>Response</b>	<b>Confirm</b>
Security header	M	M(=)	M	M(=)
Protected payload	C	C(=)	U	C(=)
User error			U	C(=)
Provider error				O

Security header:

This parameter carries the security header information required for secure transport of MAP messages. The details of this parameter are given in clause 7.6.12.

Protected payload:

This parameter represents in protected mode the complete Request, Indication, Response or Confirm primitive of the service which makes use of the MAP-SECURE-TRANSPORT-CLASS-1 service.

User error:

If the application at the responding entity returns an error to be carried in the secure transport envelope, this parameter contains the Secure transport error defined in clause 7.6.1.

Provider error

For the definition of provider errors see clause 7.6.1.

### 7.3.8 MAP-SECURE-TRANSPORT-CLASS-2 service

This service is used for secure transport of a specific confirmed MAP service which is mapped on to a TCAP class 2 operation (i.e. one which can return an error but no result). The service is a confirmed service with service primitives as shown in table 7.3/12.

**Table 7.3/12: Service-primitives for the MAP-SECURE-TRANSPORT-CLASS-2 service**

<b>Parameters</b>	<b>Request</b>	<b>Indication</b>	<b>Response</b>	<b>Confirm</b>
Security header	M	M(=)	M	M(=)
Protected payload	C	C(=)		
User error			U	C(=)
Provider error				O

Security header:

This parameter carries the security header information required for secure transport of MAP messages. The details of this parameter are given in clause 7.6.12.

Protected payload:

This parameter represents in protected mode the complete Request, Indication, Response or Confirm primitive of the service which makes use of the MAP-SECURE-TRANSPORT-CLASS-2 service.

User error:

If the application at the responding entity returns an error to be carried in the secure transport envelope, this parameter contains the Secure transport error defined in clause 7.6.1.

Provider error

For the definition of provider errors see clause 7.6.1.

### 7.3.9 MAP-SECURE-TRANSPORT-CLASS-3 service

This service is used for secure transport of a specific confirmed MAP service which is mapped on to a TCAP class 3 operation (i.e. one which can return a result but no error). The service is a confirmed service with service primitives as shown in table 7.3/13.

**Table 7.3/13: Service-primitives for the MAP-SECURE-TRANSPORT-CLASS-3 service**

Parameters	Request	Indication	Response	Confirm
Security header	M	M(=)	M	M(=)
Protected payload	C	C(=)	U	C(=)
Provider error				O

Security header:

This parameter carries the security header information required for secure transport of MAP messages. The details of this parameter are given in clause 7.6.12.

Protected payload:

This parameter represents in protected mode the complete Request, Indication, Response or Confirm primitive of the service which makes use of the MAP-SECURE-TRANSPORT-CLASS-3 service.

Provider error

For the definition of provider errors see clause 7.6.1.

### 7.3.10 MAP-SECURE-TRANSPORT-CLASS-4 service

This service is used for secure transport of a specific unconfirmed MAP service which is mapped on to a TCAP class 4 operation (i.e. one which can return neither a result nor an error). The service is an unconfirmed service with service primitives as shown in table 7.3/14.

**Table 7.3/14: Service-primitives for the MAP-SECURE-TRANSPORT-CLASS-4 service**

Parameters	Request	Indication
Security header	M	M(=)
Protected payload	C	C(=)

Security header:

This parameter carries the security header information required for secure transport of MAP messages. The details of this parameter are given in clause 7.6.12.

Protected payload:

This parameter represents in protected mode the complete Request or Indication primitive of the service which makes use of the MAP-SECURE-TRANSPORT-CLASS-4 service.

## 7.4 Sequencing of services

The sequencing of services is shown in figure 7.4/1 and is as follows:

Opening:

The MAP-OPEN service is invoked before any user specific service-primitive is accepted. The sequence may contain none, one or several user specific service-primitives. If no user specific service-primitive is contained between the MAP-OPEN and the MAP-DELIMITER primitives, then this will correspond to sending an empty Begin message in TC. If more than one user specific service-primitive is included, all are to be sent in the same Begin message. The sequence ends with a MAP-DELIMITER primitive.

Continuing:

This sequence may not be present in some MAP dialogues. If it is present, it ends with a MAP-DELIMITER primitive. If more than one user specific service-primitive is included, all are to be included in the same Continue message.

Closing:


The sequence can only appear after an opening sequence or a continuing sequence. The sequence may contain none, one or several user specific service-primitives if the MAP-CLOSE primitive specifies normal release. If no user specific service-primitive is included, then this will correspond to sending an empty End message in TC. If more than one user specific service-primitive is included, all are to be sent in the same End message. If prearranged end is specified, the sequence cannot contain any user specific service-primitive. The MAP-CLOSE primitive must be sent after all user specific service-primitives have been delivered to the MAP service-provider.

#### Aborting:

A MAP service-user can issue a MAP-U-ABORT primitive at any time after the MAP dialogue has been opened or as a response to an attempt to open a MAP dialogue.

The MAP service-provider may issue at any time a MAP-P-ABORT primitive towards a MAP service-user for which a MAP dialogue exists.

MAP-U-ABORT primitives and MAP-P-ABORT primitives terminate the MAP dialogue.

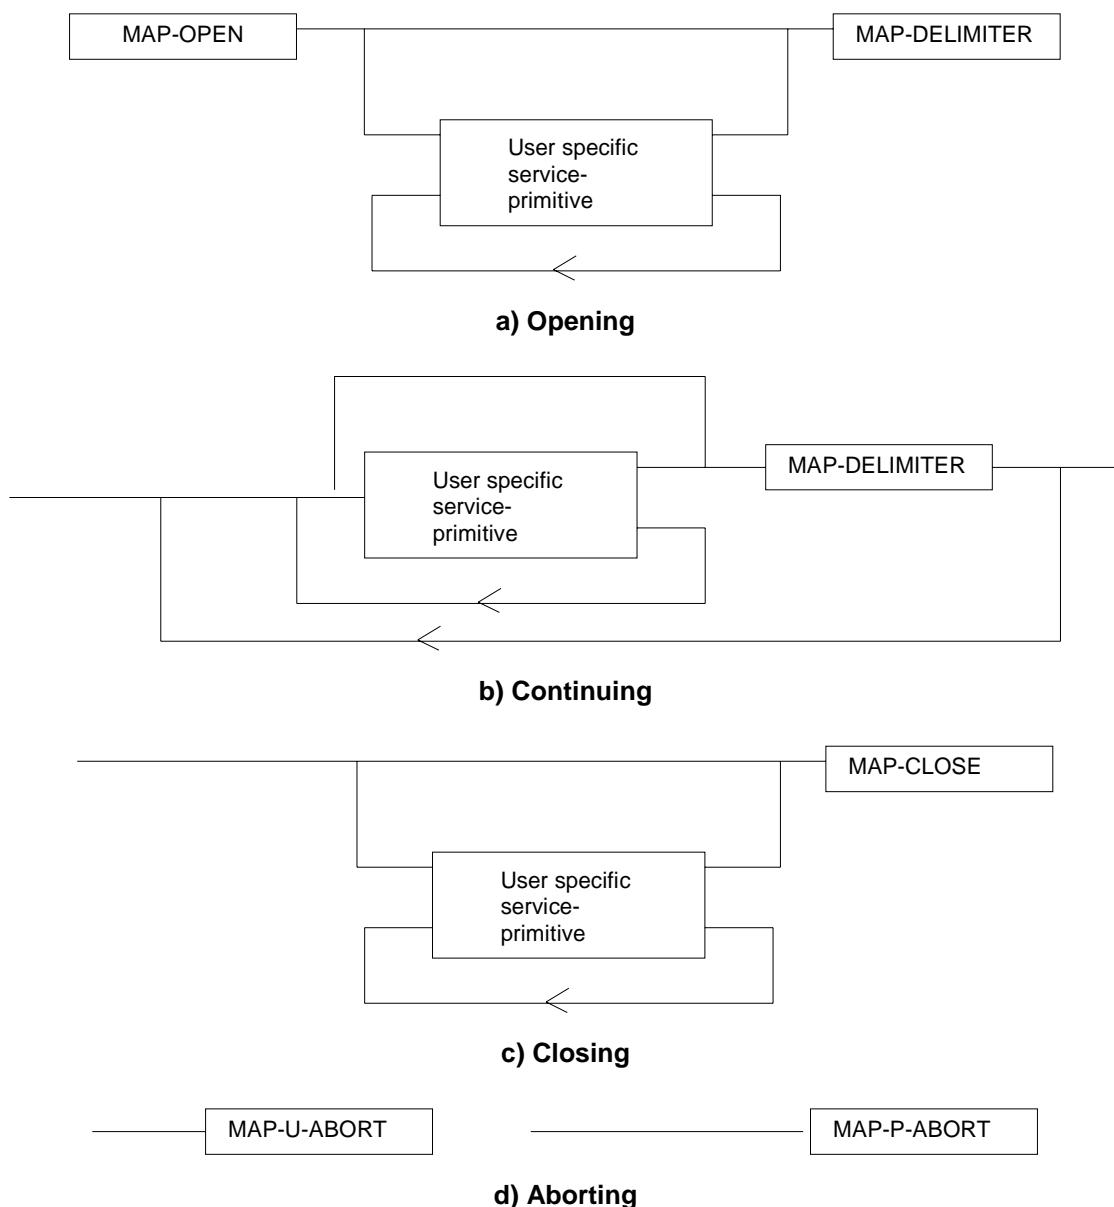

**Figure 7.4/1: Sequencing of services**

If the reason "resource unavailable (short term problem)" is indicated in the MAP-U-ABORT indication primitive, the MAP service-user may decide to attempt a new MAP dialogue establishment immediately.

Sequencing of user specific service-primitives is done by the MAP service-user and based on rules applicable for each MAP service-user instance.

A MAP-NOTICE indication primitive may be received at any time during the active period of a MAP dialogue.

## 7.5 General rules for mapping of services onto TC

### 7.5.1 Mapping of common services

Table 7.5/1 gives an overview of the mapping rules for mapping of common services onto TC-services. Table 7.5/2 gives the mapping rules for mapping of TC-services onto common services.

Protocol machine description is given in clauses 14 to 17.

**Table 7.5/1: Mapping of common services onto TC services**

MAP service-primitive	TC service-primitive
MAP-OPEN request (+ any user specific service primitives) + MAP-DELIMITER request	TC-BEGIN request (+ component handling primitives)
MAP-OPEN response (+ any user specific service primitives) + MAP-DELIMITER request	TC-CONTINUE request (note) (+ component handling primitives)
(any user specific service primitives) + MAP-DELIMITER request	TC-CONTINUE request (+ component handling primitives)
(any user specific service primitives) + MAP-CLOSE request	TC-END request (+ component handling primitives)
MAP-U-ABORT request	TC-U-ABORT request
NOTE: Or TC-END if the MAP-CLOSE request has been received before the MAP-DELIMITER request.	

**Table 7.5/2: Mapping of TC services onto common service**

TC service-primitive	MAP service-primitive
TC-BEGIN indication (+ component handling primitives)	MAP-OPEN indication (+ user specific service primitives) + MAP-DELIMITER indication (note 1)
TC-CONTINUE indication (+ component handling primitives)	First time: MAP-OPEN confirm (+ user specific service primitives) + MAP-DELIMITER indication (note 1)  Subsequent times: (user specific service primitives) + MAP-DELIMITER indication (note 1)
TC-END indication (+ component handling primitives)	MAP-OPEN confirm (note 6) (user specific service primitives) + MAP-CLOSE indication
TC-U-ABORT indication	MAP-U-ABORT indication or MAP-P-ABORT indication (note 2) MAP-OPEN confirmation (note 3)
TC-P-ABORT indication	MAP-P-ABORT indication (note 4) MAP-OPEN confirmation (note 5)

- NOTE 1: It may not be necessary to present this primitive to the user for MAP version 2 applications.
- NOTE 2: The mapping depends on whether the TC-U-ABORT indication primitive contains a MAP-abort-PDU from the remote MAP service-provider or a MAP-user-abort-PDU from the remote MAP service-user.
- NOTE 3: Only if the opening sequence is pending and if the "Abort Reason" in the TC-U-ABORT indication is set to "Application Context Not Supported".
- NOTE 4: If the "Abort Reason" in the TC-P-ABORT indication is set to a value different from "Incorrect Transaction Portion".
- NOTE 5: Only if the opening sequence is pending and if the "Abort Reason" in the TC-P-ABORT indication is set to "Incorrect Transaction Portion".
- NOTE 6: Only if opening sequence is pending.

## 7.5.2 Mapping of user specific services

Table 7.5/3 gives the general mapping rules which apply to mapping of MAP user specific services onto TC services and table 7.5/4 gives the similar rules for mapping of TC services onto MAP user specific services. Detailed mapping is given in clauses 14 to 17.

**Table 7.5/3: Mapping of MAP user specific services onto TC services**

MAP service-primitive	TC-service-primitive
MAP-xx request	TC-INVOKE request
MAP-xx response (note 1)	TC-RESULT-L request TC-U-ERROR request TC-U-REJECT request TC-INVOKE request (note 2)

**Table 7.5/4: Mapping of TC services onto MAP user specific services**

TC-service-primitive	MAP service-primitive
TC-INVOKE indication	MAP-xx indication
TC-RESULT-L indication (note 4) TC-U-ERROR indication TC-INVOKE indication (note 2) TC-L-CANCEL indication	MAP-xx confirm
TC-U-REJECT indication TC-L-REJECT indication TC-R-REJECT indication	MAP-xx confirm or MAP-NOTICE indication (note 3)

Notes to tables 7.5/3 and 7.5/4:

NOTE 1: The mapping is determined by parameters contained in the MAP-xx response primitive.

NOTE 2: This applies only to TC class 4 operations where the operation is used to pass a result of another class 2 or class 4 operation.

NOTE 3: The detailed mapping rules are given in clause 16.

NOTE 4: If RESULT-NL components are present they are mapped onto the same MAP-xx confirm.

## 7.6 Definition of parameters

Following is an alphabetic list of parameters used in the common MAP-services in clause 7.3:

Application context name	7.3.1	Refuse reason	7.3.1
Destination address	7.3.1	Release method	7.3.2
Destination reference	7.3.1	Responding address	7.3.1
Diagnostic information	7.3.4	Result	7.3.1
Originating address	7.3.1	Source	7.3.5

Originating reference	7.3.1	Specific information	7.3.1/7.3.2/7.3.4
Problem diagnostic	7.3.6	User reason	7.3.4
Provider reason	7.3.5		

Following is an alphabetic list of parameters contained in this clause:

Absent Subscriber Diagnostic SM	7.6.8.9	Location Information	7.6.2.30
Access connection status	7.6.9.3	Location Information for GPRS	7.6.2.30a
Access signalling information	7.6.9.5	Location update type	7.6.9.6
Additional Absent Subscriber Diagnostic SM	7.6.8.12	Long Forwarded-to Number	7.6.2.22A
Additional Location Estimate	7.6.11.21	Long FTN Supported	7.6.2.22B
Additional number	7.6.2.46	Lower Layer Compatibility	7.6.3.42
Additional signal info	7.6.9.10	LSA Information	7.6.3.56
Additional SM Delivery Outcome	7.6.8.11	LSA Information Withdraw	7.6.3.58
Age Indicator	7.6.3.72	MC Information	7.6.4.48
Alert Reason	7.6.8.8	MC Subscription Data	7.6.4.47
Alert Reason Indicator	7.6.8.10	Mobile Not Reachable Reason	7.6.3.51
Alerting Pattern	7.6.3.44	Modification request for CSI	7.6.3.81
All GPRS Data	7.6.3.53	Modification request for SS Information	7.6.3.82
All Information Sent	7.6.1.5	More Messages To Send	7.6.8.7
AN-apdu	7.6.9.1	MS ISDN	7.6.2.17
APN	7.6.2.42	MSC number	7.6.2.11
Authentication set list	7.6.7.1	MSIsdn-Alert	7.6.2.29
B-subscriber Address	7.6.2.36	Multicall Bearer Information	7.6.2.52
B subscriber Number	7.6.2.48	Multiple Bearer Requested	7.6.2.53
B subscriber subaddress	7.6.2.49	Multiple Bearer Not Supported	7.6.2.54
Basic Service Group	7.6.4.40	MWD status	7.6.8.3
Bearer service	7.6.4.38	NbrUser	7.6.4.45
BSSMAP Service Handover	7.6.6.5	Network Access Mode	7.6.3.50
BSSMAP Service Handover List	7.6.6.5A	Network node number	7.6.2.43
Call Barring Data	7.6.3.83	Network resources	7.6.10.1
Call barring feature	7.6.4.19	Network signal information	7.6.9.8
Call barring information	7.6.4.18	New password	7.6.4.20
Call Direction	7.6.5.8	No reply condition timer	7.6.4.7
Call Forwarding Data	7.6.3.84	North American Equal Access preferred Carrier Id	7.6.2.34
Call Info	7.6.9.9	Number Portability Status	7.6.5.14
Call reference	7.6.5.1	ODB Data	7.6.3.85
Call Termination Indicator	7.6.3.67	ODB General Data	7.6.3.9
Called number	7.6.2.24	ODB HPLMN Specific Data	7.6.3.10
Calling number	7.6.2.25	OMC Id	7.6.2.18
CAMEL Subscription Info	7.6.3.78	Originally dialled number	7.6.2.26
CAMEL Subscription Info Withdraw	7.6.3.38	Originating entity number	7.6.2.10
Cancellation Type	7.6.3.52	Override Category	7.6.4.4
Category	7.6.3.1	P-TMSI	7.6.2.47
CCBS Feature	7.6.5.8	PDP-Address	7.6.2.45
CCBS Request State	7.6.4.49	PDP-Context identifier	7.6.3.55
Channel Type	7.6.5.9	PDP-Type	7.6.2.44
Chosen Channel	7.6.5.10	Pre-paging supported	7.6.5.15
Chosen Radio Resource Information	7.6.6.10B	Previous location area Id	7.6.2.4
Ciphering mode	7.6.7.7	Protocol Id	7.6.9.7
Cksn	7.6.7.5	Provider error	7.6.1.3
CLI Restriction	7.6.4.5	PS LCS Not Supported by UE	7.6.11.10
CM service type	7.6.9.2	QoS-Subscribed	7.6.3.47
Complete Data List Included	7.6.3.54	Radio Resource Information	7.6.6.10
CS Allocation Retention priority	7.6.3.87	Radio Resource List	7.6.6.10A
CS LCS Not Supported by UE	7.6.11.9	RANAP Service Handover	7.6.6.6
CUG feature	7.6.3.26	Rand	7.6.7.2
CUG index	7.6.3.25	LCS-Reference Number	7.6.11.23
CUG info	7.6.3.22	Regional Subscription Data	7.6.3.11
CUG interlock	7.6.3.24	Regional Subscription Response	7.6.3.12
CUG Outgoing Access indicator	7.6.3.8	Relocation Number List	7.6.2.19A
CUG subscription	7.6.3.23	Requested Info	7.6.3.31
CUG Subscription Flag	7.6.3.37		

Current location area Id	7.6.2.6	Requested Subscription Info	7.6.3.86
Current password	7.6.4.21	Roaming number	7.6.2.19
Deferred MT-LR Data	7.6.11.3	Roaming Restricted In SGSN Due To Unsupported Feature	7.6.3.49
Deferred MT-LR Response Indicator	7.6.11.2	Roaming Restriction Due To Unsupported Feature	7.6.3.13
eMLPP Information	7.6.4.41	Current Security Context	7.6.7.8
Encryption Information	7.6.6.9	Selected RAB ID	7.6.2.56
Equipment status	7.6.3.2	Service centre address	7.6.2.27
Extensible Basic Service Group	7.6.3.5	Serving Cell Id	7.6.2.37
Extensible Bearer service	7.6.3.3	SGSN address	7.6.2.39
Extensible Call barring feature	7.6.3.21	SGSN CAMEL Subscription Info	7.6.3.75
Extensible Call barring information	7.6.3.20	SGSN number	7.6.2.38
Extensible Call barring information for CSE	7.6.3.79	SIWF Number	7.6.2.35
Extensible Forwarding feature	7.6.3.16	SoLSA Support Indicator	7.6.3.57
Extensible Forwarding info	7.6.3.15	SM Delivery Outcome	7.6.8.6
Extensible Forwarding information for CSE	7.6.3.80	SM-RP-DA	7.6.8.1
Extensible Forwarding Options	7.6.3.18	SM-RP-MTI	7.6.8.16
Extensible No reply condition timer	7.6.3.19	SM-RP-OA	7.6.8.2
Extensible QoS-Subscribed	7.6.3.74	SM-RP-PRI	7.6.8.5
Extensible SS-Data	7.6.3.29	SM-RP-SMEA	7.6.8.17
Extensible SS-Info	7.6.3.14	SM-RP-UI	7.6.8.4
Extensible SS-Status	7.6.3.17	Sres	7.6.7.3
Extensible Teleservice	7.6.3.4	SS-Code	7.6.4.1
External Signal Information	7.6.9.4	SS-Data	7.6.4.3
Failure Cause	7.6.7.9	SS-Event	7.6.4.42
Forwarded-to number	7.6.2.22	SS-Event-Data	7.6.4.43
Forwarded-to subaddress	7.6.2.23	SS-Info	7.6.4.24
Forwarding feature	7.6.4.16	SS-Status	7.6.4.2
Forwarding information	7.6.4.15	Stored location area Id	7.6.2.5
Forwarding Options	7.6.4.6	Subscriber State	7.6.3.30
GERAN Classmark	7.6.6.4	Subscriber Status	7.6.3.7
GGSN address	7.6.2.40	Super-Charger Supported in HLR	7.6.3.70
GGSN number	7.6.2.41	Super-Charger Supported in Serving Network Entity	7.6.3.71
GMSC CAMEL Subscription Info	7.6.3.34	Offered Camel4 CSIs	7.6.3.36D
GPRS enhancements support indicator	7.6.3.73	Offered Camel4 CSIs in GMSC	7.6.3.36E
GPRS Node Indicator	7.6.8.14	Offered Camel4 CSIs in VMSC	7.6.3.36F
GPRS Subscription Data	7.6.3.46	Offered Camel4 CSIs in VLR	7.6.3.36B
GPRS Subscription Data Withdraw	7.6.3.45	Offered Camel4 CSIs in SGSN	7.6.3.36C
GPRS Support Indicator	7.6.8.15	Offered Camel4 Functionalities	7.6.3.36G
Group Id	7.6.2.33	Supported CAMEL Phases in VLR	7.6.3.36
GSM bearer capability	7.6.3.6	Supported CAMEL Phases in SGSN	7.6.3.36A
gsmSCF Address	7.6.2.58	Supported GAD Shapes	7.6.11.20
gsmSCF Initiated Call	7.6.3.c	Supported LCS Capability Sets	7.6.11.17
Guidance information	7.6.4.22	Suppress Incoming Call Barring	7.6.3.b
Handover number	7.6.2.21	Suppress T-CSI	7.6.3.33
High Layer Compatibility	7.6.3.43	Suppress VT-CSI	7.6.3.a
HLR Id	7.6.2.15	Suppression of Announcement	7.6.3.32
HLR number	7.6.2.13	Target cell Id	7.6.2.8
HO-Number Not Required	7.6.6.7	Target location area Id	7.6.2.7
IMEI	7.6.2.3	Target RNC Id	7.6.2.8A
IMSI	7.6.2.1	Target MSC number	7.6.2.12
Integrity Protection Information	7.6.6.8	Teleservice	7.6.4.39
Inter CUG options	7.6.3.27	TMSI	7.6.2.2
Intra CUG restrictions	7.6.3.28	Trace reference	7.6.10.2
Invoke Id	7.6.1.1	Trace type	7.6.10.3
ISDN Bearer Capability	7.6.3.41	User error	7.6.1.4
IST Alert Timer	7.6.3.66	USSD Data Coding Scheme	7.6.4.36
IST Information Withdrawn	7.6.3.68	USSD String	7.6.4.37
IST Support Indicator	7.6.3.69	UU Data	7.6.5.12
LCS Codeword	7.6.11.18	UUS CF Interaction	7.6.5.13
LCS Information	7.6.3.60	VBS Data	7.6.3.40
LCS Service Type Id	7.6.11.15	VGCS Data	7.6.3.39
Kc	7.6.7.4	VLR CAMEL Subscription Info	7.6.3.35
Linked Id	7.6.1.2	VLR number	7.6.2.14
LMSI	7.6.2.16	VPLMN address allowed	7.6.3.48

## 7.6.1 Common parameters

The following set of parameters is used in several MAP service-primitives.

### 7.6.1.1 Invoke Id

This parameter identifies corresponding service primitives. The parameter is supplied by the MAP service-user and must be unique over each service-user/service-provider interface.

### 7.6.1.2 Linked Id

This parameter is used for linked services and it takes the value of the invoke Id of the service linked to.

### 7.6.1.3 Provider error

This parameter is used to indicate a protocol related type of error:

- duplicated invoke Id;
- not supported service;
- mistyped parameter;
- resource limitation;
- initiating release, i.e. the peer has already initiated release of the dialogue and the service has to be released;
- unexpected response from the peer;
- service completion failure;
- no response from the peer;
- invalid response received.

### 7.6.1.4 User error

This parameter can take values as follows:

NOTE: The values are grouped in order to improve readability; the grouping has no other significance.

#### a) Generic error:

- system failure, i.e. a task cannot be performed because of a problem in another entity. The type of entity or network resource may be indicated by use of the network resource parameter;
- data missing, i.e. an optional parameter required by the context is missing;
- unexpected data value, i.e. the data type is formally correct but its value or presence is unexpected in the current context;
- resource limitation;
- initiating release, i.e. the receiving entity has started the release procedure;
- facility not supported, i.e. the requested facility is not supported by the PLMN with detailed reasons as follows:
  - Shape of location estimate not supported;
  - Needed LCS capability not supported in serving node;

- incompatible terminal, i.e. the requested facility is not supported by the terminal.
- b) Identification or numbering problem:
- unknown subscriber, i.e. no such subscription exists;
  - number changed, i.e. the subscription does not exist for that number any more;
  - unknown MSC;
  - unidentified subscriber, i.e. if the subscriber is not contained in the database and it has not or cannot be established whether or not a subscription exists;
  - unallocated roaming number;
  - unknown equipment;
  - unknown location area.
- c) Subscription problem:
- roaming not allowed, i.e. a location updating attempt is made in an area not covered by the subscription;
  - illegal subscriber, i.e. illegality of the access has been established by use of authentication procedure;
  - bearer service not provisioned;
  - teleservice not provisioned;
  - illegal equipment, i.e. the IMEI check procedure has shown that the IMEI is blacklisted or not whitelisted.
- d) Handover problem:
- no handover number available, i.e. the VLR cannot allocate a number for handover or cannot allocate the required amount of numbers for relocation;
  - subsequent handover failure, i.e. handover to a third MSC failed for some reason;
  - target cell outside group call area.
- e) Operation and maintenance problem:
- tracing buffer full, i.e. tracing cannot be performed because the tracing capacity is exceeded.
- f) Call set-up problem:
- no roaming number available, i.e. a roaming number cannot be allocated because all available numbers are in use;
  - absent subscriber, i.e. the subscriber has activated the detach service or the system detects the absence condition. This error may be qualified to indicate whether the subscriber was IMSI detached, in a restricted area or did not respond to paging;
  - busy subscriber. This error may be qualified to indicate that the subscriber was busy due to CCBS and that CCBS is possible;
  - no subscriber reply;
  - forwarding violation, i.e. the call has already been forwarded the maximum number of times that is allowed;
  - CUG reject, i.e. the call does not pass a CUG check; additional information may also be given in order to indicate rejection due to e.g. incoming call barred or non-CUG membership;
  - call barred. Optionally, additional information may be included for indicating either that the call meets a barring condition set by the subscriber or that the call is barred for operator reasons. In the case of barring of Mobile Terminating Short Message, the additional information may indicate a barring condition due to "Unauthorised Message Originator";

- optimal routeing not allowed, i.e. the entity which sends the error does not support optimal routeing, or the HLR will not accept an optimal routeing interrogation from the GMSC, or the call cannot be optimally routed because it would contravene optimal routeing constraints;
- forwarding failed, i.e. the GMSC interrogated the HLR for forwarding information but the HLR returned an error.

g) Supplementary services problem:

- call barred;
- illegal SS operation;
- SS error status;
- SS not available;
- SS subscription violation;
- SS incompatibility;
- negative password check;
- password registration failure;
- Number of Password Attempts;
- USSD Busy;
- Unknown Alphabet;
- short term denial;
- long term denial.

For definition of these errors see 3GPP TS 24.080 [38].

h) Short message problem:

- SM delivery failure with detailed reason as follows:
  - memory capacity exceeded;
  - MS protocol error;
  - MS not equipped;
  - unknown service centre (SC);
  - SC congestion;
  - invalid SME address;
  - subscriber is not an SC subscriber;
  - and possibly detailed diagnostic information, coded as specified in 3GPP TS 23.140, under SMS-SUBMIT-REPORT and SMS-DELIVERY-REPORT. If the SM entity that returns the SM Delivery Failure error includes detailed diagnostic information, it shall be forwarded in the MAP\_MO\_FORWARD\_SHORT\_MESSAGE and in the MAP\_MT\_FORWARD\_SHORT\_MESSAGE response.
- message waiting list full, i.e. no further SC address can be added to the message waiting list.
- Subscriber busy for MT SMS, i.e. the mobile terminated short message transfer cannot be completed because:
  - another mobile terminated short message transfer is going on and the delivery node does not support message buffering; or

- another mobile terminated short message transfer is going on and it is not possible to buffer the message for later delivery; or
  - the message was buffered but it is not possible to deliver the message before the expiry of the buffering time defined in 3GPP TS 23.140;
  - Absent Subscriber SM, i.e. the mobile terminated short message transfer cannot be completed because the network cannot contact the subscriber. Diagnostic information regarding the reason for the subscriber's absence may be included with this error.
- i) Location services problem:
- Unauthorised Requesting Network
  - Unauthorised LCS Client with detailed reasons as follows:
    - NoAdditional Information
    - Client not in MS Privacy Exception List
    - Call to Client not setup
    - Disallowed by Local Regulatory Requirements
    - Unauthorised Privacy Class
    - Unauthorised Call/Session Unrelated External Client
    - Unauthorised Call/Session Related External Client
    - Privacy override not applicable
  - Position method failure with detailed reasons as follows:
    - Congestion
    - Insufficient resources
    - Insufficient Measurement Data
    - Inconsistent Measurement Data
    - Location procedure not completed
    - QoS not attainable
    - Position Method Not Available in Network
    - Position Method Not Available in Location Area
    - Unknown or unreachable LCS Client.
- j) Problem detected by an application using secure transport:
- Secure transport error. This error indicates that the application using secure transport returned an error. The parameter of the error indicates:
    - The protected payload, which carries the result of applying the protection function specified in 3GPP TS 33.200 to the encoding of the parameter of the original error.

### 7.6.1.5 All Information Sent

This parameter indicates to the receiving entity when the sending entity has sent all necessary information.

## 7.6.2 Numbering and identification parameters

### 7.6.2.1 IMSI

This parameter is the International Mobile Subscriber Identity defined in 3GPP TS 23.003 [17].

### 7.6.2.2 TMSI

This parameter is the Temporary Mobile Subscriber Identity defined in 3GPP TS 23.003 [17].

### 7.6.2.3 IMEI

This parameter is the International Mobile Equipment Identity defined in 3GPP TS 23.003 [17].

### 7.6.2.4 Previous location area Id

This parameter refers to the identity of the location area from which the subscriber has roamed.

### 7.6.2.5 Stored location area Id

This parameter refers to the location area where the subscriber is assumed to be located.

### 7.6.2.6 Current location area Id

This parameter is used to indicate the location area in which the subscriber is currently located.

### 7.6.2.7 Target location area Id

This parameter refers to the location area into which the subscriber intends to roam.

### 7.6.2.8 Target cell Id

This parameter refers to the identity of the cell to which a call has to be handed over.

### 7.6.2.8A Target RNC Id

This parameter refers to the identity of the RNC to which a call has to be relocated.

### 7.6.2.9 Void

### 7.6.2.10 Originating entity number

This parameter refers to an application layer identification of a system component in terms of its associated ISDN number.

### 7.6.2.11 MSC number

This parameter refers to the ISDN number of an MSC.

### 7.6.2.12 Target MSC number

This parameter refers to the ISDN number of an MSC to which a call has to be handed over.

### 7.6.2.13 HLR number

This parameter refers to the ISDN number of an HLR.

### 7.6.2.14 VLR number

This parameter refers to the ISDN number of a VLR.

#### 7.6.2.15 HLR Id

This parameter refers to the identity of an HLR derived from the IMSI defined in CCITT Recommendation E.212.

#### 7.6.2.16 LMSI

This parameter refers to a local identity allocated by the VLR to a given subscriber for internal management of data in the VLR. LMSI shall not be sent to the SGSN.

#### 7.6.2.17 MS ISDN

This parameter refers to one of the ISDN numbers assigned to a mobile subscriber in accordance with CCITT Recommendation E.213.

#### 7.6.2.18 OMC Id

This parameter refers to the identity of an Operation and Maintenance Centre.

#### 7.6.2.19 Roaming number

This parameter refers to the roaming number as defined in CCITT Recommendation E.213.

#### 7.6.2.19A Relocation Number List

This parameter refers to the number(s) used for routing one call or several calls between MSCs during relocation.

#### 7.6.2.20 Void

#### 7.6.2.21 Handover number

This parameter refers to the number used for routing a call between MSCs during handover.

#### 7.6.2.22 Forwarded-to number

This parameter refers to the address to which a call is to be forwarded. A subaddress may be appended. For subscribers having an originating CAMEL Phase 2 or higher subscription, this address need not be in E.164 international format.

#### 7.6.2.22A Long forwarded-to number

This parameter refers to the address to which a call is to be forwarded. A subaddress may be appended. For subscribers having an originating CAMEL Phase 2 or higher subscription this address need not be in international format.

#### 7.6.2.22B Long FTN Supported

This parameter indicates that the sending entity supports Long Forwarded-to Numbers.

#### 7.6.2.23 Forwarded-to subaddress

This parameter refers to the sub-address attached to the address to which a call is to be forwarded.

#### 7.6.2.24 Called number

This parameter refers to a called party number as defined in CCITT Recommendation Q.767.

#### 7.6.2.25 Calling number

This parameter refers to a calling party number as defined in CCITT Recommendation Q.767.

#### 7.6.2.26 Originally dialled number

This parameter refers to the number dialled by the calling party in order to reach a mobile subscriber.

#### 7.6.2.27 Service centre address

This parameter represents the address of a Short Message Service Centre.

#### 7.6.2.28 Zone Code

This parameter is used to define location areas into which the subscriber is allowed or not allowed to roam (regional subscription). With a complete list of Zone Codes the VLR or the SGSN is able to determine for all its location areas whether roaming is allowed or not.

#### 7.6.2.29 MSIsdn-Alert

This parameter refers to the MSISDN stored in a Message Waiting Data File in the HLR. It is used to alert the Service Centre when the MS is again attainable.

#### 7.6.2.30 Location Information

This parameter indicates the location of the served subscriber as defined in 3GPP TS 23.018 [97].

#### 7.6.2.30a Location Information for GPRS

This parameter indicates the location of the served subscriber as defined in 3GPP TS 23.078 [98].

#### 7.6.2.31 GMSC Address

This parameter refers to the E.164 address of a GMSC.

#### 7.6.2.32 VMSC Address

This parameter refers to the E.164 address of a VMSC.

#### 7.6.2.33 Group Id

This parameter is used to describe groups a subscriber can be a member of. A subscriber can partake in all group calls (VBS/VGCS) where he subscribed to the respective groups.

#### 7.6.2.34 North American Equal Access preferred Carrier Id

This parameter refers to the carrier identity preferred by the subscriber for calls requiring routing via an inter-exchange carrier. This identity is used at:

- outgoing calls: when the subscriber does not specify at call set-up a carrier identity;
- forwarded calls: when a call is forwarded by the subscriber;
- incoming calls: applicable to the roaming leg of the call.

#### 7.6.2.35 SIWFS Number

This parameter refers to the number used for routing a call between the MSC and the SIWFS (used by ISUP).

#### 7.6.2.36 B-subscriber address

This parameter refers to the address used by the SIWFS to route the outgoing call from the SIWFS to either the B-subscriber in case of the non-loop method or back to the VMSC in case of the loop method.

#### 7.6.2.37 Serving cell Id

This parameter indicates the cell currently being used by the served subscriber.

#### 7.6.2.38 SGSN number

This parameter refers to the ISDN number of a SGSN.

#### 7.6.2.39 SGSN address

This parameter refers to the IP-address of a SGSN. This parameter is defined in 3GPP TS 23.003 [17].

#### 7.6.2.40 GGSN address

This parameter refers to the IP-address of a GGSN. This parameter is defined in 3GPP TS 23.003 [17].

#### 7.6.2.41 GGSN number

This parameter refers to the ISDN number of a GGSN or the ISDN number of the protocol-converter if a protocol-converting GSN is used between the GGSN and the HLR.

#### 7.6.2.42 APN

This parameter refers to the DNS name of a GGSN. This parameter is defined in 3GPP TS 23.060 [104].

#### 7.6.2.43 Network Node number

This parameter refers either to the ISDN number of SGSN or to the ISDN number of MSC.

#### 7.6.2.44 PDP-Type

This parameter indicates which type of protocol is used by the MS as defined in 3GPP TS 23.060 [104].

#### 7.6.2.45 PDP-Address

This parameter indicates the address of the data protocol as defined in 3GPP TS 23.060 [104].

#### 7.6.2.46 Additional number

This parameter can refer either to the SGSN number or to the MSC number.

#### 7.6.2.47 P-TMSI

This parameter is the Packet Temporary Mobile Subscriber Identity defined in 3GPP TS 23.003 [17].

#### 7.6.2.48 B-subscriber number

This parameter refers to the number of the destination B dialled by the A user. This may include a subaddress.

#### 7.6.2.49 B-subscriber subaddress

This parameter refers to the sub-address attached to the destination B dialled by the A user.

#### 7.6.2.50 LMU Number

This parameter refers to a local number assigned to an LMU by an SMLC.

#### 7.6.2.51 MLC Number

This parameter refers to the ISDN (E.164) number of an MLC.

#### 7.6.2.52 Multicall Bearer Information

This parameter refers to the number of simultaneous bearers supported per user by the serving network.

#### 7.6.2.53 Multiple Bearer Requested

This parameter indicates whether multiple bearers are requested for a relocation.

#### 7.6.2.54 Multiple Bearer Not Supported

This parameter indicates whether multiple bearers are supported.

#### 7.6.2.55 PDP-Charging Characteristics

This parameter indicates the charging characteristics associated with a specific PDP context as defined in 3GPP TS 32.015.

#### 7.6.2.56 Selected RAB ID

The selected radio access bearer to be kept at subsequent inter-MSC handover from UMTS to GSM.

#### 7.6.2.57 RAB ID

This parameter indicates the radio access bearer identifier as defined in 3GPP TS 25.413. This parameter is used to relate the radio resources with the radio access bearers.

#### 7.6.2.58 gsmSCF Address

This parameter refers to the ISDN number assigned to the gsmSCF address. In an IP Multimedia Core Network, the gsmSCF-address shall contain the IM-SSF address when the IM-SSF takes the role of the gsmSCF.

### 7.6.3 Subscriber management parameters

#### 7.6.3.1 Category

This parameter refers to the calling party category as defined in CCITT Recommendation Q.767.

#### 7.6.3.2 Equipment status

This parameter refers to the status of the mobile equipment as defined in 3GPP TS 22.016 [7].

#### 7.6.3.3 Extensible Bearer service

This parameter may refer to a single bearer service, a set of bearer services or to all bearer services as defined in 3GPP TS 22.002 [3]. This parameter is used only for subscriber profile management. Extensible Bearer service values include all values defined for a Bearer service parameter (7.6.4.38).

#### 7.6.3.4 Extensible Teleservice

This parameter may refer to a single teleservice, a set of teleservices or to all teleservices as defined in 3GPP TS 22.003 [4]. This parameter is used only for subscriber profile management. Extensible Teleservice values include all values defined for a Teleservice parameter (7.6.4.39).

### 7.6.3.5 Extensible Basic Service Group

This parameter refers to the Basic Service Group either as an extensible bearer service (see clause 7.6.3.3) or an extensible teleservice (see clause 7.6.3.4). This parameter is used only for subscriber profile management. The null value (i.e. neither extensible bearer service nor extensible teleservice) is used to denote the group containing all extensible bearer services and all extensible teleservices.

### 7.6.3.6 GSM bearer capability

This parameter refers to the GSM bearer capability information element defined in 3GPP TS 24.008 [35].

### 7.6.3.7 Subscriber Status

This parameter refers to the barring status of the subscriber:

- service granted;
- Operator Determined Barring.

### 7.6.3.8 CUG Outgoing Access indicator

This parameter represents the Outgoing Access as defined in ETS 300 136.

### 7.6.3.9 Operator Determined Barring General Data

This parameter refers to the set of subscriber features that the network operator or the service provider can regulate. This set only includes those limitations that can be

- a) controlled in the VLR,
- b) controlled in the SGSN,
- c) controlled in the SGSN applied for short message transfer only,
- d) interrogated or modified by the gsmSCF:

ODB category	Controlled in the VLR	Controlled in the SGSN	Controlled in the SGSN applied for short message transfer only	Interrogatable and modifiable by the gsmSCF
All outgoing calls barred	X		X	X
International outgoing calls barred	X		X	X
International outgoing calls except those to the home PLMN country barred	X		X	X
Interzonal outgoing calls barred	X		X	X
Interzonal outgoing calls except those to the home PLMN country	X		X	X

barred				
Interzonal outgoing calls AND international outgoing calls except those directed to the home PLMN country barred	X		X	X
Premium rate (information) outgoing calls barred	X			X
Premium rate (entertainment) outgoing calls barred	X			X
Supplementary service access barred	X			X
Invocation of call transfer barred	X			X
Invocation of chargeable call transfer barred	X			X
Invocation of internationally chargeable call transfer barred	X			X
Invocation of interzonally chargeable call transfer barred	X			X
Invocation of call transfer where both legs are chargeable barred	X			X
Invocation of call transfer if there is already an ongoing transferred call for the served subscriber in the serving MSC/VLR barred	X			X
All packet Oriented Services barred		X		X
Roamer Access to HPLMN-AP barred		X		X
Roamer Access to VPLMN-AP barred		X		X
Outgoing calls when roaming outside the home PLMN country				X
All incoming calls				X
Incoming calls when				X

roaming outside the home PLMN country				
Incoming calls when roaming outside the zone of the home PLMN country				X
Roaming outside the home PLMN				X
Roaming outside the home PLMN country				X
Registration of any call forwarded-to number				X
Registration of any international call forwarded-to number				X
Registration of any international call forwarded-to number except to a number within the HPLMN country				X
Registration of any inter-zone call forwarded-to number				X
Registration of any inter-zone call forwarded-to number except to a number within the HPLMN country				X

#### 7.6.3.10 ODB HPLMN Specific Data

This parameter refers to the set of subscriber features that the network operator or the service provider can regulate only when the subscriber is registered in the HPLMN. This set only includes those limitations that can be controlled in the VLR or in the SGSN:

- Operator Determined Barring Type 1;
- Operator Determined Barring Type 2;
- Operator Determined Barring Type 3;
- Operator Determined Barring Type 4.

#### 7.6.3.11 Regional Subscription Data

This parameter defines the regional subscription area in which the subscriber is allowed to roam. It consists of a list of Zone Codes (see clause 7.6.2.28).

#### 7.6.3.12 Regional Subscription Response

This parameter indicates either that the regional subscription data cannot be handled or that the current MSC or SGSN area is entirely restricted because of regional subscription.

### 7.6.3.13 Roaming Restriction Due To Unsupported Feature

This parameter defines that a subscriber is not allowed to roam in the current MSC area. It may be used by the HLR if a feature or service is indicated as unsupported by the VLR.

### 7.6.3.14 Extensible SS-Info

This parameter refers to all the information related to a supplementary service and is a choice between:

- extensible forwarding information (see clause 7.6.3.15);
- extensible call barring information (see clause 7.6.3.20);
- CUG info (see clause 7.6.3.22);
- extensible SS-Data (see clause 7.6.3.29).

### 7.6.3.15 Extensible forwarding information

This parameter represents the information related to each call forwarding service:

- the SS-Code of the relevant call forwarding service (see clause 7.6.4.1);
- if required, a list of extensible forwarding feature parameters (see clause 7.6.3.16).

The list may contain one item per Basic Service Group.

### 7.6.3.16 Extensible forwarding feature

This parameter applies to each combination of call forwarding service and Basic Service Group and contains the following information, as required:

- extensible Basic Service Group (see clause 7.6.3.5);
- extensible SS-Status (see clause 7.6.3.17);
- forwarded-to number (see clause 7.6.2.22);
- forwarded-to subaddress (see clause 7.6.2.23);
- extensible forwarding options (see clause 7.6.3.18);
- extensible no reply condition timer (see clause 7.6.4.19);
- long forwarded-to number (see clause 7.6.2.22A).

If a number is required to define the forwarded-to destination then:

- If the VLR supports Long Forwarded-to Numbers then the long forwarded-to number shall be present and the forwarded-to number shall be absent;
- If the VLR does not support Long Forwarded-to Numbers then the forwarded-to number shall be present and the long forwarded-to number shall be absent.

### 7.6.3.17 Extensible SS-Status

This parameter refers to the state information of individual supplementary services as defined in 3GPP TS 23.011 [22].

### 7.6.3.18 Extensible Forwarding Options

This parameter refers to a set of forwarding options attached to a supplementary service. It contains the following information:

- notification to forwarding party (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- redirection notification to the forwarded-to party (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- notification to calling party (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- redirecting presentation (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- forwarding reason (see 3GPP TS 22.082 [10] for the meaning of this parameter).

#### 7.6.3.19 Extensible No reply condition timer

This parameter refers to the extensible no reply condition timer for call forwarding on no reply.

#### 7.6.3.20 Extensible Call barring information

This parameter contains for each call barring service:

- SS-Code (see clause 7.6.4.1);
- a list of extensible call barring feature parameters (see clause 7.6.3.21).

The list may contain one item per Basic Service Group.

#### 7.6.3.21 Extensible Call barring feature

This parameter gives the status of call barring services as applicable to each Basic Service Group. The parameter contains the following information:

- Extensible Basic Service Group (see clause 7.6.3.5);
- provisioned SS-Status (see clause 7.6.3.17).

#### 7.6.3.22 CUG info

This parameter refers to the overall information required for operation for each CUG:

- CUG subscriptionList;
- CUG featureList.

#### 7.6.3.23 CUG subscription

This parameter refers to the set of basic information for each CUG defined in that subscription. The following information is stored:

- CUG index;
- CUG interlock;
- Intra CUG restrictions;
- Basic Service Group List.

#### 7.6.3.24 CUG interlock

This parameter represents the CUG interlock code defined in ETS 300 138.

#### 7.6.3.25 CUG index

This parameter represents the CUG index defined in ETS 300 138.

#### 7.6.3.26 CUG feature

This parameter contains two parameters that are associated with the Basic Service Group. If the Basic Service Group Code is not present the feature applies to all Basic Services. The following parameters are included:

- Preferential CUG indicator:
  - indicates which CUG index is to be used at outgoing call set-up using the associated Basic Service Group;
- Inter CUG Option:
  - describes whether it for the associated Basic Service Group is allowed to make calls outside the CUG and whether incoming calls are allowed;
- Basic Service Group.

See 3GPP TS 22.085 [13] for meaning of this parameter.

#### 7.6.3.27 Inter CUG options

This parameter indicates the subscribers' ability to make and receive calls outside a specific closed user group. It takes any of the following values:

- CUG only facility (only calls within CUG are allowed);
- CUG with outgoing access (calls outside CUG allowed);
- CUG with incoming access (calls from outside CUG into CUG allowed);
- CUG with both incoming and outgoing access (all calls allowed).

#### 7.6.3.28 Intra CUG restrictions

This parameter describes whether or not the subscriber is allowed to originate calls to or to receive calls from within the CUG. It can take any of the following values:

- no CUG restrictions;
- CUG incoming calls barred;
- CUG outgoing calls barred.

#### 7.6.3.29 Extensible SS-Data

This parameter refers to the necessary set of information required in order to characterise one supplementary service:

- SS-Code (see clause 7.6.4.1);
- Extensible SS-Status (if applicable) (see clause 7.6.3.17);
- Extensible Override subscription option (if applicable) (see clause 7.6.3.30);
- Extensible CLI Restriction (if applicable) (see clause 7.6.3.31);
- Extensible Basic Service Group Code (see clause 7.6.3.5).

#### 7.6.3.30 Subscriber State

This parameter indicates the state of the MS as defined in 3GPP TS 23.018 [97].

#### 7.6.3.31 Requested Info

This parameter indicates the subscriber information being requested as defined in 3GPP TS 23.018 [97] and 3GPP TS 23.078 [98].

#### 7.6.3.31A Requested Domain

This parameter indicates the domain (circuit switched, i.e. from the MSC/VLR, or packet switched, i.e. from the SGSN) from which the requested information should be retrieved.

#### 7.6.3.32 Suppression of Announcement

This parameter indicates if the announcement or tones shall be suppressed as defined in 3GPP TS 23.078 [98].

#### 7.6.3.33 Suppress T-CSI

This parameter is used to suppress the invocation of terminating CAMEL services.

#### 7.6.3.34 GMSC CAMEL Subscription Info

This parameter contains CAMEL subscription information, i.e. O-CSI and/or D-CSI and/or T-CSI, which indicates to the GMSC that originating and/or terminating CAMEL services shall be invoked for the incoming call.

#### 7.6.3.35 VLR CAMEL Subscription Info

This parameter identifies the subscriber as having CAMEL services that are invoked in the MSC or VLR.

#### 7.6.3.36 Supported CAMEL Phases in the VLR

This parameter indicates which phases of CAMEL are supported in the VLR.

#### 7.6.3.36A Supported CAMEL Phases in the SGSN

This parameter indicates which phases of CAMEL are supported in the SGSN.

#### 7.6.3.36B Offered CAMEL4 CSIs in the VLR

This parameter indicates which CSIs of CAMEL phase 4 are offered in the VLR as defined in 3GPP TS 23.078.

#### 7.6.3.36C Offered CAMEL4 CSIs in the SGSN

This parameter indicates which CSIs of CAMEL phase 4 are offered in the SGSN as defined in 3GPP TS 23.078.

#### 7.6.3.36D Offered CAMEL4 CSIs

This parameter indicates which CSIs of CAMEL phase 4 are offered as defined in 3GPP TS 23.078.

#### 7.6.3.36E Offered CAMEL4 CSIs in GMSC

This parameter indicates which CSIs of CAMEL phase 4 are offered in the GMSC as defined in 3GPP TS 23.078.

#### 7.6.3.36F Offered CAMEL4 CSIs in VMSC

This parameter indicates which CSIs of CAMEL phase 4 are offered in the VMSC as defined in 3GPP TS 23.078.

#### 7.6.3.36G Offered CAMEL4 Functionalities

This parameter indicates which functionalities of CAMEL phase 4 are offered as defined in 3GPP TS 23.078.

#### 7.6.3.37 CUG Subscription Flag

This parameter indicates that a subscriber with a T-CSI also has a CUG subscription. It is defined in 3GPP TS 23.078.

#### 7.6.3.38 CAMEL Subscription Info Withdraw

This parameter indicates that CAMEL Subscription Info shall be deleted from the VLR or SGSN.

#### 7.6.3.39 Voice Group Call Service (VGCS) Data

This parameter refers to one or more groups a subscriber may be a member of for voice group calls.

#### 7.6.3.40 Voice Broadcast Service (VBS) Data

This parameter refers to one or more groups a subscriber may be a member of for the voice broadcast service. Per group it is further indicated whether the subscriber is only allowed to listen to respective group calls or whether he is in addition entitled to initiate respective voice broadcast calls.

#### 7.6.3.41 ISDN bearer capability

This parameter refers to the ISDN bearer capability information element defined in 3GPP TS 29.007 [56].

#### 7.6.3.42 Lower layer Compatibility

This parameter refers to the lower layer compatibility information element defined in 3GPP TS 24.008 [35].

#### 7.6.3.43 High Layer Compatibility

This parameter refers to the high layer compatibility information element defined in 3GPP TS 24.008 [35].

#### 7.6.3.44 Alerting Pattern

This parameter is an indication that can be used by the MS to alert the user in a specific manner in case of mobile terminating traffic (switched call or USSD). That indication can be an alerting level or an alerting category.

#### 7.6.3.45 GPRS Subscription Data Withdraw

This parameter indicates that GPRS Subscription Data shall be deleted from the SGSN.

#### 7.6.3.46 GPRS Subscription Data

This parameter refers to the list of PDP-Contexts that subscriber has subscribed to.

#### 7.6.3.47 QoS-Subscribed

This parameter indicates the quality of service subscribed for a certain service. It is defined in 3GPP TS 23.060 [104].

#### 7.6.3.48 VPLMN address allowed

This parameter specifies whether the MS is allowed to use a dynamic address allocated in the VPLMN. It is defined in 3GPP TS 23.060 [104].

### 7.6.3.49 Roaming Restricted In SGSN Due To Unsupported Feature

This parameter defines that a subscriber is not allowed to roam in the current SGSN area. It may be used by the HLR if a feature or service is indicated as unsupported by the SGSN.

### 7.6.3.50 Network Access Mode

This parameter is defined in 3GPP TS 23.108.

### 7.6.3.51 Mobile Not Reachable Reason

This parameter stores the reason for the MS being absent when an attempt to deliver a short message to an MS fails at the MSC, SGSN or both. It is defined in 3GPP TS 23.140.

### 7.6.3.52 Cancellation Type

This parameter indicates the reason of location cancellation. It is defined in 3GPP TS 23.060 [104].

### 7.6.3.53 All GPRS Data

This parameter indicates to the SGSN that all GPRS Subscription Data shall be deleted for the subscriber.

### 7.6.3.54 Complete Data List Included

This parameter indicates to the SGSN that the complete GPRS Subscription Data stored for the Subscriber shall be replaced with the GPRS Subscription Data received.

### 7.6.3.55 PDP Context Identifier

This parameter is used to identify a PDP context for the subscriber.

### 7.6.3.56 LSA Information

This parameter refers to one or more localised service areas a subscriber may be a member of, together with the priority, the preferential access indicator, the active mode support indicator and active mode indication of each localised service area. The access right outside these localised service areas is also indicated.

### 7.6.3.57 SoLSA support indicator

This parameter indicates that the VLR or the SGSN supports SoLSA subscription.

### 7.6.3.58 LSA Information Withdraw

This parameter indicates that LSA information shall be deleted from the VLR or the SGSN.

### 7.6.3.59 LMU Indicator

This parameter indicates the presence of an LMU.

### 7.6.3.60 LCS Information

This parameter defines the LCS related information for an MS subscriber and contains the following components:

- GMLC List (see clause 7.6.3.61).
- LCS Privacy Exception List (see clause 7.6.3.62).
- MO-LR List (see clause 7.6.3.65A).

- Additional LCS Privacy Exception List (see clause 7.6.3.62A).

### 7.6.3.61 GMLC List

This parameter contains the addresses of all GMLCs that are permitted to issue a call/session unrelated or call/session related MT-LR location request for this MS. Usage of this parameter is defined in 3GPP TS 23.271.

### 7.6.3.62 LCS Privacy Exception List

This parameter defines the classes of LCS Client that are allowed to locate any target MS. For each class, the following information is provided:

- SS-Code (see clause 7.6.4.1);
- a list of LCS privacy exception parameters (see clause 7.6.3.63).

### 7.6.3.62A Additional LCS Privacy Exception List

This parameter defines the classes of LCS Client that are allowed to locate any target MS. For each class, the following information is provided:

- SS-Code (see clause 7.6.4.1);
- a list of LCS privacy exception parameters (see clause 7.6.3.63).

The Additional LCS Privacy Exception List shall be present only if the LCS Privacy Exception List is present and contains LCS privacy exception parameters for 4 privacy exception classes.

### 7.6.3.63 LCS Privacy Exception Parameters

This parameter gives the status of each LCS privacy exception class and any additional parameters relevant to this class. The parameter contains the following information:

- provisioned SS-Status (see clause 7.6.3.17);
- privacy notification to MS user (see clause 7.6.3.65B);
- external client List (see clause 7.6.3.64);
- internal client List (see clause 7.6.3.65).
- service type List (see clause 7.6.3.65D);

### 7.6.3.64 External Client List

This parameter is only applicable to the call/session unrelated privacy class and call/session related privacy class, and gives the identities of the external clients that are allowed to locate a target MS for a MT-LR. Each identity is an international (e.g.E.164) address. For each identified external client, GMLC restrictions may be defined. It may also be indicated if the MS shall be notified of a non-restricted MT-LR from each identified LCS client and, if so, whether notification only or notification with privacy verification shall apply. Usage of this parameter is defined in 3GPP TS 23.271.

### 7.6.3.65 Internal Client List

This parameter is only applicable to the PLMN operator privacy class and gives the identities of the internal PLMN operator clients that are allowed to locate a target MS for an NI-LR or MT-LR. Usage of this parameter is defined in 3GPP TS 23.271.

### 7.6.3.65A MO-LR List

This parameter defines the classes of MO-LR for which a subscription exists for a particular MS. For each class, the following information is provided:

- SS-Code (see clause 7.6.4.1).

### 7.6.3.65B Privacy Notification to MS User

This parameter is applicable to the call/session unrelated privacy class and call/session related privacy class. For non-call/call related privacy class it indicates whether the MS user shall be notified for that class MT-LR from any value added LCS client when the MT-LR is restricted and be enabled to accept or override the restriction. Usage of this parameter is defined in 3GPP TS 23.271.

### 7.6.3.65C GMLC List Withdraw

This parameter indicates whether the subscriber's LCS GMLC list shall be deleted from the VLR or SGSN.

### 7.6.3.65D Service Type List

This parameter is only applicable to the Service type privacy class and gives the identities of the service type of the clients that are allowed to locate a target MS for an MT-LR. Usage of this parameter is defined in 3GPP TS 23.271.

### 7.6.3.66 IST Alert Timer

This parameter indicates the IST Alert Timer value that must be used in the MSC to inform the HLR about the call activities that the subscriber performs. Units are minutes.

### 7.6.3.67 Call Termination Indicator

This parameter indicates whether the MSC shall terminate a specific ongoing call, or all the call activities related to a specified subscriber.

### 7.6.3.68 IST Information Withdraw

This parameter indicates that IST information shall be deleted from the VMSC.

### 7.6.3.69 IST Support Indicator

This parameter indicates the degree of IST functionality supported by the MSC (Visited MSC or Gateway MSC). It can take one of the following values:

- Basic IST functionality;
- IST command service (in addition to the basic IST functionality and including the ability to terminate all calls being carried for the identified subscriber).

### 7.6.3.70 Super-Charger Supported In HLR

This parameter is used by the HLR to indicate support of the Super-Charger functionality and an indication of the age of the subscription data stored in the HLR.

### 7.6.3.71 Super-Charger Supported In Serving Network Entity

This parameter is used to indicate support of the Super-Charger functionality by the originating entity and to indicate either that subscription data is required or the date and time of the last known subscriber data modification.

### 7.6.3.72 Age Indicator

This parameter is used by the HLR to determine the validity of the subscription data retained by the serving network entity in a Super-Charged network.

#### 7.6.3.73 GPRS enhancements support indicator

This parameter indicates to the HLR that the SGSN supports GPRS enhancements.

#### 7.6.3.74 Extensible QoS-Subscribed

This parameter indicates the enhanced QoS subscribed for a certain service. It is defined in 3GPP TS 23.060. This parameter is an extension to QoS-Subscribed.

#### 7.6.3.75 SGSN CAMEL Subscription Info

This parameter identifies the subscriber as having CAMEL services that are invoked in the SGSN.

#### 7.6.3.76 MO-SMS-CSI

This parameter identifies the subscriber as having mobile originating SMS CAMEL services as defined in 3GPP TS 23.078. For the CAMEL phase 3 the MO-SMS-CSI is the same as the SMS-CSI.

#### 7.6.3.76a MT-SMS-CSI

This parameter identifies the subscriber as having mobile terminating SMS CAMEL services as defined in 3GPP TS 23.078.

#### 7.6.3.77 GPRS-CSI

This parameter identifies the subscriber as having GPRS CAMEL services as defined in 3GPP TS 23.078.

#### 7.6.3.78 CAMEL subscription info

This parameter indicates the CSI that can be controlled by CSE.

#### 7.6.3.79 Extensible Call barring information for CSE

This parameter contains for each call barring service for CSE:

- SS-Code;
- a list of extensible call barring feature parameters.

The list may contain one item per Basic Service Group.

- password;
- wrong password attempt counter;
- notification-to-CSE flag.

#### 7.6.3.80 Extensible Forwarding information for CSE

This parameter represents the information for CSE related to each call forwarding service:

- the SS-Code of the relevant call forwarding service;
- if required, a list of extensible forwarding feature parameters;
- the list may contain one item per Basic Service Group;
- notification-to-CSE flag.

### 7.6.3.81 Modification Request for CSI

This parameter indicates the CAMEL subscription information to be modified by CSE.

### 7.6.3.81a Modification Request for ODB data

This parameter indicates the operator determined barring data to be modified by CSE.

### 7.6.3.82 Modification Request for SS Information

This parameter indicates the call forwarding and call barring supplementary service data to be modified by CSE.

### 7.6.3.83 Call Barring Data

This parameter contains the extensible call barring feature list (see clause 7.6.3.21) and Notification to CSE flag.

### 7.6.3.84 Call Forwarding Data

This parameter contains the extensible call forwarding feature list (see clause 7.6.3.16) and Notification to CSE flag.

### 7.6.3.85 ODB Data

This parameter contains the ODB general data, ODB HPLMN specific data.

### 7.6.3.86 Requested Subscription Info

This parameter indicates the subscription information being requested.

### 7.6.3.87 CS Allocation/Retention priority

This parameter indicates the allocation/retention priority for Circuit Switched (CS). It corresponds to the allocation/retention priority that is defined in 3GPP TS 23.107.

### 7.6.3.88 ODB Info

This parameter contains the ODB data and Notification to CSE flag.

### 7.6.3.89 Suppress VT-CSI

This parameter is used to suppress the invocation of terminating CAMEL services at the VMSC.

### 7.6.3.90 Suppress Incoming Call Barring

This parameter is used to suppress the invocation of Incoming Call Barrings.

### 7.6.3.91 gsmSCF Initiated Call

This parameter is used to indicate that the call was initiated by the gsmSCF.

## 7.6.4 Supplementary services parameters

### 7.6.4.1 SS-Code

This parameter may refer to one supplementary service or a set of supplementary services as defined in 3GPP TS 22.004. For MAP this includes:

- Calling Line Identification Presentation service (CLIP);
- Calling Line Identification Restriction service (CLIR);
- Connected Line Identification Presentation service (COLP);
- Connected Line Identification Restriction service (COLR);
- Calling Name Presentation (CNAP);
- All Call Forwarding services, including Call Deflection;
- Call Waiting (CW);
- Call Hold (HOLD);
- Multi-Party service (MPTY);
- Closed User Group (CUG);
- All Charging services;
- All Call Restriction services;
- Explicit Call Transfer service (ECT);
- enhanced Multi-Level Precedence and Pre-emption service (eMLPP);
- Completion of Calls to Busy Subscriber, originating side (CCBS-A);
- Completion of Calls to Busy Subscriber, destination side (CCBS-B);
- All LCS privacy exceptions (see clause 7.6.4.44);
- Mobile Originating Location Request (MO-LR) (see clause 7.6.4.45);
- Multicall (MC).

#### 7.6.4.2 SS-Status

This parameter refers to the state information of individual supplementary services as defined in 3GPP TS 23.011.

#### 7.6.4.3 SS-Data

This parameter refers to the necessary set of information required in order to characterise one supplementary service:

- SS-Code (see clause 7.6.4.1);
- SS-Status (if applicable) (see clause 7.6.4.2);
- Override subscription option (see clause 7.6.4.4);
- CLI Restriction (see clause 7.6.4.5);
- Basic Service Group Code (see clause 7.6.4.40).

#### 7.6.4.4 Override Category

This parameter refers to the subscription option Override Category attached to a supplementary service. It can take the following two values:

- Enabled;
- Disabled.

#### 7.6.4.5 CLI Restriction Option

This parameter refers to the subscription option Restriction mode attached to the CLIR supplementary service. It can take the following three values:

- Permanent;
- Temporary (Default Restricted);
- Temporary (Default Allowed).

#### 7.6.4.6 Forwarding Options

This parameter refers to a forwarding option attached to a supplementary service. It can take one of the following values:

- notification to forwarding party (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- notification to calling party (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- redirecting presentation (see 3GPP TS 22.082 [10] for the meaning of this parameter);
- Forwarding reason (see 3GPP TS 22.082 [10] for the meaning of this parameter).

#### 7.6.4.7 No reply condition timer

This parameter refers to the no reply condition timer for call forwarding on no reply.

#### 7.6.4.8 - 7.6.4.14 Void

#### 7.6.4.15 Forwarding information

This parameter represents the information related to each call forwarding service:

- the SS-Code of the relevant call forwarding service (see clause 7.6.4.1);
- if required, a list of forwarding feature parameters (see clause 7.6.4.16).  
the list may contain one item per Basic Service Group.

#### 7.6.4.16 Forwarding feature

This parameter applies to each combination of call forwarding service and Basic Service Group and contains the following information, as required:

- Basic Service Group (see clause 7.6.4.40);
- SS-Status (see clause 7.6.4.2);
- forwarded-to number (see clause 7.6.2.22);
- forwarded-to subaddress (see clause 7.6.2.23);
- forwarding options (see clause 7.6.4.6);
- no reply condition timer (see clause 7.6.4.7);
- long forwarded-to number (see clause 7.6.2.22A).

If a number is required to define the forwarded-to destination then:

- If the VLR supports Long Forwarded-to Numbers then the long forwarded-to number shall be present and the forwarded-to number shall be absent.
- If the VLR does not support Long Forwarded-to Numbers then the forwarded-to number shall be present and the long forwarded-to number shall be absent.

7.6.4.17 Void

#### 7.6.4.18 Call barring information

This parameter contains for each call barring service:

- SS-Code (see clause 7.6.4.1);
  - a list of call barring feature parameters (see clause 7.6.4.19).

The list may contain one item per Basic Service Group.

#### 7.6.4.19 Call barring feature

This parameter gives the status of call barring services as applicable to each Basic Service Group. The parameter contains the following information:

- Basic Service Group (see clause 7.6.4.40);
  - SS-Status (see clause 7.6.4.2).

#### 7.6.4.20 New password

This parameter refers to the password which the subscriber just registered in the network.

This parameter refers to a password used by the subscriber for supplementary service control.

#### 7.6.4.21 Current password

This parameter refers to a password used by the subscriber for supplementary service control.

#### 7.6.4.22 Guidance information

This parameter refers to guidance information given to a subscriber who is requested to provide a password. One of the following information may be given:

- "enter password";  
this information is used for checking of the old password;
  - "enter new password";  
this information is used during password registration for the request of the first new password;
  - "enter new password again";  
this information is used during password registration for the request of the new password again for verification.

7.6.4.23 Void

7.6.4.24 SS-Info

This parameter refers to all the information related to a supplementary service and is a choice between:

- forwarding information (see clause 7.6.4.15);
  - call barring information (see clause 7.6.4.18);
  - CUG info (see clause 7.6.4.8);
  - SS-Data (see clause 7.6.4.3);
  - eMLPP information (see clause 7.6.4.41).

#### 7.6.4.25 - 7.6.4.35 Void

#### 7.6.4.36 USSD Data Coding Scheme

This parameter contains the information of the alphabet and the language used for the unstructured information in an Unstructured Supplementary Service Data operation. The coding of this parameter is according to the Cell Broadcast Data Coding Scheme as specified in 3GPP TS 23.038 [25].

#### 7.6.4.37 USSD String

This parameter contains a string of unstructured information in an Unstructured Supplementary Service Data operation. The string is sent either by the mobile user or the network. The contents of a string sent by the MS are interpreted by the network as specified in 3GPP TS 22.090 [16].

#### 7.6.4.38 Bearer service

This parameter may refer to a single bearer service, a set of bearer services or to all bearer services as defined in 3GPP TS 22.002 [3]. This parameter is used only for supplementary service management.

#### 7.6.4.39 Teleservice

This parameter may refer to a single teleservice, a set of teleservices or to all teleservices as defined in 3GPP TS 22.003 [4]. This parameter is used only for supplementary service management.

#### 7.6.4.40 Basic Service Group

This parameter refers to the Basic Service Group either as a bearer service (see clause 7.6.4.38) or a teleservice (see clause 7.6.4.39). This parameter is used only for supplementary service management. The null value (i.e. neither bearer service nor teleservice) is used to denote the group containing all bearer services and all teleservices.

#### 7.6.4.41 eMLPP information

This parameter contains two parameters which are associated with the eMLPP service. The following two parameters are included:

- maximum entitled priority:
  - indicates the highest priority level the subscriber is allowed to apply for an outgoing call set-up;
- default priority:
  - defines the priority level which shall be assigned to a call if no explicit priority is indicated during call set-up.

#### 7.6.4.42 SS-event

This parameter indicates the Supplementary Service for which an invocation notification is sent towards the gsmSCF. It can indicate one of the following services:

- Explicit Call Transfer (ECT)
- Call Deflection (CD)
- Multi-Party call (MPTY)
- Completion of Calls to Busy Subscriber (CCBS)

#### 7.6.4.43 SS-event data

This parameter contains additional information related to Supplementary Service invocation. Depending on the service invoked it can contain the following information:

ECT A list with all Called Party Numbers involved.

CD The called Party number involved.

#### 7.6.4.44 LCS Privacy Exceptions

Distinct SS codes are assigned to the following classes of LCS client in a target MS subscriber's privacy exception list.

- Universal Class;
- Call/session related value added class;
- Call/session unrelated value added class;
- PLMN operator class.
- Service type class.

#### 7.6.4.45 Mobile Originating Location Request (MO-LR)

Distinct SS codes are assigned to the following classes of MO-LR:

- Basic Self Location;
- Autonomous Self Location;
- Transfer to Third Party.

#### 7.6.4.46 NbrUser

This parameter indicates the maximum number of parallel bearers that may be used as defined by the user at registration of the MC SS.

#### 7.6.4.47 MC Subscription Data

This parameter contains two parameters which are associated with the MC service. The following two parameters are included:

- NbrUser:  
indicates the maximum number of parallel bearers that may be used as defined by the user at registration of the MC SS
- NbrSB:  
indicates the maximum number of parallel bearers that may be used as defined by the user's subscription.

#### 7.6.4.48 MC Information

This parameter contains three parameters which are associated with the MC service. The following parameters are included:

- NbrSB;
- NbrUser;
- NbrSN.

Definitions of these parameters are provided in 3GPP TS 23.135.

#### 7.6.4.49 CCBS Request State

This parameter indicates the current state of the CCBS request. It can take one of seven values:

- request;
- recall;
- active;
- completed;
- suspended;
- frozen;
- deleted.

## 7.6.5 Call parameters

### 7.6.5.1 Call reference number

This parameter refers to a call reference number allocated by a call control MSC.

### 7.6.5.2 Interrogation type

This parameter refers to the type of interrogation for routing information which is sent from a GMSC to an HLR. It can take either of two values:

- basic call (for information to route a call before the call has been extended to the VMSC of the called party);
- forwarding (for information to route the call to the forwarded-to destination after the VMSC of the forwarding party has requested the GMSC to resume handling of the call).

### 7.6.5.3 OR interrogation

This parameter indicates that the GMSC which interrogated the HLR for routeing information is not in the same PLMN as the HLR, and therefore that the call will potentially be optimally routed.

### 7.6.5.4 OR capability

This parameter indicates the phase of OR which the GMSC supports.

### 7.6.5.5 Forwarding reason

This parameter indicates the reason for which the call is to be forwarded. It can take one of three values:

- busy subscriber;
- mobile subscriber not reachable;
- no subscriber reply.

### 7.6.5.6 Forwarding interrogation required

This parameter indicates that if the VMSC of the forwarding subscriber requests the GMSC to resume handling of the call the GMSC shall interrogate the HLR for forwarding information.

### 7.6.5.7 O-CSI

This parameter identifies the subscriber as having originating CAMEL services as defined in 3GPP TS 23.078.

### 7.6.5.7A D-CSI

This parameter identifies the subscriber as having originating CAMEL dialled services as defined in 3GPP TS 23.078.

#### 7.6.5.7B T-CSI

This parameter identifies the subscriber as having terminating CAMEL services in the GMSC, as defined in 3GPP TS 23.078.

#### 7.6.5.7C VT-CSI

This parameter identifies the subscriber as having terminating CAMEL services in the VMSC, as defined in 3GPP TS 23.078.

#### 7.6.5.7D O-IM-CSI

This parameter identifies the subscriber as having originating IP Multimedia Core Network CAMEL services as defined in 3GPP TS 23.278.

#### 7.6.5.7E D-IM-CSI

This parameter identifies the subscriber as having originating IP Multimedia Core Network CAMEL dialled services as defined in 3GPP TS 23.278.

#### 7.6.5.7F VT-IM-CSI

This parameter identifies the subscriber as having terminating IP Multimedia Core Network CAMEL services as defined in 3GPP TS 23.278.

#### 7.6.5.8 Call Direction

This parameter is used to indicate the direction of the call.

#### 7.6.5.9 Channel Type

This parameter is the result of a Channel Mode Modification for TS 61/62. It contains the changed Air Interface User Rate. The information is sent from the SIWFS to the MSC to assign the correct radio resource. This parameter is defined in 3GPP TS 48.008 [49].

#### 7.6.5.10 Chosen Channel

This parameter is sent from the MSC to the SIWFS to adjust the interworking unit to the assigned radio resources. This parameter is defined in 3GPP TS 48.008 [49].

#### 7.6.5.11 CCBS Feature

This parameter corresponds to the 'CCBS Description' parameter in 3GPP TS 23.093. It refers to the necessary set of information required in order to characterise a certain CCBS request. The parameter may contain the following information:

- CCBS Index (see 3GPP TS 23.093 for the use of this parameter);
- B-subscriber number (see clause 7.6.2.48);
- B-subscriber subaddress (see clause 7.6.2.49);
- Basic Service Group Code (see clause 7.6.4.40).

#### 7.6.5.12 UU Data

This parameter includes User-To-User Data. It is defined in 3GPP TS 23.087.

### 7.6.5.13 UUS CF Interaction

This parameter indicates if the call forwarding or call deflection has been activated after UUS1 request has been accepted . It is defined in 3GPP TS 23.087.

### 7.6.5.14 Number Portability Status

This parameter indicates the number portability status of subscriber. See 3GPP TS 23.066 [108].

### 7.6.5.15 Pre-paging supported

This parameter indicates that the entity which sent it supports pre-paging.

## 7.6.6 Radio parameters

### 7.6.6.1 - 7.6.6.3 Void

### 7.6.6.4 GERAN Classmark

This information element is sent from one MSC to the other MSC in the signalling for inter MSC handover. It is used to convey information related to cell capabilities, as defined in 3GPP TS 48.008.

### 7.6.6.5 BSSMAP Service Handover

This parameter refers to the Service Handover information element defined in 3GPP TS 48.008

### 7.6.6.5A BSSMAP Service Handover List

This parameter refers to the list of Service Handover information elements defined in 3GPP TS 48.008. This parameter shall be used when there are multiple bearers and at least one of the bearers has an associated BSSMAP Service Handover parameter.

### 7.6.6.6 RANAP Service Handover

This parameter refers to the Service Handover information element defined in 3GPP TS 25.413.

### 7.6.6.7 HO-Number Not Required

This parameter indicates that no handover or relocation number allocation is necessary.

### 7.6.6.8 Integrity Protection Information

This parameter refers to the Integrity Protection Information element defined in 3GPP TS 25.413.

### 7.6.6.9 Encryption Information

This parameter refers to the Encryption Information element defined in 3GPP TS 25.413.

### 7.6.6.10 Radio Resource Information

This parameter refers to the Channel Type information element defined in 3GPP TS 48.008 [49].

### 7.6.6.10A Radio Resource List

This parameter refers to list of RAB-id's and their associated Channel Type information elements defined in 3GPP TS 48.008. This parameter shall be used when there are multiple bearers and at least one of the bearers has an associated Radio Resource Information parameter.

### 7.6.6.10B Chosen Radio Resource Information

This parameter refers to the Chosen Channel and Speech Version information elements defined in 3GPP TS 48.008.

### 7.6.6.11 Key Status

This parameter refers to the Key Status element defined in 3GPP TS 25.413.

### 7.6.6.12 Selected UMTS Algorithms

This parameters identifies the UMTS integrity and optionally encryption algorithms selected by MSC-B. Coding of this parameter is defined in 3GPP TS 25.413.

### 7.6.6.13 Allowed GSM Algorithms

This parameters identifies the allowed GSM algorithms in MSC-B. Coding of this parameter is defined in 3GPP TS 48.008.

### 7.6.6.14 Allowed UMTS Algorithms

This parameters identifies the allowed UMTS algorithms in MSC-B. Coding of this parameter is defined in 3GPP TS 25.413.

### 7.6.6.15 Selected GSM Algorithm

This parameter identifies the GSM algorithm selected by GSM BSC controlled by MSC-B. Coding of this parameter is defined in 3GPP TS 48.008.

### 7.6.6.16 Currently Used Codec

This parameter indicates the currently used codec in MSC-A.

### 7.6.6.17 Available Codecs List

This parameter indicates the available codecs in MSC-A and the associated modes in priority order (the first entry being the highest priority codec). MSC-B uses this information to select the associated transcoder resources.

### 7.6.6.18 Selected Codec

This parameter indicates the codec selected by MSC-B.

### 7.6.6.19 RAB Configuration Indicator

This parameter indicates by its presence that MSC-A (or MSC-B in case of subsequent handover) has generated the RAB parameters according to the preferred codec (first entry in the Available Codecs List).

## 7.6.7 Authentication parameters

### 7.6.7.1 Authentication set list

This parameter represents a list of sets of authentication parameters for a given subscriber.

The list either contains Authentication Triplets (Rand, Sres, Kc) or Authentication Quintuplets (Rand, Xres, Ck, Ik, Autn). If the list contains Authentication Quintuplets, the order of sequence in this list is chronological, the first quintuplet in the list is the oldest one.

### 7.6.7.2 Rand

This parameter represents a random number used for authentication.

#### 7.6.7.3 Sres

This parameter represents the response to an authentication request.

#### 7.6.7.4 Kc

This parameter refers to a key used for ciphering purposes.

#### 7.6.7.5 Xres

This parameter represents the response to an UMTS authentication request.

#### 7.6.7.5A Ck

This parameter refers to a key used for UMTS ciphering purposes.

#### 7.6.7.5B Ik

This parameter refers to the Integrity Key.

#### 7.6.7.5C Autn

This parameter refers to the Authentication Token.

#### 7.6.7.6 Cksn

This parameter refers to a ciphering key sequence number.

#### 7.6.7.6A Ksi

This parameter refers to a key set identifier.

#### 7.6.7.6B Auts

This parameter refers to the resynchronisation token.

#### 7.6.7.7 Ciphering mode

This parameter refers to the ciphering mode which is associated with a radio channel. It may take values as follows:

- no encryption;
- identification of specific ciphering algorithm.

#### 7.6.7.8 Current Security Context

This parameter represents a list of security context parameters for a given subscriber.

The list either contains GSM Security Context data (Kc, Cksn) or UMTS Security Context Data (Ck, Ik, Ksi).

#### 7.6.7.9 Failure cause

This parameter refers to an authentication failure which has occurred. It may take values as follows:

- wrong user response;
- wrong network signature.

### 7.6.7.10 Re-attempt

It indicates whether the failure occurred in a normal authentication attempt or in an authentication reattempt (there was a previous unsuccessful authentication).

### 7.6.7.11 Access Type

It indicates whether the authentication procedure was initiated due to a call, an emergency call, a location updating, a supplementary service procedure, a short message transfer, a GPRS attach procedure, a routing area updating, a service request, a PDP context activation or a PDP context deactivation procedure.

## 7.6.8 Short message parameters

### 7.6.8.1 SM-RP-DA

This parameter represents the destination address used by the short message service relay sub-layer protocol. It can be either of the following:

- IMSI (see clause 7.6.2.1);
- LMSI (see clause 7.6.2.16);
- MS-ISDN (see clause 7.6.2.17);
- roaming number (see clause 7.6.2.19);
- service centre address (see clause 7.6.2.27).

### 7.6.8.2 SM-RP-OA

This parameter refers to the originating address used by the short message service relay sub-layer protocol. It can be either of the following:

- MS-ISDN (see clause 7.6.2.17);
- service centre address (see clause 7.6.2.27).

### 7.6.8.3 MWD status

This parameter indicates whether or not the address of the originator service centre is already contained in the Message Waiting Data file. In addition, it contains the status of the Memory Capacity Exceeded Flag (MCEF), the status of the Mobile subscriber Not Reachable Flag (MNRF) and the status of the Mobile station Not Reachable for GPRS flag (MNRG).

### 7.6.8.4 SM-RP-UI

This parameter represents the user data field carried by the short message service relay sub-layer protocol.

### 7.6.8.5 SM-RP-PRI

This parameter is used to indicate whether or not delivery of the short message shall be attempted when a service centre address is already contained in the Message Waiting Data file.

### 7.6.8.6 SM Delivery Outcome

This parameter indicates the cause for setting the message waiting data. It can take one of the following values:

- Absent subscriber;
- MS memory capacity exceeded;

- Successful transfer.

### 7.6.8.7 More Messages To Send

This parameter is used to indicate whether or not the service centre has more short messages to send.

### 7.6.8.8 Alert Reason

This parameter is used to indicate the reason why the service centre is alerted. It can take one of the following values:

- MS present;
- Memory Available.

### 7.6.8.9 Absent Subscriber Diagnostic SM

This parameter is used to indicate the reason why the subscriber is absent. For the values for this parameter see 3GPP TS 23.140.

### 7.6.8.10 Alert Reason Indicator

This parameter indicates that the alert reason is sent to the HLR due to GPRS activity.

### 7.6.8.11 Additional SM Delivery Outcome

This parameter is used to indicate the GPRS delivery outcome in case a combination between delivery outcome for GPRS and non-GPRS are sent to the HLR.

### 7.6.8.12 Additional Absent Subscriber Diagnostic SM

This parameter indicates the reason of the additional SM Delivery Outcome.

### 7.6.8.13 Delivery Outcome Indicator

This parameter indicates that the delivery outcome sent to the HLR is for GPRS.

### 7.6.8.14 GPRS Node Indicator

This parameter indicates that the Network Node Number sent by the HLR is the SGSN number.

### 7.6.8.15 GPRS Support Indicator

This parameter indicates that the SMS-GMSC supports GPRS specific procedure of combine delivery of Short Message via MSC and/or via the SGSN.

### 7.6.8.16 SM-RP-MTI

This parameter represents the RP-Message Type Indicator of the Short Message. It is used to distinguish a SM sent to the mobile station in order to acknowledge an MO-SM initiated by the mobile from a normal MT-SM. This parameter is formatted according to the formatting rules of address fields as described in 3GPP TS 23.140.

### 7.6.8.17 SM-RP-SMEA

This parameter represents the RP-Originating SME-address of the Short Message Entity that has originated the SM. This parameter is used by the short message service relay sub-layer protocol and is formatted according to the formatting rules of address fields as described in 3GPP TS 23.140.

## 7.6.9 Access and signalling system related parameters

### 7.6.9.1 AN-apdu

This parameter includes one or two concatenated complete 3GPP TS 25.413 or 3GPP TS 48.006 [48] messages, as described in 3GPP TS 23.009 and 3GPP TS 29.010. The access network protocol ID indicates that the message or messages are according to either 3GPP TS 48.006 [48] or 3GPP TS 25.413. For the coding of the messages see 3GPP TS 25.413, 3GPP TS 48.006 [48] and 3GPP TS 48.008 [49].

### 7.6.9.2 CM service type

This parameter identifies the service category being requested by the subscriber:

- mobile originating call;
- emergency call establishment;
- short message service;
- mobile originating call re-establishment;
- mobile terminating call;
- SS request;
- Voice group call set-up;
- Voice broadcast set-up.

### 7.6.9.3 Access connection status

This parameter represents the following access connection status information:

- RR-connection status (established/not established);
- ciphering mode (on/off);
- authentication status (authenticated/not authenticated).

### 7.6.9.4 External Signal Information

This parameter contains concatenated information elements (including tag and length) which are defined by a common protocol version, preceded by the associated protocol ID. It is used to transport information of the indicated protocol via MAP interfaces.

### 7.6.9.5 Access signalling information

This parameter refers to any set of information elements imported from 3GPP TS 24.008 [35].

### 7.6.9.6 Location update type

This parameter refers to the location update type (normal, periodic or IMSI attach) contained in the 3GPP TS 24.008 [35] LOCATION REGISTRATION REQUEST message.

### 7.6.9.7 Protocol ID

This parameter refers to the protocol to which the coding of the content of the associated External Signal Information conforms.

The following values are defined:

- 04.08;
- 08.06;
- ETS 300 102-1.

This value indicates the protocol defined by ETS 300 102-1 (EDSS1).


### 7.6.9.8 Network signal information

This parameter is transported as external signal information. The protocol ID shall be set to "ETS 300 102-1".

The network signal information may include the following information elements as defined in 3GPP TS 29.007 [56]:

- ISDN BC; the tag and length are defined by ETS 300 102-1.  
For the content, see 3GPP TS 29.007 [56].
- HLC; the tag and length are defined by ETS 300 102-1.  
For the content, see 3GPP TS 29.007 [56].
- LLC; the tag and length are defined by ETS 300 102-1.  
For the content, see 3GPP TS 29.007 [56].

They are contained in the Signal Information parameter according to figure 7.6/1 (irrespective of the order):

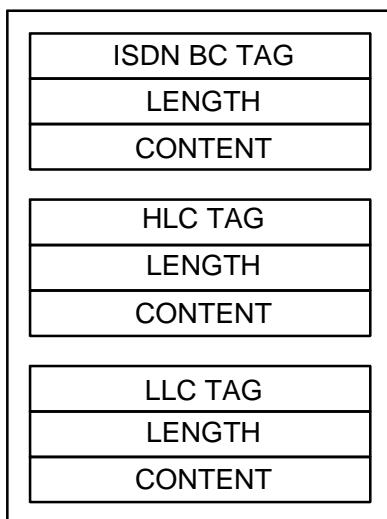

**Figure 7.6/1: Network signal information parameter**

### 7.6.9.9 Call Info

This parameter is transported as external signal information. The protocol ID shall be set to "3GPP TS 24.008 [35]".

The Call Info includes the set of information elements from the original SETUP message and is imported from 3GPP TS 24.008 [35].

### 7.6.9.10 Additional signal info


This parameter is transported as external signal information. The protocol ID shall be set to "ETS 300 356".

The additional signal information may include the following information elements:

- Calling Party Number as defined by ETS 300 356.

- Generic Number as defined by ETS 300 356.

They are contained in the Signal Information parameter according to figure 7.6/2 (irrespective of the order):

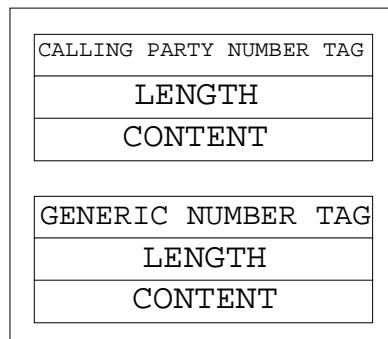

**Figure 7.6/2: Additional signal information parameter**

## 7.6.10 System operations parameters

### 7.6.10.1 Network resources

This parameter refers to a class or type of network resource:

- PLMN;
- HLR;
- VLR (current or previous);
- MSC (controlling or current);
- EIR;
- radio sub-system.

### 7.6.10.2 Trace reference

This parameter represents a reference associated with a tracing request. The parameter is managed by OMC.

### 7.6.10.3 Trace type

This parameter identifies the type of trace. Trace types are fully defined in GSM 12.08.

## 7.6.11 Location Service Parameters

### 7.6.11.1 Age of Location Estimate

This parameter indicates how long ago the location estimate was obtained.

### 7.6.11.2 Deferred MT-LR Response Indicator

This parameter shows that this is a response to a deferred mt-lr request.

### 7.6.11.3 Deferred MT-LR Data

This parameter is used to report the deferred location event type, the location information and reason why the serving node aborted monitoring the event to the GMLC. The termination cause mt-lrRestart shall be used to trigger the GMLC to restart the location procedure in all the cases where the sending node detects that the location procedure cannot be successfully performed anymore by the sending node and that it could be successfully performed by another node (as

for example when Cancel Location or Send Identification has been received). The location information shall be included only if the termination cause is mt-IrRestart. The network node number contained in the location information refers to the node where the MS/UE has moved to and shall be included if available, like in case Send Identification has been received.

#### 7.6.11.4 LCS Client ID

This parameter provides information related to the identity of an LCS client.

#### 7.6.11.5 LCS Event

This parameter identifies an event associated with the triggering of a location estimate.

#### 7.6.11.6 Void

#### 7.6.11.7 LCS Priority

This parameter gives the priority of the location request.

#### 7.6.11.8 LCS QoS

This parameter defines the Quality of Service (QoS) for any location request. It is composed of the following elements.

1) Response Time

Indicates the category of response time – “low delay” or “delay tolerant”.

2) Horizontal Accuracy

Indicates the required horizontal accuracy of the location estimate.

3) Vertical Coordinate

Indicates if a vertical coordinate is required (in addition to horizontal coordinates).

4) Vertical Accuracy

Indicates the required vertical accuracy of the location estimate (inclusion is optional).

#### 7.6.11.9 CS LCS Not Supported by UE

This parameter is used by the VLR to indicate to the HLR that the UE does not support neither UE Based nor UE Assisted positioning methods for Circuit Switched Location Services. VLR defines the presence of this parameter on the basis of the Classmark 3 information.

#### 7.6.11.10 PS LCS Not Supported by UE

This parameter is used by the SGSN to indicate to the HLR that the UE does not support neither UE Based nor UE Assisted positioning methods for Packet Switched Location Services. SGSN defines the presence of this parameter on the basis of the UE capability information.

#### 7.6.11.11 Location Estimate

This parameter gives an estimate of the location of an MS in universal coordinates and the accuracy of the estimate. The estimate is expressed in terms of the geographical shapes defined by 3GPP TS 23.032, and is composed of the type of shape plus the encoding of the shape itself. Any type of shape defined in 3GPP TS 23.032 can be filled in in the Location Estimate parameter, but only the encoding of the following shapes shall be carried by Location Estimate:

- Ellipsoid point with uncertainty circle

- Ellipsoid point with uncertainty ellipse
- Ellipsoid point with altitude and uncertainty ellipsoid
- Ellipsoid arc
- Ellipsoid point

The encoding for the remaining types of shape, defined in the 3GPP TS 23.032, shall be filled in in the Additional Location Estimate parameter.

#### 7.6.11.12 Location Type

This parameter indicates the type of location estimate required by the LCS client. Possible location estimate types include:

- current location;
- current or last known location;
- initial location for an emergency services call;
- deferred location event type.

#### 7.6.11.13 NA-ESRD

This parameter only applies to location for an emergency services call in North America and gives the North American Emergency Services Routing Digits.

#### 7.6.11.14 NA-ESRK

This parameter only applies to location for an emergency services call in North America and gives the North American Emergency Services Routing Key.

#### 7.6.11.15 LCS Service Type Id

This parameter defines the LCS Service Type of the current positioning request. The possible values are defined in 3GPP TS 22.071 [123].

#### 7.6.11.16 Privacy Override

This parameter indicates if MS privacy is overridden by the LCS client when the GMLC and VMSC/SGSN for an MT-LR are in the same country.

#### 7.6.11.17 Supported LCS Capability Sets

This parameter indicates which capability sets of LCS are supported in the VLR or SGSN.

#### 7.6.11.18 LCS Codeword

This parameter contains the codeword associated to current positioning request as described in 3GPP TS 23.271 [26a].

#### 7.6.11.19 Void

#### 7.6.11.20 Supported GAD Shapes

This parameter indicates which of the shapes defined in 3GPP TS 23.032 are supported. If the parameter is not provided then the receiving node shall assume that the sending entity supports the following shapes:

- Ellipsoid point with uncertainty circle
- Ellipsoid point with uncertainty ellipse
- Ellipsoid point with altitude and uncertainty ellipsoid
- Ellipsoid arc
- Ellipsoid point

### 7.6.11.21 Additional Location Estimate

This parameter gives an estimate of the location of an MS/UE in universal coordinates and the accuracy of the estimate. This parameter allows the location estimate to be expressed in any of the geographical shapes defined in 3GPP TS 23.032

### 7.6.11.22 Void

### 7.6.11.23 LCS-Reference Number

This parameter represents a reference between a request and a response of a deferred mt-lr procedure as described in 3GPP TS 23.271 [26a].

## 7.6.12 Secure Transport Parameters

### 7.6.12.1 Security Header

This parameter carries the security header information, which is required by a receiving entity in order to extract the protected information from a securely transported MAP message. The components of the security header are shown in table 7.6.12/1.

See 3GPP TS 33.200 for the use of these parameters.

**Table 7.6.12/1: Components of the Security Header**


Component name	Presence requirement	Description
Security Parameters Index	M	Identifies the Security Association for the component.
Original component identifier	M	Identifies the type of component to be securely transported – one of: - Operation, identified by the operation code; - Error, defined by the error code; - User information.
TVP	O	A parameter based on time that is used to ensure the current message is fresh. This is only present if required for the current Protection Mode.
NE-Id	O	The identity of the Network Element sending the message. This is only present if required for the current Protection Mode.
Prop	O	Bytes used to ensure the IV is unique for a given TVP and NE-Id. This is only present if required for the current Protection Mode.

## 7.7 Representation of a list of a basic parameter in service-primitives

In some service-primitives several instances of a basic parameter of clause 7.6 are required. In the service descriptions such cases will be represented as

ParameterNameLIST

in the tables where ParameterName refers to one of the parameters defined in clause 7.6. This corresponds to the following construction rule:



**Figure 7.7/1: Construction of Lists**

## 8 Mobility services

### 8.1 Location management services

#### 8.1.1 Void

8.1.1.1 Void

8.1.1.2 Void

8.1.1.3 Void

#### 8.1.2 MAP\_UPDATE\_LOCATION service

##### 8.1.2.1 Definition

This service is used by the VLR to update the location information stored in the HLR.

The MAP\_UPDATE\_LOCATION service is a confirmed service using the service primitives given in table 8.1/2.

##### 8.1.2.2 Service primitives

**Table 8.1/2: MAP\_UPDATE\_LOCATION**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
MSC Address	M	M(=)		
VLR number	M	M(=)		
LMSI	U	C(=)		
Supported CAMEL Phases	C	C(=)		
SoLSA Support Indicator	C	C(=)		
IST Support Indicator	C	C(=)		
Super-Charger Supported in Serving Network Entity	C	C(=)		
Long FTN Supported	C	C(=)		
Supported LCS Capability Sets	C	C(=)		
Offered CAMEL 4 CSIs	C	C(=)		
Inform Previous Network Entity	C	C(=)		
CS LCS Not Supported by UE	C	C(=)		
HLR number			C	C(=)
User error			C	C(=)
Provider error				O

### 8.1.2.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### MSC Address

See definition for MSC number in clause 7.6.2. The MSC address is used for short message delivery only and for each incoming call set-up attempt the MSRN will be requested from the VLR.

#### VLR number

See definition in clause 7.6.2.

#### LMSI

See definition in clause 7.6.2. It is an operator option to provide the LMSI from the VLR; it is mandatory for the HLR to support the LMSI handling procedures.

#### Supported CAMEL Phases

This parameter indicates which phases of CAMEL are supported. Must be present if a CAMEL phase different from phase 1 is supported. Otherwise may be absent.

#### HLR number

See definition in clause 7.6.2. The presence of this parameter is mandatory in case of successful HLR updating.

#### SoLSA Support Indicator

This parameter is used by the VLR to indicate to the HLR in the Update Location indication that SoLSA is supported. If this parameter is not included in the Update Location indication and the Subscriber is marked as only allowed to roam in Subscribed LSAs, then the HLR shall reject the roaming and indicate to the VLR that roaming is not allowed to that Subscriber in the VLR.

This SoLSA Support Indicator shall be stored by the HLR per VLR where there are Subscribers roaming. If a Subscriber is marked as only allowed to roam in Subscribed LSAs while roaming in a VLR and no SoLSA Support indicator is stored for that VLR, the location status of that Subscriber shall be set to Restricted.

#### IST Support Indicator

This parameter is used to indicate to the HLR that the VMSC supports basic IST functionality, that is, the VMSC is able to terminate the Subscriber Call Activity that originated the IST Alert when it receives the IST alert response indicating that the call(s) shall be terminated. If this parameter is not included in the Update Location indication and the Subscriber is marked as an IST Subscriber, then the HLR may limit the service for the subscriber (by inducing an Operator Determined barring of Roaming, Incoming or Outgoing calls), or allow service assuming the associated risk of not having the basic IST mechanism available.

This parameter can also indicate that the VMSC supports the IST Command service, including the ability to terminate all calls being carried for the identified subscriber by using the IMSI as a key. If this additional capability is not included in the Update Location indication and the HLR supports the IST Command capability, then the HLR may limit the service for the subscriber (by inducing an Operator Determined barring of Roaming, Incoming or Outgoing calls), or allow service assuming the associated risk of not having the IST Command mechanism available.

#### Long FTN Supported

This parameter indicates that the VLR supports Long Forwarded-to Numbers.

#### Super-Charger Supported in Serving Network Entity

This parameter is used by the VLR to indicate to the HLR that the VLR supports the Super-Charger functionality and whether subscription data has been retained by the VLR. If subscription data has been retained by the VLR the age indicator shall be included. Otherwise the VLR shall indicate that subscriber data is required.

If this parameter is absent then the VLR does not support the Super-Charger functionality.

#### Supported LCS Capability Sets

This parameter indicates, if present, the capability sets of LCS which are supported. If the parameter is sent but no capability set is marked as supported then the VLR does not support LCS at all.

If this parameter is absent then the VLR may support at most LCS capability set 1, that is LCS Release98 or Release99 version.

#### Offered CAMEL 4 CSIs

This parameter indicates the CAMEL phase 4 CSIs offered in the VMSC/VLR (see clause 7.6.3.36D).

#### Inform Previous Network Entity

This parameter is used by the VLR to ask the HLR to inform the previous network entity about the update by sending the previous network entity a Cancel Location message. It is used in case Super-Charger is supported in the network and the serving network entity has not been able to inform the previous network entity that MS has moved, that is if it has not sent Send Identification to the previous serving entity.

#### CS LCS Not Supported by UE

See definition in clause 7.6.11.

#### User error

In case of unsuccessful updating, an error cause shall be returned by the HLR. The following error causes defined in clause 7.6.1 may be used, depending on the nature of the fault:

- unknown subscriber;
- roaming not allowed;

This cause will be sent if the MS is not allowed to roam into the PLMN indicated by the VLR number. The cause is qualified by the roaming restriction reason "PLMN Not Allowed" or "Operator Determined Barring". If no qualification is received (HLR with MAP Version 1), "PLMN Not Allowed" is taken as default.

- system failure;
- unexpected data value.

#### Provider error

For definition of provider errors see clause 7.6.1.

### 8.1.3 MAP\_CANCEL\_LOCATION service

#### 8.1.3.1 Definition

This service is used between HLR and VLR to delete a subscriber record from the VLR. It may be invoked automatically when an MS moves from one VLR area to another, to remove the subscriber record from the old VLR, or by the HLR operator to enforce a location updating from the VLR to the HLR, e.g. on withdrawal of a subscription.

Also this service is used between HLR and SGSN to delete a subscriber record from the SGSN. It may be invoked automatically when an MS moves from one SGSN area to another, to remove the subscriber record from the old SGSN, or by the HLR operator to enforce a location updating from the SGSN to the HLR.

The MAP\_CANCEL\_LOCATION service is a confirmed service using the primitives defined in table 8.1/3.

#### 8.1.3.2 Service primitives

**Table 8.1/3: MAP\_CANCEL\_LOCATION**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
LMSI	C	C(=)		
Cancellation Type	C	C(=)		
User error			C	C(=)
Provider error				O

### 8.1.3.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### LMSI

See definition in clause 7.6.2. The LMSI shall be included if it has been received from VLR. LMSI is not applicable between SGSN and HLR.

Value 0000 0000 can be used to indicate that the LMSI is not in use.

#### Cancellation Type

See definition in clause 7.6.3. The presence of this parameter is mandatory when the Cancel Location is sent to the SGSN. If the VLR receives this parameter and do not understand it the VLR shall ignore it.

#### User error

If the cancellation fails, an error cause is to be returned by the VLR or by the SGSN. One of the following error causes defined in clause 7.6.1 shall be used:

- unexpected data value;
- data missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

### 8.1.4 MAP\_SEND\_IDENTIFICATION service

#### 8.1.4.1 Definition

The MAP\_SEND\_IDENTIFICATION service is used between a VLR and a previous VLR to retrieve IMSI and authentication data for a subscriber registering afresh in that VLR.

The MAP\_SEND\_IDENTIFICATION service is a confirmed service using the service primitives defined in table 8.1/4.

#### 8.1.4.2 Service primitives

**Table 8.1/4: MAP\_SEND\_IDENTIFICATION**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
TMSI	M	M(=)		
Number of requested vectors	M	M(=)		
Segmentation prohibited indicator	C	C (=)		

IMSI			C	C(=)
Authentication set			U	C(=)
Current Security Context			U	C(=)
User error			C	C(=)
Provider error				O

### 8.1.4.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### TMSI

See definition in clause 7.6.2.

If multiple service requests are present in a dialogue then this parameter shall be present in every service request.

#### Number of requested vectors

A number indicating how many authentication vectors the new VLR is prepared to receive. The previous VLR shall not return more vectors than indicated by this parameter.

This parameter shall be present in the first (or only) request of the dialogue. If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one

#### Segmentation prohibited indicator

This parameter indicates if the new VLR or SGSN allows segmentation of the response at MAP user level.

This parameter may be present only in the first request of the dialogue.

#### IMSI

See definition in clause 7.6.2. The IMSI is to be returned if the service succeeds.

If multiple service requests are present in a dialogue and the service succeeds then this parameter shall not be present in any service response other than the first one

#### Authentication set

See definition in clause 7.6.7. If the service succeeds a list of up to five authentication sets is returned, if there are any available.

#### Current Security Context

See definition in clause 7.6.7. If the service succeeds, a list of either GSM or UMTS Security Context parameters can be returned.

#### User error

This parameter is mandatory if the service fails. The following error cause defined in clause 7.6.1 may be used, depending on the nature of the fault:

- unidentified subscriber.

#### Provider error

For definition of provider errors see clause 7.6.1.

### 8.1.5 Void

#### 8.1.5.1 Void

8.1.5.2      Void

8.1.5.3      Void

## 8.1.6      MAP\_PURGE\_MS service

### 8.1.6.1      Definition

This service is used between the VLR and the HLR to cause the HLR to mark its data for an MS so that any request for routing information for a mobile terminated call or a mobile terminated short message will be treated as if the MS is not reachable. It is invoked when the subscriber record for the MS is to be deleted in the VLR, either by MMI interaction or automatically, e.g. because the MS has been inactive for several days. This service shall not be used if both the VLR and HLR support the Super-Charger functionality.

Also this service is used between the SGSN and the HLR to cause the HLR to mark its data for an MS so that any request for routing information for a mobile terminated short message or a network requested PDP-context activation will be treated as if the MS is not reachable. It is invoked when the subscriber record for the MS is to be deleted in the SGSN, either by MMI interaction or automatically, e.g. because the MS has been inactive for several days. This service shall not be used if both the SGSN and HLR support the Super-Charger functionality.

The MAP\_PURGE\_MS service is a confirmed service using the primitives defined in table 8.1/6.

### 8.1.6.2      Service primitives

**Table 8.1/6: MAP\_PURGE\_MS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
VLR number	C	C(=)		
Freeze TMSI			C	C(=)
Freeze P-TMSI			C	C(=)
SGSN number	C	C(=)		
User error			C	C(=)
Provider error				O

### 8.1.6.3      Parameter definitions and use

#### Invoke ID

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### VLR number

Shall be present if the sender is VLR. See definition in clause 7.6.2.

#### SGSN number

Shall be present if the sender is SGSN. See definition in clause 7.6.2.

#### Freeze TMSI

This parameter is sent to the VLR to indicate that the TMSI has to be frozen. It shall be present if the received VLR number matches the stored VLR number.

#### Freeze P-TMSI

This parameter is sent to the SGSN to indicate that the P-TMSI has to be frozen. It shall be present if the received SGSN number matches the stored SGSN number.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

See definition of provider errors in clause 7.6.1.

### 8.1.7 MAP\_UPDATE\_GPRS\_LOCATION service

#### 8.1.7.1 Definition

This service is used by the SGSN to update the location information stored in the HLR.

The MAP\_UPDATE\_GPRS\_LOCATION service is a confirmed service using the service primitives given in table 8.1/7.

#### 8.1.7.2 Service primitives

**Table 8.1/7: MAP\_UPDATE\_GPRS\_LOCATION**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
SGSN number	M	M(=)		
SGSN address	M	M(=)		
Supported CAMEL Phases	C	C(=)		
SoLSA Support Indicator	C	C(=)		
Super-Charger Supported in Serving Network Entity	C	C(=)		
GPRS enhancements support indicator	C	C(=)		
Supported LCS Capability Sets	C	C(=)		
Offered CAMEL 4 CSIs	C	C(=)		
Inform Previous Network Entity	C	C(=)		
PS LCS Not Supported by UE	C	C(=)		
HLR number			C	C(=)
User error			C	C(=)
Provider error				O

#### 8.1.7.3 Parameter definitions and use

##### Invoke Id

See definition in clause 7.6.1.

##### IMSI

See definition in clause 7.6.2.

##### SGSN number

See definition in clause 7.6.2.

##### SGSN address

See definition in clause 7.6.2.

#### Supported CAMEL Phases

This parameter indicates which phases of CAMEL are supported. The SGSN can only support CAMEL phase 3 or greater.

#### SoLSA Support Indicator

This parameter is used by the SGSN to indicate to the HLR in the Update GPRS Location indication that SoLSA is supported. If this parameter is not included in the Update GPRS Location indication and the Subscriber is marked as only allowed to roam in Subscribed LSAs, then the HLR shall reject the roaming and indicate to the SGSN that roaming is not allowed to that Subscriber in the SGSN.

This SoLSA Support Indicator shall be stored by the HLR per SGSN where there are Subscribers roaming. If a Subscriber is marked as only allowed to roam in Subscribed LSAs while roaming in a SGSN and no SoLSA Support indicator is stored for that SGSN, the location status of that Subscriber has to be set to Restricted.

#### Super-Charger Supported in Serving Network Entity

This parameter is used by the SGSN to indicate to the HLR that the SGSN supports the Super-Charger functionality and whether subscription data has been retained by the SGSN. If subscription data has been retained by the SGSN the age indicator shall be included. Otherwise the SGSN shall indicate that subscriber data is required.

If this parameter is absent then the SGSN does not support the Super-Charger functionality.

#### GPRS enhancements support indicator

This parameter is used by the SGSN to indicate to the HLR in the Update GPRS Location indication that GPRS enhancements are supported. If this parameter is included in the Update GPRS Location indication the HLR may send the extensible QoS in the PDP contexts to the SGSN.

#### HLR number

See definition in clause 7.6.2. The presence of this parameter is mandatory in case of successful HLR updating.

#### Supported LCS Capability Sets

This parameter indicates, if present, the capability sets of LCS which are supported. If the parameter is sent but no capability set is marked as supported then the SGSN does not support LCS at all.

The SGSN is not allowed to indicate support for LCS capability set 1.

If this parameter is absent then the SGSN does not support LCS at all.

#### Offered CAMEL 4 CSIs

This parameter indicates the CAMEL phase 4 CSIs offered in the SGSN (see clause 7.6.3.36D).

#### Inform Previous Network Entity

This parameter is used by the SGSN to ask the HLR to inform the previous network entity about the update by sending the previous network entity a Cancel Location message. It is used in case Super-Charger is supported in the network and the serving network entity has not been able to inform the previous network entity that MS has moved, that is if it has not sent SGSN Context Request to the previous serving entity.

#### PS LCS Not Supported by UE

See definition in clause 7.6.11.

#### User error

In case of unsuccessful updating, an error cause shall be returned by the HLR. The following error causes defined in clause 7.6.1 may be used, depending on the nature of the fault:

- unknown subscriber;

- roaming not allowed.

This cause will be sent if the MS is not allowed to roam into the PLMN indicated by the SGSN number. The cause is qualified by the roaming restriction reason "PLMN Not Allowed" or "Operator Determined Barring".

- system failure;
- unexpected data value.

The diagnostic in the Unknown Subscriber may indicate "Imsi Unknown" or "Gprs Subscription Unknown".

#### Provider error

For definition of provider errors see clause 7.6.1.

### 8.1.8 MAP-NOTE-MM-EVENT

#### 8.1.8.1 Definition

This service is used between the VLR and the gsmSCF or between the SGSN and the gsmSCF when a mobility management event for a subscriber has been processed successfully, that subscriber is provisioned with M-CSI or MG-CSI and the relevant mobility management event is marked for reporting.

#### 8.1.8.2 Service primitives

The service primitives are shown in table 8.1/8.

**Table 8.1/8: MAP\_NOTE\_MM\_EVENT parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Event Met	M	M(=)		
Service Key	M	M(=)		
IMSI	M	M(=)		
Basic MSISDN	M	M(=)		
Location Information for GPRS	C	C(=)		
Location Information	C	C(=)		
LSA Identity	C	C(=)		
Supported CAMEL Phases	M	M(=)		
Offered CAMEL 4 Functionalities	C	C(=)		
User error			C	C(=)
Provider error				O

#### 8.1.8.3 Parameter use

##### Event Met

This parameter indicates the mobility management event that has lead to the notification. It shall have one of the following values for a mobility management event reported by the VLR:

- Location update in the same VLR service area;
- Location update to another VLR service area;
- IMSI attach;
- MS initiated IMSI detach (explicit detach);
- Network initiated IMSI detach (implicit detach).

It shall have one of the following values for a mobility management event reported by the SGSN:

- Routeing area update in the same SGSN service area;

- Routing area update to another SGSN service area;
- GPRS attach;
- MS initiated GPRS detach;
- Network initiated GPRS detach;
- Network initiated transfer to the "not reachable for paging" state.

#### Service Key

See clause 7.6.x.

#### IMSI

See clause 7.6.x.

#### Basic MSISDN

See clause 7.6.x.

#### Location Information

See clause 7.6.2.30. This information shall be sent when the event is reported by a VLR, if available.

#### Location Information for GPRS

See clause 7.6.2.30a. This information shall be sent when the event is reported by an SGSN, if available.

#### LSA Identity

See clause 7.6.x. This information shall be sent, if available.

#### Supported CAMEL Phases

See clause 7.6.x. This information shall always be sent.

#### Offered CAMEL 4 Functionalities

This parameter indicates the CAMEL phase 4 functionalities offered by the sending entity, VMSC/VLR or SGSN (see clause 7.6.3.36G).

#### User error

This parameter is sent by the receiving entity when an error is detected. It shall have one of the following values:

- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber;
- MM-EventNotSupported.

#### Provider error

This is defined in clause 7.6.1.

## 8.2 Paging and search

### 8.2.1 MAP\_PAGE service

#### 8.2.1.1 Definition

This service is used between VLR and MSC to initiate paging of an MS for mobile terminated call set-up, mobile terminated short message or unstructured SS notification.

The MAP\_PAGE service is a confirmed service using the primitives from table 8.2/1.

### 8.2.1.2 Service primitives

**Table 8.2/1: MAP\_PAGE**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
Stored location area Id	M	M(=)		
TMSI	U	C(=)		
User error			C	C(=)
Provider error				O

### 8.2.1.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2. The IMSI is used to define the paging subgroup. If the TMSI is not supplied, paging on the radio path uses the IMSI as an identifier.

#### Stored location area Id

See definition in clause 7.6.2.

#### TMSI

See definition in clause 7.6.2. The TMSI is included if paging on the radio channel is to use the TMSI as an identifier.

#### User error

The following error causes defined in clause 7.6.1 may be sent by the user in case of a paging error, depending on the failure reason:

- absent subscriber;
- unknown location area;
- busy subscriber;
- system failure;
- this corresponds to the case where there is no call associated with the MAP\_PAGE service, i.e. if the call has been released but the dialogue to the VLR has not been aborted;
- unexpected data value.

#### Provider error

See definition in clause 7.6.1.

### 8.2.2 MAP\_SEARCH\_FOR\_MS service

#### 8.2.2.1 Definition

This service is used between VLR and MSC to initiate paging of an MS in all location areas of that VLR. It is used if the VLR does not hold location area information confirmed by radio contact.

The MAP\_SEARCH\_FOR\_MS service is a confirmed service using the primitives from table 8.2/2.

### 8.2.2.2 Service primitives

**Table 8.2/2: MAP\_SEARCH\_FOR\_MS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
Current location area Id			C	C(=)
User error			C	C(=)
Provider error				O

### 8.2.2.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2. The IMSI is used to identify the subscriber when paging on the radio path.

#### Current location area Id

See definition in clause 7.6.2. In case of successful outcome of the service, i.e. if the MS responds to paging, the Location Area Id of the area in which the MS responded is given in the response.

#### User error

The following error causes defined in clause 7.6.1 shall be sent by the user if the search procedure fails, depending on the failure reason:

- absent subscriber;  
this error cause is returned by the MSC if the MS does not respond to the paging request;
- system failure;
- this corresponds to the case where there is no call associated with the MAP\_SEARCH\_FOR\_MS service, i.e. if the call has been released but the dialogue to the VLR has not been aborted;
- busy subscriber;
- unexpected data value.

#### Provider error

See definition in clause 7.6.1.

## 8.3 Access management services

### 8.3.1 MAP\_PROCESS\_ACCESS\_REQUEST service

#### 8.3.1.1 Definition

This service is used between MSC and VLR to initiate processing of an MS access to the network, e.g. in case of mobile originated call set-up or after being paged by the network.

The MAP\_PROCESS\_ACCESS\_REQUEST service is a confirmed service using the primitives from table 8.3/1.

### 8.3.1.2 Service primitives

**Table 8.3/1: MAP\_PROCESS\_ACCESS\_REQUEST**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
CM service type	M	M(=)		
Access connection status	M	M(=)		
Current Location Area Id	M	M(=)		
Serving cell Id	M	M(=)		
TMSI	C	C(=)		
Cksn	C	C(=)		
IMSI	C	C(=)	C	C(=)
IMEI	C	C(=)	C	C(=)
MSISDN			U	C(=)
User error			C	C(=)
Provider error				O

### 8.3.1.3 Parameter definitions and use

#### Invoke Id

See definition in clause 7.6.1.

#### CM service type

See definition in clause 7.6.9.

#### Access connection status

See definition in clause 7.6.9.

#### Current Location Area Id

See definition in clause 7.6.2. This parameter is used to update the VLR in case of previous VLR failure.

#### Serving cell Id

See definition in clause 7.6.2.

#### TMSI

See definition in clause 7.6.2. Either TMSI or IMSI as received from the MS are included in the Request/Indication, but one shall be present. In case of CM Service Type "Emergency Call Establishment", the IMEI may replace IMSI/TMSI.

#### Cksn

See definition in clause 7.6.7. In case of access with TMSI, the Cksn shall be present.

#### IMSI

See definition in clause 7.6.2. Either TMSI or IMSI as received from the MS are included in the Request/Indication, but one shall be present. In case of CM Service Type "Emergency Call Establishment", the IMEI may replace IMSI/TMSI.

In the Response/Confirmation, the IMSI is to be sent in case of successful outcome of the service. In case of CM Service Type "Emergency Call Establishment", IMEI may replace IMSI.

#### IMEI

See definition in clause 7.6.2. The IMEI may replace IMSI/TMSI in the Request/Indication and IMSI in the Response/Confirmation only in case the CM Service Type indicates "Emergency Call Establishment".

#### MSISDN

See definition in clause 7.6.2. The MSISDN is included in case of successful outcome of the service as an operator option, e.g. if it is needed at the MSC for charging purposes in case of call forwarding.

#### User error

One of the following error causes defined in clause 7.6.1 shall be sent by the user if the access request fails, depending on the failure reason:

- unidentified subscriber;  
this error is sent if a correlated authentication procedure has not authenticated the subscriber;
- illegal equipment;  
this error is sent if an IMEI check failed, i.e. the IMEI is blacklisted or not white-listed;
- roaming not allowed;
- this cause is used after VLR restart if the subscriber has no subscription for the current location area, e.g. due to regional subscription. The cause will be qualified by "location area not allowed" or "national roaming not allowed", respectively;
- unknown location area;
- system failure;
- unexpected data value.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 8.4 Handover services

It should be noted that the handover services used on the B-interface have not been updated for Release 99. The B-interface is not fully operational specified. It is strongly recommended not to implement the B-interface as an external interface.

### 8.4.1 MAP\_PREPARE\_HANDOVER service

#### 8.4.1.1 Definition

This service is used between MSC-A and MSC-B (E-interface) when a call is to be handed over or relocated from MSC-A to MSC-B.

The MAP\_PREPARE\_HANDOVER service is a confirmed service using the primitives from table 8.4/1.

#### 8.4.1.2 Service primitives

**Table 8.4/1: MAP\_PREPARE\_HANDOVER**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Target Cell Id	C	C(=)		
Target RNC Id	C	C(=)		
HO-NumberNotRequired	C	C(=)		
IMSI	C	C(=)		
Integrity Protection Information	C	C(=)		
Encryption Information	C	C(=)		
Radio Resource Information	C	C(=)		
AN-APDU	C	C(=)	C	C(=)

Allowed GSM Algorithms	C	C(=)		
Allowed UMTS Algorithms	C	C(=)		
Radio Resource List	C	C(=)		
RAB ID	C	C(=)		
GERAN Classmark	C	C(=)		
BSSMAP Service Handover	C	C(=)		
BSSMAP Service Handover List	C	C(=)		
RANAP Service Handover	C	C(=)		
Currently Used Codec	C	C(=)		
Available Codecs List	C	C(=)		
RAB Configuration Indicator	C	C(=)		
ASCI Call Reference	C	C(=)		
Handover Number			C	C(=)
Relocation Number List			C	C(=)
Multicall Bearer Information			C	C(=)
Multiple Bearer Requested	C	C(=)		
Multiple Bearer Not Supported			C	C(=)
Selected UMTS Algorithms			C	C(=)
Chosen Radio Resource Information			C	C(=)
Selected Codec			C	C(=)
User error			C	C(=)
Provider error				O

#### 8.4.1.3 Parameter use

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### Target Cell Id

For definition of this parameter see clause 7.6.2. This parameter is only included if the service is not in an ongoing transaction. This parameter shall also be excluded if the service is a part of the Inter-MSC SRNS Relocation procedure or the inter-system handover GSM to UMTS procedure described in 3GPP TS 23.009.

##### Target RNC Id

For definition of this parameter see clause 7.6.2. This parameter shall be included if the service is a part of the Inter-MSC SRNS Relocation procedure or the inter-system handover GSM to UMTS procedure described in 3GPP TS 23.009.

##### HO-Number Not Required

For definition of this parameter see clause 7.6.6.

##### IMSI

For definition of this parameter see clause 7.6.2. This UMTS parameter shall be included if:

- available and
- if the access network protocol is BSSAP and
- there is an indication that the MS also supports UMTS.

##### Integrity Protection Information

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if available and if the access network protocol is BSSAP.

##### Encryption Information

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if available and if the access network protocol is BSSAP.

#### Radio Resource Information

For definition of this parameter see clause 7.6.6. This GSM parameter shall be included if the access network protocol is RANAP and there is an indication that the UE also supports GSM. If the parameter Radio Resource List is sent , the parameter Radio Resource Information shall not be sent.

#### AN-APDU

For definition of this parameter see clause 7.6.9.

#### Allowed GSM Algorithms

For definition of this parameter see clause 7.6.6. This parameters includes allowed GSM algorithms. This GSM parameter shall be included if:

- the service is a part of the Inter-MSC SRNS Relocation procedure and
- Ciphering or Security Mode Setting procedure has been performed.and
- there is an indication that the UE also supports GSM.

#### Allowed UMTS Algorithms

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if all of the following conditions apply:

- access network protocol is BSSAP and
- Integrity Protection Information and Encryption Information are not available and

Ciphering or Security Mode Setting procedure has been performed.

#### Radio Resource List

For definition of this parameter see clause 7.6.6. This parameter shall be included if the access network protocol is RANAP and there is an indication that the UE also supports GSM. This parameter shall be sent when MSC-A requests multiple bearers to MSC-B. If the parameter Radio Resource Information is sent , the parameter Radio Resource List shall not be sent.

#### RAB ID

For definition of this parameter see subclause 7.6.2. This parameter shall be included when MSC-A supports multiple bearers and access network protocol is BSSAP and the RAB ID has a value other than 1.

GERAN Classmark

For definition of this parameter see subclause 7.6.6 This parameter shall be included if available.

#### BSSMAP Service Handover

For definition of this parameter see clause 7.6.6. It shall be present if it is available and the access network protocol is RANAP. If the parameter BSSMAP Service Handover List is sent, the parameter BSSMAP Service Handover shall not be sent.

#### BSSMAP Service Handover List

For definition of this parameter see clause 7.6.6. It shall be present if it is available and the access network protocol is RANAP. This parameter shall be sent when MSC-A requests multiple bearers to MSC-B. If the parameter BSSMAP Service Handover is sent, the parameter BSSMAP Service Handover List shall not be sent.

#### RANAP Service Handover

For definition of this parameter see clause 7.6.6. It shall be present if it is available and the access network protocol is BSSAP.

#### Currently Used Codec

For definition of this parameter see subclause 7.6.6. This parameter shall be included if the call is a speech call. This parameter shall not be included if Available Codecs List is not included.

#### Available Codecs List

For definition of this parameter see subclause 7.6.6. This parameter shall be included if the call is a speech call.

#### RAB Configuration Indicator

For definition of this parameter see subclause 7.6.6. This parameter may be included if the call is a speech call and MSC-A knows by means of configuration information that MSC-B supports the use of Available Codecs List parameter. This parameter shall not be included if Available Codecs List is not included.

#### ASCI Call Reference

This parameter contains either the broadcast call reference or group call reference. It shall be included if a subscriber is undergoing Signalling Only handover during a VGCS or VBS call, where MSC-B already has a Bearer established, so that MSC-B can determine the Group or Broadcast Call to which it shall attach the subscriber, see 3GPP TS 48.008 [49].

#### Handover Number

For definition of this parameter see clause 7.6.2. This parameter shall be returned at handover, unless the parameter HO-NumberNotRequired is sent. If the parameter Handover Number is returned, the parameter Relocation Number List shall not be returned.

#### Relocation Number List

For definition of this parameter see clause 7.6.2. This parameter shall be returned at relocation, unless the parameter HO-NumberNotRequired is sent. If the parameter Relocation Number List is returned, the parameter Handover Number shall not be returned.

#### Multicall Bearer Information

For a definition of this parameter see clause 7.6.2. This parameter shall be returned at relocation in the case that MSC-B supports multiple bearers.

#### Multiple Bearer Requested

For a definition of this parameter see clause 7.6.2. This parameter shall be sent when MSC-A requests multiple bearers to MSC-B.

#### Multiple Bearer Not Supported

For a definition of this parameter see clause 7.6.2. This parameter shall be returned at relocation when MSC-B receives Multiple Bearer Requested parameter and MSC-B does not support multiple bearers.

#### Selected UMTS Algorithms

For definition of this parameter see clause 7.6.6. This parameters includes the UMTS integrity and optionally encryption algorithms selected by RNC under the control of MSC-B. This UMTS parameter shall be included if the service is a part of the inter MSC inter system handover from GSM to UMTS.

#### Chosen Radio Resource Information

For definition of this parameter see clause 7.6.6. This parameter shall be returned at relocation if the encapsulated PDU is RANAP RAB Assignment Response and MS is in GSM access.

#### Selected Codec

For definition of this parameter see subclause 7.6.6. This parameter shall be included always if MSC-B supports the selection of codec based on Available Codecs List, even if Selected Codec is equal to the Currently Used Codec

received in the service request. This parameter shall not be included if Available Codecs List was not received in the service request.

#### User error

For definition of this parameter see clause 7.6.1. The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- No handover number available.
- Target cell outside group call area;
- System failure.
- Unexpected data value.
- Data Missing.

#### Provider error

See definition of provider errors in clause 7.6.1.

### 8.4.2 MAP\_SEND\_END\_SIGNAL service

#### 8.4.2.1 Definition

This service is used between MSC-B and MSC-A (E-interface) indicating that the radio path has been established by MSC-B to the MS. MSC-A retains then the main control of the call until it clears.

The response is used by MSC-A to inform MSC-B that all resources for the call can be released in MSC-B, either because the call has been released in MSC-A or because the call has been successfully handed over or relocated from MSC-B to another MSC.

The MAP\_SEND\_END\_SIGNAL service is a confirmed service using the primitives from table 8.4/2.

#### 8.4.2.2 Service primitives

**Table 8.4/2: MAP\_SEND\_END\_SIGNAL**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
AN-APDU	M	M(=)		
Provider error				O

#### 8.4.2.3 Parameter use

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### AN-APDU

For definition of this parameter see clause 7.6.9.

##### Provider error

For definition of this parameter see clause 7.6.1.

### 8.4.3 MAP\_PROCESS\_ACCESS\_SIGNALLING service

#### 8.4.3.1 Definition

This service is used between MSC-B and MSC-A (E-interface) to pass information received on the A-interface or Iu-interface in MSC-B to MSC-A.

The MAP\_PROCESS\_ACCESS\_SIGNALLING service is a non-confirmed service using the primitives from table 8.4/3.

#### 8.4.3.2 Service primitives

**Table 8.4/3: MAP\_PROCESS\_ACCESS\_SIGNALLING**

Parameter name	Request	Indication
Invoke Id	M	M(=)
AN-APDU	M	M(=)
Selected GSM Algorithm	C	C(=)
Selected UMTS Algorithms	C	C(=)
Chosen Radio Resource Information	C	C(=)
Selected RAB id	C	C(=)
Selected Codec	C	C(=)

#### 8.4.3.3 Parameter use

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### AN-APDU

For definition of this parameter see clause 7.6.9.

##### Selected GSM algorithm

For definition of this parameter see clause 7.6.6. This parameter shall be present if the encapsulated PDU is Security Mode Complete and MS is in GSM access.

##### Selected UMTS Algorithms

For definition of this parameter see clause 7.6.6. This parameters includes the UMTS integrity and optionally encryption algorithms selected by RNC under the control of MSC-B. This UMTS parameter shall be included if the encapsulated PDU is BSSMAP Cipher Mode Complete and the MS is in UMTS, or an intersystem handover to UMTS is performed in MSC-B, or in the case of intra MSC-B intra UMTS relocation.

##### Chosen Radio Resource Information

For definition of this parameter see clause 7.6.6. This parameter shall be sent if the encapsulated PDU is RANAP RAB Assignment Response and MS is in GSM access.

##### Selected RAB ID

The selected radio access bearer that was kept at subsequent intra-MSC handover from UMTS to GSM after multiple bearers were used.

##### Selected Codec

For definition of this parameter see subclause 7.6.6. This parameter shall be included if MSC-B changes the selected codec or in case of intersystem handover to UMTS is performed in MSC-B. This parameter shall not be included if Available Codecs List was not received either in the Prepare Handover service request or in the Forward Access Signalling service request.

#### 8.4.4 MAP\_FORWARD\_ACCESS\_SIGNALLING service

##### 8.4.4.1 Definition

This service is used between MSC-A and MSC-B (E-interface) to pass information to be forwarded to the A-interface or Iu-interface of MSC-B.

The MAP\_FORWARD\_ACCESS\_SIGNALLING service is a non-confirmed service using the primitives from table 8.4/4.

#### 8.4.4.2 Service primitives

**Table 8.4/4: MAP\_FORWARD\_ACCESS\_SIGNALLING**

Parameter name	Request	Indication
Invoke Id	M	M(=)
Integrity Protection Information	C	C(=)
Encryption Information	C	C(=)
Key Status	C	C(=)
AN-APDU	M	M(=)
Allowed GSM Algorithms	C	C(=)
Allowed UMTS Algorithms	C	C(=)
Radio Resource Information	C	C(=)
Radio Resource List	C	C(=)
BSSMAP Service Handover	C	C(=)
BSSMAP Service Handover List	C	C(=)
RANAP Service Handover	C	C(=)
Currently Used Codec	C	C(=)
Available Codecs List	C	C(=)
RAB Configuration Indicator	C	C(=)

#### 8.4.4.3 Parameter use

For the definition and use of all parameters and errors, see clause 7.6.1.

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### Integrity Protection Information

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if available and if the encapsulated PDU is BSSMAP Cipher Mode Command.

##### Encryption Information

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if available and if the encapsulated PDU is BSSMAP Cipher Mode Command.

##### Key Status

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if available and if the encapsulated PDU is BSSMAP Cipher Mode Command.

##### AN-APDU

For definition of this parameter see clause 7.6.9.

##### Allowed GSM Algorithms

This parameters includes allowed GSM algorithms. This GSM parameter shall be included if the encapsulated PDU is RANAP Security Mode Command and there is an indication that the UE also supports GSM.

**Allowed UMTS Algorithms**

For definition of this parameter see clause 7.6.6. This UMTS parameter shall be included if Integrity Protection Information and Encryption Information are not available and the encapsulated PDU is BSSMAP Cipher Mode Command.

**Radio Resource Information**

For definition of this parameter see clause 7.6.6. This parameter shall be sent if the encapsulated PDU is RANAP RAB Assignment Request. If the parameter Radio Resource List is sent, the parameter Radio Resource Information shall not be sent.

**Radio Resource List**

For definition of this parameter see clause 7.6.6. This parameter shall be sent if the encapsulated PDU is RANAP RAB Assignment Request and MSC-A requests modification of multiple bearers. If the parameter Radio Resource Information is sent, the parameter Radio Resource List shall not be sent.

**BSSMAP Service Handover**

For definition of this parameter see clause 7.6.6. It shall be present if it is available and the encapsulated PDU is RANAP RAB Assignment Request. If the parameter BSSMAP Service Handover List is sent, the parameter BSSMAP Service Handover shall not be sent.

**BSSMAP Service Handover List**

For definition of this parameter see clause 7.6.6. It shall be present if it is available and the encapsulated PDU is RANAP RAB Assignment Request and MSC-A requests modification of multiple bearers. If the parameter BSSMAP Service Handover is sent, the parameter BSSMAP Service Handover List shall not be sent.

**RANAP Service Handover**

For definition of this parameter see clause 7.6.6.. It shall be present if it is available and the encapsulated PDU is BSSMAP Assignment Request.

**Currently Used Codec**

For definition of this parameter see subclause 7.6.6. This parameter shall be included if the encapsulated PDU is RANAP RAB Assignment Request and the bearer is modified from data to speech. This parameter shall not be included if Available Codecs List is not included.

**Available Codecs List**

For definition of this parameter see subclause 7.6.6. This parameter shall be included if the encapsulated PDU is RANAP RAB Assignment Request and the bearer is modified from data to speech.

**RAB Configuration Indicator**

For definition of this parameter see subclause 7.6.6. This parameter may be included if the encapsulated PDU is RANAP RAB Assignment Request, the bearer is modified from data to speech and MSC-A knows by means of configuration information that MSC-B supports the use of Available Codecs List parameter. This parameter shall not be included if Available Codecs List is not included.

## 8.4.5 MAP\_PREPARE\_SUBSEQUENT\_HANDOVER service

### 8.4.5.1 Definition

This service is used between MSC-B and MSC-A (E-interface) to inform MSC-A that it has been decided that a handover or relocation to either MSC-A or a third MSC (MSC-B') is required.

The MAP\_PREPARE\_SUBSEQUENT\_HANDOVER service is a confirmed service using the primitives from table 8.4/5.

### 8.4.5.2 Service primitives

**Table 8.4/5: MAP\_PREPARE\_SUBSEQUENT\_HANDOVER**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Target Cell Id	C	C(=)		
Target RNC Id	C	C(=)		
Target MSC Number	M	M(=)		
Selected RAB ID	C	C(=)		
GERAN Classmark	C	C(=)		
RAB Configuration Indicator	C	C(=)		
AN-APDU	M	M(=)	C	C(=)
User error			C	C(=)
Provider error				O

### 8.4.5.3 Parameter use

#### Invoke Id

For definition of this parameter see clause 7.6.1.

#### Target Cell Id

For definition of this parameter see clause 7.6.2. This parameter shall be excluded if the service is a part of the Inter-MSC SRNS Relocation procedure or the inter-system handover GSM to UMTS procedure described in 3GPP TS 23.009.

#### Target RNC Id

For definition of this parameter see clause 7.6.2. This parameter shall be included if the service is a part of the Inter-MSC SRNS Relocation procedure or the inter-system handover GSM to UMTS procedure described in 3GPP TS 23.009.

#### Target MSC Number

For definition of this parameter see clause 7.6.2.

#### Selected RAB ID

For definition of this parameter see clause 7.6.2.

#### GERAN Classmark

For definition of this parameter see subclause 7.6.6 This parameter shall be included if available.

#### RAB Configuration Indicator

For definition of this parameter see subclause 7.6.6. This parameter may be included if the call is a speech call and MSC-B knows by means of configuration information that MSC-B' (and MSC-A) supports the use of Available Codecs List parameter.

#### AN-APDU

For definition of this parameter see clause 7.6.9.

#### User error

For definition of this parameter see clause 7.6.1. The following error causes defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown MSC;
- Subsequent handover failure;

- Unexpected data value;
- Data Missing.

#### Provider error

For definition of this parameter see clause 7.6.1.

### 8.4.6 MAP\_ALLOCATE\_HANDOVER\_NUMBER service

#### 8.4.6.1 Definition

This service is used between MSC and VLR (B-interface) to request a handover number.

The MAP\_ALLOCATE\_HANDOVER\_NUMBER service is a confirmed service using the primitives from table 8.4/6.

#### 8.4.6.2 Service primitives

**Table 8.4/6: MAP\_ALLOCATE\_HANDOVER\_NUMBER**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
User error			C	C(=)
Provider error				O

#### 8.4.6.3 Parameter use

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### User error

For definition of this parameter see clause 7.6.1. The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- No handover number available.

##### Provider error

For definition of this parameter see clause 7.6.1.

### 8.4.7 MAP\_SEND\_HANDOVER\_REPORT service

#### 8.4.7.1 Definition

This service is used between VLR and MSC-B (B-interface) to transfer the handover number to be forwarded to and used by MSC-A.

The MAP\_SEND\_HANDOVER\_REPORT service is a confirmed service using the primitives from table 8.4/7.

#### 8.4.7.2 Service primitives

**Table 8.4/7: MAP\_SEND\_HANDOVER\_REPORT**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Handover Number	M	M(=)		
Linked Id	M	M(=)		
Provider error				O

#### 8.4.7.3 Parameter use

##### Invoke Id

For definition of this parameter see clause 7.6.1.

##### Handover Number

For definition of this parameter see clause 7.6.2.

##### Linked Id

For definition of this parameter see clause 7.6.1. This service is linked with MAP\_ALLOCATE\_HANDOVER\_NUMBER.

##### Provider error

For definition of this parameter see clause 7.6.1.

## 8.5 Authentication management services

### 8.5.1 MAP\_AUTHENTICATE service

The MAP\_AUTHENTICATE service is used on the MAP B interface. This interface is not fully operational specified. It is strongly recommended not to implement the B-interface as an external interface.

#### 8.5.1.1 Definition

This service is used between the VLR and the MSC when the VLR receives a MAP service indication from the MSC concerning a location registration, call set-up, operation on a supplementary service or a request from the MSC to initiate authentication.

The service is a confirmed service and consists of four service primitives.

#### 8.5.1.2 Service primitives

The service primitives are shown in table 8.5/1.

**Table 8.5/1: MAP\_AUTHENTICATE parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
RAND	M	M(=)		
CKSN	M	M(=)		
SRES			M	M(=)
Provider error				O

### 8.5.1.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### RAND

See clause 7.6.7 for the use of this parameter.

#### CKSN

See clause 7.6.7 for the use of this parameter.

#### SRES

See clause 7.6.7 for the use of this parameter.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 8.5.2 MAP\_SEND\_AUTHENTICATION\_INFO service

### 8.5.2.1 Definition

This service is used between the VLR and the HLR for the VLR to retrieve authentication information from the HLR. The VLR requests up to five authentication vectors.

Also this service is used between the SGSN and the HLR for the SGSN to retrieve authentication information from the HLR. The SGSN requests up to five authentication vectors.

If the user is a UMTS subscriber, the HLR shall return authentication quintuplets. If the user is a GSM subscriber, the HLR shall return authentication triplets.

If the HLR cannot provide the VLR or the SGSN with triplets, an empty response is returned. The VLR or the SGSN may then re-use old authentication triplets, except where this is forbidden under the conditions specified in 3GPP TS 43.020 [24].

If the HLR cannot provide the VLR or the SGSN with quintuplets, an empty response is returned. The VLR or the SGSN shall not re-use old authentication quintuplets.

If the VLR or SGSN receives a MAP\_SEND\_AUTHENTICATION\_INFO response containing a User Error parameter as part of the handling of an authentication procedure, the authentication procedure in the VLR or SGSN shall fail.

Security related network functions are further described in 3GPP TS 43.020 [24] and 3GPP TS 33.200.

The service is a confirmed service and consists of four service primitives.

### 8.5.2.2 Service primitives

The service primitives are shown in table 8.5/2.

**Table 8.5/2: MAP\_SEND\_AUTHENTICATION\_INFO parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
Number of requested vectors	C	C(=)		
Requesting node type	C	C(=)		
Re-synchronisation Info	C	C(=)		
Segmentation prohibited indicator	C	C (=)		
Immediate response preferred indicator	U	C (=)		
AuthenticationSetList			C	C(=)
User error			C	C(=)

Provider error				O
----------------	--	--	--	---

### 8.5.2.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### IMSI

See clause 7.6.2 for the use of this parameter.

This parameter shall be present in the first (or only) request of the dialogue. If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one.

#### Number of requested vectors

A number indicating how many authentication vectors the VLR or SGSN is prepared to receive. The HLR shall not return more vectors than indicated by this parameter.

This parameter shall be present in the first (or only) request of the dialogue. If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one.

#### Requesting node type

The type of the requesting node (SGSN or VLR).

This parameter shall be present in the first (or only) request of the dialogue. If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one.

#### Re-synchronisation Info

For definition and use of this parameter see 3GPP TS 33.200.

If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one..

#### Segmentation prohibited indicator

This parameter indicates if the VLR or SGSN allows segmentation of the response at MAP user level.

This parameter may be present only in the first request of the dialogue.

#### Immediate response preferred indicator

This parameter indicates that one of the requested authentication vectors is requested for immediate use in the VLR or SGSN. It may be used by the HLR together with the number of requested vectors and the number of vectors stored in the HLR to determine the number of vectors to be obtained from the AuC. It shall be ignored if the number of available vectors is greater than the number of requested vectors.

If multiple service requests are present in a dialogue then this parameter shall not be present in any service request other than the first one.

#### AuthenticationSetList

A set of one to five authentication vectors are transferred from the HLR to the VLR or from the HLR to the SGSN, if the outcome of the service was successful.

#### User error

One of the following error causes defined in clause 7.6.1 shall be sent by the user in case of unsuccessful outcome of the service, depending on the respective failure reason:

- unknown subscriber;
- unexpected data value;

- system failure;
- data missing.

#### Provider error

See clause 7.6.1 for the use of this parameter.

### 8.5.3 MAP\_AUTHENTICATION\_FAILURE\_REPORT service

#### 8.5.3.1 Definition

This service is used between the VLR and the HLR or between the SGSN or HLR for reporting of authentication failures.

#### 8.5.3.2 Service primitives

The service primitives are shown in table 8.5/3.

**Table 8.5/3: MAP\_AUTHENTICATION\_FAILURE\_REPORT parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
Failure cause	M	M(=)		
Re-attempt	M	M(=)		
Access Type	M	M(=)		
Rand	M	M(=)		
VLR number	C	C(=)		
SGSN number	C	C(=)		
User error			C	C(=)
Provider error				O

#### 8.5.3.3 Parameter use

##### Invoke id

See clause 7.6.1 for the use of this parameter.

##### IMSI

See clause 7.6.2 for the use of this parameter.

##### Failure Cause

See clause 7.6.7 for use of this parameter.

##### Re-attempt

See clause 7.6.7 for use of this parameter.

##### Access Type

See clause 7.6.7 for use of this parameter.

##### Rand

This parameter identifies the specific AV that failed authentication.

See clause 7.6.7 for use of this parameter.

##### VLR number

Shall be present if the sender is VLR. See definition in clause 7.6.2.

#### SGSN number

Shall be present if the sender is SGSN. See definition in clause 7.6.2.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- Unknown Subscriber;
- System Failure;
- Unexpected Data Value.

#### Provider error

These are defined in clause 7.6.

## 8.6 Security management services

### 8.6.1 MAP\_SET\_CIPHERING\_MODE service

#### 8.6.1.1 Definitions

This service is used between the VLR and the MSC to set the ciphering mode and to start ciphering if applicable. It is called when another service requires that information is to be sent on the radio path in encrypted form.

The service is a non-confirmed service and consists of two service primitives.

#### 8.6.1.2 Service primitives

The service primitives are shown in table 8.6/1.

**Table 8.6/1: MAP\_SET\_CIPHERING\_MODE parameters**

Parameter name	Request	Indication
Invoke id	M	M(=)
Ciphering mode	M	M(=)
Kc	C	C(=)

#### 8.6.1.3 Parameter use

##### Invoke id

See clause 7.6.1 for the use of this parameter.

##### Ciphering mode

See clause 7.6.7 for the use of this parameter.

##### Kc

The Kc parameter should be included when the ciphering mode parameter indicates that ciphering must be performed.

## 8.7 International mobile equipment identities management services

## 8.7.1 MAP\_CHECK\_IMEI service

### 8.7.1.1 Definition

This service is used between the VLR and the MSC and between the MSC and the EIR and between the SGSN and EIR to request check of IMEI. If the IMEI is not available in the MSC or in the SGSN, it is requested from the MS and transferred to the EIR in the service request.

The service is a confirmed service and consists of four service primitives.

### 8.7.1.2 Service primitives

The service primitives are shown in table 8.7/1.

**Table 8.7/1: MAP\_CHECK\_IMEI parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMEI	C	C(=)	C	C(=)
Equipment status			C	C(=)
User error			C	C(=)
Provider error			O	

### 8.7.1.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### IMEI

See clause 7.6.2 for the use of this parameter. The parameter shall not be included in the service request between the VLR and the MSC, but is mandatory in the service request from the MSC to the EIR and from the SGSN to the EIR. It is not included in the service response from the EIR to the MSC or to the SGSN, but is mandatory in the service response from the MSC to the VLR on successful outcome.

#### Equipment status

See clause 7.6.4 for the use of this parameter. This parameter is sent by the responder in case of successful outcome of the service.

#### User error

One of the following error causes defined in clause 7.6.1 shall be sent by the user in case of unsuccessful outcome of the service, depending on the respective failure reason:

- unknown equipment;  
this error is returned by the responder when the IMEI is not known in the EIR;
- system failure;
- unexpected data value.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 8.7.2 MAP\_OBTAIN\_IMEI service

### 8.7.2.1 Definition

This service is used between the VLR and the MSC to request the IMEI. If the IMEI is not available in the MSC, it is requested from the MS.

The service is a confirmed service and consists of four service primitives.

### 8.7.2.2 Service primitives

The service primitives are shown in table 8.7/2.

**Table 8.7/2: MAP\_OBTAIN\_IMEI parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMEI			C	C(=)
User error			C	C(=)
Provider error				O

### 8.7.2.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### IMEI

See clause 7.6.2 for the use of this parameter. The parameter is included in the service response from the MSC to the VLR on successful outcome of the service.

#### User error

If the service fails, the VLR sends the user error System Failure (see clause 7.6.1) to the MSC.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 8.8 Subscriber management services

### 8.8.1 MAP-INSERT-SUBSCRIBER-DATA service

#### 8.8.1.1 Definition

This service is used by an HLR to update a VLR with certain subscriber data in the following occasions:

- the operator has changed the subscription of one or more supplementary services, basic services or data of a subscriber. Note that in case of withdrawal of a Basic or Supplementary service this primitive shall not be used;
- the operator has applied, changed or removed Operator Determined Barring;
- the subscriber has changed data concerning one or more supplementary services by using a subscriber procedure;
- the HLR provides the VLR with subscriber parameters at location updating of a subscriber or at restoration. In this case, this service is used to indicate explicitly that a supplementary service is not provisioned, if the supplementary service specification requires it. The only supplementary services which have this requirement are the CLIR and COLR services. Network access mode is provided only in restoration. If the Super-Charger functionality is supported the HLR may not need to provide the VLR with subscriber parameters at location updating of a subscriber. See TS 23.116.

Also this service is used by an HLR to update an SGSN with certain subscriber data in the following occasions:

- if the GPRS subscription has changed;

- if the network access mode is changed;
- the operator has applied, changed or removed Operator Determined Barring;
- the subscriber has changed data concerning one or more supplementary services by using a subscriber procedure;
- the HLR provides the SGSN with subscriber parameters at GPRS location updating of a subscriber. If the Super-Charger functionality is supported the HLR may not need to provide the SGSN with subscriber parameters. See 3GPP TS 23.116.

It is a confirmed service and consists of the primitives shown in table 8.8/1.

### 8.8.1.2 Service primitives

**Table 8.8/1: MAP-INSERT-SUBSCRIBER-DATA**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
MSISDN	C	C(=)		
Category	C	C(=)		
Subscriber Status	C	C(=)		
Bearer service List	C	C(=)	C	C(=)
Teleservice List	C	C(=)	C	C(=)
Forwarding information List	C	C(=)		
Call barring information List	C	C(=)		
CUG information List	C	C(=)		
SS-Data List	C	C(=)		
eMLPP Subscription Data	C	C(=)		
MC-Subscription Data	C	C(=)		
Operator Determined Barring General data	C	C(=)	C	C(=)
Operator Determined Barring HPLMN data	C	C(=)		
Roaming Restriction Due To Unsupported Feature	C	C(=)		
Regional Subscription Data	C	C(=)		
VLR CAMEL Subscription Info	C	C(=)		
Voice Broadcast Data	C	C(=)		
Voice Group Call Data	C	C(=)		
Network access mode	C	C(=)		
GPRS Subscription Data	C	C(=)		
Roaming Restricted In SGSN Due To Unsupported Feature	C	C(=)		
North American Equal Access preferred Carrier Id List	U	C(=)		
SGSN CAMEL Subscription Info	C	C(=)		
LSA Information	C	C(=)		
IST Alert Timer	C	C(=)		
SS-Code List			C	C(=)
LMU Identifier	C	C(=)		
LCS Information	C	C(=)		
CS Allocation/Retention priority	C	C(=)		
Super-Charger Supported In HLR	C	C(=)		
Regional Subscription Response			C	C(=)
Supported CAMEL Phases			C	C (=)
Offered CAMEL 4 CSIs			C	C (=)
User error			U	C(=)
Provider error				O

### 8.8.1.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable:

Network access mode

This parameter defines if the subscriber has access to MSC/VLR and/or to SGSN. This parameter is used by SGSN and MSC/VLR. In VLR, the parameter is used only as part of Restore Data Procedure and the parameter is not stored in the VLR. This parameter shall always be sent to the SGSN as part of the GPRS subscriber data at GPRS location updating. It shall be sent to the SGSN if it is changed as a result of administrative action.

#### IMSI

It is only included if the service is not used in an ongoing transaction (e.g. location updating). This parameter is used by the VLR and the SGSN.

#### MSISDN

It is included either at location updating or when it is changed. The MSISDN sent shall be the basic MSISDN. This parameter is used by the VLR and the SGSN.

#### Category

It is included either at location updating or when it is changed. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Subscriber Status

It is included either at location updating or when it is changed.

To apply, remove or update Operator Determined Barring Categories the Subscriber Status is set to Operator Determined Barring. In this case ODB General Data shall also be present. If the Operator Determined Barring applies and the subscriber is registered in the HPLMN and HPLMN specific Operator Determined Barring applies then ODB HPLMN Specific Data shall also be present.

To remove all Operator Determined Barring Categories the Subscriber Status shall be set to "Service Granted". This parameter is used by the VLR and the SGSN.

#### Bearer service List

A list of Extensible Bearer service parameters (Extensible Bearer service is defined in clause 7.6). An Extensible Bearer service parameter must be the code for an individual Bearer service, except in the cases described below.

The codes for the Bearer service groups "allAlternateSpeech-DataCDA" and "allAlternateSpeech-DataCDS" shall, if applicable, be sent from the HLR to the VLR as a pair. The codes for the Bearer service groups "allSpeechFollowedByDataCDA" and "allSpeechFollowedByDataCDS" shall, if applicable, be sent from the HLR to the VLR as a pair.

If it is included in the Request/Indication, it includes either all Extensible Bearer services subscribed (at location updating or at restoration) or only the ones added (at subscriber data modification).

If the VLR receives an Indication containing any Extensible Bearer service parameters which it does not support/allocate it returns them in the response to the HLR and discards the unsupported Extensible Bearer services (no error is sent back), except in the cases described below.

If the VLR receives the codes for the Bearer service groups "allSpeechFollowedByDataCDA" and "allSpeechFollowedByDataCDS" and supports one or more of the circuit-switched synchronous or asynchronous data rates specified for simple data bearer services, it shall accept the bearer service codes, and not return them in the response to the HLR. If the VLR does not support any of the circuit-switched synchronous or asynchronous data rates specified for simple data bearer services, and receives the pair of codes for "allAlternateSpeech-DataCDA" and "allAlternateSpeech-DataCDS" or the pair of codes for "allSpeechFollowedByDataCDA" and "allSpeechFollowedByDataCDS", it shall reject the pair of codes by returning them in the response to the HLR. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Teleservice List

A list of Extensible Teleservice parameters (Extensible Teleservice is defined in clause 7.6). An Extensible Teleservice parameter must be the code for an individual Teleservice.

If it is included in the Request/Indication, it contains either all Extensible Teleservices subscribed (at location updating or at restoration) or the ones added (at subscriber data modification). Only the Extensible Teleservices that are relevant to the node at which the message is received should be included in the Teleservice List.

If the VLR or the SGSN receives an Indication containing any Extensible Teleservice parameters which it does not support/allocate it returns them in the response to the HLR and discards the unsupported Extensible Teleservices (no error is sent back). This parameter is used by the VLR and the SGSN.

#### Forwarding information List

A list of Extensible Forwarding information parameters (Extensible Forwarding information is defined in clause 7.6). It includes Call Forwarding services either at location updating or at restoration or when they are changed. Each Extensible Forwarding information parameter shall be treated independently of all other parameters in the primitive.

The Extensible Forwarding information shall include the SS-Code for an individual call forwarding supplementary service. The Extensible Forwarding information shall contain one or more Extensible Forwarding Features (Extensible Forwarding Feature is defined in clause 7.6).

The Extensible Forwarding Feature may include an Extensible Basic Service Group. This shall be interpreted according to the rules in clause 8.8.1.4.

The Extensible Forwarding Feature shall contain an Extensible SS-Status parameter.

If the Extensible SS-Status indicates that call forwarding is registered then (except for call forwarding unconditional) the Extensible Forwarding Feature shall contain a number to define the forwarded-to destination and, if available, the forwarded-to subaddress. In other states the forwarded-to number and, if applicable, the forwarded-to subaddress shall not be included. For call forwarding unconditional the forwarded-to number and, if applicable, the forwarded-to subaddress shall not be included. If the VLR does not receive a forwarded-to subaddress then it shall assume that a forwarded-to subaddress has not been registered.

The Extensible Forwarding Feature shall contain the extensible forwarding options (except for call forwarding unconditional where the extensible forwarding options shall not be included). Bits 3 and 4 of the extensible forwarding options shall be ignored by the VLR, and may be set to any value by the HLR.

For call forwarding on no reply: If the extensible SS-Status indicates that call forwarding is registered then the Extensible Forwarding Feature shall contain an extensible no reply condition timer. In other states the no reply condition timer shall not be included.

For call forwarding services other than call forwarding on no reply: The Extensible Forwarding Feature shall not contain a no reply condition timer.

If the VLR receives an Indication containing any Call Forwarding service codes which it does not support/allocate it returns them to the HLR in the parameter SS-Code List and discards the unsupported Call Forwarding service codes (no error is sent back). This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Call barring information List

A list of Extensible Call barring information parameters (Extensible Call barring information is defined in clause 7.6). It includes Call Barring services either at location updating or at restoration or when they are changed. Each Extensible Call barring information parameter shall be treated independently of all other parameters in the primitive.

The Extensible Call barring information shall include the SS-Code for an individual call barring supplementary service. The Extensible Call barring information shall contain one or more Extensible Call Barring Features (Extensible Call Barring Feature is defined in clause 7.6).

The Extensible Call Barring Feature may include an Extensible Basic Service Group. This shall be interpreted according to the rules in clause 8.8.1.4.

The Extensible Call Barring Feature shall contain an extensible SS-Status parameter.

If the VLR receives an Indication containing any Extensible Call Barring service codes which it does not support/allocate it returns them to the HLR in the parameter SS-Code List and discards the unsupported Extensible Call Barring service codes (no error is sent back). This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### CUG information List

A list of CUG information list parameters (CUG information is defined in clause 7.6). It includes CUG information either at location updating or at restoration or when it is changed.

At location updating, restoration or when there is a change in CUG data, the HLR shall include the complete CUG-SubscriptionList and, if there are options per basic group, it shall also include the complete CUG-FeatureList. If there are not options per extensible basic service group the CUG-FeatureList shall not be included.

In any dialogue, the first insertSubscriberData message which contains CUG information shall include a non-empty CUG-SubscriptionList.

When the VLR receives CUG data it shall replace the stored CUG data with the received data set.

If CUG-FeatureList is omitted in the Insert Subscriber Data operation VLR shall interpret that no options per extensible basic service group exist, and then it shall apply the default values i.e. no outgoing access, no incoming access, no preferential CUG exists.

If CUG-Feature is received without preferential CUG, the VLR shall interpret that no preferential CUG applies.

If the VLR detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value.

Note that data consistency between CUG subscription data and CUG feature data is the responsibility of the HLR.

If the VLR does not support the CUG service it returns its code to the HLR in the parameter SS-Code List and discards the received information (no error is sent back). This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### SS-Data List

A list of Extensible SS-Data parameters (Extensible SS-Data is defined in clause 7.6). It is sent for any other supplementary service than Call Forwarding, Call Barring, CUG and eMLPP either at location updating or at restoration or when they are changed. Each SS-Data parameter shall be treated independently of all other parameters in the primitive.

The Extensible SS-Data shall include the SS-Code for an individual supplementary service.

The Extensible SS-Data shall contain an Extensible SS-Status parameter and any subscription options that are applicable to the service defined by the SS-Code.

The SS-Data may include a Basic Service Group List. This shall be interpreted according to the rules in clause 8.8.1.4.

If the VLR receives an Indication containing any supplementary service codes which it does not support/allocate it returns them to the HLR in the parameter SS-Code List and therefore discards the unsupported service codes received (no error is sent back)

This parameter is used by the SGSN only for LCS. If the SGSN receives an Indication containing any LCS related supplementary service codes which it does not support/allocate it returns them to the HLR in the parameter SS-Code List and therefore discards the unsupported service codes received (no error is sent back). SS-codes not related to the supported LCS capability set shall be discarded.

#### Operator Determined Barring General data

If it is included in a Request/Indication, it includes all the Operator Determined Barring categories that may be applied to a subscriber registered in any PLMN. This parameter is only included in a Request/Indication when the parameter Subscriber Status is set to the value Operator Determined Barring. Note that all General Operator Determined Barring Categories shall be set to their actual status.

If the VLR or the SGSN receives an Indication containing Operator Determined Barring General Data which shows that the subscriber is subject to barring not supported / not allocated by the VLR or by the SGSN, it returns Operator Determined Barring General Data in the response to the HLR to show the barring categories which are not supported / not allocated by the VLR or by the SGSN. This parameter is used by the VLR and the SGSN.

#### Operator Determined Barring HPLMN data

It includes all the Operator Determined Barring categories that may be applied only to a subscriber registered in the HPLMN. Therefore, it shall only be transferred to the VLR or to the SGSN when the subscriber is roaming into the HPLMN and when the parameter Subscriber Status is set to the value Operator Determined Barring. Note that all HPLMN Operator Determined Barring Categories shall be set to their actual status.

If Subscriber Status is set to the value Operator Determined Barring and no Operator Determined Barring HPLMN data is present then the VLR or the SGSN shall not apply any HPLMN specific ODB services to the subscriber. This parameter is used by the VLR and the SGSN.

#### eMLPP Subscription Data

If included in the Insert Subscriber Data request this parameter defines the priorities the subscriber might apply for a call (as defined in clause 7.6). It contains both subparameters of eMLPP.

If the VLR does not support the eMLPP service it returns its code to the HLR in the parameter SS-Code List and therefore discards the received information (no error is sent back).

eMLPP subscription data that have been stored previously in a subscriber data record in the VLR are completely replaced by the new eMLPP subscription data received in a MAP\_INSERT\_SUBSCRIBER\_DATA during either an Update Location or Restore Data procedure or a stand alone Insert Subscriber data procedure. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### MC Subscription Data

If included in the Insert Subscriber Data request, this parameter provides the MC Subscription Data as defined in clause 7.6.

If the VLR does not support the MC service, it returns its code to the HLR in the parameter SS-Code List and therefore discards the received information (no error is sent back).

MC subscription data that have been stored previously in a subscriber data record in the VLR are completely replaced by the new MC subscription data received in a MAP\_INSERT\_SUBSCRIBER\_DATA during either an Update Location or Restore Data procedure or a stand alone Insert Subscriber data procedure. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Roaming Restriction Due To Unsupported Feature

The HLR may decide to include this parameter in the request if certain services or features are indicated as not supported by the MSC/VLR (e.g. Advice of Charge Charging Level).

If this parameter is sent to the VLR the MSC area is restricted by the HLR and the VLR. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Regional Subscription Data

If included in the Insert Subscriber Data request this parameter defines the subscriber's subscription area for the addressed VLR or for the addressed SGSN (as defined in clause 7.6). It contains the complete list of up to 10 Zone Codes that apply to a subscriber in the currently visited PLMN. The HLR shall send only those Zone Codes which are stored against the CC and NDC of the VLR or the CC and NDC of the SGSN to be updated.

NOTE: Support of this parameter is a network operator option and it will not be sent to networks which do not support Regional Subscription.

Regional subscription data that have been stored previously in a subscriber data record in the VLR or in the SGSN are completely replaced by the regional subscription data received in an Insert Subscriber Data indication during either an Update Location or Restore Data procedure or a stand alone Insert Subscriber data procedure.

After the regional subscription data are inserted the VLR or the SGSN shall derive whether its location areas are allowed or not. If the whole MSC or SGSN area is restricted it will be reported to HLR by returning the Regional Subscription Response.

The VLR or the SGSN returns a Regional Subscription Response indicating that a problem with the Zone Code has been detected in one of the following cases:

- Too Many Zone Codes: more than 10 Zone Codes are to be stored in the VLR or in the SGSN.
- Regional Subscription Not Supported by the VLR or the SGSN.
- Zone Codes Conflict: the VLR or the SGSN detects that the zone codes indicate conflicting service permission for a location area.

Zone codes which have no mapping to location areas shall be ignored.

If a sequence of MAP\_INSERT\_SUBSCRIBER\_DATA services is used during a dialogue, Regional Subscription Data shall be accepted only in one service. Regional Subscription Data received in a subsequent service shall be rejected with the error Unexpected Data Value.

If Regional Subscription Data are not included in any MAP\_INSERT\_SUBSCRIBER\_DATA service, there is no restriction of roaming due to Regional Subscription. This parameter is used by the VLR and the SGSN.

#### Voice Broadcast Data

This parameter contains a list of group id's a user might have subscribed to; (VBS-Data is defined in clause 7.6). It includes VBS information either at location updating or at restoration or when it is changed.

At location updating, restoration or when there is a change in VBS data, the HLR shall include the complete VBS-Data.

When the VLR receives VBS-Data within a dialogue it shall replace the stored VBS-data with the received data set. All subsequent VBS-data received within this dialogue shall be interpreted as add-on data.

If VBS-data is omitted in the Insert Subscriber Data operation the VLR shall keep the previously stored VBS data.

If the VLR detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Voice Group Call Data

This parameter contains a list of group id's a user might have subscribed to; see clause 7.6.

At location updating, restoration or when there is a change in VGCS data, the HLR shall include the complete VGCS-Data.

When the VLR receives VGCS-Data within a dialogue it shall replace the stored VGCS-Data with the received data set. All VGCS-Data received within this dialogue shall be interpreted as add-on data.

If VGCS-Data is omitted in the Insert Subscriber Data operation the VLR shall keep the previously stored VGCS-Data.

If the VLR detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### North American Equal Access preferred Carrier Id List

A list of the preferred carrier identity codes that are subscribed to.

When the VLR receives this parameter from the HLR, it shall replace the previously stored preferred carrier identity codes with the received ones. It is not possible to delete all the preferred carrier identity codes from the VLR using this service. To delete all the preferred carrier identity codes from the VLR, the HLR shall use the MAP\_CANCEL\_LOCATION service.

#### LSA Information

If included in the ISD request, this parameter contains a list of localised service area identities a user might have subscribed to together with the priority, the preferential access indicator, the active mode support indicator and active mode indication of each localised service area; see clause 7.6. The access right outside these localised service areas is also indicated. In all cases mentioned below, the LSA information shall only include LSA Data applicable to the VPLMN where the Subscriber is located. The VLR number, received in the MAP-UPDATE\_LOCATION primitive, or the SGSN number, received in the MAP\_UPDATE\_GPRS\_LOCATION primitive, can be used, alongside data stored in the HLR, to determine the LSA Data applicable to the VPLMN.

At restoration, location updating or GPRS location updating the HLR shall include the complete set of applicable LSA Information.

When there is a change in LSA data the HLR shall include at least the new and/or modified LSA data.

When there is a change in the access right outside the localised service areas the HLR shall include the LSA only access indicator.

When the SGSN or the VLR receives LSA information within a dialogue it shall check if the received data has to be considered as the entire LSA information. If so, it shall replace the stored LSA information with the received data set, otherwise it shall replace the data only for the modified LSA data (if any) and/or access right, and add the new LSA data (if any) to the stored LSA Information.

If the entire LSA information is received, it shall always include the LSA only access indicator value together with the LSA data applicable for the PLMN (if any).

If LSA Information is omitted in the Insert Subscriber Data operation the SGSN or the VLR shall keep the previously stored LSA Information.

If the SGSN or the VLR detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value. This parameter is used by the VLR and the SGSN.

#### IST Alert Timer

This parameter contains the IST Alert timer value that must be used to inform the HLR about the call activities that the subscriber performs.

At Location Updating, restoration, or when there is a change in the IST data defined for the Subscriber, the HLR shall include the IST Alert timer.

#### LMU Identifier

This parameter indicates the presence of an LMU. This parameter is used only by the VLR and shall be ignored if received by an SGSN.

#### LCS Information

This parameter provides the following LCS related information for an MS subscriber:

- list of GMLCs in the HPLMN;
- privacy exception list;
- MO-LR list.

At restoration and location updating, the HLR shall include the complete LCS data of the subscriber.

When there is a change in LCS subscriber data the HLR shall include at least the new and/or modified LCS data. LCS data that is not modified need not be included.

The VLR/SGSN shall keep any previously stored LCS Information that is not included in an Insert Subscriber Data operation.

If the VLR/SGSN detects that there is overlapping in the LCS information received within a dialogue, it shall send the error Unexpected Data Value.

#### Super-Charger Supported In HLR

This parameter is used by the HLR to indicate support for the Super-Charger functionality. If this parameter is present it shall include an indication of the age of the subscription data stored in the HLR.

If this parameter is absent then the HLR does not support the Super-Charger functionality.

#### SS-Code List

The list of SS-Code parameters for the services that are provided to a subscriber but are not supported/allocated by the VLR (SS-Code is defined in clause 7.6). The list can only include individual SS-Codes that were sent in the service request and SS-Codes for the eMLPP and/or CUG services if the above mentioned conditions, as described in eMLPP Subscription Data and/or CUG information List, are met (that is, eMLPP Subscription Data and/or CUG information List are received). This parameter is used by only the VLR.

#### Regional Subscription Response

If included in the response this parameter indicates one of:

- MSC Area Restricted entirely because of regional subscription;
- SGSN Area Restricted entirely because of regional subscription;
- Too Many Zone Codes to be inserted;
- Zone Codes Conflict;
- Regional Subscription not Supported by the VLR or by the SGSN.

If the VLR determines after insertion of Regional Subscription Data that the entire MSC area is restricted, the VLR shall respond with a Regional Subscription Response indicating MSC Area Restricted. Otherwise MSC Area Restricted is not sent. The HLR shall check whether the current MSC area is no longer restricted.

If the SGSN determines after insertion of Regional Subscription Data that the entire SGSN area is restricted, the SGSN shall respond with a Regional Subscription Response indicating SGSN Area Restricted. Otherwise SGSN Area Restricted is not sent. The HLR shall check whether the current SGSN area is no longer restricted. This parameter is used by the VLR and by the SGSN.

#### VLR CAMEL Subscription Info

This parameter is sent for subscribers who have CAMEL services which are invoked in the MSC.

- In CAMEL phase 1, this parameter contains only the O-CSI.
- In CAMEL Phase 2, this parameter may contain O-CSI, SS-CSI and TIF-CSI. In CAMEL Phase 2 and onwards, TDP-Criteria for O-CSI may be associated with O-CSI.
- In CAMEL Phase 3, this parameter may contain O-CSI, D-CSI, SS-CSI, VT-CSI, MO-SMS-CSI, M-CSI and TIF-CSI. In CAMEL Phase 3 and onwards, TDP-Criteria for VT-CSI may be associated with VT-CSI.
- In CAMEL Phase 4, this parameter may contain O-CSI, D-CSI, SS-CSI, VT-CSI, MO-SMS-CSI, MT-SMS-CSI, M-CSI and TIF-CSI. In CAMEL Phase 4, TDP-Criteria for MT-SMS-CSI may be associated with MT-SMS-CSI.

The VLR CAMEL Subscription Info is sent at location updating or when any information in the applicable CAMEL Subscription Info in the HLR has been changed.

At location updating, the complete set of VLR CAMEL Subscription Info is sent in one dialogue.

When CAMEL Subscription Information is changed in the HLR and changed data have to be sent to the VLR, then:

- for CAMEL Phase 1 and CAMEL Phase 2, the complete set of VLR CAMEL Subscription Info is sent in one dialogue;
- for CAMEL Phase 3 or higher, one or more specific elements of VLR CAMEL Subscription Info are sent in one dialogue.

When the VLR receives a specific element of VLR CAMEL Subscription Info, it shall overwrite the corresponding specific element of VLR CAMEL Subscription Info (if any) which it has stored for that subscriber.

For CAMEL Phase 1 and CAMEL Phase 2 , the VLR CAMEL Subscription Info consists of any one or more of:

- O-CSI (irrespective of the value of the “CAMEL Capability Handling” inside O-CSI),TDP-Criteria for O-CSI,SS-CSI and TIF-CSI.  
(The complete set of above shall be sent even if only one CSI has changed in case of stand alone ISD. The omitted elements of above list will be withdrawn in the VLR.)

From CAMEL phase 3 onwards, the specific elements of VLR CAMEL Subscription Info which may be sent are:

- O-CSI (irrespective of the value of the “CAMEL Capability Handling” inside O-CSI), TDP criteria for O-CSI, SS-CSI and TIF-CSI;

(The complete set of above shall be sent even if only one CSI has changed in case of stand alone ISD. The omitted elements of above list will be withdrawn in the VLR.)

- D-CSI;
- VT-CSI;
- TDP-Criteria for VT-CSI;
- MO-SMS-CSI;
- MT-SMS-CSI;
- TDP-Criteria for MT-SMS-CSI;
- M-CSI.

If the VLR CAMEL Subscription Info is omitted in the Insert Subscriber Data operation the VLR shall keep the previously stored VLR CAMEL Subscription Info. Within one dialogue subsequent received data are interpreted as add-on data. If the VLR detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

The VLR CAMEL Subscription Info may contain the TIF-CSI (Translation Information Flag) for CAMEL Phase 2 and higher. See 3GPP TS 23.072 for the use of this parameter and the conditions for its presence.

#### Supported CAMEL Phases

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078. This parameter is used by the VLR and SGSN.

A VLR or SGSN not supporting any CAMEL Phase may omit this parameter.

#### GPRS Subscription Data

This parameter contains a list of PDP-contexts a user has subscribed to; see clause 7.6.

At GPRS location updating the HLR shall include the complete GPRS Subscription Data.

When there is a change in GPRS subscriber data the HLR shall include only the new and/or modified PDP contexts.

When the SGSN receives GPRS Subscription Data within a dialogue it shall check if the received data has to be considered as the entire GPRS subscription data. If so, it shall replace the stored GPRS Subscription Data with the received data set, otherwise it shall replace the data only for the modified PDP contexts (if any) and add the new PDP contexts (if any) to the stored GPRS Subscription Data.

If GPRS Subscription Data is omitted in the Insert Subscriber Data operation the SGSN shall keep the previously stored GPRS Subscription Data.

If the SGSN detects that there is overlapping in the information received within a dialogue, it shall send the error Unexpected Data Value. This parameter is used only by the SGSN and if the VLR receives this parameter it shall ignore it.

#### SGSN CAMEL Subscription Info

The SGSN CAMEL Subscription Info is sent at GPRS location updating or when any information in the applicable SGSN CAMEL Subscription Info in the HLR has been changed.

- In CAMEL Phase 3, this parameter may contain one or both of GPRS-CSI and MO-SMS-CSI.
- In CAMEL Phase 4, this parameter may contain GPRS-CSI, MO-SMS-CSI and MT-SMS-CSI and TDP-Criteria for MT-SMS-CSI.

At GPRS location updating the complete set of SGSN CAMEL Subscription Info is sent.

When CAMEL Subscription Information is changed in the HLR and changed data have to be sent to the SGSN, then one or more specific elements of SGSN CAMEL Subscription Info are sent in one dialogue.

When the SGSN receives a specific element of SGSN CAMEL Subscription Info, it shall overwrite the corresponding specific element of SGSN CAMEL Subscription Info (if any) which it has stored for that subscriber.

The specific elements of SGSN CAMEL Subscription Info which may be sent are:

- MO-SMS-CSI;
- MT-SMS-CSI;
- TDP-Criteria for MT-SMS-CSI;
- GPRS-CSI;
- MC-CSI.

This parameter is used only by the SGSN and if the VLR receives this parameter it shall ignore it.

#### Roaming Restricted In SGSN Due To Unsupported Feature

The HLR may decide to include this parameter in the request if certain services or features are indicated as not supported by the SGSN. This parameter is used only by the SGSN and if the VLR receives this parameter it shall ignore it.

#### CS Allocation/Retention priority

The CS Allocation/Retention priority is used only for Circuit Switched (CS). This parameter specifies relative importance to compare with other bearers about allocation and retention of bearer. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### Offered CAMEL 4 CSIs

This parameter indicates the CAMEL phase 4 CSIs offered in the VMSC/VLR or SGSN (see clause 7.6.3.36D).

#### User error

Only one of the following values is applicable:

- Unidentified subscriber;
- Data missing;
- Unexpected data value.

### 8.8.1.4 Basic service information related to supplementary services

A number of parameters that relate to supplementary services can be qualified by a Basic Service Group (or a Basic Service Group List). This clause explains how this information is to be interpreted. Supplementary service parameters to which this clause is applicable only apply to the basic service groups described in this clause, and only those basic service groups shall be overwritten at the VLR.

The Basic Service Group (or Basic Service Group List) is optional.

If present the Basic Service Group (or the elements of the Basic Service Group List) shall be one of:

- an Elementary Basic Service Group for which the supplementary service is applicable to at least one basic service in the group; and to which the subscriber has a subscription to at least one basic service in the group;
- the group "All Teleservices" provided that the service is applicable to at least one teleservice and that the subscriber has a subscription to at least one teleservice that is in the same Elementary Basic Service Group as a teleservice to which the service is applicable;
- the group "All Bearer Services" provided that the service is applicable to at least one bearer service and that the subscriber has a subscription to at least one bearer service that is in the same Elementary Basic Service Group as a basic service to which the service is applicable.

If the Basic Service Group (or Basic Service Group List) is not present then the parameter shall apply to all Basic Service Groups.

If the basic service information is not a single Elementary Basic Service Group then the parameter shall be taken as applying individually to all the Elementary Basic Service Groups for which:

- the supplementary service is applicable to at least one basic service in the Basic Service Group; and
- the subscriber has a subscription to at least one basic service in the Basic Service Group.

The VLR is not required to store supplementary services data for Basic Service Groups that are not supported at the VLR.

## 8.8.2 MAP-DELETE-SUBSCRIBER-DATA service

### 8.8.2.1 Definition

This service is used by an HLR to remove certain subscriber data from a VLR if the subscription of one or more supplementary services or basic services is withdrawn. Note that this service is not used in case of erasure or deactivation of supplementary services.

Also this service is used by an HLR to remove GPRS subscription data from a SGSN.

It is a confirmed service and consists of the primitives shown in table 8.8/2.

### 8.8.2.2 Service primitives

**Table 8.8/2: MAP-DELETE-SUBSCRIBER-DATA**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
Basic service List	C	C(=)		
SS-Code List	C	C(=)		
Roaming Restriction Due To				
Unsupported Feature	C	C(=)		
Camel Subscription Info Withdraw	C	C(=)		
Specific CSI Withdraw	C	C(=)		
Regional Subscription Data	C	C(=)		
VBS Group Indication	C	C(=)		
VGCS Group Indication	C	C(=)		
GPRS Subscription Data Withdraw	C	C(=)		
Roaming Restricted In SGSN Due To Unsupported Feature	C	C(=)		
LSA Information Withdraw	C	C(=)		
IST Information Withdraw	C	C(=)		
Regional Subscription Response			C	C(=)
GMLC List Withdraw	C	C(=)		
User error			C	C(=)
Provider error				O

### 8.8.2.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable:

#### Basic service List

A list of Extensible Basic service parameters (Extensible Basic service is defined in clause 7.6). It is used when one, several or all basic services are to be withdrawn from the subscriber. If the VLR or the SGSN receives a value for an Extensible Basic Service which it does not support, it shall ignore that value. This parameter is used by the VLR and by the SGSN.

### SS-Code List

A list of SS-Code parameters (SS-Code is defined in clause 7.6). It is used when several or all supplementary services are to be withdrawn from the subscriber.

There are three possible options:

- deletion of basic service(s);  
The parameter Basic service List is only included.
- deletion of supplementary service(s);  
The parameter SS-Code List is only included.
- deletion of basic and supplementary services;  
Both Basic service List and SS-Code List are included.

This parameter is used by the VLR and SGSN for LCS. Otherwise, this parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

### Roaming Restriction Due To Unsupported Feature

This parameter is used if Roaming Restriction Due To Unsupported Feature is deleted from the subscriber data. This may occur if unsupported features or services are removed from the subscriber data in the HLR.

If this parameter is sent the VLR shall check if the current Location Area is possibly allowed now. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

### CAMEL Subscription Info Withdraw

This parameter is used to indicate that CAMEL Subscription Info shall be deleted from the VLR or from the SGSN. All CAMEL Subscription Info for the subscriber shall be deleted. This parameter is used by the VLR and by the SGSN. This parameter should not be sent in the same message as the Specific CSI Withdraw parameter.

### Specific CSI Withdraw

This parameter is used to indicate that one or more specific elements of CAMEL Subscription Info shall be deleted from the VLR or from the SGSN.

The specific elements of CAMEL Subscription Info which may be withdrawn are:

- O-CSI with TDP criteria for O-CSI;
- SS-CSI;
- TIF-CSI;
- D-CSI;
- VT-CSI with TDP criteria for VT-CSI;
- MO-SMS-CSI;
- MT-SMS-CSI with TDP-Criteria for MT-SMS-CSI;
- M-CSI;
- MG-CSI;
- GPRS-CSI.

This parameter is used by the VLR and by the SGSN. It shall not be sent to VLRs that do not support CAMEL phase 3 or higher. This parameter should not be sent in the same message as the CAMEL Subscription Info Withdraw parameter.

### Regional Subscription Identifier

Contains one single Zone Code (as defined in clause 7.6) and is used if all Zone Codes shall be deleted from the subscriber data. When all the Zone Codes are deleted, the VLR or the SGSN shall check for its location areas whether they are allowed or not. If the whole MSC area is restricted, VLR will report it to HLR by returning the Regional Subscription Response "MSC Area Restricted". If the whole SGSN area is restricted, SGSN will report it to HLR by returning the Regional Subscription Response "SGSN Area Restricted".

The binary coding of the Zone Code value received in a Delete Subscriber Data request shall not be checked by the VLR or by the SGSN.

Note that support of this parameter is a network operator option and it shall not be sent to networks which do not support Regional Subscription.

If Regional Subscription is not supported by the VLR or by the SGSN, the request for deletion of Zone Codes is refused by sending the Regional Subscription Response "Regional Subscription Not Supported" to the HLR.

If no Zone Codes are stored in the respective subscriber data record, the request for deleting all Zone Code information shall be ignored and no Regional Subscription Response shall be returned. This parameter is used by the VLR and by the SGSN.

#### VBS Group Indication

Contains an indication (flag) which is used if all Group Ids shall be deleted from the subscriber data for the Voice Broadcast teleservice.

If VBS is not supported in the VLR or no Group Ids are stored for VBS in the respective subscriber record, the request for deletion of all Group Ids shall be ignored. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

#### VGCS Group Indication

Contains an indication (flag) which is used if all Group Id's shall be deleted from the subscriber data for the Voice Group Call teleservice. This parameter is used only by the VLR and if the SGSN receives this parameter it shall ignore it.

If VGCS is not supported in the VLR or no Group Ids are stored for VGCS in the respective subscriber record, the request for deletion of all Group Ids shall be ignored.

#### GPRS Subscription Data Withdraw

This parameter is used to indicate whether all GPRS Subscription Data for the subscriber shall be deleted or if only a subset of the stored GPRS Subscription Data for the subscriber shall be deleted. In the latter case only those PDP contexts whose identifiers are included in the subsequent identifier list will be deleted. This parameter is used only by the SGSN and if the VLR receives this parameter it shall ignore it.

#### Roaming Restricted In SGSN Due To Unsupported Feature

This parameter is used if Roaming Restricted In SGSN Due To Unsupported Feature is deleted from the GPRS subscriber data. This may occur if unsupported features or services are removed from the GPRS subscriber data in the HLR.

If this parameter is sent the SGSN shall check if the current Location Area is possibly allowed now. This parameter is used only by the SGSN and if the VLR receives this parameter it shall ignore it.

#### LSA Information Withdraw

This parameter is used to indicate whether all LSA Information for the subscriber shall be deleted or if only a subset of the stored LSA Information for the subscriber shall be deleted. In the latter case only the LSA data whose LSA identities are included in the subsequent LSA data list will be deleted. This parameter is used by the VLR and the SGSN.

#### IST Information Withdraw

This parameter is used to indicate that the IST condition has been removed for the subscriber. See 3GPP TS 43.035 for the use of this parameter.

#### Regional Subscription Response

If included in the Delete Subscriber Data response this parameter indicates one of:

- MSC Area Restricted;
- SGSN Area Restricted;
- Regional Subscription Not Supported.

This parameter is used by the VLR and by the SGSN.

#### GMLC List Withdraw

This parameter indicates that the subscriber's LCS GMLC List shall be deleted from the VLR or SGSN.

#### User error

Only one of the following values is applicable:

- Unidentified subscriber;
- Data missing;
- Unexpected data value.

## 8.9 Identity management services

### 8.9.1 MAP-PROVIDE-IMSI service

#### 8.9.1.1 Definition

This service is used by a VLR in order to get, via the MSC, the IMSI of a subscriber (e.g. when a subscriber has identified itself with a TMSI not allocated to any subscriber in the VLR).

It is a confirmed service and consists of the primitives shown in table 8.9/1.

#### 8.9.1.2 Service primitives

**Table 8.9/1: MAP-PROVIDE-IMSI**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI			C	C(=)
User error			C	C(=)
Provider error				O

#### 8.9.1.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable:

#### IMSI

This parameter is received when the request is successfully carried out. It contains the requested IMSI.

#### User error

Only one of the following values is applicable:

- Absent subscriber.

### 8.9.2 MAP-FORWARD-NEW-TMSI service

### 8.9.2.1 Definition

This service is used by a VLR to allocate, via MSC, a new TMSI to a subscriber during an ongoing transaction (e.g. call set-up, location updating or supplementary services operation).

It is a confirmed service and consists of the primitives shown in table 8.9/2.

### 8.9.2.2 Service primitives

**Table 8.9/2: MAP-FORWARD-NEW-TMSI**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
TMSI	M	M(=)		
Provider error				O

### 8.9.2.3 Parameter use

The parameter TMSI is described in clause 7.6.

## 8.10 Fault recovery services

### 8.10.1 MAP\_RESET service

#### 8.10.1.1 Definition

This service is used by the HLR, after a restart, to indicate to a list of VLRs or SGSNs that a failure occurred.

The MAP\_RESET service is a non-confirmed service using the service primitives defined in table 8.10/1.

#### 8.10.1.2 Service primitives

**Table 8.10/1: MAP\_RESET**

Parameter name	Request	Indication
Invoke Id	M	M(=)
HLR number	M	M(=)
HLR Id LIST	U	C(=)

#### 8.10.1.3 Parameter definition and use

##### Invoke Id

See definition in clause 7.6.1.

##### HLR number

See definition in clause 7.6.2.

##### HLR Id LIST

The HLR Id List is a list of HLR Ids. If the parameter is present in the indication, the VLR or SGSN may base the retrieval of subscribers to be restored on their IMSI: the subscribers affected by the reset are those whose IMSI leading digits are equal to one of these numbers. If the parameter is absent, subscribers to be restored are those for which the OriginatingEntityNumber received at location updating time matches the equivalent parameter of the Reset Indication.

### 8.10.2 MAP\_FORWARD\_CHECK\_SS\_INDICATION service

### 8.10.2.1 Definition

This service may be used by an HLR as an implementation option, to indicate to a mobile subscriber that supplementary services parameters may have been altered, e.g. due to a restart. If received from the HLR, the VLR shall forward this indication to the MSC, which in turn forwards it to the MS. The HLR only sends this indication after successful completion of the subscriber data retrieval from HLR to VLR that ran embedded in a MAP\_UPDATE\_LOCATION procedure.

The MAP\_FORWARD\_CHECK\_SS\_INDICATION service is a non-confirmed service using the service primitives defined in table 8.10/2.

### 8.10.2.2 Service primitives

**Table 8.10/2: MAP\_FORWARD\_CHECK\_SS\_INDICATION**

Parameter name	Request	Indication
Invoke Id	M	M(=)

### 8.10.2.3 Parameter definition and use

#### Invoke Id

See definition in clause 7.6.1.

## 8.10.3 MAP\_RESTORE\_DATA service

### 8.10.3.1 Definition

This service is invoked by the VLR on receipt of a MAP\_PROVIDE\_ROAMING\_NUMBER indication for an unknown IMSI, or for a known IMSI with the indicator "Confirmed by HLR" set to "Not confirmed". The service is used to update the LMSI in the HLR, if provided, and to request the HLR to send all data to the VLR that are to be stored in the subscriber's IMSI record.

The MAP\_RESTORE\_DATA service is a confirmed service using the service primitives defined in table 8.10/3.

### 8.10.3.2 Service primitives

**Table 8.10/3: MAP\_RESTORE\_DATA**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
LMSI	U	C(=)		
Supported CAMEL phases	C	C(=)		
SoLSA Support Indicator	C	C(=)		
IST Support Indicator	C	C(=)		
Super-Charger Supported in Serving Network Entity	C	C(=)		
Long FTN Supported	C	C(=)		
Supported LCS Capability Sets	C	C(=)		
HLR number			C	C(=)
Offered CAMEL 4 CSIs	C	C(=)		
MS Not Reachable Flag			C	C(=)
User error			C	C(=)
Provider error				O

### 8.10.3.3 Parameter definitions and use

Invoke Id

See definition in clause 7.6.1.

IMSI

See definition in clause 7.6.2.

LMSI

See definition in clause 7.6.2. It is an operator option to provide the LMSI from the VLR; it is mandatory for the HLR to support the LMSI handling procedures.

Supported CAMEL Phases

This parameter indicates which phases of CAMEL are supported. Must be present if a CAMEL phase different from phase 1 is supported. Otherwise may be absent.

SoLSA Support Indicator

This parameter is used by the VLR to indicate to the HLR in the Restore Data indication that SoLSA is supported. If this parameter is not included in the Restore Data indication then the HLR shall not perform any specific error handling.

This SoLSA Support Indicator shall be stored by the HLR per VLR where there are Subscribers roaming. If a Subscriber is marked as only allowed to roam in Subscribed LSAs while roaming in a VLR and no SoLSA Support indicator is stored for that VLR, the location status of that Subscriber shall be set to Restricted.

IST Support Indicator

This parameter is used to indicate to the HLR that the VMSC supports basic IST functionality, that is, the VMSC is able to terminate the Subscriber Call Activity that originated the IST Alert when it receives the IST alert response indicating that the call(s) shall be terminated. If this parameter is not included in the Restore Data indication and the Subscriber is marked as an IST Subscriber, then the HLR may limit the service for the subscriber (by inducing an Operator Determined barring of Outgoing calls), or allow service assuming the associated risk of not having the basic IST mechanism available.

This parameter can also indicate that the VMSC supports the IST Command service, including the ability to terminate all calls being carried for the identified subscriber by using the IMSI as a key. If this additional capability is not included in the Restore Data indication and the HLR supports the IST Command capability, then the HLR may limit the service for the subscriber (by inducing an Operator Determined barring of Outgoing calls), or allow service assuming the associated risk of not having the IST Command mechanism available.

Long FTN Supported

This parameter indicates that the VLR supports Long Forwarded-to Numbers.

Super-Charger Supported in Serving Network Entity

This parameter is used by the VLR to indicate to the HLR that the VLR supports the Super-Charger functionality and that subscriber data is required.

If this parameter is absent then the VLR does not support the Super-Charger functionality.

Supported LCS Capability Sets

This parameter indicates, if present, the capability sets of LCS which are supported. If the parameter is sent but no capability set is marked as supported then the VLR does not support LCS at all.

If this parameter is absent then the VLR may support at most LCS capability set 1, that is LCS Release98 or Release99 version.

Offered CAMEL 4 CSIs

This parameter indicates the CAMEL phase 4 CSIs offered in the VMSC/VLR (see clause 7.6.3.36D).

HLR number

See definition in clause 7.6.2. The presence of this parameter is mandatory in case of successful outcome of the service.

#### MS Not Reachable Flag

See definition in clause 7.6.8. This parameter shall be present in case of successful outcome of the service, if the "MS Not Reachable flag" was set in the HLR.

#### User error

In case of unsuccessful outcome of the service, an error cause shall be returned by the HLR. The following error causes defined in clause 7.6.1 may be used, depending on the nature of the fault:

- unknown subscriber;
- system failure;
- unexpected data value;
- data missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 8.11 Subscriber Information services

### 8.11.1 MAP-ANY-TIME-INTERROGATION service

#### 8.11.1.1 Definition

This service is used by the gsmSCF, to request information (e.g. subscriber state and location) from the HLR or the GMLC at any time.

When this service is used to the HLR, the subscriber state or location may be requested.

When this service is used to the GMLC, only the location may be requested.

The MAP-ANY-TIME-INTERROGATION service is a confirmed service using the service primitives defined in table 8.11/1.

#### 8.11.1.2 Service primitives

**Table 8.11/1: Any\_Time\_Interrogation**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Requested Info	M	M(=)		
Requested domain	C	C(=)		
gsmSCF-Address	M	M(=)		
IMSI	C	C(=)		
MSISDN	C	C(=)		
Location Information			C	C(=)
Location Information for GPRS			C	C(=)
Subscriber State			C	C(=)
PS Subscriber State			C	C(=)
IMEI			C	C(=)
MS Classmark 2			C	C(=)
GPRS MS Class			C	C(=)
User error			C	C(=)
Provider error				O

### 8.11.1.3 Parameter definition and use

All parameters are described in clause 7.6. The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.018 [97] and 3GPP TS 23.078 [98].

The HLR or GMLC may be able to use the value of the parameter gsmSCF-address to screen a MAP\_Any\_Time\_Interrogation indication.

The use of the parameters and the requirements for their presence are specified in 3GPP TS 23.078.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- System Failure;
- Any Time Interrogation Not Allowed;
- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

These are defined in clause 7.6.1.

## 8.11.2 MAP-PROVIDE-SUBSCRIBER-INFO service

### 8.11.2.1 Definition

This service is used to request information (e.g. subscriber state and location) from the VLR or SGSN at any time.

The MAP-PROVIDE-SUBSCRIBER-INFO service is a confirmed service using the primitives defined in table 8.11/2.

### 8.11.2.2 Service primitives

**Table 8.11/2: Provide\_Subscriber\_Information**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Requested Info	M	M(=)		
IMSI	M	M(=)		
LMSI	U	O		
Location Information			C	C(=)
Location Information for GPRS			C	C(=)
Subscriber State			C	C(=)
PS Subscriber State			C	C(=)
IMEI			C	C(=)
MS Classmark 2			C	C(=)
GPRS MS Class			C	C(=)
User error			C	C(=)
Provider error				O

### 8.11.2.3 Parameter definition and use

All parameters are defined in clause 7.6. The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.018 [97] and 3GPP TS 23.078 [98].

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Data Missing;
- Unexpected Data Value.

#### Provider error

These are defined in clause 7.6.1.

### 8.11.3 MAP-ANY-TIME-SUBSCRIPTION-INTERROGATION service

#### 8.11.3.1 Definition

This service is used by the gsmSCF, to request subscription information (e.g. call forwarding supplementary service data or CSI) from the HLR at any time. In an IP Multimedia Core Network, an IM-SSF can take on the role of a gsmSCF for this service.

#### 8.11.3.2 Service primitives

**Table 8.11/3: Any\_Time\_Subscription\_Interrogation**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Requested Subscription Info	M	M(=)		
GsmSCF-Address	M	M(=)		
IMSI	C	C(=)		
MSISDN	C	C(=)		
Long FTN Supported	C	C(=)		
Call Forwarding Data			C	C(=)
Call Barring Data			C	C(=)
ODB Info			C	C(=)
CAMEL Subscription Info			C	C(=)
Supported CAMEL phases in VLR			C	C(=)
Supported CAMEL phases in SGSN			C	C(=)
Offered CAMEL 4 CSIs in VLR			C	C(=)
Offered CAMEL 4 CSIs in SGSN			C	C(=)
User error			C	C(=)
Provider error				O

#### 8.11.3.3 Parameter definition and use

All parameters are described in clause 7.6.

The HLR may be able to use the value of the parameter gsmSCF-address to screen a MAP\_Any\_Time\_Subscription\_Interrogation indication. The gsmSCF-address shall contain the IM-SSF address when the IM-SSF takes the role of the gsmSCF.

The use of the parameters and the requirements for their presence are specified in 3GPP TS 23.078 and 3GPP TS 23.278.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Unexpected Data Value;
- Unknown Subscriber;

- BearerServiceNotProvisioned;
- TeleserviceNotProvisioned;
- CallBarred;
- IllegalSS-Operation;
- SS-NotAvailable;
- InformationNotAvailable;
- Any Time Subscription Interrogation Not Allowed;
- Data Missing.

#### Provider error

These are defined in clause 7.6.1.

### 8.11.4 MAP-ANY-TIME-MODIFICATION service

#### 8.11.4.1 Definition

This service is used by the gsmSCF, to modify information of the HLR at any time.

#### 8.11.4.2 Service primitives

**Table 8.11/4: Any\_Time\_Modification**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
gsmSCF-Address	M	M(=)		
IMSI	C	C(=)		
MSISDN	C	C(=)		
Modification request for ODB data	C	C(=)		
Modification request for SS information	C	C(=)		
Modification request for CSI	C	C(=)		
Long FTN Supported	C	C(=)		
Ext Forwarding information-for-CSE			C	C(=)
Ext Call barring information-for-CSE			C	C(=)
ODB Info			C	C(=)
CAMEL subscription info			C	C(=)
User error			C	C(=)
Provider error				O

#### 8.11.4.3 Parameter definition and use

All parameters are described in clause 7.6.

The HLR may be able to use the value of the parameter gsmSCF-address to screen a MAP\_Any\_Time\_Modification indication.

The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.078 and 3GPP TS 23.278.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Any Time Modification Not Allowed;
- Data Missing;

- Unexpected Data Value;
- Unknown Subscriber;
- Bearer service not provisioned;

This error is returned only if not even a subset of the requested bearer service group has been subscribed to;

- Teleservice not provisioned;
- This error is returned only if not even a subset of the requested teleservice group has been subscribed to;
- Call Barred;
  - Illegal SS operation;
  - SS error status;
  - SS incompatibility;
  - SS subscription violation;
  - Information Not Available.

#### Provider error

These are defined in clause 7.6.1.

### 8.11.5 MAP-NOTE-SUBSCRIBER-DATA-MODIFIED service

#### 8.11.5.1 Definition

This service is used by the HLR to inform the gsmSCF that subscriber data have been modified. In an IP Multimedia Core Network, an IM-SMF can take on the role of a gsmSCF for this service.

#### 8.11.5.2 Service primitives

**Table 8.11/5: Note\_Subscriber\_Data\_Modified**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
MSISDN	M	M(=)		
Ext Forwarding information-for-CSE	C	C(=)		
Ext Call barring information-for-CSE	C	C(=)		
ODB Info	C	C(=)		
CAMEL subscription info	C	C(=)		
All Information Sent	C	C(=)		
User error			C	C(=)
Provider error				O

#### 8.11.5.3 Parameter definition and use

##### Invoke id

See clause 7.6.1 for the use of this parameter.

##### IMSI

See clause 7.6.2 for the use of this parameter.

#### MSISDN

See clause 7.6.2 for the use of this parameter. In an IP Multimedia Core Network, if no MSISDN is available, the HLR shall populate this parameter with a dummy MSISDN.

#### Ext Forwarding information-for-CSE

See clause 7.6.3 for the use of this parameter. The use of this parameter and the requirements for their presence are specified in 3GPP TS 23.078.

#### Ext Call barring information-for-CSE

See clause 7.6.3 for the use of this parameter. The use of this parameter and the requirements for their presence are specified in 3GPP TS 23.078.

#### ODB Info

See clause 7.6.3 for the use of this parameter. The use of this parameter and the requirements for their presence are specified in 3GPP TS 23.078.

#### CAMEL subscription info

See clause 7.6.3 for the use of this parameter. The use of this parameter and the requirements for their presence are specified in 3GPP TS 23.078 and 3GPP TS 23.278.

#### All Information Sent

This parameter is set when the HLR has sent all information to gsmSCF.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

These are defined in clause 7.6.1.

The use of the parameters and the requirements for their presence are specified in 3GPP TS 23.078 and 3GPP TS 23.278.

---

## 9 Operation and maintenance services

### 9.1 Subscriber tracing services

#### 9.1.1 MAP-ACTIVATE-TRACE-MODE service

##### 9.1.1.1 Definition

This service is used between the HLR and the VLR to activate subscriber tracing in the VLR.

Also this service is used between the HLR and the SGSN to activate subscriber tracing in the SGSN.

The MAP-ACTIVATE-TRACE-MODE service is a confirmed service using the primitives from table 9.1/1.

### 9.1.1.2 Service primitives

**Table 9.1/1: MAP-ACTIVATE-TRACE-MODE**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
Trace reference	M	M(=)		
Trace type	M	M(=)		
OMC Id	U	C(=)		
User error			C	C(=)
Provider error				O

### 9.1.1.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2. The IMSI is a mandatory parameter in a stand-alone operation.

#### Trace reference

See definition in clause 7.6.10.

#### Trace type

See definition in clause 7.6.10.

#### OMC Id

See definition in clause 7.6.2. The use of this parameter is an operator option.

#### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unidentified Subscriber;
- Facility Not Supported;
- Tracing Buffer Full;
- System Failure;
- Unexpected Data Value;
- Data missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 9.1.2 MAP-DEACTIVATE-TRACE-MODE service

### 9.1.2.1 Definition

This service is used between the VLR and the HLR for deactivating subscriber tracing in the VLR.

Also this service is used between the SGSN and the HLR for deactivating subscriber tracing in the SGSN.

The MAP-DEACTIVATE-TRACE-MODE service is a confirmed service using the primitives from table 9.1/2.

### 9.1.2.2 Service primitives

**Table 9.1/2: MAP-DEACTIVATE-TRACE-MODE**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
Trace reference	M	M(=)		
User error			C	C(=)
Provider error				O

### 9.1.2.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2. The IMSI is a mandatory parameter in a stand-alone operation.

#### Trace reference

See definition in clause 7.6.10.

#### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unidentified Subscriber;
- Facility Not Supported;
- System Failure;
- Unexpected Data Value;
- Data missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 9.1.3 MAP-TRACE-SUBSCRIBER-ACTIVITY service

### 9.1.3.1 Definition

This service is used between the VLR and the MSC to activate the subscriber tracing in the MSC.

The MAP-TRACE-SUBSCRIBER-ACTIVITY service is a non-confirmed service using the primitives from table 9.1/3.

### 9.1.3.2 Service primitives

**Table 9.1/3: MAP-TRACE-SUBSCRIBER-ACTIVITY**

Parameter name	Request	Indication
Invoke id	M	M(=)
IMSI	C	C(=)
Trace reference	M	M(=)
Trace type	M	M(=)
OMC Id	U	C(=)

### 9.1.3.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2. The controlling MSC shall provide either the IMSI or the IMEI to the servicing MSC.

#### Trace reference

See definition in clause 7.6.10.

#### Trace type

See definition in clause 7.6.10.

#### OMC Id

See definition in clause 7.6.2. The use of this parameter is an operator option.

## 9.2 Other operation and maintenance services

### 9.2.1 MAP-SEND-IMSI service

#### 9.2.1.1 Definition

This service is used by a VLR in order to fetch the IMSI of a subscriber in case of some Operation & Maintenance procedure where subscriber data are needed in the Visited PLMN and MSISDN is the only subscriber's identity known.

It is a confirmed service and consists of the primitives shown in table 9.2/1.

#### 9.2.1.2 Service primitives

**Table 9.2/1: MAP-SEND-IMSI**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
MSISDN	M	M(=)	C	C(=)
IMSI			C	C(=)
User error			O	
Provider error				

#### 9.2.1.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable.

#### User error

Only one of the following values is applicable:

- Unknown subscriber;
- Unexpected data value;
- Data missing.

---

## 10 Call handling services

## 10.1 MAP\_SEND\_ROUTING\_INFORMATION service

### 10.1.1 Definition

This service is used between the Gateway MSC and the HLR. The service is invoked by the Gateway MSC to perform the interrogation of the HLR in order to route a call towards the called MS.

This is a confirmed service using the primitives listed in table 10.1/1.

This service is also used between the GMSC and the NPLR and between the gsmSCF and the HLR.

### 10.1.2 Service primitives

**Table 10.1/1: MAP\_SEND\_ROUTING\_INFORMATION parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Interrogation Type	M	M(=)		
GMSC or gsmSCF Address	M	M(=)		
MSISDN	M	M(=)	C	C(=)
OR Interrogation	C	C(=)		
OR Capability	C	C(=)		
CUG Interlock	C	C(=)	C	C(=)
CUG Outgoing Access	C	C(=)	C	C(=)
Number of Forwarding	C	C(=)		
Network Signal Info	C	C(=)		
Supported CAMEL Phases	C	C(=)	C	C(=)
Suppress T-CSI	C	C(=)		
Offered CAMEL 4 CSIs	C	C(=)		
Suppression of Announcement	C	C(=)		
Call Reference Number	C	C(=)		
Forwarding Reason	C	C(=)		
Basic Service Group	C	C(=)		
Alerting Pattern	C	C(=)		
CCBS Call	C	C(=)		
Supported CCBS Phase	C	C(=)		
Additional Signal Info	C	C(=)		
IST Support Indicator	C	C(=)		
Pre-paging supported	C	C(=)		
Call Diversion Treatment Indicator	C	C(=)		
Long FTN Supported	C	C(=)		
Suppress VT-CSI	C	C(=)		
Suppress Incoming Call Barring	C	C(=)		
gsmSCF Initiated Call	C	C(=)		
IMSI			C	C(=)
MSRN			C	C(=)
Forwarding Data			C	C(=)
Forwarding Interrogation Required			C	C(=)
VMSC address			C	C(=)
GMSC Camel Subscription Info			C	C(=)
Location Information			C	C(=)
Subscriber State			C	C(=)
Basic Service Code			C	C(=)
CUG Subscription Flag			C	C(=)
North American Equal Access preferred			U	C(=)
Carrier Id				
User error			C	C(=)
SS-List			U	C(=)
CCBS Target			C	C(=)
Keep CCBS Call Indicator			C	C(=)
IST Alert Timer			C	C(=)
Number Portability Status			U	C(=)
Supported CAMEL Phases in VMSC			C	
Offered CAMEL 4 CSIs in VMSC			C	C(=)
Provider error				O

### 10.1.3 Parameter use

See clause 7.6 for a definition of the parameters used in addition to the following. Note that:

- a conditional parameter whose use is defined only in 3GPP TS 23.078 shall be absent if the sending entity does not support CAMEL;
- a conditional parameter whose use is defined only in 3GPP TS 23.079 [99] shall be absent if the sending entity does not support optimal routeing;
- a conditional parameter whose use is defined only in 3GPP TS 23.078 & 3GPP TS 23.079 [99] shall be absent if the sending entity supports neither CAMEL nor optimal routeing.

#### Interrogation Type

See 3GPP TS 23.079 [99] for the use of this parameter.

#### GMSC or gsmSCF address

The E.164 address of the GMSC or the gsmSCF. This parameter contains the gsmSCF address if the gsmSCF initiated call parameter is present, otherwise it is the GMSC address.

#### MSISDN

This is the Mobile Subscriber ISDN number assigned to the called subscriber. In the Request & Indication it is the number received by the GMSC in the ISUP IAM. If the call is to be forwarded and the HLR supports determination of the redirecting number, the HLR inserts the basic MSISDN in the Response.

See 3GPP TS 23.066 [108] for the use of this parameter and the conditions for its presence in the response.

#### OR Interrogation

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### OR Capability

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### CUG Interlock

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### CUG Outgoing Access

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### Number of Forwarding

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### Network Signal Info

See 3GPP TS 23.018 [97] for the conditions for the presence of the components of this parameter.

#### Supported CAMEL Phases

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### T-CSI Suppression

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### Offered CAMEL 4 CSIs

This parameter indicates the CAMEL phase 4 CSIs offered in the GMSC/VLR (see clause 7.6.3.36D).

### Suppression Of Announcement

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

### Call Reference Number

The use of this parameter and the conditions for its presence are specified in 3GPP TS 23.078 [98] and 3GPP TS 23.079 [99].

### Forwarding Reason

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

### Basic Service Group

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

### Alerting Pattern

See 3GPP TS 23.018 [97] and 3GPP TS 23.078 [98] for the use of this parameter and the conditions for its presence.

### CCBS Call

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

### Supported CCBS Phase

This parameter indicates by its presence that CCBS is supported and the phase of CCBS which is supported.

### Additional Signal Info

See 3GPP TS 23.081 [27] for the conditions for the presence of the components of this parameter.

### IST Support Indicator

This parameter is used to indicate to the HLR that the GMSC supports basic IST functionality, that is, the GMSC is able to terminate the subscriber call activity that originated the IST Alert when it receives the IST Alert response indicating that the call(s) shall be terminated. If this parameter is not included in the Send Routing Information indication and the subscriber is marked as an IST subscriber, then the HLR may limit the service for the call (by barring the incoming call if it is not subject to forwarding, or suppressing Call Forwarding from the GMSC), or allow the call assuming the associated risk of not having the basic IST mechanism available.

This parameter can also indicate that the GMSC supports the IST Command, including the ability to terminate all calls being carried for the identified subscriber by using the IMSI as a key. If this additional capability is not included in the Send Routing Information indication and the subscriber is marked as an IST subscriber, then the HLR may limit the service for the subscriber (by barring the incoming calls if they are not subject to forwarding, or suppressing Call Forwarding from the GMSC), or allow the incoming calls assuming the associated risk of not having the IST Command mechanism available.

### Pre-paging supported

See 3GPP TS 23.018 for the use of this parameter and the conditions for its presence.

### Call Diversion Treatment Indicator

This parameter indicates whether or not call diversion is allowed.

### IMSI

See 3GPP TS 23.018 [97] and 3GPP TS 23.066 [108] for the use of this parameter and the conditions for its presence.

### MSRN

See 3GPP TS 23.018 [97], 3GPP TS 23.066 [108] and 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence. If the NPLR returns only the MSISDN-number without Routeing Number to the GMSC, the MSISDN-number shall be returned as MSRN.

#### Forwarding Data

This parameter includes a number to define the forwarded-to destination, the forwarding reason and the forwarding options Notification to calling party and Redirecting presentation, and can include the forwarded-to subaddress. See 3GPP TS 23.018 [97] and 3GPP TS 23.079 [99] for the conditions for the presence of its components.

#### Forwarding Interrogation Required

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### Long FTN Supported

This parameter indicates that the GMSC supports Long Forwarded-to Numbers.

#### Suppress VT-CSI

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### Suppress Incoming Call Barring

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### gsmSCF Initiated Call

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### VMSC address

See 3GPP TS 23.079 [99] and 3GPP TS 23.078 [98] for the use of this parameter and the conditions for its presence.

#### GMSC CAMEL Subscription Info

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### Location Information

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### Subscriber State

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### CUG Subscription Flag

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### North American Equal Access preferred Carrier Id

This parameter is returned to indicate the preferred carrier identity to be used to set-up the call (i.e. forwarding the call or establishing the roaming leg).

#### SS-List

This parameter includes SS-codes and will be returned as an operator option. The HLR shall not send PLMN-specific SS-codes across PLMN boundaries. However if the GMSC receives PLMN-specific SS-codes from a foreign PLMN's HLR the GMSC may ignore it. If the GMSC attempts to process the PLMN- specific SS- codes, this may lead to unpredictable behaviour but the GMSC shall continue call processing.

#### Basic Service Code

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

If the CAMEL service is not involved, this parameter includes the basic service code and will be returned as an operator option. The HLR shall not send a PLMN-specific Basic Service Code across PLMN boundaries. However if the GMSC

receives a PLMN-specific Basic Service Code from a foreign PLMN's HLR the GMSC may ignore it. If the GMSC attempts to process the PLMN specific Basic Service codes, this may lead to unpredictable behaviour but the GMSC shall continue call processing.

#### CCBS Target

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### Keep CCBS Call Indicator

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### IST Alert Timer

It includes the IST Alert timer value that must be used to inform the HLR about the call activities that the subscriber performs. This parameter is only sent to the GMSC in response to a Send Routing Information request which indicates the the GMSC supports IST.

#### Number Portability Status

This parameter indicates the number portability status of the subscriber. This parameter may be present if the sender of SRIack is NPLR.

#### Supported CAMEL Phases in VMSC

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078.

#### Offered CAMEL 4 CSIs in VMSC

This parameter is defined in clause 7.6.3.36F.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Unknown Subscriber;

The diagnostic for the Unknown Subscriber error may indicate “NPDB Mismatch”.

- Number changed;
- Call Barred;

This error will indicate that either incoming calls are barred for this MS or that calls are barred due to Operator Determined Barring (see 3GPP TS 22.041 [8] for a definition of this network feature);

- CUG Reject;

The value of this error cause will indicate the reason for CUG Reject;

- Bearer Service Not Provisioned;
- Teleservice Not Provisioned;

A subscription check has been performed and the call has not passed the check due to incompatibility with regard to the requested service. Depending on the nature of the incompatibility, either of these messages will be returned;

- Facility Not Supported;
- Absent Subscriber;

This indicates that the location of the MS is not known (either the station is not registered and there is no location information available or the Provide Roaming Number procedure fails due to IMSI detached flag being set), or the GMSC requested forwarding information with a forwarding reason of not reachable, and the call forwarding on MS not reachable service is not active;

- Busy Subscriber;

This indicates that Call Forwarding on Busy was not active for the specified basic service group when the GMSC requested forwarding information with a forwarding reason of busy;

The error may also indicate that the subscriber is busy due to an outstanding CCBS recall. In the error data it may then be specified that CCBS is possible for the busy encountered call;

- No Subscriber Reply;

This indicates that Call Forwarding on No Reply was not active for the specified basic service group when the GMSC requested forwarding information with a forwarding reason of no reply;

- OR Not Allowed;

This indicates that the HLR is not prepared to accept an OR interrogation from the GMSC, or that calls to the specified subscriber are not allowed to be optimally routed;

- Forwarding Violation;
- System Failure;
- Data Missing;
- Unexpected Data Value.

See clause 7.6 for a definition of these errors.

#### Provider error

These are defined in clause 7.6.

## 10.2 MAP\_PROVIDE\_ROAMING\_NUMBER service

### 10.2.1 Definition

This service is used between the HLR and VLR. The service is invoked by the HLR to request a VLR to send back a roaming number to enable the HLR to instruct the GMSC to route an incoming call to the called MS.

This is a confirmed service which uses the primitives described in table 10.2/1.

### 10.2.2 Service primitives

**Table 10.2/1: MAP\_PROVIDE\_ROAMING\_NUMBER parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
MSC Number	M	M(=)		
MSISDN	U	C(=)		
LMSI	C	C(=)		
GSM Bearer Capability	C	C(=)		
Network Signal Info	C	C(=)		
Suppression Of Announcement	C	C(=)		
Call Reference Number	C	C(=)		
GMSC Address	C	C(=)		
OR Interrogation	C	C(=)		
OR Not Supported in GMSC	C	C(=)		
Alerting Pattern	C	C(=)		
CCBS Call	C	C(=)		
Supported CAMEL Phases in GMSC	C	C(=)		
Additional Signal Info	C	C(=)		
Pre-paging supported	C	C(=)		
Long FTN Supported	C	C(=)		

Parameter name	Request	Indication	Response	Confirm
Suppress VT-CSI	C	C(=)		
Roaming Number			C	C(=)
Offered CAMEL 4 CSIs in GMSC	C	C(=)		
User error			C	C(=)
Provider error				O

### 10.2.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following. Note that:

- a conditional parameter whose use is defined only in 3GPP TS 23.078 [98] shall be absent if the sending entity does not support CAMEL;
- a conditional parameter whose use is defined only in 3GPP TS 23.079 [99] shall be absent if the sending entity does not support optimal routeing;
- a conditional parameter whose use is defined only in 3GPP TS 23.078 [98] & 3GPP TS 23.079 [99] shall be absent if the sending entity supports neither CAMEL nor optimal routeing.

#### IMSI

This is the IMSI of the called Subscriber.

#### MSC Number

This is the ISDN number assigned to the MSC currently serving the MS. The MSC number will have been stored in the HLR as provided at location updating.

#### MSISDN

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### LMSI

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### GSM Bearer Capability

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

This information is passed according to the rules specified in TS 3GPP TS 29.007 [56].

There may be two GSM Bearer Capabilities supplied.

#### Network Signal Info

See 3GPP TS 23.018 [97] for the conditions for the presence of the components of this parameter.

#### Suppression Of Announcement

The use of this parameter and the requirements for its presence are specified in 3GPP TS 23.078 [98].

#### Call Reference Number

The use of this parameter and the conditions for its presence are specified in 3GPP TS 23.078 [98] and 3GPP TS 23.079 [99].

#### GMSC Address

The use of this parameter and the conditions for its presence are specified in 3GPP TS 23.078 [98] and 3GPP TS 23.079 [99].

#### OR Interrogation

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### OR Not Supported in GMSC

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### Supported CAMEL Phases in GMSC

See 3GPP TS 23.078 [98] for the use of this parameter and the conditions for its presence.

#### Alerting Pattern

See 3GPP TS 23.078 [98] for the use of this parameter and the conditions for its presence.

#### CCBS Call

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### Additional Signal Info

See 3GPP TS 23.081 [27] for the conditions for the presence of the components of this parameter.

#### Pre-paging supported

See 3GPP TS 23.018 for the use of this parameter and the conditions for its presence.

#### Long FTN supported

See 3GPP TS 23.082 for the use of this parameter and the conditions for its presence.

#### Suppress VT-CSI

See 3GPP TS 23.078 for the use of this parameter and the conditions for its presence.

#### Offered CAMEL 4 CSIs in GMSC

This parameter is defined in clause 7.6.3.36E.

#### Roaming Number

See 3GPP TS 23.018 [97] for the use of this parameter and the conditions for its presence.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Absent Subscriber;

This error will be returned if the IMSI detach flag is set.

- No Roaming Number Available;

- OR Not Allowed;

This indicates that the MAP\_PROVIDE\_ROAMING\_NUMBER indication included the OR interrogation indicator, but the VLR does not support optimal routeing.

- Facility Not Supported;

- System Failure;

- Data Missing;

- Unexpected Data Value.

See clause 7.6 for a definition of these reasons.

#### Provider error

These are defined in clause 7.6.

## 10.3 MAP\_RESUME\_CALL\_HANDLING service

### 10.3.1 Definition

This service is used between the terminating VMSC and the GMSC. The service is invoked by the terminating VMSC to request the GMSC to resume handling the call and forward it to the specified destination.

This is a confirmed service which uses the Primitives listed in table 10.3/1.

### 10.3.2 Service primitives

**Table 10.3/1: MAP\_RESUME\_CALL\_HANDLING parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Call Reference Number	C	C(=)		
Basic Service Group	C	C(=)		
IMSI	C	C(=)		
Forwarding Data	C	C(=)		
CUG Interlock	C	C(=)		
CUG Outgoing Access	C	C(=)		
O-CSI	C	C(=)		
D-CSI	C	C(=)		
CCBS Target	C	C(=)		
UU Data	C	C(=)		
UUS CF Interaction	C	C(=)		
All Information Sent	C	C(=)		
MSISDN	C	C(=)		
User error			C	C(=)
Provider error				O

### 10.3.3 Parameter use

Information received in subsequent segment of a segmented dialogue shall not overwrite information received in an earlier segment.

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### Call Reference Number

See 3GPP TS 23.079 [99] for the use of this parameter. This parameter shall be present in a first segment of the dialogue.

#### Basic Service Group

See 3GPP TS 23.079 [99] for the use of this parameter. This parameter shall be present in a first segment of the dialogue.

#### IMSI

This is the IMSI of the forwarding Subscriber. This parameter shall be present in a first segment of the dialogue.

#### Forwarding Data

This parameter includes a number to define the forwarded-to destination, the forwarding reason and the forwarding options Notification to calling party and Redirecting presentation, and can include the forwarded-to subaddress. See 3GPP TS 23.079 [99] for the conditions for the presence of its components. This parameter shall be present in a first segment of the dialogue.

#### CUG Interlock

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### CUG Outgoing Access

See 3GPP TS 23.079 [99] for the use of this parameter and the conditions for its presence.

#### O-CSI

See 3GPP TS 23.078 for the use of this parameter and the conditions for its presence.

For CAMEL phases 1 & 2, the O-CSI shall contain only one set of O-BCSM TDP data.

#### D-CSI

The Dialled Services-CSI.

See 3GPP TS 23.078 for the use of this parameter and the conditions for its presence.

#### CCBS Target

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### UU Data

See 3GPP TS 23.087 for the use of this parameter and the conditions for its presence.

#### UUS CF Interaction

See 3GPP TS 23.087 for the use of this parameter and the conditions for its presence.

#### All Information Sent

This parameter is set when the VMSC has sent all information to GMSC.

#### MSISDN

This parameter is the basic MSISDN of the forwarding subscriber. It shall be present if the VMSC supports determination of the redirecting number.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Optimal Routeing not allowed;
- Forwarding failed;
- Unexpected Data Value;
- Data Missing.

#### Provider error

These are defined in clause 7.6.

## 10.4 MAP\_PREPARE\_GROUP\_CALL service

### 10.4.1 Definition

This service is used by the Anchor\_MSC to inform the Relay\_MSC about a group call set-up.

The MAP\_PREPARE\_GROUP\_CALL service is a confirmed service using the service primitives given in table 10.4/1.

## 10.4.2 Service primitives

**Table 10.4/1: MAP\_PREPARE\_GROUP\_CALL service**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Teleservice	M	M(=)		
ASCI Call Reference	M	M(=)		
Ciphering Algorithm	M	M(=)		
Group Key Number	C	C(=)		
Group Key	C	C(=)		
Priority	C	C(=)		
CODEC-Information	M	M(=)		
Uplink Free Indicator	M	M(=)		
Group Call Number			M	M(=)
User Error			C	C(=)
Provider Error				O

## 10.4.3 Parameter definitions and use

### Invoke Id

See definition in clause 7.6.1.

### Teleservice

Voice Broadcast Service or Voice Group Call Service.

### ASCI Call Reference

Broadcast call reference or group call reference. This item is used to access the VBS-GCR or VGCS-GCR within the Relay\_MSC.

### Ciphering Algorithm

The ciphering algorithm to be used for the group call.

### Group Key Number

This number has to be broadcasted and is used by the mobile station to select the chosen group key.

Shall be present if the ciphering applies.

### Group Key

This key is used for ciphering on the radio interface.

Shall be present if the ciphering applies.

### Priority

Default priority level related to the call if eMLPP applies.

### CODEC-Information

Information on the codecs allowed for this call.

### Uplink Free Indicator

A flag indicating whether the call is initiated from a dispatcher.

### Group Call Number

This temporary allocated E.164 number is used for routing the call from the Anchor MSC to the Relay MSC.

User Error

For definition of this parameter see clause 7.6.1 The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- No Group Call Number available;
- System Failure;
- Unexpected Data Value.

Provider Error

See definition of provider error in clause 7.6.1.

## 10.5 MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service

### 10.5.1 Definitions

This service is used between Relay MSC and Anchor MSC for transmission of Group Call notifications.

The MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service is a non-confirmed service using the service primitives given in table 10.5/1.

### 10.5.2 Service primitives

**Table 10.5/1: MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service**

Parameter name	Request	Indication
Invoke Id	M	M(=)
Uplink Request	C	C(=)
Uplink Release Indication	C	C(=)
Release Group Call	C	C(=)

### 10.5.3 Parameter definitions and use

Invoke Id

See definition in clause 7.6.1

Uplink Request

This information element indicates to the anchor MSC that a service subscriber roaming in the relay MSC area requests access to the uplink.

Uplink Release Indication

This information element if included by the Relay MSC indicates to the Anchor MSC that the uplink has become free.

Release Group Call

This information element if included by the Relay MSC indicates to the Anchor MSC that the service subscriber who has initiated the call and who currently has access to the uplink terminates the call.

## 10.6 MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service

### 10.6.1 Definitions

This service is used between Anchor MSC and Relay MSC for transmission of Group Call notifications.

The MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service is a non-confirmed service using the service primitives given in table 10.6/1.

## 10.6.2 Service primitives

**Table 10.6/1: MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service**

Parameter name	Request	Indication
Invoke Id	M	M(=)
IMSI	C	C(=)
Uplink Request Acknowledgement	C	C(=)
Uplink Release Indication	C	C(=)
Uplink Reject Command	C	C(=)
Uplink Seized Command	C	C(=)
Uplink Release Command	C	C(=)
State Attributes	C	C(=)

## 10.6.3 Parameter definitions and use

### IMSI

Identity of the service subscriber who has established the call and who is allowed to terminate the call.

### Invoke Id

See definition in clause 7.6.1.

### Uplink Request Acknowledgement

This information element is used for positive acknowledgement of an uplink request.

### Uplink Release Indication

This information element if included by the Anchor MSC indicates to the Relay MSC that the uplink has become free.

### Uplink Reject Command

This information element is used for negative acknowledgement of an uplink request.

### Uplink Seized Command

This information element if included by the Anchor MSC indicates to the Relay MSC that the uplink is no longer free.

### Uplink Release Command

This information element if included by the Anchor MSC indicates to the Relay MSC that the uplink which is granted to a MS in the relay MSC area shall be released.

### State Attributes

This information element is used to allow service logic running in an Anchor MSC to mute a VGCS talker even when the talker is served on a Relay MSC. The IE is used to build a GCC message that provides a mechanism to induce the VGCS talker terminal to mute/unmute the downlink at the Anchor MSC, as defined in 3GPP TS 44.068.

## 10.7 MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service

### 10.7.1 Definitions

This service is used between the Relay MSC and the Anchor MSC indicating that VGCS / VBS channels have been established in the Relay MSC area. The response is used by the Anchor MSC to inform the Relay MSC that all resources for the call can be released in the Relay MSC because the call has been released in the Anchor MSC.

The MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service is a confirmed service using the service primitives given in table 10.7/1.

## 10.7.2 Service primitives

**Table 10.7/1: MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
Provider Error				O

## 10.7.3 Parameter definitions and use

### IMSI

Identity of the service subscriber who has established the call and who is allowed to terminate the call.

Shall be present if the call was established by a service subscriber roaming in the relay MSC area.

### Invoke Id

See definition in clause 7.6.1

### Provider Error

See definition of provider error in clause 7.6.1.

## 10.8 MAP\_Provide\_SIWFs\_Number

### 10.8.1 Definition

This service is used between an MSC and SIWFS. It is invoked by an MSC receiving an incoming call (call to or from MS) to request the SIWFS to allocate IWU resources. The service is defined in GSM 03.54.

This is a confirmed service using the primitives described in table 10.8/1.

### 10.8.2 Service primitive

**Table 10.8/1: MAP\_Provide\_SIWFs\_Number service**

Parameter name	Request	Indication	Response	Confirm
Invoke ID	M	M(=)	M(=)	M(=)
GSM Bearer Capability	M	M(=)		
ISDN Bearer Capability	M	M(=)		
Call Direction	M	M(=)		
B-subscriber address	M	M(=)		
Chosen Channel	M	M(=)		
Lower Layer Compatibility	C	C(=)		
High Layer Compatibility	C	C(=)		
SIWFS number			C	C(=)
User error			C	C(=)
Provider error				O

### 10.8.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### GSM Bearer Capability

This information is the result from the negotiation with the mobile station. The information is sent from the MSC to the SIWFS to allocate the correct IWU.

#### ISDN Bearer Capability

This parameter refers to the ISDN Bearer Capability information element. For the MTC this parameter is received in the ISUP User Service Information parameter. For the MOC call this parameter is mapped from the GSM BC parameter according to 3GPP TS 29.007 [56]. The parameter is used by the SIWFS to route the call and to allocate the outgoing circuit.

#### Call Direction

This parameter indicates the direction of the call (mobile originated or mobile terminated) at call set-up.

#### B-subscriber address

This parameter is sent from the MSC to the SIWFS to inform the SIWFS where to route the call i.e. where to send the IAM. If the loop method is used this parameter will indicate the address to the VMSC. This address is allocated by the VMSC in the same way as a MSRN and is used to correlate the incoming IAM to the corresponding MAP dialogue. If the non-loop method is used this parameter will indicate the address to the B-subscriber.

#### Chosen Channel

This parameter is sent from the MSC to the SIWFS to adjust the interworking unit to the assigned radio resources. This parameter is defined in 3GPP TS 48.008 [49].

#### Lower Layer Compatibility

This parameter is sent from the MSC to the SIWF to allow the interworking unit to perform a compatibility check. This parameter is handled as specified in 3GPP TS 29.007 [56]. This parameter is defined in 3GPP TS 24.008 [35].

#### High Layer Compatibility

This parameter is sent from the MSC to the SIWF to allow the interworking unit to perform a compatibility check. This parameter is handled as specified in 3GPP TS 29.007 [56]. This parameter is defined in 3GPP TS 24.008 [35].

#### SIWFS number

This parameter is sent from the SIWFS to the MSC. This address is used by the visited MSC to route the call, i.e. the IAM to the SIWFS (similar to MSRN) and will be used by the SIWFS to correlate the incoming IAM to the corresponding MAP message. This parameter must always be sent from the SIWFS when a successful allocation of SIWFS resources has been made.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Resource limitation;
- Facility Not Supported;
- Unexpected Data Value;
- System Failure.

See clause 7.6 for a definition of these reasons.

#### Provider error

These are defined in clause 7.6.

## 10.9 MAP\_SIWF\_Signalling\_Modify

### 10.9.1 Definition

This service is used to transport signalling information between an MSC and an SIWFS in the case of a request to modify the configuration (e.g. HSCSD). It is invoked either by an MSC or by the SIWFS. The service is defined in GSM 03.54.

This is a confirmed service using the primitives described in table 10.9/1.

### 10.9.2 Service primitive

**Table 10.9/1: MAP\_SIWF\_Signalling\_Modify service**

Parameter name	Request	Indication	Response	Confirm
Invoke ID	M	M(=)	M(=)	M(=)
Channel Type	C	C(=)		
Chosen Channel	C	C(=)	C(=)	C(=)
User error			C	C(=)
Provider error				O

### 10.9.3 Parameter use

See clause 7.6 for a definition of the parameter used, in addition to the following.

#### Channel Type

This parameter is the result of a Channel Mode Modification for TS61/62. It contains the changed Air Interface User Rate. The information is sent from the SIWFS to the MSC to assign the correct radio resource. This parameter is defined in 3GPP TS 48.008 [49].

#### Chosen Channel

This parameter is sent from the MSC to the SIWFS to adjust the interworking unit to the assigned radio resources. This parameter is defined in 3GPP TS 48.008 [49].

#### User error

This parameter is sent by the responder when an error is detected and if present , takes one of the following values:

- Resource limitation;
- Facility Not Supported;
- Data Missing;
- Unexpected Data Value;
- System Failure.

See clause 7.6 for a definition of these reasons.

#### Provider error

These are defined in clause 7.6.

## 10.10 MAP\_SET\_REPORTING\_STATE service

### 10.10.1 Definition

This service is used between the HLR and the VLR to set the reporting state for a requested service. It is a confirmed service using the service primitives shown in table 10.10/1.

### 10.10.2 Service primitives

**Table 10.10/1: MAP\_SET\_REPORTING\_STATE parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
LMSI	C	C(=)		
CCBS Monitoring	C	C(=)		
CCBS Subscriber Status			C	C(=)
User error			C	C(=)
Provider error				O

### 10.10.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### IMSI

The IMSI is a mandatory parameter if the service is used as the only one in a dialogue.

#### CCBS Monitoring

This parameter indicates whether monitoring for CCBS shall be started or stopped. If it indicates that monitoring shall be started this service corresponds to the message 'Start Reporting' in 3GPP TS 23.093 [107]; if it indicates that monitoring shall be stopped this service corresponds to the message 'Stop Reporting' in 3GPP TS 23.093 [107].

#### CCBS Subscriber Status

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- System Failure;
- Unidentified Subscriber;
- Unexpected Data Value;
- Data Missing;
- Resource Limitation;
- Facility Not Supported.

NOTE: This error is reserved for future use.

#### Provider error

These are defined in clause 7.6.

## 10.11 MAP\_STATUS\_REPORT service

### 10.11.1 Definition

This service is used by the VLR to report an event or call outcome to the HLR. It is a confirmed service using the service primitives shown in table 10.11/1.

### 10.11.2 Service primitives

**Table 10.11/1: MAP\_STATUS\_REPORT parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
CCBS Subscriber Status	C	C(=)		
Monitoring Mode	C	C(=)		
Call Outcome	C	C(=)		
User error			C	C(=)
Provider error				O

### 10.11.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### CCBS Subscriber Status

If this parameter is present without Monitoring Mode and Call Outcome this service corresponds to the message 'Event Report' in 3GPP TS 23.093 [107]. See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### Monitoring Mode

If this parameter is present with CCBS Call Outcome this service corresponds to the message 'CCBS Call Report' in 3GPP TS 23.093 [107]. See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### Call Outcome

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- Unknown Subscriber;
- System Failure;
- Unexpected Data Value;
- Data Missing.

#### Provider error

These are defined in clause 7.6.

## 10.12 MAP\_REMOTE\_USER\_FREE service

### 10.12.1 Definition

This service is used between the HLR and the VLR to report that the B subscriber is now idle and that the A subscriber can be notified. It is a confirmed service using the service primitives shown in table 10.12/1.

### 10.12.2 Service primitives

**Table 10.12/1: MAP\_REMOTE\_USER\_FREE parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
Call Info	M	M(=)		
CCBS Feature	M	M(=)		
Translated B Number	M	M(=)		
Replace B Number	C	C(=)		
Alerting Pattern	C	C(=)		
RUF Outcome			C	C(=)
User error			C	C(=)
Provider error				O

### 10.12.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### Call Info

See 3GPP TS 23.093 [107] for the use of this parameter.

#### CCBS Feature

See 3GPP TS 23.093 [107] for the conditions for the presence of the parameters included in the CCBS feature.

#### Translated B Number

See 3GPP TS 23.093 [107] for the use of this parameter.

#### Replace B Number

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### Alerting Pattern

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### RUF Outcome

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- Unexpected Data Value;
- Data Missing;
- Incompatible Terminal;

- This error is returned by the responder when the terminal used for CCBS activation is not compatible with the terminal used for the CCBS recall. For details refer to 3GPP TS 24.008 [35];
- Absent Subscriber (IMSI Detach; Restricted Area; No Page Response);
- System Failure;
- Busy Subscriber (CCBS Busy).

#### Provider error

These are defined in clause 7.6.

## 10.13 MAP\_IST\_ALERT service

### 10.13.1 Definition

This service is used between the MSC (Visited MSC or Gateway MSC) and the HLR, to report that the IST timer running for a call for the Subscriber has expired. It is a confirmed service using the service primitives shown in table 10.13/1.

### 10.13.2 Service primitives

**Table 10.13/1: MAP\_IST\_ALERT parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
IST Alert Timer			C	C(=)
IST Information Withdraw			C	C(=)
Call termination Indicator			C	C(=)
User error			C	C(=)
Provider error				O

### 10.13.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable:

#### IST Alert Timer

If included in the IST Alert response, it includes the new IST Alert timer value that must be used to inform the HLR about the call activities that the subscriber performs.

#### IST Information Withdraw

If included in the IST Alert response, this parameter is used to indicate that the IST condition has been removed for the subscriber. When the MSC receives this parameter, IST control for that call shall be terminated.

#### Call termination Indicator

If included in the IST Alert response, this parameter is used to indicate whether the MSC shall terminate the call activity that had previously triggered the IST Alert procedure, or it shall also release all other call activities for the specified subscriber (outgoing call activities if the IST Alert is initiated by the VMS, or incoming call activities if the IST Alert is initiated by the GMSC). Release of all other call activities is possible only if the MSC has the capability to link the call activities for the Subscriber by using the IMSI as key.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- System Failure;

- Unexpected Data Value;
- Resource Limitation;
- Facility Not Supported;
- Unknown Subscriber.

## 10.14 MAP\_IST\_COMMAND service

### 10.14.1 Definition

This service is used by the HLR to instruct the MSC (Visited MSC or Gateway MSC) to terminate ongoing call activities for a specific subscriber. It is a confirmed service using the service primitives shown in table 10.14/1.

### 10.14.2 Service primitives

**Table 10.14/1: MAP\_IST\_COMMAND parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
User error			C	C(=)
Provider error				O

### 10.14.3 Parameter use

All parameters are described in clause 7.6. The following clarifications are applicable:

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- System Failure;
- Unexpected Data Value;
- Resource Limitation;
- Facility Not Supported;
- Unknown Subscriber.

## 11 Supplementary services related services

### 11.1 MAP\_REGISTER\_SS service

#### 11.1.1 Definition

This service is used between the MSC and the VLR and between the VLR and the HLR to register data related to a supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.1/1.

## 11.1.2 Service primitives

**Table 11.1/1: MAP\_REGISTER\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Basic service	C	C(=)		
Forwarded-to number with subaddress	C	C(=)		
No reply condition time	C	C(=)		
EMLPP default priority	C	C(=)	C	C(=)
Long FTN Supported	C	C(=)		
NbrUser	C	C(=)	C	C(=)
Forwarding information			C	C(=)
User error			C	C(=)
Provider error				O

## 11.1.3 Parameter use

### Invoke id

See clause 7.6.1 for the use of this parameter.

### SS-Code

This parameter indicates the supplementary service which the mobile subscriber wants to register.

### Basic service

This parameter indicates for which basic service group the supplementary service is to be registered. If it is not included, the registration request applies to all basic services.

### Forwarded-to number with subaddress

This parameter is obligatory if the registration applies to one or more call forwarding supplementary services. It can optionally include a sub-address.

### No reply condition time

This parameter is included if the registration applies to the Call Forwarding on No Reply supplementary service (or a superset of this service) and the mobile subscriber supplies a value for this time.

### EMLPP default priority

This parameter is sent by the initiator to register the eMLPP default priority level and is returned by the responder at successful outcome of the service.

### Long FTN Supported

This parameter indicates that the mobile station supports Long Forwarded-to Numbers.

### NbrUser

This parameter is sent by the initiator to register the MC maximum number of user defined circuit switched bearers to be used.

### Forwarding information

This parameter is returned by the responder at successful outcome of the service, if the registration request concerned one or a group of Call Forwarding supplementary services.

User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- System failure;
- Data missing;
- Unexpected data value;
- Call Barred;
- Bearer service not provisioned;
- This error is returned only if not even a subset of the requested bearer service group has been subscribed to;
- Teleservice not provisioned;

This error is returned only if not even a subset of the requested teleservice group has been subscribed to;

- Illegal SS operation;
- SS error status;
- SS incompatibility.

Provider error

See clause 7.6.1 for the use of this parameter.

## 11.2 MAP\_ERASE\_SS service

### 11.2.1 Definition

This service is used between the MSC and the VLR and between the VLR and the HLR to erase data related to a supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.2/1.

### 11.2.2 Service primitives

**Table 11.2/1: MAP\_ERASE\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Basic service	C	C(=)		
Forwarding information			C	C(=)
User error			C	C(=)
Provider error				O

### 11.2.3 Parameter use

Invoke id

See clause 7.6.1 for the use of this parameter.

SS-Code

This parameter indicates the supplementary service which the mobile subscriber wants to erase.

Basic service

This parameter indicates for which basic service group the supplementary service should be erased. If it is not included, the erasure request applies to all basic services.

Forwarding information

This parameter is returned by the responder at successful outcome of the service, if the erasure request concerned one or a group of Call Forwarding supplementary services.

User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;
- Unexpected data value;
- Bearer service not provisioned;

This error is returned only if not even a subset of the requested bearer service group has been subscribed to;

- Teleservice not provisioned;

This error is returned only if not even a subset of the requested teleservice group has been subscribed to;

- Call Barred;
- Illegal SS operation;
- SS error status.

Provider error

See clause 7.6.1 for the use of this parameter.

## 11.3 MAP\_ACTIVATE\_SS service

### 11.3.1 Definition

This service is used between the MSC and the VLR and between the VLR and the HLR to activate a supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.3/1.

### 11.3.2 Service primitives

**Table 11.3/1: MAP\_ACTIVATE\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Long FTN Supported	C	C(=)		
Basic service	C	C(=)		
Forwarding information			C	C(=)
Call barring information			C	C(=)
SS-Data			C	C(=)
User error			C	C(=)
Provider error				O

### 11.3.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### SS-Code

This parameter indicates the supplementary service which the mobile subscriber wants to activate.

#### Basic service

This parameter indicates for which basic service groups the requested supplementary service(s) should be activated. If it is not included, the activation request applies to all basic services.

#### Forwarding information

This parameter is returned by the responder at successful outcome of the service, if the activation request concerned Call Forwarding.

#### Long FTN Supported

This parameter indicates that the mobile station supports Long Forwarded-to Numbers.

#### Call barring information

This parameter is returned by the responder at successful outcome of the service, if the activation request concerned Call Barring.

#### SS-Data

This parameter is returned by the responder at successful outcome of the service, if the activation request concerned for example Call Waiting.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;
- Unexpected data value;
- Bearer service not provisioned;
- This error is returned only if not even a subset of the requested bearer service group has been subscribed to.
- Teleservice not provisioned;
- This error is returned only if not even a subset of the requested teleservice group has been subscribed to.
- Call Barred;
- Illegal SS operation;
- SS error status;
- SS subscription violation;
- SS incompatibility;
- Negative PW check;
- Number Of PW Attempts Violation.

Provider error

See clause 7.6.1 for the use of this parameter.

## 11.4 MAP\_DEACTIVATE\_SS service

### 11.4.1 Definitions

This service is used between the MSC and the VLR and between the VLR and the HLR to deactivate a supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.4/1.

### 11.4.2 Service primitives

**Table 11.4/1: MAP\_DEACTIVATE\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Basic service	C	C(=)		
Forwarding information			C	C(=)
Call barring information			C	C(=)
SS-Data			C	C(=)
User error			C	C(=)
Provider error				O

### 11.4.3 Parameter use

Invoke id

See clause 7.6.1 for the use of this parameter.

SS-Code

This parameter indicates the supplementary service which the mobile subscriber wants to deactivate.

Basic service

This parameter indicates for which basic service group the requested supplementary service(s) should be deactivated. If it is not included the deactivation request applies to all basic services.

Forwarding information

This parameter is returned by the responder at successful outcome of the service, if the deactivation request concerned one or a group of Call Forwarding supplementary services.

Call barring information

This parameter is returned by the responder at successful outcome of the service, if the activation request concerned one or a group of Call Barring supplementary services.

SS-Data

This parameter is returned by the responder at successful outcome of the service, for example if the deactivation request concerned the Call Waiting supplementary service.

User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;
- Unexpected data value;
- Bearer service not provisioned;

This error is returned only if not even a subset of the requested bearer service group has been subscribed to;

- Teleservice not provisioned;

This error is returned only if not even a subset of the requested teleservice group has been subscribed to;

- Call Barred;
- Illegal SS operation;
- SS error status;
- SS subscription violation;
- Negative PW check;
- Number Of PW Attempts Violation.

Provider error

See clause 7.6.1 for the use of this parameter.

## 11.5 MAP\_INTERROGATE\_SS service

### 11.5.1 Definitions

This service is used between the MSC and the VLR and between the VLR and the HLR to retrieve information related to a supplementary service. The VLR will relay the message to the HLR if necessary.

The service is a confirmed service and consists of four service primitives.

### 11.5.2 Service primitives

The service primitives are shown in table 11.5/1.

**Table 11.5/1: MAP\_INTERROGATE\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Basic service	C	C(=)		
Long FTN Supported	C	C(=)		
SS-Status			C	C(=)
Basic service Group LIST			C	C(=)
Forwarding feature LIST			C	C(=)
CLI restriction Info			C	C(=)
EMLPP Info			C	C(=)
MC Information			C	C(=)
CCBS Feature LIST			C	C(=)
User error			C	C(=)
Provider error				O

### 11.5.3 Parameter use

For additional information on parameter use refer to the GSM 04.8x and 04.9x-series of technical specifications.

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### SS-Code

The mobile subscriber can only interrogate a single supplementary service per service request.

#### Basic service

This parameter indicates for which basic service group the given supplementary service is interrogated. If it is not included, the interrogation request applies to all basic services.

#### SS-Status

This parameter is included by the responder if:

- the interrogated supplementary service can only be subscribed for all applicable basic services simultaneously; or
- the interrogated supplementary service is not active for any of the interrogated basic services, or
- the interrogation was for the CCBS supplementary service and no CCBS request is active or the service is not provisioned.

#### Basic service group LIST

This parameter LIST is used to include one or a series of basic service groups for which the interrogated supplementary service is active. If the interrogated supplementary service is not active for any of the interrogated (and provisioned) basic service groups, the SS-Status parameter is returned.

#### Long FTN Supported

This parameter indicates that the mobile station supports Long Forwarded-to Numbers.

#### Forwarding feature LIST

The forwarding feature parameter is described in clause 7.6.4. A list of one or more forwarding features is returned by the responder when the interrogation request applied to Call Forwarding supplementary service.

If no basic service code parameter is provided within this sequence, the forwarding feature parameter applies to all provisioned basic services.

#### CLI restriction Info

The CLI-RestrictionInfo parameter is returned by the responder when the interrogation request applies to the CLIR supplementary service.

#### eMLPP Info

The eMLPP info (maximum entitled priority and default priority) is returned by the responder if the interrogation request applies to the eMLPP supplementary service.

#### MC Information

The MC information (NbrSB, NbrUser and NbrSN) is returned by the responder if the interrogation request applies to the MC supplementary service. For a definition of these 3 components, refer to 3GPP TS 23.135 and 3GPP TS 24.135.

### CCBS Feature LIST

The CCBS feature parameter is described in clause 7.6. A list of one or more CCBS features is returned by the responder when the interrogation request applied to the CCBS supplementary service. See 3GPP TS 23.093 [107] for the conditions for the presence of the parameters included in the CCBS feature.

#### User error

This error is sent by the responder upon unsuccessful outcome of the interrogation service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;
- Unexpected data value;
- Bearer Service not provisioned;

This error is returned only if not even a subset of the interrogated bearer services are provided;

- Teleservice not provisioned;

This error is returned only if not even a subset of the interrogated teleservices are provided;

- Call Barred;
- Illegal SS operation;
- SS not available.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.6 MAP\_INVOKE\_SS service

### 11.6.1 Definitions

This service is used between the MSC and the VLR to check the subscriber's subscription to a given supplementary service in the VLR, in connection with in-call invocation of that supplementary service, i.e. after the call set-up phase is finished. For supplementary service invocation during call set-up phase, please refer to the call handling descriptions.

The service is a confirmed service and consists of four service primitives.

### 11.6.2 Service primitives

The service primitives are shown in table 11.6/1.

**Table 11.6/1: MAP\_INVOKE\_SS parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
Basic service	C	C(=)		
User error			C	C(=)
Provider error				O

### 11.6.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### SS-Code

This SS-Code can only refer to a single supplementary service, e.g. the Call Hold or Multi Party supplementary services.

#### Basic service

This parameter indicates for which basic service the supplementary service invocation is required.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values:

- System Failure;
- Data Missing;
- Unexpected data value;
- Call Barred;
- Illegal SS operation;
- SS error status;
- SS not available.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.7 MAP\_REGISTER\_PASSWORD service

### 11.7.1 Definitions

This service is used between the MSC and the VLR and between the VLR and the HLR if the mobile subscriber requests to register a new password. The VLR will relay the message to the HLR.

The service is a confirmed service and consists of four service primitives.

### 11.7.2 Service primitives

The service primitives are shown in table 11.7/1.

**Table 11.7/1: MAP\_REGISTER\_PASSWORD parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)		
New password			C	C(=)
User error			C	C(=)
Provider error				O

### 11.7.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### SS-Code

This parameter indicates for which supplementary service(s) the password should be registered.

#### New Password

See clause 7.6.4 for the use of this parameter.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;
- Unexpected data value;
- Call Barred;
- SS subscription violation;
- Password registration failure;
- Negative PW check;
- Number Of PW Attempts Violation.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.8 MAP\_GET\_PASSWORD service

### 11.8.1 Definitions

This service is used between the HLR and the VLR and between the VLR and the MSC when the HLR receives a request from the mobile subscriber for an operation on a supplementary service which requires a password from the subscriber. The VLR will relay the message to the MSC.

The service is a confirmed service and uses the service primitives shown in table 11.8/1.

### 11.8.2 Service primitives

**Table 11.8/1: MAP\_GET\_PASSWORD parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Linked id	C	C(=)		
Guidance info	M	M(=)		
Current password			M	M(=)
Provider error				O

### 11.8.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### Linked Id

See clause 7.6.1 for the use of this parameter. If the MAP\_GET\_PASSWORD service is used in conjunction with the MAP\_REGISTER\_PASSWORD service, this parameter must be present; otherwise it must be absent.

#### Guidance info

See clause 7.6.4 for the use of this parameter.

#### Current password

See clause 7.6.4 for the use of this parameter.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.9 MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST service

### 11.9.1 Definitions

This service is used between the MSC and the VLR, between the VLR and the HLR, between the HLR and gsmSCF and between the HLR and HLR to relay information in order to allow unstructured supplementary service operation.

The MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST service is a confirmed service using the primitives from table 11.9/1.

### 11.9.2 Service primitives

**Table 11.9/1: MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
USSD Data Coding Scheme	M	M(=)	C	C(=)
USSD String	M	M(=)	C	C(=)
MSISDN	U	C(=)		
User error			C	C(=)
Provider error				O

### 11.9.3 Parameter use

#### Invoke id

See clause 7.6.1 for the use of this parameter.

#### USSD Data Coding Scheme

See clause 7.6.4 for the use of this parameter. The presence of the parameter in the response is dependent on the unstructured supplementary service application. If this parameter is present, then the USSD String parameter has to be present.

**USSD String**

See clause 7.6.1 for the use of this parameter. The presence of the parameter in the response is dependent on the unstructured supplementary service application. If this parameter is present, then the USSD Data Coding Scheme parameter has to be present.

**MSISDN**

The subscriber's basic MSISDN.

See definition in clause 7.6.2. The MSISDN is included as an operator option, e.g. to allow addressing the subscriber's data in the gsmSCF with the MSISDN.

**User error**

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- System failure;
- Data missing;
- Unexpected data value;

This error is returned by the responder if it is not able to deal with the contents of the USSD string.

- Call Barred;
- Unknown Alphabet.

**Provider error**

See clause 7.6.1 for the use of this parameter.

## 11.10 MAP\_UNSTRUCTURED\_SS\_REQUEST service

### 11.10.1 Definitions

This service is used between the gsmSCF and the HLR, the HLR and the VLR and between the VLR and the MSC when the invoking entity requires information from the mobile user, in connection with unstructured supplementary service handling.

The MAP\_UNSTRUCTURED\_SS\_REQUEST service is a confirmed service using the primitives from table 11.10/1.

### 11.10.2 Service primitives

**Table 11.10/1: MAP\_UNSTRUCTURED\_SS\_REQUEST parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
USSD Data Coding Scheme	M	M(=)	C	C(=)
USSD String	M	M(=)	C	C(=)
Alerting Pattern	C	C(=)		
User error			C	C(=)
Provider error				O

### 11.10.3 Parameter use

**Invoke id**

See clause 7.6.1 for the use of this parameter.

### USSD Data Coding Scheme

See clause 7.6.4 for the use of this parameter. The presence of the parameter in the response is dependent on the mobile user's MMI input. If this parameter is present, then the USSD String parameter has to be present.

### USSD String

See clause 7.6.1 for the use of this parameter. The presence of the parameter in the response is dependent on the mobile user's MMI input. If this parameter is present, then the USSD Data Coding Scheme parameter has to be present.

### Alerting Pattern

See clause 7.6.3 for the use of this parameter.

### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- System failure;
- Data missing;
- Unexpected data value;

This error is returned by the responder if it is not able to deal with the contents of the USSD string;

- Absent Subscriber;
- Illegal Subscriber;

This error indicates that delivery of the unstructured supplementary service data failed because the MS failed authentication;

- Illegal Equipment;
- USSD Busy;
- Unknown Alphabet.

### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.11 MAP\_UNSTRUCTURED\_SS\_NOTIFY service

### 11.11.1 Definitions

This service is used between the gsmSCF and the HLR, the HLR and the VLR and between the VLR and the MSC when the invoking entity requires a notification to be sent to the mobile user, in connection with unstructured supplementary services handling.

The MAP\_UNSTRUCTURED\_SS\_NOTIFY service is a confirmed service using the primitives from table 11.11/1.

## 11.11.2 Service primitives

**Table 11.11/1: MAP\_UNSTRUCTURED\_SS\_NOTIFY parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
USSD Data Coding Scheme	M	M(=)		
USSD String	M	M(=)		
Alerting Pattern	C	C(=)		
User error			C	C(=)
Provider error				O

## 11.11.3 Parameter use

### Invoke id

See clause 7.6.1 for the use of this parameter.

### USSD Data Coding Scheme:

See clause 7.6.4 for the use of this parameter.

### USSD String:

See clause 7.6.1 for the use of this parameter.

### Alerting Pattern

See clause 7.6.3 for the use of this parameter.

### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values defined in clause 7.6.1:

- System failure;
- Data missing;
- Unexpected data value;

This error is returned by the responder if it is not able to deal with the contents of the USSD string.

- Absent Subscriber;
- Illegal Subscriber;

This error indicates that delivery of the unstructured supplementary service data failed because the MS failed authentication.

- Illegal Equipment;
- USSD Busy;
- Unknown Alphabet.

### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.12 MAP\_SS\_INVOCATION\_NOTIFY

### 11.12.1 Definition

This service is used between the MSC and the gsmSCF when the subscriber invokes one of the following supplementary services; Call Deflection (CD), Explicit Call Transfer (ECT) or Multi Party (MPTY).

This service is used between the HLR and the gsmSCF when the subscriber invokes the CCBS supplementary service.

### 11.12.2 Service primitives

The service primitives are shown in table 11.12/1.

**Table 11.12/1: SS\_INVOCATION\_NOTIFY parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
MSISDN	M	M(=)		
IMSI	M	M(=)		
SS- event	M	M(=)		
SS- event data	C	C(=)		
B-subscriber Number	C	C(=)		
CCBS Request State	C	C(=)		
User error			C	C(=)
Provider error				O

### 11.12.3 Parameter use

All parameters are described in clause 7.6. The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.078.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

This is defined in clause 7.6.1.

## 11.13 MAP\_REGISTER\_CC\_ENTRY service

### 11.13.1 Definition

This service is used between the MSC and the VLR and between the VLR and the HLR to register data for a requested call completion supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.13/1.

## 11.13.2 Service primitives

**Table 11.13/1: MAP\_REGISTER\_CC\_ENTRY parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS Code	M	M(=)		
CCBS Feature	C	C(=)	C	C(=)
Translated B number	C	C(=)		
Service Indicator	C	C(=)		
Call Info	C	C(=)		
Network Signal Info	C	C(=)		
User error			C	C(=)
Provider error				O

## 11.13.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

### SS-Code

This parameter indicates the call completion supplementary service for which the mobile subscriber wants to register an entry.

### CCBS Feature

See 3GPP TS 23.093 [107] for the conditions for the presence of the parameters included in the CCBS feature.

### Translated B Number

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

### Service Indicator

This parameter corresponds to the parameters 'Presentation Indicator' and 'CAMEL Invoked' in 3GPP TS 23.093 [107]. It indicates which services have been invoked for the original call (e.g. CLIR, CAMEL). See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

### Call Info

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

### Network Signal Info

See 3GPP TS 23.093 [107] for the use of this parameter and the conditions for its presence.

### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data missing;
- Unexpected data value;
- Call Barred;
- Illegal SS operation;
- SS error status;
- SS incompatibility.

- Short Term Denial;
- Long Term Denial;
- Facility Not Supported;

NOTE: This error is reserved for future use.

Private Extensions shall not be sent with these user errors for this operation.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 11.14 MAP\_ERASE\_CC\_ENTRY service

### 11.14.1 Definition

This service is used between the MSC and the VLR and between the VLR and the HLR to erase data related to a call completion supplementary service. The VLR will relay the message to the HLR.

The service is a confirmed service and uses the service primitives shown in table 11.14/1.

### 11.14.2 Service primitives

**Table 11.14/1: MAP\_ERASE\_CC\_ENTRY parameters**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
SS-Code	M	M(=)	C(=)	C(=)
CCBS Index	C	C(=)		
SS-Status			C	C(=)
User error			C	C(=)
Provider error				O

### 11.14.3 Parameter use

See clause 7.6 for a definition of the parameters used, in addition to the following.

#### SS-Code

This parameter indicates the call completion supplementary service for which the mobile subscriber wants to erase an entry/entries.

#### CCBS Index

See 3GPP TS 23.093 [107] for the use of this parameter and the condition for its presence.

#### SS-Status

Depending on the outcome of the service request this parameter may indicate either provisioned and active or not provisioned.

#### User error

This parameter is sent by the responder upon unsuccessful outcome of the service, and then takes one of the following values, defined in clause 7.6.1:

- System failure;
- Data Missing;

- Unexpected data value;
- Call Barred;
- Illegal SS operation;
- SS error status.

Private Extensions shall not be sent with these user errors for this operation.

#### Provider error

See clause 7.6.1 for the use of this parameter.

## 12 Short message service management services

### 12.1 MAP-SEND-ROUTING-INFO-FOR-SM service

#### 12.1.1 Definition

This service is used between the gateway MSC and the HLR to retrieve the routing information needed for routing the short message to the servicing MSC.

The MAP-SEND-ROUTING-INFO-FOR-SM is a confirmed service using the primitives from table 12.1/1.

#### 12.1.2 Service primitives

**Table 12.1/1: MAP-SEND-ROUTING-INFO-FOR-SM**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
MSISDN	M	M(=)		
SM-RP-PRI	M	M(=)		
Service Centre Address	M	M(=)		
SM-RP-MTI	C	C(=)		
SM-RP-SMEA	C	C(=)		
GPRS Support Indicator	C	C(=)		
IMSI			C	C(=)
Network Node Number			C	C(=)
LMSI			C	C(=)
GPRS Node Indicator			C	C(=)
Additional Number			C	C(=)
User error			C	C(=)
Provider error				O

#### 12.1.3 Parameter use

##### Invoke id

See definition in clause 7.6.1.

##### MSISDN

See definition in clause 7.6.2.

##### SM-RP-PRI

See definition in clause 7.6.8.

Service Centre Address

See definition in clause 7.6.2.

SM-RP-MTI

See definition in clause 7.6.8. This parameter shall be present when the feature « SM filtering by the HPLMN » is supported by the SMS-GMSC and when the equivalent parameter is received from the short message service relay sub-layer protocol.

SM-RP-SMEA

See definition in clause 7.6.8. This parameter shall be present when the feature « SM filtering by the HPLMN » is supported by the SMS-GMSC and when the equivalent parameter is received from the short message service relay sub-layer protocol.

GPRS Support Indicator

See definition in clause 7.6.8. The presence of this parameter is mandatory if the SMS-GMSC supports receiving of the two numbers from the HLR.

IMSI

See definition in clause 7.6.2. The presence of this parameter is mandatory in a successful case.

Network Node Number

See definition in clause 7.6.2. This parameter is provided in a successful response.

LMSI

See definition in clause 7.6.2. It is an operator option to provide this parameter from the VLR; it is mandatory for the HLR to include the LMSI in a successful response, if the VLR has used the LMSI.

GPRS Node Indicator

See definition in clause 7.6.8. The presence of this parameter is mandatory if only the SGSN number is sent in the Network Node Number.

Additional Number

See definition in clause 7.6.2. This parameter is provided in a successful response.

User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown subscriber;
- Call Barred;
- Teleservice Not Provisioned;
- Absent Subscriber\_SM;
- Facility Not Supported;
- System failure;
- Unexpected Data Value;
- Data missing.

Provider error

For definition of provider errors see clause 7.6.1.

## 12.2 MAP-MO-FORWARD-SHORT-MESSAGE service

### 12.2.1 Definition

This service is used between the serving MSC or the SGSN and the SMS Interworking MSC to forward mobile originated short messages.

The MAP-MO-FORWARD-SHORT-MESSAGE service is a confirmed service using the service primitives given in table 12.2/1.

### 12.2.2 Service primitives

**Table 12.2/1: MAP-MO-FORWARD-SHORT-MESSAGE**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
SM RP DA	M	M(=)		
SM RP OA	M	M(=)		
SM RP UI	M	M(=)	C	C(=)
IMSI	C	C(=)	C	C(=)
User error				O
Provider error				

### 12.2.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### SM RP DA

See definition in clause 7.6.8.

In the mobile originated SM transfer this parameter contains the Service Centre address received from the mobile station.

#### SM RP OA

See definition in clause 7.6.8.

The MSISDN received from the VLR or from the SGSN is inserted in this parameter in the mobile originated SM transfer.

#### SM RP UI

See definition in clause 7.6.8. The short message transfer protocol data unit received from the Service Centre is inserted in this parameter.

#### IMSI

See definition in clause 7.6.2.1. The IMSI of the originating subscriber is inserted in this parameter in the mobile originated SM transfer.

This parameter shall be included if the sending entity, whether MSC or SGSN, supports mobile number portability.

#### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Facility Not Supported;
- System Failure;

- SM Delivery Failure;
  - The reason of the SM Delivery Failure can be one of the following in the mobile originated SM:
    - unknown Service Centre address;
    - Service Centre congestion;
    - invalid Short Message Entity address;
    - subscriber not Service Centre subscriber;
    - protocol error.
- Unexpected Data Value

#### Provider error

For definition of provider errors see clause 7.6.1.

## 12.3 MAP-REPORT-SM-DELIVERY-STATUS service

### 12.3.1 Definition

This service is used between the gateway MSC and the HLR. The MAP-REPORT-SM-DELIVERY-STATUS service is used to set the Message Waiting Data into the HLR or to inform the HLR of successful SM transfer after polling. This service is invoked by the gateway MSC.

The MAP-REPORT-SM-DELIVERY-STATUS service is a confirmed service using the service primitives given in table 12.3/1.

### 12.3.2 Service primitives

**Table 12.3/1: MAP-REPORT-SM-DELIVERY-STATUS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
MSISDN	M	M(=)		
Service Centre Address	M	M(=)		
SM Delivery Outcome	M	M(=)		
Absent Subscriber Diagnostic SM	C	C(=)		
GPRS Support Indicator	C	C(=)		
Delivery Outcome Indicator	C	C(=)		
Additional SM Delivery Outcome	C	C(=)		
Additional Absent Subscriber Diagnostic SM	C	C(=)		
MSisdn-Alert			C	C(=)
User error			C	C(=)
Provider error				O

### 12.3.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### MSISDN

See definition in clause 7.6.2.

#### Service Centre Address

See definition in clause 7.6.2.

**SM Delivery Outcome**

See definition in clause 7.6.8. This parameter indicates the status of the mobile terminated SM delivery.

**Absent Subscriber Diagnostic SM**

See definition in clause 7.6.8.

**GPRS Support Indicator**

See definition in clause 7.6.8. The presence of this parameter is mandatory if the SMS-GMSC supports handling of two delivery outcomes.

**Delivery Outcome Indicator**

See definition in clause 7.6.8.

**Additional SM Delivery Outcome**

See definition in clause 7.6.8.

**Additional Absent Subscriber Diagnostic SM**

See definition in clause 7.6.8.

**MSIsdn-Alert**

See definition in clause 7.6.2. This parameter shall be present in case of unsuccessful delivery, when the MSISDN received in the operation is different from the stored MSIsdn-Alert; the stored MSIsdn-Alert is the value that is returned to the gateway MSC.

**User error**

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown Subscriber;
- Message Waiting List Full;
- Unexpected Data Value;
- Data missing.

**Provider error**

For definition of provider errors see clause 7.6.1.

## 12.4 MAP-READY-FOR-SM service

### 12.4.1 Definition

This service is used between the MSC and VLR as well as between the VLR and the HLR. The MSC initiates this service if a subscriber indicates memory available situation. The VLR uses the service to indicate this to the HLR.

The VLR initiates this service if a subscriber, whose message waiting flag is active in the VLR, has radio contact in the MSC.

Also this service is used between the SGSN and the HLR. The SGSN initiates this service if a subscriber indicates memory available situation. The SGSN uses the service to indicate this to the HLR.

The SGSN initiates this service if a subscriber, whose message waiting flag is active in the SGSN, has radio contact in the GPRS.

The MAP-READY-FOR-SM service is a confirmed service using the primitives from table 12.4/1.

## 12.4.2 Service primitives

**Table 12.4/1: MAP-READY-FOR-SM**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
IMSI	C	C(=)		
TMSI	C	C(=)		
Alert Reason	M	M(=)		
Alert Reason Indicator	C	C(=)		
User error			C	C(=)
Provider error				O

## 12.4.3 Parameter use

### Invoke id

See definition in clause 7.6.1.

### IMSI

See definition in clause 7.6.2. The IMSI is used always between the VLR and the HLR and between the SGSN and the HLR. Between the MSC and the VLR the identification can be either IMSI or TMSI.

### TMSI

See definition in clause 7.6.2. The identification can be either IMSI or TMSI between MSC and VLR.

### Alert Reason

See definition in clause 7.6.8. This parameter indicates if the mobile subscriber is present or the MS has memory available.

### Alert Reason Indicator

See definition in clause 7.6.8.

### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown Subscriber;
- Facility Not Supported;
- System Failure;
- Unexpected Data Value;
- Data missing.

### Provider error

For definition of provider errors see clause 7.6.1.

## 12.5 MAP-ALERT-SERVICE-CENTRE service

### 12.5.1 Definition

This service is used between the HLR and the interworking MSC. The HLR initiates this service, if the HLR detects that a subscriber, whose MSISDN is in the Message Waiting Data file, is active or the MS has memory available.

The MAP-ALERT-SERVICE-CENTRE service is a confirmed service using the primitives from table 12.5/1.

## 12.5.2 Service primitives

**Table 12.5/1: MAP-ALERT-SERVICE-CENTRE**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
MSIsdn-Alert	M	M(=)		
Service Centre Address	M	M(=)		
User error			C	C(=)
Provider error				O

## 12.5.3 Parameter use

### Invoke id

See definition in clause 7.6.1.

### MSIsdn-Alert

See definition in clause 7.6.2. The provided MSISDN shall be the one which is stored in the Message Waiting Data file.

### Service Centre Address

See definition in clause 7.6.2.

### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- System Failure;
- Unexpected Data Value;
- Data missing.

### Provider error

For definition of provider errors see clause 7.6.1.

## 12.6 MAP-INFORM-SERVICE-CENTRE service

### 12.6.1 Definition

This service is used between the HLR and the gateway MSC to inform the Service Centre which MSISDN number is stored in the Message Waiting Data file. If the stored MSISDN number is not the same as the one received from the gateway MSC in the MAP-SEND-ROUTING-INFO-FOR-SM service primitive the stored MSISDN number is included in the message.

Additionally the status of MCEF, MNRF and MNRG flags and the inclusion of the particular Service Centre address in the Message Waiting Data list is informed to the gateway MSC when appropriate.

If the HLR has stored a single MNRR, the value is included in the Absent Subscriber Diagnostic SM parameter.

If the HLR has stored a second MNRR, the value of the MNRR for the MSC is included in the Absent Subscriber Diagnostic SM parameter and the value of the MNRR for the SGSN is included in the Additional Absent Subscriber Diagnostic SM parameter.

The MAP-INFORM-SERVICE-CENTRE service is a non-confirmed service using the primitives from table 12.6/1.

## 12.6.2 Service primitives

**Table 12.6/1: MAP-INFORM-SERVICE-CENTRE**

Parameter name	Request	Indication
Invoke Id	M	M(=)
MSIsdn-Alert	C	C(=)
MWD Status	C	C(=)
Absent Subscriber Diagnostic SM	C	C(=)
Additional Absent Subscriber Diagnostic SM	C	C(=)

## 12.6.3 Parameter use

### Invoke id

See definition in clause 7.6.1.

### MSIsdn-Alert

See definition in clause 7.6.2. This parameter refers to the MSISDN stored in a Message Waiting Data file in the HLR.

### MWD Status

See definition in clause 7.6.8. This parameter indicates the status of the MCEF, MNRF and MNRG flags and the status of the particular SC address presence in the Message Waiting Data list.

### Absent Subscriber Diagnostic SM

See definition in clause 7.6.8.

### Additional Absent Subscriber Diagnostic SM

See definition in clause 7.6.8.

## 12.7 MAP-SEND-INFO-FOR-MT-SMS service

### 12.7.1 Definition

This service is used between the MSC and the VLR. The service is invoked by the MSC receiving a mobile terminated short message to request subscriber related information from the VLR.

The MAP-SEND-INFO-FOR-MT-SMS service is a confirmed service using the primitives from table 12.7/1.

### 12.7.2 Service primitives

**Table 12.7/1: MAP-SEND-INFO-FOR-MT-SMS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
SM RP DA	M	M(=)		
IMSI	C	C(=)		
MSISDN			C	C(=)
User error			C	C(=)
Provider error				O

### 12.7.3 Parameter use

Invoke id

See definition in clause 7.6.1.

SM RP DA

See definition in clause 7.6.8. This parameter shall contain either an IMSI or an LMSI.

IMSI

See definition in clause 7.6.2. This parameter shall be present if the SM RP DA parameter contains an LMSI; otherwise it shall be absent.

MSISDN

See definition in clause 7.6.2.

User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown subscriber;
- Unidentified Subscriber;
- Absent subscriber;
- Unexpected Data Value;
- Data Missing;
- Illegal subscriber;
- Illegal equipment;
- Subscriber busy for MT SMS;
- System Failure.

Provider error

For definition of provider errors see clause 7.6.1.

## 12.8 MAP-SEND-INFO-FOR-MO-SMS service

### 12.8.1 Definition

This service is used between the MSC and the VLR. The service is invoked by the MSC which has to handle a mobile originated short message request to request the subscriber related information from the VLR.

The MAP-SEND-INFO-FOR-MO-SMS service is a confirmed service using the primitives from table 12.8/1.

### 12.8.2 Service primitives

**Table 12.8/1: MAP-SEND-INFO-FOR-MO-SMS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
Service Centre Address	M	M(=)		
MSISDN			C	C(=)
User error			C	C(=)
Provider error				O

### 12.8.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### Service Centre Address

See definition in clause 7.6.2.

#### MSISDN

See definition in clause 7.6.2.

#### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Teleservice Not Provisioned;
- Call Barred;
- Unexpected Data Value;
- Data Missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 12.9 MAP-MT-FORWARD-SHORT-MESSAGE service

### 12.9.1 Definition

This service is used between the gateway MSC and the servicing MSC or the SGSN to forward mobile terminated short messages.

The MAP-MT-FORWARD-SHORT-MESSAGE service is a confirmed service using the service primitives given in table 12.9/1.

### 12.9.2 Service primitives

**Table 12.9/1: MAP-MT-FORWARD-SHORT-MESSAGE**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
SM RP DA	M	M(=)		
SM RP OA	M	M(=)		
SM RP UI	M	M(=)	C	C(=)
More Messages To Send	C	C(=)		
User error			C	C(=)
Provider error				O

### 12.9.3 Parameter use

#### Invoke id

See definition in clause 7.6.1.

#### SM RP DA

See definition in clause 7.6.8. This parameter can contain either an IMSI or a LMSI. The use of the LMSI is an operator option. The LMSI can be provided if it is received from the HLR. The IMSI is used if the use of the LMSI is not available.

This parameter is omitted in the mobile terminated subsequent SM transfers.

#### SM RP OA

See definition in clause 7.6.8. The Service Centre address received from the originating Service Centre is inserted in this parameter.

This parameter is omitted in the mobile terminated subsequent SM transfers.

#### SM RP UI

See definition in clause 7.6.8. The short message transfer protocol data unit received from the Service Centre is inserted in this parameter. A short message transfer protocol data unit may also be inserted in this parameter in the message delivery acknowledgement from the MSC or from the SGSN to the Service Centre.

#### More Messages To Send

See definition in clause 7.6.8. The information from the MMS indication received from the Service Centre is inserted in this parameter.

#### User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unidentified subscriber;
- Absent Subscriber\_SM;
- Subscriber busy for MT SMS;
- Facility Not Supported;
- Illegal Subscriber indicates that delivery of the mobile terminated short message failed because the mobile station failed authentication;
- Illegal equipment indicates that delivery of the mobile terminated short message failed because an IMEI check failed, i.e. the IMEI was blacklisted or not white-listed;
- System Failure;
- SM Delivery Failure:
  - The reason of the SM Delivery Failure can be one of the following in the mobile terminated SM:
    - memory capacity exceeded in the mobile equipment;
    - protocol error;
    - mobile equipment does not support the mobile terminated short message service.
- Unexpected Data Value;
- Data Missing.

#### Provider error

For definition of provider errors see clause 7.6.1.

## 13 Network-Requested PDP Context Activation services

## 13.1 MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service

### 13.1.1 Definition

This service is used by the GGSN to request GPRS routing information from the HLR.

### 13.1.2 Service primitives

**Table 13.1/1: MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
GGSN address	C	C(=)	C	C(=)
GGSN number	M	M(=)		
SGSN address			C	C(=)
Mobile Not Reachable Reason			C	C(=)
User error			C	C(=)
Provider error				O

### 13.1.3 Parameter definition and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### GGSN address

This parameter shall be present if the protocol-converting GSN is used between the GGSN and the HLR.

#### GGSN number

See definition in clause 7.6.2.

#### SGSN address

This parameter shall be present if the outcome of the Send Routing Info For GPRS request to the GPRS application process in the HLR is positive.

#### Mobile Not Reachable Reason

This parameter shall be present if the outcome of the Send Routing Info For GPRS request to the GPRS application process in the HLR is positive and the MNRG flag in the HLR is set. See definition in clause 7.6.3.51.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- Absent Subscriber;
- System Failure;
- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

The diagnostic in the Unknown Subscriber may indicate “Imsi Unknown” or “Gprs Subscription Unknown”.

- Call Barred;

This error will indicate that the received PDP PDUs in the GGSN shall be barred for this MS due to Operator Determined Barring. (The CallBarringCause must be the operatorBarring.)

#### Provider error

These are defined in clause 7.6.1.

## 13.2 MAP\_FAILURE\_REPORT service

### 13.2.1 Definition

This service is used by the GGSN to inform the HLR that network requested PDP-context activation has failed.

### 13.2.2 Service primitives

**Table 13.2/1: MAP\_FAILURE\_REPORT**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
GGSN address	C	C(=)	C	C(=)
GGSN number	M	M(=)		
User error			C	C(=)
Provider error				O

### 13.2.3 Parameter definition and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### GGSN address

This parameter shall be present if the protocol-converting GSN is used between the GGSN and the HLR.

#### GGSN number

See definition in clause 7.6.2.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- System Failure;
- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

These are defined in clause 7.6.1.

## 13.3 MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service

### 13.3.1 Definition

This service is used by the HLR to inform the GGSN that the MS is present for GPRS again.

### 13.3.2 Service primitives

**Table 13.3/1: MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
IMSI	M	M(=)		
GGSN address	C	C(=)		
SGSN address	M	M(=)		
User error			C	C(=)
Provider error				O

### 13.3.3 Parameter definition and use

#### Invoke Id

See definition in clause 7.6.1.

#### IMSI

See definition in clause 7.6.2.

#### GGSN address

This parameter shall be present if the protocol-converting GSN is used between the GGSN and the HLR.

#### SGSN address

See definition in clause 7.6.2.

#### User error

This parameter is sent by the responder when an error is detected and if present, takes one of the following values:

- System Failure;
- Data Missing;
- Unexpected Data Value;
- Unknown Subscriber.

#### Provider error

These are defined in clause 7.6.1.

## 13A Location Service Management Services

### 13A.1 MAP-SEND-ROUTING-INFO-FOR-LCS Service

#### 13A.1.1 Definition

This service is used between the GMLC and the HLR to retrieve the routing information needed for routing a location service request to the servicing VMSC or SGSN. The MAP-SEND-ROUTING-INFO-FOR-LCS is a confirmed service using the primitives from table 13A.1/1.

### 13A.1.2 Service Primitives

**Table 13A.1/1: MAP-SEND-ROUTING-INFO-FOR-LCS**

Parameter name	Request	Indication	Response	Confirm
Invoke Id	M	M(=)	M(=)	M(=)
MLC Number	M	M(=)		
MSISDN	C	C(=)	C	C(=)
IMSI	C	C(=)	C	C(=)
LMSI			C	C(=)
Network Node Number			C	C(=)
GPRS Node Indicator			C	C(=)
Additional Number			C	C(=)
User error			C	C(=)
Provider error				O

### 13A.1.3 Parameter Use

Invoke id

See definition in clause 7.6.1.

MLC Number

See definition in clause 7.6.2.

MSISDN

See definition in clause 7.6.2. The request shall carry either the IMSI or MSISDN. The response shall carry whichever of these was not included in the request (see 3GPP TS 23.271 for details).

IMSI

See definition in clause 7.6.2.

LMSI

See definition in clause 7.6.2. It is an operator option to provide this parameter from the VLR; it is mandatory for the HLR to include the LMSI in a successful response, if the VLR has used the LMSI.

Network Node Number

See definition in clause 7.6.2. This parameter is provided in a successful response. If the "Network Node Number" and "Additional Number" are received in the GMLC, the "Network Node Number" is used in preference to the "Additional Number".

GPRS Node Indicator

See definition in clause 7.6.8. The presence of this parameter is mandatory only if the SGSN number is sent in the Network Node Number.

Additional Number

See definition in clause 7.6.2. This parameter is provided in a successful response. If the "Network Node Number" and "Additional Number" are received in the GMLC, the "Network Node Number" is used in preference to the "Additional Number".

User error

The following errors defined in clause 7.6.1 may be used, depending on the nature of the fault:

- Unknown subscriber;
- Absent Subscriber;
- Facility Not Supported;
- System failure;
- Unexpected Data Value;
- Data missing;
- Unauthorised requesting network.

Provider error

For definition of provider errors see clause 7.6.1.

## 13A.2 MAP-PROVIDE-SUBSCRIBER-LOCATION Service

### 13A.2.1 Definition

This service is used by a GMLC to request the location of a target MS from the visited MSC or SGSN at any time. This is a confirmed service using the primitives from table 13A.2/1.

### 13A.2.2 Service Primitives

**Table 13A.2/1: Provide\_Subscriber\_Location**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
Location Type	M	M(=)		
MLC Number	M	M(=)		
LCS Client ID	M	M(=)		
Privacy Override	U	C(=)		
IMSI	C	C(=)		
MSISDN	C	C(=)		
LMSI	C	C(=)		
LCS Priority	C	C(=)		
LCS QoS	C	C(=)		
IMEI	U	C(=)		
Supported GAD Shapes	C	C(=)		
LCS-Referecne Number	C	C(=)		
LCS Codeword	C	C(=)		
LCS Service Type Id	C	C(=)		
Location Estimate			M	M(=)
Age of Location Estimate			C	C(=)
Additional Location Estimate			C	C(=)
Deferred MT-LR Response Indicator			C	C(=)
User error			C	C(=)
Provider error				O

### 13A.2.3 Parameter Definition and Use

All parameters are defined in clause 7.6. The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.271

Location Type

This parameter identifies the type of location information requested.

#### MLC Number

This is the E.164 number of the requesting GMLC.

#### LCS Client ID

This parameter provides information related to the identity of an LCS client.

#### Privacy Override

This parameter indicates if MS privacy is overridden by the LCS client when the GMLC and VMSC or SGSN for an MT-LR are in the same country.

#### IMSI

The IMSI is provided to identify the target MS. At least one of the IMSI or MSISDN is mandatory.

#### MSISDN

The MSISDN is provided to identify the target MS. At least one of the IMSI or MSISDN is mandatory.

#### LMSI

The LMSI shall be provided if previously supplied by the HLR. This parameter is only used in the case of the MT-LR for CS domain.

#### LCS Priority

This parameter indicates the priority of the location request.

#### LCS QoS

This parameter indicates the required quality of service in terms of response time and accuracy.

#### IMEI

Inclusion of the IMEI is optional.

#### Supported GAD Shapes

This parameter indicates which of the shapes defined in 3GPP TS 23.032 are supported.

#### LCS-Reference Number

This parameter shall be included if a deferred mt-lr procedure is performed.

#### LCS Codeword

See definition in clause 7.6.11.18. The requirements for its presence are specified in 3GPP TS 23.271.

#### LCS Service Type Id

See definition in clause 7.6.11.15. The requirements for its presence are specified in 3GPP TS 23.271.

#### Location Estimate

This parameter provides the location estimate if this is encoded in one of the supported geographical shapes. Otherwise this parameter shall consist of one octet, which shall be discarded by the receiving node.

#### Age of Location Estimate

This parameter indicates how long ago the location estimate was obtained.

#### Additional Location Estimate

This parameter provides the location estimate when not provided by the Location Estimate parameter. It may be sent only if the parameter Supported GAD Shapes has been received in the Provide Subscriber Location indication and the shape to be included is supported by the GMLC.

#### Deferred MT-LR Response Indicator

See definition in clause 7.6.11.2.

#### User error

This parameter is sent by the responder when the location request has failed or cannot proceed and if present, takes one of the following values defined in clause 7.6.1.

- System Failure;
- Data Missing;
- Unexpected Data Value;
- Facility Not Supported;
- Unidentified Subscriber;
- Illegal Subscriber;
- Illegal Equipment;
- Absent Subscriber (diagnostic information may also be provided);
- Unauthorised requesting network;
- Unauthorised LCS Client with detailed reason;
- Position method failure with detailed reason.

#### Provider error

These are defined in clause 7.6.1.

## 13A.3 MAP-SUBSCRIBER-LOCATION-REPORT Service

### 13A.3.1 Definition

This service is used by a VMSC or SGSN to provide the location of a target MS to a GMLC when a request for location is either implicitly administered or made at some earlier time. This is a confirmed service using the primitives from table 13A.3/1.

### 13A.3.2 Service Primitives

**Table 13A.3/1: Subscriber\_Location\_Report**

Parameter name	Request	Indication	Response	Confirm
Invoke id	M	M(=)	M(=)	M(=)
LCS Event	M	M(=)		
LCS Client ID	M	M(=)		
Network Node Number	M	M(=)		
IMSI	C	C(=)		
MSISDN	C	C(=)		
NA-ESRD	C	C(=)		
NA-ESRK	C	C(=)		
IMEI	U	C(=)		
Location Estimate	C	C(=)		
Age of Location Estimate	C	C(=)		
LMSI	U	C(=)		

GPRS Node Indicator	C	C(=)		
Additional Location Estimate	C	C(=)		
Deferred MT-LR Data	C	C(=)		
LCS-Reference Number	C	C(=)		
User error			C	C(=)
Provider error				O

### 13A.3.3 Parameter Definition and Use

All parameters are defined in clause 7.6. The use of these parameters and the requirements for their presence are specified in 3GPP TS 23.271

#### LCS Event

This parameter indicates the event that triggered the Subscriber Location Report.

#### LCS Client ID

This parameter provides information related to the identity of the recipient LCS client.

#### Network Node Number

See definition in clause 7.6.2. This parameter provides the address of the sending node.

#### IMSI

The IMSI shall be provided if available to the VMSC or SGSN.

#### MSISDN

The MSISDN shall be provided if available to the VMSC or SGSN.

#### NA-ESRD

If the target MS has originated an emergency service call in North America, the NA-ESRD shall be provided by the VMSC if available.

#### NA-ESRK

If the target MS has originated an emergency service call in North America, the NA-ESRK shall be provided by the VMSC if assigned.

#### IMEI

Inclusion of the IMEI is optional.

#### Location Estimate

This parameter provides the location estimate. The absence of this parameter implies that a location estimate was not available or could not be successfully obtained. If the obtained location estimate is not encoded in one of the supported geographical shapes then this parameter shall consist of one octet, which shall be discarded by the receiving node.

#### Age of Location Estimate

This parameter indicates how long ago the location estimate was obtained.

#### LMSI

The LMSI may be provided if assigned by the VLR.

#### GPRS Node Indicator

See definition in clause 7.6.8. This presence of this parameter is mandatory only if the SGSN number is sent in the Network Node Number.

#### Additional Location Estimate

This parameter provides the location estimate when not provided by the Location Estimate parameter..

#### Deferred MT-LR Data

See definition in clause 7.6.11.3.

#### LCS-Reference Number

This parameter shall be included if the Subscriber Location Report is the response to a deferred MT location request.

#### User error

This parameter is sent by the responder when the received message contains an error, cannot be forwarded or stored for an LCS client or cannot be accepted for some other reason and if present, takes one of the following values defined in clause 7.6.1.

- System Failure;
- Data Missing;
- Unexpected Data Value;
- Resource Limitation;
- Unknown Subscriber;
- Unauthorised requesting network;
- Unknown or unreachable LCS Client.

#### Provider error

These are defined in clause 7.6.1.

## 13A.4 Void

### 13A.4.1 Void

### 13A.4.2 Void

### 13A.4.3 Void

## 13A.5 Void

### 13A.5.1 Void

### 13A.5.2 Void

### 13A.5.3 Void

## 13A.6 Void

### 13A.6.1 Void

13A.6.2 Void

13A.6.3 Void

13A.7 Void

13A.7.1 Void

13A.7.2 Void

13A.7.3 Void

13A.8 Void

13A.8.1 Void

13A.8.2 Void

13A.8.3 Void

13A.9 Void

13A.9.1 Void

13A.9.2 Void

13A.9.3 Void

---

## 14 General

### 14.1 Overview

Clauses 14 to 17 specify the protocol elements to be used to provide the MAP services described in clause 7.

Clause 15 specifies the elements of procedures for the MAP protocol. Clause 16 specifies the mapping onto TC service primitives. Clause 17 specifies the application contexts, operation packages and abstract syntaxes for the MAP protocol as well as the encoding rules to be applied.

### 14.2 Underlying services

The MAP protocol relies on the services provided by the Transaction Capabilities (TC) of Signalling System Number No. 7, as referenced in clause 6.

### 14.3 Model

The MAP Protocol Machine (MAP PM) can be modelled as a collection of service state machines (SSMs) - one per MAP specific service invoked - coordinated by a MAP dialogue control function with its one state machine: MAP dialogue state machine (DSM). There are two types of Service State Machines: Requesting Service State Machines (RSM) and Performing Service State Machines (PSM).

A new invocation of a MAP PM is employed on the receipt of a MAP-OPEN request primitive or a TC-BEGIN indication primitive. Each invocation controls exactly one MAP dialogue. For each MAP specific service invoked during a dialogue, a MAP RSM is created at the requestor's side and a MAP PSM is created at the performer's side.

This modelling is used only to facilitate understanding and the MAP behaviour descriptions and is not intended to suggest any implementation. SDL descriptions are organised according to this model.

How the MAP-service-user and the MAP refer to a MAP dialogue (i.e. a MAP PM invocation) is a local implementation matter.

How TC dialogue identifiers are assigned to a MAP PM invocation is also a local implementation matter.

## 14.4 Conventions

The behaviour of the MAP PM depends on the application-context-name associated with the dialogue. One major difference is that the MAP requests the transfer of the application-context-name by TC only for those contexts which do not belong to the so-called "version one context set".

The "version one context set" is a set of application-contexts which model the behaviour of a MAP V1 implementation according to the latest phase 1 version of GSM 09.02. This set is defined in clause 15.

The procedures described in clause 15 are used when the application-context-name does not refer to a dialogue between an MSC and its VLR. When the application-context-name refers to a dialogue between an MSC and its VLR the MAP PM procedures are a local implementation matter.

## 15 Elements of procedure

### 15.1 Handling of unknown operations

Unknown operations (i.e. a standard operation introduced in a later version of the MAP specification, or a private operation) can be introduced into MAP in a backwards compatible way. This means that the receiver of an unknown operation shall, if the dialogue state allows it, send a TC-REJECT component to the sender of the operation indicating 'unrecognised operation' and continue with the processing of further components or messages exchanged within the dialogue as if the unknown operation had not been received.

The standardised structure of a MAP dialogue shall not be affected by the invocation of unknown operations, i.e. if a dialogue uses only a TC-BEGIN message which is acknowledged by a TC-END message, a TC-CONTINUE message shall not be used to invoke an unknown operation. However the standardised structure of a MAP dialogue may be affected by the rejection of unknown operations, i.e. if a dialogue uses only a TC-BEGIN message which is acknowledged by a TC-END message, a TC-CONTINUE message followed by a TC-END message may be used to carry the rejection of an unknown operation and the response to the standardised operation. The entity which initiated a dialogue whose standardised structure is a TC-BEGIN message which is acknowledged by a TC-END message shall not send any messages in that dialogue after the TC-BEGIN. Note that if the dialogue structure is affected as described in this paragraph the TC-CONTINUE shall include the dialogue portion required to confirm the acceptance of the dialogue.

Unknown operations may be invoked in the following types of message (there is no restriction as to how many unknown operations can be invoked in a message):

- TC-BEGIN: the component to invoke the unknown operation shall follow the component of the standard operation which is included in this message.
- TC-CONTINUE: the component to invoke the unknown operation may be transported as the only component in a stand-alone message or may be grouped with existing operations. In the latter case a specific sequencing of components is not required.
- TC-END: if the component to invoke the unknown operation is grouped with an existing operation a specific sequencing of components is not required

The TC-REJECT component may be sent in the following messages:

- TC-CONTINUE or TC-END: either as the only component of the message or grouped with an existing component. The choice is up to the MAP-Service User.

If the received message contains only unknown operations the MAP-Service User shall send the TC-REJECT components in a TC-CONTINUE message to the peer entity, if the dialogue state allows it.

If the received message contains unknown operations and standard operations and the standardised structure of the dialogue requires the response to the standard operation to be sent within a TC-END message, then the MAP-Service User may send the response to the standard operations and the TC-REJECT components for the unknown operations in a TC-CONTINUE message followed by a TC-END message. Neither a specific distribution of the components to the TC messages nor a specific sequencing of components is required.

Note that the SDL diagrams of clauses 19 - 25 do not show the report to the MAP-Service User about the reception of the unknown operation. This has been done for simplicity of description; the MAP PM may inform the MAP-Service User.

The sender of the unknown operation shall ensure that there is enough room in the used message for the unknown operation.

## 15.2 Dialogue establishment

The establishment of a MAP dialogue involves two MAP-service-users: the dialogue-initiator and the dialogue-responder.

This procedure is driven by the following signals:

- a MAP-OPEN request primitive from the dialogue-initiator;
- a TC-BEGIN indication primitive occurring at the responding side;
- a MAP-OPEN response primitive from the dialogue-responder;
- the first TC-CONTINUE indication primitive occurring at the initiating side;

and under specific conditions:

- a TC-END indication primitive occurring at the initiating side;
- a TC-U-ABORT indication primitive occurring at the initiating side;
- a TC-P-ABORT indication primitive occurring at the initiating side.

One instance of the MAP dialogue state machine runs at the initiating side, and one at the responding side.

### 15.2.1 Behaviour at the initiating side

The behaviour of the MAP dialogue state machine at the initiating side is defined in sheets 1 – 9 of the process Secure\_MAP\_DSM.

Sheet 1: The MAP protocol machine decides according to the application context name received in the MAP-OPEN request and the identity of the responder whether secure transport of the MAP dialogue is required, and if so what level of protection is required. This decision is based on bilateral agreements between the operators of the network entities

concerned; it requires the dialogue initiating entity to store configuration information on which the decision is based. Secure transport of a MAP dialogue is required if any of the operation components (invoke, result or error) used in the application context for the dialogue requires secure transport, as shown in 3GPP TS 33.200. If a dialogue uses secure transport then MAP secure transport services shall be used with a protection mode of "No protection" to produce the same functional effect as unsecured transport for those components which do not need protection. If secure transport is required, the MAP protocol machine builds a protected dialogue portion (including the AC name and any user information received in the MAP-OPEN request, encoded as user information for the TC-BEGIN) for the TC-BEGIN; otherwise it builds a normal dialogue portion using the application context name and any user data included in the MAP-OPEN request.

Sheet 2: If secure transport is used, each MAP specific service request is stored in case drop-back to unsecured transport is to be invoked.

Sheet 2: If secure transport is required, each MAP specific service request triggers the creation of an instance of the Secure\_Requesting\_MAP\_SSM to handle the secure transport of the request. If secure transport is not required, each MAP specific service request triggers the creation of an instance of the Requesting\_MAP\_SSM to handle the transport of the request.

Sheet 3: When the MAP dialogue state machine at the initiating side is waiting for a response from the responding side, a TC-END indication which echoes the AC name which was sent in the TC-BEGIN indicates acceptance of the dialogue. If secure transport is required, acceptance of the dialogue opening request which was transported in the secure dialogue opening request is indicated by the encapsulated AC name transported in the user information of the TC-END being equal to the encapsulated AC which was included in the user information of the TC-BEGIN. Mismatch of either the AC name or the encapsulated AC name indicates failure of the dialogue opening.

Sheet 3: If the dialogue opening is accepted, any components included in the TC-END are processed and passed to the MAP-Service User. The dialogue is closed by sending a MAP-CLOSE to the MAP-Service User.

Sheet 3, sheet 4, sheet 5, sheet 6, sheet 7, sheet 8, sheet 9: when a dialogue is terminated, the MAP dialogue state machine terminates all instances of the Requesting\_MAP\_SSM or Secure\_Requesting\_MAP\_SSM which are active for this dialogue.

Sheet 4, sheet 5: It is a matter for agreement between the operators of the network entities involved whether fallback to unsecured transport is acceptable if secure transport is not possible. This requires the dialogue initiating entity to store configuration information on which this decision is based.

Sheet 4: A TC-P-ABORT with an abort parameter Incorrect\_Transaction\_Portion indicates that the responding side does not support a MAP version higher than 1. If secure transport is not required, this triggers a MAP-OPEN confirm indicating that the dialogue is refused, with a refuse reason potential version incompatibility. The MAP-Service User may then decide to retry the dialogue at MAP version 1. If secure transport is required and fallback to unsecured transport is acceptable, the dialogue machine retries the dialogue with unsecured transport. If secure transport is required and fallback to unsecured transport is not acceptable, this triggers a MAP-OPEN confirm indicating that the dialogue is refused, with a refuse reason secured transport not possible. No retry of the dialogue with a lower version is allowed.

Sheet 5: If the initiating side receives a TC-U-ABORT with an abort reason AC not supported and secure transport is required, then secured transport is not possible. If fallback to unsecured transport is acceptable, the dialogue machine retries the dialogue with unsecured transport. If fallback to unsecured transport is not acceptable, this triggers a MAP-OPEN confirm indicating that the dialogue is refused, with a refuse reason secured transport not possible. No retry of the dialogue with a lower version is allowed.

Sheet 7: A TC-U-ABORT with a user-specific abort reason leads to a check of the user information. User information carrying a MAP-Refuse PDU with a refuse reason encapsulated AC not supported means that the responding entity supports the secure transport AC, but not the AC required for the protected request. This triggers a MAP-OPEN confirm indicating that the dialogue is refused, with a refuse reason AC not supported. The MAP-Service User may then decide to retry the dialogue with a lower AC version; this will again use secure transport. User information carrying a MAP-Refuse PDU with a refuse reason transport protection not adequate means that the responding entity is not prepared to accept a dialogue with the protection mode offered by the initiating entity: either unsecured transport or secured transport with an inadequate protection mode.

Sheet 9: When the MAP dialogue state machine at the initiating side is waiting for a response from the responding side, a TC-CONTINUE indication which echoes the AC name which was sent in the TC-BEGIN indicates acceptance of the dialogue. If secure transport is required, acceptance of the dialogue opening request which was transported in the secure dialogue opening request is indicated by the encapsulated AC name transported in the user information of the TC-

CONTINUE being equal to the encapsulated AC which was included in the user information of the TC-BEGIN. Mismatch of either the AC name or the encapsulated AC name indicates failure of the dialogue opening.

Sheet 9: If the dialogue opening is accepted, any components included in the TC-CONTINUE are processed and passed to the MAP-Service User. The dialogue has then reached the established state.

## 15.2.2 Behaviour at the responding side

The behaviour of the MAP dialogue state machine at the responding side is defined in sheets 10 – 14 of the process Secure\_MAP\_DSM.

Sheet 10: If no application context information is included in the TC-BEGIN indication, this implies a MAP version 1 dialogue. An explicit application context indicating version 1 is treated as abnormal behaviour.

Sheet 10, sheet 11: The test "Unsecured\_Transport\_Permitted" takes the "True" exit if there is an agreement between the operators of the dialogue initiating entity and the dialogue responding entity to allow unsecured transport for the application context for the requested dialogue. This requires the dialogue responding entity to store configuration information on which this decision is based.

Sheet 10: The task "Extract\_User\_Information" includes decryption of the protected user information if confidentiality protection has been applied.

Sheet 10: The test "Protection mode correct" takes the "yes" exit if the protection mode is acceptable to the receiving entity, based on the identity of the sending entity and the encapsulated application context for the requested dialogue.

Sheet 11: The v1 application context name which corresponds to a v1 operation is derived using the information in table 15.2/1.

**Table 15.2/1: Mapping of V1 operation codes on to application-context-names**

Operation	Application-context-name (note 1)
updateLocation	networkLocUpContext-v1
cancelLocation	locationCancellationContext-v1
provideRoamingNumber	roamingNumberEnquiryContext-v1
insertSubscriberData	subscriberDataMngtContext-v1
deleteSubscriberData	subscriberDataMngtContext-v1
sendParameters	infoRetrievalContext-v1 networkLocUpContext-v1 (note 2)
beginSubscriberActivity	networkFunctionalSsContext-v1
sendRoutingInfo	locationInfoRetrievalContext-v1
performHandover	handoverControlContext-v1
reset	resetContext-v1
activateTraceMode	tracingContext-v1
deactivateTraceMode	tracingContext-v1
sendRoutingInfoForSM	shortMsgGatewayContext-v1
forwardSM	shortMsgRelayContext-v1
reportSM-deliveryStatus	shortMsgGatewayContext-v1
noteSubscriberPresent	mwdMngtContext-v1
alertServiceCentreWithoutResult	shortMsgAlertContext-v1
checkIMEI	EquipmentMngtContext-v1

NOTE 1: These symbolic names refer to the object identifier value defined in clause 17 and allocated to each application-context used for the MAP.

NOTE 2: The choice between the application contexts is based on the parameters received in the operation.

Sheet 12: If the AC name received in the TC-BEGIN indicated that secure transport is required, the MAP dialogue state machine checks whether the encapsulated application context name is supported. If it is supported, the dialogue can be accepted. If the encapsulated AC name is not supported, the MAP dialogue machine indicates this by sending a TC-U-ABORT with a user-specific abort reason and user information indicating that the encapsulated AC name is not supported.

Sheet 12: If the dialogue is accepted, each component present in the TC-BEGIN is forwarded to an instance of a Performing\_MAP\_SSM or Secure\_Performing\_MAP\_SSM, by executing the procedure Process\_Components.

Sheet 13: If the MAP dialogue state machine receives a MAP-OPEN confirm with a result accepted, it waits for any MAP specific service request or response primitives or a MAP-DELIMITER request.

Sheet 14: A MAP-DELIMITER request triggers a TC-CONTINUE request to accept the dialogue. The dialogue has then reached the established state.

Sheet 13, sheet 14: When a dialogue is terminated, the MAP dialogue state machine terminates all instances of the Requesting\_MAP\_SSM, Secure\_Requesting\_MAP\_SSM, Performing\_MAP\_SSM or Secure\_Performing\_MAP\_SSM which are active for this dialogue.

## 15.3 Dialogue continuation

Once established the dialogue is said to be in a continuation phase. The behaviour of the MAP dialogue state machine in this phase is defined in sheets 15 – 17 of the process Secure\_MAP\_DSM.

Both MAP users can request the transfer of MAP APDUs until one of them requests the termination of the dialogue.

Normal closure of an established dialogue is shown on sheet 16; abnormal termination is shown on sheet 17.

## 15.4 Load control

If an entity which should respond to a MAP dialogue opening request is overloaded, it uses the AC of the request to determine whether to discard the request. If the AC of the request is secure transport, the encapsulated AC (i.e. the AC of the dialogue for which secure transport is required) is used to determine whether the request is discarded.

The priority level allocated to each application-context is described in clause 5, tables 5.1/1 and 5.1/2.

## 15.5 Procedures for MAP specific services

This clause describes the MAP procedures for MAP specific services. These procedures are driven by the following types of event:

- a MAP specific request or a MAP specific response primitive;
- a component handling primitive from TC.

A Service State Machine is activated when of one of the following signals is received:

- a MAP request primitive, which activates a requesting SSM;
- a TC-INVOKE indication primitive without a linked identifier, which activates a performing SSM.

For component handling primitives there are two types of event:

- events which activate a Service State Machine or which can be related to an existing one;
- events which cannot be related to a Service State Machine.

### 15.5.1 Service invocation for unsecured dialogues

The behaviour of the requesting SSM which handles a service for an unsecured dialogue is defined by the SDL for the process Requesting\_MAP\_SSM. The requesting SSM receives a MAP service request from the MAP-Service User via the MAP dialogue state machine and sends a TC-INVOKE request to TCAP. When a confirm is received from TCAP via the MAP dialogue state machine, the requesting SSM forwards a MAP service confirm to the MAP-Service User.

The response to a MAP service invocation may come in the form of a linked request. If the linked request corresponds to a class 4 operation, this is handled by the requesting SSM. If the linked request corresponds to a class 1, 2 or 3 operation, the MAP dialogue state machine sends a notification to the requesting SSM and creates an instance of a performing SSM to handle the linked request. The test "Linked\_Operation\_Allowed" on sheet 3 of the process Requesting\_MAP\_SSM takes the (TRUE) exit if the definition of the parent operation includes the received linked operation as a permitted linked operation; otherwise the test takes the (FALSE) exit.

The mapping of MAP specific services on to remote operations is given in table 16.2/1.

### 15.5.2 Service invocation for secured dialogues

The behaviour of the requesting SSMs which handle a service for a secured dialogue is defined by the SDL for the processes Secure\_Requesting\_MAP\_SSM and Requesting\_MAP\_SSM. The secure requesting SSM receives a MAP service request from the MAP-Service User via the MAP dialogue state machine and constructs the corresponding MAP secure transport service request. It then creates an instance of the requesting SSM and sends the MAP secure transport service request to it. The requesting SSM sends a TC-INVOKE request to TCAP. When the MAP dialogue state machine receives a confirm from TCAP, it forwards it to the secure requesting SSM, which unpacks the MAP service confirm from the MAP secure transport service confirm and sends it to the requesting SSM. The requesting SSM forwards the MAP service confirm to the MAP-Service User.

The response to a MAP service invocation which was carried in a secure dialogue may come in the form of a linked request. This linked request is carried in a MAP secure transport service request of the class corresponding to the operation; however the MAP secure transport service request is not linked to another MAP secure transport service request. If the linked request which is carried in the MAP secure transport service corresponds to a class 4 operation, this is handled by the secure requesting service state machine, which unpacks the linked request and sends it to the requesting SSM. If the linked request which is carried in the MAP secure transport service corresponds to a class 1, 2 or 3 operation, the MAP dialogue state machine sends a notification to the secure requesting SSM (which passes the notification to the requesting SSM) and creates an instance of a secure performing SSM to handle the linked request.

### 15.5.3 Service invocation receipt for unsecured dialogues

The behaviour of the performing SSM which handles a service for an unsecured dialogue is defined by the SDL for the process Performing\_MAP\_SSM. The performing SSM receives a TC-INVOKE component from TCAP via the MAP dialogue state machine and sends a MAP service indication to the MAP-Service User. When a MAP service response is received from the MAP-Service User via the MAP dialogue state machine, the performing SSM forwards a TC-RESULT or TC-U-ERROR component to TCAP.

### 15.5.4 Service invocation receipt for secured dialogues

The behaviour of the performing SSMs which handle a service for a secured dialogue is defined by the SDL for the processes Secure\_Performing\_MAP\_SSM and Performing\_MAP\_SSM. The secure performing SSM receives a TC-INVOKE component containing a secure MAP transport service from TCAP via the MAP dialogue state machine and unpacks the MAP service indication from it. It then creates an instance of the performing SSM and sends the MAP service indication to it. The performing SSM forwards the MAP service indication to the MAP-Service User. When the MAP dialogue state machine receives a MAP service response from the MAP-Service User it forwards it to the secure performing SSM. The secure performing SSM constructs a MAP secure transport service response and sends it to the performing SSM, which forwards a TC-RESULT or TC-U-ERROR component to TCAP.

### 15.5.5 Handling of components received from TC

The procedure Process\_Components shows the handling of components received in a TC-BEGIN, TC-CONTINUE or TC-END message.

Sheet 1: If a linked invoke component is transported securely, the linked invoke ID is carried as part of the security header, so that it can be checked without the need to unpack the protected component.

Sheet 2: If a linked invoke component corresponds to a class 4 operation, the MAP dialogue state machine sends it to the requesting SSM instance identified by the linked invoke ID. If a linked invoke component corresponds to any other class of operation, the MAP dialogue state machine sends a notification to the requesting SSM instance identified by the linked invoke ID, creates an instance of a performing SSM and sends the invoke component to it.

## 15.6 SDL descriptions

The following SDL specification describes a system which includes three blocks: MAP-user, MAP-provider and TC.

Such a system resides in each network component supporting MAP and communicates with its peers via the lower layers of the signalling network which are part of the environment.

Only the MAP-provider is fully described in this clause. The various types of processes which form the MAP-User block and the TC block are described respectively in clauses 18 to 25 of the present document and in CCITT Recommendation Q.774.

The MAP-Provider block communicates with the MAP\_USER via two channels U1 and U2. Via U1 the MAP-provider receives the MAP request and response primitives. Via U2 it sends the MAP indication and confirm primitives.

The MAP-Provider block communicates with TC via two channels P1 and P2. Via P1 the MAP-Provider sends all the TC request primitives. Via P2 it receives all the TC indication primitives.

The MAP-Provider block is composed of the six following types of process:

- a) Secure\_MAP\_DSM: This type of process handles a dialogue for both secured and unsecured transport of MAP messages. There exists one process instance per MAP dialogue.
- b) Load\_Ctrl: This type of process is in charge of load control. There is only one instance of this process in each system.
- c) Requesting\_MAP\_SSM: This type of process handles a MAP service requested during a dialogue. For unsecured transport of MAP messages, an instance of this process is created by the instance of the Secure\_MAP\_DSM process for each requested MAP service. For secured transport of MAP messages, an instance of this process is created by the instance of the Secure\_Requesting\_MAP\_SSM process for each requested MAP-Secure-Transport-service.
- d) Secure\_Requesting\_MAP\_SSM: This type of process handles a MAP service requested during a dialogue for secured transport of MAP messages. An instance of this process is created by the Secure\_MAP\_DSM process for each requested MAP service.
- e) Performing\_MAP\_SSM: This type of process handles a MAP service performed during a dialogue. For unsecured transport of MAP messages, an instance of this process is created by the instance of the Secure\_MAP\_DSM process for each MAP service to be performed. For secured transport of MAP messages, an instance of this process is created by the instance of the Secure\_Performing\_MAP\_SSM process for each MAP-Secure-Transport-service to be performed.
- f) Secure\_Performing\_MAP\_SSM: This type of process handles a MAP service performed during a dialogue for secured transport of MAP messages. An instance of this process is created by the Secure\_MAP\_DSM process for each MAP service to be performed.

A process Secure\_MAP\_DSM exchanges external signals with other blocks as well as internal signals with the other processes of the MAP-Provider block. The external signals are either MAP service primitives or TC service primitives.

The signal routes used by the various processes are organised as follows:

- a) A process Secure\_MAP\_DSM receives and sends events from/to the MAP\_user via signal route User1/User2. These routes use channels U1 and U2 respectively.
- b) A process Secure\_MAP\_DSM receives and sends events from/to the TCAP via signal route TC1/TC2. These routes use channels P1 and P2 respectively.
- c) A process Secure\_MAP\_DSM receives and sends events from/to the LOAD\_CTRL process via signal route Load1/Load2. These routes are internal.
- d) A process Secure\_MAP\_DSM sends events to the Performing\_MAP\_SSM processes via signal route Intern1. This route is internal.
- e) A process Secure\_MAP\_DSM sends events to the Requesting\_MAP\_SSM processes via signal route Intern2. This route is internal.
- f) A process Secure\_MAP\_DSM sends events to the Secure\_Performing\_MAP\_SSM processes via signal route Intern3. This route is internal.
- g) A process Secure\_MAP\_DSM sends events to the Secure\_Requesting\_MAP\_SSM processes via signal route Intern4. This route is internal.
- h) A process Performing\_MAP\_SSM sends events to the MAP\_USER via signal route User3. This route uses channel U2.

- i) A process Performing\_MAP\_SSM sends events to the TCAP via signal route TC3. This route uses channel P1.
- j) A process Requesting\_MAP\_SSM sends events to the MAP\_USER via signal route User4. This route uses channel U2.
- k) A process Requesting\_MAP\_SSM sends events to the TCAP via signal route TC4. This route uses channel P1.
- l) A process Secure\_Performing\_MAP\_SSM sends events to the MAP\_USER via signal route User5. This route uses channel U2.
- m) A process Secure\_Performing\_MAP\_SSM sends events to the TCAP via signal route TC5. This route uses channel P1.
- n) A process Secure\_Performing\_MAP\_SSM sends events to the corresponding Performing\_MAP\_SSM process via signal route Intern5. This route is internal.
- o) A process Secure\_Requesting\_MAP\_SSM sends events to the MAP\_USER via signal route User6. This route uses channel U2.
- p) A process Secure\_Requesting\_MAP\_SSM sends events to the TCAP via signal route TC6. This route uses channel P1.
- q) A process Secure\_Requesting\_MAP\_SSM sends events to the corresponding Requesting\_MAP\_SSM process via signal route Intern6. This route is internal.

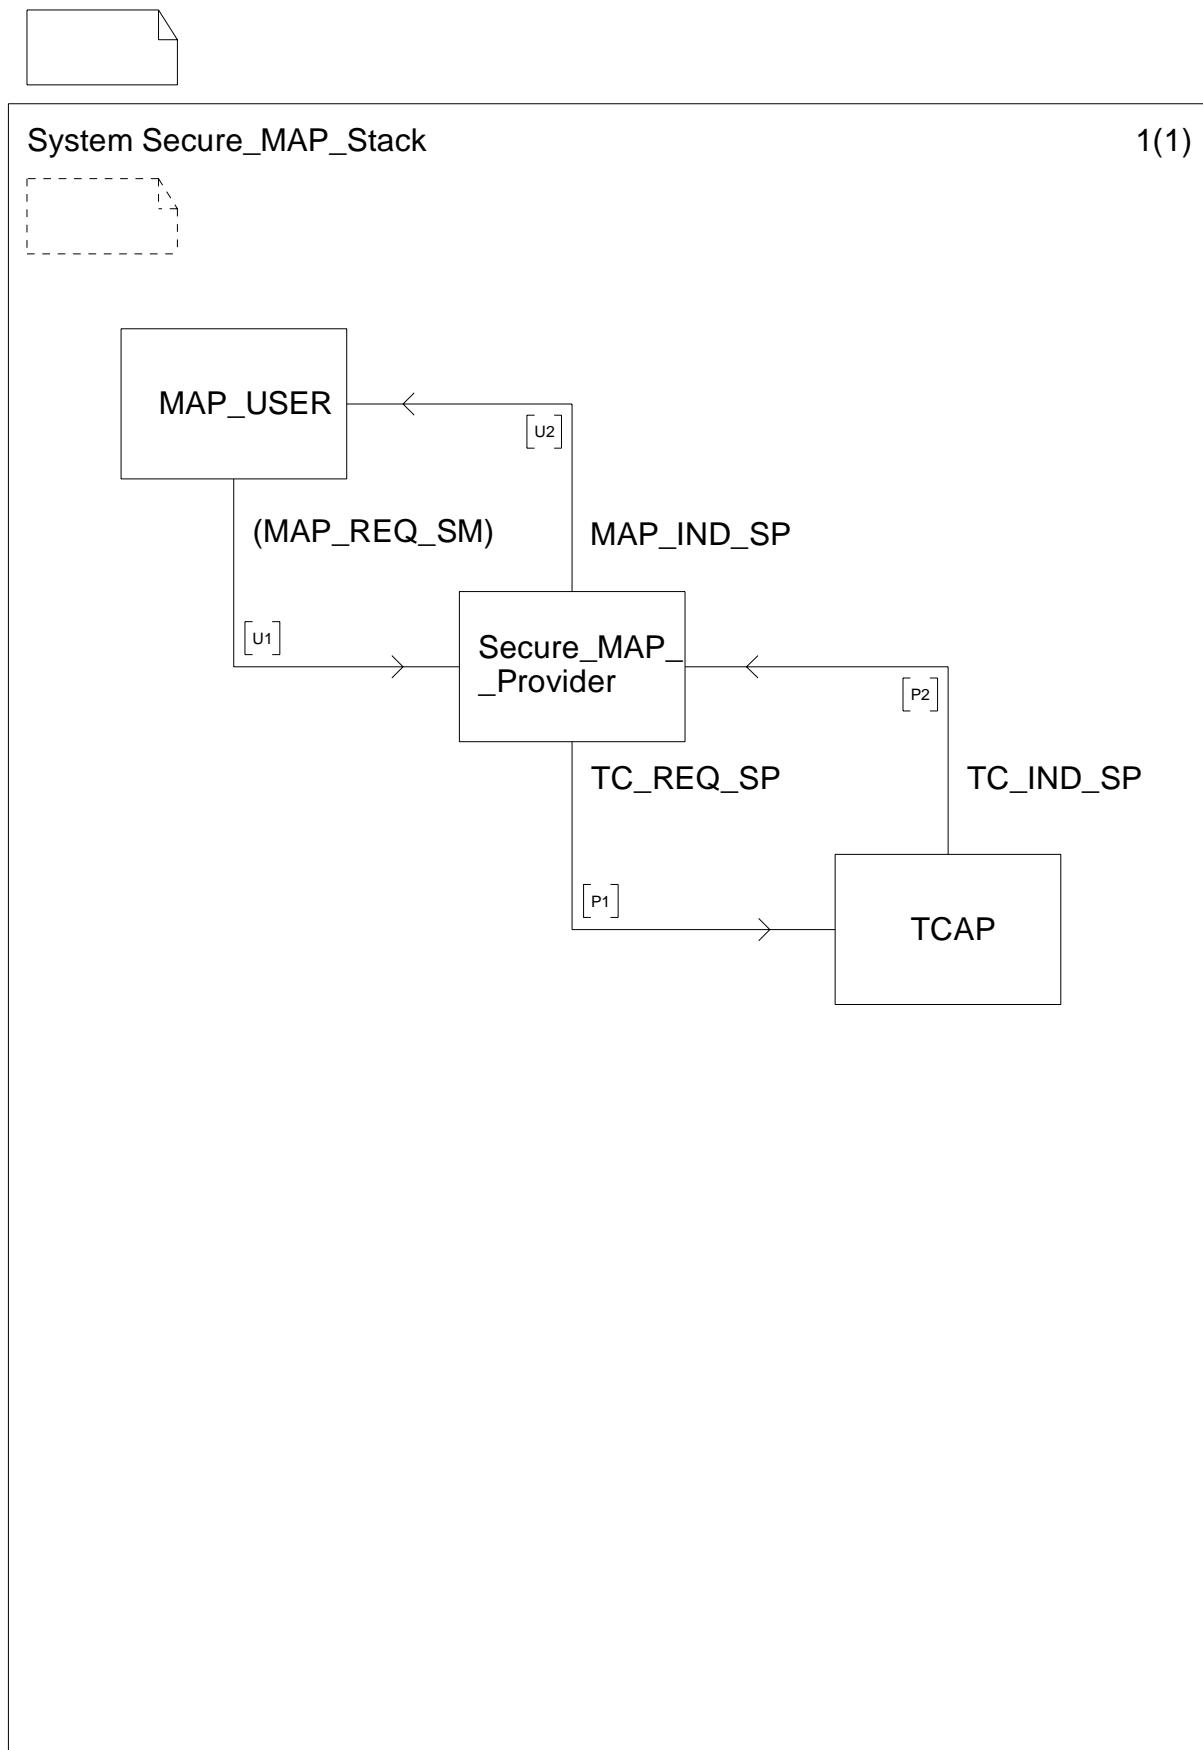


Figure 15.6/1: System Secure\_MAP\_Stack

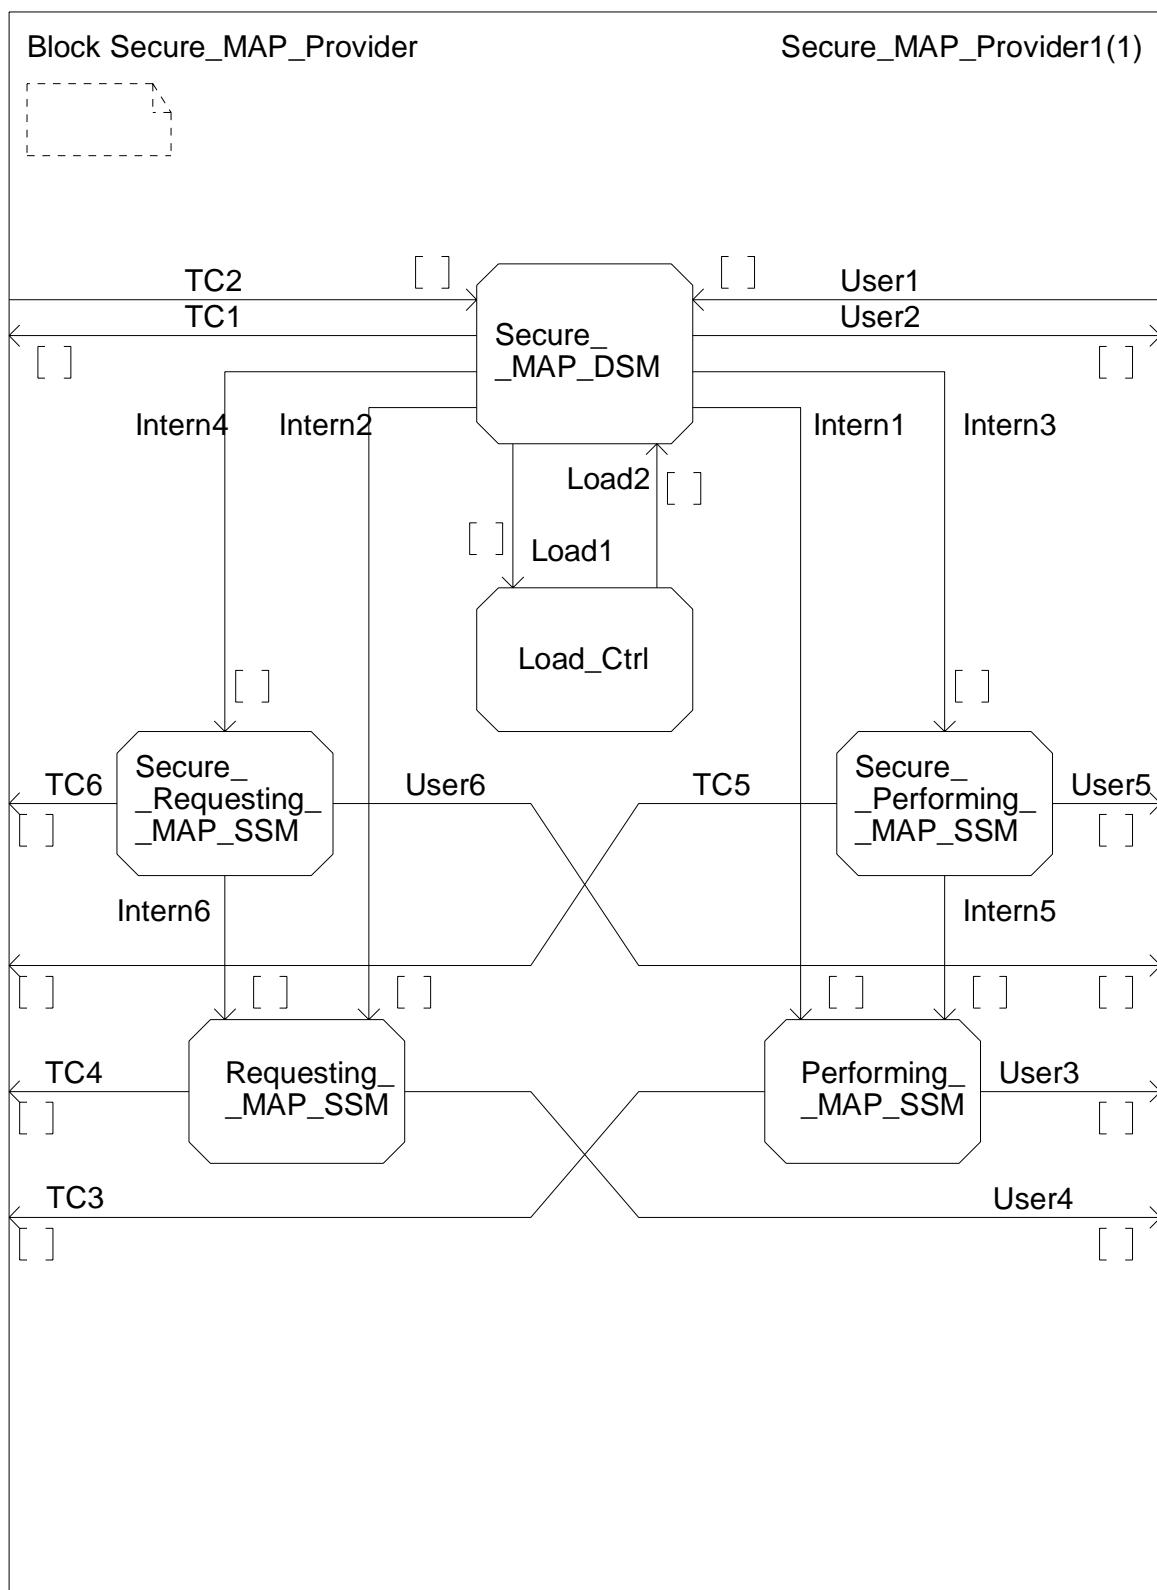


Figure 15.6/2: Block Secure\_MAP\_Provider

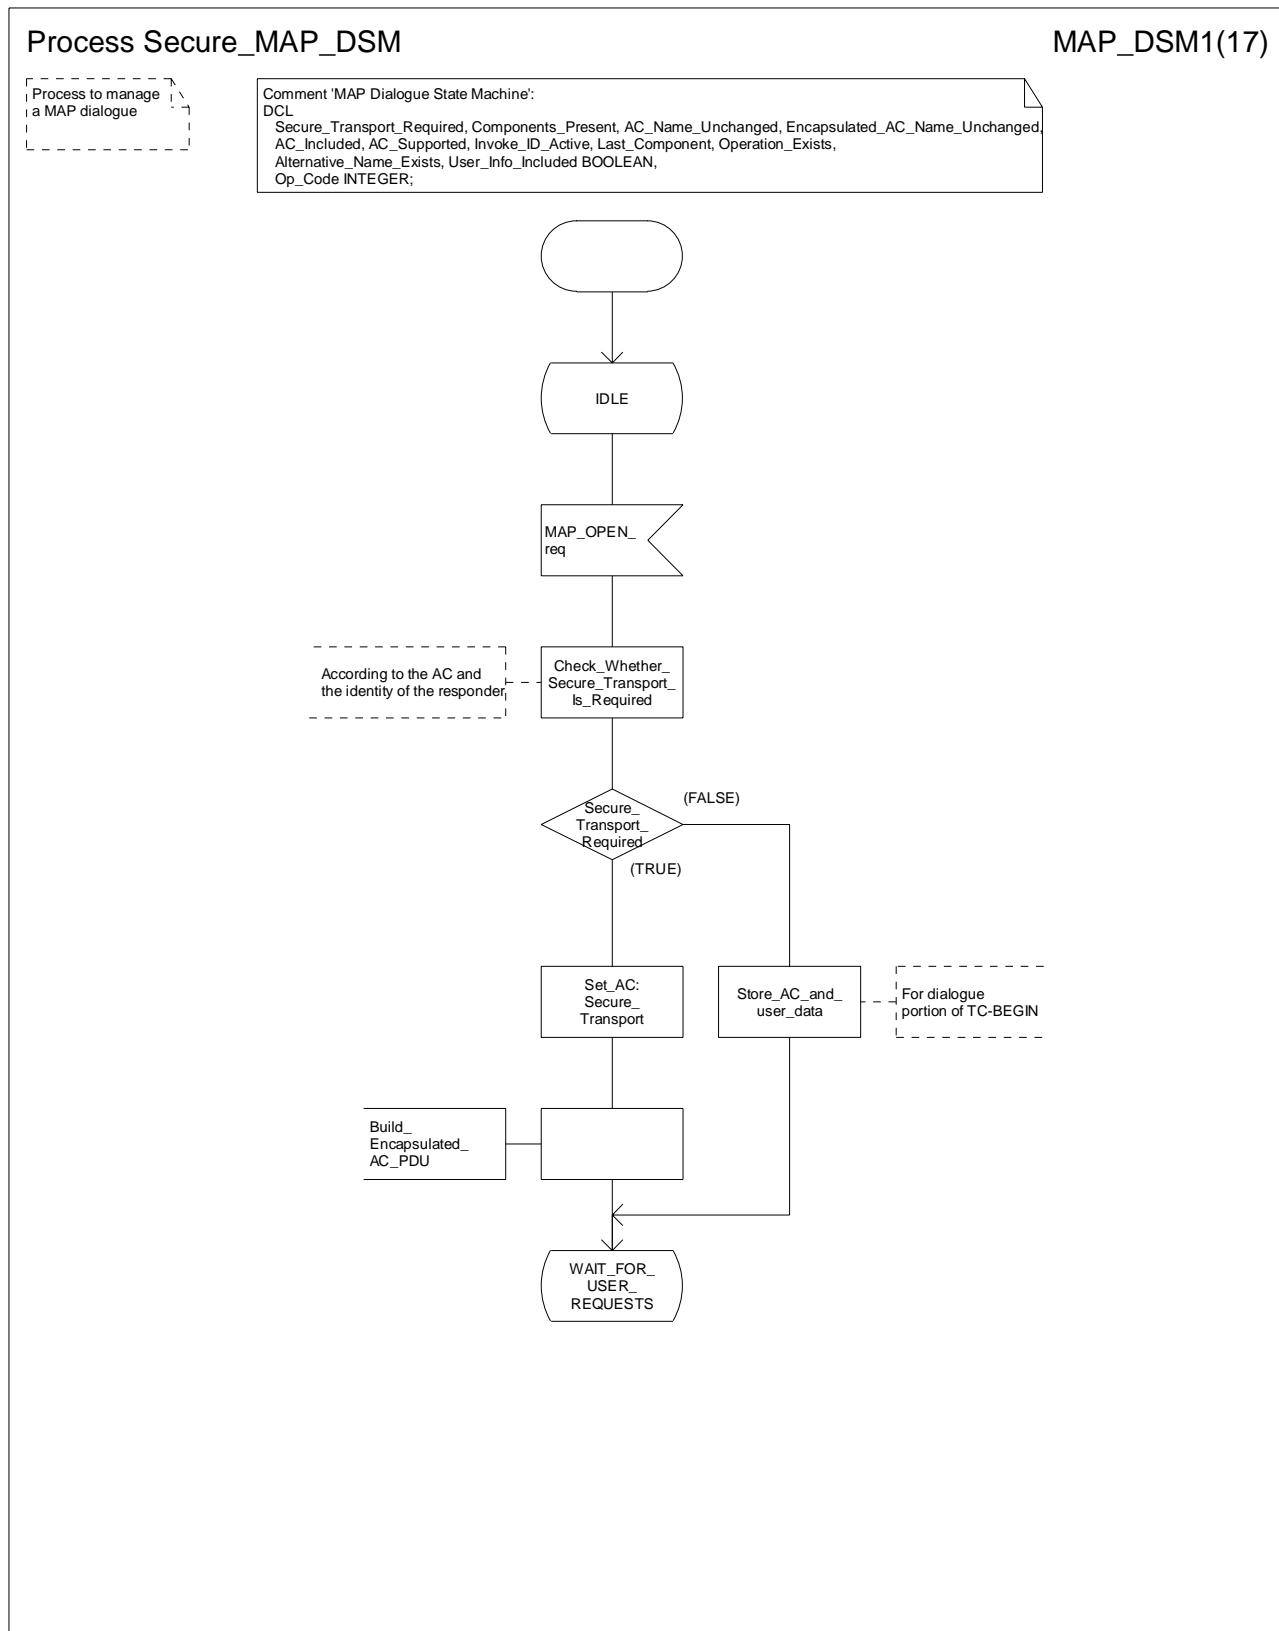


Figure 15.6/3a: Process Secure\_MAP\_DSM (sheet 1)

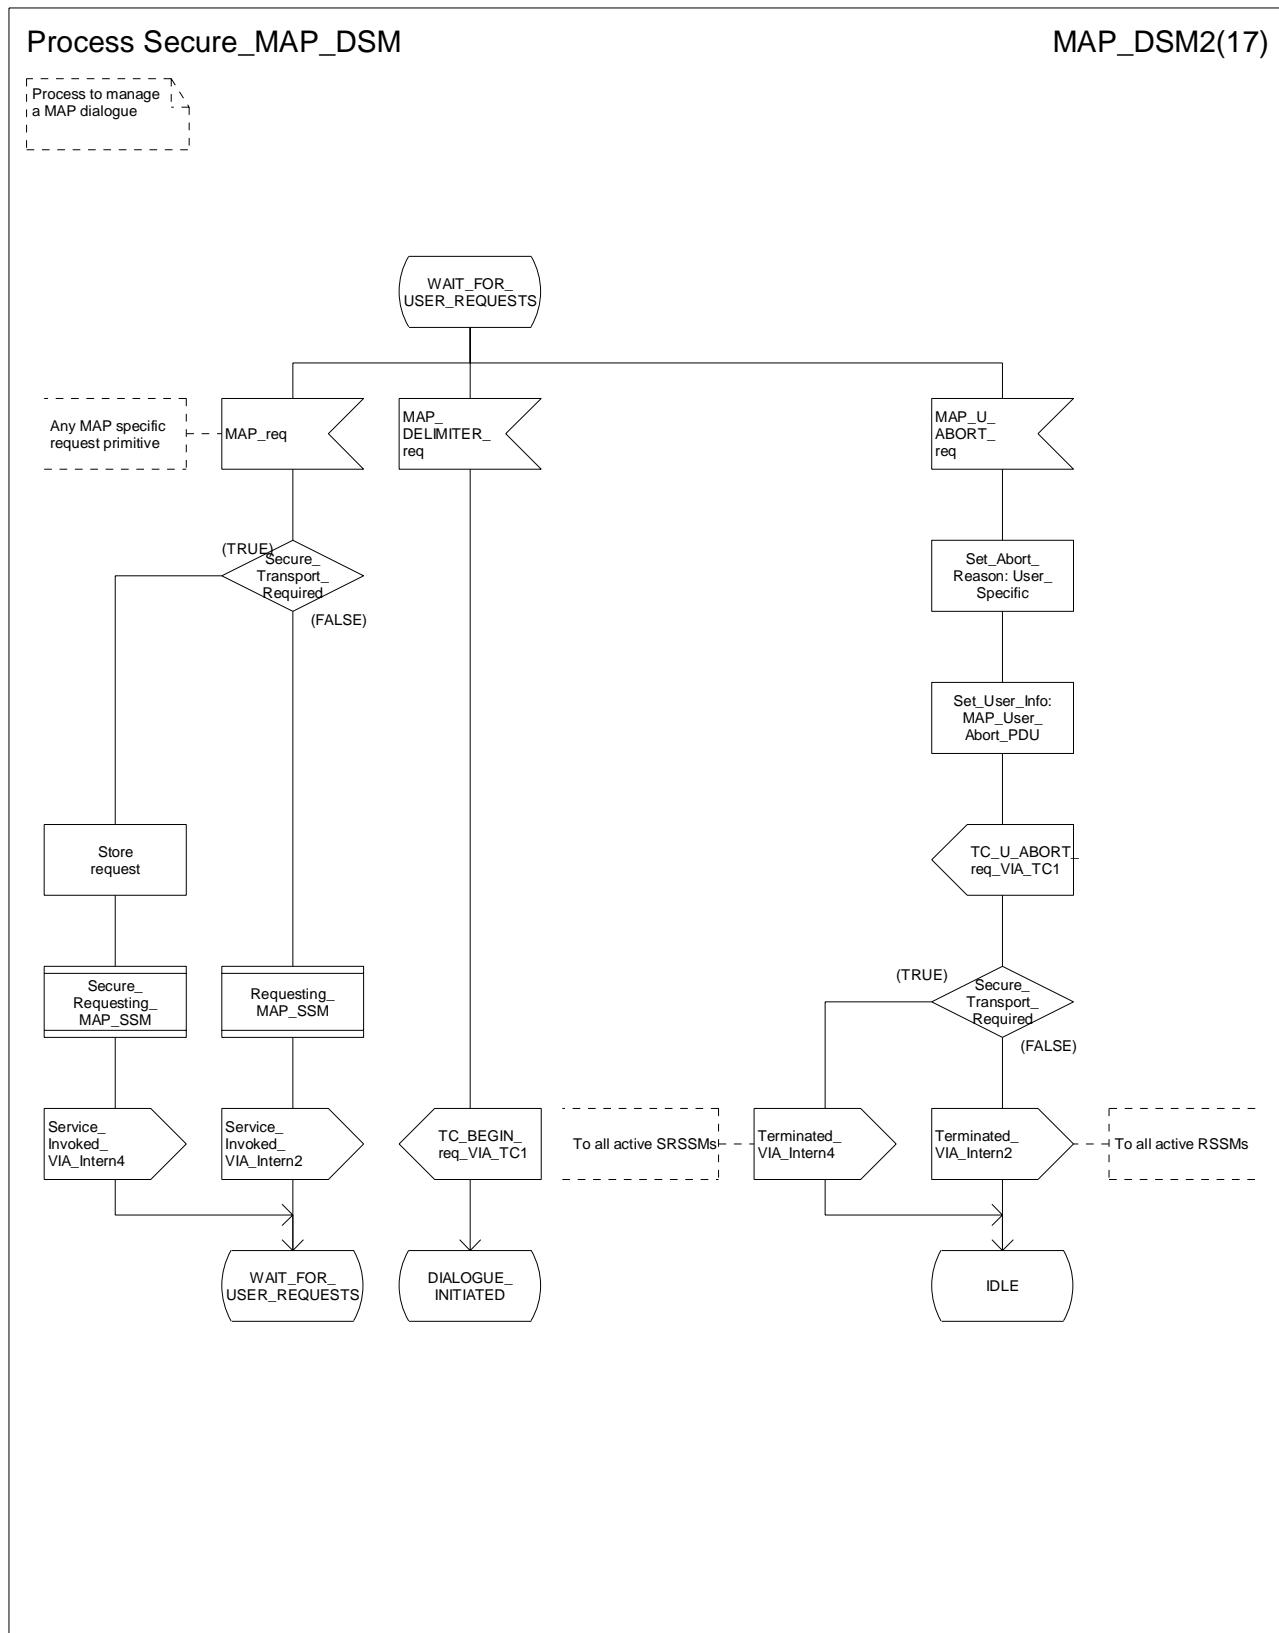


Figure 15.6/3b: Process Secure\_MAP\_DSM (sheet 2)


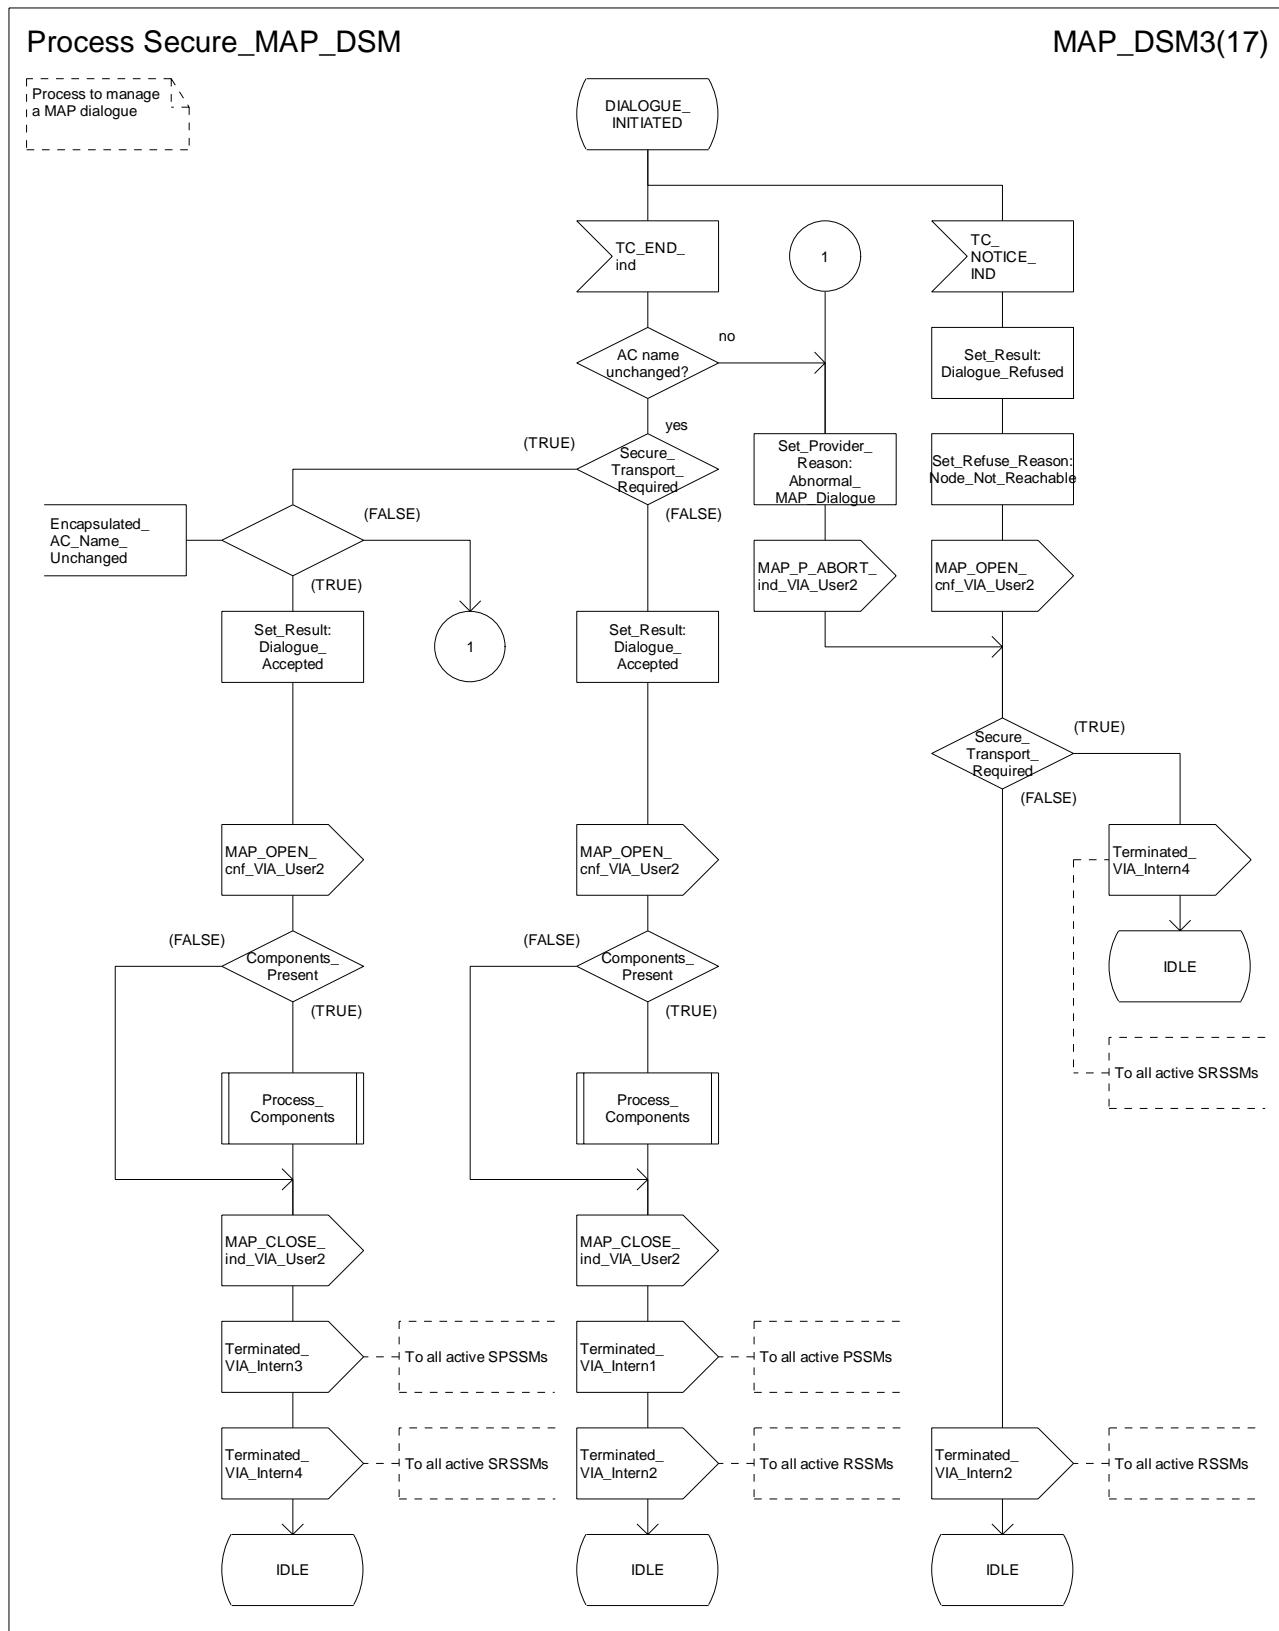


Figure 15.6/3c: Process Secure\_MAP\_DSM (sheet 3)

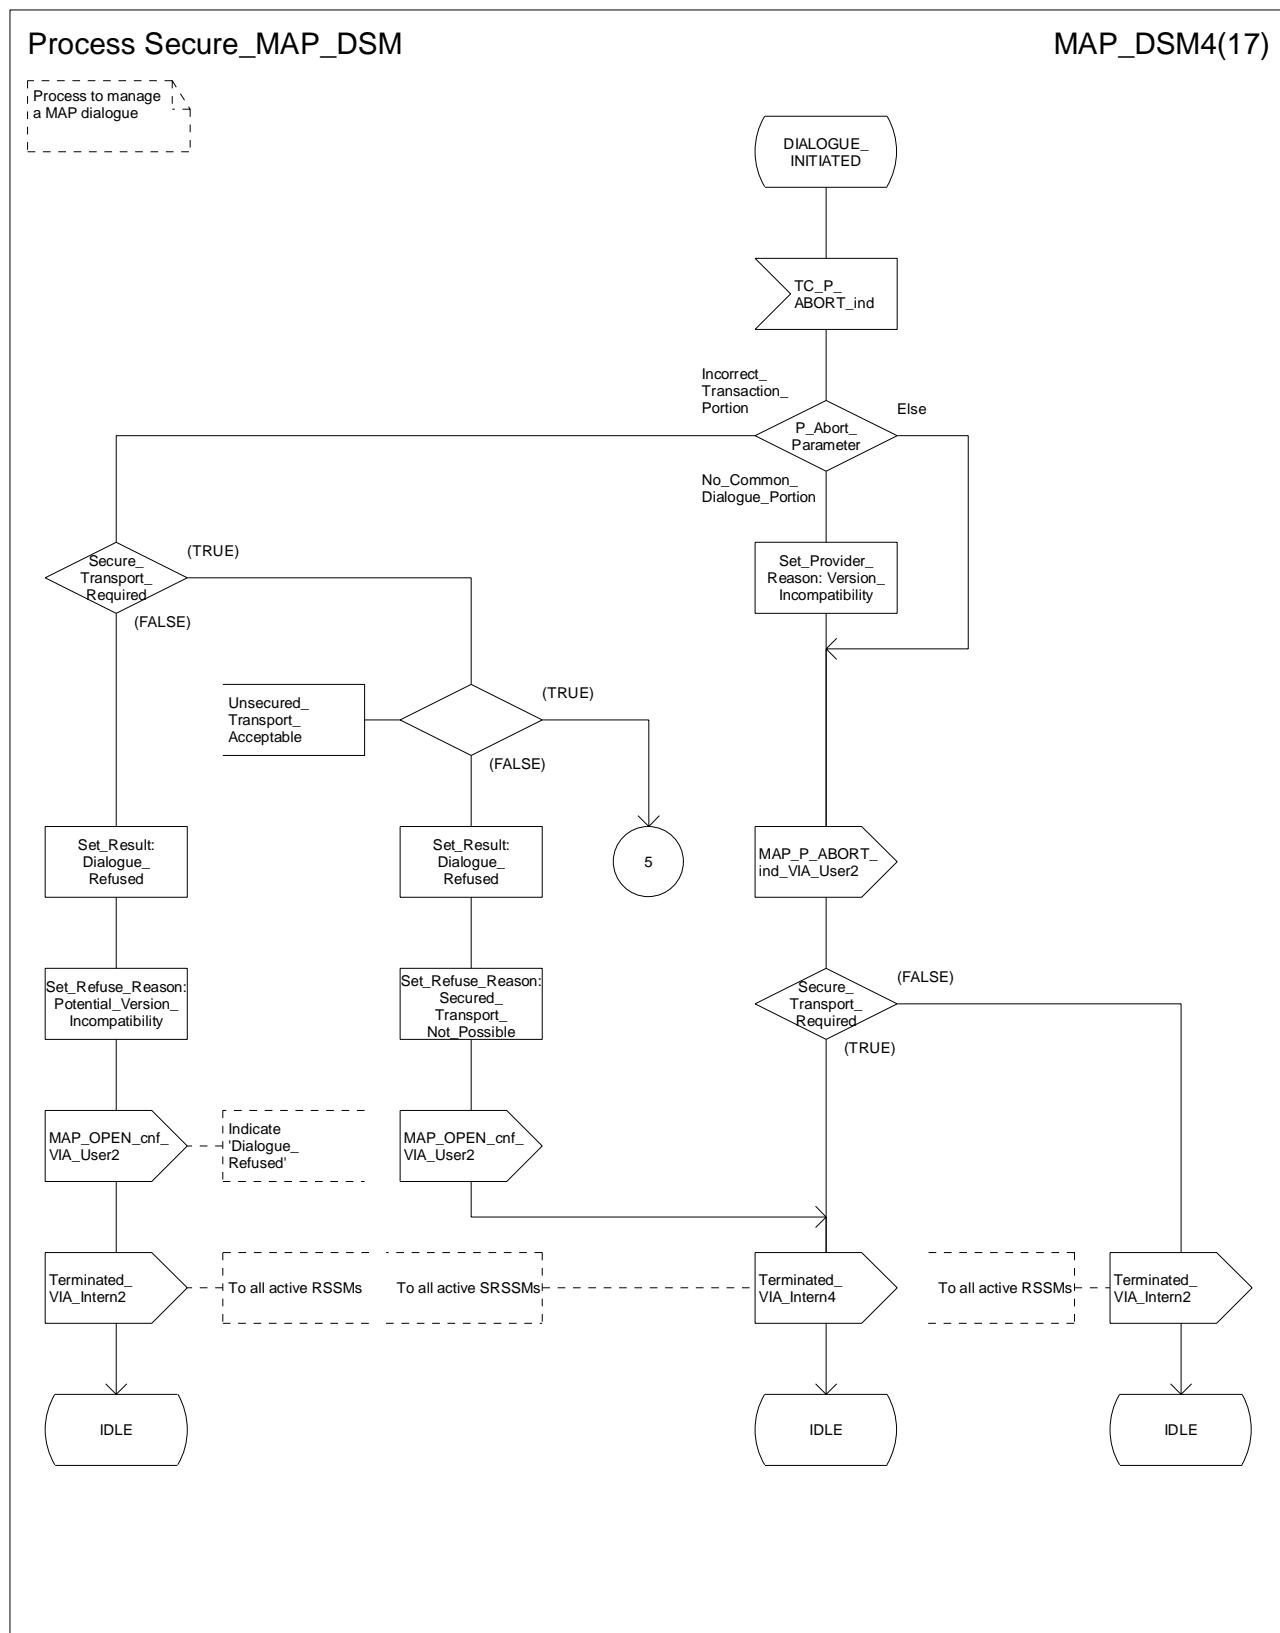

**Figure 15.6/3d: Process Secure\_MAP\_DSM (sheet 4)**

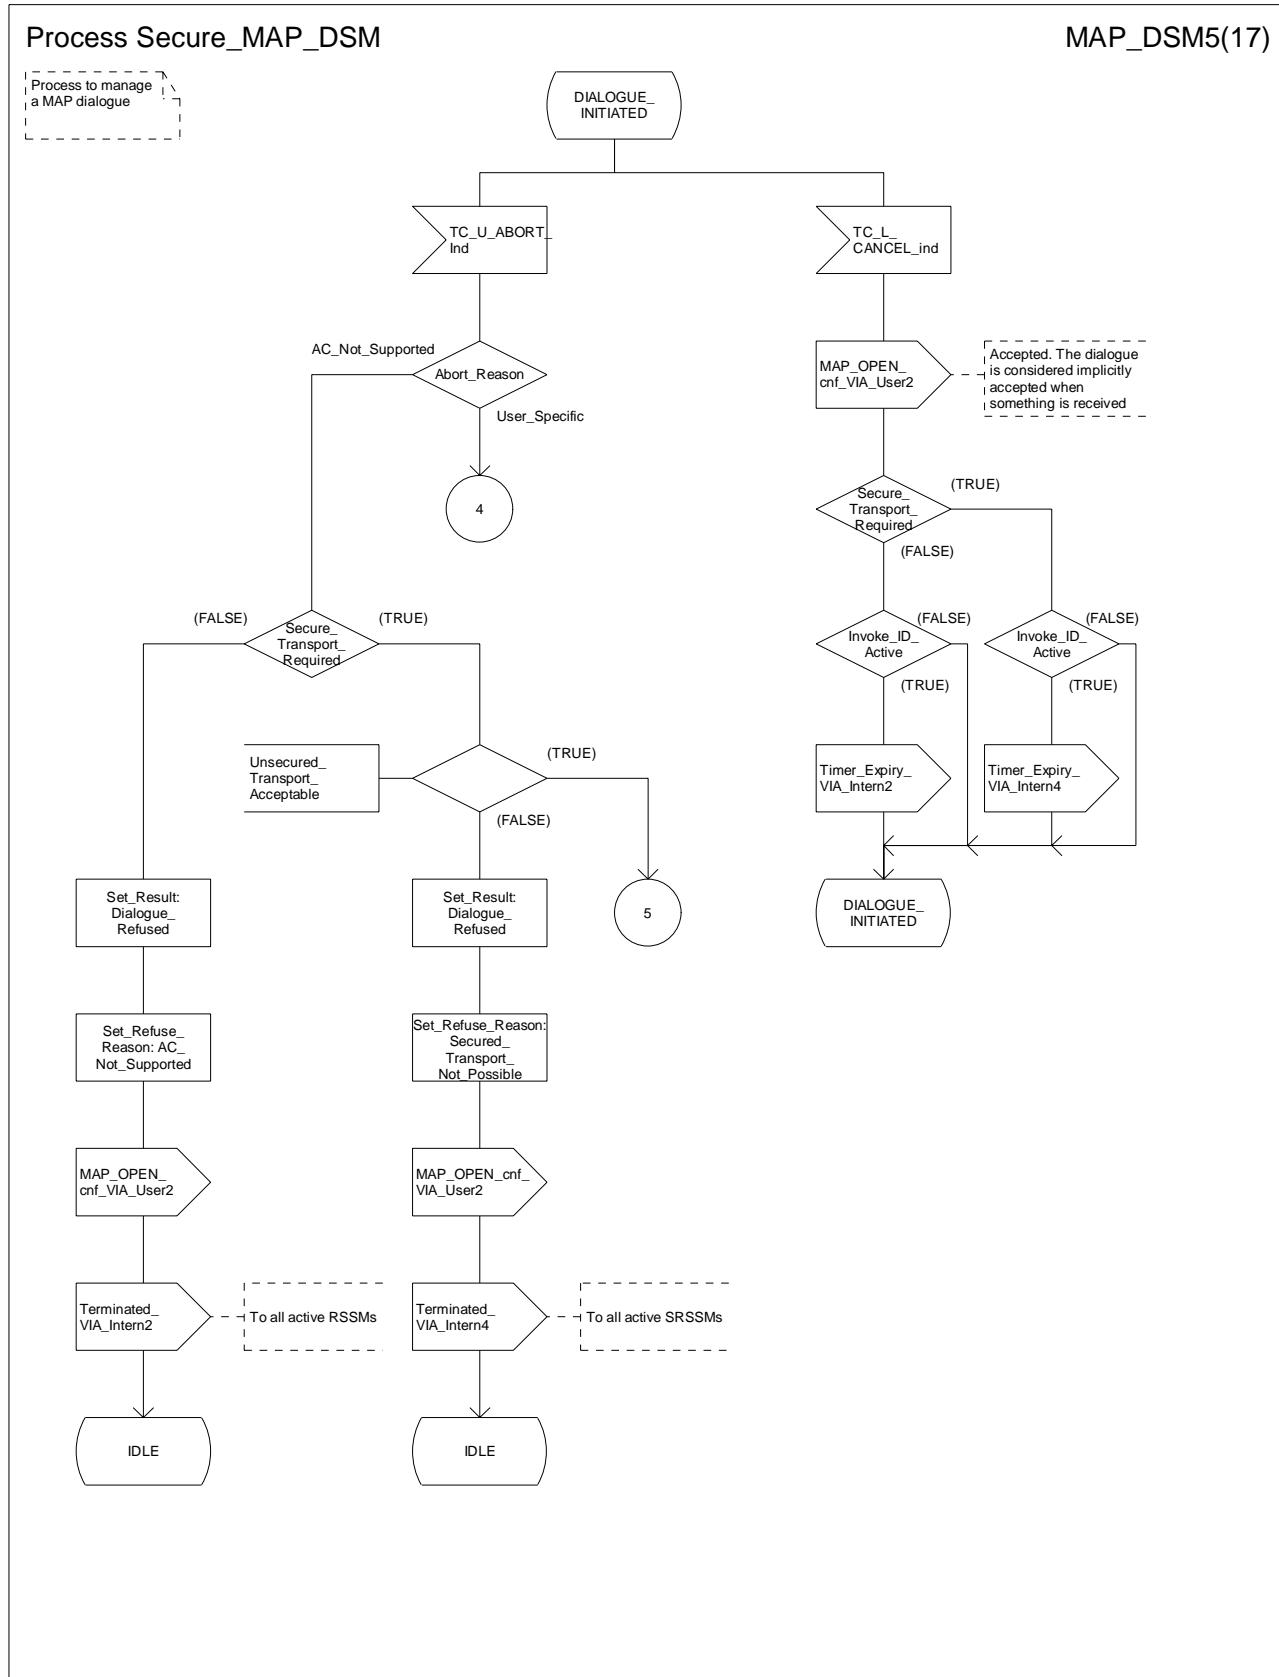


Figure 15.6/3e: Process Secure\_MAP\_DSM (sheet 5)

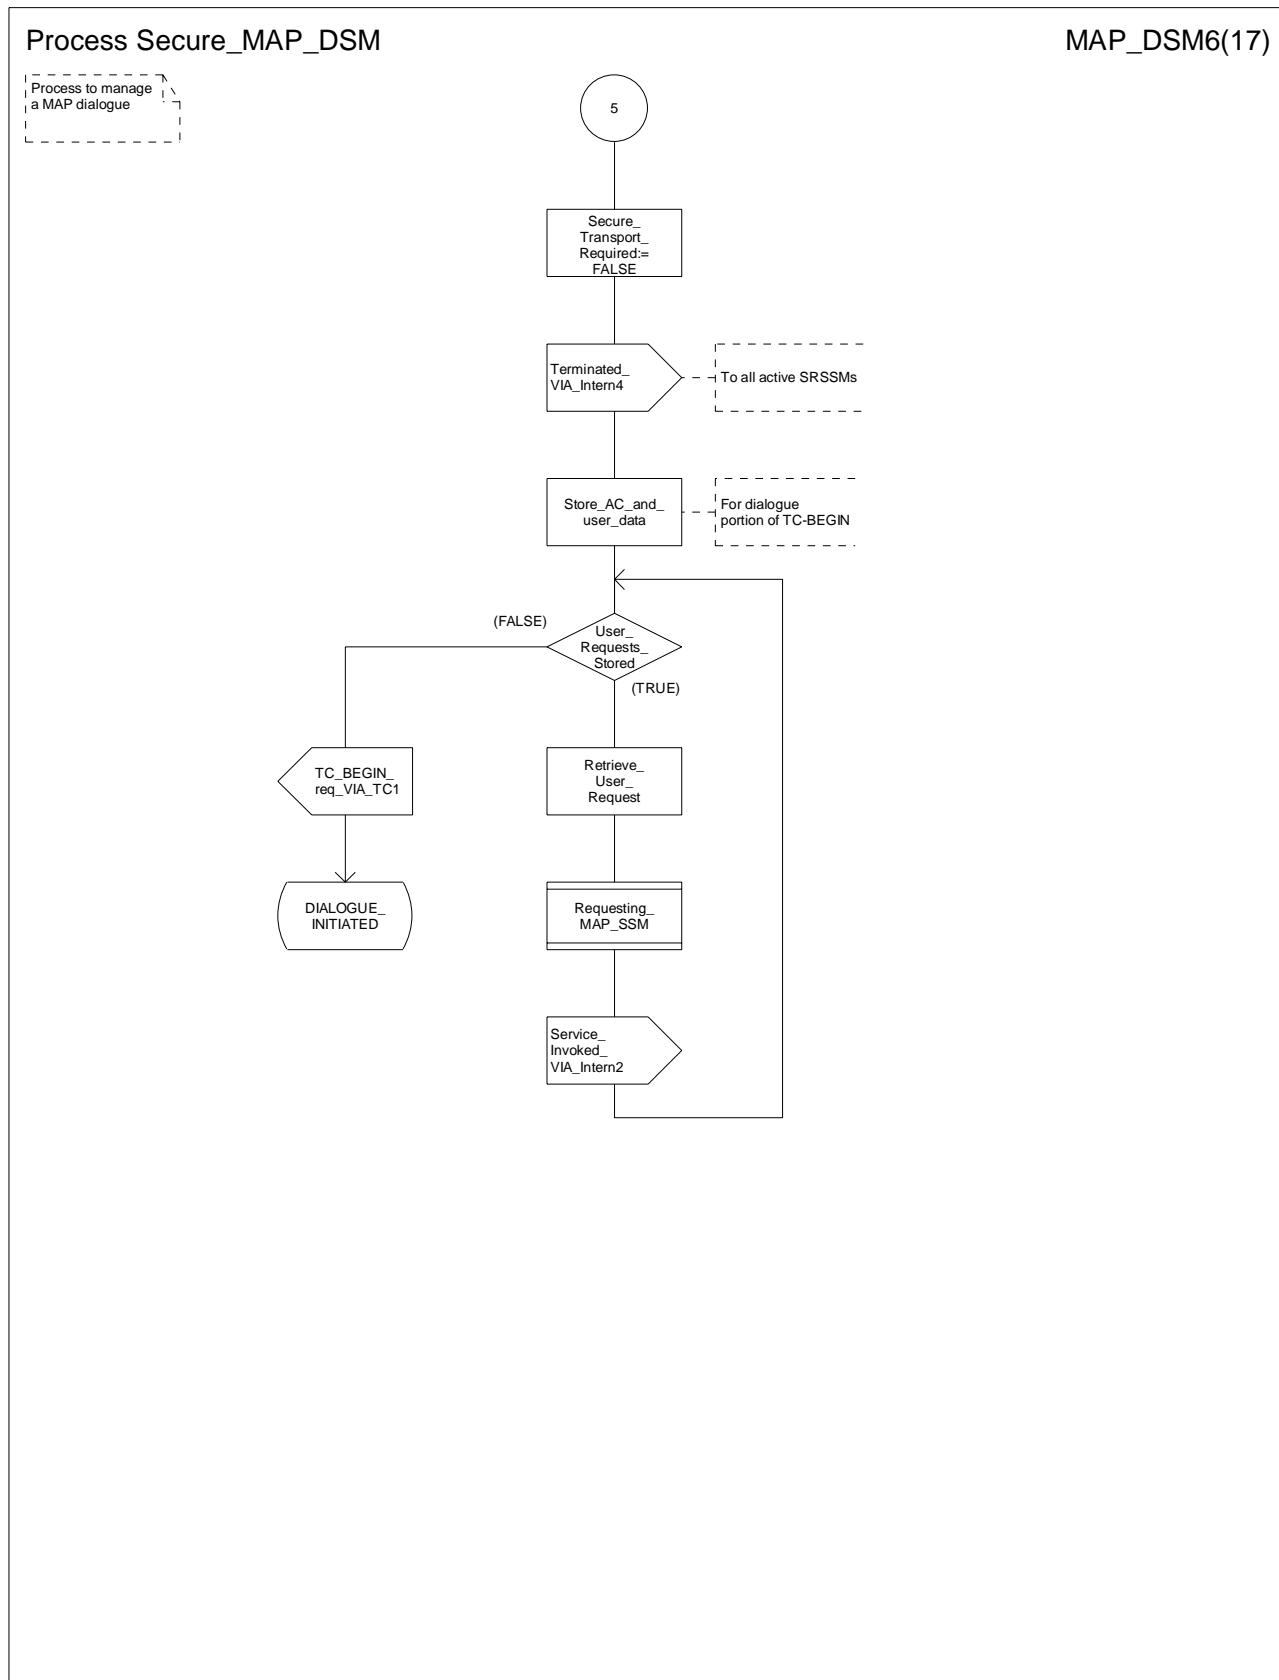


Figure 15.6/3f: Process Secure\_MAP\_DSM (sheet 6)

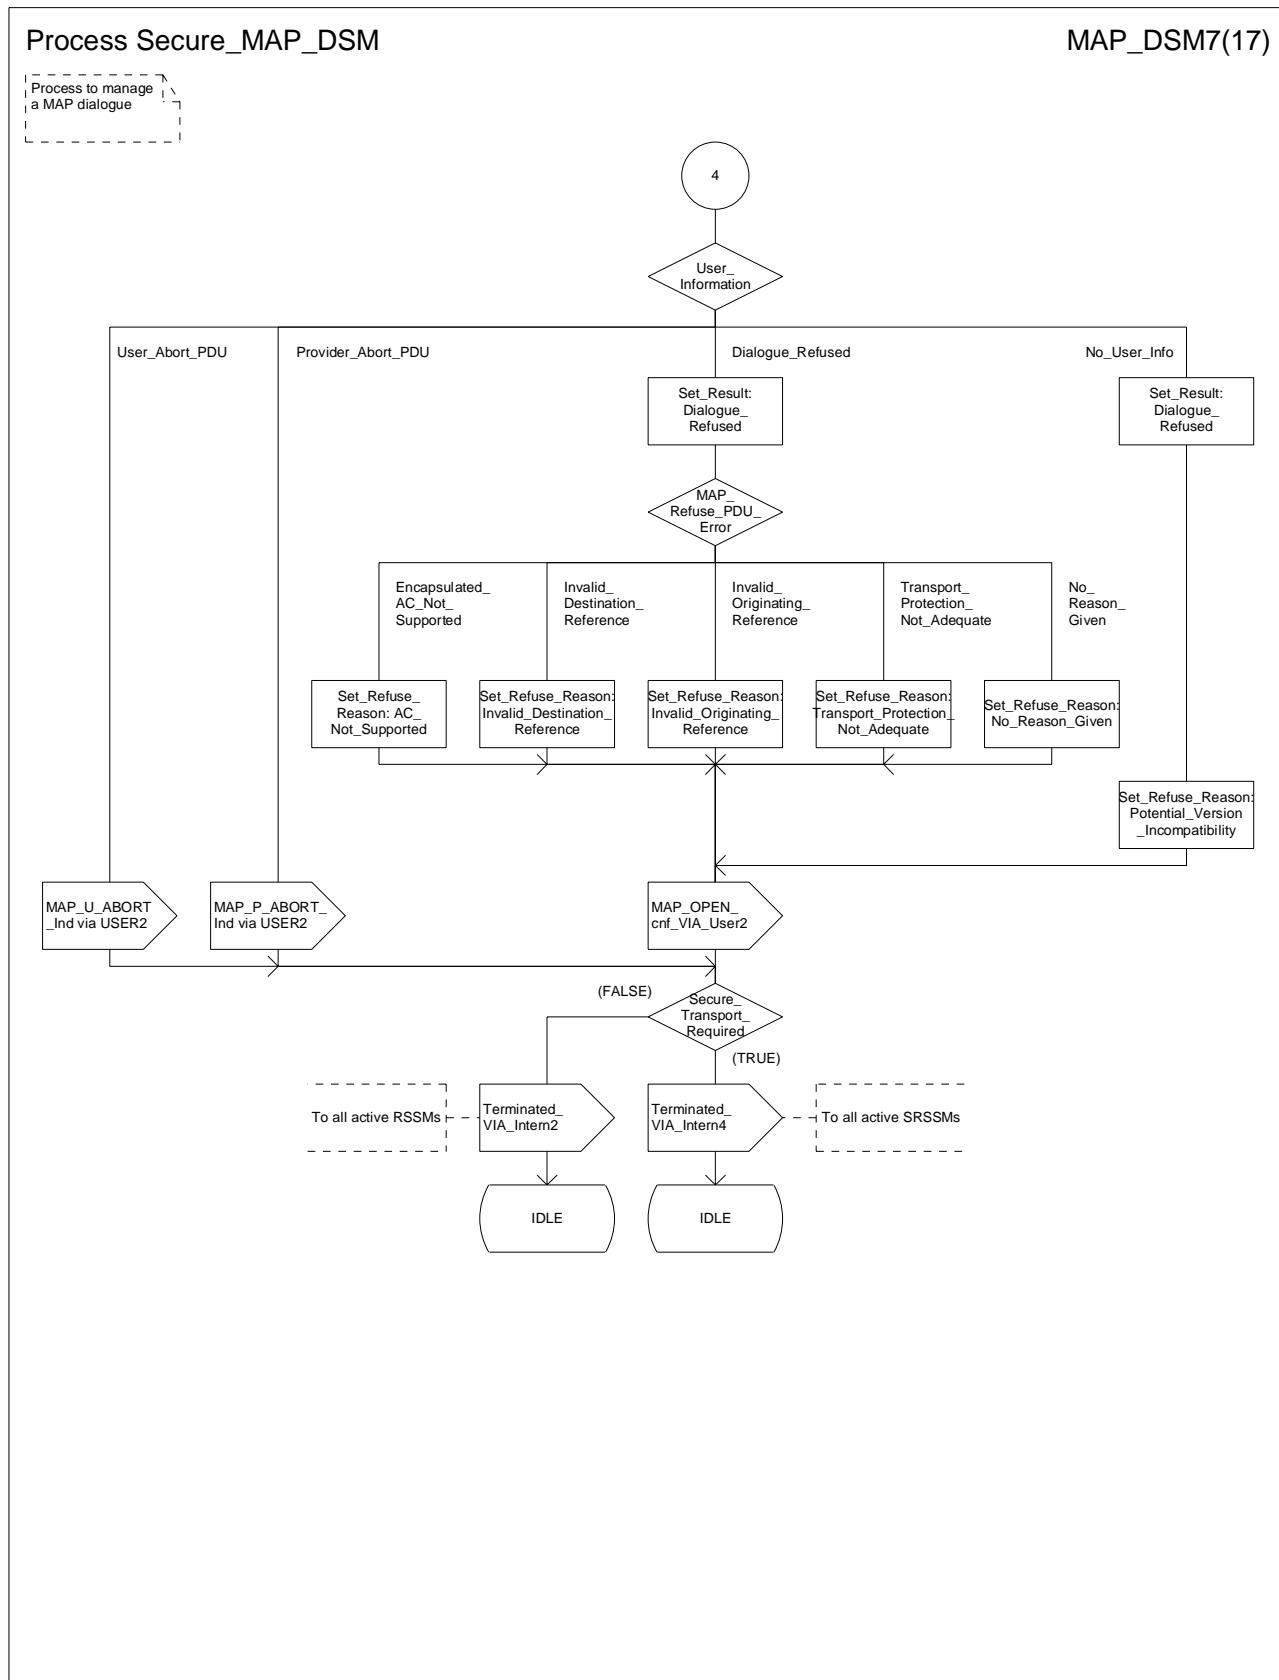


Figure 15.6/3g: Process Secure\_MAP\_DSM (sheet 7)

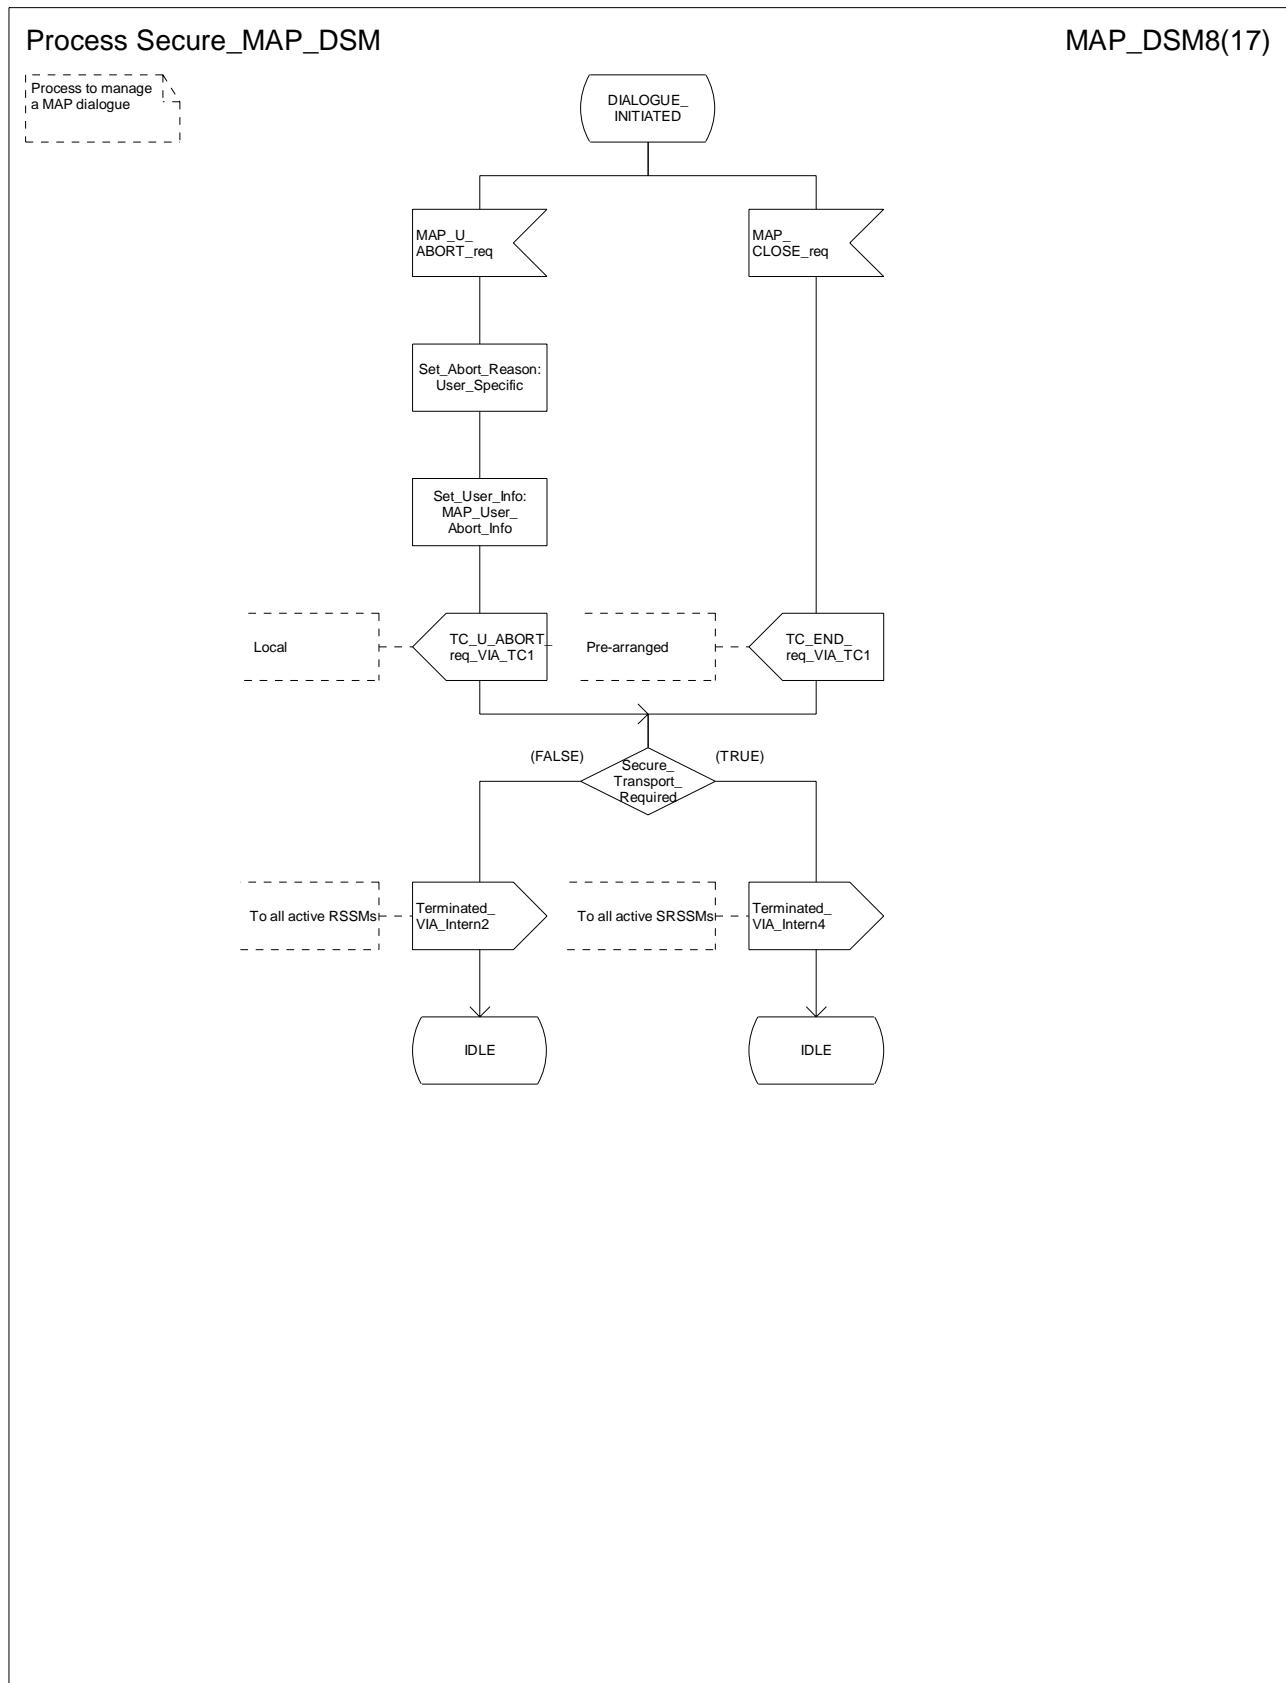


Figure 15.6/3h: Process Secure\_MAP\_DSM (sheet 8)

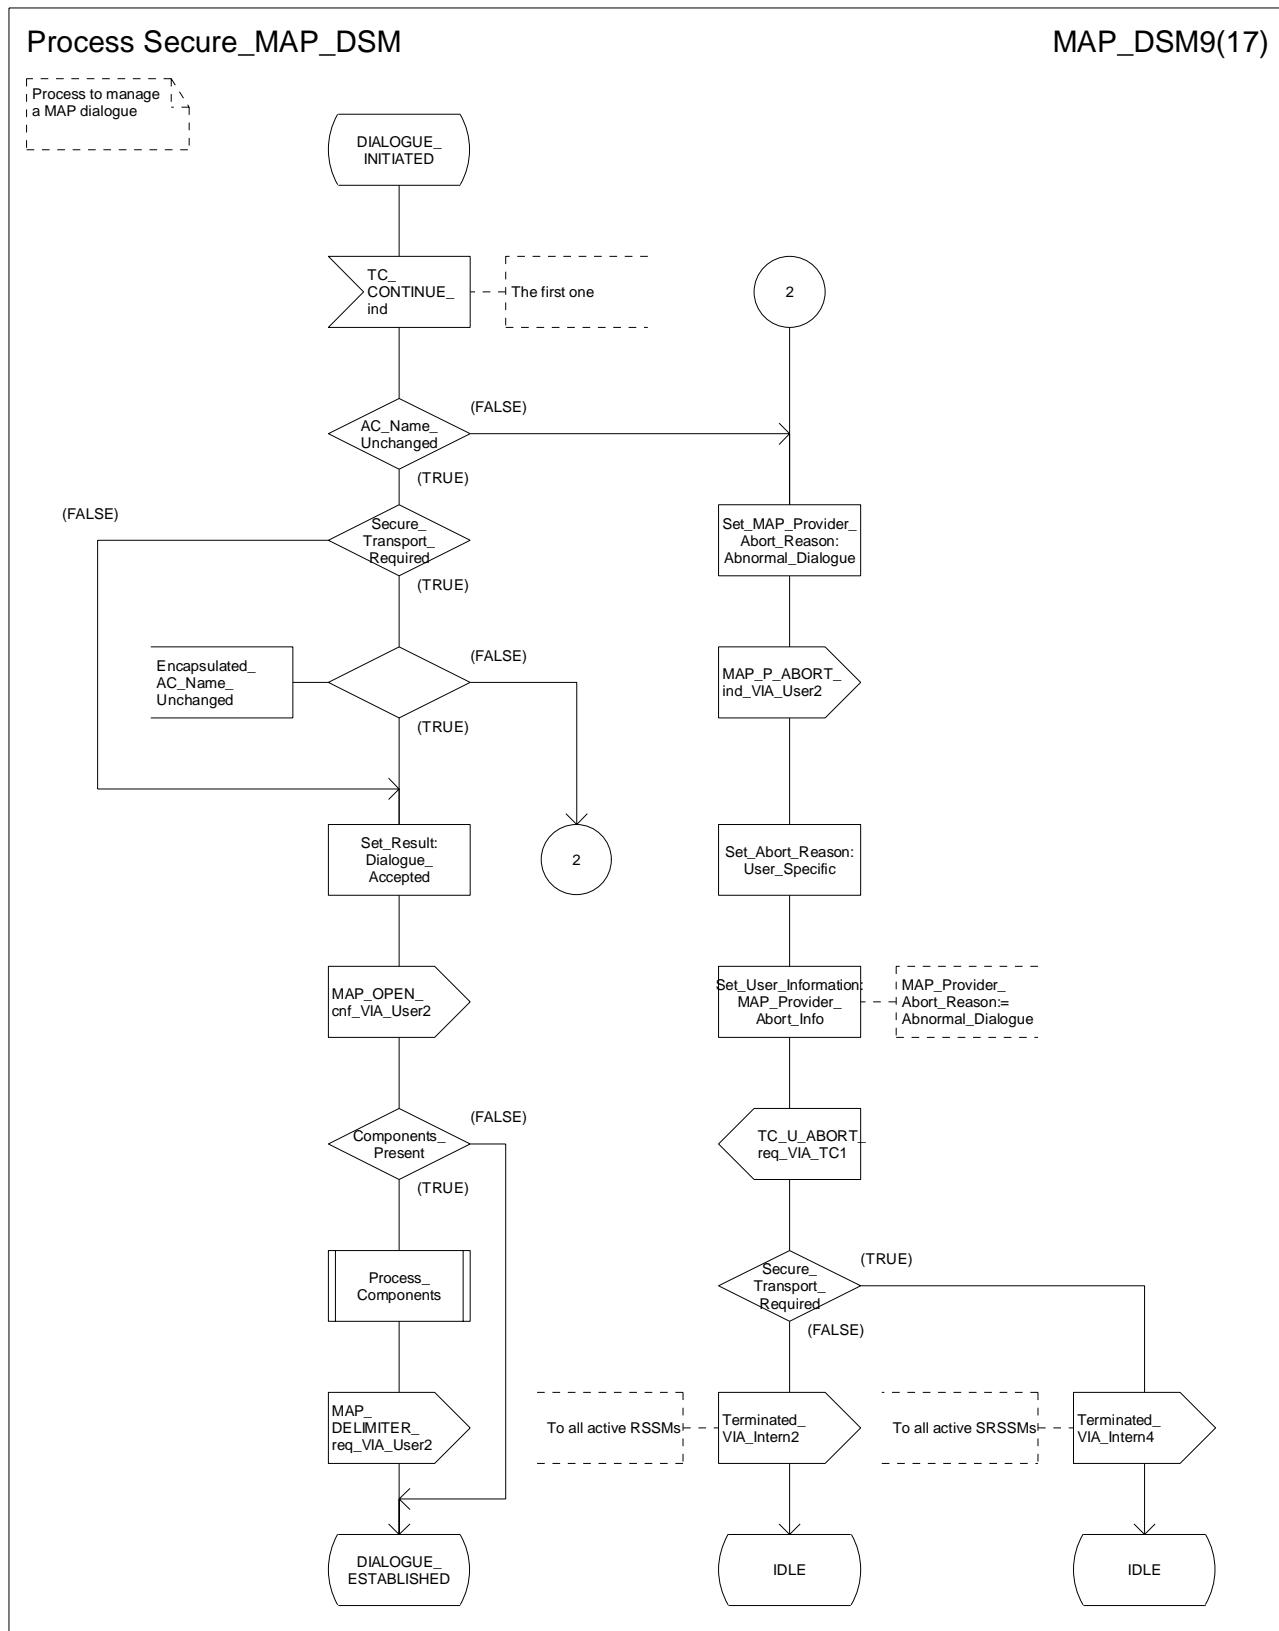


Figure 15.6/3i: Process Secure\_MAP\_DSM (sheet 9)


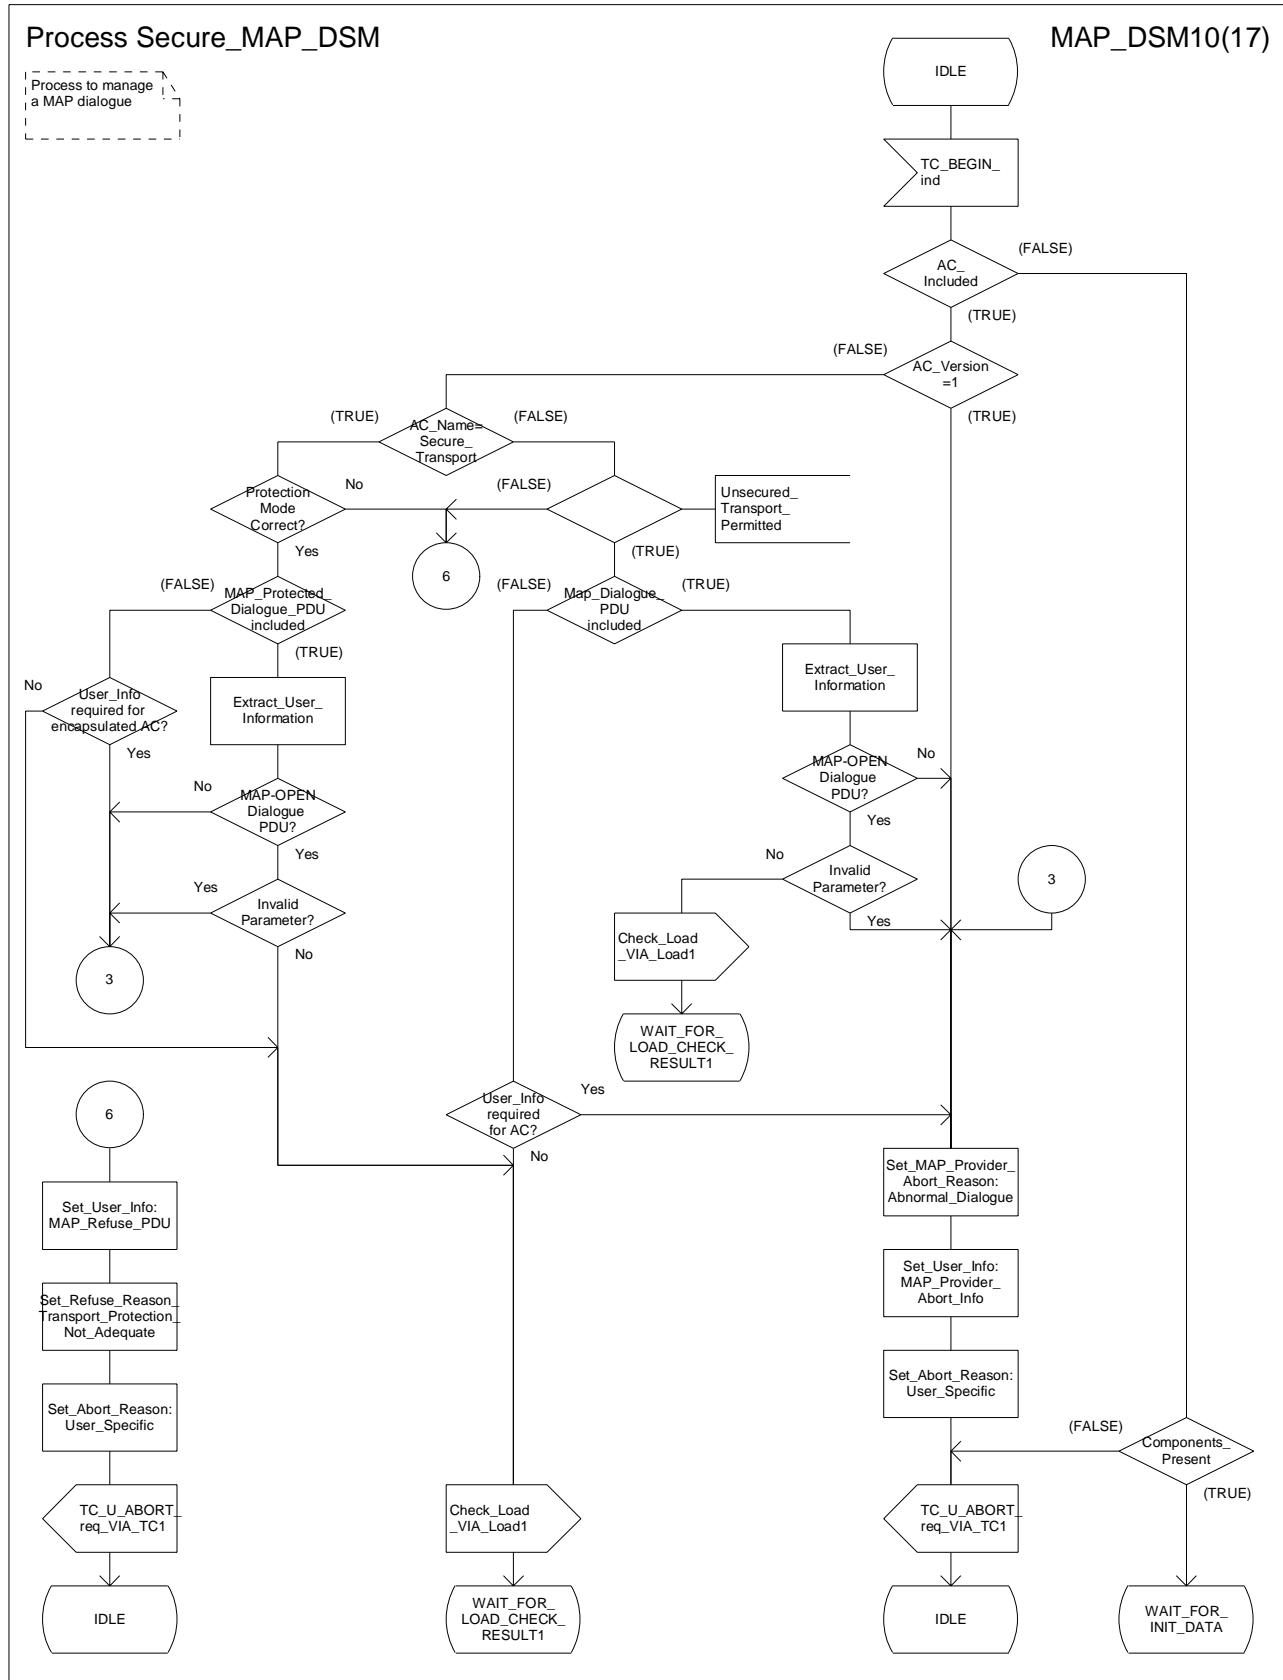


Figure 15.6/3j: Process Secure\_MAP\_DSM (sheet 10)

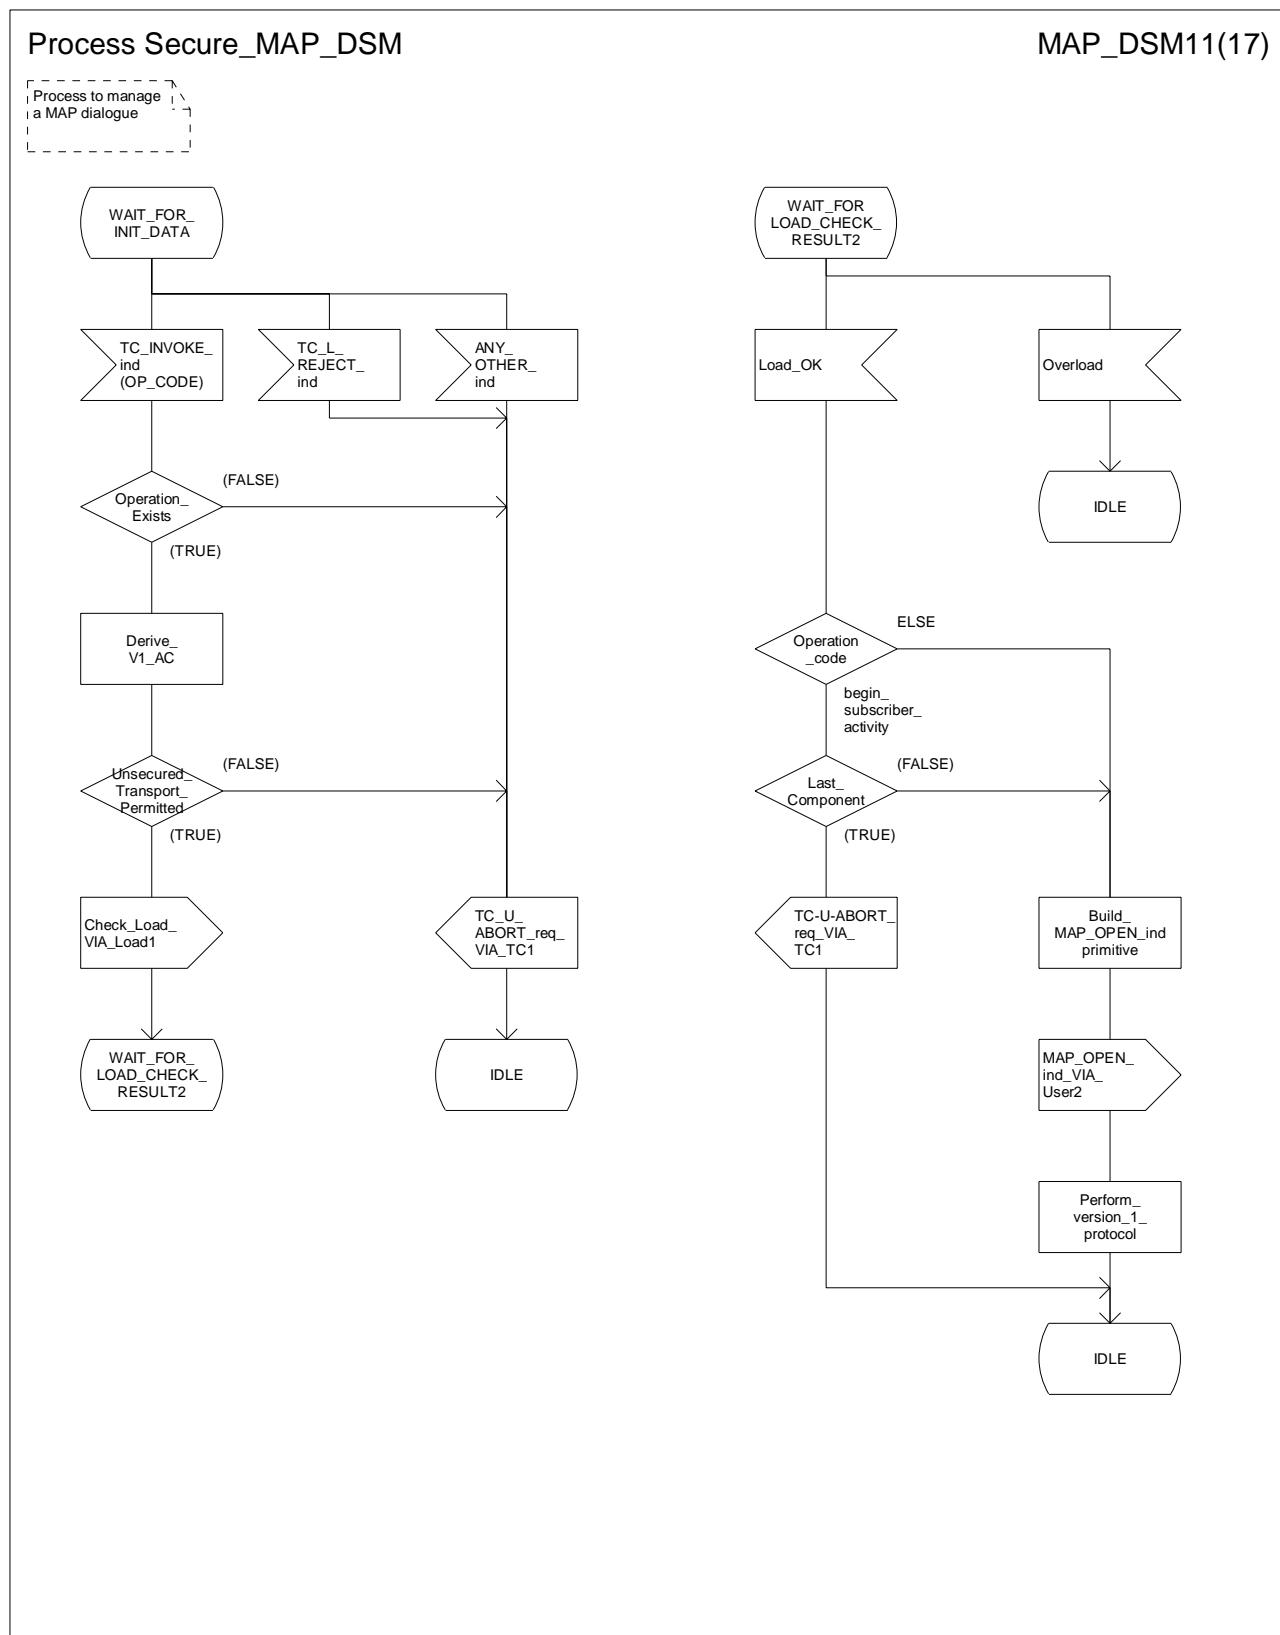

**Figure 15.6/3k: Process Secure\_MAP\_DSM (sheet 11)**

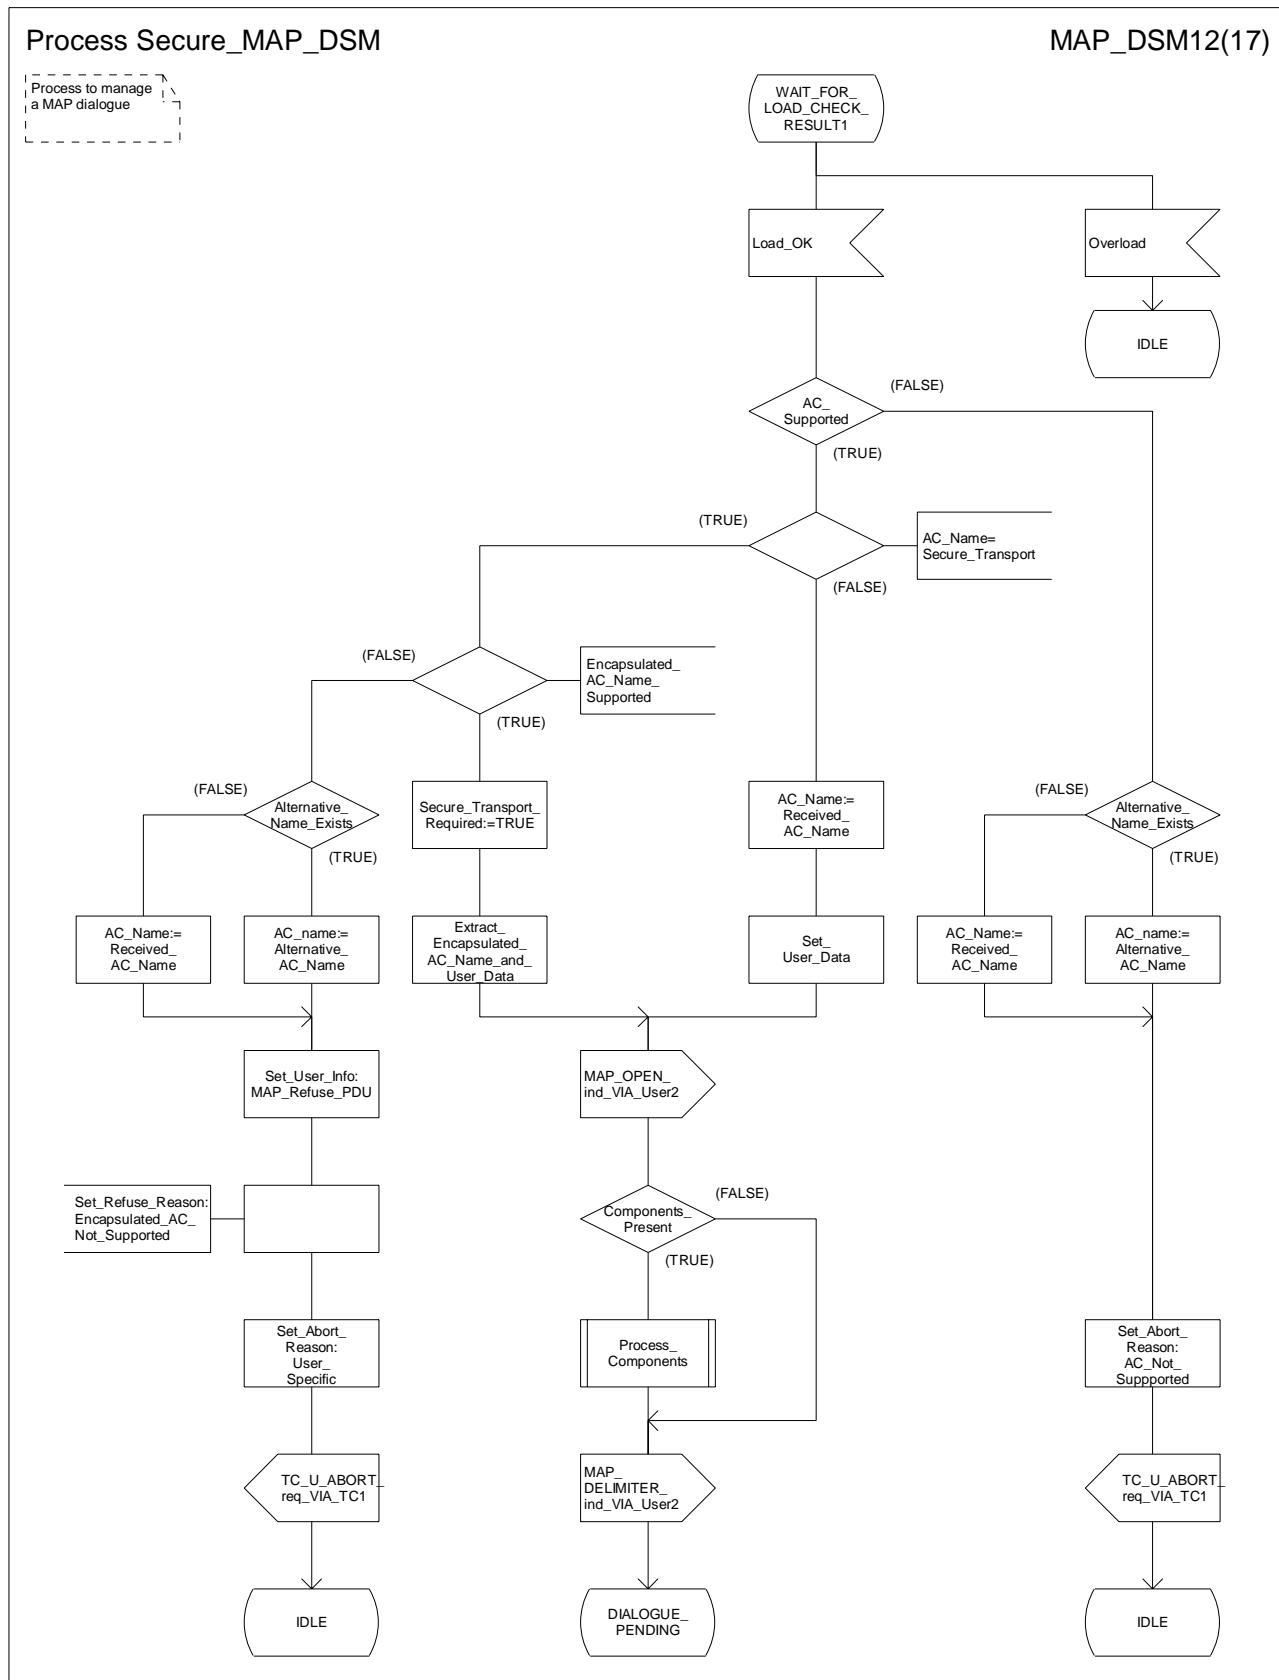


Figure 15.6/3I: Process Secure\_MAP\_DSM (sheet 12)

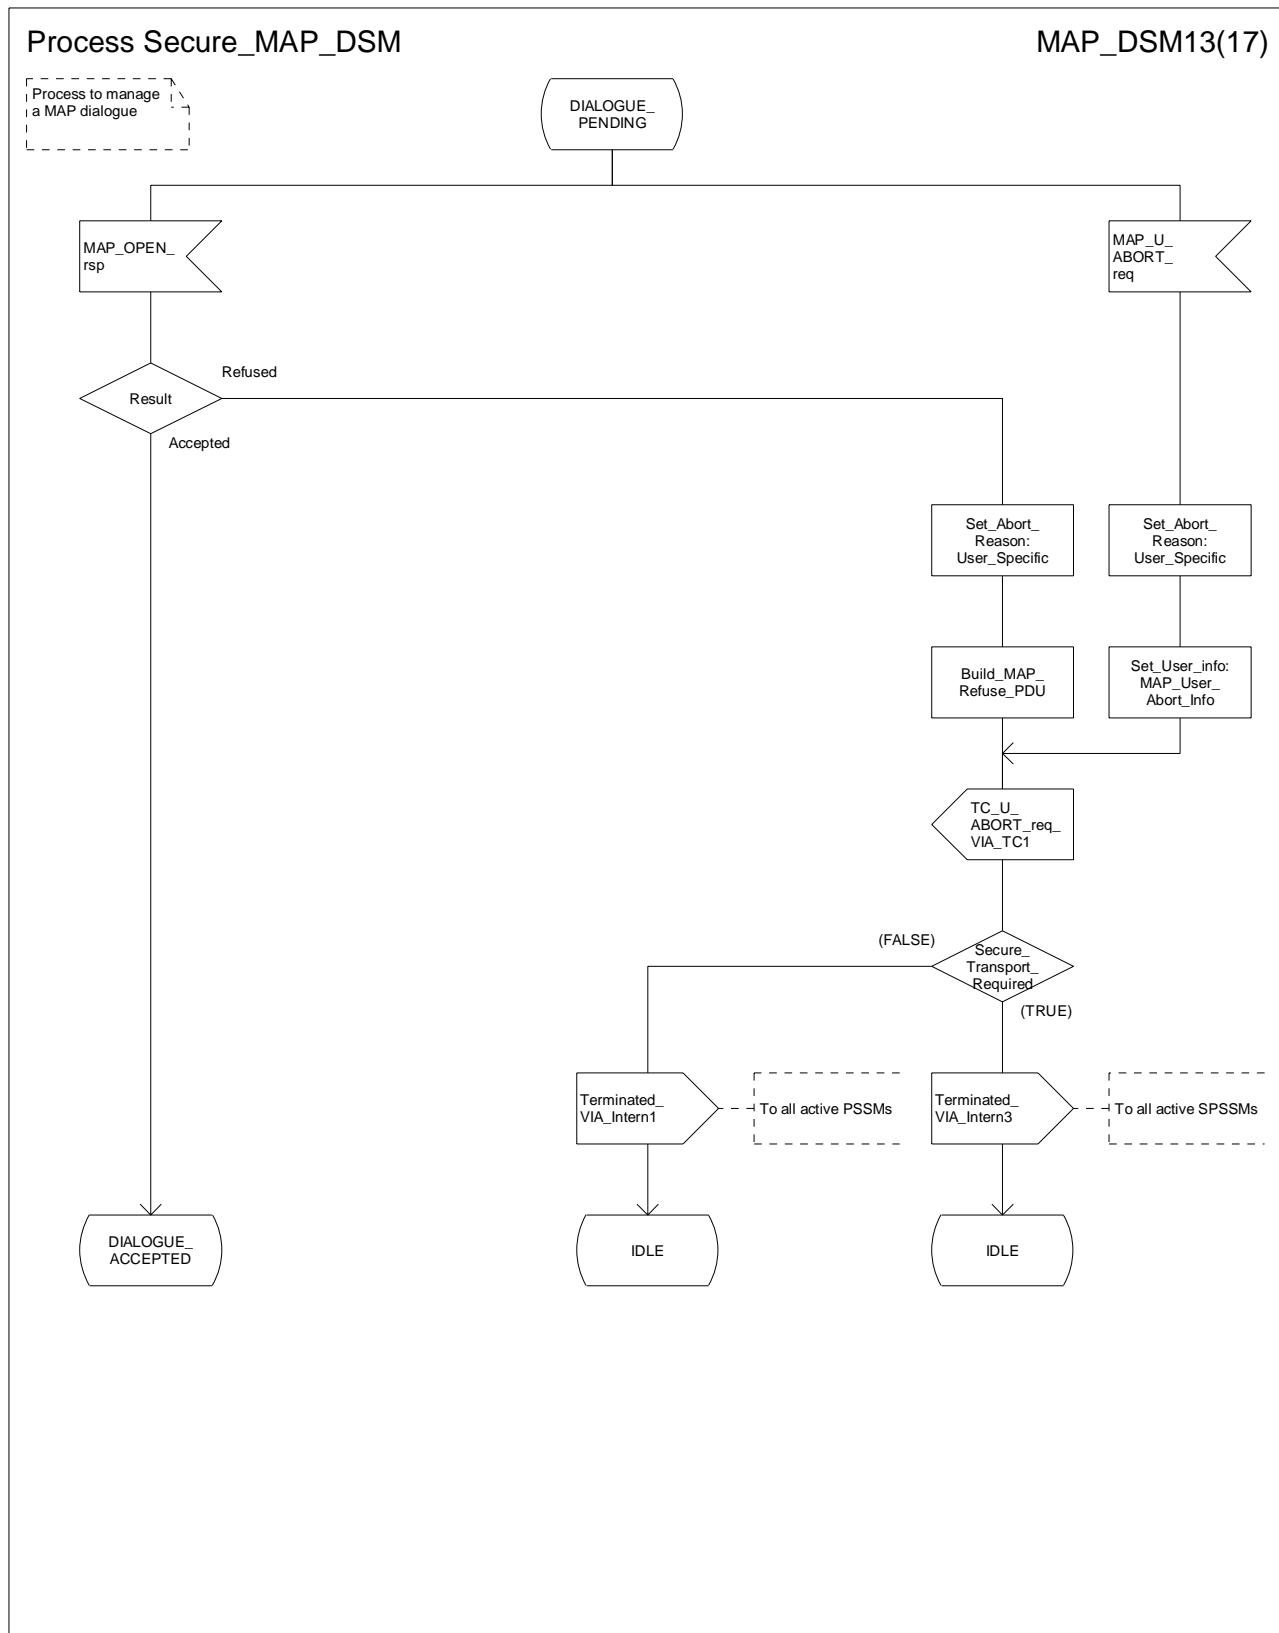


Figure 15.6/3m: Process Secure\_MAP\_DSM (sheet 13)

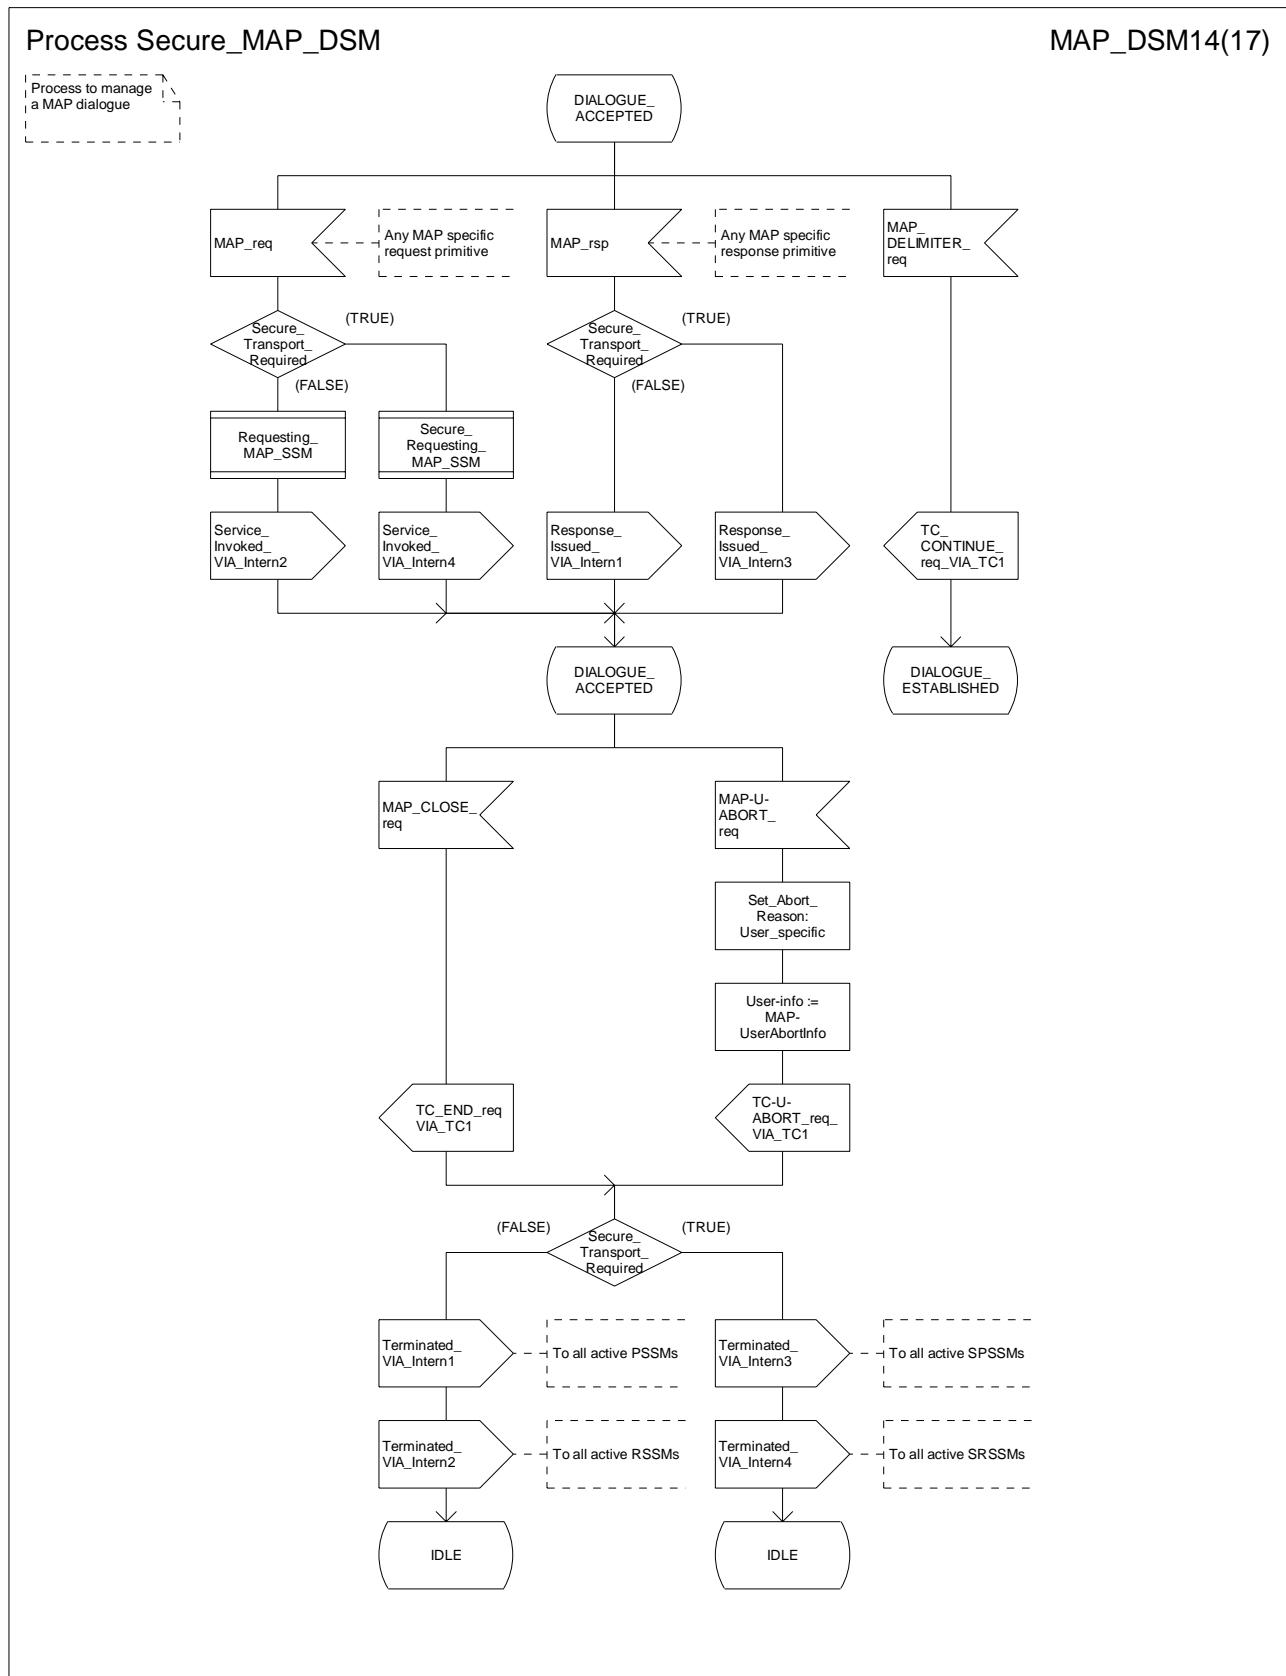
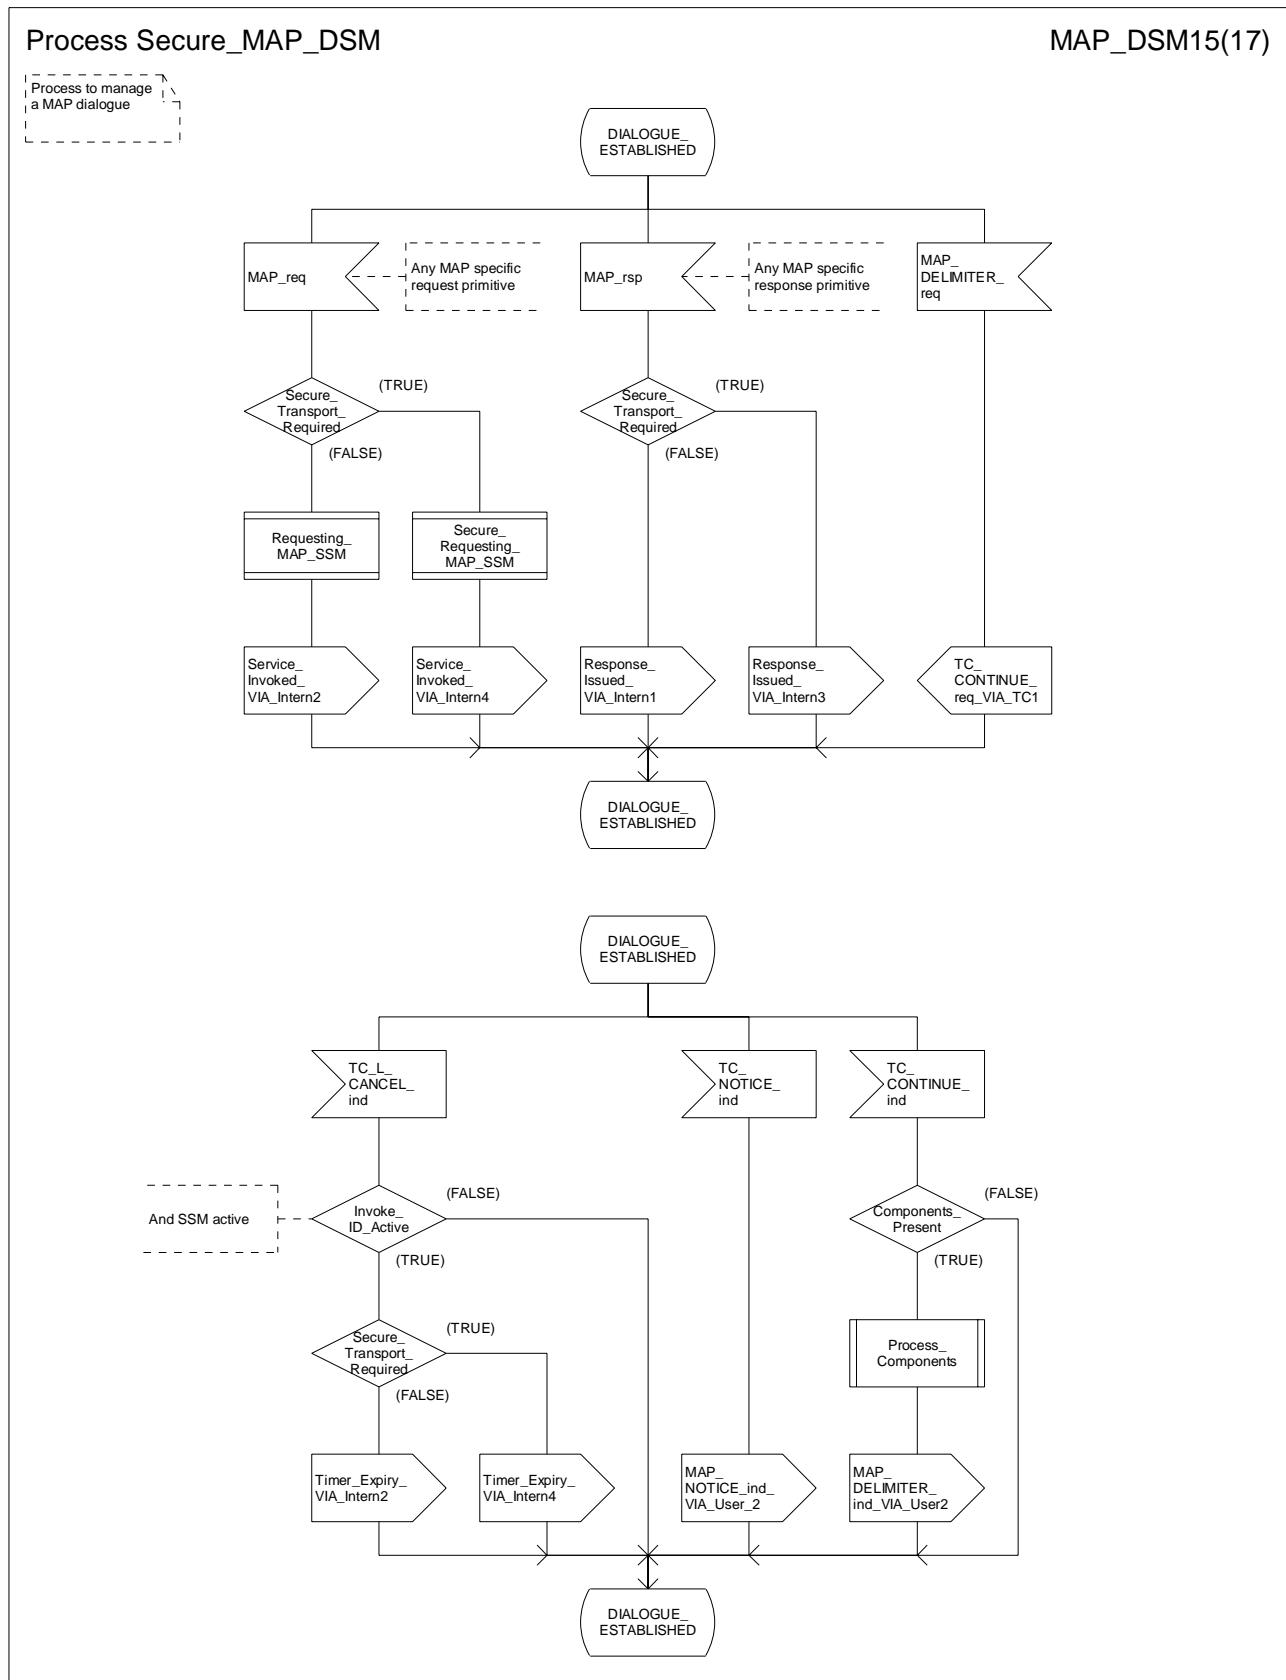


Figure 15.6/3n: Process Secure\_MAP\_DSM (sheet 14)

**Figure 15.6/3o: Process Secure\_MAP\_DSM (sheet 15)**

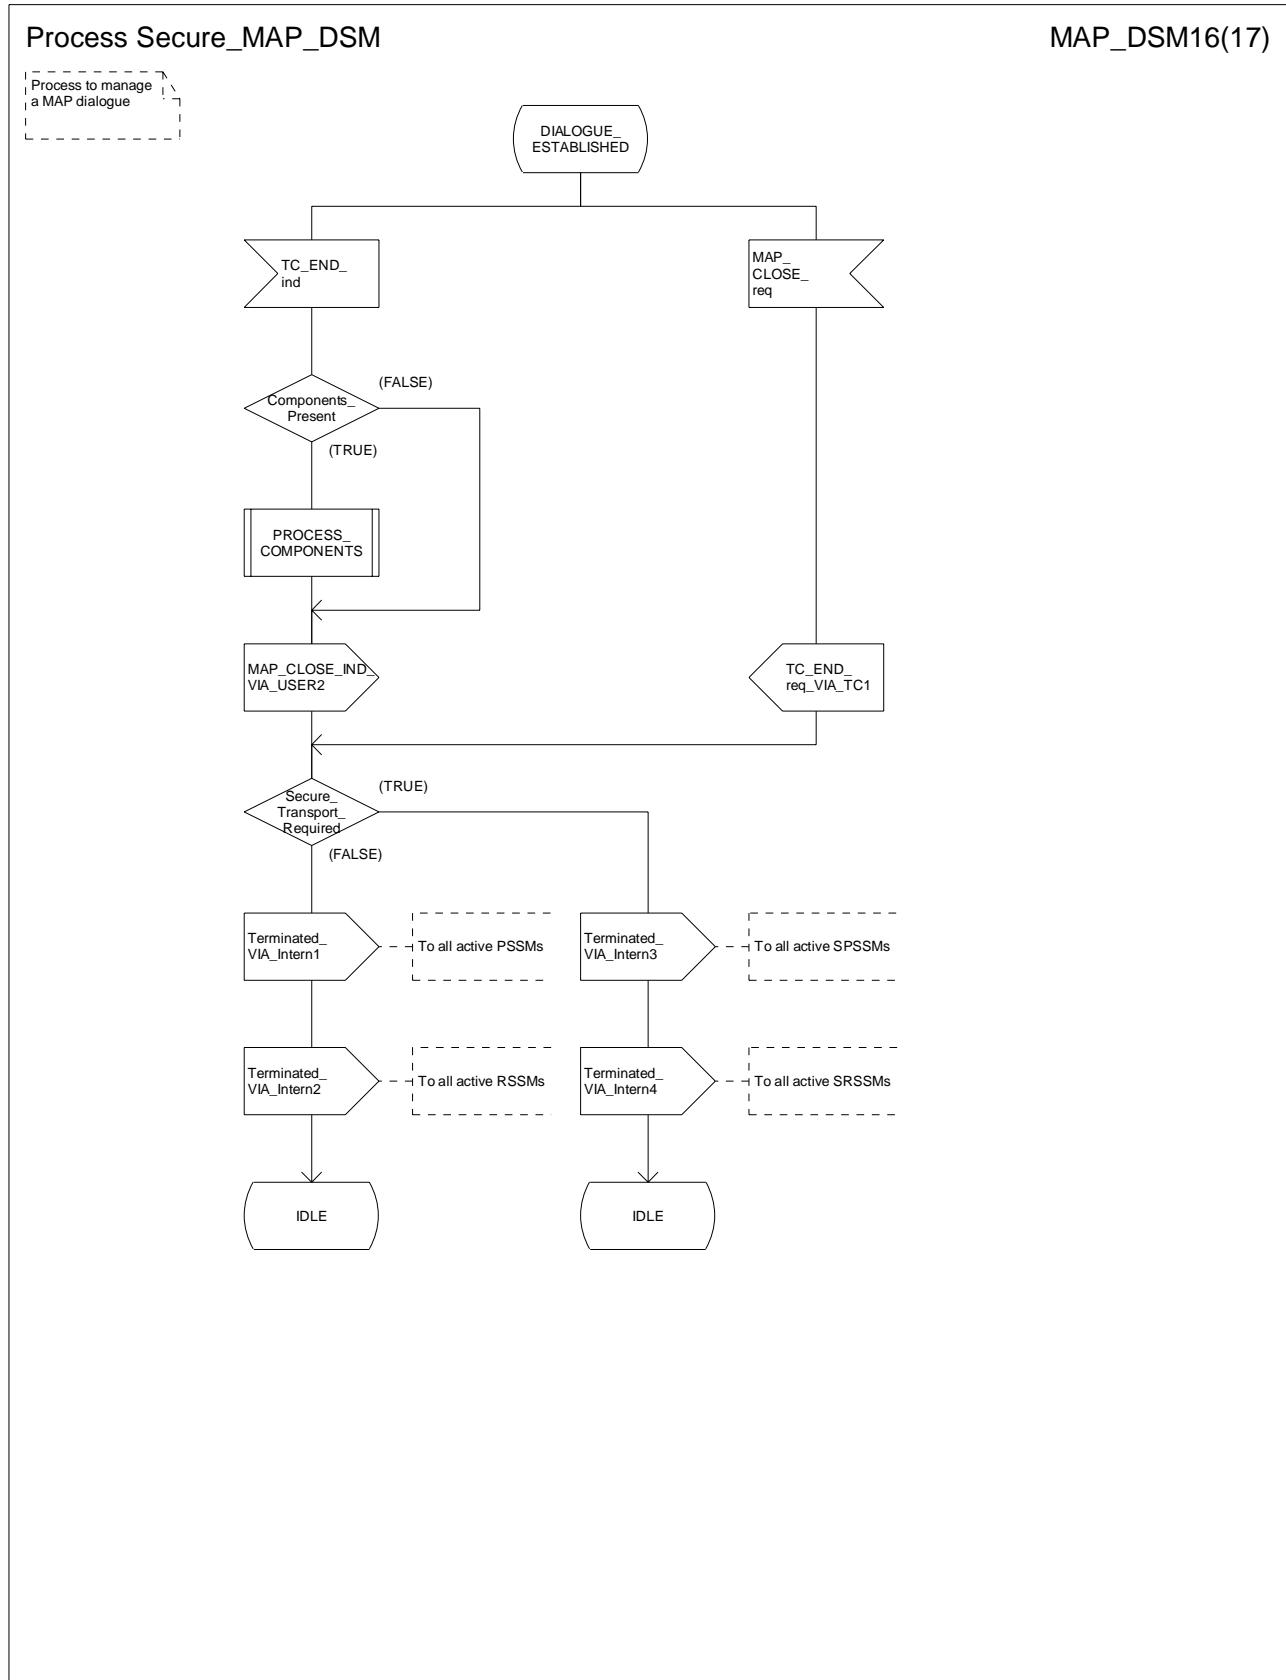


Figure 15.6/3p: Process Secure\_MAP\_DSM (sheet 16)


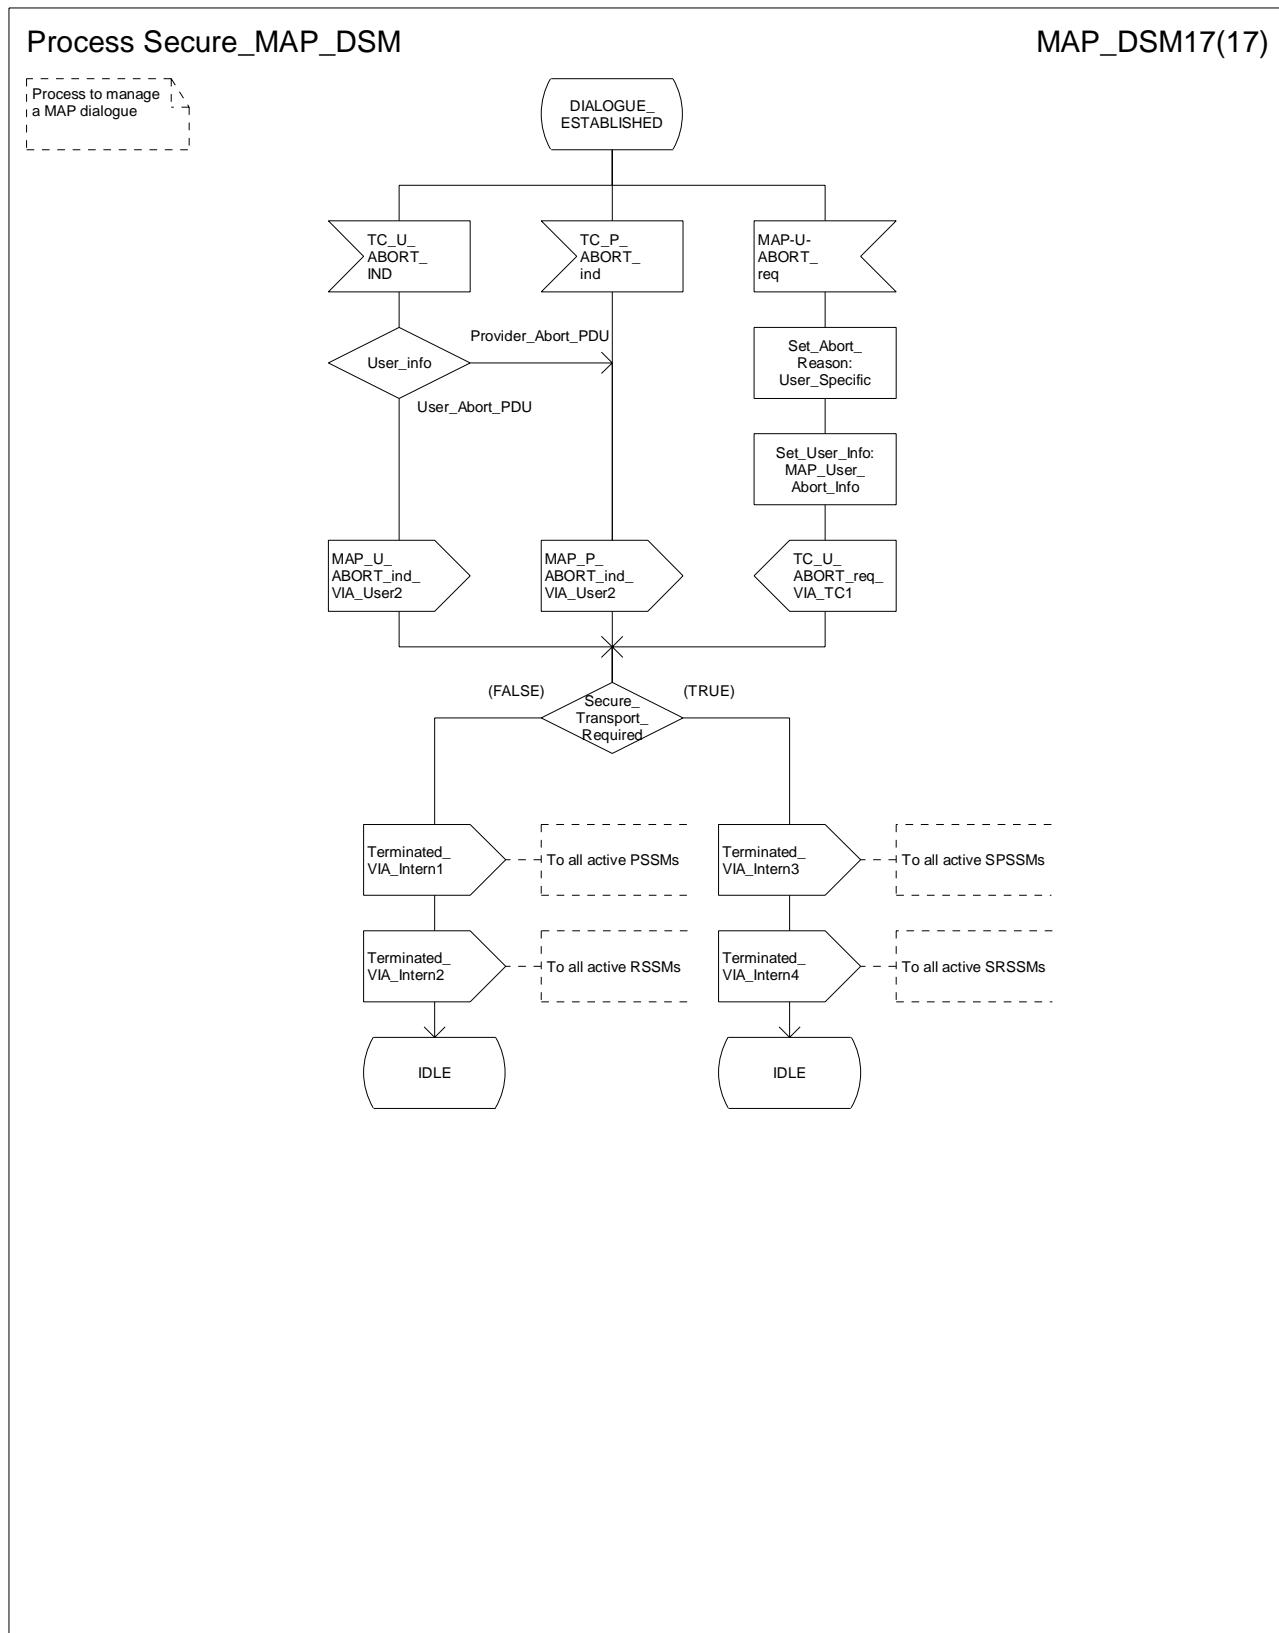



Figure 15.6/3q: Process Secure\_MAP\_DSM (sheet 17)

## Procedure Process\_Components


## Proc\_Comp1(5)

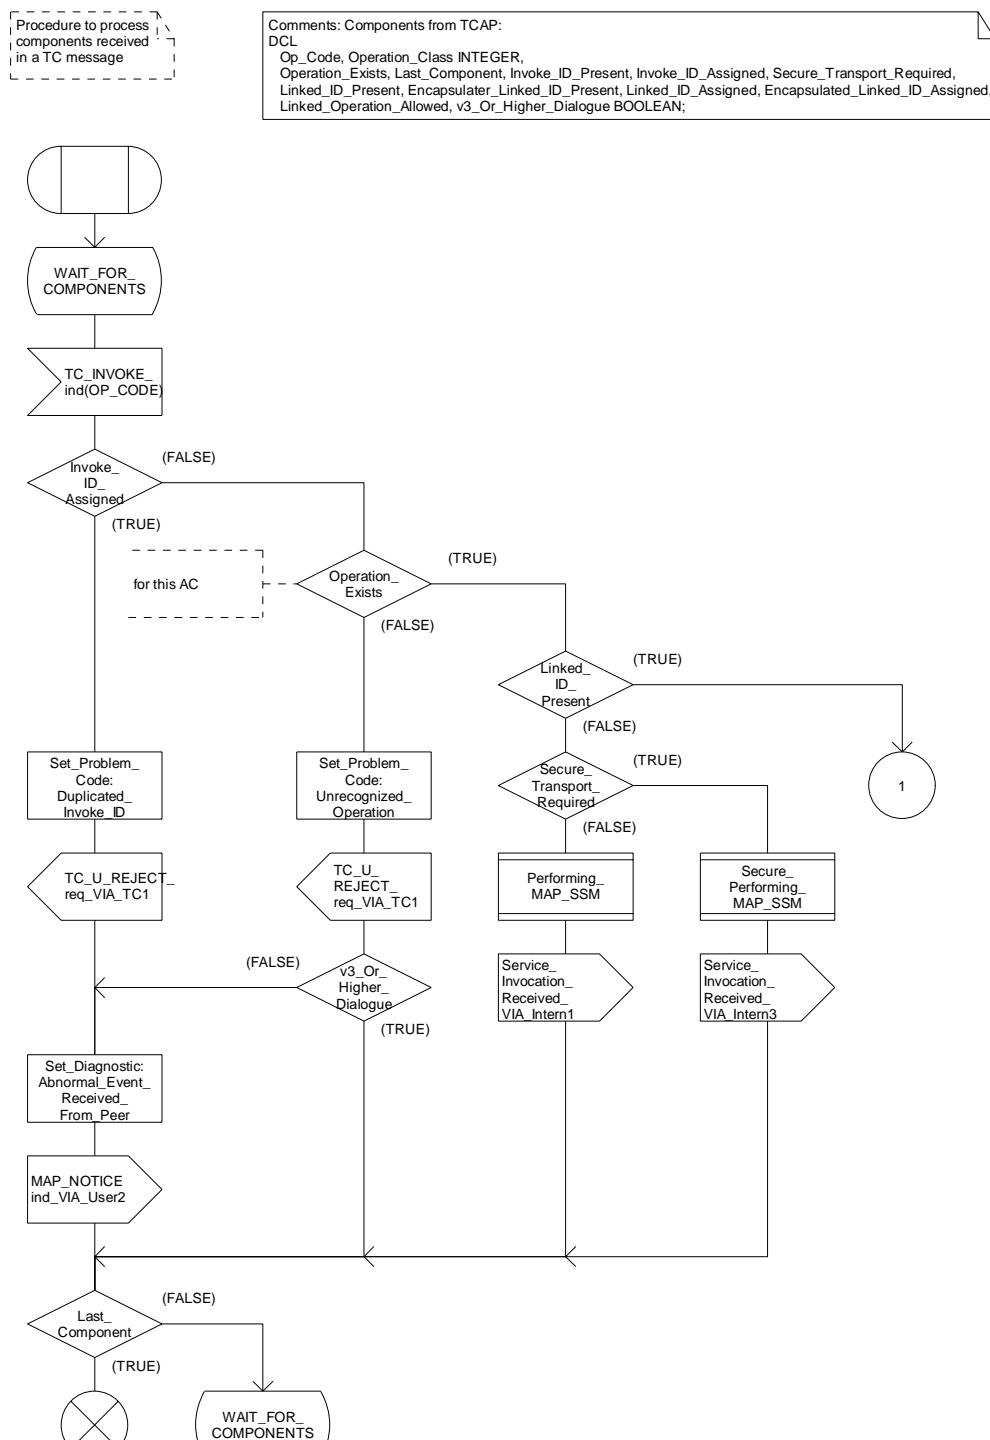

**Figure 15.6/4a: Procedure Process\_Components (sheet 1)**

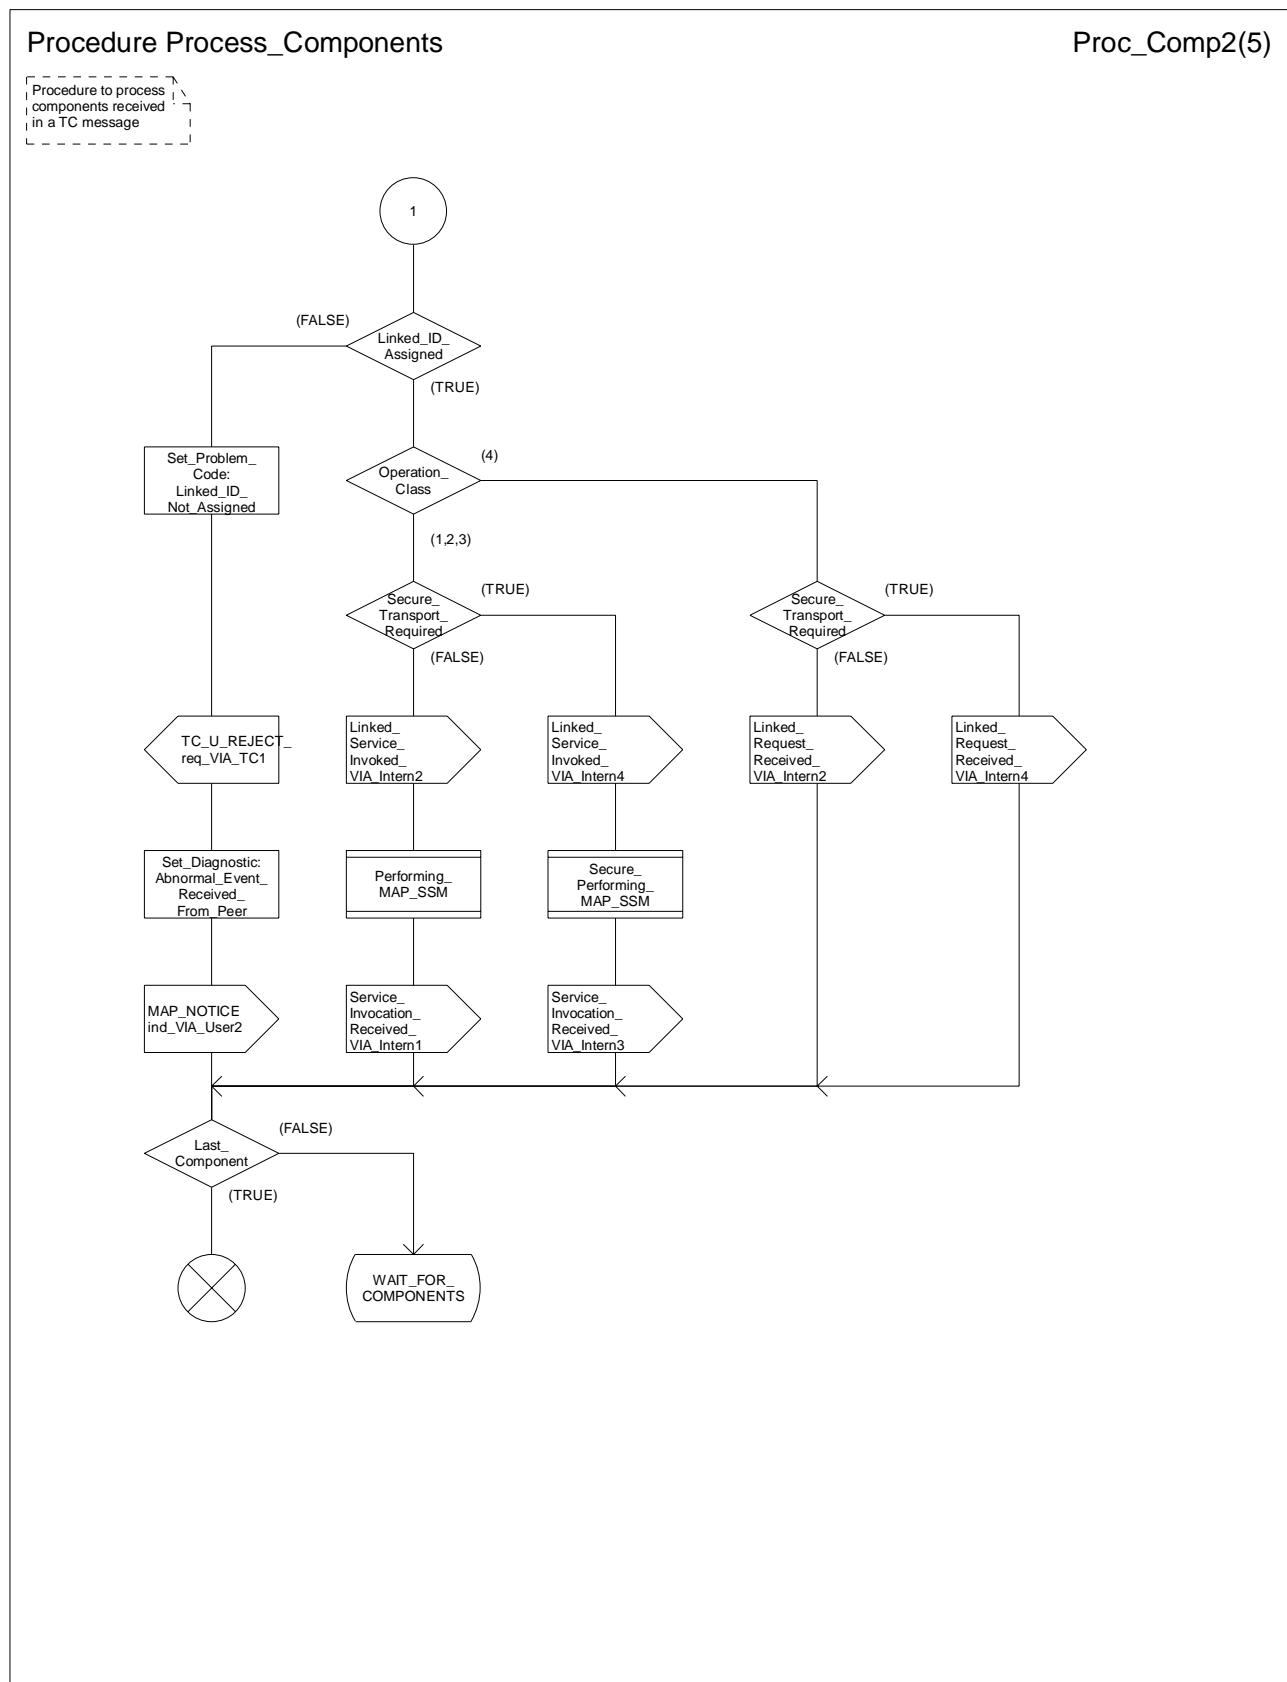

**Figure 15.6/4b: Procedure Process\_Components (sheet 2)**

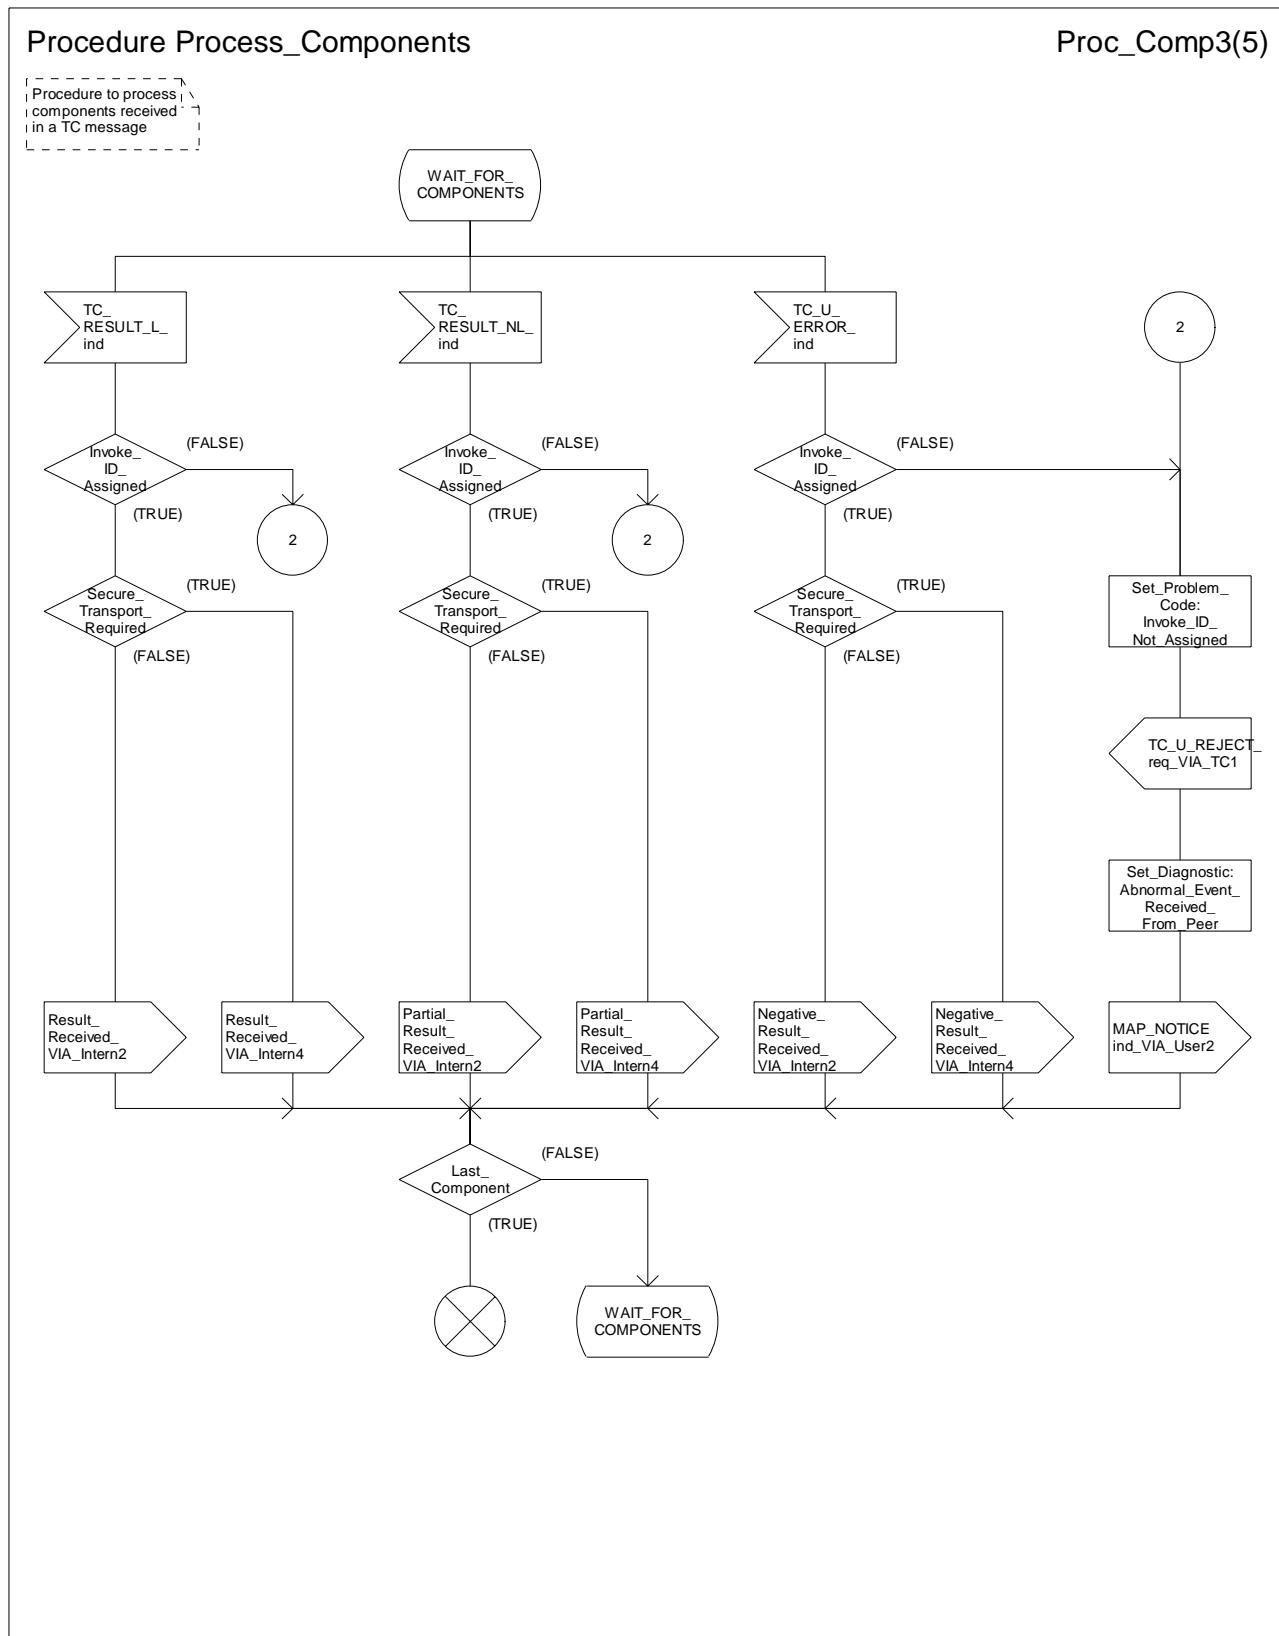**Figure 15.6/4c: Procedure Process\_Components (sheet 3)**

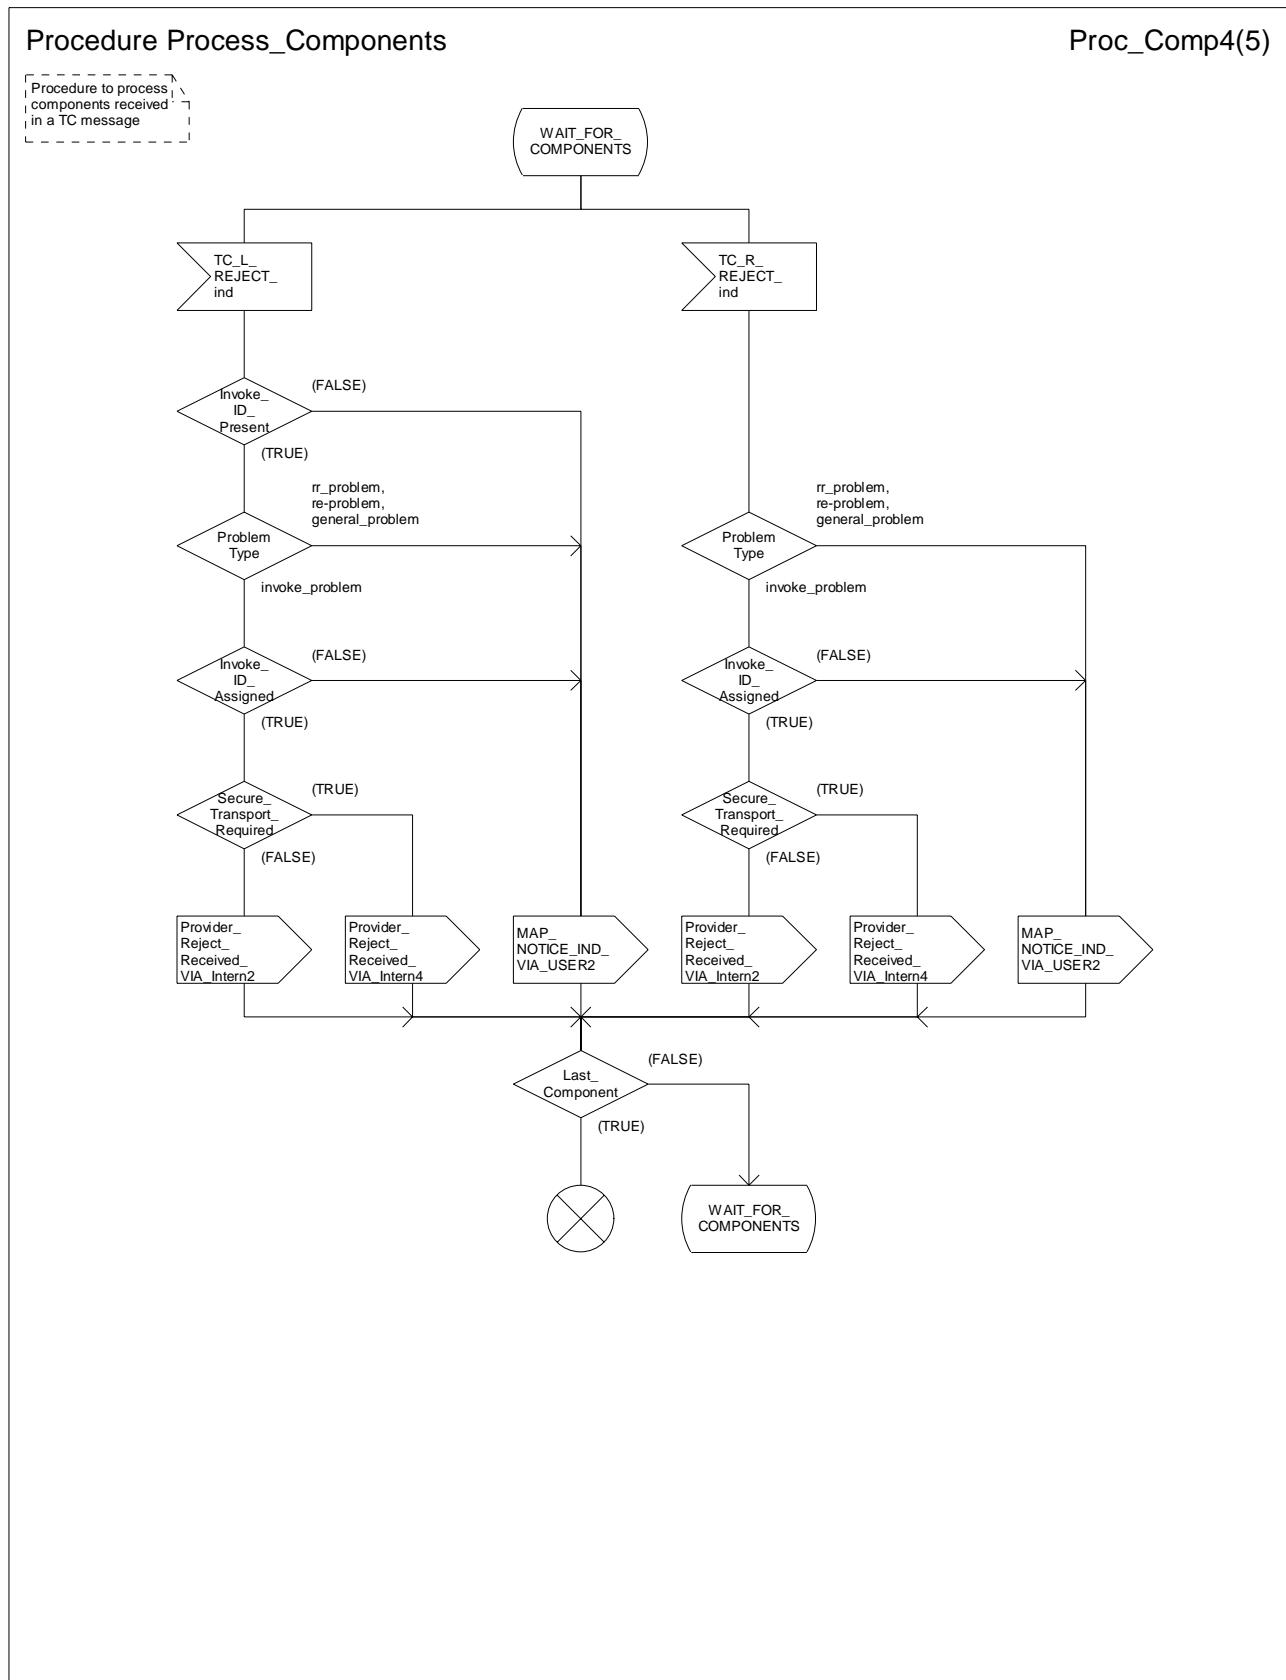
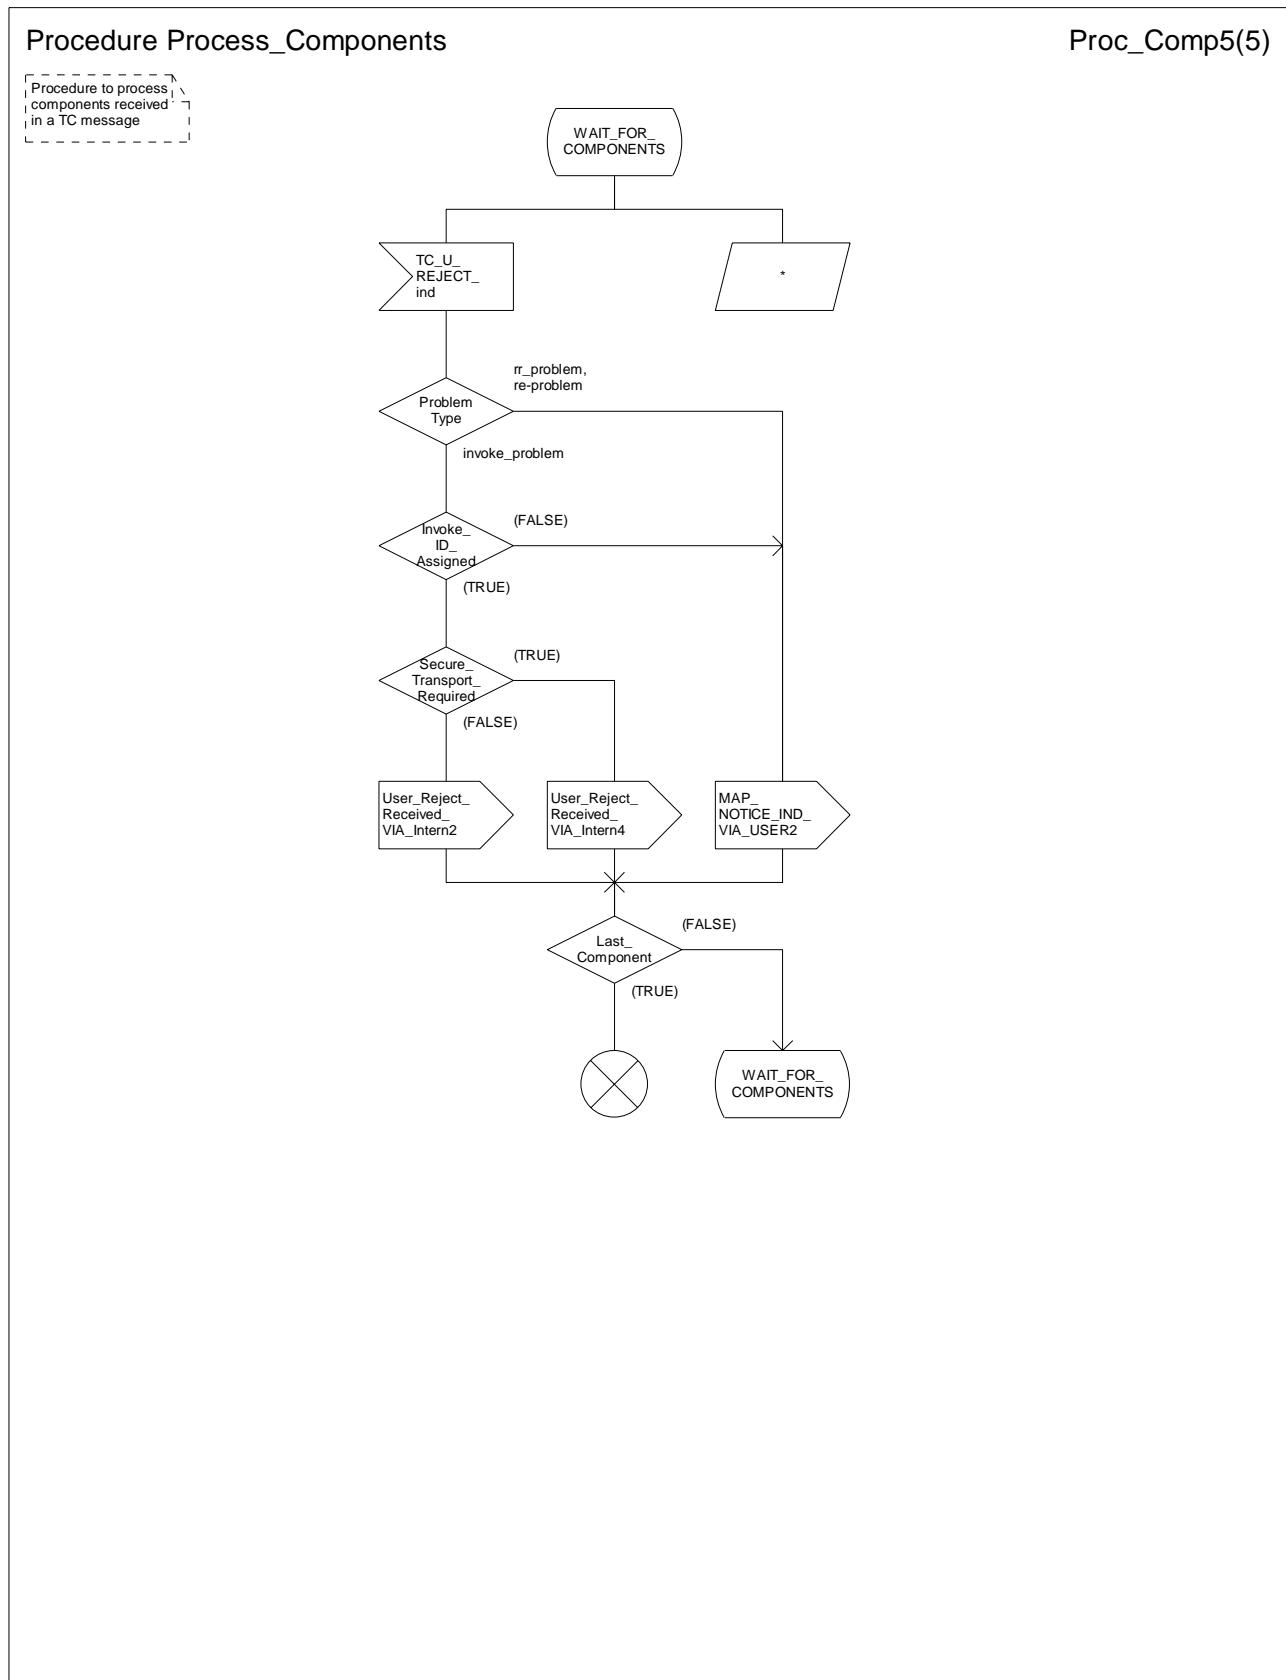


Figure 15.6/4d: Procedure Process\_Components (sheet 4)

**Figure 15.6/4e: Procedure Process\_Components (sheet 5)**

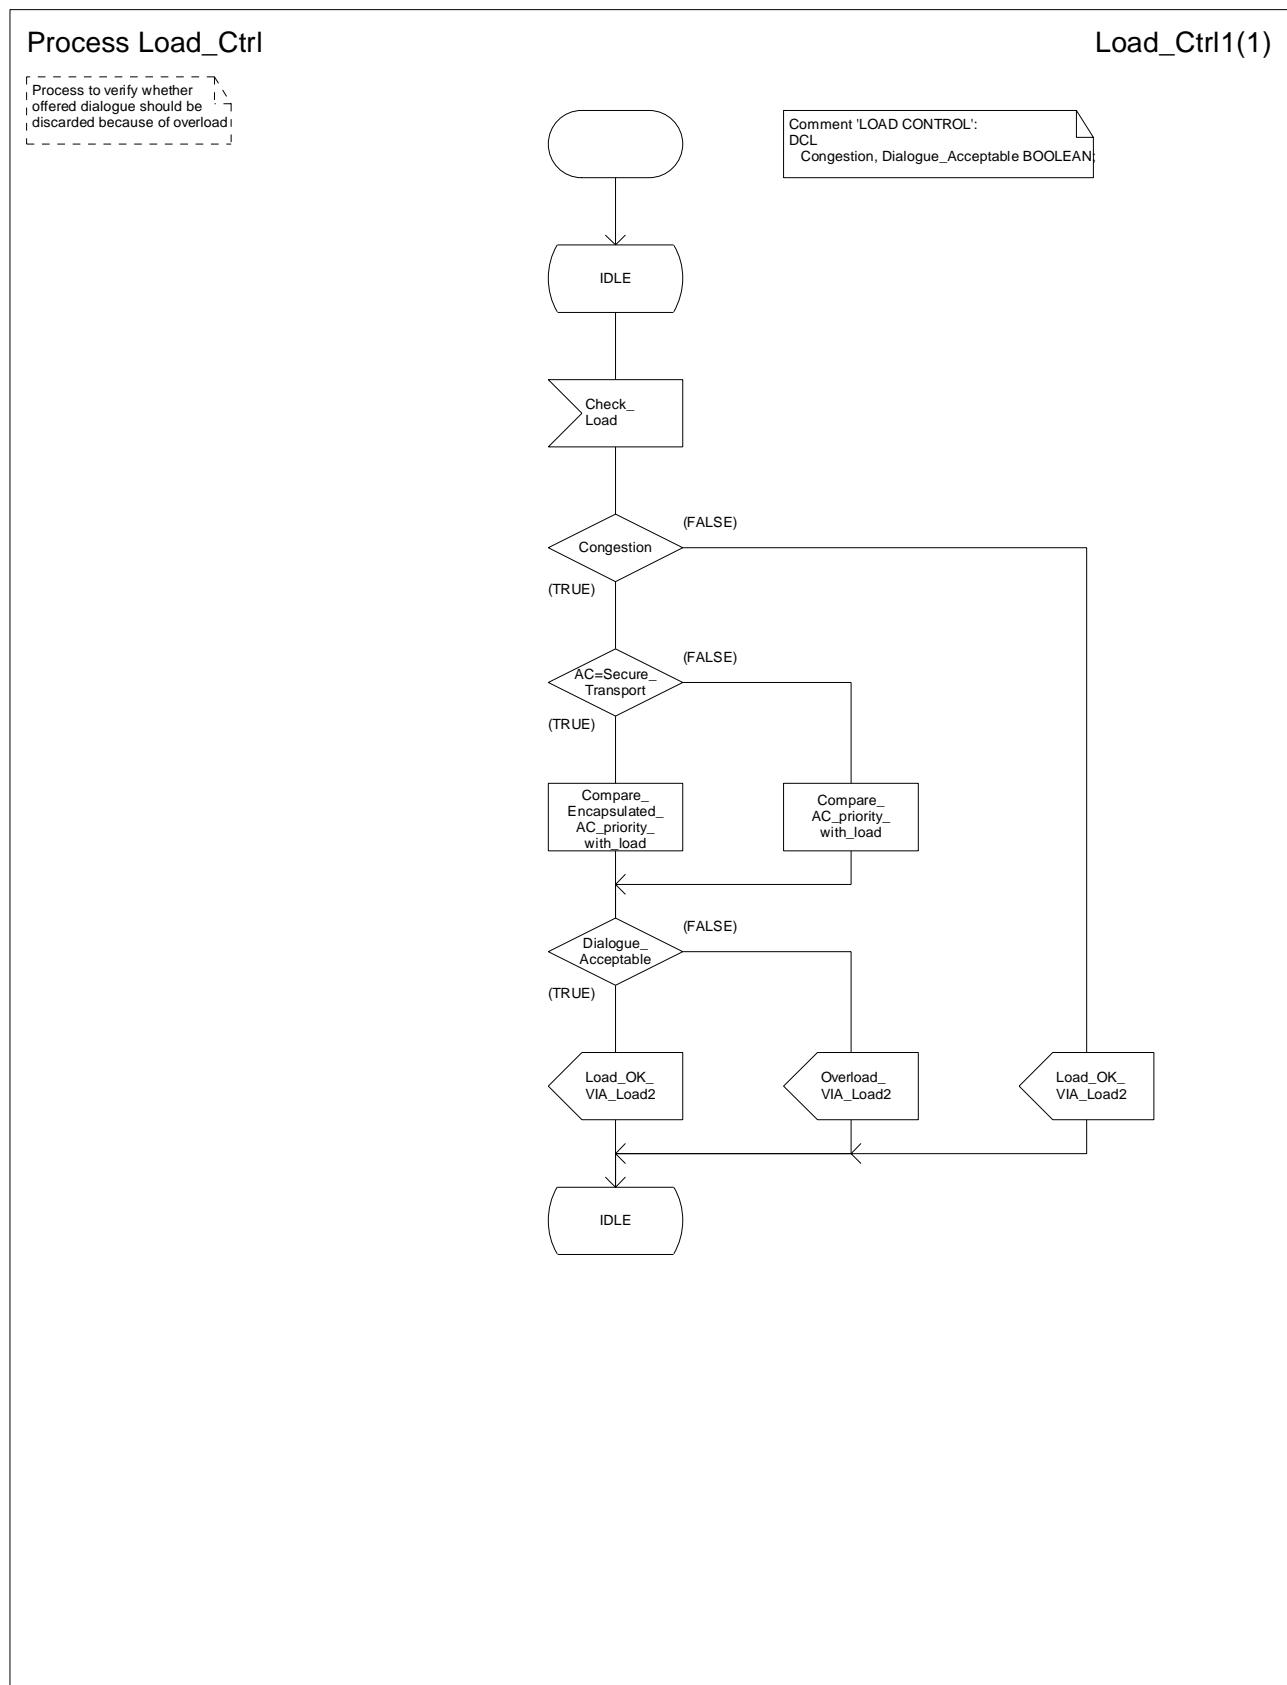
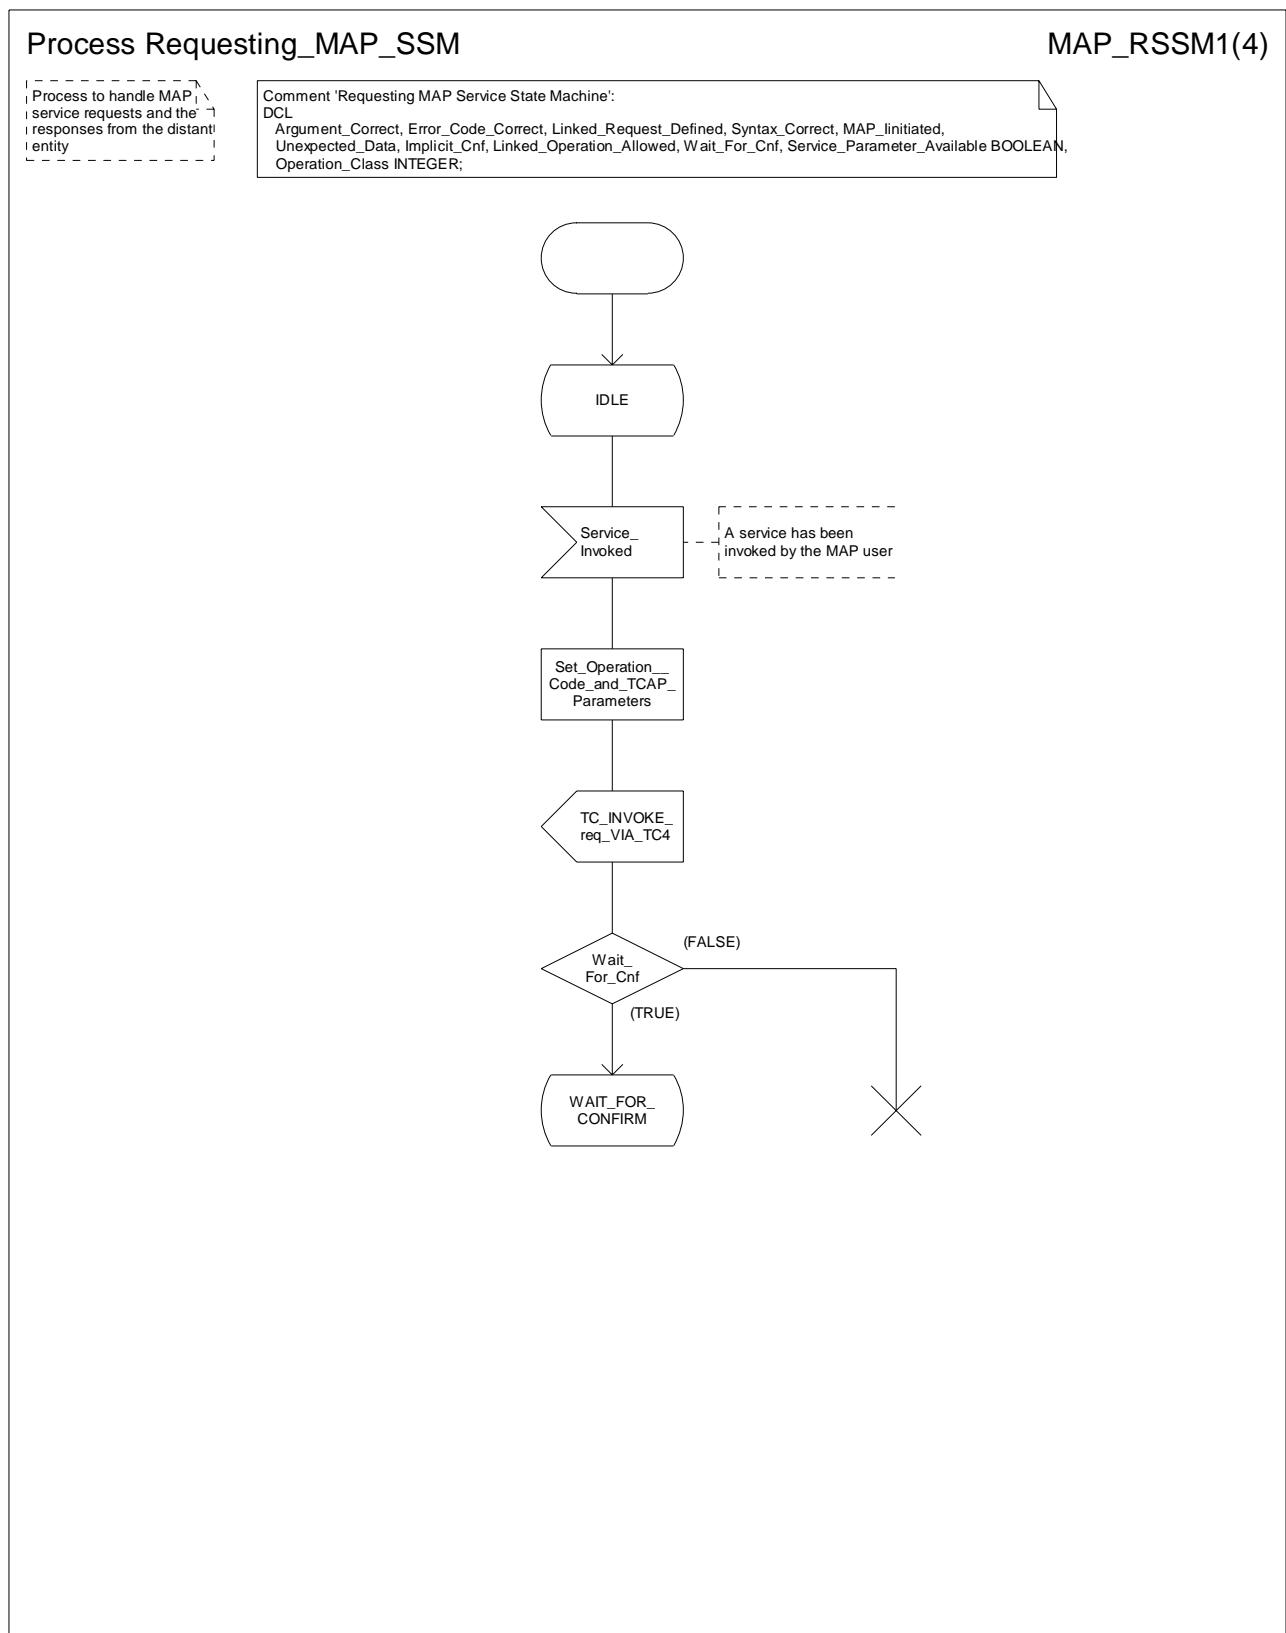


Figure 15.6/5: Process Load\_Ctrl

**Figure 15.6/6a: Process Requesting\_MAP\_SSM (sheet 1)**

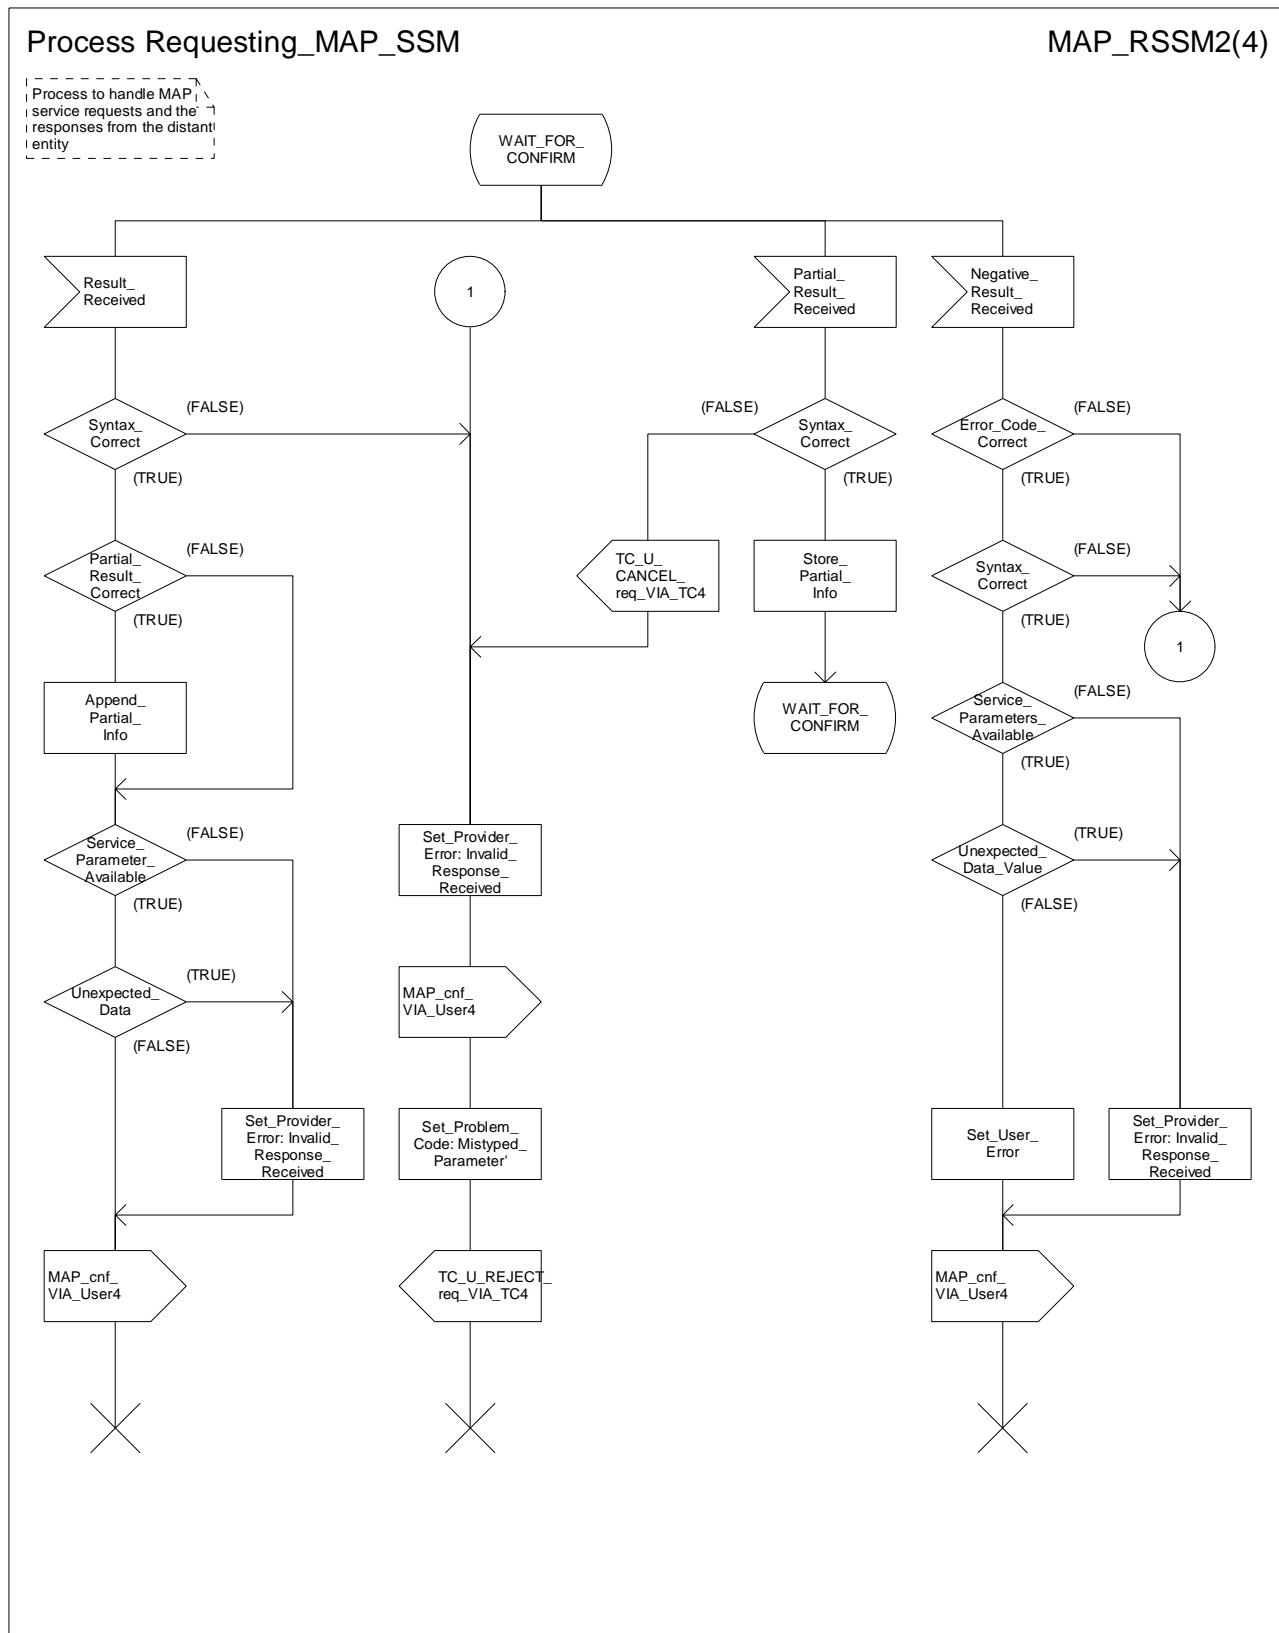


Figure 15.6/6b: Process Requesting\_MAP\_SSM (sheet 2)

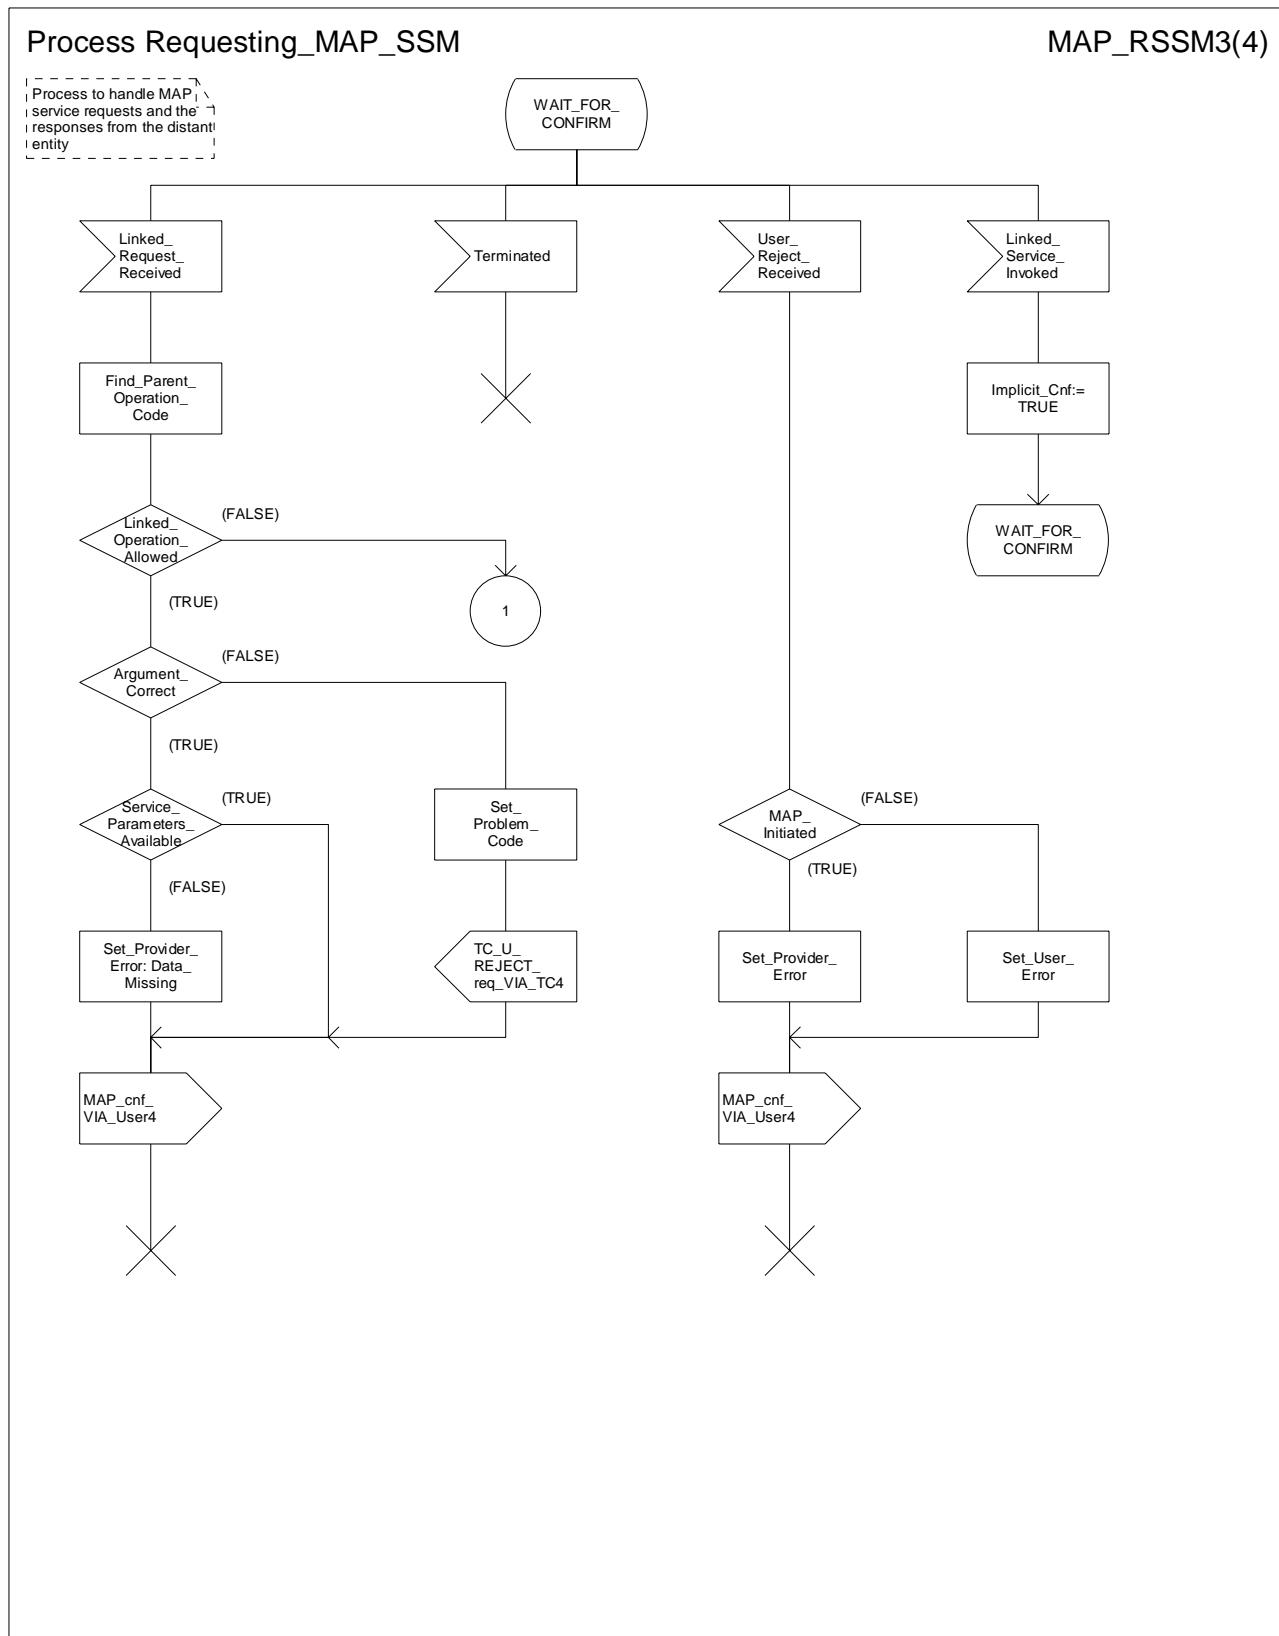


Figure 15.6/6c: Process Requesting\_MAP\_SSM (sheet 3)

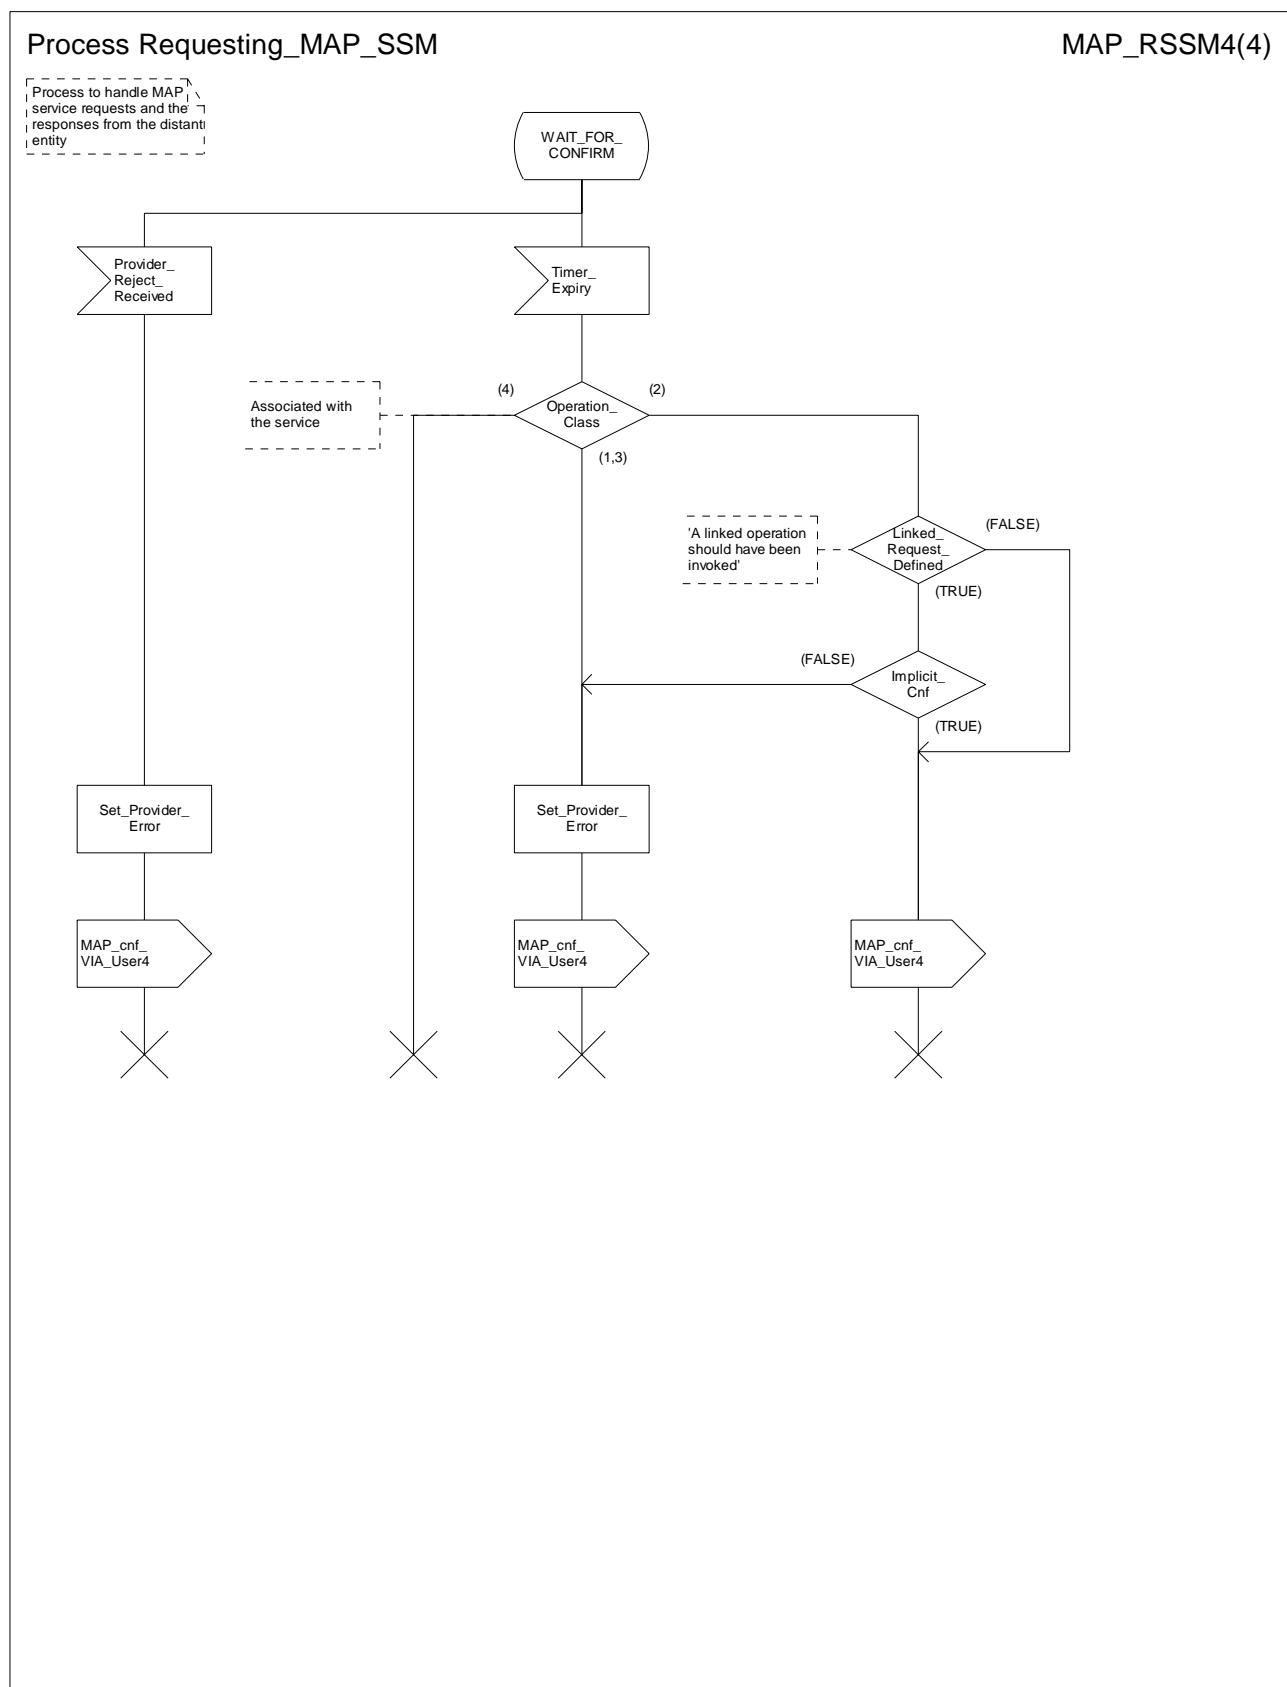


Figure 15.6/6d: Process Requesting\_MAP\_SSM (sheet 4)

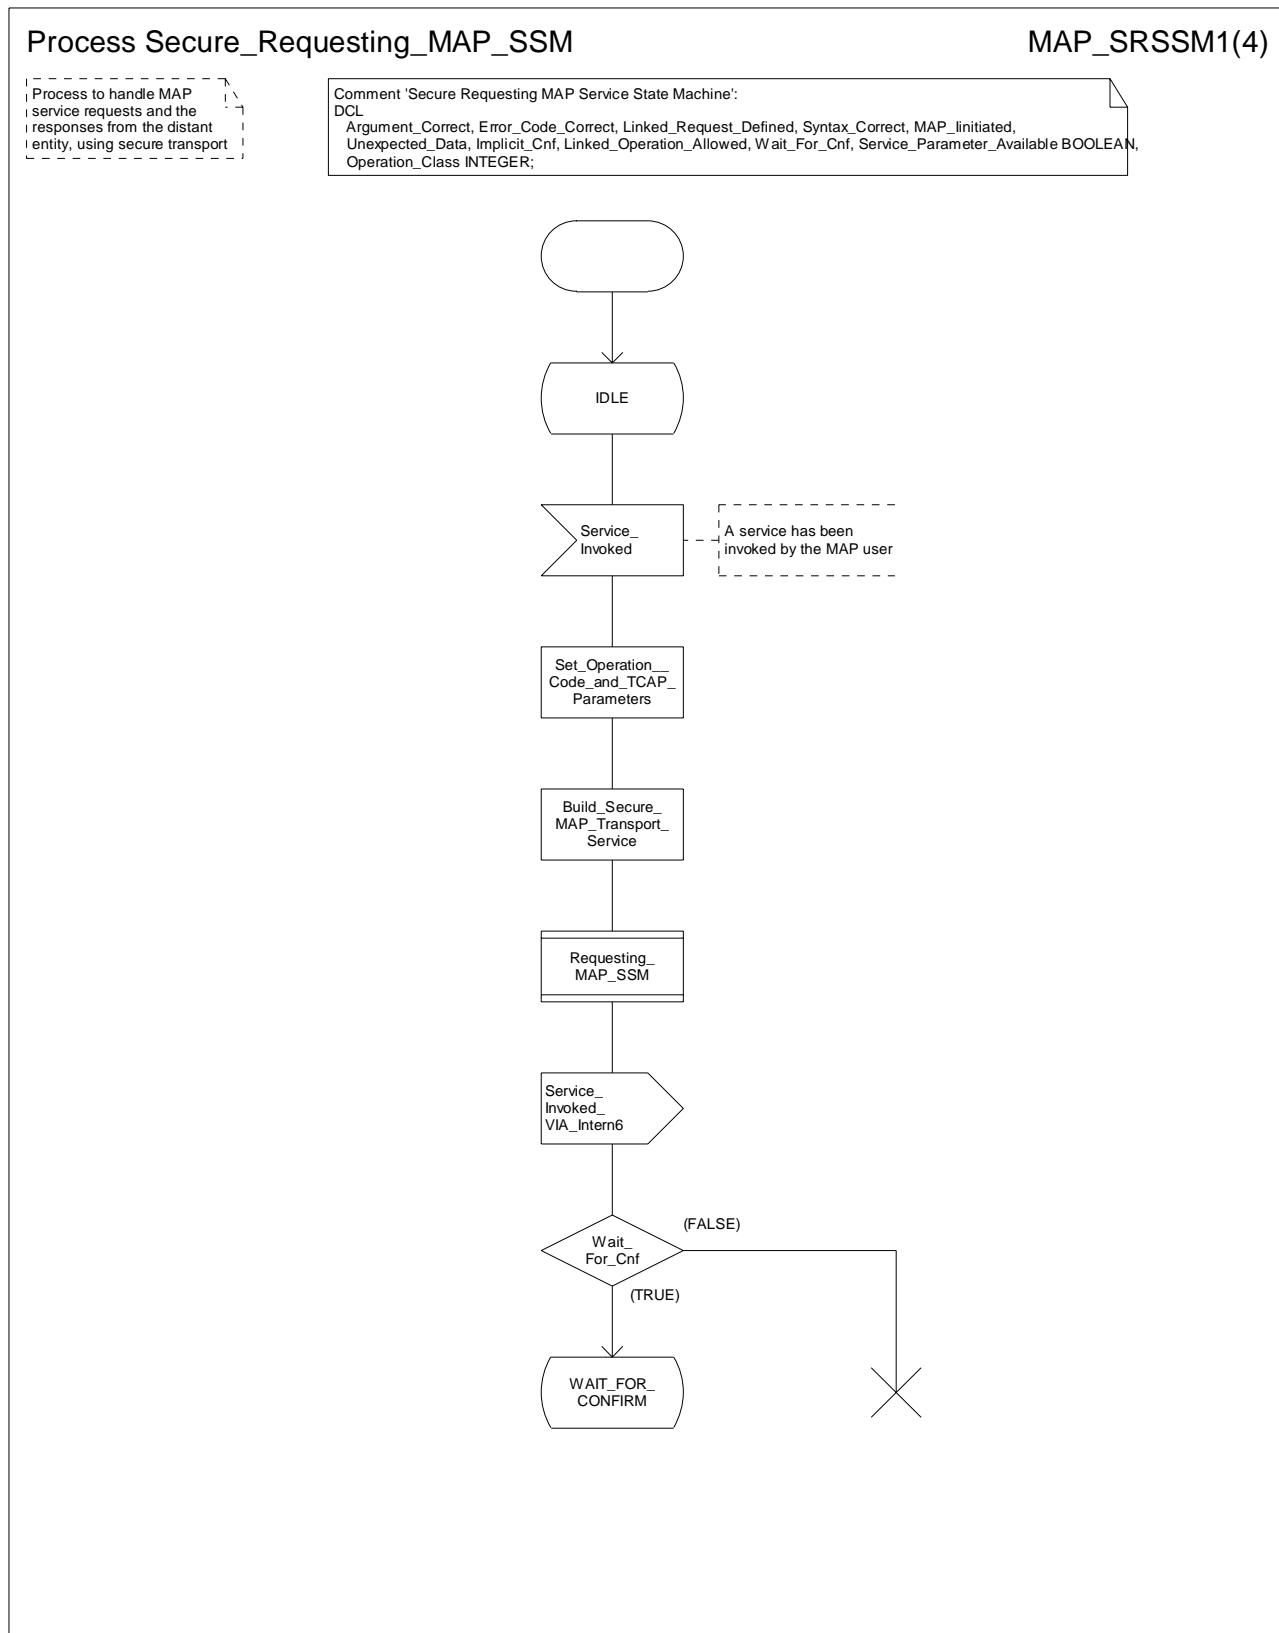


Figure 15.6/7a: Process Secure\_Requesting\_MAP\_SSM (sheet 1)

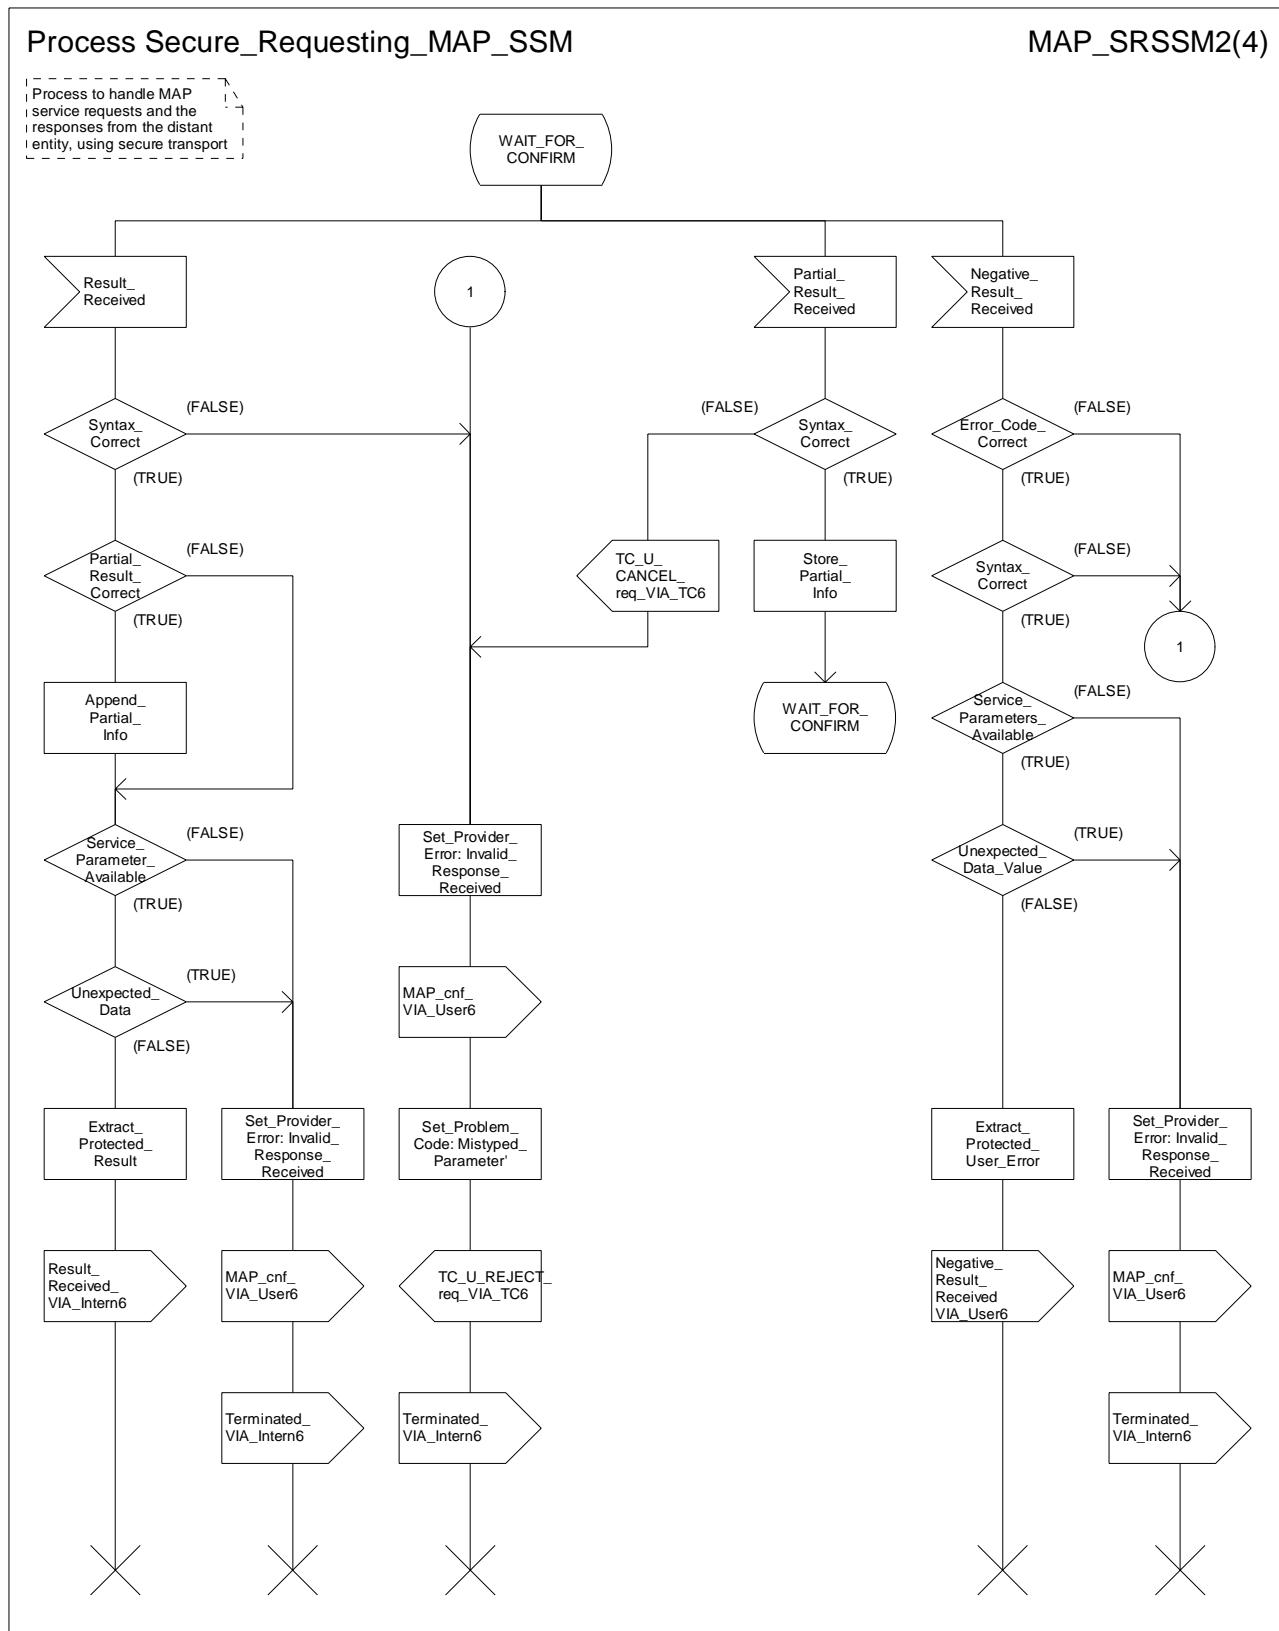


Figure 15.6/7b: Process Secure\_Requesting\_MAP\_SSM (sheet 2)

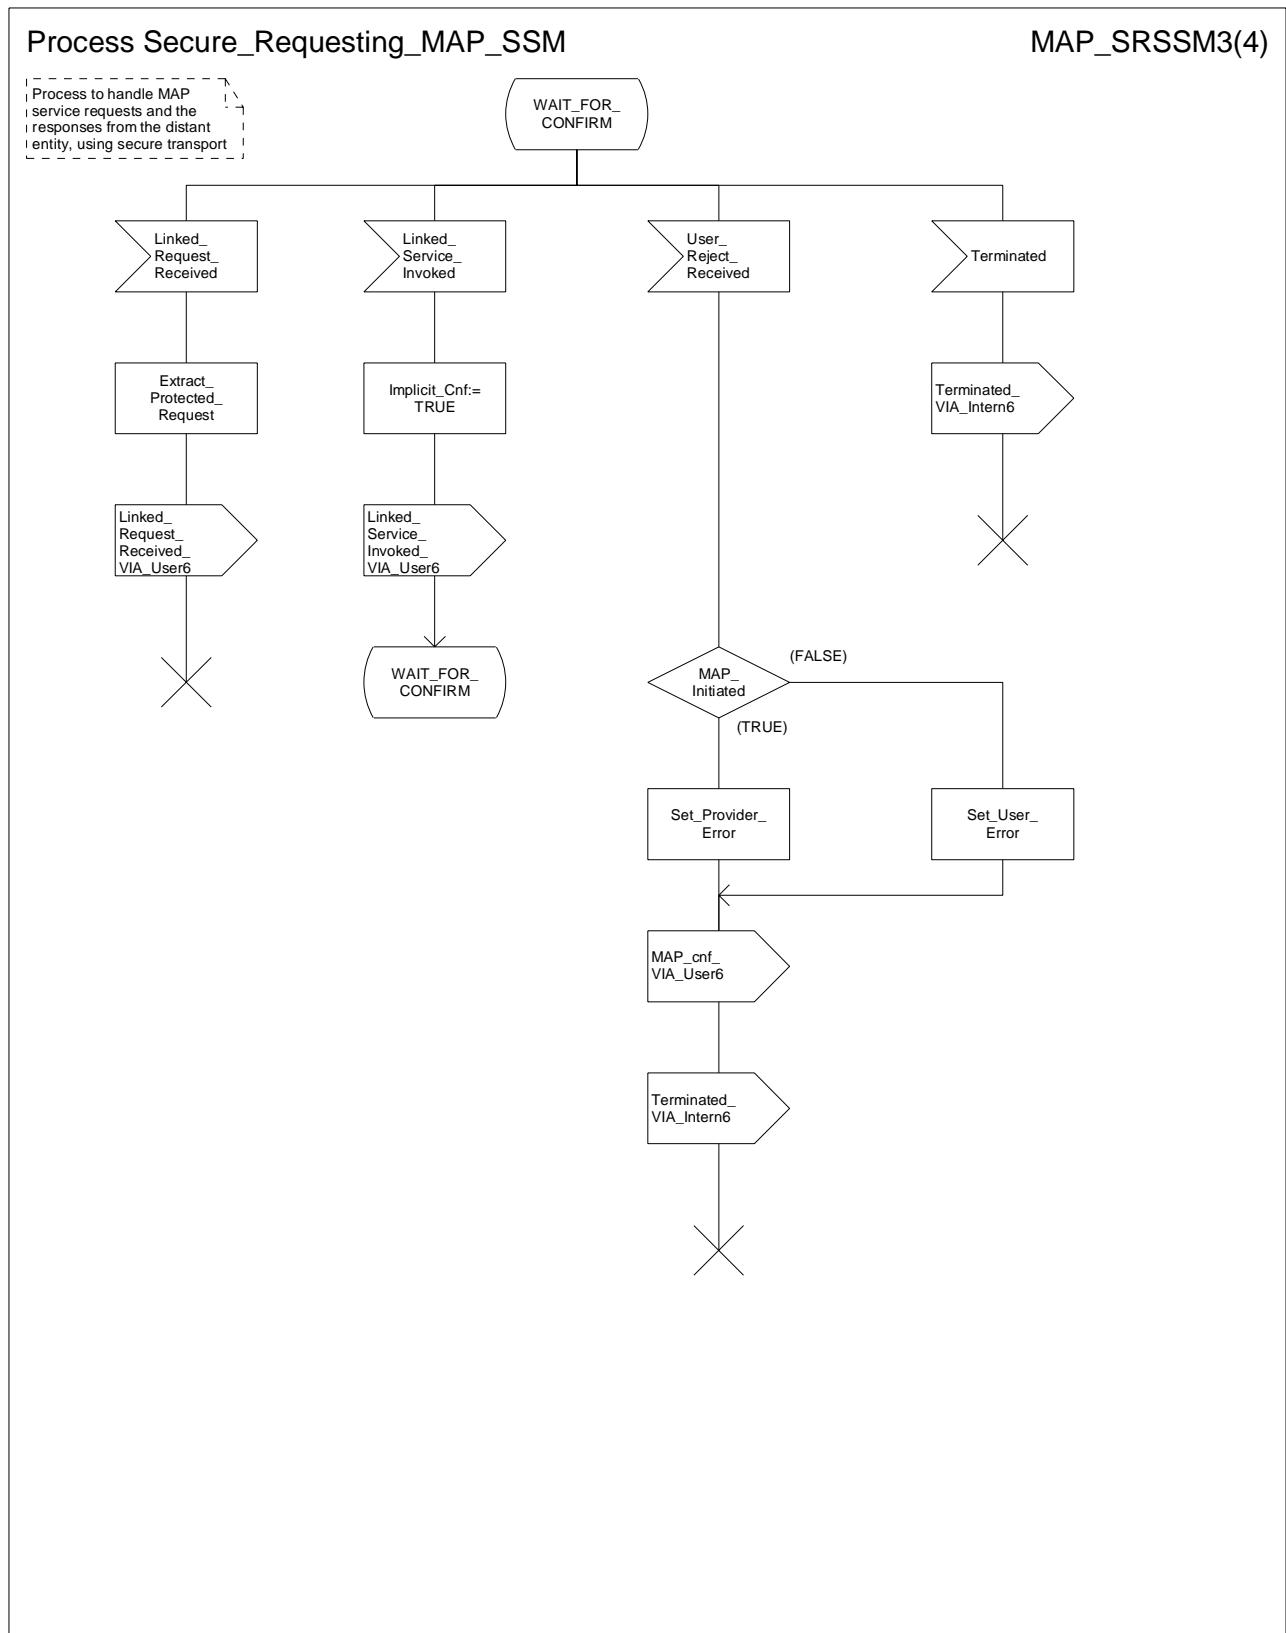
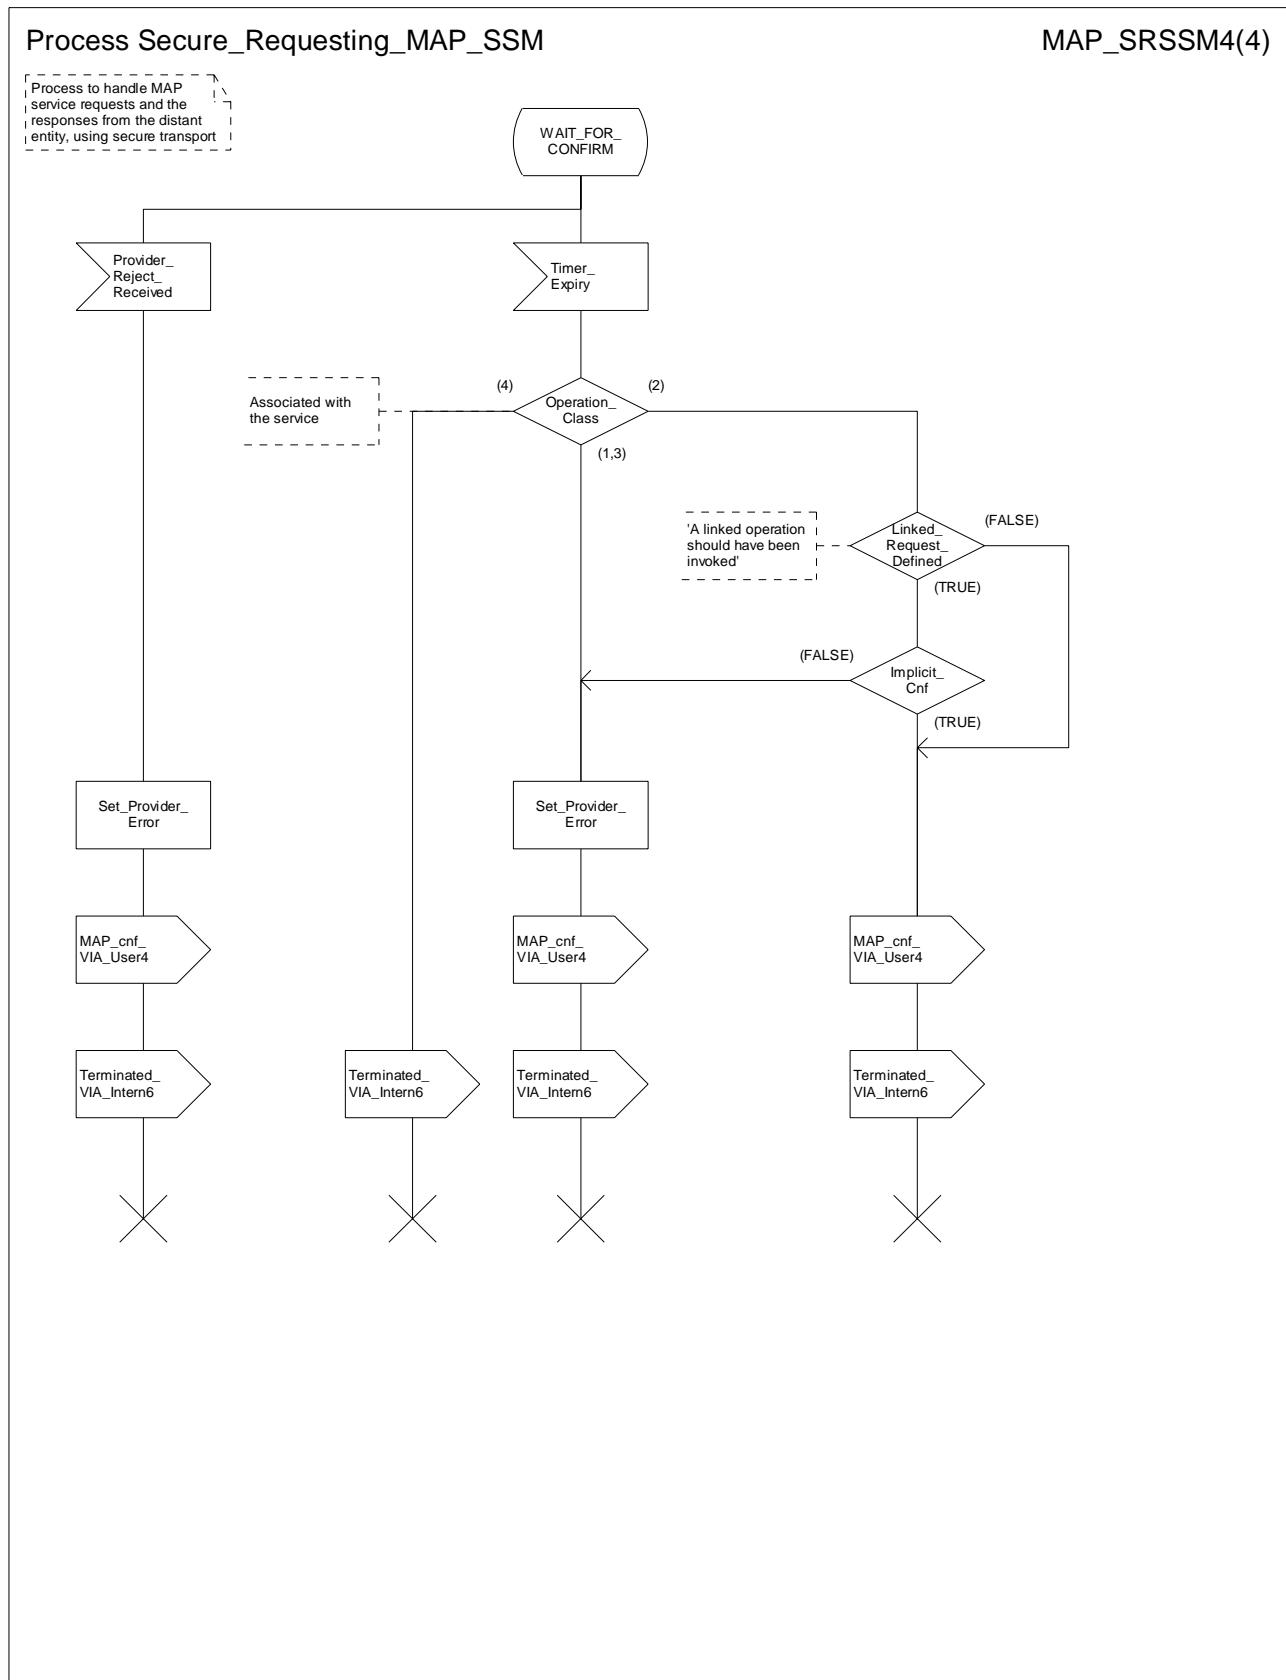


Figure 15.6/7c: Process Secure\_Requesting\_MAP\_SSM (sheet 3)

**Figure 15.6/7d: Process Secure\_Requesting\_MAP\_SSM (sheet 4)**

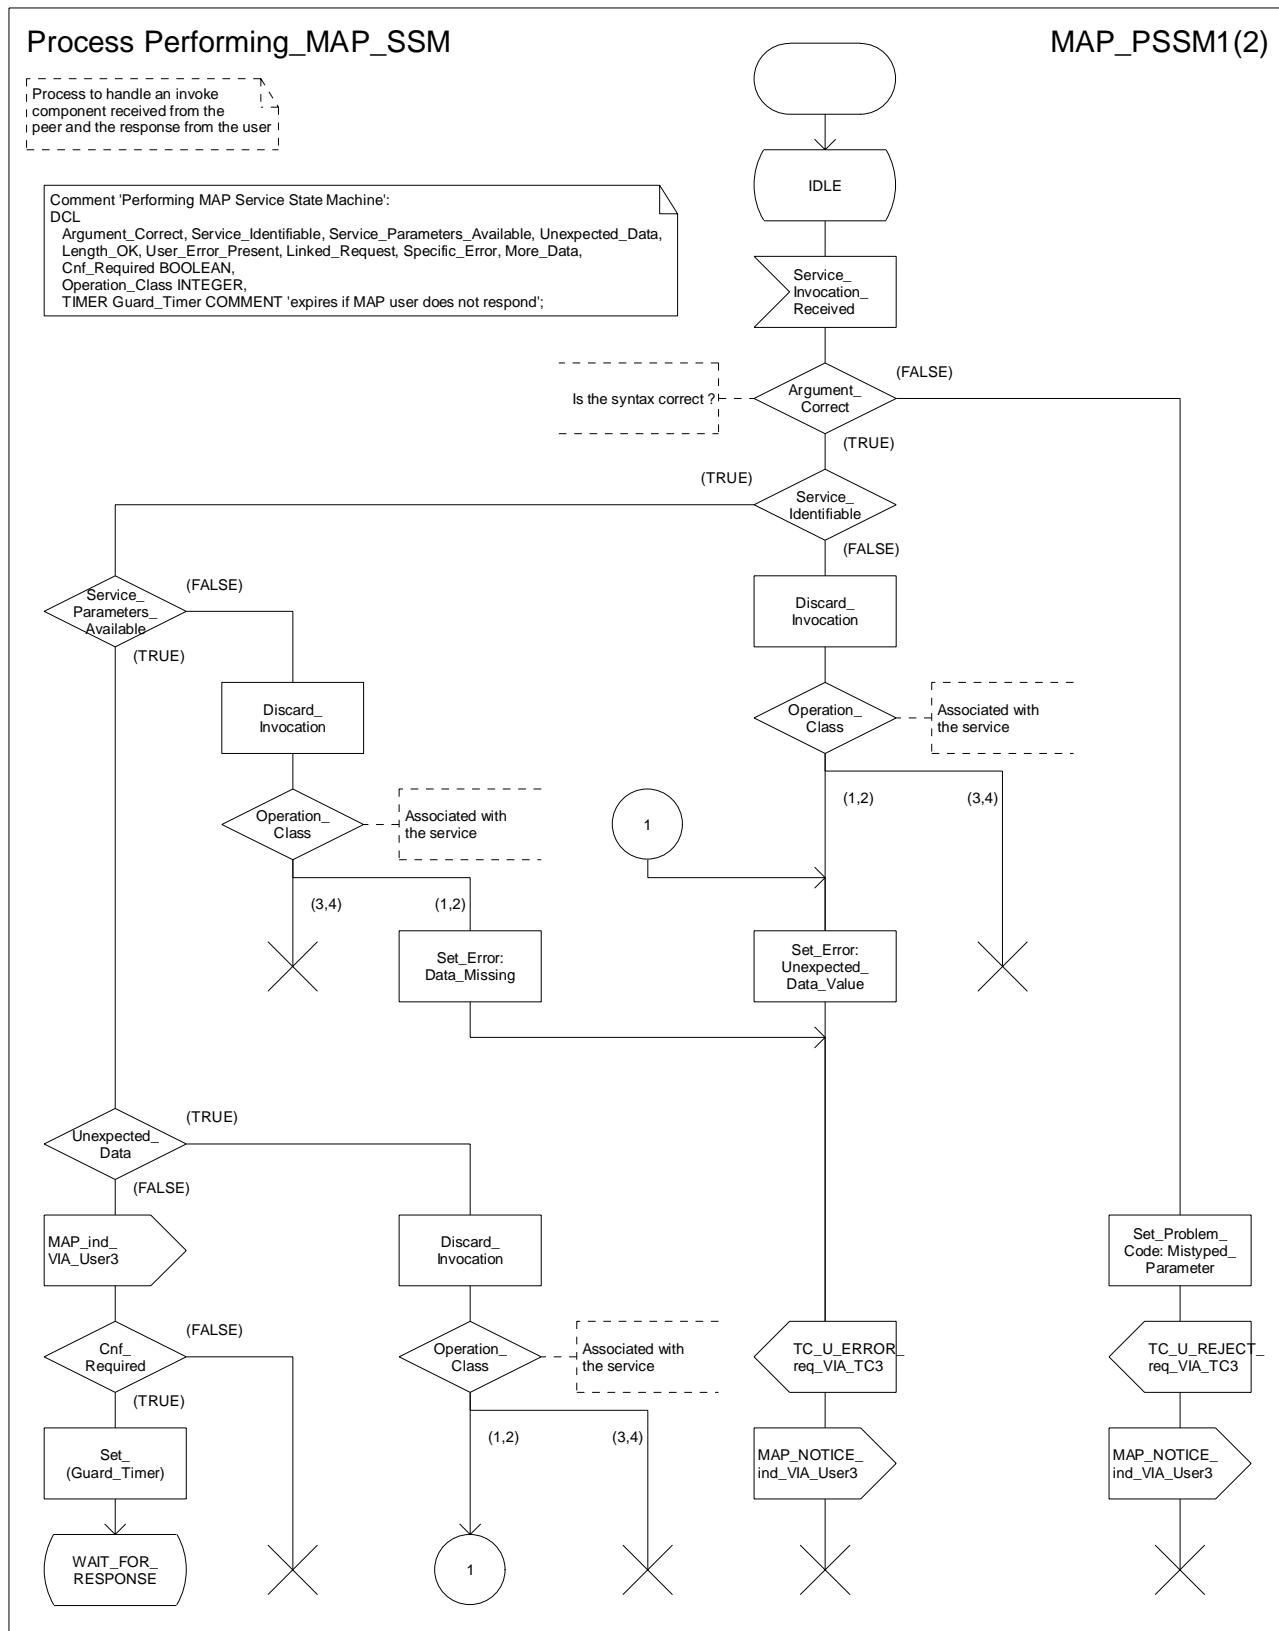


Figure 15.6/8a: Process Performing\_MAP\_SSM (sheet 1)


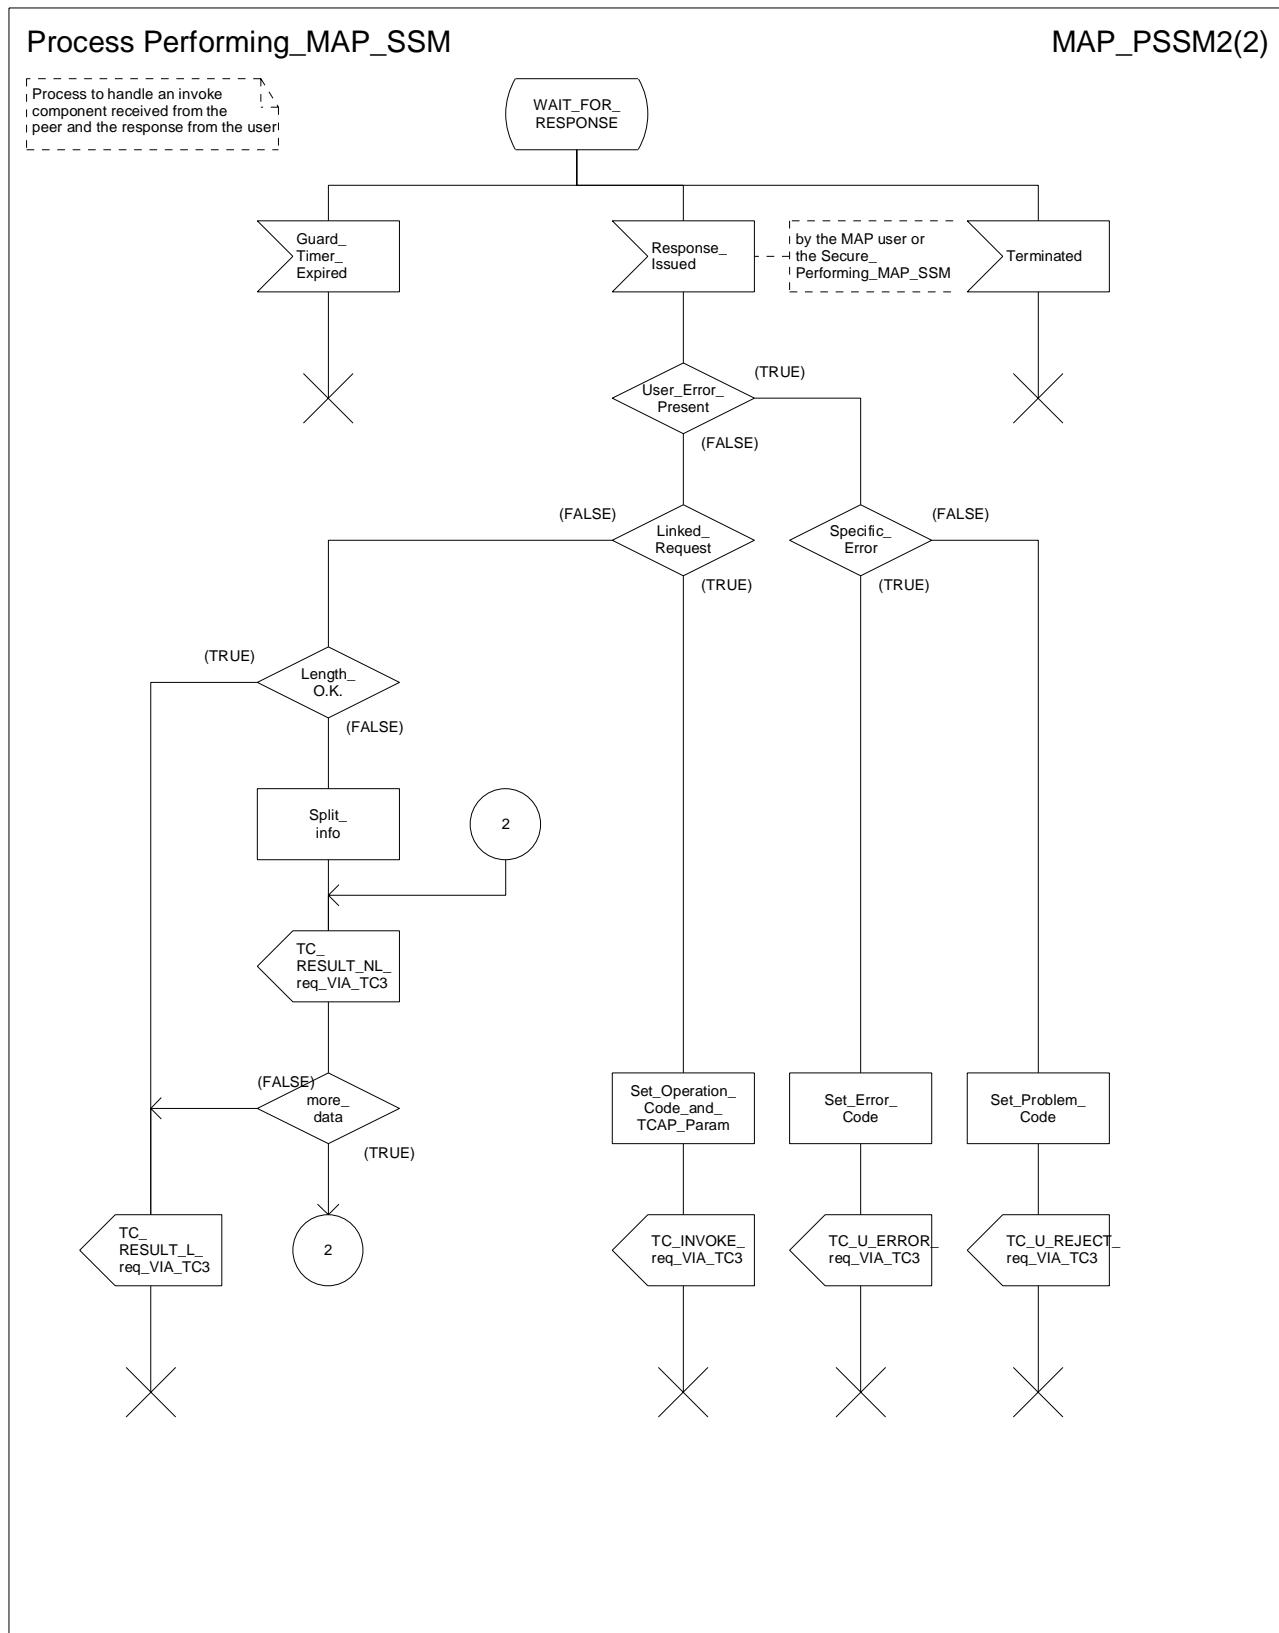


Figure 15.6/8b: Process Performing\_MAP\_SSM (sheet 2)

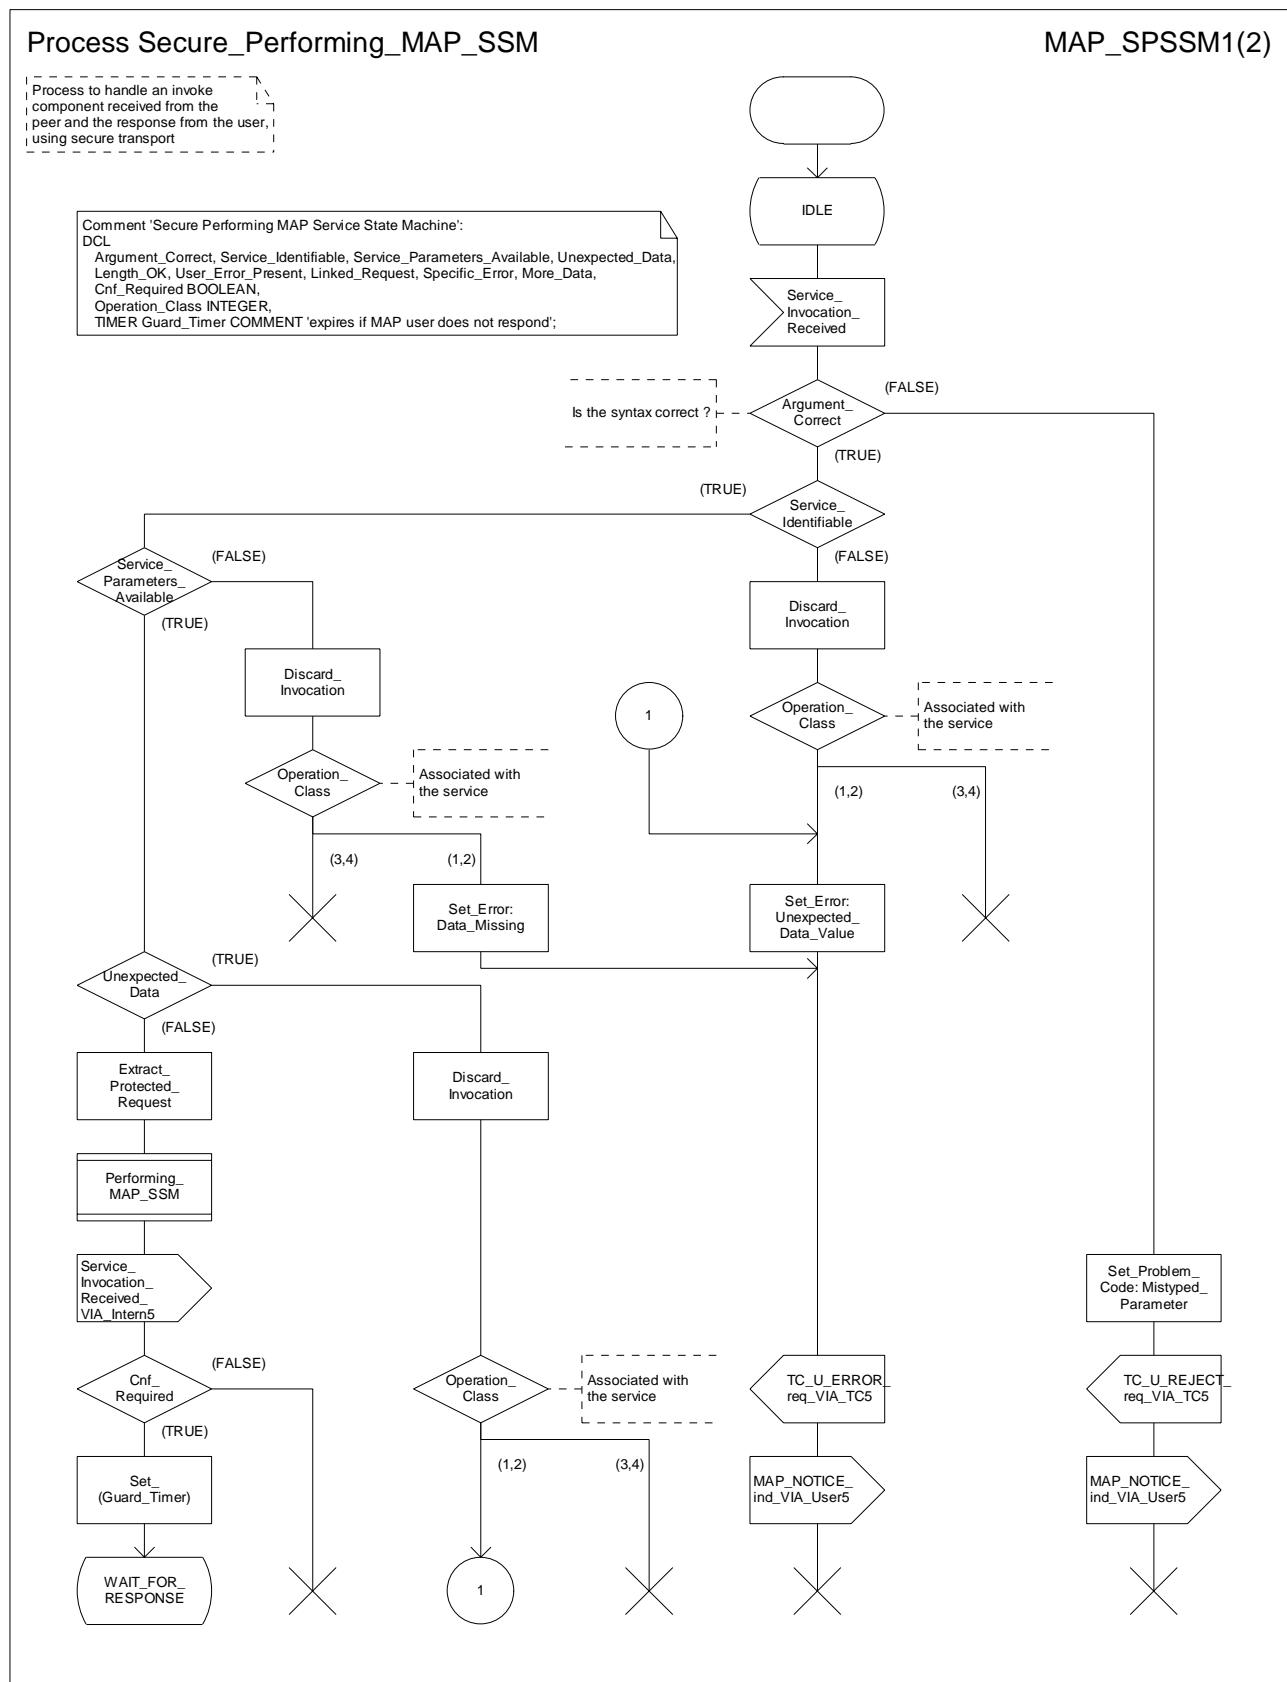

**Figure 15.6/9a: Process Secure\_Performing\_MAP\_SSM (sheet 1)**

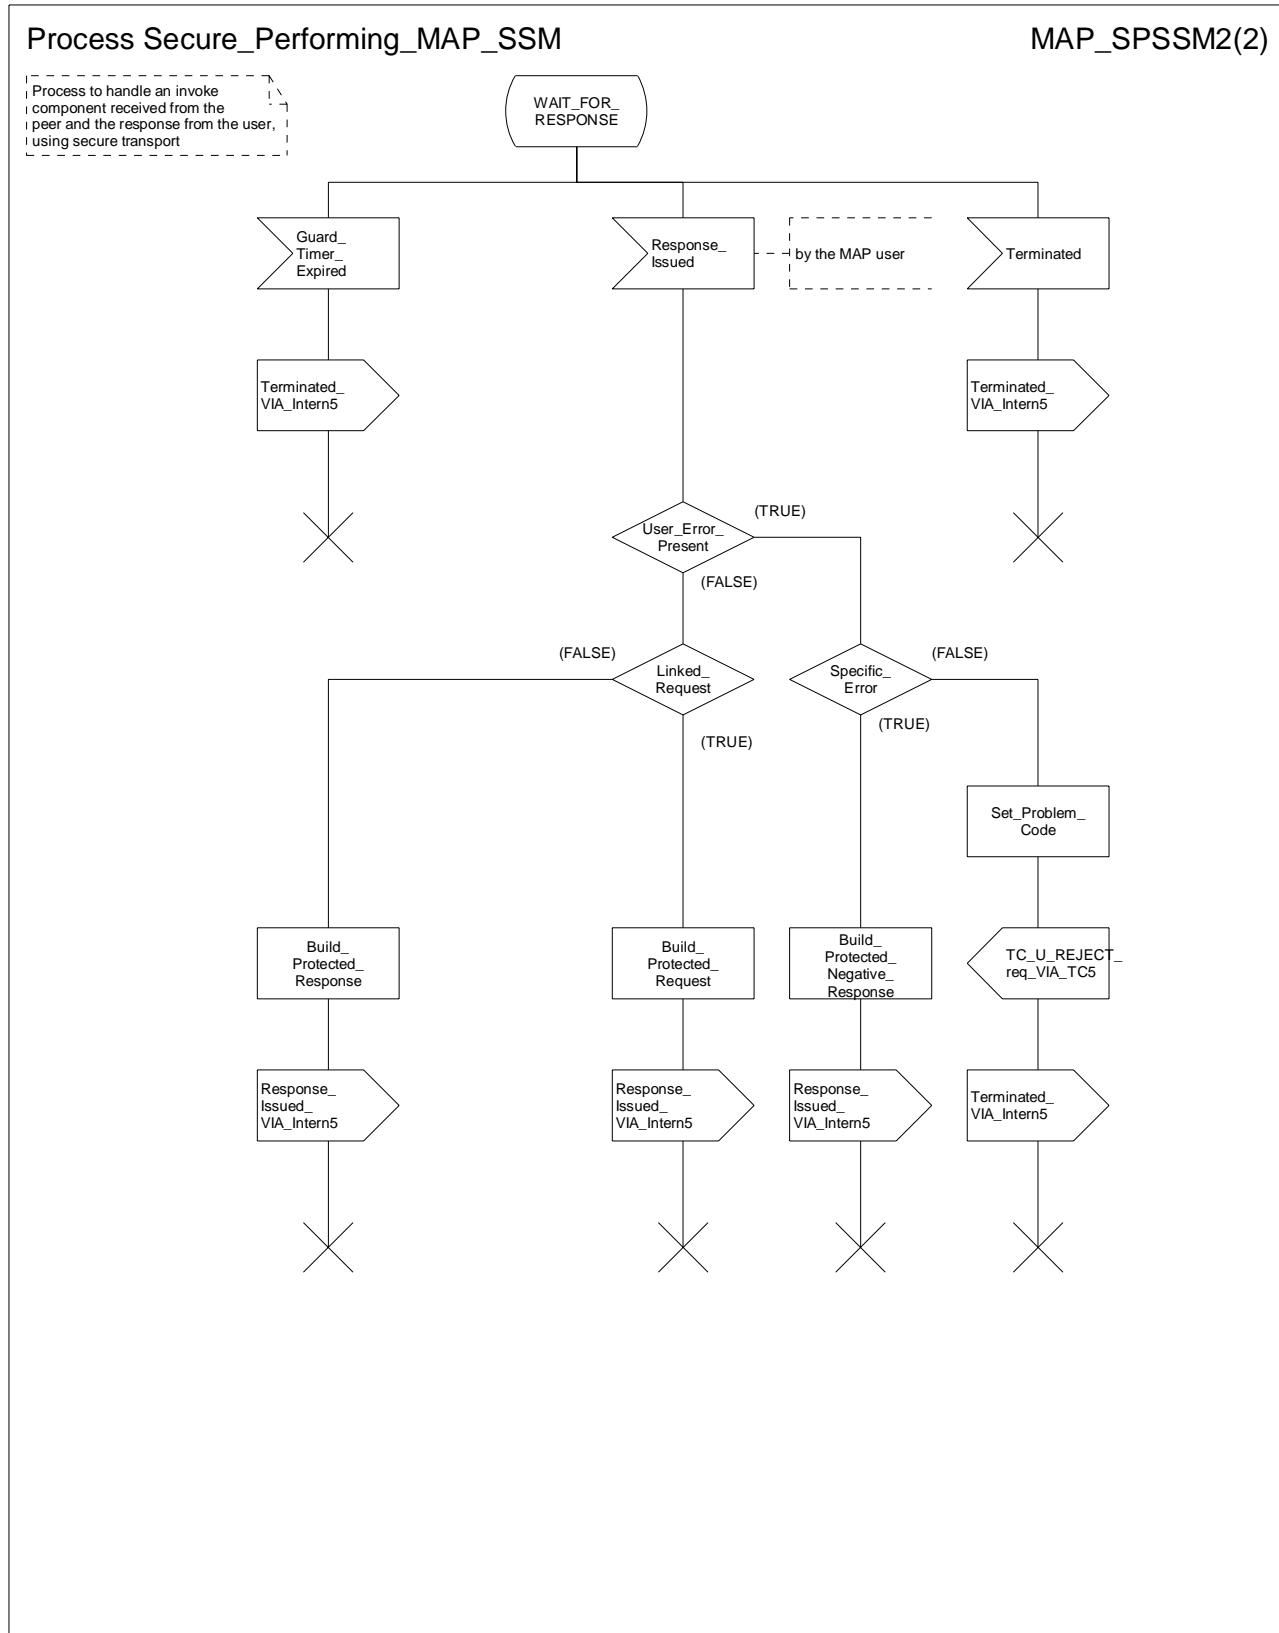


Figure 15.6/9b: Process Secure\_Performing\_MAP\_SSM (sheet 2)

## 16 Mapping on to TC services

### 16.1 Dialogue control

Dialogue control services are mapped to TC dialogue handling services. The TC-UNI service is not used by the MAP PM.

#### 16.1.1 Directly mapped parameters

The following parameters of the MAP-OPEN request and indication primitives are directly mapped on to the corresponding parameters of the TC-BEGIN primitives:

- destination address;
- originating address.

#### 16.1.2 Use of other parameters of dialogue handling primitives

##### 16.1.2.1 Dialogue Id

The value of this parameter is associated with the MAP PM invocation in an implementation dependent manner.

##### 16.1.2.2 Application-context-name

The application-context-name parameter of a MAP primitive is mapped to the application-context-name parameter of TC dialogue handling primitives according to the rules described in clause 15.1.

##### 16.1.2.3 User information

The user information parameter of TC dialogue primitives is used to carry the MAP dialogue APDUs.

##### 16.1.2.4 Component present

This parameter is used by the MAP PM as described in CCITT Recommendation Q.771. It is not visible to the MAP user.

##### 16.1.2.5 Termination

The value of this parameter of the TC-END request primitive is set by the MAP PM on the basis of the release method parameter of the MAP-CLOSE request primitive, except when the dialogue state machine is in the state DIALOGUE INITIATED, in which case the Termination parameter shall always indicate "pre-arranged end".

##### 16.1.2.6 P-Abort-Cause

Values of the P-abort-cause parameter are mapped to the values of the provider-reason parameter of the MAP-P-ABORT indication primitive according to table 16.1/1, except in the dialogue initiated phase for the "incorrectTransactionPortion" and "noCommonDialoguePortion" values which are mapped to the "potential incompatibility problem" value of the refuse-reason parameter of the MAP-OPEN cnf primitive. The source parameter in the MAP-P-ABORT ind takes the value "TC problem".

##### 16.1.2.7 Quality of service

The quality of service of TC request primitives is set by the MAP as shown below.

- Return option: "Return message on error" or "Discard message on error" as required by the network operator;

- Sequence control: "Sequence guaranteed" or "Sequence result not guaranteed" as required by the network operator;
- "Sequence guaranteed" shall be used when a segmented result is to be transferred (e.g. subscriber data in response to SendParameters). It may also be appropriate to use Sequence guaranteed when a series of InsertSubscriberData, ProcessAccessSignalling or ForwardAccessSignalling operations is used.

It is essential that the TC message which indicates acceptance of a dialogue opening request is received by the dialogue initiator before any subsequent message in that dialogue; otherwise the dialogue opening will fail. The dialogue responder shall ensure that this requirement is met by:

- Sending the dialogue acceptance message in a TC-END, if the dialogue structure requires it; or
- Using "Sequence guaranteed", if the dialogue acceptance message is sent in a TC-CONTINUE; or
- Waiting until the dialogue acceptance message has been acknowledged by the dialogue initiator before sending a subsequent message, if the dialogue acceptance message is sent in a TC-CONTINUE.

**Table 16.1/1: Mapping of P-Abort cause in TC-P-ABORT indication on to provider-reason in MAP-P-ABORT indication**

TC P-Abort cause	MAP provider-reason
unrecognised message type	provider malfunction
unrecognised transaction Id	supporting dialogue released
badlyFormattedTransactionPortion	provider malfunction
incorrectTransactionPortion	provider malfunction (note)
resourceLimitation	resource limitation
abnormalDialogue	provider malfunction
noCommonDialoguePortion	version incompatibility
NOTE: Or version incompatibility in the dialogue initiated phase.	

## 16.2 Service specific procedures

Specific services are mapped to TC component handling services.

### 16.2.1 Directly mapped parameters

The Invoke Id parameter of the MAP request and indication primitive is directly mapped on to the Invoke Id parameter of the component handling primitives.

### 16.2.2 Use of other parameters of component handling primitives

#### 16.2.2.1 Dialogue Id

The value of this parameter is associated with the MAP PM invocation in an implementation dependent manner.

#### 16.2.2.2 Class

The value of this parameter is set by the MAP PM according to the type of the operation to be invoked.

#### 16.2.2.3 Linked Id

When a service response is mapped to a class 4 operation, the value of this parameter is set by the MAP PM and corresponds to the value assigned by the user to the initial service request (i.e. the value of the invoke ID parameter of the request primitive). Otherwise if such a parameter is included in MAP request/indication primitives it is directly mapped to the linked ID parameter of the associated TC-INVOKE request/indication primitives.

### 16.2.2.4 Operation

When mapping a request primitive on to a Remote Operations PDU (invoke), the MAP PM shall set the operation code according to the mapping described in table 16.2/1.

When mapping a response primitive on to a Remote Operations service, the MAP PM shall set the operation code of the TC-RESULT-L/NL primitive (if required) to the same value as the one received at invocation time.

**Table 16.2/1: Mapping of MAP specific services on to MAP operations**

MAP-SERVICE	operation
MAP-ACTIVATE-SS	activateSS
MAP-ACTIVATE-TRACE-MODE	activateTraceMode
MAP-ALERT-SERVICE-CENTRE	alertServiceCentre
MAP-ANY-TIME-INTERROGATION	anyTimeInterrogation
MAP_AUTHENTICATION_FAILURE_REPORT	authenticationFailureReport
MAP-ANY-TIME-MODIFICATION	anyTimeModification
MAP-ANY-TIME-SUBSCRIPTION-INTERROGATION	anyTimeSubscriptionInterrogation
MAP-CANCEL-LOCATION	cancelLocation
MAP-CHECK-IMEI	checkIMEI
MAP-DEACTIVATE-SS	deactivateSS
MAP-DEACTIVATE-TRACE-MODE	deactivateTraceMode
MAP-DELETE-SUBSCRIBER-DATA	deleteSubscriberData
MAP-ERASE-CC-ENTRY	eraseCC-Entry
MAP-ERASE-SS	eraseSS
MAP-FAILURE-REPORT	failureReport
MAP-FORWARD-ACCESS-SIGNALLING	forwardAccessSignalling
MAP-FORWARD-CHECK-SS-INDICATION	forwardCheckSsIndication
MAP-FORWARD-GROUP-CALL-SIGNALLING	forwardGroupCallSignalling
MAP-MT-FORWARD-SHORT-MESSAGE	mt-forwardSM
MAP-MO-FORWARD-SHORT-MESSAGE	mo-forwardSM
MAP-GET-PASSWORD	getPassword
MAP-INFORM-SERVICE-CENTRE	informServiceCentre
MAP-INSERT-SUBSCRIBER-DATA	insertSubscriberData
MAP-INTERROGATE-SS	interrogateSs
MAP-IST-ALERT	istAlert
MAP-IST-COMMAND	istCommand
MAP-NOTE-MS-PRESENT-FOR-GPRS	noteMsPresentForGprs
MAP-NOTE-SUBSCRIBER-DATA-MODIFIED	noteSubscriberDataModified
MAP-PREPARE-GROUP-CALL	prepareGroupCall
MAP-PREPARE-HANDOVER	prepareHandover
MAP-PREPARE-SUBSEQUENT-HANDOVER	prepareSubsequentHandover
MAP-PROCESS-ACCESS-SIGNALLING	processAccessSignalling
MAP-PROCESS-GROUP-CALL-SIGNALLING	processGroupCallSignalling
MAP-PROCESS-UNSTRUCTURED-SS-REQUEST	processUnstructuredSS-Request
MAP-PROVIDE-ROAMING-NUMBER	provideRoamingNumber
MAP-PROVIDE-SIWFS-NUMBER	provideSIWFSNumber
MAP-PROVIDE-SUBSCRIBER-LOCATION	provideSubscriberLocation
MAP-PROVIDE-SUBSCRIBER-INFO	provideSubscriberInfo
MAP-PURGE-MS	purgeMS
MAP-READY-FOR-SM	readyForSM
MAP-REGISTER-CC-ENTRY	registerCC-Entry
MAP-REGISTER-PASSWORD	registerPassword
MAP-REGISTER-SS	registerSS
MAP-REMOTE-USER-FREE	remoteUserFree
MAP-REPORT-SM-DELIVERY-STATUS	reportSmDeliveryStatus
MAP-RESET	reset
MAP-RESTORE-DATA	restoreData
MAP-SECURE-TRANSPORT-CLASS-1	secureTransportClass1
MAP-SECURE-TRANSPORT-CLASS-2	secureTransportClass2
MAP-SECURE-TRANSPORT-CLASS-3	secureTransportClass3
MAP-SECURE-TRANSPORT-CLASS-4	secureTransportClass4
MAP-SEND_GROUP-CALL_END_SIGNAL	sendGroupCallEndSignal
MAP-SEND-END-SIGNAL	sendEndSignal

MAP-SEND-AUTHENTICATION-INFO	sendAuthenticationInfo
MAP-SEND-IMSI	sendIMSI
MAP-SEND-IDENTIFICATION	sendIdentification
MAP-SEND-ROUTING-INFO-FOR-SM	sendRoutingInfoForSM
MAP-SEND-ROUTING-INFO-FOR-GPRS	sendRoutingInfoForGprs
MAP-SEND-ROUTING-INFO-FOR-LCS	sendRoutingInfoForLCS
MAP-SEND-ROUTING-INFORMATION	sendRoutingInfo
MAP-SET-REPORTING-STATE	setReportingState
MAP-SIWFSSIGNALLING-MODIFY	SIWFSSignallingModify
MAP-STATUS-REPORT	statusReport
MAP-SUBSCRIBER-LOCATION-REPORT	subscriberLocationReport
MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION	ss-Invocation-Notification
MAP-UNSTRUCTURED-SS-NOTIFY	unstructuredSS-Notify
MAP-UNSTRUCTURED-SS-REQUEST	unstructuredSS-Request
MAP-UPDATE-GPRS-LOCATION	updateGprsLocation
MAP-UPDATE-LOCATION	updateLocation
MAP-NOTE-MM-EVENT	NoteMM-Event

### 16.2.2.5 Error

The error parameter in a TC-U-ERROR indication primitive is mapped to the user error parameter in the MAP confirm primitive of the service associated with the operation to which the error is attached.

The user error parameter in MAP response primitives is mapped to the error parameter of the TC-U-ERROR request primitive, except for "initiating-release" and "resource-limitation" which are mapped to the problem code parameter of the TC-U-REJECT request primitive.

### 16.2.2.6 Parameters

The parameters of MAP specific request and indication primitives are mapped to the argument parameter of TC-INVOKE primitives.

The parameters of MAP specific response and confirm primitives are mapped to the result parameter of TC-RESULT-L primitives, the parameter of TC-U-ERROR primitives or the argument of TC-INVOKE primitives when mapping on linked class 4 operations is used.

### 16.2.2.7 Time out

The value of this parameter is set by the MAP PM according to the type of operation invoked.

### 16.2.2.8 Last component

This parameter is used by the MAP PM as described in CCITT Recommendation Q.711. It is not visible from the MAP user.

### 16.2.2.9 Problem code

#### 16.2.2.9.1 Mapping to MAP User Error

The following values of the user error parameter are mapped as follows to values of the TC problem code parameter. These values are generated by the MAP user. This mapping is valid from the TC-U-REJECT indication primitive to the MAP confirm service primitive and from the MAP response service primitive to the TC-U-REJECT request primitive.

**Table 16.2/2: Mapping of MAP User Error parameter on to TC problem code in TC-U-REJECT primitives**

MAP User Error	TC problem code
resource limitation	resource limitation
initiating release	initiating release

### 16.2.2.9.2 Mapping to MAP Provider Error parameter

The following values of the TC problem code parameter of the TC-U-REJECT indication primitive are mapped as follows to values of the MAP Provider Error parameter of the MAP confirm primitive.

**Table 16.2/3: Mapping of TC problem code in TC-U-REJECT on to MAP Provider Error parameter**

TC problem code	MAP Provider Error
duplicated invoke Id	duplicated invoke id
unrecognised operation	service not supported
mistyped parameter	mistyped parameter

The following values of the problem code parameters of the TC-L-REJECT primitive are mapped to values of the provider error parameter of the MAP confirm primitive as follows.

**Table 16.2/4: Mapping of TC problem code in TC-L-REJECT on to MAP Provider Error parameter**

TC problem code	MAP Provider Error
return result unexpected	unexpected response from the peer
return error unexpected	unexpected response from the peer

### 16.2.2.9.3 Mapping to diagnostic parameter

The following values of the problem code parameter of the TC-R-REJECT and TC-U-REJECT primitive are mapped to values of the diagnostic parameter of the MAP-NOTICE indication primitive as follows:

**Table 16.2/5: Mapping of TC problem code of TC-R-REJECT and TC-U-REJECT on to diagnostic parameter**

TC problem code	MAP diagnostic
General problem	- abnormal event detected by the peer
Invoke problem	
- unrecognised linked ID	- abnormal event detected by the peer
- linked response unexpected	- response rejected by the peer
- unexpected linked operation	- response rejected by the peer
Return result problem	
- unrecognised invoke ID	- response rejected by the peer
- return result unexpected	- response rejected by the peer
- mistyped parameter	- response rejected by the peer
Return error problem	
- unrecognised invoke ID	- response rejected by the peer
- return error unexpected	- response rejected by the peer
- unrecognised error	- response rejected by the peer
- unexpected error	- response rejected by the peer
- mistyped parameter	- response rejected by the peer

The following values of the problem code parameter of the TC-L-REJECT primitive are mapped to values of the diagnostic parameter of the MAP-NOTICE indication primitive as follows.

**Table 16.2/6: Mapping of TC problem code of TC-L-REJECT on to diagnostic parameter**

TC problem code	MAP diagnostic
General problems	- abnormal event received from the peer
Invoke problem	
- unrecognised linked ID	- abnormal event received from the peer
Return result problem	
- unrecognised invoke ID	- abnormal event received from the peer
Return error problem	
- unrecognised invoke ID	- abnormal event received from the peer

# 17 Abstract syntax of the MAP protocol

## 17.1 General

This clause specifies the Abstract Syntaxes for the Mobile Application Part as well as the associated set of Operations and Errors, using the Abstract Syntax Notation One (ASN.1), defined in ITU-T Recommendations X.680 and X.681 with additions as defined in clause 17.1.4 on Compatibility Considerations and the OPERATION and ERROR external information object classes, defined in ITU-T Recommendation X.880.

The Abstract Syntax is defined for all interfaces specified in clause 4.4 except for the A- and B-interfaces.

The Mobile Application Part protocol is defined by two Abstract Syntaxes:

- one Abstract Syntax which encompass all Operations and Errors identified by the various MAP subsystem numbers.

This Abstract Syntax represents the set of values each of which is a value of the ASN.1 type TCAPMessages.TCMessages as defined in ITU-T Recommendation Q.773 with the component relationconstraint sections resolved by the operation and error codes included in the ASN.1 modules MAP-\*Operations and MAP-Errors. However, only the subset of this abstract syntax which is required by the procedures defined for an entity needs to be supported.

- one Abstract Syntax identified by the OBJECT IDENTIFIER value MAP-DialogueInformation.map-DialogueAS.

This Abstract Syntax represents the set of values each of which is a value of the ASN.1 type MAP-DialogueInformation.MAP-DialoguePDU. Such a value of the ASN.1 single-ASN.1-type element is contained within the user-information element of the TCAPMessages.DialoguePortion ASN.1 type. This Abstract Syntax name is to be used as a direct reference.

### 17.1.1 Encoding rules

The encoding rules which are applicable to the defined Abstract Syntaxes are the Basic Encoding Rules for Abstract Syntax Notation One, defined in ITU-T Recommendation X.690 with the same exceptions as in ITU-T Recommendation Q.773, clause 4 Message Representation.

When the definite form is used for length encoding, a data value of length less than 128 octets must have the length encoded in the short form.

When the long form is employed to code a length, the minimum number of octets shall be used to code the length field. OCTET STRING values and BIT STRING values must be encoded in a primitive form.

There is no restriction to the use of empty constructors (e.g. an empty SEQUENCE type). That is, the encoding of the content of any data value shall consist of zero, one or more octets.

### 17.1.2 Use of TC

The mapping of OPERATION and ERROR to TC components is defined in ETS 300 287 (version 2) which is based on ITU-T Recommendation Q.773.

NOTE 1: The class of an operation is not stated explicitly but is specified as well in the ASN.1 operation definition.

Class 1: RESULT and ERROR appear in ASN.1 operation definition.

Class 2: only ERROR appears in ASN.1 operation definition.

Class 3: only RESULT appears in ASN.1 operation definition.

Class 4: both RESULT and ERROR do not appear in ASN.1 operation definition.

The field "ARGUMENT", "PARAMETER" or "RESULT" (for information objects of class OPERATION and ERROR) is always optional from a syntactic point of view. However, except when specifically mentioned with the

ASN.1 comment "-- optional" , the "parameter" part of a component has to be considered as mandatory from a semantic point of view.

When an optional element is missing in an invoke component or in an inner data structure while it is required by the context, an error component is returned if specified in the information object associated with the operation ; the associated type of error is "DataMissing". This holds also when the entire parameter of an invoke component is missing while it is required by the context.

**NOTE 2:** When a mandatory element is missing in the parameter or inner data structure of any component, a reject component is returned (if the dialogue still exists). The problem code to be used is "Mistyped parameter".

The Timer Values used in the operation definitions are indicated as ASN.1 comments. The Timer Value Ranges are:

s = from 3 seconds to 10 seconds;

m = from 15 seconds to 30 seconds;

ml = from 1 minute to 10 minutes;

l = from 28 hours to 38 hours.

### 17.1.2.1 Use of Global Operation and Error codes defined outside MAP

An entity supporting an application context greater than 2 shall be capable of receiving an operation or error code, within an application context defined in GSM 29.002, encoded as either an Object Identifier (as defined in ITU-T Recommendation X.690 ) or an integer value (as defined in clause 17.5). Related restrictions regarding the use of Object Identifiers are as follows:

- The length of the Object Identifier shall not exceed 16 octets and the number of components of the Object Identifier shall not exceed 16.
- Object Identifiers shall be used only for operations or errors defined outside of GSM 29.002.
- Global error codes may be sent only in response to a global operation. If a standard operation is received then a global error code shall not be sent in response.

Handling of an unknown operation codes by the receiving entity is defined in clause 15.1.1.

### 17.1.3 Use of information elements defined outside MAP

An information element or a set of information elements (messages) transparently carried in the Mobile Application Part but defined in other recommendations/technical specifications are handled in one of the following ways:

- i) The contents of each information element (without the octets encoding the identifier and the length in the recommendation/technical specification where it is defined unless explicitly stated otherwise) is carried as the value of an ASN.1 type derived from the OCTET STRING data type. Additionally, the internal structure may be explained by means of comments. In case of misalignment the referred to recommendation/technical specification takes precedence.
- ii) The complete information element (including the octets encoding the identifier and the length in the recommendation/technical specification where it is defined) or set of information elements and the identity of the associated protocol are carried as the value of the ExternalSignalInfo data type defined in the present document. Where more than one information element is carried, the information elements are sent contiguously with no filler octets between them.

### 17.1.4 Compatibility considerations

The following ASN.1 modules conform to ITU-T Recommendation X.680 and X.681 . An extension marker ("...") is used wherever future protocol extensions are foreseen.

The "..." construct applies only to SEQUENCE and ENUMERATED data types. An entity supporting a version greater than 1 shall not reject an unsupported extension following "..." of that SEQUENCE or ENUMERATED data type. The

Encoding Rules from clause 17.1.1 apply to every element of the whole Transfer Syntax especially to the ASN.1 type EXTERNAL.

The extension container "privateExtensionList" is defined in this specification in order to carry extensions which are defined outside this specification. Private extensions can be defined by, for example, network operators, manufacturers, and regional standardisation bodies.

Private extensions shall:

- 1) if included in operations of an AC of V2, follow the extension marker and be tagged using PRIVATE tags up to and including 29.

NOTE: This type of extension is in most cases used only within a PLMN.

- 2) if included in operations of an AC of V3 or higher: be included only in the Private Extension Container that is defined in the specification.

NOTE: This type of extension can be used between PLMNs.

Private extensions shall not be included in v2 supplementary service operations.

Private extensions shall not be included within user error for RegisterCCEEntry and EraseCCEEntry operations.

PCS extensions shall be included in the PCS Extension Container that is defined in this specification.

In order to improve extensibility, a few error parameters have been defined as a CHOICE between the version 2 description and a SEQUENCE including the version 2 description and an extension container. Operations used in a v2-application-context must consider only the first alternative while operations used in a vn-application-context ( $n > 2$ ) must consider only the second alternative.

### 17.1.5 Structure of the Abstract Syntax of MAP

For each MAP parameter which has to be transferred by a MAP Protocol Data Unit (MAP message), there is a PDU field (an ASN.1 type) which has the same name as the corresponding parameter, except for the differences required by the ASN.1 notation (blanks between words are removed or replaced by hyphen, the first letter of the first word is capital and the first letter of each of the following words is capitalised, e.g. "no reply condition time" is mapped to "NoReplyConditionTime"). Additionally some words may be abbreviated as follows:

bs	basic service
ch	call handling
cug	closed user group
ho	handover
ic	incoming call
id	identity
info	information
mm	mobility management
lcs	location services
ms	mobile service
oc	outgoing call
om	operation & maintenance
pw	Password
sm	short message service
ss	supplementary service
st	secure transport

The MAP protocol is composed of several ASN.1 modules dealing with either operations, errors, data types, and, if applicable, split into those dealing with mobile services, call handling services, supplementary services and short message services. For operations and errors the code values are given as parameters, in order to allow use of the defined information objects also by other protocols (e.g. 3GPP TS 24.080 [38]). The ASN.1 source lines are preceded by line-numbers at the left margin in order to enable the usage of the cross-reference in annex A.

The module containing the definition of the operation packages for MAP is:

1. MAP-OperationPackages.

The module containing the definition of the application contexts for MAP is:

2. MAP-ApplicationContexts.

The module containing the data types for the Abstract Syntax to be used for TCAPMessages.DialoguePortion for MAP is:

3. MAP-DialogueInformation.

The module containing the supported operations is:

4. MAP-Protocol.

The modules containing all operation definitions for MAP are:

5. MAP-MobileServiceOperations;
6. MAP-OperationAndMaintenanceOperations;
7. MAP-CallHandlingOperations;
8. MAP-SupplementaryServiceOperations;
9. MAP-ShortMessageServiceOperations;
10. MAP-Group-Call-Operations;
11. MAP-LocationServiceOperations;
12. MAP-SecureTransportOperations.

The module containing all error definitions for MAP is:

13. MAP-Errors.

Modules containing all data type definitions for MAP are:

14. MAP-MS-DataTypes;
15. MAP-OM-DataTypes;
16. MAP-CH-DataTypes;
17. MAP-SS-DataTypes;
18. MAP-SS-Code;
19. MAP-SM-DataTypes;
20. MAP-ER-DataTypes;
21. MAP-CommonDataTypes;
22. MAP-TS-Code;
23. MAP-BS-Code;
24. MAP-ExtensionDataTypes;

- 25. MAP-GR-DataTypes;
- 26. MAP-LCS-DataTypes;
- 27. MAP-ST-DataTypes.

References are made also to modules defined outside of the present document. They are defined in the technical specification Mobile Services Domain, technical specification Transaction Capability and ITU-T Recommendation X.880 respectively:

- MobileDomainDefinitions;
- TCAPMessages, DialoguePDUs ;
- Remote-Operations-Information-Objects.

### 17.1.6 Application Contexts

The following informative table lists the latest versions of the Application Contexts used in this specification, with the operations used by them and, where applicable, whether or not the operation description is exactly the same as for previous versions. Information in 17.6 & 17.7 relates only to the ACs in this table.

AC Name	AC Version	Operations Used	Comments
locationCancellationContext	v3	cancelLocation	
equipmentMngtContext	v2	checkIMEI	
imsiRetrievalContext	v2	sendIMSI	
infoRetrievalContext	v3	sendAuthenticationInfo	
interVlrInfoRetrievalContext	v3	sendIdentification	
handoverControlContext	v3	prepareHandover forwardAccessSignalling sendEndSignal processAccessSignalling prepareSubsequentHandover	the syntax of this operation has been extended in comparison with release 98 version
mwdMngtContext	v3	readyForSM	
msPurgingContext	v3	purgeMS	
shortMsgAlertContext	v2	alertServiceCentre	
resetContext	v2	reset	
networkUnstructuredSsContext	v2	processUnstructuredSS-Request unstructuredSS-Request unstructuredSS-Notify	
tracingContext	v3	activateTraceMode deactivateTraceMode	
networkFunctionalSsContext	v2	registerSS eraseSS activateSS deactivateSS registerPassword interrogateSS getPassword	
shortMsgMO-RelayContext	v3	mo-forwardSM	
shortMsgMT-RelayContext	v3	mt-forwardSM	
shortMsgGatewayContext	v3	sendRoutingInfoForSM reportSM-DeliveryStatus InformServiceCentre	the syntax of this operation has been extended in comparison with release 96 version
networkLocUpContext	v3	updateLocation forwardCheckSs-Indication restoreData insertSubscriberData activateTraceMode	the syntax is the same in v1 & v2
gprsLocationUpdateContext	v3	updateGprsLocation	

AC Name	AC Version	Operations Used	Comments
		insertSubscriberData activateTraceMode	
subscriberDataMngtContext	v3	insertSubscriberData deleteSubscriberData	
roamingNumberEnquiryContext	v3	provideRoamingNumber	
locationInfoRetrievalContext	v3	sendRoutingInfo	
gprsNotifyContext	v3	noteMsPresentForGprs	
gprsLocationInfoRetrievalContext	v4	sendRoutingInfoForGprs	
failureReportContext	v3	failureReport	
callControlTransferContext	v4	resumeCallHandling	
subscriberInfoEnquiryContext	v3	provideSubscriberInfo	
anyTimeEnquiryContext	v3	anyTimeInterrogation	
anyTimeInfoHandlingContext	v3	anyTimeSubscriptionInterrogation anyTimeModification	
ss-InvocationNotificationContext	v3	ss-InvocationNotification	
siWFSAccivationContext	v3	provideSIWFSTNumber siWFSSignallingModify	
groupCallControlContext	v3	prepareGroupCall processGroupCallSignalling forwardGroupCallSignalling sendGroupCallEndSignal	
reportingContext	v3	setReportingState statusReport remoteUserFree	
callCompletionContext	v3	registerCC-Entry eraseCC-Entry	
istAlertingContext	v3	istAlert	
ImmediateTerminationContext	v3	istCommand	
locationSvcEnquiryContext	v3	provideSubscriberLocation subscriberLocationReport	
locationSvcGatewayContext	v3	sendRoutingInfoForLCS	
mm-EventReportingContext	v3	noteMM-Event	
subscriberDataModificationNotificationContext	v3	noteSubscriberDataModified	
authenticationFailureReportContext	v3	authenticationFailureReport	
secureTransportHandlingContext	v3	secureTransportClass1 secureTransportClass2 secureTransportClass3 secureTransportClass4	

NOTE (\*): The syntax of the operations is not the same as in previous versions unless explicitly stated

## 17.2 Operation packages

### 17.2.1 General aspects

This clause describes the operation-packages which are used to build the application-contexts defined in clause 17.3.

Each operation-package is a specification of the roles of a pair of communicating objects (i.e. a pair of MAP-Providers), in terms of operations which they can invoke of each other.

The grouping of operations into one or several packages does not necessarily imply any grouping in terms of Application Service Elements.

The following ASN.1 information object class is used to describe operation-packages in this clause:

```
OPERATION-PACKAGE ::= CLASS {
    &Both      OPERATION          OPTIONAL,
    &Consumer   OPERATION        OPTIONAL,
    &Supplier   OPERATION        OPTIONAL,
    &id        OBJECT IDENTIFIER UNIQUE OPTIONAL }

WITH SYNTAX {
    [ OPERATIONS      &Both ]
    [ CONSUMER INVOKES &Supplier ]
    [ SUPPLIER INVOKES &Consumer ]
    [ ID              &id ] }
```

Since the application-context definitions provided in clause 17.3 use only an informal description technique, only the type notation is used in the following clauses to define operation-packages.

The following definitions are used throughout this clause ( $n \geq 2$ ):

- v1-only operation: An operation which shall be used only in v1 application-contexts;
- vn-only operation: An operation which shall be used only in vn application-contexts;
- v(n-1)-operation: An operation whose specification has not been modified since the MAP v(n-1) specifications or if the modifications are considered as not affecting v(n-1) implementations;
- v(n-1)-equivalent operation: The version of an operation which excludes all the information elements and errors which have been added since the MAP v(n-1) specification;
- vn-only package: An operation package which contains only vn-only operations;
- v(n-1)-package: An operation package which contains only v(n-1)-operations.

The names of vn-packages are suffixed by "-vn" where  $n \geq 2$ .

For each operation package which is not vn-only ( $n \geq 2$ ) and which does not include only v(n-1)-operations, there is a v(n-1)-equivalent package. Except when a definition is explicitly provided in the following clauses, the v(n-1)-equivalent package includes the v(n-1)-equivalent operations of the operations which belong to this package.

## 17.2.2 Packages specifications

### 17.2.2.1 Location updating

This operation package includes the operations required for location management procedures between HLR and VLR.

```
locationUpdatingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        updateLocation}
    SUPPLIER INVOKES {
        forwardCheckSs-Indication} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.2 Location cancellation

This operation package includes the operations required for location cancellation and MS purging procedures between HLR and VLR and between HLR and SGSN.

```
locationCancellationPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR or SGSN if Consumer is HLR
    CONSUMER INVOKES {
        cancelLocation} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.3 Roaming number enquiry

This operation package includes the operations required for roaming number enquiry procedures between HLR and VLR.

```
roamingNumberEnquiryPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR if Consumer is HLR
    CONSUMER INVOKES {
        provideRoamingNumber} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.4 Information retrieval

This operation package includes the operation required for the authentication information retrieval procedure between HLR and VLR and between HLR and SGSN.

```
infoRetrievalPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is HLR if Consumer is SGSN
    CONSUMER INVOKES {
        sendAuthenticationInfo} }
```

The v2-equivalent package is defined as follows:

```
infoRetrievalPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is HLR if Consumer is SGSN
    CONSUMER INVOKES {
        sendAuthenticationInfo} }
```

The v1-equivalent package is defined as follows:

```
infoRetrievalPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is HLR or VLR if Consumer is VLR
    -- Supplier is HLR if Consumer is SGSN
    CONSUMER INVOKES {
        sendParameters} }
```

### 17.2.2.5 Inter-VLR information retrieval

This operation package includes the operations required for inter VLR information retrieval procedures.

```
interVlrInfoRetrievalPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR if Consumer is VLR
    CONSUMER INVOKES {
        sendIdentification} }
```

The v2-equivalent package is defined as follows:

```
interVlrInfoRetrievalPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is VLR if Consumer is VLR
    CONSUMER INVOKES {
        sendIdentification} }
```

The v1-equivalent package is : infoRetrievalPackage-v1.

### 17.2.2.6 IMSI retrieval

This operation package includes the operation required for the IMSI retrieval procedure between HLR and VLR.

```
imsiRetrievalPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        sendIMSI} }
```

This package is v2 only.

### 17.2.2.7 Call control transfer

This operation package includes the operation required for the call control transfer procedure between VMSC and GMSC.

```
callControlTransferPackage-v4 OPERATION-PACKAGE ::= {
    -- Supplier is GMSC if Consumer is VMSC
    CONSUMER INVOKES {
        resumeCallHandling} }
```

The v3-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.8 Secure transport

This operation package includes the operations required for the secure transport of MAP messages between any MAP entities.

```
secureTransportHandlingPackage-v3 OPERATION-PACKAGE ::= {
    CONSUMER INVOKES {
        secureTransportClass1 |          -- to be used if the original operation is a
                                         -- TCAP class 1 operation
        secureTransportClass2 |          -- to be used if the original operation is a
                                         -- TCAP class 2 operation
        secureTransportClass3 |          -- to be used if the original operation is a
                                         -- TCAP class 3 operation
        secureTransportClass4}          -- to be used if the original operation is a
                                         -- TCAP class 4 operation
    }
}
```

This package is v3 only.

### 17.2.2.9 Void

### 17.2.2.10 Interrogation

This operation package includes the operations required for interrogation procedures between MSC and HLR or NPLR or between HLR and gsmSCF.

```
interrogationPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR or NPLR if Consumer is MSC
    -- Supplier is HLR if Consumer is gsmSCF
    CONSUMER INVOKES {
        sendRoutingInfo} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.11 Void

### 17.2.2.12 Handover Control

This operation package includes the operations required for handover procedures between MSCs.

```
handoverControlPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is MSCB if Consumer is MSCA
    CONSUMER INVOKES {
        prepareHandover |
        forwardAccessSignalling}
    SUPPLIER INVOKES {
        sendEndSignal |
        processAccessSignalling |
        prepareSubsequentHandover} }
```

The v2-equivalent package can be determined according to the rules described in clause 17.2.1.

The v1-equivalent package is defined as follows.

```
handoverControlPackage-v1 OPERATION-PACKAGE ::= {
  -- Supplier is MSCB if Consumer is MSCA
  CONSUMER INVOKES {
    performHandover |
    forwardAccessSignalling |
    traceSubscriberActivity}
  SUPPLIER INVOKES {
    sendEndSignal |
    noteInternalHandover |
    processAccessSignalling |
    performSubsequentHandover} }
```

### 17.2.2.13 Subscriber Data management stand alone

This operation package includes the operations required for stand alone subscriber data management procedures between HLR and VLR or between HLR and SGSN.

```
subscriberDataMngtStandAlonePackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is VLR or SGSN if Consumer is HLR
  CONSUMER INVOKES {
    insertSubscriberData |
    deleteSubscriberData} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.14 Equipment management

This operation package includes the operations required for equipment management procedures between EIR and MSC or between EIR and SGSN.

```
equipmentMngtPackage-v2 OPERATION-PACKAGE ::= {
  -- Supplier is EIR if Consumer is MSC
  -- Supplier is EIR if Consumer is SGSN
  CONSUMER INVOKES {
    checkIMEI} }
```

The v1-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.15 Subscriber data management

This operation package includes the operations required for subscriber data management procedures between HLR and VLR or between HLR and SGSN.

```
subscriberDataMngtPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is VLR or SGSN if Consumer is HLR
  CONSUMER INVOKES {
    insertSubscriberData} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.16 Location register restart

This operation package includes the operations required for location register restart procedures between HLR and VLR or between HLR and SGSN.

```
resetPackage-v2 OPERATION-PACKAGE ::= {
  -- Supplier is VLR or SGSN if Consumer is HLR
  CONSUMER INVOKES {
    reset} }
```

The v1-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.17 Tracing stand-alone

This operation package includes the operations required for stand alone tracing procedures between HLR and VLR or between HLR and SGSN.

```
tracingStandAlonePackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR or SGSN if Consumer is HLR
    CONSUMER INVOKES {
        activateTraceMode |
        deactivateTraceMode} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.18 Functional SS handling

This operation package includes the operations required for functional supplementary services procedures between VLR and HLR.

```
functionalSSPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        registerSS |
        erasesS |
        activateSS |
        deactivateSS |
        registerPassword |
        interrogateSS}
    SUPPLIER INVOKES {
        getPassword} }
```

The v1-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.19 Tracing

This operation package includes the operations required for tracing procedures between HLR and VLR or between HLR and SGSN.

```
tracingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR or SGSN if Consumer is HLR
    CONSUMER INVOKES {
        activateTraceMode} }
```

The v1-equivalent and v2-equivalent packages can be determined according to the rules described in clause 17.2.1.

### 17.2.2.20 Binding

This operation package includes the operation required to initialise a supplementary service procedure between VLR and HLR or between gsmSCF and HLR.

```
bindingPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is gsmSCF if Consumer is HLR
    CONSUMER INVOKES {
        beginSubscriberActivity} }
```

This package is v1 only.

### 17.2.2.21 Unstructured SS handling

This operation package includes the operations required for unstructured supplementary services procedures between VLR and HLR, between the HLR and the gsmSCF, and between HLR and HLR.

```
unstructuredSSPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is gsmSCF or HLR if Consumer is HLR
    CONSUMER INVOKES {
        processUnstructuredSS-Request}
    SUPPLIER INVOKES {
        unstructuredSS-Request |
        unstructuredSS-Notify} }
```

The v1-equivalent package is defined as follows:

```
unstructuredSSPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is gsmSCF if Consumer is HLR
    CONSUMER INVOKES {
        processUnstructuredSS-Data} }
```

### 17.2.2.22 MO Short message relay services

This operation package includes the operations required for short message relay service procedures between IWMSC and VMSC or between GMSC and MSC or between SGSN and IWMSC.

```
mo-ShortMsgRelayPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is IWMSC if Consumer is MSC
    -- Supplier is IWMSC if Consumer is SGSN
    CONSUMER INVOKES {
        mo-forwardSM} }
```

The v2-equivalent package is defined as follows:

```
shortMsgRelayPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is IWMSC if Consumer is MSC
    -- Supplier is MSC or SGSN if Consumer is GMSC
    -- Supplier is IWMSC if Consumer is SGSN
    CONSUMER INVOKES {
        forwardSM} }
```

The v1-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.23 Short message gateway services

This operation package includes the operations required for short message service gateway procedures between MSC and HLR.

```
shortMsgGatewayPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GMSC
    CONSUMER INVOKES {
        sendRoutingInfoForSM |
        reportSM-DeliveryStatus}
    SUPPLIER INVOKES {
        informServiceCentre} }
```

The v2-equivalent package can be determined according to the rules described in clause 17.2.1.

The v1-equivalent package is defined as follows:

```
shortMsgGatewayPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GMSC
    CONSUMER INVOKES {
        sendRoutingInfoForSM |
        reportSMDeliveryStatus} }
```

### 17.2.2.24 MT Short message relay services

This operation package includes the operations required for short message relay service procedures between GMSC and MSC or between GMSC and SGSN.

```
mt-ShortMsgRelayPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is MSC or SGSN if Consumer is GMSC
    CONSUMER INVOKES {
        mt-forwardSM} }
```

The v2-equivalent package is: **shortMsgRelayPackage-v2**

### 17.2.2.25 Void

### 17.2.2.26 Message waiting data management

This operation package includes the operations required for short message waiting data procedures between HLR and VLR, between HLR and SGSN.

```
mwdMngtPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is SGSN
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        readyForSM} }
```

The v2-equivalent package can be determined according to the rules described in clause 17.2.1.

The v1-equivalent package is defined as follows:

```
mwdMngtPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        noteSubscriberPresent} }
```

### 17.2.2.27 Alerting

This operation package includes the operations required for alerting between HLR and IWMSC.

```
alertingPackage-v2 OPERATION-PACKAGE ::= {
    -- Supplier is IWMSC if Consumer is HLR
    CONSUMER INVOKES {
        alertServiceCentre} }
```

The v1-equivalent package is defined as follows.

```
alertingPackage-v1 OPERATION-PACKAGE ::= {
    -- Supplier is IWMSC if Consumer is HLR
    CONSUMER INVOKES {
        alertServiceCentreWithoutResult} }
```

### 17.2.2.28 Data restoration

This operation package includes the operations required for VLR data restoration between HLR and VLR.

```
dataRestorationPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        restoreData} }
```

The v2-equivalent package can be determined according to the rules described in clause 17.2.1.

The v1-equivalent package is: **infoRetrievalPackage-v1**

### 17.2.2.29 Purging

This operation package includes the operations required for purging between HLR and VLR or between HLR and SGSN.

```
purgingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    -- Supplier is HLR if Consumer is SGSN
    CONSUMER INVOKES {
        purgEMS} }
```

The v2-equivalent package can be determined according to the rules described in clause 17.2.1.

### 17.2.2.30 Subscriber information enquiry

This operation package includes the operations required for subscriber information enquiry procedures between HLR and VLR or between HLR and SGSN.

```
subscriberInformationEnquiryPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is VLR or SGSN if Consumer is HLR
    CONSUMER INVOKES {
        provideSubscriberInfo} }
```

This package is v3 only.

### 17.2.2.31 Any time information enquiry

This operation package includes the operations required for any time information enquiry procedures between gsmSCF and HLR or between gsmSCF and GMLC.

```
anyTimeInformationEnquiryPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR or GMLC if Consumer is gsmSCF
    CONSUMER INVOKES {
        anyTimeInterrogation} }
```

This package is v3 only.

### 17.2.2.32 Group Call Control

This operation package includes the operations required for group call and broadcast call procedures between MSCs.

```
groupCallControlPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is relay MSC if Consumer is anchor MSC
    CONSUMER INVOKES {
        prepareGroupCall |
        forwardGroupCallSignalling}
    SUPPLIER INVOKES {
        sendGroupCallEndSignal |
        processGroupCallSignalling} }
```

This package is v3 only.

### 17.2.2.33 Provide SIWFS number

This operation package includes the operations required between VMSC and SIWF for requesting resources from an SIWF.

```
provideSIWFSNumberPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is SIWF if Consumer is VMSC
    CONSUMER INVOKES {
        provideSIWFSNumber} }
```

This package is v3 only.

### 17.2.2.34 SIWFS Signalling Modify

This operation package includes the operations required for the modification of the resources in an SIWF between the VMSC and SIWF.

```
siwfs-SignallingModifyPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is SIWF if Consumer is VMSC
    CONSUMER INVOKES {
        siwfs-SignallingModify} }
```

This package is v3 only.

### 17.2.2.35 Gprs location updating

This operation package includes the operations required for the gprs location management procedures between HLR and SGSN.

```
gprsLocationUpdatingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is SGSN
    CONSUMER INVOKES {
        updateGprsLocation} }
```

This package is v3 only.

### 17.2.2.36 Gprs Interrogation

This operation package includes the operations required for interrogation procedures between HLR and GGSN.

```
gprsInterrogationPackage-v4 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GGSN
    CONSUMER INVOKES {
        sendRoutingInfoForGprs} }
```

The v3-equivalent package is defined as follows.

```
gprsInterrogationPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GGSN
    CONSUMER INVOKES {
        sendRoutingInfoForGprs} }
```

### 17.2.2.37 Failure reporting

This operation package includes the operations required for failure reporting between HLR and GGSN.

```
failureReportingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GGSN
    CONSUMER INVOKES {
        failureReport} }
```

This package is v3 only.

### 17.2.2.38 GPRS notifying

This operation package includes the operations required for notifying that GPRS subscriber is present between HLR and GGSN.

```
gprsNotifyingPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is GGSN if Consumer is HLR
  CONSUMER INVOKES {
    noteMsPresentForGprs} }
```

This package is v3 only.

### 17.2.2.39 Supplementary Service invocation notification

This operation package includes the operations required for Supplementary Service invocation notification procedures between the MSC and the gsmSCF and between the HLR and the gsmSCF.

```
ss-InvocationNotificationPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is gsmSCF if Consumer is MSC
  -- Supplier is gsmSCF if Consumer is HLR
  CONSUMER INVOKES {
    ss-InvocationNotification} }
```

This package is v3 only.

### 17.2.2.40 Set Reporting State

This operation package includes the operation required for procedures between HLR and VLR to set the reporting state.

```
setReportingStatePackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is VLR if Consumer is HLR
  CONSUMER INVOKES {
    setReportingState} }
```

This package is v3 only.

### 17.2.2.41 Status Report

This operation package includes the operation required for procedures between VLR and HLR to report call results and events.

```
statusReportPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is HLR if Consumer is VLR
  CONSUMER INVOKES {
    statusReport} }
```

This package is v3 only.

### 17.2.2.42 Remote User Free

This operation package includes the operation required by the HLR to indicate to the VLR that the remote user is free.

```
remoteUserFreePackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is VLR if Consumer is HLR
  CONSUMER INVOKES {
    remoteUserFree} }
```

This package is v3 only.

### 17.2.2.43 Call Completion

This operation package includes the operations required for procedures between VLR and HLR for subscriber control of call completion services.

```
callCompletionPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VLR
    CONSUMER INVOKES {
        registerCC-Entry |
        eraseCC-Entry} }
```

This package is v3 only.

### 17.2.2.44 Location service gateway services

This operation package includes the operations required for location service gateway procedures between GMLC and HLR.

```
locationSvcGatewayPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is GMLC
    CONSUMER INVOKES {
        sendRoutingInfoForLCS} }
```

This package is v3 only.

### 17.2.2.45 Location service enquiry

This operation package includes the operations required for the location service enquiry procedures between GMLC and MSC and between GMLC and SGSN.

```
locationSvcEnquiryPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is MSC or SGSN if Consumer is GMLC
    CONSUMER INVOKES {
        provideSubscriberLocation} }
```

This package is v3 only.

### 17.2.2.45A Location service reporting

This operation package includes the operations required for the location service enquiry procedures between MSC and GMLC and between SGSN and GMLC.

```
locationSvcReportingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is GMLC if Consumer is MSC
    -- Supplier is GMLC if Consumer is SGSN
    CONSUMER INVOKES {
        subscriberLocationReport} }
```

### 17.2.2.46 Void

### 17.2.2.47 Void

### 17.2.2.48 Void

### 17.2.2.49 IST Alerting

This operation package includes the operation required for alerting procedures between the MSC (Visited MSC or Gateway MSC) and HLR.

```
ist-AlertingPackage-v3 OPERATION-PACKAGE ::= {
    -- Supplier is HLR if Consumer is VMSC
    -- Supplier is HLR if Consumer is GMSC
    CONSUMER INVOKES {
        istAlert} }
```

This package is v3 only.

### 17.2.2.50 Service Termination

This operation package includes the operation required for immediate service termination procedures between the HLR and the Visited MSC or between the HLR and the Gateway MSC.

```
serviceTerminationPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is VMSC or GMSC if Consumer is HLR
  CONSUMER INVOKES {
    istCommand} }
```

This package is v3 only.

### 17.2.2.51 Mobility Management event notification

This operation package includes the operations required for Mobility Management event notification procedures between VLR and gsmSCF.

```
mm-EventReportingPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is gsmSCF if Consumer is VLR
  CONSUMER INVOKES {
    noteMM-Event} }
```

This package is v3 only.

### 17.2.2.52 Any time information handling

This operation package includes the operations required for any time information handling procedures between gsmSCF and HLR.

```
anyTimeInformationHandlingPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is HLR if Consumer is gsmSCF
  CONSUMER INVOKES {
    anyTimeSubscriptionInterrogation |
    anyTimeModification} }
```

This package is v3 only.

### 17.2.2.53 Subscriber Data modification notification

This operation package includes the operations required for Subscriber Data modification notification procedures between HLR and gsmSCF.

```
subscriberDataModificationNotificationPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is gsmSCF if Consumer is HLR
  CONSUMER INVOKES {
    noteSubscriberDataModified} }
```

This package is v3 only.

### 17.2.2.54 Authentication Failure Report

This operation package includes the operation required for procedures between VLR and HLR or the SGSN and the HLR for reporting of authentication failures.

```
authenticationFailureReportPackage-v3 OPERATION-PACKAGE ::= {
  -- Supplier is HLR if Consumer is VLR
  -- Supplier is HLR if Consumer is SGSN
  CONSUMER INVOKES {
    authenticationFailureReport} }
```

This package is v3 only.

## 17.3 Application contexts

### 17.3.1 General aspects

An application-context is assigned for each dialogue established by a MAP-user. In the present document each application-context is assigned a name which is supplied in the MAP-OPEN Req primitive by the MAP-User and transmitted to the peer under certain circumstances.

The following ASN.1 information object class is used to describe the main aspects of application-contexts in the following clauses:

```
APPLICATION-CONTEXT ::= CLASS {
    &Symmetric          OPERATION-PACKAGE OPTIONAL,
    &InitiatorConsumerOf OPERATION-PACKAGE OPTIONAL,
    &ResponderConsumerOf OPERATION-PACKAGE OPTIONAL,
    &code                OBJECT IDENTIFIER }

WITH SYNTAX {
    [ OPERATIONS OF      &Symmetric ]
    [ INITIATOR CONSUMER OF &InitiatorConsumerOf
      RESPONDER CONSUMER OF &ResponderConsumerOf ]
    ID &code }
```

The following definitions are used throughout this clause:

- v1-application-context: An application-context which contains only v1-packages and uses only TC v1 facilities;
- v1 context set: the set of v1-application-contexts defined in the present document.
- vn-application-context (n>=2): An application-context which contains only vn-packages;

The names of v1-application-contexts are suffixed by "-v1" while other names are suffixed by "-vn" where n>=2.

Application-contexts which do not belong to the v1 context set use v2 TC facilities.

The last component of each application-context-name (i.e. the last component of the object identifier value) assigned to an application-context which belongs to the v1 context set indicates explicitly "version1".

For each application-context which does not belong to the "v1 context set" there is a v1-equivalent application context. This is a v1-application-context which includes the v1-equivalents of the packages included in the original context.

Each application-context uses the abstract-syntax associated with the operation-packages it includes and uses the transfer-syntax derived from it by applying the encoding rules defined in clause 17.1.1.

ACs which do not belong to the v1 context set require the support of the abstract-syntax identified by the object identifier value: MAP-DialogueInformation.map-Dialogue-AS defined in clause 17.4.

### 17.3.2 Application context definitions

#### 17.3.2.1 Void

#### 17.3.2.2 Location Updating

This application context is used between HLR and VLR for location updating procedures.

```
networkLocUpContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        locationUpdatingPackage-v3 |
        dataRestorationPackage-v3}
    RESPONDER CONSUMER OF {
        subscriberDataMngtPackage-v3 |
        tracingPackage-v3}
    ID {map-ac networkLocUp(1) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac networkLocUp(1) version2(2)}
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac networkLocUp(1) version1(1)}
---

### 17.3.2.3 Location Cancellation

This application context is used between HLR and VLR or between HLR and SGSN for location cancellation procedures. For the HLR - SGSN interface only version 3 of this application context is applicable.

<b>locationCancellationContext-v3 APPLICATION-CONTEXT ::= {</b> -- Responder is VLR or SGSN if Initiator is HLR INITIATOR CONSUMER OF { locationCancellationPackage-v3} ID {map-ac locationCancel(2) version3(3)} }
---

The following application-context-name is assigned to the v2-equivalent application-context:

ID map-ac locationCancel(2) version2(2)
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID map-ac locationCancel(2) version1(1)
---

### 17.3.2.4 Roaming number enquiry

This application context is used between HLR and VLR for roaming number enquiry procedures.

<b>roamingNumberEnquiryContext-v3 APPLICATION-CONTEXT ::= {</b> -- Responder is VLR if Initiator is HLR INITIATOR CONSUMER OF { roamingNumberEnquiryPackage-v3} ID {map-ac roamingNbEnquiry(3) version3(3)} }
---

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac roamingNbEnquiry(3) version2(2)}
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac roamingNbEnquiry(3) version1(1)}
---

### 17.3.2.5 Void

### 17.3.2.6 Location Information Retrieval

This application-context is used between GMSC and HLR or between GMSC and NPLR or between gsmSCF and HLR when retrieving location information. For the GMSC - NPLR interface version 1, version 2 and version 3 of this application context are applicable.

<b>locationInfoRetrievalContext-v3 APPLICATION-CONTEXT ::= {</b> -- Responder is HLR or NPLR if Initiator is GMSC -- Responder is HLR if Initiator is gsmSCF INITIATOR CONSUMER OF { interrogationPackage-v3} ID {map-ac locInfoRetrieval(5) version3(3)} }
--

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac locInfoRetrieval(5) version2(2)}
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac locInfoRetrieval(5) version1(1)}
---

### 17.3.2.7 Call control transfer

This application context is used for the call control transfer procedure between the VMSC and the GMSC.

<code>callControlTransferContext-v4 APPLICATION-CONTEXT ::= {     -- Responder is GMSC if Initiator is VMSC     INITIATOR CONSUMER OF {         callControlTransferPackage-v4}     ID {map-ac callControlTransfer(6) version4(4)} }</code>
--

The following application-context-name is assigned to the v3-equivalent application-context:

ID {map-ac callControlTransfer(6) version3(3)}
--

### 17.3.2.8 Secure transport

This application context is used for the secure transport of MAP messages between any MAP entities.

<code>secureTransportHandlingContext-v3 APPLICATION-CONTEXT ::= {     INITIATOR CONSUMER OF {         secureTransportHandlingPackage-v3}     ID {map-ac secureTransportHandling(40) version3(3)} }</code>
---

This application-context is v3 only.

### 17.3.2.9 - 17.3.2.10 Void

#### 17.3.2.11 Location registers restart

This application context is used between HLR and VLR or between HLR and SGSN for location register restart procedures. For the HLR - SGSN interface version 1 and version 2 of this application context are applicable.

<code>resetContext-v2 APPLICATION-CONTEXT ::= {     -- Responder is VLR or SGSN if Initiator is HLR     INITIATOR CONSUMER OF {         resetPackage-v2}     ID {map-ac reset(10) version2(2)} }</code>
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac reset(10) version1(1)}
-----------------------------------

#### 17.3.2.12 Handover control

This application context is used for handover procedures between MSCs.

<code>handoverControlContext-v3 APPLICATION-CONTEXT ::= {     -- Responder is MSCB if Initiator is MSCA     INITIATOR CONSUMER OF {         handoverControlPackage-v3}     ID {map-ac handoverControl(11) version3(3)} }</code>
---

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac handoverControl(11) version2(2)}
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac handoverControl(11) version1(1)}
---

### 17.3.2.13 IMSI Retrieval

This application context is used for IMSI retrieval between HLR and VLR.

```
imsiRetrievalContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        imsi-RetrievalPackage-v2}
    ID {map-ac imsiRetrieval(26) version2(2)} }
```

This application-context is v2 only.

### 17.3.2.14 Equipment Management

This application context is used for equipment checking between MSC and EIR or between SGSN and EIR. For the SGSN - EIR interface version 1 and version 2 of this application context are applicable:

```
equipmentMngtContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is EIR if Initiator is MSC
    -- Responder is EIR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        equipmentMngtPackage-v2}
    ID {map-ac equipmentMngt(13) version2(2)} }
```

The following application-context-name is assigned to the v1-equivalent application-context:

```
ID {map-ac equipmentMngt(13) version1(1)}
```

### 17.3.2.15 Information retrieval

This application context is used for authentication information retrieval between HLR and VLR or between HLR and SGSN. For the HLR - SGSN interface version 1 and version 2 and version 3 of this application context are applicable.

```
infoRetrievalContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    -- Responder is HLR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        infoRetrievalPackage-v3}
    ID {map-ac infoRetrieval(14) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

```
infoRetrievalContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    -- Responder is HLR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        infoRetrievalPackage-v2}
    ID {map-ac infoRetrieval(14) version2(2)} }
```

The following application-context-name is assigned to the v1-equivalent application-context:

```
ID {map-ac infoRetrieval(14) version1(1)}
```

### 17.3.2.16 Inter-VLR information retrieval

This application context is used for information retrieval between VLRs.

```
interVlrInfoRetrievalContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        interVlrInfoRetrievalPackage-v3}
    ID {map-ac interVlrInfoRetrieval(15) version3(3)} }
```

The v2-equivalent application-context is:

```
interVlrInfoRetrievalContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is VLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        interVlrInfoRetrievalPackage-v2}
    ID {map-ac interVlrInfoRetrieval(15) version2(2)} }
```

The v1-equivalent application-context is:

```
ID {map-ac infoRetrieval(14) version1(1)}
```

### 17.3.2.17 Stand Alone Subscriber Data Management

This application context is used for stand alone subscriber data management between HLR and VLR or between HLR and SGSN. For the HLR - SGSN interface only version 3 of this application context is applicable:

```
subscriberDataMngtContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VLR or SGSN if Initiator is HLR
    INITIATOR CONSUMER OF {
        subscriberDataMngtStandAlonePackage-v3}
    ID {map-ac subscriberDataMngt(16) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

```
ID {map-ac subscriberDataMngt(16) version2(2)}
```

The following application-context-name is assigned to the v1-equivalent application-context:

```
ID {map-ac subscriberDataMngt(16) version1(1)}
```

### 17.3.2.18 Tracing

This application context is used between HLR and VLR or between HLR and SGSN for stand alone tracing control procedures. For the HLR - SGSN interface version 1, version 2 and version 3 of this application context are applicable.

```
tracingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VLR or SGSN if Initiator is HLR
    INITIATOR CONSUMER OF {
        tracingStandalonePackage-v3}
    ID {map-ac tracing(17) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

```
ID {map-ac tracing(17) version2(2)}
```

The following application-context-name is assigned to the v1-equivalent application-context:

```
ID {map-ac tracing(17) version1(1)}
```

### 17.3.2.19 Network functional SS handling

This application context is used for functional-like SS handling procedures between VLR and HLR.

```
networkFunctionalSsContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is HLR, Initiator is VLR
    INITIATOR CONSUMER OF {
        functionalSsPackage-v2}
    ID {map-ac networkFunctionalSs(18) version2(2)} }
```

The v1-equivalent application-context is defined as follows:

```
networkFunctionalSsContext-v1 APPLICATION-CONTEXT ::= {
    -- Responder is HLR, Initiator is VLR
    INITIATOR CONSUMER OF {
        functionalSsPackage-v1 |
        unstructuredSsPackage-v1 |
        bindingPackage-v1}
    ID {map-ac networkFunctionalSs(18) version1(1)} }
```

### 17.3.2.20 Network unstructured SS handling

This application context is used for handling stimuli-like procedures between HLR and VLR, between the HLR and gsmSCF, and between HLR and HLR.

```
networkUnstructuredSsContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is HLR, Initiator is VLR
    -- Responder is VLR, Initiator is HLR
    -- Responder is gsmSCF, Initiator is HLR
    -- Responder is HLR, Initiator is gsmSCF
    -- Responder is HLR, Initiator is HLR
    OPERATIONS OF {
        unstructuredSsPackage-v2}
    ID {map-ac networkUnstructuredSs(19) version2(2)} }
```

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac networkFunctionalSs(18) version1(1)}
---

### 17.3.2.21 Short Message Gateway

This application context is used for short message gateway procedures.

```
shortMsgGatewayContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is GMSC
    INITIATOR CONSUMER OF {
        shortMsgGatewayPackage-v3}
    ID {map-ac shortMsgGateway(20) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac shortMsgGateway(20) version2(2)}
---

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac shortMsgGateway(20) version1(1)}
---

### 17.3.2.22 Mobile originating Short Message Relay

This application context is used between MSC and IWMSC or between SGSN and IWMSC for mobile originating short message relay procedures. For the SGSN - IWMSC interface version 1, version 2 and version 3 of this application context are applicable.

```
shortMsgMO-RelayContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is IWMSC if Initiator is MSC
    -- Responder is IWMSC if Initiator is SGSN
    INITIATOR CONSUMER OF {
        mo-ShortMsgRelayPackage-v3}
    ID {map-ac shortMsgMO-Relay(21) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac shortMsgMO-Relay(21) version2(2)}
--

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac shortMsg-Relay(21) version1(1)}
--

### 17.3.2.23 Void

### 17.3.2.24 Short message alert

This application context is used for short message alerting procedures.

```
shortMsgAlertContext-v2 APPLICATION-CONTEXT ::= {
    -- Responder is IWMSC if Initiator is HLR
    INITIATOR CONSUMER OF {
        alertingPackage-v2}
    ID {map-ac shortMsgAlert(23) version2(2)} }
```

The following application-context-name is symbolically assigned to the v1-equivalent application-context:

ID {map-ac shortMsgAlert(23) version1(1)}
---

### 17.3.2.25 Short message waiting data management

This application context is used between VLR and HLR or between SGSN and HLR for short message waiting data management procedures. For the SGSN - HLR interface only version 3 of this application context is applicable.

```
mwdMngtContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is SGSN
    -- Responder is HLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        mwdMngtPackage-v3}
    ID {map-ac mwdMngt(24) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac mwdMngt(24) version2(2)}
-------------------------------------

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac mwdMngt(24) version1(1)}
-------------------------------------

### 17.3.2.26 Mobile terminating Short Message Relay

This application context is used between GMSC and MSC or between GMSC and SGSN for mobile terminating short message relay procedures. For the GMSC - SGSN interface version 2 and version 3 of this application context and the equivalent version 1 application context are applicable.

```
shortMsgMT-RelayContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is MSC or SGSN if Initiator is GMSC
    INITIATOR CONSUMER OF {
        mt-ShortMsgRelayPackage-v3}
    ID {map-ac shortMsgMT-Relay(25) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

ID {map-ac shortMsgMT-Relay(25) version2(2)}
--

The following application-context-name is assigned to the v1-equivalent application-context:

ID {map-ac shortMsgMO-Relay(21) version1(1)}
--

### 17.3.2.27 MS purging

This application context is used between HLR and VLR or between HLR and SGSN for MS purging procedures. For the SGSN - HLR interface only version 3 of this application context is applicable.

```
msPurgingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    -- Responder is HLR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        purgingPackage-v3}
    ID {map-ac msPurging(27) version3(3)} }
```

The following application-context-name is assigned to the v2-equivalent application-context:

```
ID {map-ac msPurging(27) version2(2)}
```

### 17.3.2.28 Subscriber information enquiry

This application context is used between HLR and VLR or between HLR and SGSN for subscriber information enquiry procedures.

```
subscriberInfoEnquiryContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VLR or SGSN if Initiator is HLR
    INITIATOR CONSUMER OF {
        subscriberInformationEnquiryPackage-v3}
    ID {map-ac subscriberInfoEnquiry(28) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.29 Any time information enquiry

This application context is used between gsmSCF and HLR or between gsmSCF and GMLC for any time information enquiry procedures.

```
anyTimeInfoEnquiryContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR or GMLC if Initiator is gsmSCF
    INITIATOR CONSUMER OF {
        anyTimeInformationEnquiryPackage-v3}
    ID {map-ac anyTimeInfoEnquiry(29) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.30 Group Call Control

This application context is used between anchor MSC and relay MSC for group call and broadcast call procedures.

```
groupCallControlContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is relay MSC if Initiator is anchor MSC
    INITIATOR CONSUMER OF {
        groupCallControlPackage-v3}
    ID {map-ac groupCallControl(31) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.31 Provide SIWFS Number

This application context is used for activation or modification of SIWF resources.

```
siwfsAllocationContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is SIWF if Initiator is VMSC
    INITIATOR CONSUMER OF {
        provideSIWFSNumberPackage-v3 |
        siwfs-SignallingModifyPackage-v3}
    ID {map-ac siwfsAllocation (12) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.32 Gprs Location Updating

This application context is used between HLR and SGSN for gprs location updating procedures.

```
gprsLocationUpdateContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        gprsLocationUpdatingPackage-v3}
    RESPONDER CONSUMER OF {
        subscriberDataMngtPackage-v3 |
        tracingPackage-v3}
    ID {map-ac gprsLocationUpdate(32) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.33 Gprs Location Information Retrieval

This application context is used between HLR and GGSN when retrieving gprs location information.

```
gprsLocationInfoRetrievalContext-v4 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is GGSN
    INITIATOR CONSUMER OF {
        gprsInterrogationPackage-v4}
    ID {map-ac gprsLocationInfoRetrieval(33) version4(4)} }
```

The following application-context-name is assigned to the v3-equivalent application-context:

```
ID {map-ac gprsLocationInfoRetrieval(33) version3(3)}
```

### 17.3.2.34 Failure Reporting

This application context is used between HLR and GGSN to inform that network requested PDP-context activation has failed.

```
failureReportContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is GGSN
    INITIATOR CONSUMER OF {
        failureReportingPackage-v3}
    ID {map-ac failureReport(34) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.35 GPRS Notifying

This application context is used between HLR and GGSN for notifying that GPRS subscriber is present again.

```
gprsNotifyContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is GGSN if Initiator is HLR
    INITIATOR CONSUMER OF {
        gprsNotifyingPackage-v3}
    ID {map-ac gprsNotify(35) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.36 Supplementary Service invocation notification

This application context is used between the MSC and the gsmSCF and between the HLR and the gsmSCF for Supplementary Service invocation notification procedures.

```
ss-InvocationNotificationContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is gsmSCF, Initiator is MSC
    -- Responder is gsmSCF, Initiator is HLR
    INITIATOR CONSUMER OF {
        ss-InvocationNotificationPackage-v3}
    ID {map-ac ss-InvocationNotification(36) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.37 Reporting

This application context is used between HLR and VLR for reporting procedures.

```
reportingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VLR if Initiator is HLR
    -- Responder is HLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        setReportingStatePackage-v3 |
        statusReportPackage-v3 |
        remoteUserFreePackage-v3}
    RESPONDER CONSUMER OF {
        setReportingStatePackage-v3 |
        statusReportPackage-v3}
    ID {map-ac reporting(7) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.38 Call Completion

This application context is used between VLR and the HLR for subscriber control of call completion services.

```
callCompletionContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    INITIATOR CONSUMER OF {
        callCompletionPackage-v3}
    ID {map-ac callCompletion(8) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.39 Location Service Gateway

This application context is used for location service gateway procedures.

```
locationSvcGatewayContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is GMLC
    INITIATOR CONSUMER OF {
        locationSvcGatewayPackage-v3}
    ID {map-ac locationSvcGateway(37) version3(3)} }
```

### 17.3.2.40 Location Service Enquiry

This application context is used for location service enquiry procedures.

```
locationSvcEnquiryContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is MSC or SGSN if Initiator is GMLC
    -- Responder is GMLC if Initiator is MSC
    -- Responder is GMLC if Initiator is SGSN
    INITIATOR CONSUMER OF {
        locationSvcEnquiryPackage-v3 |
        locationSvcReportingPackage-v3}
    ID {map-ac locationSvcEnquiry(38) version3 (3)} }
```

17.3.2.41 Void

17.3.2.42 Void

17.3.2.43 Void

#### 17.3.2.44 IST Alerting

This application context is used between MSC (Visited MSC or Gateway MSC) and HLR for alerting services within IST procedures.

```
istAlertingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VMSC
    -- Responder is HLR if Initiator is GMSC
    INITIATOR CONSUMER OF {
        ist-AlertingPackage-v3}
    ID {map-ac alerting(4) version3(3)} }
```

This application-context is v3 only.

#### 17.3.2.45 Service Termination

This application context is used between HLR and MSC (Visited MSC or Gateway MSC) for service termination services within IST procedures.

```
serviceTerminationContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is VMSC or GMSC if Initiator is HLR
    INITIATOR CONSUMER OF {
        serviceTerminationPackage-v3}
    ID {map-ac serviceTermination(9) version3(3)} }
```

This application-context is v3 only.

#### 17.3.2.46 Mobility Management event notification

This application context is used between VLR and gsmSCF for Mobility Management event notification procedures.

```
mm-EventReportingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is gsmSCF, Initiator is VLR
    INITIATOR CONSUMER OF {
        mm-EventReportingPackage-v3}
    ID {map-ac mm-EventReporting(42) version3(3)} }
```

This application-context is v3 only.

#### 17.3.2.47 Any time information handling

This application context is used between gsmSCF and HLR for any time information handling procedures.

```
anyTimeInfohandlingContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is gsmSCF
    INITIATOR CONSUMER OF {
        anyTimeInformationHandlingPackage-v3}
    ID {map-ac anyTimeInfoHandling(43) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.48 Subscriber Data modification notification

This application context is used between HLR and gsmSCF for Subscriber Data modification notification procedures.

```
subscriberDataModificationNotificationContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is gsmSCF, Initiator is HLR
    INITIATOR CONSUMER OF {
        subscriberDataModificationNotificationPackage-v3}
    ID {map-ac subscriberDataModificationNotification(22) version3(3)} }
```

This application-context is v3 only.

### 17.3.2.49 Authentication Failure Report

This application context is used between VLR and HLR or SGSN and HLR for reporting of authentication failures.

```
authenticationFailureReportContext-v3 APPLICATION-CONTEXT ::= {
    -- Responder is HLR if Initiator is VLR
    -- Responder is HLR if Initiator is SGSN
    INITIATOR CONSUMER OF {
        authenticationFailureReportPackage-v3 }
    ID {map-ac authenticationFailureReport(39) version3(3)} }
```

This application-context is v3 only.

## 17.3.3 ASN.1 Module for application-context-names

The following ASN.1 module summarises the application-context-name assigned to MAP application-contexts.

```
MAP-ApplicationContexts {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ApplicationContexts (2) version8 (8)}
```

DEFINITIONS

::=

BEGIN

-- EXPORTS everything

```
IMPORTS
    gsm-NetworkId,
    ac-Id
FROM MobileDomainDefinitions {
    itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
    mobileDomainDefinitions (0) version1 (1)}
;
```

-- application-context-names

```
map-ac OBJECT IDENTIFIER ::= {gsm-NetworkId ac-Id}
```

```
networkLocUpContext-v3 OBJECT IDENTIFIER ::= {map-ac networkLocUp(1) version3(3)}
```

```
locationCancellationContext-v3 OBJECT IDENTIFIER ::= {map-ac locationCancel(2) version3(3)}
```

```
roamingNumberEnquiryContext-v3 OBJECT IDENTIFIER ::= {map-ac roamingNbEnquiry(3) version3(3)}
```

```
authenticationFailureReportContext-v3 OBJECT IDENTIFIER ::= {map-ac authenticationFailureReport(39) version3(3)}
```

```
locationInfoRetrievalContext-v3 OBJECT IDENTIFIER ::= {map-ac locInfoRetrieval(5) version3(3)}
```

```
resetContext-v2 OBJECT IDENTIFIER ::= {map-ac reset(10) version2(2)}
```

```
handoverControlContext-v3 OBJECT IDENTIFIER ::=  
{map-ac handoverControl(11) version3(3)}
```

```
equipmentMngtContext-v2 OBJECT IDENTIFIER ::=  
{map-ac equipmentMngt(13) version2(2)}
```

```
infoRetrievalContext-v3 OBJECT IDENTIFIER ::=  
{map-ac infoRetrieval(14) version3(3)}
```

```
interVlrInfoRetrievalContext-v3 OBJECT IDENTIFIER ::=  
{map-ac interVlrInfoRetrieval(15) version3(3)}
```

```
subscriberDataMngtContext-v3 OBJECT IDENTIFIER ::=  
{map-ac subscriberDataMngt(16) version3(3)}
```

```
tracingContext-v3 OBJECT IDENTIFIER ::=  
{map-ac tracing(17) version3(3)}
```

```
networkFunctionalSsContext-v2 OBJECT IDENTIFIER ::=  
{map-ac networkFunctionalSs(18) version2(2)}
```

```
networkUnstructuredSsContext-v2 OBJECT IDENTIFIER ::=  
{map-ac networkUnstructuredSs(19) version2(2)}
```

```
shortMsgGatewayContext-v3 OBJECT IDENTIFIER ::=  
{map-ac shortMsgGateway(20) version3(3)}
```

```
shortMsgMO-RelayContext-v3 OBJECT IDENTIFIER ::=  
{map-ac shortMsgMO-Relay(21) version3(3)}
```

```
shortMsgAlertContext-v2 OBJECT IDENTIFIER ::=  
{map-ac shortMsgAlert(23) version2(2)}
```

```
mwdMngtContext-v3 OBJECT IDENTIFIER ::=  
{map-ac mwdMngt(24) version3(3)}
```

```
shortMsgMT-RelayContext-v3 OBJECT IDENTIFIER ::=  
{map-ac shortMsgMT-Relay(25) version3(3)}
```

```
imsiRetrievalContext-v2 OBJECT IDENTIFIER ::=  
{map-ac imsiRetrieval(26) version2(2)}
```

```
msPurgingContext-v3 OBJECT IDENTIFIER ::=  
{map-ac msPurging(27) version3(3)}
```

```
subscriberInfoEnquiryContext-v3 OBJECT IDENTIFIER ::=  
{map-ac subscriberInfoEnquiry(28) version3(3)}
```

```
anyTimeInfoEnquiryContext-v3 OBJECT IDENTIFIER ::=  
{map-ac anyTimeInfoEnquiry(29) version3(3)}
```

```
callControlTransferContext-v4 OBJECT IDENTIFIER ::=  
{map-ac callControlTransfer(6) version4(4)}
```

```
ss-InvocationNotificationContext-v3 OBJECT IDENTIFIER ::=  
{map-ac ss-InvocationNotification(36) version3(3)}
```

```
siWFSAlocationContext-v3 OBJECT IDENTIFIER ::=  
{map-ac siWFSAlocation(12) version3(3)}
```

```
groupCallControlContext-v3 OBJECT IDENTIFIER ::=  
{map-ac groupCallControl(31) version3(3)}
```

```
gprsLocationUpdateContext-v3 OBJECT IDENTIFIER ::=  
{map-ac gprsLocationUpdate(32) version3(3)}
```

```
gprsLocationInfoRetrievalContext-v4 OBJECT IDENTIFIER ::=  
{map-ac gprsLocationInfoRetrieval(33) version4(4)}
```

```
failureReportContext-v3 OBJECT IDENTIFIER ::=  
{map-ac failureReport(34) version3(3)}
```

```
gprsNotifyContext-v3 OBJECT IDENTIFIER ::=  
{map-ac gprsNotify(35) version3(3)}
```

reportingContext-v3 OBJECT IDENTIFIER ::= {map-ac reporting(7) version3(3)}	
callCompletionContext-v3 OBJECT IDENTIFIER ::= {map-ac callCompletion(8) version3(3)}	
istAlertingContext-v3 OBJECT IDENTIFIER ::= {map-ac istAlerting(4) version3(3)}	
serviceTerminationContext-v3 OBJECT IDENTIFIER ::= {map-ac immediateTermination(9) version3(3)}	
locationSvcGatewayContext-v3 OBJECT IDENTIFIER ::= {map-ac locationSvcGateway(37) version3(3)}	
locationSvcEnquiryContext-v3 OBJECT IDENTIFIER ::= {map-ac locationSvcEnquiry(38) version3(3)}	
mm-EventReportingContext-v3 OBJECT IDENTIFIER ::= {map-ac mm-EventReporting(42) version3(3)}	
anyTimeInfoHandlingContext-v3 OBJECT IDENTIFIER ::= {map-ac anyTimeInfoHandling(43) version3(3)}	
subscriberDataModificationNotificationContext-v3 OBJECT IDENTIFIER ::= {map-ac subscriberDataModificationNotification(22) version3(3)}	
secureTransportHandlingContext-v3 OBJECT IDENTIFIER ::= {map-ac secureTransportHandling(40) version3(3)}	
-- The following Object Identifiers are reserved for application-contexts -- existing in previous versions of the protocol	
-- AC Name & Version	Object Identifier
--	
-- networkLocUpContext-v1	map-ac networkLocUp (1)
-- networkLocUpContext-v2	map-ac networkLocUp (1)
-- locationCancellationContext-v1	map-ac locationCancellation (2)
-- locationCancellationContext-v2	map-ac locationCancellation (2)
-- roamingNumberEnquiryContext-v1	map-ac roamingNumberEnquiry (3)
-- roamingNumberEnquiryContext-v2	map-ac roamingNumberEnquiry (3)
-- locationInfoRetrievalContext-v1	map-ac locationInfoRetrieval (5)
-- locationInfoRetrievalContext-v2	map-ac locationInfoRetrieval (5)
-- resetContext-v1	map-ac reset (10)
-- handoverControlContext-v1	map-ac handoverControl (11)
-- handoverControlContext-v2	map-ac handoverControl (11)
-- equipmentMngtContext-v1	map-ac equipmentMngt (13)
-- infoRetrievalContext-v1	map-ac infoRetrieval (14)
-- infoRetrievalContext-v2	map-ac infoRetrieval (14)
-- interVlrInfoRetrievalContext-v2	map-ac interVlrInfoRetrieval (15)
-- subscriberDataMngtContext-v1	map-ac subscriberDataMngt (16)
-- subscriberDataMngtContext-v2	map-ac subscriberDataMngt (16)
-- tracingContext-v1	map-ac tracing (17)
-- tracingContext-v2	map-ac tracing (17)
-- networkFunctionalSsContext-v1	map-ac networkFunctionalSs (18)
-- shortMsgGatewayContext-v1	map-ac shortMsgGateway (20)
-- shortMsgGatewayContext-v2	map-ac shortMsgGateway (20)
-- shortMsgRelayContext-v1	map-ac shortMsgRelay (21)
-- shortMsgAlertContext-v1	map-ac shortMsgAlert (23)
-- mwdMngtContext-v1	map-ac mwdMngt (24)
-- mwdMngtContext-v2	map-ac mwdMngt (24)
-- shortMsgMT-RelayContext-v2	map-ac shortMsgMT-Relay (25)
-- msPurgingContext-v2	map-ac msPurging (27)
-- callControlTransferContext-v3	map-ac callControlTransferContext (6)
-- gprsLocationInfoRetrievalContext-v3	map-ac gprsLocationInfoRetrievalContext (33) version3 (3)

END

## 17.4 MAP Dialogue Information

```
MAP-DialogueInformation {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-DialogueInformation (3) version8 (8)}
```

DEFINITIONS

```

IMPLICIT TAGS
 ::=

BEGIN

EXPORTS
  map-DialogueAS,
  MAP-DialoguePDU,
  map-ProtectedDialogueAS,
  MAP-ProtectedDialoguePDU

;

IMPORTS
  gsm-NetworkId,
  as-Id
FROM MobileDomainDefinitions {
  itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
  mobileDomainDefinitions (0) version1 (1)}

  AddressString
FROM MAP-CommonDataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network(1) modules (3) map-CommonDataTypes (18) version8 (8)}

  ExtensionContainer
FROM MAP-ExtensionDataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}

  SecurityHeader,
  ProtectedPayload
FROM MAP-ST-DataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-ST-DataTypes (27) version8 (8)}

;

-- abstract syntax name for MAP-DialoguePDU

```

<b>map-DialogueAS</b> OBJECT IDENTIFIER ::= {gsm-NetworkId as-Id map-DialoguePDU (1) version1 (1)}
---

<b>MAP-DialoguePDU</b> ::= CHOICE { map-open [0] MAP-OpenInfo, map-accept [1] MAP-AcceptInfo, map-close [2] MAP-CloseInfo, map-refuse [3] MAP-RefuseInfo, map-userAbort [4] MAP-UserAbortInfo, map-providerAbort [5] MAP-ProviderAbortInfo}
---

<b>MAP-OpenInfo</b> ::= SEQUENCE { destinationReference [0] AddressString OPTIONAL, originationReference [1] AddressString OPTIONAL, ... extensionContainer ExtensionContainer OPTIONAL -- extensionContainer must not be used in version 2 }
---

<b>MAP-AcceptInfo</b> ::= SEQUENCE { ... extensionContainer ExtensionContainer OPTIONAL -- extensionContainer must not be used in version 2 }
---

<b>MAP-CloseInfo</b> ::= SEQUENCE { ... extensionContainer ExtensionContainer OPTIONAL -- extensionContainer must not be used in version 2 }
--

```
MAP-RefuseInfo ::= SEQUENCE {
    reason      Reason,
    ...,
    extensionContainer          ExtensionContainer           OPTIONAL,
    -- extensionContainer must not be used in version 2
    alternativeApplicationContext OBJECT IDENTIFIER        OPTIONAL
    -- alternativeApplicationContext must not be used in version 2
}
```

```
Reason ::= ENUMERATED {
    noReasonGiven          (0),
    invalidDestinationReference (1),
    invalidOriginatingReference (2),
    encapsulatedAC-NotSupported (3),
    transportProtectionNotAdequate (4)
    -- encapsulatedAC-NotSupported and transportProtectionNotAdequate must not be used in
    -- dialogues with an AC different from secureTransportHandling
```

```
MAP-UserAbortInfo ::= SEQUENCE {
    map-UserAbortChoice       MAP-UserAbortChoice,
    ...,
    extensionContainer          ExtensionContainer           OPTIONAL
    -- extensionContainer must not be used in version 2
}
```

```
MAP-UserAbortChoice ::= CHOICE {
    userSpecificReason         [0] NULL,
    userResourceLimitation     [1] NULL,
    resourceUnavailable        [2] ResourceUnavailableReason,
    applicationProcedureCancellation [3] ProcedureCancellationReason}
```

```
ResourceUnavailableReason ::= ENUMERATED {
    shortTermResourceLimitation (0),
    longTermResourceLimitation (1)}
```

```
ProcedureCancellationReason ::= ENUMERATED {
    handoverCancellation (0),
    radioChannelRelease (1),
    networkPathRelease (2),
    callRelease (3),
    associatedProcedureFailure (4),
    tandemDialogueRelease (5),
    remoteOperationsFailure (6)}
```

```
MAP-ProviderAbortInfo ::= SEQUENCE {
    map-ProviderAbortReason    MAP-ProviderAbortReason,
    ...,
    extensionContainer          ExtensionContainer           OPTIONAL
    -- extensionContainer must not be used in version 2
}
```

```
MAP-ProviderAbortReason ::= ENUMERATED {
    abnormalDialogue (0),
    invalidPDU (1)}
```

-- abstract syntax name for MAP-ProtectedDialoguePDU

```
map-ProtectedDialogueAS OBJECT IDENTIFIER ::=
{gsm-NetworkId as-Id map-ProtectedDialoguePDU (3) version1 (1)}
```

```
MAP-ProtectedDialoguePDU ::= SEQUENCE {
    encapsulatedAC            OBJECT IDENTIFIER,
    securityHeader             SecurityHeader           OPTIONAL,
    protectedPayload           ProtectedPayload        OPTIONAL,
    ...
    -- The protectedPayload carries the result of applying the security function
    -- defined in 3GPP TS 33.200 to the encoding of the securely transported
    -- MAP-DialoguePDU
```

END

## 17.5 MAP operation and error codes

```
MAP-Protocol {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Protocol (4) version8 (8)}
```

## DEFINITIONS

::=

BEGIN

## IMPORTS

## OPERATION

```
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4) informationObjects(5) version1(0)}
```

```
updateLocation,
cancelLocation,
purgeMS,
sendIdentification,
updateGprsLocation,
prepareHandover,
sendEndSignal,
processAccessSignalling,
forwardAccessSignalling,
prepareSubsequentHandover,
sendAuthenticationInfo,
authenticationFailureReport,
checkIMEI,
insertSubscriberData,
deleteSubscriberData,
reset,
forwardCheckSS-Indication,
restoreData,
provideSubscriberInfo,
anyTimeInterrogation,
anyTimeSubscriptionInterrogation,
anyTimeModification,
sendRoutingInfoForGprs,
failureReport,
noteMsPresentForGprs,
noteMM-Event,
noteSubscriberDataModified
```

```
FROM MAP-MobileServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-MobileServiceOperations (5)
    version8 (8)}
```

```
activateTraceMode,
deactivateTraceMode,
sendIMSI
```

```
FROM MAP-OperationAndMaintenanceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-OperationAndMaintenanceOperations (6)
    version8 (8)}
```

```
sendRoutingInfo,
provideRoamingNumber,
resumeCallHandling,
provideSIWFSTNumber,
siwfs-SignallingModify,
setReportingState,
statusReport,
remoteUserFree,
ist-Alert,
ist-Command
```

```
FROM MAP-CallHandlingOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CallHandlingOperations (7)
    version8 (8)}
```

```
registerSS,
eraseSS,
activateSS,
deactivateSS,
interrogateSS,
processUnstructuredSS-Request,
unstructuredSS-Request,
unstructuredSS-Notify,
registerPassword,
getPassword,
```

```

ss-InvocationNotification,
registerCC-Entry,
eraseCC-Entry
FROM MAP-SupplementaryServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SupplementaryServiceOperations (8)
version8 (8)}

sendRoutingInfoForSM,
mo-ForwardSM,
mt-ForwardSM,
reportSM-DeliveryStatus,
alertServiceCentre,
informServiceCentre,
readyForSM
FROM MAP-ShortMessageServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ShortMessageServiceOperations (9)
version8 (8)}

prepareGroupCall,
processGroupCallSignalling,
forwardGroupCallSignalling,
sendGroupCallEndSignal
FROM MAP-Group-Call-Operations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Group-Call-Operations (22)
version8 (8)}

provideSubscriberLocation,
sendRoutingInfoForLCS,
subscriberLocationReport
FROM MAP-LocationServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-LocationServiceOperations (24)
version8 (8)}

secureTransportClass1,
secureTransportClass2,
secureTransportClass3,
secureTransportClass4

FROM MAP-SecureTransportOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SecureTransportOperations (26)
version8 (8)}

;

Supported-MAP-Operations OPERATION ::= {updateLocation | cancelLocation | purgeMS |
    sendIdentification | updateGprsLocation | prepareHandover | sendEndSignal |
    processAccessSignalling | forwardAccessSignalling | prepareSubsequentHandover |
    sendAuthenticationInfo | authenticationFailureReport | checkIMEI | insertSubscriberData |
    deleteSubscriberData | reset | forwardCheckSS-Indication | restoreData | provideSubscriberInfo |
    anyTimeInterrogation | anyTimeSubscriptionInterrogation | anyTimeModification |
    sendRoutingInfoForGprs | failureReport | noteMsPresentForGprs | noteMM-Event |
    noteSubscriberDataModified | activateTraceMode | deactivateTraceMode | sendIMSI |
    sendRoutingInfo | provideRoamingNumber | resumeCallHandling | provideSIWFSDNumber |
    siwfs-SignallingModify | setReportingState | statusReport | remoteUserFree | ist-Alert |
    ist-Command | registerSS | eraseSS | activateSS | deactivateSS | interrogateSS |
    processUnstructuredSS-Request | unstructuredSS-Request | unstructuredSS-Notify |
    registerPassword | getPassword | ss-InvocationNotification | registerCC-Entry | eraseCC-Entry |
    sendRoutingInfoForSM | mo-ForwardSM | mt-ForwardSM | reportSM-DeliveryStatus |
    alertServiceCentre | informServiceCentre | readyForSM | prepareGroupCall |
    processGroupCallSignalling | forwardGroupCallSignalling | sendGroupCallEndSignal |
    provideSubscriberLocation | sendRoutingInfoForLCS | subscriberLocationReport |
    secureTransportClass1 | secureTransportClass2 | secureTransportClass3 | secureTransportClass4}

-- The following operation codes are reserved for operations
-- existing in previous versions of the protocol

```

-- Operation Name	AC used	Oper. Code
--		
-- sendParameters	map-ac infoRetrieval (14) version1 (1)	local:9
-- processUnstructuredSS-Data	map-ac networkFunctionalSs (18) version1 (1)	local:19
-- performHandover	map-ac handoverControl (11) version1 (1)	local:28
-- performSubsequentHandover	map-ac handoverControl (11) version1 (1)	local:30
-- noteInternalHandover	map-ac handoverControl (11) version1 (1)	local:35
-- noteSubscriberPresent	map-ac mwdMngt (24) version1 (1)	local:48
-- alertServiceCentreWithoutResult	map-ac shortMsgAlert (23) version1 (1)	local:49
-- traceSubscriberActivity	map-ac handoverControl (11) version1 (1)	local:52
-- beginSubscriberActivity	map-ac networkFunctionalSs (18) version1 (1)	local:54

-- The following error codes are reserved for errors  
-- existing in previous versions of the protocol

-- Error Name	AC used	Error Code
--		
-- unknownBaseStation	map-ac handoverControl (11) version1 (1)	local:2
-- invalidTargetBaseStation	map-ac handoverControl (11) version1 (1)	local:23
-- noRadioResourceAvailable	map-ac handoverControl (11) version1 (1)	local:24

END

## 17.6 MAP operations and errors

### 17.6.1 Mobile Service Operations

```
MAP-MobileServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-MobileServiceOperations (5)
    version8 (8)}
```

DEFINITIONS

::=

BEGIN

EXPORTS

```
-- location registration operations
updateLocation,
cancelLocation,
purgeMS,
sendIdentification,

-- gprs location registration operations
updateGprsLocation,

-- subscriber information enquiry operations
provideSubscriberInfo,

-- any time information enquiry operations
anyTimeInterrogation,

-- any time information handling operations
anyTimeSubscriptionInterrogation,
anyTimeModification,

-- subscriber data modification notification operations
noteSubscriberDataModified,

-- handover operations
prepareHandover,
sendEndSignal,
processAccessSignalling,
forwardAccessSignalling,
prepareSubsequentHandover,

-- authentication management operations
sendAuthenticationInfo,
authenticationFailureReport,
```

```

-- IMEI management operations
checkIMEI,

-- subscriber management operations
insertSubscriberData,
deleteSubscriberData,

-- fault recovery operations
reset,
forwardCheckSS-Indication,
restoreData,

-- gprs location information retrieval operations
sendRoutingInfoForGprs,

-- failure reporting operations
failureReport,

-- gprs notification operations
noteMsPresentForGprs,

-- Mobility Management operations
noteMM-Event

;

IMPORTS
OPERATION
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}

systemFailure,
dataMissing,
unexpectedDataValue,
unknownSubscriber,
unknownMSC,
unidentifiedSubscriber,
unknownEquipment,
roamingNotAllowed,
ati-NotAllowed,
noHandoverNumberAvailable,
subsequentHandoverFailure,
absentSubscriber,
mm-EventNotSupported,
atsi-NotAllowed,
atm-NotAllowed,
bearerServiceNotProvisioned,
teleserviceNotProvisioned,
callBarred,
illegalSS-Operation,
ss-ErrorStatus,
ss-NotAvailable,
ss-Incompatibility,
ss-SubscriptionViolation,
informationNotAvailable,
targetCellOutsideGroupCallArea

FROM MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}

UpdateLocationArg,
UpdateLocationRes,
CancelLocationArg,
CancelLocationRes,
PurgeMS-Arg,
PurgeMS-Res,
SendIdentificationArg,
SendIdentificationRes,
UpdateGprsLocationArg,
UpdateGprsLocationRes,
PrepareHO-Arg,
PrepareHO-Res,
ForwardAccessSignalling-Arg,

```

```

ProcessAccessSignalling-Arg,
SendEndSignal-Arg,
SendEndSignal-Res,
PrepareSubsequentHO-Res,
PrepareSubsequentHO-Arg,
SendAuthenticationInfoArg,
SendAuthenticationInfoRes,
AuthenticationFailureReportArg,
AuthenticationFailureReportRes,
EquipmentStatus,
InsertSubscriberDataArg,
InsertSubscriberDataRes,
DeleteSubscriberDataArg,
DeleteSubscriberDataRes,
ResetArg,
RestoreDataArg,
RestoreDataRes,
ProvideSubscriberInfoArg,
ProvideSubscriberInfoRes,
AnyTimeSubscriptionInterrogationArg,
AnyTimeSubscriptionInterrogationRes,
AnyTimeModificationArg,
AnyTimeModificationRes,
NoteSubscriberDataModifiedArg,
NoteSubscriberDataModifiedRes,
AnyTimeInterrogationArg,
AnyTimeInterrogationRes,
SendRoutingInfoForGprsArg,
SendRoutingInfoForGprsRes,
FailureReportArg,
FailureReportRes,
NoteMsPresentForGprsArg,
NoteMsPresentForGprsRes,
NoteMM-EventArg,
NoteMM-EventRes

```

```

FROM MAP-MS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-MS-DataTypes (11) version8 (8)}

IMEI
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}
;
```

-- location registration operations

<b>updateLocation</b> OPERATION ::= { ARGUMENT UpdateLocationArg RESULT UpdateLocationRes ERRORS { systemFailure   dataMissing   unexpectedDataValue   unknownSubscriber   roamingNotAllowed} CODE local:2 }	--Timer m
---	-----------

<b>cancelLocation</b> OPERATION ::= { ARGUMENT CancelLocationArg RESULT CancelLocationRes -- optional ERRORS { dataMissing   unexpectedDataValue} CODE local:3 }	--Timer m
---	-----------

```

purgeMS OPERATION ::= {
    ARGUMENT
        PurgeMS-Arg
    RESULT
        PurgeMS-Res
        -- optional
    ERRORS{
        dataMissing |
        unexpectedDataValue|
        unknownSubscriber}
    CODE local:67 }
--Timer m

```

```

sendIdentification OPERATION ::= {
    ARGUMENT
        SendIdentificationArg
    RESULT
        SendIdentificationRes
    ERRORS {
        dataMissing |
        unidentifiedSubscriber}
    CODE local:55 }
--Timer s

```

-- gprs location registration operations

```

updateGprsLocation OPERATION ::= {
    ARGUMENT
        UpdateGprsLocationArg
    RESULT
        UpdateGprsLocationRes
    ERRORS {
        systemFailure |
        unexpectedDataValue |
        unknownSubscriber |
        roamingNotAllowed}
    CODE local:23 }
--Timer m

```

-- subscriber information enquiry operations

```

provideSubscriberInfo OPERATION ::= {
    ARGUMENT
        ProvideSubscriberInfoArg
    RESULT
        ProvideSubscriberInfoRes
    ERRORS {
        dataMissing |
        unexpectedDataValue}
    CODE local:70 }
--Timer m

```

-- any time information enquiry operations

```

anyTimeInterrogation OPERATION ::= {
    ARGUMENT
        AnyTimeInterrogationArg
    RESULT
        AnyTimeInterrogationRes
    ERRORS {
        systemFailure |
        ati-NotAllowed |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:71 }
--Timer m

```

-- any time information handling operations

```

anyTimeSubscriptionInterrogation OPERATION ::= {
    ARGUMENT
        AnyTimeSubscriptionInterrogationArg
    RESULT
        AnyTimeSubscriptionInterrogationRes
    ERRORS {
        atsi-NotAllowed |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-NotAvailable |
        informationNotAvailable}
    CODE local:62 }
--Timer m

```

```

anyTimeModification OPERATION ::= {
    ARGUMENT
        AnyTimeModificationArg
    RESULT
        AnyTimeModificationRes
    ERRORS {
        atm-NotAllowed |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-SubscriptionViolation |
        ss-ErrorStatus |
        ss-Incompatibility |
        informationNotAvailable}
    CODE local:65 }
--Timer m

```

-- subscriber data modification notification operations

```

noteSubscriberDataModified OPERATION ::= {
    ARGUMENT
        NoteSubscriberDataModifiedArg
    RESULT
        NoteSubscriberDataModifiedRes
            -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:5 }
--Timer m

```

-- handover operations

```

prepareHandover OPERATION ::= {
    ARGUMENT
        PrepareHO-Arg
    RESULT
        PrepareHO-Res
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        noHandoverNumberAvailable |
        targetCellOutsideGroupCallArea }
    CODE local:68 }
--Timer m

```

```

sendEndSignal OPERATION ::= {
    ARGUMENT
        SendEndSignal-Arg
    RESULT
        SendEndSignal-Res
    CODE local:29 }
--Timer l

```

```
processAccessSignalling OPERATION ::= {
    ARGUMENT
        ProcessAccessSignalling-Arg
    CODE local:33 }
```

```
forwardAccessSignalling OPERATION ::= {
    ARGUMENT
        ForwardAccessSignalling-Arg
    CODE local:34 }
```

```
prepareSubsequentHandover OPERATION ::= { --Timer m
    ARGUMENT
        PrepareSubsequentHO-Arg
    RESULT
        PrepareSubsequentHO-Res
    ERRORS {
        unexpectedDataValue |
        dataMissing |
        unknownMSC |
        subsequentHandoverFailure}
    CODE local:69 }
```

-- authentication management operations

```
sendAuthenticationInfo OPERATION ::= { --Timer m
    ARGUMENT
        SendAuthenticationInfoArg
        -- optional
        -- within a dialogue sendAuthenticationInfoArg shall not be present in
        -- subsequent invoke components. If received in a subsequent invoke component
        -- it shall be discarded.

    RESULT
        SendAuthenticationInfoRes
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:56 }
```

```
authenticationFailureReport OPERATION ::= { --Timer m
    ARGUMENT
        AuthenticationFailureReportArg
    RESULT
        AuthenticationFailureReportRes
        -- optional
    ERRORS {
        systemFailure |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:15 }
```

-- IMEI management operations

```
checkIMEI OPERATION ::= { --Timer m
    ARGUMENT
        IMEI
    RESULT
        EquipmentStatus
    ERRORS {
        systemFailure |
        dataMissing |
        unknownEquipment}
    CODE local:43 }
```

-- subscriber management operations

```
insertSubscriberData OPERATION ::= {
    ARGUMENT
        InsertSubscriberDataArg
    RESULT
        InsertSubscriberDataRes
        -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unidentifiedSubscriber}
    CODE local:7 }
```

```
deleteSubscriberData OPERATION ::= {
    ARGUMENT
        DeleteSubscriberDataArg
    RESULT
        DeleteSubscriberDataRes
        -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unidentifiedSubscriber}
    CODE local:8 }
```

-- fault recovery operations

```
reset OPERATION ::= {
    ARGUMENT
        ResetArg
    CODE local:37 }
```

```
forwardCheckSS-Indication OPERATION ::= {
    CODE local:38 }
```

```
restoreData OPERATION ::= {
    ARGUMENT
        RestoreDataArg
    RESULT
        RestoreDataRes
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:57 }
```

-- gprs location information retrieval operations

```
sendRoutingInfoForGprs OPERATION ::= {
    ARGUMENT
        SendRoutingInfoForGprsArg
    RESULT
        SendRoutingInfoForGprsRes
    ERRORS {
        absentSubscriber |
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber |
        callBarred }
    CODE local:24 }
```

-- failure reporting operations

```
failureReport OPERATION ::= {
    ARGUMENT
        FailureReportArg
    RESULT
        FailureReportRes
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:25 }
```

-- gprs notification operations

```

noteMsPresentForGprs OPERATION ::= {
    ARGUMENT
        NoteMsPresentForGprsArg
    RESULT
        NoteMsPresentForGprsRes
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:26 }
--Timer m

```

```

noteMM-Event OPERATION ::= {
    ARGUMENT
        NoteMM-EventArgs
    RESULT
        NoteMM-EventRes
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber |
        mm-EventNotSupported}
    CODE local:89 }
--Timer m

```

END

## 17.6.2 Operation and Maintenance Operations

```

MAP-OperationAndMaintenanceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-OperationAndMaintenanceOperations (6)
    version8 (8)}

```

DEFINITIONS

:=

BEGIN

```

EXPORTS
    activateTraceMode,
    deactivateTraceMode,
    sendIMSI
;

```

```

IMPORTS
    OPERATION
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}

```

```

    systemFailure,
    dataMissing,
    unexpectedDataValue,
    facilityNotSupported,
    unknownSubscriber,
    unidentifiedSubscriber,
    tracingBufferFull
FROM MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}

```

```

    ActivateTraceModeArg,
    ActivateTraceModeRes,
    DeactivateTraceModeArg,
    DeactivateTraceModeRes
FROM MAP-OM-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-OM-DataTypes (12) version8 (8)}

```

```

    ISDN-AddressString,
    IMSI
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

```

;

```
activateTraceMode OPERATION ::= {
    ARGUMENT
        ActivateTraceModeArg
    RESULT
        ActivateTraceModeRes
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unidentifiedSubscriber |
        tracingBufferFull}
    CODE local:50 }
```

```
deactivateTraceMode OPERATION ::= {
    ARGUMENT
        DeactivateTraceModeArg
    RESULT
        DeactivateTraceModeRes
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unidentifiedSubscriber}
    CODE local:51 }
```

```
sendIMSI OPERATION ::= {
    ARGUMENT
        ISDN-AddressString
    RESULT
        IMSI
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:58 }
```

END

### 17.6.3 Call Handling Operations

```
MAP-CallHandlingOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CallHandlingOperations (7)
    version8 (8)}

DEFINITIONS

::=


BEGIN

EXPORTS
    sendRoutingInfo,
    provideRoamingNumber,
    resumeCallHandling,
    provideSIWFSTNumber,
    siwfs-SignallingModify,
    setReportingState,
    statusReport,
    remoteUserFree,
    ist-Alert,
    ist-Command
;

IMPORTS
    OPERATION
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}

    systemFailure,
```

```

dataMissing,
unexpectedDataValue,
facilityNotSupported,
or-NotAllowed,
unknownSubscriber,
numberChanged,
bearerServiceNotProvisioned,
teleserviceNotProvisioned,
noRoamingNumberAvailable,
absentSubscriber,
busySubscriber,
noSubscriberReply,
callBarred,
forwardingViolation,
forwardingFailed,
cug-Reject,
resourceLimitation,
incompatibleTerminal,
unidentifiedSubscriber

FROM MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}
    SendRoutingInfoArg,
    SendRoutingInfoRes,
    ProvideRoamingNumberArg,
    ProvideRoamingNumberRes,
    ResumeCallHandlingArg,
    ResumeCallHandlingRes,
    ProvideSIWFSTNumberArg,
    ProvideSIWFSTNumberRes,
    SIWFSSignallingModifyArg,
    SIWFSSignallingModifyRes,
    SetReportingStateArg,
    SetReportingStateRes,
    StatusReportArg,
    StatusReportRes,
    RemoteUserFreeArg,
    RemoteUserFreeRes,
    IST-AlertArg,
    IST-AlertRes,
    IST-CommandArg,
IST-CommandRes
FROM MAP-CH-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CH-DataTypes (13) version8 (8)}
;

sendRoutingInfo OPERATION ::= {
-- The timer is set to the upper limit of the range if the GMSC supports pre-paging. --Timer m
    ARGUMENT
        SendRoutingInfoArg
    RESULT
        SendRoutingInfoRes
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        or-NotAllowed |
        unknownSubscriber |
        numberChanged |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        absentSubscriber |
        busySubscriber |
        noSubscriberReply |
        callBarred |
        cug-Reject |
        forwardingViolation}
    CODE local:22 }

```

```

provideRoamingNumber OPERATION ::= { --Timer m
-- The timer is set to the upper limit of the range if the HLR supports pre-paging.
    ARGUMENT
        ProvideRoamingNumberArg
    RESULT
        ProvideRoamingNumberRes
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        or-NotAllowed |
        absentSubscriber |
        noRoamingNumberAvailable}
    CODE local:4 }

```

```

resumeCallHandling OPERATION ::= { --Timer m
    ARGUMENT
        ResumeCallHandlingArg
    RESULT
        ResumeCallHandlingRes
        -- optional
    ERRORS {
        forwardingFailed |
        or-NotAllowed |
        unexpectedDataValue |
        dataMissing }
    CODE local:6 }

```

```

provideSIWFSNumber OPERATION ::= { --Timer m
    ARGUMENT
        ProvideSIWFSNumberArg
    RESULT
        ProvideSIWFSNumberRes
    ERRORS {
        resourceLimitation |
        dataMissing |
        unexpectedDataValue |
        systemFailure}
    CODE local:31 }

```

```

siwfs-SignallingModify OPERATION ::= { --Timer m
    ARGUMENT
        SIWFSSignallingModifyArg
    RESULT
        SIWFSSignallingModifyRes
        -- optional
    ERRORS {
        resourceLimitation |
        dataMissing |
        unexpectedDataValue |
        systemFailure}
    CODE local:32 }

```

```

setReportingState OPERATION ::= { --Timer m
    ARGUMENT
        SetReportingStateArg
    RESULT
        SetReportingStateRes
        -- optional
    ERRORS {
        systemFailure |
        unidentifiedSubscriber |
        unexpectedDataValue |
        dataMissing |
        resourceLimitation |
        facilityNotSupported}
    CODE local:73 }

```

```

statusReport OPERATION ::= {
    ARGUMENT
        StatusReportArg
    RESULT
        StatusReportRes
        -- optional
    ERRORS {
        unknownSubscriber |
        systemFailure |
        unexpectedDataValue |
        dataMissing}
    CODE local:74 }
--Timer m

```

```

remoteUserFree OPERATION ::= {
    ARGUMENT
        RemoteUserFreeArg
    RESULT
        RemoteUserFreeRes
    ERRORS {
        unexpectedDataValue |
        dataMissing |
        incompatibleTerminal |
        absentSubscriber |
        systemFailure |
        busySubscriber}
    CODE local:75 }
--Timer ml

```

```

ist-Alert OPERATION ::= {
    ARGUMENT
        IST-AlertArg
    RESULT
        IST-AlertRes
        -- optional
    ERRORS {
        unexpectedDataValue |
        resourceLimitation |
        unknownSubscriber |
        systemFailure |
        facilityNotSupported}
    CODE local:87 }
--Timer m

```

```

ist-Command OPERATION ::= {
    ARGUMENT
        IST-CommandArg
    RESULT
        IST-CommandRes
        -- optional
    ERRORS {
        unexpectedDataValue |
        resourceLimitation |
        unknownSubscriber |
        systemFailure |
        facilityNotSupported}
    CODE local:88 }
--Timer m

```

END

## 17.6.4 Supplementary service operations

```

MAP-SupplementaryServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SupplementaryServiceOperations (8)
    version8 (8)}

```

DEFINITIONS

::=

BEGIN

```

EXPORTS
    registerSS,
    eraseSS,
    activateSS,
    deactivateSS,
    interrogateSS,
    processUnstructuredSS-Request,
    unstructuredSS-Request,

```

```

unstructuredSS-Notify,
registerPassword,
getPassword,
ss-InvocationNotification,
registerCC-Entry,
eraseCC-Entry
;

IMPORTS
OPERATION
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}

systemFailure,
dataMissing,
unexpectedDataValue,
unknownSubscriber,
bearerServiceNotProvisioned,
teleserviceNotProvisioned,
callBarred,
illegalSS-Operation,
ss-ErrorStatus,
ss-NotAvailable,
ss-SubscriptionViolation,
ss-Incompatibility,
pw-RegistrationFailure,
negativePW-Check,
numberOfPW-AttemptsViolation,
unknownAlphabet,
ussd-Busy,
absentSubscriber,
illegalSubscriber,
illegalEquipment,
shortTermDenial,
longTermDenial,
facilityNotSupported
FROM MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}

RegisterSS-Arg,
SS-Info,
SS-ForBS-Code,
InterrogateSS-Res,
USSD-Arg,
USSD-Res,
Password,
GuidanceInfo,
SS-InvocationNotificationArg,
SS-InvocationNotificationRes,
RegisterCC-EntryArg,
RegisterCC-EntryRes,
EraseCC-EntryArg,
EraseCC-EntryRes
FROM MAP-SS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)}

SS-Code
FROM MAP-SS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}
;

-- supplementary service handling operations

```

```

registerSS OPERATION ::= {
    ARGUMENT
        RegisterSS-Arg
    RESULT
        SS-Info
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus |
        ss-Incompatibility}
    CODE local:10 }
--Timer m

```

```

eraseSS OPERATION ::= {
    ARGUMENT
        SS-ForBS-Code
    RESULT
        SS-Info
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus
    }
    CODE local:11 }
--Timer m

```

```

activateSS OPERATION ::= {
    ARGUMENT
        SS-ForBS-Code
    RESULT
        SS-Info
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus |
        ss-SubscriptionViolation |
        ss-Incompatibility |
        negativePW-Check |
        numberOfPW-AttemptsViolation}
    CODE local:12 }
--Timer m

```

```

deactivateSS OPERATION ::= {
    ARGUMENT
        SS-ForBS-Code
    RESULT
        SS-Info
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus |
        ss-SubscriptionViolation |
        negativePW-Check |
        numberOfPW-AttemptsViolation}
    CODE local:13 }
--Timer m

```

```

interrogateSS OPERATION ::= {
    ARGUMENT
        SS-ForBS-Code
    RESULT
        InterrogateSS-Res
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        callBarred |
        illegalSS-Operation |
        ss-NotAvailable}
    CODE local:14 }
--Timer m

```

```

processUnstructuredSS-Request OPERATION ::= {
    minutes
    ARGUMENT
        USSD-Arg
    RESULT
        USSD-Res
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownAlphabet |
        callBarred}
    CODE local:59 }
--Timer 10

```

```

unstructuredSS-Request OPERATION ::= {
    ARGUMENT
        USSD-Arg
    RESULT
        USSD-Res
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        absentSubscriber |
        illegalSubscriber |
        illegalEquipment |
        unknownAlphabet |
        ussd-Busy}
    CODE local:60 }
--Timer m1

```

```

unstructuredSS-Notify OPERATION ::= {
    ARGUMENT
        USSD-Arg
    RETURN RESULT TRUE
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        absentSubscriber |
        illegalSubscriber |
        illegalEquipment |
        unknownAlphabet |
        ussd-Busy}
    CODE local:61 }
--Timer m1

```

```

registerPassword OPERATION ::= {
    ARGUMENT
        SS-Code
    RESULT
        Password
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        callBarred |
        ss-SubscriptionViolation |
        pw-RegistrationFailure |
        negativePW-Check |
        numberofPW-AttemptsViolation}
    LINKED {
        getPassword}
    CODE local:17 }
--Timer m1

```

```

getPassword OPERATION ::= {
    ARGUMENT
        GuidanceInfo
    RESULT
        Password
    CODE local:18 }
--Timer m

```

```

ss-InvocationNotification OPERATION ::= {
    ARGUMENT
        SS-InvocationNotificationArg
    RESULT
        SS-InvocationNotificationRes
        -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber}
    CODE local:72 }
--Timer m

```

```

registerCC-Entry OPERATION ::= {
    ARGUMENT
        RegisterCC-EntryArg
    RESULT
        RegisterCC-EntryRes
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus |
        ss-Incompatibility |
        shortTermDenial |
        longTermDenial |
        facilityNotSupported}
    CODE local:76 }
--Timer m

```

```

eraseCC-Entry OPERATION ::= {
    ARGUMENT
        EraseCC-EntryArg
    RESULT
        EraseCC-EntryRes
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        callBarred |
        illegalSS-Operation |
        ss-ErrorStatus}
    CODE local:77 }
--Timer m

```

END

## 17.6.5 Short message service operations

```

MAP-ShortMessageServiceOperations {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ShortMessageServiceOperations (9)
    version8 (8)}

```

## DEFINITIONS

::=

BEGIN

## EXPORTS

```
sendRoutingInfoForSM,
mo-ForwardSM,
mt-ForwardSM,
reportSM-DeliveryStatus,
alertServiceCentre,
informServiceCentre,
readyForSM
```

;

## IMPORTS

## OPERATION

```
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}
```

```
systemFailure,
dataMissing,
unexpectedDataValue,
facilityNotSupported,
unknownSubscriber,
unidentifiedSubscriber,
illegalSubscriber,
illegalEquipment,
teleserviceNotProvisioned,
callBarred,
subscriberBusyForMT-SMS,
sm-DeliveryFailure,
messageWaitingListFull,
absentSubscriberSM
```

FROM MAP-Errors {

```
itu-t identified-organization (4) etsi (0) mobileDomain (0)
gsm-Network (1) modules (3) map-Errors (10) version8 (8)}
```

```
RoutingInfoForSM-Arg,
RoutingInfoForSM-Res,
MO-ForwardSM-Arg,
MO-ForwardSM-Res,
MT-ForwardSM-Arg,
MT-ForwardSM-Res,
ReportSM-DeliveryStatusArg,
ReportSM-DeliveryStatusRes,
AlertServiceCentreArg,
InformServiceCentreArg,
ReadyForSM-Arg,
ReadyForSM-Res
```

FROM MAP-SM-DataTypes {

```
itu-t identified-organization (4) etsi (0) mobileDomain (0)
gsm-Network (1) modules (3) map-SM-DataTypes (16) version8 (8)}
```

;

```
sendRoutingInfoForSM OPERATION ::= {
    ARGUMENT
        RoutingInfoForSM-Arg
    RESULT
        RoutingInfoForSM-Res
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unknownSubscriber |
        teleserviceNotProvisioned |
        callBarred |
        absentSubscriberSM}
    CODE local:45 }
```

--Timer m

```
mo-ForwardSM OPERATION ::= { --Timer m1
    ARGUMENT
        MO-ForwardSM-Arg
    RESULT
        MO-ForwardSM-Res
        -- optional
    ERRORS {
        systemFailure |
        unexpectedDataValue |
        facilityNotSupported |
        sm-DeliveryFailure}
    CODE local:46 }
```

```
mt-ForwardSM OPERATION ::= { --Timer m1
    ARGUMENT
        MT-ForwardSM-Arg
    RESULT
        MT-ForwardSM-Res
        -- optional
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unidentifiedSubscriber |
        illegalSubscriber |
        illegalEquipment |
        subscriberBusyForMT-SMS |
        sm-DeliveryFailure |
        absentSubscriberSM}
    CODE local:44 }
```

```
reportSM-DeliveryStatus OPERATION ::= { --Timer s
    ARGUMENT
        ReportSM-DeliveryStatusArg
    RESULT
        ReportSM-DeliveryStatusRes
        -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber |
        messageWaitingListFull}
    CODE local:47 }
```

```
alertServiceCentre OPERATION ::= { --Timer s
    ARGUMENT
        AlertServiceCentreArg
    RETURN RESULT TRUE
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue}
    CODE local:64 }
```

```
informServiceCentre OPERATION ::= { --Timer s
    ARGUMENT
        InformServiceCentreArg
    CODE local:63 }
```

```
readyForSM OPERATION ::= { --Timer m
    ARGUMENT
        ReadyForSM-Arg
    RESULT
        ReadyForSM-Res
        -- optional
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unknownSubscriber}
    CODE local:66 }
```

END

## 17.6.6 Errors

```
MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}
```

DEFINITIONS

::=

BEGIN

EXPORTS

```
-- generic errors
systemFailure,
dataMissing,
unexpectedDataValue,
facilityNotSupported,
incompatibleTerminal,
resourceLimitation,

-- identification and numbering errors
unknownSubscriber,
numberChanged,
unknownMSC,
unidentifiedSubscriber,
unknownEquipment,

-- subscription errors
roamingNotAllowed,
illegalSubscriber,
illegalEquipment,
bearerServiceNotProvisioned,
teleserviceNotProvisioned,

-- handover errors
noHandoverNumberAvailable,
subsequentHandoverFailure,
targetCellOutsideGroupCallArea,

-- operation and maintenance errors
tracingBufferFull,

-- call handling errors
or-NotAllowed,
noRoamingNumberAvailable,
busySubscriber,
noSubscriberReply,
absentSubscriber,
callBarred,
forwardingViolation,
forwardingFailed,
cug-Reject,

-- any time interrogation errors
ati-NotAllowed,

-- any time information handling errors
atsi-NotAllowed,
atm-NotAllowed,
informationNotAvailable,

-- supplementary service errors
illegalSS-Operation,
ss-ErrorStatus,
ss-NotAvailable,
ss-SubscriptionViolation,
ss-Incompatibility,
unknownAlphabet,
ussd-Busy,
pw-RegistrationFailure,
negativePW-Check,
numberOfPW-AttemptsViolation,
shortTermDenial,
longTermDenial,

-- short message service errors
subscriberBusyForMT-SMS,
sm-DeliveryFailure,
messageWaitingListFull,
```

```

absentSubscriberSM,
-- Group Call errors
noGroupCallNumberAvailable,
-- location service errors
unauthorizedRequestingNetwork,
unauthorizedLCSClient,
positionMethodFailure,
unknownOrUnreachableLCSClient,
-- Mobility Management errors
mm-EventNotSupported,
-- Secure transport errors
secureTransportError

;

IMPORTS
  ERROR
FROM Remote-Operations-Information-Objects {joint-iso-itu-t remote-operations(4)
informationObjects(5) version1(0) }

SS-Status
FROM MAP-SS-DataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)}

SS-IncompatibilityCause,
PW-RegistrationFailureCause,
SM-DeliveryFailureCause,
SystemFailureParam,
DataMissingParam,
UnexpectedDataParam,
FacilityNotSupParam,
UnknownSubscriberParam,
NumberChangedParam,
UnidentifiedSubParam,
RoamingNotAllowedParam,
IllegalSubscriberParam,
IllegalEquipmentParam,
BearerServNotProvParam,
TeleservNotProvParam,
TracingBufferFullParam,
NoRoamingNbParam,
OR-NotAllowedParam,
AbsentSubscriberParam,
BusySubscriberParam,
NoSubscriberReplyParam,
CallBarredParam,
ForwardingViolationParam,
ForwardingFailedParam,
CUG-RejectParam,
ATI-NotAllowedParam,
SubBusyForMT-SMS-Param,
MessageWaitListFullParam,
AbsentSubscriberSM-Param,
ResourceLimitationParam,
NoGroupCallNbParam,
IncompatibleTerminalParam,
ShortTermDenialParam,
LongTermDenialParam,
UnauthorizedRequestingNetwork-Param,
UnauthorizedLCSClient-Param,
PositionMethodFailure-Param,
UnknownOrUnreachableLCSClient-Param,
MM-EventNotSupported-Param,
ATSI-NotAllowedParam,
ATM-NotAllowedParam,
IllegalSS-OperationParam,
SS-NotAvailableParam,
SS-SubscriptionViolationParam,
InformationNotAvailableParam,
TargetCellOutsideGCA-Param,
SecureTransportErrorParam

```

```
FROM MAP-ER-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ER-DataTypes (17) version8 (8)
};
```

-- generic errors

```
systemFailure ERROR ::= {
    PARAMETER
        SystemFailureParam
        -- optional
    CODE local:34 }
```

```
dataMissing ERROR ::= {
    PARAMETER
        DataMissingParam
        -- optional
        -- DataMissingParam must not be used in version <3
    CODE local:35 }
```

```
unexpectedDataValue ERROR ::= {
    PARAMETER
        UnexpectedDataParam
        -- optional
        -- UnexpectedDataParam must not be used in version <3
    CODE local:36 }
```

```
facilityNotSupported ERROR ::= {
    PARAMETER
        FacilityNotSupParam
        -- optional
        -- FacilityNotSupParam must not be used in version <3
    CODE local:21 }
```

```
incompatibleTerminal ERROR ::= {
    PARAMETER
        IncompatibleTerminalParam
        -- optional
    CODE local:28 }
```

```
resourceLimitation ERROR ::= {
    PARAMETER
        ResourceLimitationParam
        -- optional
    CODE local:51 }
```

-- identification and numbering errors

```
unknownSubscriber ERROR ::= {
    PARAMETER
        UnknownSubscriberParam
        -- optional
        -- UnknownSubscriberParam must not be used in version <3
    CODE local:1 }
```

```
numberChanged ERROR ::= {
    PARAMETER
        NumberChangedParam
        -- optional
    CODE local:44 }
```

```
unknownMSC ERROR ::= {
    CODE local:3 }
```

```
unidentifiedSubscriber ERROR ::= {
    PARAMETER
        UnidentifiedSubParam
        -- optional
        -- UnidentifiedSubParam must not be used in version <3
    CODE local:5 }
```

```
unknownEquipment ERROR ::= {
    CODE local:7 }
```

-- subscription errors

```
roamingNotAllowed  ERROR ::= {
    PARAMETER
        RoamingNotAllowedParam
    CODE local:8 }
```

```
illegalSubscriber  ERROR ::= {
    PARAMETER
        IllegalSubscriberParam
    -- optional
    -- IllegalSubscriberParam must not be used in version <3
    CODE local:9 }
```

```
illegalEquipment  ERROR ::= {
    PARAMETER
        IllegalEquipmentParam
    -- optional
    -- IllegalEquipmentParam must not be used in version <3
    CODE local:12 }
```

```
bearerServiceNotProvisioned  ERROR ::= {
    PARAMETER
        BearerServNotProvParam
    -- optional
    -- BearerServNotProvParam must not be used in version <3
    CODE local:10 }
```

```
teleserviceNotProvisioned  ERROR ::= {
    PARAMETER
        TeleservNotProvParam
    -- optional
    -- TeleservNotProvParam must not be used in version <3
    CODE local:11 }
```

-- handover errors

```
noHandoverNumberAvailable  ERROR ::= {
    CODE local:25 }
```

```
subsequentHandoverFailure  ERROR ::= {
    CODE local:26 }
```

```
targetCellOutsideGroupCallArea  ERROR ::= {
    PARAMETER
        TargetCellOutsideGCA-Param
    -- optional
    CODE local:42 }
```

-- operation and maintenance errors

```
tracingBufferFull  ERROR ::= {
    PARAMETER
        TracingBufferFullParam
    -- optional
    CODE local: 40 }
```

-- call handling errors

```
noRoamingNumberAvailable  ERROR ::= {
    PARAMETER
        NoRoamingNbParam
    -- optional
    CODE local:39 }
```

```
absentSubscriber  ERROR ::= {
    PARAMETER
        AbsentSubscriberParam
    -- optional
    -- AbsentSubscriberParam must not be used in version <3
    CODE local:27 }
```

```
busySubscriber ERROR ::= {
  PARAMETER
    BusySubscriberParam
    -- optional
  CODE local:45 }
```

```
noSubscriberReply ERROR ::= {
  PARAMETER
    NoSubscriberReplyParam
    -- optional
  CODE local:46 }
```

```
callBarred ERROR ::= {
  PARAMETER
    CallBarredParam
    -- optional
  CODE local:13 }
```

```
forwardingViolation ERROR ::= {
  PARAMETER
    ForwardingViolationParam
    -- optional
  CODE local:14 }
```

```
forwardingFailed ERROR ::= {
  PARAMETER
    ForwardingFailedParam
    -- optional
  CODE local:47 }
```

```
cug-Reject ERROR ::= {
  PARAMETER
    CUG-RejectParam
    -- optional
  CODE local:15 }
```

```
or-NotAllowed ERROR ::= {
  PARAMETER
    OR-NotAllowedParam
    -- optional
  CODE local:48 }
```

-- any time interrogation errors

```
ati-NotAllowed ERROR ::= {
  PARAMETER
    ATI-NotAllowedParam
    -- optional
  CODE local:49 }
```

-- any time information handling errors

```
atsi-NotAllowed ERROR ::= {
  PARAMETER
    ATSI-NotAllowedParam
    -- optional
  CODE local:60 }
```

```
atm-NotAllowed ERROR ::= {
  PARAMETER
    ATM-NotAllowedParam
    -- optional
  CODE local:61 }
```

```
informationNotAvailable ERROR ::= {
  PARAMETER
    InformationNotAvailableParam
    -- optional
  CODE local:62 }
```

-- supplementary service errors

```
illegalSS-Operation ERROR ::= {
  PARAMETER
    IllegalSS-OperationParam
    -- optional
    -- IllegalSS-OperationParam must not be used in version <3
  CODE local:16 }
```

```
ss-ErrorStatus ERROR ::= {
  PARAMETER
    SS-Status
    -- optional
  CODE local:17 }
```

```
ss-NotAvailable ERROR ::= {
  PARAMETER
    SS-NotAvailableParam
    -- optional
    -- SS-NotAvailableParam must not be used in version <3
  CODE local:18 }
```

```
ss-SubscriptionViolation ERROR ::= {
  PARAMETER
    SS-SubscriptionViolationParam
    -- optional
    -- SS-SubscriptionViolationParam must not be used in version <3
  CODE local:19 }
```

```
ss-Incompatibility ERROR ::= {
  PARAMETER
    SS-IncompatibilityCause
    -- optional
  CODE local:20 }
```

```
unknownAlphabet ERROR ::= {
  CODE local:71 }
```

```
ussd-Busy ERROR ::= {
  CODE local:72 }
```

```
pw-RegistrationFailure ERROR ::= {
  PARAMETER
    PW-RegistrationFailureCause
  CODE local:37 }
```

```
negativePW-Check ERROR ::= {
  CODE local:38 }
```

```
numberOfPW-AttemptsViolation ERROR ::= {
  CODE local:43 }
```

```
shortTermDenial ERROR ::= {
  PARAMETER
    ShortTermDenialParam
    -- optional
  CODE local:29 }
```

```
longTermDenial ERROR ::= {
  PARAMETER
    LongTermDenialParam
    -- optional
  CODE local:30 }
```

-- short message service errors

```
subscriberBusyForMT-SMS ERROR ::= {
  PARAMETER
    SubBusyForMT-SMS-Param
    -- optional
  CODE local:31 }
```

```
sm-DeliveryFailure ERROR ::= {
  PARAMETER
    SM-DeliveryFailureCause
  CODE local:32 }
```

```
messageWaitingListFull ERROR ::= {
  PARAMETER
    MessageWaitListFullParam
    -- optional
  CODE local:33 }
```

```
absentSubscriberSM ERROR ::= {
  PARAMETER
    AbsentSubscriberSM-Param
    -- optional
  CODE local:6 }
```

-- Group Call errors

```
noGroupCallNumberAvailable ERROR ::= {
  PARAMETER
    NoGroupCallNbParam
    -- optional
  CODE local:50 }
```

-- location service errors

```
unauthorizedRequestingNetwork ERROR ::= {
  PARAMETER
    UnauthorizedRequestingNetwork-Param
    -- optional
  CODE local:52 }
```

```
unauthorizedLCSClient ERROR ::= {
  PARAMETER
    UnauthorizedLCSClient-Param
    -- optional
  CODE local:53 }
```

```
positionMethodFailure ERROR ::= {
  PARAMETER
    PositionMethodFailure-Param
    -- optional
  CODE local:54 }
```

```
unknownOrUnreachableLCSClient ERROR ::= {
  PARAMETER
    UnknownOrUnreachableLCSClient-Param
    -- optional
  CODE local:58 }
```

```
mm-EventNotSupported ERROR ::= {
  PARAMETER
    MM-EventNotSupported-Param
    -- optional
  CODE local:59 }
```

-- Secure transport errors

```
secureTransportError ERROR ::= {
  PARAMETER
    SecureTransportErrorParam
  CODE local:4 }
```

END

## 17.6.7 Group Call operations

```
MAP-Group-Call-Operations {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-Group-Call-Operations (22)
  version8 (8)}
```

DEFINITIONS

::=

BEGIN

```
EXPORTS
  prepareGroupCall,
```

```

sendGroupCallEndSignal,
forwardGroupCallSignalling,
processGroupCallSignalling
;

IMPORTS
    OPERATION
FROM Remote-Operations-Information-Objects {
    joint-iso-itu-t remote-operations(4)
    informationObjects(5) version1(0)}

    systemFailure,
    unexpectedDataValue,
    noGroupCallNumberAvailable
FROM MAP-Errors {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-Errors (10) version8 (8)}

    PrepareGroupCallArg,
    PrepareGroupCallRes,
    SendGroupCallEndSignalArg,
    SendGroupCallEndSignalRes,
    ForwardGroupCallSignallingArg,
    ProcessGroupCallSignallingArg
FROM MAP-GR-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-GR-DataTypes (23) version8 (8)}
;
```

<b>prepareGroupCall</b> OPERATION ::= {	--Timer m
ARGUMENT	
PrepareGroupCallArg	
RESULT	
PrepareGroupCallRes	
ERRORS {	
systemFailure	
noGroupCallNumberAvailable	
unexpectedDataValue}	
CODE local:39 }	

<b>sendGroupCallEndSignal</b> OPERATION ::= {	--Timer l
ARGUMENT	
SendGroupCallEndSignalArg	
RESULT	
SendGroupCallEndSignalRes	
CODE local:40 }	

<b>processGroupCallSignalling</b> OPERATION ::= {	--Timer s
ARGUMENT	
ProcessGroupCallSignallingArg	
CODE local:41 }	

<b>forwardGroupCallSignalling</b> OPERATION ::= {	--Timer s
ARGUMENT	
ForwardGroupCallSignallingArg	
CODE local:42 }	

END

## 17.6.8 Location service operations

```

1 MAP-LocationServiceOperations {
2     itu-t identified-organization (4) etsi (0) mobileDomain (0)
3     gsm-Network (1) modules (3) map-LocationServiceOperations (24)
4     version8 (8)}
5
6 DEFINITIONS
7
8 ::==
9
10 BEGIN
11
12 EXPORTS
13     provideSubscriberLocation,
14     sendRoutingInfoForLCS,
15     subscriberLocationReport
16 ;
17
18 IMPORTS
19     OPERATION
20 FROM Remote-Operations-Information-Objects {
21     joint-iso-itu-t remote-operations(4)
22     informationObjects(5) version1(0)}
23
24     systemFailure,
25     dataMissing,
26     unexpectedDataValue,
27     facilityNotSupported,
28     unknownSubscriber,
29     absentSubscriber,
30     unauthorizedRequestingNetwork,
31     unauthorizedLCSClient,
32     positionMethodFailure,
33     resourceLimitation,
34     unknownOrUnreachableLCSClient,
35     unidentifiedSubscriber,
36     illegalEquipment,
37     illegalSubscriber
38 FROM MAP-Errors {
39     itu-t identified-organization (4) etsi (0) mobileDomain (0)
40     gsm-Network (1) modules (3) map-Errors (10) version8 (8)}
41
42     RoutingInfoForLCS-Arg,
43     RoutingInfoForLCS-Res,
44     ProvideSubscriberLocation-Arg,
45     ProvideSubscriberLocation-Res,
46     SubscriberLocationReport-Arg,
47     SubscriberLocationReport-Res
48 FROM MAP-LCS-DataTypes {
49     itu-t identified-organization (4) etsi (0) mobileDomain (0)
50     gsm-Network (1) modules (3) map-LCS-DataTypes (25) version8 (8)}
51 ;
52
53 sendRoutingInfoForLCS OPERATION ::= { --Timer m
54     ARGUMENT
55         RoutingInfoForLCS-Arg
56     RESULT
57         RoutingInfoForLCS-Res
58     ERRORS {
59         systemFailure |
60         dataMissing |
61         unexpectedDataValue |
62         facilityNotSupported |
63         unknownSubscriber |
64         absentSubscriber |
65         unauthorizedRequestingNetwork }
66     CODE local:85 }
67

```

```

68 provideSubscriberLocation OPERATION ::= {                                --Timer m1
69   ARGUMENT
70     ProvideSubscriberLocation-Arg
71   RESULT
72     ProvideSubscriberLocation-Res
73   ERRORS {
74     systemFailure |
75     dataMissing |
76     unexpectedDataValue |
77     facilityNotSupported |
78     unidentifiedSubscriber |
79     illegalSubscriber |
80     illegalEquipment |
81     absentSubscriber |
82     unauthorizedRequestingNetwork |
83     unauthorizedLCSClient |
84     positionMethodFailure }
85   CODE local:83 }

86
87 subscriberLocationReport OPERATION ::= {                                --Timer m
88   ARGUMENT
89     SubscriberLocationReport-Arg
90   RESULT
91     SubscriberLocationReport-Res
92   ERRORS {
93     systemFailure |
94     dataMissing |
95     resourceLimitation |
96     unexpectedDataValue |
97     unknownSubscriber |
98     unauthorizedRequestingNetwork |
99     unknownOrUnreachableLCSClient}
100  CODE local:86 }

101
102
103 END
1

```

## 17.6.9 Secure transport operations

```

MAP-SecureTransportOperations {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-SecureTransportOperations (26)
  version8 (8) }

DEFINITIONS ::=

BEGIN

EXPORTS
  secureTransportClass1,
  secureTransportClass2,
  secureTransportClass3,
  secureTransportClass4
;

IMPORTS
  OPERATION
FROM Remote-Operations-Information-Objects {
  joint-iso-itu-t remote-operations(4)
  informationObjects(5) version1(0)}

  dataMissing,
  secureTransportError,
  unexpectedDataValue

FROM MAP-Errors {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-Errors (10) version8 (8)}

  SecureTransportArg,
  SecureTransportRes

FROM MAP-ST-DataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-ST-DataTypes (27) version8 (8)}

```

```

;

secureTransportClass1 OPERATION ::= {                                --Timer shall be the same as for the
                                         --securely transported operation

    ARGUMENT
        SecureTransportArg
    RESULT
        SecureTransportRes
    ERRORS {
        secureTransportError |
        dataMissing |
        unexpectedDataValue}
    CODE local:78 }

secureTransportClass2 OPERATION ::= {                                --Timer shall be the same as for the
                                         --securely transported operation

    ARGUMENT
        SecureTransportArg
    ERRORS {
        secureTransportError |
        dataMissing |
        unexpectedDataValue}
    CODE local:79 }

secureTransportClass3 OPERATION ::= {                                --Timer shall be the same as for the
                                         --securely transported operation

    ARGUMENT
        SecureTransportArg
    RESULT
        SecureTransportRes
    CODE local:80 }

secureTransportClass4 OPERATION ::= {                                --Timer shall be the same as for the
                                         --securely transported operation

    ARGUMENT
        SecureTransportArg
    CODE local:81 }

```

END

## 17.7 MAP constants and data types

### 17.7.1 Mobile Service data types

```

MAP-MS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-MS-DataTypes (11) version8 (8)}

DEFINITIONS

IMPLICIT TAGS

::=


BEGIN

EXPORTS

    -- location registration types
    UpdateLocationArg,
    UpdateLocationRes,
    CancelLocationArg,
    CancelLocationRes,
    PurgeMS-Arg,
    PurgeMS-Res,
    SendIdentificationArg,
    SendIdentificationRes,
    UpdateGprsLocationArg,
    UpdateGprsLocationRes,
    IST-SupportIndicator,
    SupportedLCS-CapabilitySets,

    -- gprs location registration types

```

```

GSN-Address,

-- handover types
ForwardAccessSignalling-Arg,
PrepareHO-Arg,
PrepareHO-Res,
PrepareSubsequentHO-Arg,
PrepareSubsequentHO-Res,
ProcessAccessSignalling-Arg,
SendEndSignal-Arg,
SendEndSignal-Res,

-- authentication management types
SendAuthenticationInfoArg,
SendAuthenticationInfoRes,
AuthenticationFailureReportArg,
AuthenticationFailureReportRes,

-- security management types
EquipmentStatus,
Kc,

-- subscriber management types
InsertSubscriberDataArg,
InsertSubscriberDataRes,
LSAIdentity,
DeleteSubscriberDataArg,
DeleteSubscriberDataRes,
Ext-QoS-Subscribed,
SubscriberData,
ODB-Data,
SubscriberStatus,
ZoneCodeList,
maxNumOfZoneCodes,
O-CSI,
D-CSI,
O-BcsmCamelTDPCriteriaList,
T-BCSM-CAMEL-TDP-CriteriaList,
SS-CSI,
ServiceKey,
DefaultCallHandling,
CamelCapabilityHandling,
BasicServiceCriteria,
SupportedCamelPhases,
OfferedCamel4CSIs,
OfferedCamel4Functionalities,
maxNumOfCamelTDPData,
CUG-Index,
CUG-Info,
CUG-Interlock,
InterCUG-Restrictions,
IntraCUG-Options,
NotificationToMSUser,
QoS-Subscribed,
IST-AlertTimerValue,
T-CSI,
T-BcsmTriggerDetectionPoint,
APN,

-- fault recovery types
ResetArg,
RestoreDataArg,
RestoreDataRes,

-- provide subscriber info types
GeographicalInformation,
MS-Classmark2,
GPRSMSClass,

-- subscriber information enquiry types
ProvideSubscriberInfoArg,
ProvideSubscriberInfoRes,
SubscriberInfo,
LocationInformation,
LocationInformationGPRS,
RAIdentity,
SubscriberState,
GPRSChargingID,

```

```

-- any time information enquiry types
AnyTimeInterrogationArg,
AnyTimeInterrogationRes,

-- any time information handling types
AnyTimeSubscriptionInterrogationArg,
AnyTimeSubscriptionInterrogationRes,
AnyTimeModificationArg,
AnyTimeModificationRes,

-- subscriber data modification notification types
NoteSubscriberDataModifiedArg,
NoteSubscriberDataModifiedRes,

-- gprs location information retrieval types
SendRoutingInfoForGprsArg,
SendRoutingInfoForGprsRes,

-- failure reporting types
FailureReportArg,
FailureReportRes,

-- gprs notification types
NoteMsPresentForGprsArg,
NoteMsPresentForGprsRes,

-- Mobility Management types
NoteMM-EventArg,
NoteMM-EventRes

;

IMPORTS
  maxNumOfSS,
  SS-SubscriptionOption,
  SS-List,
  SS-ForBS-Code,
  Password
FROM MAP-SS-DataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)}

  SS-Code
FROM MAP-SS-Code {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}

  Ext-BearerServiceCode
FROM MAP-BS-Code {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-BS-Code (20) version8 (8)}

  Ext-TeleserviceCode
FROM MAP-TS-Code {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-TS-Code (19) version8 (8)}

AddressString,
ISDN-AddressString,
ISDN-SubaddressString,
FTN-AddressString,
AccessNetworkSignalInfo,
IMSI,
IMEI,
TMSI,
HLR-List,
LMSI,
Identity,
GlobalCellId,
CellGlobalIdOrServiceAreaIdOrLAI,
Ext-BasicServiceCode,
NAEA-PreferredCI,
EMLPP-Info,
MC-SS-Info,
SubscriberIdentity,

```

```

AgeOfLocationInformation,
LCSClientExternalID,
LCSClientInternalID,
Ext-SS-Status,
LCSServiceTypeID,
ASCI-CallReference
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}

    AbsentSubscriberDiagnosticSM
FROM MAP-ER-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ER-DataTypes (17) version8 (8)}

;

-- location registration types

```

<b>UpdateLocationArg</b> ::= SEQUENCE {		
imsi	IMSI,	
msc-Number	[1] ISDN-AddressString,	
vlr-Number	ISDN-AddressString,	
lmsi	[10] LMSI OPTIONAL,	
extensionContainer	ExtensionContainer	OPTIONAL,
...		
vlr-Capability	[6] VLR-Capability	OPTIONAL,
informPreviousNetworkEntity	[11] NULL	OPTIONAL,
cs-LCS-NotSupportedByUE	[12] NULL	OPTIONAL }

<b>VLR-Capability</b> ::= SEQUENCE{		
supportedCamelPhases	[0] SupportedCamelPhases	OPTIONAL,
extensionContainer	ExtensionContainer	OPTIONAL,
...		
solsaSupportIndicator	[2] NULL	OPTIONAL,
istSupportIndicator	[1] IST-SupportIndicator	OPTIONAL,
superChargerSupportedInServingNetworkEntity	[3] SuperChargerInfo	OPTIONAL,
longFTN-Supported	[4] NULL	OPTIONAL,
supportedLCS-CapabilitySets	[5] SupportedLCS-CapabilitySets	OPTIONAL,
offeredCamel4CSIs	[6] OfferedCamel4CSIs	OPTIONAL }

<b>SuperChargerInfo</b> ::= CHOICE {		
sendSubscriberData	[0] NULL,	
subscriberDataStored	[1] AgeIndicator }	

<b>AgeIndicator</b> ::= OCTET STRING (SIZE (1..6))		
-- The internal structure of this parameter is implementation specific.		

<b>IST-SupportIndicator</b> ::= ENUMERATED {		
basicISTSupported	(0),	
istCommandSupported	(1),	
...		
-- exception handling:		
-- reception of values > 1 shall be mapped to ' istCommandSupported '		

<b>SupportedLCS-CapabilitySets</b> ::= BIT STRING {		
lcsCapabilitySet1 (0),		
lcsCapabilitySet2 (1),		
lcsCapabilitySet3 (2) } (SIZE (2..16))		
-- Core network signalling capability set1 indicates LCS Release98 or Release99 version.		
-- Core network signalling capability set2 indicates LCS Release4.		
-- Core network signalling capability set3 indicates LCS Release5 or later version.		
-- A node shall mark in the BIT STRING all LCS capability sets it supports.		
-- If no bit is set then the sending node does not support LCS.		
-- If the parameter is not sent by an VLR then the VLR may support at most capability set1.		
-- If the parameter is not sent by an SGSN then no support for LCS is assumed.		
-- An SGSN is not allowed to indicate support of capability set1.		
-- Other bits than listed above shall be discarded.		

```
UpdateLocationRes ::= SEQUENCE {
    hlr-Number                               ISDN-AddressString,
    extensionContainer                         ExtensionContainer
    ... }                                     OPTIONAL,
```

```
CancelLocationArg ::= [3] SEQUENCE {
    identity                                Identity,
    cancellationType                         CancellationType
    extensionContainer                       ExtensionContainer
    ... }                                     OPTIONAL,
                                                OPTIONAL,
```

```
CancellationType ::= ENUMERATED {
    updateProcedure                          (0),
    subscriptionWithdraw                   (1),
    ... }
-- The HLR shall not send values other than listed above
```

```
CancelLocationRes ::= SEQUENCE {
    extensionContainer                       ExtensionContainer
    ... }                                     OPTIONAL,
```

```
PurgeMS-Arg ::= [3] SEQUENCE {
    imsi                                    IMSI,
    vlr-Number                             [0] ISDN-AddressString
    sgsn-Number                            [1] ISDN-AddressString
    extensionContainer                     ExtensionContainer
    ... }                                     OPTIONAL,
                                                OPTIONAL,
                                                OPTIONAL,
```

```
PurgeMS-Res ::= SEQUENCE {
    freezeTMSI                             [0] NULL
    freezeP-TMSI                           [1] NULL
    extensionContainer                     ExtensionContainer
    ... }                                     OPTIONAL,
                                                OPTIONAL,
                                                OPTIONAL,
```

```
SendIdentificationArg ::= SEQUENCE {
    tmsi                                    TMSI,
    numberRequestedVectors                 NumberOfRequestedVectors
    ... }
-- within a dialogue numberRequestedVectors shall be present in
-- the first service request and shall not be present in subsequent service requests.
-- If received in a subsequent service request it shall be discarded.
    segmentationProhibited                NULL
    extensionContainer                     ExtensionContainer
    ... }                                     OPTIONAL,
                                                OPTIONAL,
```

```
SendIdentificationRes ::= [3] SEQUENCE {
    imsi                                    IMSI
    ... }
-- IMSI shall be present in the first (or only) service response of a dialogue.
-- If multiple service requests are present in a dialogue then IMSI
-- shall not be present in any service response other than the first one.
    authenticationSetList                  AuthenticationSetList
    currentSecurityContext                [2] CurrentSecurityContext
    extensionContainer                   [3] ExtensionContainer
    ... }                                     OPTIONAL,
                                                OPTIONAL,
                                                OPTIONAL,
```

-- authentication management types

```
AuthenticationSetList ::= CHOICE {
    tripletList                            [0] TripletList,
    quintupletList                         [1] QuintupletList }
```

```
TripletList ::= SEQUENCE SIZE (1..5) OF
    AuthenticationTriplet
```

```
QuintupletList ::= SEQUENCE SIZE (1..5) OF
    AuthenticationQuintuplet
```

```
AuthenticationTriplet ::= SEQUENCE {
    rand                                   RAND,
    sres                                   SRES,
    kc                                    KC,
    ... }
```

```
AuthenticationQuintuplet ::= SEQUENCE {
    rand                               RAND,
    xres                                XRES,
    ck                                    CK,
    ik                                    IK,
    autn                                AUTN,
    ...
}
```

```
CurrentSecurityContext ::= CHOICE {
    gsm-SecurityContextData      [0] GSM-SecurityContextData,
    umts-SecurityContextData     [1] UMTS-SecurityContextData }
```

```
GSM-SecurityContextData ::= SEQUENCE {
    kc                                Kc,
    cksn                             Cksn,
    ...
}
```

```
UMTS-SecurityContextData ::= SEQUENCE {
    ck                                CK,
    ik                                IK,
    ksi                               KSI,
    ...
}
```

```
RAND ::= OCTET STRING (SIZE (16))
```

```
SRES ::= OCTET STRING (SIZE (4))
```

```
Kc ::= OCTET STRING (SIZE (8))
```

```
XRES ::= OCTET STRING (SIZE (4..16))
```

```
CK ::= OCTET STRING (SIZE (16))
```

```
IK ::= OCTET STRING (SIZE (16))
```

```
AUTN ::= OCTET STRING (SIZE (16))
```

```
AUTS ::= OCTET STRING (SIZE (14))
```

```
Cksn ::= OCTET STRING (SIZE (1))
-- The internal structure is defined in 3GPP TS 24.008
```

```
KSI ::= OCTET STRING (SIZE (1))
-- The internal structure is defined in 3GPP TS 24.008
```

```
AuthenticationFailureReportArg ::= SEQUENCE {
    imsi                               IMSI,
    failureCause                      FailureCause,
    extensionContainer                ExtensionContainer OPTIONAL,
    ...
    re-attempt                         BOOLEAN OPTIONAL,
    accessType                         AccessType OPTIONAL,
    rand                                RAND OPTIONAL,
    vlr-Number                         [0] ISDN-AddressString OPTIONAL,
    sgsn-Number                         [1] ISDN-AddressString OPTIONAL }
```

```
AccessType ::= ENUMERATED {
    call (0),
    emergencyCall (1),
    locationUpdating (2),
    supplementaryService (3),
    shortMessage (4),
    gprsAttach (5),
    routingAreaUpdating (6),
    serviceRequest (7),
    pdpContextActivation (8),
    pdpContextDeactivation (9),
    ...
}
-- exception handling:
-- received values greater than 9 shall be ignored.
```

```
AuthenticationFailureReportRes ::= SEQUENCE {
    extensionContainer                ExtensionContainer OPTIONAL,
    ...
}
```

```
FailureCause ::= ENUMERATED {
```

```
wrongUserResponse (0),
wrongNetworkSignature (1)}
```

-- gprs location registration types

<b>UpdateGprsLocationArg</b> ::= SEQUENCE {		
imsi	IMSI,	
sgsn-Number	ISDN-AddressString,	
sgsn-Address	GSN-Address,	
extensionContainer	ExtensionContainer	OPTIONAL,
...		
sgsn-Capability	[0] SGSN-Capability	OPTIONAL,
informPreviousNetworkEntity	[1] NULL	OPTIONAL,
ps-LCS-NotSupportedByUE	[2] NULL	OPTIONAL }

<b>SGSN-Capability</b> ::= SEQUENCE{		
solsaSupportIndicator	NULL	OPTIONAL,
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		
superChargerSupportedInServingNetworkEntity	[2] SuperChargerInfo	OPTIONAL ,
gprsEnhancementsSupportIndicator	[3] NULL	OPTIONAL,
supportedCamelPhases	[4] SupportedCamelPhases	OPTIONAL,
supportedLCS-CapabilitySets	[5] SupportedLCS-CapabilitySets	OPTIONAL,
offeredCamel4CSIs	[6] OfferedCamel4CSIs	OPTIONAL }

<b>GSN-Address</b> ::= OCTET STRING (SIZE (5..17))		
-- Octets are coded according to TS 3GPP TS 23.003 [17]		

<b>UpdateGprsLocationRes</b> ::= SEQUENCE {		
hlr-Number	ISDN-AddressString,	
extensionContainer	ExtensionContainer	OPTIONAL,
...		

-- handover types

<b>ForwardAccessSignalling-Arg</b> ::= [3] SEQUENCE {		
an-APDU	AccessNetworkSignalInfo,	
integrityProtectionInfo	[0] IntegrityProtectionInformation	OPTIONAL,
encryptionInfo	[1] EncryptionInformation	OPTIONAL,
keyStatus	[2] KeyStatus	OPTIONAL,
allowedGSM-Algorithms	[4] AllowedGSM-Algorithms	OPTIONAL,
allowedUMTS-Algorithms	[5] AllowedUMTS-Algorithms	OPTIONAL,
radioResourceInformation	[6] RadioResourceInformation	OPTIONAL,
extensionContainer	[3] ExtensionContainer	OPTIONAL,
...		
radioResourceList	[7] RadioResourceList	OPTIONAL,
bssmap-ServiceHandover	[9] BSSMAP-ServiceHandover	OPTIONAL,
ranap-ServiceHandover	[8] RANAP-ServiceHandover	OPTIONAL,
bssmap-ServiceHandoverList	[10] BSSMAP-ServiceHandoverList	OPTIONAL,
currentlyUsedCodec	[11] Codec	OPTIONAL,
availableCodecsList	[12] AvailableCodecsList	OPTIONAL,
rab-ConfigurationIndicator	[13] NULL	OPTIONAL }

<b>AllowedGSM-Algorithms</b> ::= OCTET STRING (SIZE (1))		
-- internal structure is coded as Algorithm identifier octet from		
-- Permitted Algorithms defined in 3GPP TS 48.008		
-- A node shall mark all GSM algorithms that are allowed in MSC-B		

<b>AllowedUMTS-Algorithms</b> ::= SEQUENCE {		
integrityProtectionAlgorithms	[0] PermittedIntegrityProtectionAlgorithms	
OPTIONAL,		
encryptionAlgorithms	[1] PermittedEncryptionAlgorithms	OPTIONAL,
extensionContainer	[2] ExtensionContainer	OPTIONAL,
...		

<b>PermittedIntegrityProtectionAlgorithms</b> ::=	OCTET STRING (SIZE (1..maxPermittedIntegrityProtectionAlgorithmsLength))	
-- Octets contain a complete PermittedIntegrityProtectionAlgorithms data type		
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme		
-- mandated by 3GPP TS 25.413.		
-- Padding bits are included, if needed, in the least significant bits of the		
-- last octet of the octet string.		

<b>maxPermittedIntegrityProtectionAlgorithmsLength</b> INTEGER ::= 9		
--	--	--

```
PermittedEncryptionAlgorithms ::= OCTET STRING (SIZE (1..maxPermittedEncryptionAlgorithmsLength))
-- Octets contain a complete PermittedEncryptionAlgorithms data type
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme
-- mandated by 3GPP TS 25.413
-- Padding bits are included, if needed, in the least significant bits of the
-- last octet of the octet string.
```

```
maxPermittedEncryptionAlgorithmsLength INTEGER ::= 9
```

```
KeyStatus ::= ENUMERATED {
  old (0),
  new (1),
  ...
}
-- exception handling:
-- received values in range 2-31 shall be treated as "old"
-- received values greater than 31 shall be treated as "new"
```

<b>PrepareHO-Arg</b> ::= [ 3 ] SEQUENCE {			
targetCellId	[ 0 ] GlobalCellId	OPTIONAL,	
ho-NumberNotRequired	NULL	OPTIONAL,	
targetRNCId	[ 1 ] RNCId	OPTIONAL,	
an-APDU	[ 2 ] AccessNetworkSignalInfo	OPTIONAL,	
multipleBearerRequested	[ 3 ] NULL	OPTIONAL,	
imsi	[ 4 ] IMSI	OPTIONAL,	
integrityProtectionInfo	[ 5 ] IntegrityProtectionInformation	OPTIONAL,	
encryptionInfo	[ 6 ] EncryptionInformation	OPTIONAL,	
radioResourceInformation	[ 7 ] RadioResourceInformation	OPTIONAL,	
allowedGSM-Algorithms	[ 9 ] AllowedGSM-Algorithms	OPTIONAL,	
allowedUMTS-Algorithms	[ 10 ] AllowedUMTS-Algorithms	OPTIONAL,	
radioResourceList	[ 11 ] RadioResourceList	OPTIONAL,	
extensionContainer	[ 8 ] ExtensionContainer	OPTIONAL,	
...			
rab-Id	[ 12 ] RAB-Id	OPTIONAL,	
bssmap-ServiceHandover	[ 13 ] BSSMAP-ServiceHandover	OPTIONAL,	
ranap-ServiceHandover	[ 14 ] RANAP-ServiceHandover	OPTIONAL,	
bssmap-ServiceHandoverList	[ 15 ] BSSMAP-ServiceHandoverList	OPTIONAL,	
asciCallReference	[ 20 ] ASCI-CallReference	OPTIONAL,	
geran-classmark	[ 16 ] GERAN-Classmark	OPTIONAL,	
currentlyUsedCodec	[ 17 ] Codec	OPTIONAL,	
availableCodecsList	[ 18 ] AvailableCodecsList	OPTIONAL,	
rab-ConfigurationIndicator	[ 19 ] NULL	OPTIONAL,	}

```
BSSMAP-ServiceHandoverList ::= SEQUENCE SIZE (1.. maxNumOfServiceHandovers) OF
BSSMAP-ServiceHandoverInfo
```

```
BSSMAP-ServiceHandoverInfo ::= SEQUENCE {
  bssmap-ServiceHandover           BSSMAP-ServiceHandover,
  rab-Id                           RAB-Id,
  ...
}
-- RAB Identity is needed to relate the service handovers with the radio access bearers.
```

```
maxNumOfServiceHandovers INTEGER ::= 7
```

```
BSSMAP-ServiceHandover ::= OCTET STRING (SIZE (1))
-- Octets are coded according the Service Handover information element in
-- 3GPP TS 48.008.
```

```
RANAP-ServiceHandover ::= OCTET STRING (SIZE (1))
-- Octet contains a complete Service-Handover data type
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme
-- mandated by 3GPP TS 25.413
-- Padding bits are included in the least significant bits.
```

```
RadioResourceList ::= SEQUENCE SIZE (1.. maxNumOfRadioResources) OF
RadioResource
```

```
RadioResource ::= SEQUENCE {
  radioResourceInformation          RadioResourceInformation,
  rab-Id                           RAB-Id,
  ...
}
-- RAB Identity is needed to relate the radio resources with the radio access bearers.
```

```
maxNumOfRadioResources INTEGER ::= 7
```

```
PrepareHO-Res ::= [3] SEQUENCE {
    handoverNumber [0] ISDN-AddressString OPTIONAL,
    relocationNumberList [1] RelocationNumberList OPTIONAL,
    an-APDU [2] AccessNetworkSignalInfo OPTIONAL,
    multicallBearerInfo [3] MulticallBearerInfo OPTIONAL,
    multipleBearerNotSupported NULL OPTIONAL,
    selectedUMTS-Algorithms [5] SelectedUMTS-Algorithms OPTIONAL,
    chosenRadioResourceInformation [6] ChosenRadioResourceInformation OPTIONAL,
    extensionContainer [4] ExtensionContainer OPTIONAL,
    ...
    selectedCodec [7] Codec OPTIONAL }
```

```
SelectedUMTS-Algorithms ::= SEQUENCE {
    integrityProtectionAlgorithm [0] ChosenIntegrityProtectionAlgorithm OPTIONAL,
    encryptionAlgorithm [1] ChosenEncryptionAlgorithm OPTIONAL,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ... }
```

**ChosenIntegrityProtectionAlgorithm** ::= OCTET STRING (SIZE (1))  
-- Octet contains a complete IntegrityProtectionAlgorithm data type  
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme  
-- mandated by 3GPP TS 25.413  
-- Padding bits are included in the least significant bits.

**ChosenEncryptionAlgorithm** ::= OCTET STRING (SIZE (1))  
-- Octet contains a complete EncryptionAlgorithm data type  
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme  
-- mandated by 3GPP TS 25.413  
-- Padding bits are included in the least significant bits.

```
ChosenRadioResourceInformation ::= SEQUENCE {
    chosenChannelInfo [0] ChosenChannelInfo OPTIONAL,
    chosenSpeechVersion [1] ChosenSpeechVersion OPTIONAL,
    ... }
```

**ChosenChannelInfo** ::= OCTET STRING (SIZE (1))  
-- Octets are coded according the Chosen Channel information element in 3GPP TS 48.008

**ChosenSpeechVersion** ::= OCTET STRING (SIZE (1))  
-- Octets are coded according the Speech Version (chosen) information element in 3GPP TS 48.008

```
PrepareSubsequentHO-Arg ::= [3] SEQUENCE {
    targetCellId [0] GlobalCellId OPTIONAL,
    targetMSC-Number [1] ISDN-AddressString,
    targetRNCId [2] RNCId OPTIONAL,
    an-APDU [3] AccessNetworkSignalInfo OPTIONAL,
    selectedRab-Id [4] RAB-Id OPTIONAL,
    extensionContainer [5] ExtensionContainer OPTIONAL,
    ...
    geran-classmark [6] GERAN-Classmark OPTIONAL,
    rab-ConfigurationIndicator [7] NULL OPTIONAL }
```

```
PrepareSubsequentHO-Res ::= [3] SEQUENCE {
    an-APDU AccessNetworkSignalInfo,
    extensionContainer [0] ExtensionContainer OPTIONAL,
    ... }
```

```
ProcessAccessSignalling-Arg ::= [3] SEQUENCE {
    an-APDU AccessNetworkSignalInfo,
    selectedUMTS-Algorithms [1] SelectedUMTS-Algorithms OPTIONAL,
    selectedGSM-Algorithm [2] SelectedGSM-Algorithm OPTIONAL,
    chosenRadioResourceInformation [3] ChosenRadioResourceInformation OPTIONAL,
    selectedRab-Id [4] RAB-Id OPTIONAL,
    extensionContainer [0] ExtensionContainer OPTIONAL,
    ...
    selectedCodec [5] Codec OPTIONAL }
```

```
AvailableCodecsList ::= SEQUENCE {
    utranCodecList [0] CodecList OPTIONAL,
    geranCodecList [1] CodecList OPTIONAL,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ...
}
```

```
CodecList ::= SEQUENCE {
    codec1 [1] Codec OPTIONAL,
    codec2 [2] Codec OPTIONAL,
    codec3 [3] Codec OPTIONAL,
    codec4 [4] Codec OPTIONAL,
    codec5 [5] Codec OPTIONAL,
    codec6 [6] Codec OPTIONAL,
    codec7 [7] Codec OPTIONAL,
    codec8 [8] Codec OPTIONAL,
    extensionContainer [9] ExtensionContainer OPTIONAL,
    ...
}
-- Codecs are sent in priority order where codec1 has highest priority
```

```
Codec ::= OCTET STRING (SIZE (1..4))
```

-- The internal structure is defined as follows:  
 -- octet 1 Coded as Codec Identification code in 3GPP TS 26.103  
 -- octets 2,3,4 Parameters for the Codec as defined in 3GPP TS 26.103, if available, length depending on the codec

```
GERAN-Classmark ::= OCTET STRING (SIZE (2..87))
```

-- Octets are coded according the GERAN Classmark information element in 3GPP TS 48.008

```
SelectedGSM-Algorithm ::= OCTET STRING (SIZE (1))
```

-- internal structure is coded as Algorithm identifier octet from Chosen Encryption  
 -- Algorithm defined in 3GPP TS 48.008  
 -- A node shall mark only the selected GSM algorithm

```
SendEndSignal-Arg ::= [3] SEQUENCE {
```

an-APDU	AccessNetworkSignalInfo,
extensionContainer	[0] ExtensionContainer OPTIONAL,
...	

```
SendEndSignal-Res ::= SEQUENCE {
```

extensionContainer	[0] ExtensionContainer OPTIONAL,
...	

```
RNCId ::= OCTET STRING (SIZE (7))
```

-- The internal structure is defined as follows:  
 -- octet 1 bits 4321 Mobile Country Code 1st digit  
 -- bits 8765 Mobile Country Code 2nd digit  
 -- octet 2 bits 4321 Mobile Country Code 3rd digit  
 -- bits 8765 Mobile Network Code 3rd digit  
 -- or filler (1111) for 2 digit MNCs  
 -- octet 3 bits 4321 Mobile Network Code 1st digit  
 -- bits 8765 Mobile Network Code 2nd digit  
 -- octets 4 and 5 Location Area Code according to 3GPP TS 24.008  
 -- octets 6 and 7 RNC Id value according to 3GPP TS 25.413

```
RelocationNumberList ::= SEQUENCE SIZE (1..maxNumOfRelocationNumber) OF
    RelocationNumber
```

```
MulticallBearerInfo ::= INTEGER (1..maxNumOfRelocationNumber)
```

```
RelocationNumber ::= SEQUENCE {
```

handoverNumber	ISDN-AddressString,
rab-Id	RAB-Id,
...	-- RAB Identity is needed to relate the calls with the radio access bearers.

```
RAB-Id ::= INTEGER (1..maxNrOfRABs)
```

```
maxNrOfRABs INTEGER ::= 255
```

```
maxNumOfRelocationNumber INTEGER ::= 7
```

**RadioResourceInformation** ::= OCTET STRING (SIZE (3..13))  
-- Octets are coded according the Channel Type information element in 3GPP TS 48.008

```
IntegrityProtectionInformation ::= OCTET STRING (SIZE (18..maxNumOfIntegrityInfo))
    -- Octets contain a complete IntegrityProtectionInformation data type
    -- as defined in 3GPP TS 25.413, encoded according to the encoding scheme
    -- mandated by 3GPP TS 25.413
    -- Padding bits are included, if needed, in the least significant bits of the
    -- last octet of the octet string.
```

```
maxNumberOfIntegrityInfo INTEGER ::= 100
```

```
EncryptionInformation ::= OCTET STRING (SIZE (18..maxNumOfEncryptionInfo))
-- Octets contain a complete EncryptionInformation data type
-- as defined in 3GPP TS 25.413, encoded according to the encoding scheme
-- mandated by 3GPP TS 25.413
-- Padding bits are included, if needed, in the least significant bits of the
-- last octet of the octet string.
```

```
maxNumberOfEncryptionInfo INTEGER ::= 100
```

-- authentication management types

```

SendAuthenticationInfoArg ::= SEQUENCE {
    imsI [0] IMSI,
    numberOfRequestedVectors NumberOfRequestedVectors,
    segmentationProhibited NULL OPTIONAL,
    immediateResponsePreferred [1] NULL OPTIONAL,
    re-synchronisationInfo Re-synchronisationInfo OPTIONAL,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ...,
    requestingNodeType [3] RequestingNodeType OPTIONAL}

```

**NumberOfRequestedVectors** ::= INTEGER (1..5)

```
Re-synchronisationInfo ::= SEQUENCE {  
    rand                               RAND,  
    auts                                AUTS,  
}
```

```
SendAuthenticationInfoRes ::= [3] SEQUENCE {
    authenticationSetList          AuthenticationSetList      OPTIONAL,
    extensionContainer             ExtensionContainer       OPTIONAL,
    }
```

```

RequestingNodeType ::= ENUMERATED {
    vlr (0),
    sgsn (1),
    ...
}
-- exception handling:
-- received values in the range 2-15 shall be treated as "vlr"
-- received values greater than 15 shall be treated as "sgsn"

```

-- security management types

```
EquipmentStatus ::= ENUMERATED {  
    whiteListed (0),  
    blackListed (1),  
    greyListed (2)}
```

### -- subscriber management types

```

InsertSubscriberDataArg ::= SEQUENCE {
    imsi                               [0] IMSI                                OPTIONAL,
    COMPONENTS OF
    extensionContainer                  [14] ExtensionContainer                   OPTIONAL,
    ...
    naea-PreferredCI                   [15] NAEA-PreferredCI                      OPTIONAL,
    -- naea-PreferredCI is included at the discretion of the HLR operator.
    gprsSubscriptionData              [16] GPRSSubscriptionData                 OPTIONAL,
    roamingRestrictedInSgsnDueToUnsupportedFeature [23]                         NULL
                                                OPTIONAL,
    networkAccessMode                 [24] NetworkAccessMode                     OPTIONAL,
    lsaInformation                    [25] LSAInformation                     OPTIONAL,
    lmu-Indicator                     [21] NULL                                OPTIONAL,
    lcsInformation                    [22] LCSInformation                     OPTIONAL,
    istAlertTimer                     [26] IST-AlertTimerValue                  OPTIONAL,
    superChargerSupportedInHLR      [27] AgeIndicator                      OPTIONAL,
    mc-SS-Info                        [28] MC-SS-Info                        OPTIONAL,
    cs-AllocationRetentionPriority   [29] CS-AllocationRetentionPriority    OPTIONAL,
    sgsn-CAMEL-SubscriptionInfo     [17] SGSN-CAMEL-SubscriptionInfo    OPTIONAL,
    chargingCharacteristics          [18] ChargingCharacteristics            OPTIONAL
}
-- If the Network Access Mode parameter is sent, it shall be present only in
-- the first sequence if segmentation is used

```

**CS-AllocationRetentionPriority** ::= OCTET STRING (SIZE (1))  
 -- This data type encodes each priority level defined in TS 23.107 as the binary value  
 -- of the priority level.

**IST-AlertTimerValue** ::= INTEGER (15..255)

```

LCSInformation ::= SEQUENCE {
    gmlc-List [0]                           GMLC-List OPTIONAL,
    lcs-PrivacyExceptionList               [1] LCS-PrivacyExceptionList        OPTIONAL,
    molr-List                             [2] MOLR-List                         OPTIONAL,
    ...
    add-lcs-PrivacyExceptionList          [3] LCS-PrivacyExceptionList        OPTIONAL }
    -- add-lcs-PrivacyExceptionList may be sent only if lcs-PrivacyExceptionList is
    -- present and contains four instances of LCS-PrivacyClass. If the mentioned condition
    -- is not satisfied the receiving node shall discard add-lcs-PrivacyExceptionList.
    -- If an LCS-PrivacyClass is received both in lcs-PrivacyExceptionList and in
    -- add-lcs-PrivacyExceptionList with the same SS-Code, then the error unexpected
    -- data value shall be returned.

```

**GMLC-List** ::= SEQUENCE SIZE (1..maxNumOfGMLC) OF  
 ISDN-AddressString  
 -- if segmentation is used, the complete GMLC-List shall be sent in one segment

**maxNumOfGMLC** INTEGER ::= 5

```

NetworkAccessMode ::= ENUMERATED {
    bothMSCAndSGSN                      (0),
    onlyMSC                            (1),
    onlySGSN                           (2),
    ...
    -- if unknown values are received in NetworkAccessMode
    -- they shall be discarded.

```

**GPRSDataList** ::= SEQUENCE SIZE (1..maxNumOfPDP-Contexts) OF  
 PDP-Context

**maxNumOfPDP-Contexts** INTEGER ::= 50

```

PDP-Context ::= SEQUENCE {
    pdp-ContextId                         ContextId,
    pdp-Type                             [16] PDP-Type,
    pdp-Address                          [17] PDP-Address           OPTIONAL,
    qos-Subscribed                       [18] QoS-Subscribed,
    vplmnAddressAllowed                  [19] NULL OPTIONAL,
    apn                                  [20] APN,
    extensionContainer                   [21] ExtensionContainer    OPTIONAL,
    ...
    ext-QoS-Subscribed                  [0] Ext-QoS-Subscribed    OPTIONAL,
    pdp-ChargingCharacteristics         [1] ChargingCharacteristics OPTIONAL }

```

**ContextId** ::= INTEGER (1..maxNumOfPDP-Contexts)

```
GPRSSubscriptionData ::= SEQUENCE {
    completeDataListIncluded           NULL                                OPTIONAL,
    -- If segmentation is used, completeDataListIncluded may only be present in the
    -- first segment.
    gprsDataList                      [1] GPRSDataList,
    extensionContainer                [2] ExtensionContainer          OPTIONAL,
    ...
}
```

```
SGSN-CAMEL-SubscriptionInfo ::= SEQUENCE {
    gprs-CSI                         [0] GPRS-CSI                  OPTIONAL,
    mo-sms-CSI                        [1] SMS-CSI                  OPTIONAL,
    extensionContainer                [2] ExtensionContainer        OPTIONAL,
    ...
    mt-sms-CSI                        [3] SMS-CSI                  OPTIONAL,
    mt-smsCAMELTDP-CriteriaList      [4] MT-smsCAMELTDP-CriteriaList OPTIONAL,
    mg-csi                           [5] MG-CSI                  OPTIONAL
}
```

```
GPRS-CSI ::= SEQUENCE {
    gprs-CamelTDPDataList            [0] GPRS-CamelTDPDataList      OPTIONAL,
    camelCapabilityHandling          [1] CamelCapabilityHandling    OPTIONAL,
    extensionContainer               [2] ExtensionContainer        OPTIONAL,
    notificationToCSE               [3] NULL                     OPTIONAL,
    csi-Active                       [4] NULL                     OPTIONAL,
    ...
}
-- notificationToCSE and csi-Active shall not be present when GPRS-CSI is sent to SGSN.
-- They may only be included in ATSI/ATM ack/NSDC message.
-- GPRS-CamelTDPData and camelCapabilityHandling shall be present in
-- the GPRS-CSI sequence.
-- If GPRS-CSI is segmented, gprs-CamelTDPDataList and camelCapabilityHandling shall be
-- present in the first segment
```

```
GPRS-CamelTDPDataList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
    GPRS-CamelTDPData
-- GPRS-CamelTDPDataList shall not contain more than one instance of
-- GPRS-CamelTDPData containing the same value for gprs-TriggerDetectionPoint.
```

```
GPRS-CamelTDPData ::= SEQUENCE {
    gprs-TriggerDetectionPoint       [0] GPRS-TriggerDetectionPoint,
    serviceKey                      [1] ServiceKey,
    gsmSCF-Address                  [2] ISDN-AddressString,
    defaultSessionHandling          [3] DefaultGPRS-Handling,
    extensionContainer              [4] ExtensionContainer        OPTIONAL,
    ...
}
```

```
DefaultGPRS-Handling ::= ENUMERATED {
    continueTransaction (0) ,
    releaseTransaction (1) ,
    ...
}
-- exception handling:
-- reception of values in range 2-31 shall be treated as "continueTransaction"
-- reception of values greater than 31 shall be treated as "releaseTransaction"
```

```
GPRS-TriggerDetectionPoint ::= ENUMERATED {
    attach                           (1),
    attachChangeOfPosition           (2),
    pdp-ContextEstablishment        (11),
    pdp-ContextEstablishmentAcknowledgement (12),
    pdp-ContextChangeOfPosition     (14),
    ...
}
-- exception handling:
-- For GPRS-CamelTDPData sequences containing this parameter with any
-- other value than the ones listed the receiver shall ignore the whole
-- GPRS-CamelTDPData sequence.
```

```
APN ::= OCTET STRING (SIZE (2..63))
-- Octets are coded according to TS 3GPP TS 23.003 [17]
```

```
PDP-Type ::= OCTET STRING (SIZE (2))
-- Octets are coded according to TS 3GPP TS 29.060 [105]
```

**PDP-Address** ::= OCTET STRING (SIZE (1..16))  
 -- Octets are coded according to TS 3GPP TS 29.060 [105]  
 -- The possible size values are:  
 -- 1-7 octets X.25 address type  
 -- 4 octets IPv4 address type  
 -- 16 octets Ipv6 address type

**QoS-Subscribed** ::= OCTET STRING (SIZE (3))  
 -- Octets are coded according to TS 3GPP TS 24.008 [35] Quality of Service Octets  
 -- 3-5.

**Ext-Qos-Subscribed** ::= OCTET STRING (SIZE (1..9))  
 -- OCTET 1:  
 -- Allocation/Retention Priority (This octet encodes each priority level defined in 23.107 as the binary value of the priority level, declaration in 29.060)  
 -- Octets 2-9 are coded according to 3GPP TS 24.008[35] Quality of Service Octets  
 -- 6-13.

**ChargingCharacteristics** ::= OCTET STRING (SIZE (2))  
 -- Octets are coded according to 3GPP TS 32.015.

**LSAOnlyAccessIndicator** ::= ENUMERATED {  
 accessOutsideLSAsAllowed (0),  
 accessOutsideLSAsRestricted (1)}

**LSADataList** ::= SEQUENCE SIZE (1..maxNumOfLSAs) OF  
 LSAData

**maxNumOfLSAs** INTEGER ::= 20

**LSAData** ::= SEQUENCE {  
 lsaIdentity [0] LSAIdentity,  
 lsaAttributes [1] LSAAttributes,  
 lsaActiveModeIndicator [2] NULL OPTIONAL,  
 extensionContainer [3] ExtensionContainer OPTIONAL,  
 ...}

**LSAInformation** ::= SEQUENCE {  
 completeDataListIncluded NULL OPTIONAL,  
 -- If segmentation is used, completeDataListIncluded may only be present in the  
 -- first segment.  
 lsaOnlyAccessIndicator [1] LSAOnlyAccessIndicator OPTIONAL,  
 lsaDataList [2] LSADataList OPTIONAL,  
 extensionContainer [3] ExtensionContainer OPTIONAL,  
 ...}

**LSAIdentity** ::= OCTET STRING (SIZE (3))  
 -- Octets are coded according to TS 3GPP TS 23.003 [17]

**LSAAttributes** ::= OCTET STRING (SIZE (1))  
 -- Octets are coded according to TS 3GPP TS 48.008 [49]

**SubscriberData** ::= SEQUENCE {  
 msisdn [1] ISDN-AddressString OPTIONAL,  
 category [2] Category OPTIONAL,  
 subscriberStatus [3] SubscriberStatus OPTIONAL,  
 bearerServiceList [4] BearerServiceList OPTIONAL,  
 -- The exception handling for reception of unsupported / not allocated  
 -- bearerServiceCodes is defined in section 8.8.1  
 teleserviceList [6] TeleserviceList OPTIONAL,  
 -- The exception handling for reception of unsupported / not allocated  
 -- teleserviceCodes is defined in section 8.8.1  
 provisionedSS [7] Ext-SS-InfoList OPTIONAL,  
 odb-Data [8] ODB-Data OPTIONAL,  
 roamingRestrictionDueToUnsupportedFeature [9] NULL OPTIONAL,  
 regionalSubscriptionData [10] ZoneCodeList OPTIONAL,  
 vbsSubscriptionData [11] VBSDataList OPTIONAL,  
 vgcsSubscriptionData [12] VGCSDataList OPTIONAL,  
 vlrCamelSubscriptionInfo [13] VlrCamelSubscriptionInfo OPTIONAL  
 }

**Category** ::= OCTET STRING (SIZE (1))  
 -- The internal structure is defined in ITU-T Rec Q.763.

```
SubscriberStatus ::= ENUMERATED {
    serviceGranted (0),
    operatorDeterminedBarring (1)}
```

```
BearerServiceList ::= SEQUENCE SIZE (1..maxNumberOfBearerServices) OF
    Ext-BearerServiceCode
```

```
maxNumberOfBearerServices INTEGER ::= 50
```

```
TeleserviceList ::= SEQUENCE SIZE (1..maxNumberOfTeleservices) OF
    Ext-TeleserviceCode
```

```
maxNumberOfTeleservices INTEGER ::= 20
```

```
ODB-Data ::= SEQUENCE {
    odb-GeneralData                               ODB-GeneralData,
    odb-HPLMN-Data                                ODB-HPLMN-Data
    extensionContainer                           ExtensionContainer
    ...}                                         OPTIONAL,
```

```
ODB-GeneralData ::= BIT STRING {
    allOG-CallsBarred (0),
    internationalOGCallsBarred (1),
    internationalOGCallsNotToHPLMN-CountryBarred (2),
    interzonalOGCallsBarred (6),
    interzonalOGCallsNotToHPLMN-CountryBarred (7),
    interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred (8),
    premiumRateInformationOGCallsBarred (3),
    premiumRateEntertainmentOGCallsBarred (4),
    ss-AccessBarred (5),
    allECT-Barred (9),
    chargeableECT-Barred (10),
    internationalECT-Barred (11),
    interzonalECT-Barred (12),
    doublyChargeableECT-Barred (13),
    multipleECT-Barred (14),
    allPacketOrientedServicesBarred (15),
    roamerAccessToHPLMN-AP-Barred (16),
    roamerAccessToVPLMN-AP-Barred (17),
    roamingOutsidePLMNOG-CallsBarred (18),
    allIC-CallsBarred (19),
    roamingOutsidePLMNIC-CallsBarred (20),
    roamingOutsidePLMNICountryIC-CallsBarred (21),
    roamingOutsidePLMN-Barred (22),
    roamingOutsidePLMN-CountryBarred (23),
    registrationAllCF-Barred (24),
    registrationCFNotToHPLMN-Barred (25),
    registrationInterzonalCF-Barred (26),
    registrationInterzonalCFNotToHPLMN-Barred (27),
    registrationInternationalCF-Barred (28)} (SIZE (15..32))
-- exception handling: reception of unknown bit assignments in the
-- ODB-GeneralData type shall be treated like unsupported ODB-GeneralData
-- When the ODB-GeneralData type is removed from the HLR for a given subscriber,
-- in NoteSubscriberDataModified operation sent toward the gsmSCF
-- all bits shall be set to "0".
```

```
ODB-HPLMN-Data ::= BIT STRING {
    plmn-SpecificBarringType1 (0),
    plmn-SpecificBarringType2 (1),
    plmn-SpecificBarringType3 (2),
    plmn-SpecificBarringType4 (3)} (SIZE (4..32))
-- exception handling: reception of unknown bit assignments in the
-- ODB-HPLMN-Data type shall be treated like unsupported ODB-HPLMN-Data
-- When the ODB-HPLMN-Data type is removed from the HLR for a given subscriber,
-- in NoteSubscriberDataModified operation sent toward the gsmSCF
-- all bits shall be set to "0".
```

```
Ext-SS-InfoList ::= SEQUENCE SIZE (1..maxNumOfSS) OF
    Ext-SS-Info
```

```
Ext-SS-Info ::= CHOICE {
    forwardingInfo                      [0] Ext-ForwInfo,
    callBarringInfo                     [1] Ext-CallBarInfo,
    cug-Info                           [2] CUG-Info,
    ss-Data                            [3] Ext-SS-Data,
    emlpp-Info                         [4] EMLPP-Info}
```

```
Ext-ForwInfo ::= SEQUENCE {
    ss-Code                               SS-Code,
    forwardingFeatureList                Ext-ForwFeatureList,
    extensionContainer                  [0] ExtensionContainer      OPTIONAL,
    ...}
```

```
Ext-ForwFeatureList ::= SEQUENCE SIZE (1..maxNumOfExt-BasicServiceGroups) OF
Ext-ForwFeature
```

```
Ext-ForwFeature ::= SEQUENCE {
    basicService                         Ext-BasicServiceCode      OPTIONAL,
    ss-Status                            [4] Ext-SS-Status,
    forwardedToNumber                   [5] ISDN-AddressString   OPTIONAL,
    -- When this data type is sent from an HLR which supports CAMEL Phase 2
    -- to a VLR that supports CAMEL Phase 2 the VLR shall not check the
    -- format of the number
    forwardedToSubaddress               [8] ISDN-SubaddressString OPTIONAL,
    forwardingOptions                  [6] Ext-ForwOptions        OPTIONAL,
    noReplyConditionTime              [7] Ext-NoRepCondTime     OPTIONAL,
    extensionContainer                 [9] ExtensionContainer    OPTIONAL,
    ...,
    longForwardedToNumber            [10] FTN-AddressString    OPTIONAL }
```

```
Ext-ForwOptions ::= OCTET STRING (SIZE (1..5))
```

```
-- OCTET 1:
-- bit 8: notification to forwarding party
-- 0 no notification
-- 1 notification

-- bit 7: redirecting presentation
-- 0 no presentation
-- 1 presentation

-- bit 6: notification to calling party
-- 0 no notification
-- 1 notification

-- bit 5: 0 (unused)

-- bits 43: forwarding reason
-- 00 ms not reachable
-- 01 ms busy
-- 10 no reply
-- 11 unconditional

-- bits 21: 00 (unused)

-- OCTETS 2-5: reserved for future use. They shall be discarded if
-- received and not understood.
```

```
Ext-NoRepCondTime ::= INTEGER (1..100)
-- Only values 5-30 are used.
-- Values in the ranges 1-4 and 31-100 are reserved for future use
-- If received:
--   values 1-4 shall be mapped on to value 5
--   values 31-100 shall be mapped on to value 30
```

```
Ext-CallBarInfo ::= SEQUENCE {
    ss-Code                               SS-Code,
    callBarringFeatureList                Ext-CallBarFeatureList,
    extensionContainer                  ExtensionContainer      OPTIONAL,
    ...}
```

```
Ext-CallBarFeatureList ::= SEQUENCE SIZE (1..maxNumOfExt-BasicServiceGroups) OF
Ext-CallBarringFeature
```

```
Ext-CallBarringFeature ::= SEQUENCE {
    basicService                         Ext-BasicServiceCode      OPTIONAL,
    ss-Status                            [4] Ext-SS-Status,
    extensionContainer                  ExtensionContainer    OPTIONAL,
    ...}
```

```
CUG-Info ::= SEQUENCE {
    cug-SubscriptionList           CUG-SubscriptionList,
    cug-FeatureList                CUG-FeatureList
    extensionContainer             [0] ExtensionContainer
    ...
} OPTIONAL,
```

```
CUG-SubscriptionList ::= SEQUENCE SIZE (0..maxNumOfCUG) OF
    CUG-Subscription
```

```
CUG-Subscription ::= SEQUENCE {
    cug-Index CUG-Index,
    cug-Interlock           CUG-Interlock,
    intraCUG-Options        IntraCUG-Options,
    basicServiceGroupList   Ext-BasicServiceGroupList
    extensionContainer      [0] ExtensionContainer
    ...
} OPTIONAL,
```

```
CUG-Index ::= INTEGER (0..32767)
-- The internal structure is defined in ETS 300 138.
```

```
CUG-Interlock ::= OCTET STRING (SIZE (4))
```

```
IntraCUG-Options ::= ENUMERATED {
    noCUG-Restrictions (0),
    cugIC-CallBarred (1),
    cugOG-CallBarred (2)}
```

```
maxNumOfCUG INTEGER ::= 10
```

```
CUG-FeatureList ::= SEQUENCE SIZE (1..maxNumOfExt-BasicServiceGroups) OF
    CUG-Feature
```

```
Ext-BasicServiceGroupList ::= SEQUENCE SIZE (1..maxNumOfExt-BasicServiceGroups) OF
    Ext-BasicServiceCode
```

```
maxNumOfExt-BasicServiceGroups INTEGER ::= 32
```

```
CUG-Feature ::= SEQUENCE {
    basicService           Ext-BasicServiceCode
    preferentialCUG-Indicator CUG-Index OPTIONAL,
    interCUG-Restrictions   InterCUG-Restrictions
    extensionContainer      ExtensionContainer
    ...
} OPTIONAL,
```

```
InterCUG-Restrictions ::= OCTET STRING (SIZE (1))
-- bits 876543: 000000 (unused)
-- Exception handling:
-- bits 876543 shall be ignored if received and not understood
-- bits 21
-- 00 CUG only facilities
-- 01 CUG with outgoing access
-- 10 CUG with incoming access
-- 11 CUG with both outgoing and incoming access
```

```
Ext-SS-Data ::= SEQUENCE {
    ss-Code                 SS-Code,
    ss-Status               [4] Ext-SS-Status,
    ss-SubscriptionOption   SS-SubscriptionOption
    basicServiceGroupList   Ext-BasicServiceGroupList
    extensionContainer      [5] ExtensionContainer
    ...
} OPTIONAL,
```

```
LCS-PrivacyExceptionList ::= SEQUENCE SIZE (1..maxNumOfPrivacyClass) OF
    LCS-PrivacyClass
```

```
maxNumOfPrivacyClass INTEGER ::= 4
```

```
LCS-PrivacyClass ::= SEQUENCE {
    ss-Code                               SS-Code,
    ss-Status                             Ext-SS-Status,
    notificationToMSUser                  [0] NotificationToMSUser      OPTIONAL,
    -- notificationToMSUser may be sent only for SS-codes callSessionRelated
    -- and callSessionUnrelated. If not received for SS-codes callSessionRelated
    -- and callSessionUnrelated,
    -- the default values according to 3GPP TS 23.271 shall be assumed.
    externalClientList                   [1] ExternalClientList        OPTIONAL,
    -- externalClientList may be sent only for SS-code callSessionUnrelated to a
    -- visited node that does not support LCS Release 4 or later versions.
    -- externalClientList may be sent only for SS-codes callSessionUnrelated and
    -- callSessionRelated to a visited node that supports LCS Release 4 or later versions.
    plmnClientList                      [2] PLMNclientList           OPTIONAL,
    -- plmnClientList may be sent only for SS-code plmnoperator.
    extensionContainer                   [3] ExtensionContainer       OPTIONAL,
    ...,
    ext-externalClientList              [4] Ext-ExternalClientList    OPTIONAL,
    -- Ext-externalClientList may be sent only if the visited node supports LCS Release 4 or
    -- later versions, the user did specify more than 5 clients, and White Book SCCP is used.
    serviceTypeList                     [5] ServiceTypeList          OPTIONAL
    -- serviceTypeList may be sent only for SS-code serviceType and if the visited node
    -- supports LCS Release 5 or later versions.
    --
    -- if segmentation is used, the complete LCS-PrivacyClass shall be sent in one segment
}
```

```
ExternalClientList ::= SEQUENCE SIZE (0..maxNumOfExternalClient) OF
                           ExternalClient
```

```
maxNumOfExternalClient  INTEGER ::= 5
```

```
PLMNclientList ::= SEQUENCE SIZE (1..maxNumOfPLMNClient) OF
                           LCSClientInternalID
```

```
maxNumOfPLMNClient  INTEGER ::= 5
```

```
Ext-ExternalClientList ::= SEQUENCE SIZE (1..maxNumOfExt-ExternalClient) OF
                           ExternalClient
```

```
maxNumOfExt-ExternalClient  INTEGER ::= 35
```

```
ExternalClient ::= SEQUENCE {
    clientIdentity                         LCSClientExternalID,
    gmlc-Restriction                      [0] GMLC-Restriction        OPTIONAL,
    notificationToMSUser                  [1] NotificationToMSUser    OPTIONAL,
    -- If notificationToMSUser is not received, the default value according to
    -- 3GPP TS 23.271 shall be assumed.
    extensionContainer                    [2] ExtensionContainer      OPTIONAL,
    ... }
```

```
GMLC-Restriction ::= ENUMERATED {
    gmlc-List                            (0),
    home-Country                         (1),
    ... }
-- exception handling:
-- At reception of any other value than the ones listed the receiver shall ignore
-- GMLC-Restriction.
```

```
NotificationToMSUser ::= ENUMERATED {
    notifyLocationAllowed                (0),
    notifyAndVerify-LocationAllowedIfNoResponse (1),
    notifyAndVerify-LocationNotAllowedIfNoResponse(2),
    ...,
    locationNotAllowed (3) }
-- exception handling:
-- At reception of any other value than the ones listed the receiver shall ignore
-- NotificationToMSUser.
```

```
ServiceTypeList ::= SEQUENCE SIZE (1..maxNumOfServiceType) OF
                           ServiceType
```

```
maxNumOfServiceType  INTEGER ::= 32
```

```
ServiceType ::= SEQUENCE {
    serviceTypeIdentity           LCSServiceTypeID,
    gmlc-Restriction             [0] GMLC-Restriction          OPTIONAL,
    notificationToMSUser          [1] NotificationToMSUser        OPTIONAL,
    -- If notificationToMSUser is not received, the default value according to
    -- 3GPP TS 23.271 shall be assumed.
    extensionContainer            [2] ExtensionContainer         OPTIONAL,
    ...
}
```

```
MOLR-List ::= SEQUENCE SIZE (1..maxNumOfMOLR-Class) OF
                           MOLR-Class
```

```
maxNumOfMOLR-Class INTEGER ::= 3
```

```
MOLR-Class ::= SEQUENCE {
    ss-Code                      SS-Code,
    ss-Status                     Ext-SS-Status,
    extensionContainer            [0] ExtensionContainer        OPTIONAL,
    ...
}
```

```
ZoneCodeList ::= SEQUENCE SIZE (1..maxNumOfZoneCodes)
                           OF ZoneCode
```

```
ZoneCode ::= OCTET STRING (SIZE (2))
-- internal structure is defined in TS 3GPP TS 23.003 [17]
```

```
maxNumOfZoneCodes INTEGER ::= 10
```

```
InsertSubscriberDataRes ::= SEQUENCE {
    teleserviceList                [1] TeleserviceList           OPTIONAL,
    bearerServiceList              [2] BearerServiceList         OPTIONAL,
    ss-List                        [3] SS-List                  OPTIONAL,
    odb-GeneralData                [4] ODB-GeneralData          OPTIONAL,
    regionalSubscriptionResponse   [5] RegionalSubscriptionResponse OPTIONAL,
    supportedCamelPhases          [6] SupportedCamelPhases      OPTIONAL,
    extensionContainer              [7] ExtensionContainer        OPTIONAL,
    ...
    offeredCamel4CSIs             [8] OfferedCamel4CSIs        OPTIONAL }
```

```
RegionalSubscriptionResponse ::= ENUMERATED {
    networkNode-AreaRestricted    (0),
    tooManyZoneCodes               (1),
    zoneCodesConflict              (2),
    regionalSubscNotSupported     (3)}
```

```
DeleteSubscriberDataArg ::= SEQUENCE {
    imsI                         [0] IMSI,
    basicServiceList               [1] BasicServiceList        OPTIONAL,
    -- The exception handling for reception of unsupported/not allocated
    -- basicServiceCodes is defined in section 6.8.2
    ss-List                        [2] SS-List                  OPTIONAL,
    roamingRestrictionDueToUnsupportedFeature [4] NULL          OPTIONAL,
    regionalSubscriptionIdentifier [5] ZoneCode                OPTIONAL,
    vbsGroupIndication             [7] NULL                   OPTIONAL,
    vgcsGroupIndication            [8] NULL                   OPTIONAL,
    camelSubscriptionInfoWithdraw [9] NULL                   OPTIONAL,
    extensionContainer              [6] ExtensionContainer        OPTIONAL,
    ...
    gprsSubscriptionDataWithdraw   [10] GPRSSubscriptionDataWithdraw OPTIONAL,
    roamingRestrictedInSgsnDueToUnsuppportedFeature [11] NULL          OPTIONAL,
    lsaInformationWithdraw         [12] LSAInformationWithdraw OPTIONAL,
    gmlc-ListWithdraw              [13] NULL                   OPTIONAL,
    istInformationWithdraw         [14] NULL                   OPTIONAL,
    specificCSI-Withdraw          [15] SpecificCSI-Withdraw    OPTIONAL }
```

```

SpecificCSI-Withdraw ::= BIT STRING {
    o-csi (0),
    ss-csi (1),
    tif-csi (2),
    d-csi (3),
    vt-csi (4),
    mo-sms-csi (5),
    m-csi (6),
    gprs-csi (7),
    t-csi (8),
    mt-sms-csi (9),
    mg-csi (10),
    o-IM-CSI (11),
    d-IM-CSI (12),
    vt-IM-CSI (13) } (SIZE(8..32))
-- exception handling:
-- bits 11 to 31 shall be ignored if received by a non-IP Multimedia Core Network entity.
-- bits 0-10 and 14-31 shall be ignored if received by an IP Multimedia Core Network entity.
-- bits 11-13 are only applicable in an IP Multimedia Core Network.
-- Bit 8 and bits 11-13 are only applicable for the NoteSubscriberDataModified operation.

```

```

GPRSSubscriptionDataWithdraw ::= CHOICE {
    allGPRSData
                           NULL,
    contextIdList
                           ContextIdList}

```

```

ContextIdList ::= SEQUENCE SIZE (1..maxNumOfPDP-Contexts) OF
                           ContextId

```

```

LSAInformationWithdraw ::= CHOICE {
    allLSDAData
                           NULL,
    lsaIdentityList
                           LSAIdentityList }

```

```

LSAIdentityList ::= SEQUENCE SIZE (1..maxNumOfLSAs) OF
                           LSAIdentity

```

```

BasicServiceList ::= SEQUENCE SIZE (1..maxNumOfBasicServices) OF
                           Ext-BasicServiceCode

```

```

maxNumOfBasicServices INTEGER ::= 70

```

```

DeleteSubscriberDataRes ::= SEQUENCE {
    regionalSubscriptionResponse      [0] RegionalSubscriptionResponse OPTIONAL,
    extensionContainer                ExtensionContainer OPTIONAL,
    ... }

```

```

VlrCamelSubscriptionInfo ::= SEQUENCE {
    o-CSI
                           [0] O-CSI
                           OPTIONAL,
    extensionContainer
                           [1] ExtensionContainer
                           OPTIONAL,
    ... ,
    ss-CSI
                           [2] SS-CSI
                           OPTIONAL,
    o-BcsmCamelTDP-CriteriaList
                           [4] O-BcsmCamelTDPCriteriaList
                           OPTIONAL,
    tif-CSI
                           [3] NULL
                           OPTIONAL,
    m-CSI
                           [5] M-CSI
                           OPTIONAL,
    mo-sms-CSI
                           [6] SMS-CSI
                           OPTIONAL,
    vt-CSI
                           [7] T-CSI
                           OPTIONAL,
    t-BCSM-CAMEL-TDP-CriteriaList
                           [8] T-BCSM-CAMEL-TDP-CriteriaList
                           OPTIONAL,
    d-CSI
                           [9] D-CSI
                           OPTIONAL,
    mt-sms-CSI
                           [10] SMS-CSI
                           OPTIONAL,
    mt-smsCAMELTDP-CriteriaList
                           [11] MT-smsCAMELTDP-CriteriaList
                           OPTIONAL
    }

```

```

MT-smsCAMELTDP-CriteriaList ::= SEQUENCE SIZE (1.. maxNumOfCamelTDPData) OF
                           MT-smsCAMELTDP-Criteria

```

```

MT-smsCAMELTDP-Criteria ::= SEQUENCE {
    sms-TriggerDetectionPoint
                           SMS-TriggerDetectionPoint,
    tpdu-TypeCriterion
                           [0] TPDU-TypeCriterion
                           OPTIONAL,
    ... }

```

```

TPDU-TypeCriterion ::= SEQUENCE SIZE (1..maxNumOfTPDUTypes) OF
                           MT-SMS-TPDU-Type

```

```

maxNumOfTPDUTypes INTEGER ::= 5

```

```
MT-SMS-TPDU-Type ::= ENUMERATED {
  sms-DELIVER                               (0),
  sms-SUBMIT-REPORT                         (1),
  sms-STATUS-REPORT                         (2),
  ...
}

-- exception handling:
-- For TPDU-TypeCriterion sequences containing this parameter with any
-- other value than the ones listed above the receiver shall ignore
-- the whole TPDU-TypeCriterion sequence.
-- In CAMEL phase 4, sms-SUBMIT-REPORT shall not be used and a received TPDU-TypeCriterion
-- sequence containing sms-SUBMIT-REPORT shall be wholly ignored.
```

```
D-CSI ::= SEQUENCE {
  dp-AnalysedInfoCriteriaList      [0] DP-AnalysedInfoCriteriaList   OPTIONAL,
  camelCapabilityHandling          [1] CamelCapabilityHandling    OPTIONAL,
  extensionContainer               [2] ExtensionContainer        OPTIONAL,
  notificationToCSE                [3] NULL                      OPTIONAL,
  csi-Active                       [4] NULL                      OPTIONAL,
  ...
}

-- notificationToCSE and csi-Active shall not be present when D-CSI is sent to VLR/GMSC.
-- They may only be included in ATSI/ATM ack/NSDC message.
-- DP-AnalysedInfoCriteria and camelCapabilityHandling shall be present in
-- the D-CSI sequence.
-- If D-CSI is segmented, dp-AnalysedInfoCriteriaList and camelCapabilityHandling shall be
-- present in the first segment
```

```
DP-AnalysedInfoCriteriaList ::= SEQUENCE SIZE (1..maxNumOfDP-AnalysedInfoCriteria) OF
                                DP-AnalysedInfoCriterion
```

```
maxNumOfDP-AnalysedInfoCriteria INTEGER ::= 10
```

```
DP-AnalysedInfoCriterion ::= SEQUENCE {
  dialledNumber                  ISDN-AddressString,
  serviceKey                     ServiceKey,
  gsmSCF-Address                 ISDN-AddressString,
  defaultCallHandling            DefaultCallHandling,
  extensionContainer              ExtensionContainer
  ...
  OPTIONAL,
```

```
SS-CSI ::= SEQUENCE {
  ss-CamelData                   SS-CamelData,
  extensionContainer              ExtensionContainer
  ...
  OPTIONAL,
  notificationToCSE              [0] NULL
  csi-Active                      [1] NULL
  ...
  OPTIONAL,
  OPTIONAL,
```

-- notificationToCSE and csi-Active shall not be present when SS-CSI is sent to VLR.  
-- They may only be included in ATSI/ATM ack/NSDC message.

```
SS-CamelData ::= SEQUENCE {
  ss-EventList                    SS-EventList,
  gsmSCF-Address                 ISDN-AddressString,
  extensionContainer              ExtensionContainer
  ...
  OPTIONAL,
```

```
SS-EventList ::= SEQUENCE SIZE (1..maxNumOfCamelSSEvents) OF SS-Code
-- Actions for the following SS-Code values are defined in CAMEL Phase 3:
-- ect                                SS-Code ::= '00110001'B
-- multiPTY                            SS-Code ::= '01010001'B
-- cd                                 SS-Code ::= '00100100'B
-- ccbs                                SS-Code ::= '01000100'B
-- all other SS codes shall be ignored
-- When SS-CSI is sent to the VLR, it shall not contain a marking for ccbs.
-- If the VLR receives SS-CSI containing a marking for ccbs, the VLR shall discard the
-- ccbs marking in SS-CSI.
```

```
maxNumOfCamelSSEvents INTEGER ::= 10
```

```

O-CSI ::= SEQUENCE {
    o-BcsmCamelTDPDataList           O-BcsmCamelTDPDataList,
    extensionContainer                ExtensionContainer          OPTIONAL,
    ...,
    camelCapabilityHandling          [0] CamelCapabilityHandling   OPTIONAL,
    notificationToCSE               [1] NULL                  OPTIONAL,
    csiActive                        [2] NULL                  OPTIONAL}
-- notificationToCSE and csiActive shall not be present when O-CSI is sent to VLR/GMSC.
-- They may only be included in ATSI/ATM ack/NSDC message.
-- O-CSI shall not be segmented.

```

```

O-BcsmCamelTDPDataList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
    O-BcsmCamelTDPData
    -- O-BcsmCamelTDPDataList shall not contain more than one instance of
    -- O-BcsmCamelTDPData containing the same value for o-BcsmTriggerDetectionPoint.
    -- For CAMEL Phase 2, this means that only one instance of O-BcsmCamelTDPData is allowed
    -- with o-BcsmTriggerDetectionPoint being equal to DP2.

```

```
maxNumOfCamelTDPData INTEGER ::= 10
```

```

O-BcsmCamelTDPData ::= SEQUENCE {
    o-BcsmTriggerDetectionPoint      O-BcsmTriggerDetectionPoint,
    serviceKey                      ServiceKey,
    gsmSCF-Address                 [0] ISDN-AddressString,
    defaultCallHandling             [1] DefaultCallHandling,
    extensionContainer              [2] ExtensionContainer        OPTIONAL,
    ...
}

```

```
ServiceKey ::= INTEGER (0..2147483647)
```

```

O-BcsmTriggerDetectionPoint ::= ENUMERATED {
    collectedInfo (2),
    ...
    routeSelectFailure (4)
    -- exception handling:
    -- For O-BcsmCamelTDPData sequences containing this parameter with any
    -- other value than the ones listed the receiver shall ignore the whole
    -- O-BcsmCamelTDPData sequence.
    -- For O-BcsmCamelTDP-Criteria sequences containing this parameter with any
    -- other value than the ones listed the receiver shall ignore the whole
    -- O-BcsmCamelTDP-Criteria sequence.

```

```
O-BcsmCamelTDPCriteriaList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
    O-BcsmCamelTDP-Criteria
```

```
T-BCSM-CAMEL-TDP-CriteriaList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
    T-BCSM-CAMEL-TDP-Criteria
```

```

O-BcsmCamelTDP-Criteria ::= SEQUENCE {
    o-BcsmTriggerDetectionPoint      O-BcsmTriggerDetectionPoint,
    destinationNumberCriteria       [0] DestinationNumberCriteria   OPTIONAL,
    basicServiceCriteria            [1] BasicServiceCriteria        OPTIONAL,
    callTypeCriteria                [2] CallTypeCriteria          OPTIONAL,
    ...
    o-CauseValueCriteria           [3] O-CauseValueCriteria        OPTIONAL,
    extensionContainer              [4] ExtensionContainer         OPTIONAL }

```

```

T-BCSM-CAMEL-TDP-Criteria ::= SEQUENCE {
    t-BCSM-TriggerDetectionPoint    T-BcsmTriggerDetectionPoint,
    basicServiceCriteria            [0] BasicServiceCriteria        OPTIONAL,
    t-CauseValueCriteria            [1] T-CauseValueCriteria        OPTIONAL,
    ...
}

```

```

DestinationNumberCriteria ::= SEQUENCE {
    matchType                      [0] MatchType,
    destinationNumberList           [1] DestinationNumberList      OPTIONAL,
    destinationNumberLengthList     [2] DestinationNumberLengthList OPTIONAL,
    -- one or both of destinationNumberList and destinationNumberLengthList
    -- shall be present
    ...
}

```

```

DestinationNumberList ::= SEQUENCE SIZE (1..maxNumOfCamelDestinationNumbers) OF
    ISDN-AddressString
    -- The receiving entity shall not check the format of a number in
    -- the dialled number list

```

```
DestinationNumberLengthList ::= SEQUENCE SIZE (1..maxNumOfCamelDestinationNumberLengths) OF
    INTEGER(1..maxNumOfISDN-AddressDigits)
```

```
BasicServiceCriteria ::= SEQUENCE SIZE(1..maxNumOfCamelBasicServiceCriteria) OF
    Ext-BasicServiceCode
```

```
maxNumOfISDN-AddressDigits INTEGER ::= 15
```

```
maxNumOfCamelDestinationNumbers INTEGER ::= 10
```

```
maxNumOfCamelDestinationNumberLengths INTEGER ::= 3
```

```
maxNumOfCamelBasicServiceCriteria INTEGER ::= 5
```

```
CallTypeCriteria ::= ENUMERATED {
    forwarded (0),
    notForwarded (1)}
```

```
MatchType ::= ENUMERATED {
    inhibiting (0),
    enabling (1)}
```

```
O-CauseValueCriteria ::= SEQUENCE SIZE(1..maxNumOfCAMEL-O-CauseValueCriteria) OF
    CauseValue
```

```
T-CauseValueCriteria ::= SEQUENCE SIZE(1..maxNumOfCAMEL-T-CauseValueCriteria) OF
    CauseValue
```

```
maxNumOfCAMEL-O-CauseValueCriteria INTEGER ::= 5
```

```
maxNumOfCAMEL-T-CauseValueCriteria INTEGER ::= 5
```

```
CauseValue ::= OCTET STRING (SIZE(1))
-- Type extracted from Cause parameter in ITU-T Recommendation Q.763.
-- For the use of cause value refer to ITU-T Recommendation Q.850.
```

```
DefaultCallHandling ::= ENUMERATED {
    continueCall (0),
    releaseCall (1),
    ...
}
-- exception handling:
-- reception of values in range 2-31 shall be treated as "continueCall"
-- reception of values greater than 31 shall be treated as "releaseCall"
```

```
CamelCapabilityHandling ::= INTEGER(1..16)
-- value 1 = CAMEL phase 1,
-- value 2 = CAMEL phase 2,
-- value 3 = CAMEL Phase 3,
-- value 4 = CAMEL phase 4:
-- reception of values greater than 4 shall be treated as CAMEL phase 4.
```

```
SupportedCamelPhases ::= BIT STRING {
    phase1 (0),
    phase2 (1),
    phase3 (2),
    phase4 (3)} (SIZE (1..16))
-- A node shall mark in the BIT STRING all CAMEL Phases it supports.
-- Other values than listed above shall be discarded.
```

```
OfferedCamel4CSIs ::= BIT STRING {
    o-csi (0),
    d-csi (1),
    vt-csi (2),
    t-csi (3),
    mt-sms-csi (4),
    mg-csi (5),
    psi-enhancements (6)
} (SIZE (7..16))
-- A node supporting Camel phase 4 shall mark in the BIT STRING all Camel4 CSIs
-- it offers.
-- Other values than listed above shall be discarded.
```

```

OfferedCamel4Functionalities ::= BIT STRING {
    initiateCallAttempt          (0),
    splitLeg                      (1),
    moveLeg                       (2),
    disconnectLeg                (3),
    entityReleased                (4),
    dfc-WithArgument              (5),
    playTone                      (6),
    dtmf-MidCall                 (7),
    chargingIndicator             (8),
    alertingDP                    (9),
    locationAtAlerting           (10),
    changeOfPositionDP           (11),
    or-Interactions               (12),
    warningToneEnhancements      (13),
    cf-Enhancements               (14)
} (SIZE (15..32))
-- A node supporting Camel phase 4 shall mark in the BIT STRING all Camel4
-- functionalities it offers.
-- Other values than listed above shall be discarded.

```

```

SMS-CSI ::= SEQUENCE {
    sms-CAMEL-TDP-DataList        [0] SMS-CAMEL-TDP-DataList      OPTIONAL,
    camelCapabilityHandling       [1] CamelCapabilityHandling   OPTIONAL,
    extensionContainer            [2] ExtensionContainer        OPTIONAL,
    notificationToCSE            [3] NULL                         OPTIONAL,
    csi-Active                   [4] NULL                         OPTIONAL,
    ...
}
-- notificationToCSE and csi-Active shall not be present
-- when MO-SMS-CSI or MT-SMS-CSI is sent to VLR or SGSN.
-- They may only be included in ATSI/ATM ack/NSDC message.
-- SMS-CAMEL-TDP-Data and camelCapabilityHandling shall be present in
-- the SMS-CSI sequence.
-- If SMS-CSI is segmented, sms-CAMEL-TDP-DataList and camelCapabilityHandling shall be
-- present in the first segment

```

```

SMS-CAMEL-TDP-DataList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
    SMS-CAMEL-TDP-Data
-- SMS-CAMEL-TDP-DataList shall not contain more than one instance of
-- SMS-CAMEL-TDP-Data containing the same value for sms-TriggerDetectionPoint.

```

```

SMS-CAMEL-TDP-Data ::= SEQUENCE {
    sms-TriggerDetectionPoint     [0] SMS-TriggerDetectionPoint,
    serviceKey                   [1] ServiceKey,
    gsmSCF-Address               [2] ISDN-AddressString,
    defaultSMS-Handling          [3] DefaultSMS-Handling,
    extensionContainer            [4] ExtensionContainer      OPTIONAL,
    ...
}

```

```

SMS-TriggerDetectionPoint ::= ENUMERATED {
    sms-CollectedInfo (1),
    ...,
    sms-DeliveryRequest (2)
}
-- exception handling:
-- For SMS-CAMEL-TDP-Data and MT-smsCAMELTDP-Criteria sequences containing this
-- parameter with any other value than the ones listed the receiver shall ignore
-- the whole sequence.
--
-- If this parameter is received with any other value than sms-CollectedInfo
-- in an SMS-CAMEL-TDP-Data sequence contained in mo-sms-CSI, then the receiver shall
-- ignore the whole SMS-CAMEL-TDP-Data sequence.
--
-- If this parameter is received with any other value than sms-DeliveryRequest
-- in an SMS-CAMEL-TDP-Data sequence contained in mt-sms-CSI then the receiver shall
-- ignore the whole SMS-CAMEL-TDP-Data sequence.
--
-- If this parameter is received with any other value than sms-DeliveryRequest
-- in an MT-smsCAMELTDP-Criteria sequence then the receiver shall
-- ignore the whole MT-smsCAMELTDP-Criteria sequence.

```

```
DefaultSMS-Handling ::= ENUMERATED {
    continueTransaction (0) ,
    releaseTransaction (1) ,
    ...
}
-- exception handling:
-- reception of values in range 2-31 shall be treated as "continueTransaction"
-- reception of values greater than 31 shall be treated as "releaseTransaction"
```

```
M-CSI ::= SEQUENCE {
    mobilityTriggers                  MobilityTriggers,
    serviceKey                        ServiceKey,
    gsmSCF-Address                    [0] ISDN-AddressString,
    extensionContainer                [1] ExtensionContainer      OPTIONAL,
    notificationToCSE                [2] NULL                   OPTIONAL,
    csi-Active                         [3] NULL                   OPTIONAL,
    ...
}
-- notificationToCSE and csi-Active shall not be present when M-CSI is sent to VLR.
-- They may only be included in ATSI/ATM ack/NSDC message.
```

```
MG-CSI ::= SEQUENCE {
    mobilityTriggers                  MobilityTriggers,
    serviceKey                        ServiceKey,
    gsmSCF-Address                    [0] ISDN-AddressString,
    extensionContainer                [1] ExtensionContainer      OPTIONAL,
    notificationToCSE                [2] NULL                   OPTIONAL,
    csi-Active                         [3] NULL                   OPTIONAL,
    ...
}
-- notificationToCSE and csi-Active shall not be present when MG-CSI is sent to SGSN.
-- They may only be included in ATSI/ATM ack/NSDC message.
```

```
MobilityTriggers ::= SEQUENCE SIZE (1..maxNumOfMobilityTriggers) OF
MM-Code
```

```
maxNumOfMobilityTriggers INTEGER ::= 10
```

```
MM-Code ::= OCTET STRING (SIZE (1))
-- This type is used to indicate a Mobility Management event.
-- Actions for the following MM-Code values are defined in CAMEL Phase 4:
--
-- CS domain MM events:
-- Location-update-in-same-VLR          MM-Code ::= '00000000'B
-- Location-update-to-other-VLR          MM-Code ::= '00000001'B
-- IMSI-Attach                          MM-Code ::= '00000010'B
-- MS-initiated-IMSI-Detach            MM-Code ::= '00000011'B
-- Network-initiated-IMSI-Detach       MM-Code ::= '00000100'B
--
-- PS domain MM events:
-- Routeing-Area-update-in-same-SGSN   MM-Code ::= '10000000'B
-- Routeing-Area-update-to-other-SGSN   MM-Code ::= '10000001'B
-- Routeing-Area-update-to-other-SGSN-disconnect-by-detach
--                                         MM-Code ::= '10000010'B
-- GPRS-Attach                           MM-Code ::= '10000011'B
-- MS-initiated-GPRS-Detach            MM-Code ::= '10000100'B
-- Network-initiated-GPRS-Detach       MM-Code ::= '10000101'B
-- Network-initiated-transfer-to-MS-not-reachable-for-paging
--                                         MM-Code ::= '10000110'B
--
-- If the MSC receives any other MM-code than the ones listed above for the
-- CS domain, then the MSC shall ignore that MM-code.
-- If the SGSN receives any other MM-code than the ones listed above for the
-- PS domain, then the SGSN shall ignore that MM-code.
```

```
T-CSI ::= SEQUENCE {
    t-BcsmCamelTDPDataList           T-BcsmCamelTDPDataList,
    extensionContainer                ExtensionContainer      OPTIONAL,
    ...
    camelCapabilityHandling          [0] CamelCapabilityHandling OPTIONAL,
    notificationToCSE                [1] NULL                   OPTIONAL,
    csi-Active                         [2] NULL                   OPTIONAL}
-- notificationToCSE and csi-Active shall not be present when VT-CSI/T-CSI is sent
-- to VLR/GMSC.
-- They may only be included in ATSI/ATM ack/NSDC message.
-- T-CSI shall not be segmented.
```

```
T-BcsmCamelTDPDataList ::= SEQUENCE SIZE (1..maxNumOfCamelTDPData) OF
  T-BcsmCamelTDPData
    --- T-BcsmCamelTDPDataList shall not contain more than one instance of
    --- T-BcsmCamelTDPData containing the same value for t-BcsmTriggerDetectionPoint.
    --- For CAMEL Phase 2, this means that only one instance of T-BcsmCamelTDPData is allowed
    --- with t-BcsmTriggerDetectionPoint being equal to DP12.
    --- For CAMEL Phase 3, more TDP's are allowed.
```

```
T-BcsmCamelTDPData ::= SEQUENCE {
  t-BcsmTriggerDetectionPoint           T-BcsmTriggerDetectionPoint,
  serviceKey                           ServiceKey,
  gsmSCF-Address                      [0] ISDN-AddressString,
  defaultCallHandling                 [1] DefaultCallHandling,
  extensionContainer                   [2] ExtensionContainer      OPTIONAL,
  ...}
```

```
T-BcsmTriggerDetectionPoint ::= ENUMERATED {
  termAttemptAuthorized (12),
  ...
  tBusy (13),
  tNoAnswer (14)}
  -- exception handling:
  -- For T-BcsmCamelTDPData sequences containing this parameter with any other
  -- value than the ones listed above, the receiver shall ignore the whole
  -- T-BcsmCamelTDPData sequence.
```

-- gprs location information retrieval types

```
SendRoutingInfoForGprsArg ::= SEQUENCE {
  imsi                               [0] IMSI,
  ggsn-Address                       [1] GSN-Address      OPTIONAL,
  ggsn-Number                         [2] ISDN-AddressString,
  extensionContainer                  [3] ExtensionContainer   OPTIONAL,
  ...}
```

```
SendRoutingInfoForGprsRes ::= SEQUENCE {
  sgsn-Address                        [0] GSN-Address,
  ggsn-Address                         [1] GSN-Address      OPTIONAL,
  mobileNotReachableReason            [2] AbsentSubscriberDiagnosticSM   OPTIONAL,
  extensionContainer                  [3] ExtensionContainer   OPTIONAL,
  ...}
```

-- failure report types

```
FailureReportArg ::= SEQUENCE {
  imsi                               [0] IMSI,
  ggsn-Number                        [1] ISDN-AddressString ,
  ggsn-Address                        [2] GSN-Address      OPTIONAL,
  extensionContainer                  [3] ExtensionContainer   OPTIONAL,
  ...}
```

```
FailureReportRes ::= SEQUENCE {
  ggsn-Address                        [0] GSN-Address      OPTIONAL,
  extensionContainer                  [1] ExtensionContainer   OPTIONAL,
  ...}
```

-- gprs notification types

```
NoteMsPresentForGprsArg ::= SEQUENCE {
  imsi                               [0] IMSI,
  ggsn-Address                       [1] GSN-Address,
  ggsn-Address                        [2] GSN-Address      OPTIONAL,
  extensionContainer                  [3] ExtensionContainer   OPTIONAL,
  ...}
```

```
NoteMsPresentForGprsRes ::= SEQUENCE {
  extensionContainer                  [0] ExtensionContainer   OPTIONAL,
  ...}
```

-- fault recovery types

```
ResetArg ::= SEQUENCE {
  hlr-Number                          ISDN-AddressString ,
  hlr-List                            HLR-List      OPTIONAL,
  ...}
```

```
RestoreDataArg ::= SEQUENCE {
    imsi                               IMSI,
    lmsi                               LMSI
    extensionContainer                 ExtensionContainer
    ...
    vlr-Capability                   [6] VLR-Capability
                                         OPTIONAL }
```

```
RestoreDataRes ::= SEQUENCE {
    hlr-Number                         ISDN-AddressString,
    msNotReachable                     NULL
    extensionContainer                 ExtensionContainer
    ...
}
```

-- VBS/VGCS types

```
VBSDataList ::= SEQUENCE SIZE (1..maxNumOfVBSSGroupIds) OF
    VoiceBroadcastData
```

```
VGCSDataList ::= SEQUENCE SIZE (1..maxNumOfVGCSGroupIds) OF
    VoiceGroupCallData
```

```
maxNumOfVBSSGroupIds INTEGER ::= 50
```

```
maxNumOfVGCSGroupIds INTEGER ::= 50
```

```
VoiceGroupCallData ::= SEQUENCE {
    groupId                            GroupId,
    extensionContainer                 ExtensionContainer
    ...
}
```

```
VoiceBroadcastData ::= SEQUENCE {
    groupId                            GroupId,
    broadcastInitEntitlement          NULL
    extensionContainer                 ExtensionContainer
    ...
}
```

```
GroupId ::= OCTET STRING (SIZE (3))
-- Refers to the Group Identification as specified in GSM TS 03.03
-- and 03.68/ 03.69
```

-- provide subscriber info types

```
ProvideSubscriberInfoArg ::= SEQUENCE {
    imsi      [0] IMSI,
    lmsi      [1] LMSI
    requestedInfo                  [2] RequestedInfo,
    extensionContainer              [3] ExtensionContainer
    ...
}
```

```
ProvideSubscriberInfoRes ::= SEQUENCE {
    subscriberInfo                  SubscriberInfo,
    extensionContainer               ExtensionContainer
    ...
}
```

```
SubscriberInfo ::= SEQUENCE {
    locationInformation             [0] LocationInformation
    subscriberState                 [1] SubscriberState
    extensionContainer              [2] ExtensionContainer
    ...
    locationInformationGPRS         [3] LocationInformationGPRS
    ps-SubscriberState              [4] PS-SubscriberState
    imei                           [5] IMEI
    ms-Classmark2                  [6] MS-Classmark2
    gprs-MS-Class                  [7] GPRSMSClass
-- If the HLR receives locationInformation, subscriberState or ms-Classmark2 from an SGSN
-- it shall discard them.
-- If the HLR receives locationInformationGPRS, ps-SubscriberState or gprs-MS-Class from
-- a VLR it shall discard them.
-- If the HLR receives parameters which it has not requested, it shall discard them.
```

```
MS-Classmark2 ::= OCTET STRING (SIZE (3))
-- This parameter carries the value part of the MS Classmark 2 IE defined in
-- 3GPP TS 24.008 [35].
```

```
GPRSMSClass ::= SEQUENCE {
    mSNetworkCapability                               [0] MSNetworkCapability,
    mSRadioAccessCapability                         [1] MSLRadioAccessCapability      OPTIONAL
}
```

```
MSNetworkCapability ::= OCTET STRING (SIZE (1..8))
-- This parameter carries the value part of the MS Network Capability IE defined in
-- 3GPP TS 24.008 [35].
```

```
MSRadioAccessCapability ::= OCTET STRING (SIZE (1..50))
-- This parameter carries the value part of the MS Radio Access Capability IE defined in
-- 3GPP TS 24.008 [35].
```

```
RequestedInfo ::= SEQUENCE {
    locationInformation          [0] NULL                  OPTIONAL,
    subscriberState              [1] NULL                  OPTIONAL,
    extensionContainer           [2] ExtensionContainer   OPTIONAL,
    ...
    currentLocation               [3] NULL                  OPTIONAL,
    requestedDomain              [4] DomainType          OPTIONAL,
    imei                          [6] NULL                  OPTIONAL,
    ms-classmark                 [5] NULL                  OPTIONAL
}
-- currentLocation shall be absent if locationInformation is absent
```

```
DomainType ::= ENUMERATED {
    cs-Domain                      (0),
    ps-Domain                      (1),
    ...
}
-- exception handling:
-- reception of values > 1 shall be mapped to 'cs-Domain'
```

```
LocationInformation ::= SEQUENCE {
    ageOfLocationInformation        AgeOfLocationInformation   OPTIONAL,
    geographicalInformation         [0] GeographicalInformation   OPTIONAL,
    vlr-number                     [1] ISDN-AddressString     OPTIONAL,
    locationNumber                 [2] LocationNumber          OPTIONAL,
    cellGlobalIdOrServiceAreaIdOrLAI [3] CellGlobalIdOrServiceAreaIdOrLAI OPTIONAL,
    extensionContainer              [4] ExtensionContainer       OPTIONAL,
    ...
    selectedLSA-Id                 [5] LSAIdentity            OPTIONAL,
    msc-Number                     [6] ISDN-AddressString     OPTIONAL,
    geodeticInformation             [7] GeodeticInformation      OPTIONAL,
    currentLocationRetrieved       [8] NULL                  OPTIONAL,
    sai-Present                    [9] NULL                  OPTIONAL
}
-- sai-Present indicates that the cellGlobalIdOrServiceAreaIdOrLAI parameter contains
-- a Service Area Identity.
-- currentLocationRetrieved shall be present
-- if the location information were retrieved after a successfull paging.
```

```
LocationInformationGPRS ::= SEQUENCE {
    cellGlobalIdOrServiceAreaIdOrLAI [0] CellGlobalIdOrServiceAreaIdOrLAI OPTIONAL,
    routeingAreaIdentity            [1] RAIdentity            OPTIONAL,
    geographicalInformation         [2] GeographicalInformation   OPTIONAL,
    sgsn-Number                     [3] ISDN-AddressString     OPTIONAL,
    selectedLSAIdentity             [4] LSAIdentity            OPTIONAL,
    extensionContainer              [5] ExtensionContainer       OPTIONAL,
    ...
    sai-Present                    [6] NULL                  OPTIONAL,
    geodeticInformation             [7] GeodeticInformation      OPTIONAL,
    currentLocationRetrieved       [8] NULL                  OPTIONAL,
    ageOfLocationInformation        [9] AgeOfLocationInformation   OPTIONAL
}
-- sai-Present indicates that the cellGlobalIdOrServiceAreaIdOrLAI parameter contains
-- a Service Area Identity.
-- currentLocationRetrieved shall be present if the location information
-- was retrieved after successful paging.
```

```
RAIdentity ::= OCTET STRING (SIZE (6))
-- Routing Area Identity is coded in accordance with 3GPP TS 29.060 [105].
-- It shall contain the value part defined in 3GPP TS 29.060 only. I.e. the 3GPP TS 29.060
-- type identifier octet shall not be included.
```

**GeographicalInformation** ::= OCTET STRING (SIZE (8))  
-- Refers to geographical Information defined in 3GPP TS 23.032.  
-- Only the description of an ellipsoid point with uncertainty circle  
-- as specified in 3GPP TS 23.032 is allowed to be used  
-- The internal structure according to 3GPP TS 23.032 is as follows:  
-- Type of shape (ellipsoid point with uncertainty circle) 1 octet  
-- Degrees of Latitude 3 octets  
-- Degrees of Longitude 3 octets  
-- Uncertainty code 1 octet

**GeodeticInformation** ::= OCTET STRING (SIZE (10))  
-- Refers to Calling Geodetic Location defined in Q.763 (1999).  
-- Only the description of an ellipsoid point with uncertainty circle  
-- as specified in Q.763 (1999) is allowed to be used  
-- The internal structure according to Q.763 (1999) is as follows:  
-- Screening and presentation indicators 1 octet  
-- Type of shape (ellipsoid point with uncertainty circle) 1 octet  
-- Degrees of Latitude 3 octets  
-- Degrees of Longitude 3 octets  
-- Uncertainty code 1 octet  
-- Confidence 1 octet

**LocationNumber** ::= OCTET STRING (SIZE (2..10))  
-- the internal structure is defined in ITU-T Rec Q.763

**SubscriberState** ::= CHOICE {  
assumedIdle [0] NULL,  
camelBusy [1] NULL,  
netDetNotReachable NotReachableReason,  
notProvidedFromVLR [2] NULL}

**PS-SubscriberState** ::= CHOICE {  
notProvidedFromSGSN [0] NULL,  
ps-Detached [1] NULL,  
ps-AttachedNotReachableForPaging [2] NULL,  
ps-AttachedReachableForPaging [3] NULL,  
ps-PDP-ActiveNotReachableForPaging [4] PDP-ContextInfoList,  
ps-PDP-ActiveReachableForPaging [5] PDP-ContextInfoList,  
netDetNotReachable NotReachableReason }

**PDP-ContextInfoList** ::= SEQUENCE SIZE (1..maxNumberOfPDP-Contexts) OF  
PDP-ContextInfo

**PDP-ContextInfo** ::= SEQUENCE {  
pdp-ContextIdentifier [0] ContextId,  
pdp-ContextActive [1] NULL OPTIONAL,  
pdp-Type [2] PDP-Type,  
pdp-Address [3] PDP-Address OPTIONAL,  
apn-Subscribed [4] APN OPTIONAL,  
apn-InUse [5] APN OPTIONAL,  
nsapi [6] NSAPI OPTIONAL,  
transactionId [7] TransactionId OPTIONAL,  
teid-ForGnAndGp [8] TEID OPTIONAL,  
teid-ForIu [9] TEID OPTIONAL,  
ggsn-Address [10] GSN-Address OPTIONAL,  
qos-Subscribed [11] Ext-QoS-Subscribed OPTIONAL,  
qos-Requested [12] Ext-QoS-Subscribed OPTIONAL,  
qos-Negotiated [13] Ext-QoS-Subscribed OPTIONAL,  
chargingId [14] GPRSChargingID OPTIONAL,  
chargingCharacteristics [15] ChargingCharacteristics OPTIONAL,  
rnc-Address [16] GSN-Address OPTIONAL,  
extensionContainer [17] ExtensionContainer OPTIONAL,  
...}

**NSAPI** ::= INTEGER (0..15)  
-- This type is used to indicate the Network layer Service Access Point

**TransactionId** ::= OCTET STRING (SIZE (1..2))  
-- This type carries the value part of the transaction identifier which is used in the  
-- session management messages on the access interface. The encoding is defined in  
-- 3GPP TS 24.008

**TEID** ::= OCTET STRING (SIZE (4))  
-- This type carries the value part of the Tunnel Endpoint Identifier which is used to  
-- distinguish between different tunnels between the same pair of entities which communicate  
-- using the GPRS Tunnelling Protocol. The encoding is defined in 3GPP TS 29.060.

```
GPRSChargingID ::= OCTET STRING (SIZE (4))
-- The Charging ID is a unique four octet value generated by the GGSN when
-- a PDP Context is activated. A Charging ID is generated for each activated context.
-- The encoding is defined in 3GPP TS 29.060.
```

```
NotReachableReason ::= ENUMERATED {
    msPurged (0),
    imsiDetached (1),
    restrictedArea (2),
    notRegistered (3)}
```

-- any time interrogation info types

```
AnyTimeInterrogationArg ::= SEQUENCE {
    subscriberIdentity [0] SubscriberIdentity,
    requestedInfo [1] RequestedInfo,
    gsmSCF-Address [3] ISDN-AddressString,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ...}
```

```
AnyTimeInterrogationRes ::= SEQUENCE {
    subscriberInfo [0] SubscriberInfo,
    extensionContainer [ExtensionContainer] OPTIONAL,
    ...}
```

-- any time information handling types

```
AnyTimeSubscriptionInterrogationArg ::= SEQUENCE {
    subscriberIdentity [0] SubscriberIdentity,
    requestedSubscriptionInfo [1] RequestedSubscriptionInfo,
    gsmSCF-Address [2] ISDN-AddressString,
    extensionContainer [3] ExtensionContainer OPTIONAL,
    longFTN-Supported [4] NULL OPTIONAL,
    ...}
```

```
AnyTimeSubscriptionInterrogationRes ::= SEQUENCE {
    callForwardingData [1] CallForwardingData OPTIONAL,
    callBarringData [2] CallBarringData OPTIONAL,
    odb-Info [3] ODB-Info OPTIONAL,
    camel-SubscriptionInfo [4] CAMEL-SubscriptionInfo OPTIONAL,
    supportedVLR-CAMEL-Phases [5] SupportedCamelPhases OPTIONAL,
    supportedSGSN-CAMEL-Phases [6] SupportedCamelPhases OPTIONAL,
    extensionContainer [7] ExtensionContainer OPTIONAL,
    ...,
    offeredCamel4CSIsInVLR [8] OfferedCamel4CSIs OPTIONAL,
    offeredCamel4CSIsInSGSN [9] OfferedCamel4CSIs OPTIONAL }
```

```
RequestedSubscriptionInfo ::= SEQUENCE {
    requestedSS-Info [1] SS-ForBS-Code OPTIONAL,
    odb [2] NULL OPTIONAL,
    requestedCAMEL-SubscriptionInfo [3] RequestedCAMEL-SubscriptionInfo OPTIONAL,
    supportedVLR-CAMEL-Phases [4] NULL OPTIONAL,
    supportedSGSN-CAMEL-Phases [5] NULL OPTIONAL,
    extensionContainer [6] ExtensionContainer OPTIONAL,
    ...,
    additionalRequestedCAMEL-SubscriptionInfo [7] AdditionalRequestedCAMEL-SubscriptionInfo OPTIONAL }
```

```
RequestedCAMEL-SubscriptionInfo ::= ENUMERATED {
    o-CSI (0),
    t-CSI (1),
    vt-CSI (2),
    tif-CSI (3),
    gprs-CSI (4),
    mo-sms-CSI (5),
    ss-CSI (6),
    m-CSI (7),
    d-csi (8)}
```

```
AdditionalRequestedCAMEL-SubscriptionInfo ::= ENUMERATED {
    mt-sms-CSI
    mg-csi
    o-IM-CSI
    d-IM-CSI
    vt-IM-CSI
    ...
}
-- exception handling: unknown values shall be discarded by the receiver.
```

```
CallForwardingData ::= SEQUENCE {
    forwardingFeatureList           Ext-ForwFeatureList,
    notificationToCSE               NULL
    extensionContainer              [0] ExtensionContainer
    ...
}
```

```
CallBarringData ::= SEQUENCE {
    callBarringFeatureList          Ext-CallBarFeatureList,
    password                         Password
    wrongPasswordAttemptsCounter    WrongPasswordAttemptsCounter
    notificationToCSE               NULL
    extensionContainer              ExtensionContainer
    ...
}
```

```
WrongPasswordAttemptsCounter ::= INTEGER (0..4)
```

```
ODB-Info ::= SEQUENCE {
    odb-Data
    notificationToCSE
    extensionContainer
    ...
}
```

```
CAMEL-SubscriptionInfo ::= SEQUENCE {
    o-CSI
    o-BcsmCamelTDP-CriteriaList
    d-CSI
    t-CSI
    t-BCSM-CAMEL-TDP-CriteriaList
    vt-CSI
    vt-BCSM-CAMEL-TDP-CriteriaList
    tif-CSI
    tif-CSI-NotificationToCSE
    gprs-CSI
    mo-sms-CSI
    ss-CSI
    m-CSI
    extensionContainer
    ...
    specificCSIDeletedList
    mt-sms-CSI
    mt-smsCAMELTDP-CriteriaList
    mg-csi
    o-IM-CSI
    o-IM-BcsmCamelTDP-CriteriaList
    d-IM-CSI
    vt-IM-CSI
    vt-IM-BCSM-CAMEL-TDP-CriteriaList
}
```

[0]	O-CSI	OPTIONAL,
[1]	O-BcsmCamelTDPCriteriaList	OPTIONAL,
[2]	D-CSI	OPTIONAL,
[3]	T-CSI	OPTIONAL,
[4]	T-BCSM-CAMEL-TDP-CriteriaList	OPTIONAL,
[5]	T-CSI	OPTIONAL,
[6]	T-BCSM-CAMEL-TDP-CriteriaList	OPTIONAL,
[7]	NULL	OPTIONAL,
[8]	NULL	OPTIONAL,
[9]	GPRS-CSI	OPTIONAL,
[10]	SMS-CSI	OPTIONAL,
[11]	SS-CSI	OPTIONAL,
[12]	M-CSI	OPTIONAL,
[13]	ExtensionContainer	OPTIONAL,
[14]	SpecificCSI-Withdraw	OPTIONAL,
[15]	SMS-CSI	OPTIONAL,
[16]	MT-smsCAMELTDP-CriteriaList	OPTIONAL,
[17]	MG-CSI	OPTIONAL,
[18]	O-CSI	OPTIONAL,
[19]	O-BcsmCamelTDPCriteriaList	OPTIONAL,
[20]	D-CSI	OPTIONAL,
[21]	T-CSI	OPTIONAL,
[22]	T-BCSM-CAMEL-TDP-CriteriaList	OPTIONAL,

```
AnyTimeModificationArg ::= SEQUENCE {
    subscriberIdentity
    gsmSCF-Address
    modificationRequestFor-CF-Info
    modificationRequestFor-CB-Info
    modificationRequestFor-CSI
    extensionContainer
    longFTN-Supported
    ...
    modificationRequestFor-ODB-data
}
```

[0]	SubscriberIdentity,	
[1]	ISDN-AddressString,	
[2]	ModificationRequestFor-CF-Info	OPTIONAL,
[3]	ModificationRequestFor-CB-Info	OPTIONAL,
[4]	ModificationRequestFor-CSI	OPTIONAL,
[5]	ExtensionContainer	OPTIONAL,
[6]	NULL	OPTIONAL,
[7]	ModificationRequestFor-ODB-data	OPTIONAL }

```
AnyTimeModificationRes ::= SEQUENCE {
    ss-InfoFor-CSE
    camel-SubscriptionInfo
    extensionContainer
    ...
    odb-Info
}
```

[0]	Ext-SS-InfoFor-CSE	OPTIONAL,
[1]	CAMEL-SubscriptionInfo	OPTIONAL,
[2]	ExtensionContainer	OPTIONAL,
[3]	ODB-Info	OPTIONAL }

```
ModificationRequestFor-CF-Info ::= SEQUENCE {
    ss-Code                               [0] SS-Code,
    basicService                          [1] Ext-BasicServiceCode      OPTIONAL,
    ss-Status                             [2] Ext-SS-Status           OPTIONAL,
    forwardedToNumber                     [3] AddressString          OPTIONAL,
    forwardedToSubaddress                [4] ISDN-SubaddressString   OPTIONAL,
    noReplyConditionTime                 [5] Ext-NoRepCondTime       OPTIONAL,
    modifyNotificationToCSE              [6] ModificationInstruction  OPTIONAL,
    extensionContainer                   [7] ExtensionContainer      OPTIONAL,
    ...
}
```

```
ModificationRequestFor-CB-Info ::= SEQUENCE {
    ss-Code                               [0] SS-Code,
    basicService                         [1] Ext-BasicServiceCode      OPTIONAL,
    ss-Status                            [2] Ext-SS-Status           OPTIONAL,
    password                             [3] Password                OPTIONAL,
    wrongPasswordAttemptsCounter        [4] WrongPasswordAttemptsCounter OPTIONAL,
    modifyNotificationToCSE             [5] ModificationInstruction  OPTIONAL,
    extensionContainer                  [6] ExtensionContainer      OPTIONAL,
    ...
}
```

```
ModificationRequestFor-ODB-data ::= SEQUENCE {
    odb-data                             [0] ODB-Data                OPTIONAL,
    modifyNotificationToCSE              [1] ModificationInstruction  OPTIONAL,
    extensionContainer                  [2] ExtensionContainer      OPTIONAL,
    ...
}
```

```
ModificationRequestFor-CSI ::= SEQUENCE {
    requestedCamel-SubscriptionInfo     [0] RequestedCAMEL-SubscriptionInfo,
    modifyNotificationToCSE             [1] ModificationInstruction      OPTIONAL,
    modifyCSI-State                    [2] ModificationInstruction      OPTIONAL,
    extensionContainer                 [3] ExtensionContainer        OPTIONAL,
    ...
    additionalRequestedCAMEL-SubscriptionInfo
    [4] AdditionalRequestedCAMEL-SubscriptionInfo
    OPTIONAL
}
-- requestedCamel-SubscriptionInfo shall be discarded if
-- additionalRequestedCAMEL-SubscriptionInfo is received
```

```
ModificationInstruction ::= ENUMERATED {
    deactivate                           (0),
    activate                            (1)
}
```

-- subscriber data modification notification types

```
NoteSubscriberDataModifiedArg ::= SEQUENCE {
    imsi                                IMSI,
    msisdn                             ISDN-AddressString,
    forwardingInfoFor-CSE               [0] Ext-ForwardingInfoFor-CSE      OPTIONAL,
    callBarringInfoFor-CSE              [1] Ext-CallBarringInfoFor-CSE    OPTIONAL,
    odb-Info                            [2] ODB-Info                OPTIONAL,
    camel-SubscriptionInfo            [3] CAMEL-SubscriptionInfo      OPTIONAL,
    allInformationSent                 [4] NULL                   OPTIONAL,
    extensionContainer                 ExtensionContainer        OPTIONAL,
    ...
}
```

```
NoteSubscriberDataModifiedRes ::= SEQUENCE {
    extensionContainer                  ExtensionContainer      OPTIONAL,
    ...
}
```

-- mobility management event notificatioon info types

```
NoteMM-EventArgs ::= SEQUENCE {
    serviceKey                           ServiceKey,
    eventMet                            [0] MM-Code,
    imsi                                [1] IMSI,
    msisdn                             [2] ISDN-AddressString,
    locationInformation                 [3] LocationInformation      OPTIONAL,
    supportedCAMELPhases               [5] SupportedCamelPhases    OPTIONAL,
    extensionContainer                  [6] ExtensionContainer      OPTIONAL,
    ...
    locationInformationGPRS            [7] LocationInformationGPRS  OPTIONAL,
    offeredCamel4Functionalities      [8] OfferedCamel4Functionalities OPTIONAL
}
```

<b>NoteMM-EventRes</b> ::= SEQUENCE { extensionContainer ...}	ExtensionContainer	OPTIONAL,
---	--------------------	-----------

<b>Ext-SS-InfoFor-CSE</b> ::= CHOICE { forwardingInfoFor-CSE callBarringInfoFor-CSE }	[0] Ext-ForwardingInfoFor-CSE, [1] Ext-CallBarringInfoFor-CSE	
--	--	--

<b>Ext-ForwardingInfoFor-CSE</b> ::= SEQUENCE { ss-Code forwardingFeatureList notificationToCSE extensionContainer ...}	[0] SS-Code, [1] Ext-ForwFeatureList, [2] NULL [3] ExtensionContainer	OPTIONAL, OPTIONAL, OPTIONAL,
--	--	-------------------------------------

<b>Ext-CallBarringInfoFor-CSE</b> ::= SEQUENCE { ss-Code callBarringFeatureList password wrongPasswordAttemptsCounter notificationToCSE extensionContainer ...}	[0] SS-Code, [1] Ext-CallBarFeatureList, [2] Password [3] WrongPasswordAttemptsCounter [4] NULL [5] ExtensionContainer	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL,
--	---	---

END

## 17.7.2 Operation and maintenance data types

```
MAP-OM-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-OM-DataTypes (12) version8 (8)}
```

DEFINITIONS

IMPLICIT TAGS

::=

BEGIN

EXPORTS

```
ActivateTraceModeArg,
ActivateTraceModeRes,
DeactivateTraceModeArg,
DeactivateTraceModeRes
```

;

IMPORTS

```
AddressString,
IMSI
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}
```

```
ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
```

;

<b>ActivateTraceModeArg</b> ::= SEQUENCE { imsi traceReference traceType omc-Id extensionContainer ...}	[0] IMSI [1] TraceReference, [2] TraceType, [3] AddressString [4] ExtensionContainer	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL,
---	--	--

<b>TraceReference</b> ::= OCTET STRING (SIZE (1..2))
--

```

TraceType ::= INTEGER
(0..255)
-- Trace types are fully defined in TS GSM 12.08.

ActivateTraceModeRes ::= SEQUENCE {
    extensionContainer [0] ExtensionContainer OPTIONAL,
    ...
}

DeactivateTraceModeArg ::= SEQUENCE {
    imsI [0] IMSI OPTIONAL,
    traceReference [1] TraceReference,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ...
}

DeactivateTraceModeRes ::= SEQUENCE {
    extensionContainer [0] ExtensionContainer OPTIONAL,
    ...
}

```

END

### 17.7.3 Call handling data types

```

MAP-CH-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CH-DataTypes (13) version8 (8)}

```

DEFINITIONS

IMPLICIT TAGS

::=

BEGIN

EXPORTS

```

    SendRoutingInfoArg,
    SendRoutingInfoRes,
    ProvideRoamingNumberArg,
    ProvideRoamingNumberRes,
    ResumeCallHandlingArg,
    ResumeCallHandlingRes,
    NumberOfForwarding,
    SuppressionOfAnnouncement,
    CallReferenceNumber,
    ProvideSIWFSTNumberArg,
    ProvideSIWFSTNumberRes,
    SIWFSSignallingModifyArg,
    SIWFSSignallingModifyRes,
    SetReportingStateArg,
    SetReportingStateRes,
    StatusReportArg,
    StatusReportRes,
    RemoteUserFreeArg,
    RemoteUserFreeRes,
    IST-AlertArg,
    IST-AlertRes,
    IST-CommandArg,
    IST-CommandRes
;
```

IMPORTS

```

    SubscriberInfo,
    SupportedCamelPhases,
    OfferedCamel4CSIs,
    CUG-Interlock,
    O-CSI,
    D-CSI,
    O-BcsmCamelTDPCriteriaList,
    T-BCSM-CAMEL-TDP-CriteriaList,
    IST-SupportIndicator,
    IST-AlertTimerValue,
    T-CSI

```

```

FROM MAP-MS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-MS-DataTypes (11) version8 (8)}

```

```

ForwardingOptions,
SS-List,
CCBS-Feature
FROM MAP-SS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)

    ISDN-AddressString,
    ISDN-SubaddressString,
    FTN-AddressString,
    ExternalSignalInfo,
    Ext-ExternalSignalInfo,
    IMSI,
    LMSI,
    Ext-BasicServiceCode,
    AlertingPattern,
    NAEA-PreferredCI
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)
;

```

<b>CUG-CheckInfo</b> ::= SEQUENCE {		
cug-Interlock	CUG-Interlock,	OPTIONAL,
cug-OutgoingAccess	NULL	OPTIONAL,
extensionContainer	ExtensionContainer	OPTIONAL,
...		

<b>NumberOfForwarding</b> ::= INTEGER (1..5)
--

<b>SendRoutingInfoArg</b> ::= SEQUENCE {		
msisdn	[0] ISDN-AddressString,	OPTIONAL,
cug-CheckInfo	[1] CUG-CheckInfo	OPTIONAL,
numberOfForwarding	[2] NumberOfForwarding	OPTIONAL,
interrogationType	[3] InterrogationType,	
or-Interrogation	[4] NULL	OPTIONAL,
or-Capability	[5] OR-Phase	OPTIONAL,
gmsc-OrGsmSCF-Address	[6] ISDN-AddressString,	OPTIONAL,
callReferenceNumber	[7] CallReferenceNumber	OPTIONAL,
forwardingReason	[8] ForwardingReason	OPTIONAL,
basicServiceGroup	[9] Ext-BasicServiceCode	OPTIONAL,
networkSignalInfo	[10] ExternalSignalInfo	OPTIONAL,
camelInfo	[11] CamelInfo	OPTIONAL,
suppressionOfAnnouncement	[12] SuppressionOfAnnouncement	OPTIONAL,
extensionContainer	[13] ExtensionContainer	OPTIONAL,
...		
alertingPattern	[14] AlertingPattern	OPTIONAL,
ccbs-Call	[15] NULL	OPTIONAL,
supportedCCBS-Phase	[16] SupportedCCBS-Phase	OPTIONAL,
additionalSignalInfo	[17] Ext-ExternalSignalInfo	OPTIONAL,
istSupportIndicator	[18] IST-SupportIndicator	OPTIONAL,
pre-pagingSupported	[19] NULL	OPTIONAL,
callDiversionTreatmentIndicator	[20] CallDiversionTreatmentIndicator	OPTIONAL,
longFTN-Supported	[21] NULL	OPTIONAL,
suppress-VT-CSI	[22] NULL	OPTIONAL,
suppressIncomingCallBarring	[23] NULL	OPTIONAL,
gsmSCF-InitiatedCall	[24] NULL	OPTIONAL,

<b>SuppressionOfAnnouncement</b> ::= NULL
---

<b>InterrogationType</b> ::= ENUMERATED {
basicCall (0),
forwarding (1)}

<b>OR-Phase</b> ::= INTEGER (1..127)
--------------------------------------

<b>CallReferenceNumber</b> ::= OCTET STRING (SIZE (1..8))
---

```
ForwardingReason ::= ENUMERATED {
    notReachable (0),
    busy (1),
    noReply (2)}
```

```
SupportedCCBS-Phase ::= INTEGER (1..127)
-- exception handling:
-- Only value 1 is used.
-- Values in the ranges 2-127 are reserved for future use.
-- If received values 2-127 shall be mapped on to value 1.
```

```
CallDiversionTreatmentIndicator ::= OCTET STRING (SIZE(1))
-- callDiversionAllowed (xxxx xx01)
-- callDiversionNotAllowed (xxxx xx10)
-- network default is call diversion allowed
```

```
SendRoutingInfoRes ::= [3] SEQUENCE {
    imsi [9] IMSI OPTIONAL,
    -- IMSI must be present if SendRoutingInfoRes is not segmented.
    -- If the TC-Result-NL segmentation option is taken the IMSI must be
    -- present in one segmented transmission of SendRoutingInfoRes.
    extendedRoutingInfo ExtendedRoutingInfo OPTIONAL,
    cug-CheckInfo [3] CUG-CheckInfo OPTIONAL,
    cugSubscriptionFlag [6] NULL OPTIONAL,
    subscriberInfo [7] SubscriberInfo OPTIONAL,
    ss-List [1] SS-List OPTIONAL,
    basicService [5] Ext-BasicServiceCode OPTIONAL,
    forwardingInterrogationRequired [4] NULL OPTIONAL,
    vmsc-Address [2] ISDN-AddressString OPTIONAL,
    extensionContainer [0] ExtensionContainer OPTIONAL,
    ...
    naea-PreferredCI [10] NAEA-PreferredCI OPTIONAL,
    -- naea-PreferredCI is included at the discretion of the HLR operator.
    cbcs-Indicators [11] CCBS-Indicators OPTIONAL,
    msisdn [12] ISDN-AddressString OPTIONAL,
    numberPortabilityStatus [13] NumberPortabilityStatus OPTIONAL,
    istAlertTimer [14] IST-AlertTimerValue OPTIONAL,
    supportedCamelPhasesInVMSC [15] SupportedCamelPhases OPTIONAL,
    offeredCamel4CSIsInVMSC [16] OfferedCamel4CSIs OPTIONAL
}
```

```
NumberPortabilityStatus ::= ENUMERATED {
    notKnownToBePorted (0),
    ownNumberPortedOut (1),
    foreignNumberPortedToForeignNetwork (2),
    ...
}
-- exception handling:
-- reception of other values than the ones listed the receiver shall ignore the
-- whole NumberPortabilityStatus
```

```
CCBS-Indicators ::= SEQUENCE {
    ccbs-Possible [0] NULL OPTIONAL,
    keepCCBS-CallIndicator [1] NULL OPTIONAL,
    extensionContainer [2] ExtensionContainer OPTIONAL,
    ...}
```

```
RoutingInfo ::= CHOICE {
    roamingNumber ISDN-AddressString,
    forwardingData ForwardingData}
```

```
ForwardingData ::= SEQUENCE {
    forwardedToNumber [5] ISDN-AddressString OPTIONAL,
    -- When this datatype is sent from an HLR which supports CAMEL Phase 2
    -- to a GMSC which supports CAMEL Phase 2 the GMSC shall not check the
    -- format of the number
    forwardedToSubaddress [4] ISDN-SubaddressString OPTIONAL,
    forwardingOptions [6] ForwardingOptions OPTIONAL,
    extensionContainer [7] ExtensionContainer OPTIONAL,
    ...
    longForwardedToNumber [8] FTN-AddressString OPTIONAL}
```

```
ProvideRoamingNumberArg ::= SEQUENCE {
  imsI,
  msc-Number,
  msisdn,
  lmsI,
  gsm-BearerCapability,
  networkSignalInfo,
  suppressionOfAnnouncement,
  gmsc-Address,
  callReferenceNumber,
  or-Interrogation,
  extensionContainer,
  ...
  alertingPattern,
  cbcs-Call,
  supportedCamelPhasesInGMSC,
  additionalSignalInfo,
  orNotSupportedInGMSC,
  pre-pagingSupported,
  longFTN-Supported,
  suppress-VT-CSI,
  offeredCamel4CSIsInGMSC
}
```

```
ProvideRoamingNumberRes ::= SEQUENCE {
  roamingNumber ISDN-AddressString,
  extensionContainer ExtensionContainer
  ...
}
```

```
ResumeCallHandlingArg ::= SEQUENCE {
  callReferenceNumber OPTIONAL,
  basicServiceGroup OPTIONAL,
  forwardingData OPTIONAL,
  imsI OPTIONAL,
  cug-CheckInfo OPTIONAL,
  o-CSI OPTIONAL,
  extensionContainer OPTIONAL,
  cbcs-Possible OPTIONAL,
  msisdn OPTIONAL,
  uu-Data OPTIONAL,
  allInformationSent OPTIONAL,
  ...
  d-csi OPTIONAL,
  o-BcsmCamelTDPCriteriaList OPTIONAL }
```

```
UU-Data ::= SEQUENCE {
  uuIndicator OPTIONAL,
  uui OPTIONAL,
  usCFInteraction OPTIONAL,
  extensionContainer OPTIONAL,
  ...
}
```

```
UUIndicator ::= OCTET STRING (SIZE (1))
-- Octets are coded according to ETS 300 356
```

```
UUI ::= OCTET STRING (SIZE (1..131))
-- Octets are coded according to ETS 300 356
```

```
ResumeCallHandlingRes ::= SEQUENCE {
  extensionContainer ExtensionContainer
  ...
}
```

```
CamelInfo ::= SEQUENCE {
  supportedCamelPhases SupportedCamelPhases,
  suppress-T-CSI NULL
  extensionContainer ExtensionContainer
  ...
  offeredCamel4CSIs [0] OfferedCamel4CSIs
}
```

```
ExtendedRoutingInfo ::= CHOICE {
  routingInfo RoutingInfo,
  camelRoutingInfo [8] CamelRoutingInfo}
```

<b>CamelRoutingInfo</b> ::= SEQUENCE {		
forwardingData	ForwardingData	OPTIONAL,
gmscCamelSubscriptionInfo	[0] GmscCamelSubscriptionInfo,	
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

<b>GmscCamelSubscriptionInfo</b> ::= SEQUENCE {		
t-CSI	[0] T-CSI OPTIONAL,	
o-CSI	[1] O-CSI OPTIONAL,	
extensionContainer	[2] ExtensionContainer	OPTIONAL,
...		
o-BcsmCamelTDP-CriteriaList	[3] O-BcsmCamelTDPCriteriaList	OPTIONAL,
t-BCSM-CAMEL-TDP-CriteriaList	[4] T-BCSM-CAMEL-TDP-CriteriaList	OPTIONAL,
d-csi	[5] D-CSI	OPTIONAL}

<b>ProvideSIWFSSNumberArg</b> ::= SEQUENCE {		
gsm-BearerCapability	[0] ExternalSignalInfo,	
isdn-BearerCapability	[1] ExternalSignalInfo,	
call-Direction	[2] CallDirection,	
b-Subscriber-Address	[3] ISDN-AddressString,	
chosenChannel	[4] ExternalSignalInfo,	
lowerLayerCompatibility	[5] ExternalSignalInfo	OPTIONAL,
highLayerCompatibility	[6] ExternalSignalInfo	OPTIONAL,
extensionContainer	[7] ExtensionContainer	OPTIONAL,
...		

<b>CallDirection</b> ::= OCTET STRING (SIZE (1))		
-- OCTET 1		
-- bit 1 (direction of call)		
-- 0 Mobile Originated Call (MOC)		
-- 1 Mobile Terminated Call (MTC)		

<b>ProvideSIWFSSNumberRes</b> ::= SEQUENCE {		
siwfssNumber	[0] ISDN-AddressString,	
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

<b>SIWFSSignallingModifyArg</b> ::= SEQUENCE {		
channelType	[0] ExternalSignalInfo	OPTIONAL,
chosenChannel	[1] ExternalSignalInfo	OPTIONAL,
extensionContainer	[2] ExtensionContainer	OPTIONAL,
...		

<b>SIWFSSignallingModifyRes</b> ::= SEQUENCE {		
chosenChannel	[0] ExternalSignalInfo	OPTIONAL,
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

<b>SetReportingStateArg</b> ::= SEQUENCE {		
imsi	[0] IMSI	OPTIONAL,
lmsi	[1] LMSI	OPTIONAL,
ccbs-Monitoring	[2] ReportingState	OPTIONAL,
extensionContainer	[3] ExtensionContainer	OPTIONAL,
...		

<b>ReportingState</b> ::= ENUMERATED {		
stopMonitoring	(0),	
startMonitoring	(1),	
...		
-- exception handling:		
-- reception of values 2-10 shall be mapped to 'stopMonitoring'		
-- reception of values > 10 shall be mapped to 'startMonitoring'		

<b>SetReportingStateRes</b> ::= SEQUENCE {		
ccbs-SubscriberStatus	[0] CCBS-SubscriberStatus	OPTIONAL,
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

```
CCBS-SubscriberStatus ::= ENUMERATED {
  ccbsNotIdle                               (0),
  ccbsIdle                                  (1),
  ccbsNotReachable                         (2),
  ...
  -- exception handling:
  -- reception of values 3-10 shall be mapped to 'ccbsNotIdle'
  -- reception of values 11-20 shall be mapped to 'ccbsIdle'
  -- reception of values > 20 shall be mapped to 'ccbsNotReachable'
```

<b>StatusReportArg ::= SEQUENCE {</b>		
imsi	[0] IMSI,	
eventReportData	[1] EventReportData	OPTIONAL,
callReportdata	[2] CallReportData	OPTIONAL,
extensionContainer	[3] ExtensionContainer	OPTIONAL,
...		

<b>EventReportData ::= SEQUENCE{</b>		
ccbs-SubscriberStatus	[0] CCBS-SubscriberStatus	OPTIONAL,
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

<b>CallReportData ::= SEQUENCE{</b>		
monitoringMode	[0] MonitoringMode	OPTIONAL,
callOutcome	[1] CallOutcome	OPTIONAL,
extensionContainer	[2] ExtensionContainer	OPTIONAL,
...		

<b>MonitoringMode ::= ENUMERATED {</b>		
a-side	(0),	
b-side	(1),	
...		
-- exception handling:		
-- reception of values 2-10 shall be mapped 'a-side'		
-- reception of values > 10 shall be mapped to 'b-side'		

<b>CallOutcome ::= ENUMERATED {</b>		
success	(0),	
failure	(1),	
busy	(2),	
...		
-- exception handling:		
-- reception of values 3-10 shall be mapped to 'success'		
-- reception of values 11-20 shall be mapped to 'failure'		
-- reception of values > 20 shall be mapped to 'busy'		

<b>StatusReportRes ::= SEQUENCE {</b>		
extensionContainer	[0] ExtensionContainer	OPTIONAL,
...		

<b>RemoteUserFreeArg ::= SEQUENCE{</b>		
imsi	[0] IMSI,	
callInfo	[1] ExternalSignalInfo,	
ccbs-Feature	[2] CCBS-Feature,	
translatedB-Number	[3] ISDN-AddressString,	
replaceB-Number	[4] NULL	OPTIONAL,
alertingPattern	[5] AlertingPattern	OPTIONAL,
extensionContainer	[6] ExtensionContainer	OPTIONAL,
...		

<b>RemoteUserFreeRes ::= SEQUENCE{</b>		
ruf-Outcome	[0] RUF-Outcome,	
extensionContainer	[1] ExtensionContainer	OPTIONAL,
...		

```
RUF-Outcome ::= ENUMERATED{
    accepted (0),
    rejected (1),
    noResponseFromFreeMS (2), -- T4 Expiry
    noResponseFromBusyMS (3), -- T10 Expiry
    udubFromFreeMS (4),
    udubFromBusyMS (5),
    ...
}
-- exception handling:
-- reception of values 6-20 shall be mapped to 'accepted'
-- reception of values 21-30 shall be mapped to 'rejected'
-- reception of values 31-40 shall be mapped to 'noResponseFromFreeMS'
-- reception of values 41-50 shall be mapped to 'noResponseFromBusyMS'
-- reception of values 51-60 shall be mapped to 'udubFromFreeMS'
-- reception of values > 60 shall be mapped to 'udubFromBusyMS'
```

<b>IST-AlertArg</b> ::= SEQUENCE{			
imsi	[0]	IMSI,	
extensionContainer	[1]	ExtensionContainer	OPTIONAL,
...			

<b>IST-AlertRes</b> ::= SEQUENCE{			
istAlertTimer	[0]	IST-AlertTimerValue	OPTIONAL,
istInformationWithdraw	[1]	NULL	OPTIONAL,
callTerminationIndicator	[2]	CallTerminationIndicator	OPTIONAL,
extensionContainer	[3]	ExtensionContainer	OPTIONAL,
...			

<b>IST-CommandArg</b> ::= SEQUENCE{			
imsi	[0]	IMSI,	
extensionContainer	[1]	ExtensionContainer	OPTIONAL,
...			

<b>IST-CommandRes</b> ::= SEQUENCE{			
extensionContainer		ExtensionContainer	OPTIONAL,
...			

```
CallTerminationIndicator ::= ENUMERATED {
    terminateCallActivityReferred (0),
    terminateAllCallActivities (1),
    ...
}
-- exception handling:
-- reception of values 2-10 shall be mapped to 'terminateCallActivityReferred'
-- reception of values > 10 shall be mapped to 'terminateAllCallActivities'

-- In MSCs not supporting linkage of all call activities, any value received shall
-- be interpreted as 'terminateCallActivityReferred'
```

END

## 17.7.4 Supplementary service data types

```
MAP-SS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)}
```

DEFINITIONS

IMPLICIT TAGS

::=

BEGIN

```
EXPORTS
    RegisterSS-Arg,
    SS-Info,
    SS-Status,
    SS-SubscriptionOption,
    SS-ForBS-Code,
    InterrogateSS-Res,
    USSD-Arg,
    USSD-Res,
    USSD-DataCodingScheme,
    USSD-String,
    Password,
    GuidanceInfo,
```

```

SS-List,
SS-InfoList,
OverrideCategory,
CliRestrictionOption,
NoReplyConditionTime,
ForwardingOptions,
maxNumOfSS,
SS-Data,
SS-InvocationNotificationArg,
SS-InvocationNotificationRes,
CCBS-Feature,
RegisterCC-EntryArg,
RegisterCC-EntryRes,
EraseCC-EntryArg,
EraseCC-EntryRes
;

IMPORTS
AddressString,
ISDN-AddressString,
ISDN-SubaddressString,
FTN-AddressString,
IMSI,
BasicServiceCode,
AlertingPattern,
EMLPP-Priority,
MaxMC-Bearers,
MC-Bearers,
ExternalSignalInfo
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)

    SS-Code
FROM MAP-SS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}
;
```

<b>RegisterSS-Arg</b> ::= SEQUENCE {		
ss-Code	SS-Code,	
basicService	BasicServiceCode	OPTIONAL,
forwardedToNumber	[4] AddressString	OPTIONAL,
forwardedToSubaddress	[6] ISDN-SubaddressString	OPTIONAL,
noReplyConditionTime	[5] NoReplyConditionTime	OPTIONAL,
....		
defaultPriority	[7] EMLPP-Priority	OPTIONAL,
nbrUser	[8] MC-Bearers	OPTIONAL,
longFTN-Supported	[9] NULL	OPTIONAL }

```
NoReplyConditionTime ::= INTEGER (5..30)

SS-Info ::= CHOICE {
    forwardingInfo [0] ForwardingInfo,
    callBarringInfo [1] CallBarringInfo,
```

```
ForwardingInfo ::= SEQUENCE {
    ss-Code                               SS-Code
    forwardingFeatureList                 ForwardingFeatureList,
    }                                     OPTIONAL,
```

```
ForwardingFeatureList ::=  
    SEQUENCE SIZE (1..maxNumberOfBasicServiceGroups) OF  
        ForwardingFeature
```

```
ForwardingFeature ::= SEQUENCE {
    basicService                                BasicServiceCode           OPTIONAL,
    ss-Status                                     [4] SS-Status             OPTIONAL,
    forwardedToNumber                            [5] ISDN-AddressString   OPTIONAL,
    forwardedToSubaddress                         [8] ISDN-SubaddressString OPTIONAL,
    forwardingOptions                            [6] ForwardingOptions    OPTIONAL,
    noReplyConditionTime                        [7] NoReplyConditionTime OPTIONAL,
    ...,
    longForwardedToNumber                      [9] FTN-AddressString    OPTIONAL }
```

```
SS-Status ::= OCTET STRING (SIZE (1))

-- bits 8765: 0000 (unused)
-- bits 4321: Used to convey the "P bit", "R bit", "A bit" and "Q bit",
--             representing supplementary service state information
--             as defined in TS 3GPP TS 23.011 [22]

-- bit 4: "Q bit"

-- bit 3: "P bit"

-- bit 2: "R bit"

-- bit 1: "A bit"
```

```
ForwardingOptions ::= OCTET STRING (SIZE (1))

-- bit 8: notification to forwarding party
-- 0 no notification
-- 1 notification

-- bit 7: redirecting presentation
-- 0 no presentation
-- 1 presentation

-- bit 6: notification to calling party
-- 0 no notification
-- 1 notification

-- bit 5: 0 (unused)

-- bits 43: forwarding reason
-- 00 ms not reachable
-- 01 ms busy
-- 10 no reply
-- 11 unconditional when used in a SRI Result,
-- or call deflection when used in a RCH Argument
-- bits 21: 00 (unused)
```

```
CallBarringInfo ::= SEQUENCE {
    ss-Code                                      SS-Code                OPTIONAL,
    callBarringFeatureList                      CallBarringFeatureList,
    ...}
```

```
CallBarringFeatureList ::= SEQUENCE SIZE (1..maxNumOfBasicServiceGroups) OF
CallBarringFeature
```

```
CallBarringFeature ::= SEQUENCE {
    basicService                                BasicServiceCode           OPTIONAL,
    ss-Status [4] SS-Status             OPTIONAL,
    ...}
```

```
SS-Data ::= SEQUENCE {
    ss-Code                                      SS-Code                OPTIONAL,
    ss-Status                                     [4] SS-Status             OPTIONAL,
    ss-SubscriptionOption                       SS-SubscriptionOption   OPTIONAL,
    basicServiceGroupList                      BasicServiceGroupList  OPTIONAL,
    ...,
    defaultPriority                             EMLPP-Priority          OPTIONAL,
    nbrUser                                     [5] MC-Bearers            OPTIONAL
    }}
```

```
SS-SubscriptionOption ::= CHOICE {
    cliRestrictionOption                      [2] CliRestrictionOption,
    overrideCategory                           [1] OverrideCategory}
```

```
CliRestrictionOption ::= ENUMERATED {
    permanent (0),
    temporaryDefaultRestricted (1),
    temporaryDefaultAllowed (2)}
```

```
OverrideCategory ::= ENUMERATED {
    overrideEnabled (0),
    overrideDisabled (1)}
```

```
SS-ForBS-Code ::= SEQUENCE {
    ss-Code                               SS-Code,
    basicService                          BasicServiceCode      OPTIONAL,
    ...,
    longFTN-Supported                    [4] NULL            OPTIONAL }
```

```
GenericServiceInfo ::= SEQUENCE {
    ss-Status SS-Status,
    cliRestrictionOption           CliRestrictionOption   OPTIONAL,
    ...,
    maximumEntitledPriority        [0] EMLPP-Priority    OPTIONAL,
    defaultPriority                [1] EMLPP-Priority    OPTIONAL,
    ccbs-FeatureList               [2] CCBS-FeatureList  OPTIONAL,
    nbrSB                         [3] MaxMC-Bearers    OPTIONAL,
    nbrUser                        [4] MC-Bearers        OPTIONAL,
    nbrSN                         [5] MC-Bearers        OPTIONAL }
```

```
CCBS-FeatureList ::= SEQUENCE SIZE (1..maxNumOfCCBS-Requests) OF
                           CCBS-Feature
```

```
maxNumOfCCBS-Requests INTEGER ::= 5
```

```
CCBS-Feature ::= SEQUENCE {
    ccbs-Index                      [0] CCBS-Index        OPTIONAL,
    b-subscriberNumber              [1] ISDN-AddressString OPTIONAL,
    b-subscriberSubaddress          [2] ISDN-SubaddressString OPTIONAL,
    basicServiceGroup               [3] BasicServiceCode   OPTIONAL,
    ...}
```

```
CCBS-Index ::= INTEGER (1..maxNumOfCCBS-Requests)
```

```
InterrogateSS-Res ::= CHOICE {
    ss-Status                      [0] SS-Status,
    basicServiceGroupList          [2] BasicServiceGroupList,
    forwardingFeatureList          [3] ForwardingFeatureList,
    genericServiceInfo             [4] GenericServiceInfo }
```

```
USSD-Arg ::= SEQUENCE {
    ussd-DataCodingScheme          USSD-DataCodingScheme,
    ussd-String                   USSD-String,
    ... ,
    alertingPattern               AlertingPattern      OPTIONAL,
    msisdn                        [0] ISDN-AddressString OPTIONAL }
```

```
USSD-Res ::= SEQUENCE {
    ussd-DataCodingScheme          USSD-DataCodingScheme,
    ussd-String                   USSD-String,
    ... }
```

```
USSD-DataCodingScheme ::= OCTET STRING (SIZE (1))
-- The structure of the USSD-DataCodingScheme is defined by
-- the Cell Broadcast Data Coding Scheme as described in
-- TS 3GPP TS 23.038 [25]
```

```
USSD-String ::= OCTET STRING (SIZE (1..maxUSSD-StringLength))
-- The structure of the contents of the USSD-String is dependent
-- on the USSD-DataCodingScheme as described in TS 3GPP TS 23.038 [25].
```

```
maxUSSD-StringLength INTEGER ::= 160
```

```
Password ::= NumericString
(FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9"))
(SIZE (4))
```

```
GuidanceInfo ::= ENUMERATED {
    enterPW (0),
    enterNewPW (1),
    enterNewPW-Again (2)
    -- How this information is really delivered to the subscriber
    -- (display, announcement, ...) is not part of this
    -- specification.
```

```
SS-List ::= SEQUENCE SIZE (1..maxNumOfSS) OF
    SS-Code
```

```
maxNumOfSS INTEGER ::= 30
```

```
SS-InfoList ::= SEQUENCE SIZE (1..maxNumOfSS) OF
    SS-Info
```

```
BasicServiceGroupList ::= SEQUENCE SIZE (1..maxNumOfBasicServiceGroups) OF
    BasicServiceCode
```

```
maxNumOfBasicServiceGroups INTEGER ::= 13
```

```
SS-InvocationNotificationArg ::= SEQUENCE {
    imsi [0] IMSI,
    msisdn [1] ISDN-AddressString,
    ss-Event [2] SS-Code,
    -- The following SS-Code values are allowed :
    -- ect [3] SS-Code ::= '00110001'B
    -- multiPTY [4] SS-Code ::= '01010001'B
    -- cd [5] SS-Code ::= '00100100'B
    -- ccbs [6] SS-Code ::= '01000100'B
    ss-EventSpecification [3] SS-EventSpecification OPTIONAL,
    extensionContainer [4] ExtensionContainer OPTIONAL,
    ...,
    b-subscriberNumber [5] ISDN-AddressString OPTIONAL,
    ccbs-RequestState [6] CCBS-RequestState OPTIONAL
}
```

```
CCBS-RequestState ::= ENUMERATED {
    request (0),
    recall (1),
    active (2),
    completed (3),
    suspended (4),
    frozen (5),
    deleted (6)
}
```

```
SS-InvocationNotificationRes ::= SEQUENCE {
    extensionContainer ExtensionContainer OPTIONAL,
    ...
}
```

```
SS-EventSpecification ::= SEQUENCE SIZE (1..maxEventSpecification) OF
    AddressString
```

```
maxEventSpecification INTEGER ::= 2
```

```
RegisterCC-EntryArg ::= SEQUENCE {
    ss-Code [0] SS-Code,
    ccbs-Data [1] CCBS-Data OPTIONAL,
    ...}
```

```
CCBS-Data ::= SEQUENCE {
    ccbs-Feature [0] CCBS-Feature,
    translatedB-Number [1] ISDN-AddressString,
    serviceIndicator [2] ServiceIndicator OPTIONAL,
    callInfo [3] ExternalSignalInfo,
    networkSignalInfo [4] ExternalSignalInfo,
    ...}
```

```
ServiceIndicator ::= BIT STRING {
    clir-invoked (0),
    camel-invoked (1)} (SIZE(2..32))
    -- exception handling:
    -- bits 2 to 31 shall be ignored if received and not understood
```

```

RegisterCC-EntryRes ::= SEQUENCE {
    ccbs-Feature                               [0] CCBS-Feature
                                                OPTIONAL,
    ...
}

EraseCC-EntryArg ::= SEQUENCE {
    ss-Code                                     [0] SS-Code,
    ccbs-Index                                  [1] CCBS-Index
                                                OPTIONAL,
    ...
}

EraseCC-EntryRes ::= SEQUENCE {
    ss-Code                                     [0] SS-Code,
    ss-Status                                   [1] SS-Status
                                                OPTIONAL,
    ...
}

```

END

## 17.7.5 Supplementary service codes

```

MAP-SS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}

```

DEFINITIONS

::=

BEGIN

```

ss-Code ::= OCTET STRING (SIZE (1))
    -- This type is used to represent the code identifying a single
    -- supplementary service, a group of supplementary services, or
    -- all supplementary services. The services and abbreviations
    -- used are defined in TS 3GPP TS 22.004 [5]. The internal structure is
    -- defined as follows:
    --
    -- bits 87654321: group (bits 8765), and specific service
    -- (bits 4321)

```

<b>allSS</b>	SS-Code ::= '00000000'B
-- reserved for possible future use	
-- all SS	

<b>allLineIdentificationSS</b>	SS-Code ::= '00010000'B
-- reserved for possible future use	
-- all line identification SS	
<b>clip</b>	SS-Code ::= '00010001'B
-- calling line identification presentation	
<b>clir</b>	SS-Code ::= '00010010'B
-- calling line identification restriction	
<b>colp</b>	SS-Code ::= '00010011'B
-- connected line identification presentation	
<b>colr</b>	SS-Code ::= '00010100'B
-- connected line identification restriction	
<b>mci</b>	SS-Code ::= '00010101'B
-- reserved for possible future use	
-- malicious call identification	
<b>allNameIdentificationSS</b>	SS-Code ::= '00011000'B
-- all name identification SS	
<b>cnap</b>	SS-Code ::= '00011001'B
-- calling name presentation	
-- SS-Codes '00011010'B to '00011111'B are reserved for future	
-- NameIdentification Supplementary Service use.	

<b>allForwardingSS</b>	SS-Code ::= '00100000'B
-- all forwarding SS	
<b>cfu</b>	SS-Code ::= '00100001'B
-- call forwarding unconditional	
<b>allCondForwardingSS</b>	SS-Code ::= '00101000'B
-- all conditional forwarding SS	
<b>cfb</b>	SS-Code ::= '00101001'B
-- call forwarding on mobile subscriber busy	
<b>cfnry</b>	SS-Code ::= '00101010'B
-- call forwarding on no reply	
<b>cfnrc</b>	SS-Code ::= '00101011'B
-- call forwarding on mobile subscriber not reachable	
<b>cd</b>	SS-Code ::= '00100100'B
-- call deflection	

<b>allCallOfferingSS</b>	SS-Code ::= '00110000'B
-- reserved for possible future use	
-- all call offering SS includes also all forwarding SS	
<b>ect</b>	SS-Code ::= '00110001'B
-- explicit call transfer	
<b>mah</b>	SS-Code ::= '00110010'B
-- reserved for possible future use	
-- mobile access hunting	

<b>allCallCompletionSS</b>	SS-Code ::= '01000000'B
-- reserved for possible future use	
-- all Call completion SS	
<b>cw</b>	SS-Code ::= '01000001'B
-- call waiting	
<b>hold</b>	SS-Code ::= '01000010'B
-- call hold	
<b>ccbs-A</b>	SS-Code ::= '01000011'B
-- completion of call to busy subscribers, originating side	
<b>ccbs-B</b>	SS-Code ::= '01000100'B
-- completion of call to busy subscribers, destination side	
-- this SS-Code is used only in InsertSubscriberData and DeleteSubscriberData	
<b>mc</b>	SS-Code ::= '01000101'B
-- multicall	

<b>allMultiPartySS</b>	SS-Code ::= '01010000'B
-- reserved for possible future use	
-- all multiparty SS	
<b>multiPTY</b>	SS-Code ::= '01010001'B
-- multiparty	

<b>allCommunityOfInterest-SS</b>	SS-Code ::= '01100000'B
-- reserved for possible future use	
-- all community of interest SS	
<b>cug</b>	SS-Code ::= '01100001'B
-- closed user group	

<b>allChargingSS</b>	SS-Code ::= '01110000'B
-- reserved for possible future use	
-- all charging SS	
<b>aoci</b>	SS-Code ::= '01110001'B
-- advice of charge information	
<b>aocc</b>	SS-Code ::= '01110010'B
-- advice of charge charging	

<b>allAdditionalInfoTransferSS</b>	SS-Code ::= '10000000'B
-- reserved for possible future use	
-- all additional information transfer SS	
<b>uus1</b>	SS-Code ::= '10000001'B
-- UUS1 user-to-user signalling	
<b>uus2</b>	SS-Code ::= '10000010'B
-- UUS2 user-to-user signalling	
<b>uus3</b>	SS-Code ::= '10000011'B
-- UUS3 user-to-user signalling	

<b>allBarringSS</b>	SS-Code ::= '10010000'B
-- all barring SS	
<b>barringOfOutgoingCalls</b>	SS-Code ::= '10010001'B
-- barring of outgoing calls	
<b>baoc</b>	SS-Code ::= '10010010'B
-- barring of all outgoing calls	
<b>boic</b>	SS-Code ::= '10010011'B
-- barring of outgoing international calls	
<b>boicExHC</b>	SS-Code ::= '10010100'B
-- barring of outgoing international calls except those directed	
-- to the home PLMN	
<b>barringOfIncomingCalls</b>	SS-Code ::= '10011001'B
-- barring of incoming calls	
<b>baic</b>	SS-Code ::= '10011010'B
-- barring of all incoming calls	
<b>bicRoam</b>	SS-Code ::= '10011011'B
-- barring of incoming calls when roaming outside home PLMN	
-- Country	

<b>allPLMN-specificSS</b>	SS-Code ::= '11110000'B
<b>plmn-specificSS-1</b>	SS-Code ::= '11110001'B
<b>plmn-specificSS-2</b>	SS-Code ::= '11110010'B
<b>plmn-specificSS-3</b>	SS-Code ::= '11110011'B
<b>plmn-specificSS-4</b>	SS-Code ::= '11110100'B
<b>plmn-specificSS-5</b>	SS-Code ::= '11110101'B
<b>plmn-specificSS-6</b>	SS-Code ::= '11110110'B
<b>plmn-specificSS-7</b>	SS-Code ::= '11110111'B
<b>plmn-specificSS-8</b>	SS-Code ::= '11111000'B
<b>plmn-specificSS-9</b>	SS-Code ::= '11111001'B
<b>plmn-specificSS-A</b>	SS-Code ::= '11111010'B
<b>plmn-specificSS-B</b>	SS-Code ::= '11111011'B
<b>plmn-specificSS-C</b>	SS-Code ::= '11111100'B
<b>plmn-specificSS-D</b>	SS-Code ::= '11111101'B
<b>plmn-specificSS-E</b>	SS-Code ::= '11111110'B
<b>plmn-specificSS-F</b>	SS-Code ::= '11111111'B

<b>allCallPrioritySS</b>	SS-Code ::= '10100000'B
-- reserved for possible future use	
-- all call priority SS	
<b>eMLPP</b>	SS-Code ::= '10100001'B
-- enhanced Multilevel Precedence Pre-emption (EMLPP) service	

<b>allLCSPrivacyException</b>	SS-Code ::= '10110000'B
-- all LCS Privacy Exception Classes	
<b>universal</b>	SS-Code ::= '10110001'B
-- allow location by any LCS client	
<b>callSessionRelated</b>	SS-Code ::= '10110010'B
-- allow location by any value added LCS client to which a call/session	
-- is established from the target MS	
<b>callSessionUnrelated</b>	SS-Code ::= '10110011'B
-- allow location by designated external value added LCS clients	
<b>plmnoperator</b>	SS-Code ::= '10110100'B
-- allow location by designated PLMN operator LCS clients	
<b>serviceType</b>	SS-Code ::= '10110101'B
-- allow location by LCS clients of a designated LCS service type	

<b>allMOLR-SS</b>	SS-Code ::= '110000000'B
-- all Mobile Originating Location Request Classes	
<b>basicSelfLocation</b>	SS-Code ::= '110000001'B
-- allow an MS to request its own location	
<b>autonomousSelfLocation</b>	SS-Code ::= '110000010'B
-- allow an MS to perform self location without interaction	
-- with the PLMN for a predetermined period of time	
<b>transferToThirdParty</b>	SS-Code ::= '110000011'B
-- allow an MS to request transfer of its location to another LCS client	

END

## 17.7.6 Short message data types

```
MAP-SM-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SM-DataTypes (16) version8 (8)}
```

DEFINITIONS

IMPLICIT TAGS

```

BEGIN

EXPORTS
    RoutingInfoForSM-Arg,
    RoutingInfoForSM-Res,
    MO-ForwardSM-Arg,
    MO-ForwardSM-Res,
    MT-ForwardSM-Arg,
    MT-ForwardSM-Res,
    ReportSM-DeliveryStatusArg,
    ReportSM-DeliveryStatusRes,
    AlertServiceCentreArg,
    InformServiceCentreArg,
    ReadyForSM-Arg,
    ReadyForSM-Res,
    SM-DeliveryOutcome,
    AlertReason,
    Additional-Number
;

IMPORTS
    AddressString,
    ISDN-AddressString,
    SignalInfo,
    IMSI,
    LMSI
FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

    AbsentSubscriberDiagnosticSM
FROM MAP-ER-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ER-DataTypes (17) version8 (8)}

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
;

```

```
SM-RP-MTI ::= INTEGER (0..10)
    -- 0 SMS Deliver
    -- 1 SMS Status Report
    -- other values are reserved for future use and shall be discarded if
    -- received
```

**SM-RP-SMEA** ::= OCTET STRING (SIZE (1..12))  
-- this parameter contains an address field which is encoded  
-- as defined in 3GPP TS 23.140. An address field contains 3 elements :  
-- address-length  
-- type-of-address  
-- address-value

```
RoutingInfoForSM-Res ::= SEQUENCE {
    imsi                               IMSI,
    locationInfoWithLMSI               [ 0 ] LocationInfoWithLMSI,
    extensionContainer                 [ 4 ] ExtensionContainer
    ...
}                                     OPTIONAL,
```

```
LocationInfoWithLMSI ::= SEQUENCE {
    networkNode-Number           [1] ISDN-AddressString,
    lmsi                          LMSI                               OPTIONAL,
    extensionContainer            ExtensionContainer          OPTIONAL,
    ...,
    gprsNodeIndicator             [5] NULL                            OPTIONAL,
    -- gprsNodeIndicator is set only if the SGSN number is sent as the
    -- Network Node Number
    additional-Number              [6] Additional-Number        OPTIONAL
    -- NetworkNode-number can be either msc-number or sgsn-number
}
```

```
Additional-Number ::= CHOICE {
    msc-Number                   [0] ISDN-AddressString,
    sgsn-Number                  [1] ISDN-AddressString
    -- additional-number can be either msc-number or sgsn-number
    -- if received networkNode-number is msc-number then the
    -- additional number is sgsn-number
    -- if received networkNode-number is sgsn-number then the
    -- additional number is msc-number
```

```
MO-ForwardSM-Arg ::= SEQUENCE {
    sm-RP-DA                     SM-RP-DA,
    sm-RP-OA                     SM-RP-OA,
    sm-RP-UI                     SignalInfo,
    extensionContainer            ExtensionContainer        OPTIONAL,
    ...,
    imsi                         IMSI                OPTIONAL }
```

```
MO-ForwardSM-Res ::= SEQUENCE {
    sm-RP-UI                     SignalInfo        OPTIONAL,
    extensionContainer            ExtensionContainer  OPTIONAL,
    ... }
```

```
MT-ForwardSM-Arg ::= SEQUENCE {
    sm-RP-DA                     SM-RP-DA,
    sm-RP-OA                     SM-RP-OA,
    sm-RP-UI                     SignalInfo,
    moreMessagesToSend            NULL                OPTIONAL,
    extensionContainer            ExtensionContainer  OPTIONAL,
    ... }
```

```
MT-ForwardSM-Res ::= SEQUENCE {
    sm-RP-UI                     SignalInfo        OPTIONAL,
    extensionContainer            ExtensionContainer  OPTIONAL,
    ... }
```

```
SM-RP-DA ::= CHOICE {
    imsi                         [0] IMSI,
    lmsi                          [1] LMSI,
    serviceCentreAddressDA        [4] AddressString,
    noSM-RP-DA                   [5] NULL }
```

```
SM-RP-OA ::= CHOICE {
    msisdn                       [2] ISDN-AddressString,
    serviceCentreAddressOA       [4] AddressString,
    noSM-RP-OA                   [5] NULL }
```

```
ReportSM-DeliveryStatusArg ::= SEQUENCE {
    msisdn ISDN-AddressString,
    serviceCentreAddress AddressString,
    sm-DeliveryOutcome SM-DeliveryOutcome,
    absentSubscriberDiagnosticSM [0] AbsentSubscriberDiagnosticSM
                                OPTIONAL,
    extensionContainer [1] ExtensionContainer
                        OPTIONAL,
    ...
    gprsSupportIndicator [2] NULL
    -- gprsSupportIndicator is set only if the SMS-GMSC supports handling of two delivery outcomes
    deliveryOutcomeIndicator [3] NULL
    -- DeliveryOutcomeIndicator is set when the SM-DeliveryOutcome is for GPRS
    additionalSM-DeliveryOutcome [4] SM-DeliveryOutcome
    -- If received, additionalSM-DeliveryOutcome is for GPRS
    -- If DeliveryOutcomeIndicator is set, then AdditionalSM-DeliveryOutcome shall be absent
    additionalAbsentSubscriberDiagnosticSM [5] AbsentSubscriberDiagnosticSM OPTIONAL
    -- If received additionalAbsentSubscriberDiagnosticSM is for GPRS
    -- If DeliveryOutcomeIndicator is set, then AdditionalAbsentSubscriberDiagnosticSM shall be absent
}
```

```
SM-DeliveryOutcome ::= ENUMERATED {
    memoryCapacityExceeded (0),
    absentSubscriber (1),
    successfulTransfer (2)}
```

```
ReportSM-DeliveryStatusRes ::= SEQUENCE {
    storedMSISDN ISDN-AddressString
    extensionContainer ExtensionContainer
    ...}
```

```
AlertServiceCentreArg ::= SEQUENCE {
    msisdn ISDN-AddressString,
    serviceCentreAddress AddressString,
    ...}
```

```
InformServiceCentreArg ::= SEQUENCE {
    storedMSISDN ISDN-AddressString
    mw-Status MW-Status
    extensionContainer ExtensionContainer
    ...
    absentSubscriberDiagnosticSM AbsentSubscriberDiagnosticSM
    additionalAbsentSubscriberDiagnosticSM [0] AbsentSubscriberDiagnosticSM OPTIONAL
    -- additionalAbsentSubscriberDiagnosticSM may be present only if absentSubscriberDiagnosticSM is present.
    -- if included, additionalAbsentSubscriberDiagnosticSM is for GPRS and absentSubscriberDiagnosticSM is for non-GPRS
```

```
MW-Status ::= BIT STRING {
    sc-AddressNotIncluded (0),
    mnrf-Set (1),
    mcef-Set (2),
    mnrg-Set (3) } (SIZE (6..16))
    -- exception handling:
    -- bits 4 to 15 shall be ignored if received and not understood
```

```
ReadyForSM-Arg ::= SEQUENCE {
    imsi [0] IMSI,
    alertReason AlertReason,
    alertReasonIndicator NULL
    -- alertReasonIndicator is set only when the alertReason sent to HLR is for GPRS
    extensionContainer ExtensionContainer
    ...}
```

```
ReadyForSM-Res ::= SEQUENCE {
    extensionContainer ExtensionContainer
    ...}
```

```
AlertReason ::= ENUMERATED {
    ms-Present (0),
    memoryAvailable (1)}
```

END

## 17.7.7 Error data types

```

MAP-ER-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ER-DataTypes (17) version8 (8)

DEFINITIONS

IMPLICIT TAGS

::=


BEGIN

EXPORTS
    RoamingNotAllowedParam,
    CallBarredParam,
    CUG-RejectParam,
    SS-IncompatibilityCause,
    PW-RegistrationFailureCause,
    SM-DeliveryFailureCause,
    SystemFailureParam,
    DataMissingParam,
    UnexpectedDataParam,
    FacilityNotSupParam,
    OR-NotAllowedParam,
    UnknownSubscriberParam,
    NumberChangedParam,
    UnidentifiedSubParam,
    IllegalSubscriberParam,
    IllegalEquipmentParam,
    BearerServNotProvParam,
    TeleservNotProvParam,
    TracingBufferFullParam,
    NoRoamingNbParam,
    AbsentSubscriberParam,
    BusySubscriberParam,
    NoSubscriberReplyParam,
    ForwardingViolationParam,
    ForwardingFailedParam,
    ATI-NotAllowedParam,
    SubBusyForMT-SMS-Param,
    MessageWaitListFullParam,
    AbsentSubscriberSM-Param,
    AbsentSubscriberDiagnosticSM,
    ResourceLimitationParam,
    NoGroupCallNbParam,
    IncompatibleTerminalParam,
    ShortTermDenialParam,
    LongTermDenialParam,
    UnauthorizedRequestingNetwork-Param,
    UnauthorizedLCSClient-Param,
    PositionMethodFailure-Param,
    UnknownOrUnreachableLCSClient-Param,
    MM-EventNotSupported-Param,
    SecureTransportErrorParam,
    ATSI-NotAllowedParam,
    ATM-NotAllowedParam,
    IllegalSS-OperationParam,
    SS-NotAvailableParam,
    SS-SubscriptionViolationParam,
    InformationNotAvailableParam,
    TargetCellOutsideGCA-Param

;

IMPORTS
    SS-Status
FROM MAP-SS-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-DataTypes (14) version8 (8)

    SignalInfo,
    BasicServiceCode,
    NetworkResource
}

```

```

FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

    SecurityHeader,
    ProtectedPayload
FROM MAP-ST-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ST-DataTypes (27) version8 (8)}

    SS-Code
FROM MAP-SS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
;

RoamingNotAllowedParam ::= SEQUENCE {
    roamingNotAllowedCause          RoamingNotAllowedCause,
    extensionContainer               ExtensionContainer           OPTIONAL,
    ...}

RoamingNotAllowedCause ::= ENUMERATED {
    plmnRoamingNotAllowed (0),
    operatorDeterminedBarring (3)}

CallBarredParam ::= CHOICE {
    callBarringCause                CallBarringCause,
    -- call BarringCause must not be used in version 3 and higher
    extensibleCallBarredParam       ExtensibleCallBarredParam
    -- extensibleCallBarredParam must not be used in version <3
}

CallBarringCause ::= ENUMERATED {
    barringServiceActive (0),
    operatorBarring (1)}

ExtensibleCallBarredParam ::= SEQUENCE {
    callBarringCause                CallBarringCause           OPTIONAL,
    extensionContainer              ExtensionContainer         OPTIONAL,
    ... ,
    unauthorisedMessageOriginator [1] NULL                  OPTIONAL }

CUG-RejectParam ::= SEQUENCE {
    cug-RejectCause                CUG-RejectCause          OPTIONAL,
    extensionContainer              ExtensionContainer         OPTIONAL,
    ...}

CUG-RejectCause ::= ENUMERATED {
    incomingCallsBarredWithinCUG (0),
    subscriberNotMemberOfCUG (1),
    requestedBasicServiceViolatesCUG-Constraints (5),
    calledPartySS-InteractionViolation (7)}

SS-IncompatibilityCause ::= SEQUENCE {
    ss-Code                         [1] SS-Code             OPTIONAL,
    basicService                    BasicServiceCode        OPTIONAL,
    ss-Status                       [4] SS-Status          OPTIONAL,
    ...}

PW-RegistrationFailureCause ::= ENUMERATED {
    undetermined (0),
    invalidFormat (1),
    newPasswordsMismatch (2)}

```

```
SM-EnumeratedDeliveryFailureCause ::= ENUMERATED {
    memoryCapacityExceeded (0),
    equipmentProtocolError (1),
    equipmentNotSM-Equipped (2),
    unknownServiceCentre (3),
    sc-Congestion (4),
    invalidSME-Address (5),
    subscriberNotSC-Subscriber (6)}
```

```
SM-DeliveryFailureCause ::= SEQUENCE {
    sm-EnumeratedDeliveryFailureCause     SM-EnumeratedDeliveryFailureCause,
    diagnosticInfo                      SignalInfo                  OPTIONAL,
    extensionContainer                   ExtensionContainer          OPTIONAL,
    ...}
```

```
AbsentSubscriberSM-Param ::= SEQUENCE {
    absentSubscriberDiagnosticSM      AbsentSubscriberDiagnosticSM      OPTIONAL,
    -- AbsentSubscriberDiagnosticSM can be either for non-GPRS
    -- or for GPRS
    extensionContainer                ExtensionContainer            OPTIONAL,
    ...,
    additionalAbsentSubscriberDiagnosticSM [0] AbsentSubscriberDiagnosticSM OPTIONAL }
    -- if received, additionalAbsentSubscriberDiagnosticSM
    -- is for GPRS and absentSubscriberDiagnosticSM is
    -- for non-GPRS
```

```
AbsentSubscriberDiagnosticSM ::= INTEGER (0..255)
    -- AbsentSubscriberDiagnosticSM values are defined in ETS 300 536 (3GPP TS 23.140)
```

```
SystemFailureParam ::= CHOICE {
    networkResource           NetworkResource,
    -- networkResource must not be used in version 3
    extensibleSystemFailureParam ExtensibleSystemFailureParam
    -- extensibleSystemFailureParam must not be used in version <3
}
```

```
ExtensibleSystemFailureParam ::= SEQUENCE {
    networkResource           NetworkResource      OPTIONAL,
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...}
```

```
DataMissingParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...}
```

```
UnexpectedDataParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...}
```

```
FacilityNotSupParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...,
    shapeOfLocationEstimateNotSupported [0] NULL      OPTIONAL,
    neededLcsCapabilityNotSupportedInServingNode [1] NULL    OPTIONAL }
```

```
OR-NotAllowedParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...}
```

```
UnknownSubscriberParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...,
    unknownSubscriberDiagnostic UnknownSubscriberDiagnostic OPTIONAL}
```

```
UnknownSubscriberDiagnostic ::= ENUMERATED {
    imsUnknown (0),
    gprsSubscriptionUnknown (1),
    ...,
    npdbMismatch (2)}
    -- if unknown values are received in
    -- UnknownSubscriberDiagnostic they shall be discarded
```

```
NumberChangedParam ::= SEQUENCE {
    extensionContainer        ExtensionContainer    OPTIONAL,
    ...}
```

<b>UnidentifiedSubParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>IllegalSubscriberParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>IllegalEquipmentParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>BearerServNotProvParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>TeleservNotProvParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>TracingBufferFullParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>NoRoamingNbParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>AbsentSubscriberParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...,		
absentSubscriberReason	[ 0 ] AbsentSubscriberReason	OPTIONAL }
<b>AbsentSubscriberReason ::= ENUMERATED {</b>		
imsiDetach (0),		
restrictedArea (1),		
noPageResponse (2),		
...,		
purgedMS (3)}		
-- exception handling: at reception of other values than the ones listed the		
-- AbsentSubscriberReason shall be ignored.		
-- The AbsentSubscriberReason: purgedMS is defined for the Super-Charger feature		
-- (see TS 23.116). If this value is received in a Provide Roaming Number response		
-- it shall be mapped to the AbsentSubscriberReason: imsiDetach in the Send Routeing		
-- Information response		
<b>BusySubscriberParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...,		
ccbs-Possible	[ 0 ] NULL	OPTIONAL,
ccbs-Busy	[ 1 ] NULL	OPTIONAL }
<b>NoSubscriberReplyParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>ForwardingViolationParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>ForwardingFailedParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>ATI-NotAllowedParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>ATSI-NotAllowedParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		
<b>ATM-NotAllowedParam ::= SEQUENCE {</b>		
extensionContainer	ExtensionContainer	OPTIONAL,
...		

<b>IllegalSS-OperationParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>SS-NotAvailableParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>SS-SubscriptionViolationParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>InformationNotAvailableParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>SubBusyForMT-SMS-Param ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>... ,</b>			
<b>gprsConnectionSuspended</b>	<b>NULL</b>		<b>OPTIONAL }</b>
<b>-- If GprsConnectionSuspended is not understood it shall</b>			
<b>-- be discarded</b>			
<b>MessageWaitListFullParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>ResourceLimitationParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>NoGroupCallNbParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>IncompatibleTerminalParam ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>ShortTermDenialParam ::= SEQUENCE {</b>	<b>...</b>		
<b>LongTermDenialParam ::= SEQUENCE {</b>	<b>...</b>		
<b>UnauthorizedRequestingNetwork-Param ::= SEQUENCE {</b>	<b>extensionContainer</b>	<b>ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>...}</b>			
<b>UnauthorizedLCSCClient-Param ::= SEQUENCE {</b>	<b>unauthorizedLCSCClient-Diagnostic</b>	<b>[0] UnauthorizedLCSCClient-Diagnostic</b>	<b>OPTIONAL,</b>
<b>extensionContainer</b>		<b>[1] ExtensionContainer</b>	<b>OPTIONAL,</b>
<b>... }</b>			
<b>UnauthorizedLCSCClient-Diagnostic ::= ENUMERATED {</b>			
<b>noAdditionalInformation (0),</b>			
<b>clientNotInMSPrivacyExceptionList (1),</b>			
<b>callToClientNotSetup (2),</b>			
<b>privacyOverrideNotApplicable (3),</b>			
<b>disallowedByLocalRegulatoryRequirements (4),</b>			
<b>... ,</b>			
<b>unauthorizedPrivacyClass (5),</b>			
<b>unauthorizedCallSessionUnrelatedExternalClient (6),</b>			
<b>unauthorizedCallSessionRelatedExternalClient (7) }</b>			
<b>-- exception handling:</b>			
<b>-- any unrecognized value shall be ignored</b>			
<b>PositionMethodFailure-Param ::= SEQUENCE {</b>			
<b>positionMethodFailure-Diagnostic</b>	<b>[0] PositionMethodFailure-Diagnostic</b>	<b>OPTIONAL,</b>	
<b>extensionContainer</b>	<b>[1] ExtensionContainer</b>		<b>OPTIONAL,</b>
<b>... }</b>			

```
PositionMethodFailure-Diagnostic ::= ENUMERATED {
    congestion (0),
    insufficientResources (1),
    insufficientMeasurementData (2),
    inconsistentMeasurementData (3),
    locationProcedureNotCompleted (4),
    locationProcedureNotSupportedByTargetMS (5),
    qosNotAttainable (6),
    positionMethodNotAvailableInNetwork (7),
    positionMethodNotAvailableInLocationArea (8),
    ...
}
-- exception handling:
-- any unrecognized value shall be ignored
```

<b>UnknownOrUnreachableLCSClient-Param</b> ::= SEQUENCE {		
extensionContainer	ExtensionContainer	OPTIONAL,
...		

<b>MM-EventNotSupported-Param</b> ::= SEQUENCE {		
extensionContainer	ExtensionContainer	OPTIONAL,
...		

<b>TargetCellOutsideGCA-Param</b> ::= SEQUENCE {		
extensionContainer	ExtensionContainer	OPTIONAL,
...		

<b>SecureTransportErrorParam</b> ::= SEQUENCE {		
securityHeader	SecurityHeader,	
protectedPayload	ProtectedPayload	OPTIONAL
}		
-- The protectedPayload carries the result of applying the security function		
-- defined in 3GPP TS 33.200 to the encoding of the securely transported error		
-- parameter		

END

## 17.7.8 Common data types

**MAP-CommonDataTypes** {  
 itu-t identified-organization (4) etsi (0) mobileDomain (0)  
 gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

DEFINITIONS

IMPLICIT TAGS

::=

BEGIN

EXPORTS

```
-- general data types and values
AddressString,
ISDN-AddressString,
maxISDN-AddressLength,
FTN-AddressString,
ISDN-SubaddressString,
ExternalSignalInfo,
Ext-ExternalSignalInfo,
AccessNetworkSignalInfo,
SignalInfo,
maxSignalInfoLength,
AlertingPattern,

-- data types for numbering and identification
IMSI,
TMSI,
Identity,
SubscriberId,
IMEI,
HLR-List,
LMSI,
GlobalCellId,
NetworkResource,
NAEA-PreferredCI,
```

```

NAEA-CIC,
ASCII-CallReference,
SubscriberIdentity,

-- data types for CAMEL
CellGlobalIdOrServiceAreaIdOrLAI,

-- data types for subscriber management
BasicServiceCode,
Ext-BasicServiceCode,
EMLPP-Info,
EMLPP-Priority,
MC-SS-Info,
MaxMC-Bearers,
MC-Bearers,
Ext-SS-Status,

-- data types for geographic location
AgeOfLocationInformation,
LCSClientExternalID,
LCSClientInternalID,
LCSServiceTypeID
;

IMPORTS
    TeleserviceCode,
    Ext-TeleserviceCode
FROM MAP-TS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-TS-Code (19) version8 (8)}

    BearerServiceCode,
    Ext-BearerServiceCode
FROM MAP-BS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-BS-Code (20) version8 (8)}

    SS-Code
FROM MAP-SS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-SS-Code (15) version8 (8)}

    ExtensionContainer
FROM MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
;

-- general data types

TBCD-STRING ::= OCTET STRING
-- This type (Telephony Binary Coded Decimal String) is used to
-- represent several digits from 0 through 9, *, #, a, b, c, two
-- digits per octet, each digit encoded 0000 to 1001 (0 to 9),
-- 1010 (*), 1011 (#), 1100 (a), 1101 (b) or 1110 (c); 1111 used
-- as filler when there is an odd number of digits.

-- bits 8765 of octet n encoding digit 2n
-- bits 4321 of octet n encoding digit 2(n-1) +1

```

```

AddressString ::= OCTET STRING (SIZE (1..maxAddressLength))
-- This type is used to represent a number for addressing
-- purposes. It is composed of
--   a) one octet for nature of address, and numbering plan
--      indicator.
--   b) digits of an address encoded as TBCD-String.

-- a) The first octet includes a one bit extension indicator, a
--     3 bits nature of address indicator and a 4 bits numbering
--     plan indicator, encoded as follows:

-- bit 8: 1 (no extension)

-- bits 765: nature of address indicator
-- 000 unknown
-- 001 international number
-- 010 national significant number
-- 011 network specific number
-- 100 subscriber number
-- 101 reserved
-- 110 abbreviated number
-- 111 reserved for extension

-- bits 4321: numbering plan indicator
-- 0000 unknown
-- 0001 ISDN/Telephony Numbering Plan (Rec ITU-T E.164)
-- 0010 spare
-- 0011 data numbering plan (ITU-T Rec X.121)
-- 0100 telex numbering plan (ITU-T Rec F.69)
-- 0101 spare
-- 0110 land mobile numbering plan (ITU-T Rec E.212)
-- 0111 spare
-- 1000 national numbering plan
-- 1001 private numbering plan
-- 1111 reserved for extension

-- all other values are reserved.

-- b) The following octets representing digits of an address
--     encoded as a TBCD-STRING.

```

**maxAddressLength** INTEGER ::= 20

```

ISDN-AddressString ::=
    AddressString (SIZE (1..maxISDN-AddressLength))
-- This type is used to represent ISDN numbers.

```

**maxISDN-AddressLength** INTEGER ::= 9

```

FTN-AddressString ::=
    AddressString (SIZE (1..maxFTN-AddressLength))
-- This type is used to represent forwarded-to numbers.
-- For long forwarded-to numbers (longer than 15 digits) NPI shall be unknown;
-- if NAI = international the first digits represent the country code (CC)
-- and the network destination code (NDC) as for E.164.

```

**maxFTN-AddressLength** INTEGER ::= 15

```

ISDN-SubaddressString ::= OCTET STRING (SIZE (1..maxISDN-SubaddressLength))
-- This type is used to represent ISDN subaddresses.
-- It is composed of
--   a) one octet for type of subaddress and odd/even indicator.
--   b) 20 octets for subaddress information.

-- a) The first octet includes a one bit extension indicator, a
--    3 bits type of subaddress and a one bit odd/even indicator,
--    encoded as follows:

--   bit 8: 1 (no extension)

--   bits 765: type of subaddress
--     000 NSAP (X.213/ISO 8348 AD2)
--     010 User Specified
--     All other values are reserved

--   bit 4: odd/even indicator
--     0 even number of address signals
--     1 odd number of address signals
--     The odd/even indicator is used when the type of subaddress
--     is "user specified" and the coding is BCD.

--   bits 321: 000 (unused)

--   b) Subaddress information.
-- The NSAP X.213/ISO8348AD2 address shall be formatted as specified
-- by octet 4 which contains the Authority and Format Identifier
-- (AFI). The encoding is made according to the "preferred binary
-- encoding" as defined in X.213/ISO834AD2. For the definition
-- of this type of subaddress, see ITU-T Rec I.334.

-- For User-specific subaddress, this field is encoded according
-- to the user specification, subject to a maximum length of 20
-- octets. When interworking with X.25 networks BCD coding should
-- be applied.

```

```
maxISDN-SubaddressLength INTEGER ::= 21
```

```

ExternalSignalInfo ::= SEQUENCE {
  protocolId                               ProtocolId,
  signalInfo                                SignalInfo,
  -- Information about the internal structure is given in
  -- clause 7.6.9.
  extensionContainer                         ExtensionContainer           OPTIONAL,
  -- extensionContainer must not be used in version 2
  ...
}

```

```
SignalInfo ::= OCTET STRING (SIZE (1..maxSignalInfoLength))
```

```

maxSignalInfoLength INTEGER ::= 200
-- This NamedValue represents the theoretical maximum number of octets which is
-- available to carry a single instance of the SignalInfo data type,
-- without requiring segmentation to cope with the network layer service.
-- However, the actual maximum size available for an instance of the data
-- type may be lower, especially when other information elements
-- have to be included in the same component.

```

```

ProtocolId ::= ENUMERATED {
  gsm-0408 (1),
  gsm-0806 (2),
  gsm-BSSMAP (3),
  -- Value 3 is reserved and must not be used
  ets-300102-1 (4)}

```

```

Ext-ExternalSignalInfo ::= SEQUENCE {
  ext-ProtocolId                            Ext-ProtocolId,
  signalInfo                                SignalInfo,
  -- Information about the internal structure is given in
  -- clause 7.6.9.10
  extensionContainer                         ExtensionContainer           OPTIONAL,
  ...
}

```

```
Ext-ProtocolId ::= ENUMERATED {
    ets-300356 (1),
    ...
}
-- exception handling:
-- For Ext-ExternalSignalInfo sequences containing this parameter with any
-- other value than the ones listed the receiver shall ignore the whole
-- Ext-ExternalSignalInfo sequence.
```

```
AccessNetworkSignalInfo ::= SEQUENCE {
    accessNetworkProtocolId          AccessNetworkProtocolId,
    signalInfo                      LongSignalInfo,
    -- Information about the internal structure is given in clause 7.6.9.1
    extensionContainer               ExtensionContainer      OPTIONAL,
    ...
}
```

```
LongSignalInfo ::= OCTET STRING (SIZE (1..maxLongSignalInfoLength))
```

```
maxLongSignalInfoLength INTEGER ::= 2560
-- This Named Value represents the maximum number of octets which is available
-- to carry a single instance of the LongSignalInfo data type using
-- White Book SCCP with the maximum number of segments.
-- It takes account of the octets used by the lower layers of the protocol, and
-- other information elements which may be included in the same component.
```

```
AccessNetworkProtocolId ::= ENUMERATED {
    ts3G-48006 (1),
    ts3G-25413 (2),
    ...
}
-- exception handling:
-- For AccessNetworkSignalInfo sequences containing this parameter with any
-- other value than the ones listed the receiver shall ignore the whole
-- AccessNetworkSignalInfo sequence.
```

```
AlertingPattern ::= OCTET STRING (SIZE (1))
-- This type is used to represent Alerting Pattern

-- bits 8765 : 0000 (unused)

-- bits 43 : type of Pattern
--   00 level
--   01 category
--   10 category
--   all other values are reserved.

-- bits 21 : type of alerting
```

```
alertingLevel-0 AlertingPattern ::= '00000000'B
alertingLevel-1 AlertingPattern ::= '00000001'B
alertingLevel-2 AlertingPattern ::= '00000010'B
-- all other values of Alerting level are reserved
-- Alerting Levels are defined in GSM 02.07

alertingCategory-1 AlertingPattern ::= '00000100'B
alertingCategory-2 AlertingPattern ::= '00000101'B
alertingCategory-3 AlertingPattern ::= '00000110'B
alertingCategory-4 AlertingPattern ::= '00000111'B
alertingCategory-5 AlertingPattern ::= '00001000'B
-- all other values of Alerting Category are reserved
-- Alerting categories are defined in GSM 02.07
```

```
-- data types for numbering and identification
```

```
IMSI ::= TBCD-STRING (SIZE (3..8))
-- digits of MCC, MNC, MSIN are concatenated in this order.
```

```
Identity ::= CHOICE {
    imsi                         IMSI,
    imsi-WithLMSI                IMSI-WithLMSI}
```

```
IMSI-WithLMSI ::= SEQUENCE {
    imsi                         IMSI,
    lmsi                          LMSI,
    -- a special value 00000000 indicates that the LMSI is not in use
    ...}
```

**ASCI-CallReference** ::= TBCD-STRING (SIZE (1..8))  
-- digits of VGCS/VBC-area,Group-ID are concatenated in this order.

**TMSI ::= OCTET STRING (SIZE (1..4))**

```
SubscriberId ::= CHOICE {
    imsi                               [0] IMSI,
    tmsi                               [1] TMSI}
```

**IMEI** ::= TBCD-STRING (SIZE (8))  
-- Refers to International Mobile Station Equipment Identity  
-- and Software Version Number (SVN) defined in TS 3GPP TS 23.003 [17].  
-- If the SVN is not present the last octet shall contain the  
-- digit 0 and a filler.  
-- If present the SVN shall be included in the last octet.

**HLR-Id** ::= IMSI  
   -- leading digits of IMSI, i.e. (MCC, MNC, leading digits of  
   -- MSIN) forming HLR Id defined in TS 3GPP TS 23.003 [17]

**maxNumberOfHLR-Id** INTEGER ::= 50

**LMSI** ::= OCTET STRING (SIZE (4))

```

GlobalCellId ::= OCTET STRING (SIZE (5..7))
  -- Refers to Cell Global Identification defined in TS 3GPP TS 23.003 [17].
  -- The internal structure is defined as follows:
  -- octet 1 bits 4321           Mobile Country Code 1st digit
  --          bits 8765           Mobile Country Code 2nd digit
  -- octet 2 bits 4321           Mobile Country Code 3rd digit
  --          bits 8765           Mobile Network Code 3rd digit
  --                           or filler (1111) for 2 digit MNCs
  -- octet 3 bits 4321           Mobile Network Code 1st digit
  --          bits 8765           Mobile Network Code 2nd digit
  -- octets 4 and 5             Location Area Code according to TS 3GPP TS 24.008
[35]
  -- octets 6 and 7             Cell Identity (CI) according to TS 3GPP TS 24.008
[35]

```

```
NetworkResource ::= ENUMERATED {  
    plmn  (0),  
    hlr   (1),  
    vlr   (2),  
    pvlr  (3),  
    controllingMSC (4),  
    vmsc  (5),  
    eir   (6),  
    rss   (7)}  
}
```

**NAEA-CIC** ::= OCTET STRING (SIZE (3))  
-- The internal structure is defined by the Carrier Identification  
-- parameter in ANSI T1.113.3. Carrier codes between "000" and "999" may  
-- be encoded as 3 digits using "000" to "999" or as 4 digits using  
-- "0000" to "0999". Carrier codes between "1000" and "9999" are encoded  
-- using 4 digits.

```
SubscriberIdentity ::= CHOICE {
    imsi                               [0] IMSI,
    msisdn                            [1] ISDN-AddressString
}
```

```
LCSClientExternalID ::= SEQUENCE {
    externalAddress                  [ 0 ] AddressString          OPTIONAL,
    extensionContainer               [ 1 ] ExtensionContainer    OPTIONAL,
    ...
}
```

```
LCSClientInternalID ::= ENUMERATED {
    broadcastService                  (0),
    o-andM-HPLMN                     (1),
    o-andM-VPLMN                     (2),
    anonymousLocation                 (3),
    targetMSsubscribedService        (4),
    ...
}

-- for a CAMEL phase 3 PLMN operator client, the value targetMSsubscribedService shall be used
```

```
LCSServiceTypeID ::= INTEGER (0..127)
-- the integer values 0-63 are reserved for Standard LCS service types
-- the integer values 64-127 are reserved for Non Standard LCS service types
```

emergencyServices	LCSServiceTypeID ::= 0
emergencyAlertServices	LCSServiceTypeID ::= 1
personTracking	LCSServiceTypeID ::= 2
fleetManagement	LCSServiceTypeID ::= 3
assetManagement	LCSServiceTypeID ::= 4
trafficCongestionReporting	LCSServiceTypeID ::= 5
roadsideAssistance	LCSServiceTypeID ::= 6
routingToNearestCommercialEnterprise	LCSServiceTypeID ::= 7
navigation	LCSServiceTypeID ::= 8
citySightseeing	LCSServiceTypeID ::= 9
localizedAdvertising	LCSServiceTypeID ::= 10
mobileYellowPages	LCSServiceTypeID ::= 11

-- The values of LCSServiceTypeID are defined according to 3GPP TS 22.071.

-- data types for CAMEL

```
CellGlobalIdOrServiceAreaIdOrLAI ::= CHOICE {
    cellGlobalIdOrServiceAreaIdFixedLength [0] CellGlobalIdOrServiceAreaIdFixedLength,
    laiFixedLength                      [1] LAIFixedLength}
```

CellGlobalIdOrServiceAreaIdFixedLength ::= OCTET STRING (SIZE (7))
-- Refers to Cell Global Identification or Service Area Identification
-- defined in 3GPP TS 23.003.
-- The internal structure is defined as follows:
-- octet 1 bits 4321 Mobile Country Code 1<sup>st</sup> digit
-- bits 8765 Mobile Country Code 2<sup>nd</sup> digit
-- octet 2 bits 4321 Mobile Country Code 3<sup>rd</sup> digit
-- bits 8765 Mobile Network Code 3<sup>rd</sup> digit
-- or filler (1111) for 2 digit MNCS
-- octet 3 bits 4321 Mobile Network Code 1<sup>st</sup> digit
-- bits 8765 Mobile Network Code 2<sup>nd</sup> digit
-- octets 4 and 5 Location Area Code according to 3GPP TS 24.008
-- octets 6 and 7 Cell Identity (CI) value or
-- Service Area Code (SAC) value
-- according to 3GPP TS 23.003

LAIFixedLength ::= OCTET STRING (SIZE (5))
-- Refers to Location Area Identification defined in TS 3GPP TS 23.003 [17].
-- The internal structure is defined as follows:
-- octet 1 bits 4321 Mobile Country Code 1<sup>st</sup> digit
-- bits 8765 Mobile Country Code 2<sup>nd</sup> digit
-- octet 2 bits 4321 Mobile Country Code 3<sup>rd</sup> digit
-- bits 8765 Mobile Network Code 3<sup>rd</sup> digit
-- or filler (1111) for 2 digit MNCS
-- octet 3 bits 4321 Mobile Network Code 1<sup>st</sup> digit
-- bits 8765 Mobile Network Code 2<sup>nd</sup> digit
-- octets 4 and 5 Location Area Code according to TS 3GPP TS 24.008
[35]

-- data types for subscriber management

```
BasicServiceCode ::= CHOICE {
    bearerService                  [2] BearerServiceCode,
    teleservice                    [3] TeleserviceCode}
```

```
Ext-BasicServiceCode ::= CHOICE {
    ext-BearerService            [2] Ext-BearerServiceCode,
    ext-Teleservice              [3] Ext-TeleserviceCode}
```

```
EMLPP-Info ::= SEQUENCE {
    maximumPriority EMLPP-Priority,
    defaultPriority EMLPP-Priority,
    extensionContainer ExtensionContainer
    OPTIONAL,
    ...}
```

```
EMLPP-Priority ::= INTEGER (0..15)
-- The mapping from the values A,B,0,1,2,3,4 to the integer-value is
-- specified as follows where A is the highest and 4 is the lowest
-- priority level
-- the integer values 7-15 are spare and shall be mapped to value 4
```

<b>priorityLevelA</b>	EMLPP-Priority ::= 6
<b>priorityLevelB</b>	EMLPP-Priority ::= 5
<b>priorityLevel0</b>	EMLPP-Priority ::= 0
<b>priorityLevel1</b>	EMLPP-Priority ::= 1
<b>priorityLevel2</b>	EMLPP-Priority ::= 2
<b>priorityLevel3</b>	EMLPP-Priority ::= 3
<b>priorityLevel4</b>	EMLPP-Priority ::= 4

```
MC-SS-Info ::= SEQUENCE {
    ss-Code [0] SS-Code,
    ss-Status [1] Ext-SS-Status,
    nbrSB [2] MaxMC-Bearers,
    nbrUser [3] MC-Bearers,
    extensionContainer [4] ExtensionContainer
    OPTIONAL,
    ...}
```

```
MaxMC-Bearers ::= INTEGER (2..maxNumOfMC-Bearers)
```

```
MC-Bearers ::= INTEGER (1..maxNumOfMC-Bearers)
```

```
maxNumOfMC-Bearers INTEGER ::= 7
```

```
Ext-SS-Status ::= OCTET STRING (SIZE (1..5))

-- OCTET 1:
--
-- bits 8765: 0000 (unused)
-- bits 4321: Used to convey the "P bit", "R bit", "A bit" and "Q bit",
--             representing supplementary service state information
--             as defined in TS 3GPP TS 23.011 [22]

-- bit 4: "Q bit"

-- bit 3: "P bit"

-- bit 2: "R bit"

-- bit 1: "A bit"

-- OCTETS 2-5: reserved for future use. They shall be discarded if
-- received and not understood.
```

-- data types for geographic location

```
AgeOfLocationInformation ::= INTEGER (0..32767)
-- the value represents the elapsed time in minutes since the last
-- network contact of the mobile station (i.e. the actuality of the
-- location information).
-- value "0" indicates that the MS is currently in contact with the
-- network
-- value "32767" indicates that the location information is at least
-- 32767 minutes old
```

END

## 17.7.9 Teleservice Codes

```
MAP-TS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-TS-Code (19) version8 (8)}
```

DEFINITIONS

::=

BEGIN

```
TeleserviceCode ::= OCTET STRING (SIZE (1))
-- This type is used to represent the code identifying a single
-- teleservice, a group of teleservices, or all teleservices. The
-- services are defined in TS GSM 22.003 [4].
-- The internal structure is defined as follows:
-- bits 87654321: group (bits 8765) and specific service
-- (bits 4321)
```

```
Ext-TeleserviceCode ::= OCTET STRING (SIZE (1..5))
-- This type is used to represent the code identifying a single
-- teleservice, a group of teleservices, or all teleservices. The
-- services are defined in TS GSM 22.003 [4].
-- The internal structure is defined as follows:
-- OCTET 1:
-- bits 87654321: group (bits 8765) and specific service
-- (bits 4321)
-- OCTETS 2-5: reserved for future use. If received the
-- Ext-TeleserviceCode shall be
-- treated according to the exception handling defined for the
-- operation that uses this type.
-- Ext-TeleserviceCode includes all values defined for TeleserviceCode.
```

<b>allTeleservices</b>	TeleserviceCode ::= '00000000'B
------------------------	---------------------------------

<b>allSpeechTransmissionServices</b>	TeleserviceCode ::= '00010000'B
<b>telephony</b>	TeleserviceCode ::= '00010001'B
<b>emergencyCalls</b>	TeleserviceCode ::= '00010010'B

<b>allShortMessageServices</b>	TeleserviceCode ::= '00100000'B
<b>shortMessageMT-PP</b>	TeleserviceCode ::= '00100001'B
<b>shortMessageMO-PP</b>	TeleserviceCode ::= '00100010'B

<b>allFacsimileTransmissionServices</b>	TeleserviceCode ::= '01100000'B
<b>facsimileGroup3AndAlterSpeech</b>	TeleserviceCode ::= '01100001'B
<b>automaticFacsimileGroup3</b>	TeleserviceCode ::= '01100010'B
<b>facsimileGroup4</b>	TeleserviceCode ::= '01100011'B

```
-- The following non-hierarchical Compound Teleservice Groups
-- are defined in TS 3GPP TS 22.030:
allDataTeleservices TeleserviceCode ::= '01110000'B
-- covers Teleservice Groups 'allFacsimileTransmissionServices'
-- and 'allShortMessageServices'
allTeleservices-ExptSMS TeleserviceCode ::= '10000000'B
-- covers Teleservice Groups 'allSpeechTransmissionServices' and
-- 'allFacsimileTransmissionServices'
--
-- Compound Teleservice Group Codes are only used in call
-- independent supplementary service operations, i.e. they
-- are not used in InsertSubscriberData or in
-- DeleteSubscriberData messages.
```

<b>allVoiceGroupCallServices</b>	TeleserviceCode ::= '10010000'B
<b>voiceGroupCall</b>	TeleserviceCode ::= '10010001'B
<b>voiceBroadcastCall</b>	TeleserviceCode ::= '10010010'B

allPLMN-specificTS	TeleserviceCode ::= '11010000'B
plmn-specificTS-1	TeleserviceCode ::= '11010001'B
plmn-specificTS-2	TeleserviceCode ::= '11010010'B
plmn-specificTS-3	TeleserviceCode ::= '11010011'B
plmn-specificTS-4	TeleserviceCode ::= '11010100'B
plmn-specificTS-5	TeleserviceCode ::= '11010101'B
plmn-specificTS-6	TeleserviceCode ::= '11010110'B
plmn-specificTS-7	TeleserviceCode ::= '11010111'B
plmn-specificTS-8	TeleserviceCode ::= '11011000'B
plmn-specificTS-9	TeleserviceCode ::= '11011001'B
plmn-specificTS-A	TeleserviceCode ::= '11011010'B
plmn-specificTS-B	TeleserviceCode ::= '11011011'B
plmn-specificTS-C	TeleserviceCode ::= '11011100'B
plmn-specificTS-D	TeleserviceCode ::= '11011101'B
plmn-specificTS-E	TeleserviceCode ::= '11011110'B
plmn-specificTS-F	TeleserviceCode ::= '11011111'B

END

## 17.7.10 Bearer Service Codes

```
MAP-BS-Code {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-BS-Code (20) version8 (8)}
```

DEFINITIONS

::=

BEGIN

<pre>BearerServiceCode ::= OCTET STRING (SIZE (1)) -- This type is used to represent the code identifying a single -- bearer service, a group of bearer services, or all bearer -- services. The services are defined in TS 3GPP TS 22.002 [3]. -- The internal structure is defined as follows: -- -- plmn-specific bearer services: -- bits 87654321: defined by the HPLMN operator  -- rest of bearer services: -- bit 8: 0 (unused) -- bits 7654321: group (bits 7654), and rate, if applicable -- (bits 321)</pre>
---

<pre>Ext-BearerServiceCode ::= OCTET STRING (SIZE (1..5)) -- This type is used to represent the code identifying a single -- bearer service, a group of bearer services, or all bearer -- services. The services are defined in TS 3GPP TS 22.002 [3]. -- The internal structure is defined as follows: -- -- OCTET 1: -- plmn-specific bearer services: -- bits 87654321: defined by the HPLMN operator  -- rest of bearer services: -- bit 8: 0 (unused) -- bits 7654321: group (bits 7654), and rate, if applicable -- (bits 321)  -- OCTETS 2-5: reserved for future use. If received the -- Ext-TeleserviceCode shall be -- treated according to the exception handling defined for the -- operation that uses this type.</pre>
--

-- Ext-BearerServiceCode includes all values defined for BearerServiceCode.

allBearerServices	BearerServiceCode ::= '00000000'B
-------------------	-----------------------------------

<b>allDataCDA-Services</b>	BearerServiceCode ::= '00010000'B
<b>dataCDA-300bps</b>	BearerServiceCode ::= '00010001'B
<b>dataCDA-1200bps</b>	BearerServiceCode ::= '00010010'B
<b>dataCDA-1200-75bps</b>	BearerServiceCode ::= '00010011'B
<b>dataCDA-2400bps</b>	BearerServiceCode ::= '00010100'B
<b>dataCDA-4800bps</b>	BearerServiceCode ::= '00010101'B
<b>dataCDA-9600bps</b>	BearerServiceCode ::= '00010110'B
<b>general-dataCDA</b>	BearerServiceCode ::= '00010111'B
<b>allDataCDS-Services</b>	BearerServiceCode ::= '00011000'B
<b>dataCDS-1200bps</b>	BearerServiceCode ::= '00011010'B
<b>dataCDS-2400bps</b>	BearerServiceCode ::= '00011100'B
<b>dataCDS-4800bps</b>	BearerServiceCode ::= '00011101'B
<b>dataCDS-9600bps</b>	BearerServiceCode ::= '00011110'B
<b>general-dataCDS</b>	BearerServiceCode ::= '00011111'B
<b>allPadAccessCA-Services</b>	BearerServiceCode ::= '00100000'B
<b>padAccessCA-300bps</b>	BearerServiceCode ::= '00100001'B
<b>padAccessCA-1200bps</b>	BearerServiceCode ::= '00100010'B
<b>padAccessCA-1200-75bps</b>	BearerServiceCode ::= '00100011'B
<b>padAccessCA-2400bps</b>	BearerServiceCode ::= '00100100'B
<b>padAccessCA-4800bps</b>	BearerServiceCode ::= '00100101'B
<b>padAccessCA-9600bps</b>	BearerServiceCode ::= '00100110'B
<b>general-padAccessCA</b>	BearerServiceCode ::= '00100111'B
<b>allDataPDS-Services</b>	BearerServiceCode ::= '00101000'B
<b>dataPDS-2400bps</b>	BearerServiceCode ::= '00101100'B
<b>dataPDS-4800bps</b>	BearerServiceCode ::= '00101101'B
<b>dataPDS-9600bps</b>	BearerServiceCode ::= '00101110'B
<b>general-dataPDS</b>	BearerServiceCode ::= '00101111'B
<b>allAlternateSpeech-DataCDA</b>	BearerServiceCode ::= '00110000'B
<b>allAlternateSpeech-DataCDS</b>	BearerServiceCode ::= '00111000'B
<b>allSpeechFollowedByDataCDA</b>	BearerServiceCode ::= '01000000'B
<b>allSpeechFollowedByDataCDS</b>	BearerServiceCode ::= '01001000'B
-- The following non-hierarchical Compound Bearer Service	
-- Groups are defined in TS 3GPP TS 22.030:	
<b>allDataCircuitAsynchronous</b>	BearerServiceCode ::= '01010000'B
-- covers "allDataCDA-Services", "allAlternateSpeech-DataCDA" and	
-- "allSpeechFollowedByDataCDA"	
<b>allAsynchronousServices</b>	BearerServiceCode ::= '01100000'B
-- covers "allDataCDA-Services", "allAlternateSpeech-DataCDA",	
-- "allSpeechFollowedByDataCDA" and "allPadAccessCDA-Services"	
<b>allDataCircuitSynchronous</b>	BearerServiceCode ::= '01011000'B
-- covers "allDataCDS-Services", "allAlternateSpeech-DataCDS" and	
-- "allSpeechFollowedByDataCDS"	
<b>allSynchronousServices</b>	BearerServiceCode ::= '01101000'B
-- covers "allDataCDS-Services", "allAlternateSpeech-DataCDS",	
-- "allSpeechFollowedByDataCDS" and "allDataPDS-Services"	
--	
-- Compound Bearer Service Group Codes are only used in call	
-- independent supplementary service operations, i.e. they	
-- are not used in InsertSubscriberData or in	
-- DeleteSubscriberData messages.	
<b>allPLMN-specificBS</b>	BearerServiceCode ::= '11010000'B
<b>plmn-specificBS-1</b>	BearerServiceCode ::= '11010001'B
<b>plmn-specificBS-2</b>	BearerServiceCode ::= '11010010'B
<b>plmn-specificBS-3</b>	BearerServiceCode ::= '11010011'B
<b>plmn-specificBS-4</b>	BearerServiceCode ::= '11010100'B
<b>plmn-specificBS-5</b>	BearerServiceCode ::= '11010101'B
<b>plmn-specificBS-6</b>	BearerServiceCode ::= '11010110'B
<b>plmn-specificBS-7</b>	BearerServiceCode ::= '11010111'B
<b>plmn-specificBS-8</b>	BearerServiceCode ::= '11011000'B
<b>plmn-specificBS-9</b>	BearerServiceCode ::= '11011001'B
<b>plmn-specificBS-A</b>	BearerServiceCode ::= '11011010'B
<b>plmn-specificBS-B</b>	BearerServiceCode ::= '11011011'B
<b>plmn-specificBS-C</b>	BearerServiceCode ::= '11011100'B
<b>plmn-specificBS-D</b>	BearerServiceCode ::= '11011101'B
<b>plmn-specificBS-E</b>	BearerServiceCode ::= '11011110'B
<b>plmn-specificBS-F</b>	BearerServiceCode ::= '11011111'B

END

### 17.7.11 Extension data types

```

MAP-ExtensionDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}

DEFINITIONS

IMPLICIT TAGS

 ::=

BEGIN

EXPORTS

    PrivateExtension,
    ExtensionContainer;

-- IOC for private MAP extensions

MAP-EXTENSION ::= CLASS {
    &ExtensionType                               OPTIONAL,
    &extensionId          OBJECT IDENTIFIER }
    -- The length of the Object Identifier shall not exceed 16 octets and the
    -- number of components of the Object Identifier shall not exceed 16

-- data types

ExtensionContainer ::= SEQUENCE {
    privateExtensionList      [0]PrivateExtensionList      OPTIONAL,
    pcs-Extensions           [1]PCS-Extensions        OPTIONAL,
    ...}

PrivateExtensionList ::= SEQUENCE SIZE (1..maxNumOfPrivateExtensions) OF
    PrivateExtension

PrivateExtension ::= SEQUENCE {
    extId           MAP-EXTENSION.&extensionId
                    ({ExtensionSet}),
    extType         MAP-EXTENSION.&ExtensionType
                    ({ExtensionSet}{@extId})   OPTIONAL}

maxNumOfPrivateExtensions  INTEGER ::= 10

ExtensionSet             MAP-EXTENSION ::= {
    ...
    -- ExtensionSet is the set of all defined private extensions
}
    -- Unsupported private extensions shall be discarded if received.

PCS-Extensions ::= SEQUENCE {
    ...}

END

```

### 17.7.12 Group Call data types

```

MAP-GR-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-GR-DataTypes (23) version8 (8)}

DEFINITIONS

IMPLICIT TAGS

 ::=

BEGIN

EXPORTS
    PrepareGroupCallArg,
    PrepareGroupCallRes,

```

```

SendGroupCallEndSignalArg,
SendGroupCallEndSignalRes,
ForwardGroupCallSignallingArg,
ProcessGroupCallSignallingArg
;

IMPORTS
  ISDN-AddressString,
  IMSI,
  EMLPP-Priority,
  ASCII-CallReference
FROM MAP-CommonDataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}

  Ext-TeleserviceCode
FROM MAP-TS-Code {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-TS-Code (19) version8 (8)}

  Kc
FROM MAP-MS-DataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-MS-DataTypes (11) version8 (8)}

  ExtensionContainer
FROM MAP-ExtensionDataTypes {
  itu-t identified-organization (4) etsi (0) mobileDomain (0)
  gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
;

```

```

PrepareGroupCallArg ::= SEQUENCE {
    teleservice                                Ext-TeleserviceCode,
    asciiCallReference                          ASCII-CallReference,
    codec-Info                                  CODEC-Info,
    cipheringAlgorithm                         CipheringAlgorithm,
    groupKeyNumber                             [0] GroupKeyNumber      OPTIONAL,
    groupKey                                    [1] Kc                  OPTIONAL,
    priority                                    [2] EMLPP-Priority     OPTIONAL,
    uplinkFree                                  [3] NULL                OPTIONAL,
    extensionContainer                         [4] ExtensionContainer  OPTIONAL,
    ...
}

```

```
PrepareGroupCallRes ::= SEQUENCE {
    groupCallNumber           ISDN-AddressString,
    extensionContainer        ExtensionContainer
    ...                         OPTIONAL,
```

```
SendGroupCallEndSignalArg ::= SEQUENCE {
    imsi                               IMSI           OPTIONAL,
    extensionContainer                 ExtensionContainer   OPTIONAL,
    }
```

```
SendGroupCallEndSignalRes ::= SEQUENCE {
    extensionContainer           ExtensionContainer      OPTIONAL,
```

```

ForwardGroupCallSignallingArg ::= SEQUENCE {
    imsI                                IMSI                               OPTIONAL,
    uplinkRequestAck          [ 0 ] NULL                           OPTIONAL,
    uplinkReleaseIndication   [ 1 ] NULL                           OPTIONAL,
    uplinkRejectCommand        [ 2 ] NULL                           OPTIONAL,
    uplinkSeizedCommand        [ 3 ] NULL                           OPTIONAL,
    uplinkReleaseCommand       [ 4 ] NULL                           OPTIONAL,
    extensionContainer         ExtensionContainer                  OPTIONAL,
    ...
    stateAttributes           [ 5 ] StateAttributes                OPTIONAL }

```

```
ProcessGroupCallSignallingArg ::= SEQUENCE {
    uplinkRequest                  [ 0 ] NULL                                OPTIONAL,
    uplinkReleaseIndication        [ 1 ] NULL                                OPTIONAL,
    releaseGroupCall               [ 2 ] NULL                                OPTIONAL,
    extensionContainer             ExtensionContainer
    ...
}
```

```
GroupKeyNumber ::= INTEGER (0..15)
```

```
CODEC-Info ::= OCTET STRING (SIZE (5..10))
  -- Refers to channel type
  -- coded according to 3GPP TS 48.008 [49] and including Element identifier and Length
```

```
CipheringAlgorithm ::= OCTET STRING (SIZE (1))
  -- Refers to 'permitted algorithms' in 'encryption information'
  -- coded according to 3GPP TS 48.008 [49]:
```

-- Bits 8-1	
-- 8765 4321	
-- 0000 0001	No encryption
-- 0000 0010	GSM A5/1
-- 0000 0100	GSM A5/2
-- 0000 1000	GSM A5/3
-- 0001 0000	GSM A5/4
-- 0010 0000	GSM A5/5
-- 0100 0000	GSM A5/6
-- 1000 0000	GSM A5/7

```
StateAttributes ::= SEQUENCE {
  downlinkAttached           [5] NULL                  OPTIONAL,
  uplinkAttached              [6] NULL                  OPTIONAL,
  dualCommunication          [7] NULL                  OPTIONAL,
  callOriginator              [8] NULL                  OPTIONAL }
```

-- Refers to 3GPP TS 44.068 for definitions of StateAttributes fields.

END

### 17.7.13 Location service data types

```

1 MAP-LCS-DataTypes {
2   itu-t identified-organization (4) etsi (0) mobileDomain (0)
3   gsm-Network (1) modules (3) map-LCS-DataTypes (25) version8 (8)}
4
5 DEFINITIONS
6 IMPLICIT TAGS
7 ::= 
8 BEGIN
9
10 EXPORTS
11   RoutingInfoForLCS-Arg,
12   RoutingInfoForLCS-Res,
13   ProvideSubscriberLocation-Arg,
14   ProvideSubscriberLocation-Res,
15   SubscriberLocationReport-Arg,
16   SubscriberLocationReport-Res,
17   LocationType,
18   LCSClientName,
19   LCS-QoS,
20   Horizontal-Accuracy,
21   ResponseTime,
22   Ext-GeographicalInformation,
23   SupportedGADShapes,
24   Add-GeographicalInformation,
25   LCSRequestorID,
26   LCSCodeword
27 ;
28
29 IMPORTS
30   AddressString,
31   ISDN-AddressString,
32   IMEI,
33   IMSI,
34   LMSI,
35   SubscriberIdentity,
36   AgeOfLocationInformation,
37   LCSClientExternalID,
38   LCSClientInternalID,
39   LCSServiceTypeID
40 FROM MAP-CommonDataTypes {
41   itu-t identified-organization (4) etsi (0) mobileDomain (0)
42   gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)}
```

```

44     ExtensionContainer
45     FROM MAP-ExtensionDataTypes {
46         itu-t identified-organization (4) etsi (0) mobileDomain (0)
47         gsm-Network (1) modules (3) map-ExtensionDataTypes (21) version8 (8)}
48
49     USSD-DataCodingScheme,
50     USSD-String
51     FROM MAP-SS-DataTypes {
52         itu-t identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3)
53         map-SS-DataTypes (14) version8 (8)}
54
55     APN
56     FROM MAP-MS-DataTypes {
57         itu-t identified-organization (4) etsi (0) mobileDomain (0)
58         gsm-Network (1) modules (3) map-MS-DataTypes (11) version8 (8)}
59
60     Additional-Number
61     FROM MAP-SM-DataTypes {
62         itu-t identified-organization (4) etsi (0) mobileDomain (0)
63         gsm-Network (1) modules (3) map-SM-DataTypes (16) version8 (8)}
64 ;
65
66
67 RoutingInfoForLCS-Arg ::= SEQUENCE {
68     mlcNumber                               [0] ISDN-AddressString,
69     targetMS                                [1] SubscriberIdentity,
70     extensionContainer                      [2] ExtensionContainer
71     ...}                                     OPTIONAL,
72
73 RoutingInfoForLCS-Res ::= SEQUENCE {
74     targetMS                                [0] SubscriberIdentity,
75     lcsLocationInfo                         [1] LCSLocationInfo,
76     extensionContainer                      [2] ExtensionContainer
77     ...}                                     OPTIONAL,
78 }
79
80 LCSLocationInfo ::= SEQUENCE {
81     networkNode-Number                     ISDN-AddressString,
82     -- NetworkNode-number can be either msc-number or sgsn-number
83     lmsi                                    [0] LMSI
84     extensionContainer                      [1] ExtensionContainer
85     ... ,
86     gprsNodeIndicator                      [2] NULL
87     -- gprsNodeIndicator is set only if the SGSN number is sent as the Network Node Number
88     additional-Number                       [3] Additional-Number
89 }
90
91 ProvideSubscriberLocation-Arg ::= SEQUENCE {
92     locationType                           LocationType,
93     mlc-Number                             ISDN-AddressString,
94     lcs-ClientID                          [0] LCS-ClientID
95     privacyOverride                        [1] NULL
96     imsi                                   [2] IMSI
97     msisdn                                 [3] ISDN-AddressString
98     lmsi                                   [4] LMSI
99     imei                                   [5] IMEI
100    lcs-Priority                          [6] LCS-Priority
101    lcs-QoS                                [7] LCS-QoS
102    extensionContainer                    [8] ExtensionContainer
103    ... ,
104    supportedGADShapes                   [9] SupportedGADShapes
105    lcs-ReferenceNumber                  [10] LCS-ReferenceNumber
106    lcsServiceTypeID                     [11] LCSServiceTypeID
107    lcsCodeword                           [12] LCSCodeword
108
109    -- one of imsi or msisdn is mandatory
110    -- If a location estimate type indicates activate deferred location or cancel deferred
111    -- location, a lcs-Reference number shall be included.
112
113 LocationType ::= SEQUENCE {
114     locationEstimateType                 [0] LocationEstimateType,
115     ...
116     deferredLocationEventType           [1] DeferredLocationEventType
117                                         OPTIONAL } 
```

```

118 LocationEstimateType ::= ENUMERATED {
119   currentLocation                  (0),
120   currentOrLastKnownLocation       (1),
121   initialLocation                 (2),
122   ...,
123   activateDeferredLocation        (3),
124   cancelDeferredLocation          (4) }
125 -- exception handling:
126 -- a ProvideSubscriberLocation-Arg containing an unrecognized LocationEstimateType
127 -- shall be rejected by the receiver with a return error cause of unexpected data value
128
129 DeferredLocationEventType ::= BIT STRING {
130   msAvailable                      (0) } (SIZE (1..16))
131 -- exception handling
132 -- a ProvideSubscriberLocation-Arg containing other values than listed above in
133 -- DeferredLocationEventType shall be rejected by the receiver with a return error cause of
134 -- unexpected data value.
135
136 LCS-ClientID ::= SEQUENCE {
137   lcsClientType                   [0] LCSClientType,
138   lcsClientExternalID             [1] LCSClientExternalID           OPTIONAL,
139   lcsClientDialedByMS            [2] AddressString                  OPTIONAL,
140   lcsClientInternalID            [3] LCSClientInternalID           OPTIONAL,
141   lcsClientName                  [4] LCSClientName                  OPTIONAL,
142   ...,
143   lcsAPN                         [5] APN                          OPTIONAL,
144   lcsRequestorID                 [6] LCSRequestorID                OPTIONAL }
145
146 LCSClientType ::= ENUMERATED {
147   emergencyServices               (0),
148   valueAddedServices              (1),
149   plmnOperatorServices            (2),
150   lawfulInterceptServices         (3),
151   ... }
152 -- exception handling:
153 -- unrecognized values may be ignored if the LCS client uses the privacy override
154 -- otherwise, an unrecognized value shall be treated as unexpected data by a receiver
155 -- a return error shall then be returned if received in a MAP invoke
156
157 LCSClientName ::= SEQUENCE {
158   dataCodingScheme                [0] USSD-DataCodingScheme,
159   nameString                      [2] NameString,
160   ... }
161
162 -- The USSD-DataCodingScheme shall indicate use of the default alphabet through the
163 -- following encoding
164 -- bit 7 6 5 4 3 2 1 0
165 --      0 0 0 0 1 1 1 1
166
167 NameString ::= USSD-String (SIZE (1..maxNameStringLength))
168
169 maxNameStringLength  INTEGER ::= 63
170
171 LCSRequestorID ::= SEQUENCE {
172   dataCodingScheme                [0] USSD-DataCodingScheme,
173   requestorIDString              [1] RequestorIDString,
174   ... }
175
176 RequestorIDString ::= USSD-String (SIZE (1..maxRequestorIDStringLength))
177
178 maxRequestorIDStringLength  INTEGER ::= 127
179
180 LCS-Priority ::= OCTET STRING (SIZE (1))
181   -- 0 = highest priority
182   -- 1 = normal priority
183   -- all other values treated as 1
184
185 LCS-Qos ::= SEQUENCE {
186   horizontalAccuracy              [0] Horizontal-Accuracy           OPTIONAL,
187   verticalCoordinateRequest        [1] NULL                         OPTIONAL,
188   verticalAccuracy                [2] Vertical-Accuracy           OPTIONAL,
189   responseTime                    [3] ResponseTime                 OPTIONAL,
190   extensionContainer              [4] ExtensionContainer          OPTIONAL,
191   ... }
192

```

```

193 Horizontal-Accuracy ::= OCTET STRING (SIZE (1))
194   -- bit 8 = 0
195   -- bits 7-1 = 7 bit Uncertainty Code defined in 3GPP TS 23.032. The horizontal location
196   -- error should be less than the error indicated by the uncertainty code with 67%
197   -- confidence.
198
199 Vertical-Accuracy ::= OCTET STRING (SIZE (1))
200   -- bit 8 = 0
201   -- bits 7-1 = 7 bit Vertical Uncertainty Code defined in 3GPP TS 23.032.
202   -- The vertical location error should be less than the error indicated
203   -- by the uncertainty code with 67% confidence.
204
205 ResponseTime ::= SEQUENCE {
206   responseTimeCategory           ResponseTimeCategory,
207   ...
208   -- note: an expandable SEQUENCE simplifies later addition of a numeric response time.
209
210 ResponseTimeCategory ::= ENUMERATED {
211   lowdelay (0),
212   delaytolerant (1),
213   ...
214   -- exception handling:
215   -- an unrecognized value shall be treated the same as value 1 (delaytolerant)
216
217 SupportedGADShapes ::= BIT STRING {
218   ellipsoidPoint (0),
219   ellipsoidPointWithUncertaintyCircle (1),
220   ellipsoidPointWithUncertaintyEllipse (2),
221   polygon (3),
222   ellipsoidPointWithAltitude (4),
223   ellipsoidPointWithAltitudeAndUncertaintyEllipsoid (5),
224   ellipsoidArc (6) } (SIZE (7..16))
225   -- A node shall mark in the BIT STRING all Shapes defined in 3GPP TS 23.032 it supports.
226   -- exception handling: bits 7 to 15 shall be ignored if received.
227
228 LCS-ReferenceNumber ::= OCTET STRING (SIZE(1))
229
230 LCSCodeWord ::= SEQUENCE {
231   dataCodingScheme          [0] USSD-DataCodingScheme,
232   lcsCodeWordString         [1] LCSCodewordString,
233   ...
234
235 LCSCodewordString ::= USSD-String (SIZE (1..maxLCSCodewordStringLength))
236
237 maxLCSCodewordStringLength INTEGER ::= 127
238
239 ProvideSubscriberLocation-Res ::= SEQUENCE {
240   locationEstimate           Ext-GeographicalInformation,
241   ageOfLocationEstimate      [0] AgeOfLocationInformation    OPTIONAL,
242   extensionContainer         [1] ExtensionContainer        OPTIONAL,
243   ...
244   add-LocationEstimate       [2] Add-GeographicalInformation OPTIONAL,
245   deferredmt-lrResponseIndicator [3] NULL                  OPTIONAL }
246
247   -- if deferredmt-lrResponseIndicator is set, locationEstimate is ignored.
248
249   -- the add-LocationEstimate parameter shall not be sent to a node that did not indicate the
250   -- geographic shapes supported in the ProvideSubscriberLocation-Arg
251   -- The locationEstimate and the add-locationEstimate parameters shall not be sent if
252   -- the supportedGADShapes parameter has been received in ProvideSubscriberLocation-Arg
253   -- and the shape encoded in locationEstimate or add-LocationEstimate is not marked
254   -- as supported in supportedGADShapes. In such a case ProvideSubscriberLocation
255   -- shall be rejected with error FacilityNotSupported with additional indication
256   -- shapeOfLocationEstimateNotSupported
257

```

```

258 Ext-GeographicalInformation ::= OCTET STRING (SIZE (1..maxExt-GeographicalInformation))
259   -- Refers to geographical Information defined in 3GPP TS 23.032.
260   -- This is composed of 1 or more octets with an internal structure according to
261   -- 3GPP TS 23.032
262   -- Octet 1: Type of shape, only the following shapes in 3GPP TS 23.032 are allowed:
263     -- (a) Ellipsoid point with uncertainty circle
264     -- (b) Ellipsoid point with uncertainty ellipse
265     -- (c) Ellipsoid point with altitude and uncertainty ellipsoid
266     -- (d) Ellipsoid Arc
267     -- (e) Ellipsoid Point
268   -- Any other value in octet 1 shall be treated as invalid
269   -- Octets 2 to 8 for case (a) - Ellipsoid point with uncertainty circle
270     -- Degrees of Latitude                                3 octets
271     -- Degrees of Longitude                               3 octets
272     -- Uncertainty code                                 1 octet
273   -- Octets 2 to 11 for case (b) - Ellipsoid point with uncertainty ellipse:
274     -- Degrees of Latitude                                3 octets
275     -- Degrees of Longitude                               3 octets
276     -- Uncertainty semi-major axis                      1 octet
277     -- Uncertainty semi-minor axis                      1 octet
278     -- Angle of major axis                            1 octet
279     -- Confidence                                     1 octet
280   -- Octets 2 to 14 for case (c) - Ellipsoid point with altitude and uncertainty ellipsoid
281     -- Degrees of Latitude                                3 octets
282     -- Degrees of Longitude                               3 octets
283     -- Altitude                                       2 octets
284     -- Uncertainty semi-major axis                      1 octet
285     -- Uncertainty semi-minor axis                      1 octet
286     -- Angle of major axis                            1 octet
287     -- Uncertainty altitude                           1 octet
288     -- Confidence                                     1 octet
289   -- Octets 2 to 13 for case (d) - Ellipsoid Arc
290     -- Degrees of Latitude                                3 octets
291     -- Degrees of Longitude                               3 octets
292     -- Inner radius                                    2 octets
293     -- Uncertainty radius                             1 octet
294     -- Offset angle                                    1 octet
295     -- Included angle                                 1 octet
296     -- Confidence                                     1 octet
297   -- Octets 2 to 7 for case (e) - Ellipsoid Point
298     -- Degrees of Latitude                                3 octets
299     -- Degrees of Longitude                               3 octets
300
301   --
302   -- An Ext-GeographicalInformation parameter comprising more than one octet and
303   -- containing any other shape or an incorrect number of octets or coding according
304   -- to 3GPP TS 23.032 shall be treated as invalid data by a receiver.
305   --
306   -- An Ext-GeographicalInformation parameter comprising one octet shall be discarded
307   -- by the receiver if an Add-GeographicalInformation parameter is received
308   -- in the same message.
309   --
310   -- An Ext-GeographicalInformation parameter comprising one octet shall be treated as
311   -- invalid data by the receiver if an Add-GeographicalInformation parameter is not
312   -- received in the same message.
313

```

```

314 maxExt-GeographicalInformation INTEGER ::= 20
315   -- the maximum length allows for further shapes in 3GPP TS 23.032 to be included in later
316   -- versions of 3GPP TS 29.002
317

```

```

318 Add-GeographicalInformation ::= OCTET STRING (SIZE (1..maxAdd-GeographicalInformation))
319   -- Refers to geographical Information defined in 3GPP TS 23.032.
320   -- This is composed of 1 or more octets with an internal structure according to
321   -- 3GPP TS 23.032
322   -- Octet 1: Type of shape, all the shapes defined in 3GPP TS 23.032 are allowed:
323   -- Octets 2 to n (where n is the total number of octets necessary to encode the shape
324   -- according to 3GPP TS 23.032) are used to encode the shape itself in accordance with
325   -- the
326   -- encoding defined in 3GPP TS 23.032
327   --
328   -- An Add-GeographicalInformation parameter, whether valid or invalid, received
329   -- together with a valid Ext-GeographicalInformation parameter in the same message
330   -- shall be discarded.
331   --
332   -- An Add-GeographicalInformation parameter containing any shape not defined in
333   -- 3GPP TS 23.032 or an incorrect number of octets or coding according to
334   -- 3GPP TS 23.032 shall be treated as invalid data by a receiver if not received
335   -- together with a valid Ext-GeographicalInformation parameter in the same message.
336

```

```

337 maxAdd-GeographicalInformation INTEGER ::= 91
338   -- the maximum length allows support for all the shapes currently defined in 3GPP TS
339   -- 23.032
340

```

```

341 SubscriberLocationReport-Arg ::= SEQUENCE {
342   lcs-Event                               LCS-Event,
343   lcs-ClientID                            LCS-ClientID,
344   lcsLocationInfo                         LCSLocationInfo,
345   msisdn                                [0] ISDN-AddressString      OPTIONAL,
346   imsi                                  [1] IMSI                      OPTIONAL,
347   imei                                  [2] IMEI                     OPTIONAL,
348   na-ESRD                               [3] ISDN-AddressString      OPTIONAL,
349   na-ESRK                               [4] ISDN-AddressString      OPTIONAL,
350   locationEstimate                      [5] Ext-GeographicalInformation OPTIONAL,
351   ageOfLocationEstimate                [6] AgeOfLocationInformation OPTIONAL,
352   extensionContainer                   [7] ExtensionContainer       OPTIONAL,
353   ...
354   add-LocationEstimate                 [8] Add-GeographicalInformation OPTIONAL,
355   deferredmt-lrData                    [9] Deferredmt-lrData        OPTIONAL,
356   lcs-ReferenceNumber                  [10] LCS-ReferenceNumber     OPTIONAL }
357
358   -- one of msisdn or imsi is mandatory
359   -- a location estimate that is valid for the locationEstimate parameter should
360   -- be transferred in this parameter in preference to the add-LocationEstimate.
361   -- the deferredmt-lrData parameter shall be included if and only if the lcs-Event
362   -- indicates a deferredmt-lrResponse.
363   -- if the lcs-Event indicates a deferredmt-lrResponse then the locationEstimate
364   -- and the add-locationEstimate parameters shall not be sent if the
365   -- supportedGADShapes parameter had been received in ProvideSubscriberLocation-Arg
366   -- and the shape encoded in locationEstimate or add-LocationEstimate was not marked
367   -- as supported in supportedGADShapes. In such a case terminationCause
368   -- in deferredmt-lrData shall be present with value
369   -- shapeOfLocationEstimateNotSupported.
370   -- If a lcs event indicates deferred mt-lr response, the lcs-Reference number shall be
371   -- included.
372

```

```

373 Deferredmt-lrData ::= SEQUENCE {
374   deferredLocationEventType           DeferredLocationEventType,
375   terminationCause                  [0] TerminationCause        OPTIONAL,
376   lcsLocationInfo                  [1] LCSLocationInfo         OPTIONAL,
377   ...
378   -- lcsLocationInfo may be included only if a terminationCause is present
379   -- indicating mt-lrRestart.
380

```

```

381 LCS-Event ::= ENUMERATED {
382   emergencyCallOrigination (0),
383   emergencyCallRelease  (1),
384   mo-lr (2),
385   ...
386   deferredmt-lrResponse (3) }
387   -- exception handling:
388   -- a SubscriberLocationReport-Arg containing an unrecognized LCS-Event
389   -- shall be rejected by a receiver with a return error cause of unexpected data value
390

```

```
391 TerminationCause ::= ENUMERATED {
392     normal (0),
393     errorundefined (1),
394     internaltimeout (2),
395     congestion (3),
396     mt-lrRestart (4),
397     privacyViolation (5),
398     ...,
399     shapeOfLocationEstimateNotSupported (6) }
400 -- mt-lrRestart shall be used to trigger the GMLC to restart the location procedure,
401 -- either because the sending node knows that the terminal has moved under coverage
402 -- of another MSC or SGSN (e.g. Send Identification received), or because the subscriber
403 -- has been deregistered due to a Cancel Location received from HLR.
404 --
405 -- exception handling
406 -- an unrecognized value shall be treated the same as value 1 (errorundefined)
407
408 SubscriberLocationReport-Res ::= SEQUENCE {
409     extensionContainer ExtensionContainer
410     ...
411 }
412
413
414 END
415
```

### 17.7.14 Secure transport data types

```

MAP-ST-DataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-ST-DataTypes (27) version8 (8)
}

DEFINITIONS
IMPLICIT TAGS
::=
BEGIN

EXPORTS
    SecureTransportArg,
    SecureTransportRes,
    SecurityHeader,
    ProtectedPayload
;

IMPORTS
    IMSI

FROM MAP-CommonDataTypes {
    itu-t identified-organization (4) etsi (0) mobileDomain (0)
    gsm-Network (1) modules (3) map-CommonDataTypes (18) version8 (8)
};

```

<b>SecureTransportArg</b> ::= SEQUENCE {	
securityHeader	SecurityHeader,
protectedPayload	ProtectedPayload
}	OPTIONAL
-- The protectedPayload carries the result of applying the security function	
-- defined in 3GPP TS 33.200 to the encoding of the argument of the securely	
-- transported operation	

<b>SecureTransportRes</b> ::= SEQUENCE {	
securityHeader	SecurityHeader,
protectedPayload	ProtectedPayload
}	OPTIONAL
-- The protectedPayload carries the result of applying the security function	
-- defined in 3GPP TS 33.200 to the encoding of the result of the securely	
-- transported operation	

<b>SecurityHeader</b> ::= SEQUENCE {	
securityParametersIndex	SecurityParametersIndex,
originalComponentIdentifier	OriginalComponentIdentifier,
initialisationVector	InitialisationVector
...	OPTIONAL,

<b>ProtectedPayload</b> ::= OCTET STRING(SIZE(1.. 3438))	
-- In protection mode 0 (noProtection) the ProtectedPayload carries the transfer	
-- syntax value of the component parameter identified by the	
-- originalComponentIdentifier.	
-- In protection mode 1 (integrityAuthenticity) the protectedPayload carries	
-- the transfer syntax value of the component	
-- parameter identified by the originalComponentIdentifier, followed by	
-- the 32 bit integrity check value.	
-- The integrity check value is the result of applying the hash algorithm	
-- to the concatenation of the transfer syntax value of the SecurityHeader,	
-- and the transfer syntax value of the component parameter.	
-- In protection mode 2 (confidentialityIntegrityAuthenticity) the protected	
-- payload carries the encrypted transfer syntax	
-- value of the component parameter identified by the	
-- originalComponentIdentifier, followed by the 32 bit integrity check value.	
-- The integrity check value is the result of applying the hash algorithm	
-- to the concatenation of the transfer syntax value of the SecurityHeader,	
-- and the encrypted transfer syntax value of the component parameter.	
-- See 33.200.	
-- The length of the protectedPayload is adjusted according to the capabilities of	
-- the lower protocol layers	

<b>SecurityParametersIndex</b> ::= OCTET STRING (SIZE(4))
---

```
InitialisationVector ::= OCTET STRING (SIZE(14))
-- the internal structure is defined as follows:
-- Octets 1 to 4 : TVP. The TVP is a 32 bit time stamp. Its value is binary coded
-- and indicates the number of intervals of 100 milliseconds
-- elapsed since 1st January 2002, 0:00:00 UTC
-- Octets 5 to 10: NE-Id. The NE-Id uniquely identifies the sending network entity
-- within the PLMN. It is the entity's E.164 number without CC and
-- NDC. It is TBCD-coded, padded with zeros.
-- Octets 11 to 14: PROP. This 32 bit value is used to make the
-- InitialisationVector unique within the same TVP period.
-- The content is not standardized.
```

```
OriginalComponentIdentifier ::= CHOICE {
  operationCode [0] OperationCode,
  errorCode [1] ErrorCode,
  userInfo [2] NULL}
```

```
OperationCode ::= CHOICE {
  localValue INTEGER,
  globalValue OBJECT IDENTIFIER}
```

```
ErrorCode ::= CHOICE {
  localValue INTEGER,
  globalValue OBJECT IDENTIFIER}
```

END

## 18 General on MAP user procedures

### 18.1 Introduction

Clauses 18 to 25 describe the use of MAP services for GSM signalling procedures. GSM signalling procedures may involve one or several interfaces running one or several application protocols. The present document addresses only the signalling procedures which require at least the use of one MAP service.

When a signalling procedure takes place in the network, an application process invocation is created in each system component involved. Part of the application process invocation acts as a MAP user and handles one or several MAP dialogues. For each dialogue it employs an instance of the MAP service provider. It may also use other communication services to exchange information on other interfaces, but detailed description of these aspects is outside the scope of the present document.

### 18.2 Common aspects of user procedure descriptions

#### 18.2.1 General conventions

For each signalling procedure the present document provides a brief textual overview accompanied by a flow diagram which represent the functional interactions between system components. Functional interactions are labelled using the MAP service name when the interaction results from a service request or by this service name followed by the symbol "ack" when this interaction results from a service response.

For each of the system components involved, the present document also provides a detailed textual description of the application process behaviour as well as an SDL diagram. SDL diagrams describe the sequence of events, as seen by the MAP-User, which occurs at MAP service provider boundaries as well as external events which occur at other interfaces and which impact on the previous sequence.

External events do not necessarily correspond to the messages of other protocols used in the system component. The MAP-user procedures are described as if a set of interworking functions (IWF) between the MAP-user and the other protocol entities was implemented (see figure 18.2/1). Such interworking functions are assumed to perform either an identity mapping or some processing or translation as required to eliminate information irrelevant to the MAP-user.

The mapping of service primitives on to protocol elements is described in clauses 14 to 17.

GSM signalling procedures are built from one or more sub-procedures (e.g. authentication, ciphering, ...). Sub-procedures from which signalling procedures are built are represented using SDL MACRO descriptions.

In case of any discrepancy between the textual descriptions and the SDL descriptions, the latter take precedence.

## 18.2.2 Naming conventions

Events related to MAP are represented by MAP service primitives. The signal names used in the SDL diagrams are derived from the service primitive names defined in clauses 7 to 12, with some lexical transformations for readability and parsability purposes (blanks between words are replaced by underscores, the first letter of each word is capitalised).

Events received and sent on other interfaces are named by appending the message or signal name to a symbol representing the interface type, with some lexical transformations for readability and parsability purposes (blanks between words are replaced by underscores, the first letter of each word is capitalised).

The following symbols are used to represent the interface types:

- "I": For interfaces to the fixed network. "I" stands for ISUP interface.
- "A": For interfaces to BSS (i.e. A-interfaces);
- "OM": For network management interfaces (communication with OMC, MML interface, ...);
- "SC": For interfaces to a Service Centre;
- "HO\_CA": For internal interfaces to the Handover Control Application.
- "US": For a local USSD application.

These naming conventions can be summarised by the following BNF description:

```

<Event_Name>      ::= <MAP_Primitive> | <External_Event>
<MAP_Primitive>   ::= <MAP_Open> | <MAP_Close> | <MAP_U_Abort> | <MAP_P_Abort> |
                      <MAP_Specific> | <MAP_Notify>
<MAP_Open>         ::= MAP_Open_Req | MAP_Open_Ind | MAP_Open_Rsp | MAP_Open_Cnf
<MAP_Close>        ::= MAP_Close_Req | MAP_Close_Ind
<MAP_U_Abort>      ::= MAP_U_Abort_Req | MAP_U_Abort_Ind
<MAP_P_Abort>      ::= MAP_P_Abort_Ind
<MAP_Notify>       ::= MAP_Notify_Ind
<MAP_Specific>     ::= <MAP_Req> | <MAP_Ind> | <MAP_Rsp> | <MAP_Cnf>
<MAP_Req>          ::= MAP_<Service_Name>_Req
<MAP_Ind>          ::= MAP_<Service_Name>_Ind
<MAP_Rsp>          ::= MAP_<Service_Name>_Rsp
<MAP_Cnf>          ::= MAP_<Service_Name>_Cnf
<External_Event>    ::= <Interface_Type>_<External_Signal>
<Interface_Type>    ::= I | A | OM | SC | HO AC | US
<External_Signal>   ::= <Lexical_Unit>
<Service_Name>      ::= <Lexical_Unit>
<Lexical_Unit>       ::= <Lexical_Component> | <Lexical_Unit>_<Lexical_Component>

```

```

<Lexical_Component> ::= <Upper_Case_Letter><Letter_Or_Digit_List>
<Letter_Or_Digit_List> ::= <Letter_Or_Digit> | <Letter_Or_Digit_List><Letter_Or_Digit>
<Letter_Or_Digit>     ::= <Letter> | <Digit>
<Letter>              ::= <Lower_Case_Letter> | <Upper_Case_Letter>
<Upper_Case_Letter>  ::= A|B|C|D|E|F|G|H|I|J|K|L|M|N|O|P|Q|R|S|T|U|V|W|X|Y|Z
<Lower_Case_Letter> ::= a|b|c|d|e|f|g|h|i|j|k|l|m|n|o|p|q|r|s|t|u|v|w|x|y|z
<Digit>              ::= 1|2|3|4|5|6|7|8|9|0

```

**Figure 18.2/1: Interfaces applicable to the MAP-User**

## 18.2.3 Convention on primitives parameters

### 18.2.3.1 Open service

When the originating and destination reference parameters shall be included in the MAP-OPEN request primitive, their value are indicated as a comment to the signal which represents this primitive.

### 18.2.3.2 Close service

When a pre-arranged released is requested, a comment is attached to the signal which represents the MAP-CLOSE request primitive. In the absence of comment, a normal release is assumed.

## 18.2.4 Version handling at dialogue establishment

Unless explicitly indicated in subsequent clauses, the following principles regarding version handling procedures at dialogue establishment are applied by the MAP-user.

### 18.2.4.1 Behaviour at the initiating side

When a MAP user signalling procedure has to be executed, the MAP-user issues a MAP-OPEN request primitive with an appropriate application-context-name. If several names are supported (i.e. several versions) a suitable one is selected using the procedures described in clause 5.

If version n is selected (where  $1 < n \leq$  highest existing version) and a MAP-OPEN Confirm primitive is received in response to the MAP-OPEN request with a result parameter set to "refused" and a diagnostic parameter indicating "application context not supported" or "potential version incompatibility problem", the MAP-User issues a new MAP-OPEN request primitive with the equivalent version y context (where  $1 \leq y < n$ ). This is informally represented in the SDL diagrams by task symbols indicating 'Perform Vr procedure'.

### 18.2.4.2 Behaviour at the responding side

On receipt of a MAP-OPEN indication primitive, the MAP-User analyses the application-context-name and executes the procedure associated with the requested version context. For example, if it refers to a version one context, the associated V1 procedure is executed; if it refers to a version two context, the associated V2 procedure is executed; etc.

## 18.2.5 Abort Handling

Unless explicitly indicated in subsequent clauses, the following principles are applied by the MAP-user regarding abort handling procedures:

On receipt of a MAP-P-ABORT indication or MAP-U-ABORT Indication primitive from any MAP-provider invocation, the MAP-User issues a MAP-U-ABORT Request primitive to each MAP-provider invocation associated with the same user procedure.

If applicable a decision is made to decide if the affected user procedure has to be retried or not.

## 18.2.6 SDL conventions

The MAP SDLs make use of a number of SDL concepts and conventions, where not all of them may be widely known. Therefore, this clause outlines the use of a few concepts and conventions to improve understanding of the MAP SDLs.

The MAP User SDLs make use of SDL Processes, Procedures and Macros. Processes are independent from each other even if one process starts another one: The actions of both of them have no ordering in time. SDL Procedures and Macros are just used to ease writing of the specification: They contain parts of a behaviour used in several places, and the corresponding Procedure/Macro definition has to be expanded at the position of the Procedure/Macro call.

All Processes are started at system initialisation and live forever, unless process creation/termination is indicated explicitly (i.e. a process is created by some other process).

The direction of Input/Output Signals in the SDL graphs is used to indicate the entity to which/from which communication is directed. If a process A communicates in parallel with processes B and C, all Inputs/Outputs to/from B are directed to one side, whereas communication with C is directed to the other side. However, there has been no formal convention used that communication to a certain entity (e.g. a HLR) will always be directed to a certain side (e.g. right).

In each state all those Input Signals are listed, which result in an action and/or state change. If an Input Signal is not listed in a state, receipt of this input should lead to an implicit consumption without any action or state change (according to the SDL rules). This implicit consumption is mainly used for receipt of the MAP DELIMITER indication and for receipt of a MAP CLOSE indication, except for a premature MAP CLOSE.

## 18.3 Interaction between MAP Provider and MAP Users

Each MAP User is defined by at least one SDL process. On the dialogue initiating side, the MAP User will create a new instance of a MAP Provider implicit by issuing a MAP-OPEN request. This instance corresponds to a TC Dialogue and lives as long as the dialogue exists (see also clause 14.3). There is a fixed relation between MAP User and this Provider instance, i.e. all MAP service primitives from the MAP User for this dialogue are sent to this instance and all TC components received by this MAP Provider are mapped onto service primitives sent to this MAP User.

On the receiving side a MAP Provider instance is created implicit by receipt of a TC BEGIN indication. The corresponding MAP User is determined by the Application Context name included in this primitive, i.e. each Application Context is associated with one and only one MAP User. An instance of this User will be created implicitly by receiving a MAP-OPEN indication. Note that in some cases there exist several SDL Processes for one MAP User (Application Context), e.g. the processes Register\_SS\_HLR, Erase\_SS\_HLR, Activate\_SS\_HLR, Deactivate\_SS\_HLR, Interrogate\_SS\_HLR, and Register\_Password for the AC Network\_Functional\_SS\_Handling. In these cases, a coordinator process is introduced acting as a MAP User, which in turn starts a sub-process depending on the first MAP service primitive received.

# 19 Mobility procedures

## 19.1 Location management Procedures

For non-GPRS subscribers, this clause comprises a number of processes to handle the mobile nature of the subscriber. The processes will be addressed by SCCP Sub-System Number (MSC, VLR or HLR) and the Application Context. The following processes are defined in this clause:

Process Update Location Area:

Update\_Location\_Area\_VLR, clause 19.1.1.3;

Process Update Location:

Initiator:      Update\_Location\_Area\_VLR, clause 19.1.1.3;

Responder: Update\_Location\_HLR, clause 19.1.1.4;

Process Send Identification:

Initiator: Send\_Identification\_VLR, clause 19.1.1.x;

Responder: Send\_Identification\_PVLR, clause 19.1.1.5;

Process Cancel Location:

Initiator: Cancel\_Location\_HLR, clause 19.1.2.2;

Responder: Cancel\_Location\_VLR, clause 19.1.2.3;

Process Purge MS:

Initiator: Purge\_MS\_VLR, clause 19.1.4.2;

Responder: Purge\_MS\_HLR, clause 19.1.4.3.

For GPRS subscribers, this clause comprises a number of other processes to handle the mobile nature of the subscriber. The processes will be addressed by SCCP Sub-System Number (SGSN or HLR) and the Application Context. The following processes are defined in this clause:

Process GPRS Update Location:

Initiator: GPRS\_Update\_Location\_Area\_VLR, clause 19.1.1.3, or  
SGSN\_Update\_HLR, clause 19.1.1.8,

Responder: Update\_GPRS\_Location\_HLR, clause 19.1.1.4;

Process Cancel Location:

Initiator: Cancel\_GPRS\_Location\_HLR, clause 19.1.2.2;  
Responder: Cancel\_Location\_SGSN, clause 19.1.2.4;

Process Purge MS:

Initiator: Purge\_MS\_SGSN, clause 19.1.4.4;

Responder: Purge\_MS\_HLR, clause 19.1.4.3.

The following existing process is also used for GPRS subscribers :

Process Subscriber Present HLR:

Initiator: Subscriber\_Present\_HLR, clause 19.1.1.7;

Responder: Short\_Message\_Alert\_IWMSC, clause 23.4.3;

### **Location Management Coordinator HLR**

Sheet 1: After creation of the user process the service primitive received from the MAP service-provider is passed to the user process. Henceforth, the coordinator will relay all service primitives from MAP service-provider to the MAP service-user and vice versa, until a request or indication for dialogue termination is received. This last primitive will be relayed, too, before the Coordinator process returns to idle state.

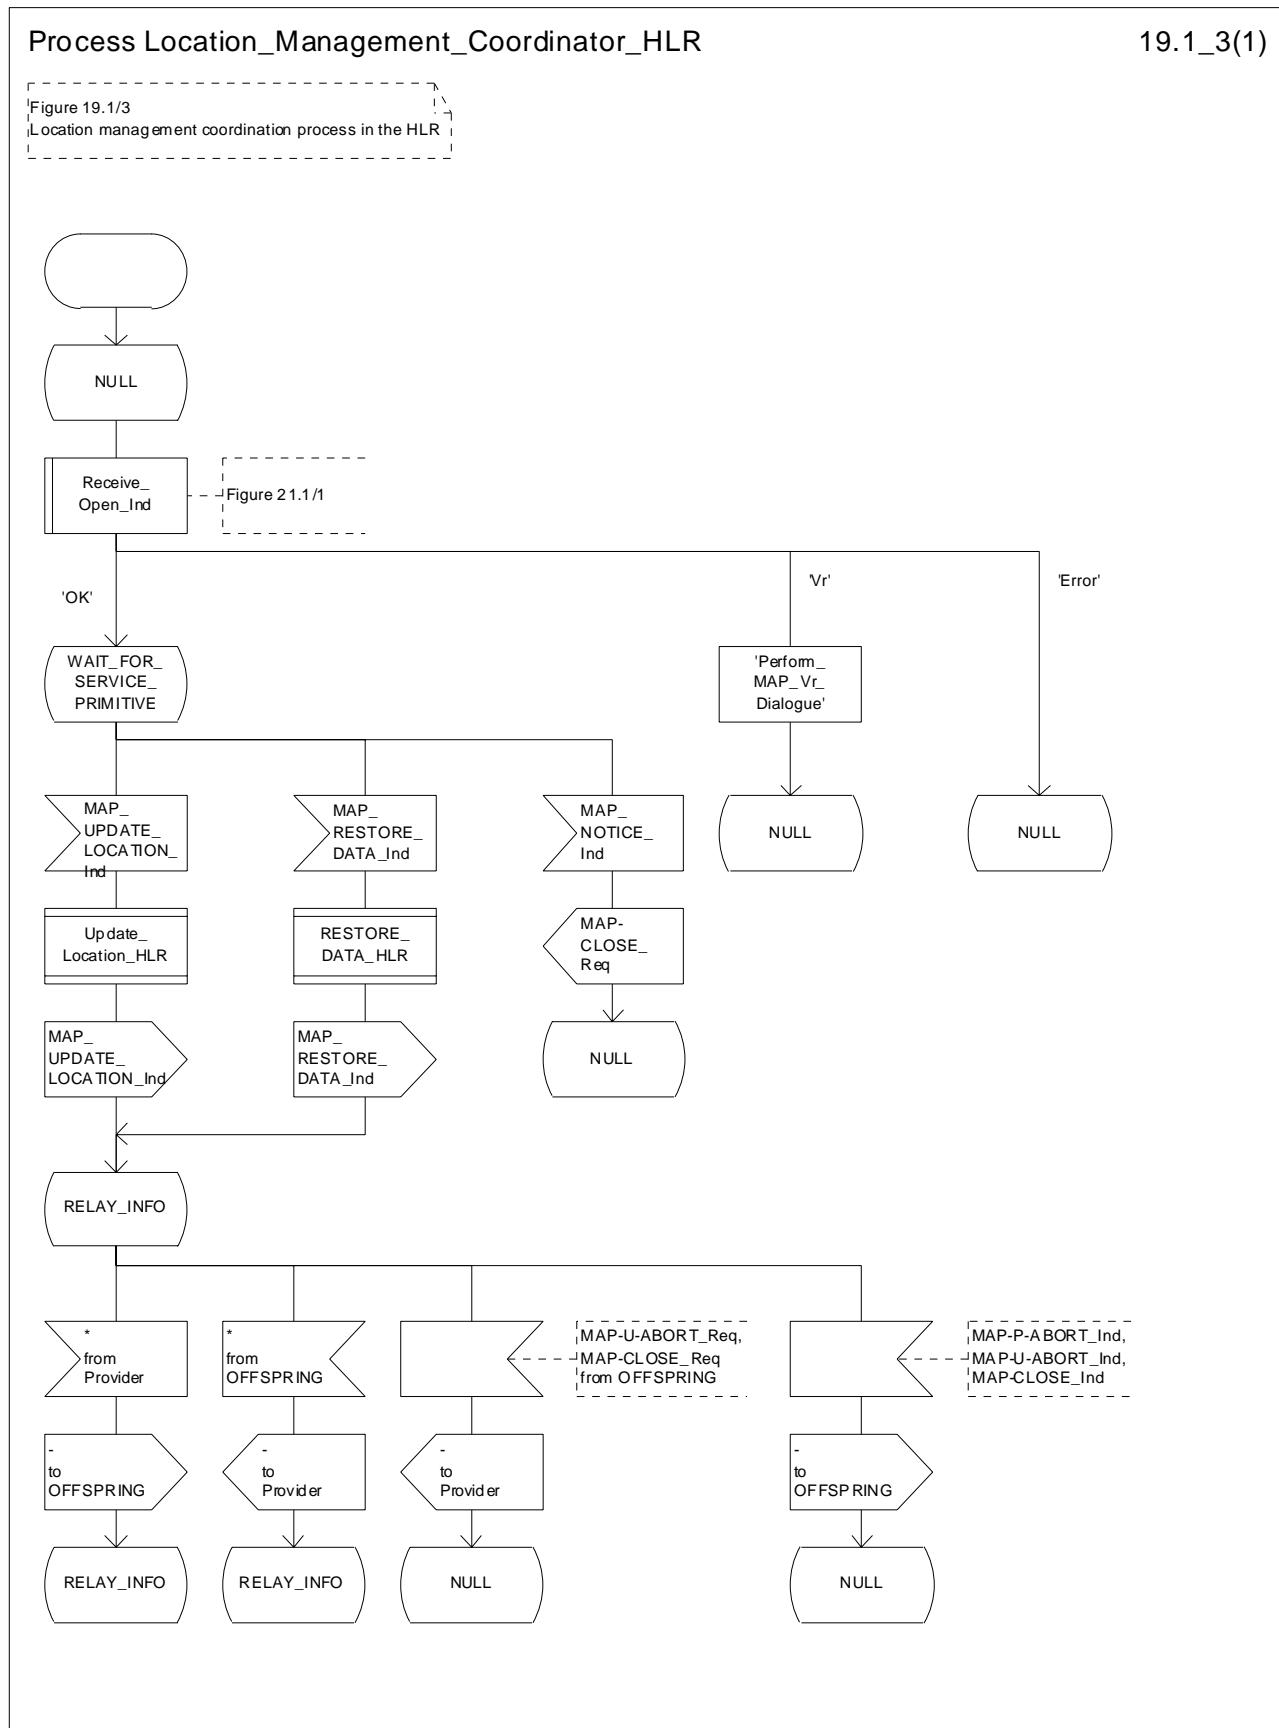


Figure 19.1/3: Process Location\_Management\_Coordinator\_HLR

## 19.1.1 Location updating

### 19.1.1.1 General

The location updating procedure is used to update the location information held in the network. For GPRS subscribers, this procedure describes also updating of the SGSN and, if Gs interface is installed, updating of the VLR in combination with an attach/routing area updating in the SGSN. This location information is used to route incoming calls, packet data, short messages and unstructured supplementary service data to the roaming subscriber. Additionally, this procedure is used to provide the VLR and/or the SGSN with the information that a subscriber already registered, but being detached, is reachable again (IMSI Attach and/or GPRS Attach, see 3GPP TS 23.012 [23] and 3GPP TS 23.060 [104]). The use of the IMSI Detach / Attach feature is optional for the network operator.

To minimise the updates of the subscriber's HLR, the HLR holds only information about the VLR and MSC the subscriber is attached to and, for GPRS subscribers, the SGSN the subscriber is attached to. The VLR and the SGSN contain more detailed location information, i.e. the location area the subscriber is actually roaming in (for the VLR) and the routing area (RA) where the GPRS subscriber is located (for SGSN). Therefore, the VLR needs to be updated at each location area change (see figure 19.1.1/1 for this procedure) and the SGSN needs to be updated at each routing area change. The HLR needs updating only in the following cases:

- when the subscriber registers in a new VLR or SGSN, i.e. the VLR or SGSN has no data for that subscriber;
- when the subscriber registers in a new location area of the same VLR and new routing information is to be provided to the HLR (change of MSC area);
- if the indicator "Confirmed by HLR" or the indicator "Location Information Confirmed in HLR" is set to "Not Confirmed" because of HLR, VLR or SGSN restoration, and the VLR or SGSN receives an indication that the subscriber is present.

If a mobile subscriber registers in a visitor location register (VLR) not holding any information about this subscriber and is identified by a temporary mobile subscriber identity (TMSI) allocated by a previous visitor location register (PVLR), if the PVLR identity can be derived from LAI the new VLR must obtain the IMSI from PVLR to identify the HLR to be updated (see figure 19.1.1/2). If the IMSI cannot be retrieved from PVLR, it is requested from the MS (see figure 19.1.1/3).

The stage 2 specification for GPRS is in 3GPP TS 23.060 [104]. The interworking between the MAP signalling procedures and the GPRS procedures in the SGSN is shown by the transfer of signals between these procedures (see clause 19.1.1.8).

The message flow for successful GPRS Attach/ RA update procedure (with Gs interface not installed) is shown in figure 19.1.1/4.

The message flow for successful GPRS Attach/ RA update procedure combined with a successful VLR location updating (Gs interface installed) is shown in figure 19.1.1/5.


The following MAP services are invoked by the location update procedure:

MAP_UPDATE_LOCATION_AREA	(see clause 8.1);(**)
MAP_UPDATE_LOCATION	(see clause 8.1);(**)
MAP_UPDATE_GPRS_LOCATION	(see clause 8.1) (*);
MAP_CANCEL_LOCATION	(see clause 8.1);
MAP_INSERT_SUBSCRIBER_DATA	(see clause 8.8);
MAP_SEND_IDENTIFICATION	(see clause 8.1) (**);
MAP_PROVIDE_IMSI	(see clause 8.9) (**);
MAP_AUTHENTICATE	(see clause 8.5) (**);
MAP_SET_CIPHERING_MODE	(see clause 8.6) (**);
MAP_FORWARD_NEW_TMSI	(see clause 8.9) (**);

MAP\_CHECK\_IMEI (see clause 8.7);  
 MAP\_ACTIVATE\_TRACE\_MODE (see clause 9.2);  
 MAP\_TRACE\_SUBSCRIBER\_ACTIVITY (see clause 9.2) (\*\*).


(\*): only used in SGSN and HLR for GPRS

(\*\*): not used in SGSN

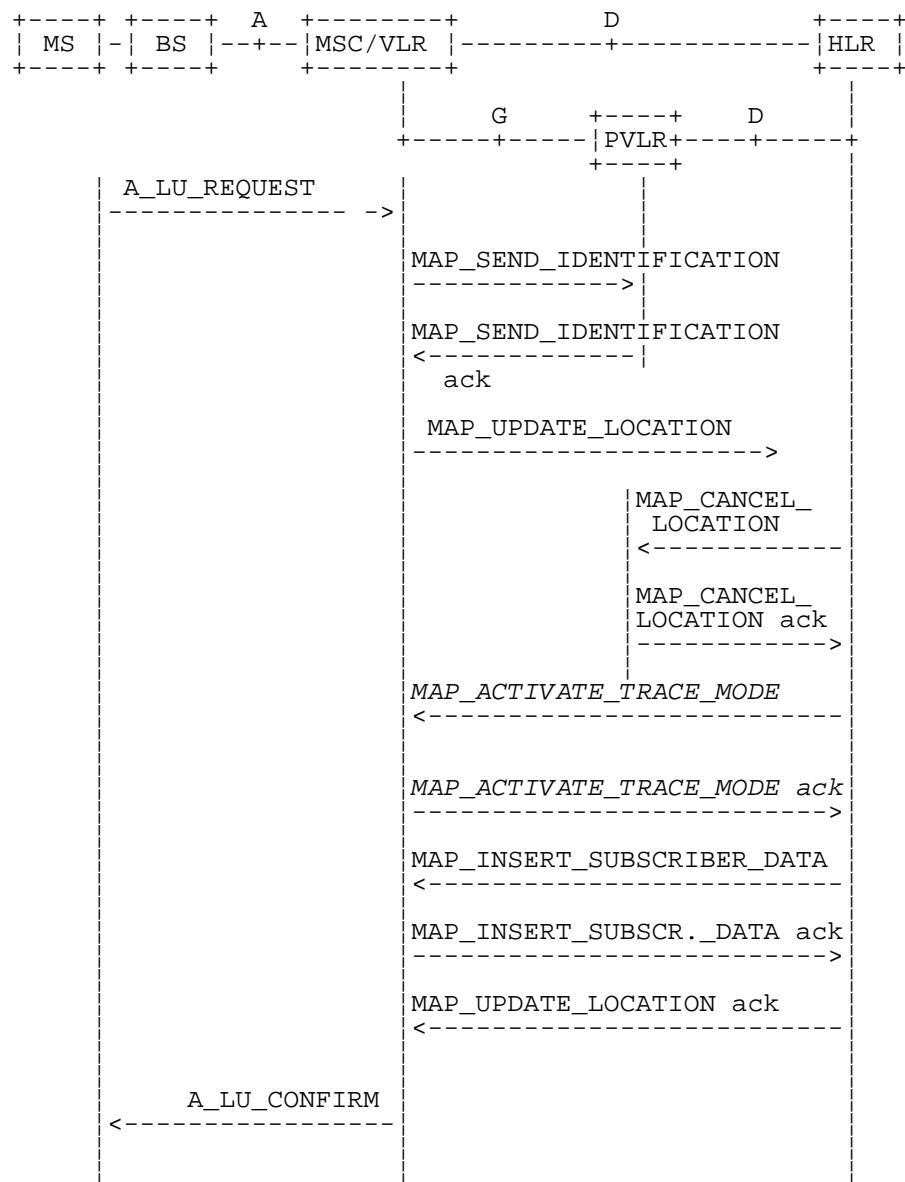


NOTE: Procedures shown in italics are optional.

**Figure 19.1.1/2: Interface and services for location updating when changing the VLR area**

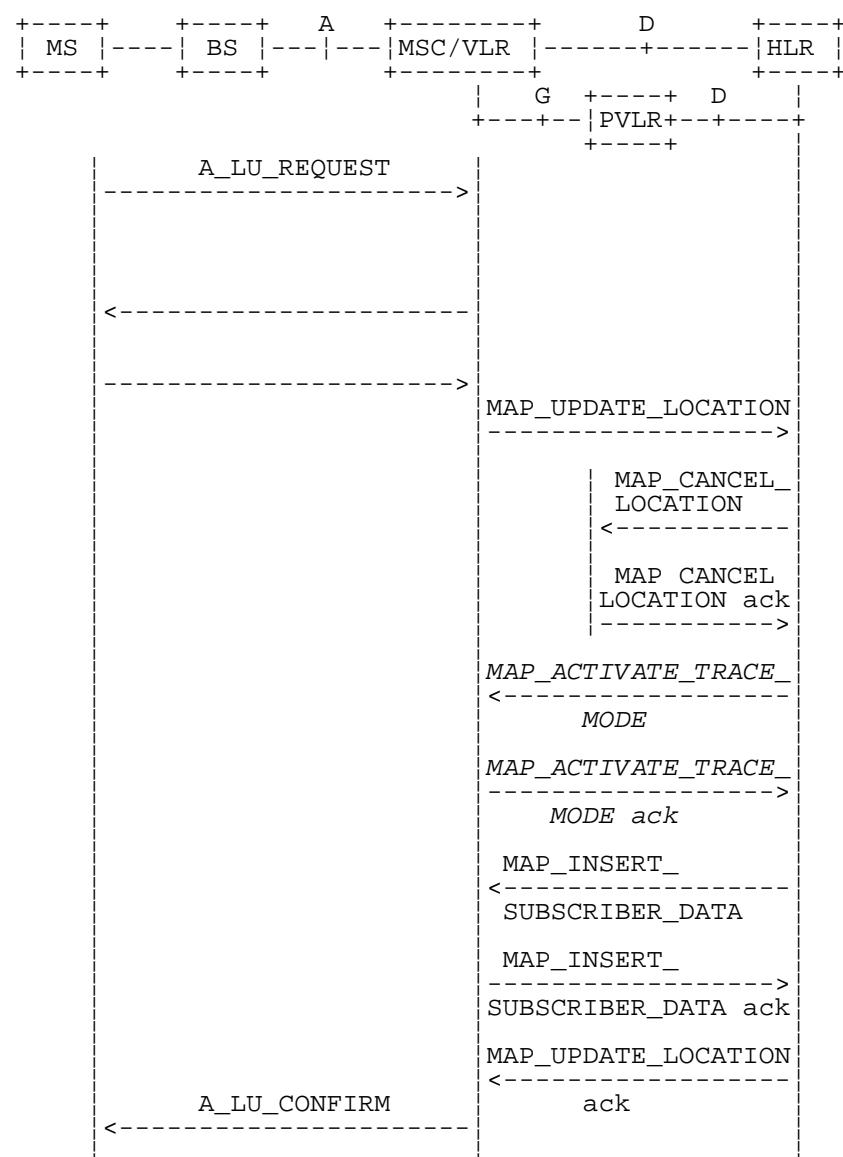

NOTE: Procedures shown in italics are optional.

**Figure 19.1.1/3: Interface and services for location updating involving both a VLR and an HLR, when IMSI can not be retrieved from the previous VLR**

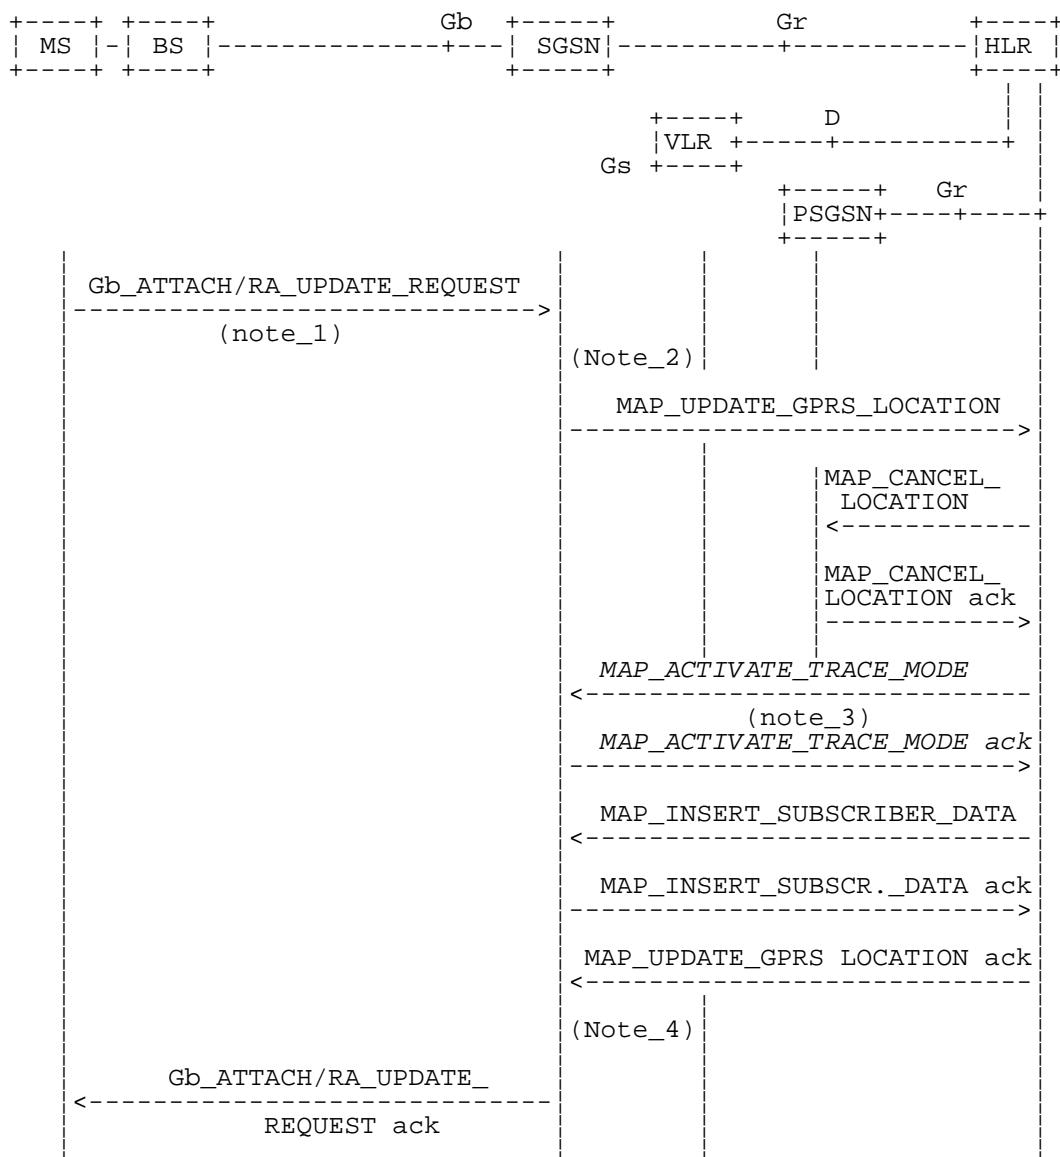

PSGSN = Previous SGSN


NOTE 1: For details of the procedure on the radio path, see 3GPP TS 48.018. The services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For security functions (authentication, ciphering, IMEI check) triggering refer to 3GPP TS 23.060 [104]. MAP processes invoked for those procedures are described in section 25.

NOTE 3: Optional services are printed in *italics*.

NOTE 4: Refer to 3GPP TS 23.060 [104] for termination of the procedure and triggering of the signalling on the Gb interface.

**Figure 19.1.1/4: Interface and services for GPRS location updating (Gs-interface not installed)**

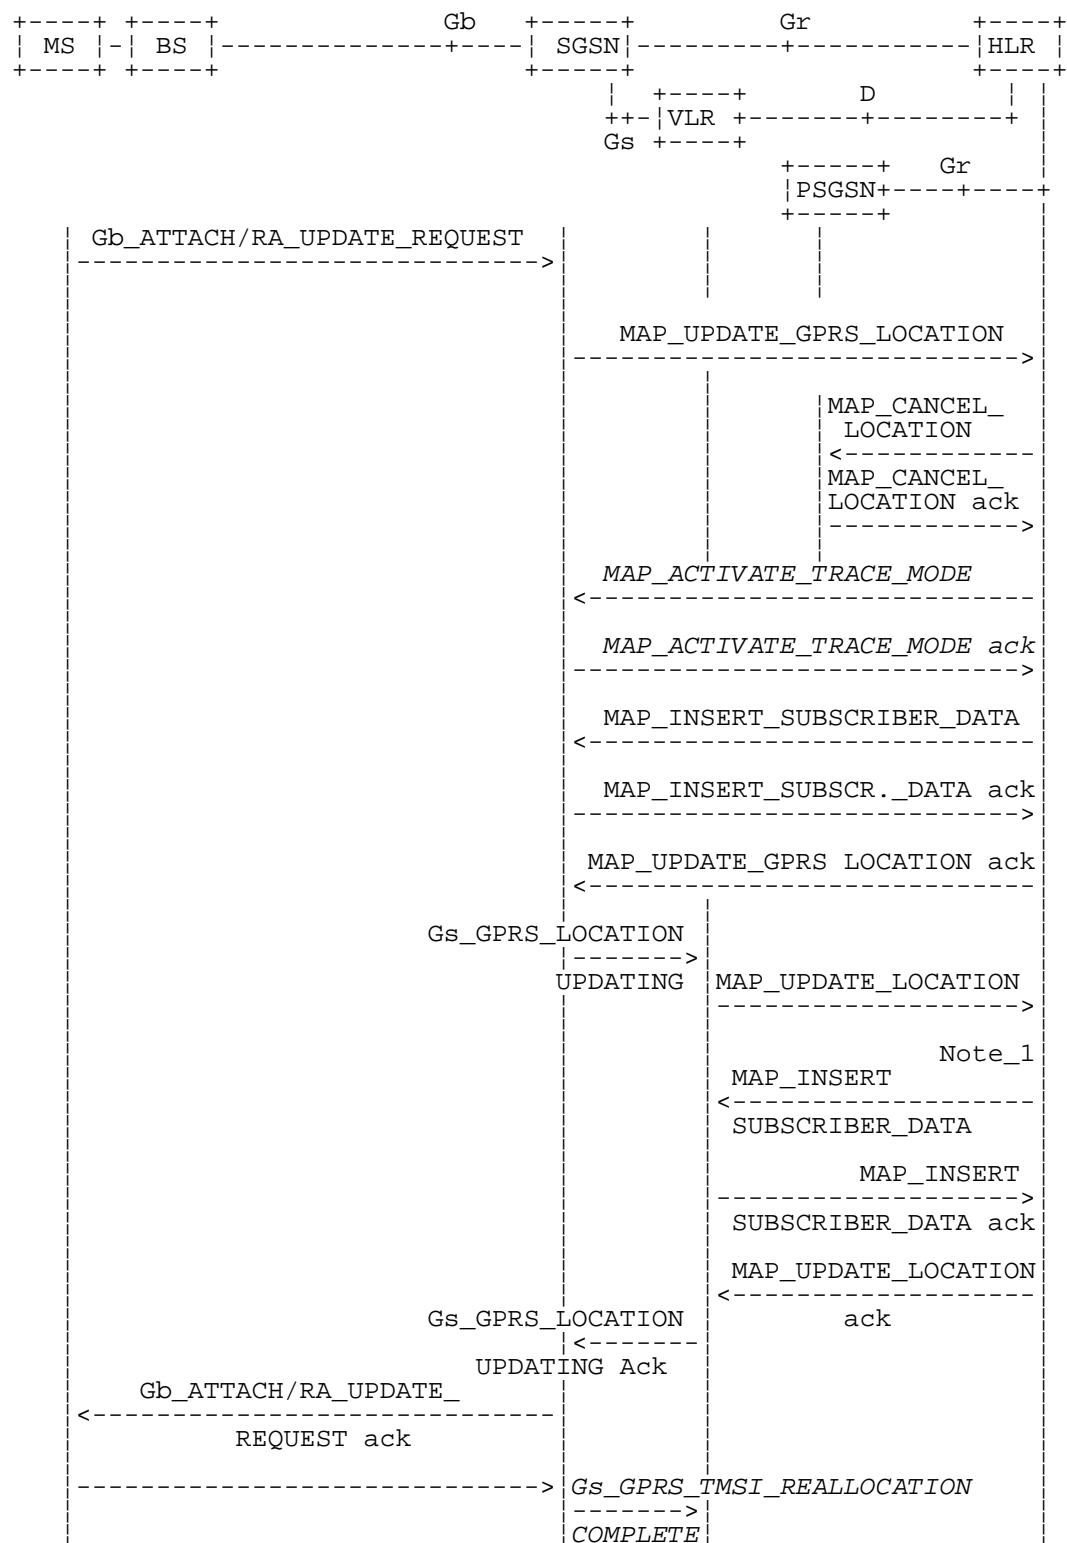

NOTE 1: The optional procedures in figure 19.1.1/14 apply here respectively. For details of the procedure on the Gs-interface, see 3GPP TS 29.018 [106].

NOTE 2: Location Cancellation procedure toward the old VLR and optional tracing activation toward the new VLR are not represented on this figure.

**Figure 19.1.1/5: Interface and services for GPRS location updating (Gs-interface installed)**

### 19.1.1.3 Detailed procedure in the VLR

#### Updating request via the Gs interface (optional for GPRS)

If Gs-interface is installed, the VLR may receive the Gs\_GPRS\_LOCATION\_UPDATING\_Request message from the SGSN for triggering an IMSI Attach or Location Updating procedure (see 3GPP TS 23.060 [104] and 09.18).

Figure 19.1.1/16 shows the process for handling this Gs interface message.

The process specific macro

« GPRS\_Location\_Update\_Completion\_VLR » for optional initiation of TMSI reallocation as for acknowledgement of the Gs\_GPRS\_LOCATION\_UPDATING\_Request message (see figure 19.1.1/17),

and the optional process specific macro

« VLR\_Update\_GPRS\_HLR » to update the HLR and download subscriber data from there (see figure 19.1.1/18), are invoked by this process.

On receipt of the Gs\_GPRS\_LOCATION\_UPDATING\_Request message, the VLR checks whether the subscriber is unknown (i.e. no IMSI record). If so, the indicator "Location Information Confirmed in HLR" is set to "Not Confirmed" to initiate HLR updating later on. The indicator "Confirmed by Radio Contact" is set to "Confirmed" and the location information held in the register is updated. If no VLR/SGSN association exists it is created (storage of SGSN address received) otherwise it is updated.

If the HLR is to be updated, the VLR\_Update\_GPRS\_HLR macro described below is performed, with one of the following results (see sheet 2 of figure 19.1.1/18):

- OK, if HLR updating has been completed successfully. The response will contain the HLR number as parameter. Next, the GPRS\_Location\_Update\_Completion VLR macro is invoked (checking amongst others the roaming restrictions and regional subscription data), and upon successful outcome of this macro the register is updated and the process terminates.
- Roaming Not Allowed, qualified by PLMN Roaming Not Allowed if the location information indicates a PLMN for which the subscriber has no subscription or if the subscribers HLR cannot be reached (e.g. SS7 links to the subscribers HPLMN do not yet exist). In this case, the appropriate error (see 3GPP TS 29.018 [106]) is sent to the SGSN in the Gs\_GPRS\_LOCATION\_UPDATING Reject. The Subscriber Data are deleted in the VLR.
- if Roaming Not Allowed was qualified by the parameter Operator Determined Barring, the appropriate error (see 3GPP TS 29.018 [106]) is sent in the Gs\_GPRS\_LOCATION\_UPDATING Reject to the SGSN. The subscriber data are deleted in the VLR.
- Unknown Subscriber, if the subscriber is not known in the HLR. In this case, the subscriber data are deleted in the VLR, and the appropriate error (see 3GPP TS 29.018 [106]) is sent in the Gs\_GPRS\_LOCATION\_UPDATING Reject.
- Procedure error, if there occurs some other error during HLR updating (e.g. abort of the connection to HLR). In this case the appropriate error (see 3GPP TS 29.018 [106]) is sent in the Gs\_GPRS\_LOCATION\_UPDATING Reject.

#### The macro GPRS Location Update Completion VLR

This macro completes the VLR updating process. First, the VLR checks whether there is a roaming restriction for the subscriber (see figure 19.1.1/17):

- if the target LA is not allowed for the subscriber due to national roaming restrictions, the appropriate error (see 3GPP TS 29.018 [106]) is sent in the Gs\_GPRS\_LOCATION\_UPDATING Reject towards the SGSN.

The subscriber data are not deleted from VLR, to avoid unnecessary HLR updating when roaming into other LAs of the same MSC/VLR. An indication that the subscriber is not allowed to roam is set in the VLR (LA Not Allowed Flag set to not allowed). As a consequence the subscriber is not reachable (checked for MTC, SMS and MT USSD) and cannot perform outgoing actions (checked in Access Management).

- if the target LA is not allowed for the subscriber because of regional subscription data (Zone Code List) or Roaming Restriction Due To Unsupported Feature stored in the VLR, the appropriate error (see 3GPP TS 29.018 [106]) is returned to the SGSN in the Gs\_GPRS\_LOCATION\_UPDATING Reject.

Also in this case the subscriber data are not deleted from VLR, to avoid unnecessary HLR updating when roaming into other LAs of the same MSC. The LA Not Allowed Flag is set to not allowed in the VLR.

- if, after check of possible roaming restrictions, the subscriber is allowed to roam in the target LA, the LA Not Allowed Flag is set to allowed (if necessary), the IMSI Detached Flag is set to attached and the process SUBSCRIBER\_PRESENT\_VLR is started; this may inform the HLR that the subscriber is present again to retry an SMS delivery (see clause 19.1.1.7). Thereafter, the VLR checks whether TMSI reallocation is required.
- if so, the VLR sends the TMSI within the Gs\_GPRS\_LOCATION\_UPDATING Accept message and Gs\_GPRS\_TMSI\_REALLOCATION\_Complete is expected.
- if TMSI reallocation is not required, the VLR sends the Gs\_GPRS\_LOCATION\_UPDATING Accept message to the SGSN.

### The macro VLR Update GPRS HLR

This macro is invoked by the VLR process for location updating (see 3GPP TS 23.060 [104]). If the VLR does not know the subscribers HLR (e.g. no IMSI translation exists as there are not yet any SS7 links to the subscribers HPLMN), the error Roaming Not Allowed with cause PLMN Roaming Not Allowed is returned.

If the subscribers HLR can be reached, the VLR opens a dialogue towards the HLR (see figure 19.1.1/18) by sending a MAP\_OPEN request without any user specific parameters, together with a MAP\_UPDATE\_LOCATION request containing the parameters

- IMSI, identifying the subscriber;
- Location Info, containing the MSC number;
- VLR Number, the E.164 address of the VLR, to be used by the HLR when addressing the VLR henceforth (e.g. when requesting an MSRN);
- the LMSI as an VLR operator option; this is a subscriber identification local to the VLR, used for fast data base access.

In case the HLR rejects dialogue opening (see clause 25.1), the VLR will terminate the procedure indicating Procedure error. If the HLR indicates version Vr protocol to be used, the VLR will revert to the version Vr procedure concerning the dialogue with the HLR, with outcomes as for the current MAP version procedure.

If the HLR accepts the dialogue, the HLR will respond with:

- a MAP\_INSERT\_SUBSCRIBER\_DATA indication, handled by the macro Insert\_Subs\_Data\_VLR defined in clause 25.7;

**NOTE:** The HLR may repeat this service several times depending on the amount of data to be transferred to the VLR and to replace subscription data in case they are not supported by the VLR.

- a MAP\_ACTIVATE\_TRACE\_MODE indication, handled by the macro Activate\_Tracing\_VLR defined in clause 25.9;
- a MAP\_FORWARD\_CHECK\_SS\_INDICATION\_ind. This indication will not be relayed to the SGSN.
- the MAP\_UPDATE\_LOCATION confirmation:
  - if this confirmation contains the HLR Number, this indicates that the HLR has passed all information and that updating has been successfully completed. The VLR is updated using the parameters provided in the service and needed by the VLR. If certain parameters are not needed in the VLR, e.g. because some service is not supported, the corresponding data may be discarded. The VLR sets the "Confirmed by HLR" and "Location information confirmed in HLR" indicators to "Confirmed" to indicate successful subscriber data updating;
  - if the confirmation contains an User error cause (Unknown Subscriber, Roaming Not Allowed or some other), the process calling the macro continues accordingly. In the last case, the subscriber data are marked as incomplete by setting the indicators "Confirmed by HLR" and "Location information confirmed in HLR" to "Not Confirmed". The same holds if there is a Provider error or a Data error in the confirmation;
- a MAP\_P\_ABORT, MAP\_U\_ABORT, or MAP\_CLOSE indication. In these cases, the subscriber data are marked to be incomplete and the process continues as in the case of an error reported by the HLR;

- a MAP\_NOTICE indication. Then, the dialogue towards the HLR is terminated, the subscriber data are marked to be incomplete and the process continues as in the case of an error reported by the HLR.

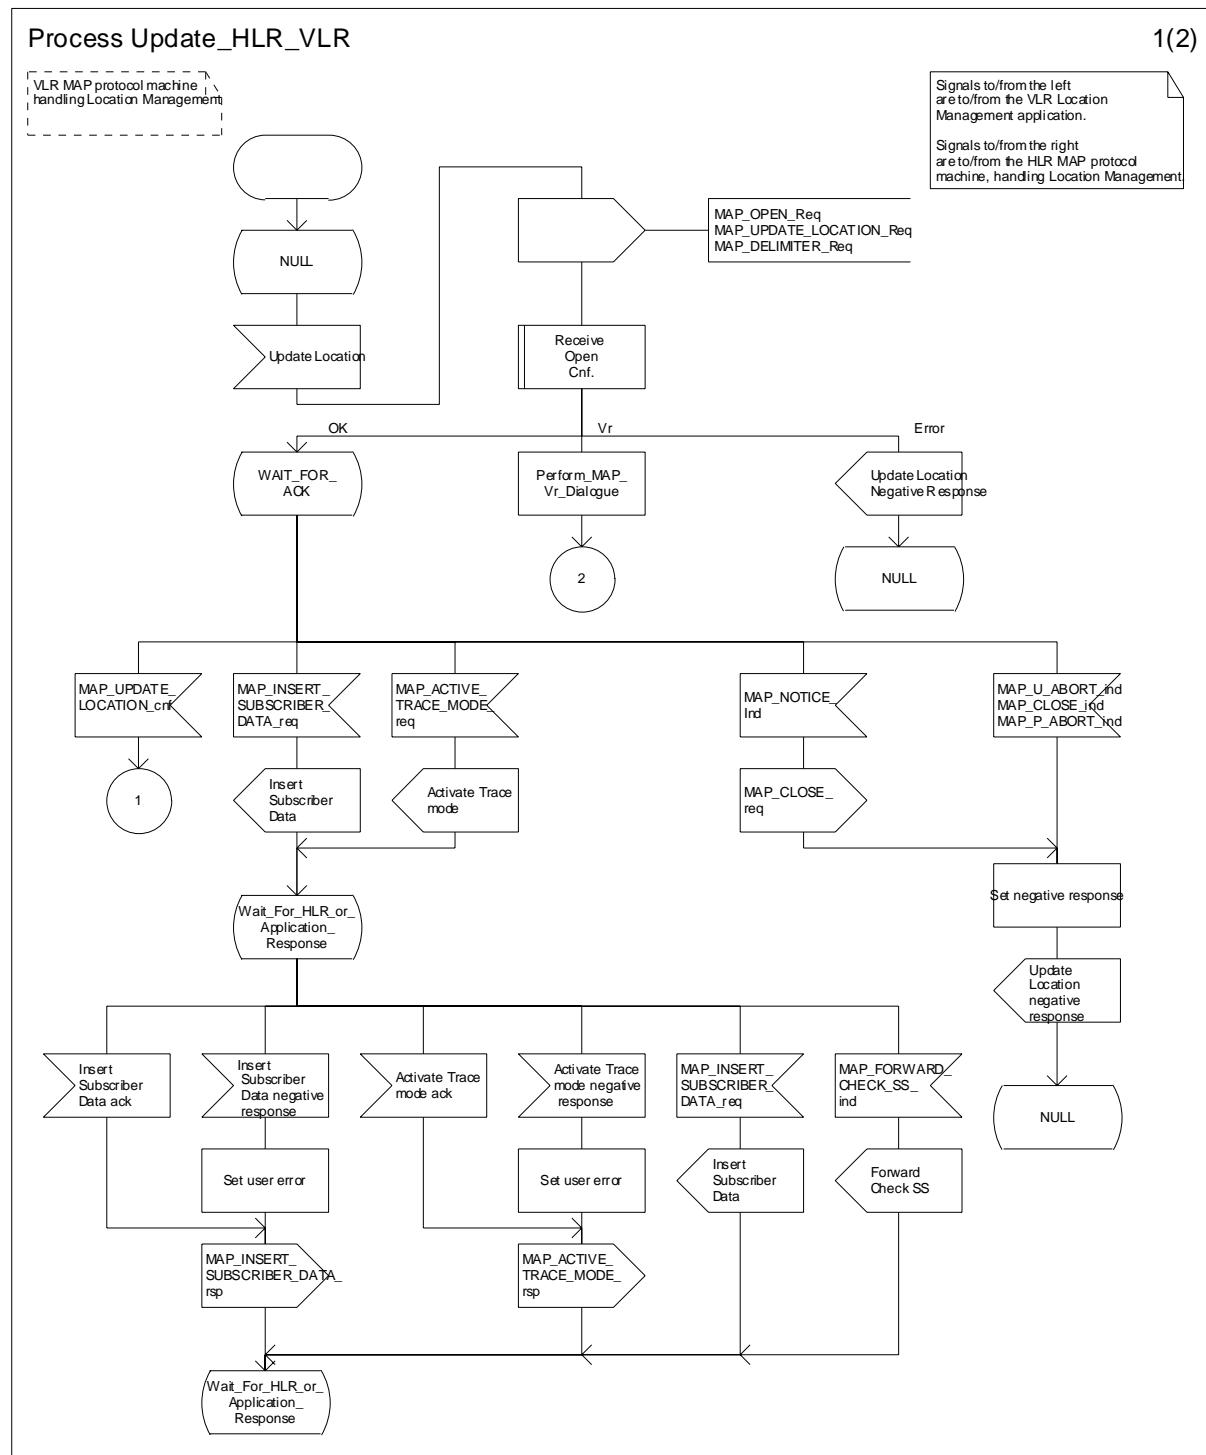


Figure 19.1.1/6 (sheet 1 of 2): Process Update\_HLR\_VLR

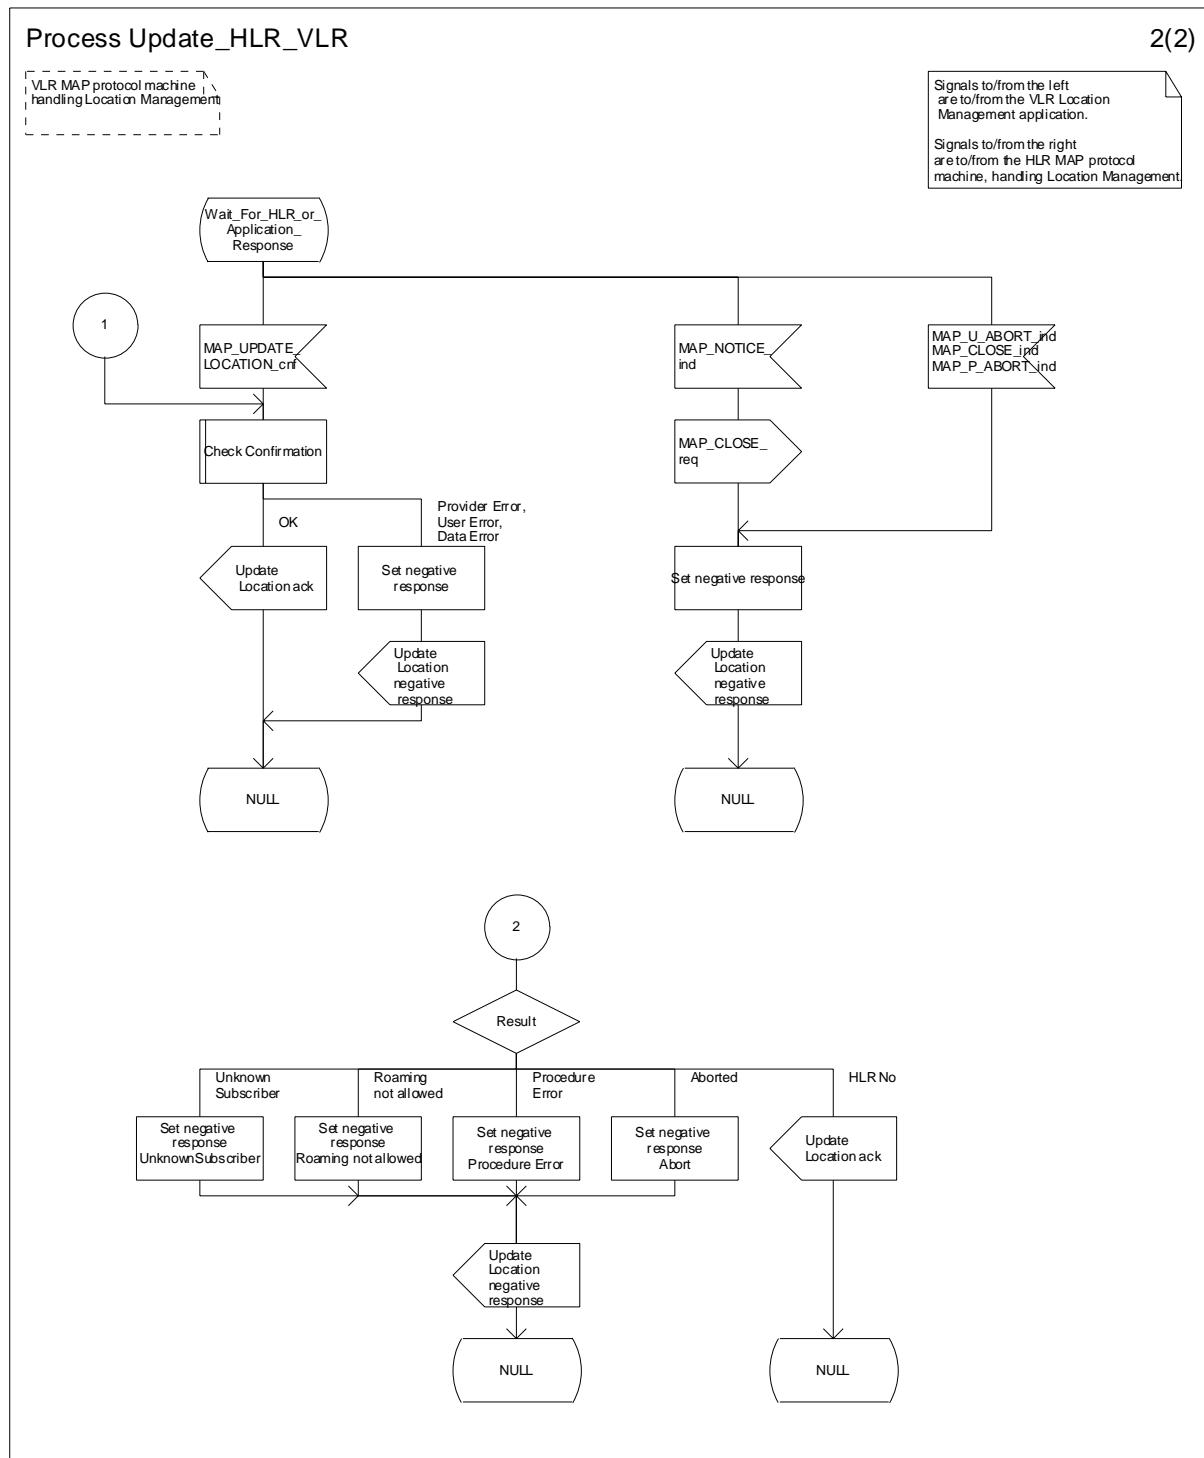


Figure 19.1.1/6 (sheet 2 of 2): Process Update\_HLR\_VLR

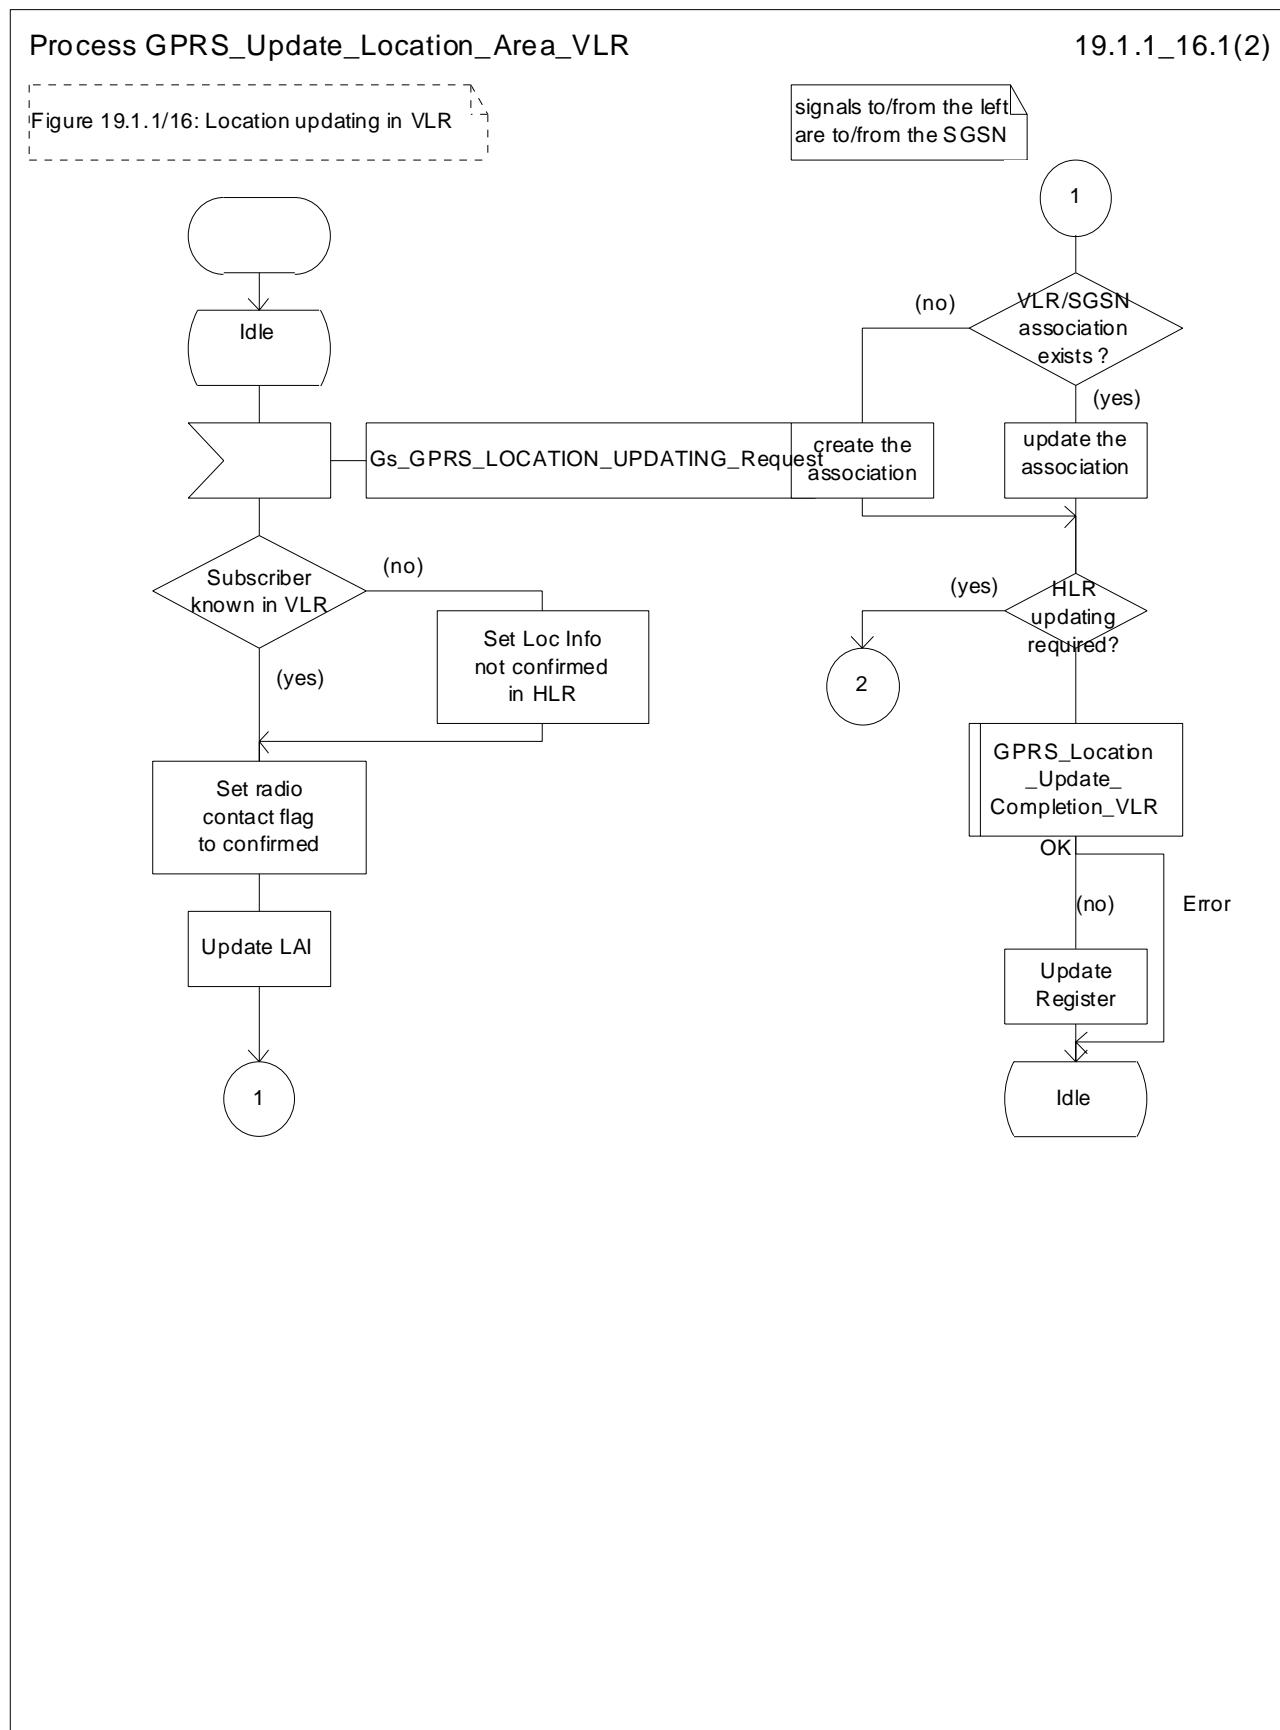


Figure 19.1.1/16 (sheet 1 of 2): Process GPRS\_Update\_Location\_Area\_VLR

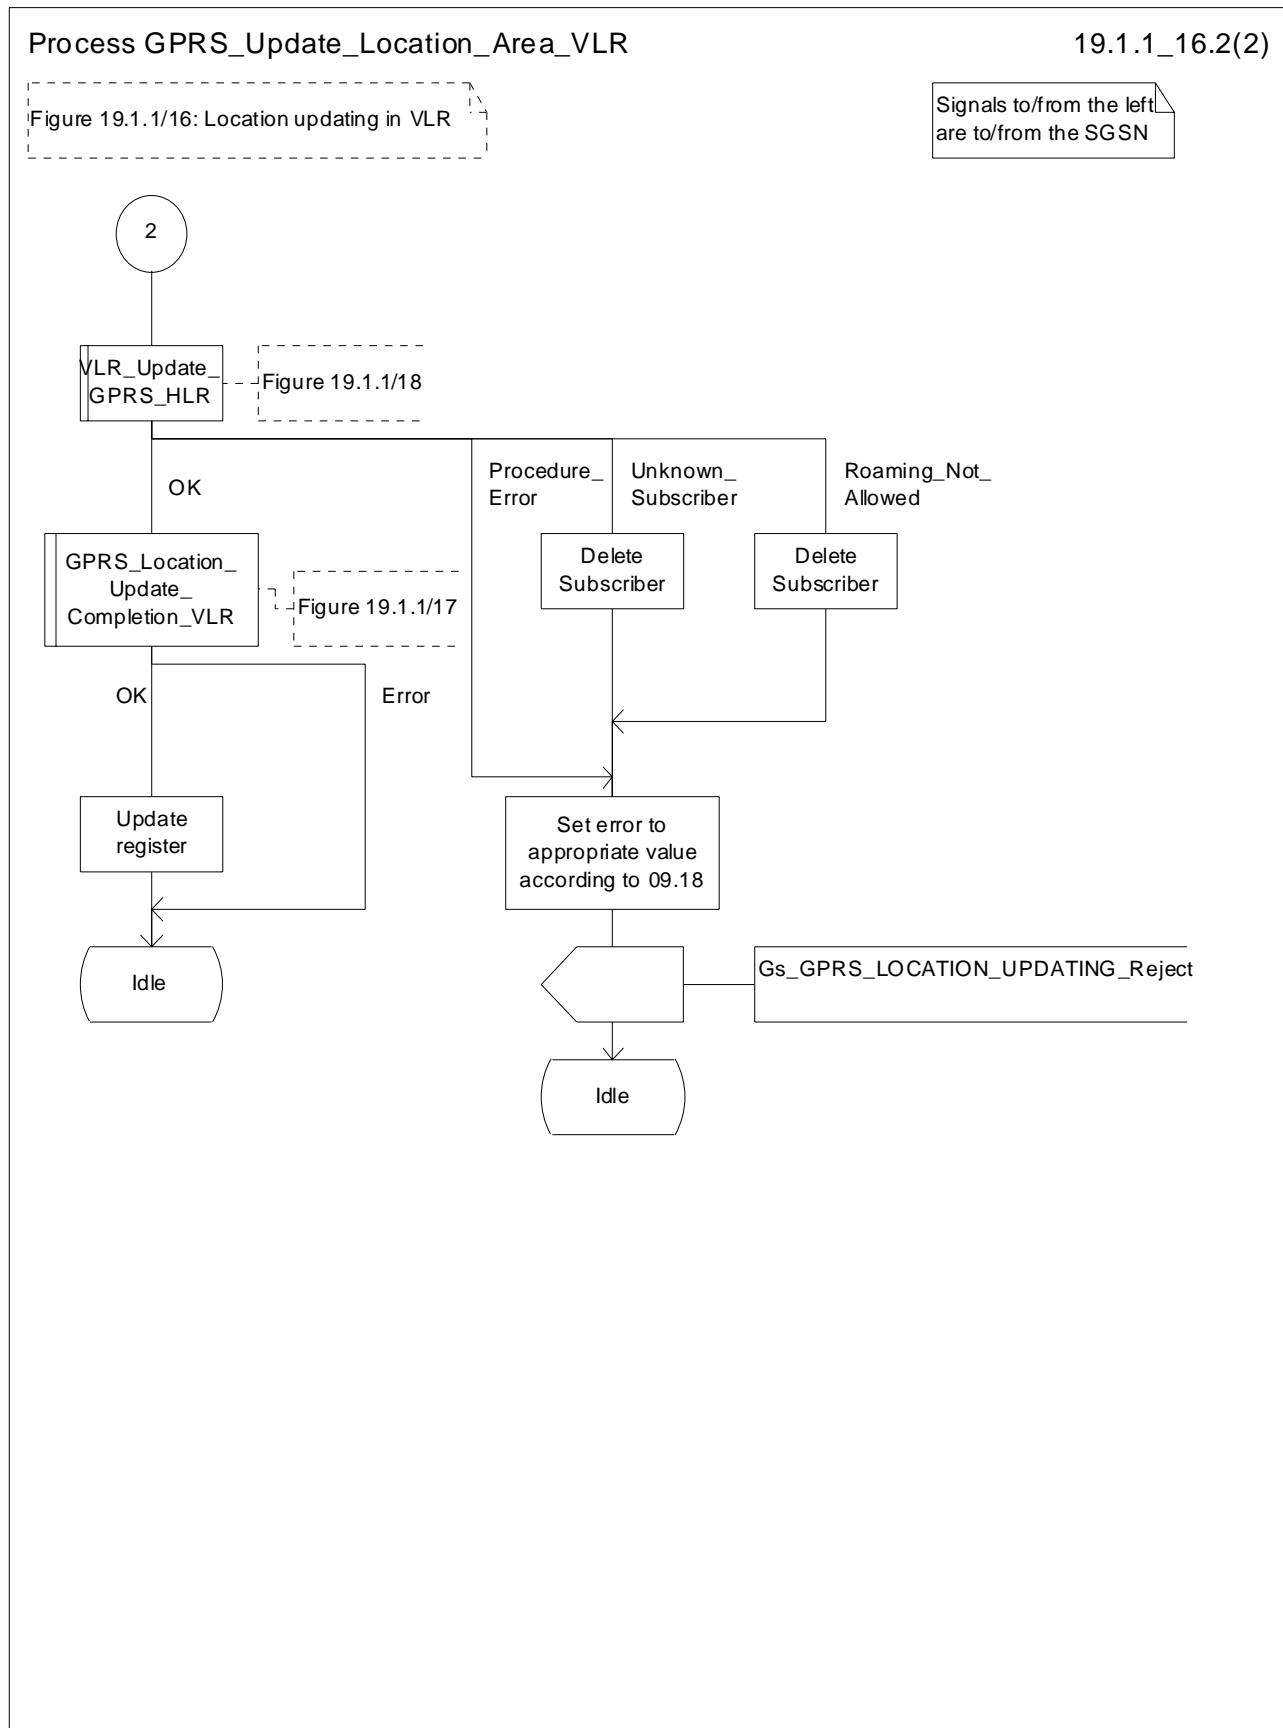
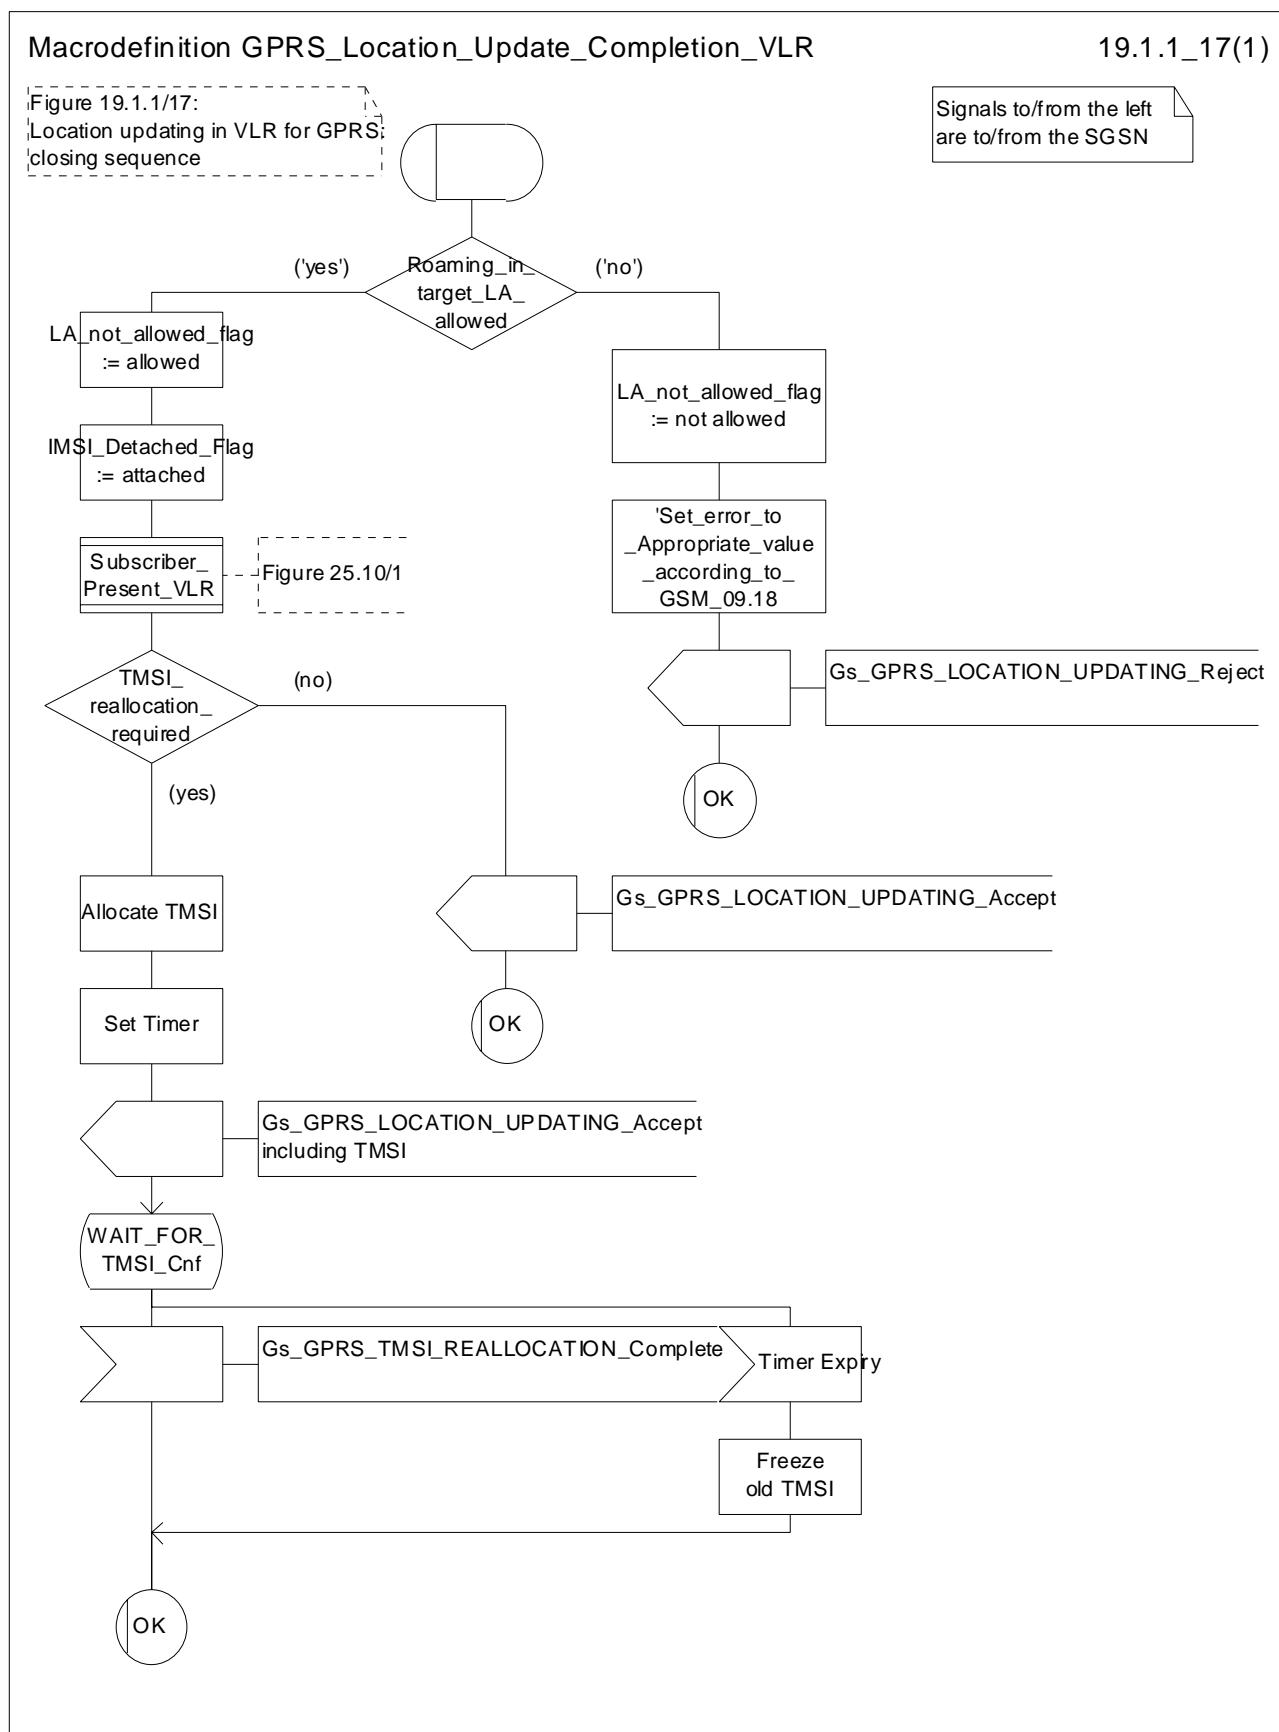


Figure 19.1.1/16 (sheet 2 of 2): Process GPRS\_Update\_Location\_Area\_VLR

**Figure 19.1.1/17: Macro GPRS\_Location\_Update\_Completion\_VLR**

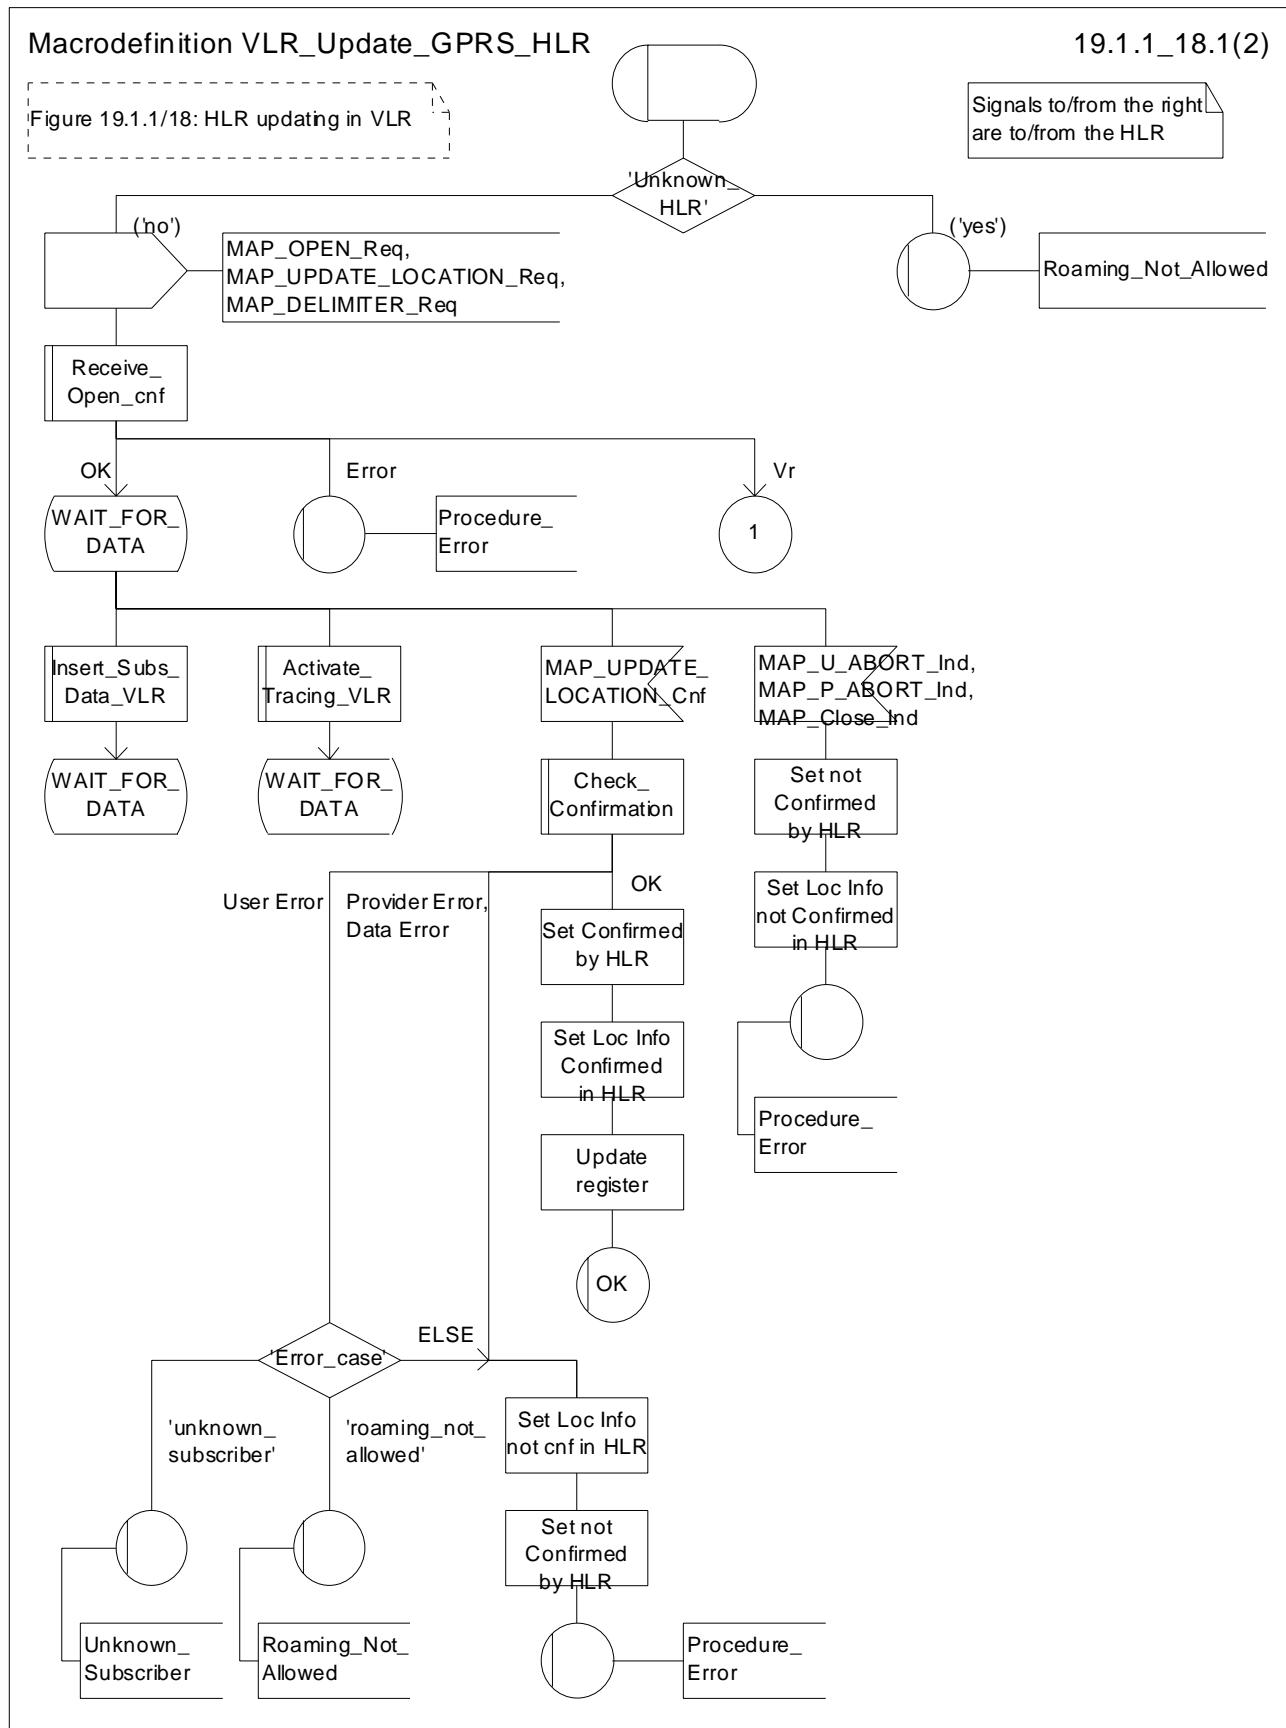


Figure 19.1.1/18 (sheet 1 of 2): Macro VLR\_Update\_GPRS\_HLR

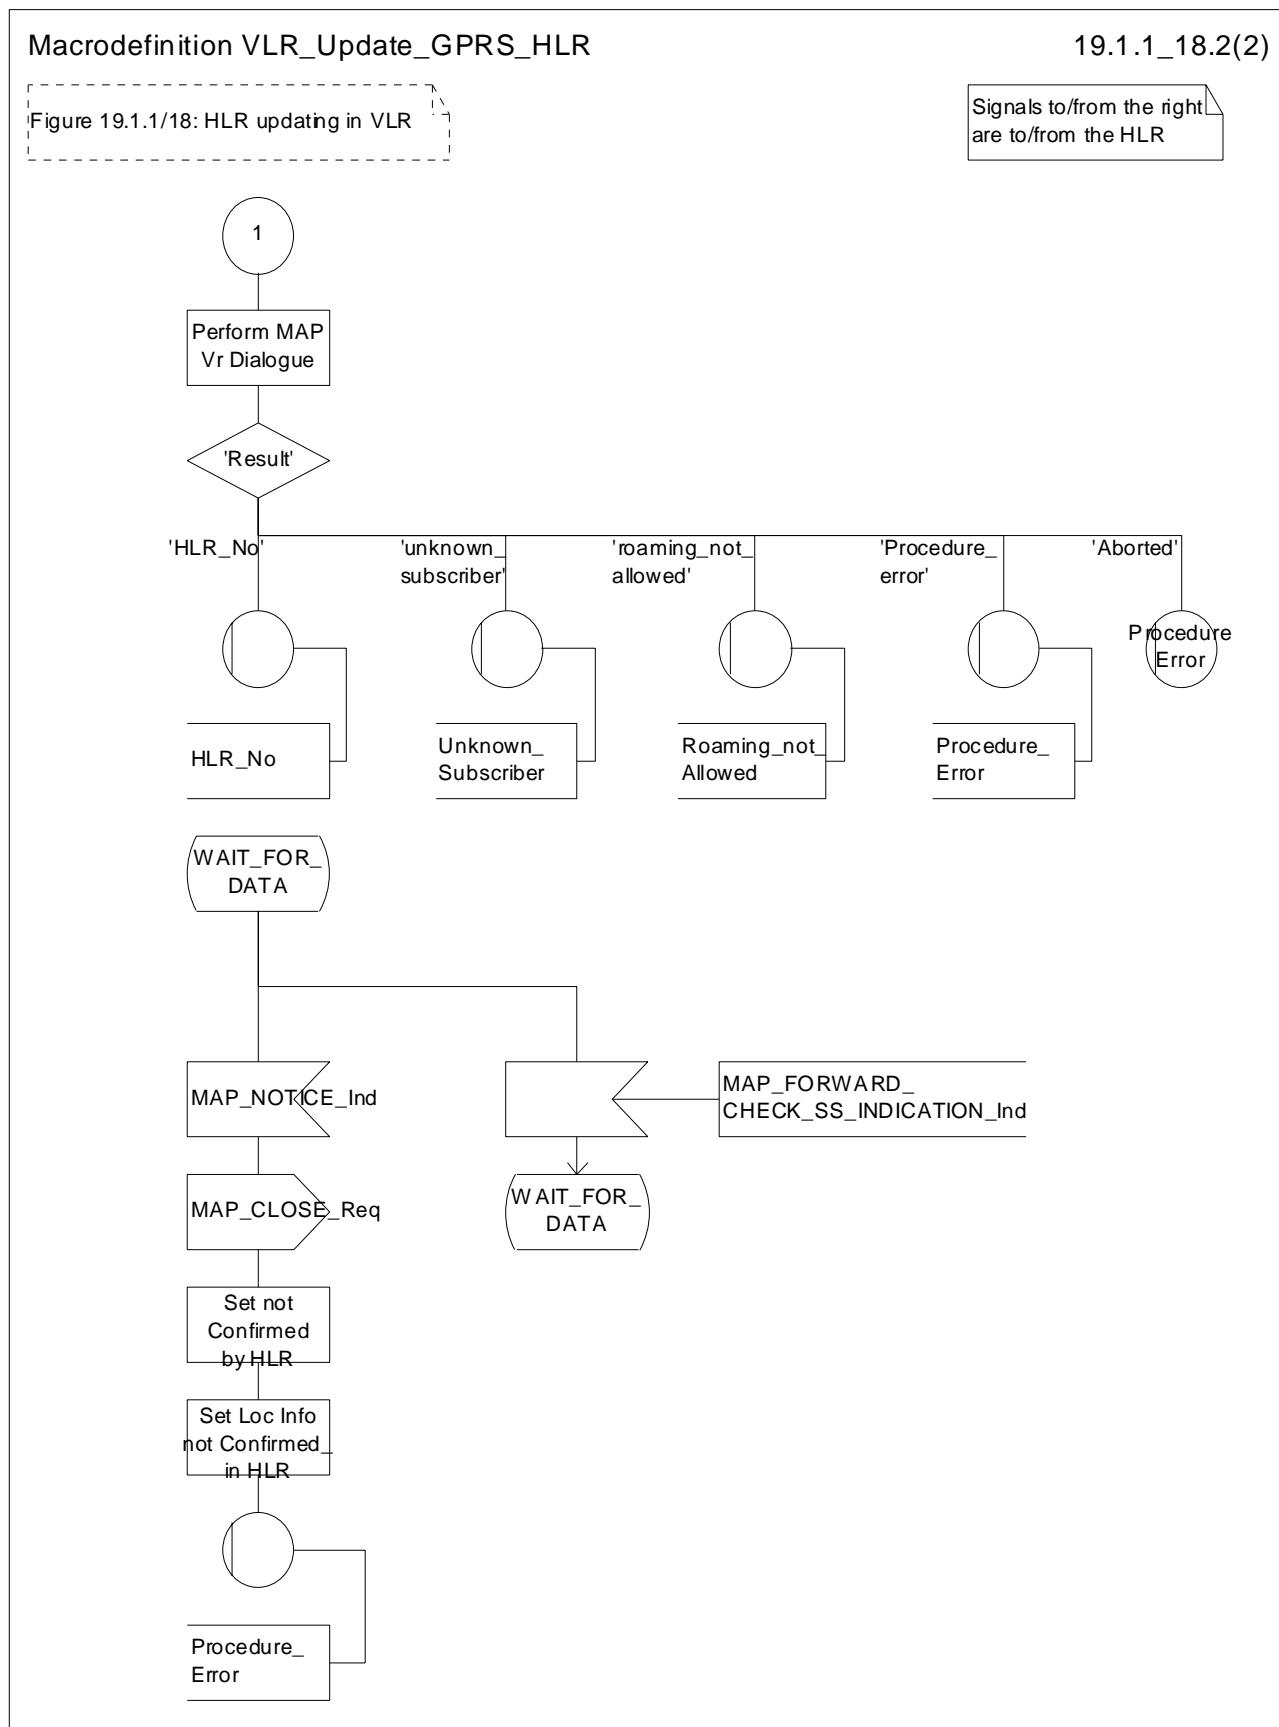


Figure 19.1.1/18 (sheet 2 of 2): Macro VLR\_Update\_GPRS\_HLR

### 19.1.1.4 Detailed procedure in the HLR

Sheet 1: The procedure Super\_Charged\_Cancel\_Location\_HLR is specific to Super-Charger; it is specified in TS 23.116 [110]. If the previous SGSN and the originating HLR support the Super-Charger functionality, processing continues from the "Yes" exit of the test "Result=Pass?".

Sheet 2: The procedure Super\_Charged\_Location\_Updating\_HLR is specific to Super-Charger; it is specified in TS 23.116 [110]. If subscription data needs to be sent to the SGSN, processing continues from the "No" exit of the test "Result=Pass?".

When addressed by the SGSN, the following macros are used by the process Update\_GPRS\_Location\_HLR:

- Receive\_Open\_indication, defined in clause 25.1;
- Check\_indication, defined in clause 25.2;
- Insert\_Subs\_Data\_In\_SGSN\_Framed\_HLR, described in clause 19.4;
- Control\_Tracing\_HLR\_with\_SGSN, described in clause 25.9;

and the processes Cancel\_Location\_HLR (see clause 19.1.2) and Subscriber\_Present\_HLR (see clause 19.1.1.7) are invoked.

The location updating process in the HLR is activated by receipt of a MAP\_UPDATE\_GPRS\_LOCATION indication (see figure 19.1.1/19):

- if there is a parameter problem in the indication, the error Unexpected Data Value is returned in the MAP\_UPDATE\_LOCATION response (see Check\_indication macro defined in clause 25.2); if the subscriber is not known in the HLR, the error Unknown Subscriber (with diagnostic value set to "Imsi Unknown") is returned in the response. In either case the process terminates;
- if Network Access Mode is set to "non-GPRS only" the error Unknown Subscriber (with diagnostic value set to "Gprs Subscription Unknown") is returned in the response. The process terminates;
- tracing shall be set to deactivate in the SGSN.
- if the SGSN number received in the MAP\_UPDATE\_GPRS\_LOCATION indication differs from the one actually stored against the subscriber, the Cancel\_Location\_HLR process is started to cancel the subscriber data in the stored SGSN (see clause 19.1.2).

The next action will be to check whether the subscriber is allowed to roam into the PLMN indicated by the SGSN Number given in the MAP\_UPDATE\_GPRS\_LOCATION indication:

- if the subscriber is not allowed to roam into the PLMN, the error Roaming not Allowed with cause 'PLMN Roaming Not Allowed' or 'Operator determined Barring', depending on the case, is returned in the MAP\_UPDATE\_GPRS\_LOCATION response, and the routing information stored (SGSN number) is deleted (deregistration). The HLR operator should avoid sending the error Roaming not Allowed with cause 'PLMN Roaming Not Allowed' or 'Operator determined Barring' to an SGSN in the HPLMN because this may lead to undesirable behaviour by the MS;
- otherwise the HLR database will be updated with information received in the indication. The HLR sets the "MS purged for GPRS" flag to False and checks whether tracing is required for that subscriber. This is handled by the macro Control\_Tracing\_HLR-with\_SGSN described in clause 25.9.

Thereafter, the macro Insert\_Subs\_Data\_In\_SGSN\_Framed\_HLR described in clause 19.4 is invoked. The outcome of this macro may be:

- aborted, in which case the process terminates;
- error, in which case the error System Failure is returned in the MAP\_UPDATE\_GPRS\_LOCATION response and the process terminates;
- OK, indicating successful outcome of downloading the subscriber data to the SGSN.

The SUBSCRIBER\_PRESENT\_HLR process is then started to alert the Short Message Service Centre, if required (see clause 19.1.7).

Finally the HLR number is returned in the MAP\_UPDATE\_GPRS\_LOCATION response.

In all cases where the HLR sends a MAP\_UPDATE\_GPRS\_LOCATION response to the SGSN, the dialogue towards the SGSN is terminated by a MAP\_CLOSE request with parameter Release Method indicating Normal Release.

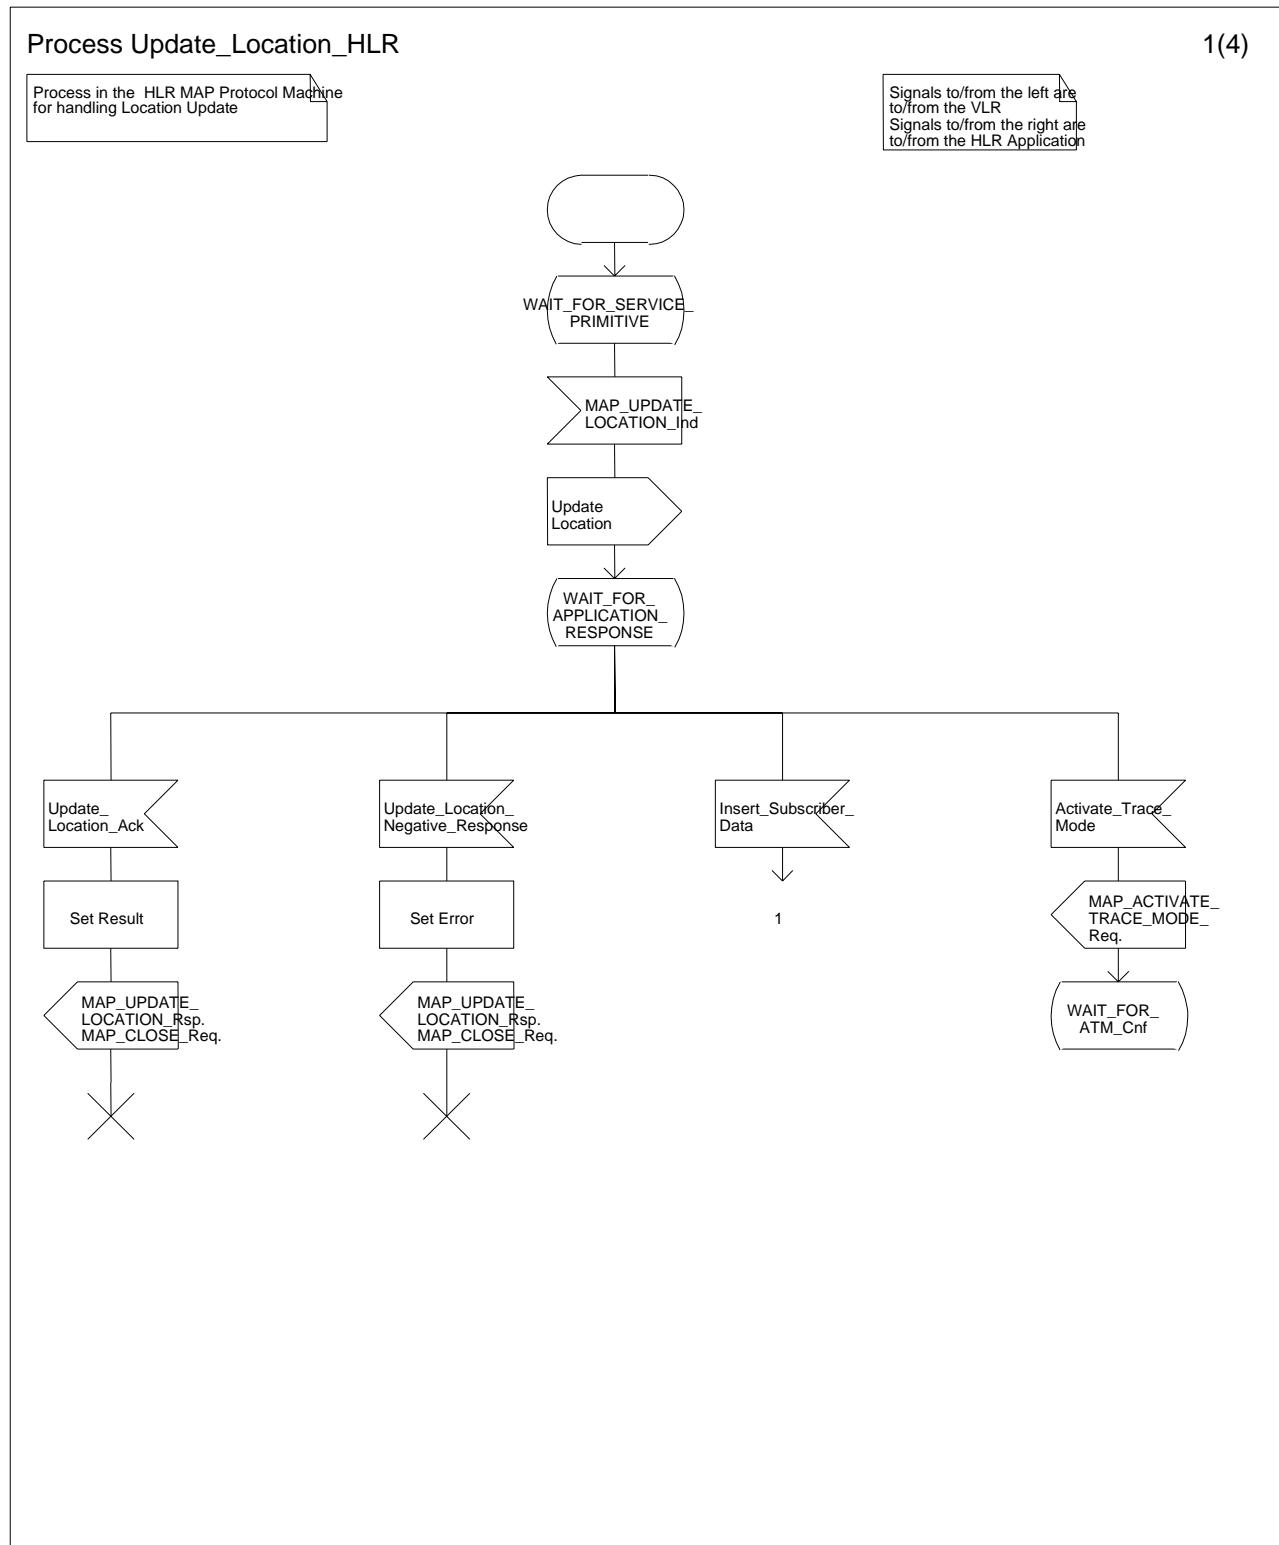


Figure 19.1.1/9 (sheet 1 of 4): Process Update\_Location\_HLR

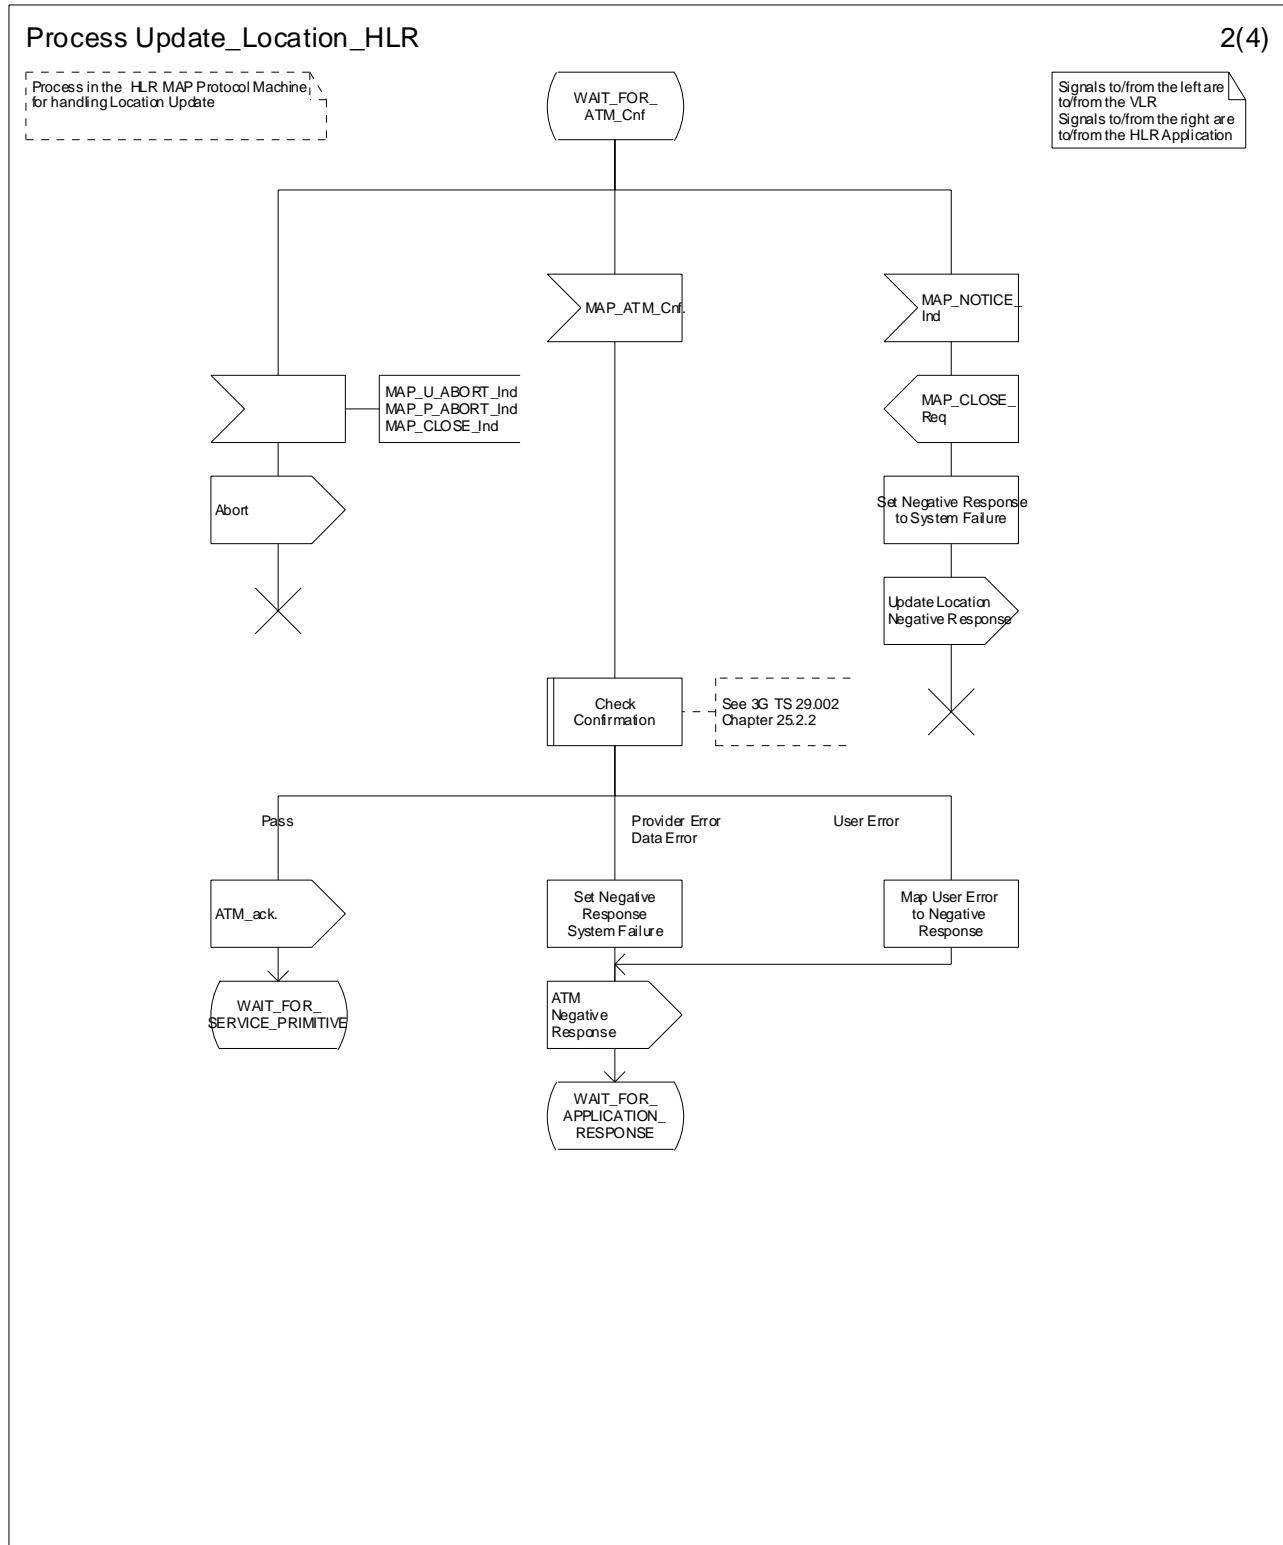


Figure 19.1.1/9 (sheet 2 of 4): Process Update\_Location\_HLR

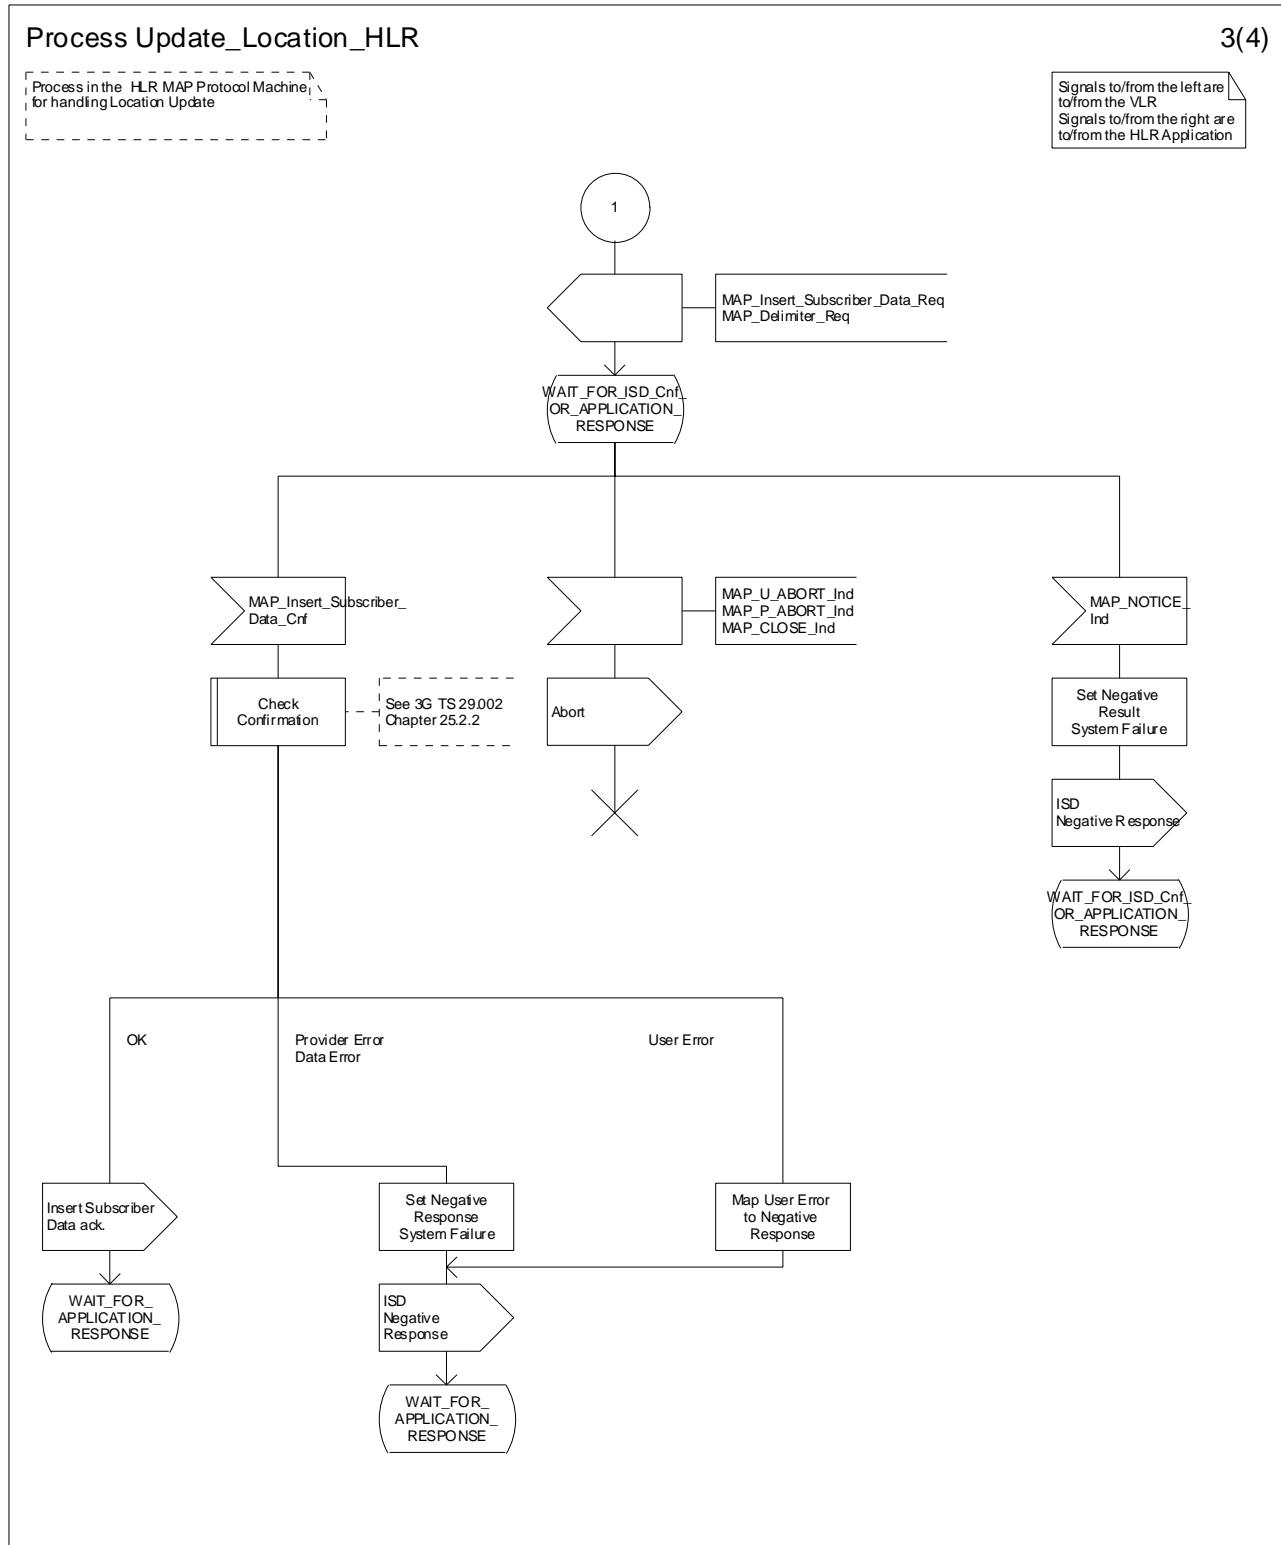


Figure 19.1.1/9 (sheet 3 of 4): Process Update\_Location\_HLR

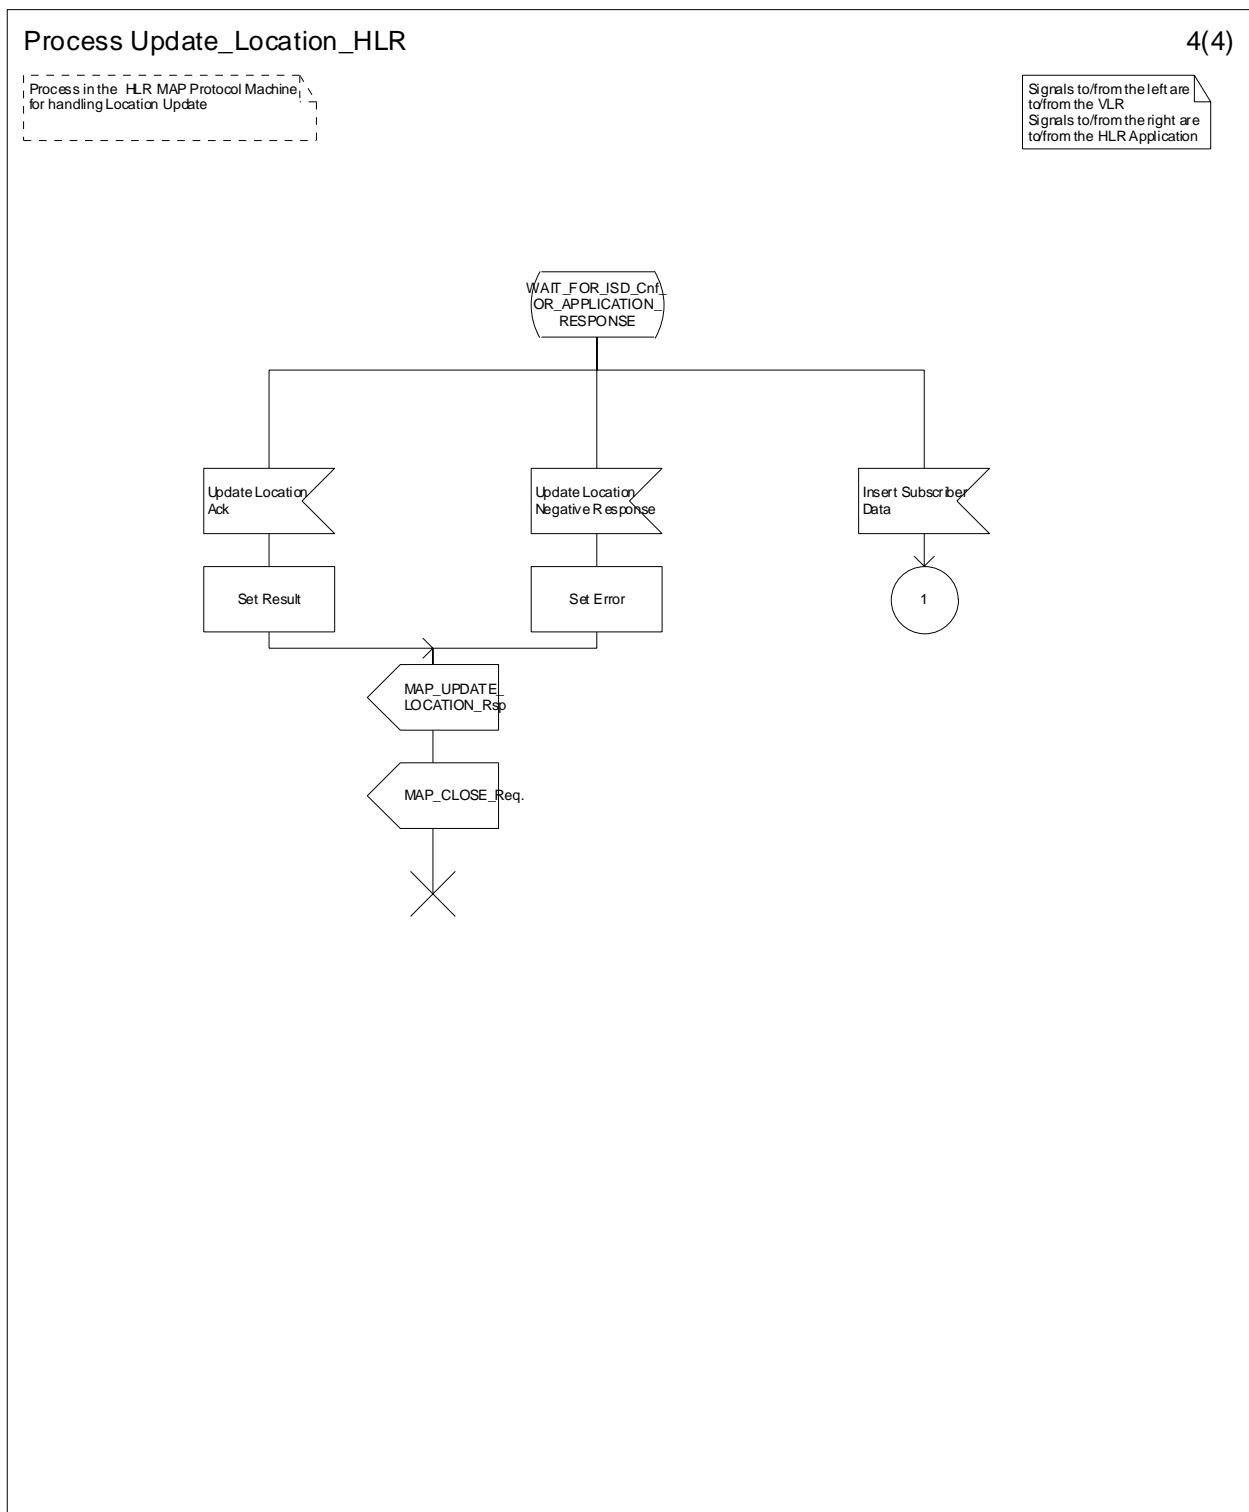


Figure 19.1.1/9 (sheet 4 of 4): Process Update\_Location\_HLR

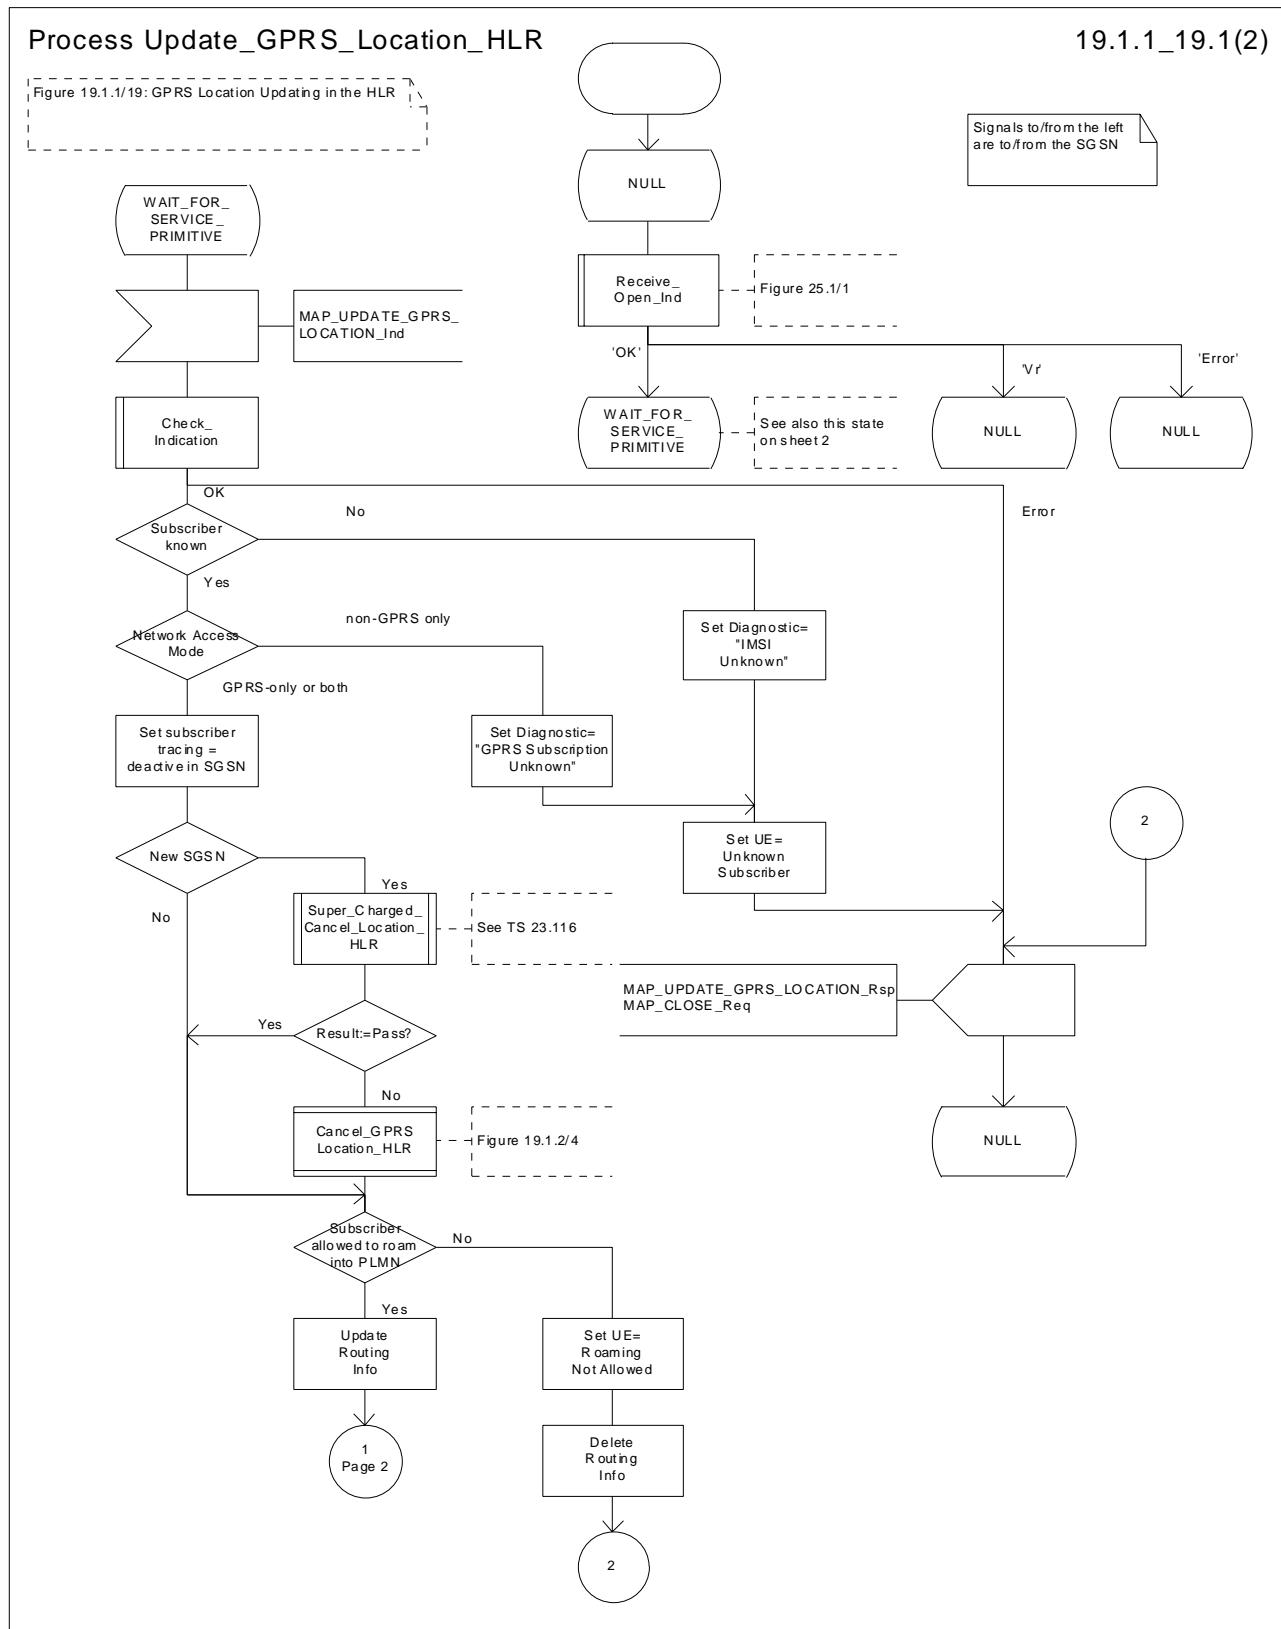


Figure 19.1.1/19 (sheet 1 of 2): Process Update\_GPRS\_Location\_HLR

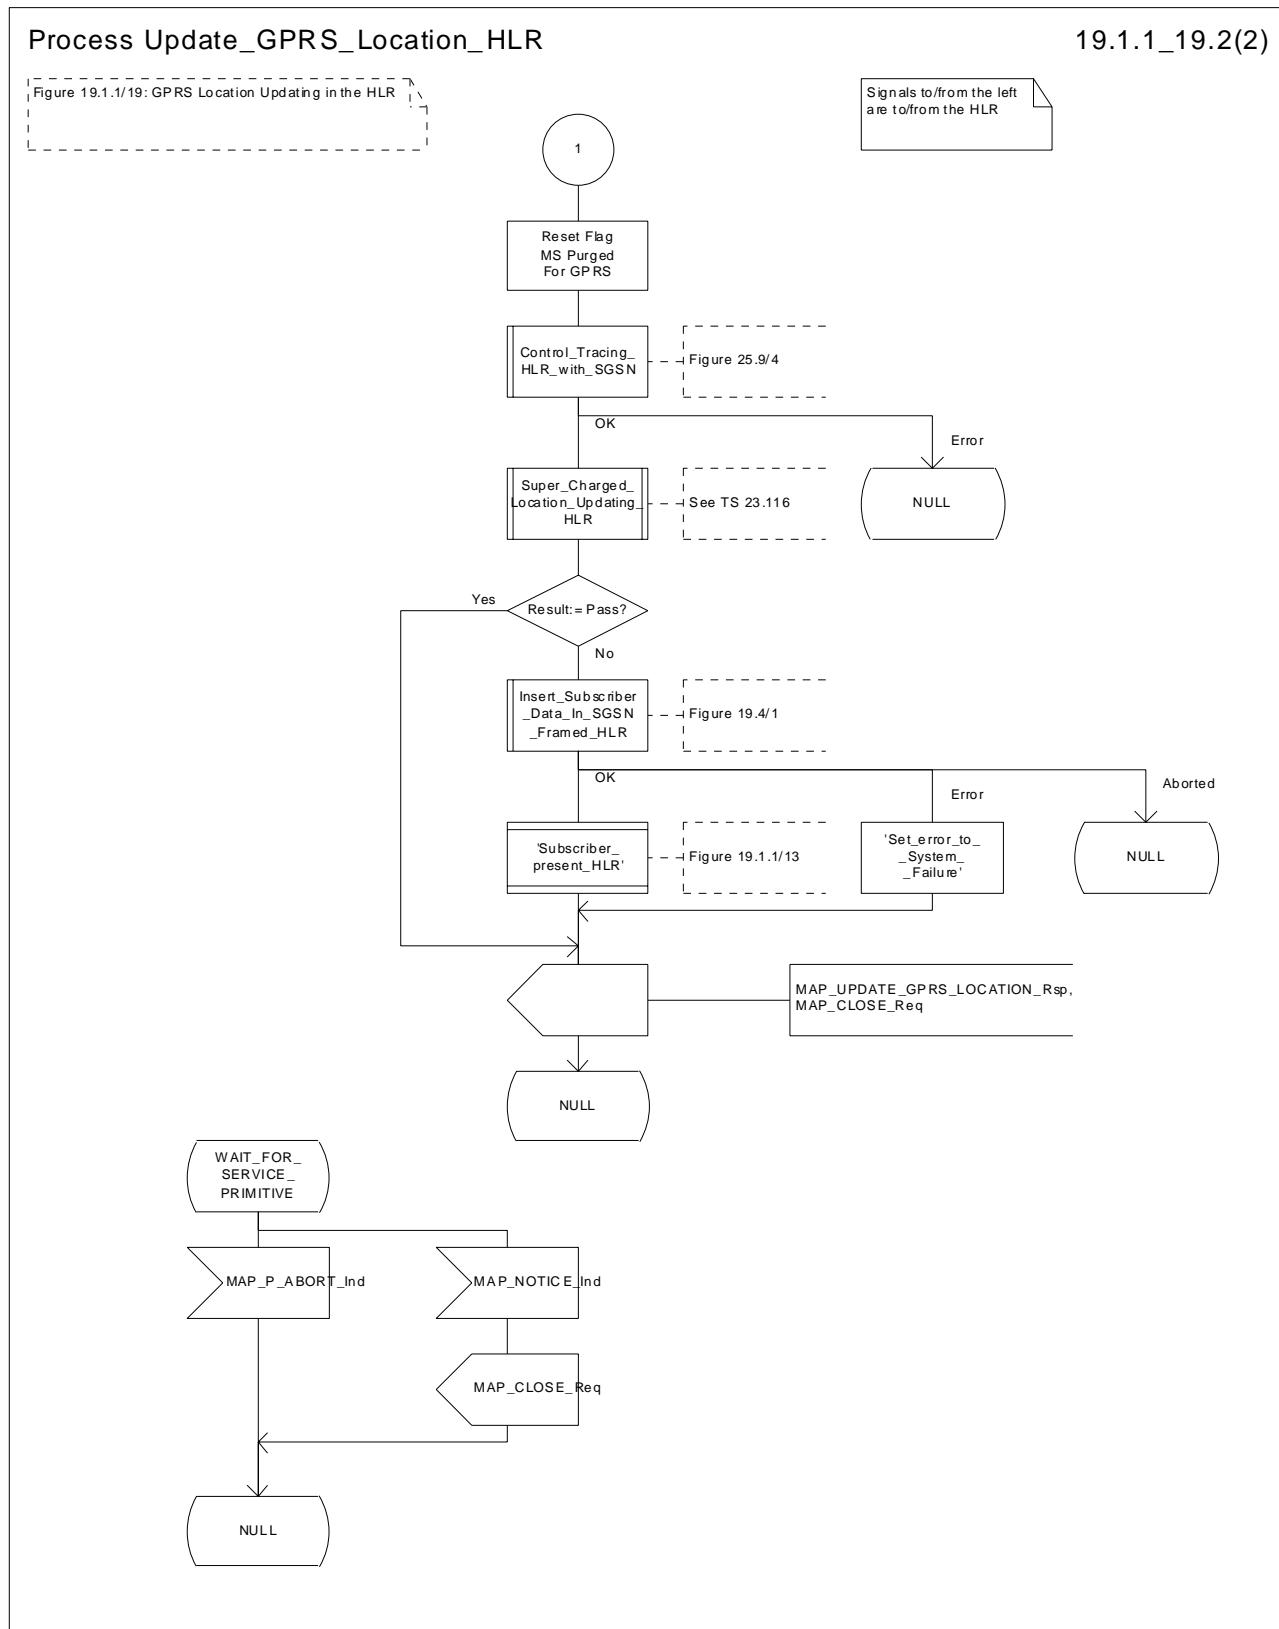



Figure 19.1.1/19 (sheet 2 of 2): Process Update\_GPRS\_Location\_HLR

### 19.1.1.5 Send Identification

#### 19.1.1.5.1 General

This service is invoked by the VLR when it receives Update location from the MSC indicating that the subscriber was registered in a different VLR (henceforth called the Previous VLR, PVLR). If the identity of the PVLR is derivable for the VLR (usually if both are within the same network), the IMSI and authentication sets are requested from the PVLR (see clause 19.1.1.3), using the service described in clause 8.1.4.

If the version negotiation between R99 VLR and pre-R99 PVLR leads to the MAP version 1 or 2, the VLR shall request authentication sets from the HLR.

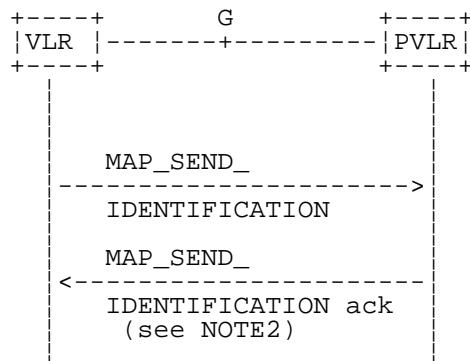

NOTE1: The service shown in dotted lines indicates the trigger provided by other MAP signalling.

NOTE2: Several MAP\_SEND\_IDENTIFICATION request/response may be used if message segmentation is required.

**Figure 19.1.1/10: Interface and services for Send Identification**

#### 19.1.1.5.2 Detailed procedure in the VLR

The VLR procedure is part of the location area updating process described in clause 19.1.1.X.

#### 19.1.1.5.3 Detailed procedure in the PVLR

On receipt of a dialogue request for the Send Identification procedure, (see Receive\_Open\_Ind macro in clause 25.1), the PVLR will:

- terminate the procedure in case of parameter problems;
- revert to the MAP version Vr procedure in case the VLR indicated version Vr protocol; or
- continue as below, if the dialogue is accepted.

If the PVLR process receives a MAP\_NOTICE indication, it terminates the dialogue by sending a MAP\_CLOSE request.

If the PVLR process receives a MAP\_SEND\_IDENTIFICATION indication from the VLR (see figure 19.1.1/11), it checks whether the subscriber identity provided is known:

- if so, the IMSI and - if available - authentication parameters for the subscriber are returned in the MAP\_SEND\_IDENTIFICATION response;
- if not, the error Unidentified Subscriber is returned in the MAP\_SEND\_IDENTIFICATION response.

If the VLR has indicated that segmentation is prohibited then the PVLR sends a MAP\_SEND\_IDENTIFICATION response to the VLR by means of the TC-RESULT-L service and terminates the dialogue towards the VLR by a MAP\_CLOSE request with parameter Release Method indicating Normal Release.

If the VLR has not indicated that segmentation is prohibited then the PVLR sends a MAP\_SEND\_IDENTIFICATION response to the VLR by means of the TC-RESULT-L service, followed either by a MAP\_DELIMITER if more

authentication sets are to be returned, or by a MAP\_CLOSE request with parameter Release Method indicating Normal Release.

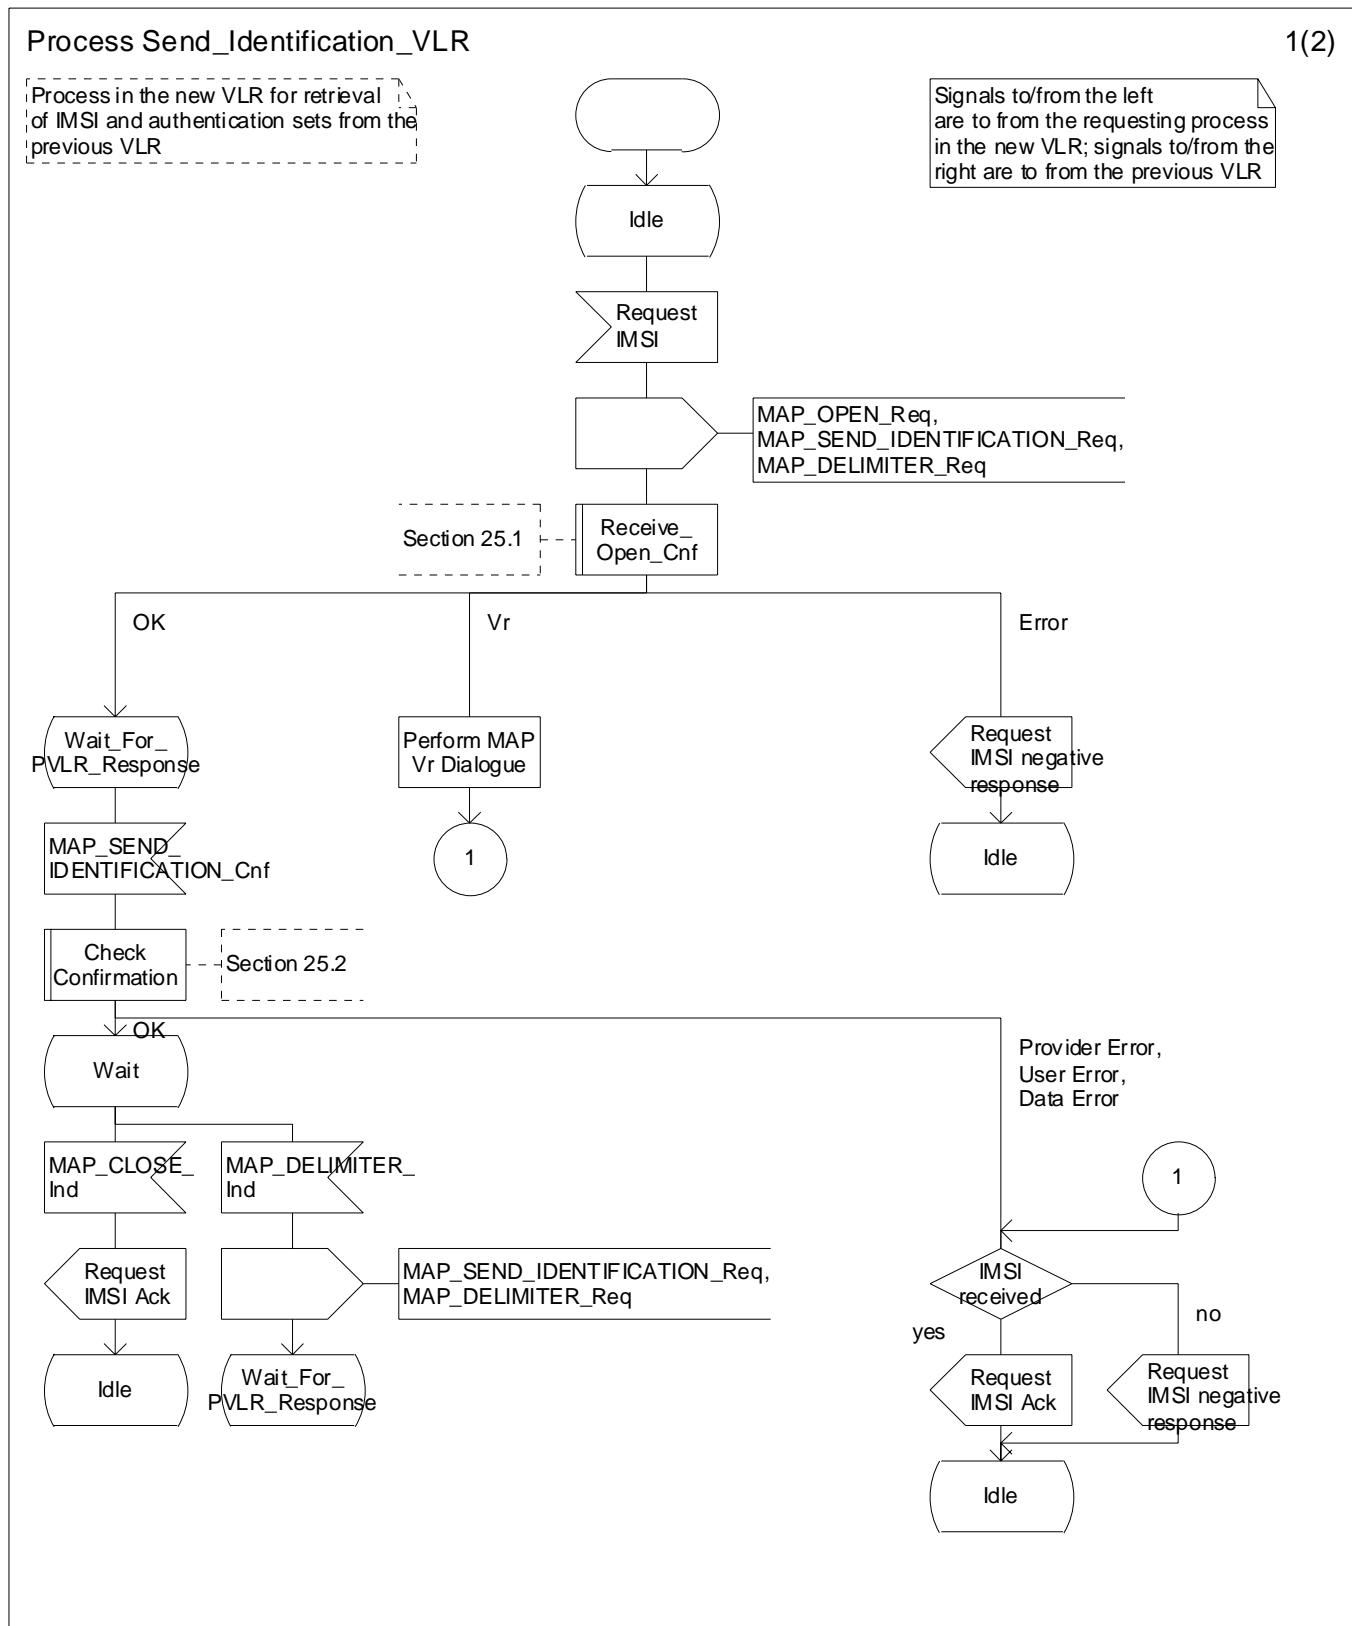


Figure 19.1.1/XX (sheet 1 of 2): Process Send\_Identification\_VLR

## Process Send\_Identification\_VLR

2(2)

Process in the new VLR for retrieval of IMSI and authentication sets from the previous VLR

Signals to/from the left are to from the requesting process in the new VLR; signals to/from the right are to from the previous VLR

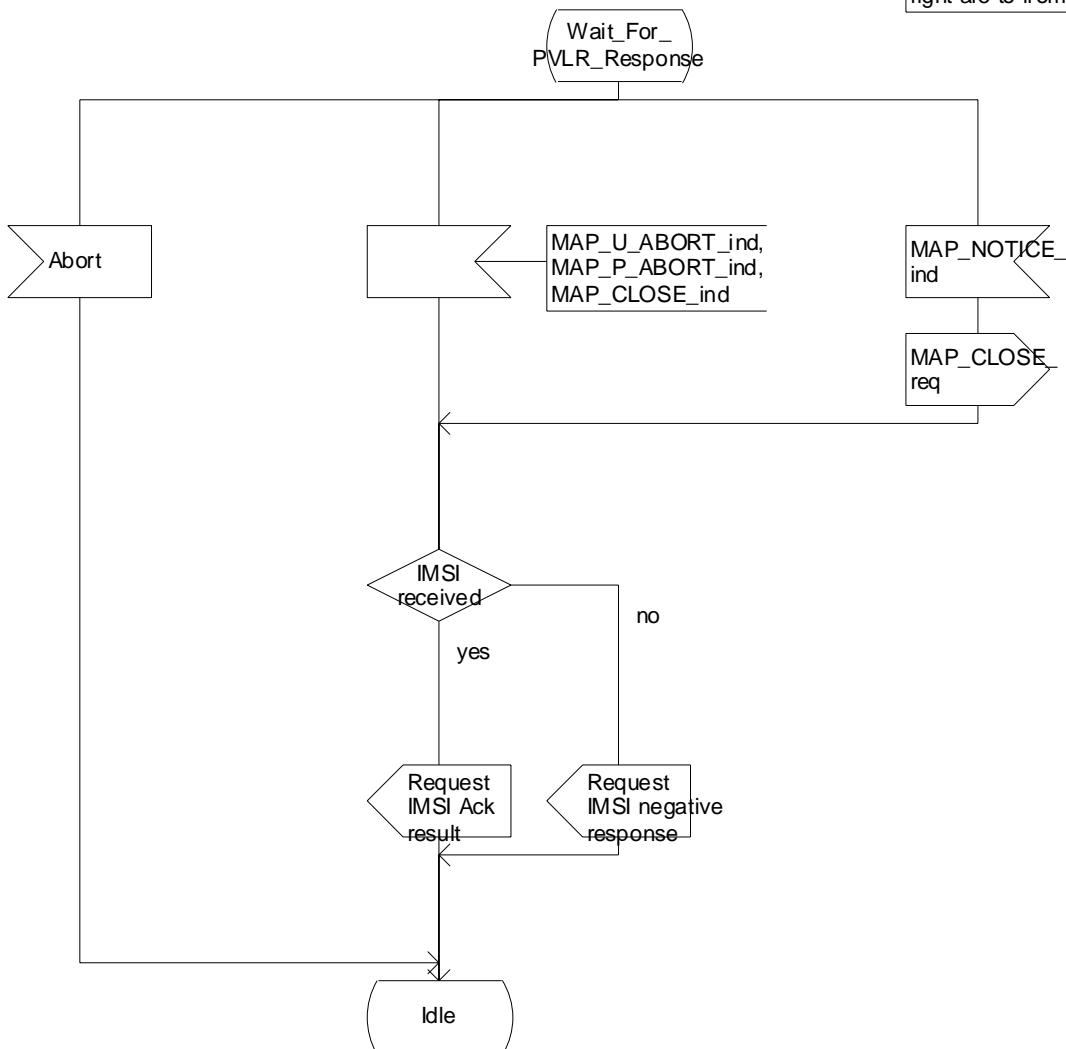


Figure 19.1.1/XX (sheet 2 of 2): Process Send\_Identification\_VLR

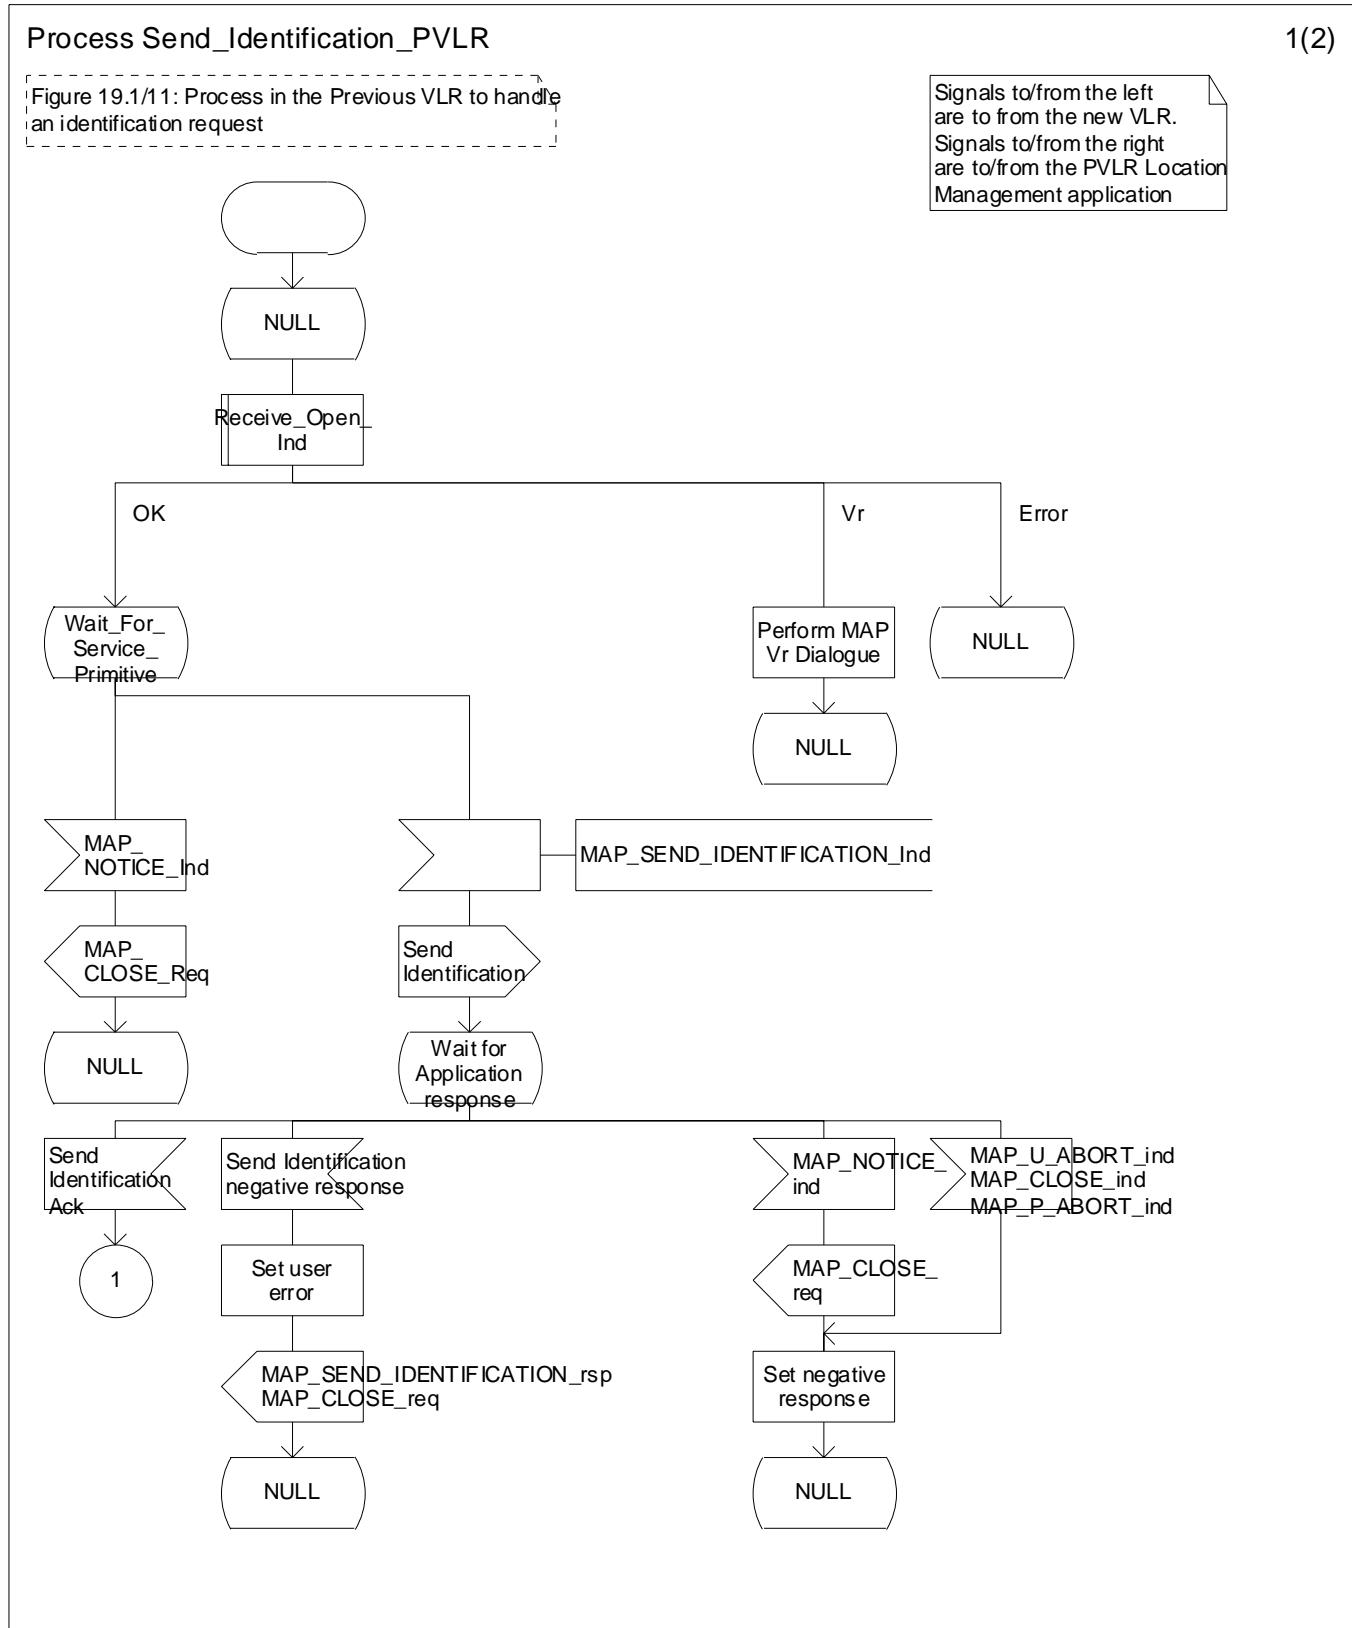


Figure 19.1.1/XX (sheet 1 of 2): Process Send\_Identification\_PVLR

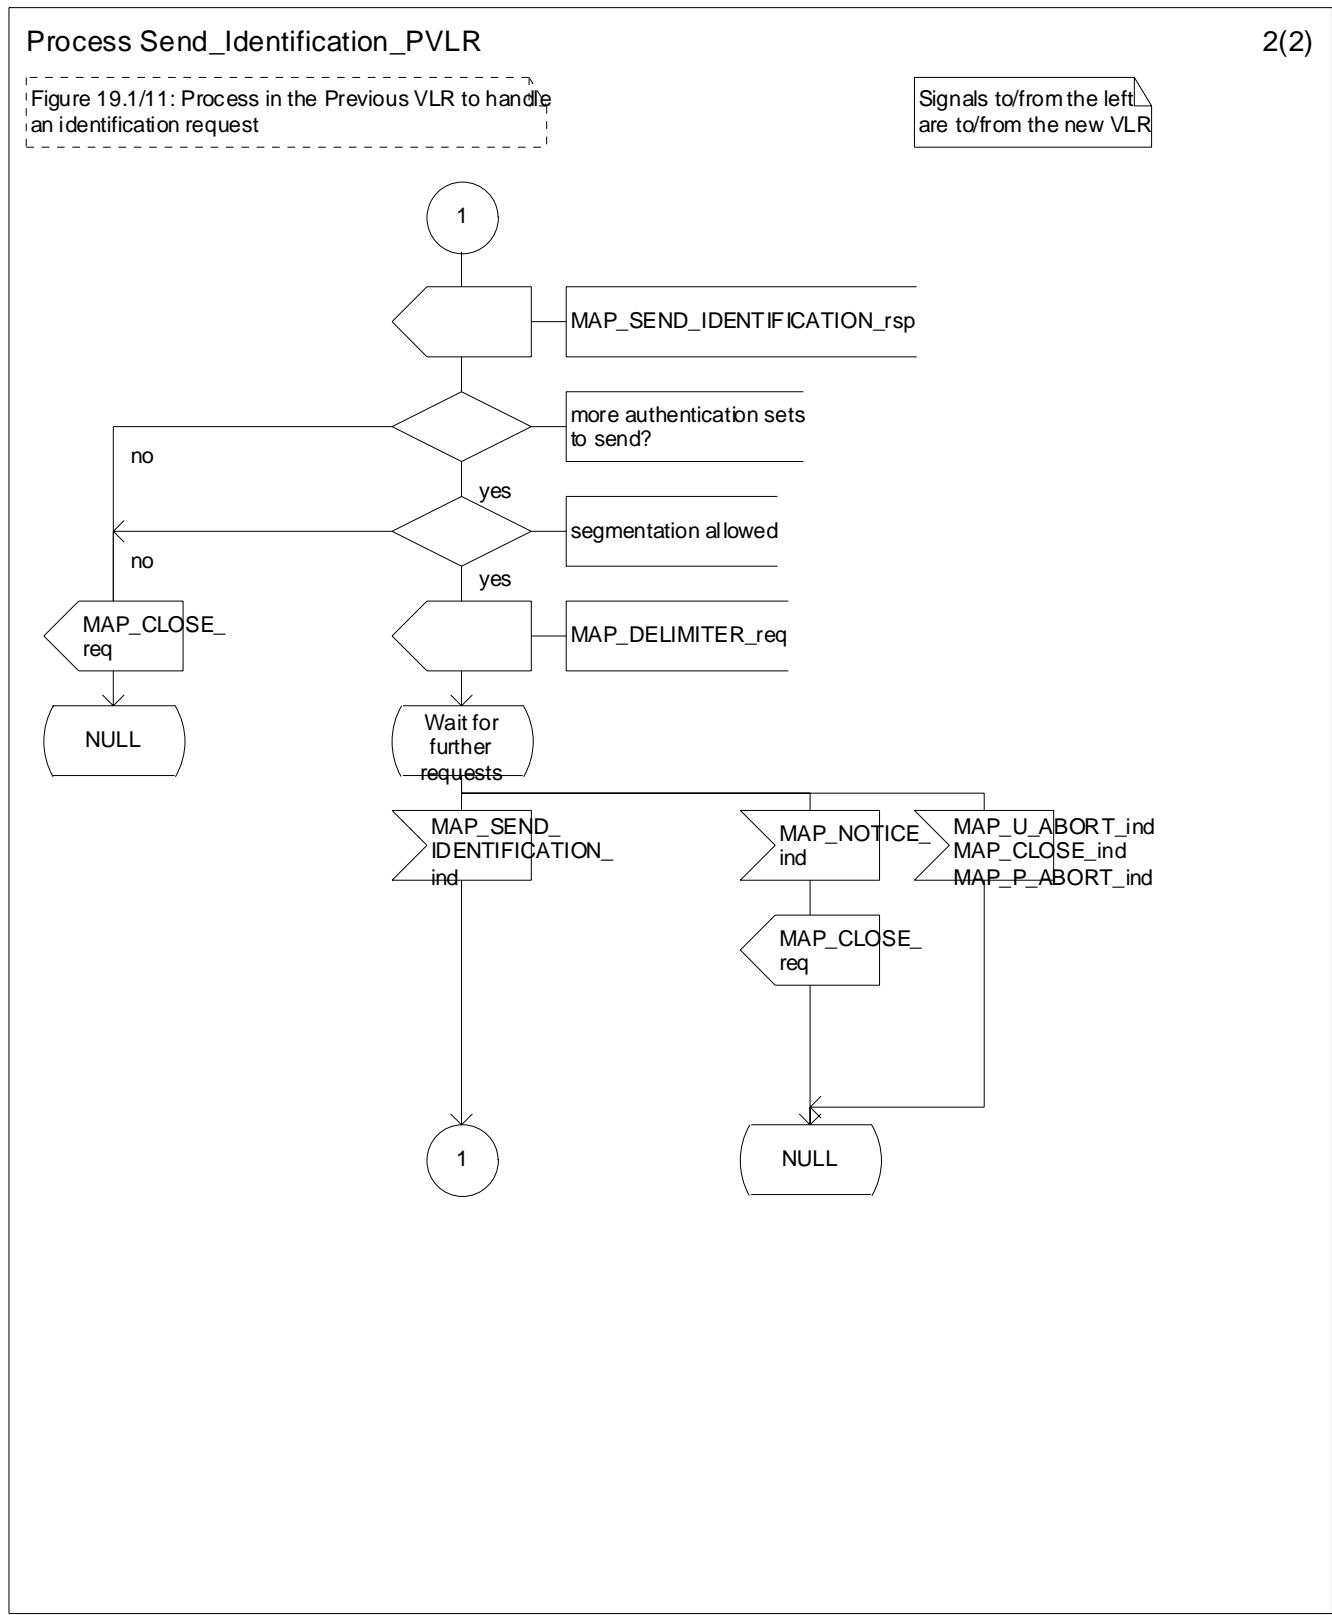


Figure 19.1.1/XX (sheet 2 of 2): Process Send\_Identification\_PVLR

### 19.1.1.6 Process Update Location VLR

This process is started by some other MAP user process in the case the HLR need to be updated due to previous network failure. It is invoked when the subscriber accesses the network, e.g. for mobile originated call set-up, response to paging or supplementary services handling. Here, location updating consists only of invoking the macro VLR\_Update\_HLR described above (see clause 19.1.1.3), which performs HLR updating and downloading of subscriber data.

If updating is successful (OK), the HLR Number is received in the MAP\_UPDATE\_LOCATION confirm primitive; the register will be updated and the SCP will be informed about the Mobility Management event. The process then terminates.

In the above case, the notification sent to the gsmSCF shall be '*Location Update to new VLR Service Area*'.

If one of the errors Roaming not Allowed or Unknown Subscriber is received instead, all subscriber data are deleted from the VLR before the process terminates.

In the case some other error occurs during HLR updating, the process simply terminates. Note, in all error cases the initiating restoration flags in VLR remain false, therefore a new HLR updating attempt will be started later on.

NOTE 1: This process will be performed independent from the calling process, no coordination is required.

NOTE 2: The procedure Notify\_gsmSCF is specified in 3GPP TS 23.078.

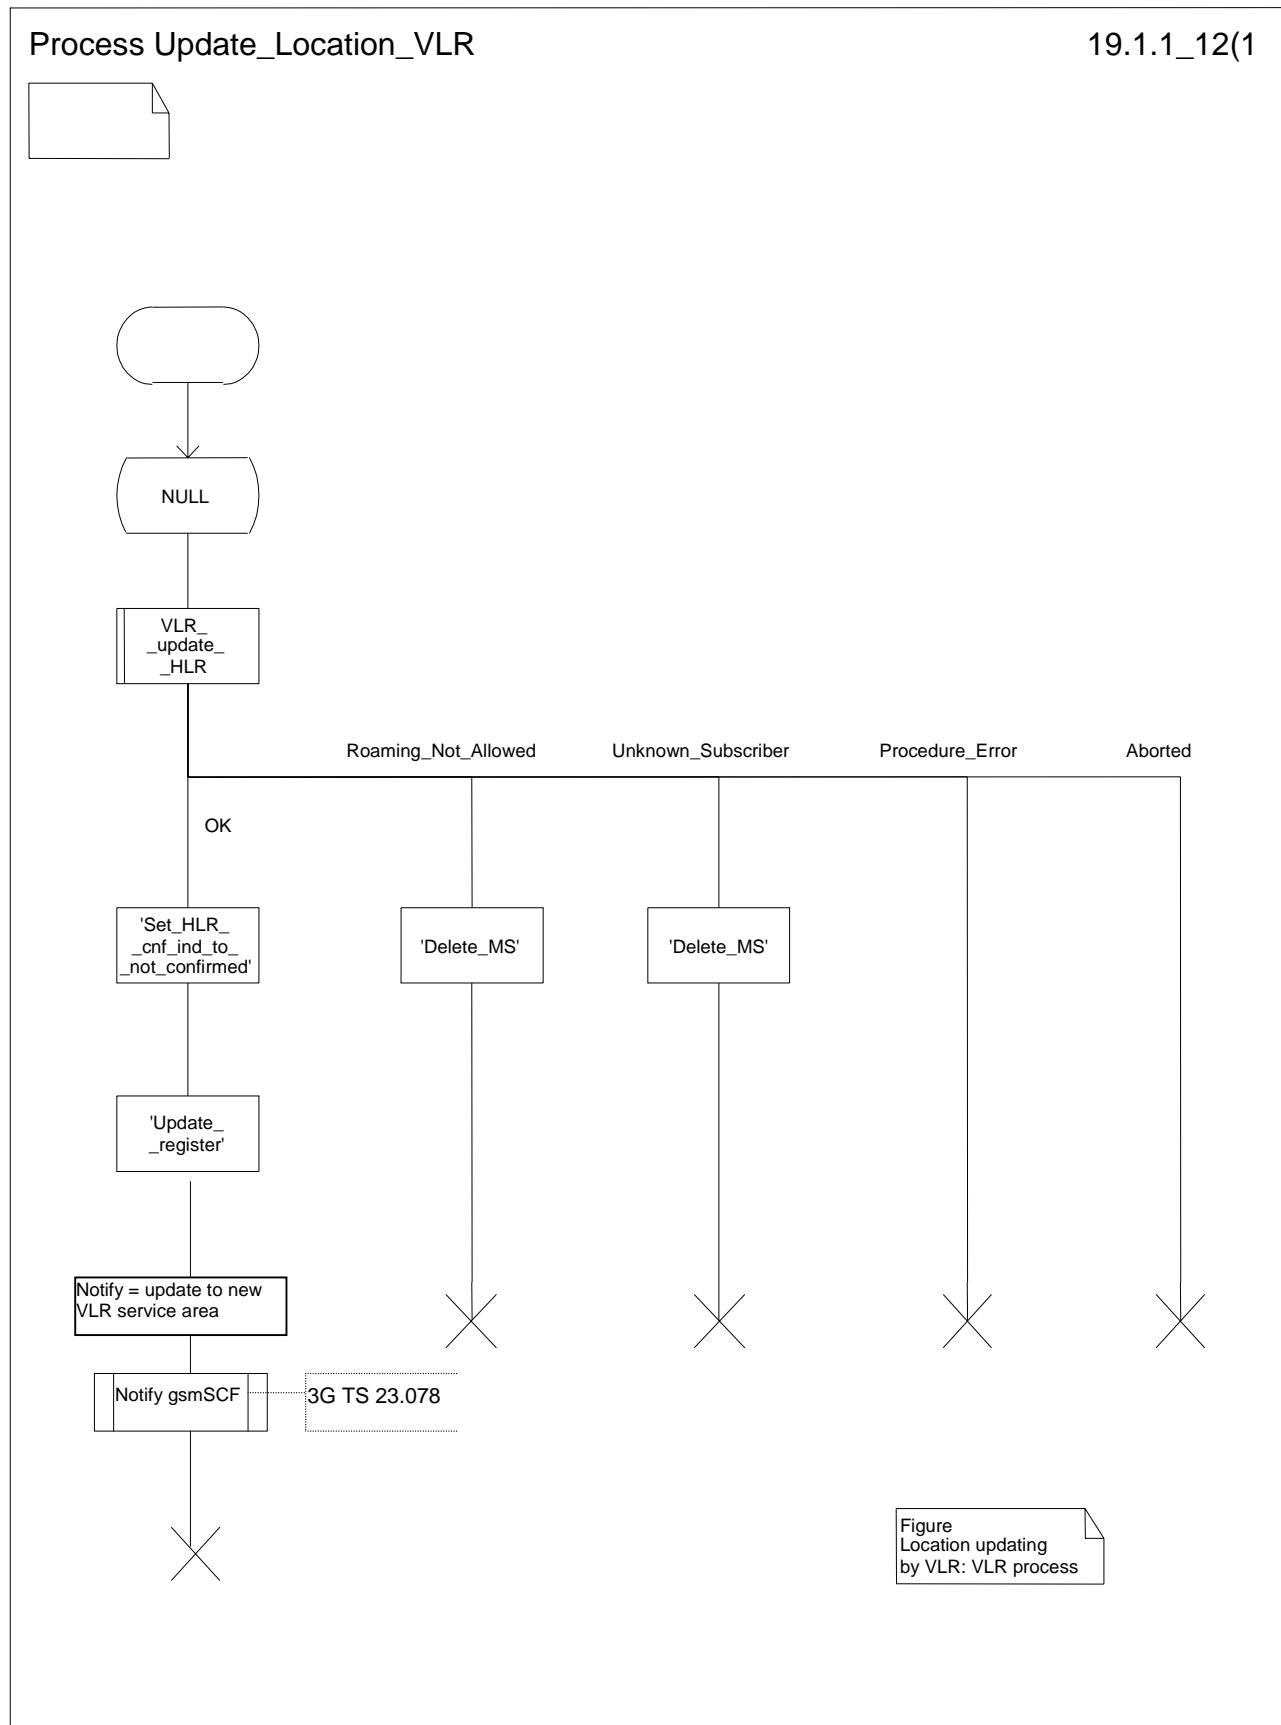


Figure 19.1.1/12: Process UL\_VLR

Figure  
Location updating  
by VLR: VLR process

### 19.1.1.8 Detailed procedure in the SGSN

Figure 19.1.1/20 shows the MAP process for updating of the SGSN. The following general macros are used:

Receive_Open_Cnf	clause 25.1;
Insert_Subscriber_Data_SGSN	clause 25.7;
Activate_Tracing_SGSN	clause 25.9;

Sheet 2: The procedure Check\_User\_Error\_In\_Serving\_Network\_Entity is specific to Super-Charger; it is specified in 3GPP TS 23.116 [110].

#### The location updating process

The MAP process receives an « Update HLR request » from the relevant process in the SGSN (see 3GPP TS 23.060 [104]) to perform HLR updating. If the SGSN does not know the subscribers HLR (e.g. no IMSI translation exists as there are not yet any SS7 links to the subscribers HPLMN), the « Update HLR negative response » with error Unknown HLR is returned to the requesting process.

If the subscribers HLR can be reached, the SGSN opens a dialogue towards the HLR by sending a MAP\_OPEN request without any user specific parameters, together with a MAP\_UPDATE\_GPRS\_LOCATION request containing the parameters

- IMSI, identifying the subscriber;
- SGSN Address and SGSN number.

In case the HLR rejects dialogue opening (see clause 25.1) or indicates version Vr protocol to be used, the SGSN will terminate the process indicating « Update HLR negative response » to the requesting process.

If the HLR accepts the dialogue, the HLR will respond with:

- a MAP\_INSERT\_SUBSCRIBER\_DATA indication, handled by the macro Insert\_Subs\_Data\_SGSN defined in clause 25.7;

NOTE: The HLR may repeat this service several times depending on the amount of data to be transferred to the SGSN and to replace subscription data in case they are not supported by the SGSN.

- a MAP\_ACTIVATE\_TRACE\_MODE indication, handled by the macro Activate\_Tracing\_SGSN defined in clause 25.9;
- the MAP\_UPDATE\_GPRS\_LOCATION confirmation:
  - if this confirmation contains the HLR Number, this indicates that the HLR has passed all information and that updating has been successfully completed. The « Update HLR response » message is returned to the requesting process for completion of the SGSN updating (see 3GPP TS 23.060 [104]).
  - if the confirmation contains an User error cause (Unknown Subscriber, Roaming Not Allowed or some other), the corresponding error is returned to the requesting process in the « Update HLR negative response ».
- a MAP\_P\_ABORT, MAP\_U\_ABORT, or MAP\_CLOSE indication. In these cases, the corresponding error is returned to the requesting process in the « Update HLR negative response ».
- a MAP\_NOTICE indication. Then, the dialogue towards the HLR is terminated, and the « HLR Update negative response » with the appropriate error is returned to the requesting process.

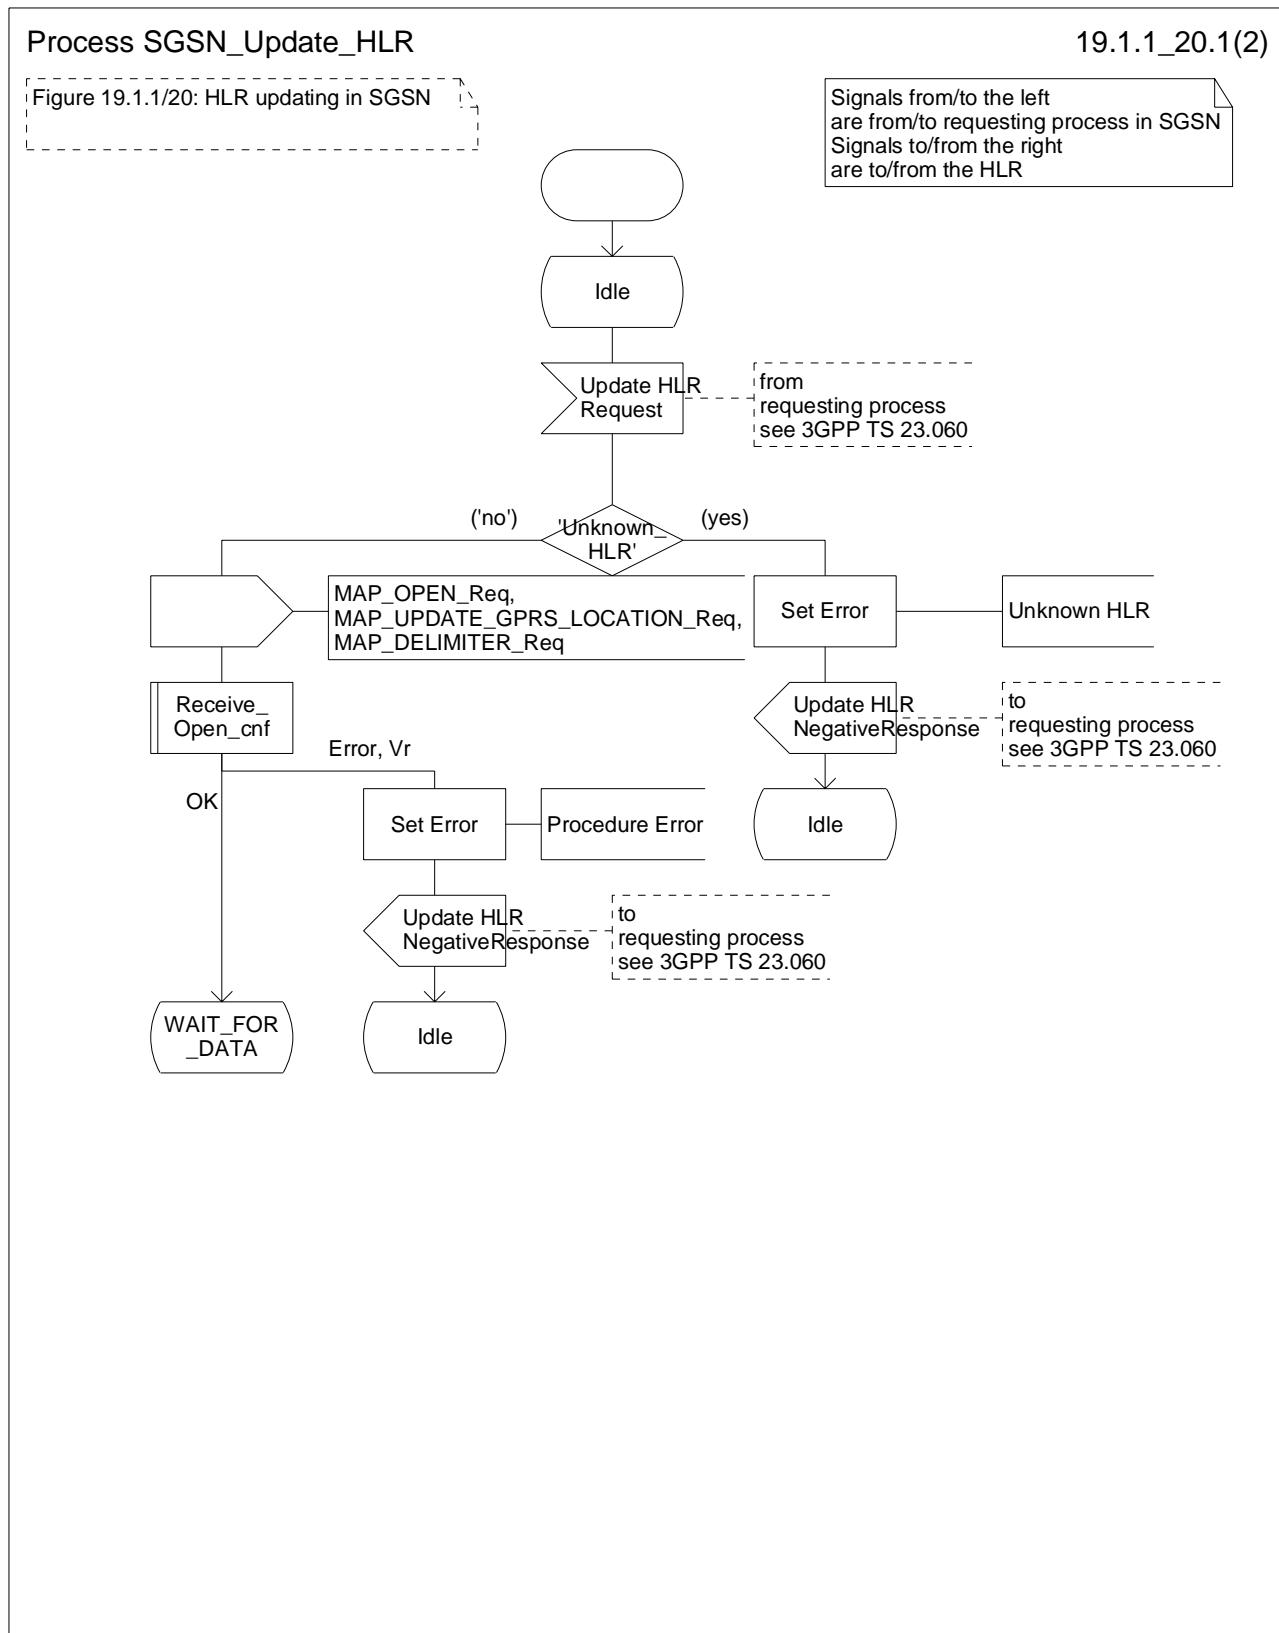


Figure 19.1.1/20 (sheet 1 of 2): Process SGSN\_Update\_HLR

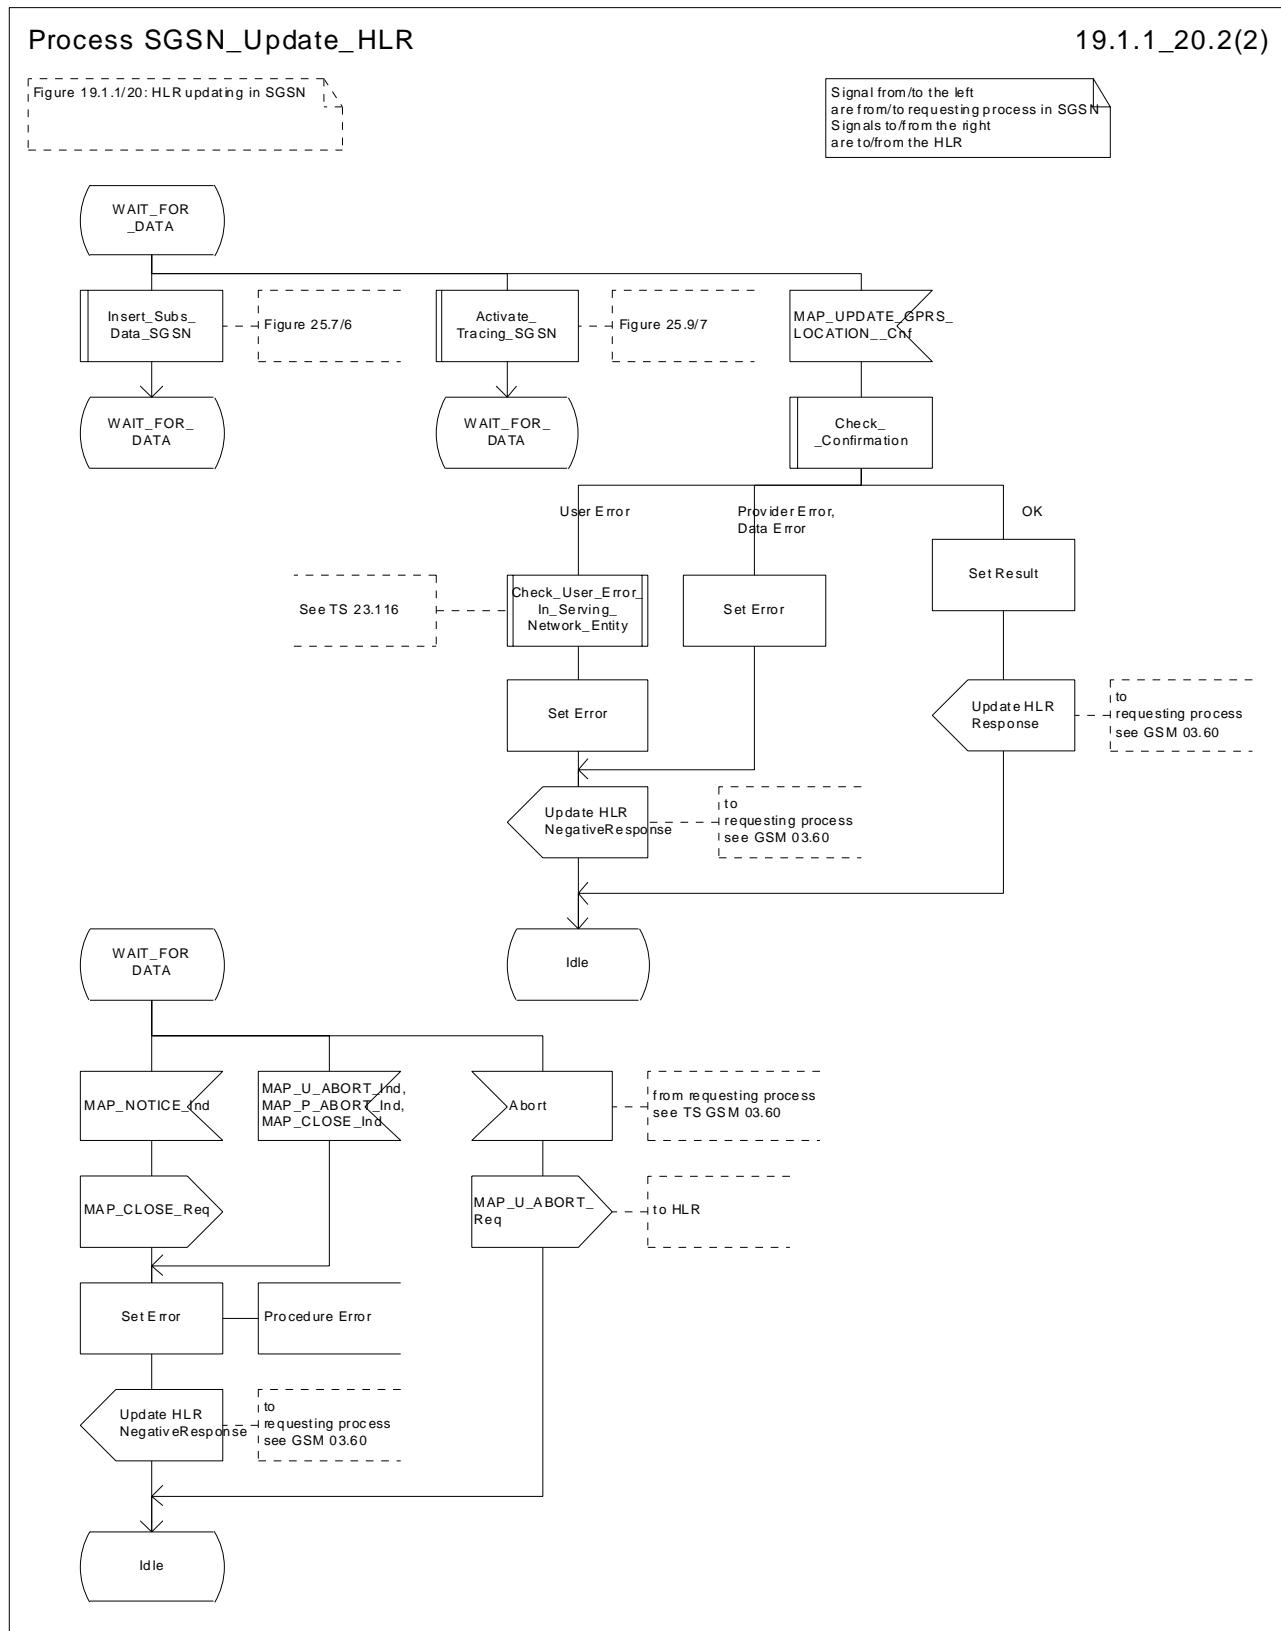


Figure 19.1.1/20 (sheet 2 of 2): Process SGSN\_Update\_HLR


## 19.1.2 Location Cancellation

### 19.1.2.1 General

The purpose of this process is to delete a subscriber's record from a previous visitor location register after she has registered with a new visitor location register. Also this process is used to delete a subscriber's record from a old SGSN after she has registered with a SGSN. The procedure may also be used if the subscriber's record is to be deleted for other operator determined purposes, e.g. withdrawal of subscription, imposition of roaming restrictions or modifications to the subscription which result in roaming restrictions. Location cancellation can be used to enforce location updating including updating of subscriber data in the VLR or in the SGSN at the next subscriber access.

In all cases, the process is performed independently of the invoking process (e.g. Location Updating).

The service as described in clause 8.1.3 is invoked when an HLR receives a MAP\_UPDATE\_LOCATION indication from a VLR other than that stored in its table for this subscriber. Also the MAP\_CANCEL\_LOCATION service is invoked when the HLR receives a MAP\_UPDATE\_GPRS\_LOCATION indication from a SGSN other than stored in its table for this subscriber. Additionally the service may be invoked by operator intervention. The MAP\_CANCEL\_LOCATION service is in any case invoked towards the VLR or the SGSN whose identity is contained in the HLR table.

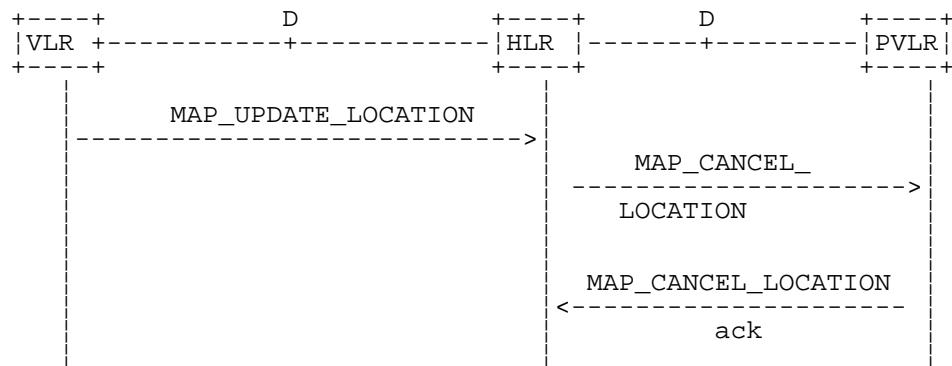

NOTE: The service shown in dotted lines indicates the trigger provided by other MAP signalling.

**Figure 19.1.2/1: Interface and services for Location Cancellation**

### 19.1.2.2 Detailed procedure in the HLR

The location cancellation process is started by an external process as stated above. The HLR opens a dialogue with the VLR or with the SGSN whose identity is contained in the HLR table (MAP\_OPEN request without any user specific parameters), sending the MAP\_CANCEL\_LOCATION request primitive (see figures 19.1.2/2 and 19.1.2/4), containing the parameters:

- IMSI, to identify the subscriber to be deleted from that VLR or SGSN;
- LMSI, which is included if available in the HLR. LMSI is not applicable between HLR and SGSN;
- Cancellation Type if the Cancel Location is sent to SGSN. Cancellation Type is not applicable between HLR and VLR. If the VLR receives this parameter and does not understand it, this parameter shall be ignored.

### 19.1.2.3 Detailed procedure in the VLR

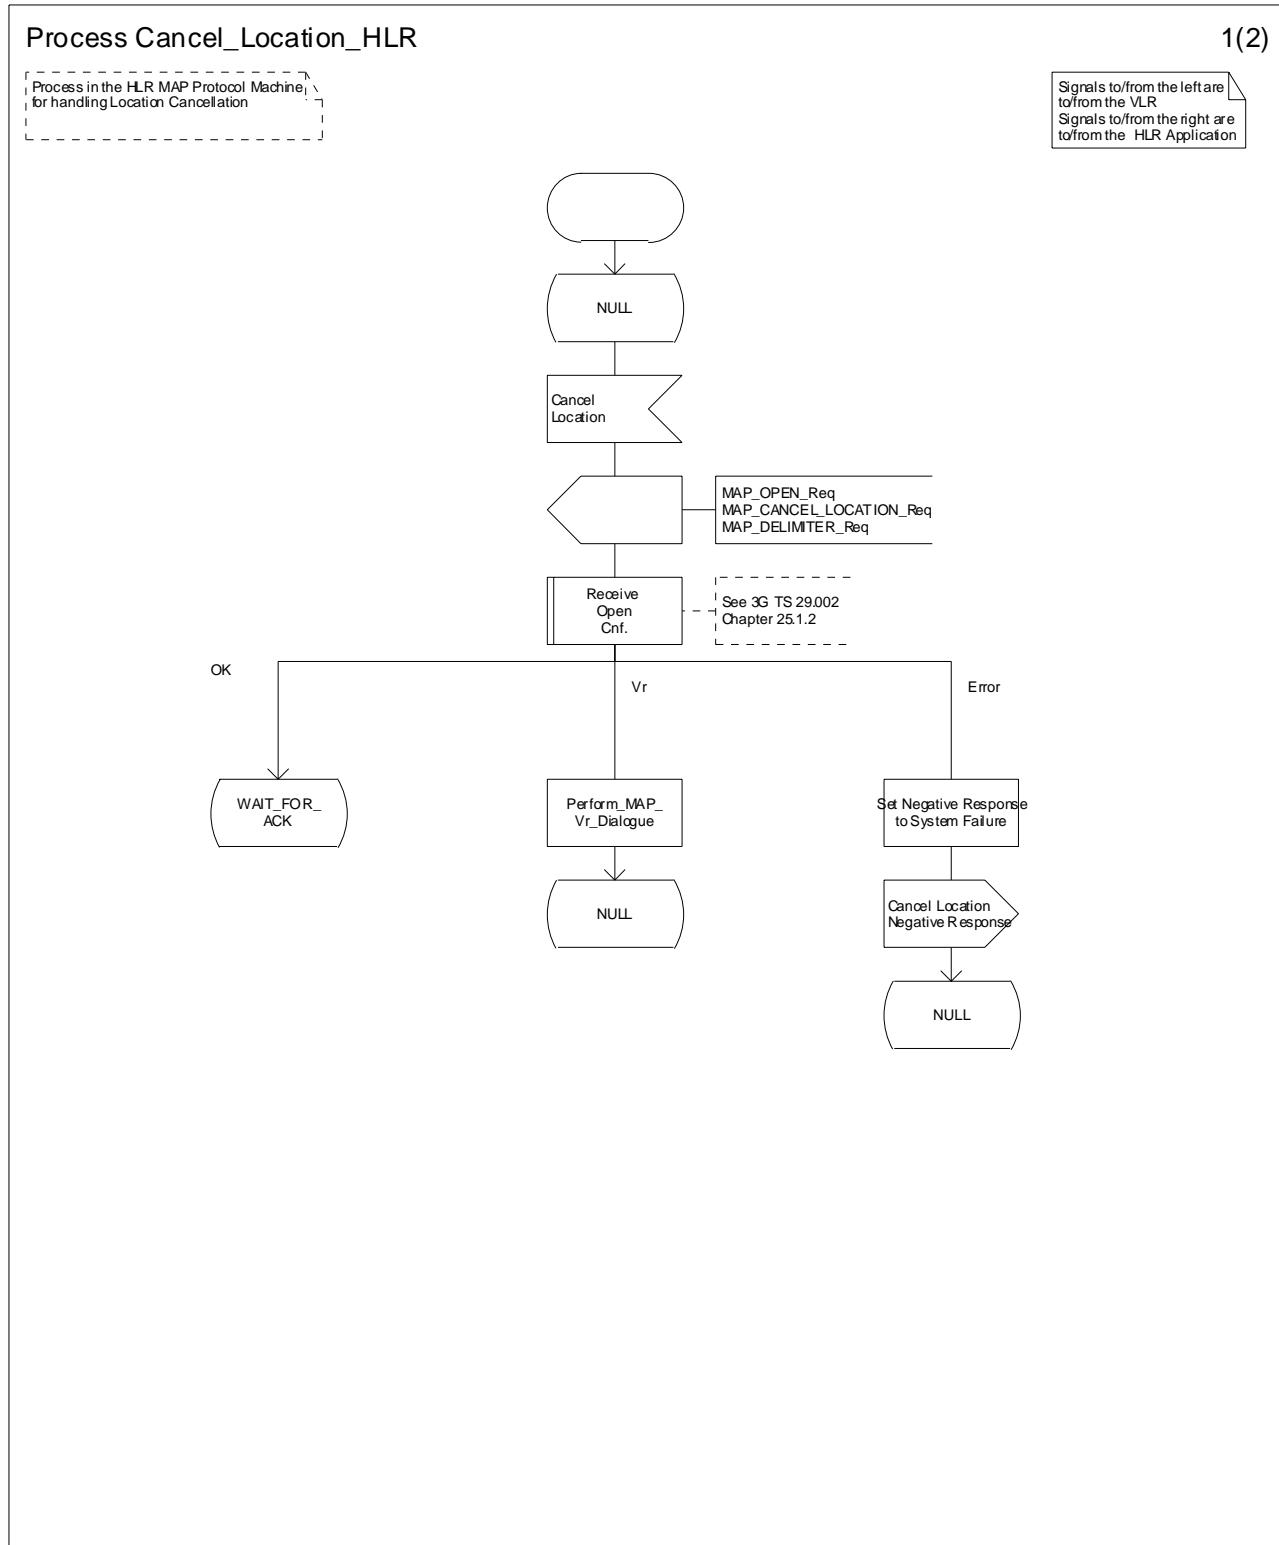


Figure 19.1.2/2 (Sheet 1 of 2): Process Cancel\_Location\_HLR

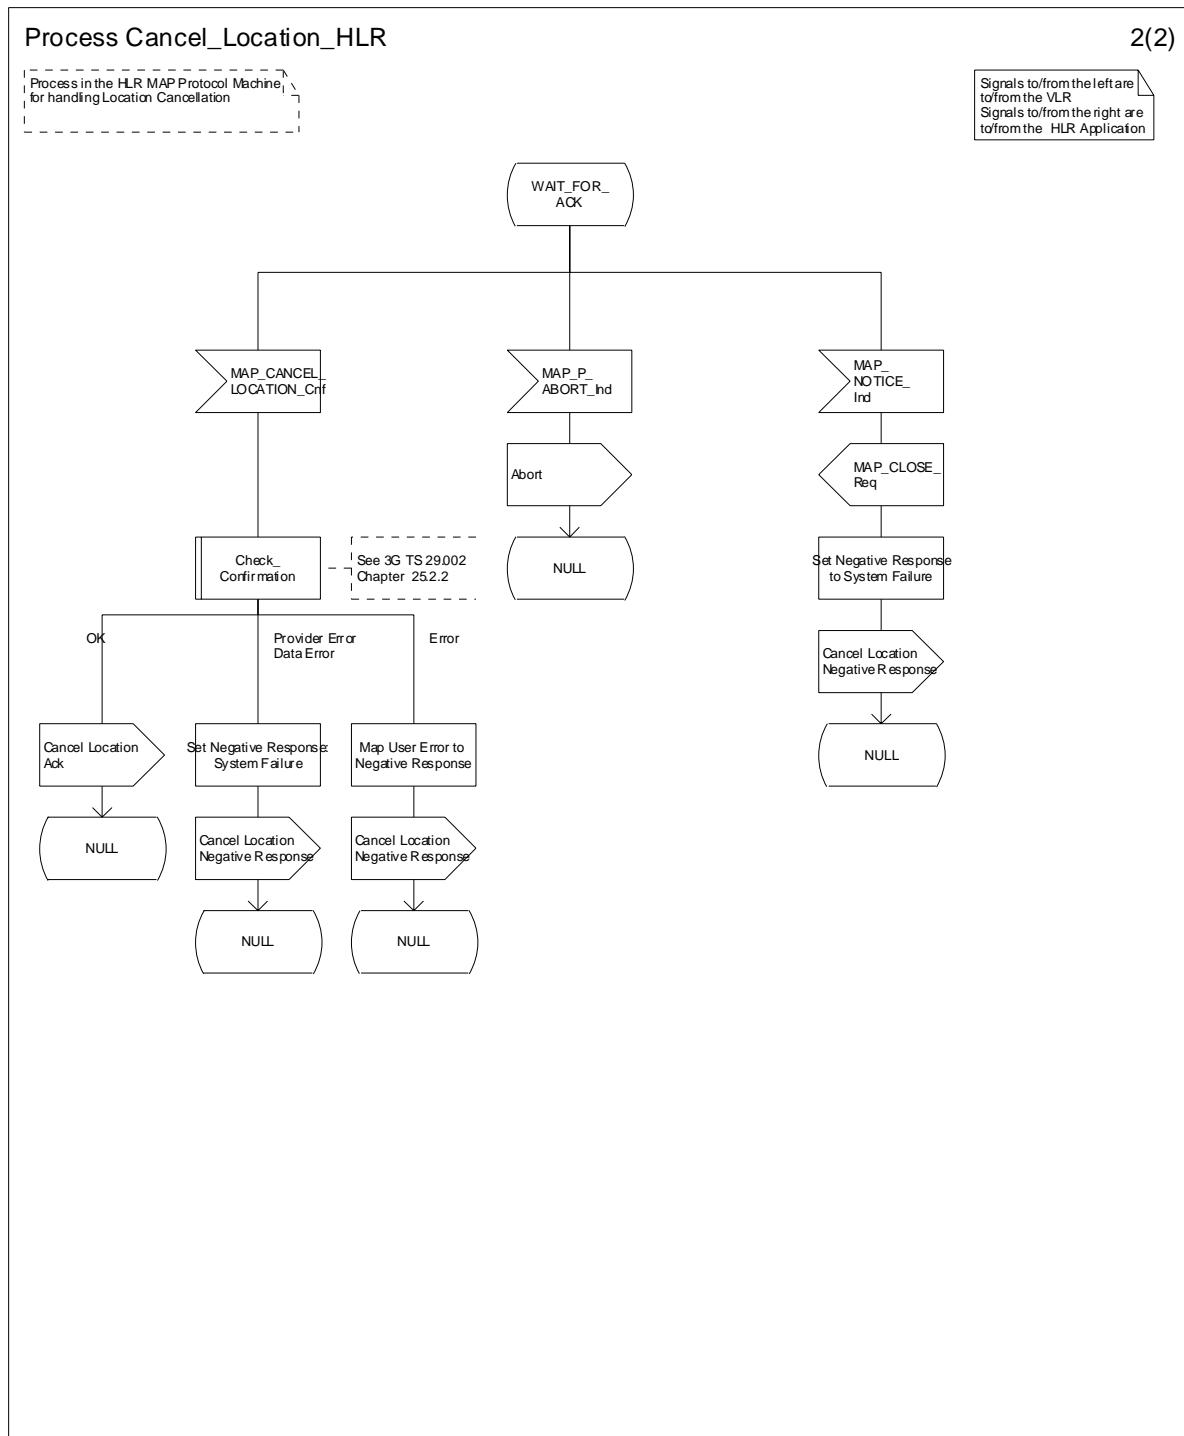
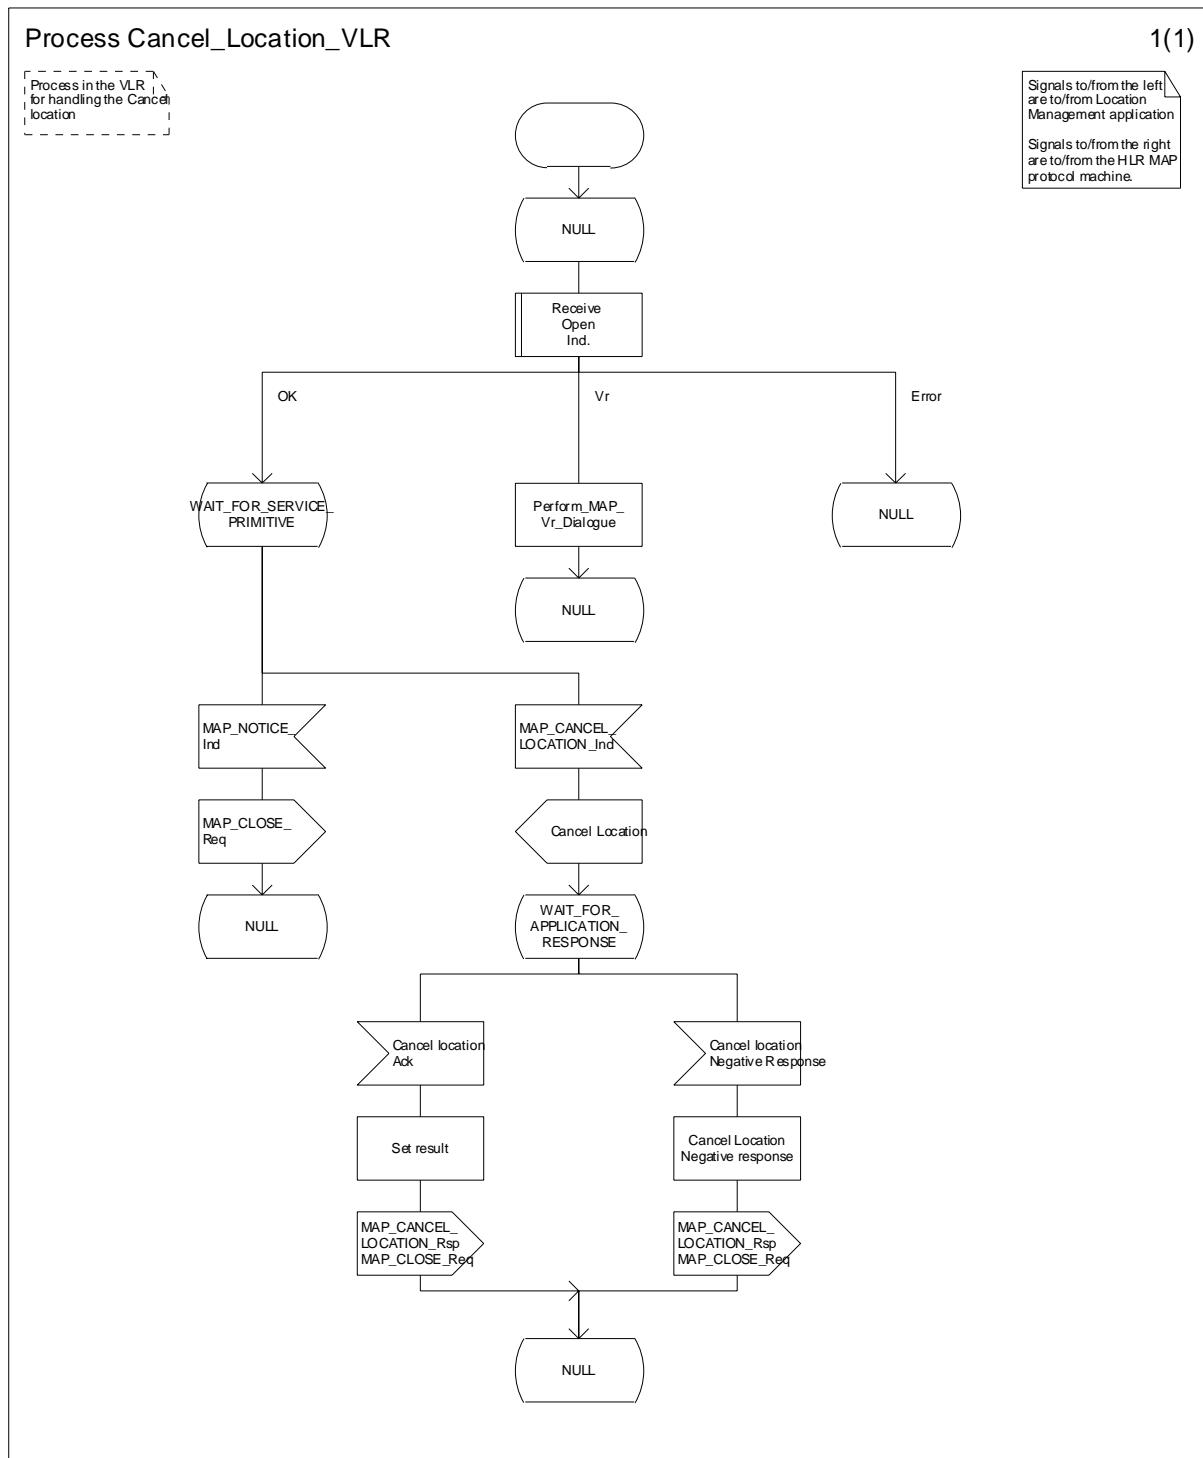


Figure 19.1.2/2 (Sheet 2 of 2): Process Cancel\_Location\_HLR

**Figure 19.1.2/3: Process Cancel\_Location\_VLR**

#### 19.1.2.4 Detailed procedure in the SGSN

Opening of the dialogue is described in the macro Receive\_Open\_Ind in clause 25.1, with outcomes:

- procedure termination; or
- dialogue acceptance, with processing as below.

If the SGSN process receives a MAP\_NOTICE indication, it terminates the dialogue by sending a MAP\_CLOSE request.

If the SGSN process receives a MAP\_CANCEL\_LOCATION indication from the HLR (see figure 19.1.2/4), the parameters are checked first (macro Check\_Indication, see clause 25.2). In case of parameter problems the appropriate error is sent in the MAP\_CANCEL\_LOCATION response.

Thereafter the SGSN checks whether the subscriber identity provided is known in the SGSN:

- if so, the data of the subscriber are deleted from SGSN table and a MAP\_CANCEL\_LOCATION response is returned without any parameters;
- if not, location cancellation is regarded as being successful, too, and the MAP\_CANCEL\_LOCATION response is returned without any parameters.

In either case, after sending the MAP\_CANCEL\_LOCATION response the SGSN process releases any P-TMSI which may be associated with the IMSI of the subscriber, terminates the dialogue (MAP\_CLOSE with Release Method Normal Release) and returns to the idle state.

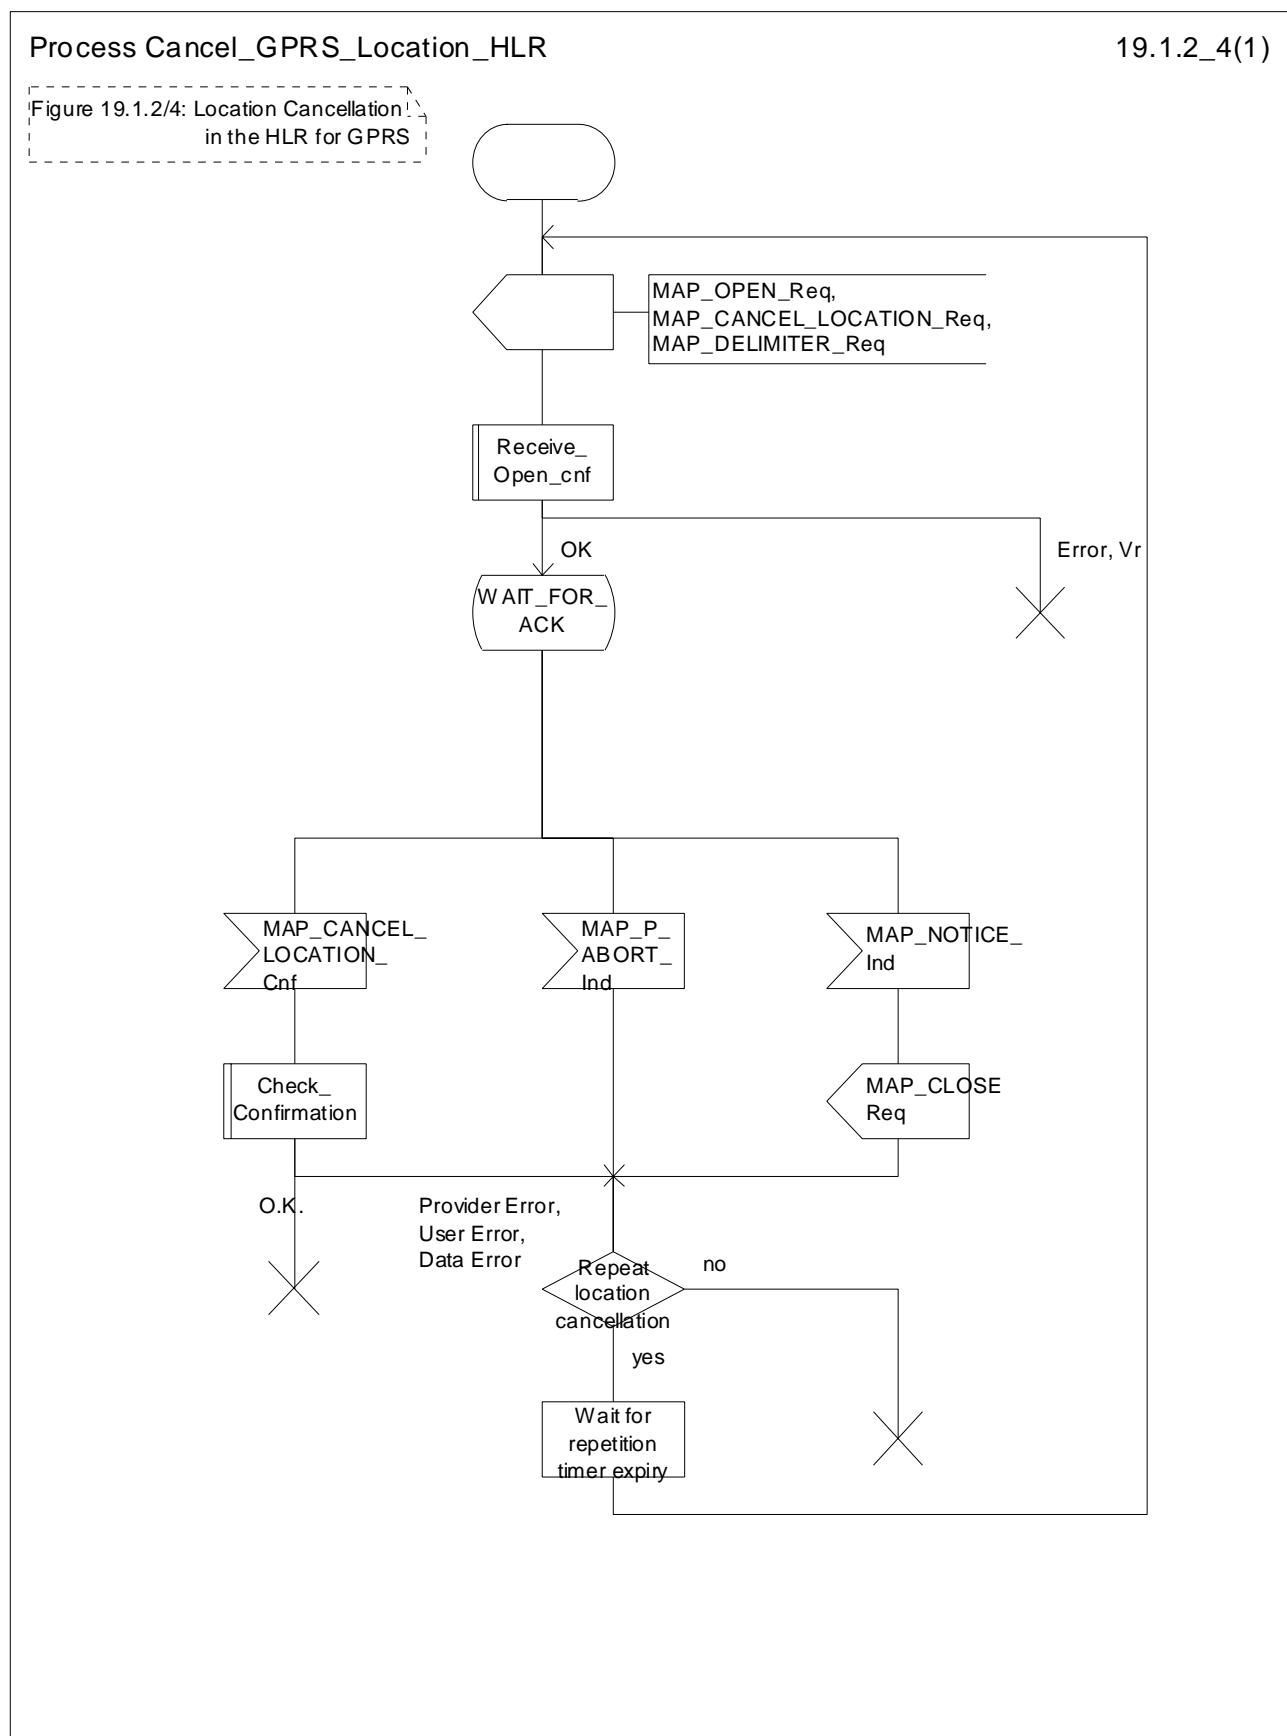


Figure 19.1.2/4: Process Cancel\_GPRS\_Location\_HLR

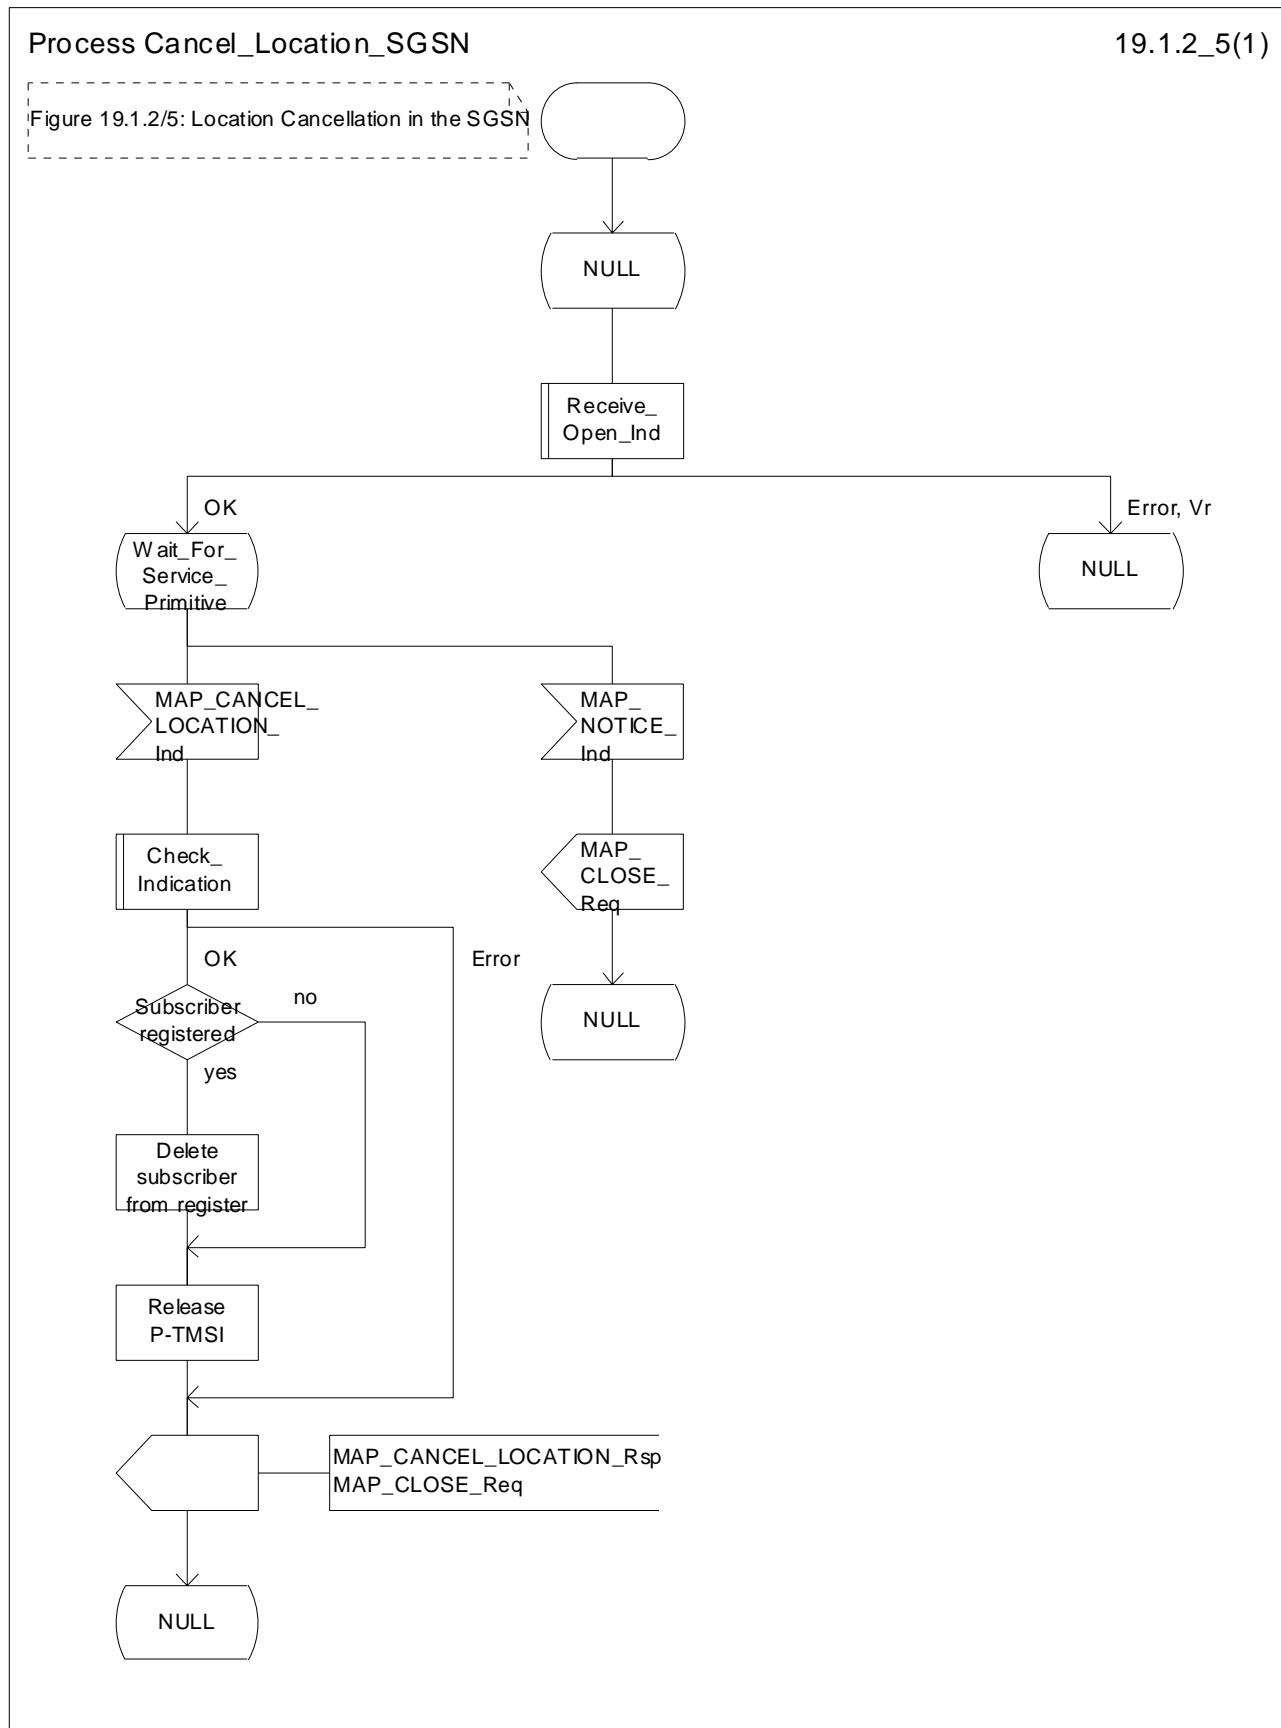


Figure 19.1.2/5: Process Cancel\_Location\_SGSN

### 19.1.3 Void

### 19.1.3.1 Void

### 19.1.3.2 Void

### 19.1.3.3 Void


## 19.1.4 Purge MS

#### 19.1.4.1 General


When the VLR or the SGSN receives an indication on the O&M interface that the MS record is to be purged (either because of administrative action or because the MS has been inactive for an extended period), this procedure invokes the MAP\_PURGE\_MS service described in clause 8.1.6 to request the HLR to set the "MS purged for non-GPRS" or the "MS purged for GPRS" flag for the MS so that any request for routing information for a mobile terminated call or a mobile terminated short message will be treated as if the MS is not reachable. The message flows are shown in figures 19.1.4/1and 19.1.4/5.

It is optional for the network operator to delete MS records from the VLR or from the SGSN, but if the option is used the VLR or the SGSN shall notify the HLR when a record has been deleted.

The O&M process in the VLR or in the SGSN must ensure that during the MS purging procedure any other attempt to access the MS record is blocked, to maintain consistency of data.

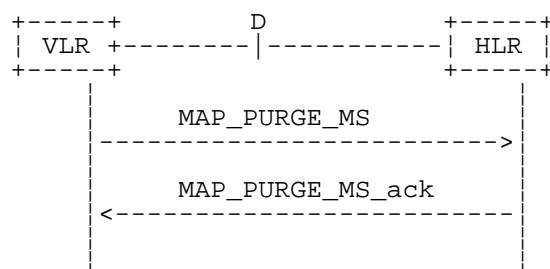

**Figure 19.1.4/1: MAP-D Interface and services for MAP PURGE MS**

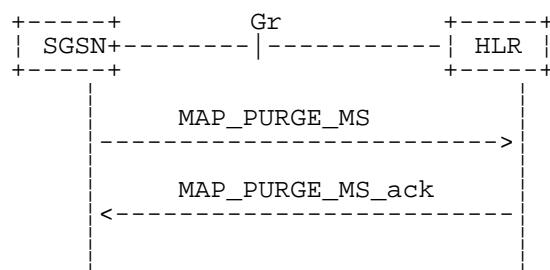

**Figure 19.1.4/5: Gr Interface and services for MAP\_PURGE\_MS**

## 19.1.4.2 Void

#### 19.1.4.3 Void

#### 19.1.4.4 Detailed procedure in the SGSN

Figure 19.1.4/4 shows the MAP process in the SGSN to notify the HLR that an MS record has been purged. The following general macro is used:

Receive\_Open\_Cnf clause 25.1;

Sheet 1: The procedure Purge\_MS\_In\_Serving\_Network\_Entity is specific to Super-Charger; it is specified in 3GPP TS 23.116 [110]. If the SGSN and the originating HLR support the Super-Charger functionality, processing continues from the "Yes" exit of the test "Result=Pass?".

When the SGSN receives an indication from O&M that an MS record is to be purged, it invokes the MAP\_PURGE\_MS service.


The SGSN opens the dialogue to the HLR with a MAP\_OPEN request containing no user specific parameters. The MAP\_PURGE\_MS request contains the IMSI of the MS which is to be purged and the SGSN number.

The SGSN then waits for the MAP\_OPEN confirmation indicating one of:

- rejection of the dialogue (process terminates);
- reversion to Vr (process terminates);
- dialogue acceptance.

If the HLR accepts the dialogue it returns a MAP\_PURGE\_MS confirmation, containing no parameter, indicating successful outcome of the procedure.

If a MAP\_PURGE\_MS confirmation containing a provider error, data error or user error, or a MAP\_P\_ABORT, MAP\_NOTICE or premature MAP\_CLOSE indication, has been received, the failure is reported to the O&M interface. Successful outcome of the procedure leads to deletion of the subscriber data and freezing of the P-TMSI if so requested by the HLR, and is reported to the O&M interface.

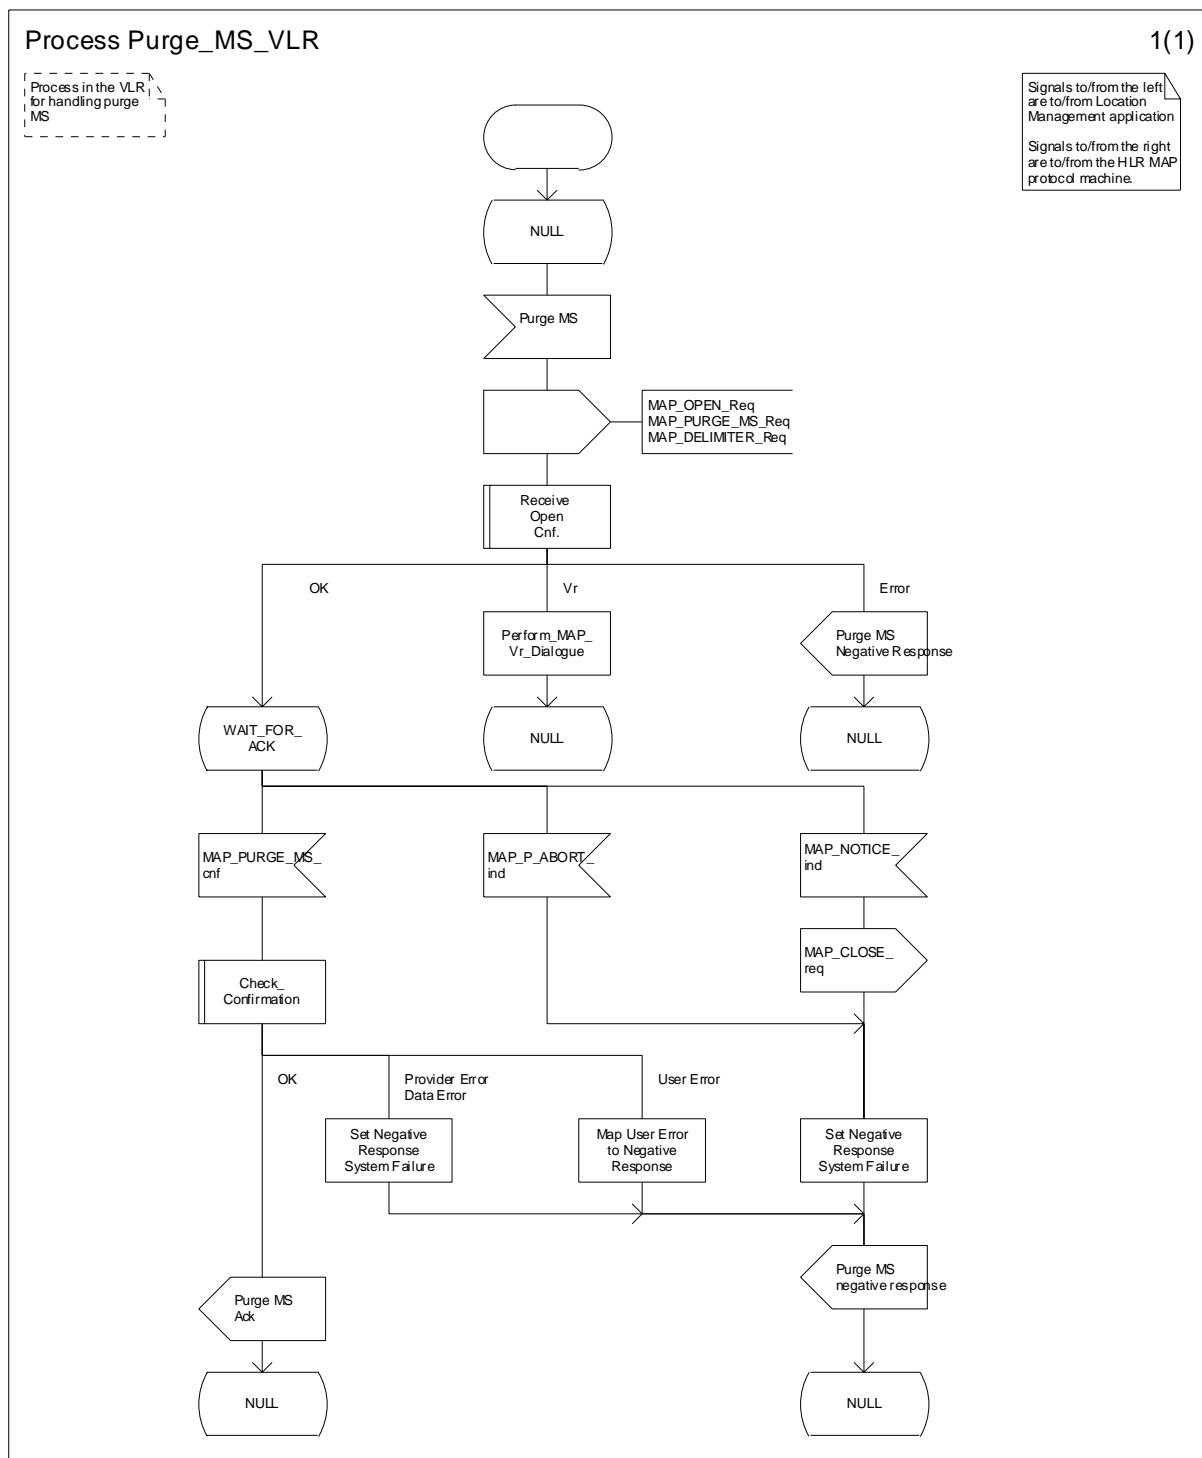

**Figure 19.1.4/2: Process Purge\_MS\_VLR**


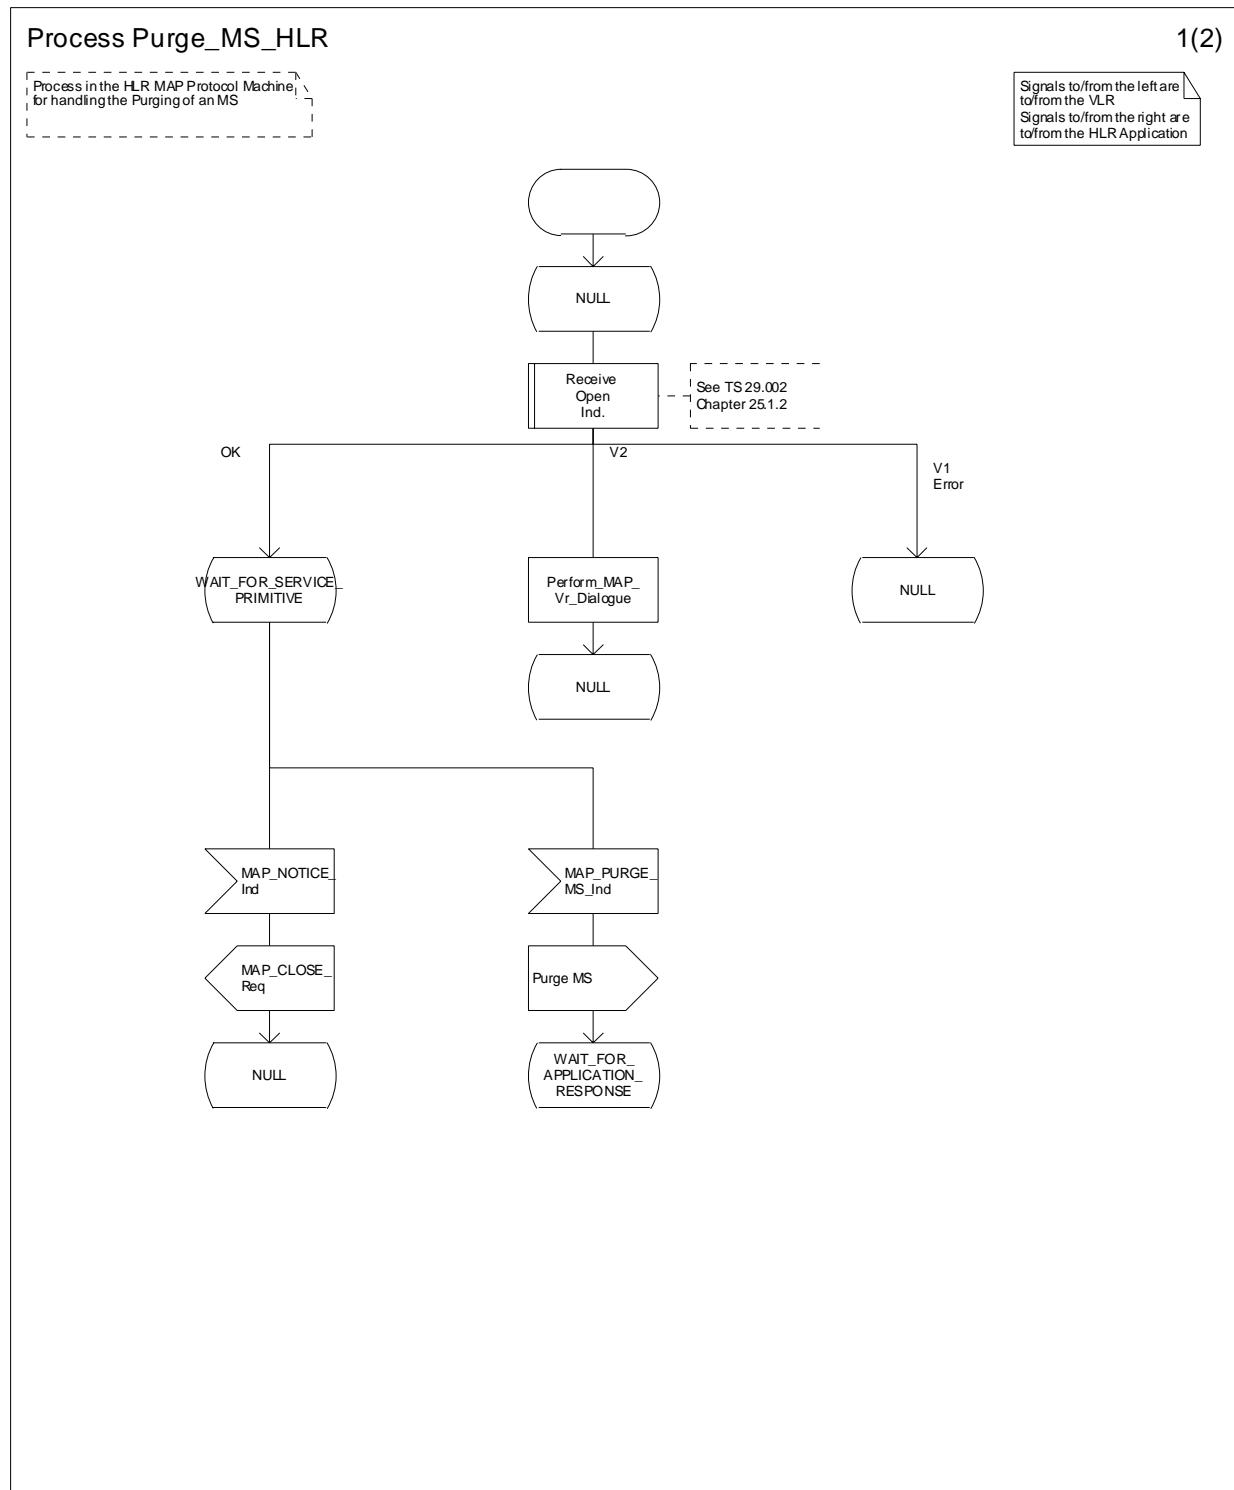


Figure 19.1.4/3 (Sheet 1 of 2): Process Purge\_MS\_HLR

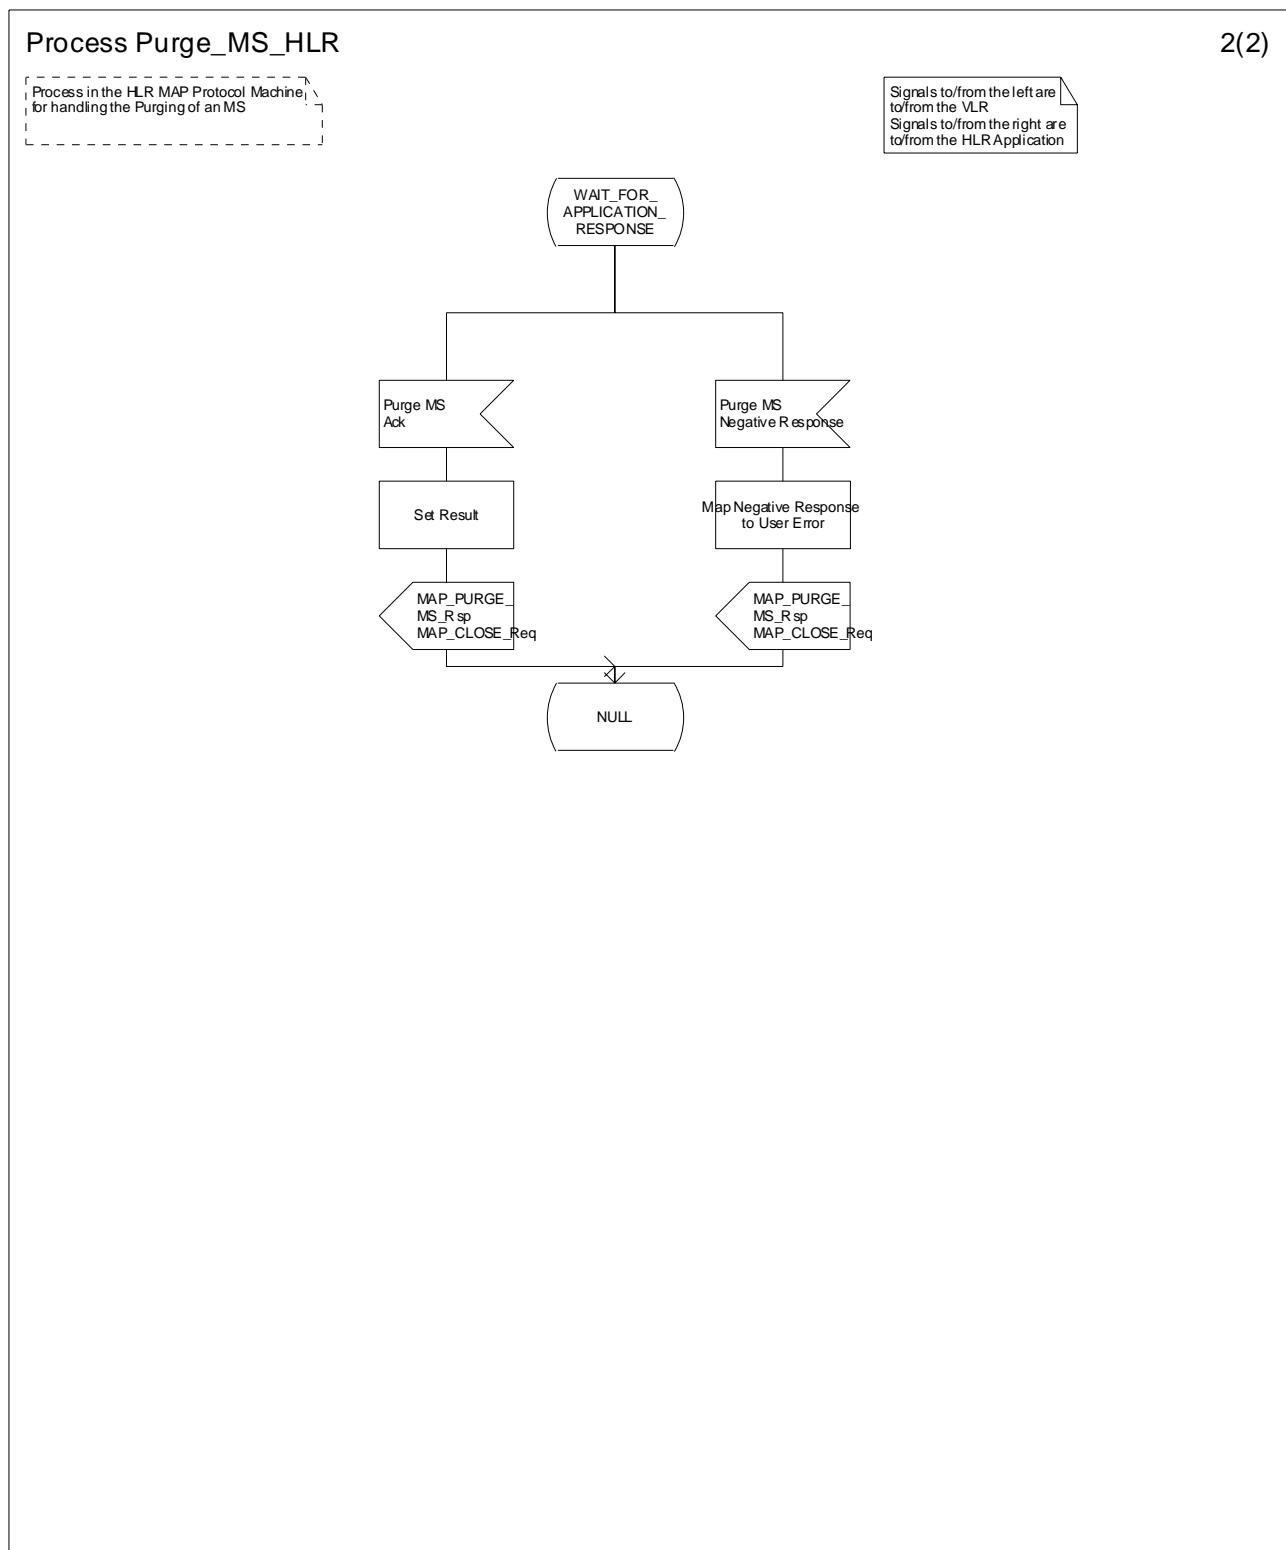

**Figure 19.1.4/3 (Sheet 2 of 2): Process Purge\_MS\_HLR**

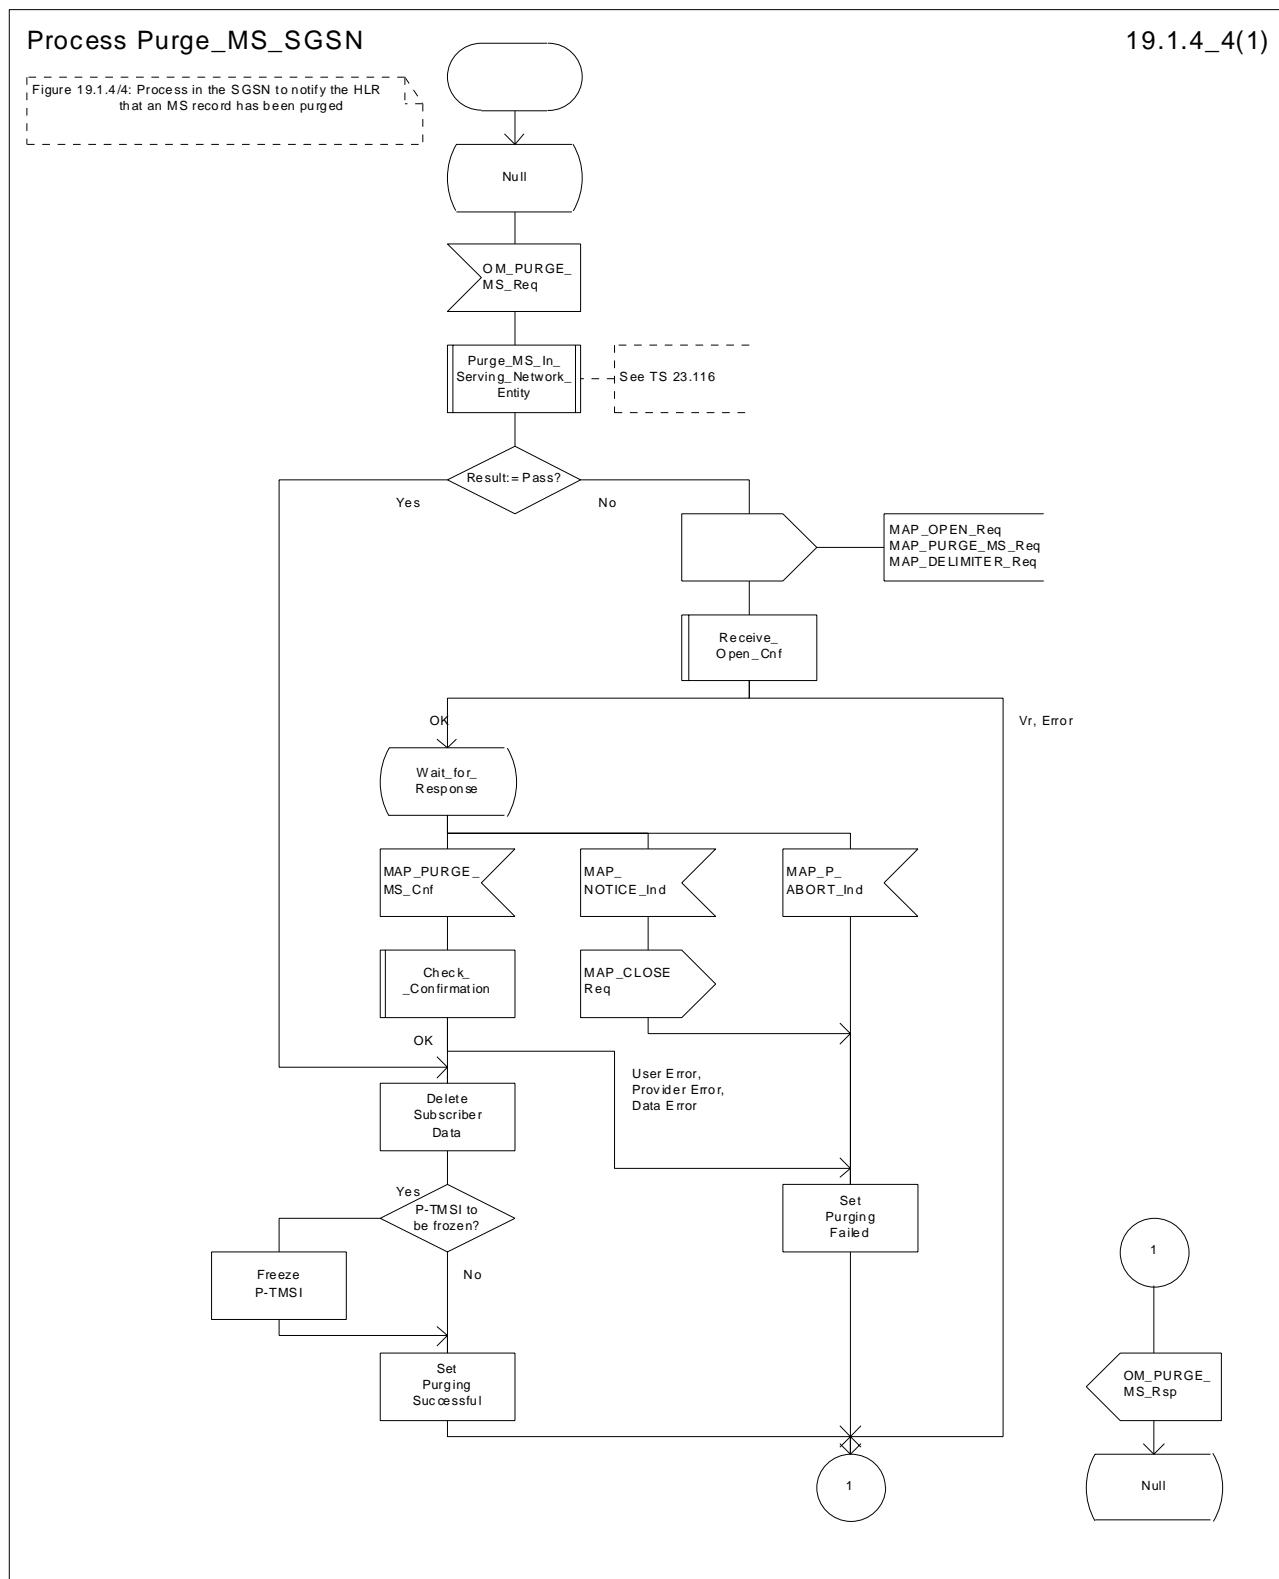


Figure 19.1.4/4: Process Purge\_MS\_SGSN

## 19.2 Handover procedure

It should be noted that procedures related to the B-interface have not been updated for Release 99. The B-interface is not fully operational specified. It is strongly recommended not to implement the B-interface as an external interface.

## 19.2.1 General

The handover or relocation between different MSCs is called Inter-MSC handover. The interfaces involved for Inter-MSC handover are shown in figure 19.2/1. Following two Inter-MSC handover procedures apply:

1) Basic Inter-MSC handover:

The call is handed over from the controlling MSC, called MSC-A to another MSC, called MSC-B (figure 19.2/1a).

Figure 19.2/2 shows a successful handover between MSC-A and MSC-B including a request for handover number allocation by MSC-B to VLR-B.


2) Subsequent Inter-MSC handover:

After the call has been handed over from MSC-A to MSC-B, a handover to either MSC-A (figure 19.2/1a) or to a third MSC (MSC-B') (figure 19.2/1b) is necessary in order to continue the connection.

Figure 19.2/3 shows a successful subsequent handover.



a) Basic handover procedure MSC-A to MSC-B and subsequent handover procedure MSC-B to MSC-A.

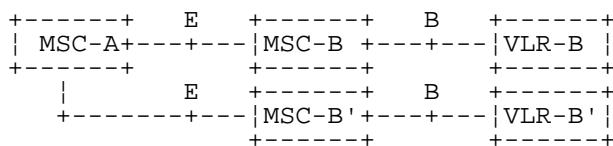

b) Subsequent handover procedure MSC-B to MSC-B'.

**Figure 19.2/1: Interface structure for handover**

The MAP handover procedures achieve the functionality required to set up an MSC-MSC dialogue, to optionally allocate a handover number or one or several relocation numbers and to transport BSSAP or RANAP messages.

Minimum applicable MAP AC for intersystem inter-MSC GSM BSS to UTRAN handover shall be MAP handover AC version 3.

Minimum applicable MAP AC for intersystem inter-MSC UTRAN to GSM BSS handover shall be MAP handover AC version 2.


Note: If MAP AC version 2 is used, subsequent handover to UTRAN is not possible.

Minimum applicable MAP AC for inter-MSC GSM BSS to GSM BSS handover should be MAP handover AC version 2.

NOTE: If MAP AC version 2 or lower is used, subsequent handover to UTRAN is not possible.


The transported BSSAP or RANAP messages are controlled and handled by the Handover Control Application in the MSCs. This information will be transparent to the MAP protocol. If the MSC receives via the MAP protocol BSSAP or RANAP messages, this information will be forwarded to the Handover Control Application (shown in the handover SDL diagrams with the internal HO\_CA signalling, it is an internal process in the MSC) and vice versa if the Handover Control Application requires the sending of BSSAP or RANAP messages via the MAP protocol.

For detailed interworking between the A-interface and MAP procedures or the Iu-interface and MAP procedures, see 3GPP TS 23.009 and 3GPP TS 29.010.

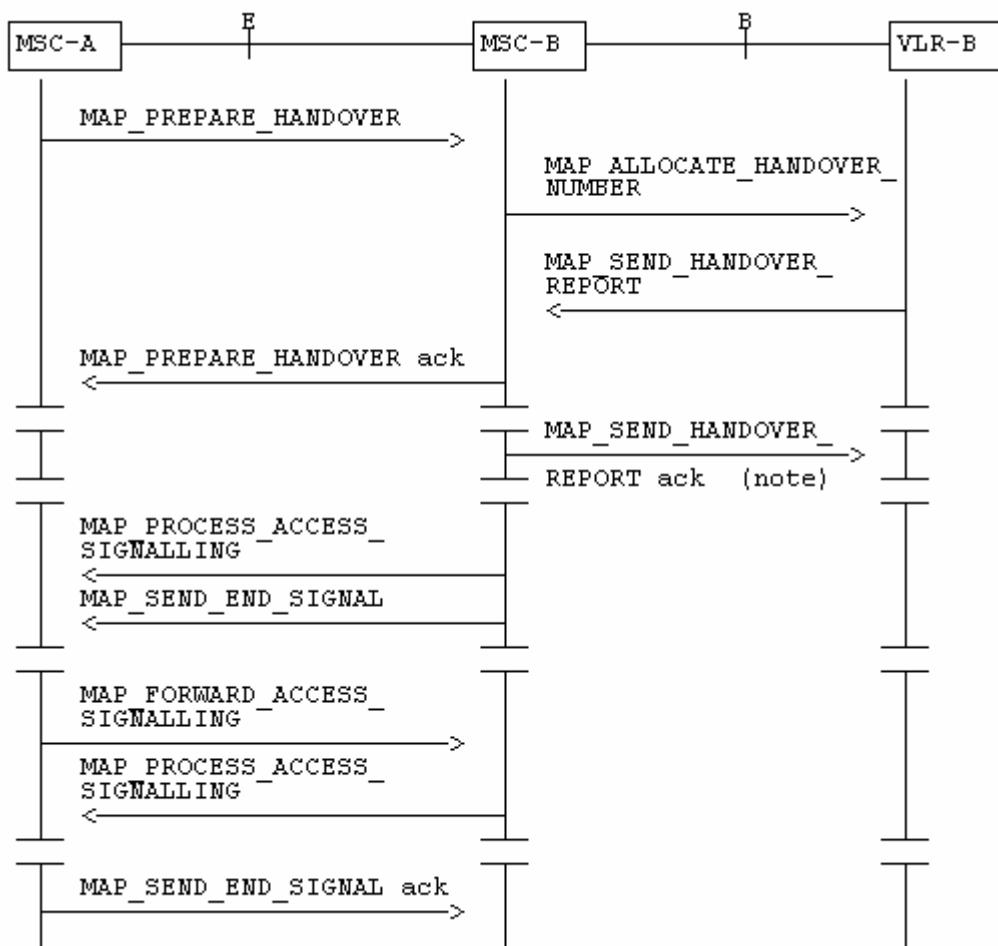

**NOTE:** This can be sent at any time after the connection between MSC-A and MSC-B is established.

**Figure 19.2/2: Example of a successful basic handover procedure to MSC-B**

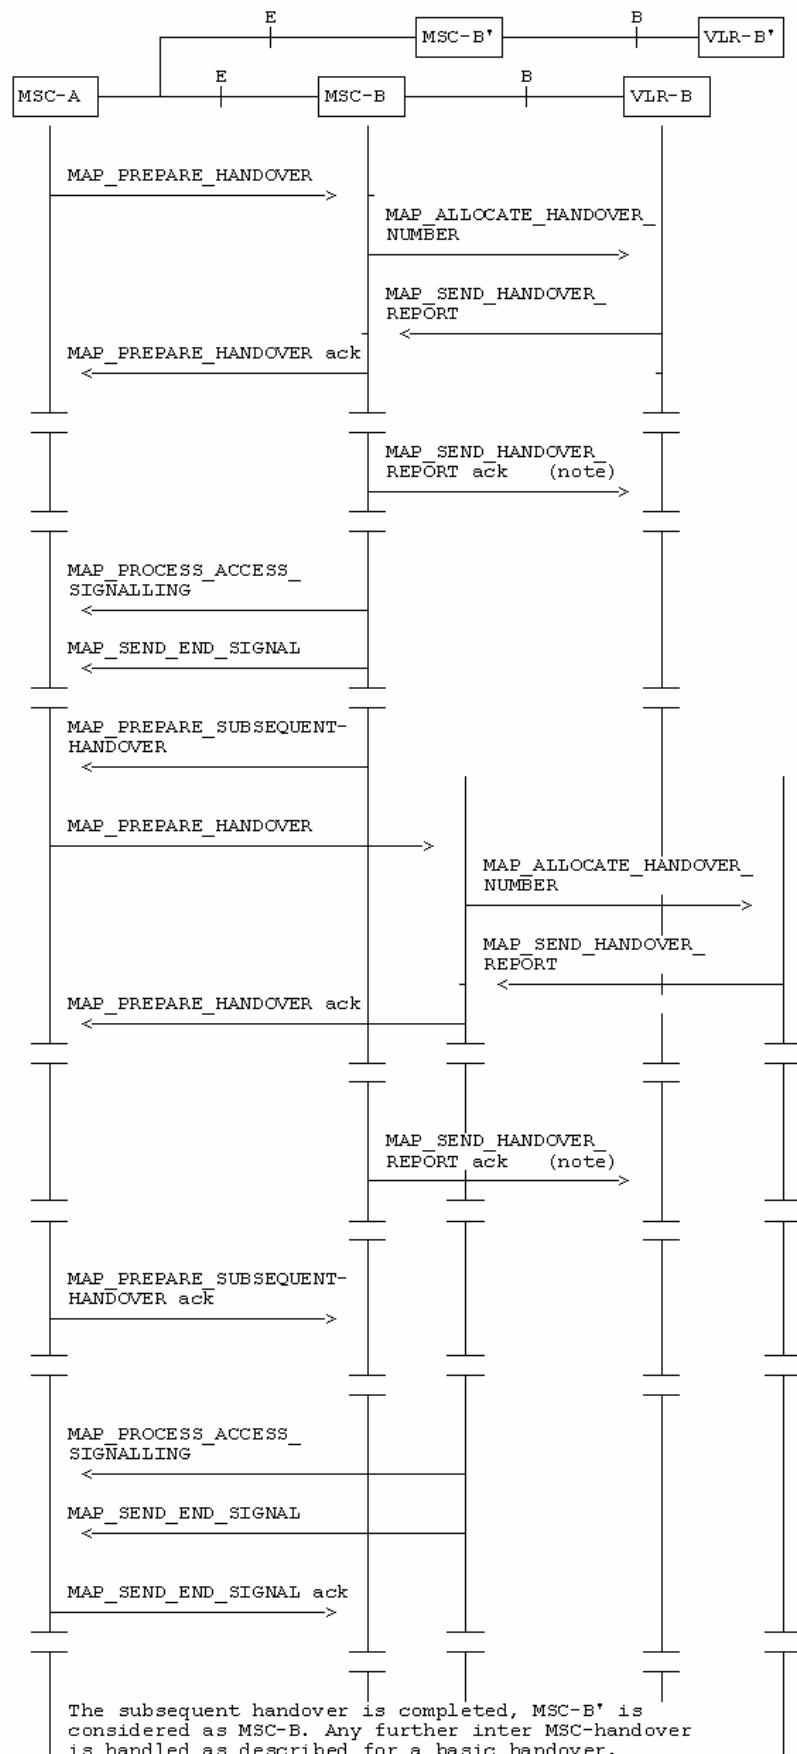

NOTE: This can be sent at any time after the connection between MSC-A and MSC-B is established.

**Figure 19.2/3: Example of a handover towards a third MSC**

## 19.2.2 Handover procedure in MSC-A

This clause describes the handover or relocation procedure in MSC-A, including the request for a basic handover or relocation to another MSC (MSC-B), subsequent handover or relocation to a third MSC (MSC-B') or back to the controlling MSC (MSC-A).

### 19.2.2.1 Basic handover

When MSC-A has decided that a call has to be handed over or relocated to MSC-B, the Handover Control Application in MSC-A requests the MAP application to initiate the MAP\_PREPARE\_HANDOVER request to MSC-B.

MSC-A opens the dialogue to MSC-B with a MAP\_OPEN request containing no user specific parameters and sends a MAP\_PREPARE\_HANDOVER request. This request shall contain all the information required by MSC-B to allocate the necessary radio resources. In addition, it may optionally contain:

- an indication that a handover number allocation is not required;
- the targetCellId, for compatibility reasons in the case of handover or inter-system handover to GSM ;
- the targetRNCId, in case of SRNS relocation or inter-system handover from GSM to UMTS;
- the IMSI;
- UMTS encryption information and UMTS integrity protection information, which are necessary parameters for inter-system handover from GSM to UMTS;
- GSM radio resource information (channel type) shall be included at inter-MSC relocation to prepare for a possible subsequent intra-MSC handover from UMTS to GSM in MSC-B.

The conditions when these parameters shall be included and the processing of them in MSC-B (3G\_MSC-B) are described in detail in 3GPP TS 29.010 and 23.009.

If MSC-B accepts the dialogue, it returns a MAP\_PREPARE\_HANDOVER confirmation containing a handover number or one or several relocation numbers, unless the request has included the HO-NumberNotRequired parameter, and BSSAP or RANAP information which is forwarded to and handled by the Handover Control Application in MSC-A.

Optionally MSC-A can receive, after a MAP\_PREPARE\_HANDOVER confirmation, a MAP\_PROCESS\_ACCESS\_SIGNALLING indication containing BSSAP or RANAP information.

When the connection has been established between the MS and MSC-B, MSC-A will be informed by a MAP\_SEND\_END\_SIGNAL indication.

When MSC-A wants to clear the connection with BSS-B, an indication from the Handover Control Application is received in the Map Application to send the MAP\_SEND\_END-SIGNAL response to MSC-B to close the MAP dialogue.

MSC-A may abort the handover or relocation procedure at any time (e.g. if the call is cleared).

### 19.2.2.2 Handling of access signalling

If required, the Handover Control Application in MSC-A requests the MAP application to invoke the MAP\_FORWARD\_ACCESS\_SIGNALLING request containing the information to be transferred to the A-interface or the Iu-interface of MSC-B (e.g. call control information).

MAP\_FORWARD\_ACCESS\_SIGNALLING is a non-confirmed service.

MSC-B will then forward the required information to the Handover Control Application. The MAP\_FORWARD\_ACCESS\_SIGNALLING is composed in such a way that the information can be passed transparently to the A-interface or the Iu-interface for call control and mobility management information. Any response received in MSC-B from the A-interface or the Iu-interface that should be brought to MSC-A will require a new independent request from the Handover Control Application in MSC-B to MSC-A by invoking a MAP\_PROCESS\_ACCESS\_SIGNALLING request.

### 19.2.2.3 Other procedures in stable handover situation

During a call and after handover or relocation, a number of procedures between MSC-A and BSS-B or RNS-B controlled by or reported to MSC-A may be initiated in both directions by invoking a MAP\_FORWARD\_ACCESS\_SIGNALLING request and reception of a MAP\_PROCESS\_ACCESS\_SIGNALLING indication.

### 19.2.2.4 Subsequent handover

When MSC-A receives a MAP\_PREPARE\_SUBSEQUENT\_HANDOVER request, it will start the procedure of handing or relocating the call over to a third MSC (MSC-B'), or back to the controlling MSC (MSC-A). If the new handover or relocation procedure towards MSC-B' or MSC-A is successful, the handover control application in MSC-A will request the release of the dialogue towards MSC-B by sending the MAP\_SEND\_END\_SIGNAL confirmation.

### 19.2.2.5 SDL Diagrams

The SDL diagrams on the following pages describe the user processes in MSC-A for the procedures described in this clause.

The services used are defined in clause 8.4.

**NOTE:** The message primitives HO\_CA\_MESSAGE used in the SDL-Diagrams are used to show the internal co-ordination between the MAP application and the Handover Control Application. For a detailed description of the co-ordination between the applications for the handover or relocation procedure, see 3GPP TS 23.009.

Note that in case of reception of errors from the MSCs (see the Handover error handling macro), the MAP user reports them to the Handover Control Application and does not take any action except in cases explicitly mentioned in the SDL diagrams.

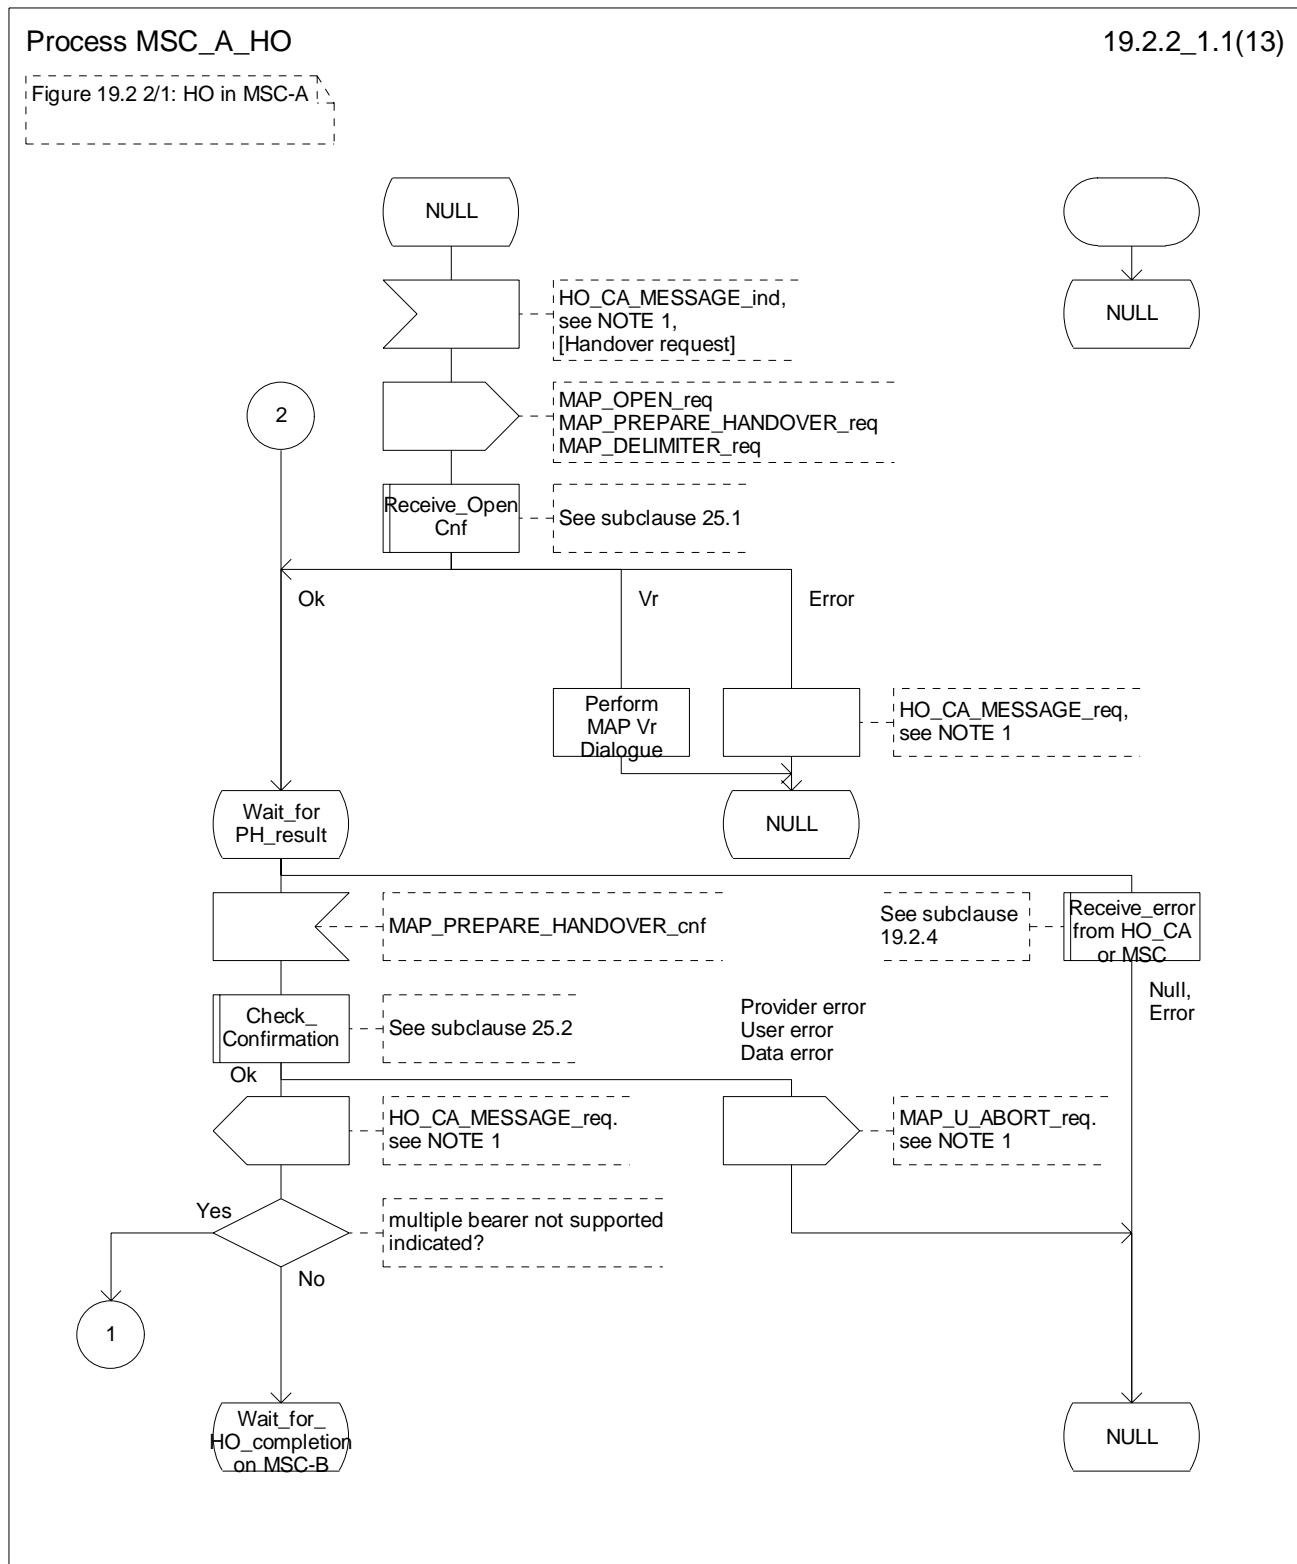


Figure 19.2.2/1 (sheet 1 of 13): Process MSC\_A\_HO

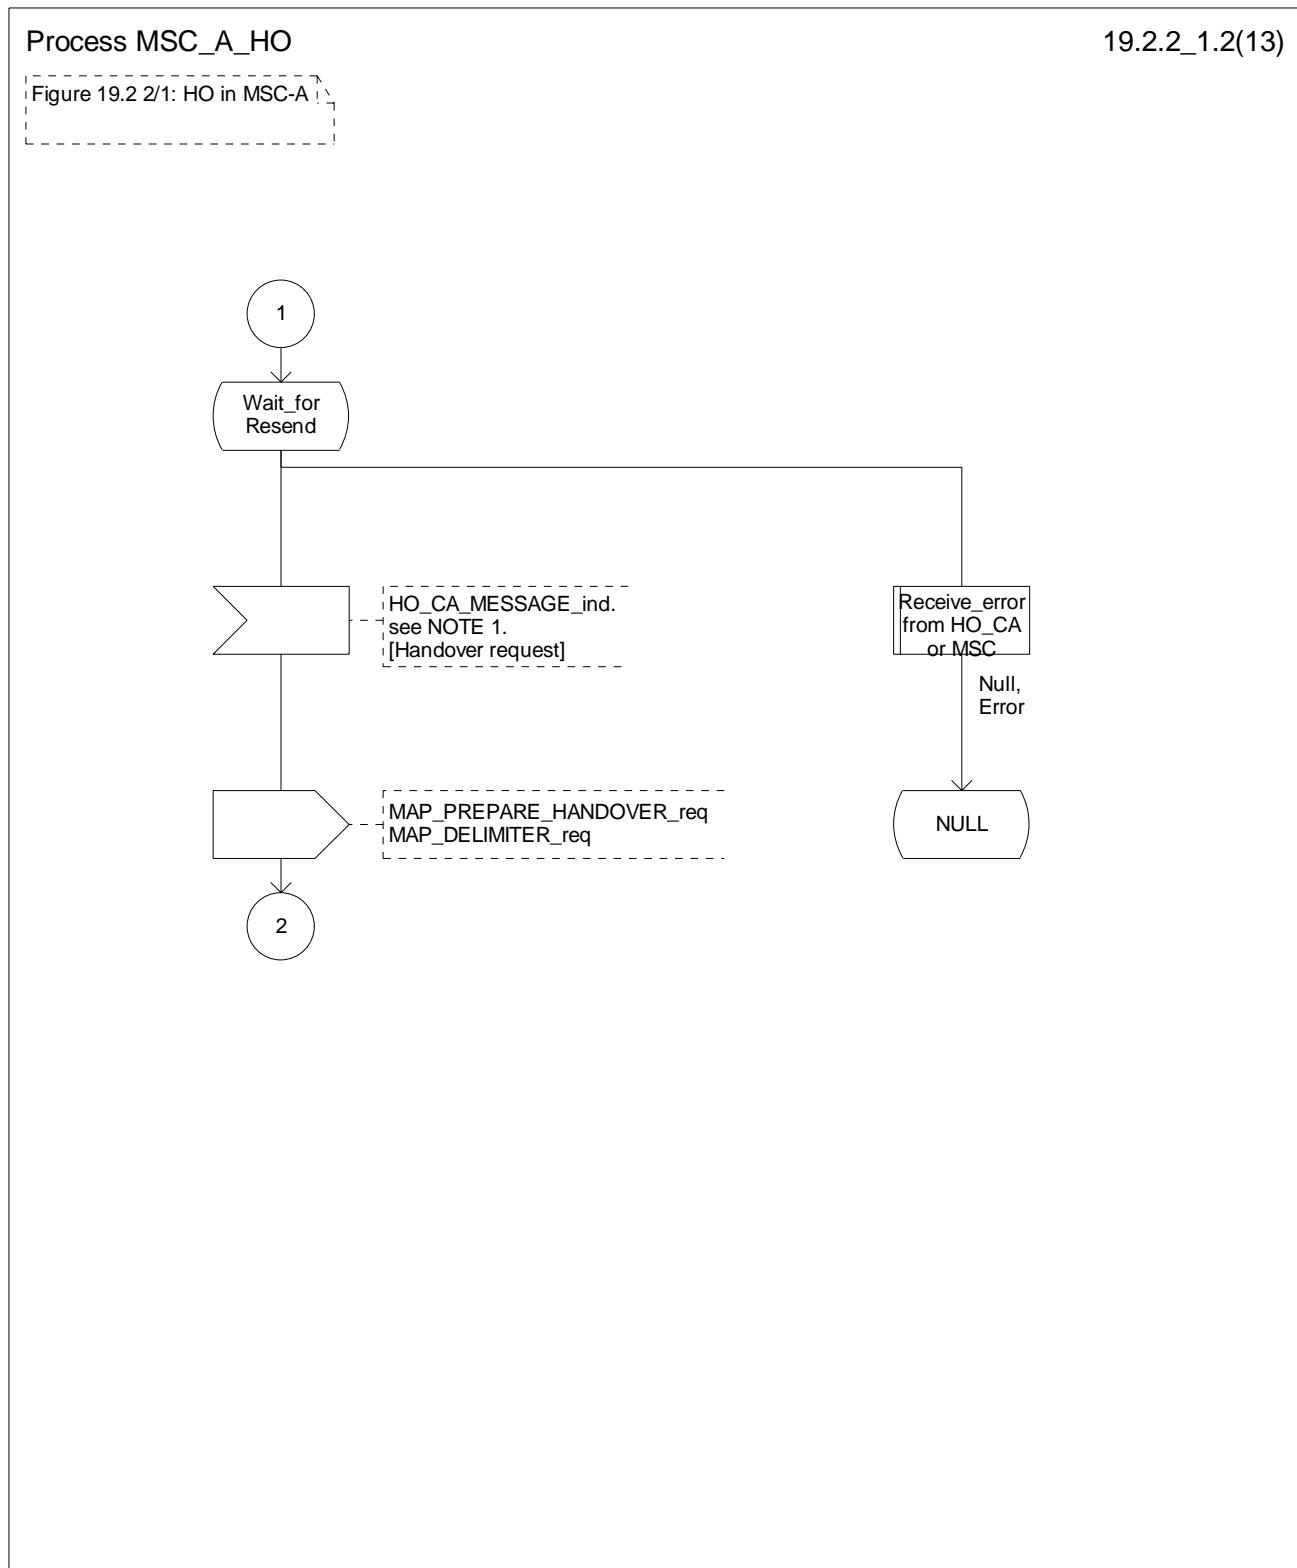


Figure 19.2.2/1 (sheet 2 of 13): Process MSC\_A\_HO

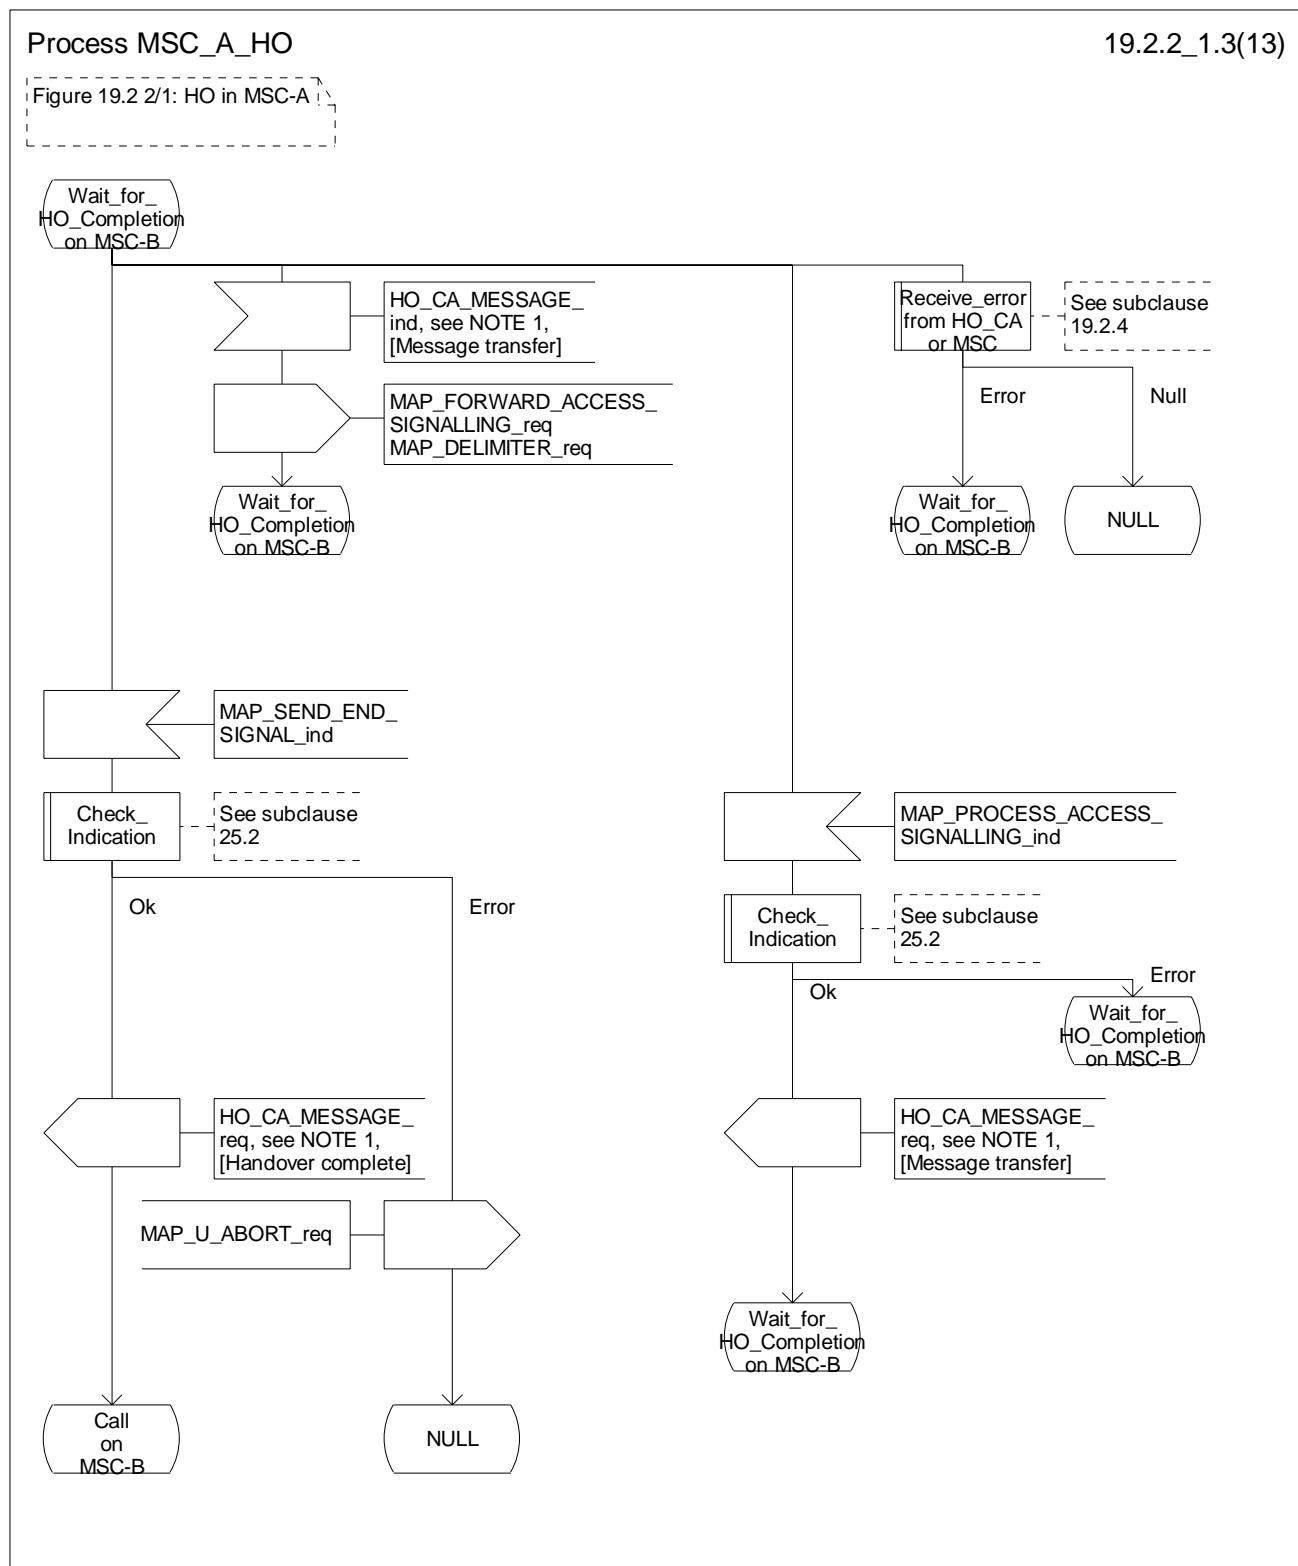


Figure 19.2.2/1 (sheet 3 of 13): Process MSC\_A\_HO

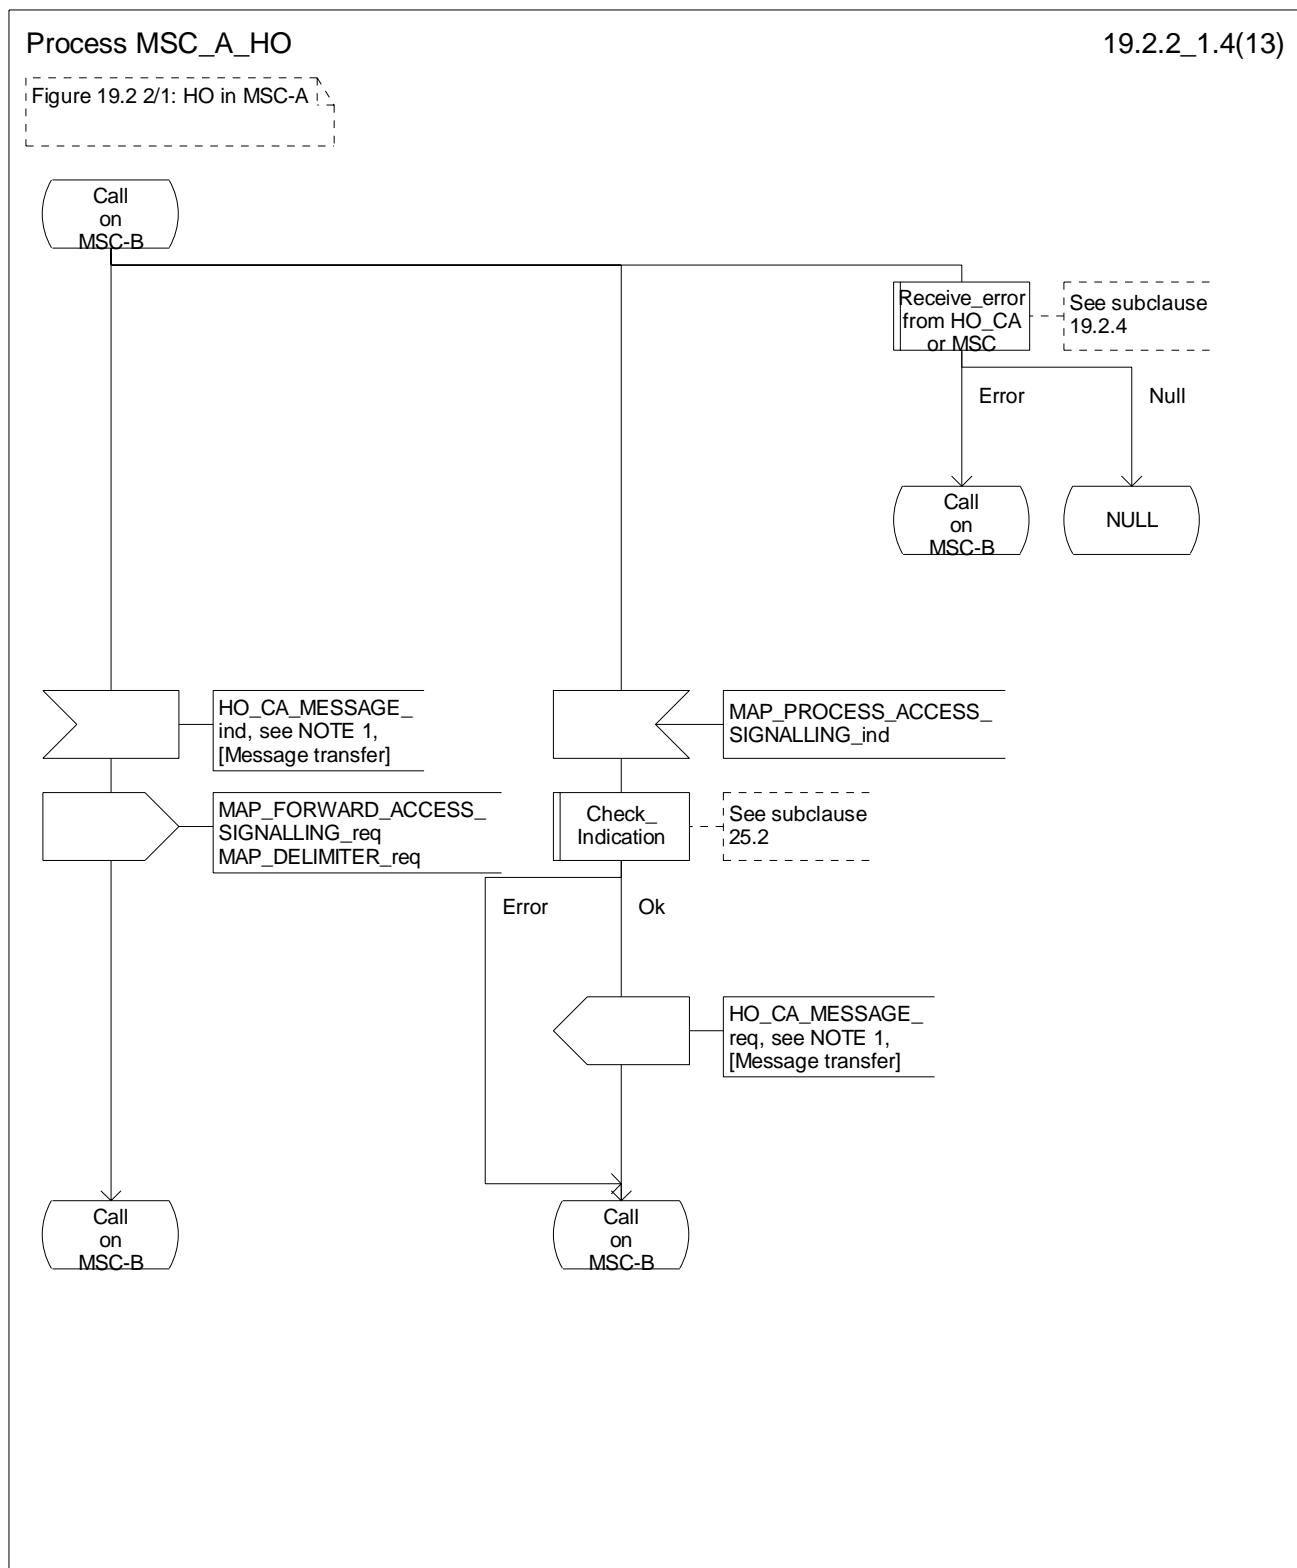


Figure 19.2.2/1 (sheet 4 of 13): Process MSC\_A\_HO

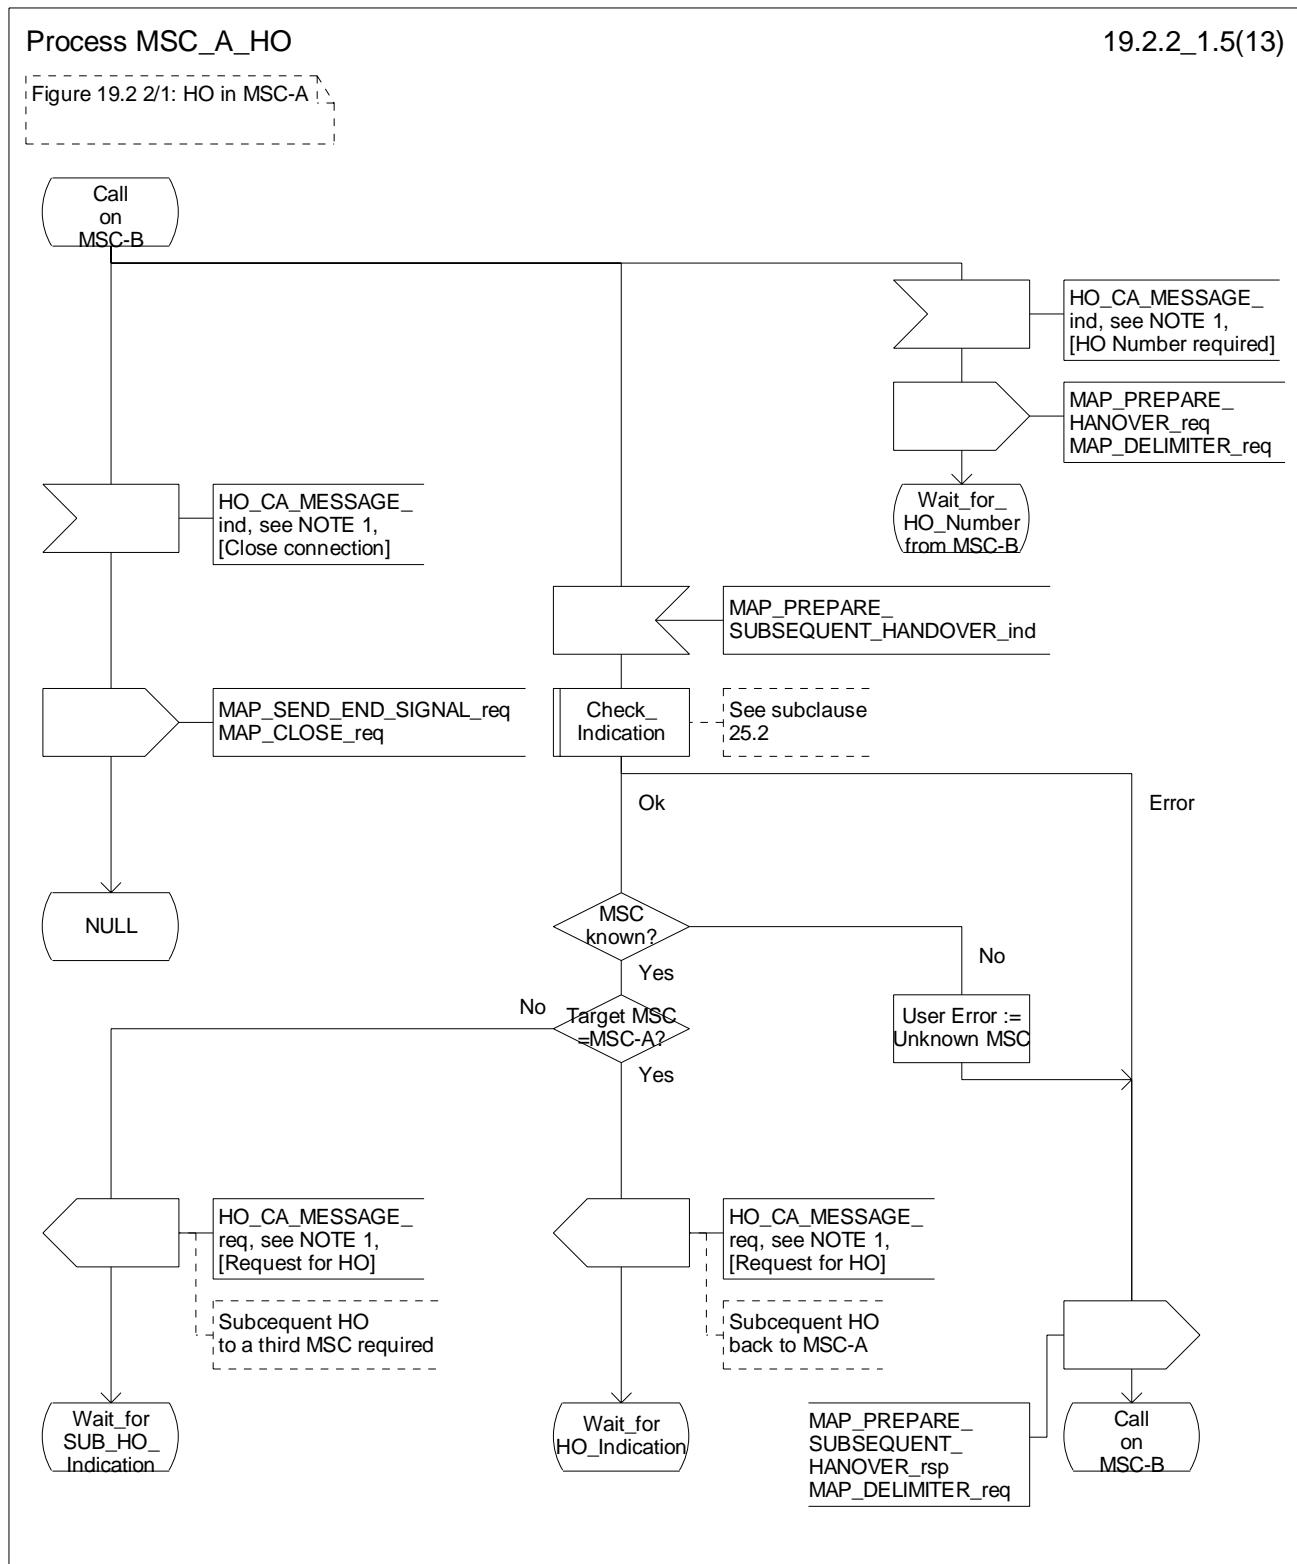


Figure 19.2.2/1 (sheet 5 of 13): Process MSC\_A\_HO

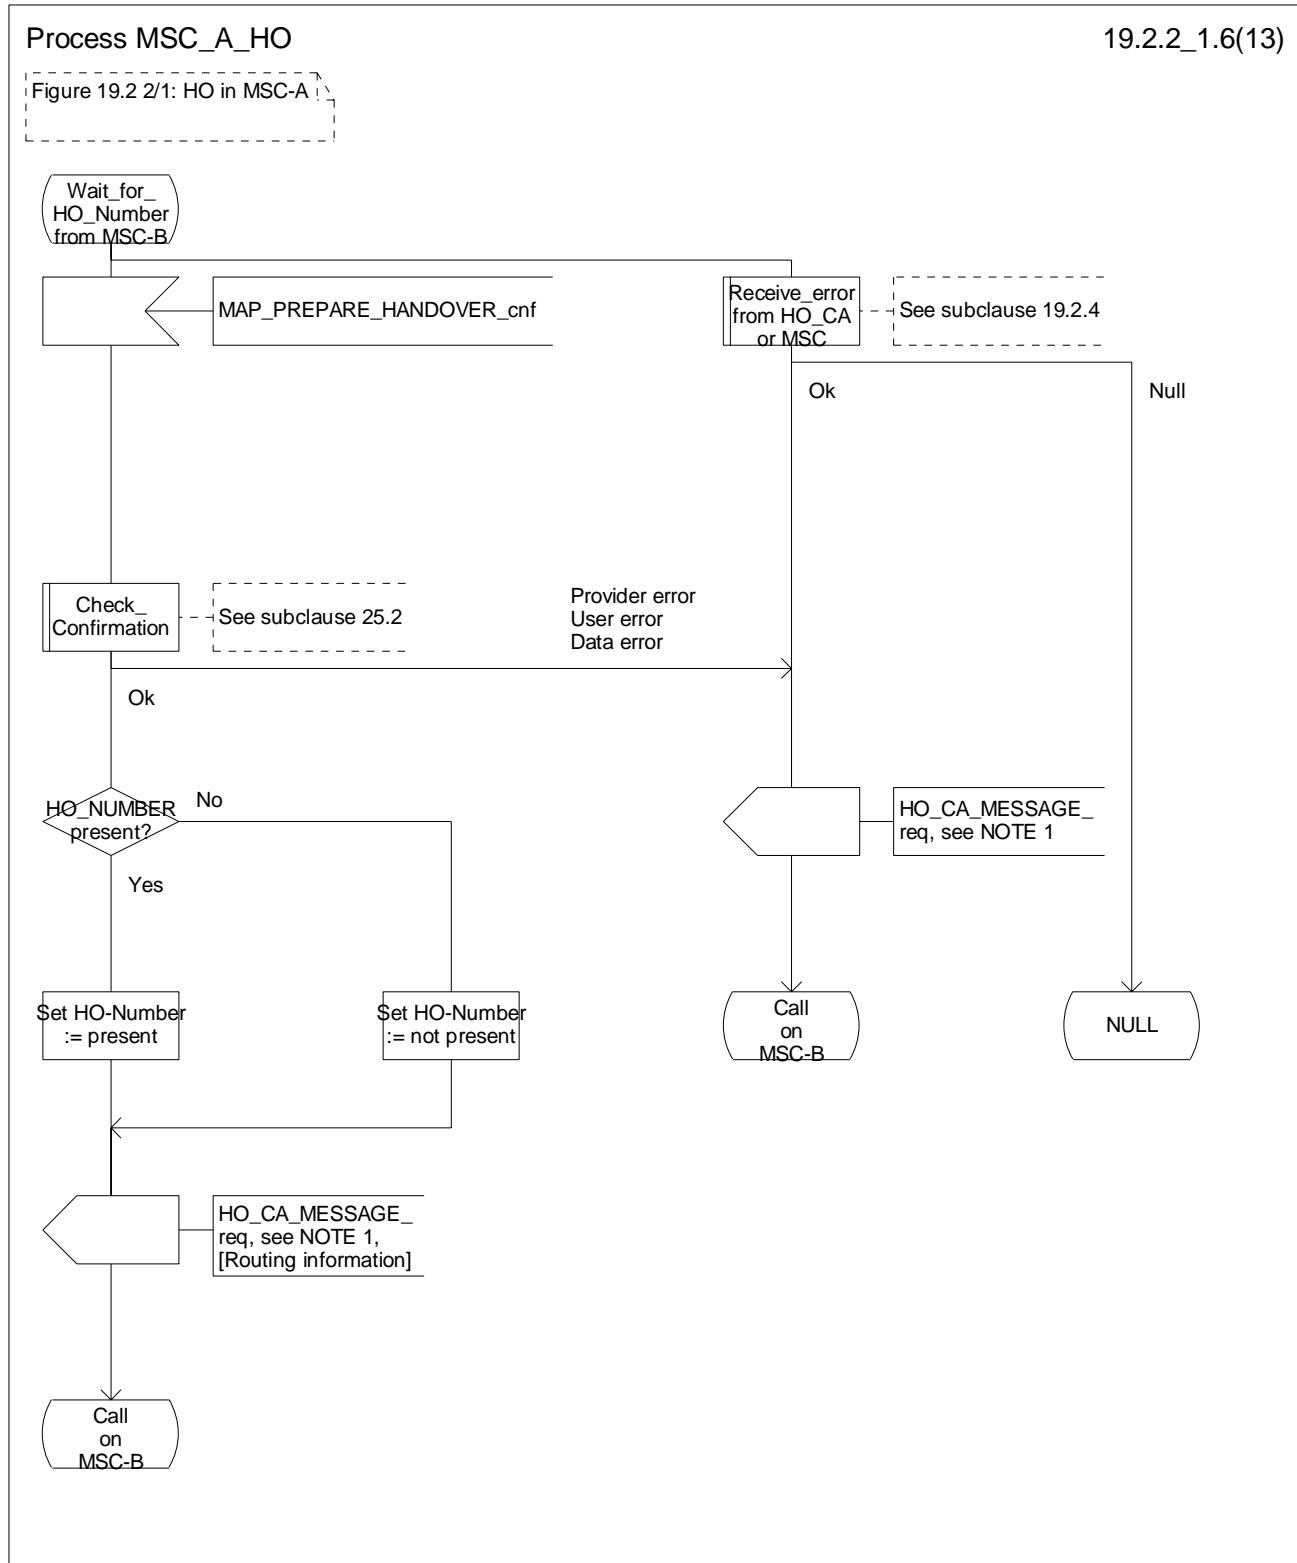


Figure 19.2.2/1 (sheet 6 of 13): Process MSC\_A\_HO

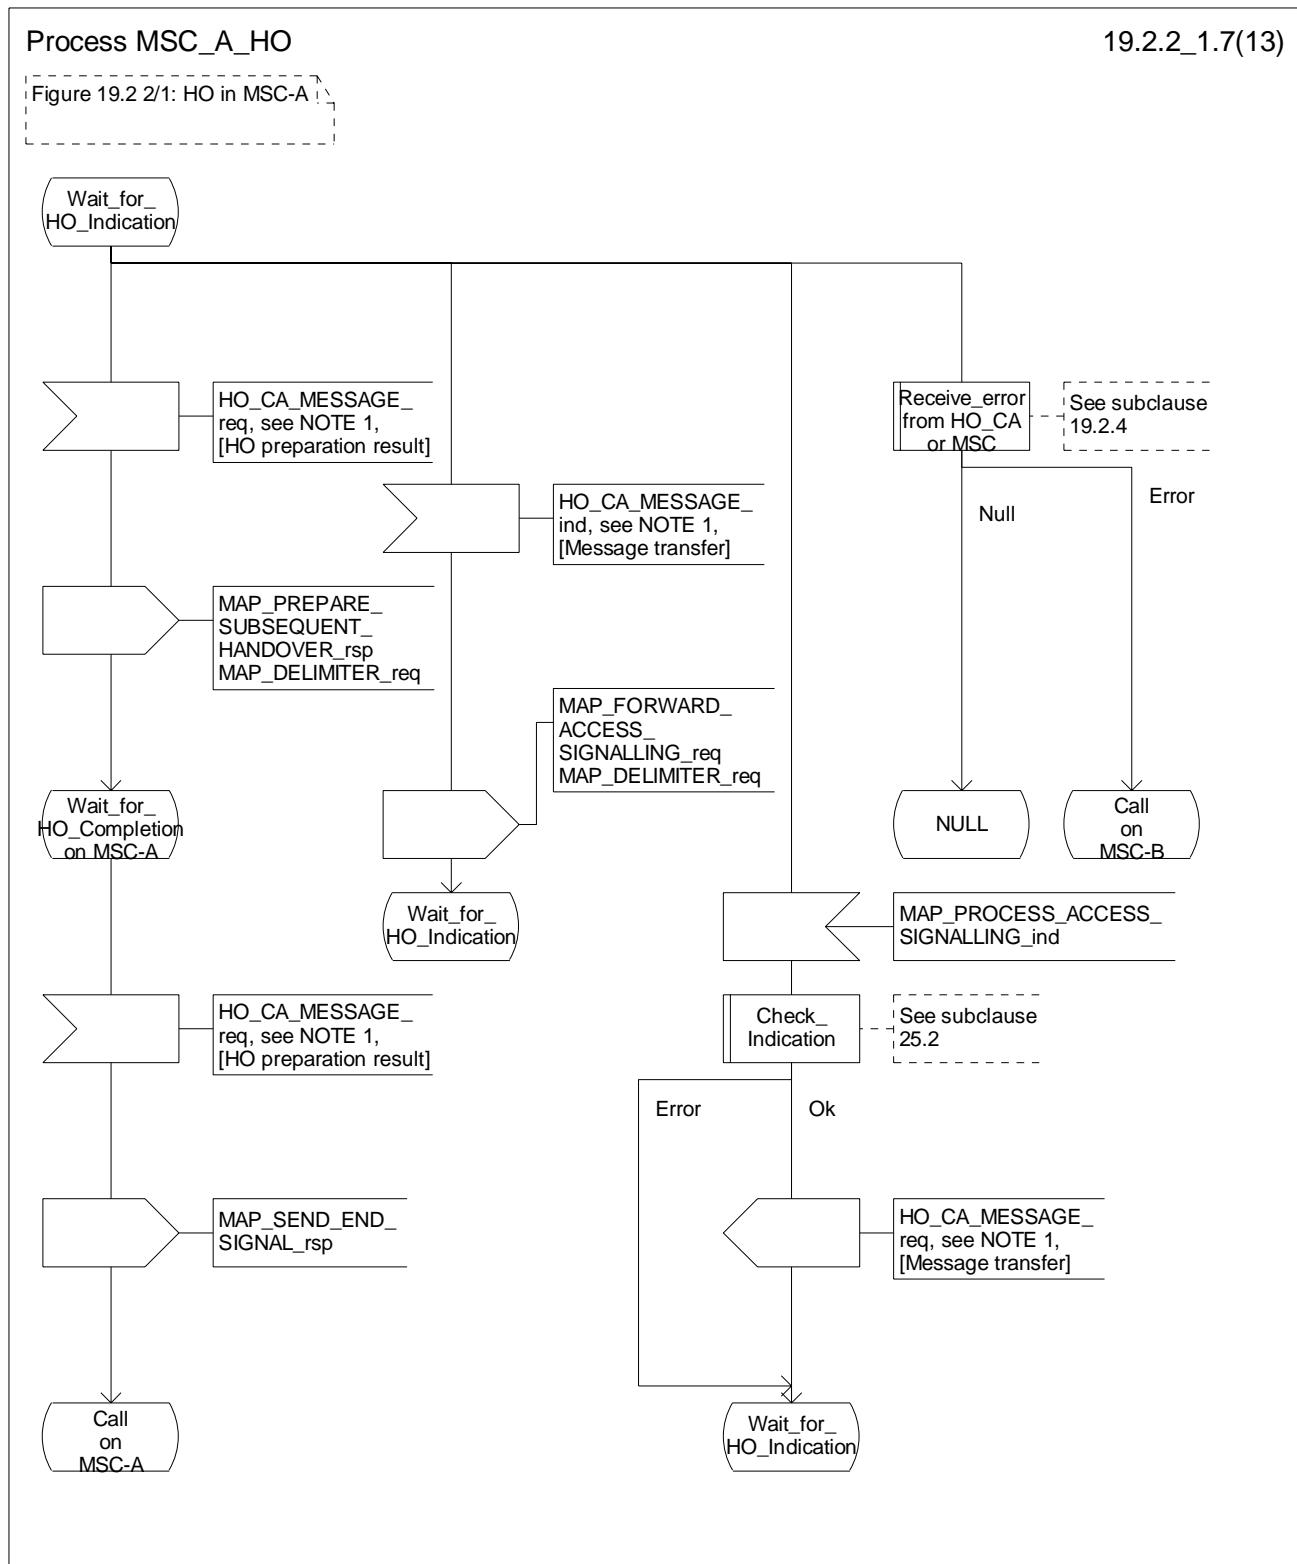


Figure 19.2.2/1 (sheet 7 of 13): Process MSC\_A\_HO

## Process MSC\_A\_HO

19.2.2\_1.8(13)

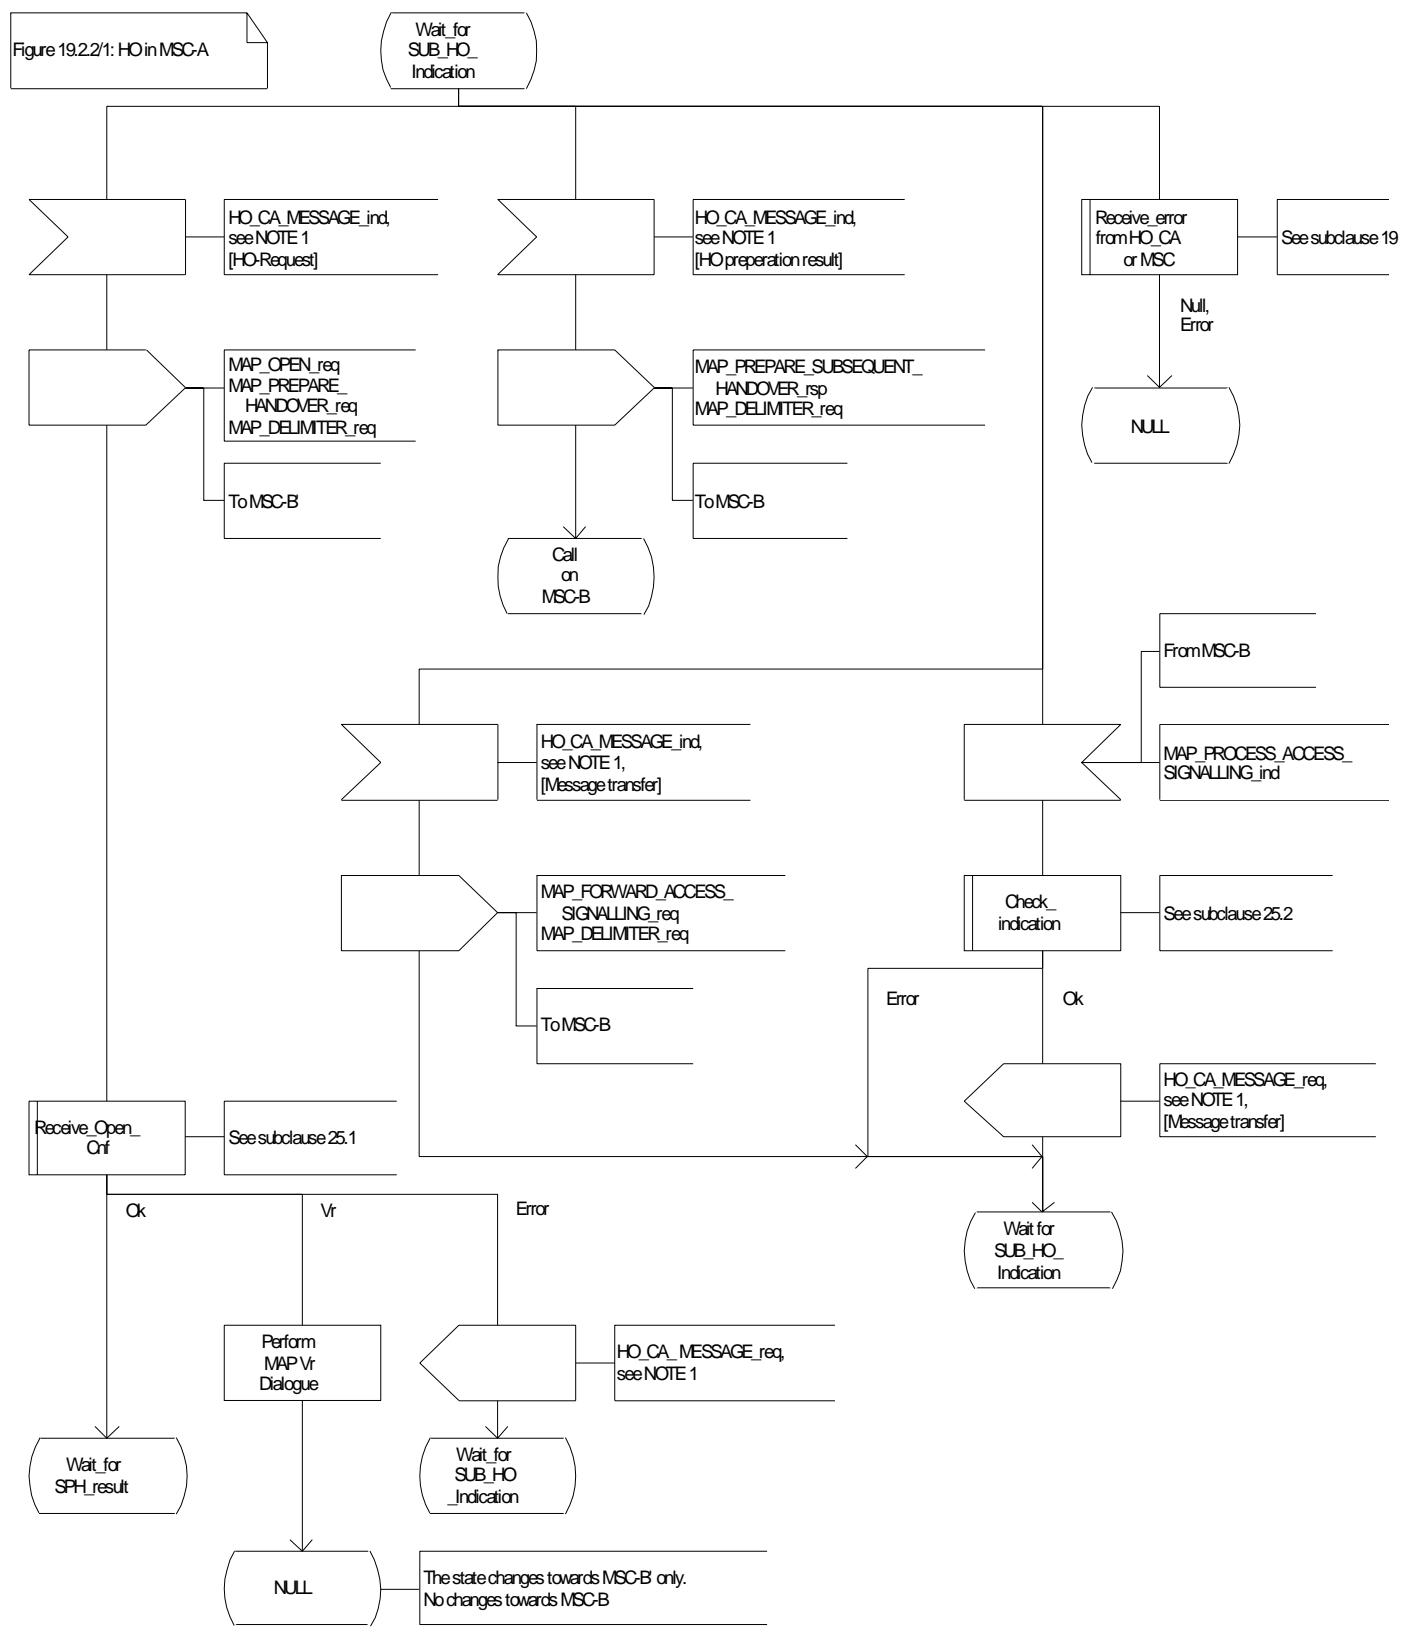


Figure 19.2.2/1 (sheet 8 of 13): Process MSC\_A\_HO

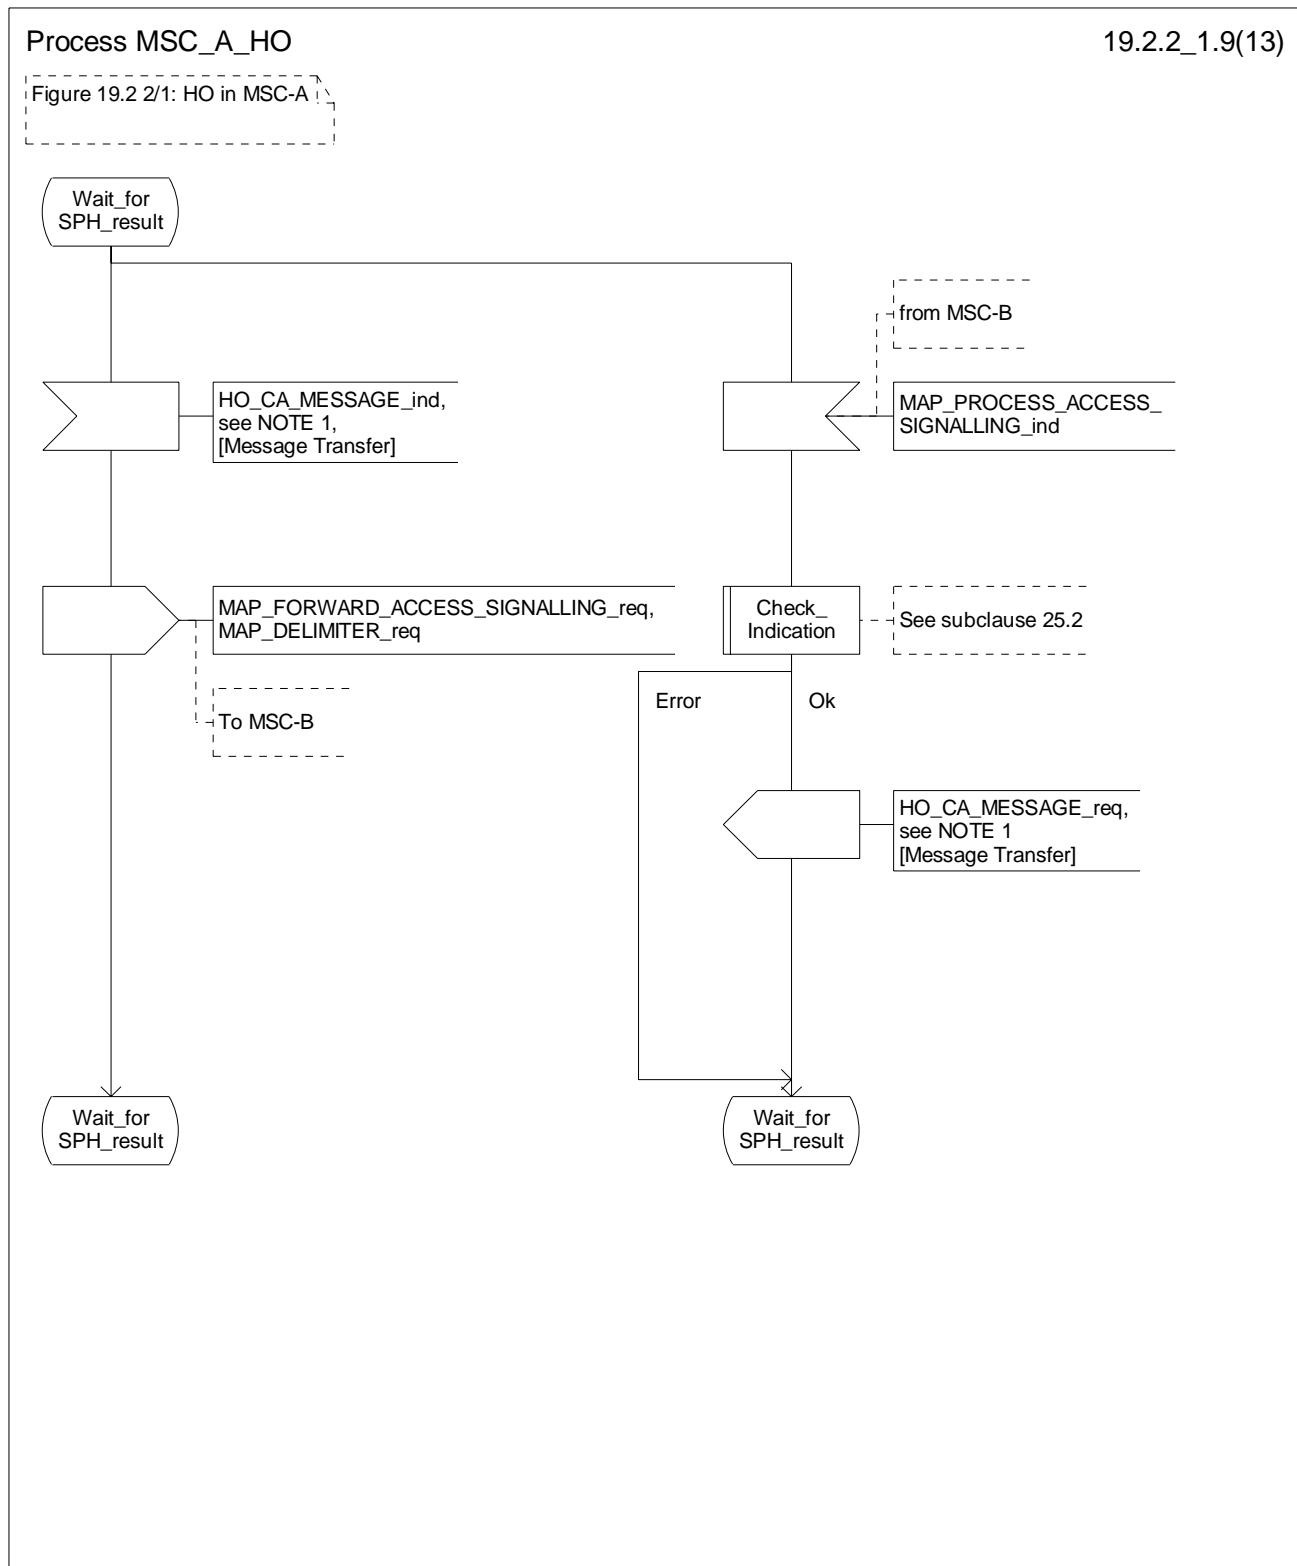


Figure 19.2.2/1 (sheet 9 of 13): Process MSC\_A\_HO

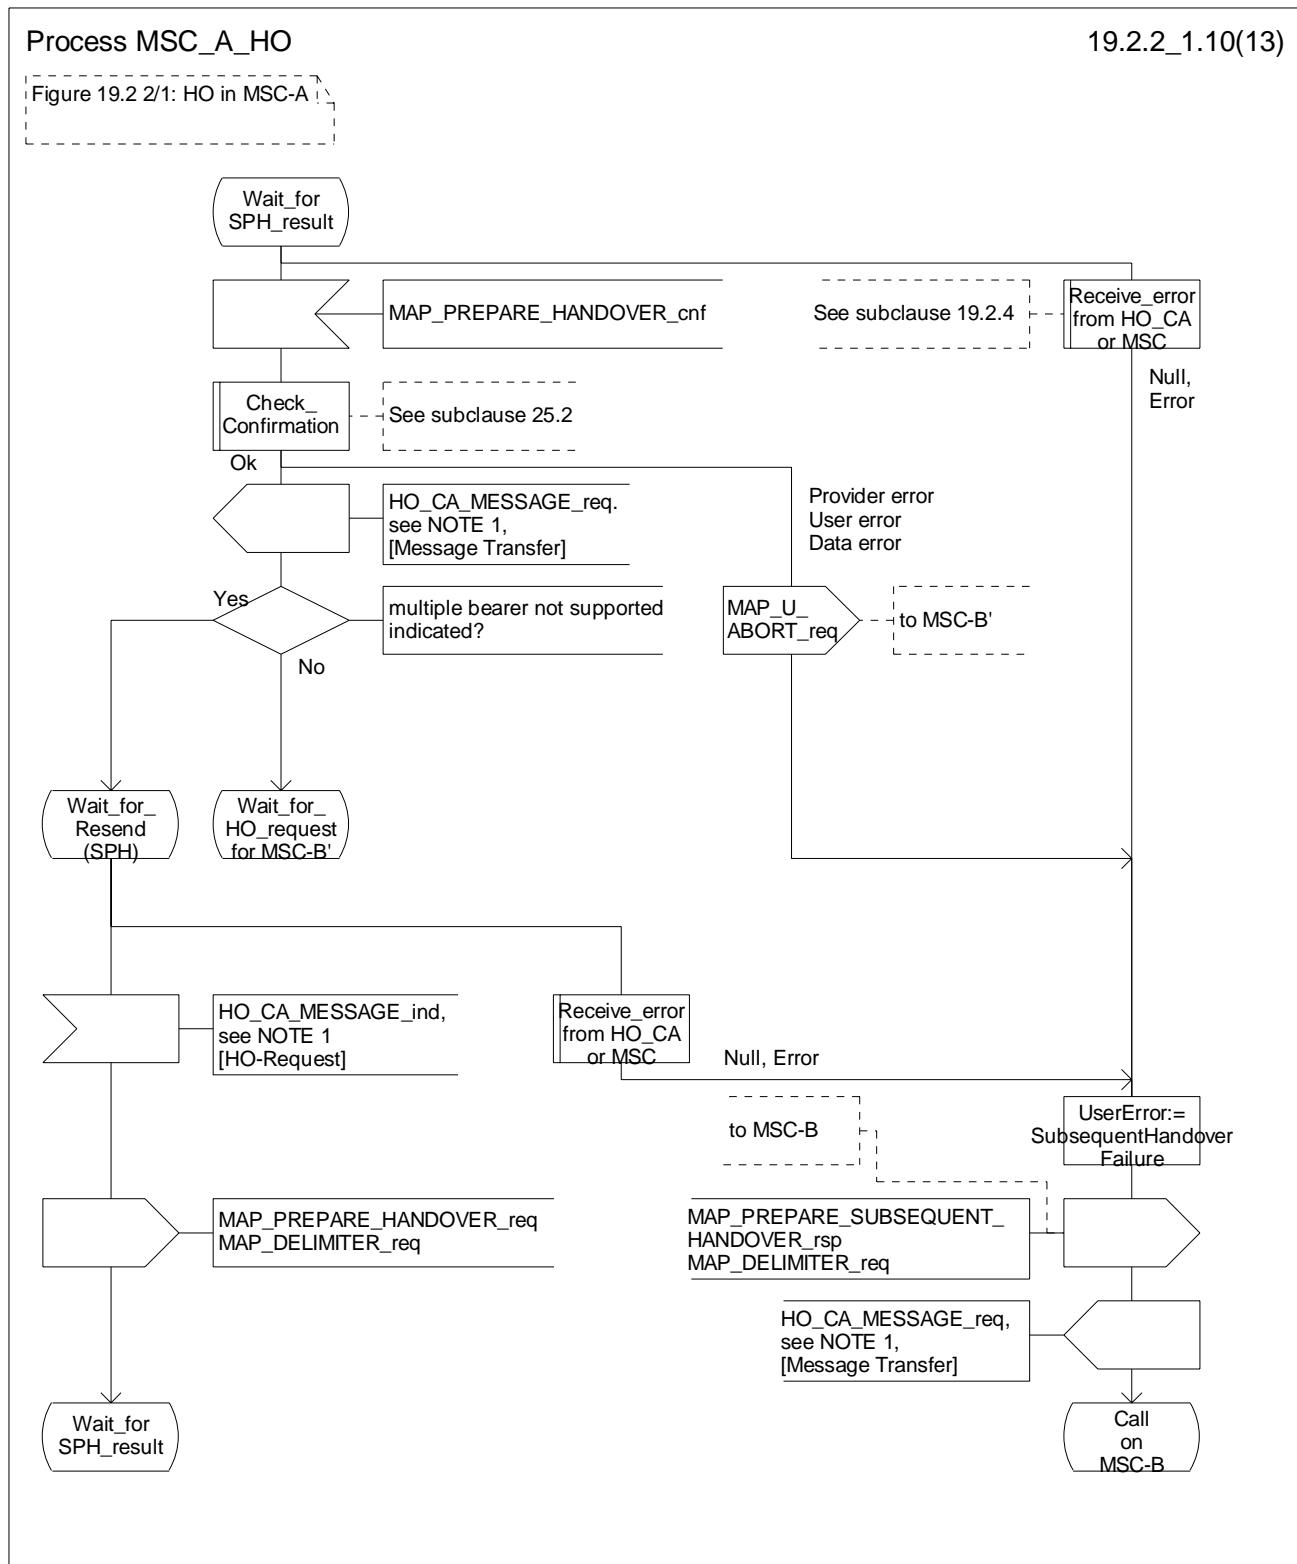


Figure 19.2.2/1 (sheet 10 of 13): Process MSC\_A\_HO

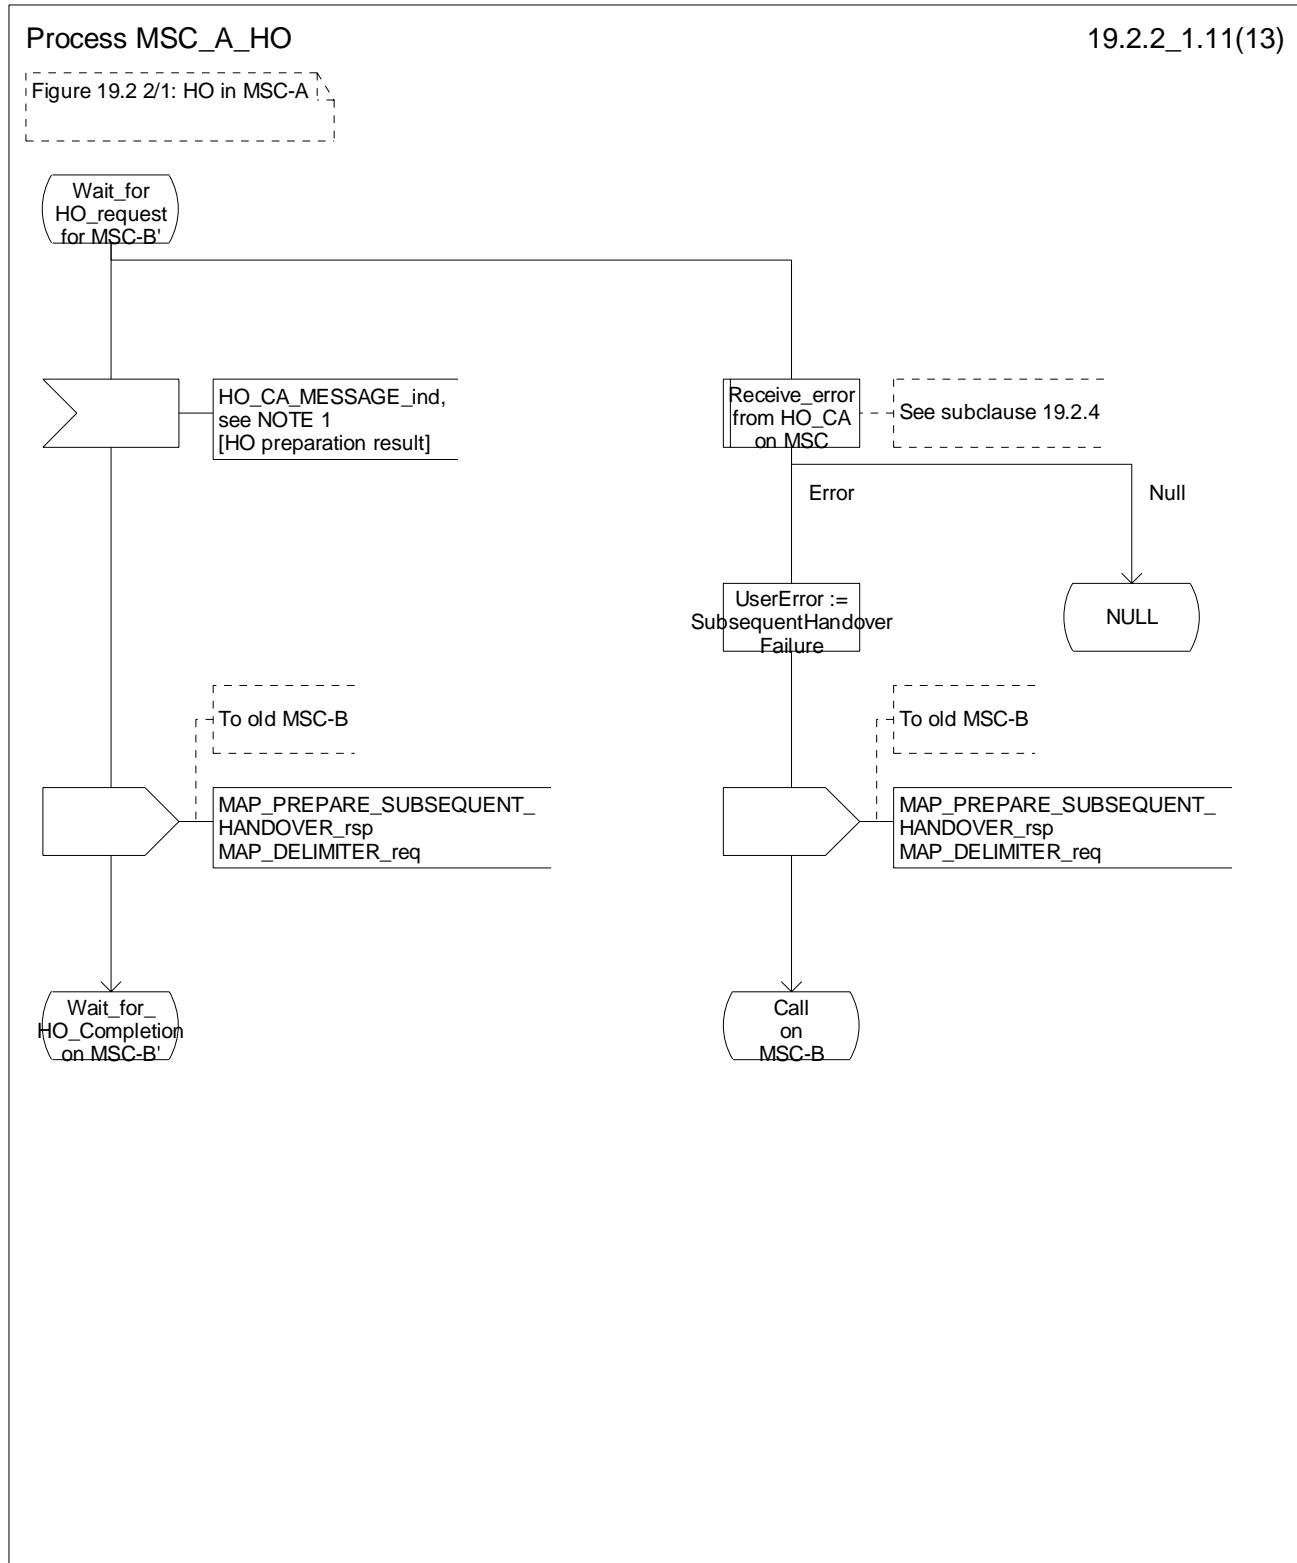


Figure 19.2.2/1 (sheet 11 of 13): Process MSC\_A\_HO

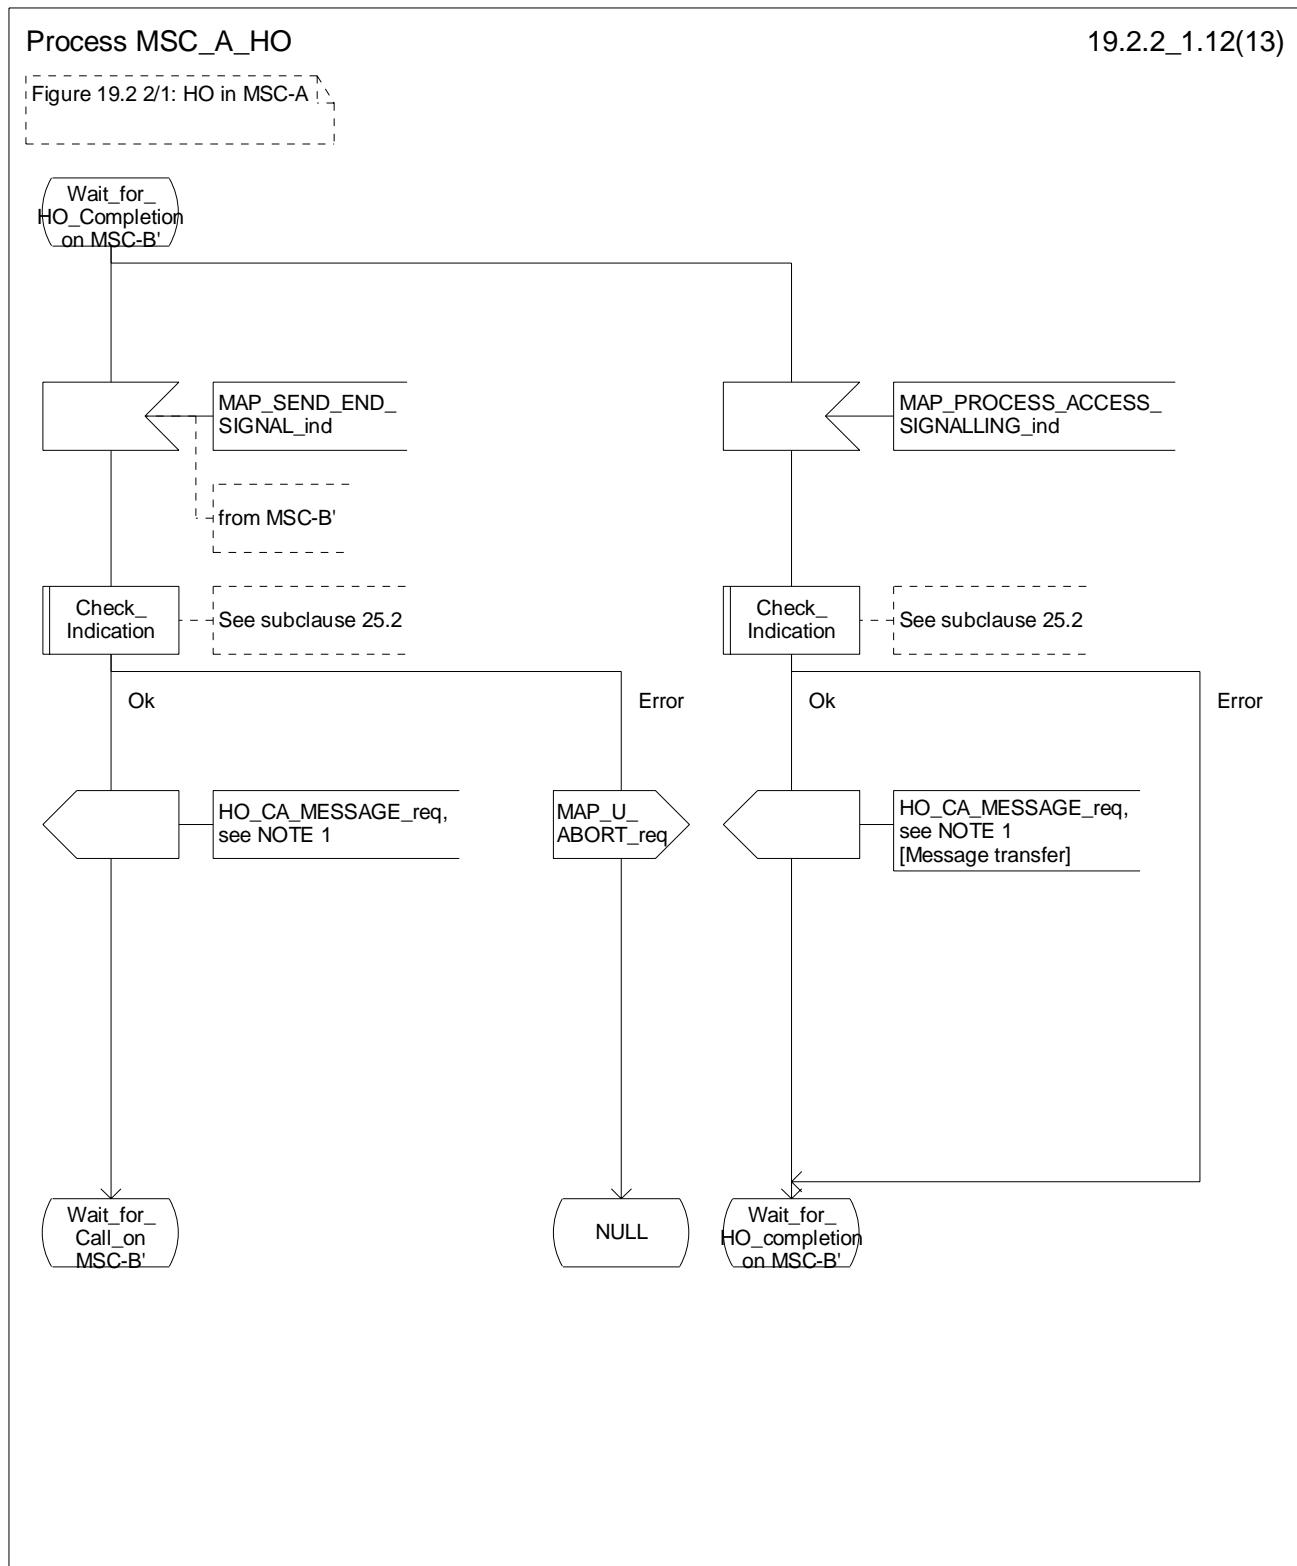


Figure 19.2.2/1 (sheet 12 of 13): Process MSC\_A\_HO

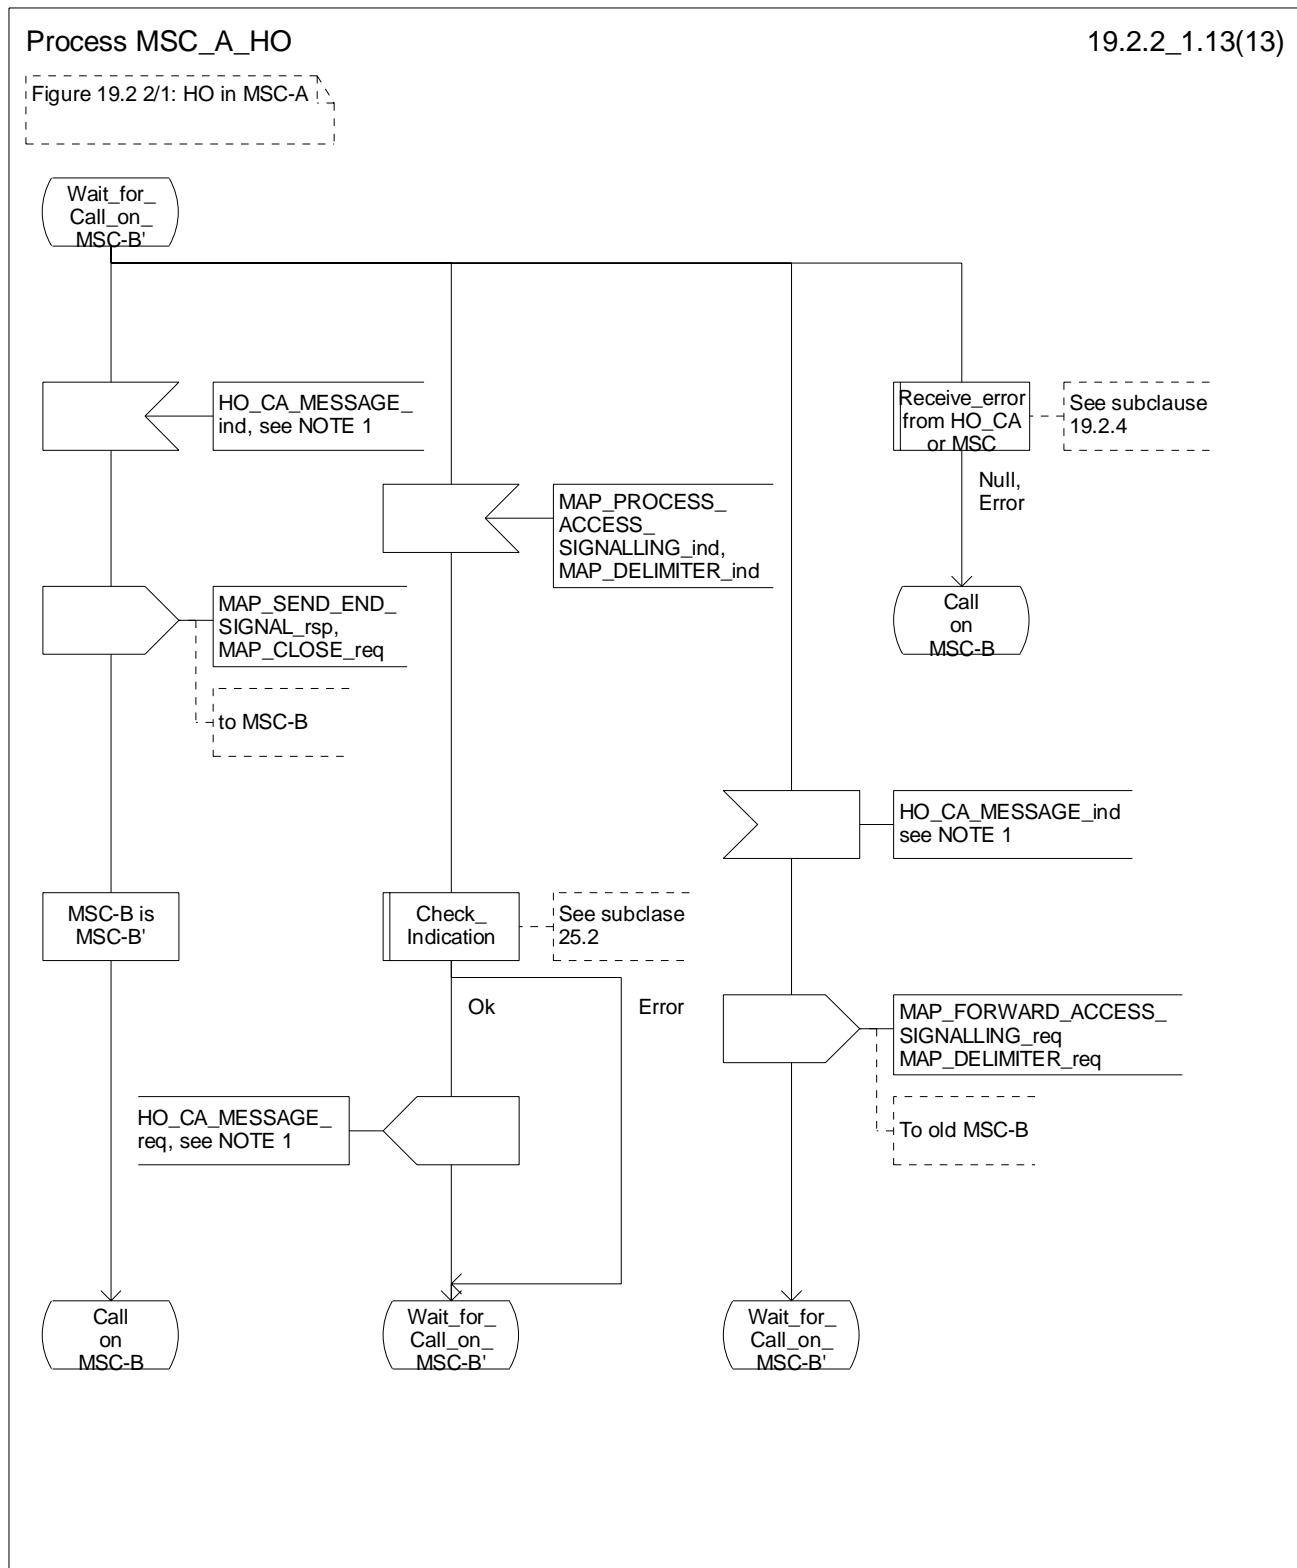


Figure 19.2.2/1 (sheet 13 of 13): Process MSC\_A\_HO

### 19.2.3 Handover procedure in MSC-B

This clause describes the handover or relocation procedure in MSC-B, including the request for a handover or relocation from another MSC (MSC-A), subsequent handover or relocation to a third MSC (MSC-B') or back to the controlling MSC (MSC-A).

### 19.2.3.1 Basic handover

Opening of the dialogue is described in the macro Receive\_Open\_Ind in clause 25.1.

When MSC-B process receives a MAP\_PREPARE\_HANDOVER indication from MSC-A, MSC-B requests its associated VLR to provide a handover number, unless the parameter HO-NumberNotRequired is received in the indication.

When the connection between the MS and MSC-B is established on MSC-B, the Handover Control Application will request the MAP application to indicate this event to MSC-A by invoking the MAP\_SEND\_END\_SIGNAL request. When a call is released, MSC-A will inform MSC-B by MAP\_SEND\_END\_SIGNAL response and the MAP dialogue between MSC-A and MSC-B is closed.

### 19.2.3.2 Allocation of handover number

When a handover number is required, a MAP\_ALLOCATE\_HANDOVER\_NUMBER request will be sent to the VLR. The handover number is received in the MAP\_SEND\_HANDOVER\_REPORT request, and will be included in the MAP\_PREPARE\_HANDOVER response to MSC-A.

When relocation numbers are required, one or several MAP\_ALLOCATE\_HANDOVER\_NUMBER requests will be sent to the VLR. Each relocation number is received in a MAP\_SEND\_HANDOVER\_REPORT request, and the collected relocation numbers will be included in the MAP\_PREPARE\_HANDOVER response to MSC-A.

As soon as the call from MSC-A using the handover number arrives in MSC-B, MSC-B shall release the handover number in the VLR using the MAP\_SEND\_HANDOVER\_REPORT response.

As soon as a call from MSC-A using a relocation number arrives in MSC-B, MSC-B shall release the relocation number in the VLR using the MAP\_SEND\_HANDOVER\_REPORT response.

### 19.2.3.3 Handling of access signalling

If required by the Handover Control Application, MSC-B invokes the MAP\_PROCESS\_ACCESS\_SIGNALLING request containing the information received on the A-interface or the Iu-interface that should be transferred to MSC-A (e.g. call control information).

MAP\_PROCESS\_ACCESS\_SIGNALLING is a non-confirmed service and any response from MSC-A will require a MAP\_FORWARD\_ACCESS\_SIGNALLING request.

### 19.2.3.4 Other procedures in stable handover situation

During a call and after handover or relocation, a number of procedures between MSC-A and BSS-B or RNS-B controlled by or reported to MSC-A may be initiated by involving access signalling transfer in both directions.

### 19.2.3.5 Subsequent handover

The procedure is used when the Handover Control Application in MSC-B has decided that a call is to be handed over or relocated to another MSC (either back to the controlling MSC (MSC-A) or to a third MSC (MSC-B')).

After the MAP\_PREPARE\_SUBSEQUENT\_HANDOVER response is received from MSC-A, MSC-B will await the disconnection of the call. Once the disconnect is complete, MSC-B will inform its VLR by invoking the MAP\_SEND\_HANDOVER\_REPORT confirmation. VLR-B will then release the allocated handover number.

The subsequent handover procedure is shown in figure 19.2/3.

### 19.2.3.6 SDL Diagrams

The SDL diagrams on the following pages describe the user process in MSC-B for the procedures described in this clause.

The services used are defined in clause 8.4.

NOTE 1: The message primitives HO\_CA\_MESSAGE in the SDL-diagrams are used to show the internal co-ordination between the MAP application and the Handover Control Application. For a detailed description of the co-ordination between the applications for the handover procedure, see 3GPP TS 23.009.

NOTE 2: The order in the SDL diagrams to allocate first the handover number and then the radio resources is not binding.

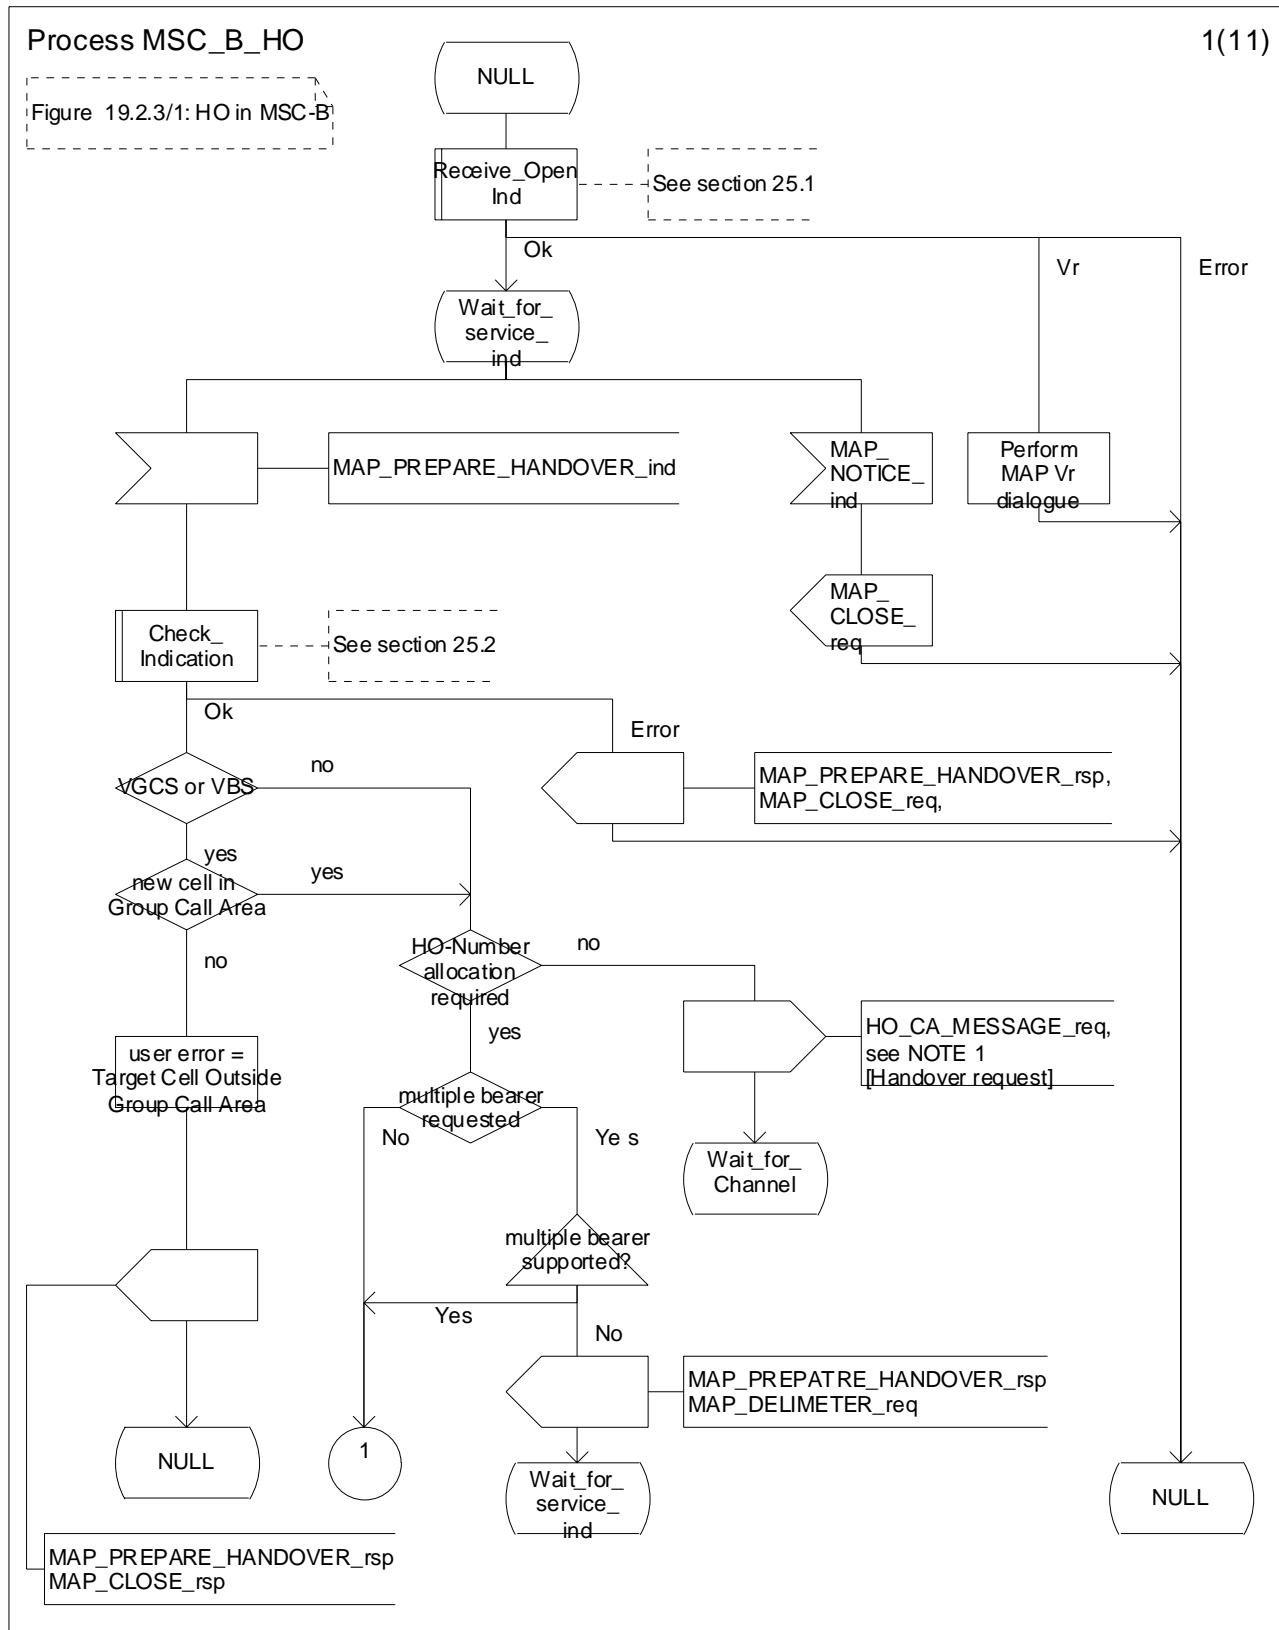


Figure 19.2.3/1 (sheet 1 of 11): Process MSC\_B\_HO

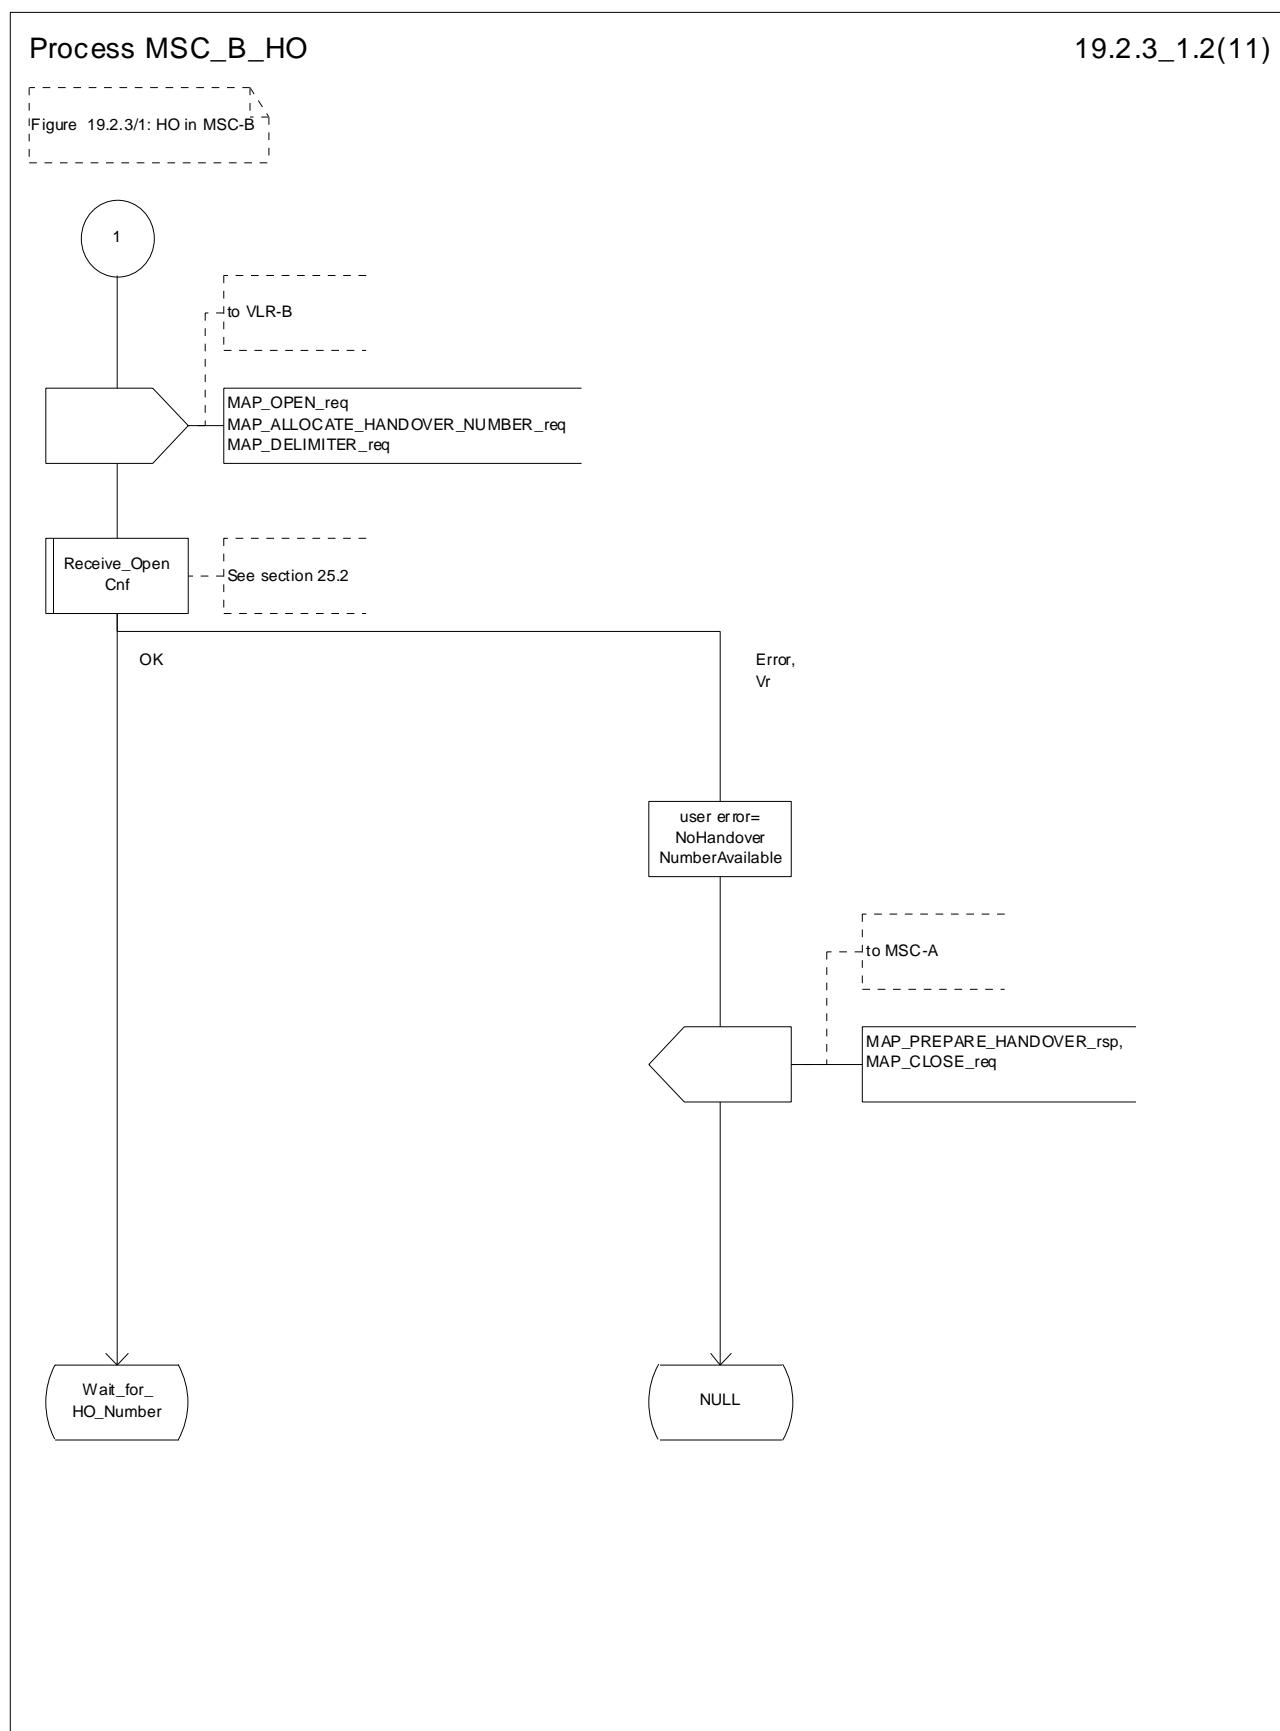


Figure 19.2.3/1 (sheet 2 of 11): Process MSC\_B\_HO

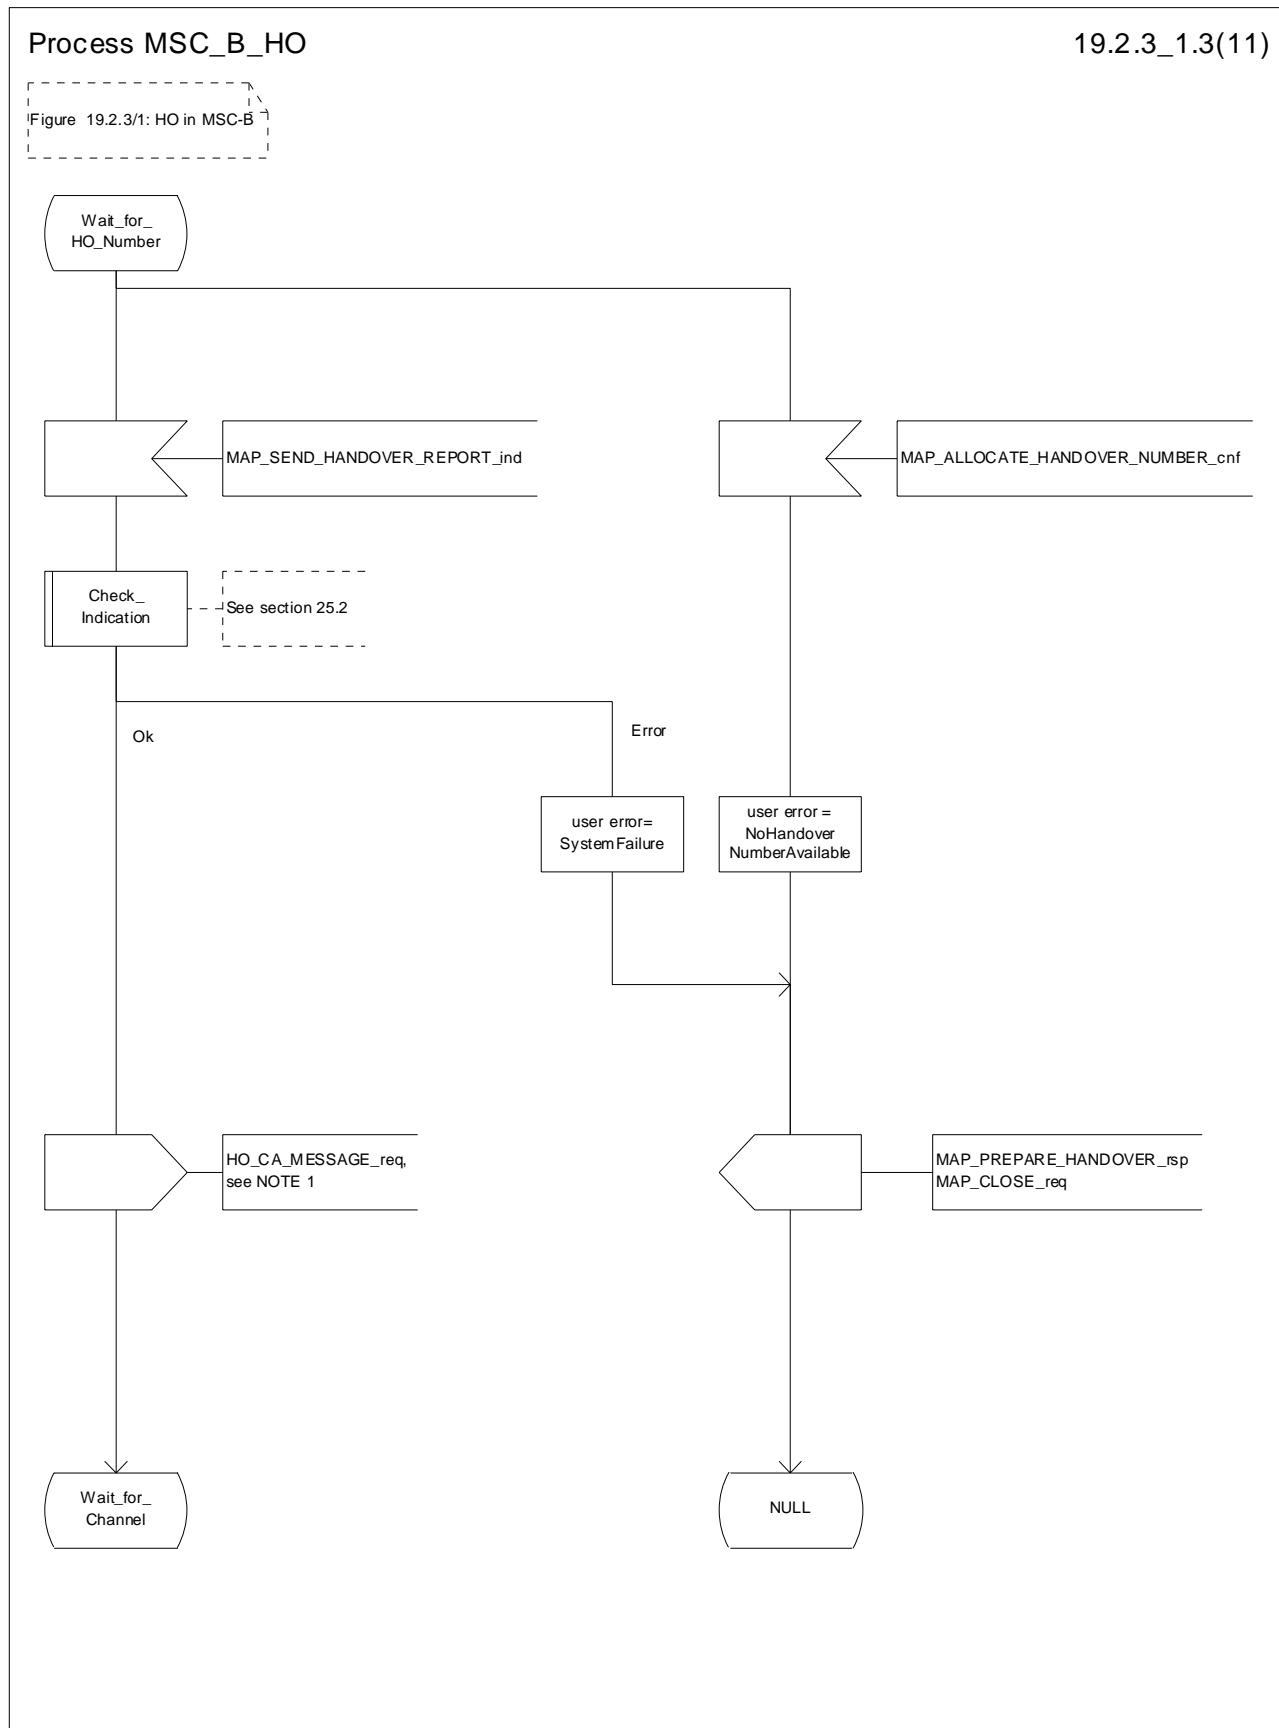


Figure 19.2.3/1 (sheet 3 of 11): Process MSC\_B\_HO

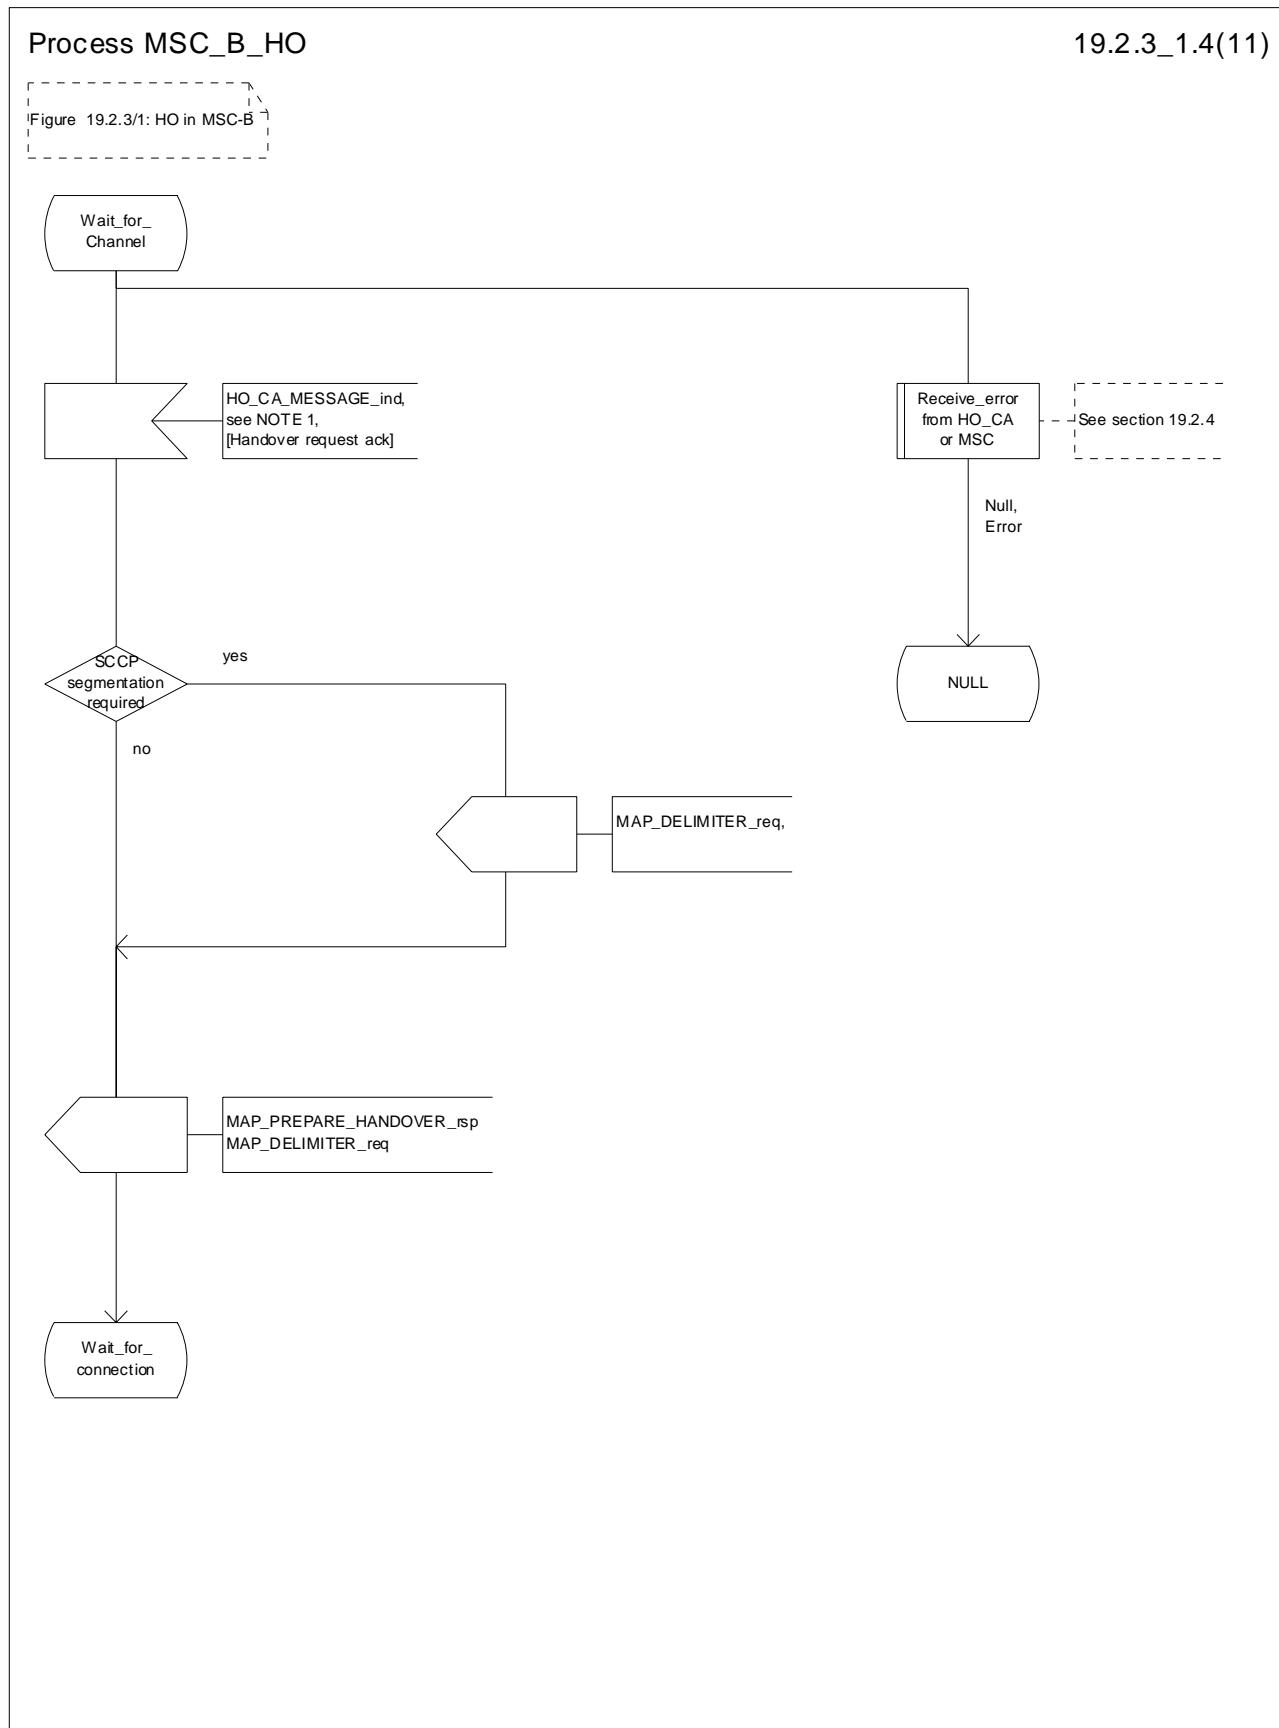


Figure 19.2.3/1 (sheet 4 of 11): Process MSC\_B\_HO

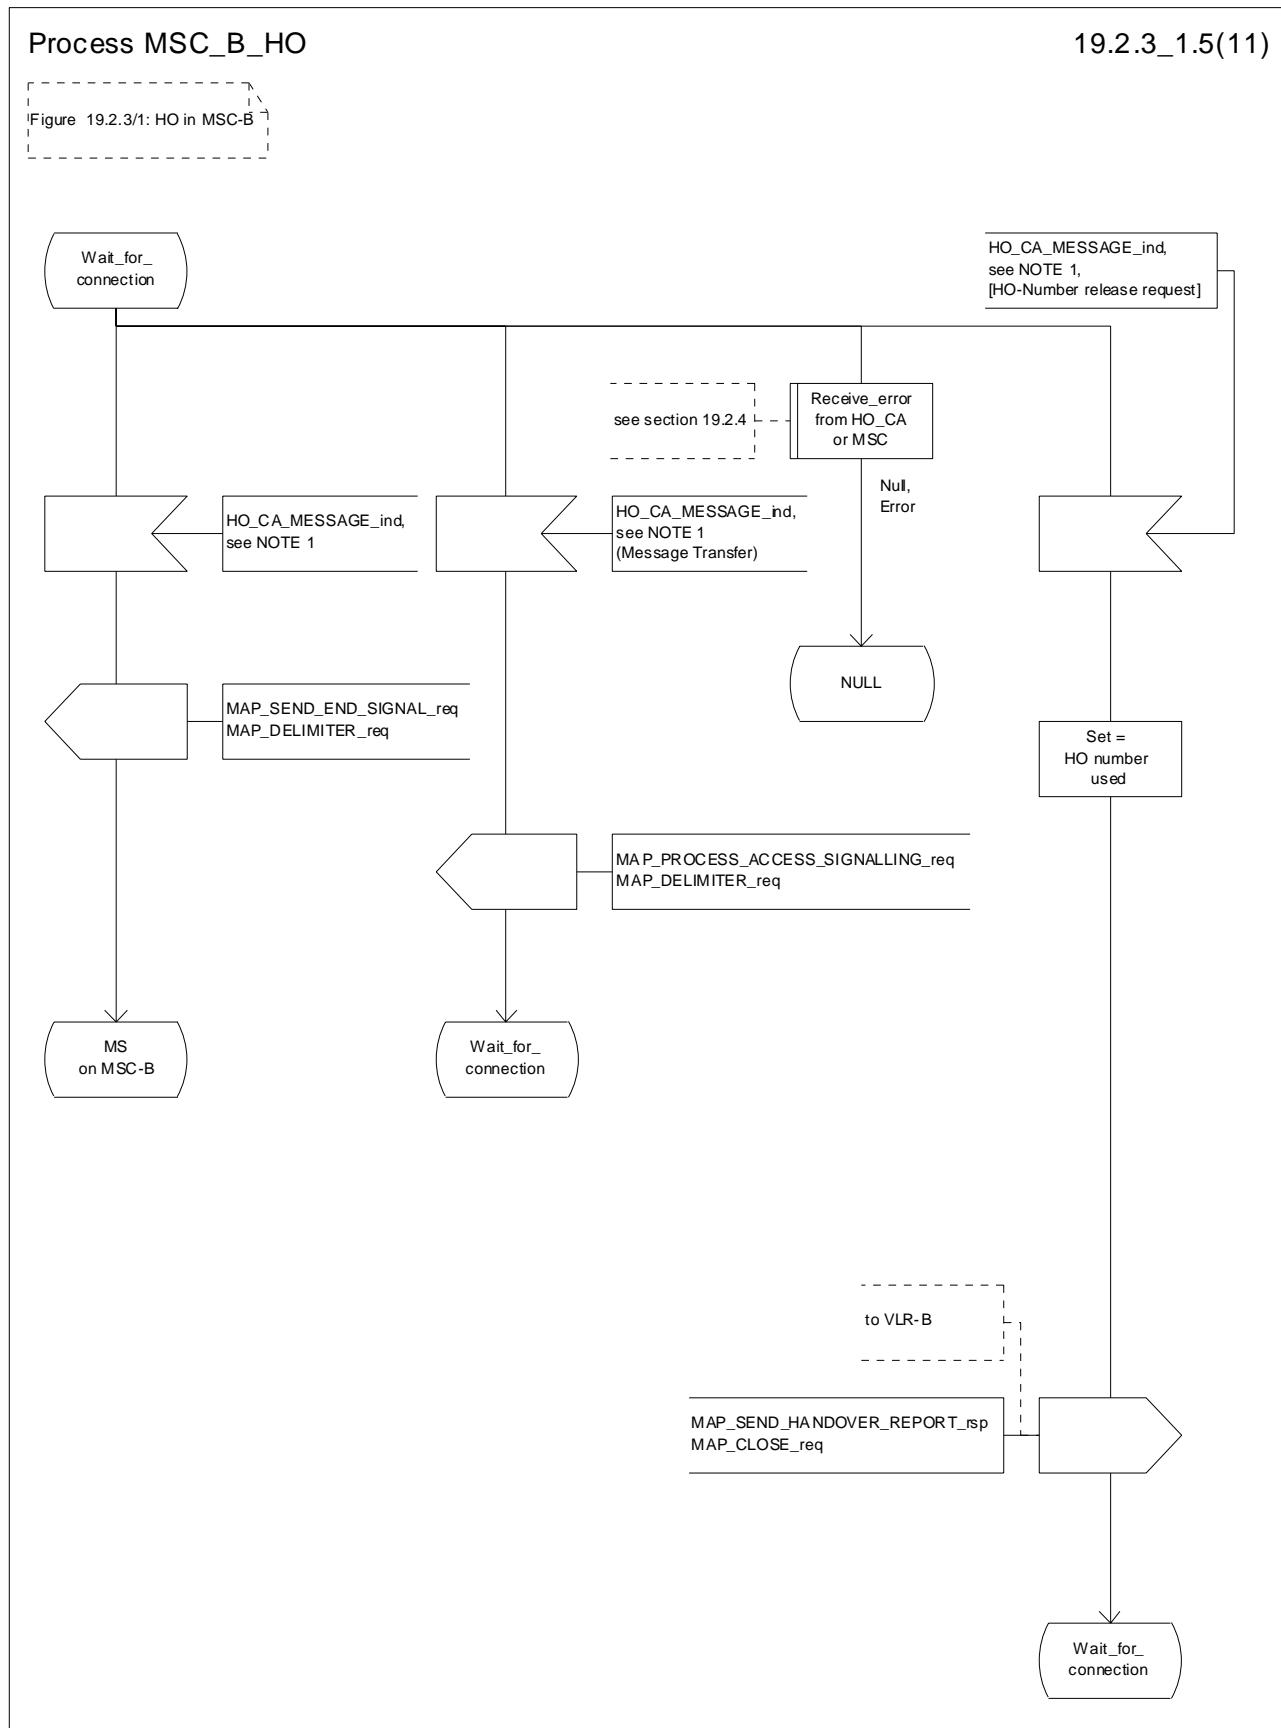


Figure 19.2.3/1 (sheet 5 of 11): Process MSC\_B\_HO

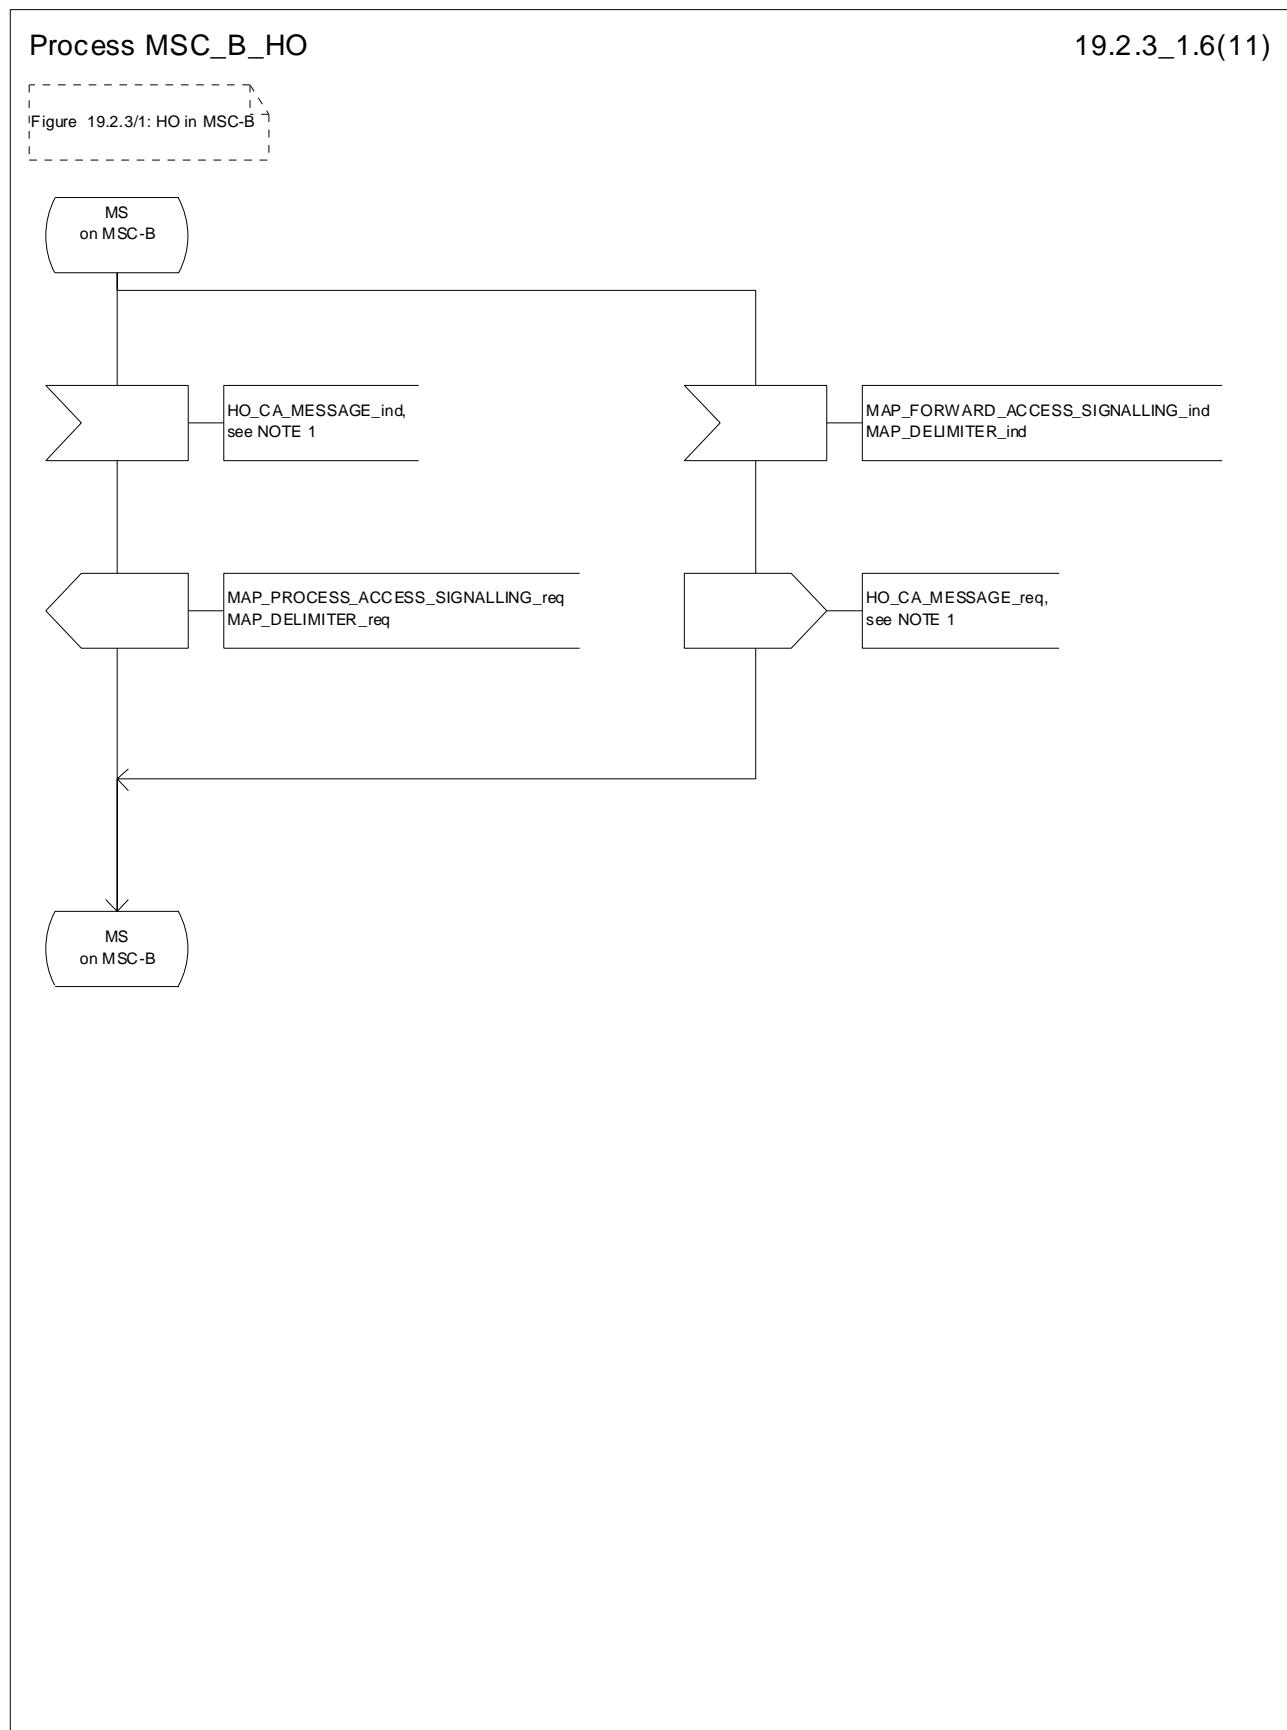


Figure 19.2.3/1 (sheet 6 of 11): Process MSC\_B\_HO

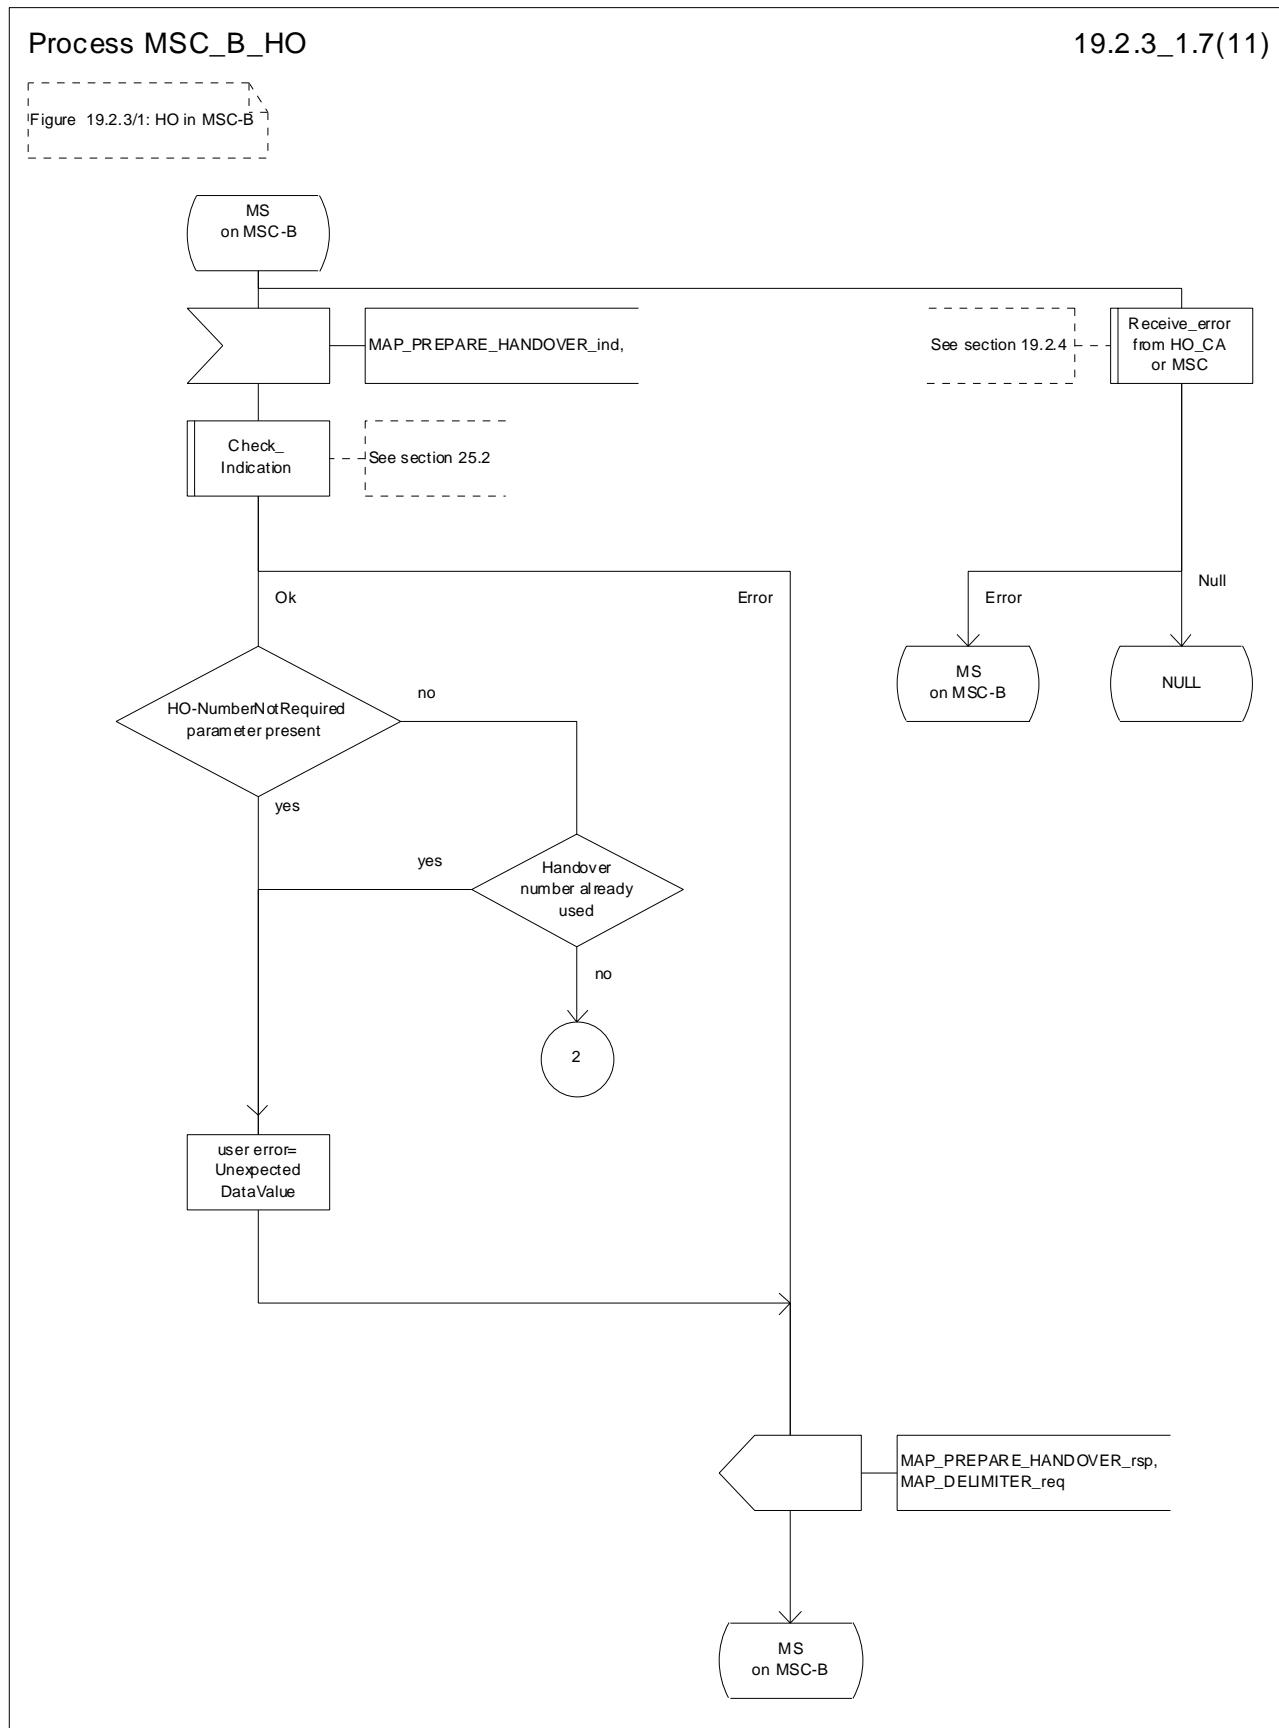


Figure 19.2.3/1 (sheet 7 of 11): Process MSC\_B\_HO

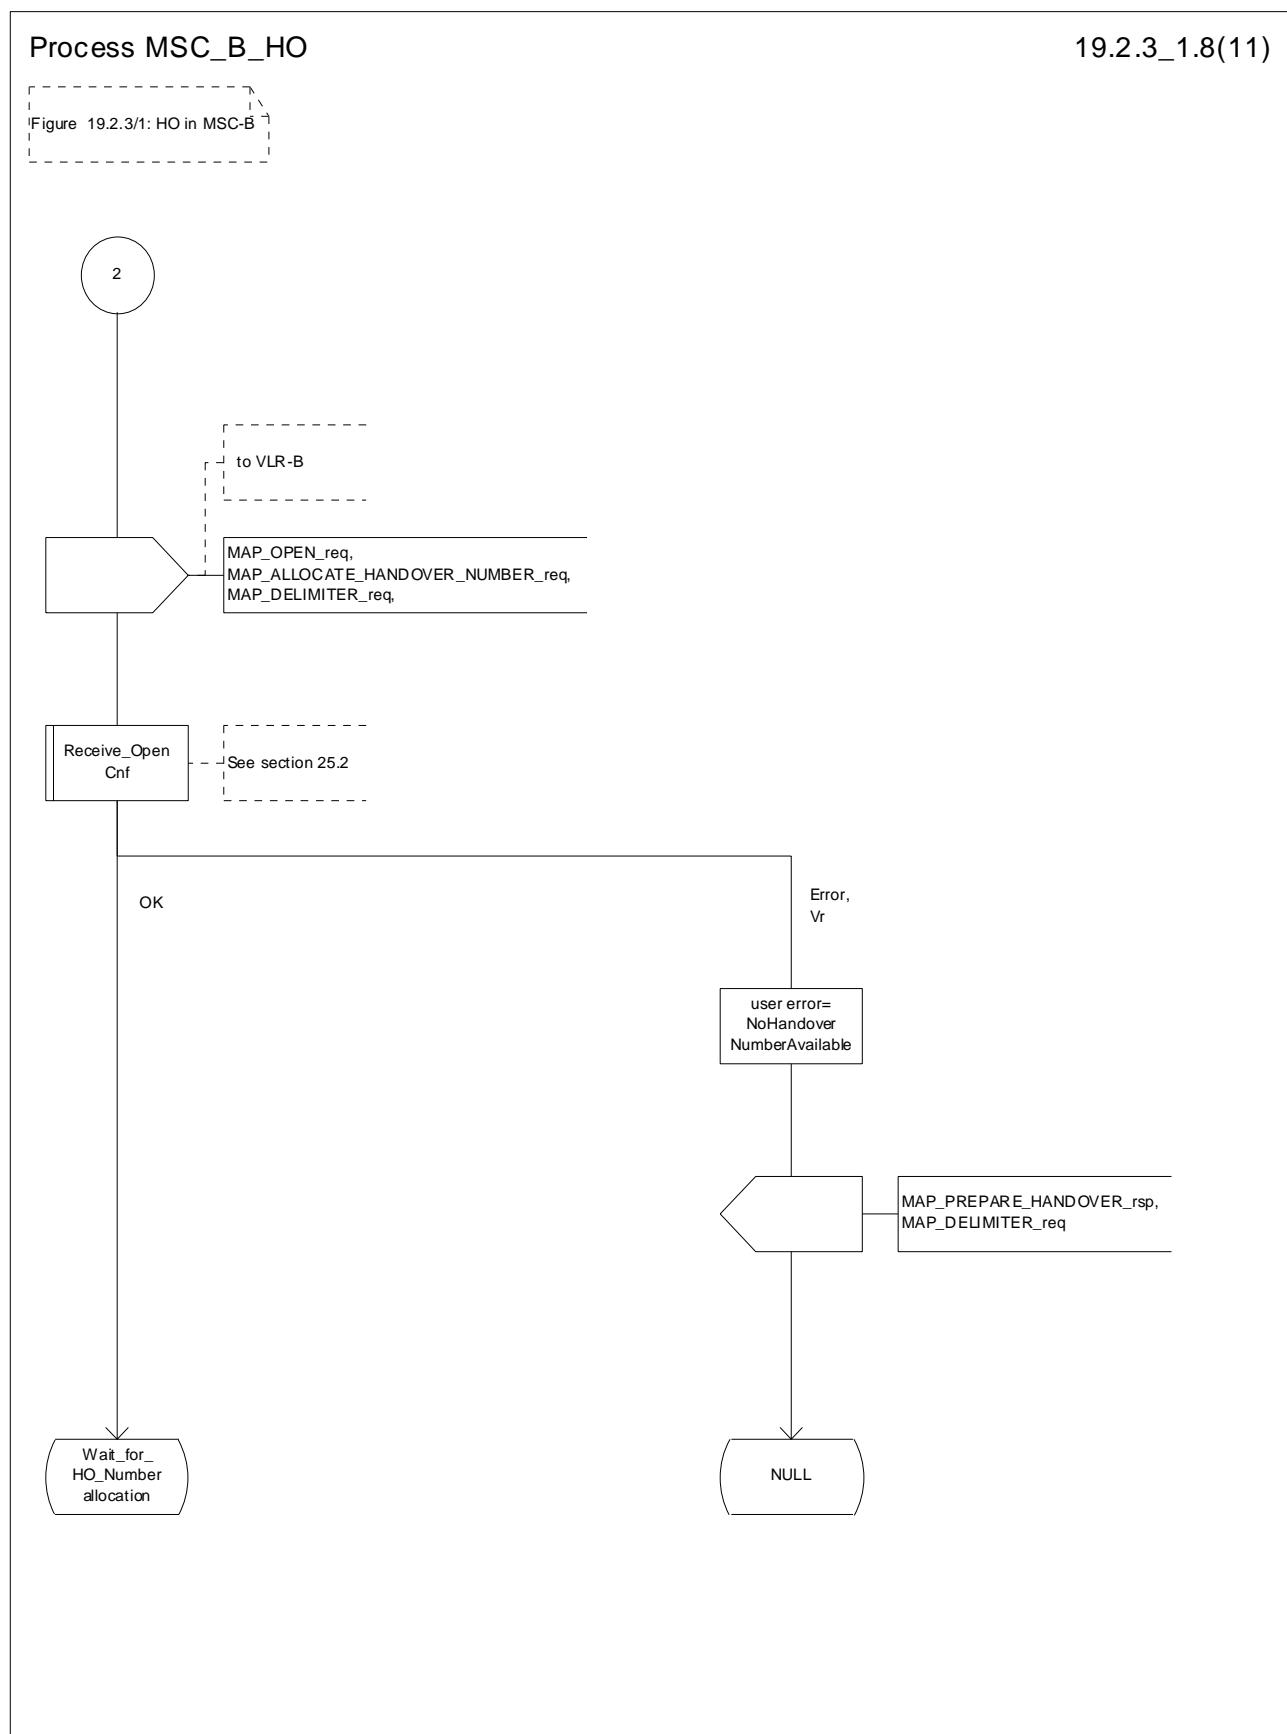


Figure 19.2.3/1 (sheet 8 of 11): Process MSC\_B\_HO

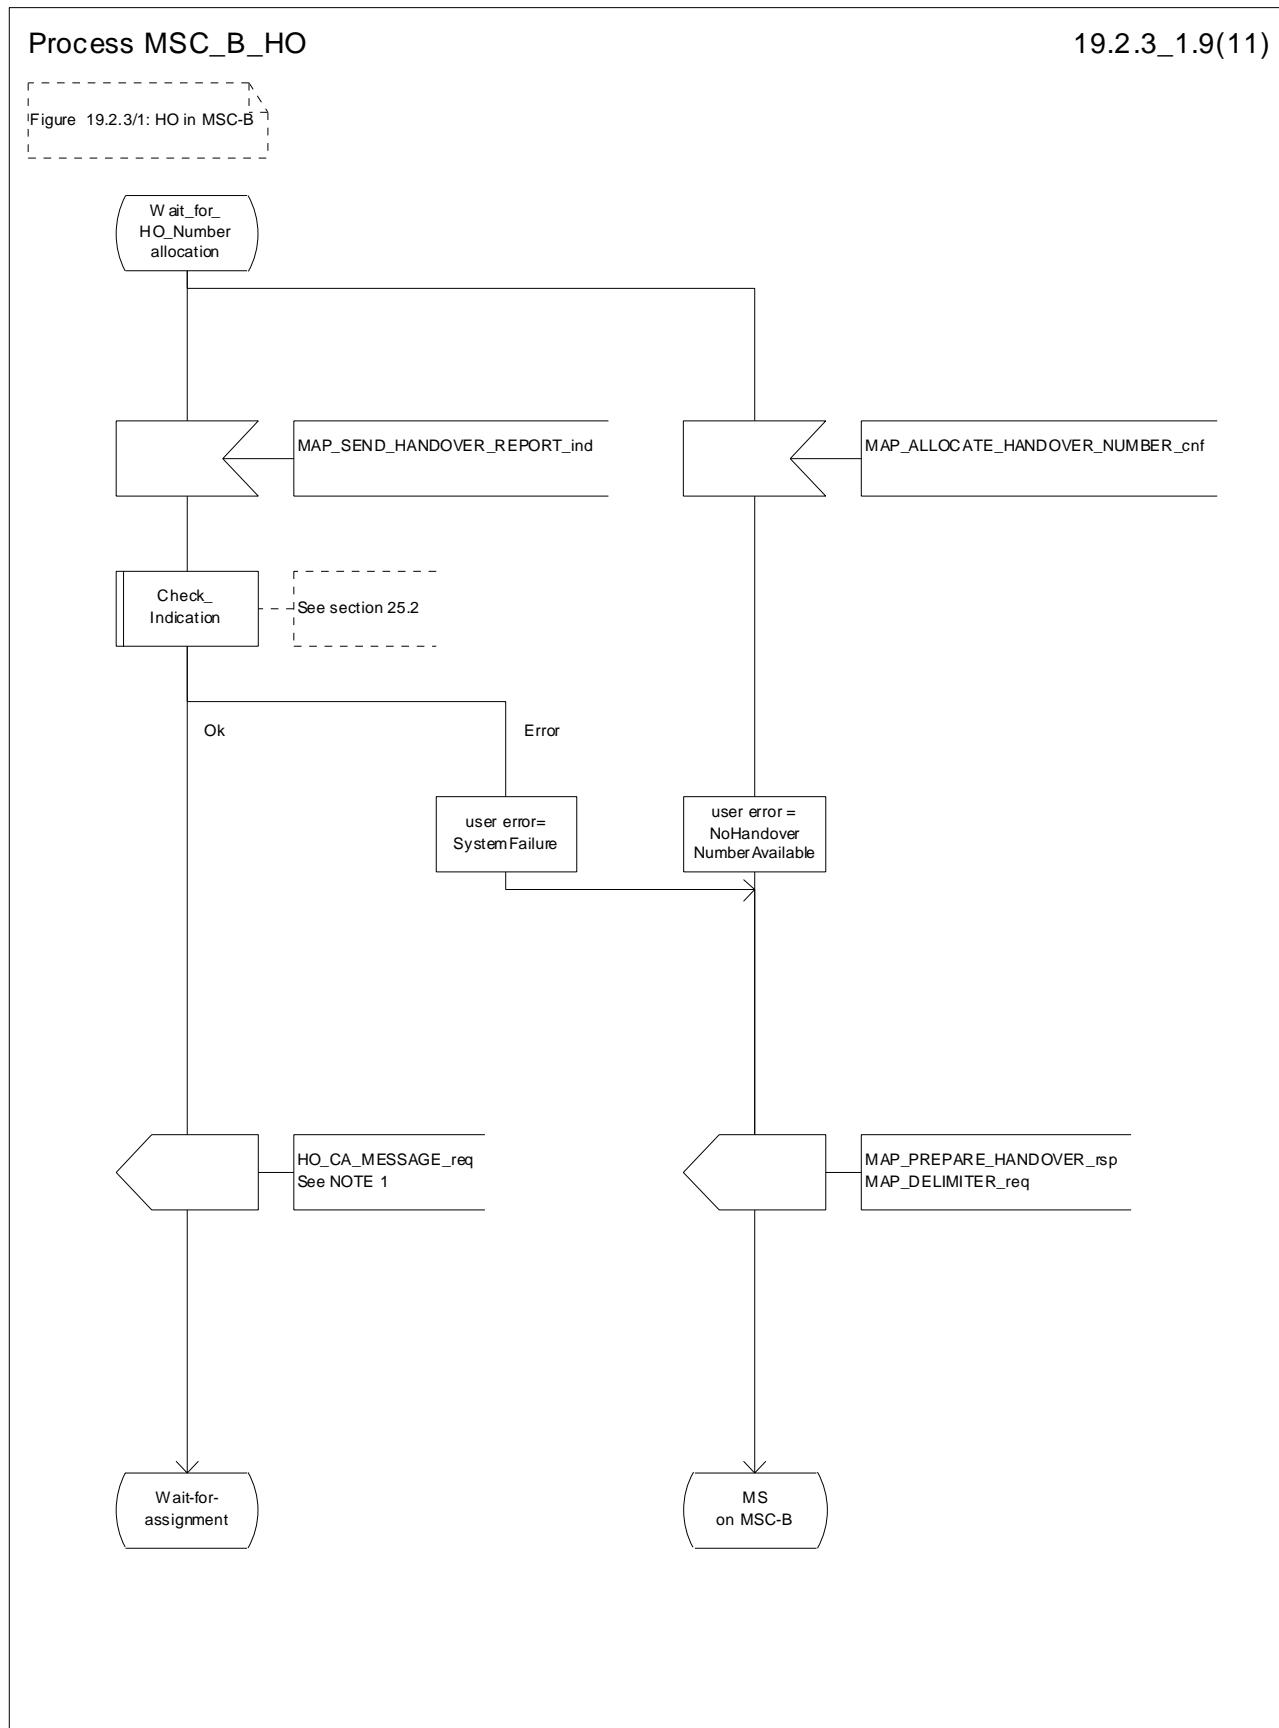


Figure 19.2.3/1 (sheet 9 of 11): Process MSC\_B\_HO

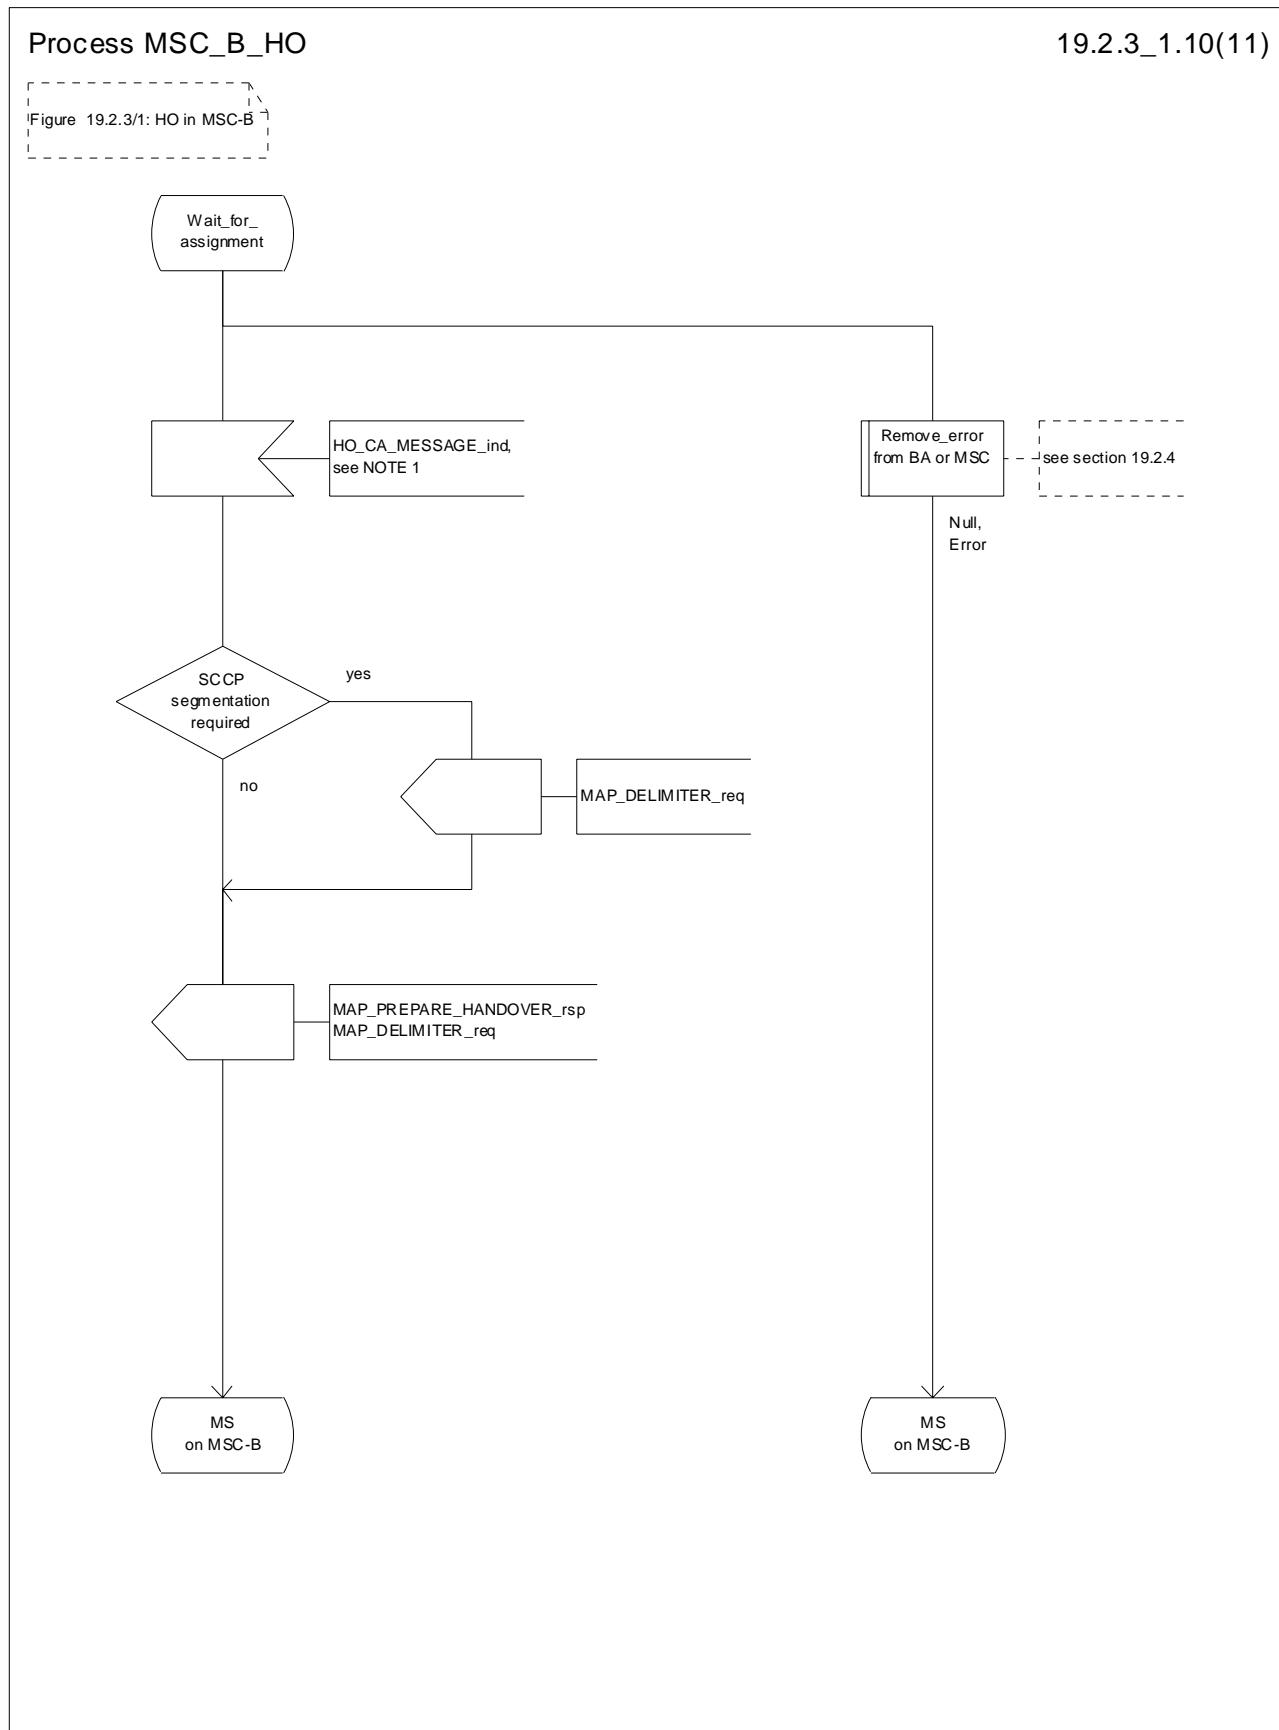


Figure 19.2.3/1 (sheet 10 of 11): Process MSC\_B\_HO

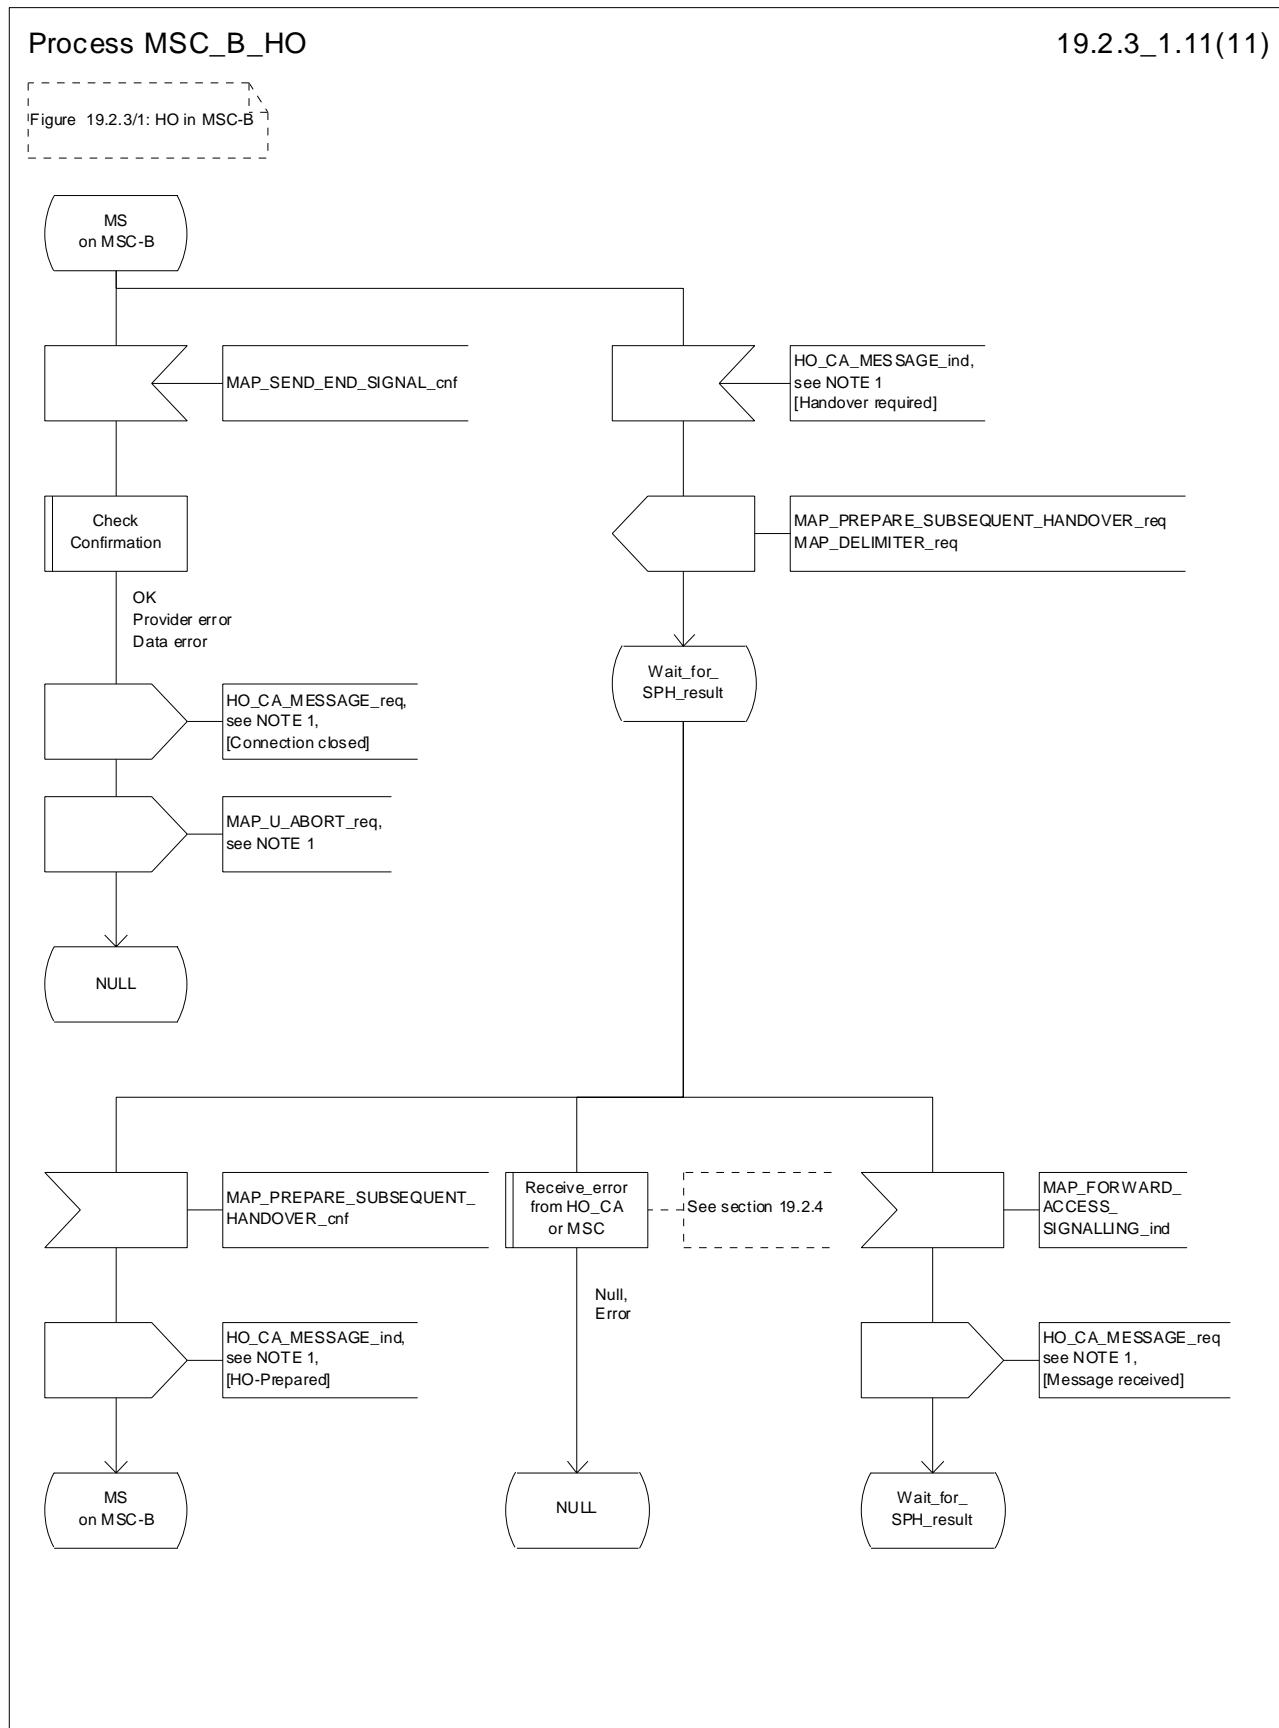


Figure 19.2.3/1 (sheet 11 of 11): Process MSC\_B\_HO

### 19.2.4 Handover error handling macro

This macro is used for the handover procedures to receive errors from the MSCs and from the Handover Control Application at any state of a handover process.

If a MAP\_NOTICE indication is received, the Handover Control Application is informed and the actual situation is kept and the Handover Control Application decides how the handover or relocation process should continue. In all other cases the MSC is returned to a "NULL" state.

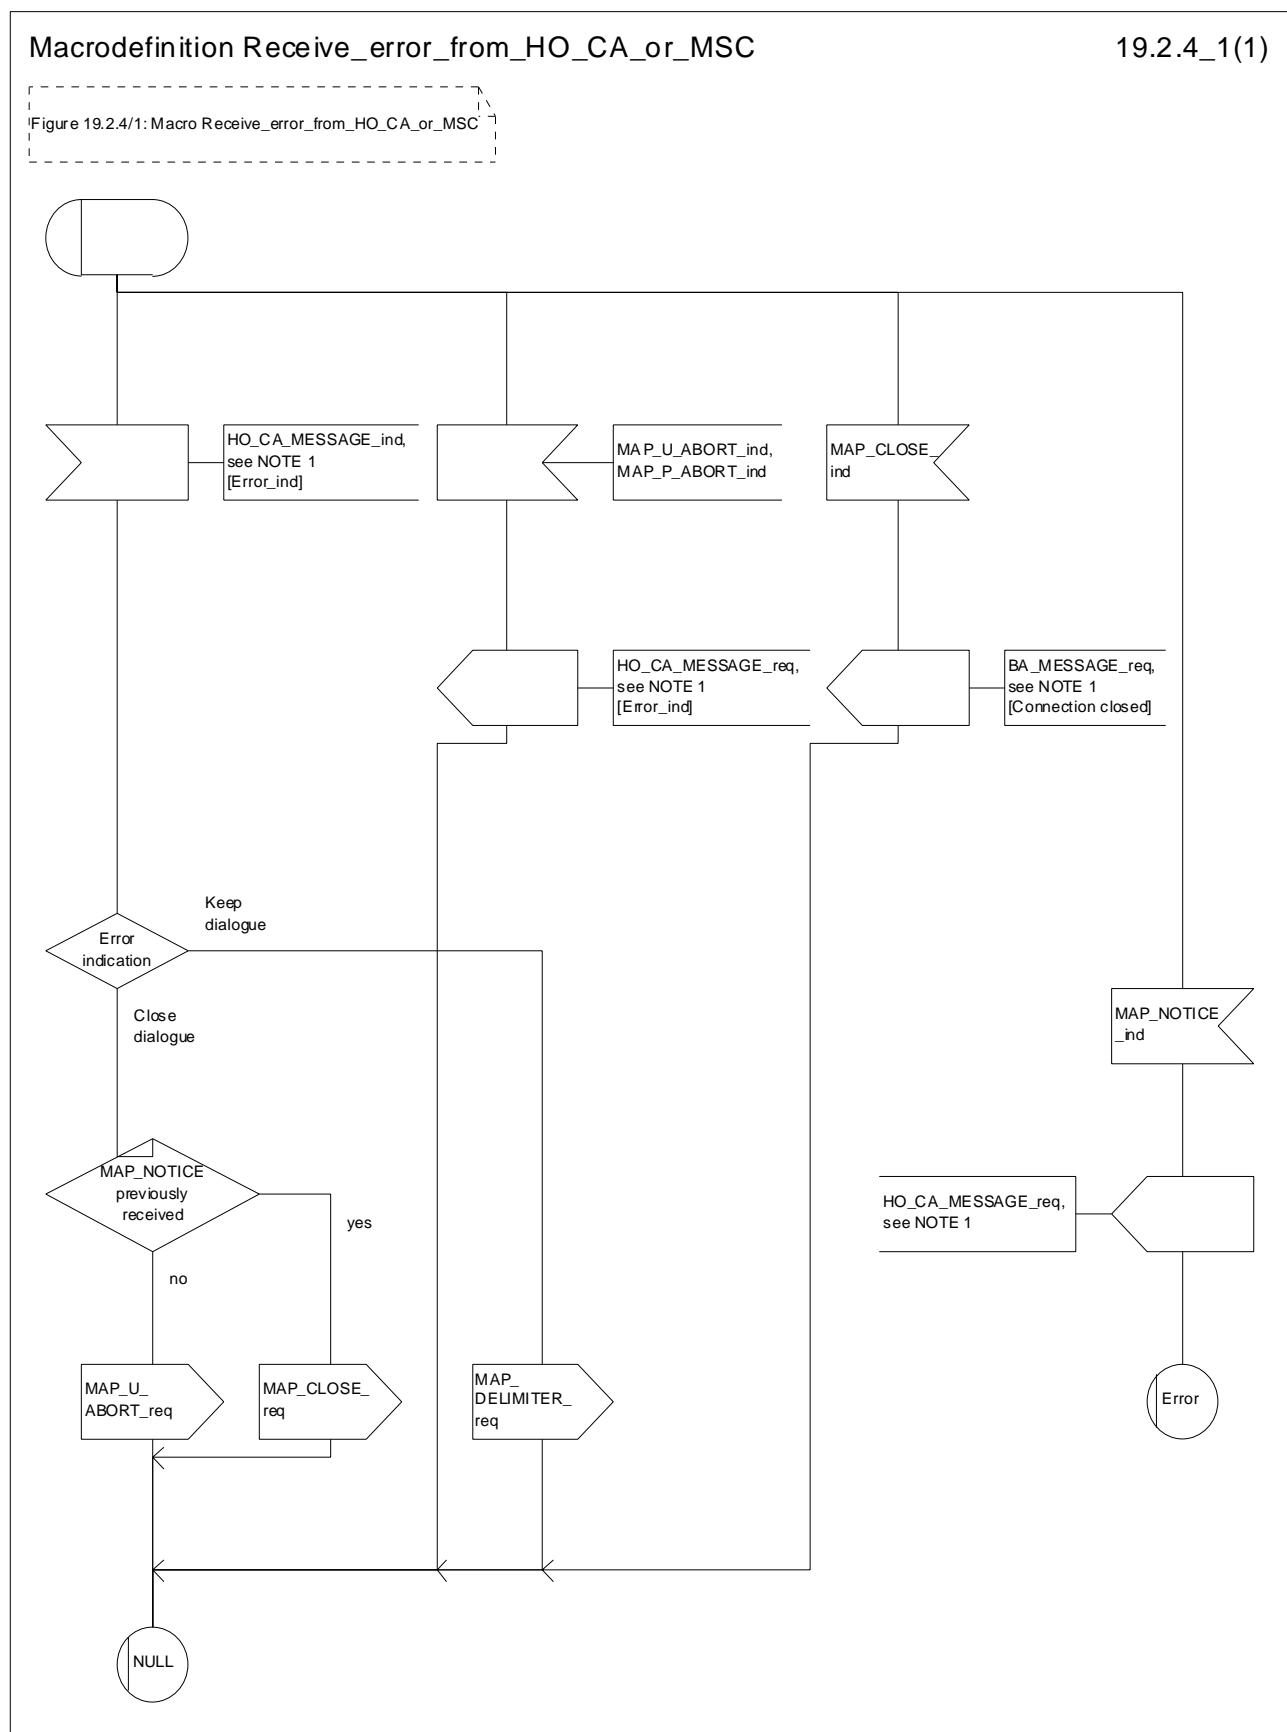


Figure 19.2.4/1: Macro Receive\_error\_from\_HO\_CA\_or\_MSC

## 19.2.5 Handover procedure in VLR

### 19.2.5.1 Allocation of handover number

When receiving the MAP\_ALLOCATE\_HANDOVER\_NUMBER indication, the VLR will determine whether a handover number is available. If no handover number is available, this will be indicated by a MAP\_ALLOCATE\_HANDOVER\_NUMBER response with the appropriate error.

The handover number allocated will otherwise be returned to MSC-B in the MAP\_SEND\_HANDOVER\_REPORT request.

The handover number will be reserved until a MAP\_SEND\_HANDOVER\_REPORT confirmation is received from MSC-B.

### 19.2.5.2 SDL Diagrams

The SDL diagrams on the following pages describe the user processes in VLR for the procedures described in this clause.

The services used are defined in clause 8.4.

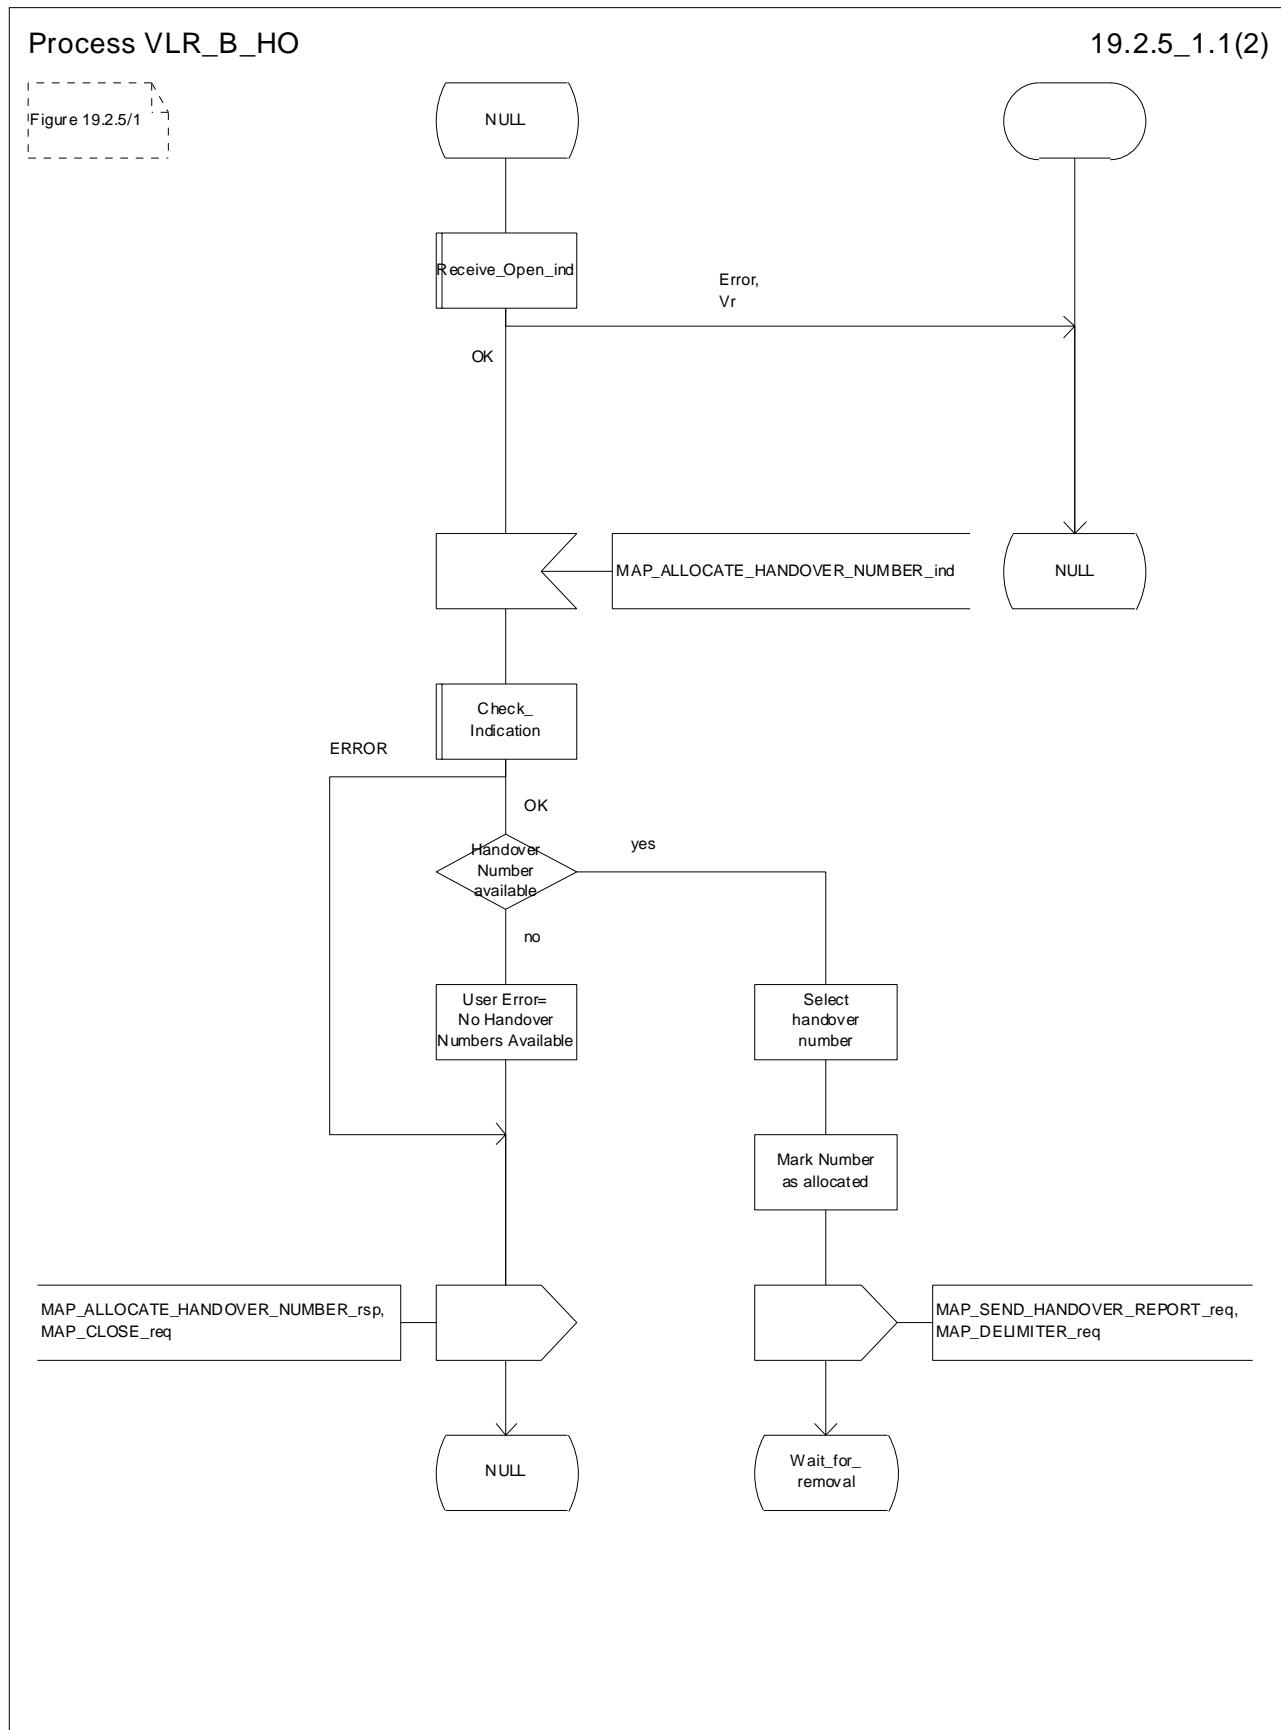


Figure 19.2.5/1 (sheet 1 of 2): Process VLR\_B\_HO

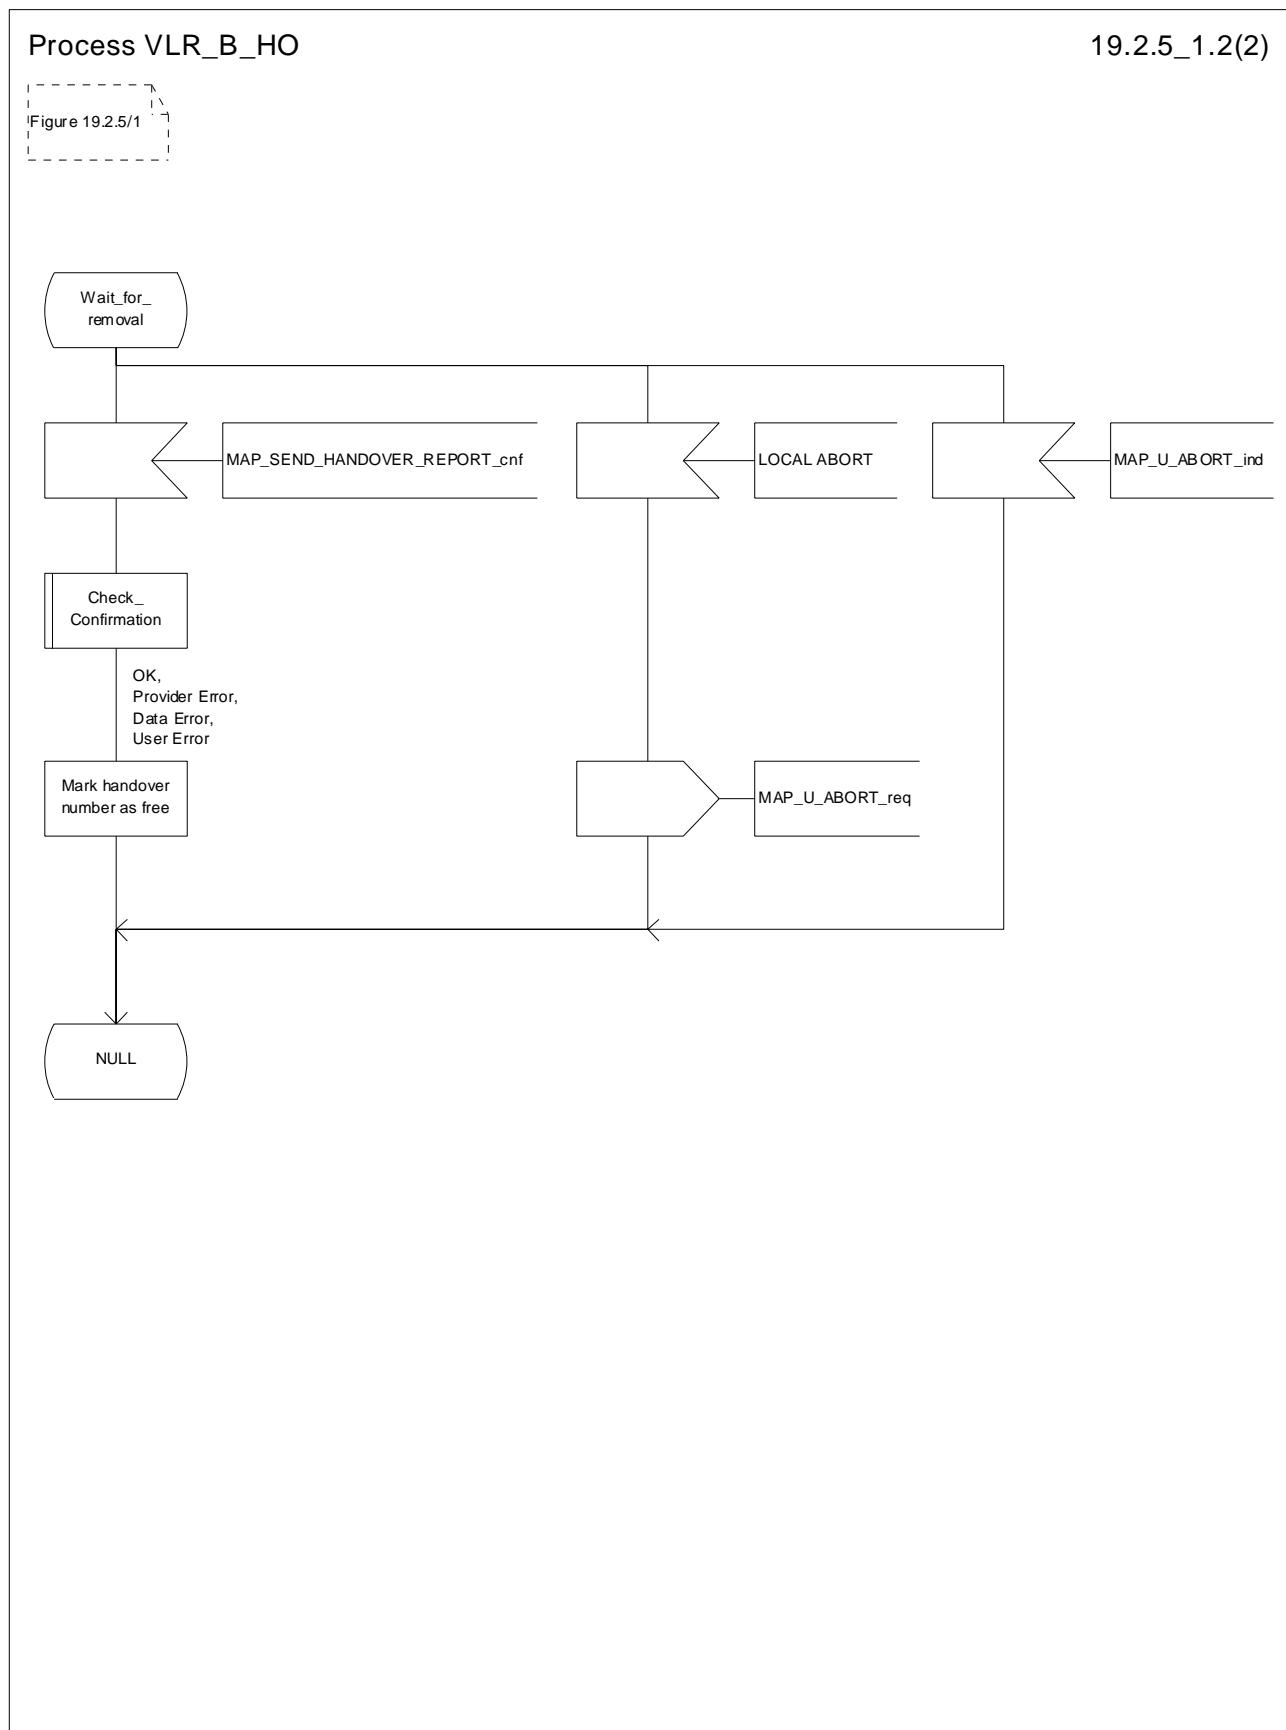


Figure 19.2.5/1 (sheet 2 of 2): Process VLR\_B\_HO

## 19.3 Fault recovery procedures

After a fault of a location register, the fault recovery procedures ensure that the subscriber data in the VLR or in the SGSN become consistent with the subscriber data that are stored in the HLR for the MS concerned and that the location information in HLR , VLR and SGSN reflect accurately the current location of the MS.

The detailed specification of fault recovery procedures of location registers is given in 3GPP TS 23.007 [19].

### 19.3.1 VLR fault recovery procedures

The following processes are involved with the restoration of one IMSI record in the VLR:

- In case of a location registration request from the MS:

Update_Location_Area_VLR	clause 19.1.1.3;
Update_Location_HLR	clause 19.1.1.4.

- In case of a mobile terminated call:

PRN_VLR	clause 21.2.4;
RESTORE_DATA_VLR	clause 21.2.4;
RESTORE_DATA_HLR	clause 19.3.3;
ICS_VLR	clause 21.3.3.

After a restart, the VLR shall erase all IMSI records affected by the failure and shall cause all affected TMSIs and all affected LMSIs to become invalid. There will be no subscriber data or location information stored for an affected MS until after the VLR has received either a MAP\_PROVIDE\_ROAMING\_NUMBER indication or a MAP\_UPDATE\_LOCATION\_AREA indication for that MS. Restoration of subscriber data in the VLR is triggered individually for each IMSI record by receipt of either of these indications.

Reception of either a MAP\_UPDATE\_LOCATION\_AREA indication or a MAP\_PROVIDE\_ROAMING\_NUMBER indication with an IMSI that is unknown in the VLR causes creation of a skeleton IMSI record that is marked as:

- not confirmed by radio contact by the indicator "Confirmed by Radio Contact" (The function of this indicator is described in 3GPP TS 23.007 [19]); and
- not confirmed by HLR by the indicator "Confirmed by HLR" (The function of this indicator is described in 3GPP TS 23.007 [19]).

A third indicator "Location Information Confirmed in HLR" is allocated to each IMSI record in the VLR (The function of this indicator is described in 3GPP TS 23.007 [19]).

The indicator "Location Information Confirmed in HLR" shall be checked whenever authenticated radio contact with an MS has been established. The status "Not Confirmed" of this indicator shall force the VLR to invoke the MAP\_UPDATE\_LOCATION service but it shall never cause rejection of a mobile originated request. The status is changed from "Not Confirmed" to "Confirmed" only after successful completion of a MAP\_UPDATE\_LOCATION procedure for the MS concerned.

If the VLR serves only one MSC, the indicator "Location Information Confirmed in HLR" is only relevant to the HLR restoration procedure and an initial value must be assigned when an IMSI record is created in the VLR:

- if the IMSI record was created due to a roaming number request, the initial value must be set to "Confirmed";
- if reception of a MAP\_UPDATE\_LOCATION\_AREA indication causes creation of the IMSI record, the initial value must be "Not Confirmed".

If the VLR serves more than one MSC, the indicator "Location Information Confirmed in HLR" is used in the VLR restoration procedure as well as in the HLR restoration procedure. When an IMSI record is created in the VLR, the indicator must be set to "Not Confirmed".

### **VLR restoration triggered by a location registration request**

Upon receipt of a MAP\_UPDATE\_LOCATION\_AREA indication, the VLR retrieves authentication data from the HLR by using the MAP\_SEND\_AUTHENTICATION\_INFO service if authentication is required and if no authentication data are available in the VLR for the IMSI concerned (see figure 19.1.1/6).

Receipt of a MAP\_UPDATE\_LOCATION\_AREA indication for an MS whose IMSI is unknown in the VLR or whose data stored in the VLR are marked as "Not Confirmed" by the indicator "Confirmed by HLR" and/or by the indicator "Location Information Confirmed in HLR" forces the VLR to invoke the MAP\_UPDATE\_LOCATION service after successful authentication, if required. The location updating procedure is performed as described in clause 19.1.

Any other mobile originated request from an MS whose IMSI is unknown in the VLR or whose subscriber data stored in the VLR are marked as "Not Confirmed" by the indicator "Confirmed by HLR" shall be rejected with error cause "Unidentified Subscriber". This causes the MS to trigger the location registration procedure.

After successful completion of the MAP\_UPDATE\_LOCATION procedure, the indicators "Confirmed by HLR" and "Location Information Confirmed in HLR" are set to "Confirmed".

The indicator "Confirmed by Radio Contact" is set to "Confirmed" when the radio contact with the MS is authenticated.

### **VLR restoration triggered by a roaming number request**

Figure 19.3/1 illustrates the signalling sequence for restoration of an IMSI record in the VLR triggered by a mobile terminating call set-up.

Upon receipt of a MAP\_PROVIDE\_ROAMING\_NUMBER indication for an IMSI that is unknown in the VLR and for which authentication is required, the VLR retrieves authentication data from the HLR by using the MAP\_SEND\_AUTHENTICATION\_INFO service after an MSRN has been sent to the HLR in the MAP\_PROVIDE\_ROAMING\_NUMBER response.

Receipt of a MAP\_PROVIDE\_ROAMING\_NUMBER indication for an MS whose IMSI is unknown in the VLR or whose data record in the VLR is marked as "Not Confirmed" by the indicator "Confirmed by HLR" forces the VLR to request subscriber data from the HLR by sending a MAP\_RESTORE\_DATA request which triggers one or more INSERT\_SUBSCRIBER\_DATA operations from the HLR. The MAP\_RESTORE\_DATA request may also be used to send the LMSI to the HLR.

The MAP\_RESTORE\_DATA process in the VLR is described in clause 21.2.4.


The MAP\_RESTORE\_DATA process in the HLR is described in clause 19.3.3.

After successful completion of the MAP\_RESTORE\_DATA procedure, the indicator "Confirmed by HLR" is set to "Confirmed".

If restoration of an IMSI record was triggered by a MAP\_PROVIDE\_ROAMING\_NUMBER indication (i.e. by a mobile terminating call), the VLR has no valid Location Area Identity information for the MS concerned before successful establishment of the first authenticated radio contact. Upon receipt of a MAP\_SEND\_INFO\_FOR\_INCOMING\_CALL indication from the MSC (see 5 in figure 19.3/1) for an MS whose subscriber data are marked as "Confirmed" by the indicator "Confirmed by HLR" but not confirmed by radio contact, the VLR shall invoke a "MAP\_SEARCH\_FOR\_MS" instead of a "MAP\_PAGE".

A MAP\_SEARCH\_FOR\_MS shall also be performed if the VLR receives a MAP\_SEND\_INFO\_FOR\_MT\_SMS indication from the MSC for an MS whose IMSI record is marked as "Confirmed" by the indicator "Confirmed by HLR" but not confirmed by radio contact.

The indicator "Confirmed by Radio Contact" is set to "Confirmed" when authenticated radio contact caused by a mobile originated or a mobile terminated activity is established.

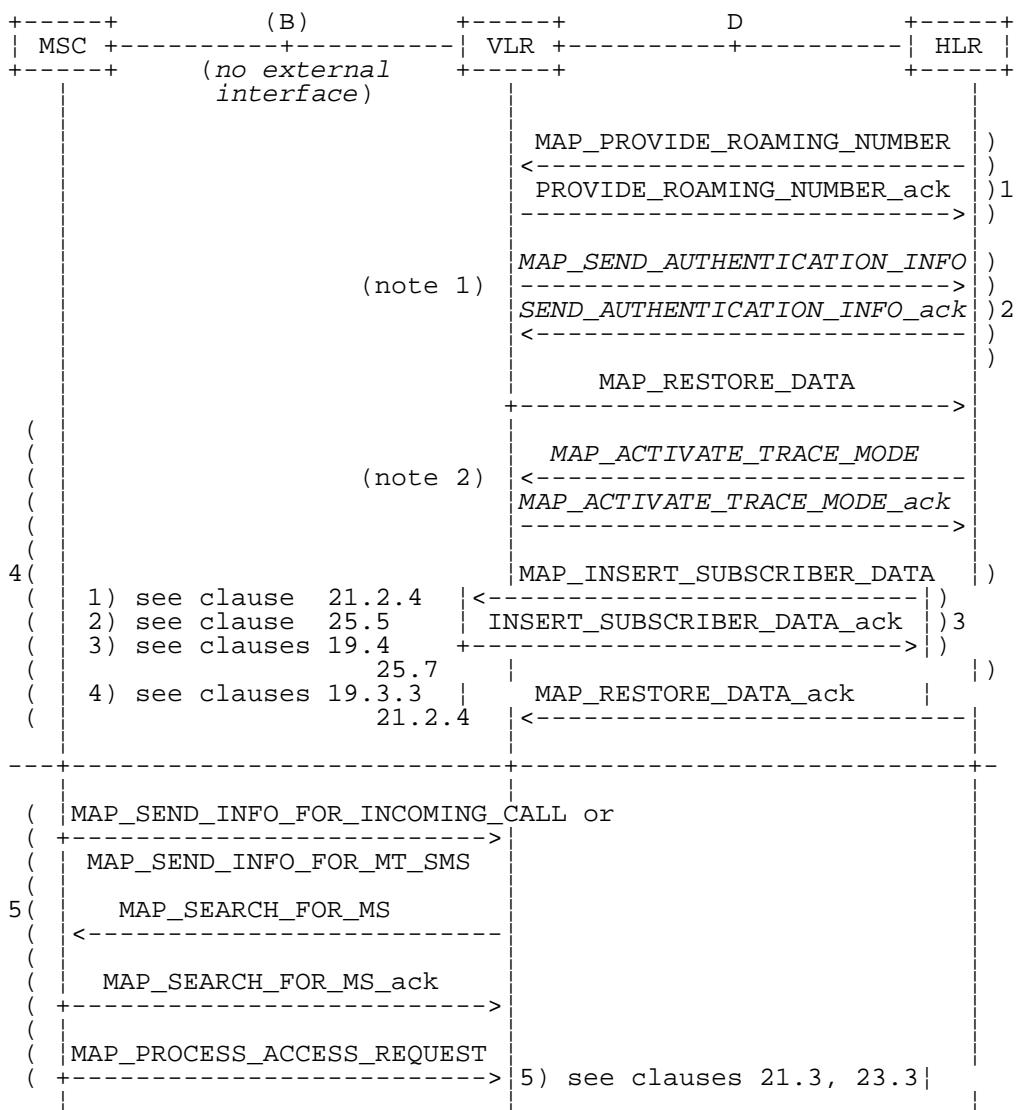

**Figure 19.3/1: Procedures related to restoration of VLR in case of mobile terminated call set-up**

### 19.3.2 HLR fault recovery procedures

The following processes are involved with the restart of the HLR:

- HLR\_RESTART clause 19.3.2;
- REC\_RESET\_IN\_VLR clause 19.3.2;
- REC\_RESET\_IN\_SGSN clause 19.3.2.

In the case of a location registration request from the MS, the following processes are involved with the HLR restoration procedure:

- Update\_Location\_Area\_VLR clause 19.1.1.3;
- Update\_Location\_HLR clause 19.1.1.4;
- Update\_GPRS\_Location\_HLR clause 19.1.1.4;
- GPRS\_Update\_Location\_Area\_VLR clause 19.1.1.3;

- SGSN\_Update\_HLR clause 19.1.1.8.

In the case of a mobile originated service request, the

- Macro Process\_Access\_Request\_VLR clause 25.4.2; and the
- Process Update\_Location\_HLR clause 19.1.1.4,

are involved with the HLR restoration procedure.

For the HLR, periodic back-up of data to non-volatile memory is mandatory.

Data that have been changed in the period of time after the last back-up storage and before the restart of the HLR cannot be recovered by reload from the non-volatile memory. Therefore, a restoration procedure is triggered individually for each IMSI record that has been affected by the HLR fault at the first authenticated radio contact that is established with the MS concerned.

The HLR restoration procedure forces updating of MSC number, VLR number, SGSN number and, if provided by the VLR, LMSI in the HLR. Consistency of subscriber data that are stored in the VLR or in the SGSN for an MS that has been affected by a HLR fault with the subscriber data stored in the HLR for this MS will be achieved.

As an implementation option, a notification can be forwarded to the MS to alert the subscriber to check the parameters for supplementary services that allow subscriber controlled input (MAP\_FORWARD\_CHECK\_SS\_INDICATION service). If the VLR receives this notification from the HLR it shall forward the notification to the MS. If the Gs-interface is present the VLR shall not forward this notification.

Figures 19.3/2 and 19.3/9 illustrates the signalling sequence for HLR restoration.

After a restart, the home location register performs the following actions for the subscriber data records that have been affected by the HLR fault (see figure 19.3/3):

- reload all data from the non-volatile back-up;
- if the MAP\_FORWARD\_CHECK\_SS\_INDICATION service is implemented, mark each subscriber record "SS Check Required" by setting the "Check SS" indicator;
- set subscriber tracing deactive in the VLR for each of its MSS;
- reset the "MS Purged" flag for each of its MSS;
- send a MAP\_RESET request to the VLRs where its MSSs are located (see figure 19.3/4).
- send a MAP\_RESET request to the SGSNs where its MSSs are located (see figure 19.3/7).

The MAP\_RESET request contains the HLR number and optionally the HLR Identity List.

When receiving a MAP\_RESET indication, the VLR or the SGSN will derive all involved MSSs of that HLR either from the HLR Identity List (if present), or from the HLR number. The VLR or the SGSN will then mark these MSSs with the indicator "Location Information Confirmed in HLR" set to "Not Confirmed" and will deactivate all subscriber tracings for these MSS (see figures 19.3/5 and 19.3/8).

The status "Not Confirmed" of the indicator "Location Information Confirmed in HLR" forces the VLR to invoke the MAP\_UPDATE\_LOCATION service after establishment of authenticated radio contact with the MS concerned.


Also the status "Not Confirmed" of the indicator "Location Information Confirmed in HLR" forces the SGSN to invoke the MAP\_UPDATE\_GPRS\_LOCATION service after establishment of authenticated radio contact with the MS concerned.

The MAP\_UPDATE\_LOCATION procedure is performed as described in clause 19.1.


After receipt of the MAP\_UPDATE\_LOCATION or the MAP\_UPDATE\_GPRS\_LOCATION acknowledgement containing the HLR number, the status of the indicator "Location Information Confirmed in HLR" is changed to "Confirmed".

If the MAP\_UPDATE\_LOCATION procedure is unsuccessful for any reason, the status of the indicator "Location Information Confirmed in HLR" remains unchanged except for the case that the IMSI record in the VLR is deleted because either of the errors "Unknown Subscriber" or "Roaming Not Allowed" has been received from the HLR in response to a MAP\_UPDATE\_LOCATION request.

If the MAP\_UPDATE\_GPRS\_LOCATION procedure is unsuccessful for any reason, the status of the indicator "Location Information Confirmed in HLR" remains unchanged except for the case that the IMSI record in the SGSN is deleted because either of the errors "Unknown Subscriber" or "Roaming Not Allowed" has been received from the HLR in response to a MAP\_UPDATE\_GPRS\_LOCATION request.

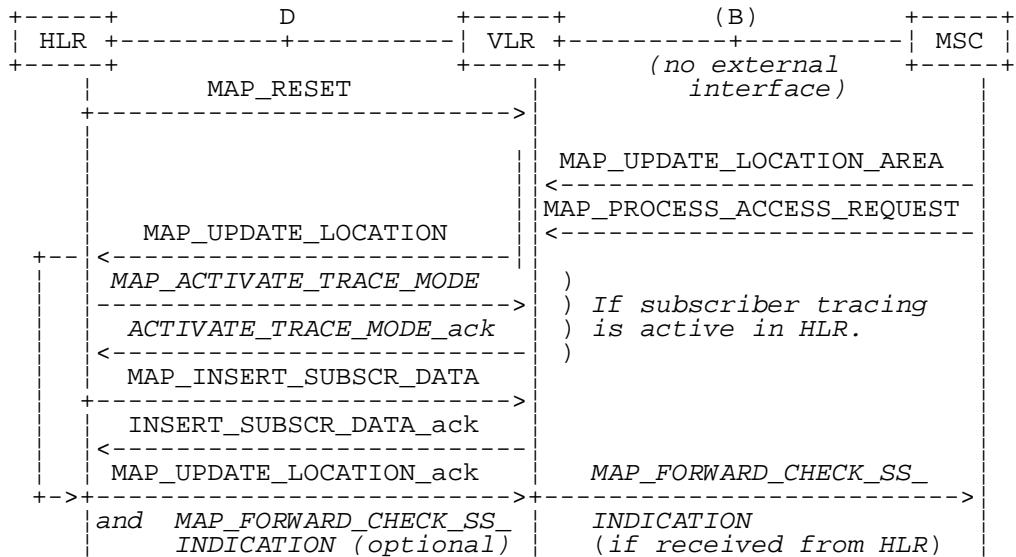

**Figure 19.3/2: Procedures related to restoration of HLR**

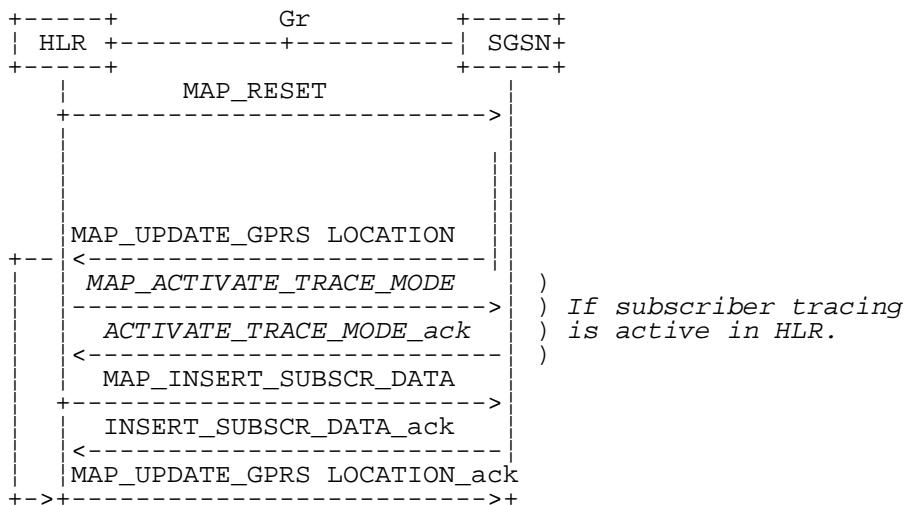

**Figure 19.3/9: Procedures related to restoration of HLR for GPRS**

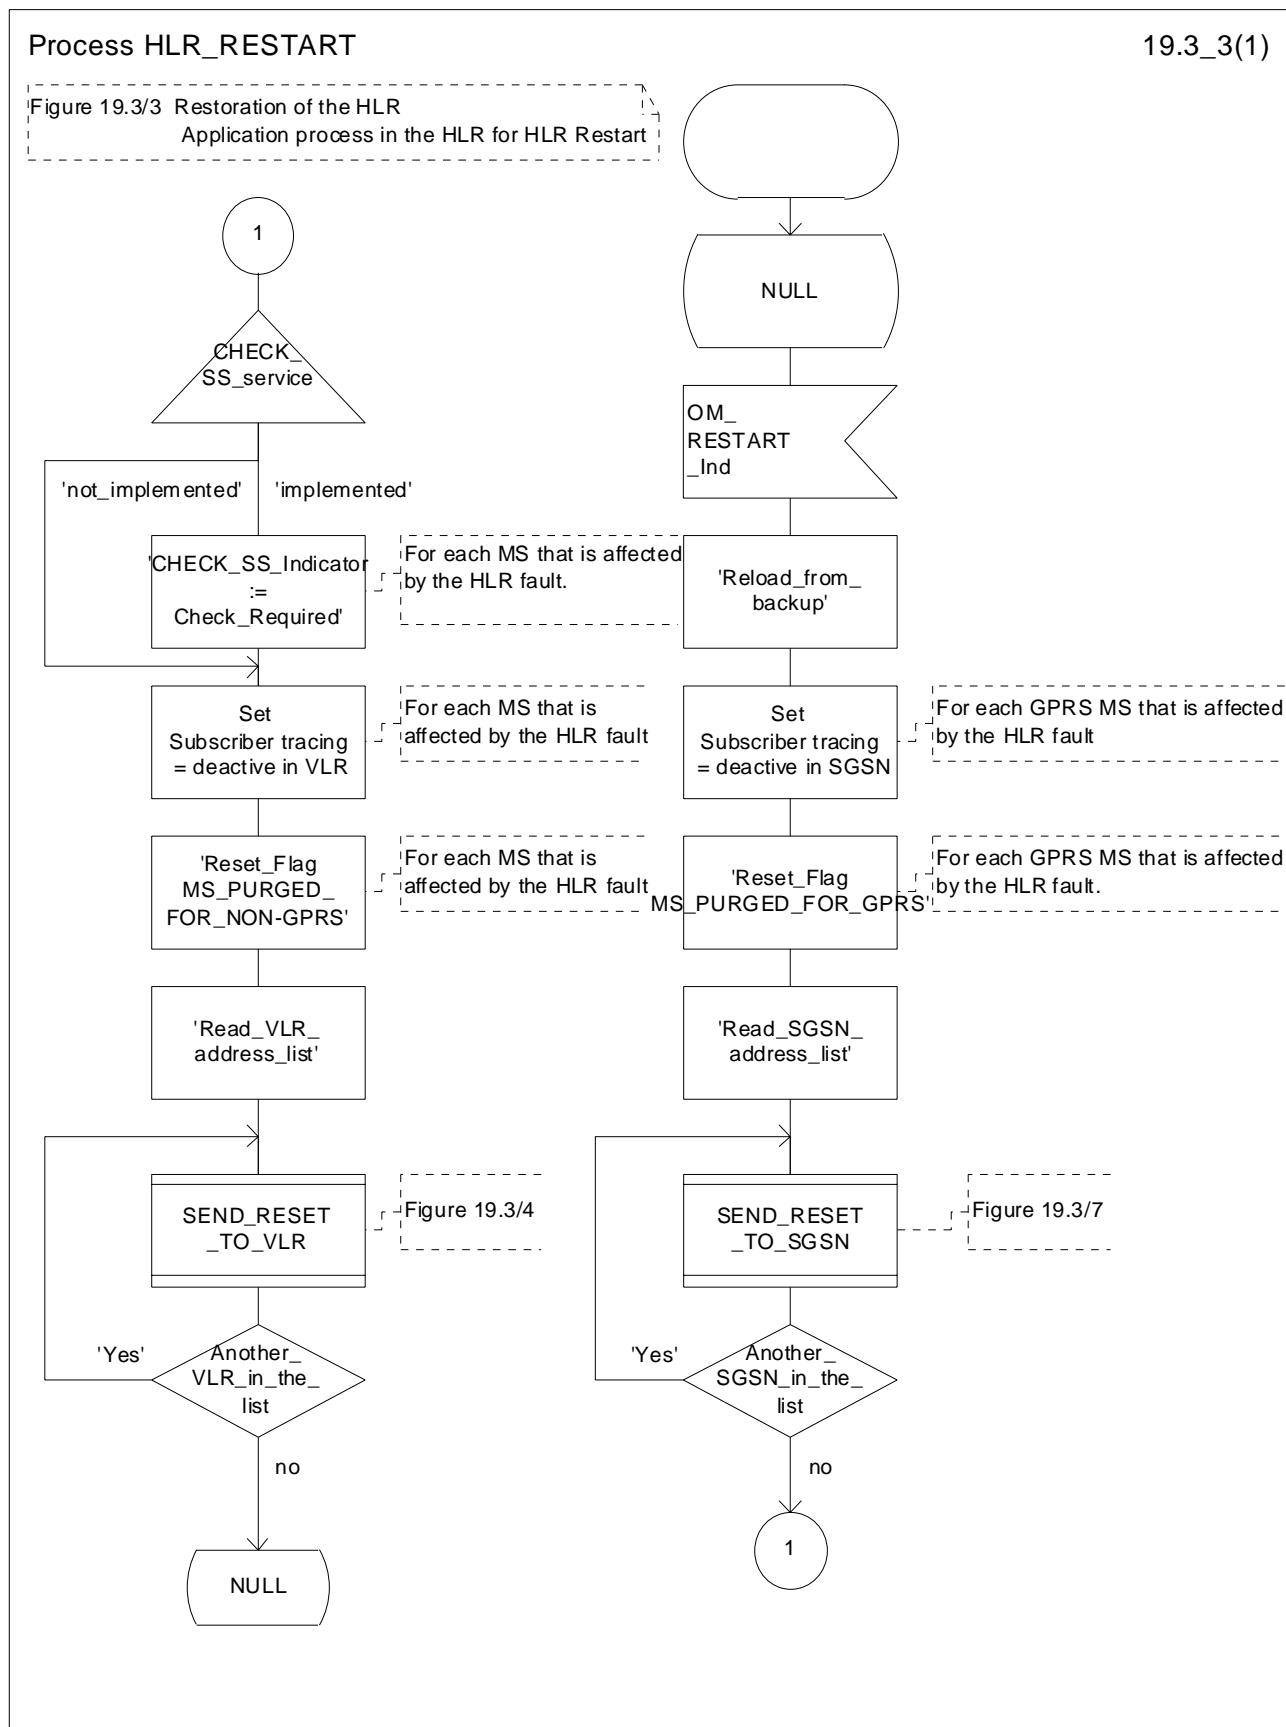


Figure 19.3/3: Process HLR\_RESTART

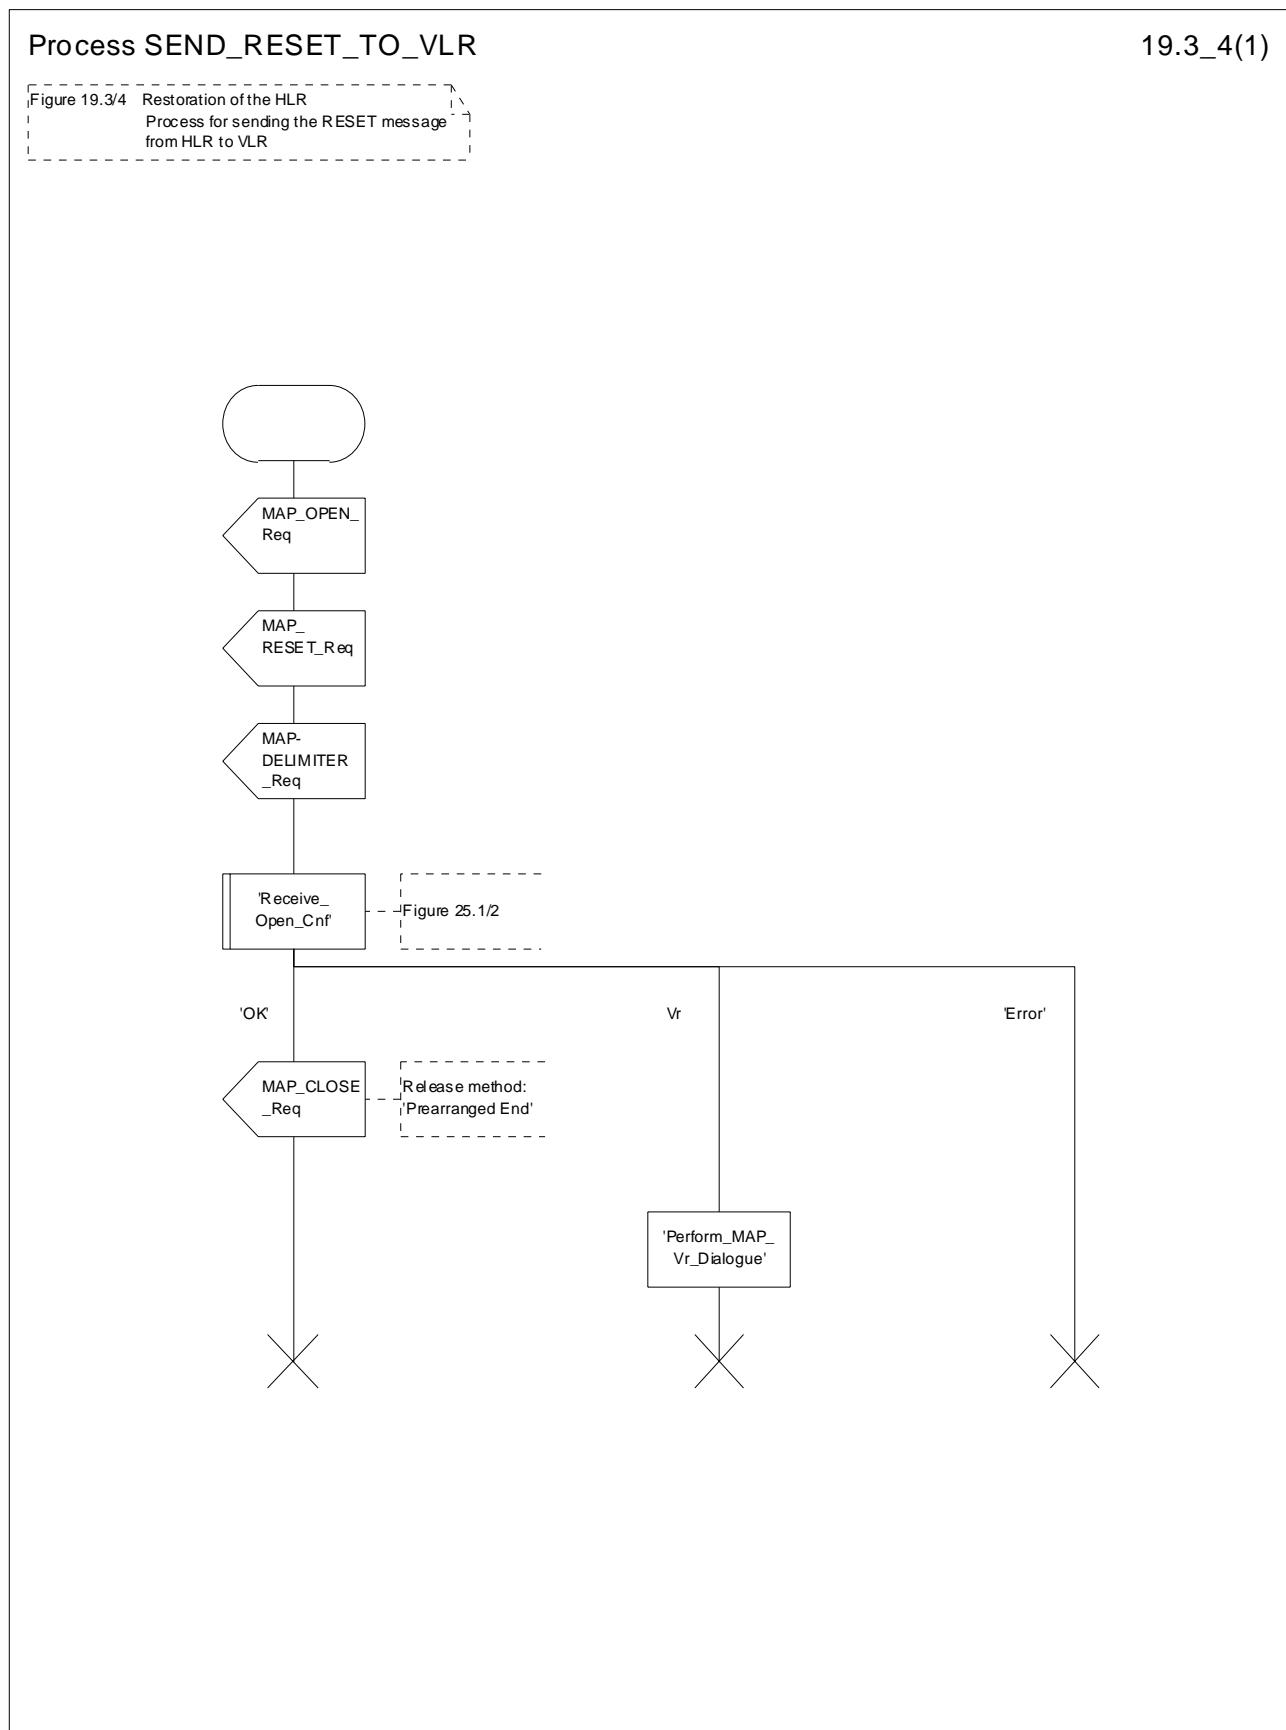


Figure 19.3/4: Process SEND\_RESET\_TO\_VLR

## Process REC\_RESET\_IN\_VLR

19.3\_5(1)

'Figure 19.3/5 Restoration of the HLR - Application process in the VLR for reception of the RESET message from HLR'

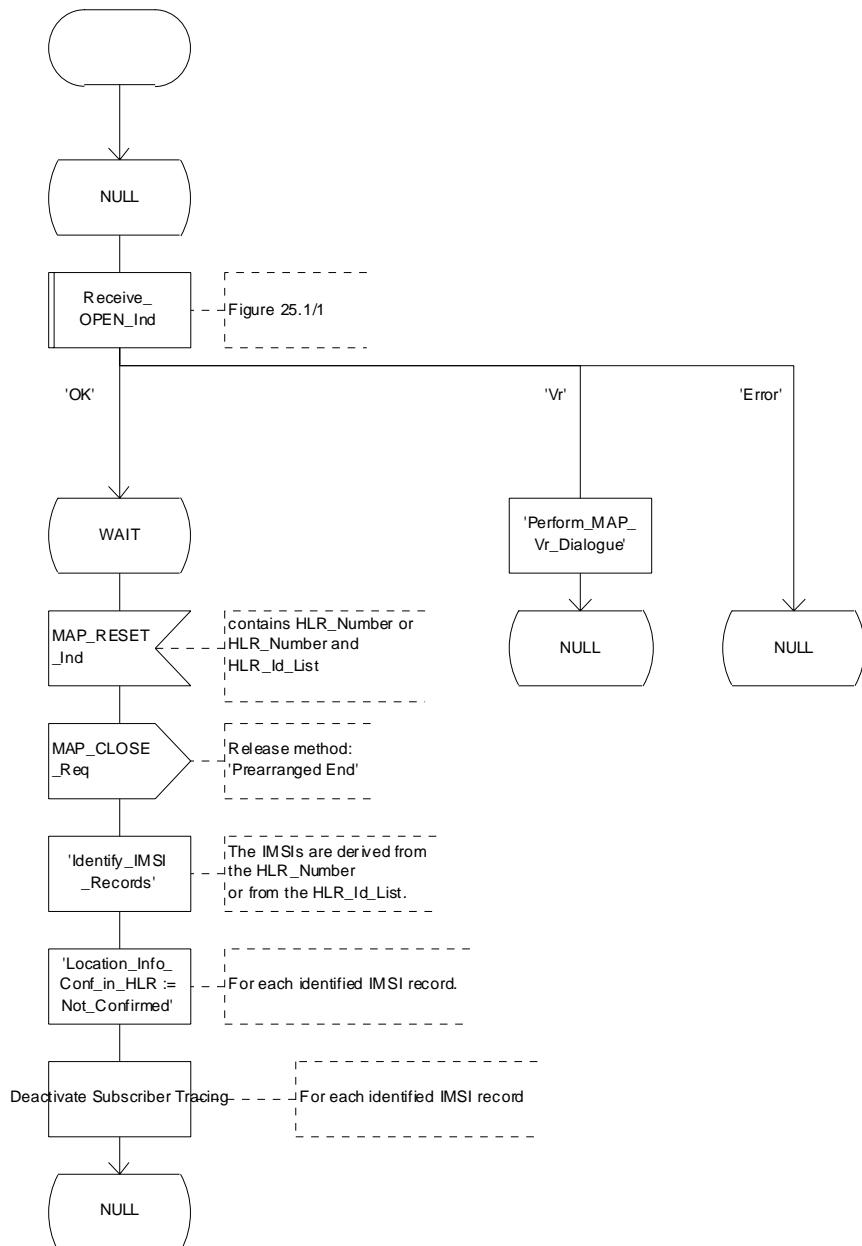


Figure 19.3/5: Process REC\_RESET\_IN\_VLR

Process SEND\_RESET\_TO\_SGSN 19.3\_7(1)

Figure 19.3/7: Restoration of the HLR  
Process for sending the RESET message  
from HLR to SGSN

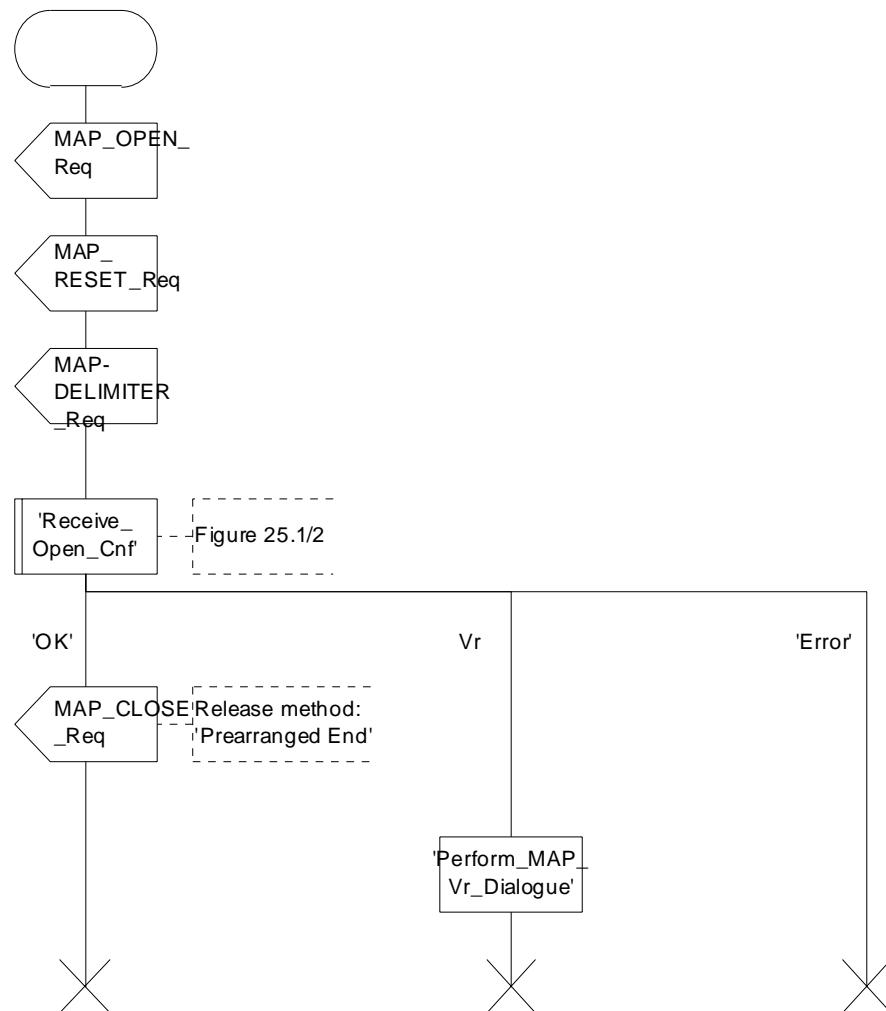


Figure 19.3/7: Process SEND\_RESET\_TO\_SGSN

## Process REC\_RESET\_IN\_SGSN

19.3\_8(1)

Figure 19.3/8: Restoration of the HLR - Application process in the SGSN  
for reception of the RESET message from HLR

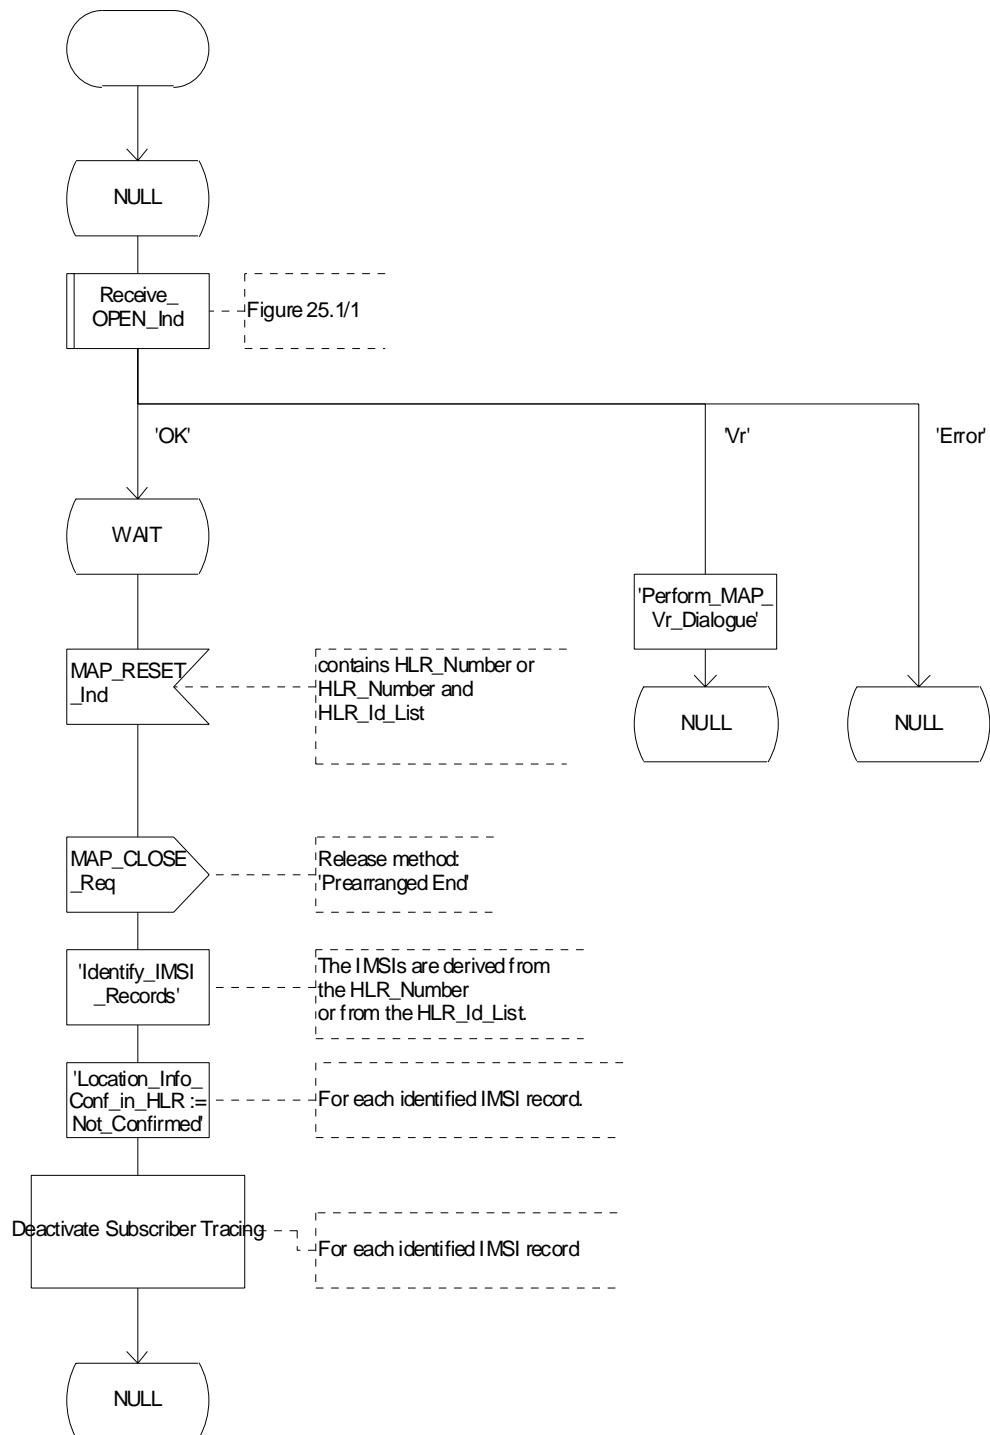


Figure 19.3/8: Process REC\_RESET\_IN\_SGSN

### 19.3.3 VLR restoration: the restore data procedure in the HLR

The MAP\_RESTORE\_DATA procedure in the HLR (Process RESTORE\_DATA\_HLR) is described in this clause; the corresponding procedure in the VLR (RESTORE\_DATA\_VLR) is described in clause 21.2.4.

The process RESTORE\_DATA\_HLR makes use of the following macros:

- Receive\_Open\_Ind clause 25.1.1;
- Check\_Indication clause 25.2.1;
- Insert\_Subs\_Data\_Framed\_HLR clause 19.4.

The MAP\_RESTORE\_DATA service is invoked by the VLR after provision of a roaming number in response to a MAP\_PROVIDE\_ROAMING\_NUMBER indication for an unidentified MS (i.e. IMSI unknown in VLR), or for a known MS whose IMSI record is marked as "Not Confirmed" by the indicator "Confirmed by HLR" (see 4 in figure 19.3/1). The process RESTORE\_DATA\_VLR is shown in figure 21.2/6.


The restore data process in the HLR is activated by receipt of a MAP\_RESTORE\_DATA indication from the VLR (see figure 19.3/6). If there is a parameter problem in the indication, either of the errors "Unexpected Data Value" or "Data Missing" is returned in the MAP\_RESTORE\_DATA response; if the subscriber is not known in the HLR, the error "Unknown Subscriber" is returned in the MAP\_RESTORE\_DATA response. In all of these cases the process in the HLR terminates.

If the MAP\_RESTORE\_DATA indication is accepted and if the LMSI is received, the HLR updates the LMSI for the IMSI received in the MAP\_RESTORE\_DATA indication. For this IMSI the HLR sets "subscriber-tracing-not-active-in-VLR" and checks whether tracing is required. This check is handled by the macro "Control\_Tracing\_HLR" that is described in clause 25.9. Thereafter, the macro "Insert\_Subs\_Data\_Framed\_HLR" that is described in clause 19.4 is invoked. The outcome of the macro Insert\_Subs\_Data\_Framed\_HLR is one of:

- abort, in which case the process terminates;
- error, in which case the HLR returns the error "System Failure" in the MAP\_RESTORE\_DATA response, and the process terminates;
- OK, indicating successful outcome of downloading the subscriber data to the VLR.

After successful completion of the framed MAP\_INSERT\_SUBSCRIBER\_DATA procedure, the HLR Number and, if applicable, the "MS Not Reachable Flag" which is used for SMS, are provided in the MAP\_RESTORE\_DATA response.

Upon receipt of the MAP\_RESTORE\_DATA confirmation, the VLR behaves as described in clause 21.2.4, figure 21.2/6.

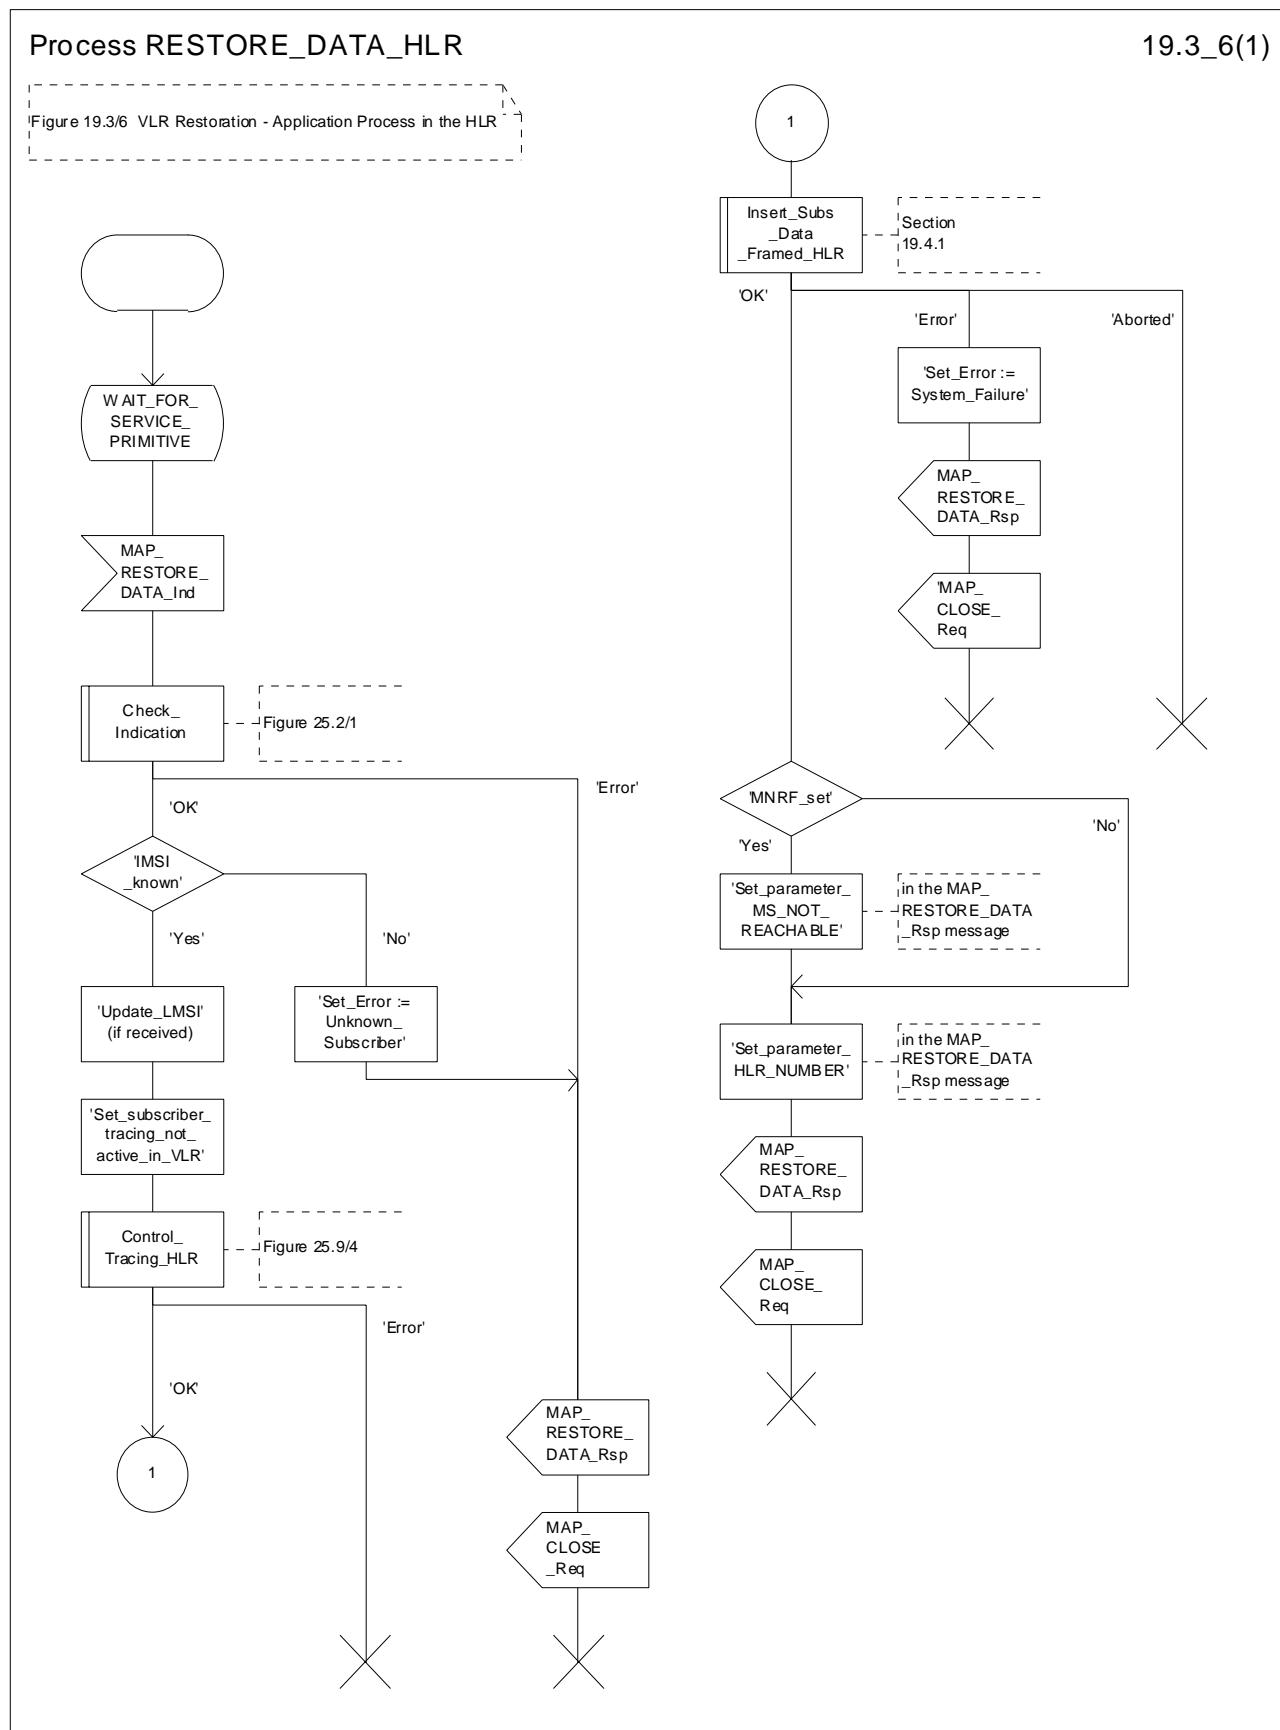

**Figure 19.3/6: Process RESTORE\_DATA\_HLR**

## 19.4 Macro Insert\_Subs\_Data\_Framed\_HLR

This macro is used by any procedure invoked in HLR which requires the transfer of subscriber data by means of the InsertSubscriberData operation (e.g. Update Location or Restore Data).

The invocation of the operation is done in a dialogue already opened by the framing procedure. Therefore the latter is the one that handles the reception of the open indication and sends the dialogue close request.

The macro calls the process "Send\_Insert\_Subs\_Data" (see clause 25.7.4) as many times as it is needed for transferring all subscriber data. This process call is meant to describe two possible behaviours of HLR to handle service requests and confirmations:

- either the HLR handles requests and confirmations in parallel; or
- the HLR sends the next request only after receiving the confirmation to the previous one.

Another call is done to the macro "Wait\_for\_Insert\_Subscriber\_Data" (see clause 25.7.3). There the reception and handling of the service confirmations is described.

If certain services required for a subscriber are not supported by the VLR or by the SGSN (e.g. Advice of Charge Charging Level), this may result in one of the following outcomes:

- The HLR stores and sends "Roaming Restriction Due To Unsupported Feature" in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. If "Roaming Restriction Due To Unsupported Feature" is stored in the HLR, the "MSC Area Restricted Flag" shall be set to "restricted". This will prevent MT calls, MT SM and MT USSD from being forwarded to the MSC/VLR;
- The HLR stores and sends other induced subscriber data (e.g. a specific barring program) in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. This will cause rejection of mobile originated service requests, except emergency calls.
- The HLR stores and sends "Roaming Restricted in the SGSN Due To Unsupported Feature" in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. If "Roaming Restricted In SGSN Due To Unsupported Feature" is stored in the HLR, the "SGSN Area Restricted Flag" shall be set to "restricted". This will prevent MT SM from being forwarded to the SGSN and Network Requested PDP-Context Activation;

When the VLR receives regional subscription data (Zone Code List) it may respond with "MSC Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response. In this case the "MSC Area Restricted Flag" shall be set to "restricted" in the HLR. This will prevent MT calls, MT SM and MT USSD from being forwarded to the MSC/VLR.

If the HLR neither stores "Roaming Restriction Due To Unsupported Feature" nor receives "MSC Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response, the "MSC Area Restricted Flag" in the HLR shall be set to "not restricted".

If subscriber data for CAMEL Phase 2 or 3 services are sent to a VLR which does not support CAMEL Phase 2 or 3, the service behaviour may be unpredictable or incorrect. The HLR therefore needs to ensure that at the conclusion of a location updating dialogue the data in the VLR do not require a capability that the VLR does not have. Possible mechanisms to ensure this are described in 3GPP TS 23.078.


The HLR should send a Forwarded-to number which is not in E.164 international format to the VLR only when the HLR has ascertained that the VLR supports CAMEL Phase 2 or higher. Thus, the ISD message containing the Forwarded-to number which is not in E.164 international format shall be sent to the VLR only after the HLR receives confirmation in the first ISD message result that CAMEL Phase 2 or higher is supported.

A Forwarded-to number non-international E.164 format shall only be sent from an HLR to a VLR if the VLR supports CAMEL Phase 2, or a subsequent phase of CAMEL.

When the SGSN receives regional subscription data (Zone Code List) it may respond with "SGSN Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response. In this case the "SGSN Area Restricted Flag" shall be set to "restricted" in the HLR. This will prevent MT SM from being forwarded to the SGSN and Network Requested PDP-Context Activation.

If the HLR neither stores "Roaming Restricted In SGSN Due To Unsupported Feature" nor receives "SGSN Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response, the "SGSN Area Restricted Flag" in the HLR shall be set to "not restricted".

The SDL diagrams are shown in figures 19.4/1 and 19.4/2.

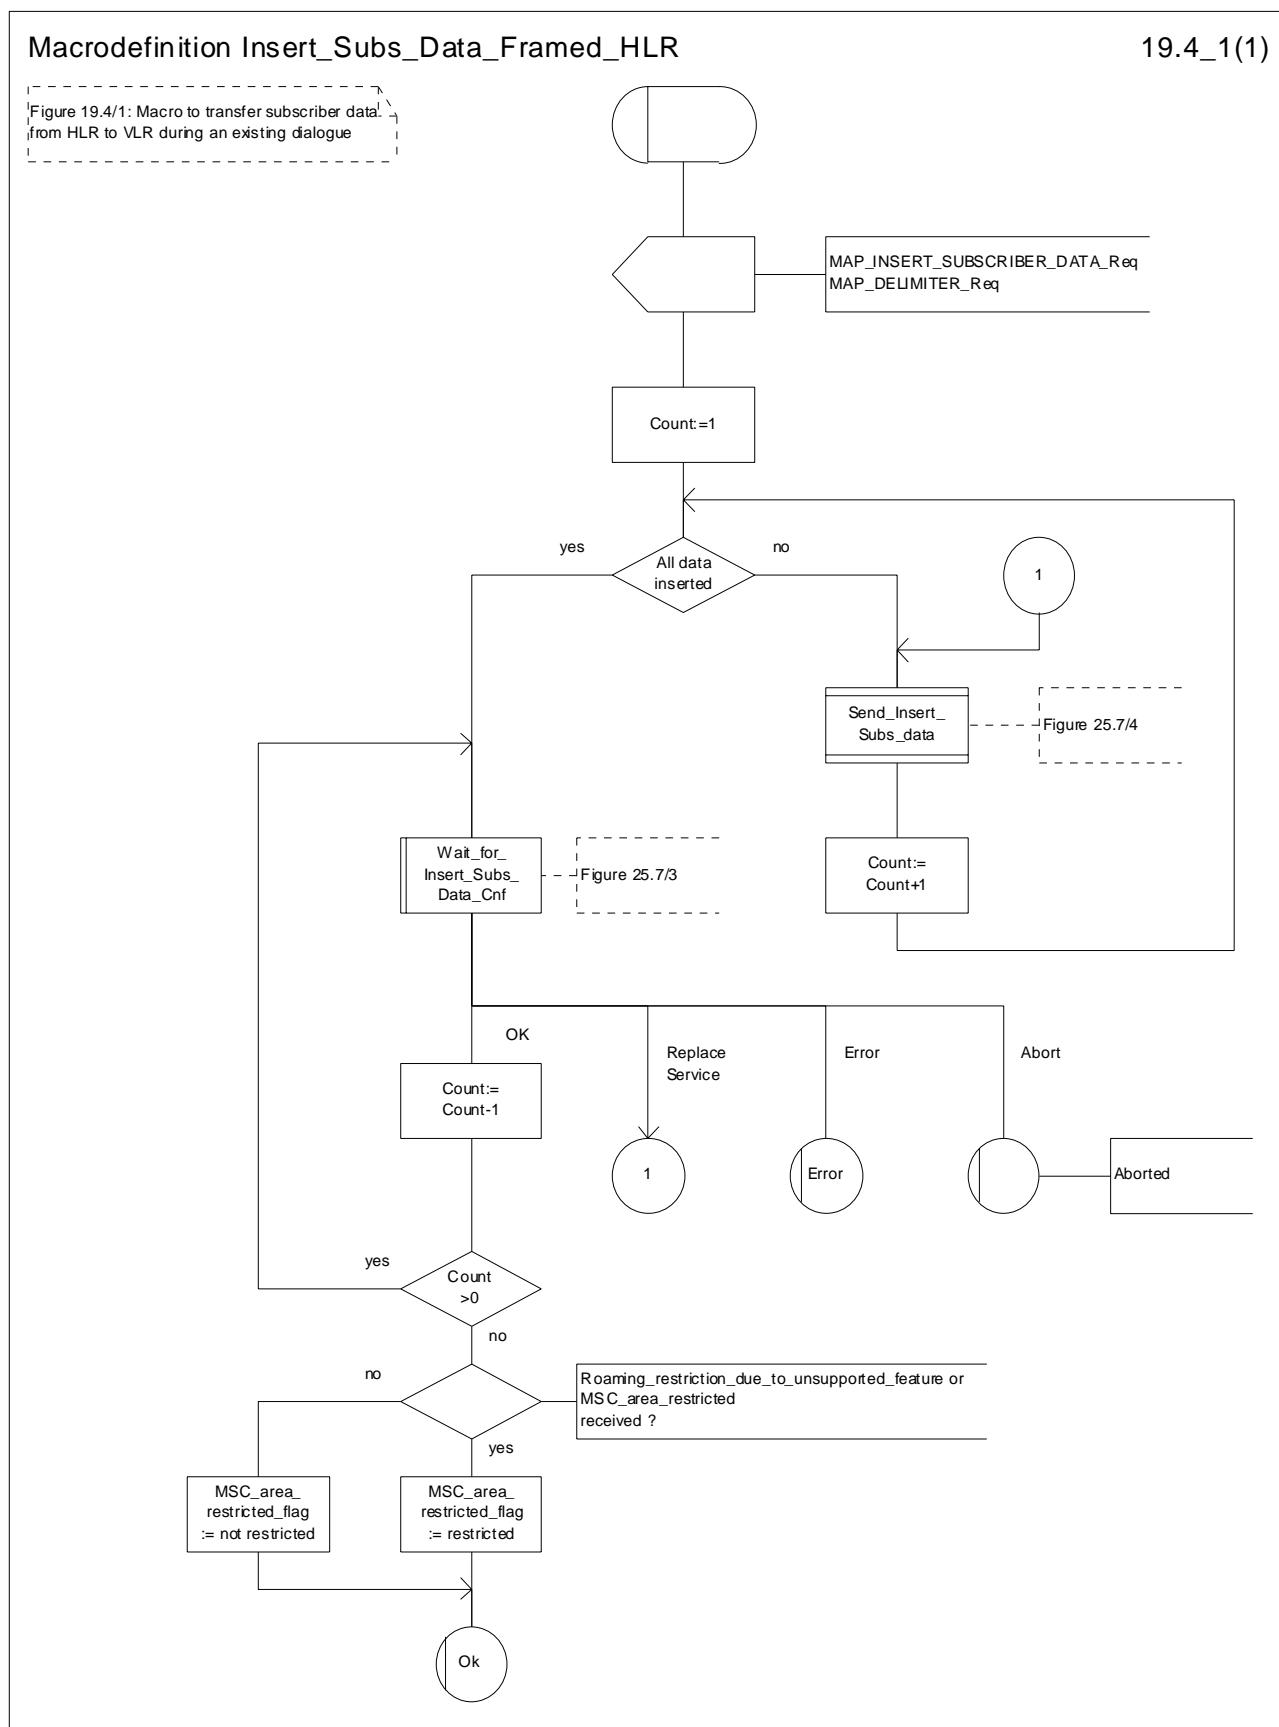

**Figure 19.4/1: Macro Insert\_Subs\_Data\_Framed\_HLR**

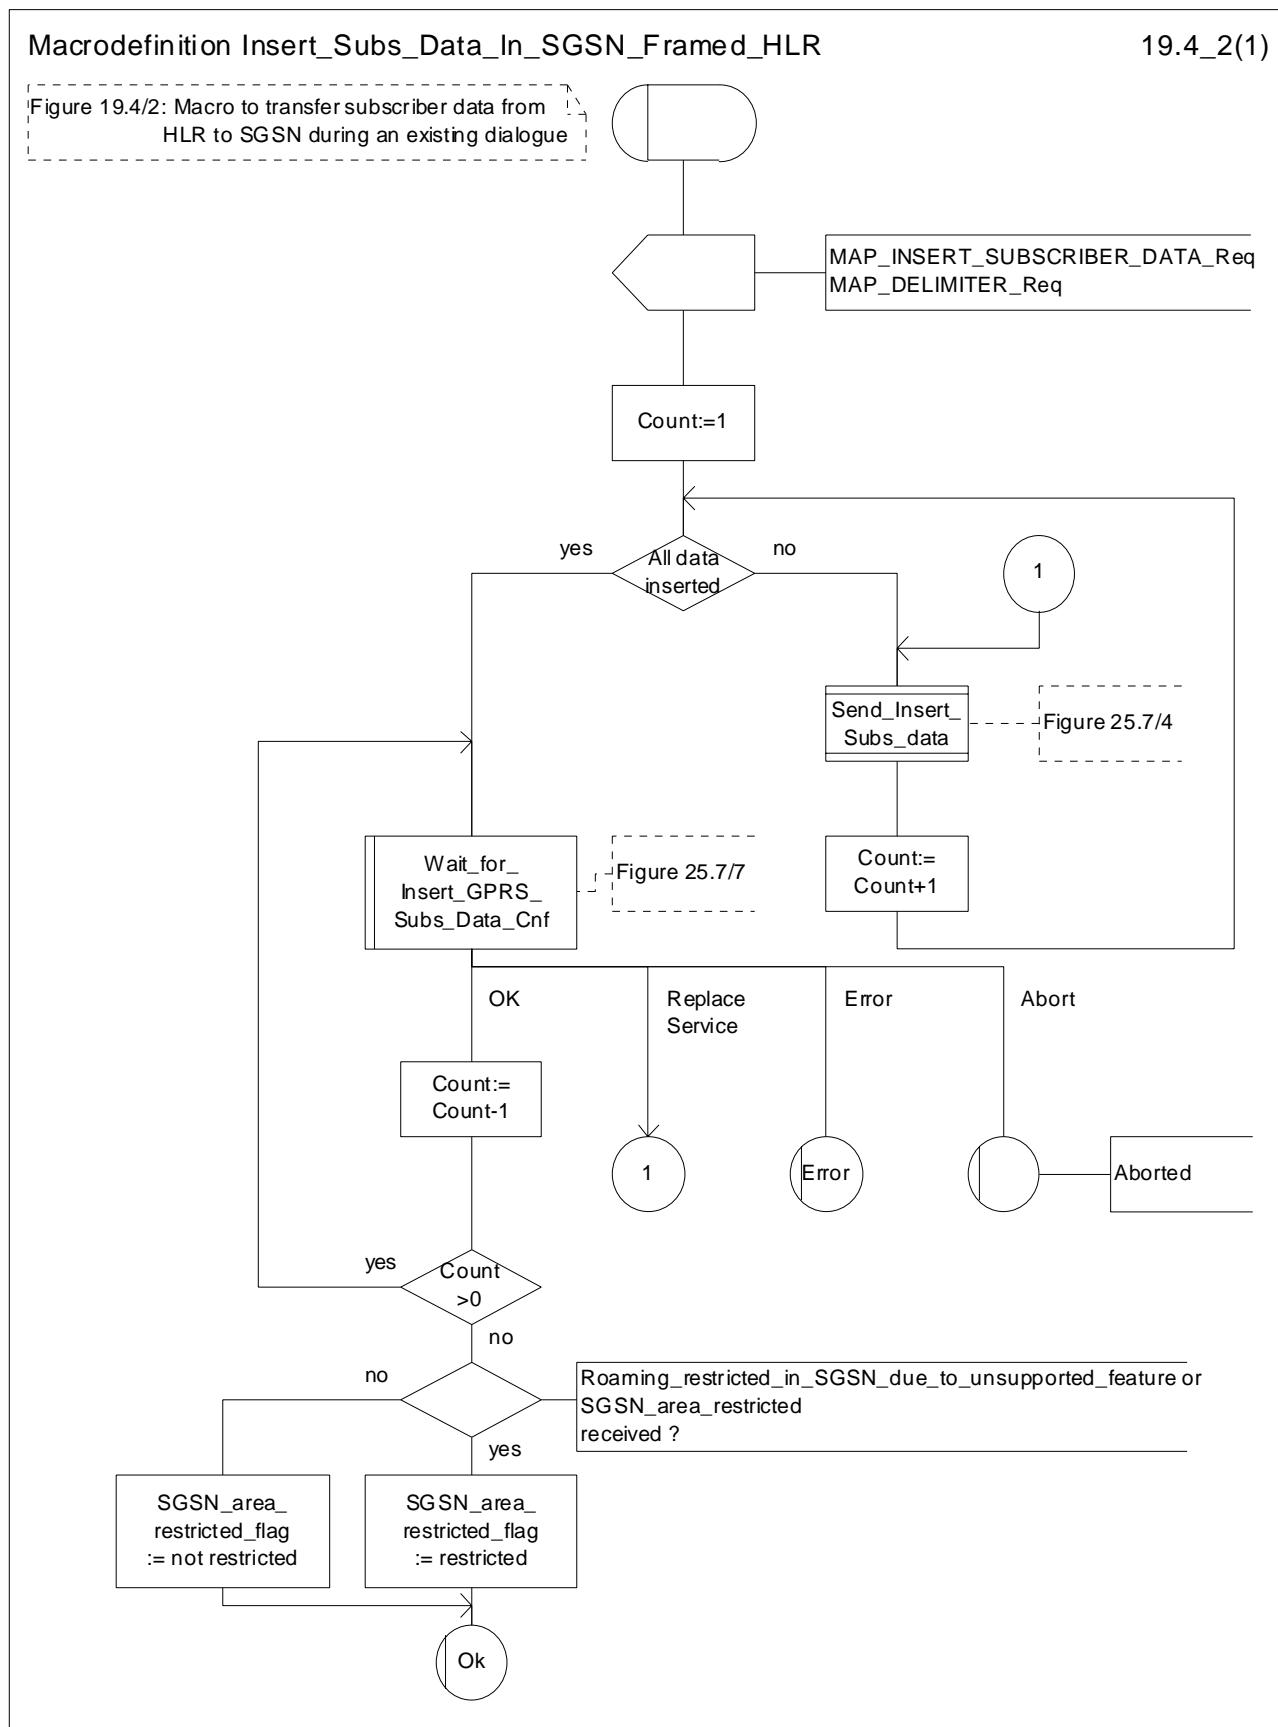



Figure 19.4/2: Macro Insert\_Subs\_Data\_In\_SGSN\_Framed\_HLR

## 19.5 Mobility Management Event notification procedure

### 19.5.1 General

The Mobility Management Event Notification VLR process (MMEN\_VLR) is used to notify a gsmSCF about the successful completion of a Mobility Management event.

Figure 19.5/1. depicts the MAP signalling used for the event notification.

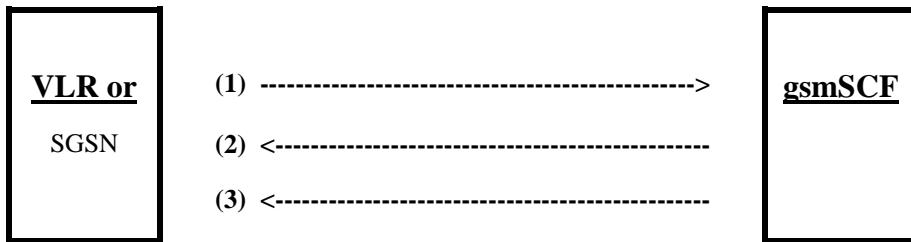

- (1) Report Mobility Management Event (VLR or SGSN to gsmSCF).
- (2) Report Mobility Management Event Result (gsmSCF to VLR or SGSN).
- (3) Report Mobility Management Event Error (gsmSCF to VLR or SGSN).

**Figure 19.5/1: Interfaces and MAP Messages for Mobility Management Event notifications**

### 19.5.2 Process in the VLR/SGSN

The Mobility Management event notification procedure in the VLR/SGSN is triggered when the following conditions are fulfilled:

1. the VLR/SGSN has successfully completed a Mobility Management event;
2. the subscriber has a subscription to Mobility Management event notifications;
3. the Mobility Management event is marked for reporting.

The VLR/SGSN notifies the gsmSCF of a mobility management event with the ReportMMEVENT MAP message. This message is sent in a TCAP TC-BEGIN primitive. The VLR/SGSN then awaits a positive result (RESULT) or a negative result (ERROR). This is received in a TCAP TC-END primitive. The Basic End procedure is used.

When the VLR/SGSN has received the RESULT or ERROR, the relationship between the VLR/SGSN and the gsmSCF is terminated. The relationship, if existing, is also terminated when the VLR/SGSN sends a TCAP P-ABORT primitive to the calling procedure or when the VLR/SGSN receives a TCAP P-ABORT or a TCAP-U-ABORT primitive from the gsmSCF.

The sending process shall indicate to the MMEN\_VLR process, which Mobility Management event shall be reported to the gsmSCF.

The MMEN\_VLR process is illustrated in figure 19.5/2.

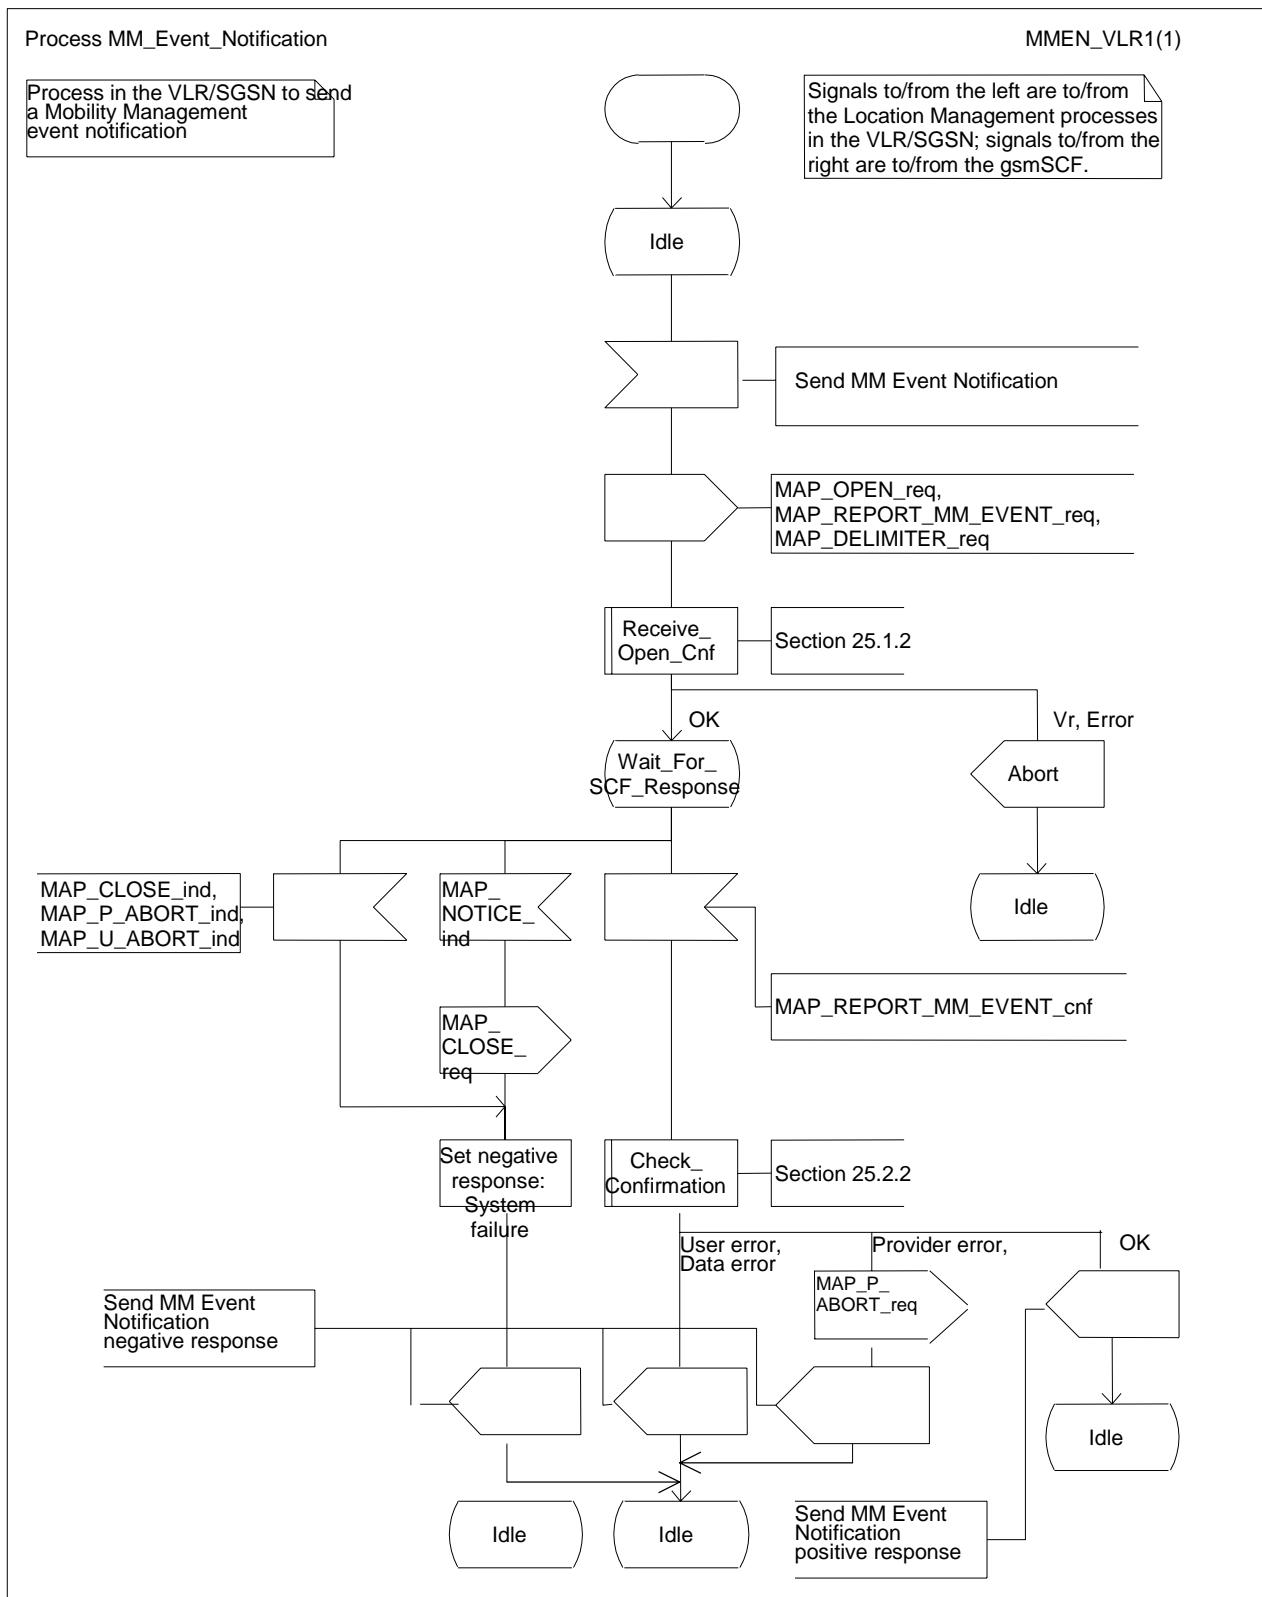


Figure 19.5/2: Process MM\_Event\_Notification\_VLR (sheet 1 of 1)

### 19.5.3 Process in the gsmSCF

When the gsmSCF receives the ReportMMEvent MAP Message (in a TCAP TC-BEGIN primitive), the 'MM\_Event\_Notification\_gsmSCF' (MMEN\_SCF) process is started.

If the gsmSCF has validated the information it has received in the ReportMMEvent MAP Message, then it informs the Service Logic in the SCP and awaits a response.

If a positive response is received from the Service Logic, then a REPORT\_MM\_EVENT\_RESULT is sent to the VLR/SGSN.

If a negative response is received from the Service Logic, then a REPORT\_MM\_EVENT\_ERROR is sent to the VLR/SGSN.

Both RESULT and ERROR are sent in a TCAP TC-END primitive. The Basic End procedure is used.

If the Service Logic returns a User Error, then a MAP U-ABORT primitive is sent to the VLR/SGSN.

The gsmSCF TCAP service may choose to abort the relationship with the VLR/SGSN by sending a TCAP P-ABORT primitive to the VLR/SGSN.

When the gsmSCF receives a TCAP P-ABORT primitive from the VLR/SGSN, it shall immediately terminate the mobility management process.

This is illustrated in figure 19.5/3.

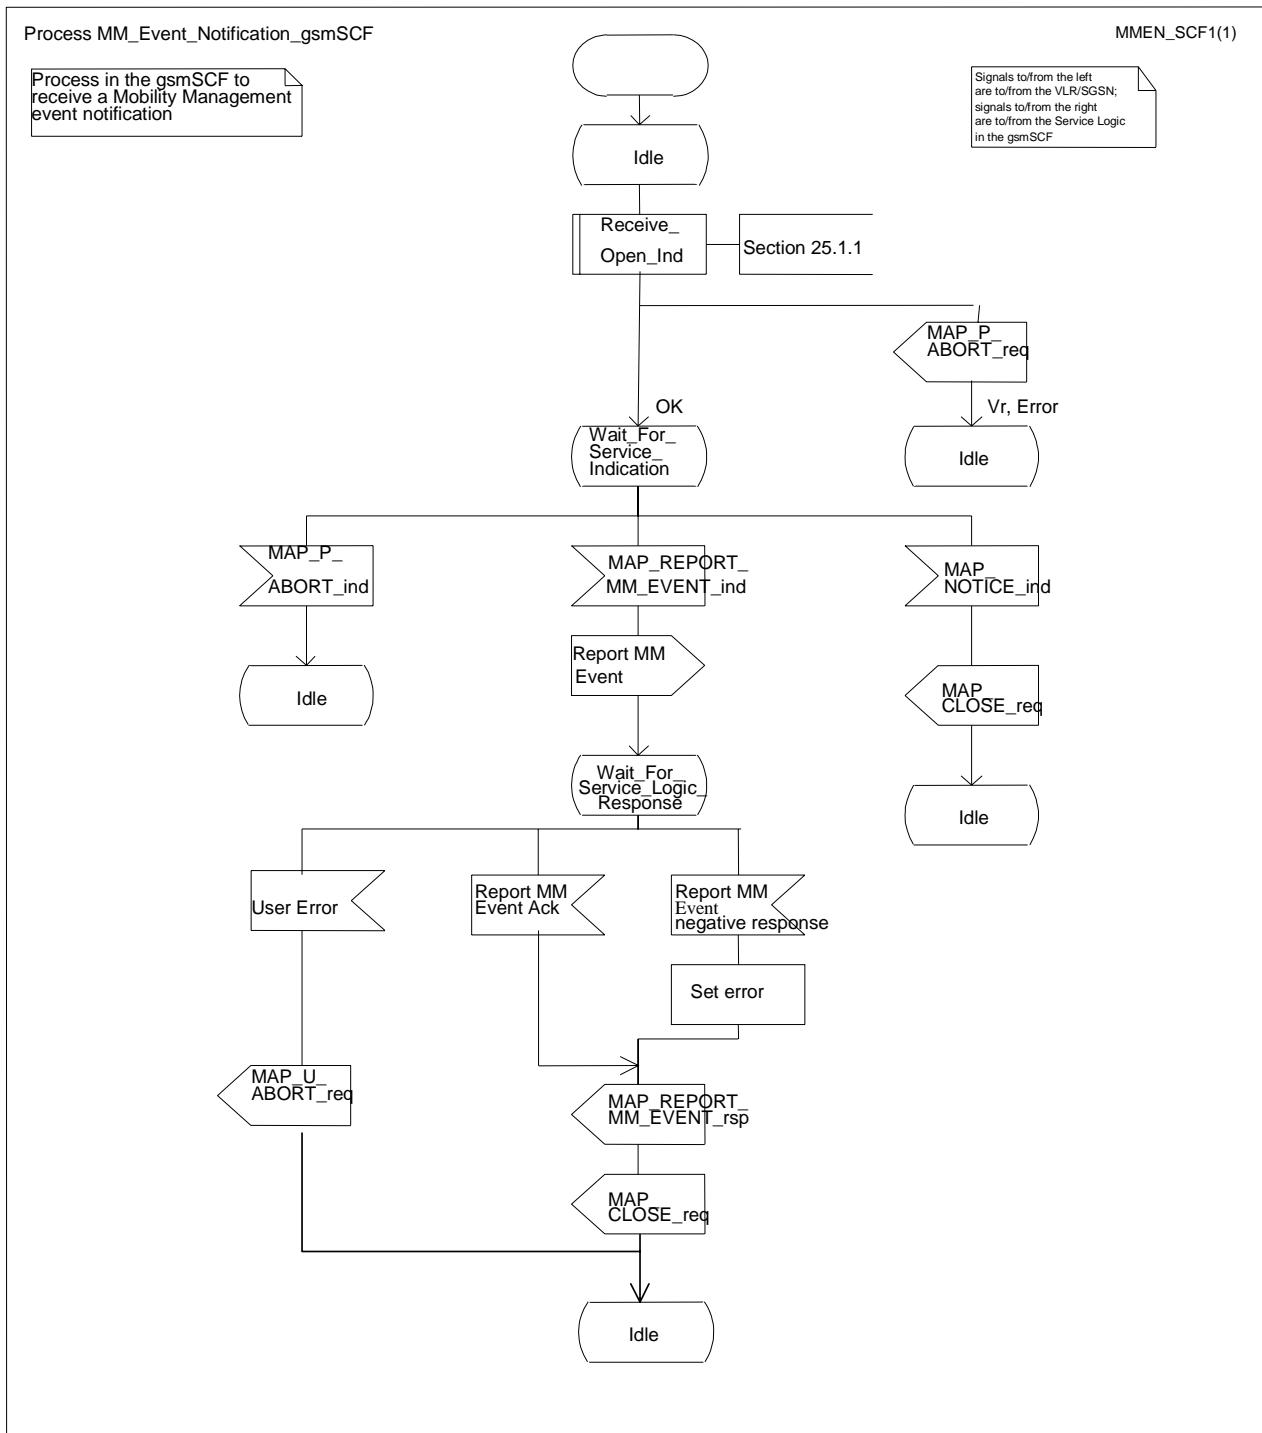


Figure 19.5/3: Process MM\_Event\_Notification\_gsmSCF (sheet 1 of 1)

---

## 20 Operation and maintenance procedures

### 20.1 General

The Operation and Maintenance procedures are needed for operating and maintaining the GSM PLMN network.

The following procedures exist for operation and maintenance purposes:

- i) Tracing procedures;
- ii) Subscriber Data Management procedures;
- iii) Subscriber Identity procedures.

The following application contexts refer to complex MAP Users consisting of several processes:

- subscriberDataManagementContext;
- tracingContext.

These two application contexts need a co-ordinating process in the VLR or in the SGSN as described in the following clauses.

#### 20.1.1 Tracing Co-ordinator for the VLR

The MAP\_OPEN indication opens the dialogue for the stand-alone tracing procedure when the application context tracingContext is received. If that service is successful, the Co-ordinator can receive the first service primitive from the MAP\_PM. Depending on the received primitive, the user process is created as follows:

- if the MAP\_ACTIVATE\_TRACE\_MODE indication is received, the process ATM\_VLR\_Standalone is created;
- if the MAP\_DEACTIVATE\_TRACE\_MODE indication is received, the process DTM\_VLR\_Standalone is created.

After creation of the user process the Co-ordinator relays the messages between the MAP\_PM and the invoked process until a request or an indication for dialogue termination is received.

The Tracing Co-ordinator is shown in the figure 20.1/1.

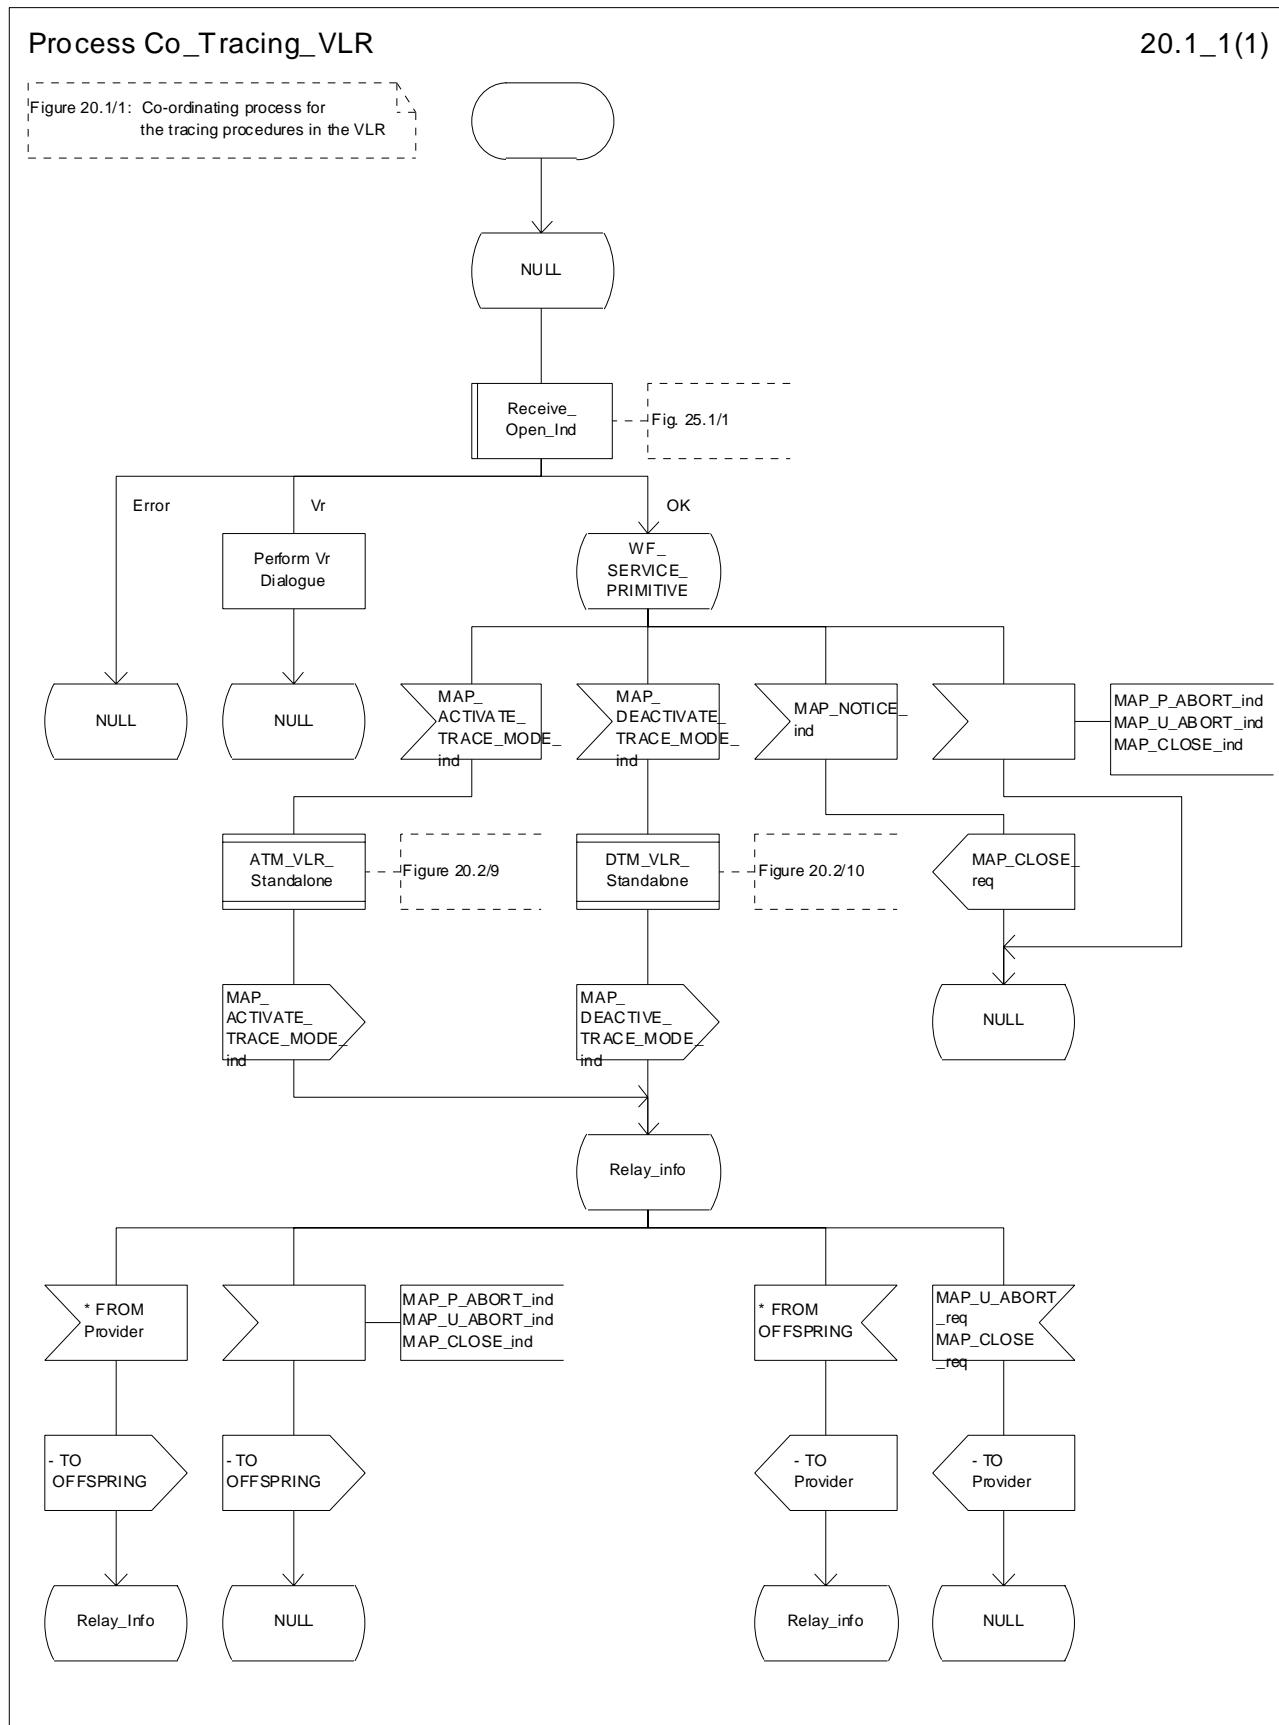


Figure 20.1/1: Process Co\_Tracing\_VLR

## 20.1.2 Subscriber Data Management Co-ordinator for the VLR

The MAP\_OPEN indication opens the dialogue for the stand-alone subscriber data management procedure when the application context subscriberDataManagementContex is received. If that service is successful, the Co-ordinator can receive the first service primitive from the MAP\_PM. Depending on the received primitive, the user process is created as follows:

- if the MAP\_INSERT\_SUBSCRIBER\_DATA indication is received, the process INS\_SUBS\_DATA\_VLR is created;
- if the MAP\_DELETE\_SUBSCRIBER\_DATA indication is received, the process Delete\_Subscriber\_Data\_VLR is created.

After creation of the user process the Co-ordinator relays the messages between the MAP\_PM and the invoked process until a request or an indication for dialogue termination is received.

The Subscriber\_Data\_Management Co-ordinator is shown in the figure 20.1/2.

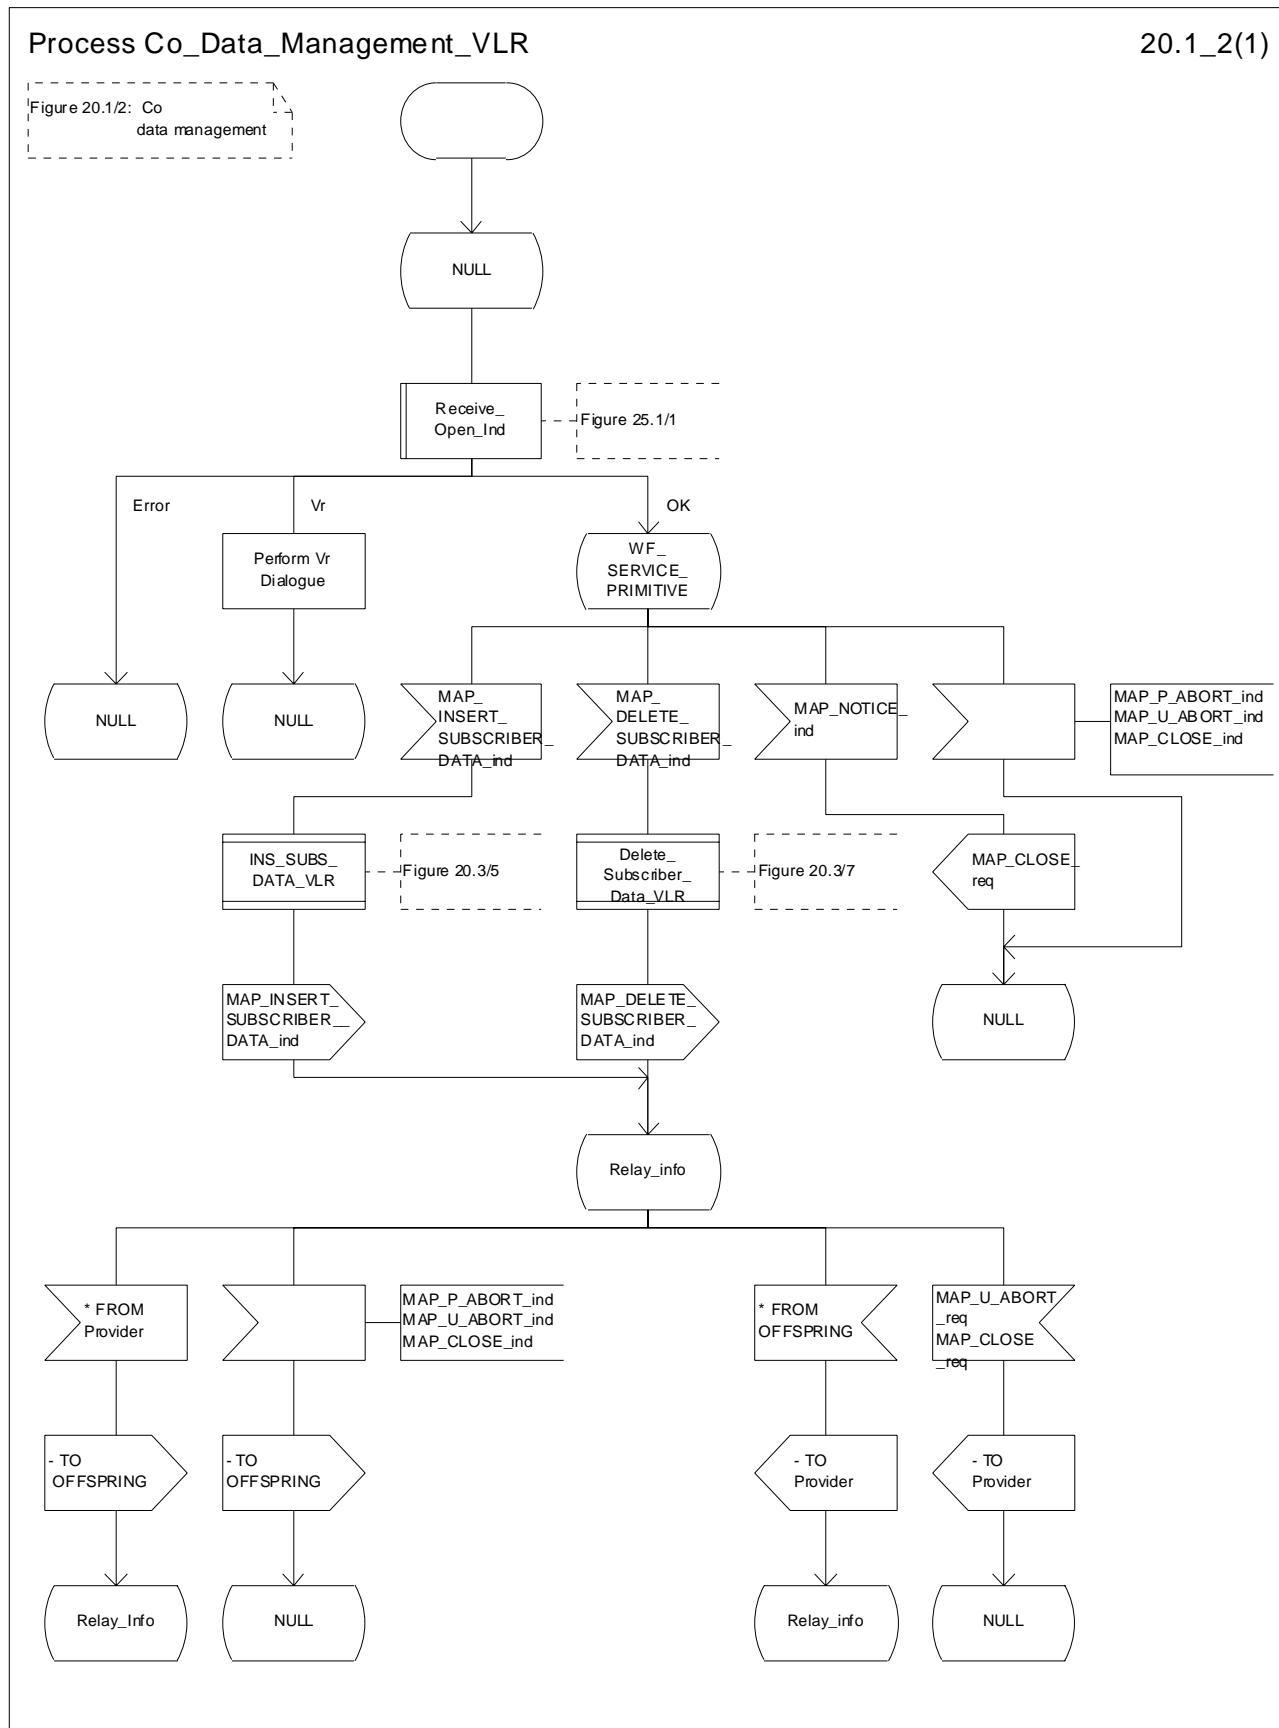


Figure 20.1/2: Process Co\_Data\_Management\_VLR

### 20.1.3 Tracing Co-ordinator for the SGSN

The MAP\_OPEN indication opens the dialogue for the stand-alone tracing procedure when the application context tracingContext is received. If that service is successful, the Co-ordinator can receive the first service primitive from the MAP\_PM. Depending on the received primitive, the user process is created as follows:

- if the MAP\_ACTIVATE\_TRACE\_MODE indication is received, the process ATM\_SGSN\_Standalone is created;
- if the MAP\_DEACTIVATE\_TRACE\_MODE indication is received, the process DTM\_SGSN\_Standalone is created.

After creation of the user process the Co-ordinator relays the messages between the MAP\_PM and the invoked process until a request or an indication for dialogue termination is received.

The Tracing Co-ordinator for the SGSN is shown in the figure 20.1/3.

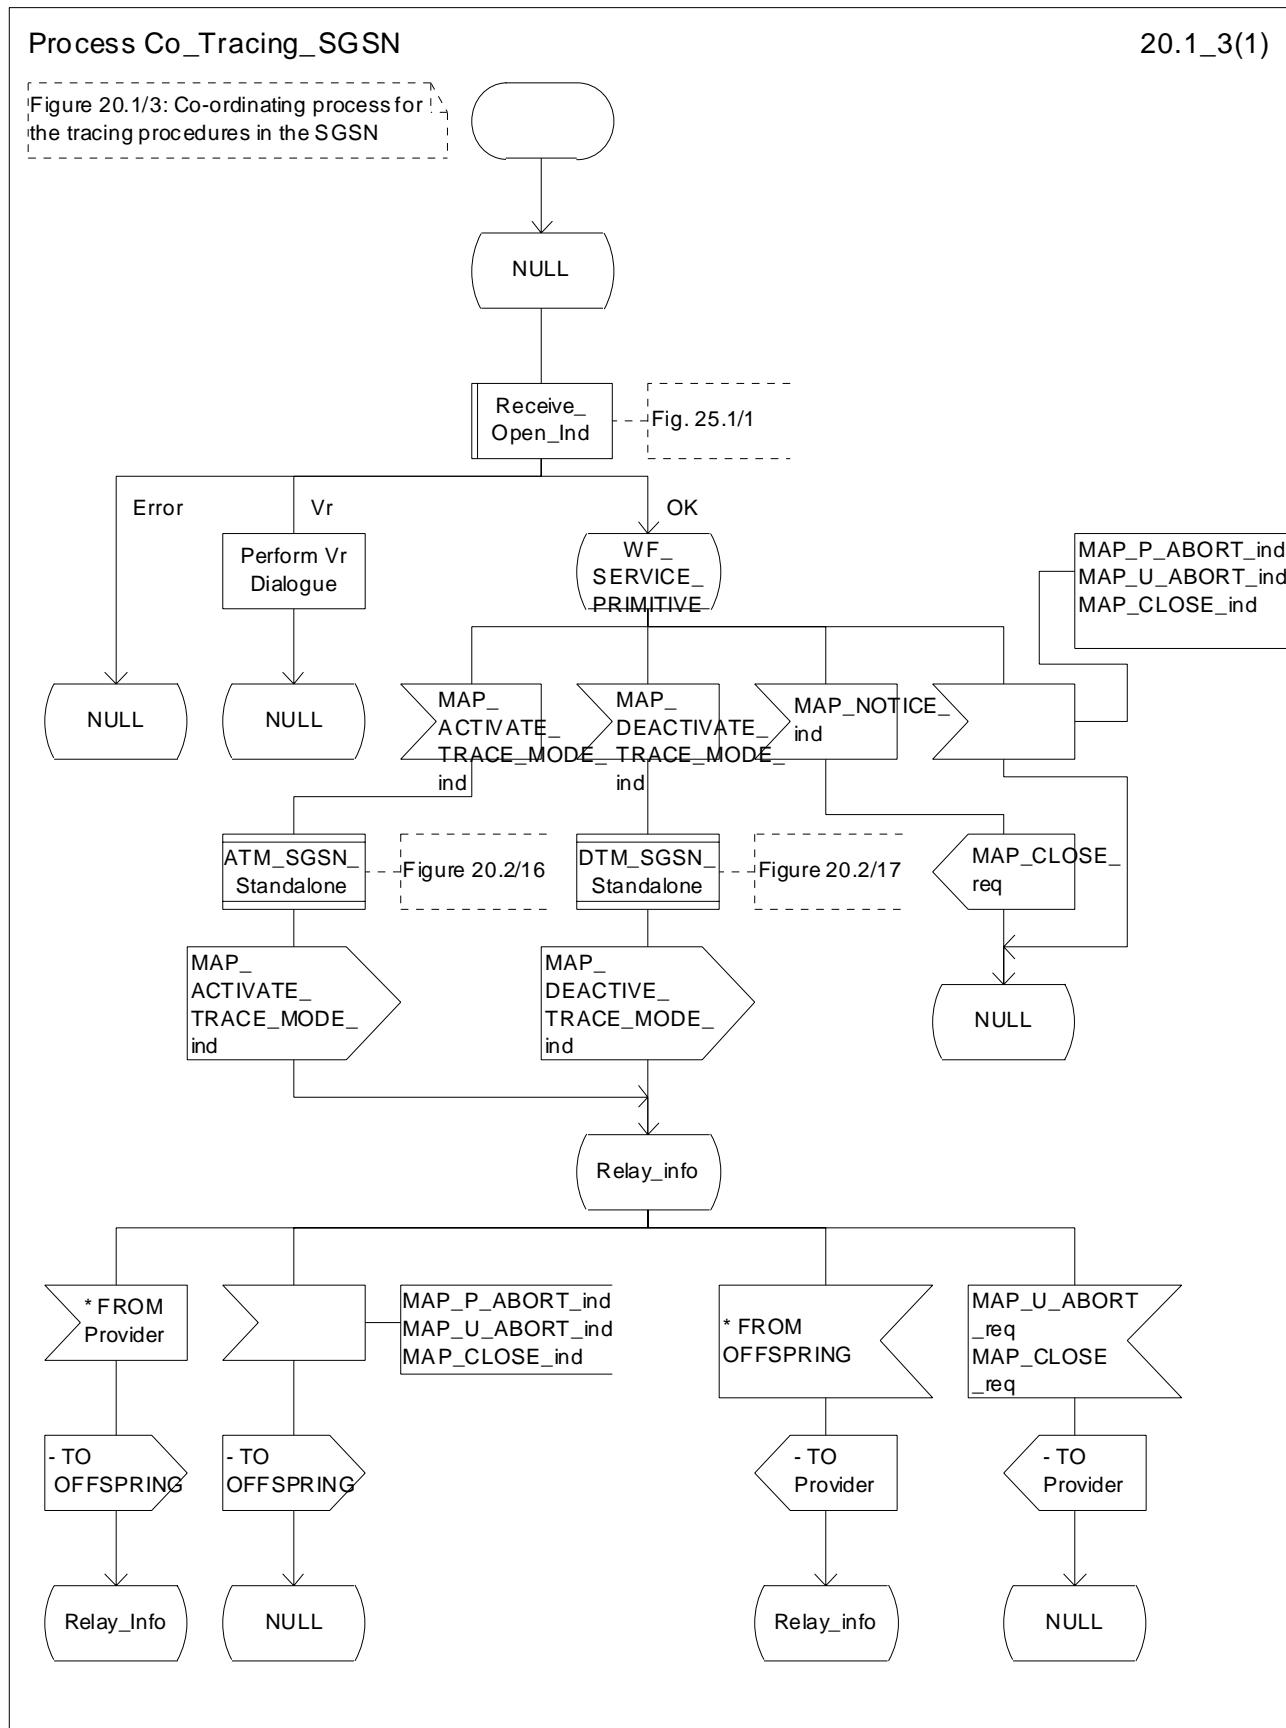


Figure 20.1/3: Process Co\_Tracing\_SGSN

## 20.1.4 Subscriber Data Management Co-ordinator for the SGSN

The MAP\_OPEN indication opens the dialogue for the stand-alone subscriber data management procedure when the application context subscriberDataManagementContext is received. If that service is successful, the Co-ordinator can receive the first service primitive from the MAP\_PM. Depending on the received primitive, the user process is created as follows:

- if the MAP\_INSERT\_SUBSCRIBER\_DATA indication is received, the process INS\_SUBS\_DATA\_SGSN is created;
- if the MAP\_DELETE\_SUBSCRIBER\_DATA indication is received, the process Delete\_Subscriber\_Data\_SGSN is created.

After creation of the user process the Co-ordinator relays the messages between the MAP\_PM and the invoked process until a request or an indication for dialogue termination is received.

The Subscriber\_Data\_Management Co-ordinator is shown in the figure 20.1/4.

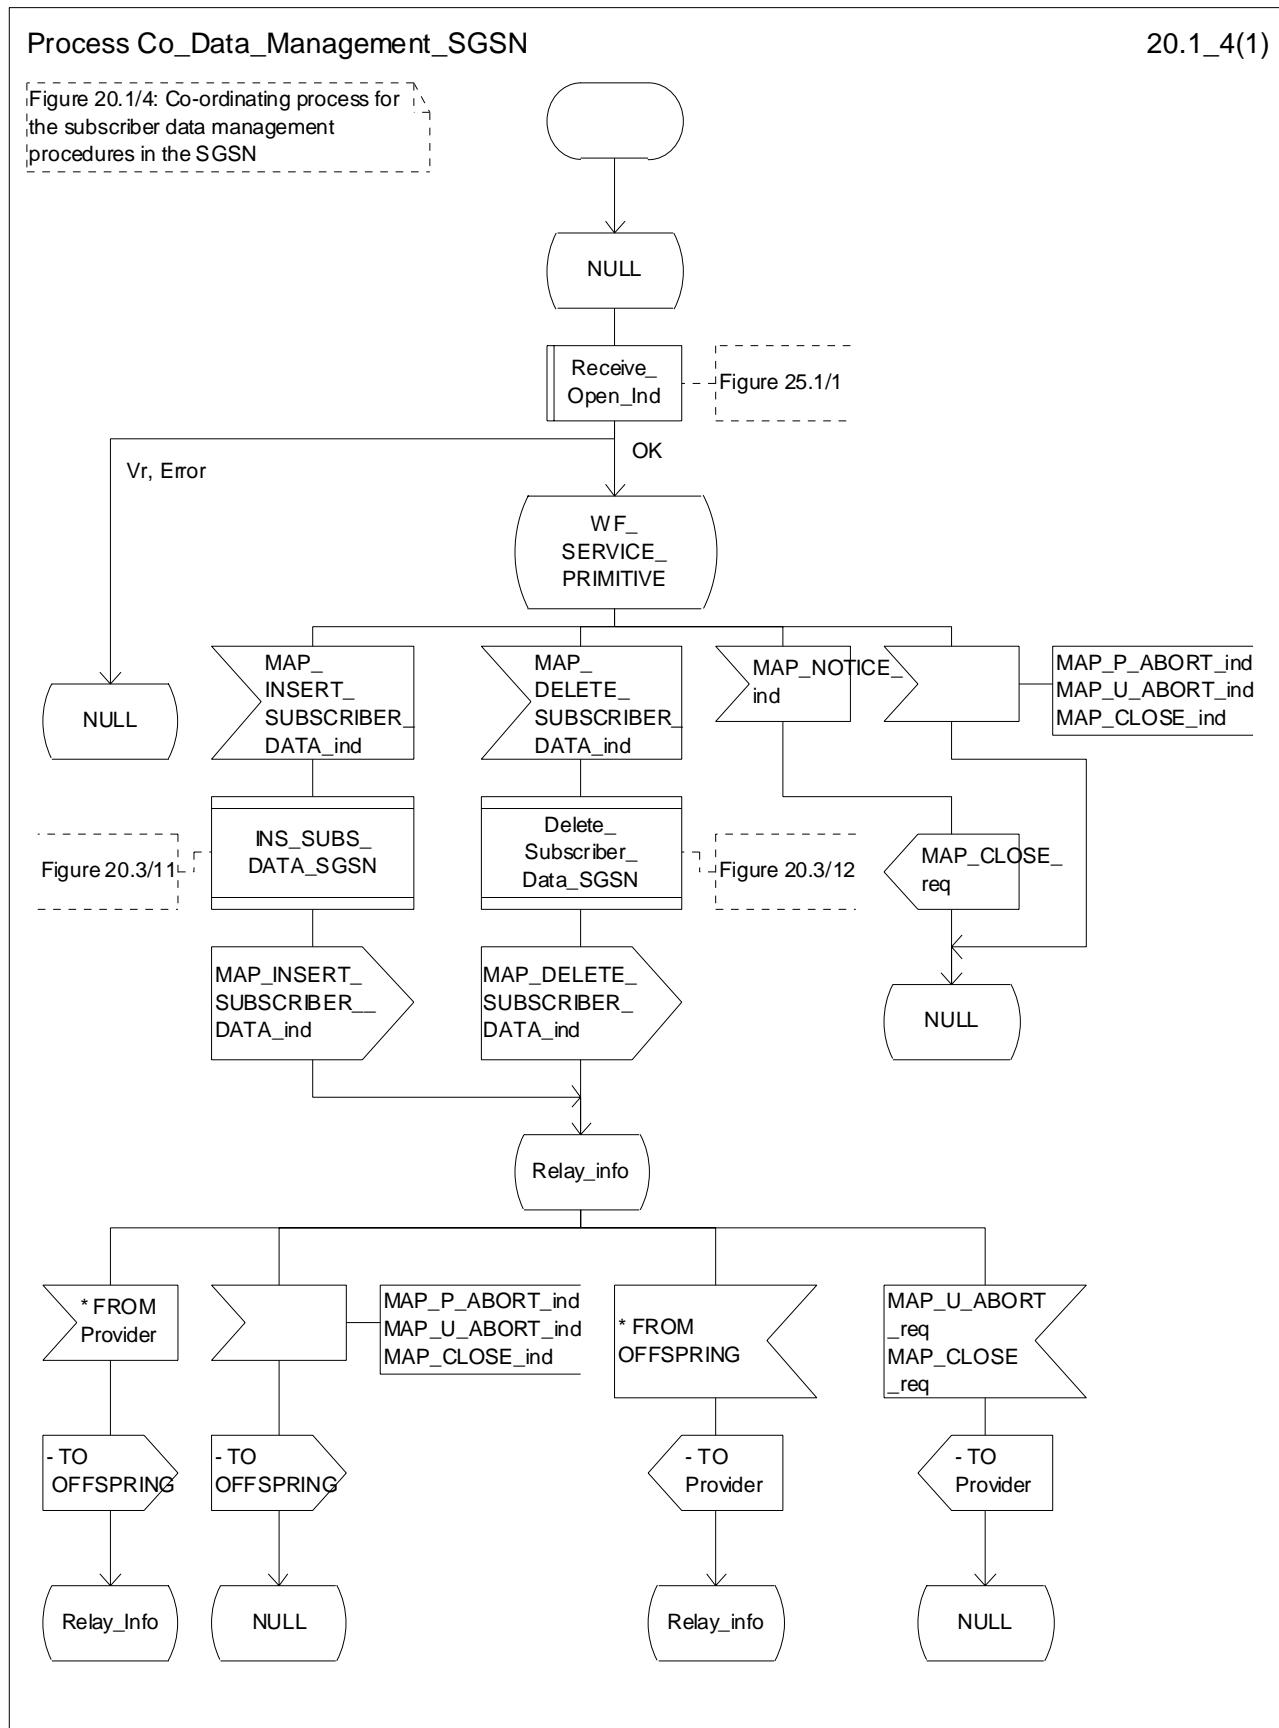



Figure 20.1/4: Process Co\_Data\_Management\_SGSN

## 20.2 Tracing procedures

Three types of tracing procedures exist:


- i) Subscriber tracing management procedures;
- ii) Subscriber tracing procedures;
- iii) Event tracing procedures.

The subscriber tracing management procedures are used for management of the status and the type of the tracing. The subscriber tracing activation procedure is used at location updating or data restoration when the trace mode of a subscriber is set active in the HLR or, as a stand alone procedure, when the subscriber is already registered and the trace mode becomes active in the HLR. The procedures for providing a trace request to the VLR are shown in figures 20.2/1 and 20.2/2. The procedures for providing a trace request to the SGSN are shown in figures 20.2/11 and 20.2/12.

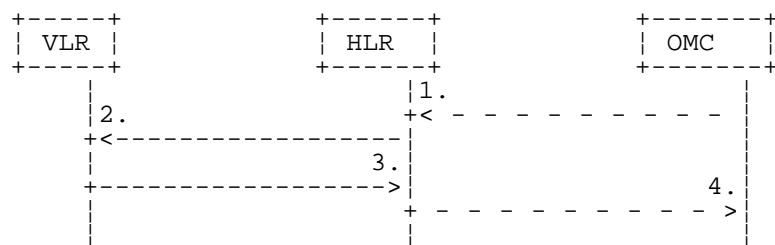


- 1) Subscriber Tracing Activation.
- 2) MAP\_ACTIVATE\_TRACE\_MODE.
- 3) MAP\_ACTIVATE\_TRACE\_MODE\_ACK.
- 4) Subscriber Tracing Activation Accepted.

**Figure 20.2/1: Stand alone subscriber tracing activation procedure**

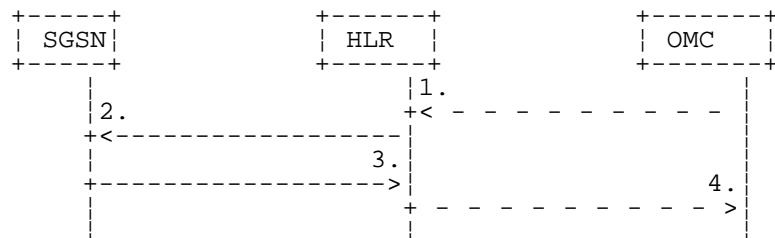


- 1) Subscriber Tracing Activation.
- 2) MAP\_ACTIVATE\_TRACE\_MODE.
- 3) MAP\_ACTIVATE\_TRACE\_MODE\_ACK.
- 4) Subscriber Tracing Activation Accepted.

**Figure 20.2/11: Stand alone subscriber tracing activation procedure for GPRS**

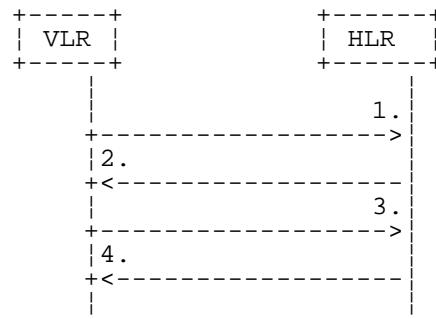

- 1) MAP\_UPDATE\_LOCATION or MAP\_RESTORE\_DATA.
- 2) MAP\_ACTIVATE\_TRACE\_MODE.
- 3) MAP\_ACTIVATE\_TRACE\_MODE\_ACK.
- 4) MAP\_UPDATE\_LOCATION\_ACK or MAP\_RESTORE\_DATA\_ACK.

**Figure 20.2/2: Subscriber tracing activation procedure at location updating or data restoration**

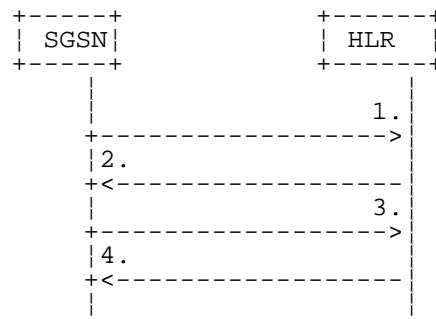


- 1) MAP\_UPDATE\_GPRS\_LOCATION.
- 2) MAP\_ACTIVATE\_TRACE\_MODE.
- 3) MAP\_ACTIVATE\_TRACE\_MODE\_ACK.
- 4) MAP\_UPDATE\_GPRS\_LOCATION\_ACK.

**Figure 20.2/12: Subscriber tracing activation procedure at GPRS location updating**


The HLR sends the trace request (IMSI, trace reference, trace type and identity of the OMC) to the VLR or to the SGSN in a MAP\_ACTIVATE\_TRACE\_MODE request. The receipt of this primitive is acknowledged. The acknowledgement primitive will indicate that the trace request is accepted by the VLR or by the SGSN. If the request is not accepted, the reason will be reported to the HLR.

The subscriber tracing deactivation procedure is used when the trace request of a subscriber is to be cancelled in the VLR or in the SGSN. The procedures are shown in figures 20.2/3 and 20.2/13.

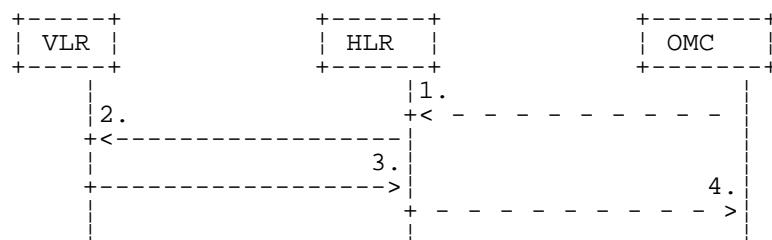

- 1) Subscriber Tracing Deactivation.
- 2) MAP\_DEACTIVATE\_TRACE\_MODE.
- 3) MAP\_DEACTIVATE\_TRACE\_MODE\_ACK.
- 4) Subscriber Tracing Deactivation Accepted.

**Figure 20.2/3: Subscriber tracing deactivation procedure**

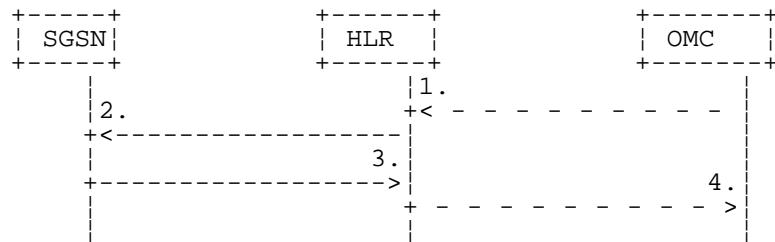


- 1) Subscriber Tracing Deactivation.
- 2) MAP\_DEACTIVATE\_TRACE\_MODE.
- 3) MAP\_DEACTIVATE\_TRACE\_MODE\_ACK.
- 4) Subscriber Tracing Deactivation Accepted.

**Figure 20.2/13: Subscriber tracing deactivation procedure for GPRS**

The HLR sends a MAP\_DEACTIVATE\_TRACE\_MODE request to the VLR or to the SGSN. The VLR or the SGSN will acknowledge the deactivation. The acknowledge primitive will indicate that the trace request has been deleted by the VLR or by the SGSN. If the deactivation is not accepted, the reason will be reported to the HLR.

The subscriber tracing procedures are used when the VLR detects any subscriber related activity for which the trace mode is activated, e.g. receives the MAP\_PROCESS\_ACCESS\_REQUEST indication. The procedure is shown in figure 20.2/4.

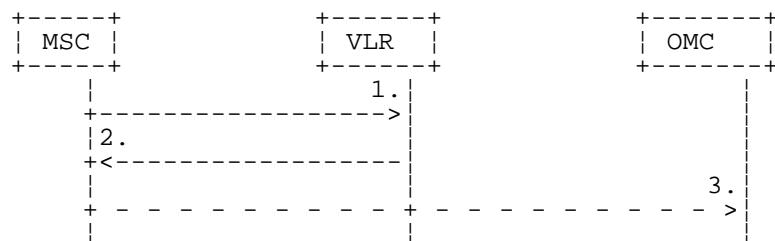

- 1) MAP\_PROCESS\_ACCESS\_REQUEST, MAP\_UPDATE\_LOCATION\_AREA.
- 2) MAP\_TRACE\_SUBSCRIBER\_ACTIVITY.
- 3) Subscriber tracing information.

**Figure 20.2/4: Subscriber tracing procedure in the servicing MSC**

The VLR will generate the MAP\_TRACE\_SUBSCRIBER\_ACTIVITY indication. The receiving MSC will send the trace record to the OMC.

[Figure numbers 20.2/5 and 20.2/6 are spare.]

## 20.2.1 Procedures in the HLR

### 20.2.1.1 Subscriber tracing activation procedure

When receiving the subscriber tracing mode activation command for a subscriber from the OMC, the HLR will activate tracing, if the subscriber is known and registered in the HLR and the subscriber is roaming in the home PLMN area. The MAP\_ACTIVATE\_TRACE\_MODE request is sent to the VLR or to the SGSN where the subscriber is registered.

If the MAP\_ACTIVATE\_TRACE\_MODE confirmation is received indicating an error situation, the errors are mapped to the OMC interface. The activation request may also be repeated; the number of repeat attempts and the time in between are HLR operator options, depending on the error returned by the VLR or the SGSN.

If the subscriber is known in the HLR, but is deregistered or roaming outside the home PLMN area, the subscriber tracing status is activated in the HLR, but the VLR or the SGSN is not updated.

When receiving a request for location updating or data restoration while the subscriber trace mode is active, the macro Control\_Tracing\_HLR (see figure 25.9/4) shall be initiated by the location updating process in the HLR.

The subscriber tracing activation process in the HLR with VLR is shown in figure 20.2/7.

The subscriber tracing activation process in the HLR with SGSN is shown in figure 20.2/14.

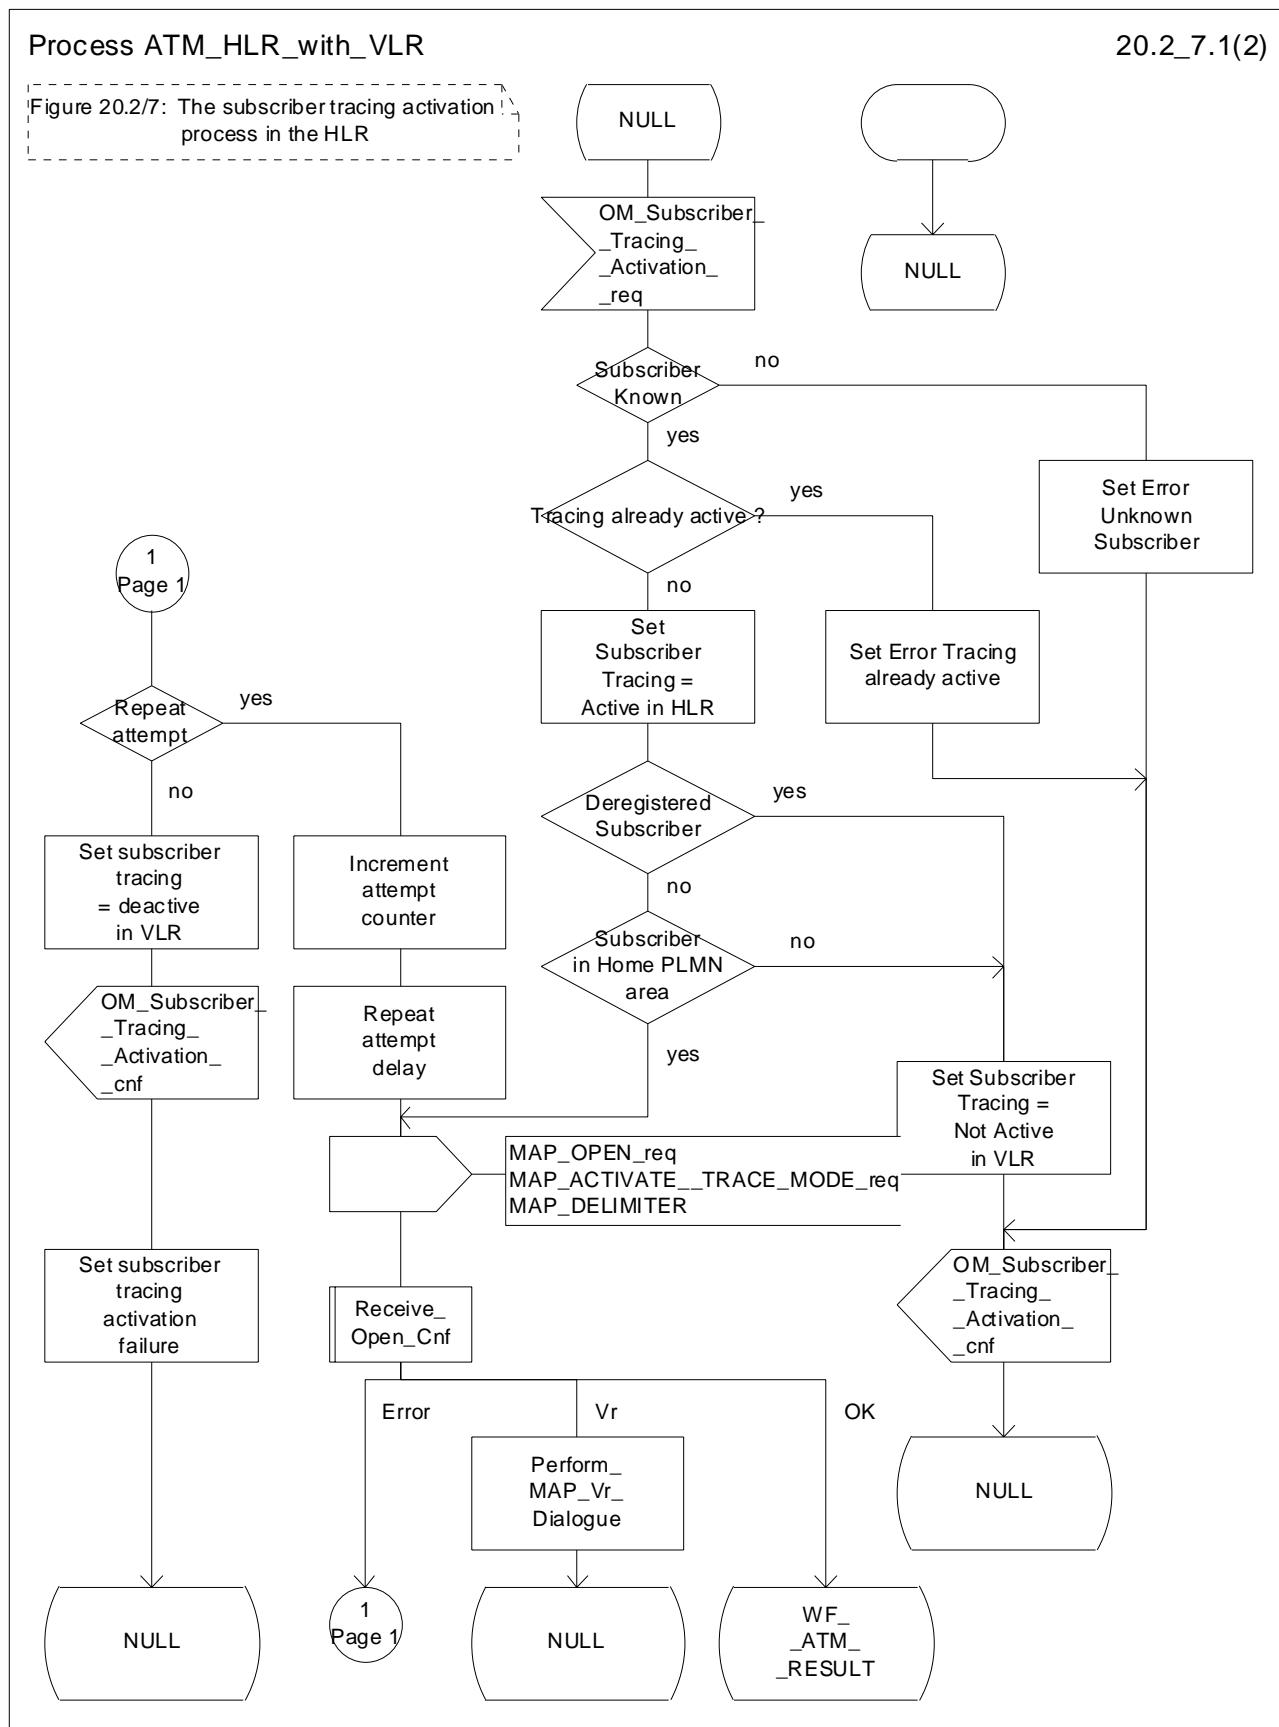


Figure 20.2/7 (sheet 1 of 2): Process ATM\_HLR\_with\_VLR

## Process ATM\_HLR\_with\_VLR

20.2\_7.2(2)

Figure 20.2/7: The subscriber tracing activation process in the HLR


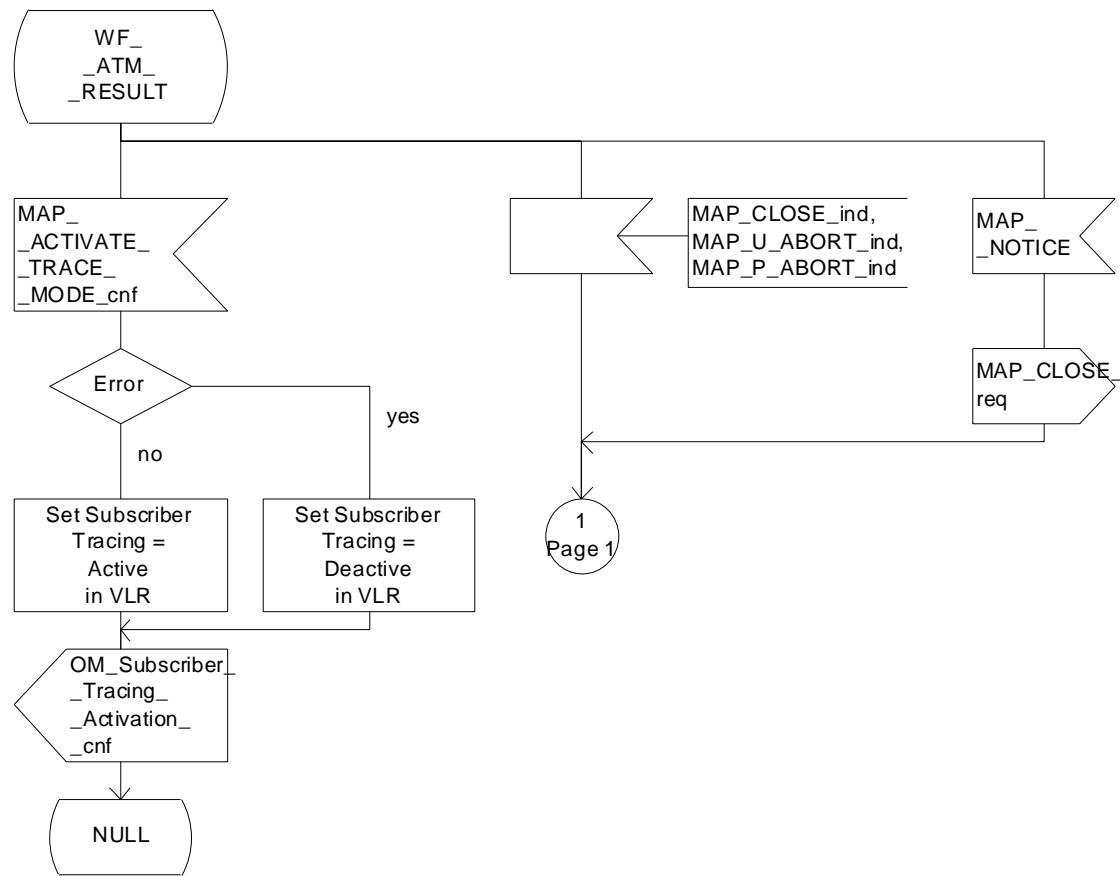


Figure 20.2/7 (sheet 2 of 2): Process ATM\_HLR\_with\_VLR

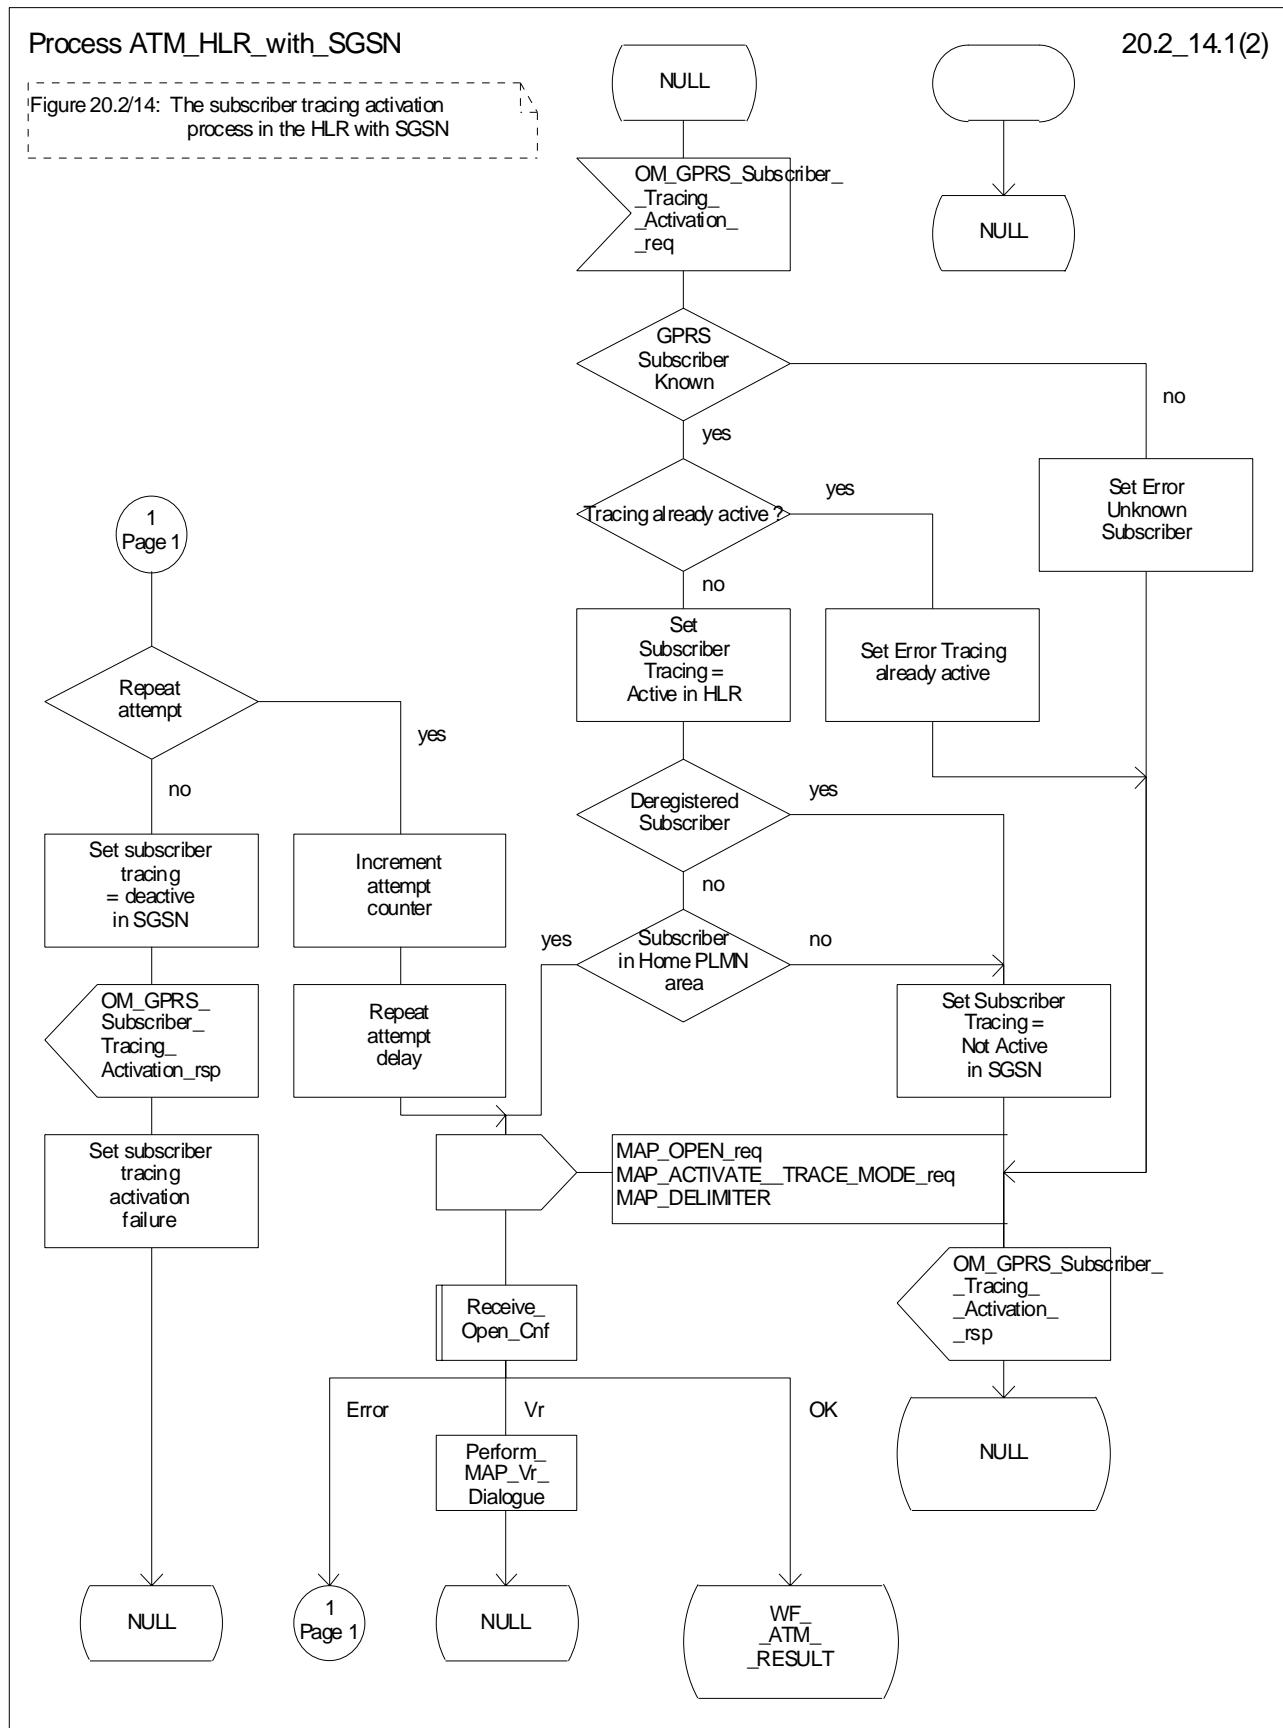

**Figure 20.2/14 (sheet 1 of 2): Process ATM\_HLR\_with\_SGSN**

## Process ATM\_HLR\_with\_SGSN

20.2\_14.2(2)

Figure 20.2/14: The subscriber tracing activation process in the HLR with SGSN

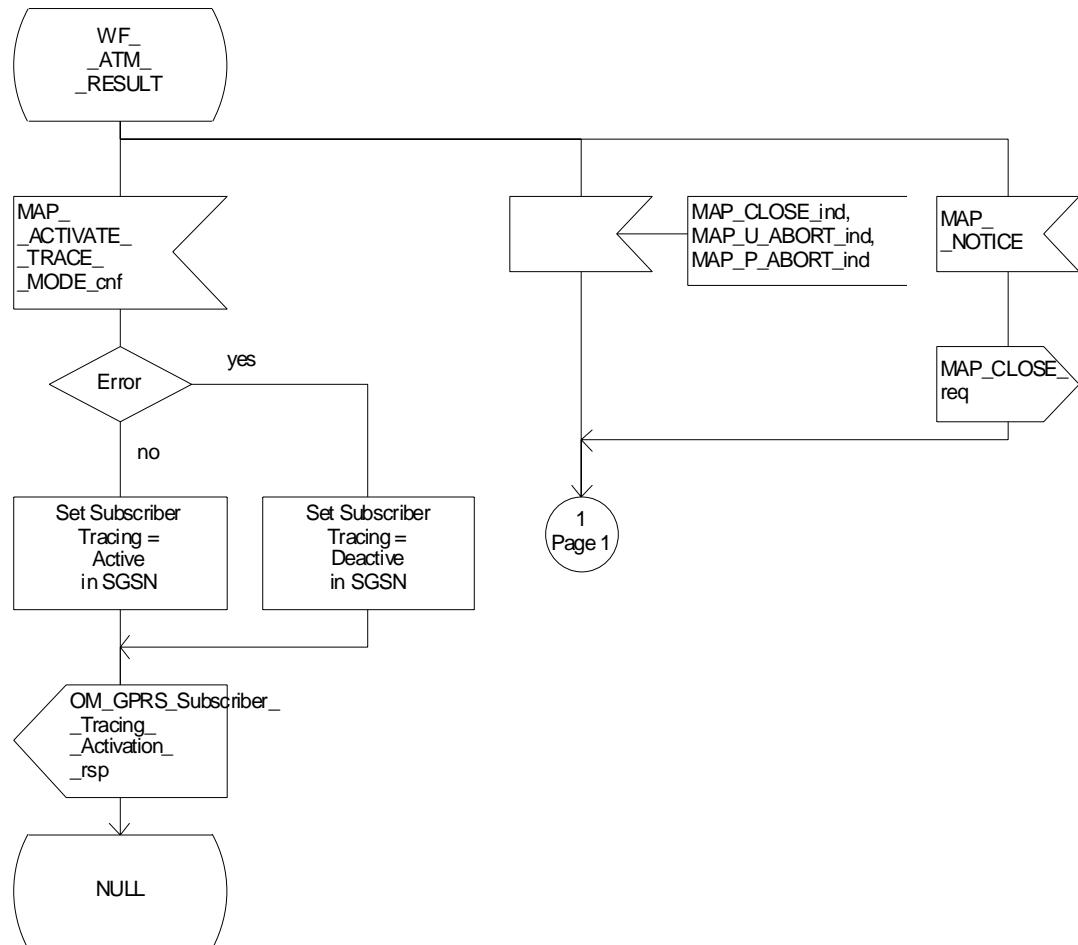


Figure 20.2/14 (sheet 2 of 2): Process ATM\_HLR\_with\_SGSN

### 20.2.1.2 Subscriber tracing deactivation procedure

When receiving the subscriber trace mode deactivation command for a subscriber from the OMC, the HLR will send the MAP\_DEACTIVATE\_TRACE\_MODE request to the VLR or to the SGSN where the subscriber is registered, if the trace mode activation has been carried out. The subscriber tracing in HLR is set to a deactivate state.

If the operation is successful, the HLR will set the subscriber tracing in VLR or in SGSN to a deactivate state.

If the MAP\_DEACTIVATE\_TRACE\_MODE confirmation is received indicating an error situation, the errors are mapped to the OMC interface. The deactivation request may be also repeated; the number of repeat attempts and the time in between are HLR operator options, depending on the error returned by the VLR or by the SGSN.

The subscriber tracing deactivation procedure with VLR is shown in figure 20.2/8.

The subscriber tracing deactivation procedure with SGSN is shown in figure 20.2/15.

## Process DTM\_HLR\_with\_VLR

20.2\_8.1(2)

Figure 20.2/8: The subscriber tracing deactivation process in the HLR

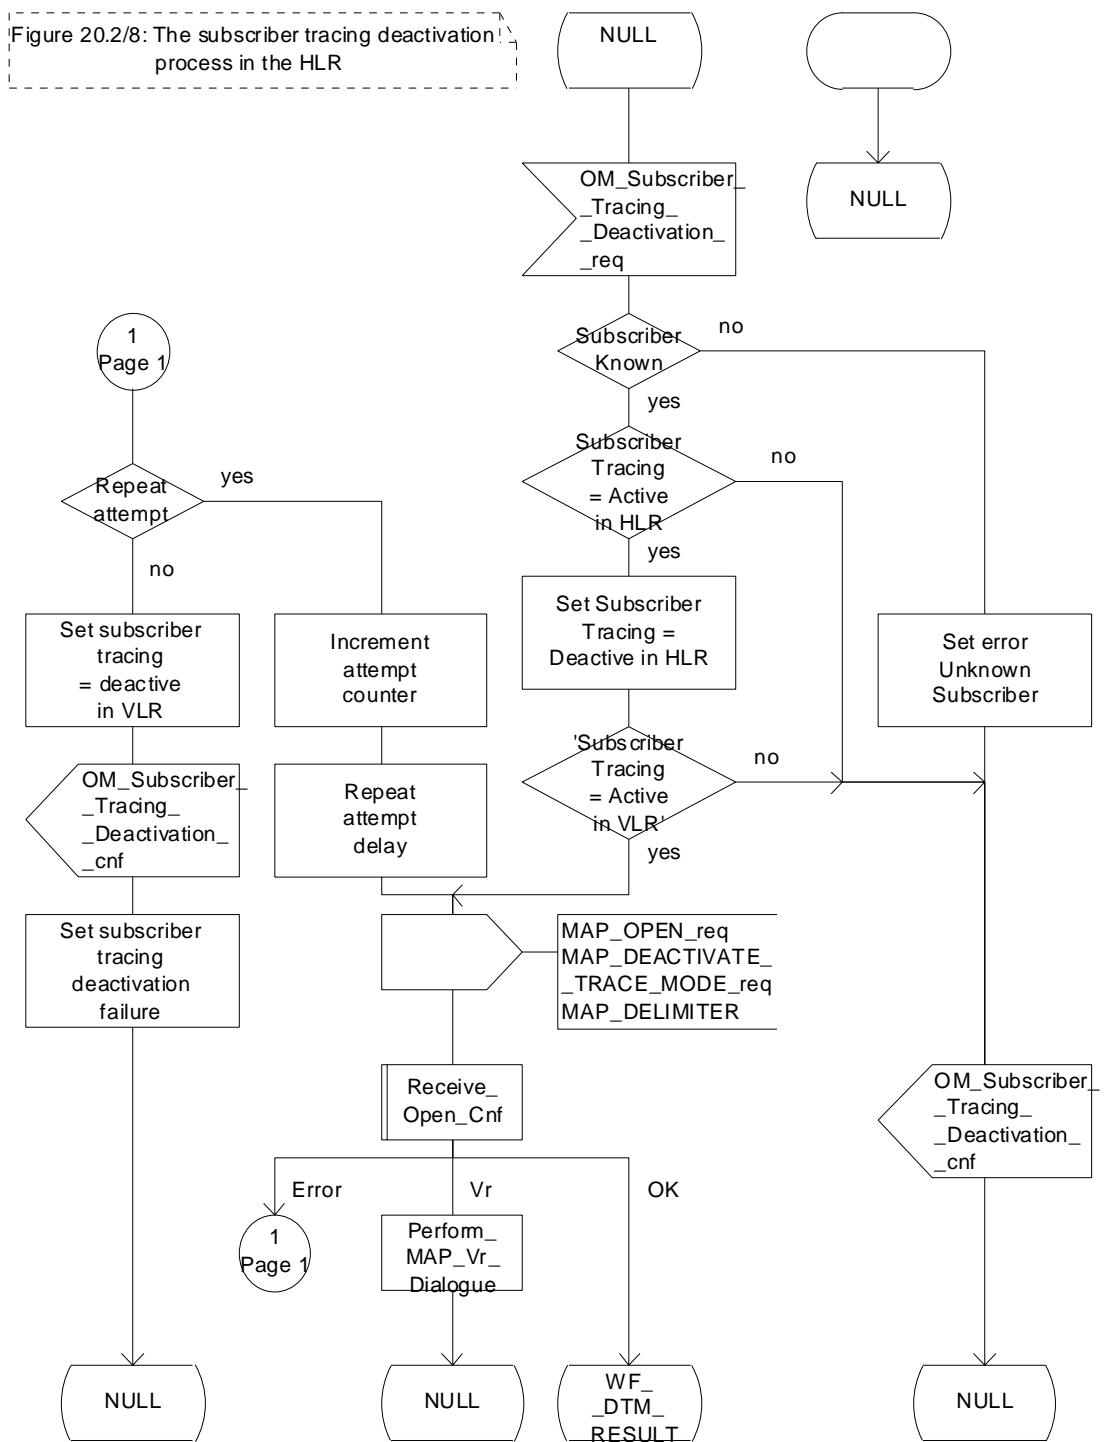


Figure 20.2/8 (sheet 1 of 2): Process DTM\_HLR\_with\_VLR

## Process DTM\_HLR\_with\_VLR

20.2\_8.2(2)

Figure 20.2/8: The subscriber tracing deactivation process in the HLR


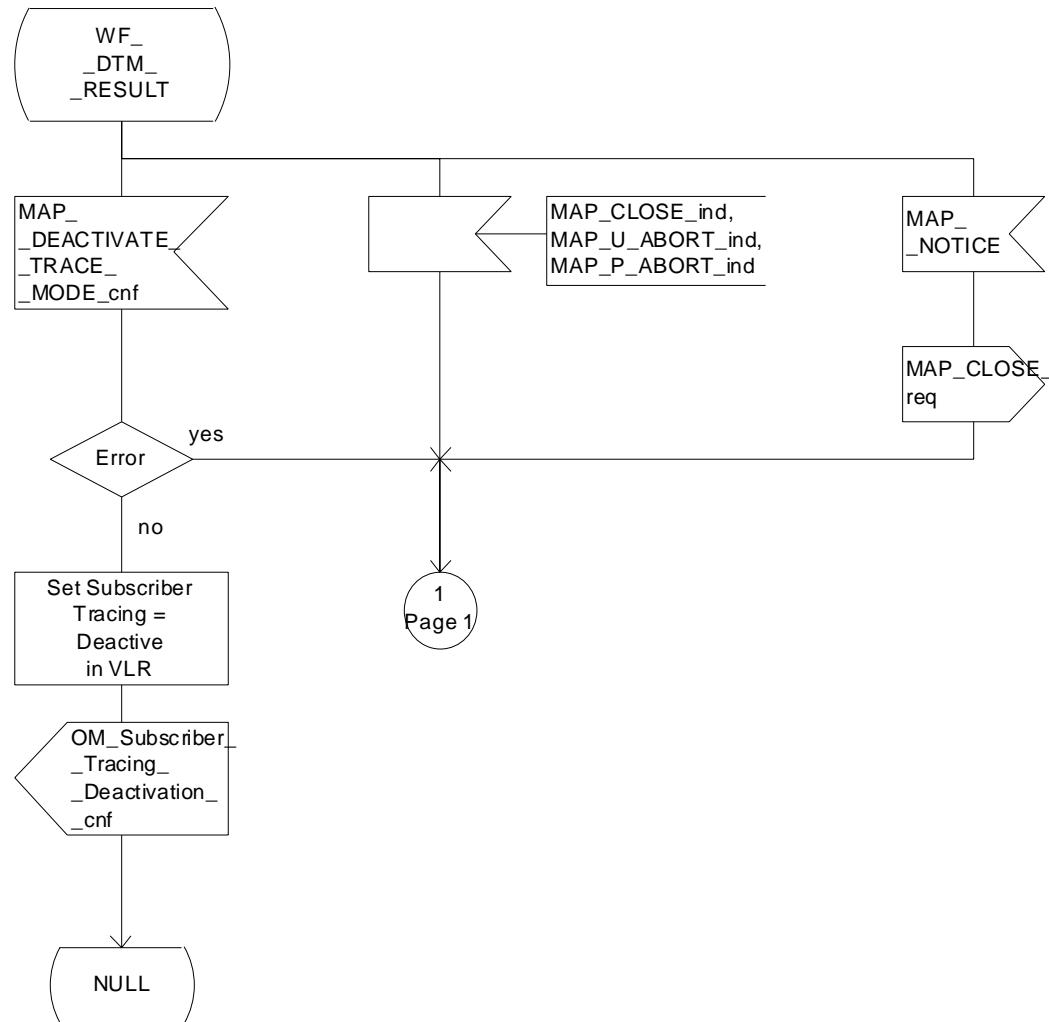


Figure 20.2/8 (sheet 2 of 2): Process DTM\_HLR\_with\_VLR

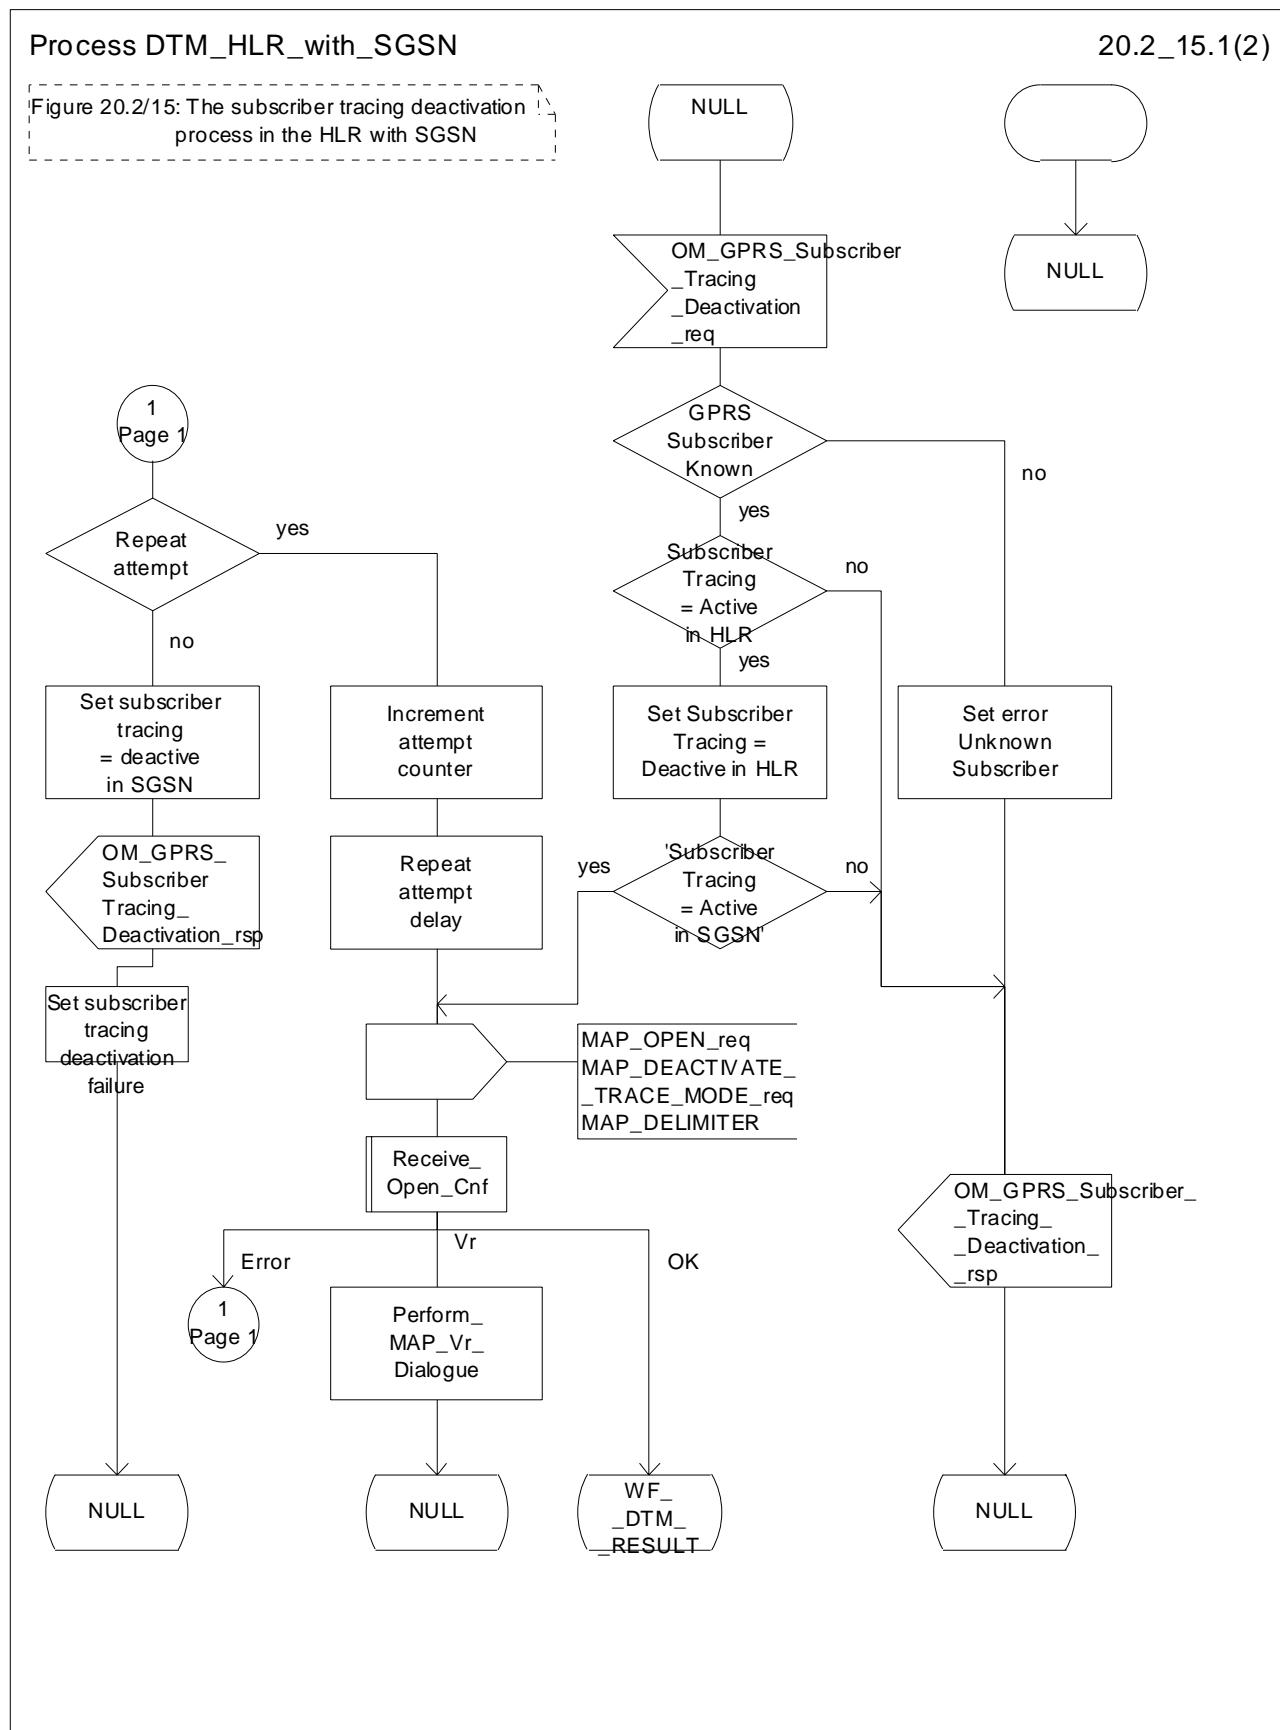

**Figure 20.2/15 (sheet 1 of 2): Process DTM\_HLR\_with\_SGSN**

## Process DTM\_HLR\_with\_SGSN

20.2\_15.2(2)

Figure 20.2/15: The subscriber tracing deactivation process in the HLR with SGSN

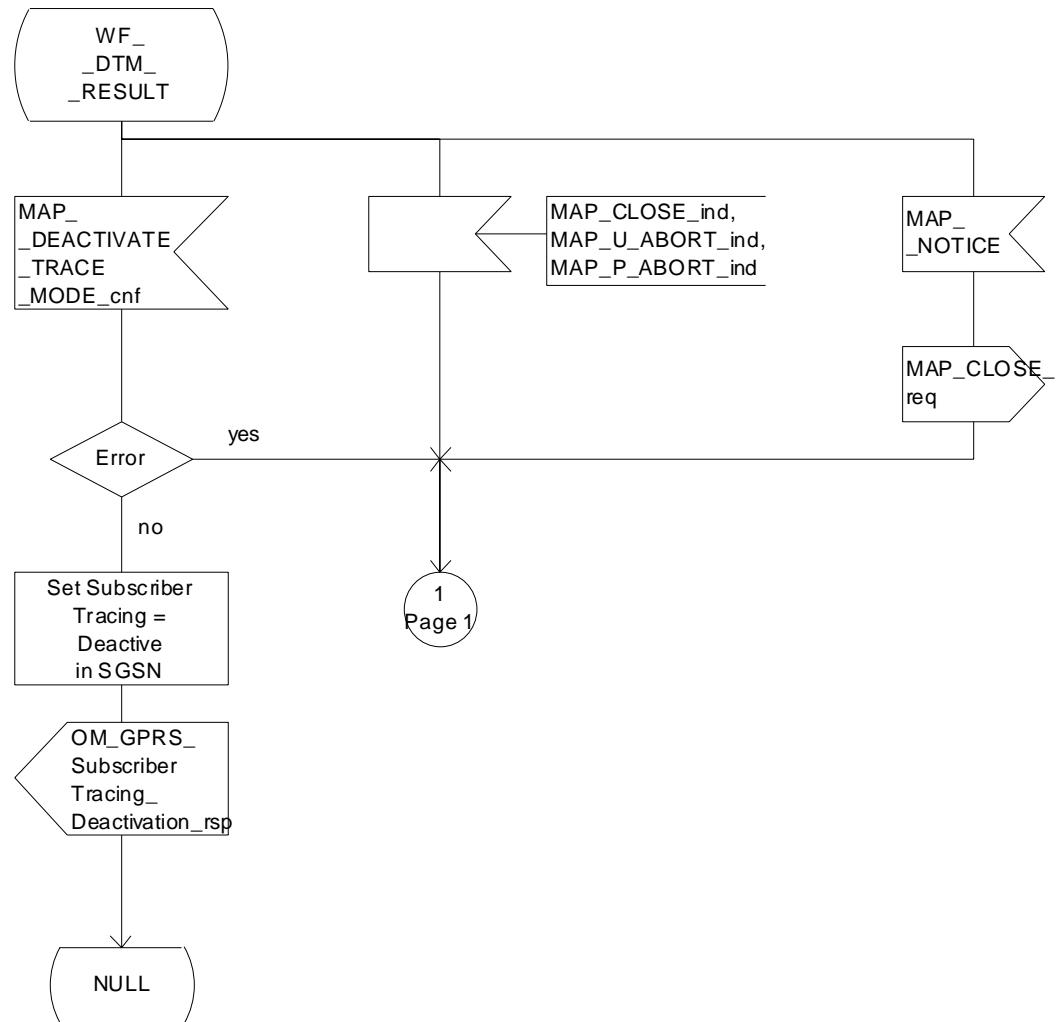


Figure 20.2/15 (sheet 2 of 2): Process DTM\_HLR\_with\_SGSN

## 20.2.2 Procedures in the VLR

The VLR is involved in the following tracing procedures:

- i) Subscriber tracing activation procedure;
- ii) Subscriber tracing deactivation procedure;
- iii) Subscriber tracing procedure.


### 20.2.2.1 Subscriber tracing activation procedure

When receiving a MAP\_ACTIVATE\_TRACE\_MODE indication, the VLR will check the parameters and data in the primitive. Data errors are reported as an unexpected data value error or as a data missing error depending on the nature of the error.

If the subscriber is known, the tracing facility is supported and the tracing capacity is not exceeded, the successful report is sent in the MAP\_ACTIVATE\_TRACE\_MODE response primitive.

The MAP\_ACTIVATE\_TRACE\_MODE indication primitive may be received during a location updating or data restoration procedure, so the location updating or restore data process shall use the macro Activate\_Tracing\_VLR (see figure 25.9/3).

The subscriber tracing activation process in the VLR is shown in figure 20.2/9.

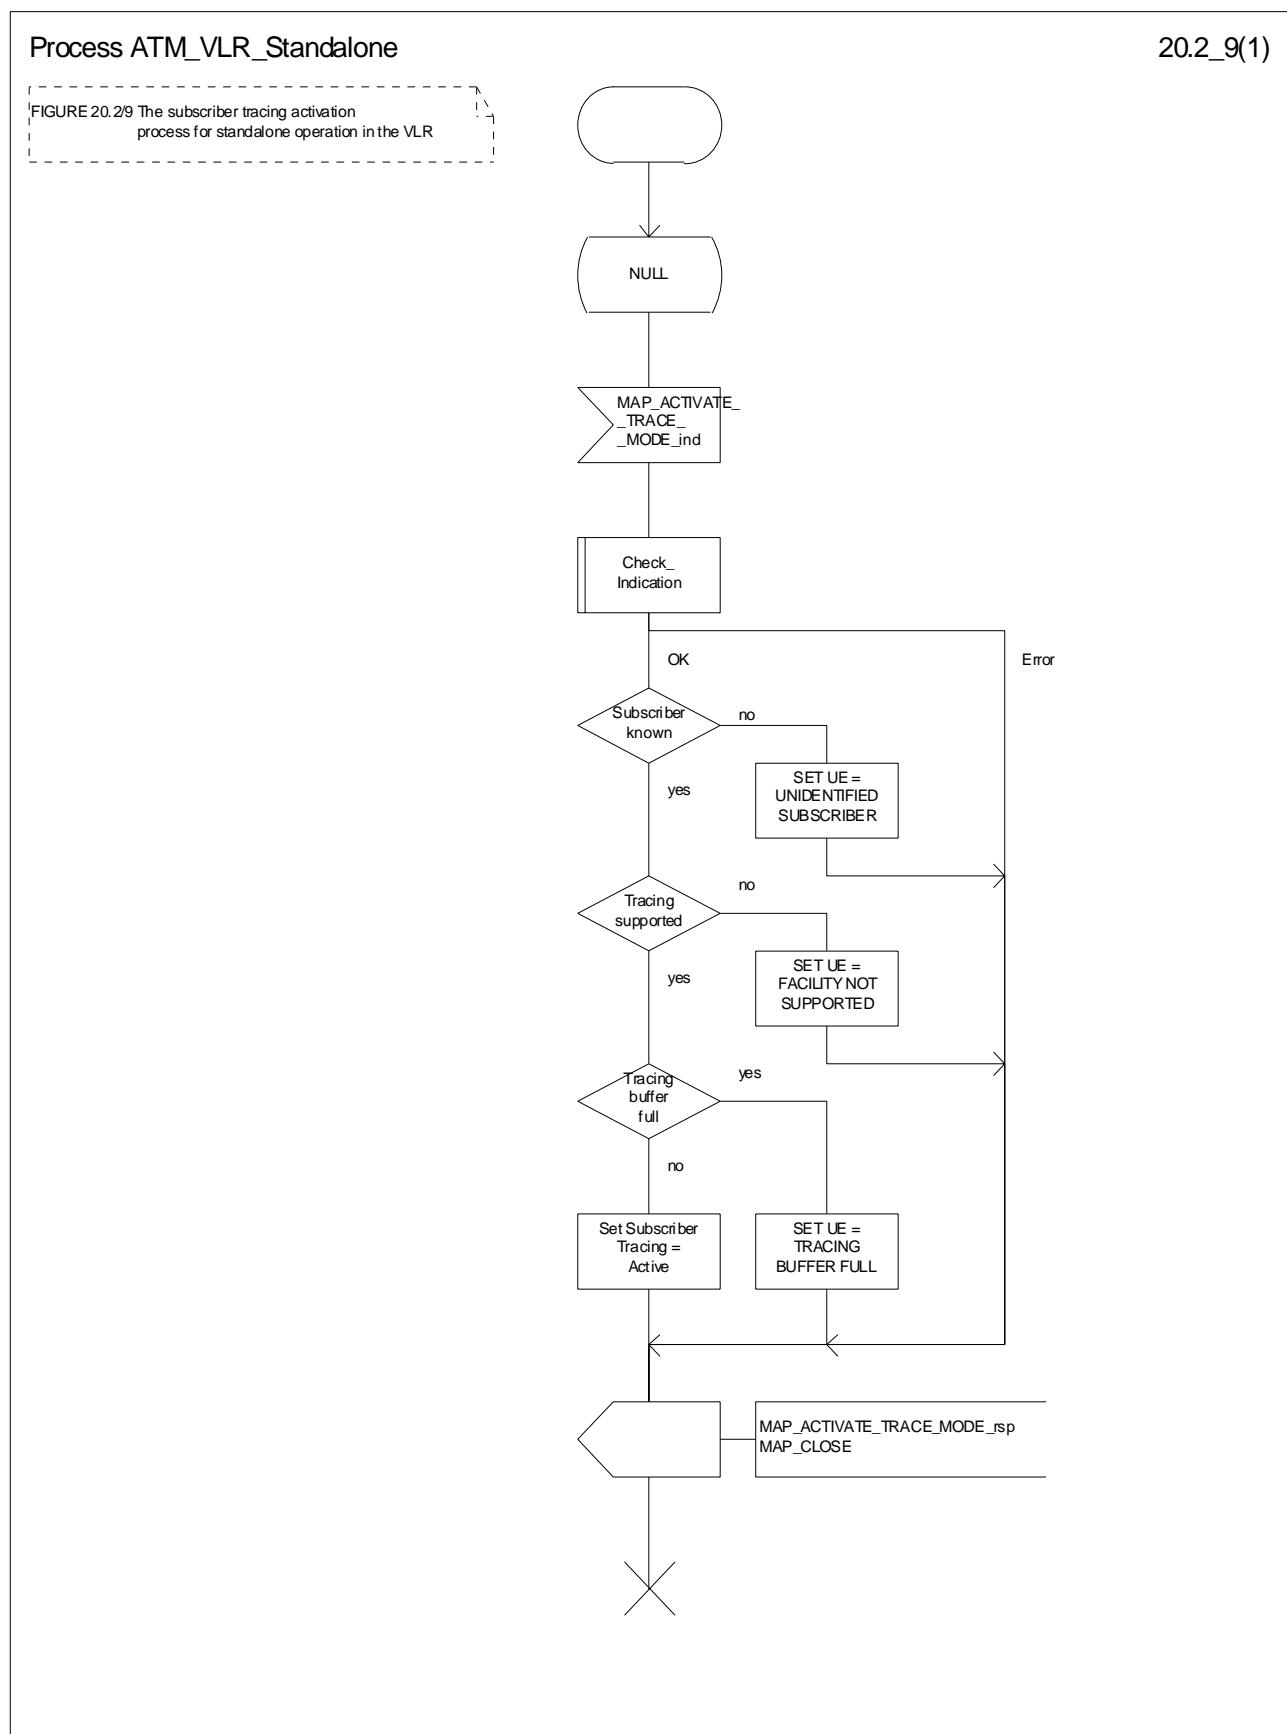**Figure 20.2/9: Process ATM\_VLR\_Standalone**

### 20.2.2.2 Subscriber tracing deactivation procedure

When receiving a MAP\_DEACTIVATE\_TRACE\_MODE indication, the VLR will check the parameters and data in the primitive. Data errors are reported as an unexpected data value error or as a data missing error depending on the nature of the error.

If the subscriber is known and the tracing facility is supported, the successful report is sent in the MAP\_DEACTIVATE\_TRACE\_MODE response primitive.

The subscriber tracing deactivation procedure in the VLR is shown in figure 20.2/10.

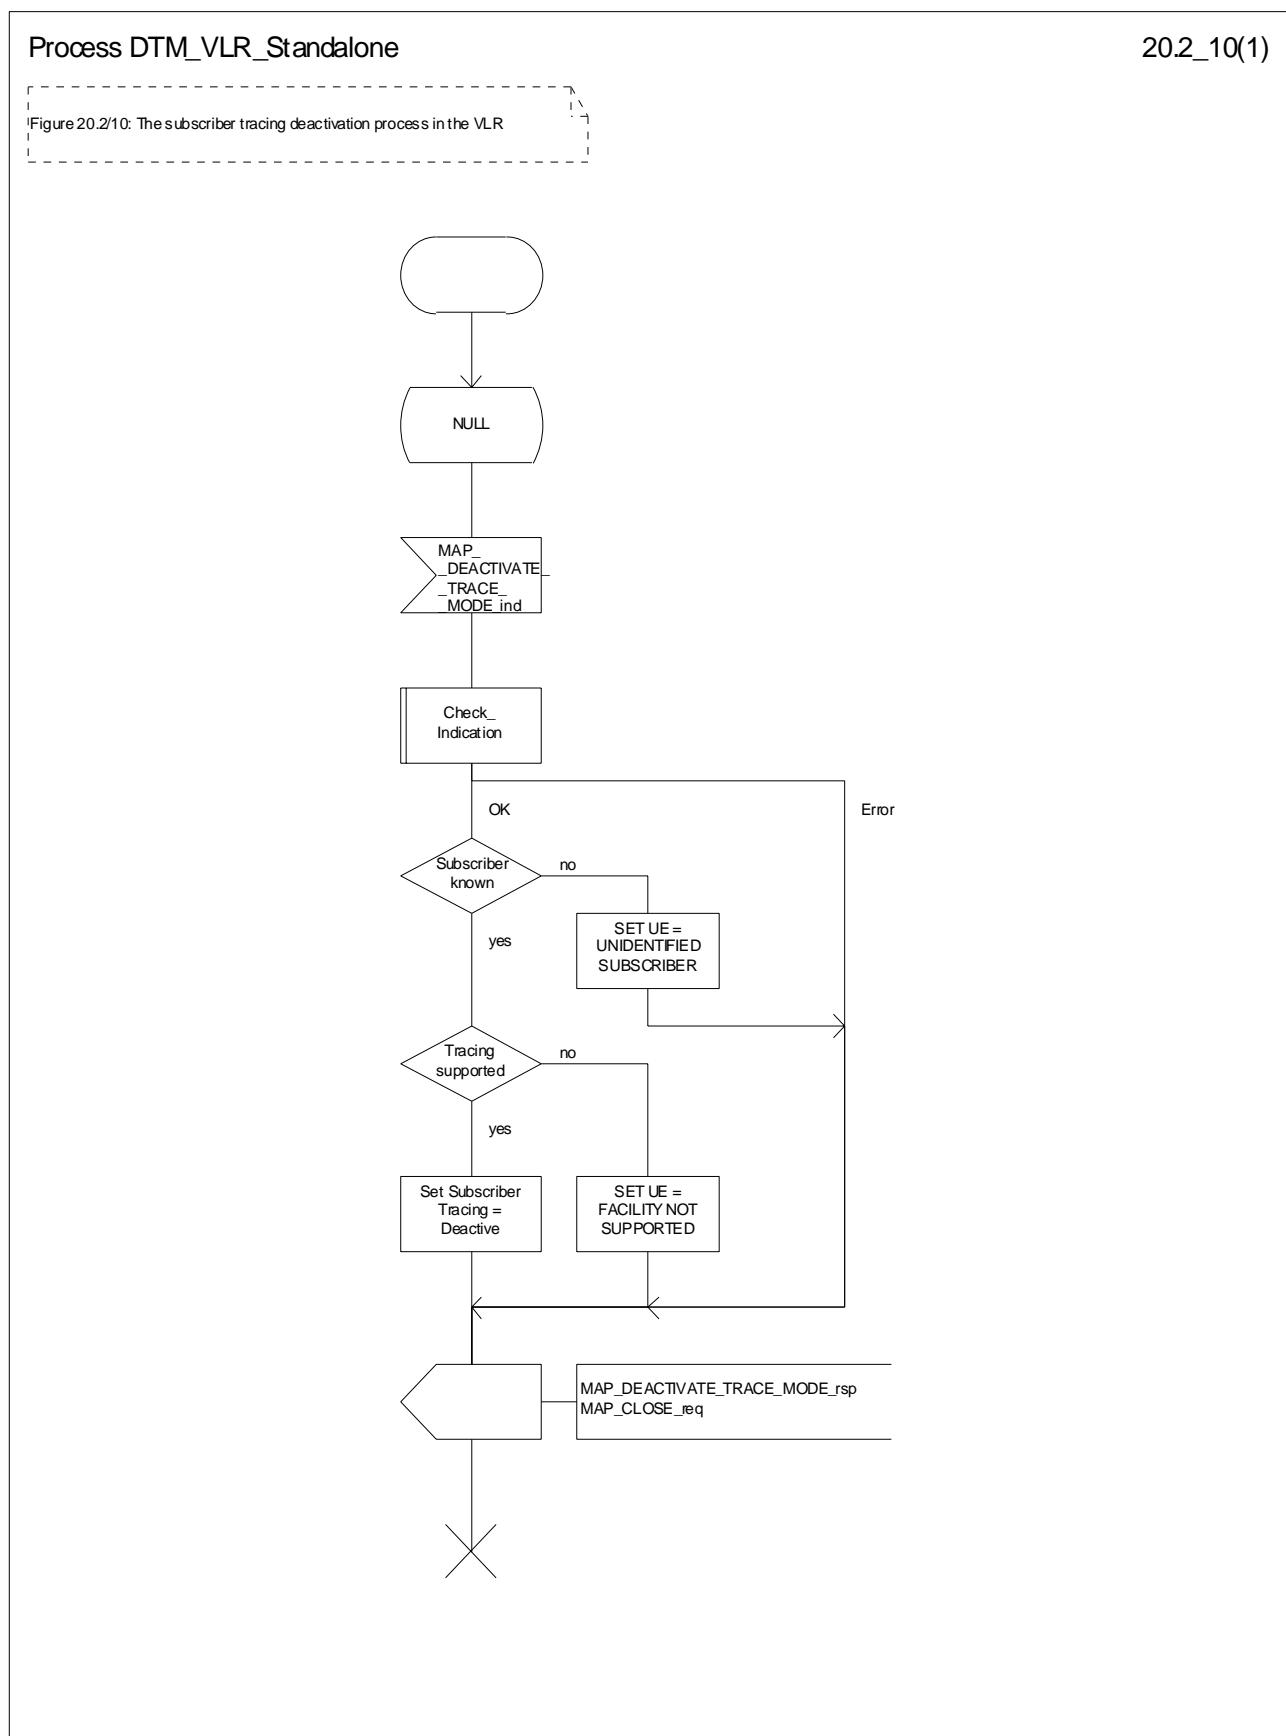


Figure 20.2/10: Process DTM\_VLR\_Standalone

### 20.2.2.3 Subscriber tracing procedure

When the VLR receives a MAP\_PROCESS\_ACCESS\_REQUEST or MAP\_UPDATE\_LOCATION\_AREA indication related to any subscriber activity from the MSC, the subscriber tracing procedure may be carried out. The macro Trace\_Subscriber\_Activity\_VLR is shown in figure 25.9/2.

## 20.2.3 Procedures in the MSC

The MSC is involved in the following tracing procedure:

- i) Subscriber tracing procedure.

### 20.2.3.1 Subscriber tracing procedure

When receiving the MAP\_TRACE\_SUBSCRIBER\_ACTIVITY indication from the VLR, the MSC stores trace reference, trace type and the identity of the OMC in charge of the trace, and the MSC starts to collect the trace information. The MSC will send the trace record to the OMC.

The macro Trace\_Subscriber\_Activity\_MSC is shown in figure 25.9/1.

## 20.2.4 Procedures in the SGSN

The SGSN is involved in the following tracing procedures:

- i) Subscriber tracing activation procedure;
- ii) Subscriber tracing deactivation procedure.

### 20.2.4.1 Subscriber tracing activation procedure

When receiving a MAP\_ACTIVATE\_TRACE\_MODE indication, the SGSN will check the parameters and data in the primitive. Data errors are reported as an unexpected data value error or as a data missing error depending on the nature of the error.

If the subscriber is known, the tracing facility is supported and the tracing capacity is not exceeded, the successful report is sent in the MAP\_ACTIVATE\_TRACE\_MODE response primitive.

The MAP\_ACTIVATE\_TRACE\_MODE indication primitive may be received during a location updating or data restoration procedure, so the location updating or restore data process shall use the macro Activate\_Tracing\_SGSN (see figure 25.9/7).

The subscriber tracing activation process in the SGSN is shown in figure 20.2/16.

### 20.2.4.2 Subscriber tracing deactivation procedure in SGSN

When receiving a MAP\_DEACTIVATE\_TRACE\_MODE indication, the SGSN will check the parameters and data in the primitive. Data errors are reported as an unexpected data value error or as a data missing error depending on the nature of the error.

If the subscriber is known and the tracing facility is supported, the successful report is sent in the MAP\_DEACTIVATE\_TRACE\_MODE response primitive.

The subscriber tracing deactivation procedure in the SGSN is shown in figure 20.2/17.

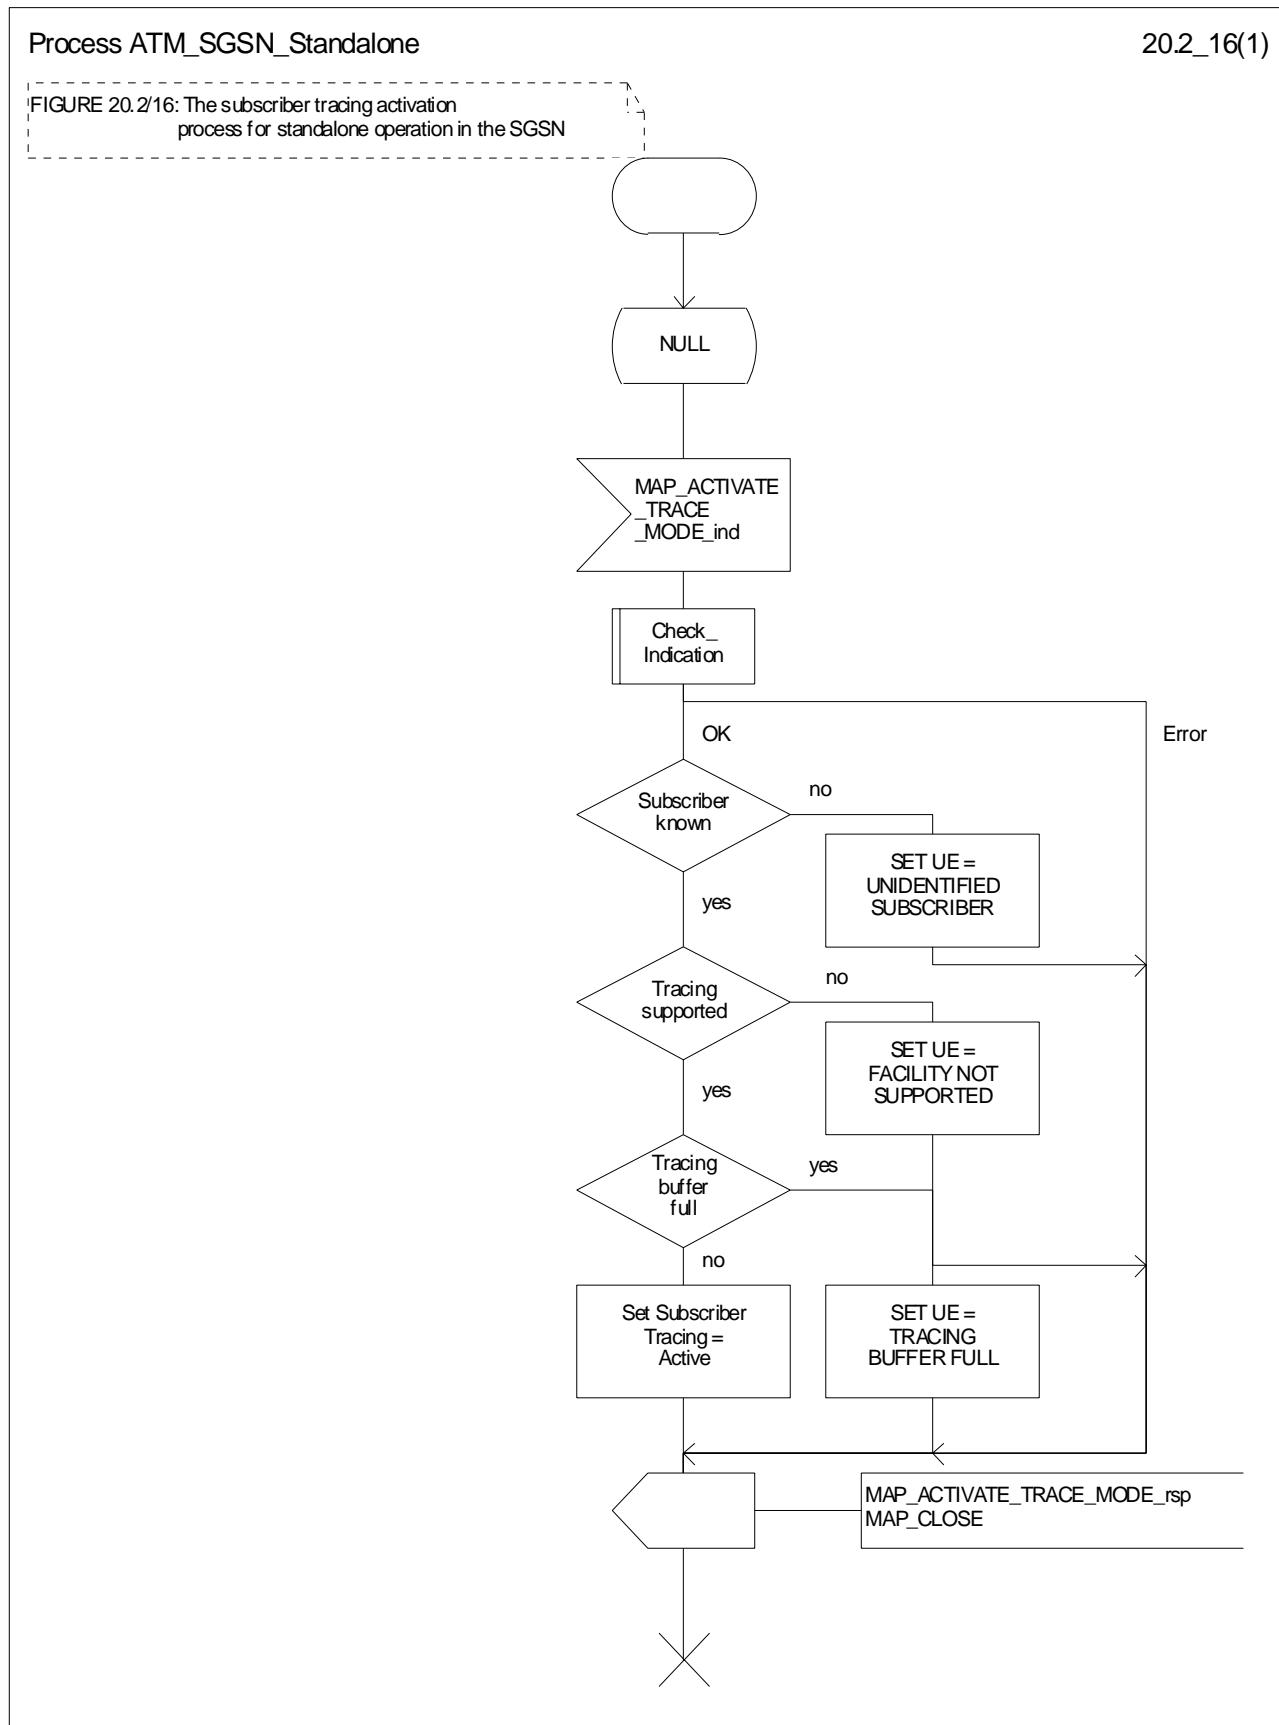


Figure 20.2/16: Process ATM\_SGSN\_Standalone

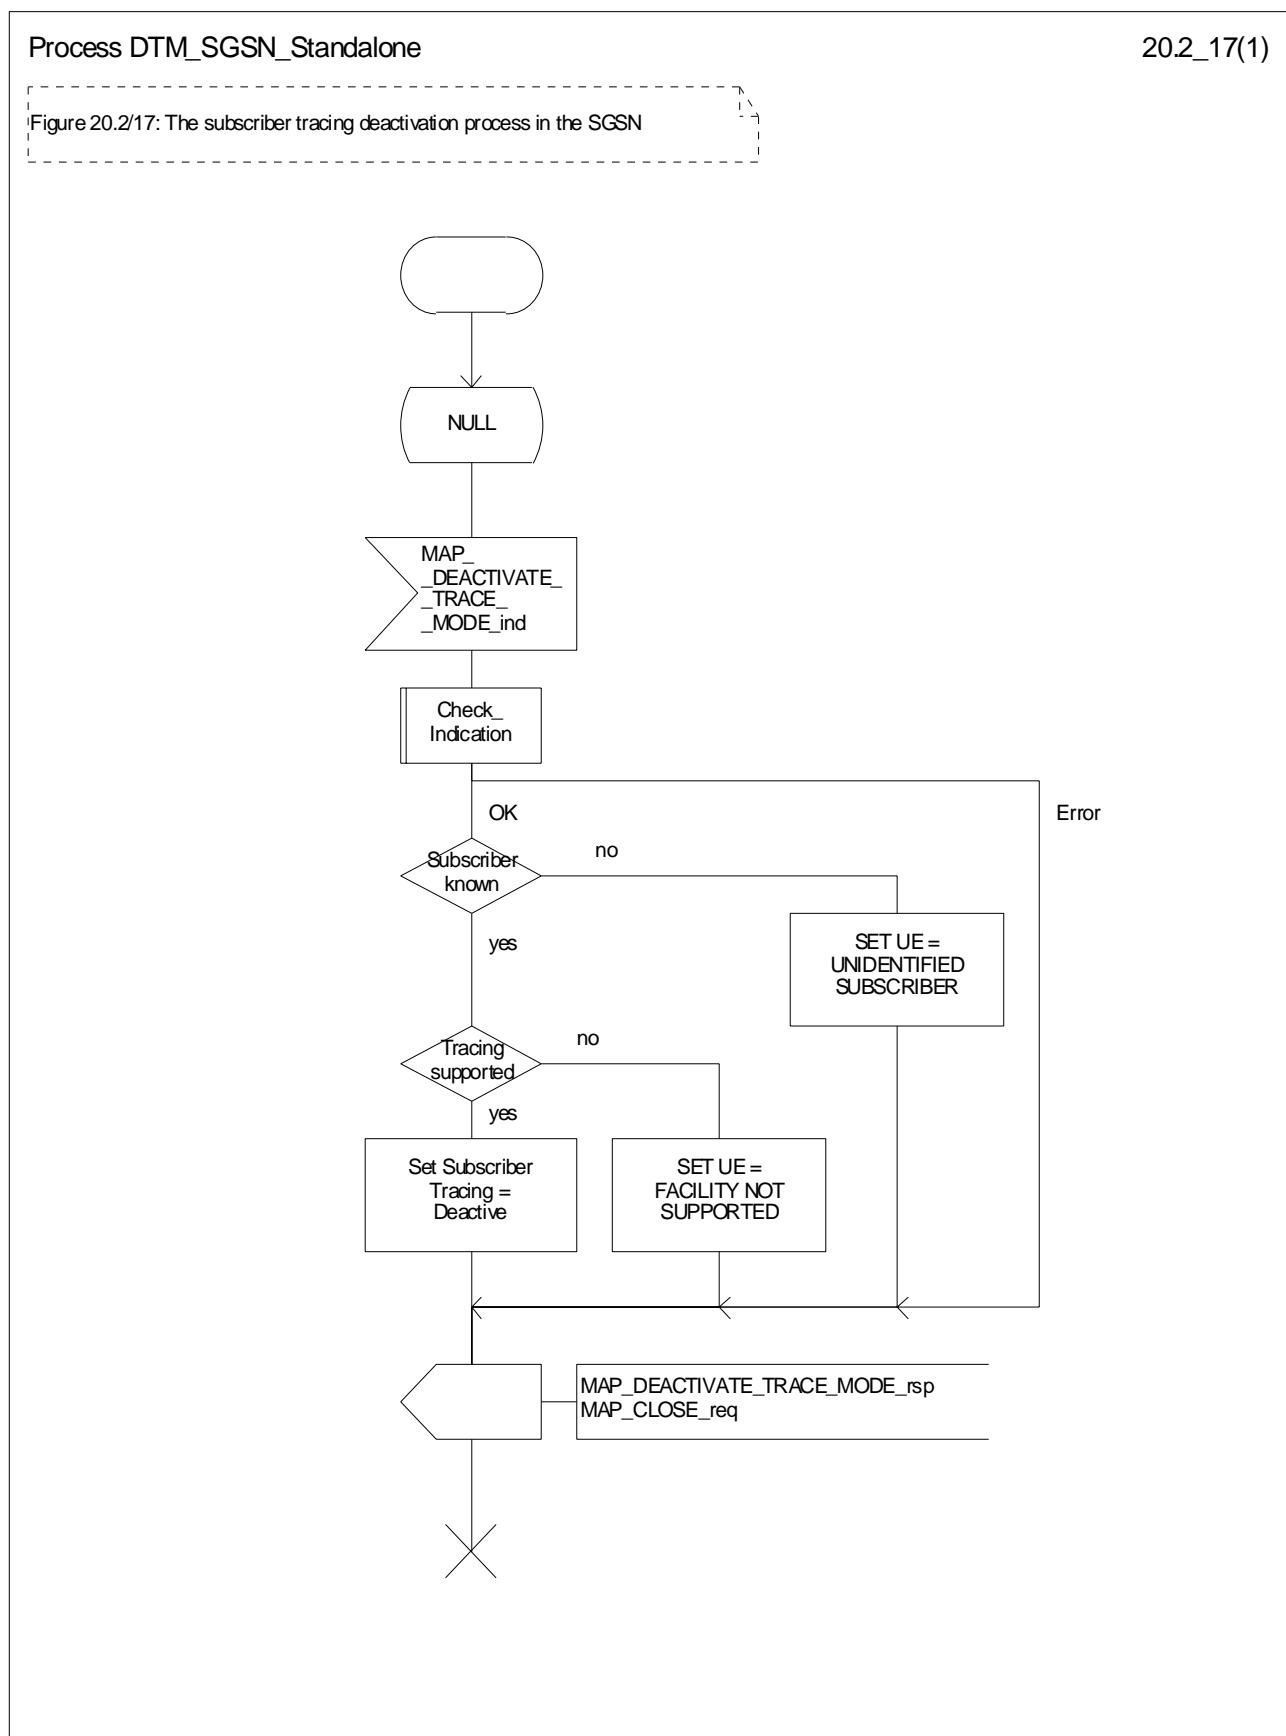


Figure 20.2/17: Process DTM\_SGSN\_Standalone


## 20.3 Subscriber data management procedures

Two types of subscriber data management procedures exist in the Mobile Application Part

- i) Subscriber Deletion;
- ii) Subscriber Data Modification.

No requirements have been identified for the Subscriber creation and subscriber data interrogation procedures.


The subscriber deletion and subscriber data modification procedures are initiated by the OMC (see figures 20.3/1 , 20.3/2, 20.3/8 and 20.3/9).

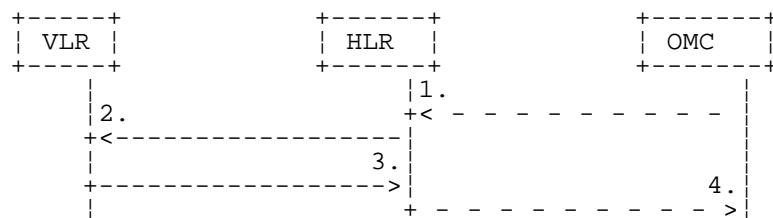

- 1) Delete Subscriber.
- 2) MAP\_CANCEL\_LOCATION.
- 3) MAP\_CANCEL\_LOCATION\_ACK.
- 4) Subscriber Deleted.

**Figure 20.3/1: Subscriber deletion procedure**


In the subscriber deletion procedure the subscriber data should be removed from the VLR and from the HLR. The HLR uses the MAP\_CANCEL\_LOCATION service.

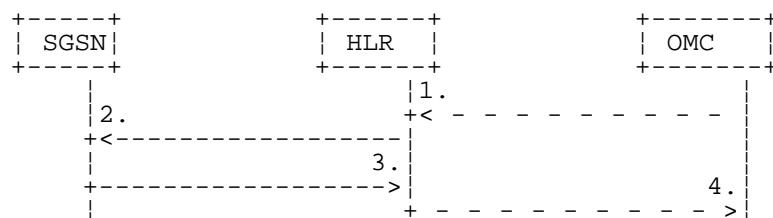

- 1) Delete GPRS Subscriber.
- 2) MAP\_CANCEL\_LOCATION.
- 3) MAP\_CANCEL\_LOCATION\_ACK.
- 4) GPRS Subscriber Deleted.


**Figure 20.3/8: Subscriber deletion procedure for GPRS**

In the subscriber deletion procedure the subscriber data should be removed from the SGSN and from the HLR. The HLR uses the MAP\_CANCEL\_LOCATION service.

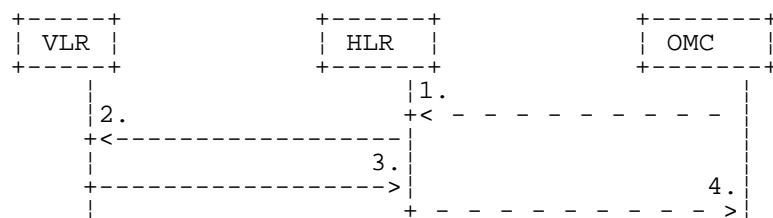

- 1) Modify Subscriber Data.
- 2) MAP\_CANCEL\_LOCATION, MAP\_INSERT\_SUBSCRIBER\_DATA or MAP\_DELETE\_SUBSCRIBER\_DATA.
- 3) MAP\_CANCEL\_LOCATION\_ACK, MAP\_INSERT\_SUBSCRIBER\_DATA\_ACK or MAP\_DELETE\_SUBSCRIBER\_DATA\_ACK.
- 4) Subscriber Data Modified.

**Figure 20.3/2: Subscriber data modification procedure**

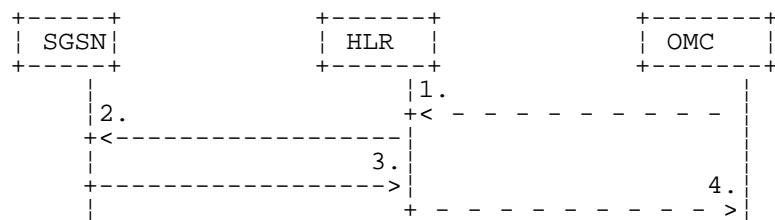

**Figure 20.3/9: Subscriber data modification procedure for GPRS**


In the subscriber data modification procedure the subscriber data is modified in the HLR and when necessary also in the VLR or in the SGSN. The HLR initiates either the MAP\_INSERT\_SUBSCRIBER\_DATA, MAP\_DELETE\_SUBSCRIBER\_DATA or MAP\_CANCEL\_LOCATION service depending on the modified data.

## 20.3.1 Procedures in the HLR

### 20.3.1.1 Subscriber deletion procedure

When the subscriber deletion request is received from the OMC, the HLR shall delete the subscriber data from the HLR and initiate the MAP\_CANCEL\_LOCATION request to the VLR or to the SGSN where the subscriber is registered.

The subscriber deletion procedure in the HLR is shown in the figure 20.3/3.

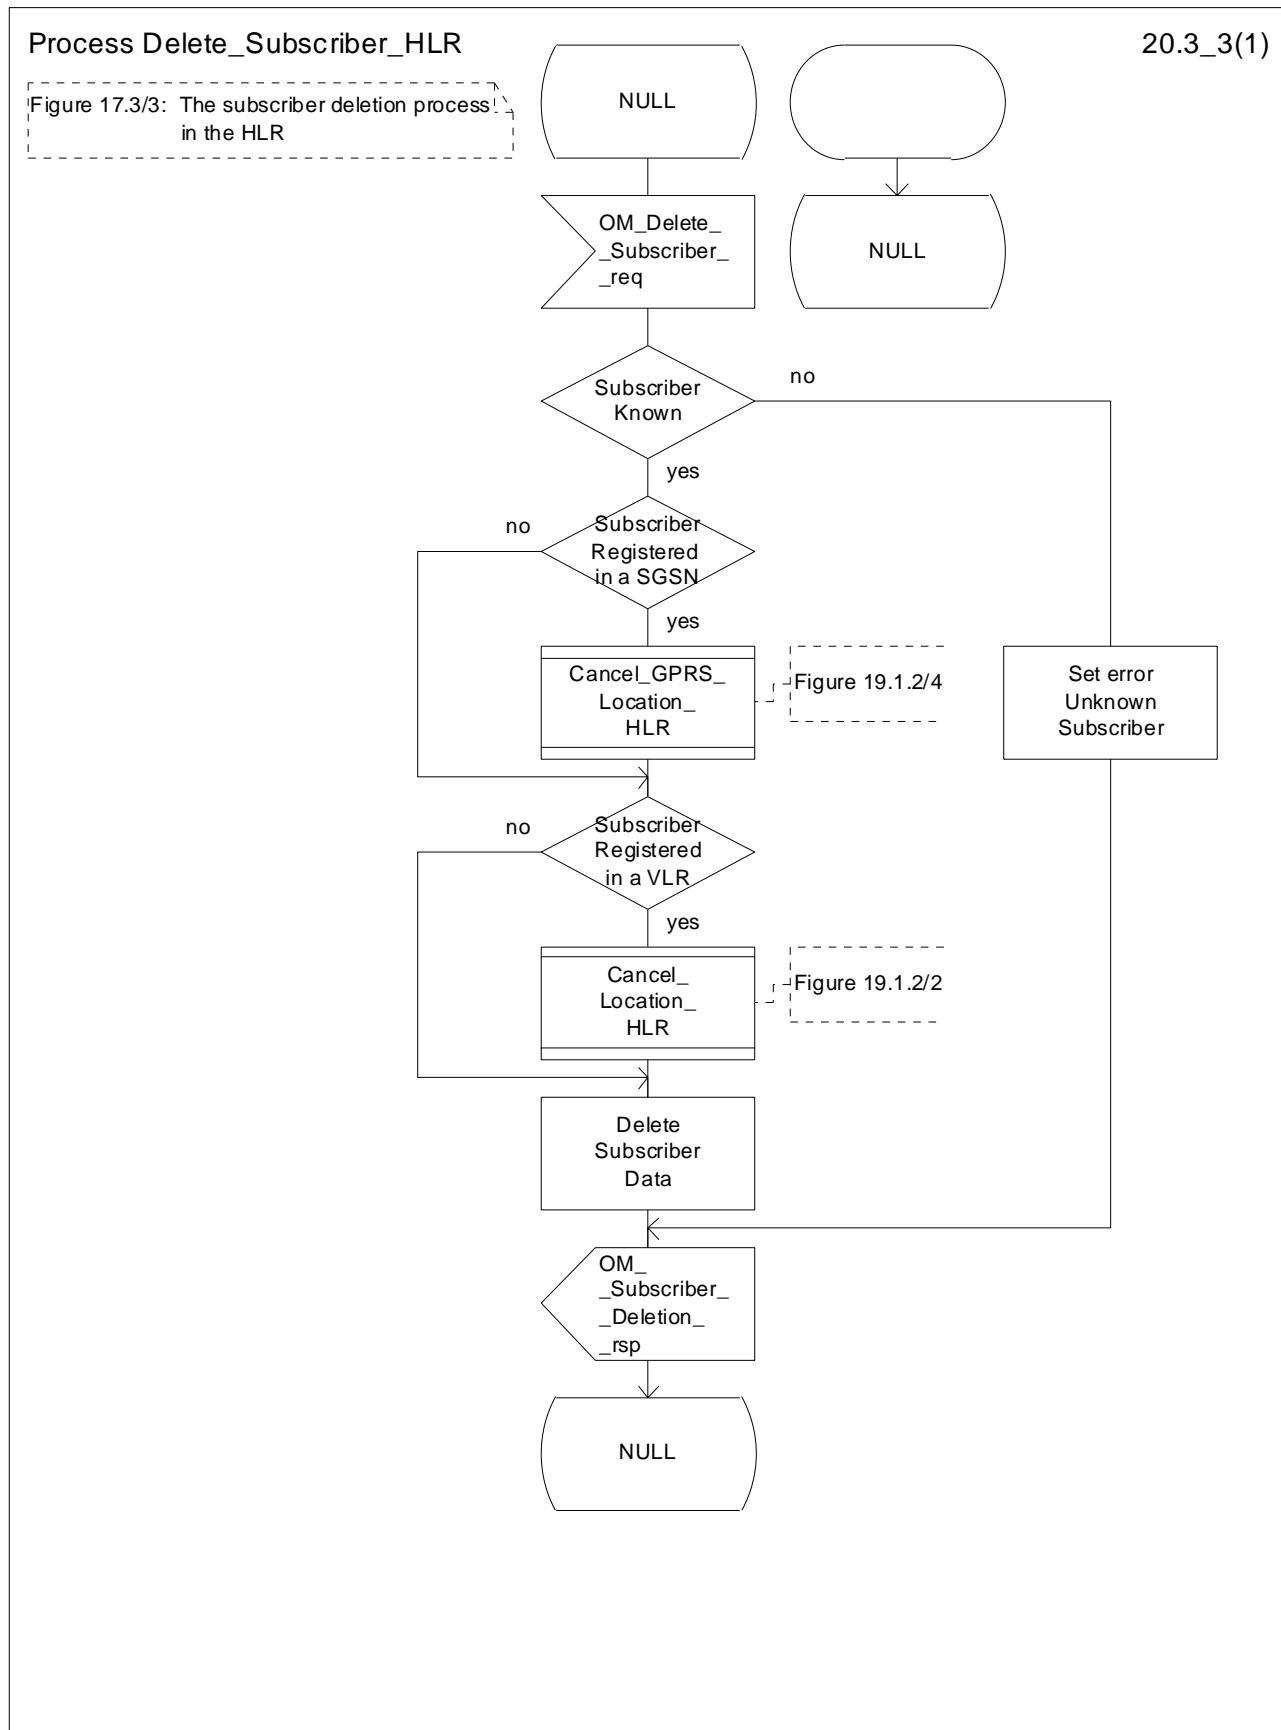**Figure 20.3/3: Process Delete\_Subscriber\_HLR**

### 20.3.1.2 Subscriber data modification procedure

The OMC can modify the subscriber data in several different ways. The modifications can be categorised in following groups:

- a) no effect in the VLR;
- b) data shall be modified in both the HLR and the VLR;
- c) withdrawal of a basic service or a supplementary service requiring change to VLR data;
- d) modification affects on the roaming of the subscriber and the subscriber shall be removed from the VLR data base;
- e) authentication algorithm or authentication key of the subscriber is modified;
- f) no effect in the SGSN;
- g) data shall be modified in both the HLR and the SGSN;
- h) withdrawal of a GPRS subscription data or a basic service or both requiring change to SGSN data;
- i) modification affects on the roaming of the subscriber and the subscriber shall be removed from the SGSN data base;
- j) withdrawal of GPRS Subscription related to Network Access Mode;
- k) withdrawal of non-GPRS Subscription related to Network Access Mode;

In case "b" and "g" the MAP\_INSERT\_SUBSCRIBER\_DATA service is initiated in the HLR.

In case "c" and "h" the MAP\_DELETE\_SUBSCRIBER\_DATA service is initiated in the HLR.

In cases "d", "e", "i", "j" and "k" the MAP\_CANCEL\_LOCATION service is initiated in the HLR.

If the result of a primitive received from the VLR or from the SGSN is unsuccessful, the HLR may initiate re-attempts; the number of repeat attempts and the time in between are HLR operator options, depending on the error returned by the VLR or by the SGSN.

The subscriber data modification procedure in the HLR is shown in the figures 20.3/4, 20.3/5 and 25.7/2.

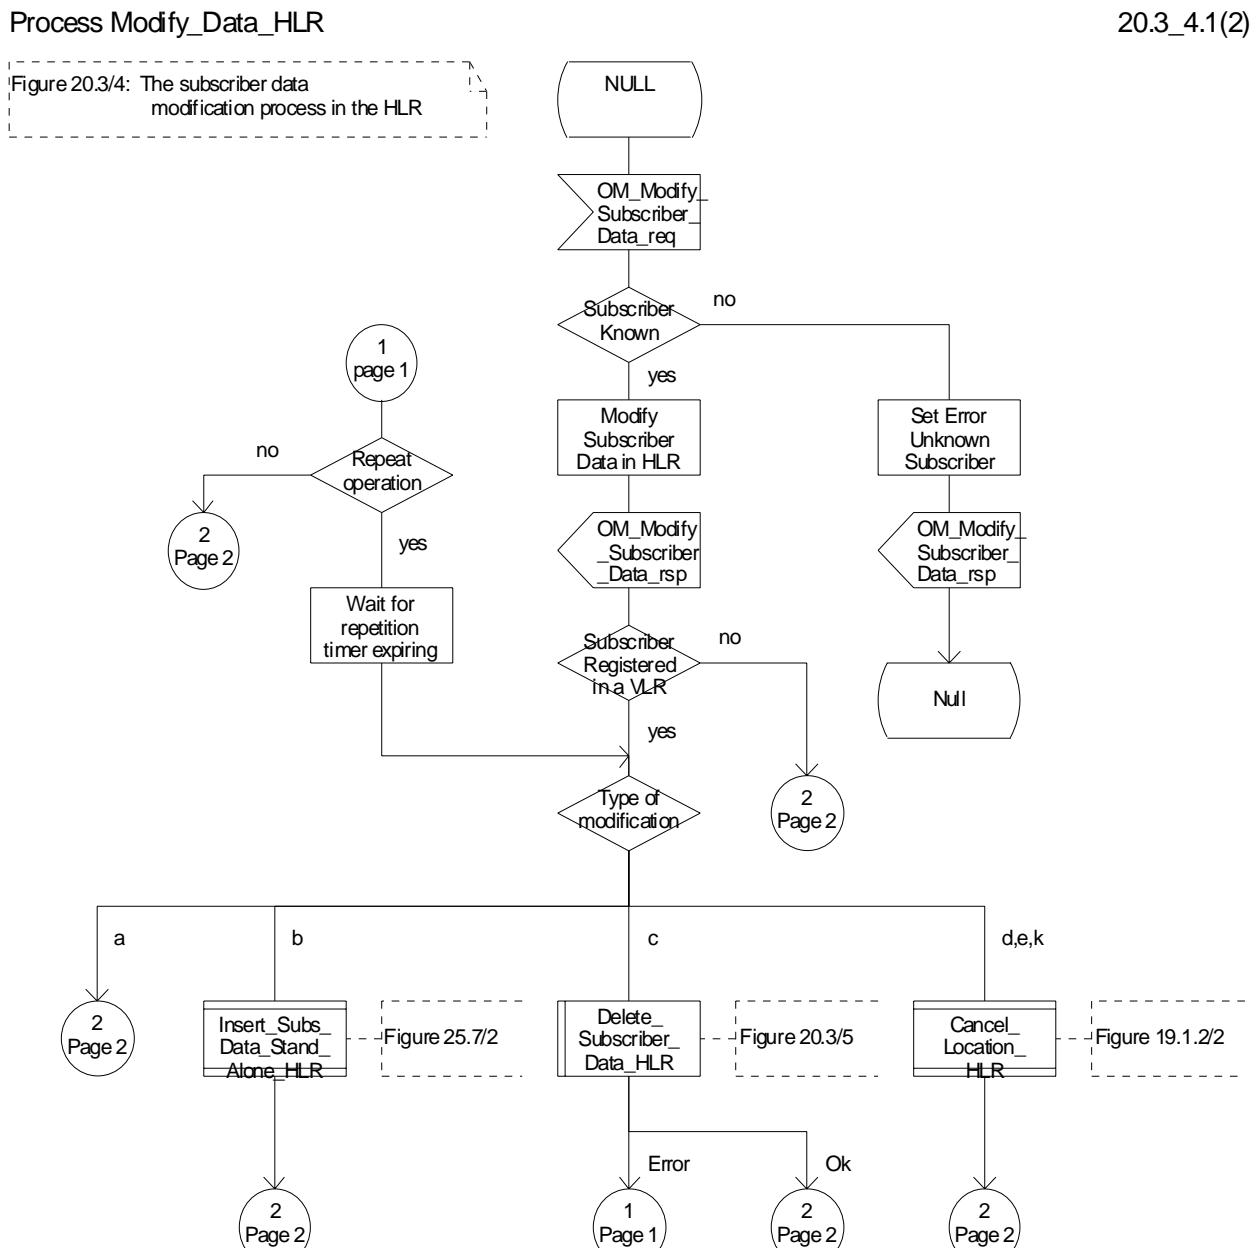


Figure 20.3/4 (sheet 1 of 2): Process Modify\_Data\_HLR

Process Modify\_Data\_HLR 20.3\_4.2(2)

Figure 20.3/4: The subscriber data modification process in the HLR

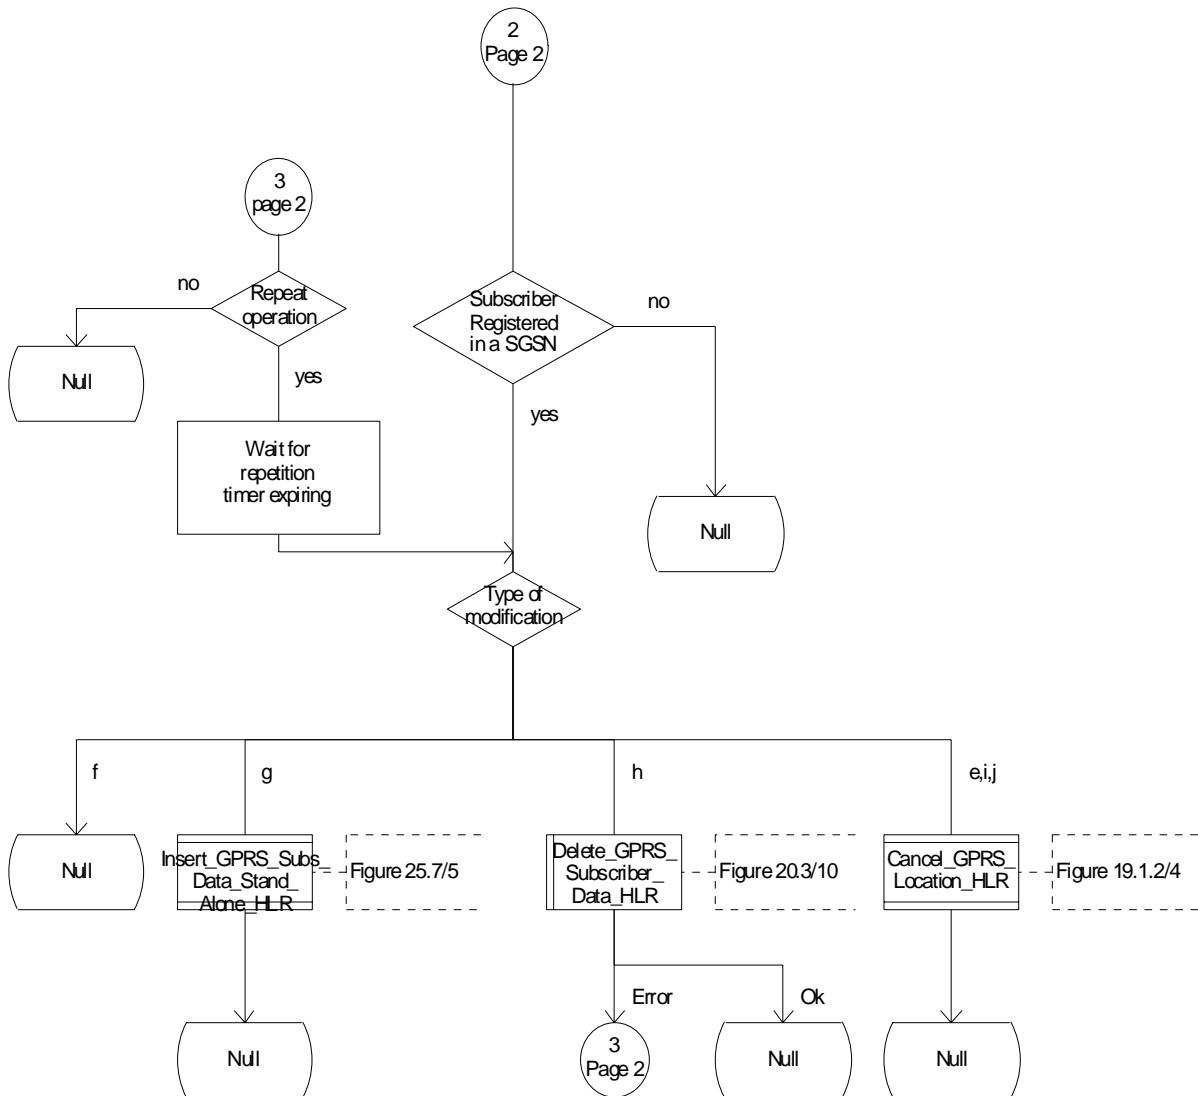


Figure 20.3/4 (sheet 2 of 2): Process Modify\_Data\_HLR

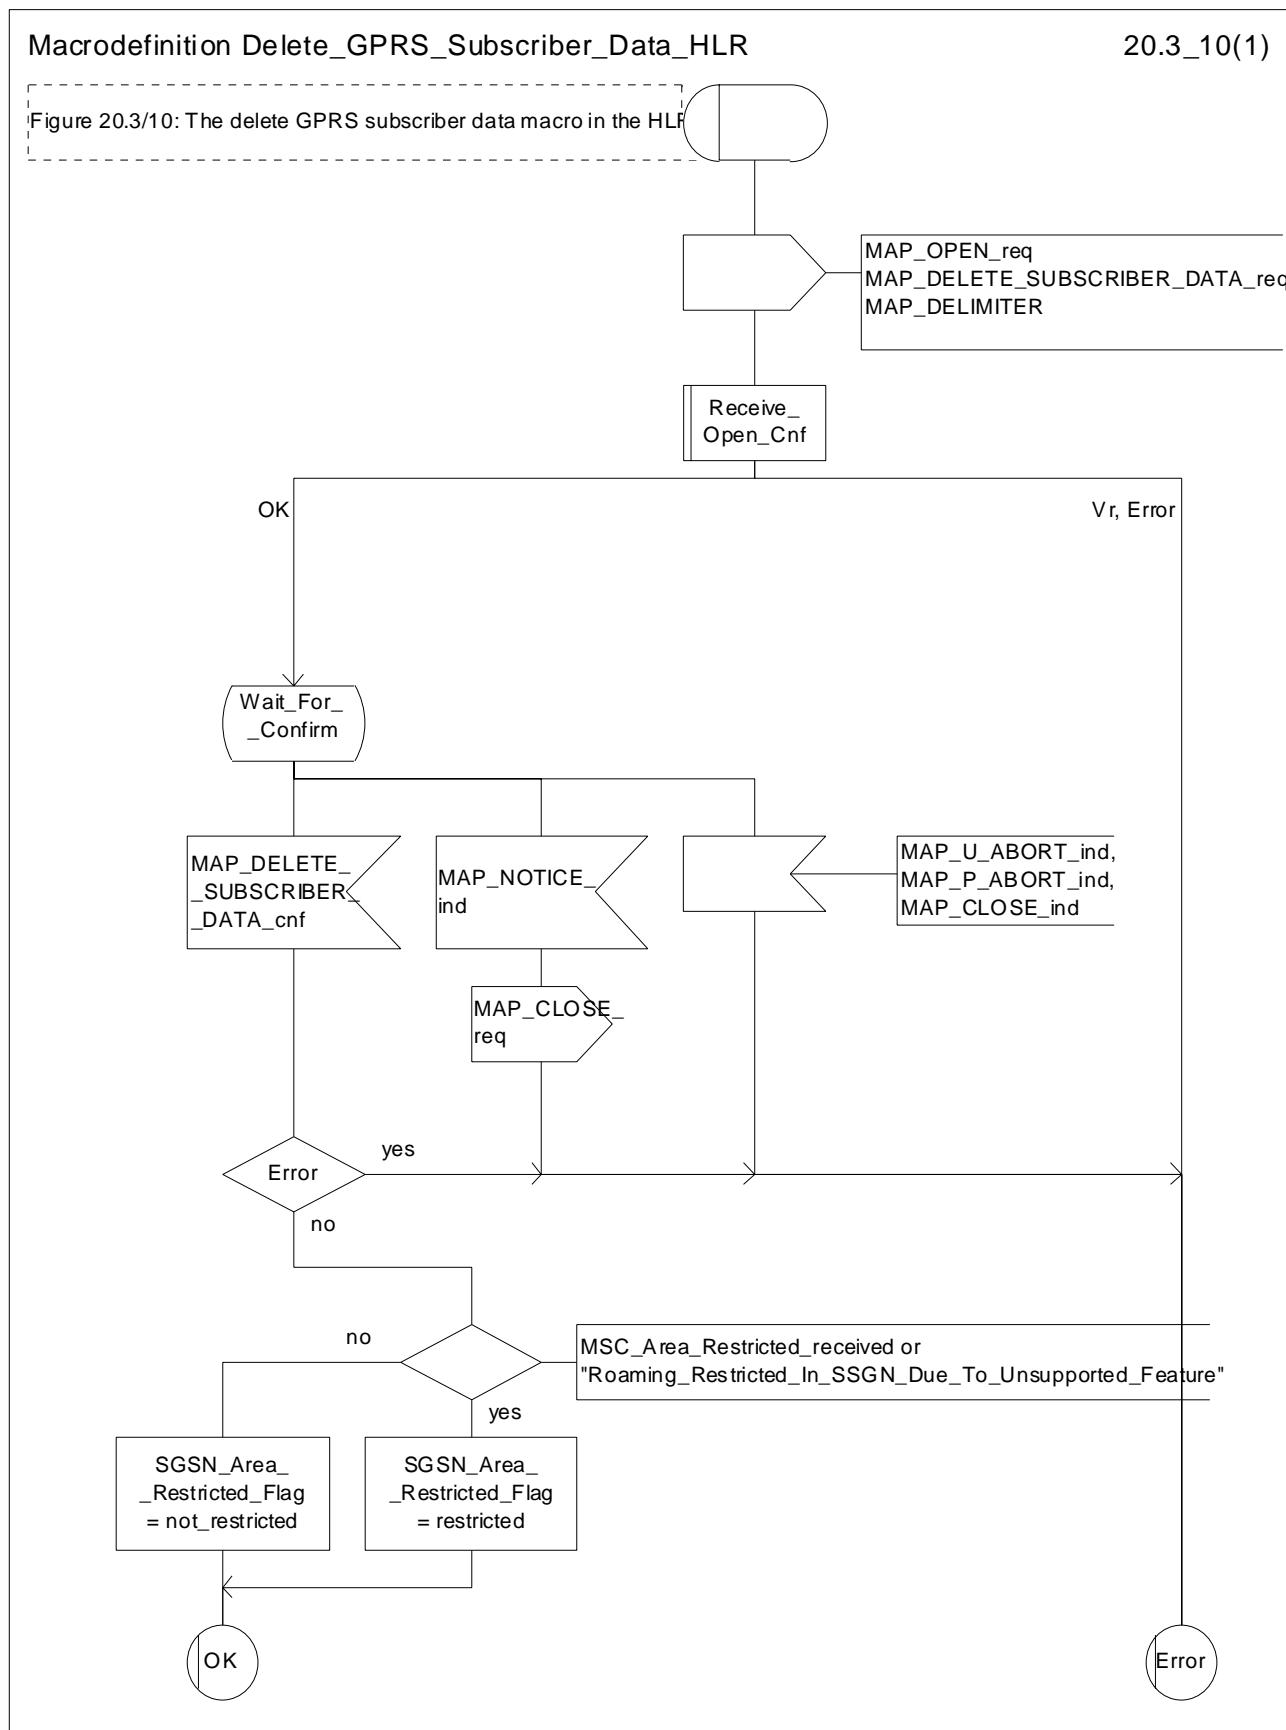


Figure 20.3/10: Macro Delete\_GPRS\_Subscriber\_Data\_HLR

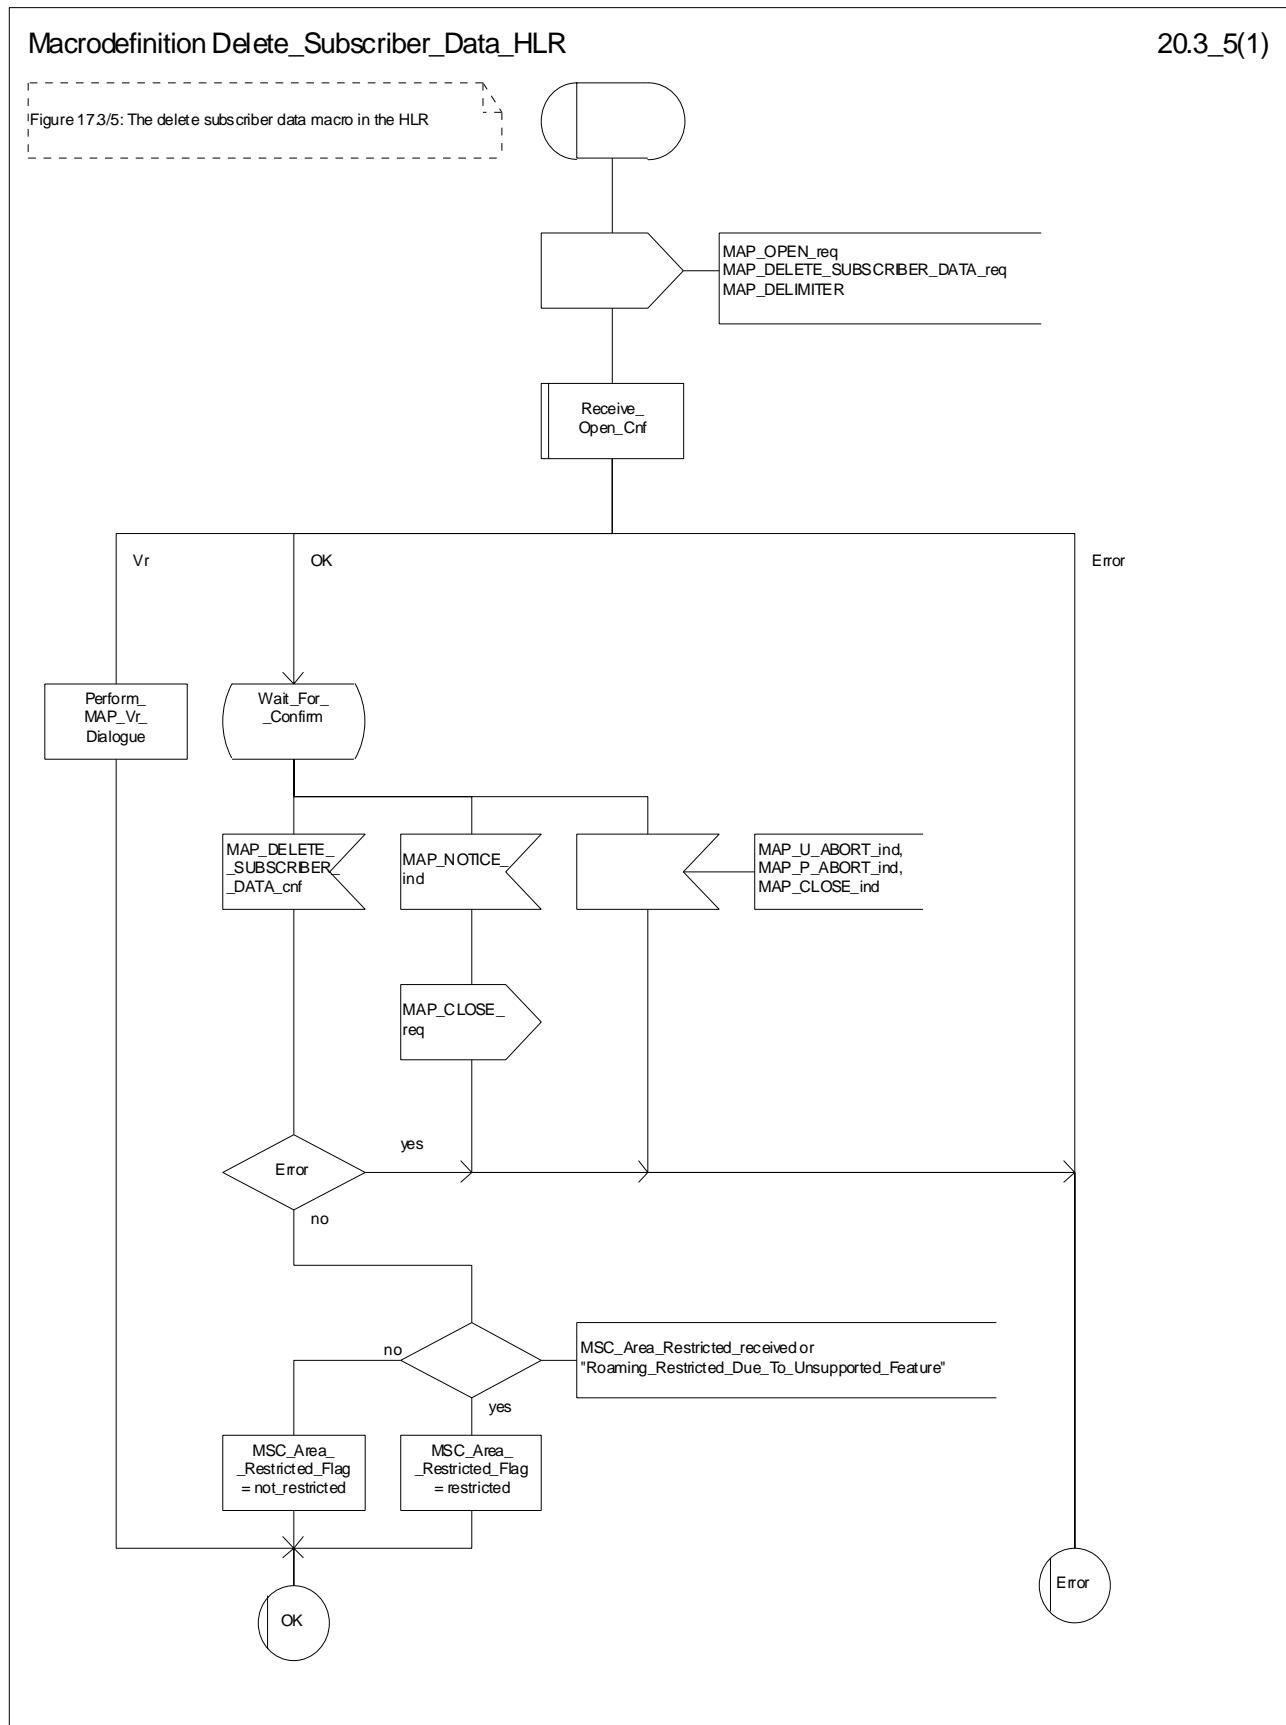


Figure 20.3/5: Macro Delete\_Subscriber\_Data\_HLR

## 20.3.2 Procedures in the VLR

### 20.3.2.1 Subscriber deletion procedure

The subscriber deletion procedure in the VLR is described in the clause 19.1.

### 20.3.2.2 Subscriber data modification procedure

When receiving either the MAP\_INSERT\_SUBSCRIBER\_DATA indication or the MAP\_DELETE\_SUBSCRIBER\_DATA indication, the VLR checks the parameters and data in the primitive. Data errors are reported as an unexpected data value error or a data missing error depending on the nature of the error.

After receiving the first MAP\_INSERT\_SUBSCRIBER\_DATA indication, the VLR will check the IMSI that is included in the primitive. If the IMSI is unknown, the error "Unidentified subscriber" is returned.

If the VLR does not support received basic or supplementary services or the network feature Operator Determined Barring, or there is a problem with Regional Subscription Data then it reports it to the HLR.

If the entire MSC area is restricted due to regional subscription, this is reported to the HLR.

If the updating of the subscriber data is not possible, the VLR will initiate the MAP\_U\_ABORT request primitive. If the updating is successful, the MAP\_CLOSE indication is received from the HLR.

The subscriber data modification procedure in the VLR is shown in the figures 20.3/6, 20.3/7 and 25.7/1.

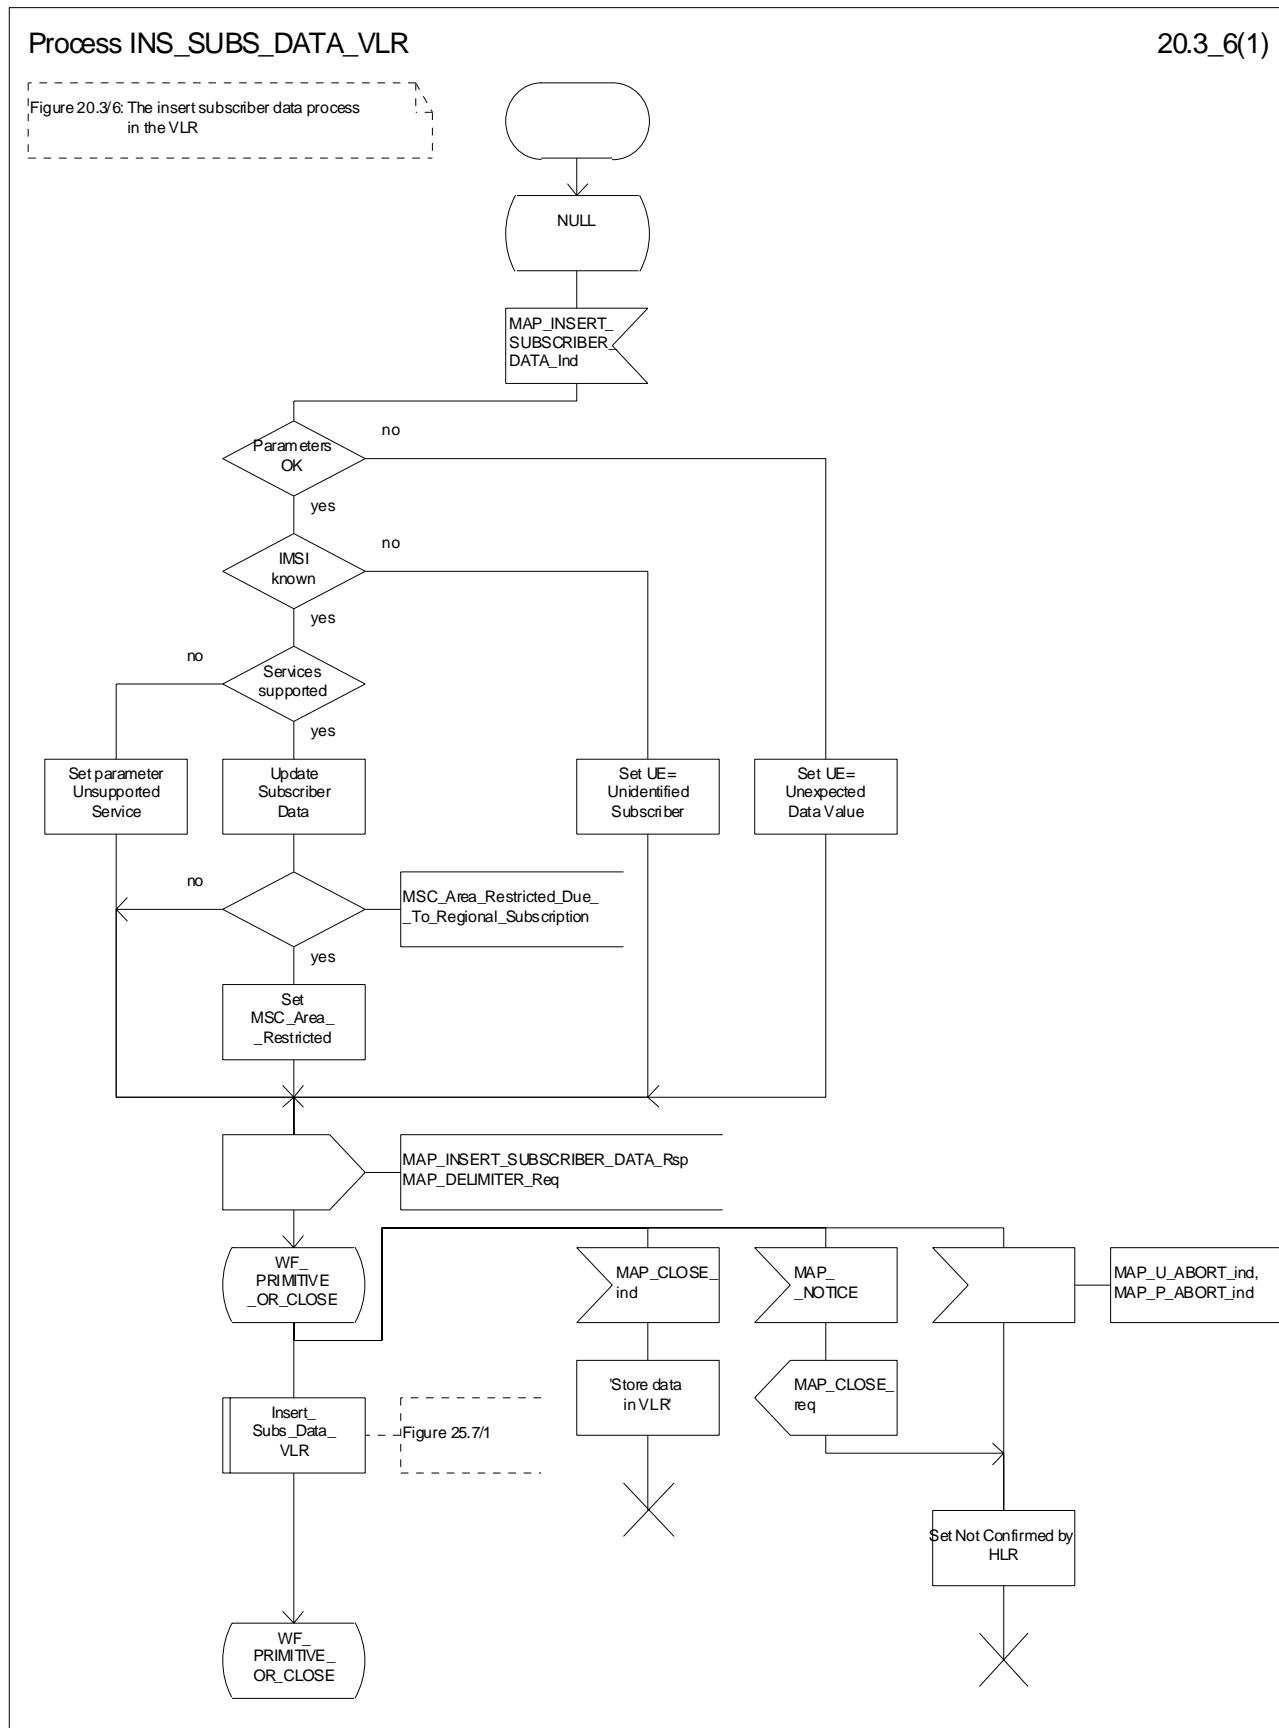


Figure 20.3/6: Process INS\_SUBS\_DATA\_VLR

## Process Delete\_Subscriber\_Data\_VLR

20.3\_7(1)

Figure 20.3/7: The delete subscriber data process in the VLR

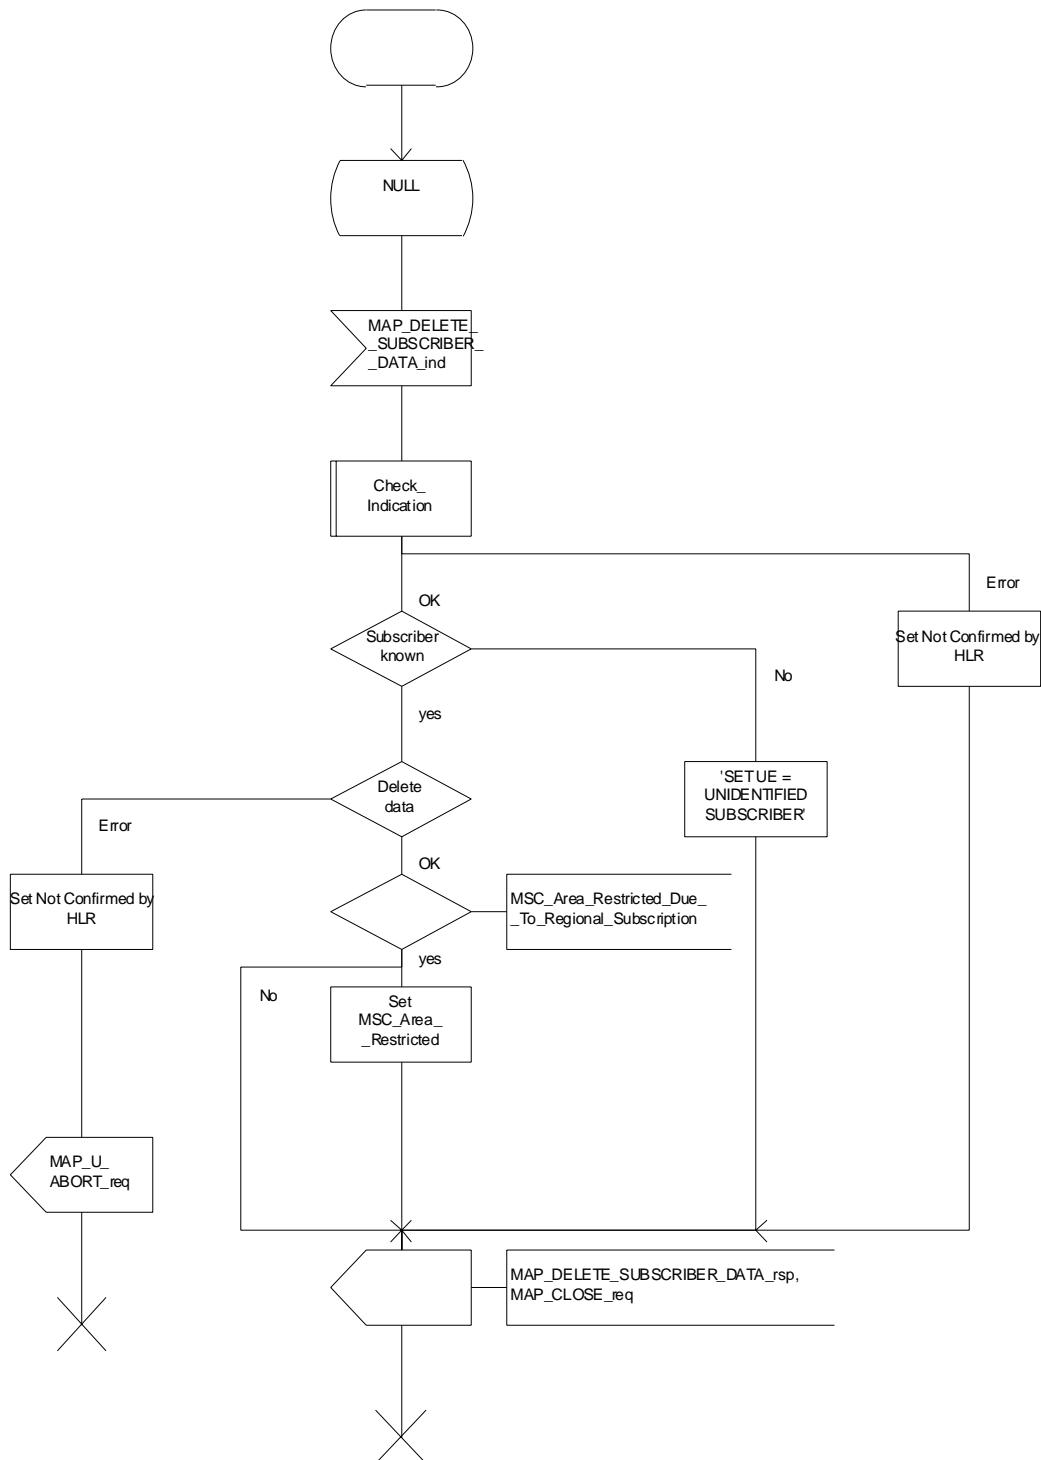


Figure 20.3/7: Process Delete\_Subscriber\_Data\_VLR

## 20.3.3 Procedures in the SGSN

### 20.3.3.1 Subscriber deletion procedure

The subscriber deletion procedure in the SGSN is described in the clause 19.1.

### 20.3.3.2 Subscriber data modification procedure

When receiving either the MAP\_INSERT\_SUBSCRIBER\_DATA indication or the MAP\_DELETE\_SUBSCRIBER\_DATA indication, the SGSN checks the parameters and data in the primitive. Data errors are reported as an unexpected data value error or a data missing error depending on the nature of the error.

After receiving the first MAP\_INSERT\_SUBSCRIBER\_DATA indication, the SGSN will check the IMSI that is included in the primitive. If the IMSI is unknown, the error "Unidentified subscriber" is returned.

If the SGSN does not support received basic services or the network feature Operator Determined Barring, or there is a problem with Regional Subscription Data then it reports it to the HLR.

If the entire SGSN area is restricted due to regional subscription, this is reported to the HLR.

If the updating of the subscriber data is not possible, the SGSN will initiate the MAP\_U\_ABORT request primitive. If the updating is successful, the MAP\_CLOSE indication is received from the HLR.

The subscriber data modification procedure in the SGSN is shown in the figures 20.3/11, 20.3/12 and 25.7/5.

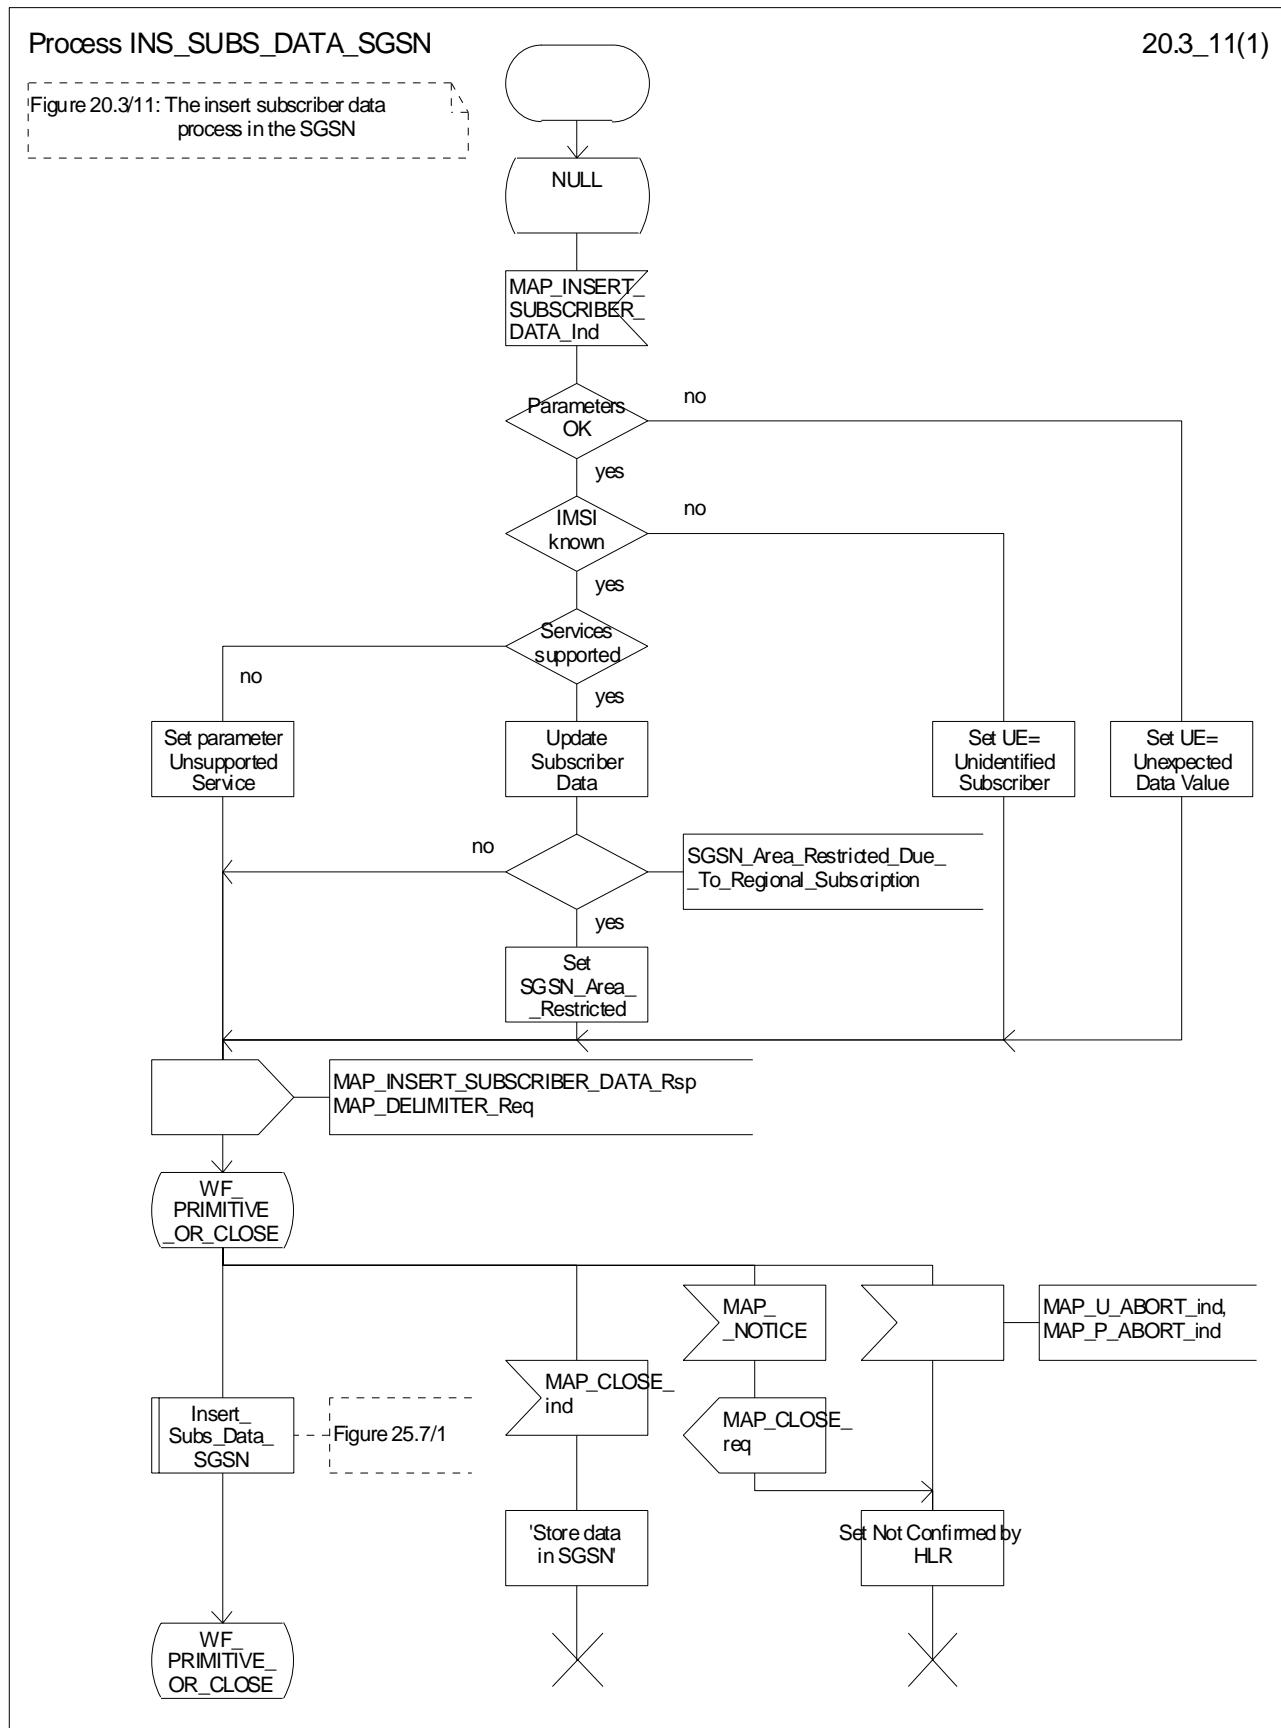


Figure 20.3/11: Process INS\_SUBS\_DATA\_SGSN


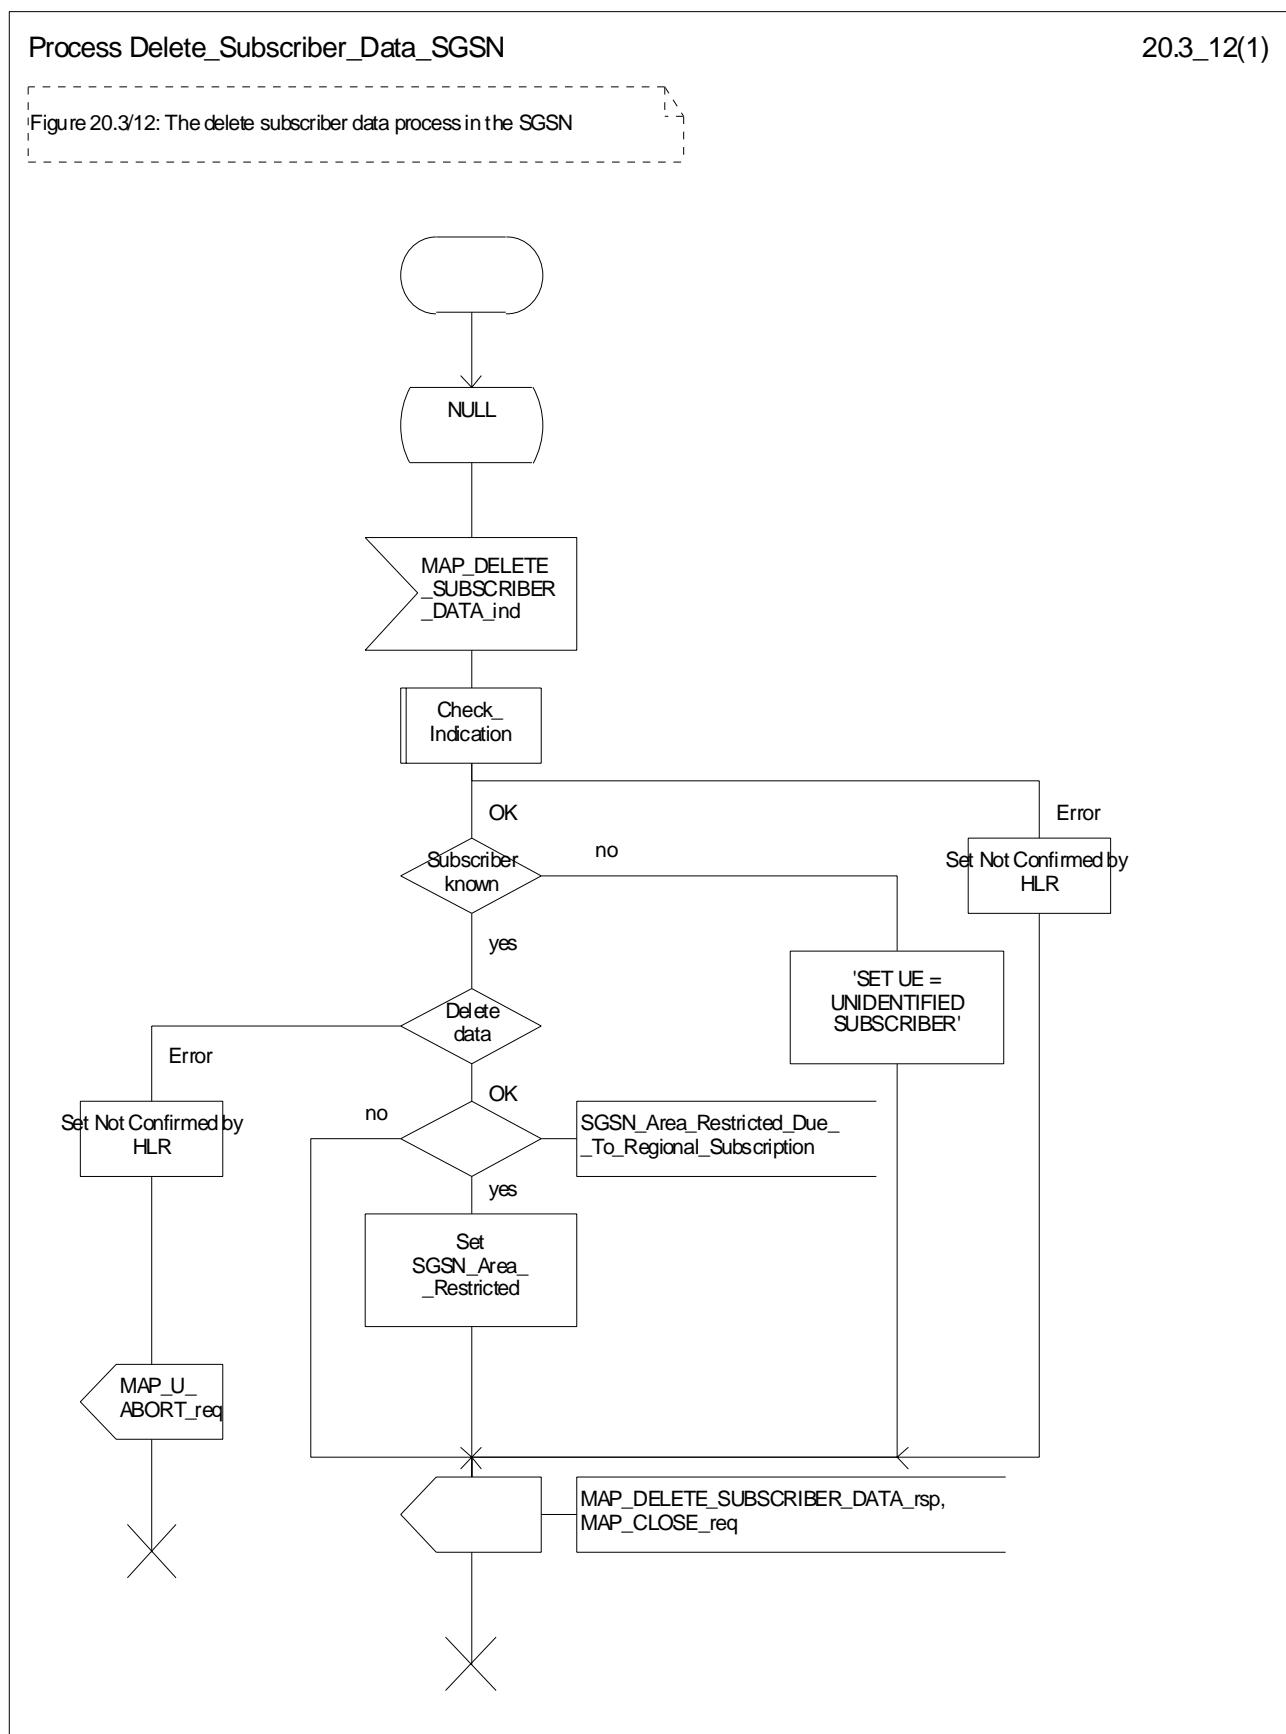


Figure 20.3/12: Process Delete\_Subscriber\_Data\_SGSN

## 20.4 Subscriber Identity procedure

In the subscriber identity procedure the IMSI of the subscriber is retrieved from the HLR. The procedure is shown in figure 20.4/1.

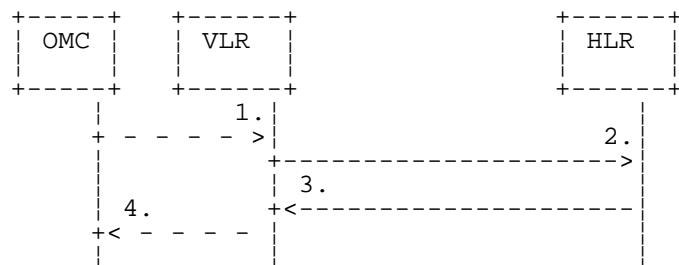

**Figure 20.4/1: The subscriber identity procedure**

### 20.4.1 Subscriber identity procedure in the HLR


Opening of the dialogue is described in the macro Receive\_Open\_Ind in clause 25.1, with outcomes:

- procedure termination; or
- dialogue acceptance, with proceeding as below.

When receiving the MAP\_SEND\_IMSI indication, the HLR will check the parameters and data in the primitive. Data errors are reported as an unexpected data value error or a data missing error depending on the nature of the error.

If the subscriber is known in the HLR, the IMSI is fetched from the database and sent to the VLR. If the MSISDN cannot be identified, unknown subscriber indication is passed to the VLR.

The subscriber identity procedure in the HLR is shown in figure 20.4/2.

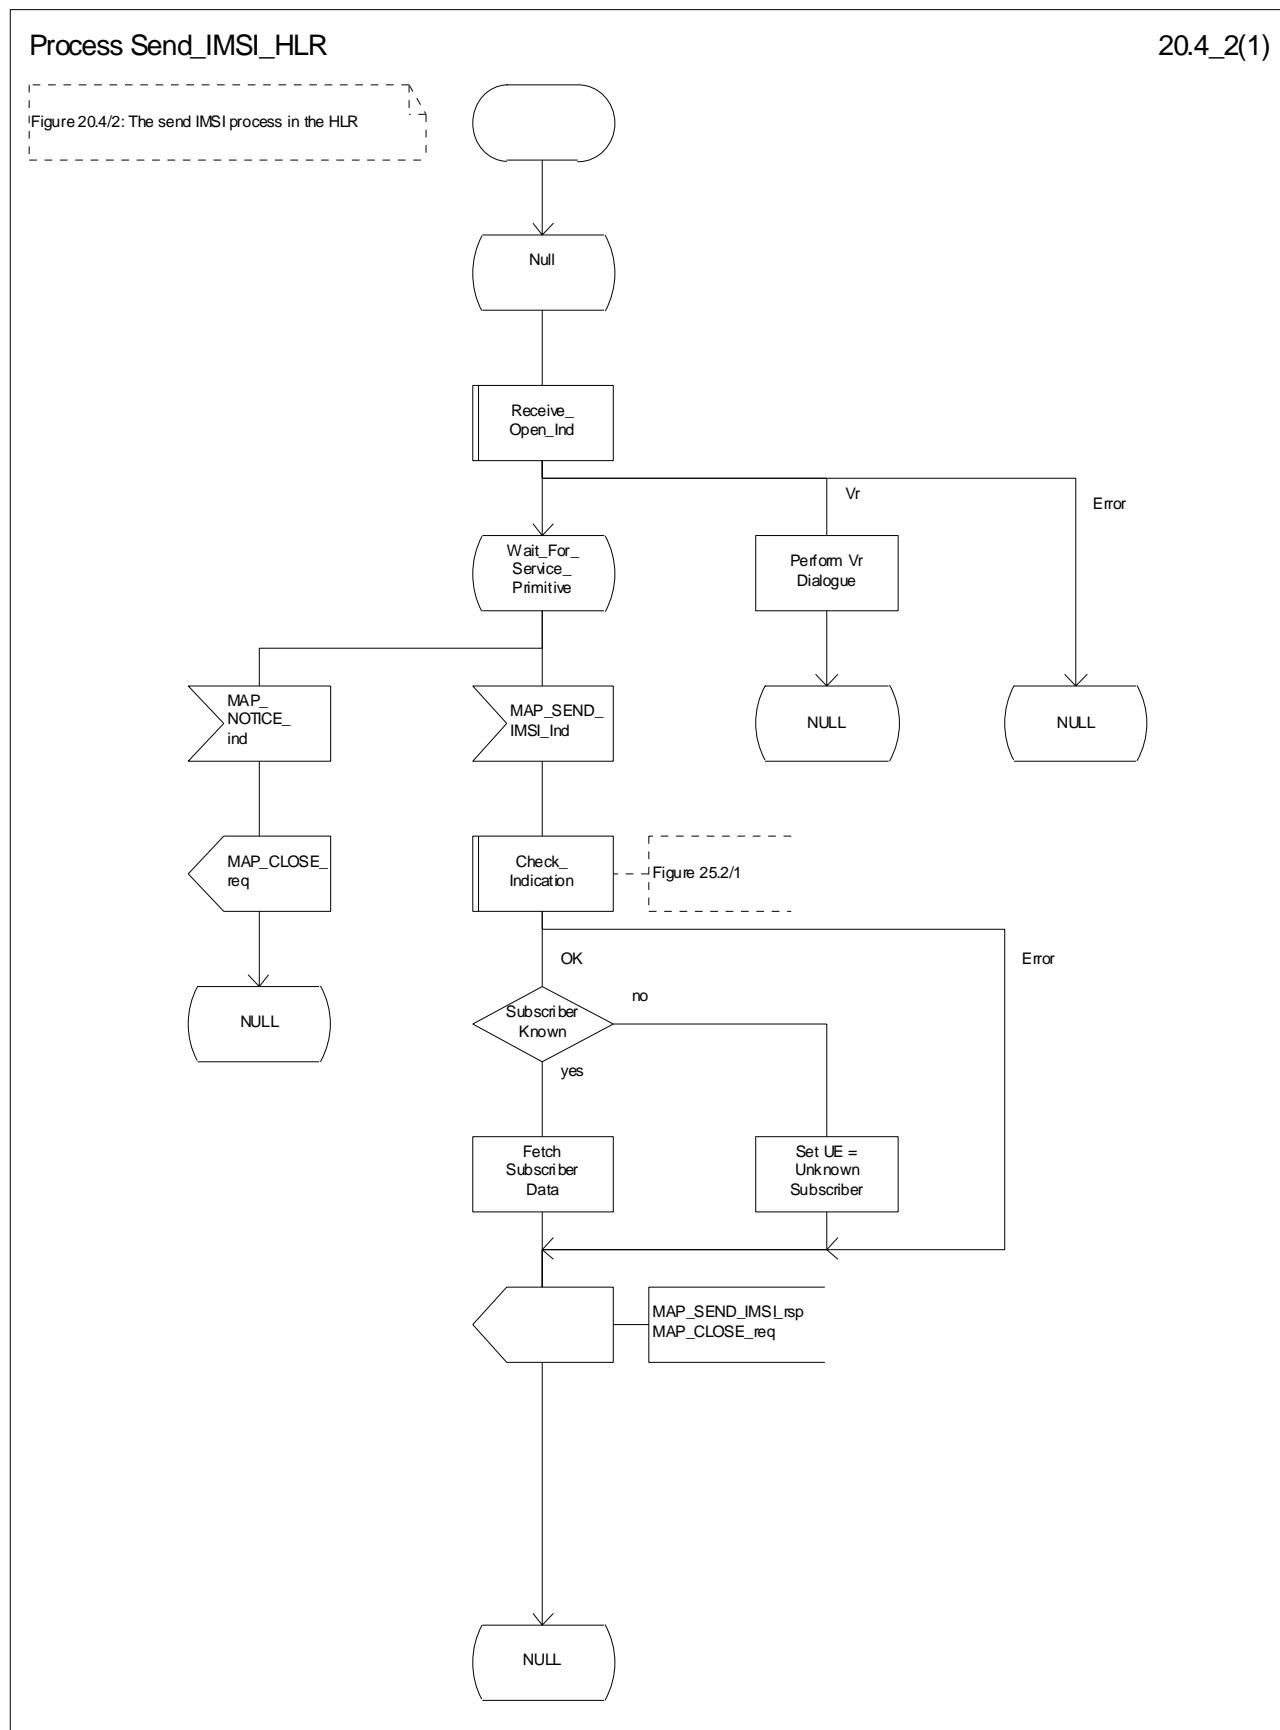

**Figure 20.4/2: Process Send\_IMSI\_HLR**

## 20.4.2 Subscriber identity procedure in the VLR

When the IMSI request is received from the OMC, the VLR will send the MAP\_SEND\_IMSI request to the HLR. The contents of the response are sent to the OMC.

The subscriber identity procedure in the VLR is shown in figure 20.4/3.

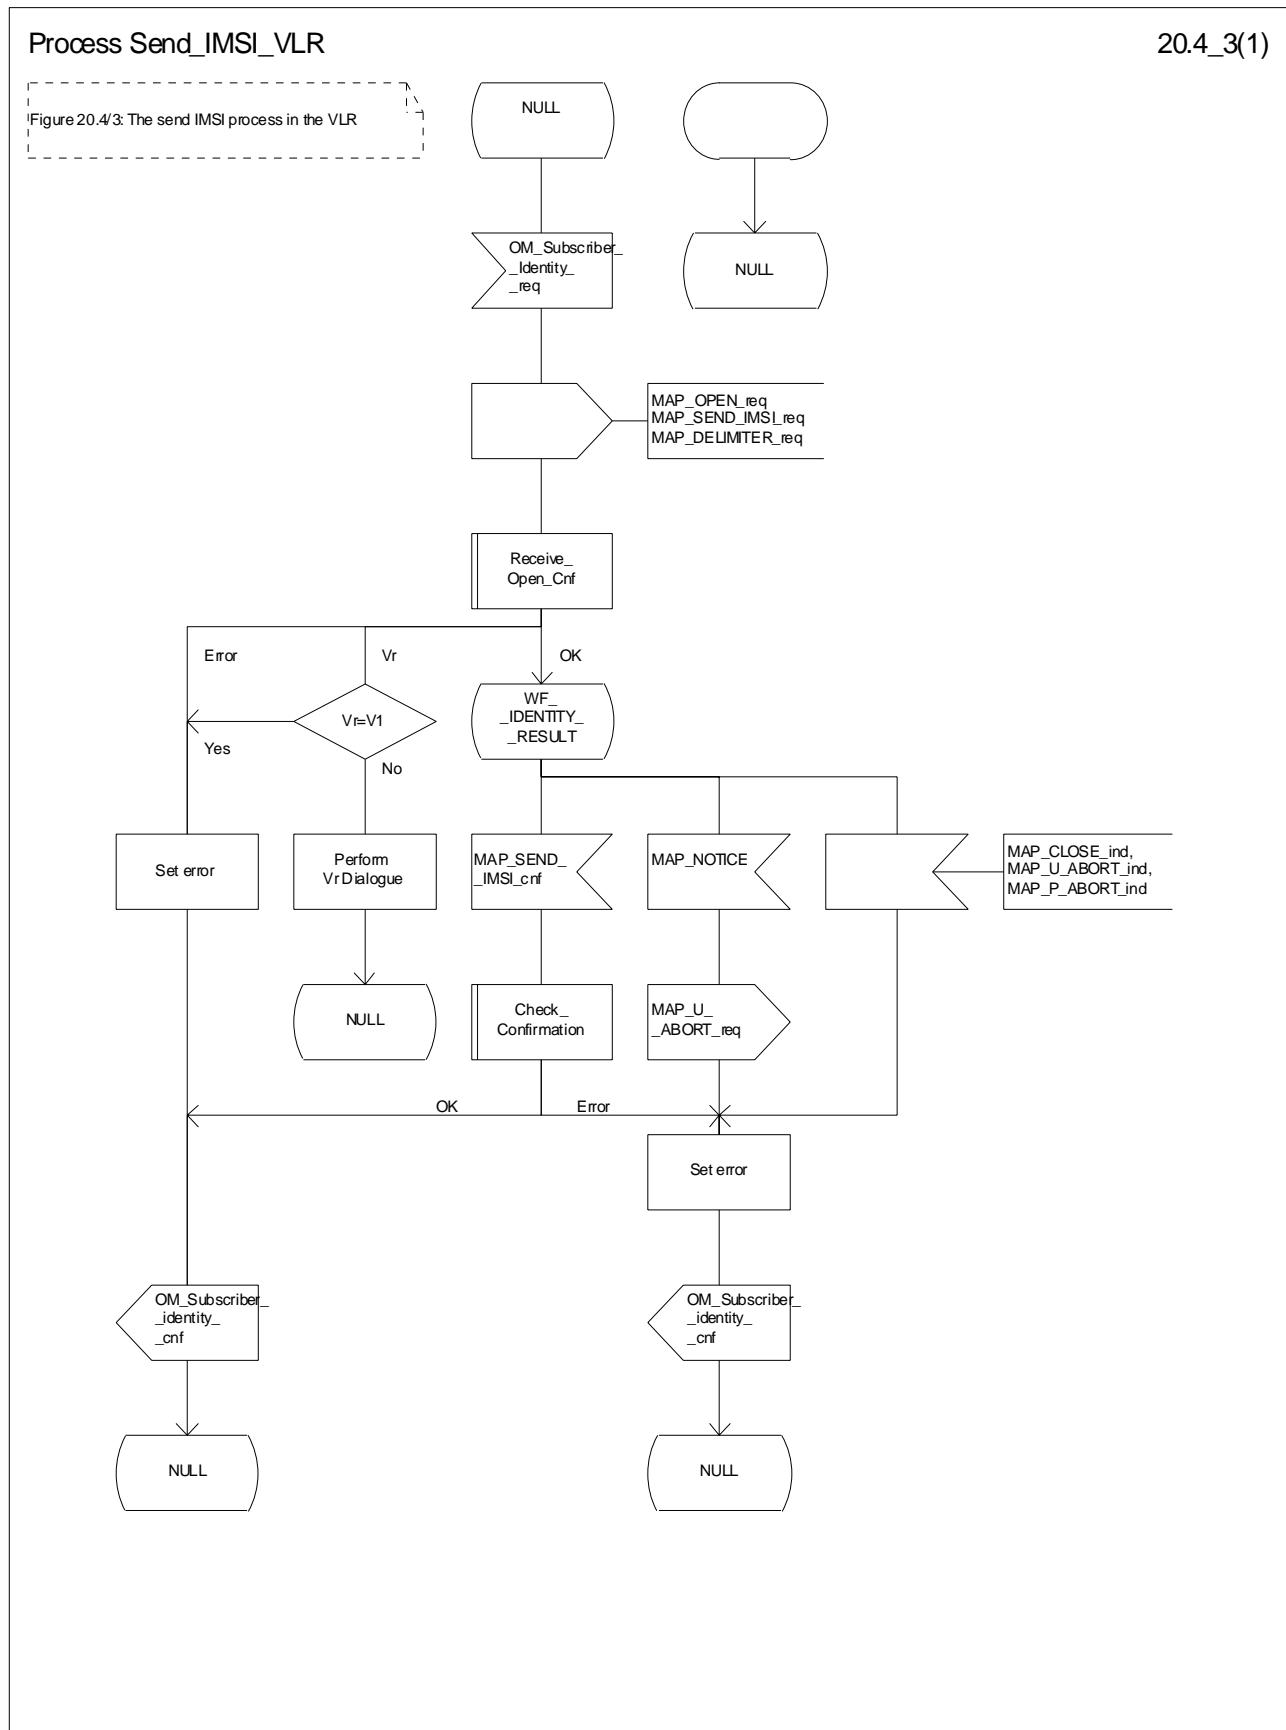


Figure 20.4/3: Process Send\_IMSI\_VLR

# 21 Call handling procedures

## 21.1 General

The MAP call handling procedures are used:

- to retrieve routeing information to handle a mobile terminating call;
- to transfer control of a call back to the GMSC if the call is to be forwarded;
- to retrieve and transfer information between anchor MSC and relay MSC for inter MSC group calls / broadcast calls;
- to allocate resources in an SIWFS;
- to handle the reporting of MS status for call completion services;
- to handle the notification of remote user free for CCBS;
- to handle the alerting and termination of ongoing call activities for a specific subscriber.

The procedures to handle a mobile originating call and a mobile terminating call after the call has arrived at the destination MSC do not require any signalling over a MAP interface. These procedures are specified in 3GPP TS 23.018 [97].

The stage 2 specification for the retrieval of routeing information to handle a mobile terminating call is in 3GPP TS 23.018 [97]; modifications to this procedure for CAMEL are specified in 3GPP TS 23.078 [98], for optimal routeing of a basic mobile-to-mobile call in 3GPP TS 23.079 [99] and for CCBS in 3GPP TS 23.093 [107]. The interworking between the MAP signalling procedures and the call handling procedures for each entity (GMSC, HLR and VLR) is shown by the transfer of signals between these procedures.

The stage 2 specification for the transfer of control of a call back to the GMSC if the call is to be forwarded is in 3GPP TS 23.079 [99]. The interworking between the MAP signalling procedures and the call handling procedures for each entity (VMSC and GMSC) is shown by the transfer of signals between these procedures.

The stage 2 specifications for inter MSC group calls / broadcast calls are in 3GPP TS 43.068 [100] and 3GPP TS 43.069 [101]. The interworking between the MAP signalling procedures and the group call /broadcast call procedures for each entity (Anchor MSC and Relay MSC) is shown by the transfer of signals between these procedures.

The stage 2 specification for the allocation of resources in an SIWFS is in GSM 03.54. The interworking between the MAP signalling procedures and the call handling procedures for each entity (VMSC and SIWFS) is shown by the transfer of signals between these procedures.


The interworking between the call handling procedures and signalling protocols other than MAP are shown in 3GPP TS 23.018, 3GPP TS 23.078 and 3GPP TS 23.079 [99].

The stage 2 specification for the handling of reporting of MS status for call completion services and notification of remote user free for CCBS is in 3GPP TS 23.093 [107].

## 21.2 Retrieval of routing information

### 21.2.1 General

The message flows for successful retrieval of routeing information for a mobile terminating call are shown in figure 21.2/1 (mobile terminating call which has not been optimally routed) and 21.2/2 (mobile-to-mobile call which has been optimally routed). The message flow for successful retrieval of routeing information for a gsmSCF initiated call is shown in figure 21.2/x.

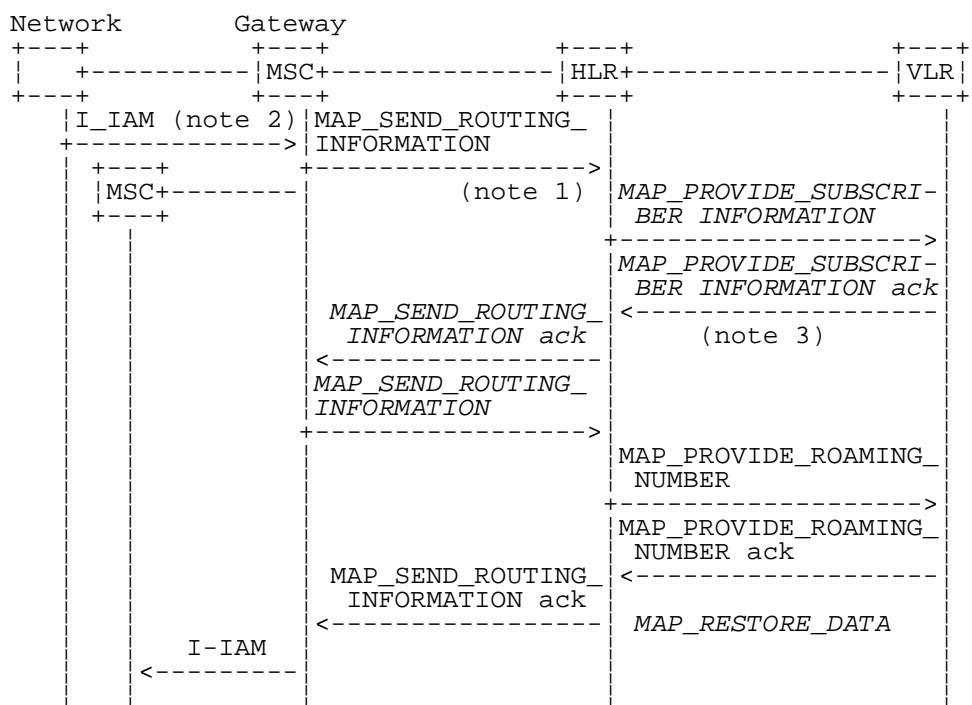

xxx = Optional Procedure

NOTE 1: This service may also be used by an ISDN exchange for obtaining routing information from the HLR.


NOTE 2: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. For further details on the TUP and ISUP procedures refer to the following ITU-T Recommendations and ETSI specification:

- Q.721-725 - Telephone User Part (TUP);
- ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

NOTE 3: As a network operator option, the HLR sends

MAP\_PROVIDE\_SUBSCRIBER\_INFORMATION to the VLR. For further details on the CAMEL procedures refer to 3GPP TS 23.078 [98].

**Figure 21.2/1: Message flow for retrieval of routeing information (non-optimally routed call)**

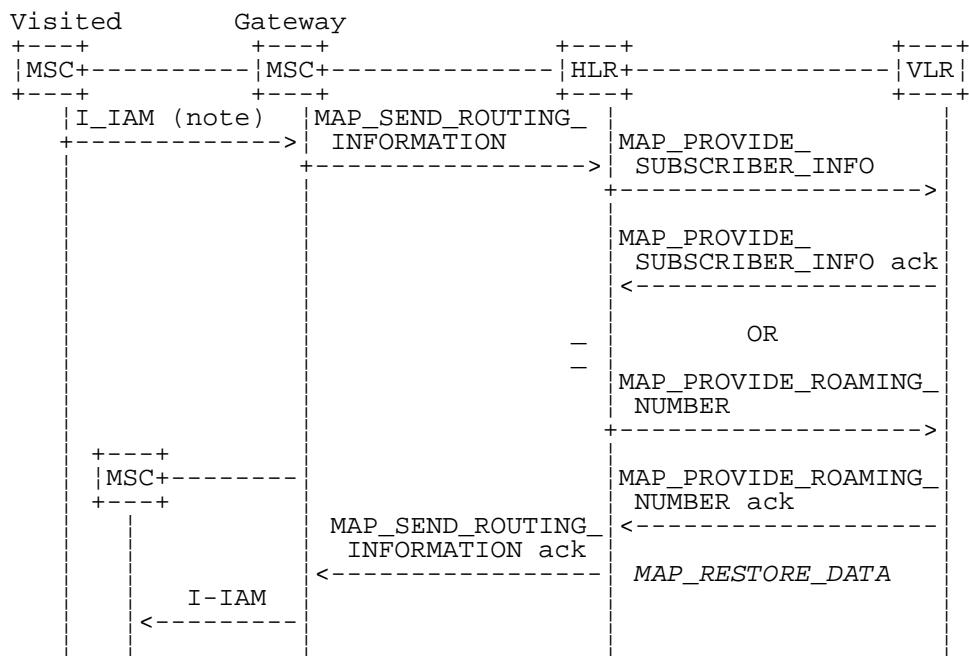


*xxx = Optional Procedure*

**NOTE 1:** For Optimal Routeing phase 1, only one of the information flows for Provide Subscriber Info and Provide Roaming Number is used. For later phases of Optimal Routeing, the HLR may return a MAP\_SEND\_ROUTEING\_INFORMATION ack after the Provide Subscriber Info information flow, and the GMSC may send a second MAP\_SEND\_ROUTEING\_INFORMATION, which will trigger the Provide Roaming Number information flow.

**NOTE 2:** TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. For further details on the TUP and ISUP procedures refer to the following CCITT Recommendations & ETSI specification:

- Q.721-725 - Telephone User Part (TUP);
  - ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

**Figure 21.2/2: Message flow for retrieval of routeing information (optimally routed call)**

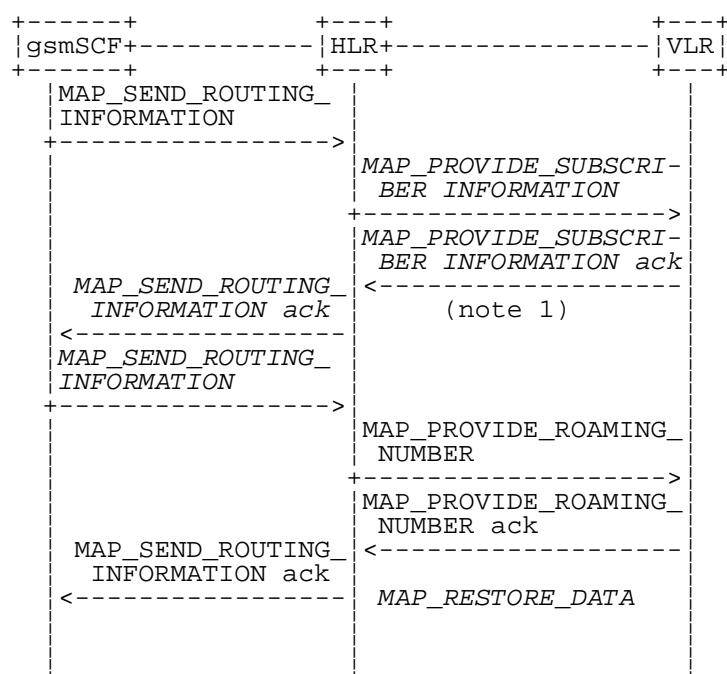

xxx = Optional Procedure

NOTE 1: As a network operator option, the HLR sends MAP\_PROVIDE\_SUBSCRIBER\_INFORMATION to the VLR. For further details on the CAMEL procedures refer to 3GPP TS 23.078 [98].

#### **Figure 21.2/x: Message flow for retrieval of routeing information for a gsmSCF initiated call**

The following MAP services are used to retrieve routing information:

MAP_SEND_ROUTING_INFORMATION	see clause 10.1;
MAP_PROVIDE_ROAMING_NUMBER	see clause 10.2;
MAP_PROVIDE_SUBSCRIBER_INFO	see clause 8.11.2;
MAP_RESTORE_DATA	see clause 8.10.3.

### **21.2.2 Process in the GMSC**

The MAP process in the GMSC to retrieve routeing information for a mobile terminating call is shown in figure 21.2/3. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive_Open_Cnf	see clause 25.1.2;
Check_Confirmation	see clause 25.2.2.

#### **Successful Outcome**

When the MAP process receives a Send Routeing Info request from the call handling process in the GMSC, it requests a dialogue with the HLR whose identity is contained in the Send Routeing Info request by sending a MAP\_OPEN service request, requests routeing information using a MAP\_SEND\_ROUTING\_INFORMATION service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_SEND\_ROUTING\_INFORMATION service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm. If the MAP\_SEND\_ROUTING\_INFORMATION confirm from the HLR cannot be carried in a single TC-Result component, it is carried in one or more TC-Result-NL components (each sent in a TC-CONTINUE), followed by a TC-Result-L component in a TC-END message.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Send Routeing Info ack containing the routeing information received from the HLR to the call handling process in the GMSC and returns to the idle state.

#### **Earlier version MAP dialogue with the HLR**

If the macro Receive\_Open\_Cnf takes the Vr exit, the MAP process checks whether this is an OR interrogation (indicated by the inclusion of the OR interrogation parameter in the MAP\_SEND\_ROUTING\_INFORMATION service request).

If this is not an OR interrogation, the GMSC performs the earlier version MAP dialogue as specified in [51] and the process returns to the idle state.

If this is an OR interrogation, the MAP process sends a Send Routeing Info negative response indicating OR not allowed to the call handling process in the GMSC and returns to the idle state.

#### **Dialogue opening failure**

If the macro Receive\_Open\_Cnf indicates that the dialogue with the HLR could not be opened, the MAP process sends an Abort to the call handling process in the GMSC and returns to the idle state.

#### **Error in MAP\_SEND\_ROUTING\_INFORMATION confirm**

If the MAP\_SEND\_ROUTING\_INFORMATION service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Send Routeing Info negative response to the call handling process in the GMSC and returns to the idle state.

### Call release

If the call handling process in the GMSC indicates that the call has been aborted (i.e. prematurely released by the calling subscriber), the MAP process returns to the idle state. Any response from the HLR will be discarded.

### Abort of HLR dialogue

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the HLR may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends a Send Routeing Info negative response to the call handling process in the GMSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR, sends a Send Routeing Info negative response indicating system failure to the call handling process in the GMSC and returns to the idle state.

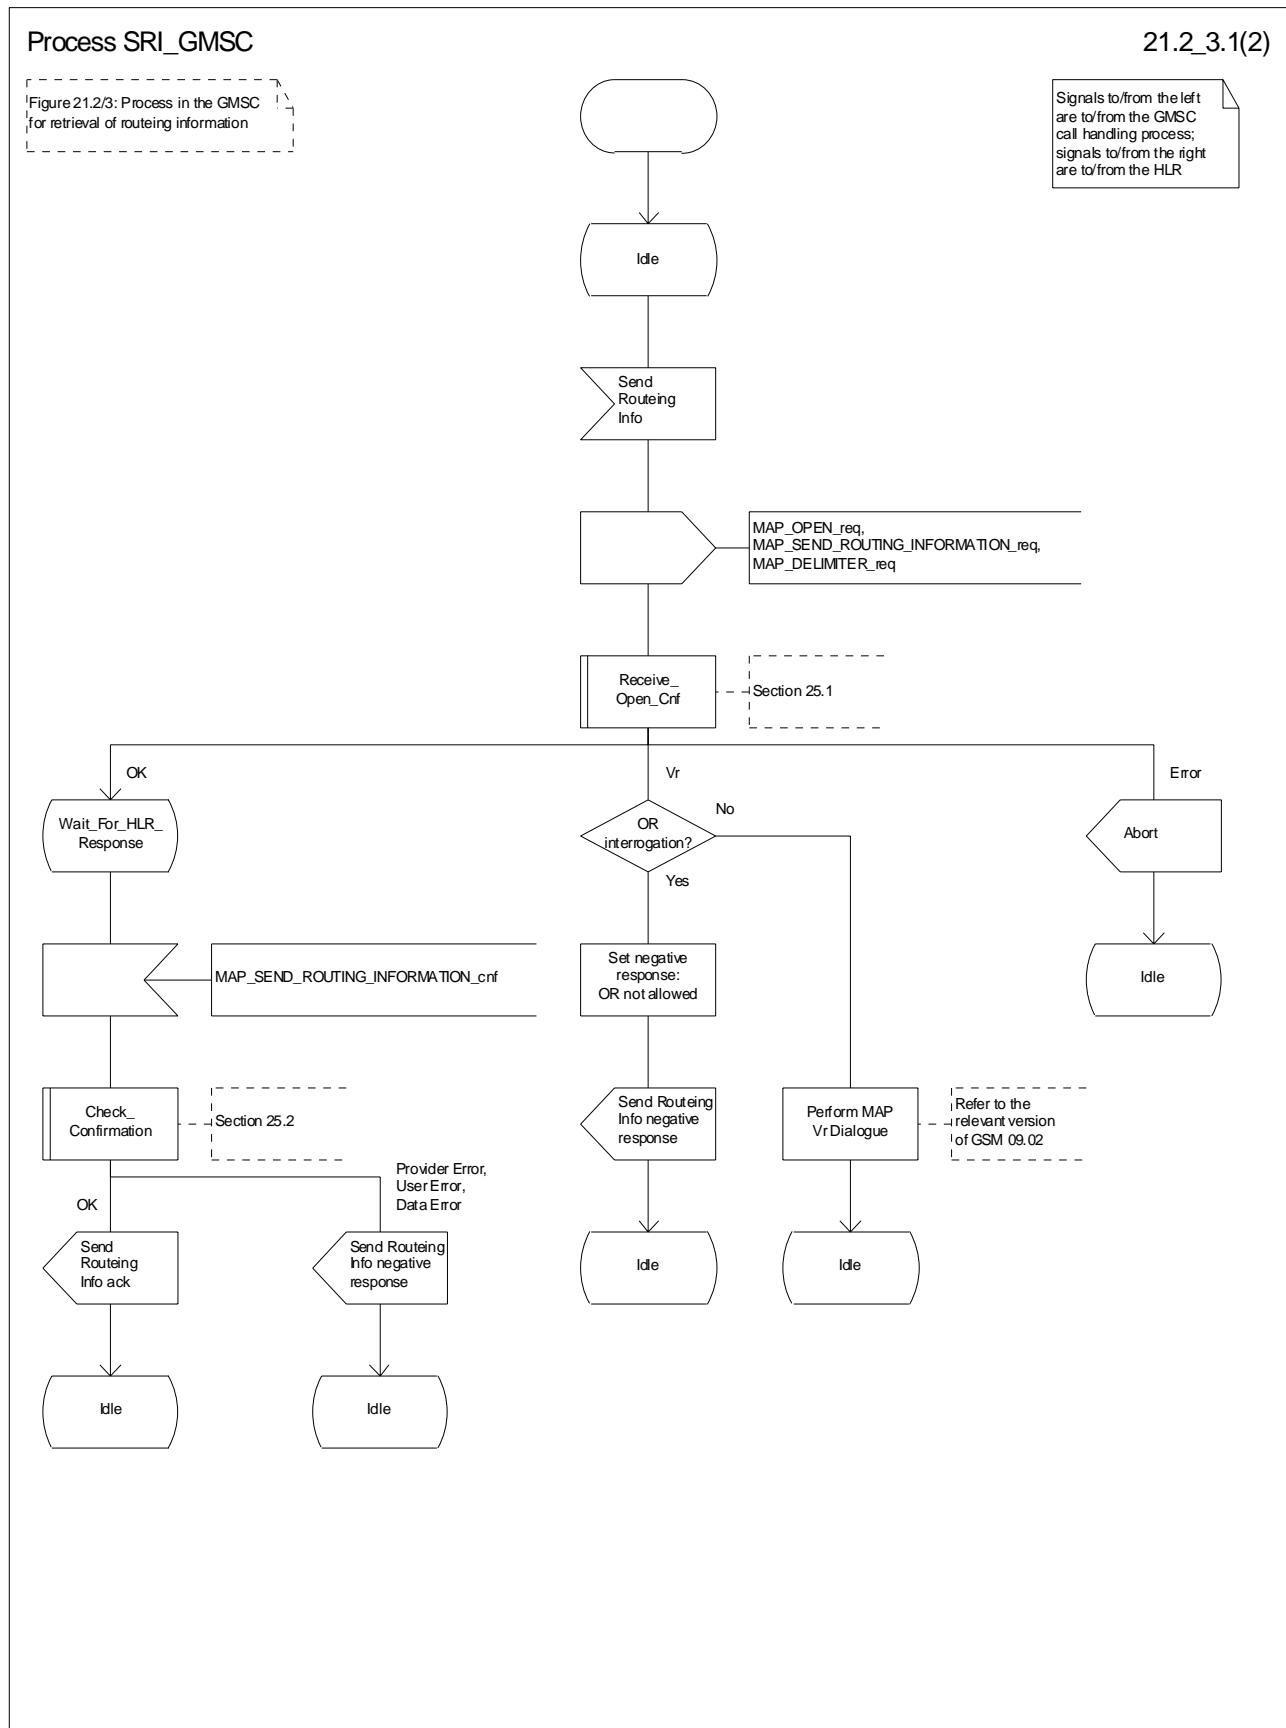


Figure 21.2/3 (sheet 1 of 2): Process SRI\_GMSC

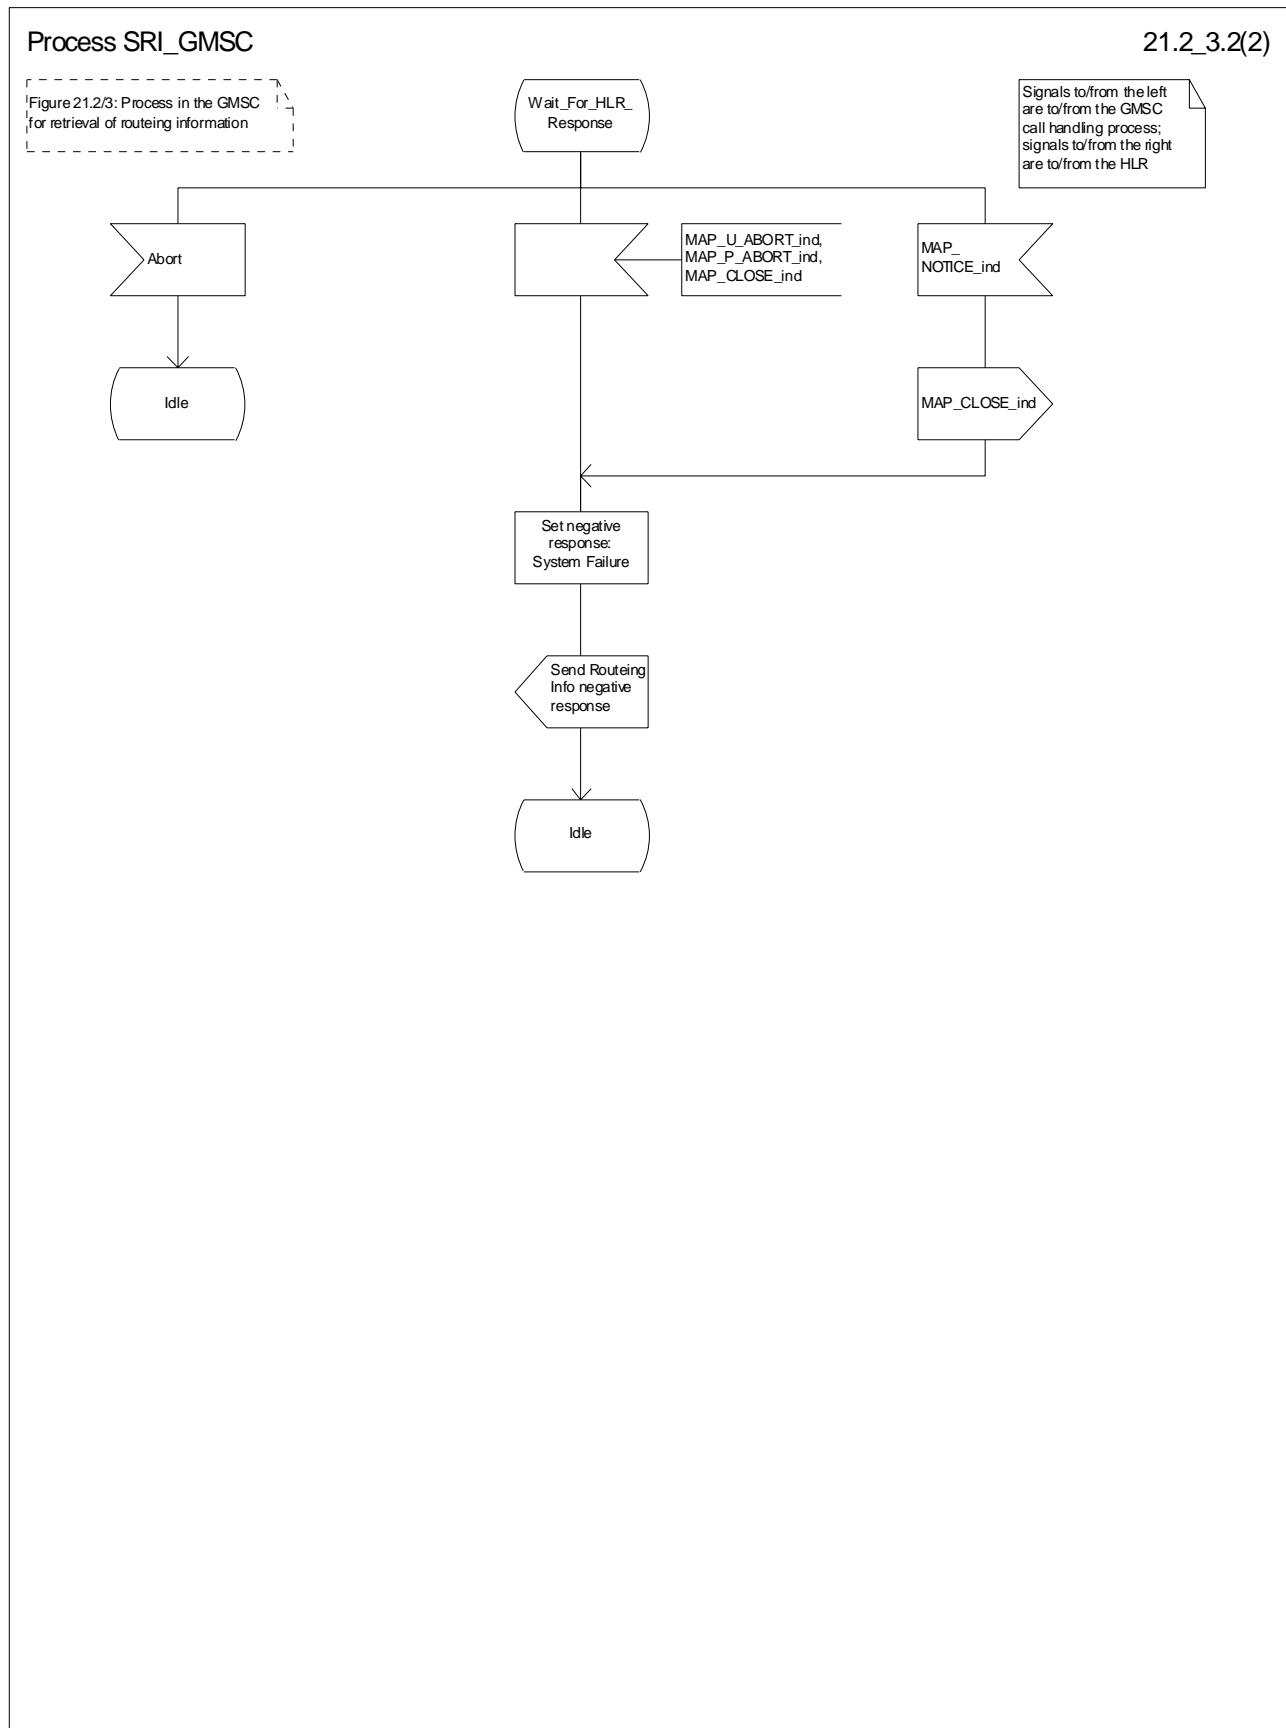


Figure 21.2/3 (sheet 2 of 2): Process SRI\_GMSC

### 21.2.3 Procedures in the HLR

The MAP process in the HLR to retrieve routeing information for a mobile terminating call is shown in figure 21.2/4. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive_Open_Ind	see clause 25.1.1;
Receive_Open_Cnf	see clause 25.1.2;
Check_Confirmation	see clause 25.2.2.

#### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context locInfoRetrieval, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_SEND\_ROUTING\_INFORMATION service indication is received, the MAP process sends a Send Routeing Info request to the call handling process in the HLR, and waits for a response. The Send Routeing Info request contains the parameters received in the MAP\_SEND\_ROUTING\_INFORMATION service indication.

If the call handling process in the HLR returns a Send Routeing Info ack, the MAP process constructs a MAP\_SEND\_ROUTING\_INFORMATION service response containing the routeing information contained in the Send Routeing Info ack, constructs a MAP\_CLOSE service request, sends them to the GMSC and returns to the idle state. If the MAP\_SEND\_ROUTING\_INFORMATION response cannot be carried in a single TC-Result component, it is carried in one or more TC-Result-NL components (each sent in a TC-CONTINUE), followed by a TC-Result-L component in a TC-END message.

If the call handling process in the HLR returns a Provide Subscriber Info request, the MAP process requests a dialogue with the VLR whose identity is contained in the Provide Subscriber Info request by sending a MAP\_OPEN service request, requests the subscriber status using a MAP\_PROVIDE\_SUBSCRIBER\_INFO service request, and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request.

If the macro takes the OK exit, the MAP process waits for the response from the VLR.

If the MAP process receives a MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm, it invokes the macro Check\_Confirmation to check the content of the confirm.

If the Check\_Confirmation macro takes the OK exit, the MAP process sends a Provide Subscriber Info ack containing the information received in the MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If the MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm contains a provider error or a data error, the MAP process sends a Provide Subscriber Info negative response indicating the type of error to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

**NOTE:** The 'User Error' exit from the macro Check\_Confirmation is shown for formal completeness; the MAP\_PROVIDE\_SUBSCRIBER\_INFO\_cnf primitive cannot contain a user error.

If the call handling process in the HLR returns a Provide Roaming Number request, the MAP process requests a dialogue with the VLR whose identity is contained in the Provide Roaming Number request by sending a MAP\_OPEN service request, requests a roaming number using a MAP\_PROVIDE\_ROAMING\_NUMBER service request, and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request.

If the macro takes the OK exit, the MAP process waits for the response from the VLR.

If the MAP process receives a MAP\_PROVIDE\_ROAMING\_NUMBER service confirm, it invokes the macro Check\_Confirmation to check the content of the confirm.

If the Check\_Confirmation macro takes the OK exit, the MAP process sends a Provide Roaming Number ack containing the MSRN received in the MAP\_PROVIDE\_ROAMING\_NUMBER service confirm to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If the MAP\_PROVIDE\_ROAMING\_NUMBER service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Provide Roaming Number negative response indicating the type of error to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

#### **Negative response from HLR call handling process**

If the call handling process in the HLR returns a negative response, either before or after a dialogue with the VLR to obtain a roaming number, the MAP process constructs a MAP\_SEND\_ROUTING\_INFORMATION service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the GMSC and returns to the idle state.

#### **Earlier version MAP Provide Roaming Number dialogue with the VLR**

If the macro Receive\_Open\_Cnf takes the Vr exit after the MAP process has requested opening of a Provide Roaming Number dialogue with the VLR, the MAP process checks whether this is an OR interrogation (indicated by the inclusion of the OR interrogation parameter in the MAP\_PROVIDE\_ROAMING\_NUMBER service request).

If this is not an OR interrogation, the HLR performs the earlier version MAP dialogue as specified in [51], relays the result of the dialogue to the HLR call handling process, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If this is an OR interrogation, the MAP process sends a Provide Roaming Number negative response indicating OR not allowed to the call handling process in the HLR and waits for a response. The handling of the response from the call handling process in the HLR is described above.

#### **Failure of Provide Subscriber Info dialogue with the VLR**

If the Receive\_Open\_Cnf macro takes the Vr exit or the Error exit after the MAP process has requested opening of a Provide Subscriber Info dialogue with the VLR, the MAP process sends a Provide Subscriber Info negative response indicating system failure to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

#### **Failure of Provide Roaming Number dialogue with the VLR**

If the Receive\_Open\_Cnf macro takes the Error exit after the MAP process has requested opening of a Provide Roaming Number dialogue with the VLR, the MAP process sends a Provide Roaming Number negative response indicating system failure to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If the MAP process receives a MAP\_U\_ABORT, a MAP\_P\_ABORT or a premature MAP\_CLOSE from the MAP provider, it sends a Provide Roaming Number negative response indicating system failure to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If the MAP process receives a MAP\_NOTICE from the MAP provider, it returns a MAP\_CLOSE request to the MAP provider, sends a Provide Roaming Number negative response indicating system failure to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

#### **Earlier version MAP dialogue with the GMSC**

If the macro Receive\_Open\_Ind takes the Vr exit, the HLR performs the earlier version MAP dialogue as specified in [51] and the process returns to the idle state.

#### **Failure of dialogue opening with the GMSC**

If the macro Receive\_Open\_Ind takes the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

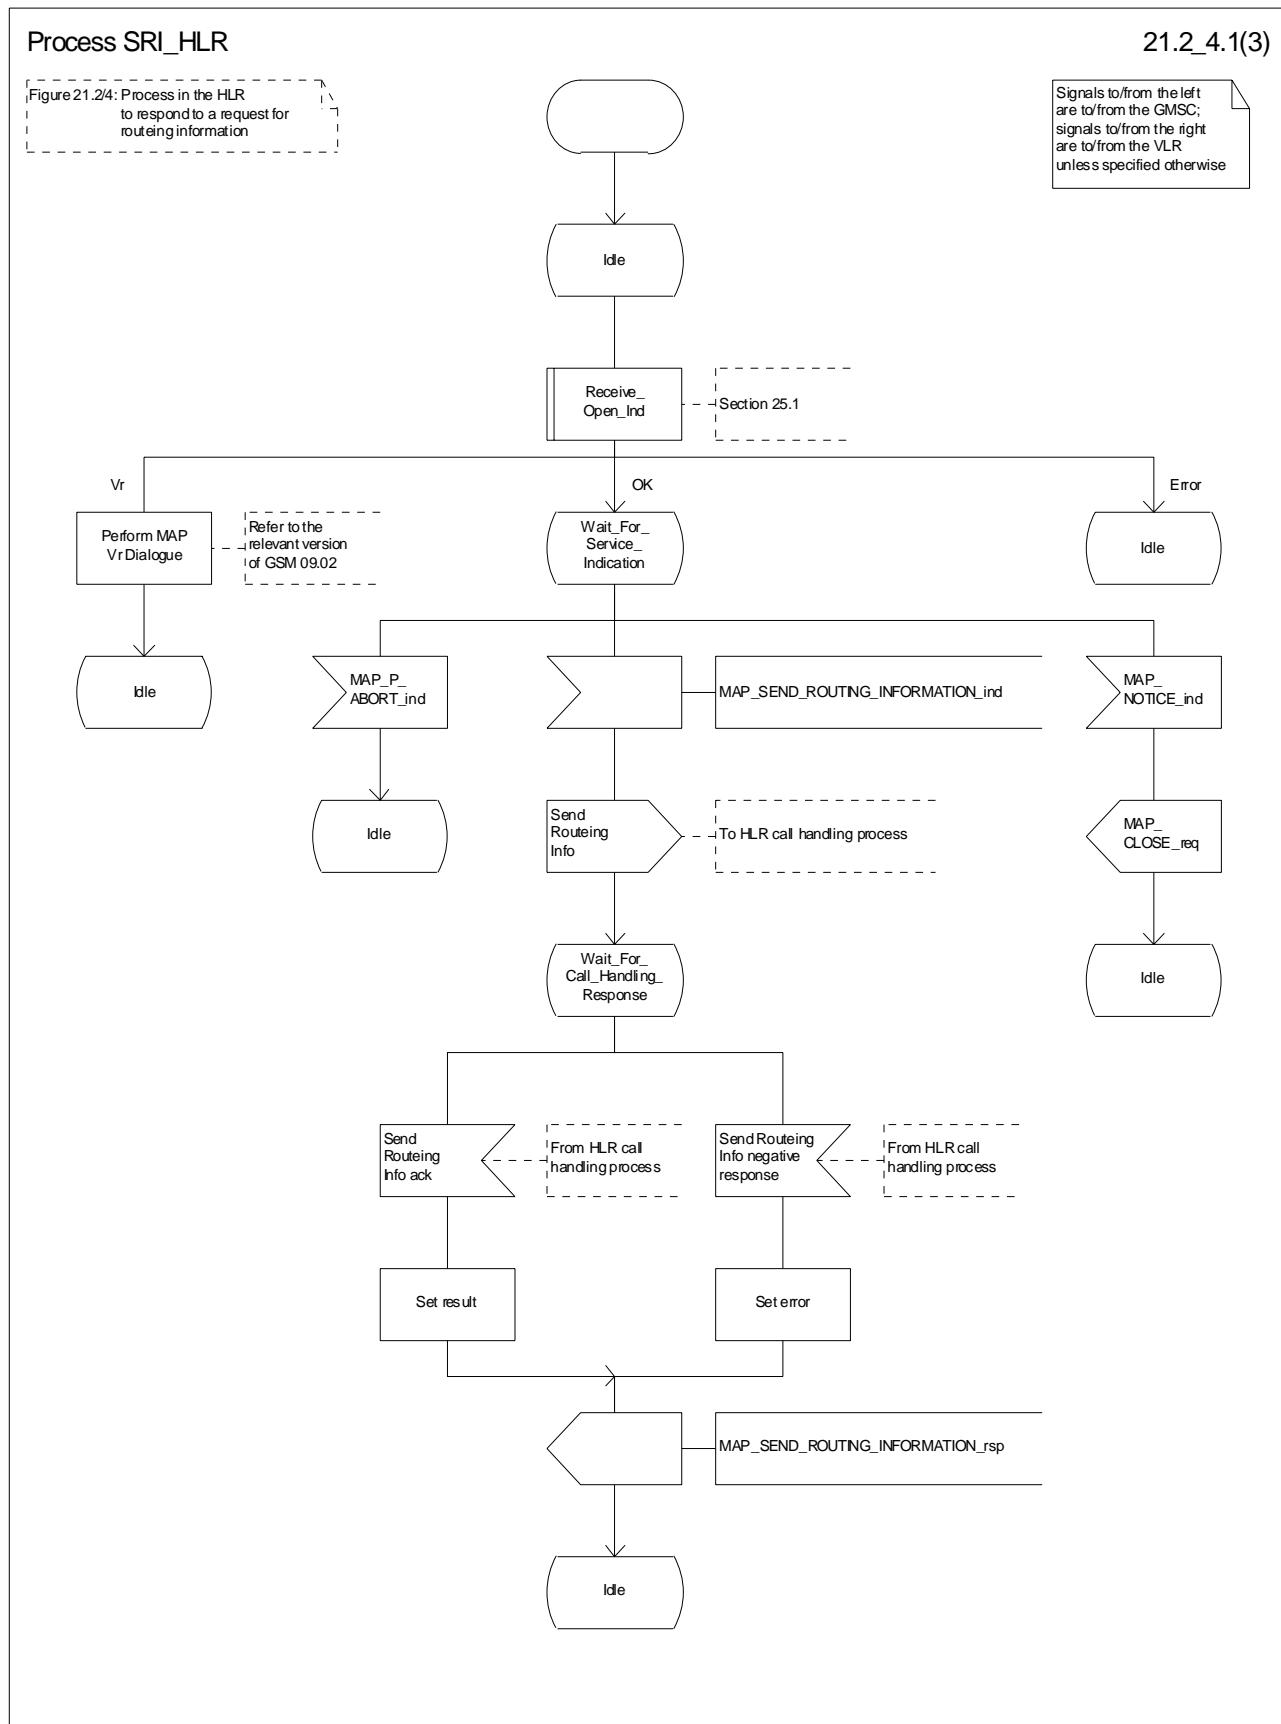


Figure 21.2/4 (sheet 1 of 3): Process SRI\_HLR

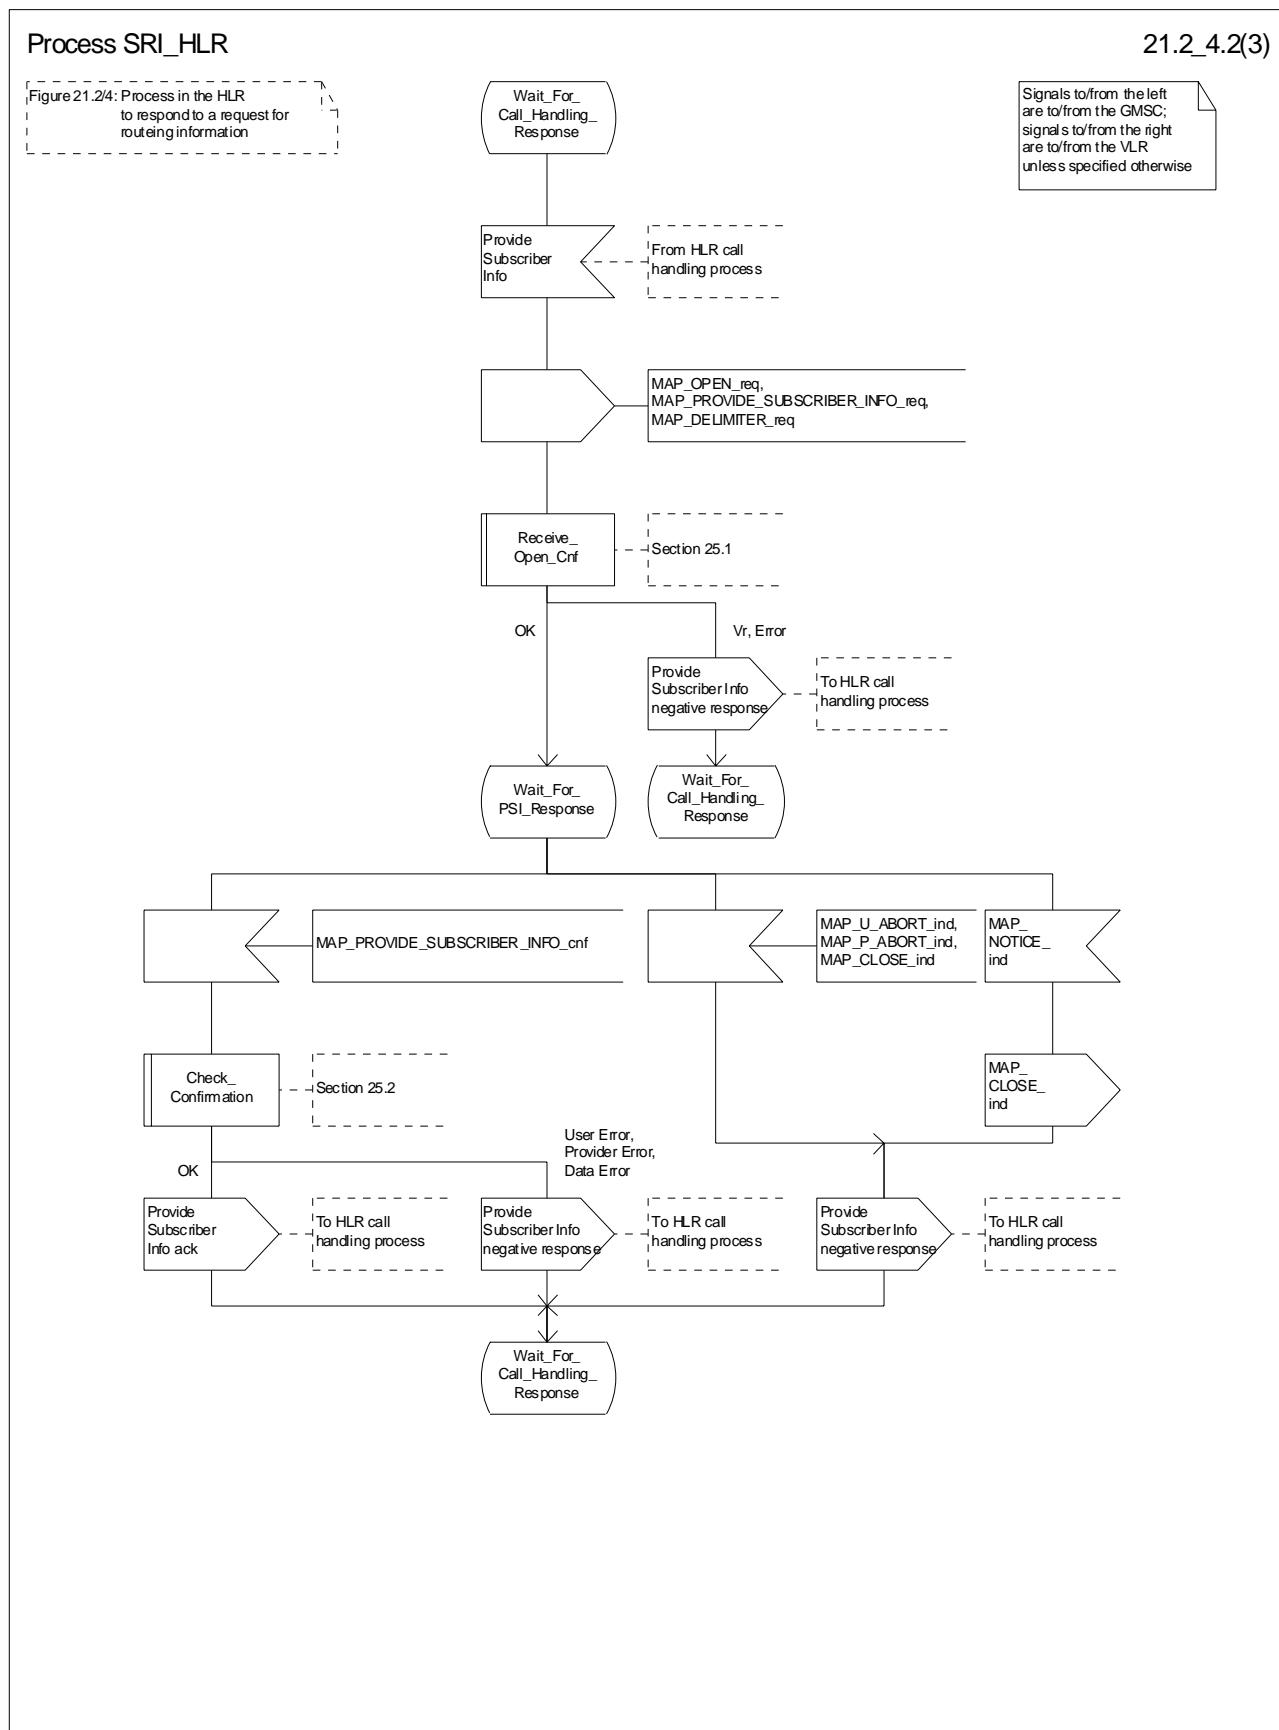


Figure 21.2/4 (sheet 2 of 3): Process SRI\_HLR

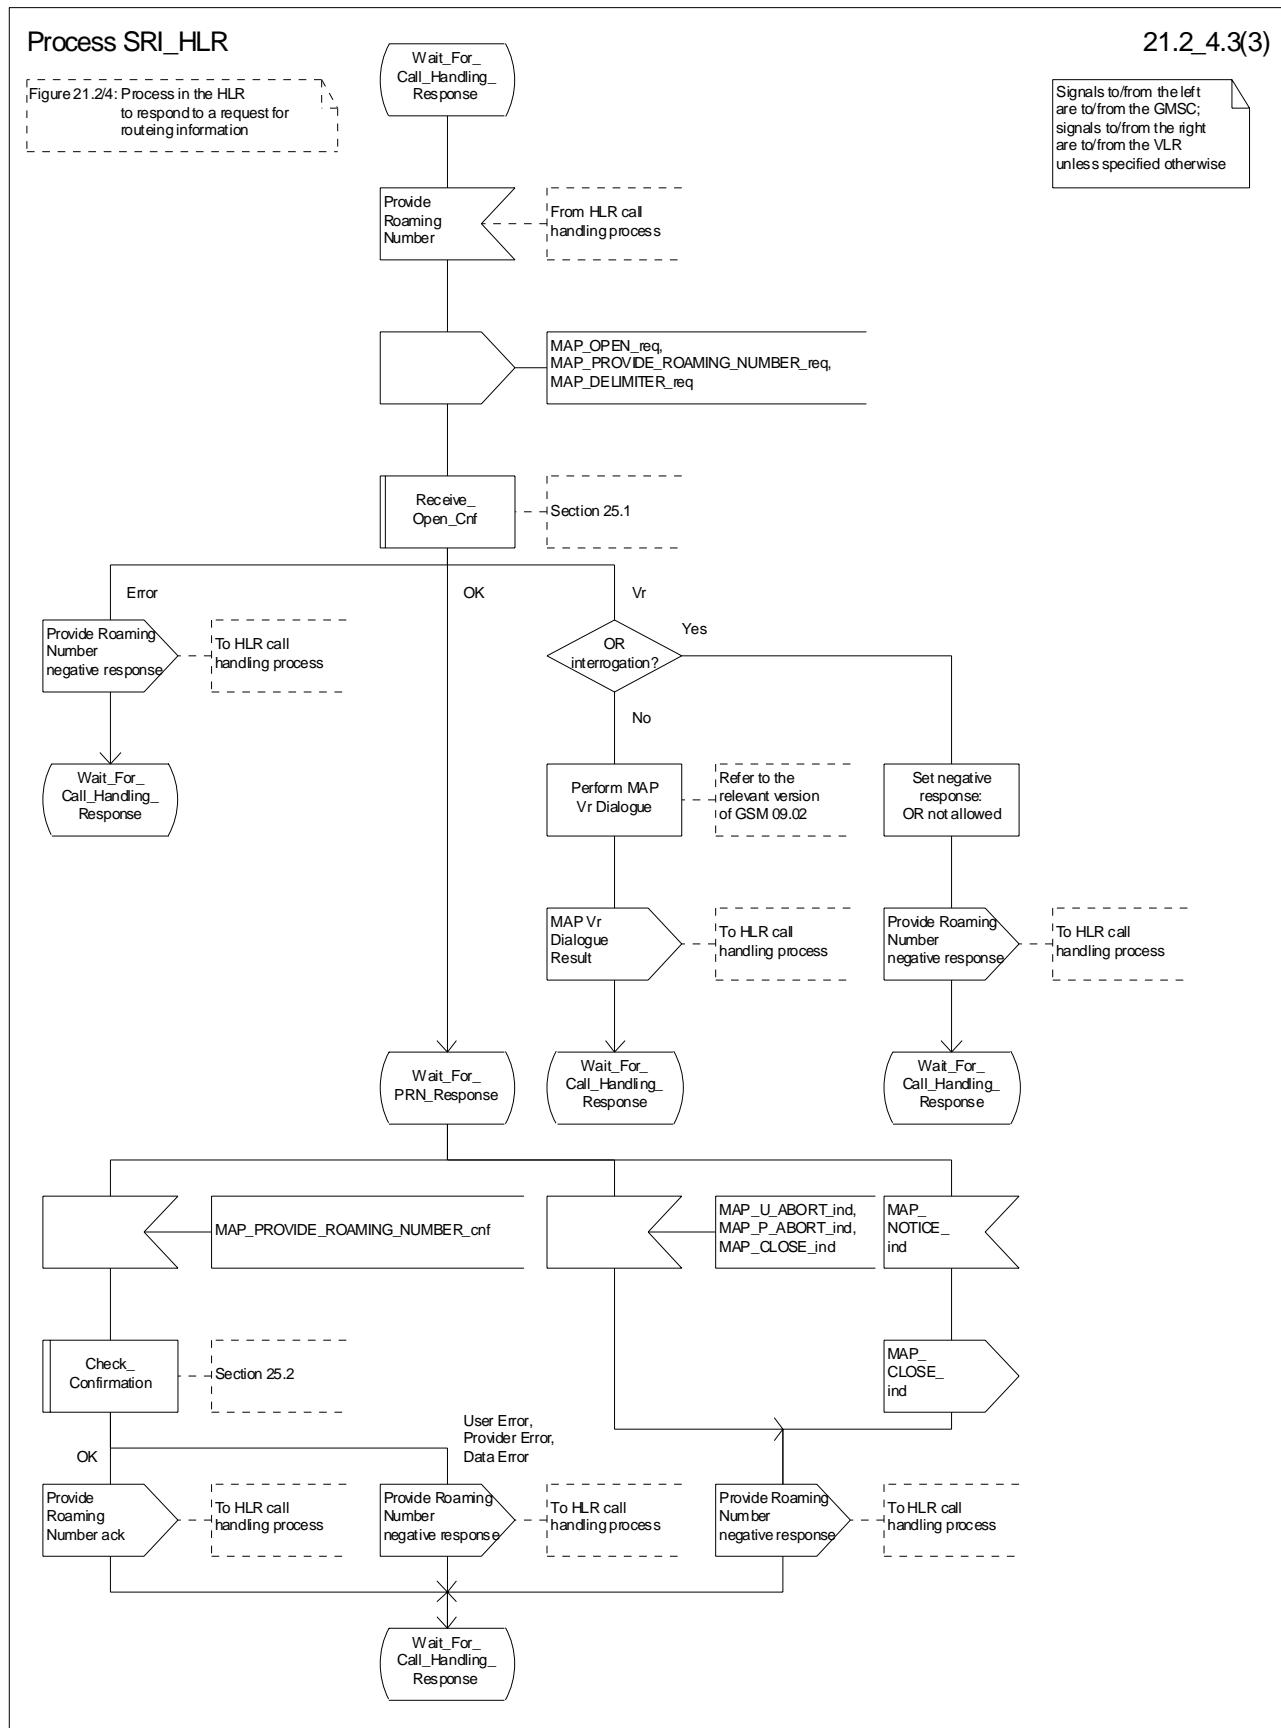


Figure 21.2/4 (sheet 3 of 3): Process SRI\_HLR

## 21.2.4 Process in the VLR to provide a roaming number

The MAP process in the VLR to provide a roaming number for a mobile terminating call is shown in figure 21.2/5. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context roamingNbEnquiry, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_PROVIDE\_ROAMING\_NUMBER service indication is received, the MAP process sends a Provide Roaming Number request to the call handling process in the VLR, and waits for a response. The Provide Roaming Number request contains the parameters received in the MAP\_PROVIDE\_ROAMING\_NUMBER service indication.

If the call handling process in the VLR returns a Provide Roaming Number ack, the MAP process constructs a MAP\_PROVIDE\_ROAMING\_NUMBER service response containing the roaming number contained in the Send Routeing Info ack, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

### **Earlier version MAP dialogue with the HLR**

If the macro Receive\_Open\_Ind takes the Vr exit, the VLR performs the earlier version MAP dialogue as specified in [51] and the process returns to the idle state.

### **Failure of dialogue opening with the HLR**

If the macro Receive\_Open\_Ind takes the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

### **Negative response from VLR call handling process**

If the call handling process in the HLR returns a negative response, the MAP process constructs a MAP\_PROVIDE\_ROAMING\_NUMBER service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

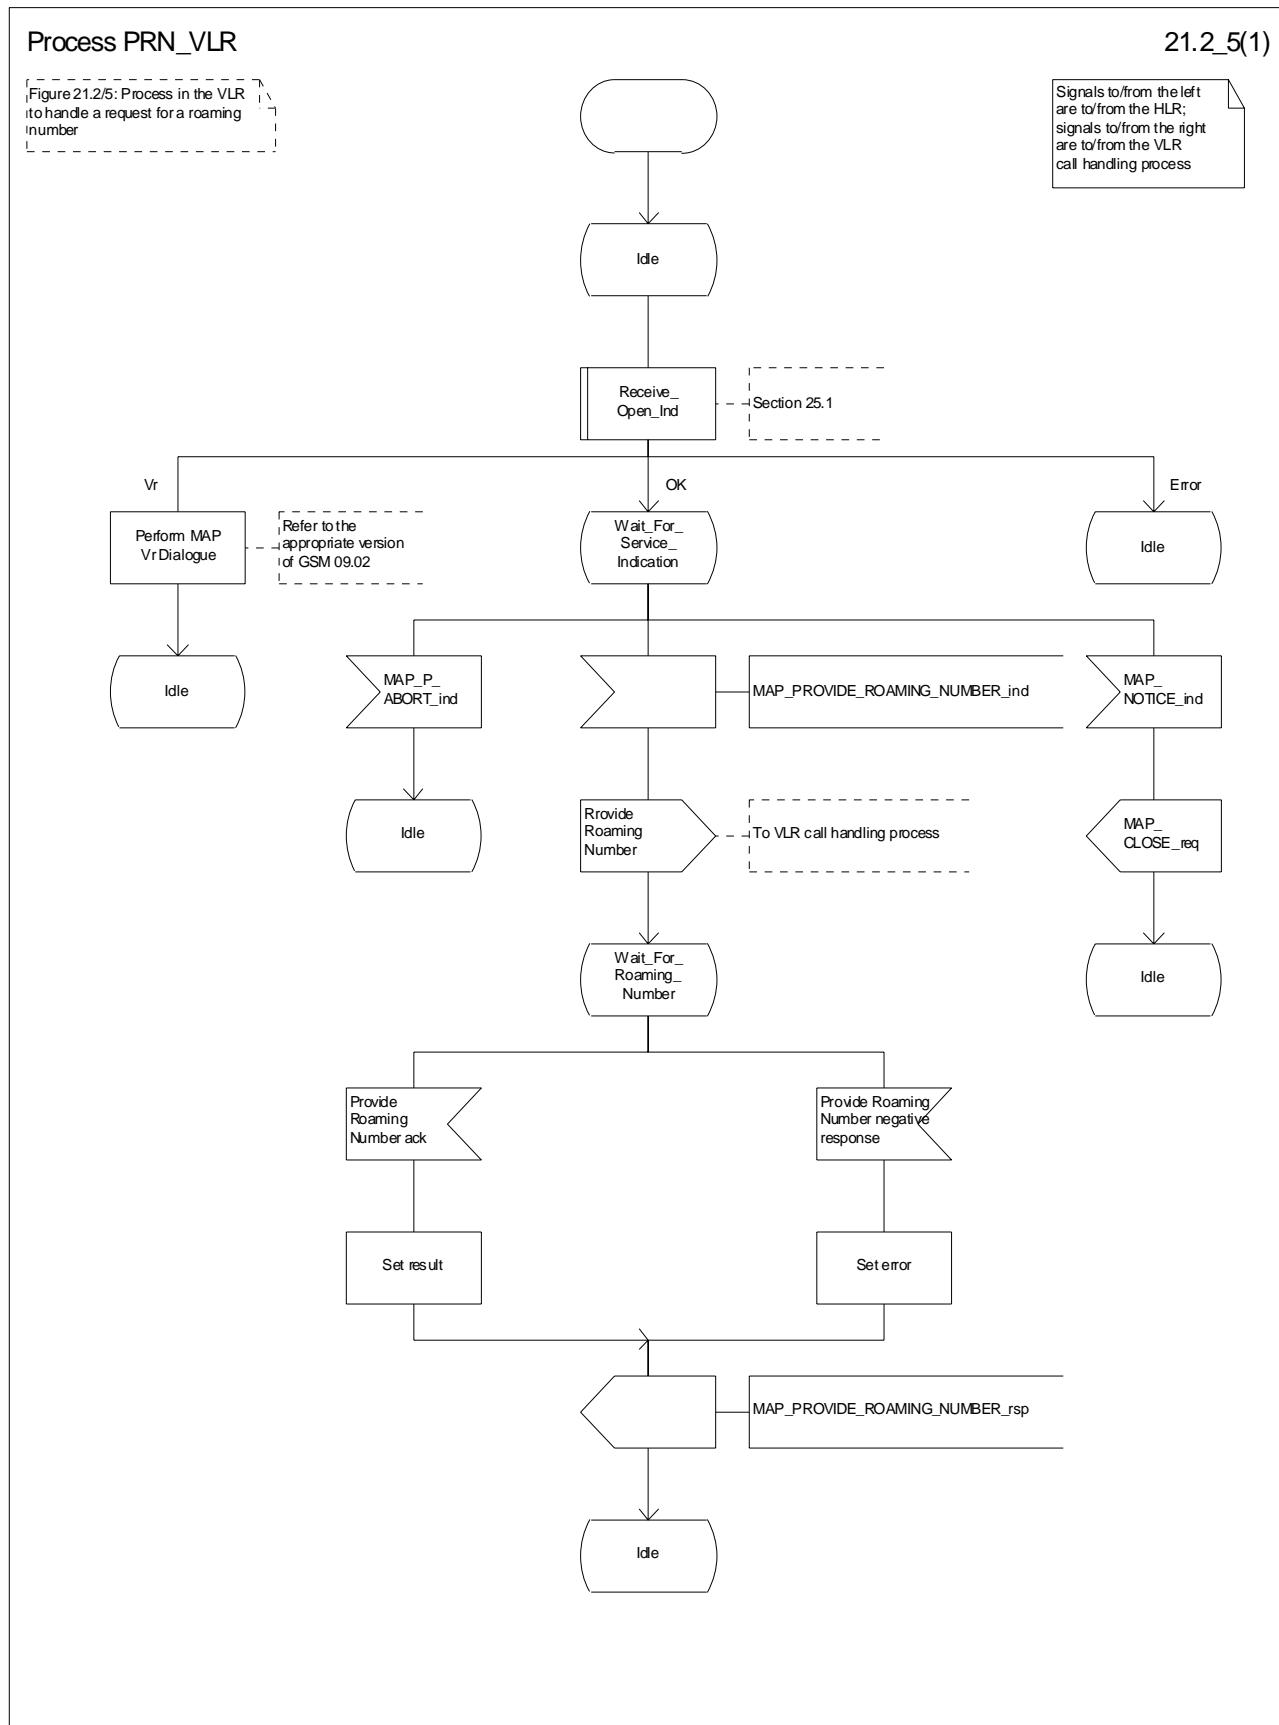


Figure 21.2/5: Process PRN\_VLR

## 21.2.5 Process in the VLR to restore subscriber data

The MAP process in the HLR to restore subscriber data is shown in figure 21.2/6. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive_Open_Cnf	see clause 25.1.2;
Check_Confirmation	see clause 25.2.2;
Insert_Subs_Data_VLR	see clause 25.7.1;
Activate_Tracing_VLR	see clause 25.9.3.

### Successful outcome

When the MAP process receives a Restore Data request from the data restoration process in the VLR, it requests a dialogue with the HLR whose identity is contained in the Restore Data request by sending a MAP\_OPEN service request, requests data restoration using a MAP\_RESTORE\_DATA service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

The VLR may receive a MAP\_INSERT\_SUBSCRIBER\_DATA service indication from the HLR; this is handled by the macro Insert\_Subs\_Data\_VLR as described in clause 25.7.1, and the MAP process waits for a further response from the HLR.

The VLR may receive a MAP\_ACTIVATE\_TRACE\_MODE service indication from the HLR; this is handled by the macro Activate\_Tracing\_VLR as described in clause 25.9.3, and the MAP process waits for a further response from the HLR.

If the MAP process receives a MAP\_RESTORE\_DATA service confirm, it invokes the macro Check\_Confirmation to check the content of the confirm.

If the Check\_Confirmation macro takes the OK exit, the MAP process sends a Restore Data ack containing the information received from the HLR to the data restoration process in the VLR and returns to the idle state.

### Error in MAP\_RESTORE\_DATA confirm

If the MAP\_RESTORE\_DATA service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Restore Data negative response indicating the type of error to the call handling process in the HLR, and returns to the idle state.

### Earlier version MAP dialogue with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit, the VLR performs the earlier MAP version dialogue as specified in [51] and the process terminates.

### Dialogue opening failure

If the macro Receive\_Open\_Cnf indicates that the dialogue with the HLR could not be opened, the MAP process sends a negative response indicating system failure to the data restoration process in the GMSC and returns to the idle state.

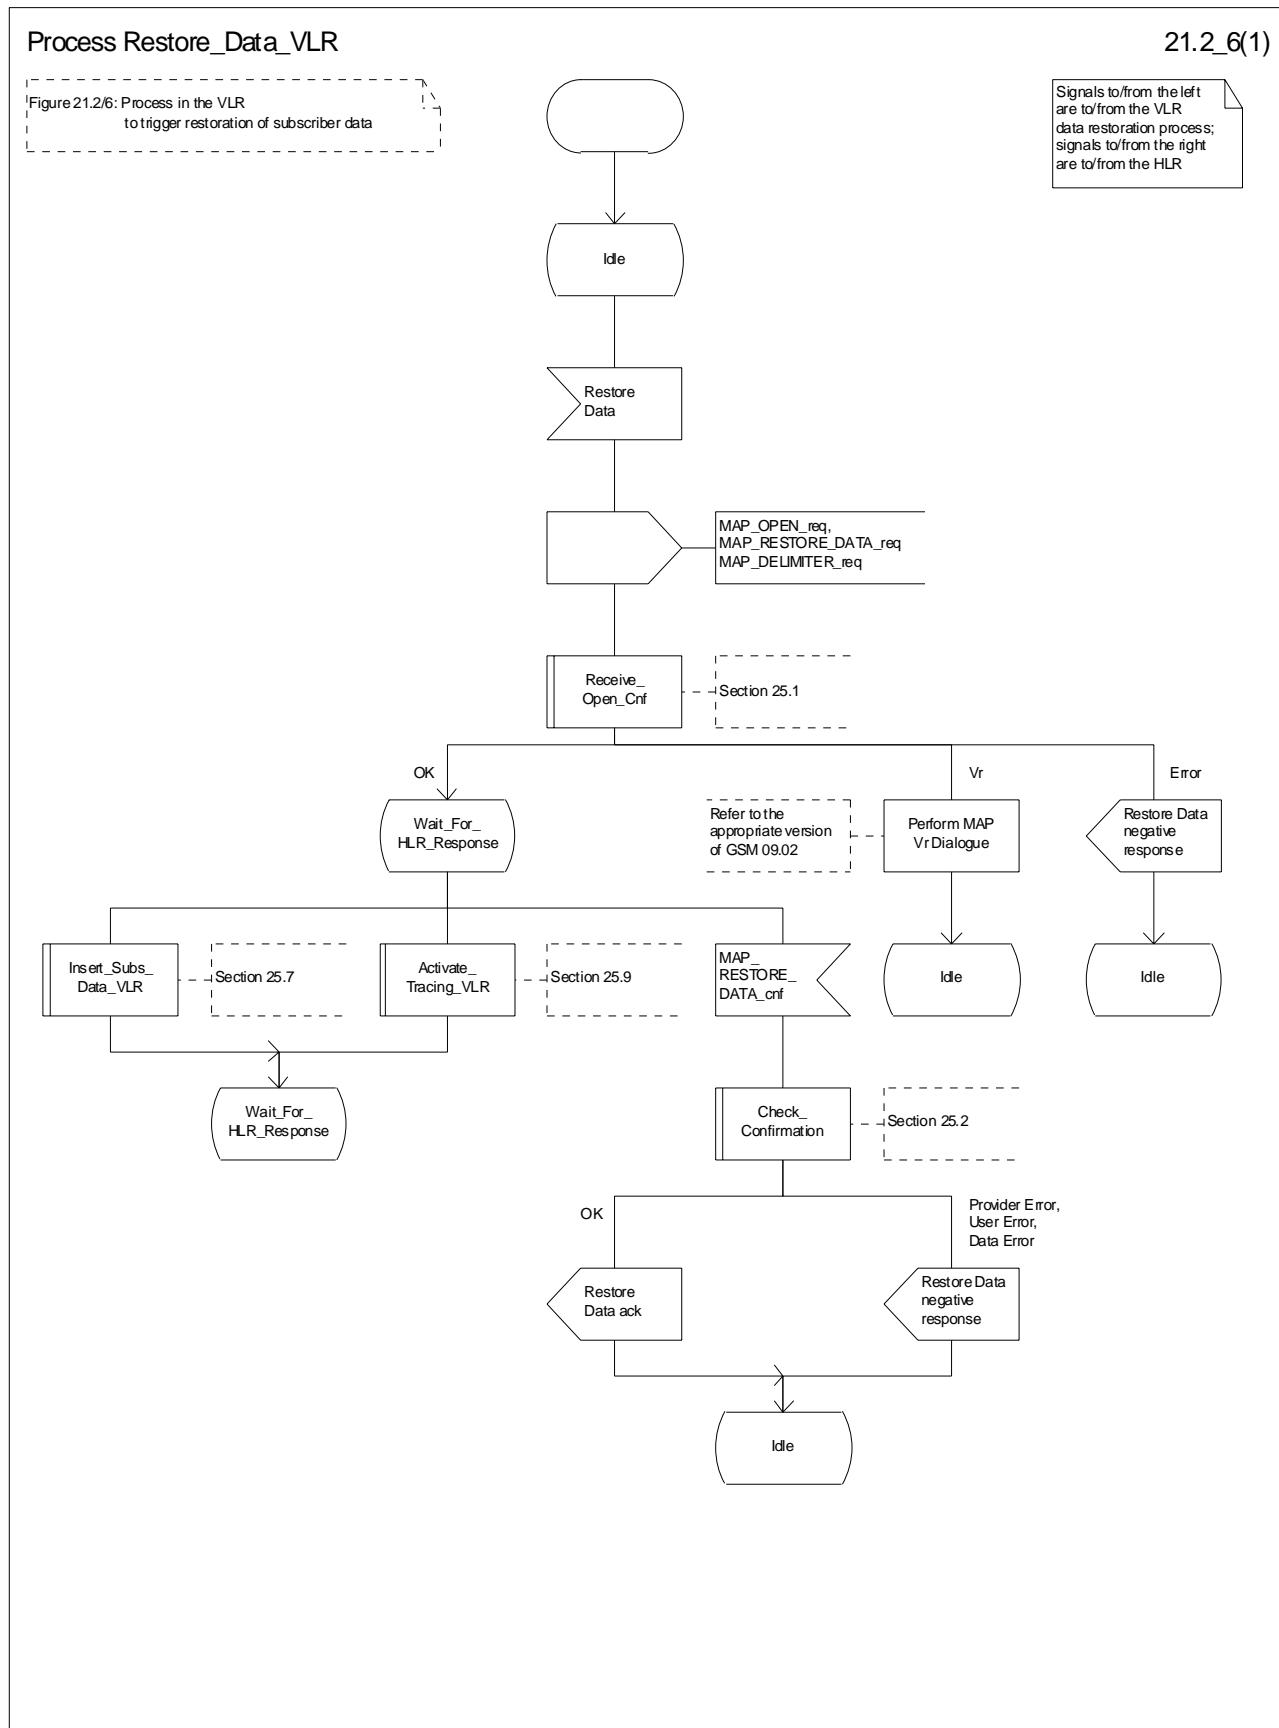


Figure 21.2/6: Process Restore\_Data\_VLR

## 21.2.6 Process in the VLR to provide subscriber information

The MAP process in the VLR to provide subscriber information for a mobile terminating call subject to CAMEL invocation is shown in figure 21.2/6. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context subscriberInfoEnquiry, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_PROVIDE\_SUBSCRIBER\_INFO service indication is received, the MAP process sends a Provide Subscriber Info request to the subscriber information request process in the VLR, and waits for a response. The Provide Subscriber Info request contains the parameters received in the MAP\_PROVIDE\_SUBSCRIBER\_INFO service indication.


If the subscriber information request process in the VLR returns a Provide Subscriber Info ack, the MAP process constructs a MAP\_PROVIDE\_SUBSCRIBER\_INFO service response containing the information contained in the Provide Subscriber Info ack, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.


If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

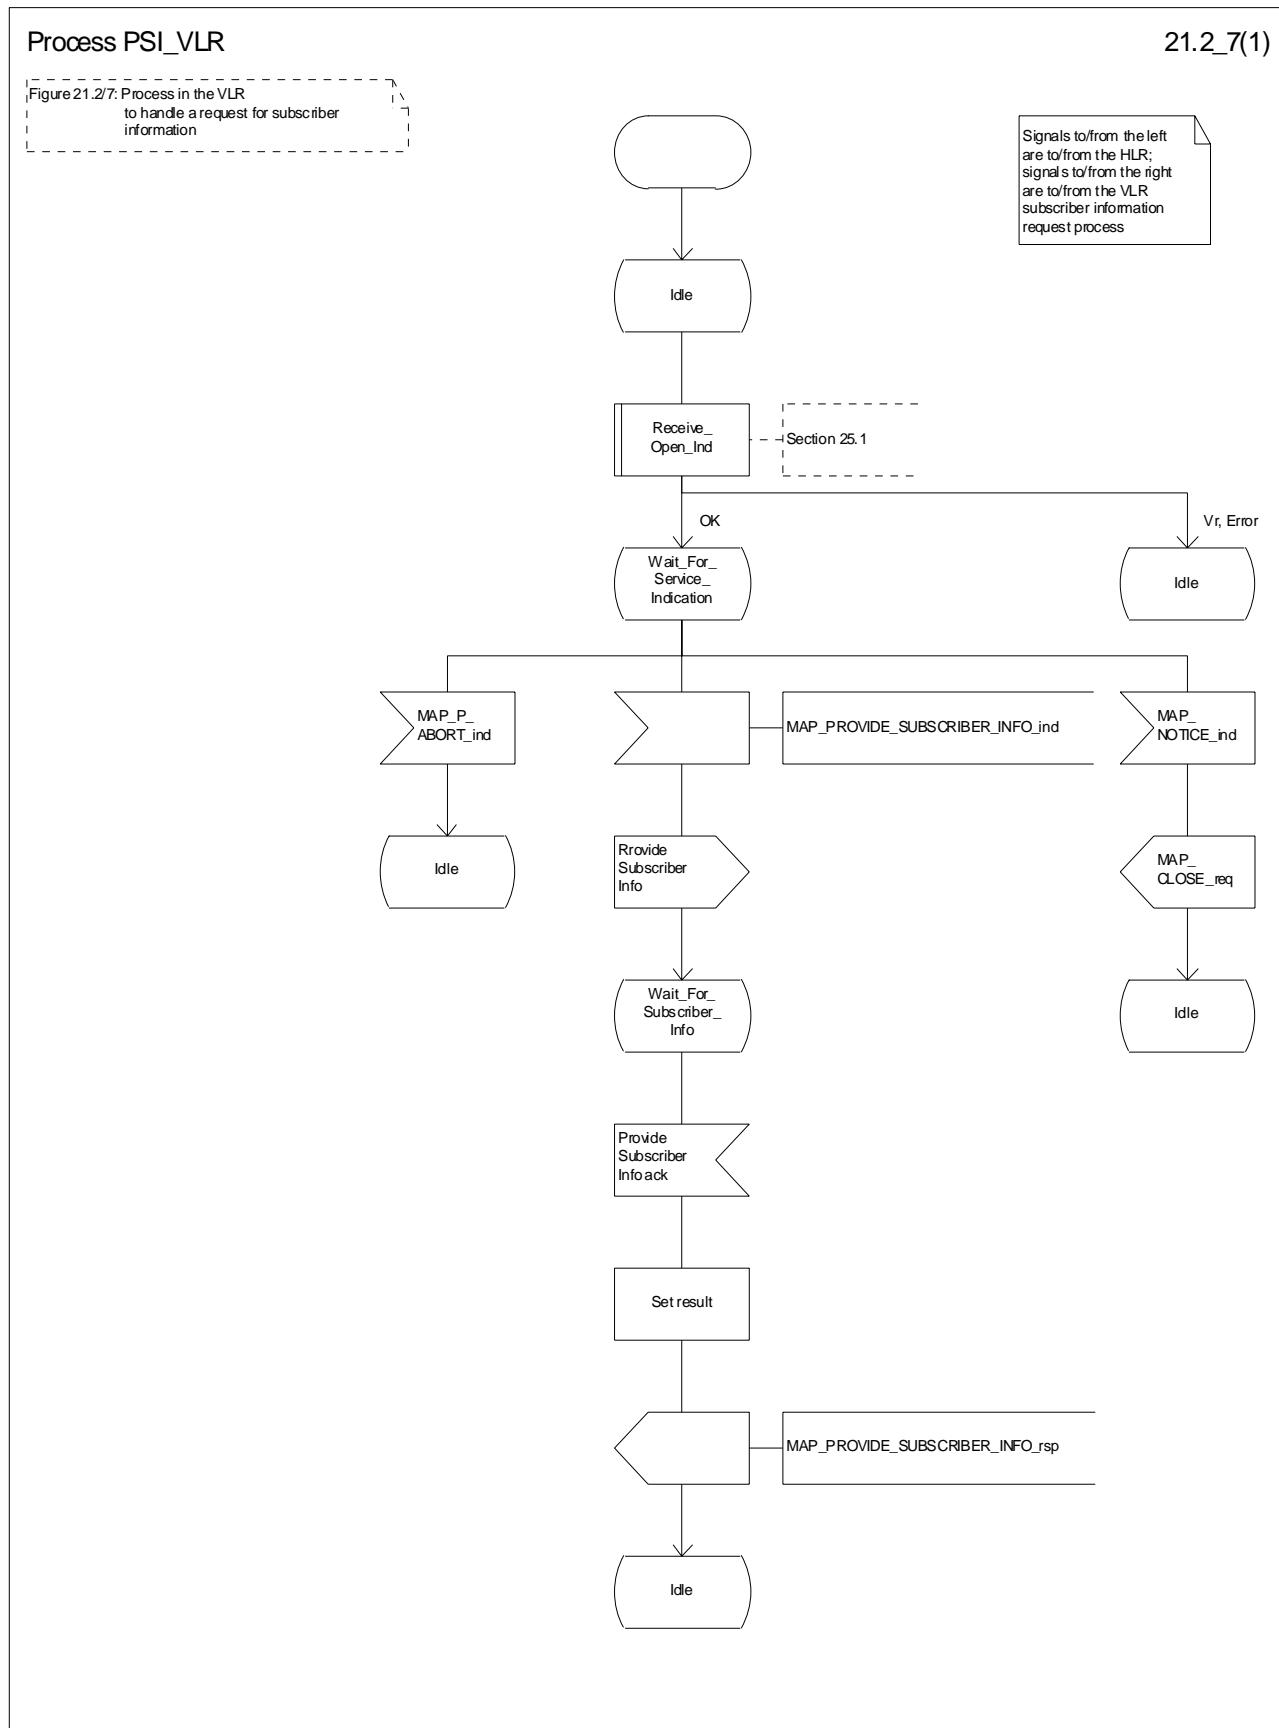**Figure 21.2/7: Process PSI\_VLR**

## 21.2.7 Process in the HLR for Any Time Interrogation

The message flows for successful retrieval of subscriber information related to an any time interrogation from the CAMEL server are shown in figure 21.2/8.

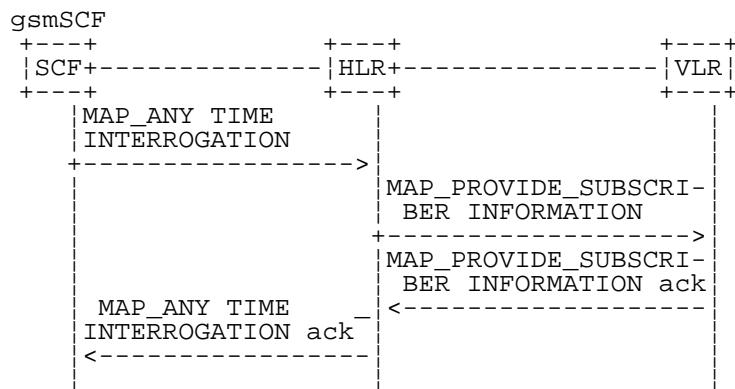

**Figure 21.2/8: Message flow for any time interrogation**

The following MAP services are used to retrieve routing information:

- MAP\_ANY\_TIME\_INTERROGATION see clause 8.11.1;
- MAP\_PROVIDE\_SUBSCRIBER\_INFO see clause 8.11.2.

### 21.2.7.1 Process in the gsmSCF

Out of the scope of the MAP specification.

### 21.2.7.2 Process in the HLR

The MAP process in the HLR to provide subscriber information in response to an interrogation from the CAMEL server is shown in figure 21.2/8. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- Receive\_Open\_Ind see clause 25.1.1;
- Receive\_Open\_Cnf see clause 25.1.2;
- Check\_Confirmation see clause 25.2.2.

#### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context anyTimeInterrogationEnquiry, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_ANY\_TIME\_INTERROGATION service indication is received, the MAP process sends an Any Time Interrogation request to the call handling process in the HLR (described in 3GPP TS 23.078), and waits for a response. The Any Time Interrogation request contains the parameters received in the MAP\_ANY\_TIME\_INTERROGATION service indication.

If the call handling process in the HLR returns an Any Time Interrogation response, the MAP process constructs a MAP\_ANY\_TIME\_INTERROGATION service response containing the subscriber information contained in the Any Time Interrogation response, constructs a MAP\_CLOSE service request, sends them to the CAMEL server and returns to the idle state.

If the call handling process in the HLR returns a Provide Subscriber Info request, the MAP process requests a dialogue with the VLR whose identity is contained in the Provide Subscriber Info request by sending a MAP\_OPEN service request, requests the subscriber status using a MAP\_PROVIDE\_SUBSCRIBER\_INFO service request, and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request.

If the macro takes the OK exit, the MAP process waits for the response from the VLR.

If the MAP process receives a MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm, it invokes the macro Check\_Confirmation to check the content of the confirm.

If the Check\_Confirmation macro takes the OK exit, the MAP process sends a Provide Subscriber Info ack containing the information received in the MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

If the MAP\_PROVIDE\_SUBSCRIBER\_INFO service confirm contains a provider error or a data error, the MAP process sends a Provide Subscriber Info negative response indicating the type of error to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

**NOTE:** The 'User Error' exit from the macro Check\_Confirmation is shown for formal completeness; the MAP\_PROVIDE\_SUBSCRIBER\_INFO\_cnf primitive cannot contain a user error.

#### **Negative response from HLR call handling process**

If the call handling process in the HLR returns a negative response, either before or after a dialogue with the VLR to obtain subscriber information, the MAP process constructs a MAP\_ANY\_TIME\_INTERROGATION service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the CAMEL server and returns to the idle state.

#### **Failure of Provide Subscriber Info dialogue with the VLR**

If the Receive\_Open\_Cnf macro takes the Vr exit or the Error exit after the MAP process has requested opening of a Provide Subscriber Info dialogue with the VLR, the MAP process sends a Provide Subscriber Info negative response indicating system failure to the call handling process in the HLR, and waits for a response. The handling of the response from the call handling process in the HLR is described above.

#### **Failure of dialogue opening with the CAMEL server**

If the macro Receive\_Open\_Ind takes the Vr or Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

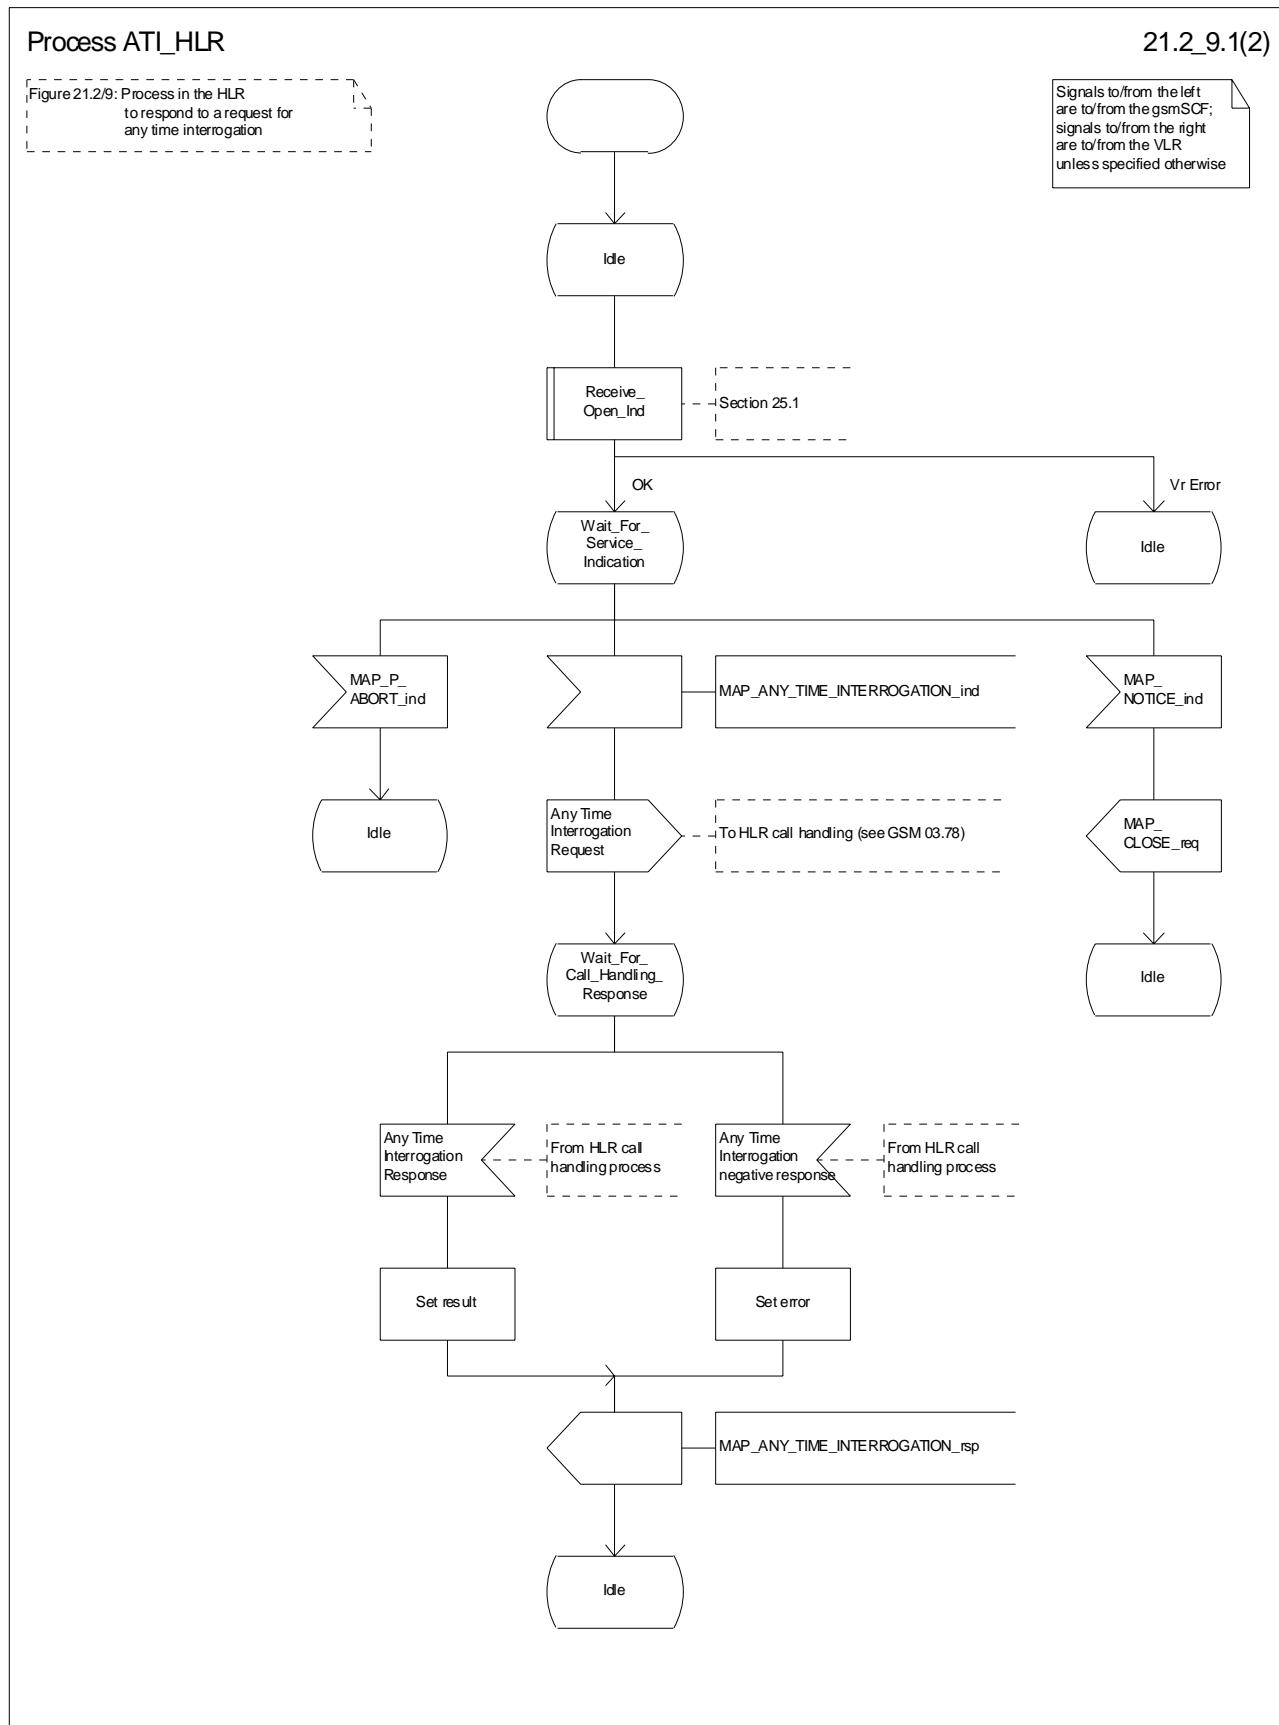


Figure 21.2/9 (sheet 1 of 2): Process ATI\_HLR (New)


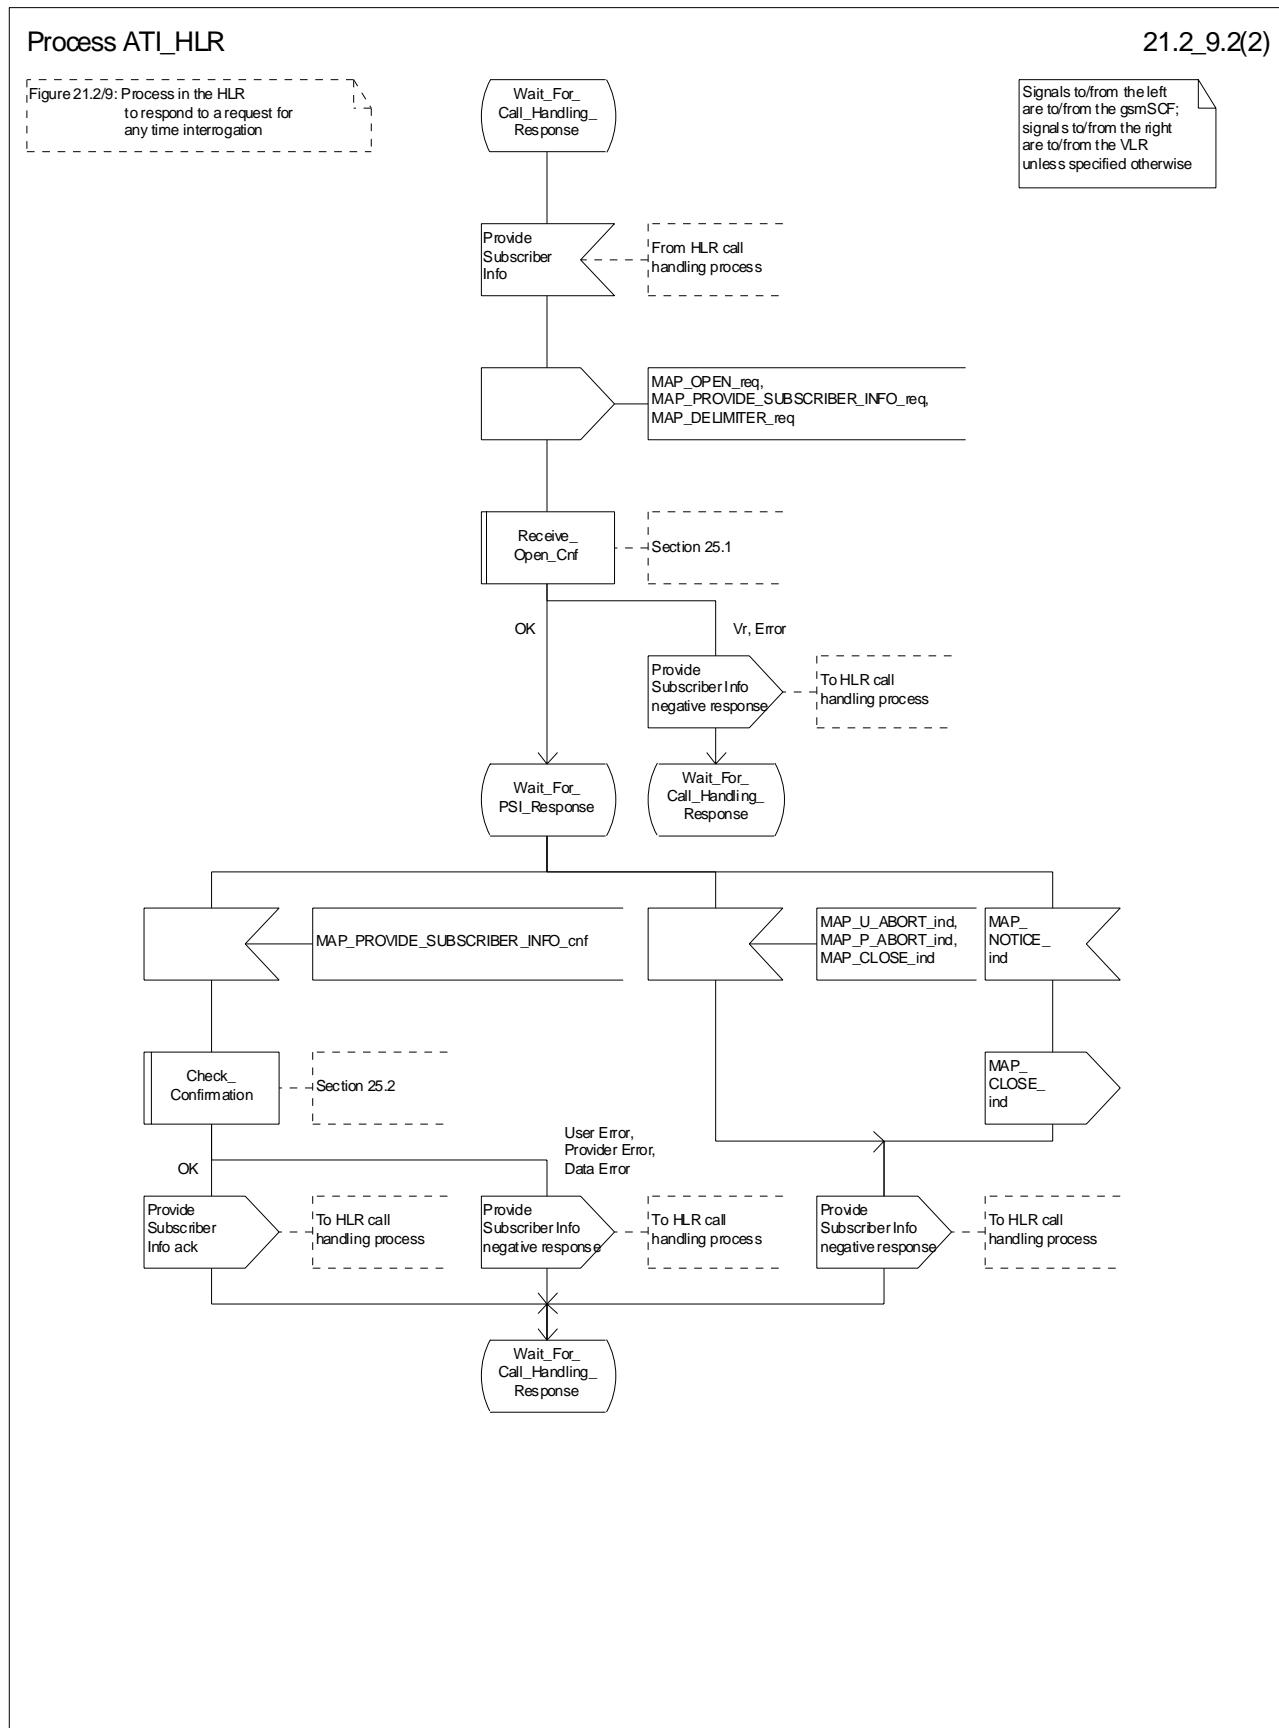


Figure 21.2/9 (sheet 2 of 2): Process ATI\_HLR (New)

## 21.2.8 Process in the GMLC for Any Time Interrogation

The message flows for successful retrieval of subscriber information related to an any time interrogation from the CAMEL server are shown in figure 21.2.8/1.

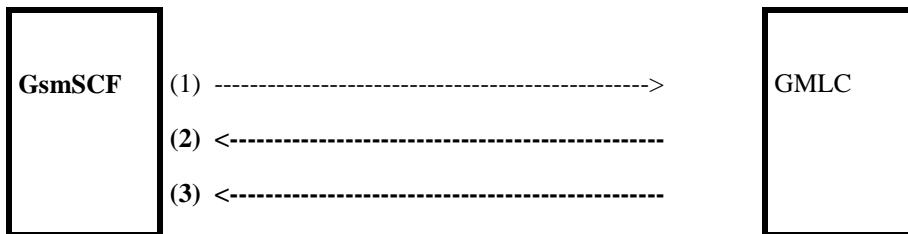

- (1) Any Time Interrogation (gsmSCF to GMLC).
  - (2) Any Time Interrogation Result (GMLC to gsmSCF).
  - (3) Any Time Interrogation Error (GMLC to gsmSCF)
- The following MAP services are used to retrieve routing information:

- MAP\_ANY\_TIME\_INTERROGATION see clause 8.11.1;

**Figure 21.2.8/1**

In addition, the GMLC may use Location Services specific MAP Services.

### 21.2.8.1 Process in the gsmSCF

The process in the gsmSCF to request location information from the GMLC is shown in figure 21.2.8/2.

The process is started with internal signal Request\_Subscriber\_Info\_GMLC. This signal is sent by the Service Logic in the gsmSCF.

The process responds with ‘Request\_Subscriber\_Info\_GMLC positive response’ or ‘Request\_Subscriber\_Info\_GMLC negative response’.

### 21.2.8.2 Process in the GMLC

The MAP process in the GMLC to provide location information in response to a request from the gsmSCF is shown in figure 21.2.8/3.

#### Successful outcome

When the GMLC has successfully received the MAP Any\_Time\_Interrogation MAP Message, it will send an internal signal to the Location Service process in the GMLC to obtain the subscriber’s Location Information. The result received from that process is sent back to the gsmSCF, in the Any\_Time\_Interrogation Result MAP Message.

#### Unsuccessful outcome

In the case of a Provider Error received, the process will terminate.

When a User error is received from the Location Services process in the GMLC, then a User Abort is sent to the gsmSCF.

If a negative response is received from the Location Services process in the GMLC, then this response is forwarded to the gsmSCF.

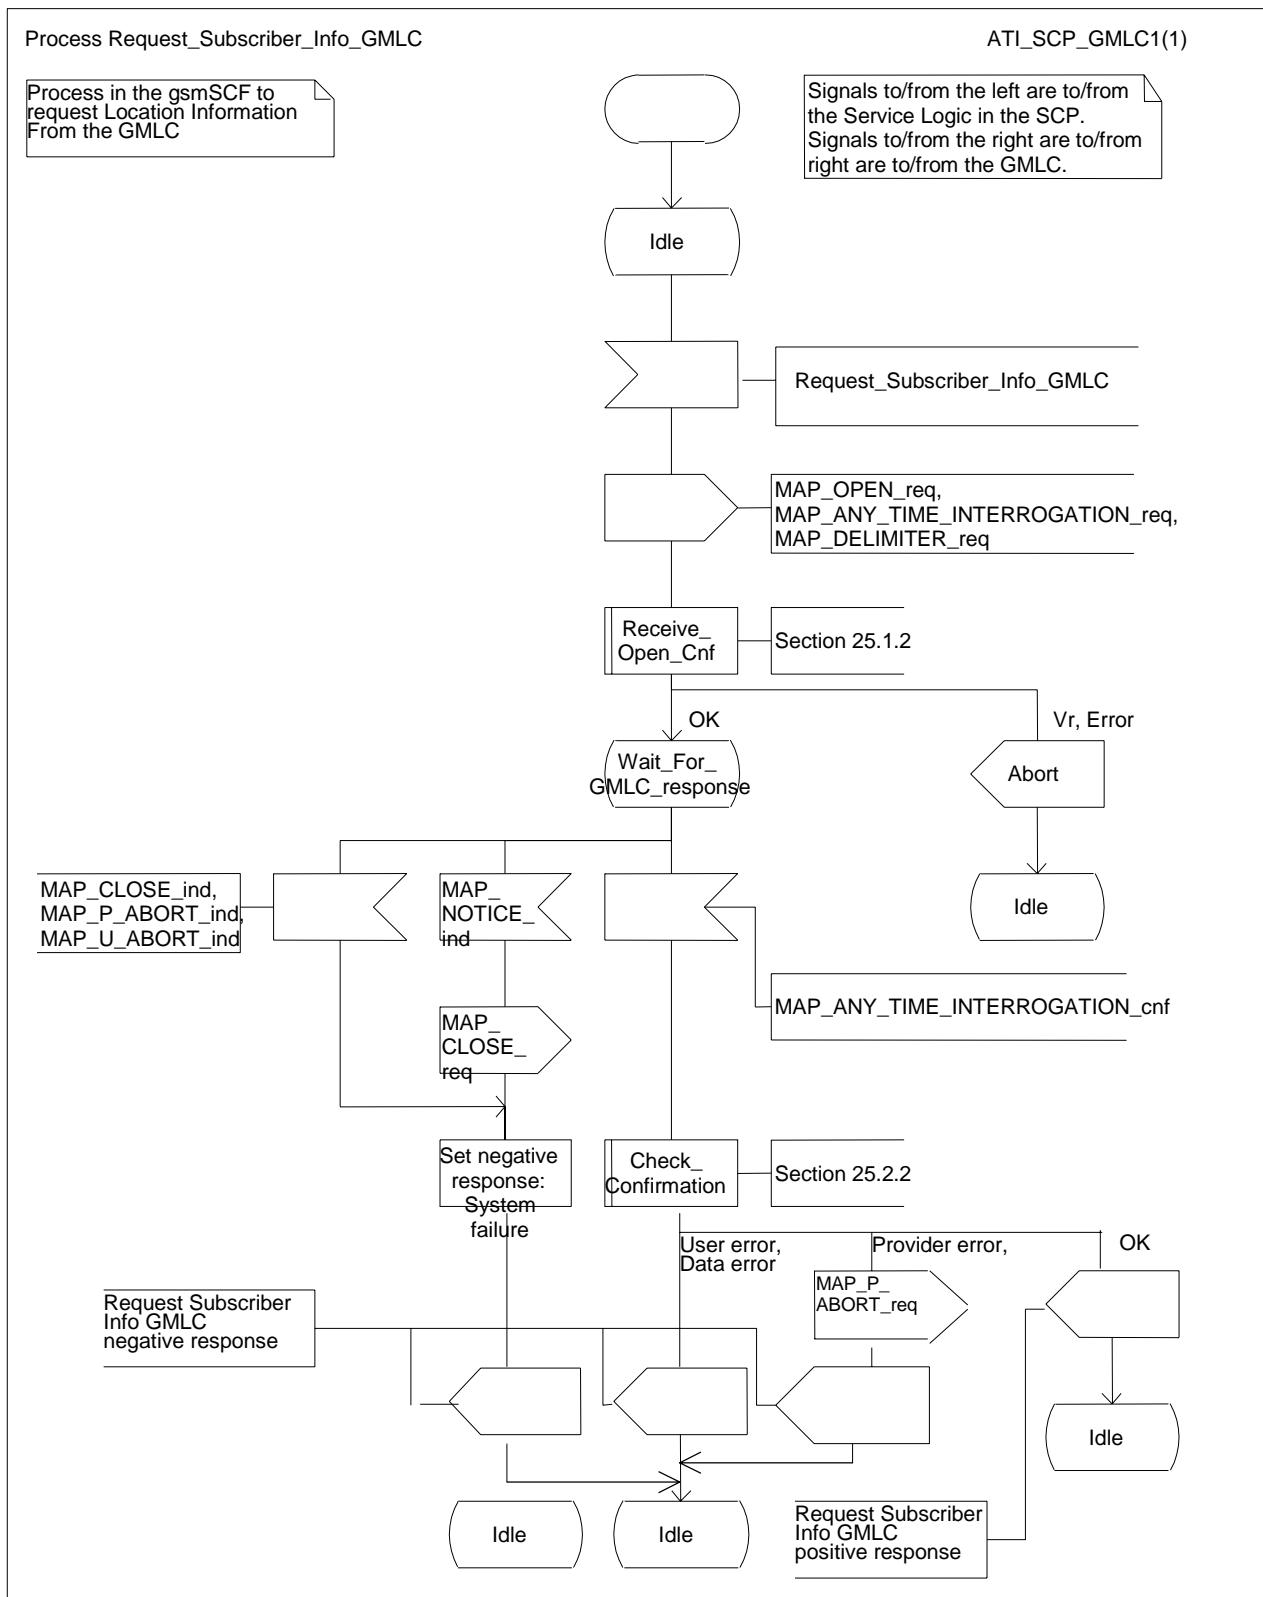
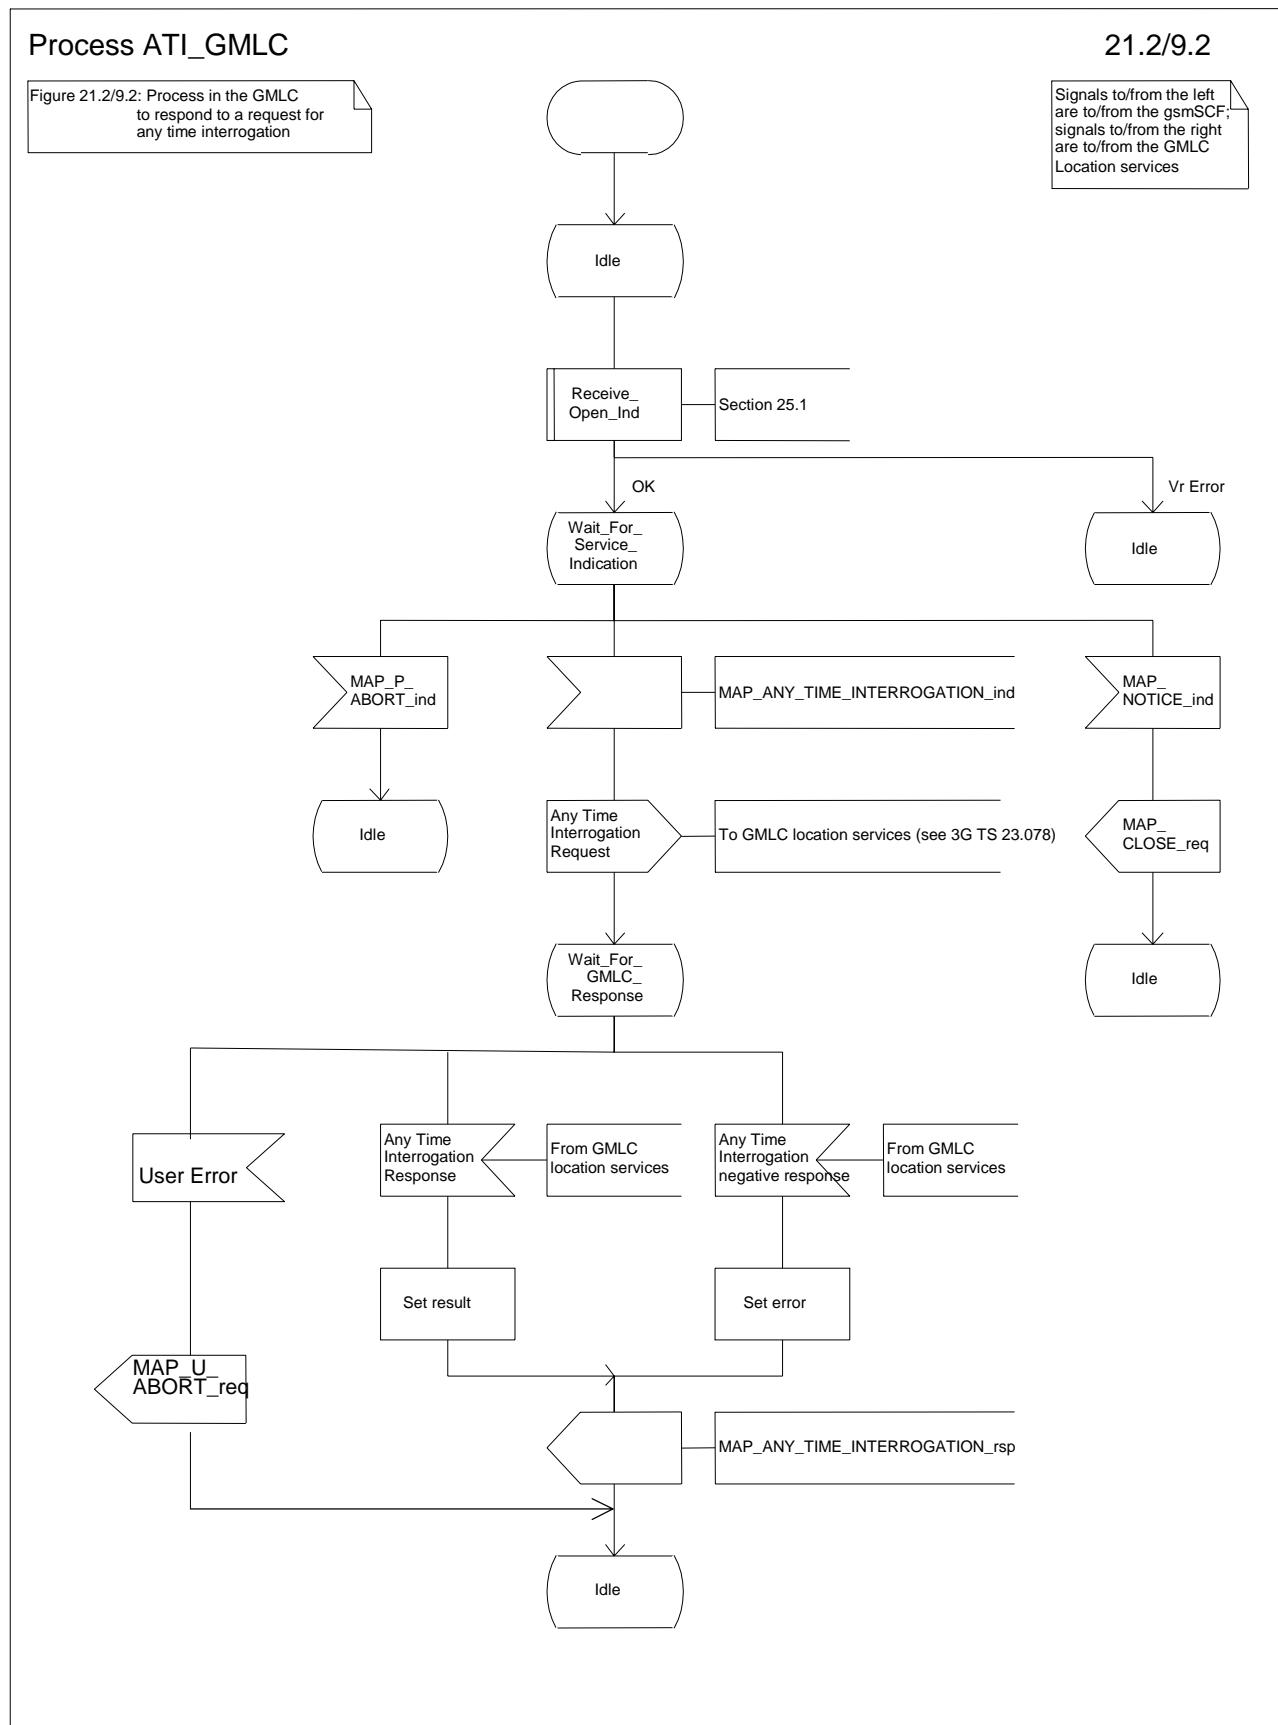


Figure 21.2.8/2: Process Request\_Subscriber\_Info\_GMLC

**Figure 21.2.8/3: Process ATI\_GMLC**


## 21.2.9 Process in the gsmSCF

For the purposes of retrieving routeing information from the HLR, the gsmSCF takes the role of the GMSC and follows the process specified in subclause 21.2.2.

## 21.3 Transfer of call handling

### 21.3.1 General

The message flow for successful transfer of call handling to forward a call is shown in figure 21.3/1.

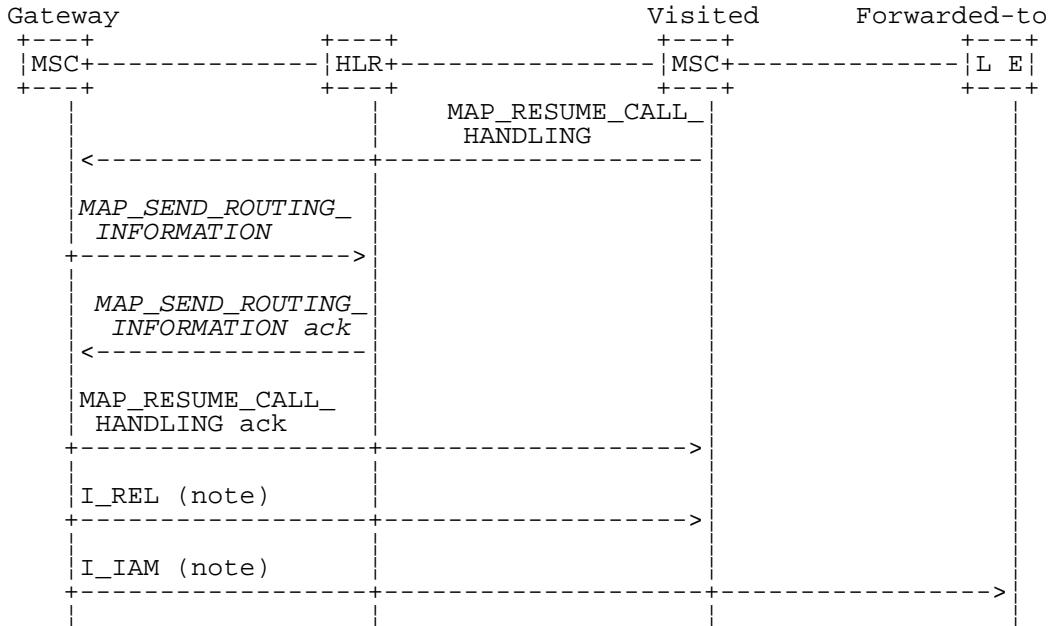

*xxx = Optional Procedure*

NOTE: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. For further details on the TUP and ISUP procedures refer to the following CCITT Recommendations & ETSI specification:

- Q.721-725 - Telephone User Part (TUP);
- ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

**Figure 21.3/1: Message flow for transfer of call handling**

If the HLR indicated in the response to the original request for routeing information that forwarding interrogation is required, the GMSC executes the Send Routeing Information procedure with the HLR to obtain forwarding information; otherwise the GMSC uses the forwarding data which were sent in the MAP\_RESUME\_CALL\_HANDLING req/ind.

### 21.3.2 Process in the VMSC

The MAP process in the VMSC to retrieve routeing information for a mobile terminating call is shown in figure 21.3/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Cnf see clause 25.1.2;

Check\_Confirmation see clause 25.2.2.

#### Successful Outcome

When the MAP process receives a Resume Call Handling request from the call handling process in the VMSC, it requests a dialogue with the GMSC whose identity is contained in the Resume Call Handling request by sending a MAP\_OPEN service request, requests routeing information using a MAP\_RESUME\_CALL\_HANDLING service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the GMSC. VMSC shall not send any duplicate data to the GMSC.

If the VMSC notices after receiving a Resume Call Handling request that the segmentation is needed the VMSC does not set the “All Information Sent” indicator. Otherwise the indicator is set and the process returns to the Wait For GMSC Response state.

If the MAP process receives a MAP\_RESUME\_CALL\_HANDLING service confirm from the GMSC, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process checks if the “All Information Sent” indicator is set. If it is set the MAP process sends a Resume Call Handling ack to the call handling process in the VMSC and returns to the idle state. If the “All Information Sent” indicator is not set the MAP process checks if further segmentation is needed. If segmentation is needed the VMSC does not set the indicator and sends MAP\_RESUME\_CALL\_HANDLING service request to the GMSC. Otherwise the indicator is set and the MAP\_RESUME\_CALL\_HANDLING service request is sent to the GMSC.

#### **Dialogue opening failure**

If the macro Receive\_Open\_Cnf indicates that the dialogue with the GMSC could not be opened or that the dialogue can be opened only at an earlier version, the MAP process sends an Resume Call Handling negative response indicating system failure to the call handling process in the VMSC and returns to the idle state.

#### **Error in MAP\_RESUME\_CALL\_HANDLING confirm**


If the MAP\_RESUME\_CALL\_HANDLING service confirm contains a user error or a provider error, the MAP process sends a Resume Call Handling negative response to the call handling process in the VMSC and returns to the idle state.

NOTE: the 'Data Error' exit from the macro Check\_Confirmation is shown for formal completeness; the result is empty, so the MAP\_PROVIDE\_SUBSCRIBER\_INFO\_cnf primitive cannot contain a data error.

#### **Abort of GMSC dialogue**

After the dialogue with the GMSC has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the GMSC may send a MAP\_CLOSE indication. In either of these cases, the MAP process sends a Resume Call Handling negative response to the call handling process in the GMSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the GMSC, sends a Resume Call Handling negative response indicating system failure to the call handling process in the VMSC and returns to the idle state.

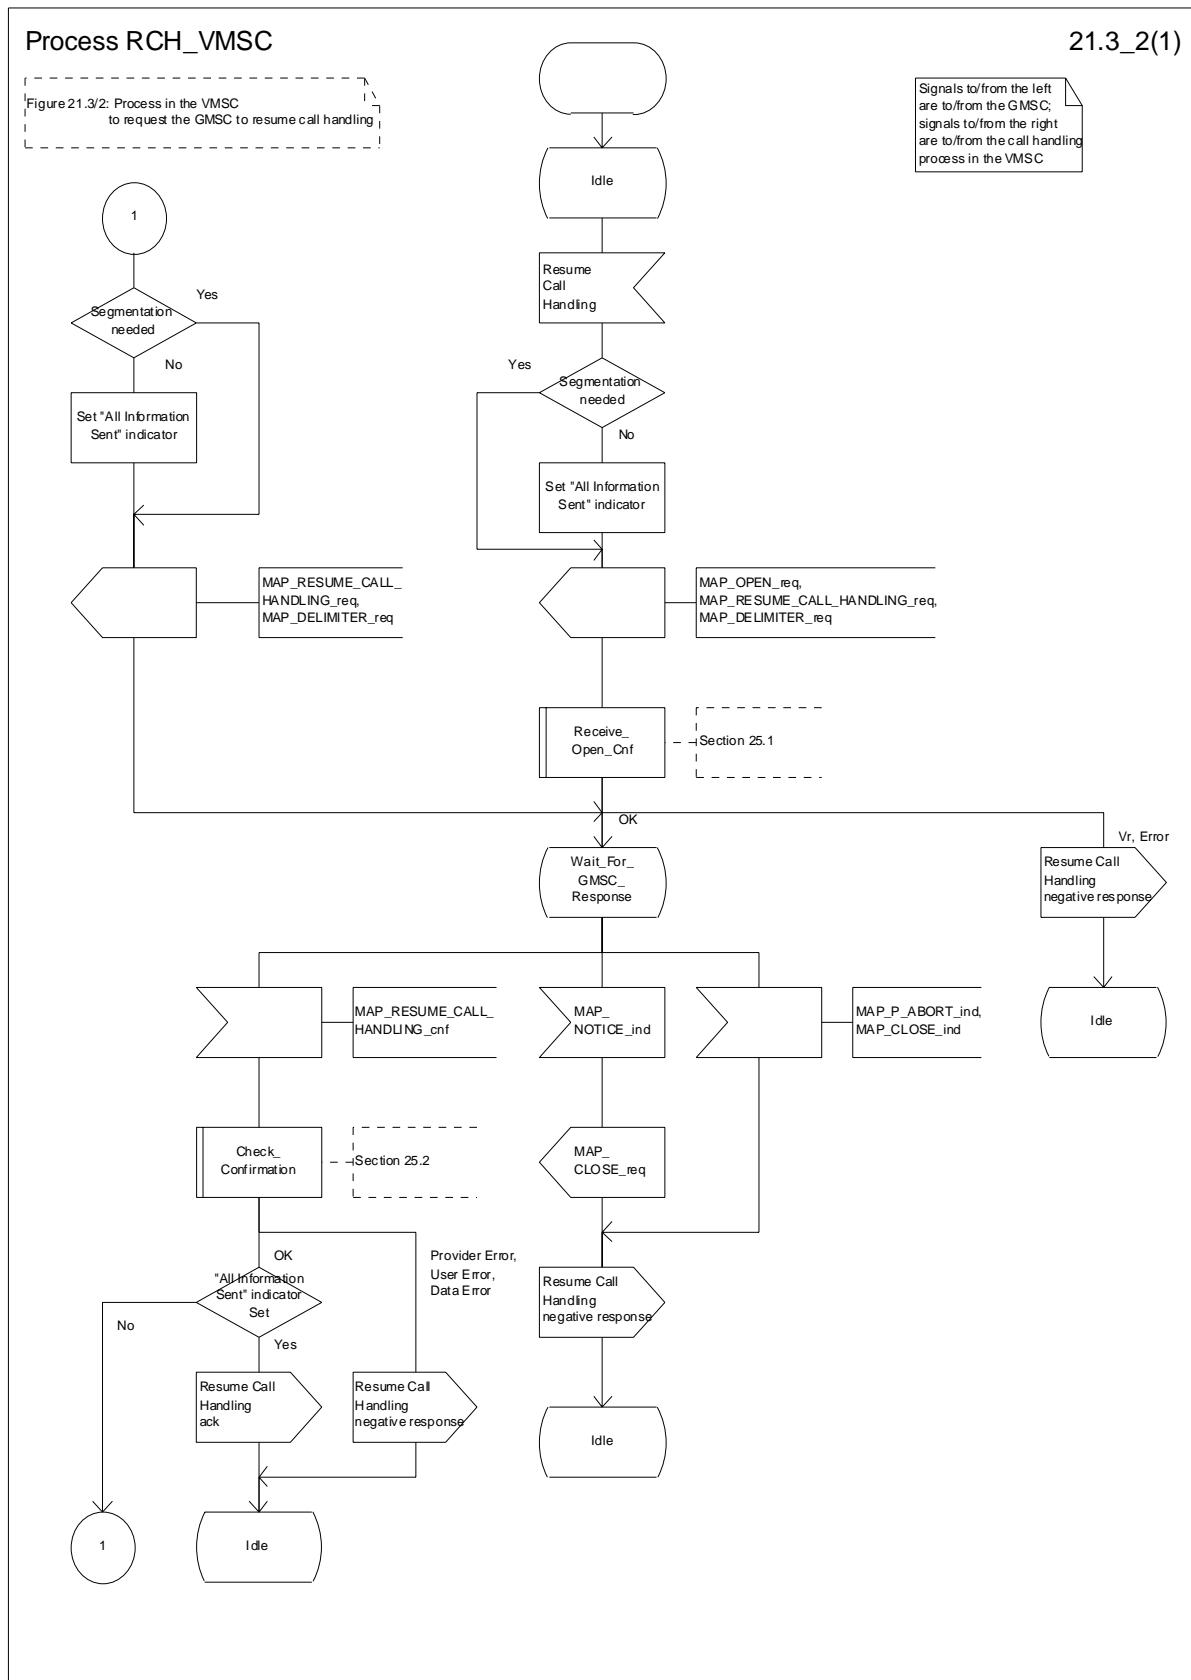

**Figure 21.3/2: Process RCH\_VMSC**

### 21.3.3 Process in the GMSC

The MAP process in the GMSC to handle a request for the GMSC to resume call handling is shown in figure 21.3/3. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

#### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context callControlTransfer, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_RESUME\_CALL\_HANDLING service indication is received, the MAP process checks if the “All Information Sent” indicator is set and if so it sends a Resume Call Handling request including all the stored data to the call handling process in the GMSC, and waits for a response. The Resume Call Handling request contains the parameters received in the MAP\_RESUME\_CALL\_HANDLING service indication. If the “All Information Sent” indicator is not set, the received data is stored and the MAP process constructs an empty MAP\_RESUME\_CALL\_HANDLING service response, sends it to the VMSC and returns to the Wait For Service Indication state.

If the call handling process in the GMSC returns a Resume Call Handling ack, the MAP process constructs a MAP\_RESUME\_CALL\_HANDLING service response, constructs a MAP\_CLOSE service request, sends them to the VMSC and returns to the idle state.

#### **Failure of dialogue opening with the VMSC**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.


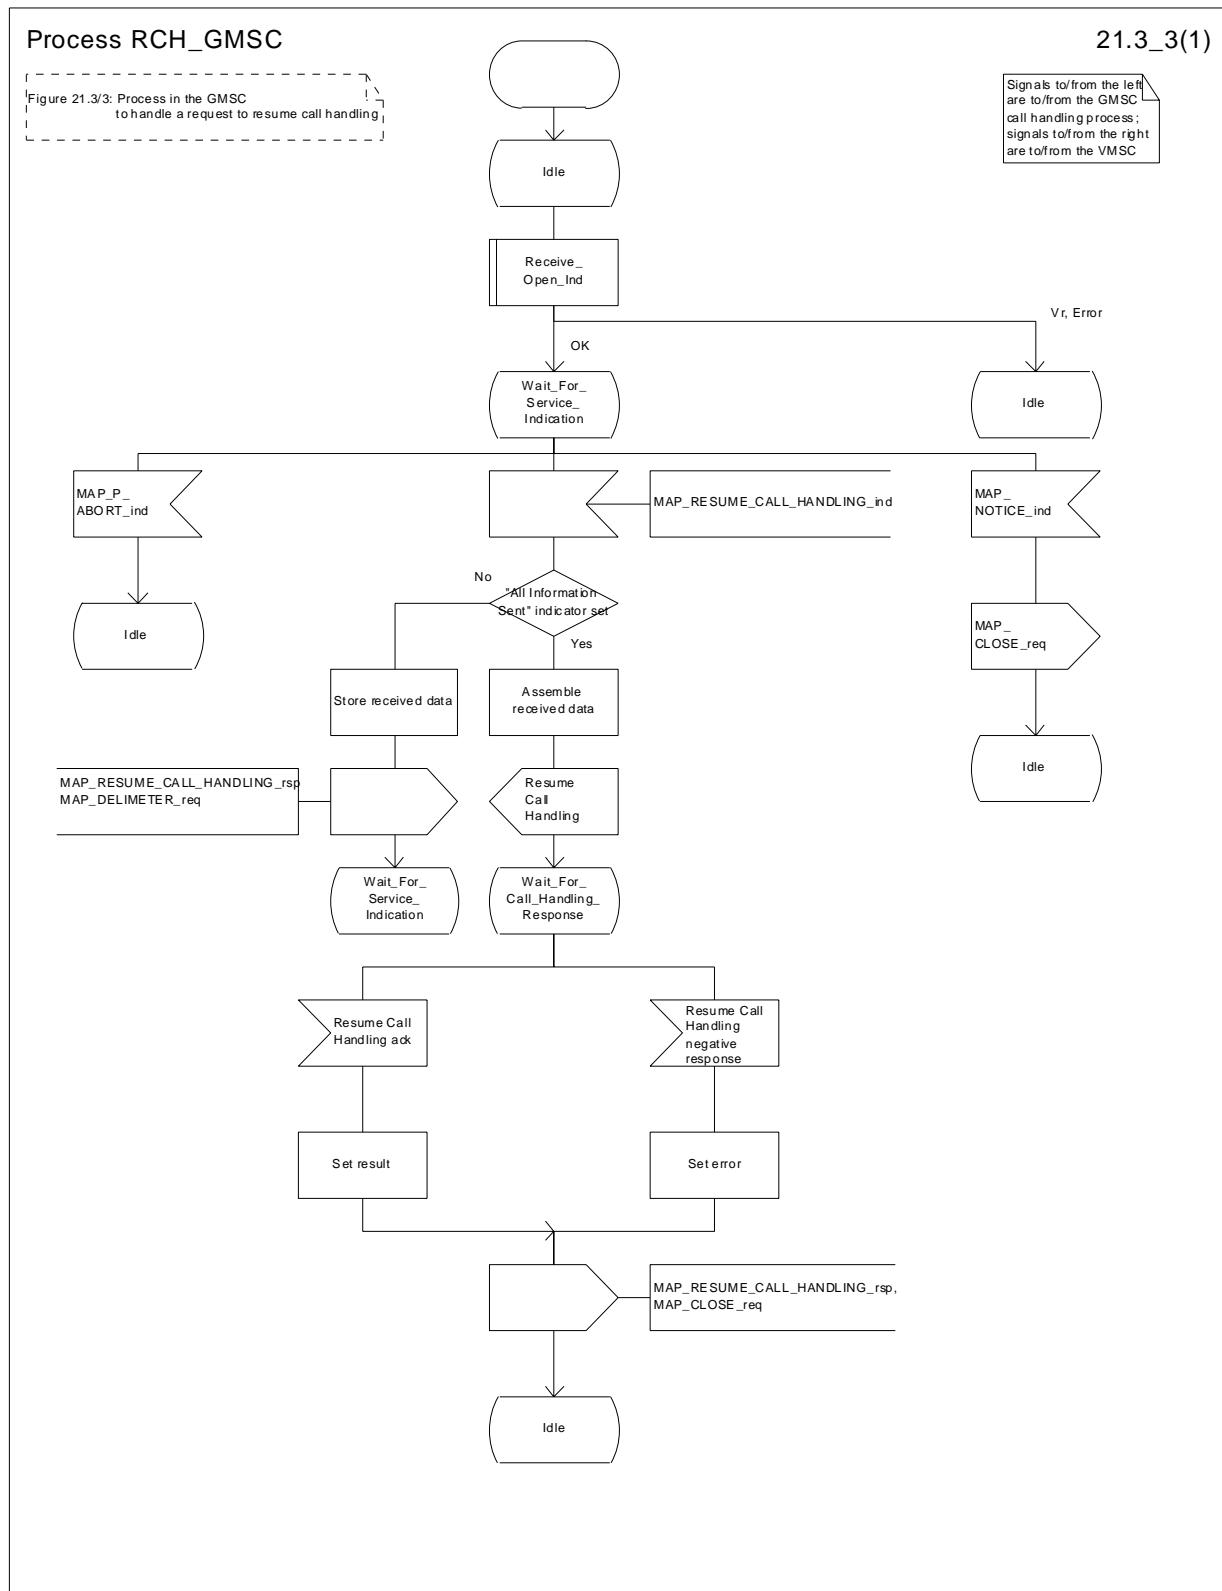


Figure 21.3/3: Process RCH\_GMSC

## 21.4 Inter MSC Group Call Procedures

### 21.4.1 General

The message flows for successful inter MSC group call / broadcast call set-up is shown in figure 21.4/1.

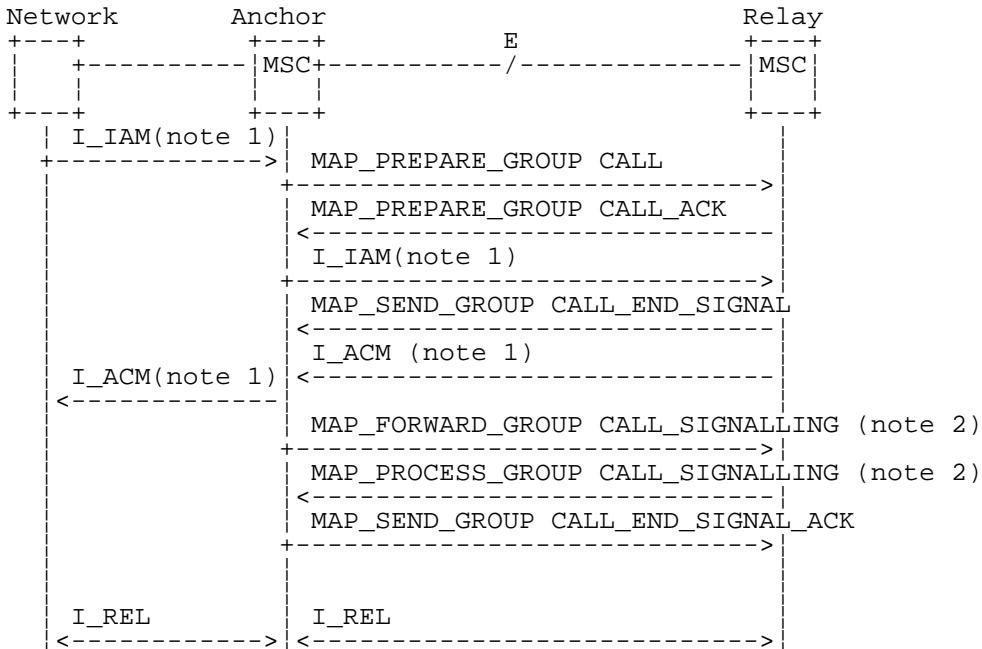

NOTE 1: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. For further details on the TUP and ISUP procedures refer to the following ITU-T Recommendations and ETSI specification:

- Q.721-725 - Telephone User Part (TUP);
- ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

NOTE 2: The MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING and MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING services are not applicable for voice broadcast calls.

**Figure 21.4/1: Message flow for inter MSC group call / broadcast call**

### 21.4.2 Process in the Anchor MSC

The MAP process in the Anchor MSC to retrieve and transfer information from / to the Relay MSC for VBS and VGCS calls is shown in figure 21.4/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive_Open_Cnf	see clause 25.1.2;
Check_Indication	see clause 25.2.1;
Check_Confirmation	see clause 25.2.2.

#### Successful Outcome

When the MAP process receives a Prepare Group Call request from the ASCI handling process in the anchor MSC, it requests a dialogue with the relay MSC whose identity is contained in the Prepare Group Call request by sending a MAP\_OPEN service request, requests an Group Call number by using a MAP\_PREPARE\_GROUP\_CALL service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the relay MSC.

If the MAP process receives a MAP\_PREPARE\_GROUP\_CALL service confirm from the relay MSC, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Prepare Group Call ack containing the Group Call number received from the relay MSC to the ASCI handling process in the anchor MSC and waits for completion of call set-up in the relay MSC.

On receipt of a MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service indication from the relay MSC the MAP process invokes the macro Check\_Indication to check the content of the indication.

If the macro Check\_Indication takes the OK exit, the MAP process sends a Send Group Call End Signal to the ASCI handling process in the anchor MSC and waits for uplink management signals. In this state the following events are processed:

- Reception of a Send Group Call End Signal ack from the ASCI handling process in the anchor MSC;
- Reception of a Forward Group Call Signalling request from the ASCI handling process in the anchor MSC;
- Reception of a MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service indication from the relay MSC.

On reception of a Send Group Call End Signal ack from the ASCI handling process in the anchor MSC, the MAP process constructs a MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service response, constructs a MAP\_CLOSE service request, sends them to the relay MSC and returns to the idle state.

On reception of a Forward Group Call Signalling request from the ASCI handling process in the anchor MSC, the MAP process constructs a MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service request, sends it to the relay MSC and returns to the uplink management state.

On reception of a MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service indication from the relay MSC, the MAP process invokes the macro Check\_Indication to check the content of the indication.

If the macro Check\_Indication takes the OK exit, the MAP process sends a Process Group Call Signalling to the ASCI handling process in the anchor MSC and returns to the uplink management state.

### **Dialogue opening failure**

If the macro Receive\_Open\_Cnf indicates that the dialogue with the relay MSC could not be opened, the MAP process sends an Abort to the ASCI handling process and returns to the idle state.

### **Error in MAP\_PREPARE\_GROUP\_CALL confirm**

If the MAP\_PREPARE\_GROUP\_CALL service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Prepare Group Call negative response to the ASCI handling process in the anchor MSC, sends a MAP\_U\_ABORT request to the relay MSC and returns to the idle state.

### **Abort of MAP dialogue**

After the dialogue with the relay MSC has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the relay MSC may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends an Abort to the ASCI handling process in the anchor MSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the relay MSC, sends an Abort to the ASCI handling process in the anchor MSC and returns to the idle state.

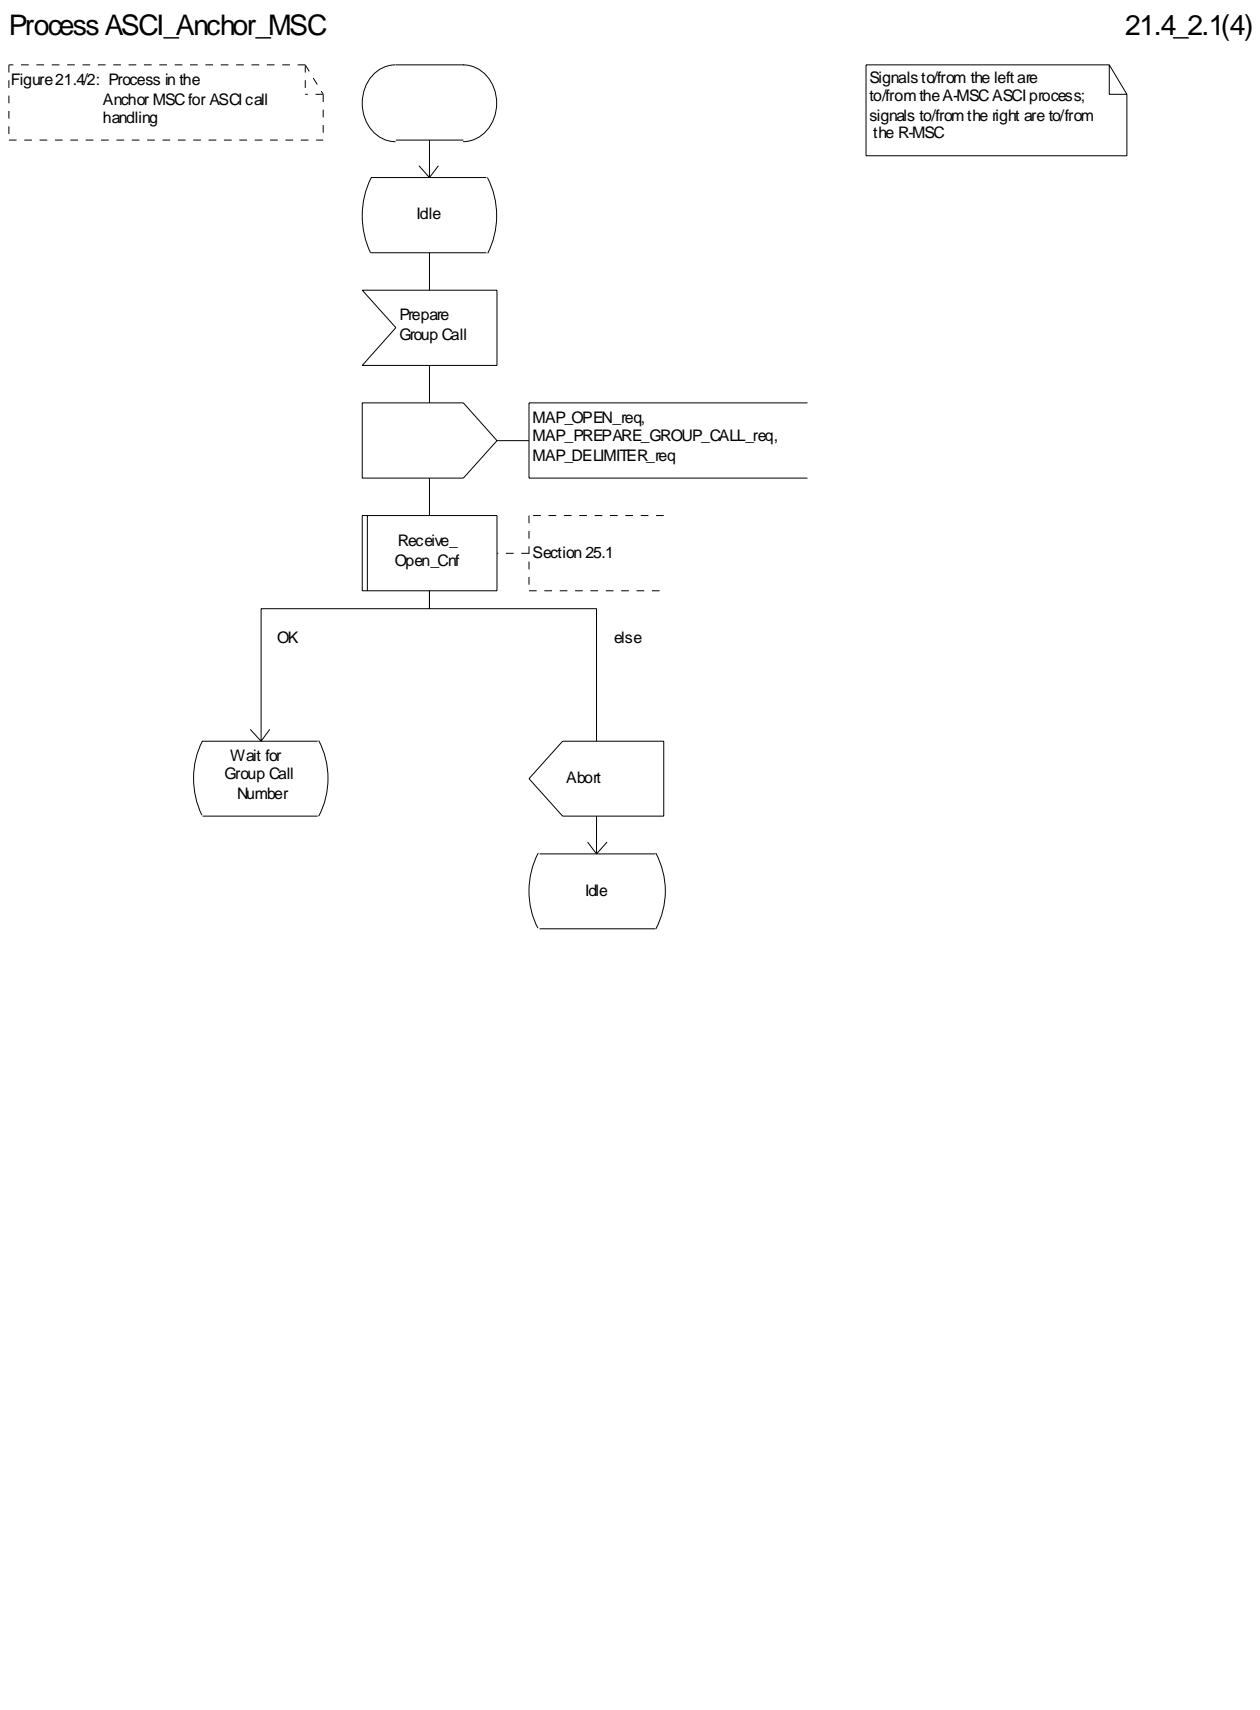


Figure 21.4/2 (sheet 1 of 4): Process ASCI\_Anchor\_MSC

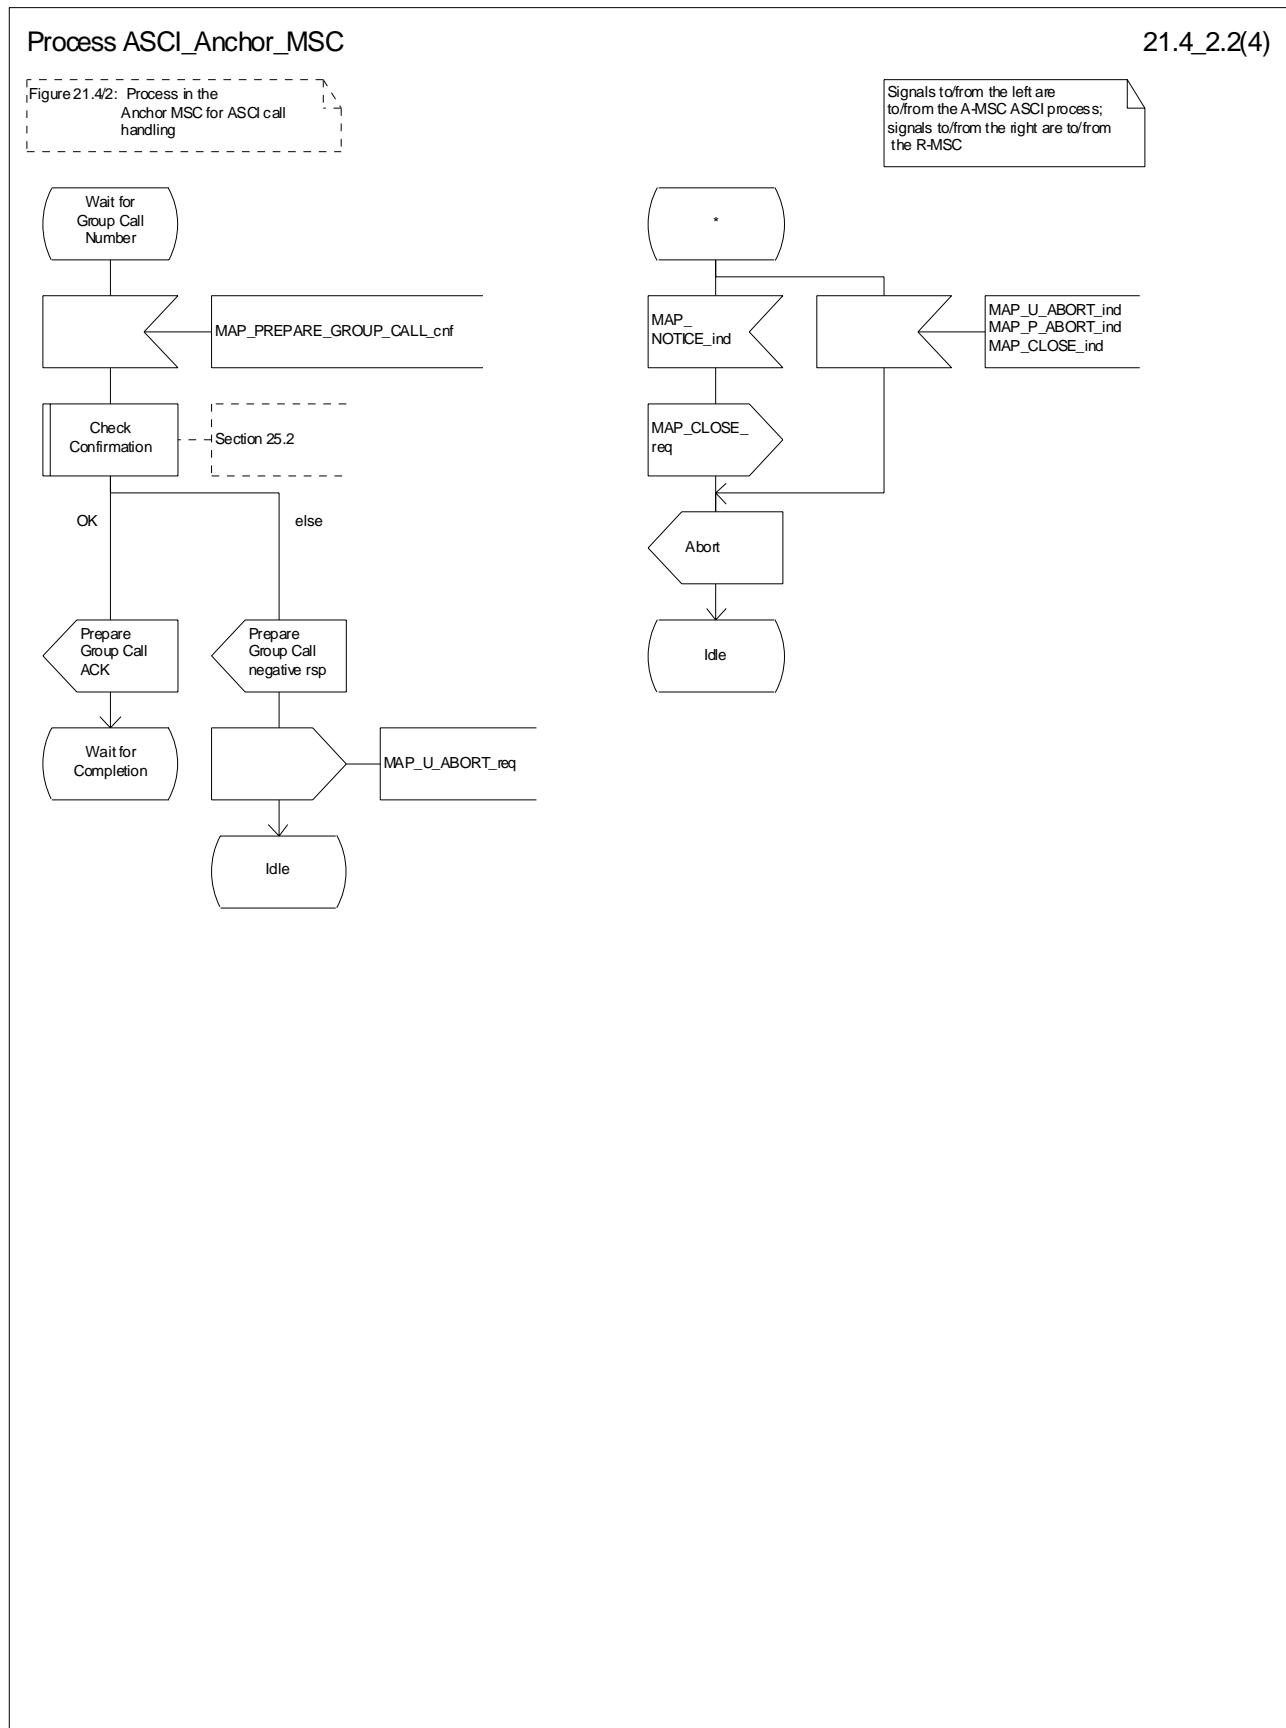


Figure 21.4/2 (sheet 2 of 4): Process ASCI\_Anchor\_MSC

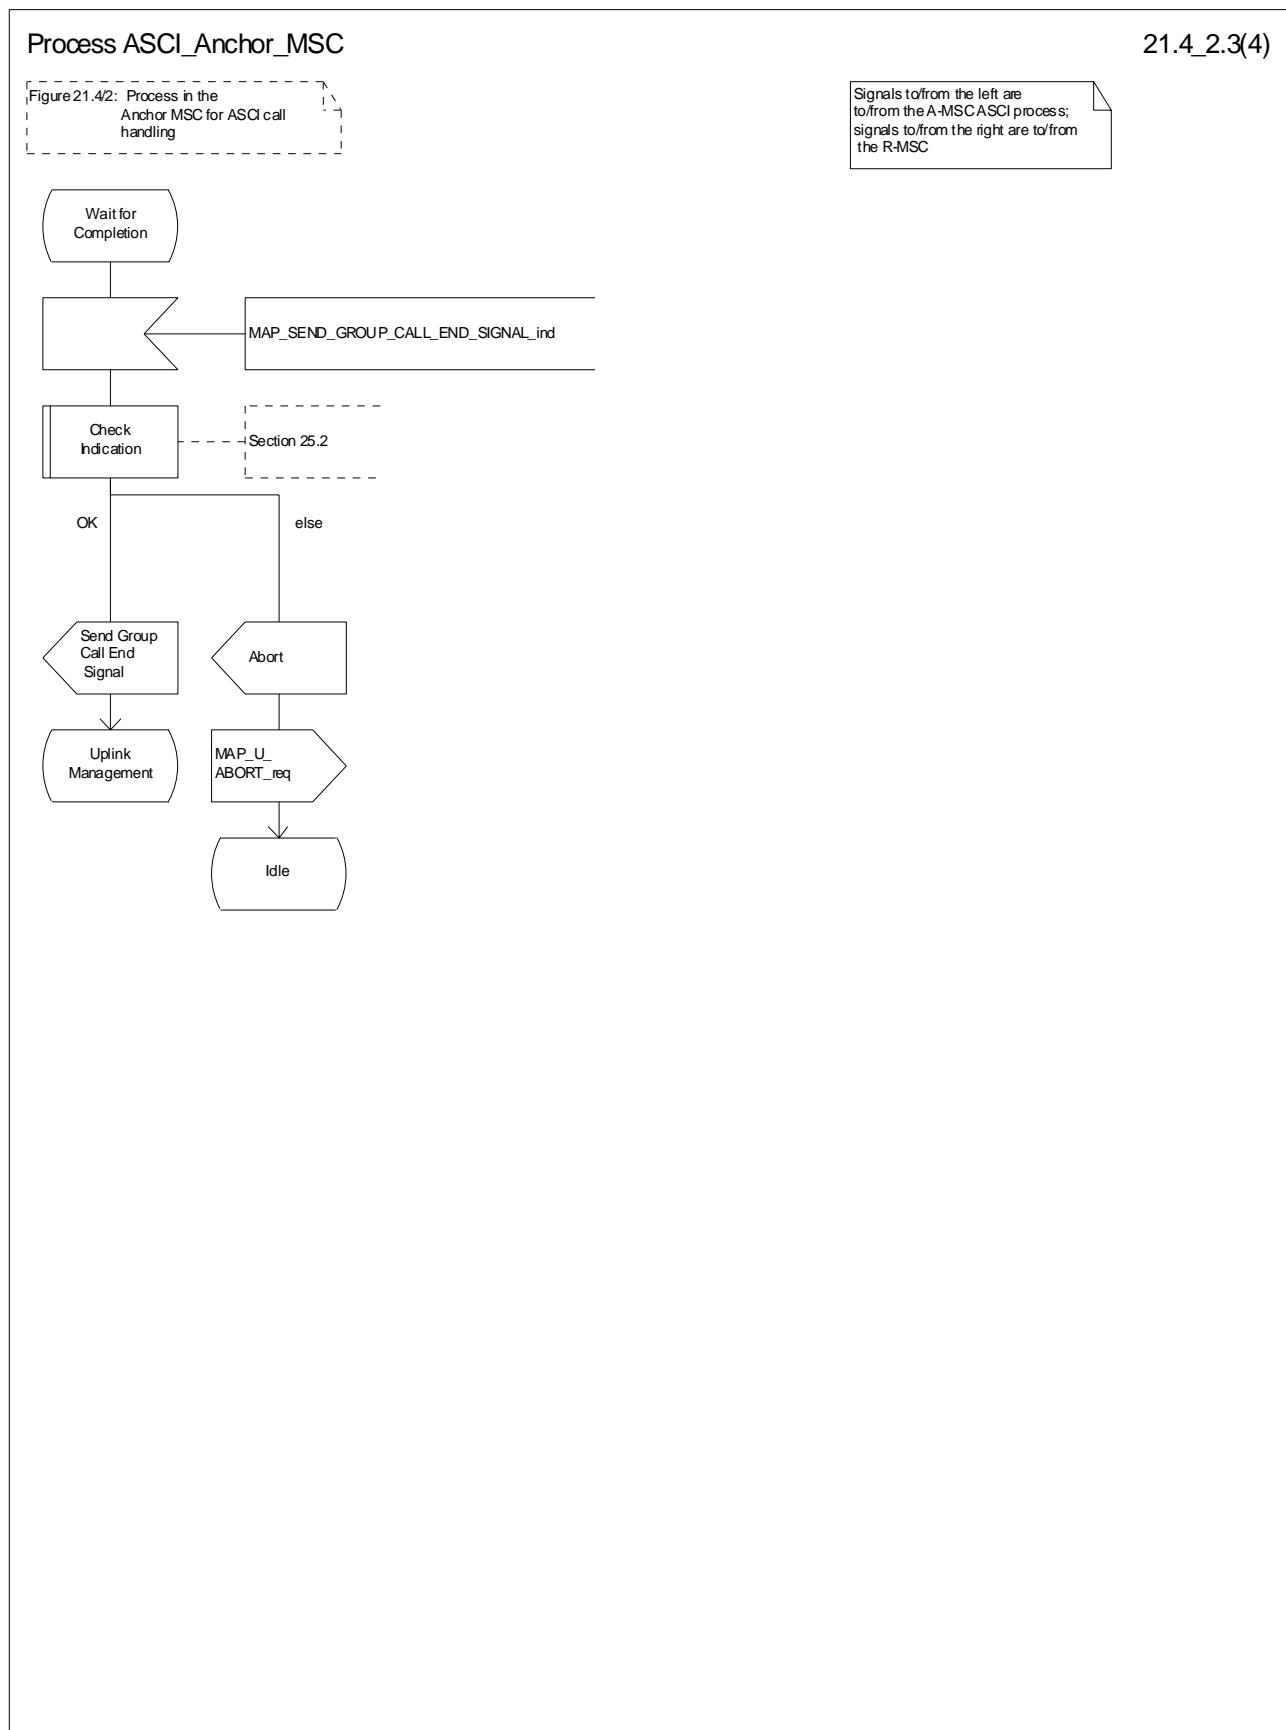


Figure 21.4/2 (sheet 3 of 4): Process ASCI\_Anchor\_MSC

## Process ASCI\_Anchor\_MSC

21.4\_2.4(4)

Figure 21.4/2: Process in the  
Anchor MSC for ASCI call  
handling

Signals to/from the left are  
to/from the A-MSC ASCI process;  
signals to/from the right are to/from  
the R-MSC

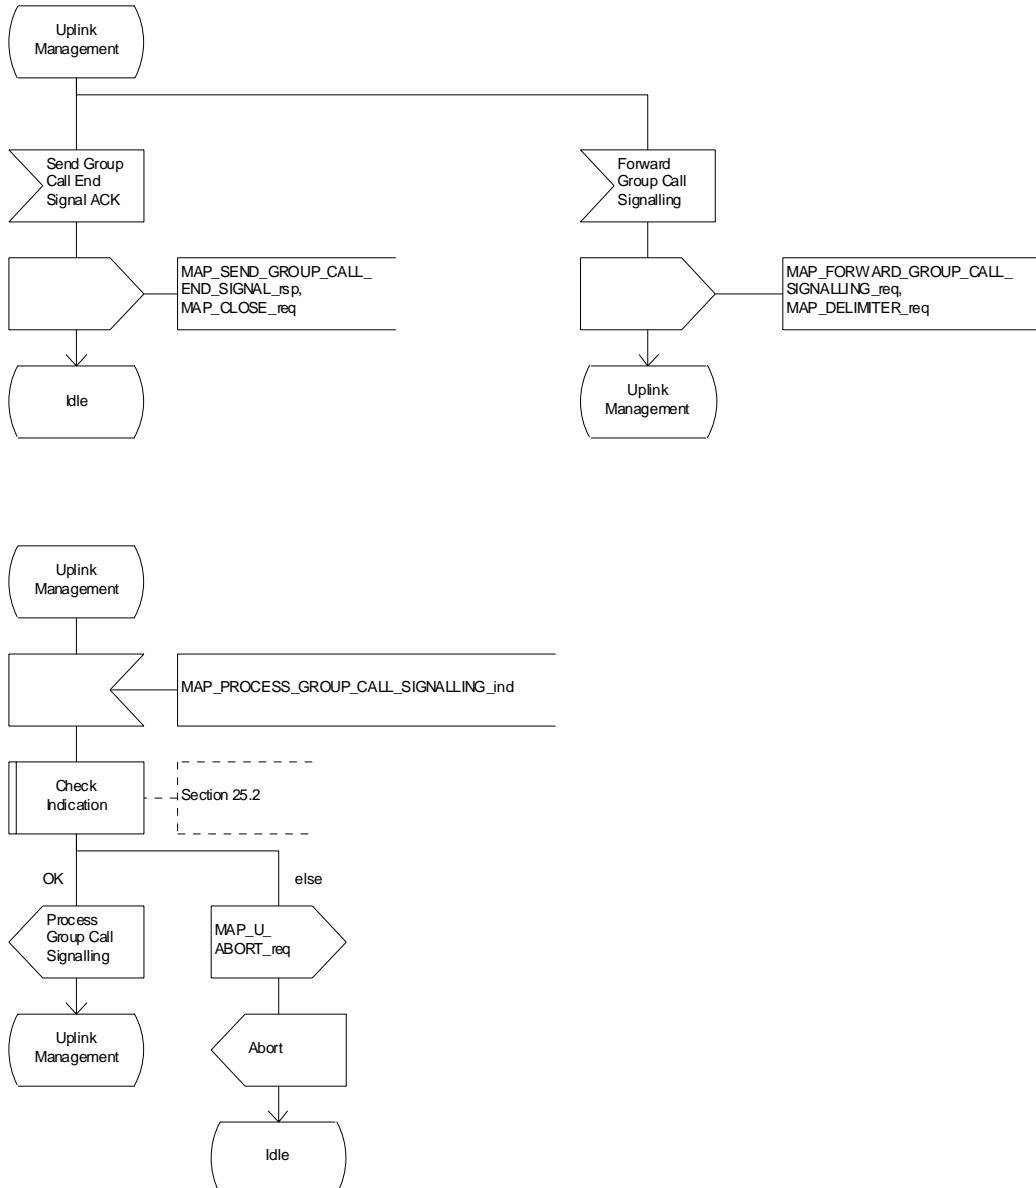


Figure 21.4/2 (sheet 4 of 4): Process ASCI\_Anchor\_MSC

### 21.4.3 Process in the Relay MSC

The MAP process in the Relay MSC to receive and transfer information from / to the Anchor MSC for VBS and VGCS calls is shown in figure 21.4/3. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Ind see clause 25.1.2;

Check\_Indication see clause 25.2.1.

#### Successful Outcome

When the MAP process receives a MAP\_OPEN indication with the application context groupCallControl, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_PREPARE\_GROUP\_CALL service indication is received, the MAP process invokes the macro Check\_Indication.

If the macro takes the OK exit, the MAP process sends a Prepare Group Call request to the ASCI handling process in the relay MSC and waits for a response. The Prepare Group Call request contains the parameters received in the MAP\_PREPARE\_GROUP\_CALL service indication.

If the ASCI handling process in the relay MSC returns a Prepare Group Call ack, the MAP process constructs a MAP\_PREPARE\_GROUP\_CALL service response containing the information contained in the Prepare Group Call ack, constructs a MAP\_DELIMITER service request, sends them to the anchor MSC and waits for the GROUP CALL END SIGNAL.

If the ASCI handling process in the relay MSC sends a Send Group Call End Signal request to the MAP process, the MAP process constructs a MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service request containing the information contained in the SEND GROUP CALL End Signal request, constructs a MAP\_DELIMITER service request, sends them to the anchor MSC and waits for uplink management signals. In this state the following events are processed:

- Reception of a MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service confirmation from the anchor MSC;
- Reception of a MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service indication from the anchor MSC;
- Reception of a Process Group Call Signalling request from the ASCI handling process in the relay MSC.

On reception of a MAP\_SEND\_GROUP\_CALL\_END\_SIGNAL service confirmation from the anchor MSC, the MAP process returns to the idle state.

On reception of a MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING service indication from the anchor MSC, the MAP process invokes the macro Check Indication. If the macro takes the OK exit, the MAP process sends a Forward Group Call Signalling request to the ASCI handling process in the relay MSC and waits for further uplink management signals.

On reception of a Process Group Call Signalling request from the ASCI handling process in the relay MSC, the MAP process constructs a MAP\_PROCESS\_GROUP\_CALL\_SIGNALLING service request containing the information received in the Process Group Call Signalling request, constructs a MAP\_DELIMITER service request, sends them to the anchor MSC and waits for further uplink management signals.

#### Failure of dialogue opening with the anchor MSC

If the macro Receive\_Open\_Ind takes the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

#### Error in MAP\_PREPARE\_GROUP\_CALL indication

If the macro Check Indication takes the Error exit, the MAP process sends a MAP\_U\_ABORT request to the anchor MSC and returns to the idle state.

#### **Negative response received from the ASCI handling process**

If the ASCI handling process in the relay MSC returns a negative response to the Prepare Group Call request, the MAP process constructs a MAP\_PREPARE\_GROUP\_CALL service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the anchor MSC and returns to the idle state.

#### **Error in MAP\_FORWARD\_GROUP\_CALL\_SIGNALLING indication**

If the macro Check Indication takes the Error exit, the MAP process sends a MAP\_U\_ABORT request to the anchor MSC, sends an Abort to the ASCI handling process in the relay MSC and returns to the idle state.

#### **Abort of MAP dialogue**

After the dialogue with the anchor MSC has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the anchor MSC may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends an Abort to the ASCI handling process in the relay MSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the anchor MSC, sends an Abort to the ASCI handling process in the anchor MSC and returns to the idle state.

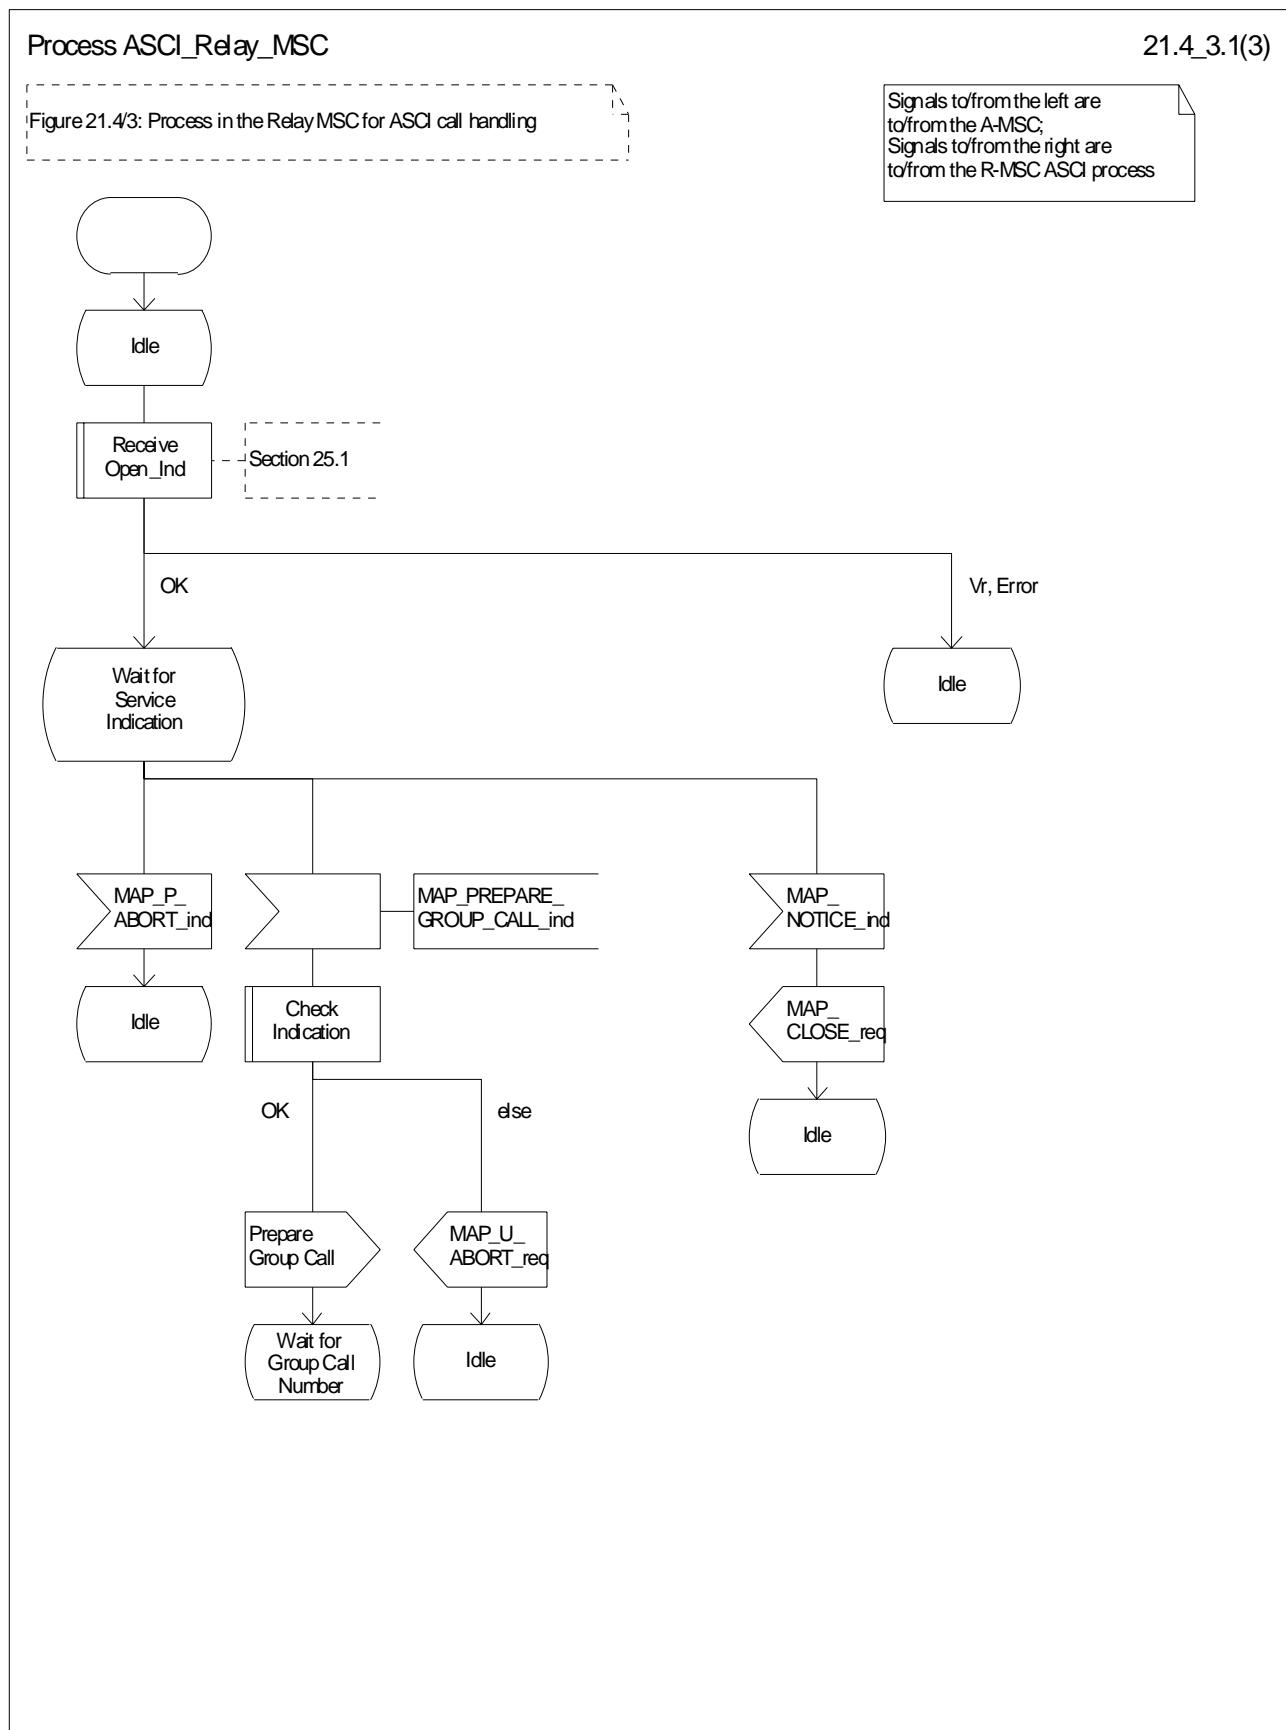


Figure 21.4/3 (sheet 1 of 3): Process ASCI\_Relay\_MSC

## Process ASCI\_Relay\_MSC

21.4\_3.2(3)

Figure 21.4/3: Process in the Relay MSC for ASCI call handling

Signals to/from the left are  
to/from the A-MSC;  
Signals to/from the right are  
to/from the R-MSC ASCI process

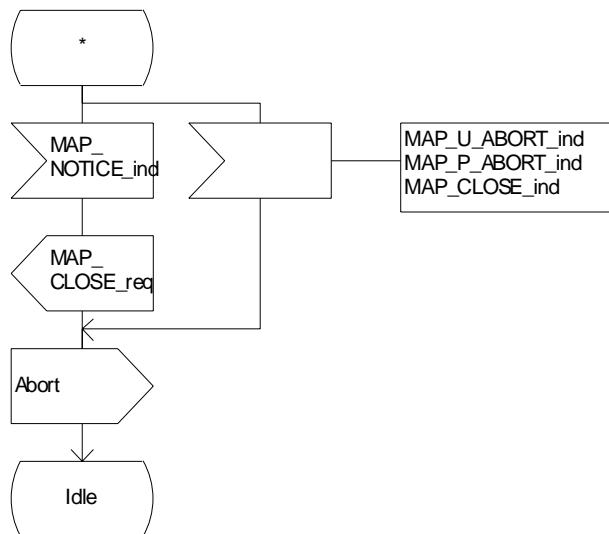
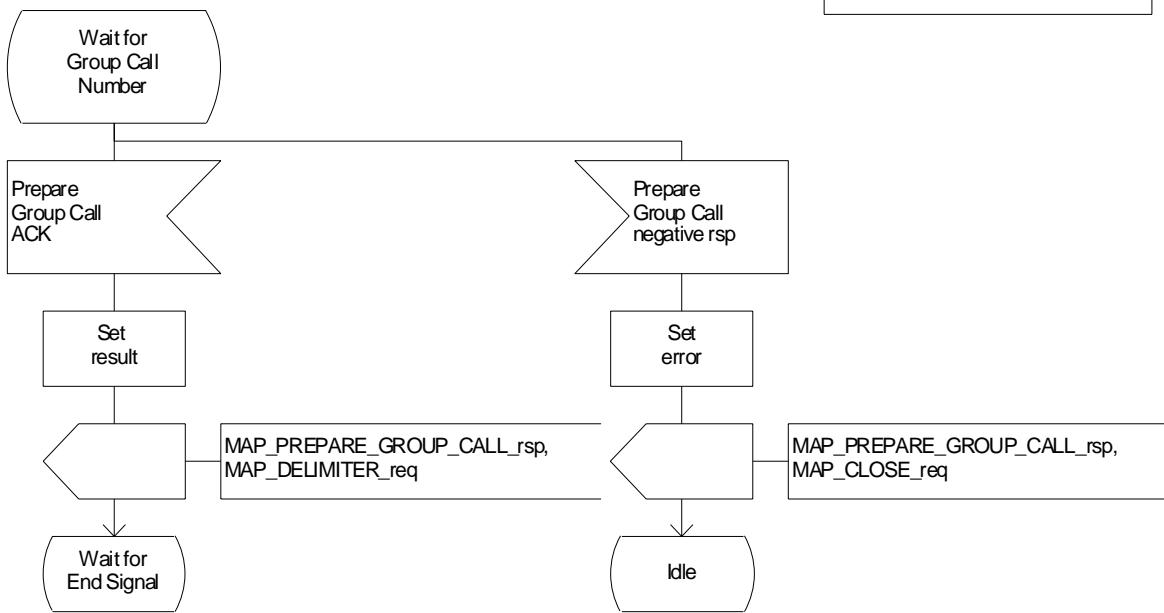


Figure 21.4/3 (sheet 2 of 3): Process ASCI\_Relay\_MSC

## Process ASCI\_Relay\_MSC

21.4\_3.3(3)

Figure 21.4/3: Process in the Relay MSC for ASCI call handling

Signals to/from the left are  
to/from the A-MSC;  
Signals to/from the right are  
to/from the R-MSC ASCI process


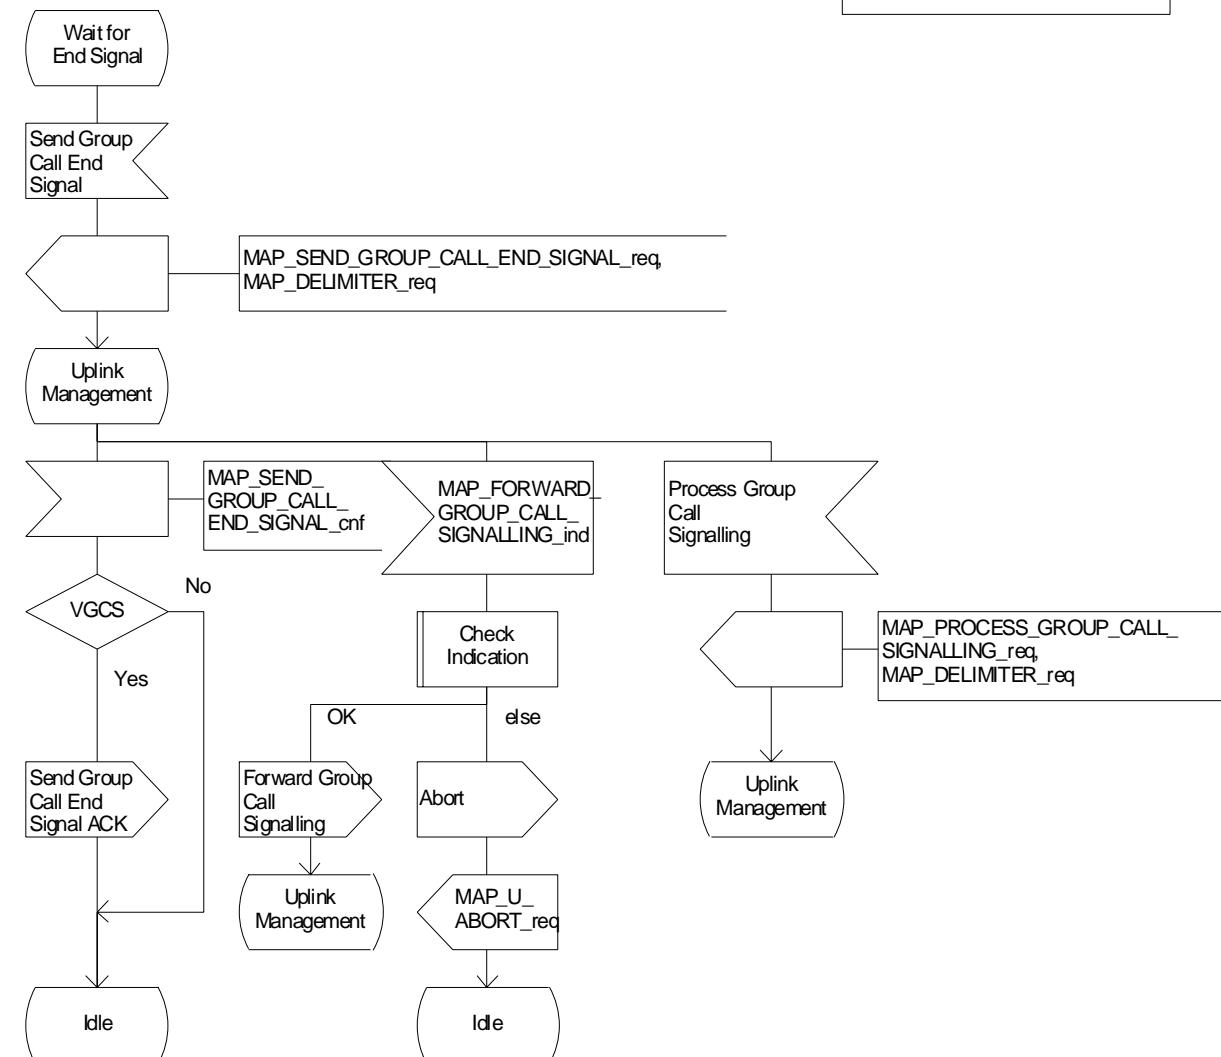


Figure 21.4/3 (sheet 3 of 3): Process ASCI\_Relay\_MSC

## 21.5 Allocation and modifications of resources in an SIWFS

### 21.5.1 General

The message flow for successful allocation and modification of resources in an SIWFS is shown in figure 21.5/1 (mobile originating call non-loop method), 21.5/2 (mobile originating call loop method) and 21.5/3 (mobile terminating call loop method).

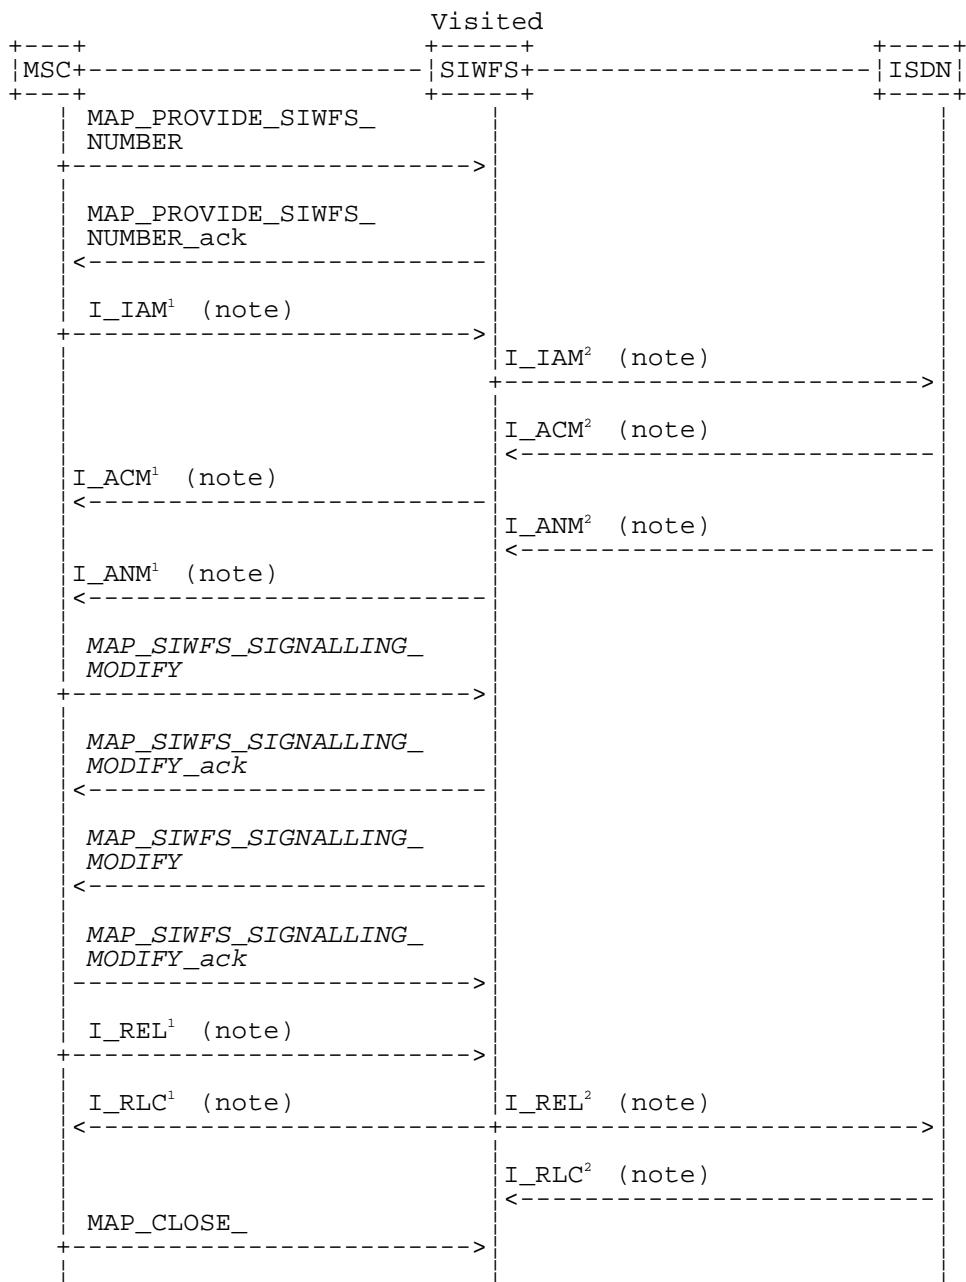

xxx = Optional Procedure


NOTE 1: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. The Release message can be initiated either by the calling or called subscriber. For further details on the TUP and ISUP procedures refer to the following CCITT Recommendations & ETSI specification:  

- Q.721-725 - Telephone User Part (TUP);
- ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

NOTE 2: The number on the ISUP messages have been added to link the messages to respective signalling sequence.


NOTE 3: The modification of SIWF resources could be initiated any time during the call either by the VMSC or the SIWFS.

**Figure 21.5/1: Message flow for mobile originating call non-loop method**

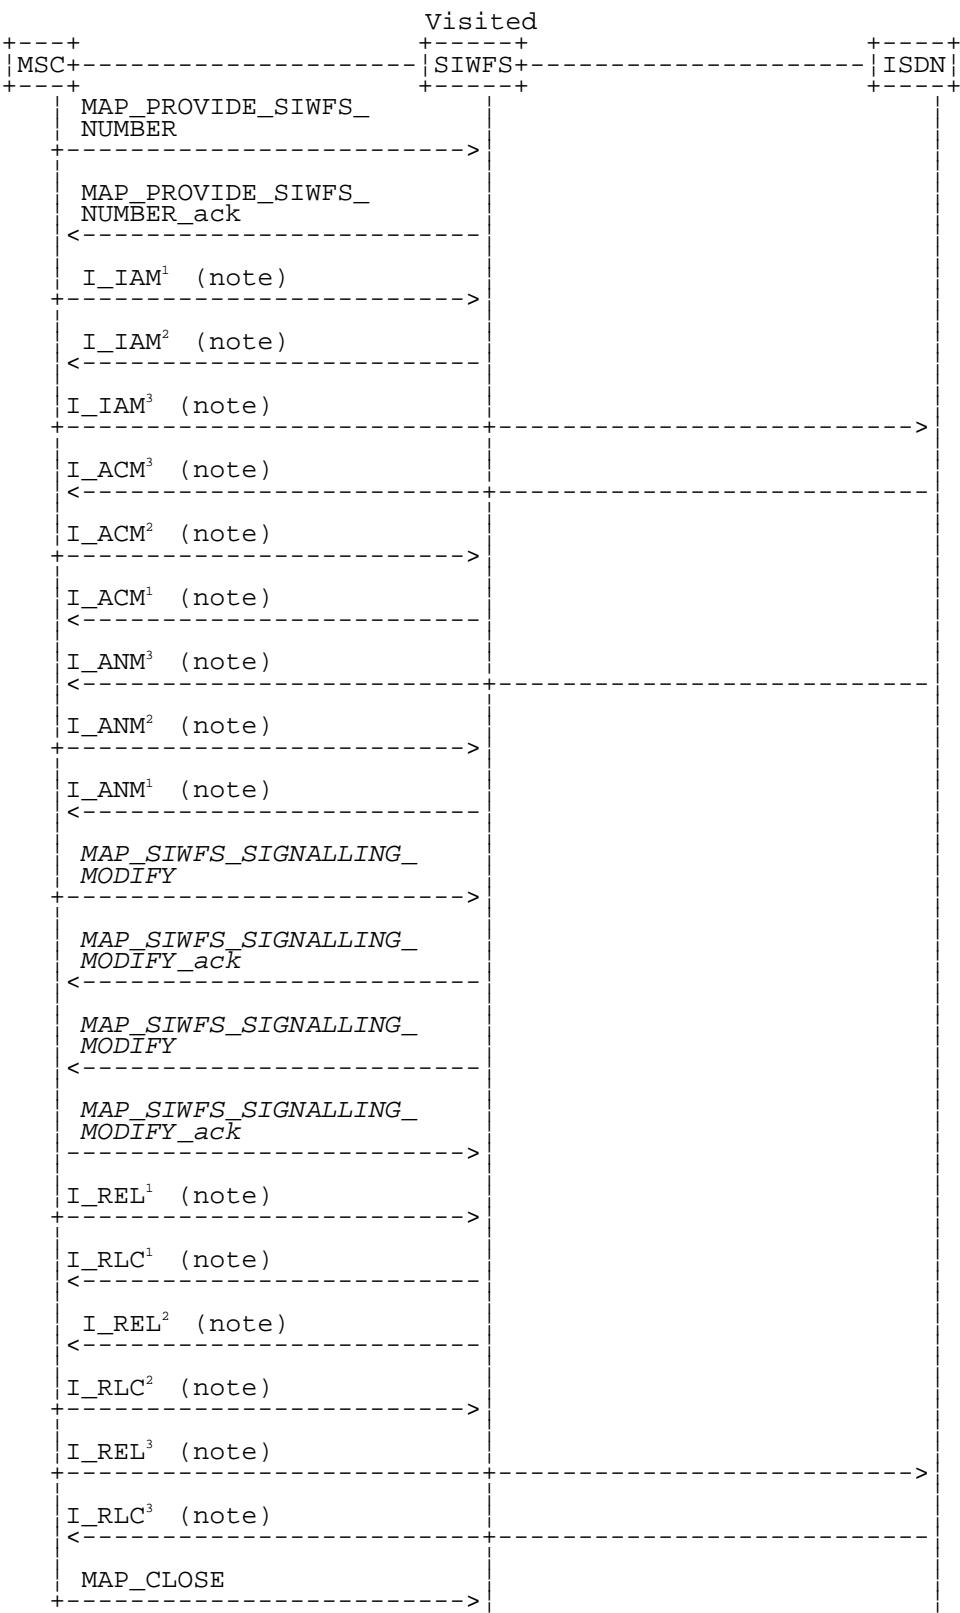

xxx = Optional Procedure

- NOTE 1: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. The Release message can be initiated either by calling or called subscriber. For further details on the TUP and ISUP procedures refer to the following CCITT Recommendations & ETSI specification:
- Q.721-725 - Telephone User Part (TUP);
  - ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.
- NOTE 2: The number on the ISUP messages have been added to link the messages to respective signalling sequence.
- NOTE 3: The modification of SIWF resources could be initiated any time during the call either by the VMSC or the SIWFS.

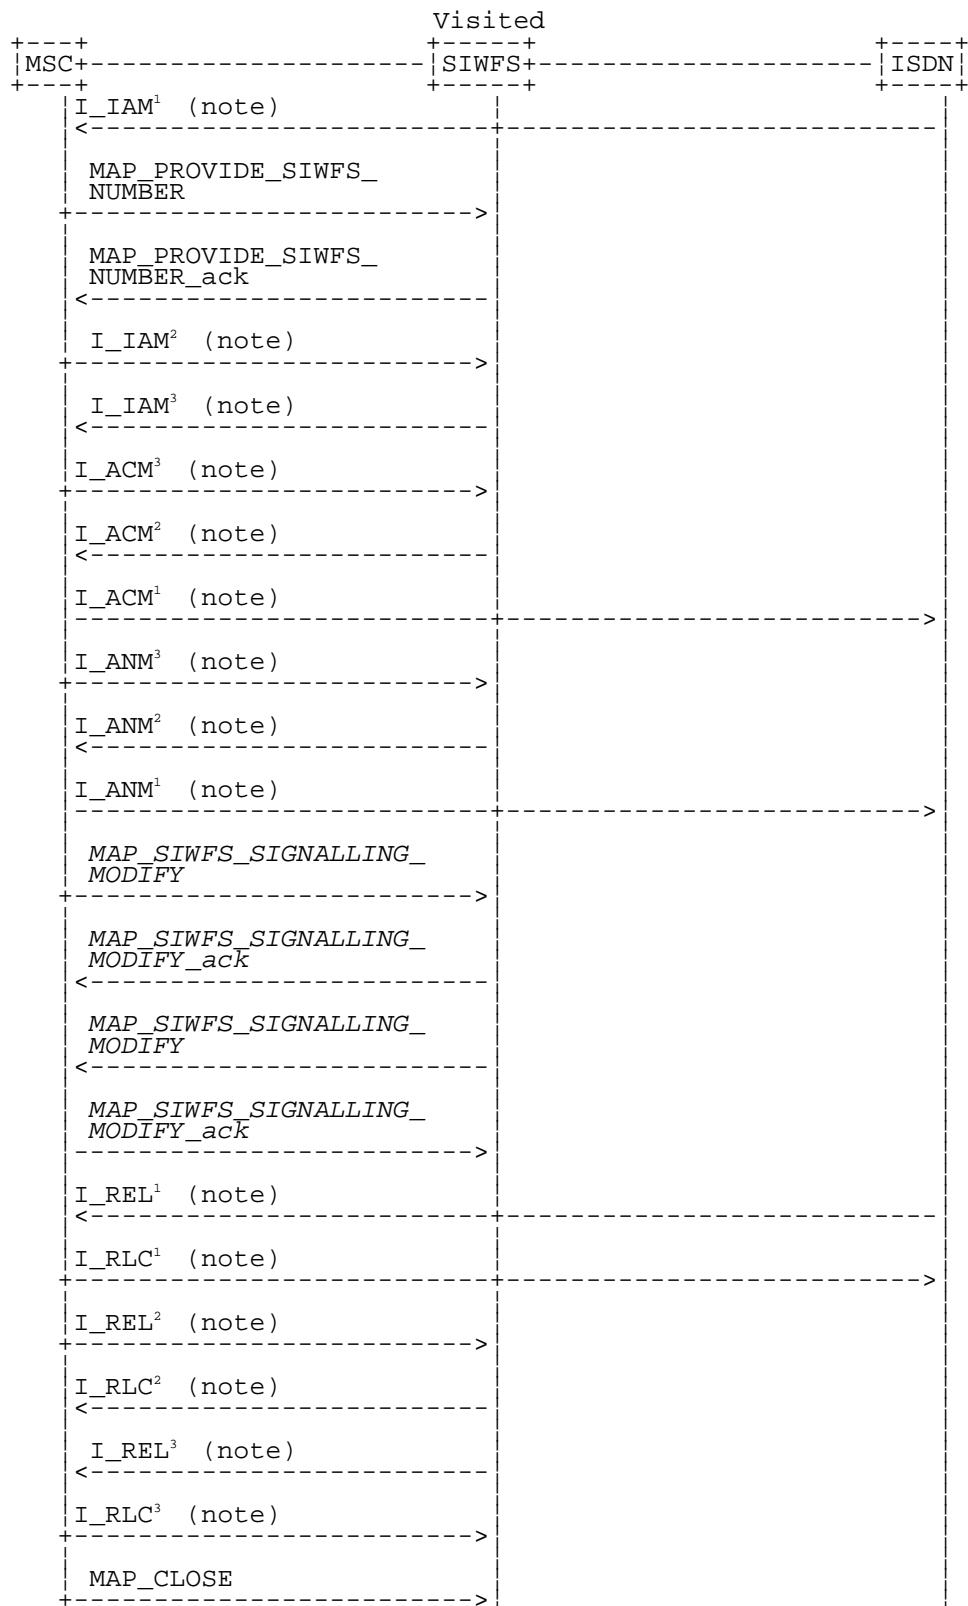**Figure 21.5/2: Message flow for mobile originating call loop method**

*xxx = Optional Procedure*

NOTE 1: TUP or ISUP may be used in signalling between MSCs, depending on the network type between the MSCs. The Release message can be initiated either by calling or called subscriber. For further details on the TUP and ISUP procedures refer to the following CCITT Recommendations & ETSI specification:  
 - Q.721-725 - Telephone User Part (TUP);

- ETS 300 356-1 - Integrated Services Digital Network (ISDN); Signalling System No.7; ISDN User Part (ISUP) version 2 for the international interface; Part 1: Basic services.

NOTE 2: The number on the ISUP messages have been added to link the messages to respective signalling sequence.

NOTE 3: The modification of SIWFS resources could be initiated any time during the call either by the VMSC or the SIWFS.

### **Figure 21.5/3: Message flow for mobile terminating call loop method**

The following MAP services are used to allocate resources in an SIWFS:

MAP\_PROVIDE\_SIWFs\_NUMBER see clause 10.8.

The following MAP services are used to modify resources in an SIWFS:

MAP\_SIWFs\_SIGNALLING MODIFY see clause 10.9.

## **21.5.2 Process in the VMSC**

The MAP process in the VMSC to allocate and modify resources in an SIWFS for a mobile call is shown in figure 21.5/4. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Cnf see clause 25.1.2;

Check\_Confirmation see clause 25.2.2.

### **21.5.2.1 Allocation of SIWFS resources**

#### **Successful Outcome**

When the MAP process receives a Provide SIWFS Number request from the call handling process in the VMSC, it requests a dialogue with the SIWFS whose identity is contained in the Provide SIWFS Number request by sending a MAP\_OPEN service request, requests resources in the SIWFS using a MAP\_PROVIDE\_SIWFs\_NUMBER service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the SIWFS.

If the MAP process receives a MAP\_PROVIDE\_SIWFs\_NUMBER service confirm from the SIWFS, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Provide SIWFS Number ack containing the SIWFS Number received from the SIWFS to the call handling process in the VMSC and go to Wait\_Modification state.

#### **Earlier version MAP dialogue with the SIWFS**

If the macro Receive\_Open\_Cnf takes the Vr exit, the MAP process sends an Abort to the call handling process in the VMSC and returns to the idle state.

#### **Dialogue opening failure**

If the macro Receive\_Open\_Cnf indicates that the dialogue with the SIWFS could not be opened, the MAP process sends an Abort to the call handling process in the VMSC and returns to the idle state.

#### **Error in MAP\_PROVIDE\_SIWFs\_NUMBER confirm**

If the MAP\_PROVIDE\_SIWFs\_NUMBER service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Provide SIWFS number negative response to the call handling process in the VMSC and returns to the idle state.

#### **Call release**

If the call handling process in the VMSC indicates that the call has been aborted, the MAP process returns to the idle state. Any response from the SIWFS will be discarded.

If the call handling process in the VMSC indicates that the traffic channel has been released (i.e. call released by a user) a MAP\_CLOSE\_req is sent and the process is returned to the idle state.

#### **Abort of SIWFS dialogue**

During the time an answer is expected from the SIWFS, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the SIWFS may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends a Provide SIWFS number negative response to the call handling process in the VMSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the SIWFS, sends a Provide SIWFS number negative response indicating system failure to the call handling process in the VMSC and returns to the idle state.

After the dialogue with the SIWFS has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the SIWFS may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the SIWFS, and returns to the idle state.

### **21.5.2.2 Modification of SIWFS resources initiated by the user**

#### **Successful Outcome**

When the MAP process receives an SIWFS Signalling Modify request from the call handling process in the VMSC, it requests a dialogue with the SIWFS whose identity is contained in the SIWFS Signalling Modify request by sending a MAP\_SIWFSSIGNALLING\_MODIFY service request and waits for a response from the SIWFS.

If the MAP process receives a MAP\_SIWFSSIGNALLING\_MODIFY service confirm from the SIWFS, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends an SIWFS Signalling Modify ack containing the response received from the SIWFS to the call handling process in the VMSC and go to Wait\_For\_Modification state.

#### **Error in MAP\_SIWFSSIGNALLING\_MODIFY confirm**

If the MAP\_SIWFSSIGNALLING\_MODIFY service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends an SIWFS Signalling Modify negative response to the call handling process in the VMSC and go to Wait\_For\_Modification state.

#### **Abort of SIWFS dialogue**

During the time an answer is expected from the SIWFS, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the SIWFS may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends an SIWFS Signalling Modify negative response to the call handling process in the VMSC and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the SIWFS, sends an SIWFS Signalling Modify negative response indicating system failure to the call handling process in the VMSC and returns to the idle state.

### **21.5.2.3 Modification of SIWFS resources initiated by the SIWFS**

#### **Successful outcome**

If a MAP\_SIWFSSIGNALLING\_MODIFY service indication is received, the MAP process sends an SIWFS signalling modify Info request to the call handling process in the VMSC, and waits for a response. The SIWFS signalling modify request contains the parameters received in the MAP\_SIWFSSIGNALLING\_MODIFY service indication.

If the call handling process in the VMSC returns an SIWFS signalling modify ack, the MAP process constructs a MAP\_SIWF\_Signalling MODIFY service response contained in the Provide SIWFS Number ack, send it to the SIWFS and go to Wait\_For\_Modification state.

#### **Negative response from VMSC call handling process**

If the call handling process in the VMSC returns a negative response the MAP process constructs a MAP\_SIWF\_Signalling MODIFY service response containing the appropriate error, send it to the SIWFS and go to Wait\_For\_Modification state.

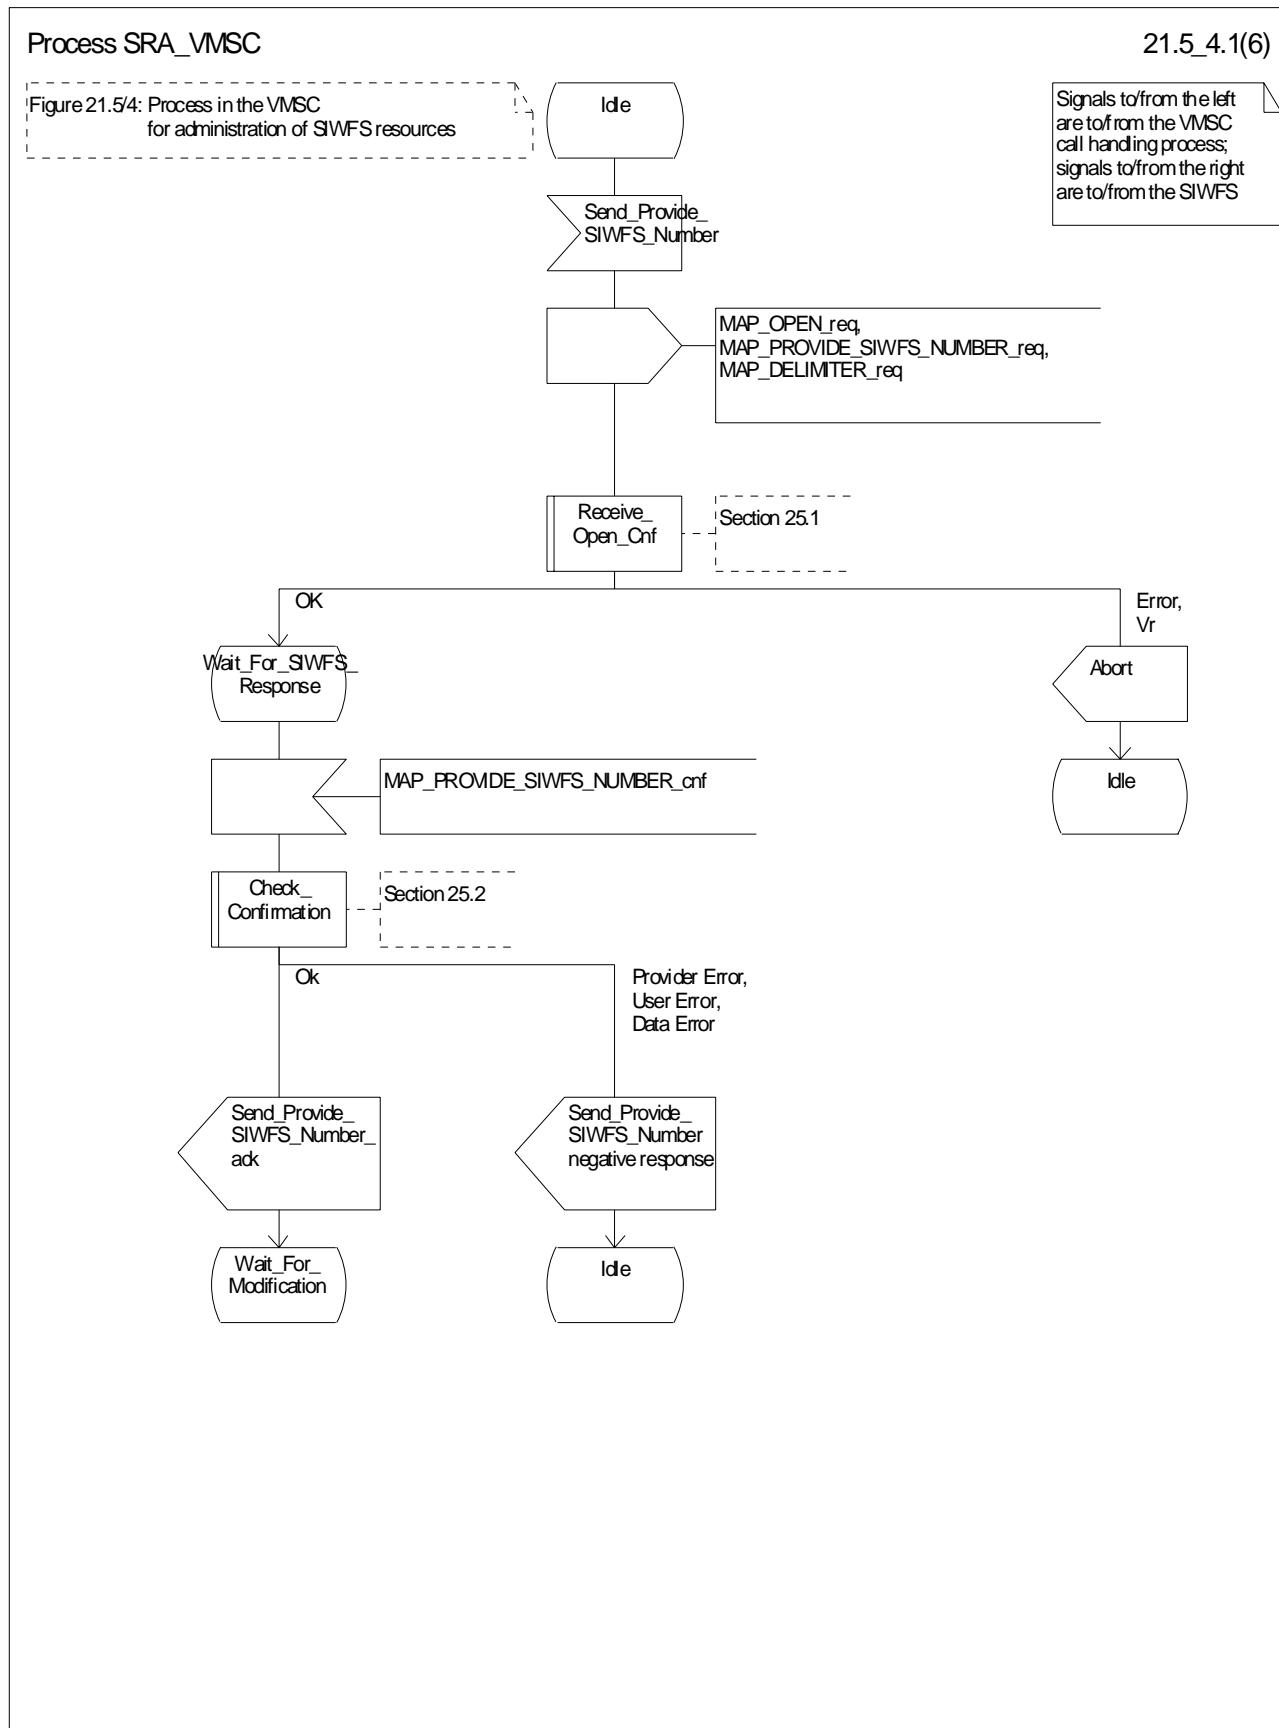


Figure 21.5/4 (sheet 1 of 6): Process SRA (SIWFS\_RESOURCE\_ADMINISTRATION)\_VMSC

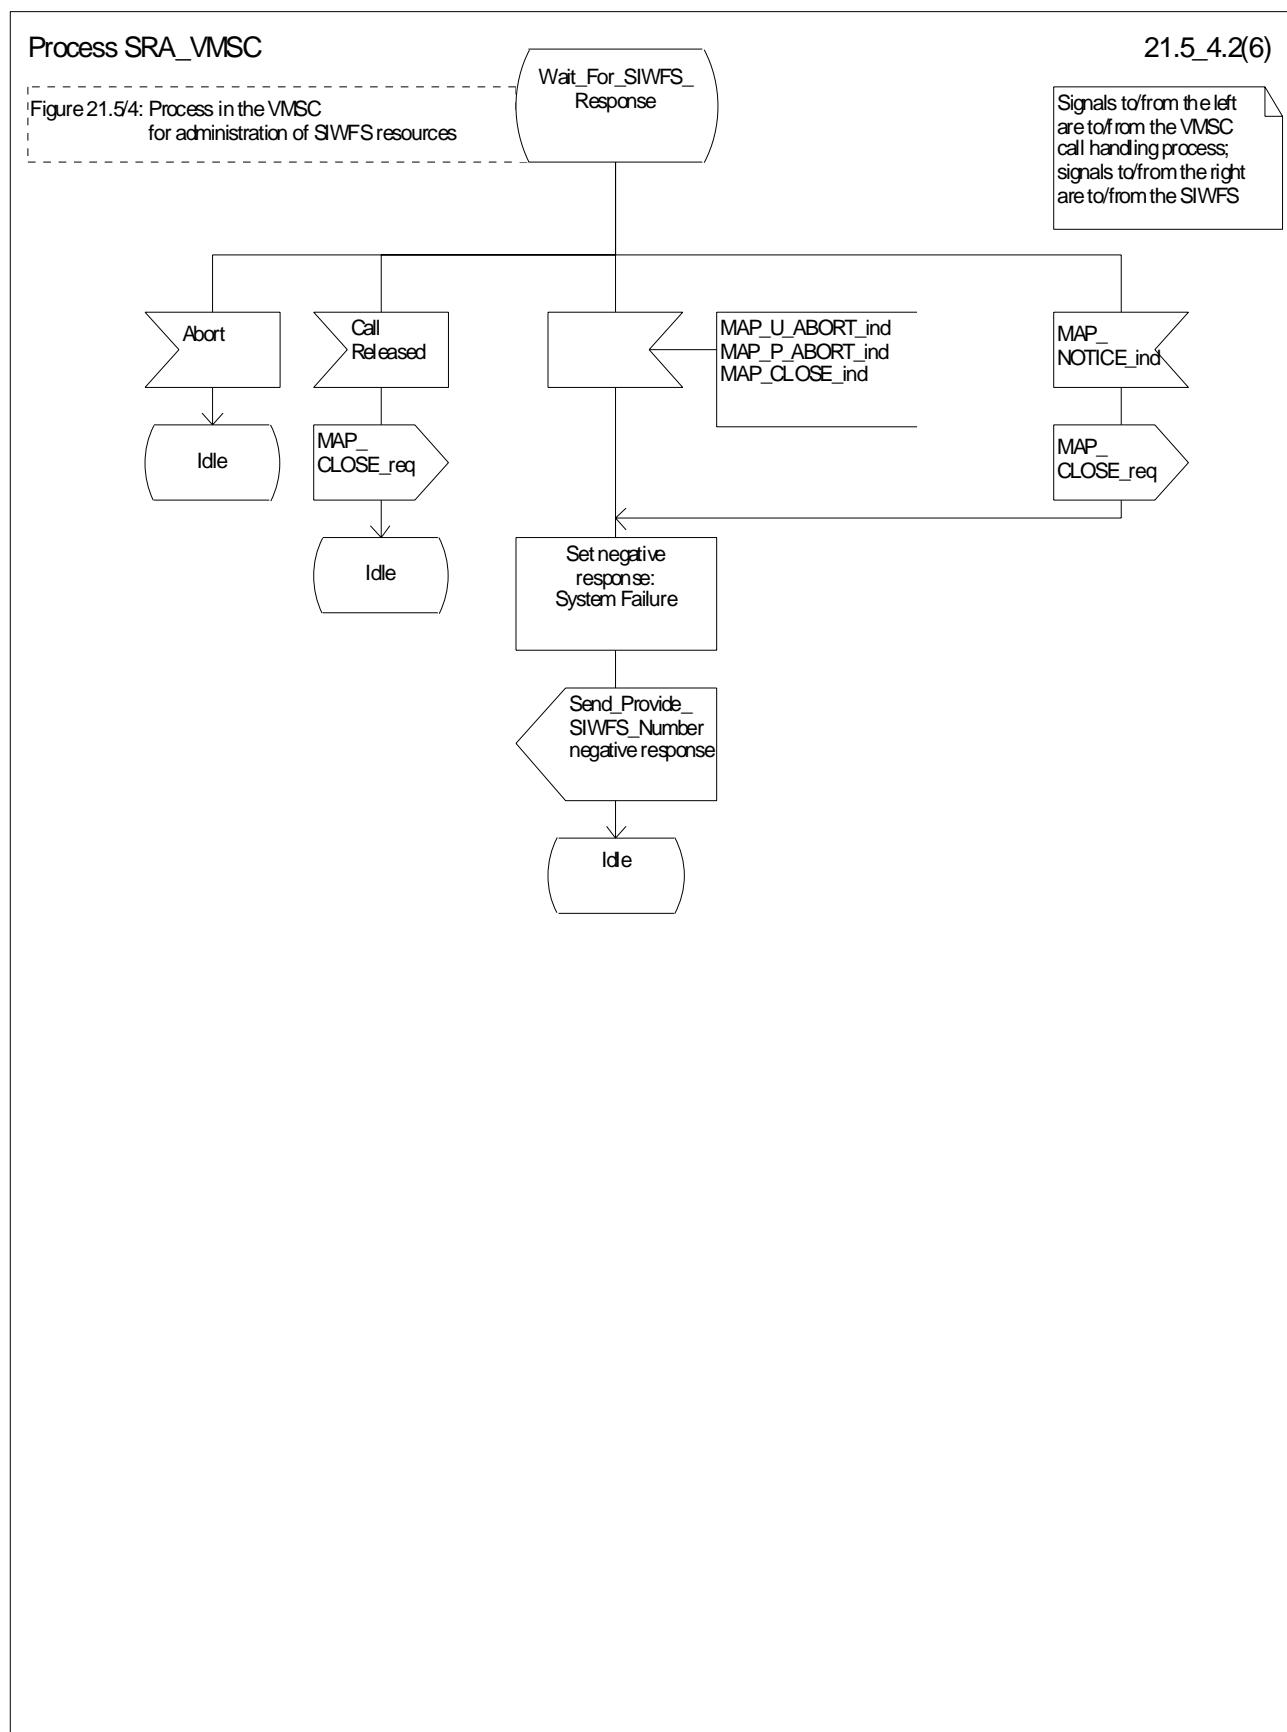


Figure 21.5/4 (sheet 2 of 6): Process SRA\_VMSC

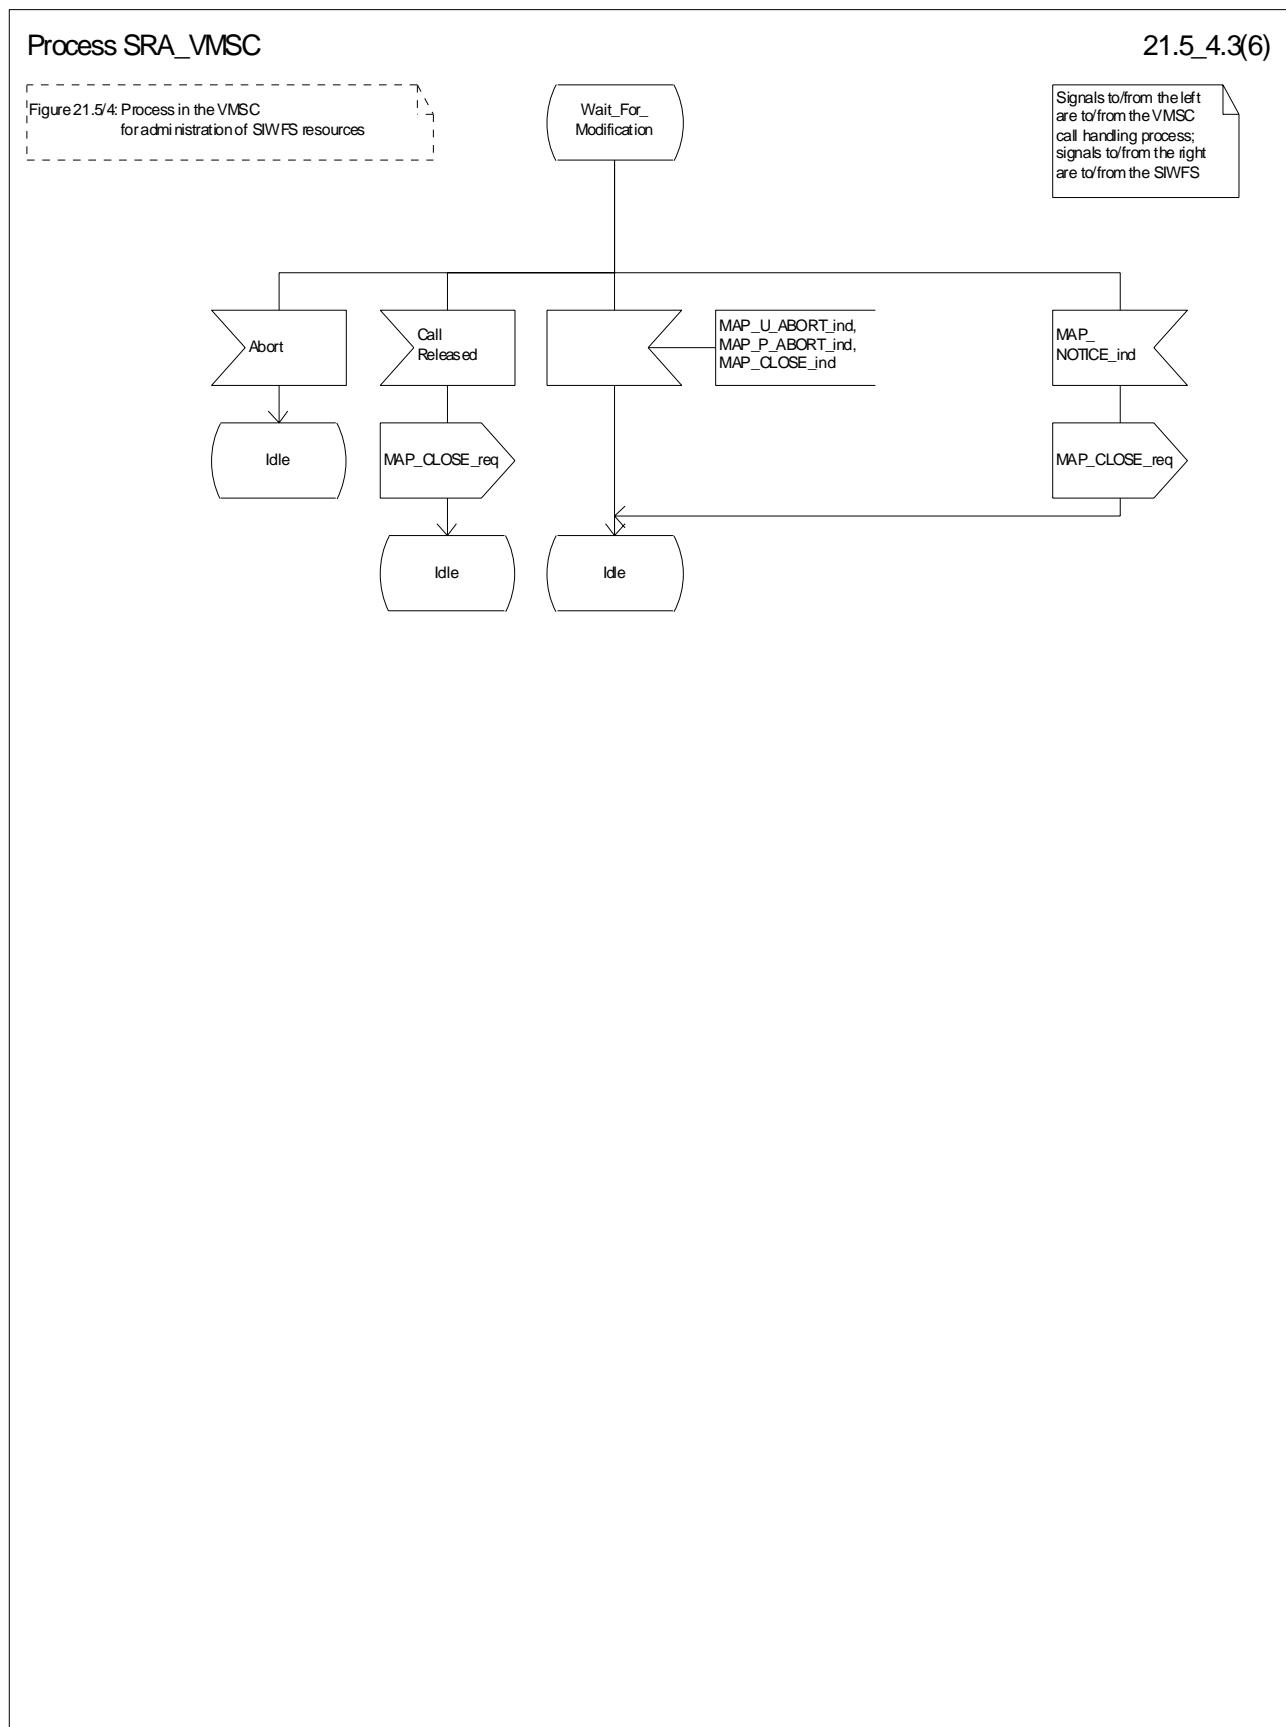


Figure 21.5/4 (sheet 3 of 6): Process SRA\_VMSC

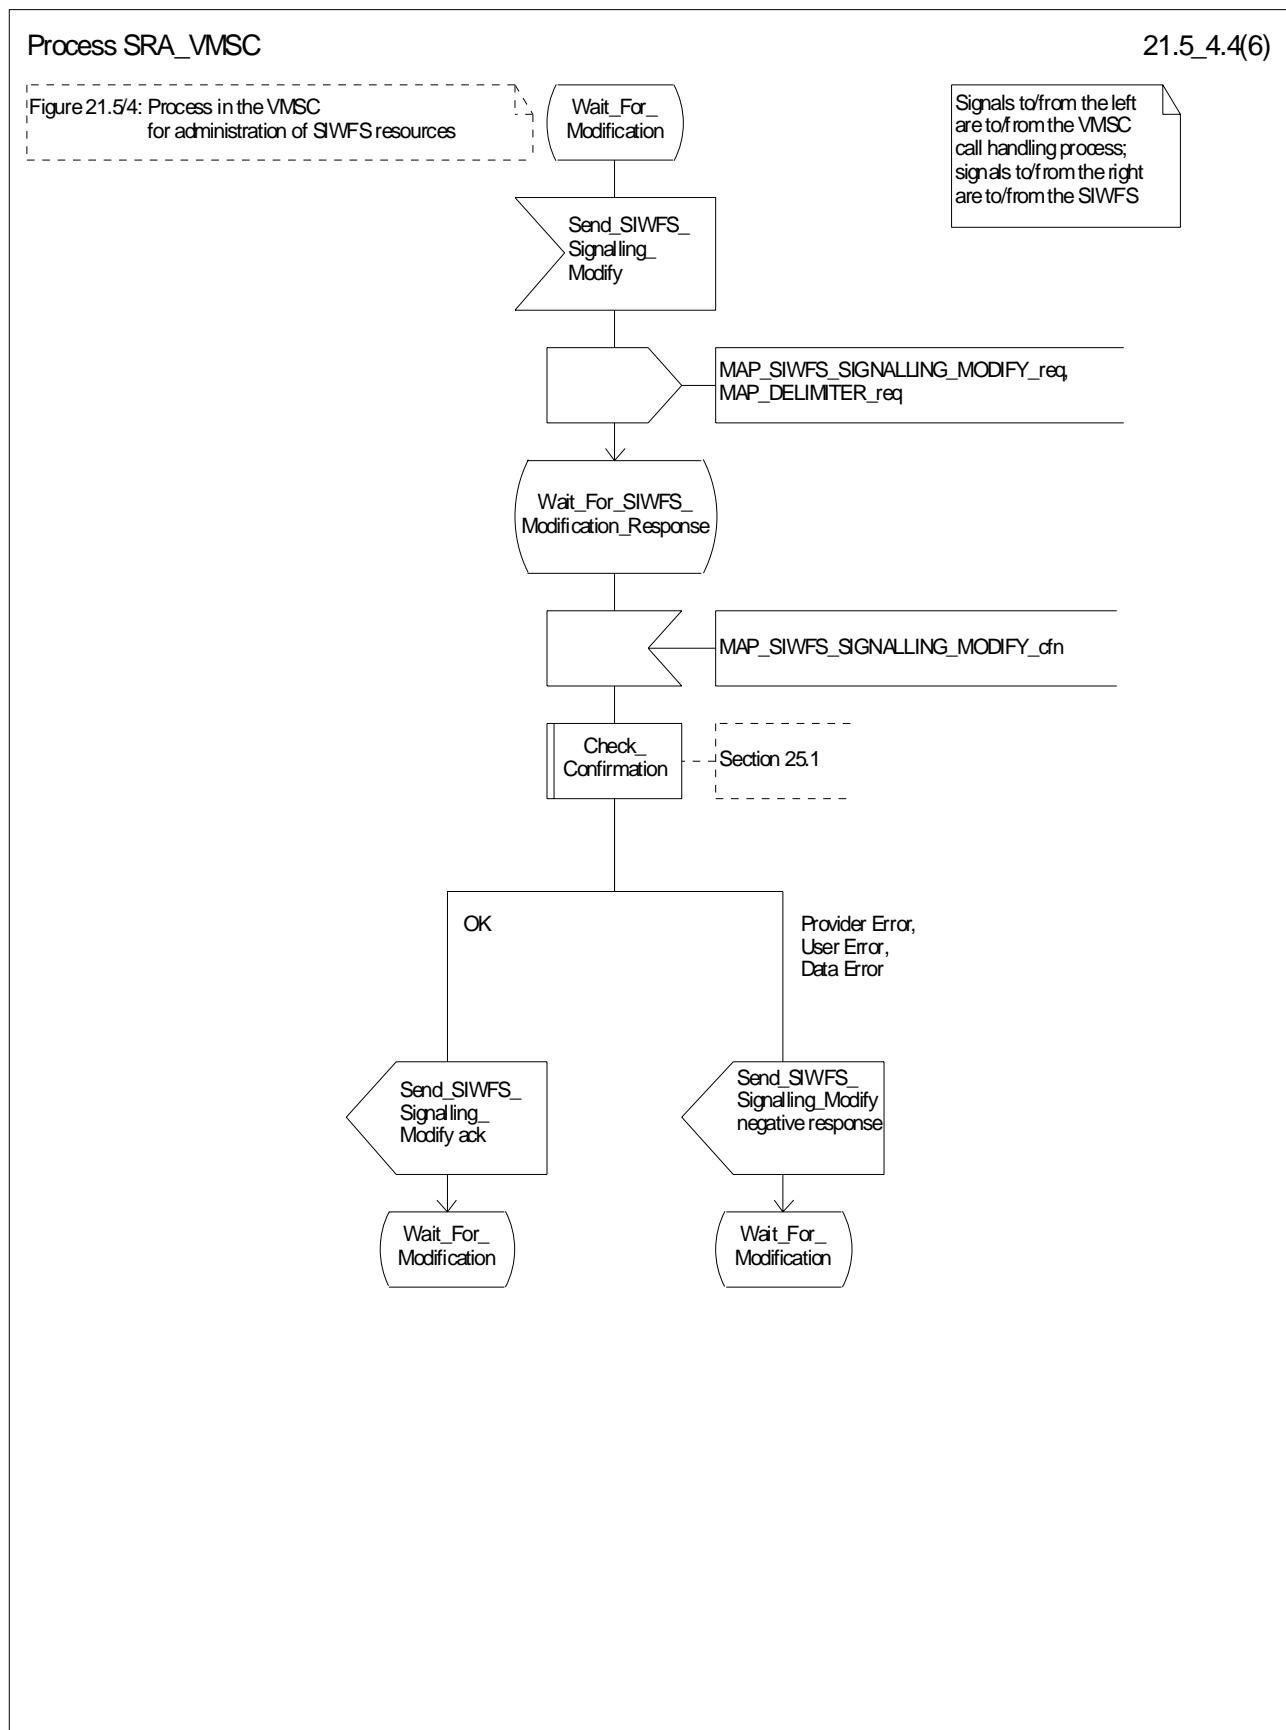


Figure 21.5/4 (sheet 4 of 6): Process SRA\_VMSC

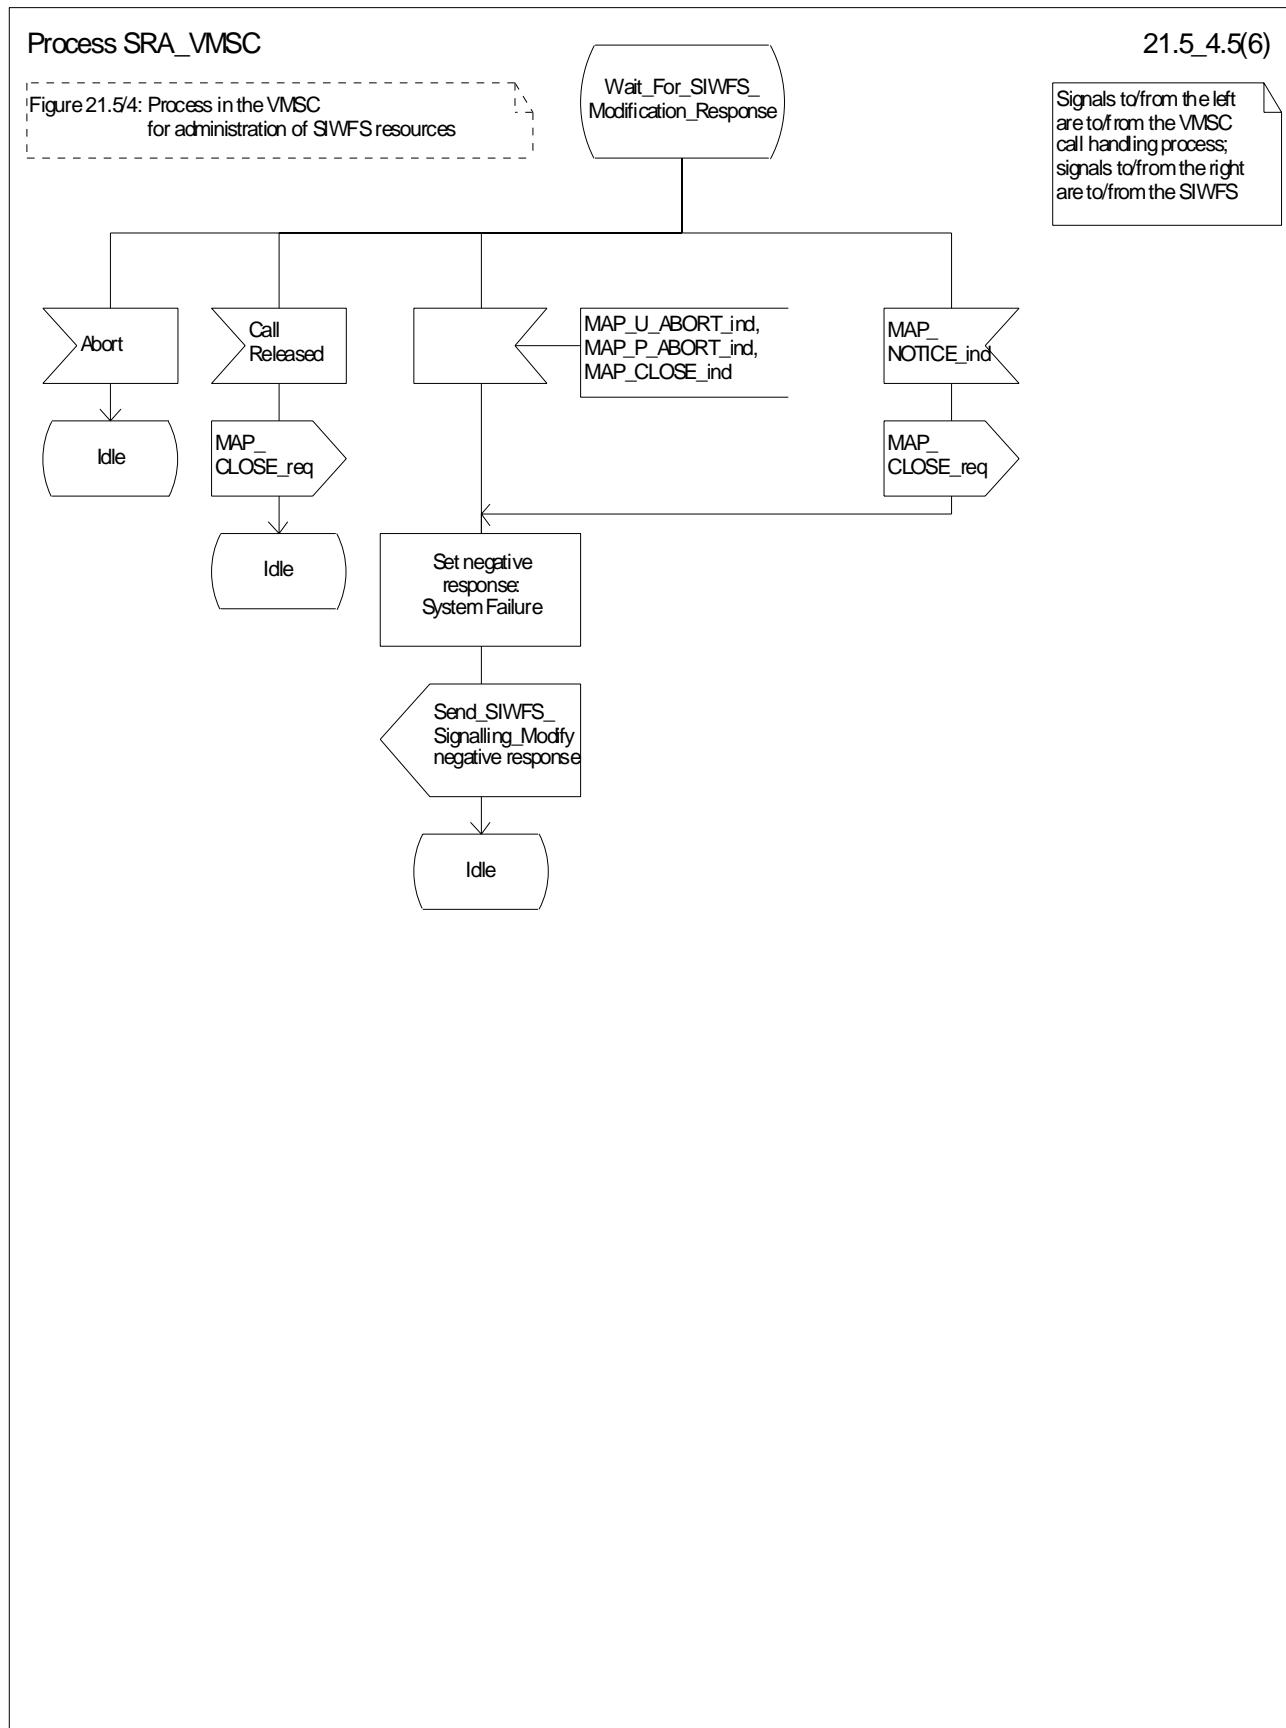


Figure 21.5/4 (sheet 5 of 6): Process SRA\_VMSC

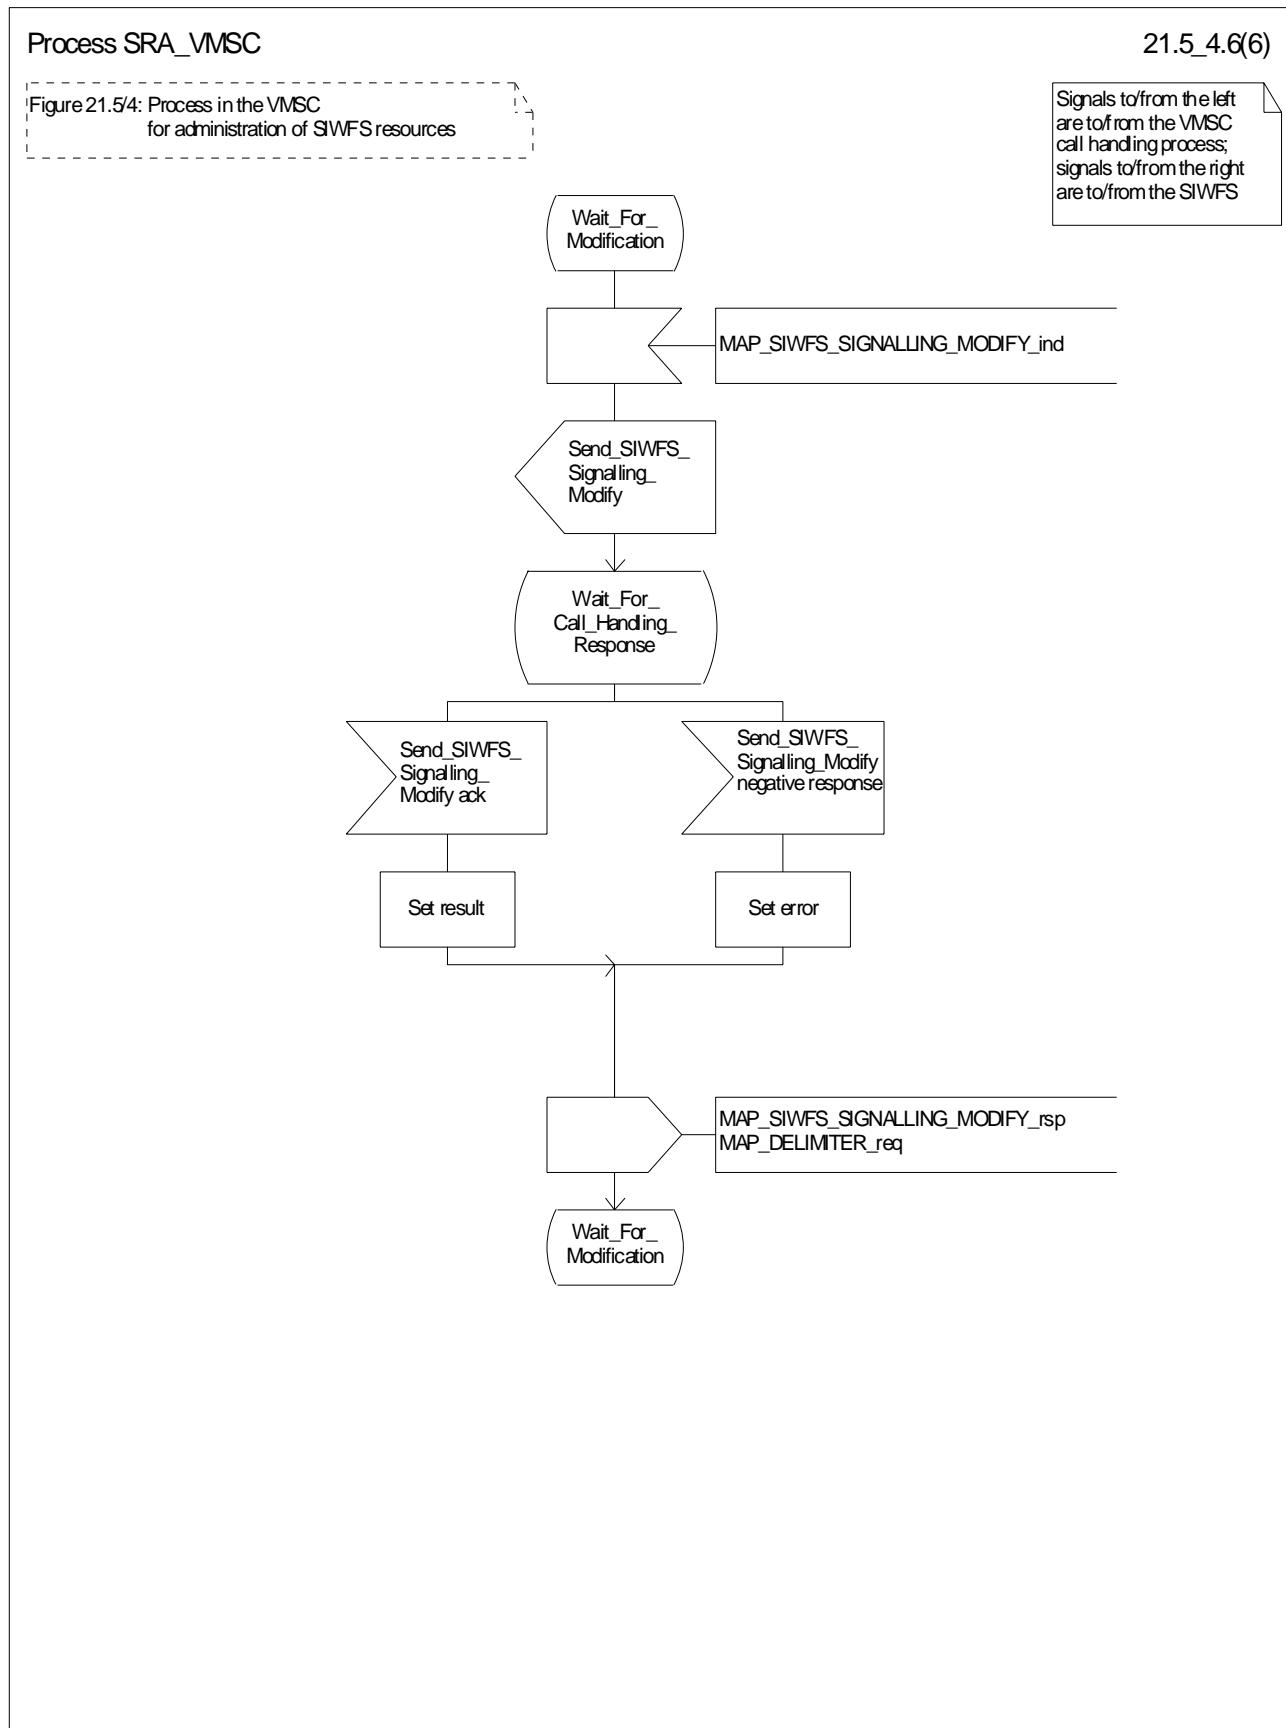


Figure 21.5/4 (sheet 6 of 6): Process SRA\_VMSC

## 21.5.3 Process in the SIWFS

The MAP process in the SIWFS to allocate and modify SIWFS resources for a mobile call is shown in figure 21.5/5. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Ind see clause 25.1.1.

Check\_Confirmation see clause 25.2.2.

### 21.5.3.1 Procedures for allocation of SIWFS resources

#### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context locInfoRetrieval, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_PROVIDE\_SIWFNS\_NUMBER service indication is received, the MAP process sends a Provide SIWFS number Info request to the call handling process in the SIWFS, and waits for a response. The Provide SIWFS number request contains the parameters received in the MAP\_PROVIDE\_SIWFNS\_NUMBER service indication.

If the call handling process in the SIWFS returns a Provide SIWFS number ack, the MAP process constructs a MAP\_PROVIDE\_SIWFNS\_NUMBER service response containing the routing information contained in the Provide SIWFS Number ack, constructs a MAP\_DELIMITER service request, sends them to the VMSC and go to Wait\_For\_Modification state.

#### **Earlier version MAP dialogue with the VMSC**

If the macro Receive\_Open\_Ind takes the Vr exit, the MAP process returns to the idle state.

#### **Dialogue opening failure**

If the macro Receive\_Open\_Ind takes the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

#### **Negative response from SIWFS call handling process**

If the call handling process in the SIWFS returns a negative response the MAP process constructs a MAP\_PROVIDE\_SIWFNS\_NUMBER service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the VMSC and returns to the idle state.

#### **Call release**

If the call handling process in the SIWFS indicates that the call has been aborted, the MAP process returns to the idle state. Any response from the VMSC will be discarded.

If the call handling process in the SIWFS indicates that the traffic channel has been released (i.e. call released by a user) a MAP\_CLOSE\_req is sent and the process is returned to the idle state.

#### **Abort of VMSC dialogue**

After the dialogue with the VMSC has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the VMSC may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the VMSC, and returns to the idle state.

### 21.5.3.2 Process for modification of SIWFS resources initiated by the user

#### **Successful outcome**

If a MAP\_SIWFSSIGNALLING\_MODIFY service indication is received, the MAP process sends an SIWFS signalling modify Info request to the call handling process in the SIWFS, and waits for a response. The SIWFS signalling modify request contains the parameters received in the MAP\_SIWFSSIGNALLING\_MODIFY service indication.

If the call handling process in the SIWFS returns an SIWFS signalling modify ack, the MAP process constructs a MAP\_SIWFSSIGNALLING\_MODIFY service response contained in the Provide SIWFS Number ack, send it to the VMSC and go to Wait\_For\_Modification state.

#### **Negative response from SIWFS call handling process**

If the call handling process in the SIWFS returns a negative response the MAP process constructs a MAP\_SIWFSSIGNALLING\_MODIFY service response containing the appropriate error, send it to the VMSC and go to Wait\_For\_Modification state.

### 21.5.3.3 Process for modification of SIWFS resources initiated by the SIWFS

#### **Successful Outcome**

When the MAP process receives an SIWFS Signalling Modify request from the call handling process in the SIWF, it requests a dialogue with the VMSC whose identity is contained in the VMSC Signalling Modify request by sending a MAP\_DELIMITER service request, requests resources in the VMSC using a MAP\_SIWFSSIGNALLING\_MODIFY service request, the MAP process waits for a response from the VMSC.

If the MAP process receives a MAP\_SIWFSSIGNALLING\_MODIFY service confirm from the VMSC, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends an SIWFS Signalling Modify ack containing the response received from the VMSC to the call handling process in the SIWF and go to Wait\_For\_Modification state.

#### **Error in MAP\_SIWFSSIGNALLING\_MODIFY confirm**

If the MAP\_SIWFSSIGNALLING\_MODIFY service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends an SIWFS Signalling Modify negative response to the call handling process in the SIWFS and go to Wait\_For\_Modification state.

#### **Abort of SIWFS dialogue**

During the time an answer is expected from the VMSC, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the VMSC may send a MAP\_U\_ABORT indication or a MAP\_CLOSE indication. In any of these cases, the MAP process sends an SIWFS Signalling Modify negative response to the call handling process in the SIWFS and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the VMSC, sends an SIWFS Signalling Modify negative response indicating system failure to the call handling process in the SIWFS and returns to the idle state.

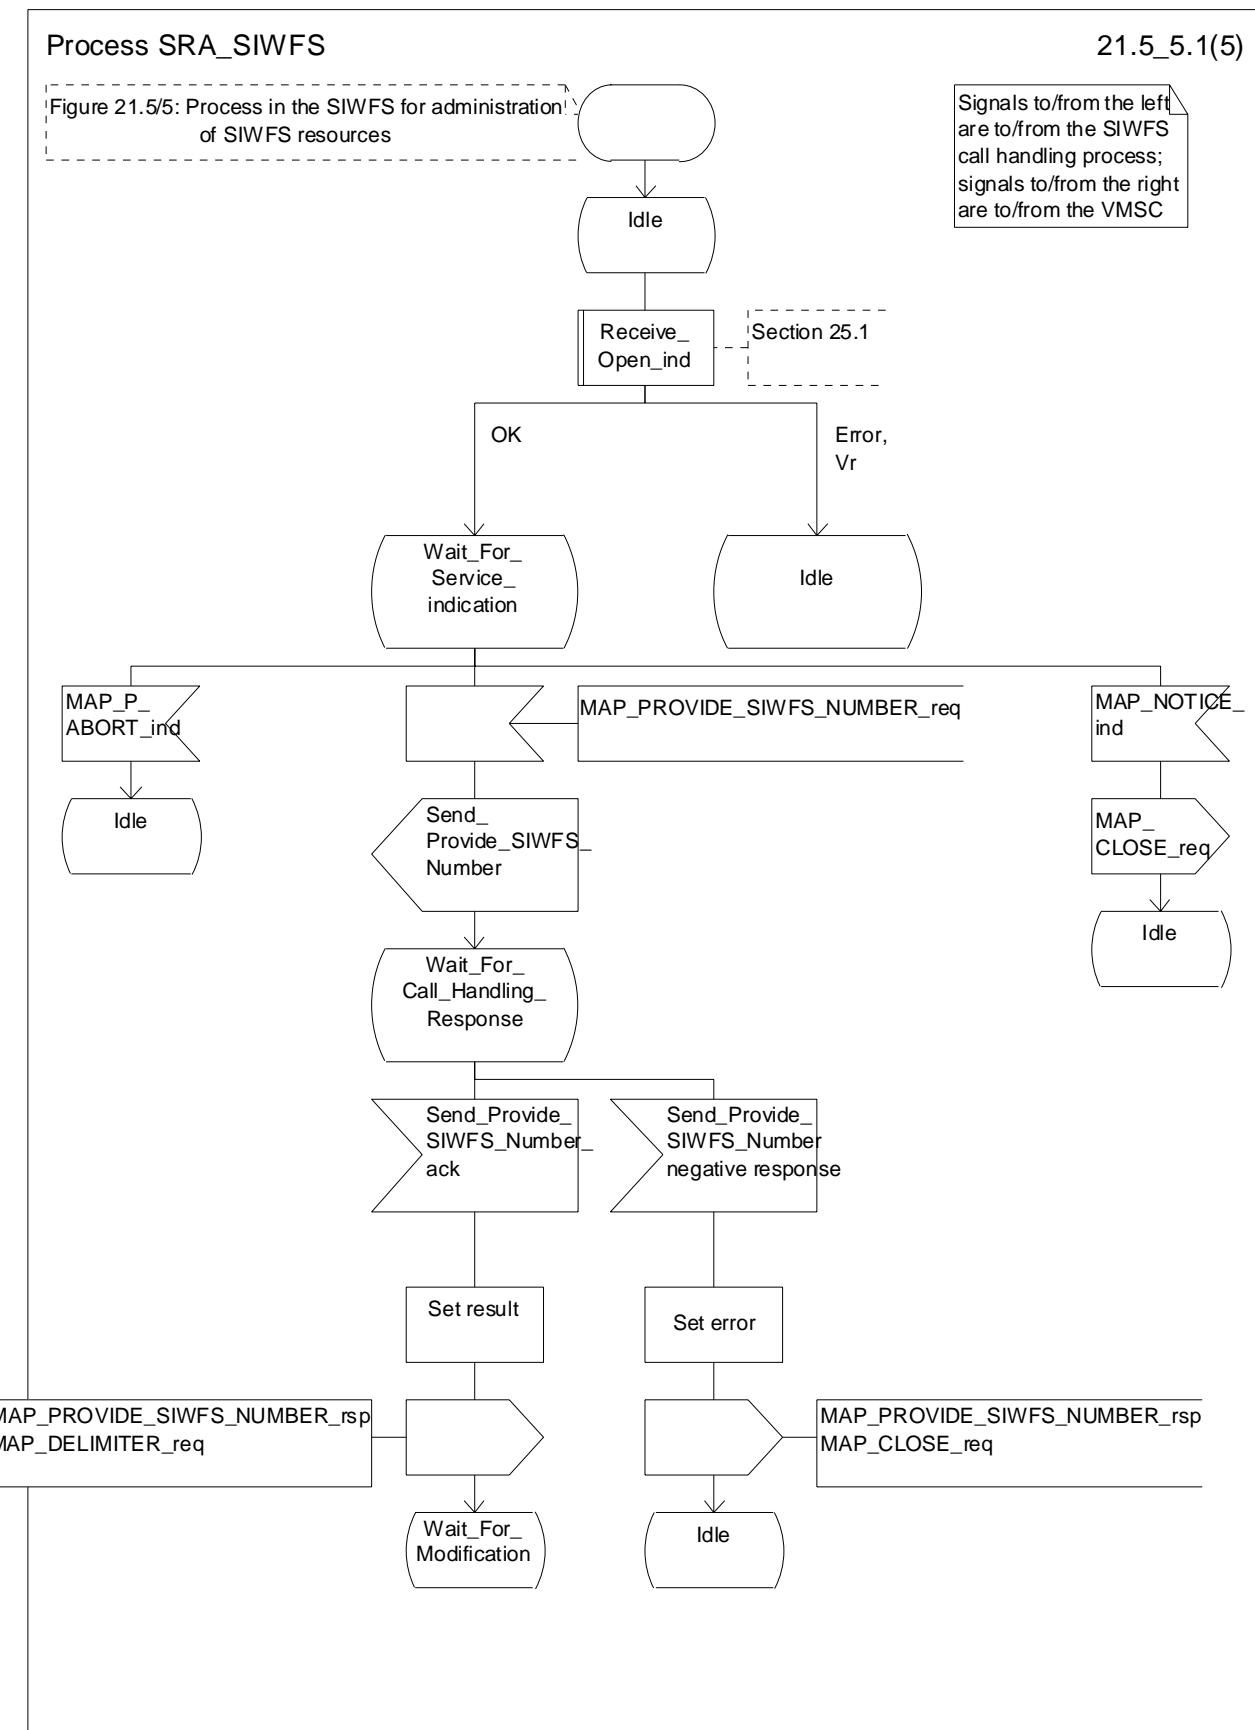


Figure 21.5/5 (sheet 1 of 5): Process SRA\_SIWFs

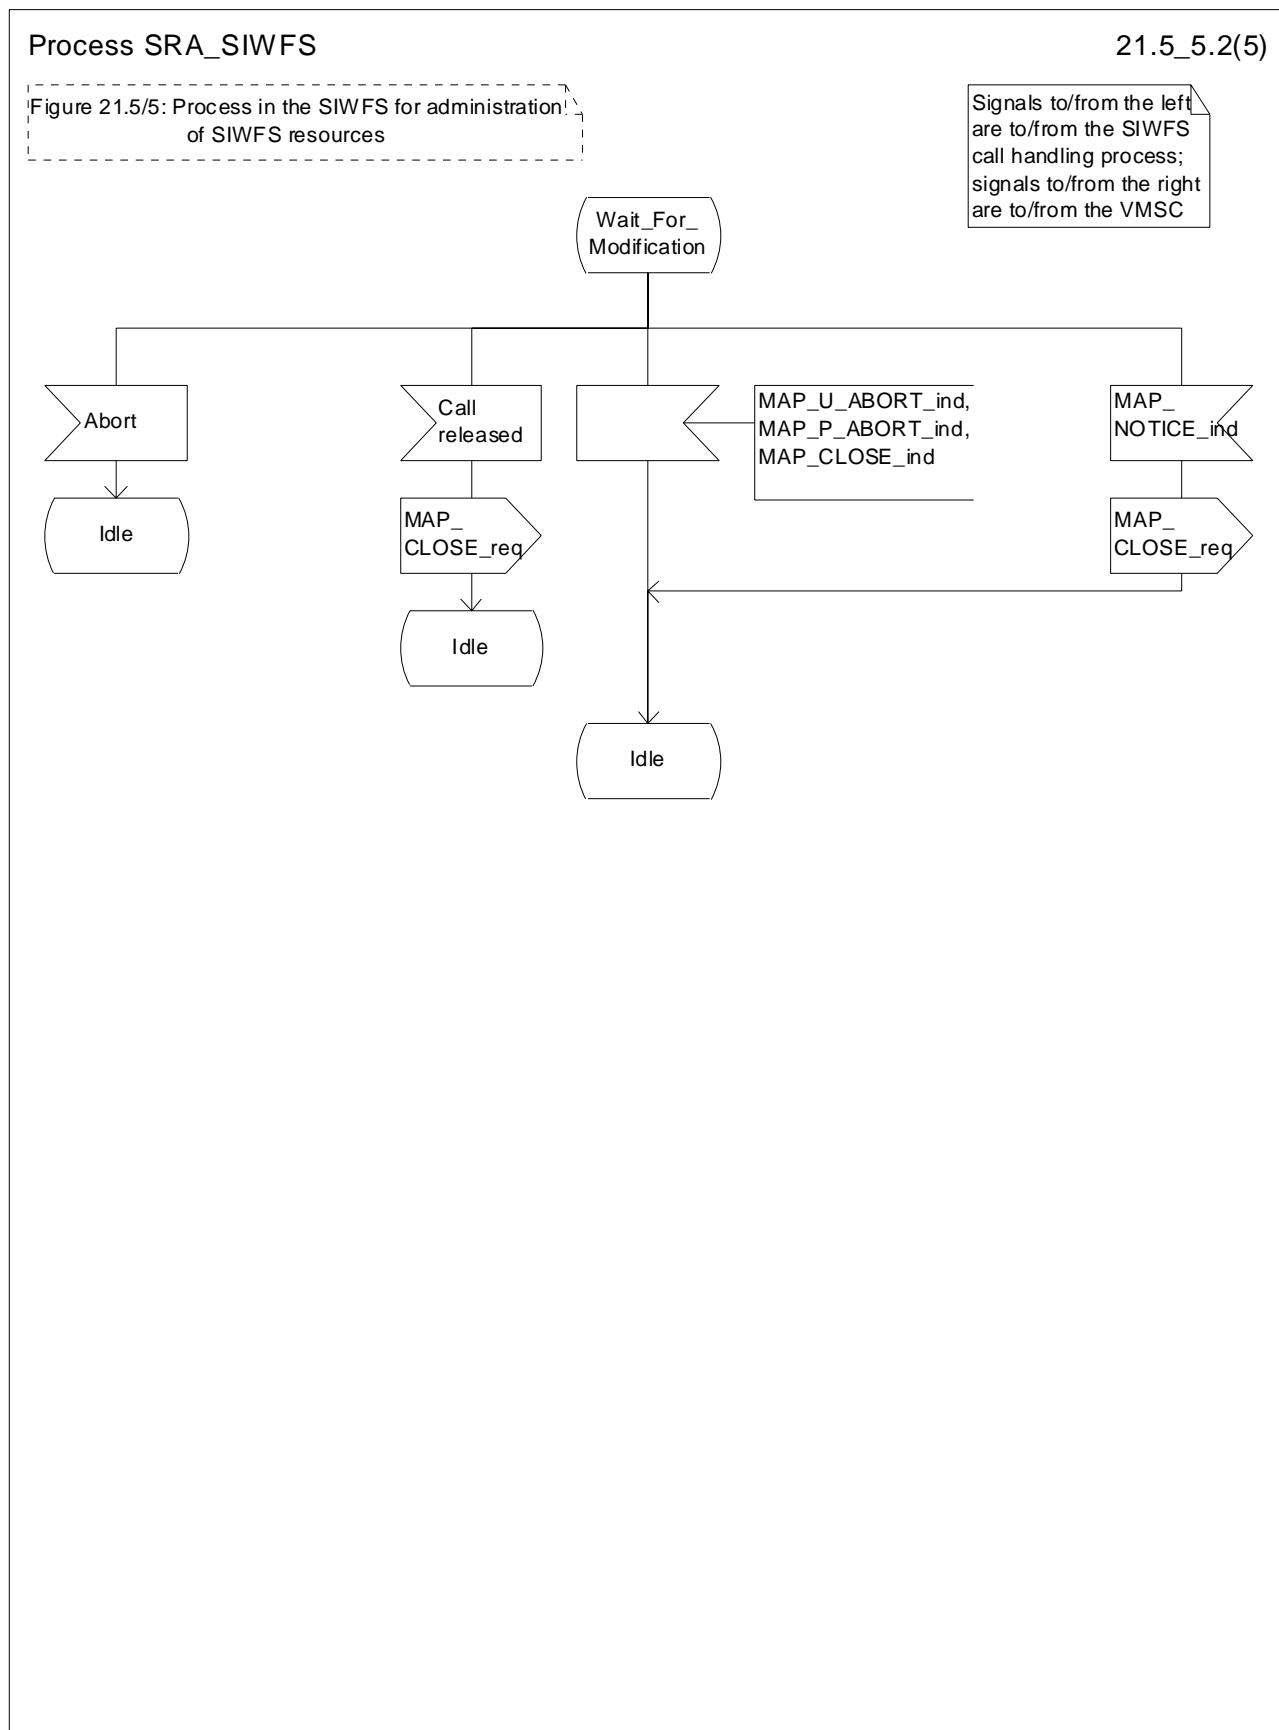


Figure 21.5/5 (sheet 2 of 5): Process SRA\_SIWFs

## Process SRA\_SIWFs

21.5\_5.3(5)

Figure 21.5/5: Process in the SIWFS for administration of SIWFS resources

Signals to/from the left are to/from the SIWFS call handling process; signals to/from the right are to/from the VMSC

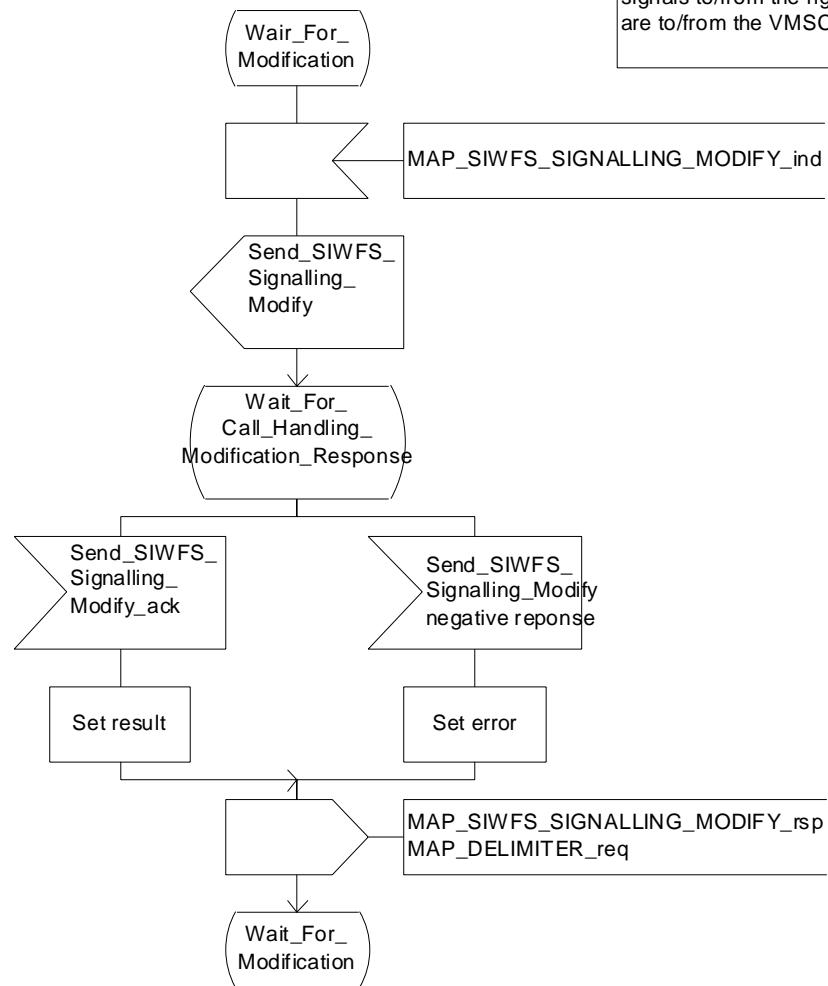


Figure 21.5/5 (sheet 3 of 5): Process SRA\_SIWFs

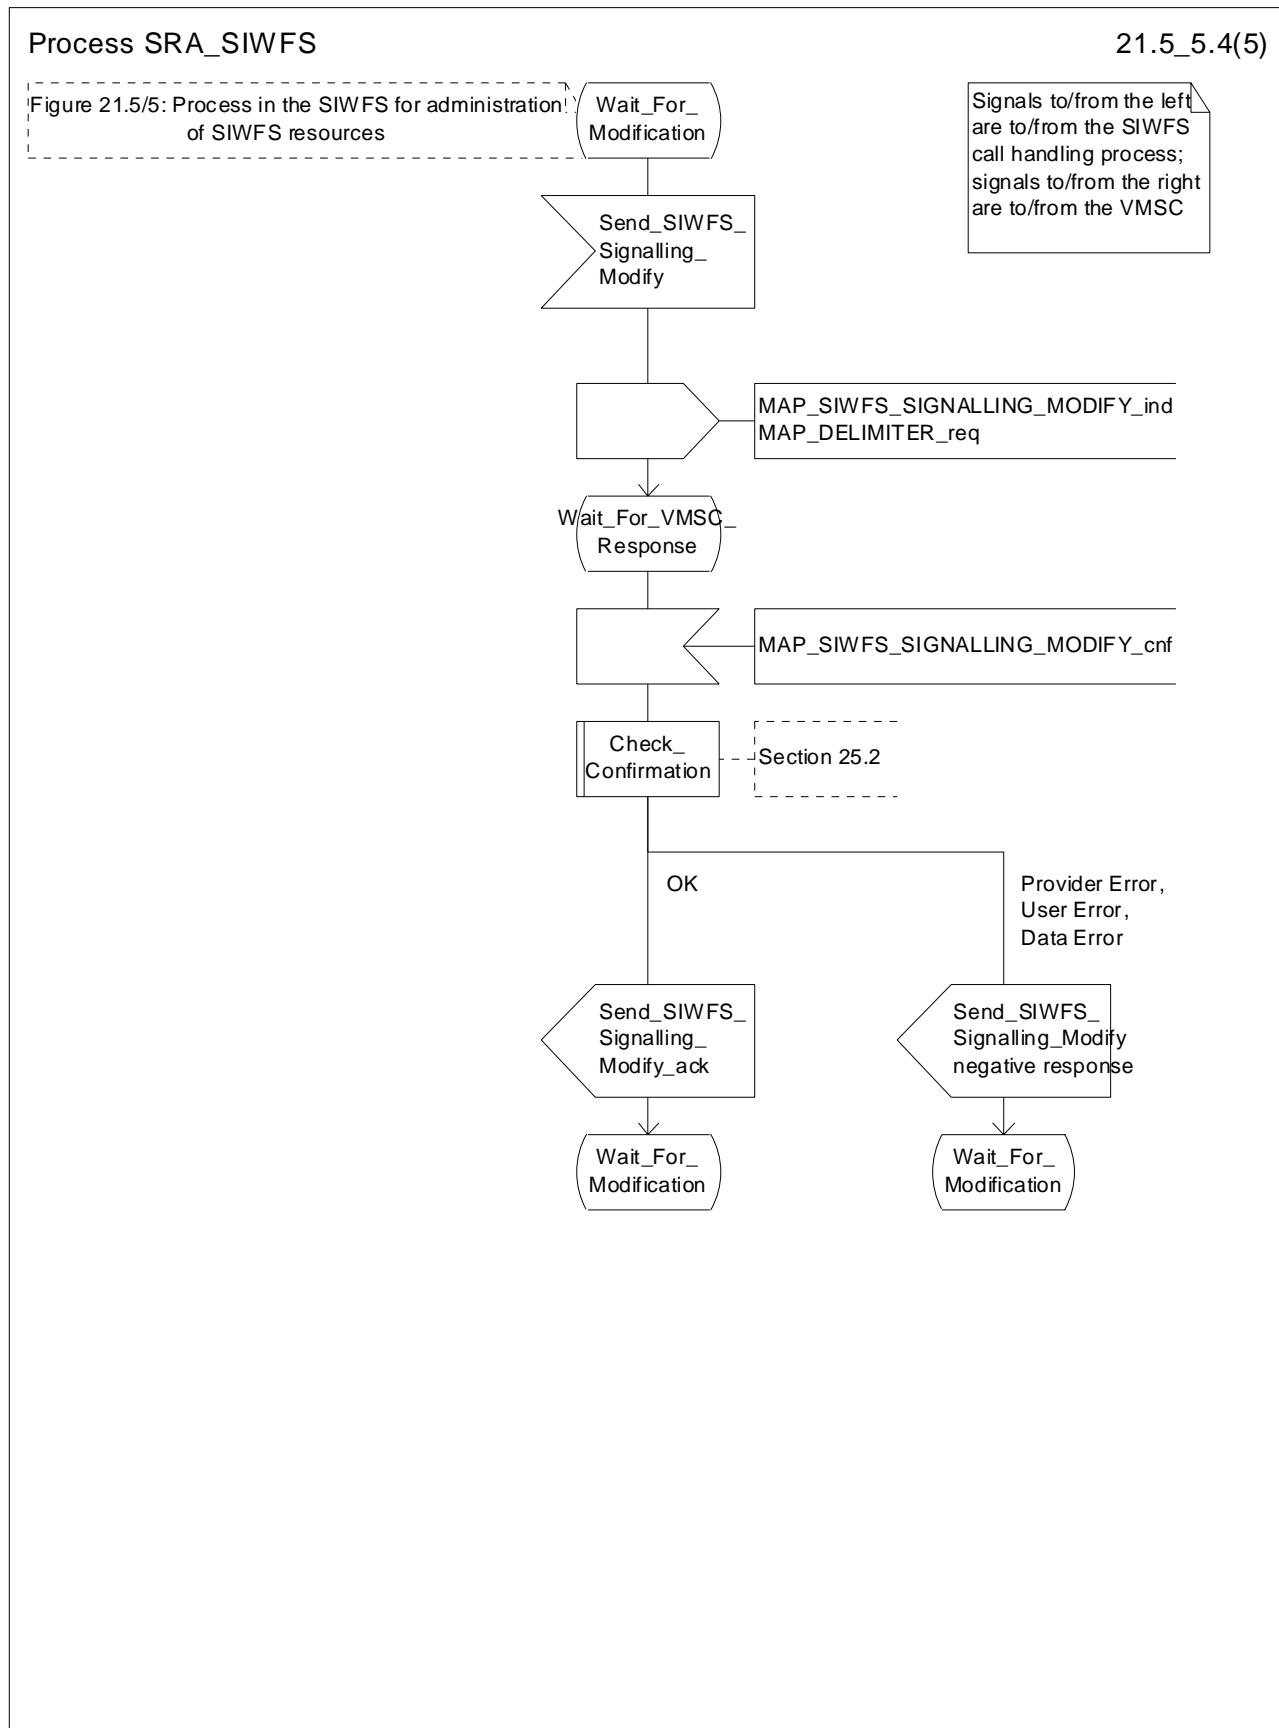


Figure 21.5/5 (sheet 4 of 5): Process SRA\_SIWFs


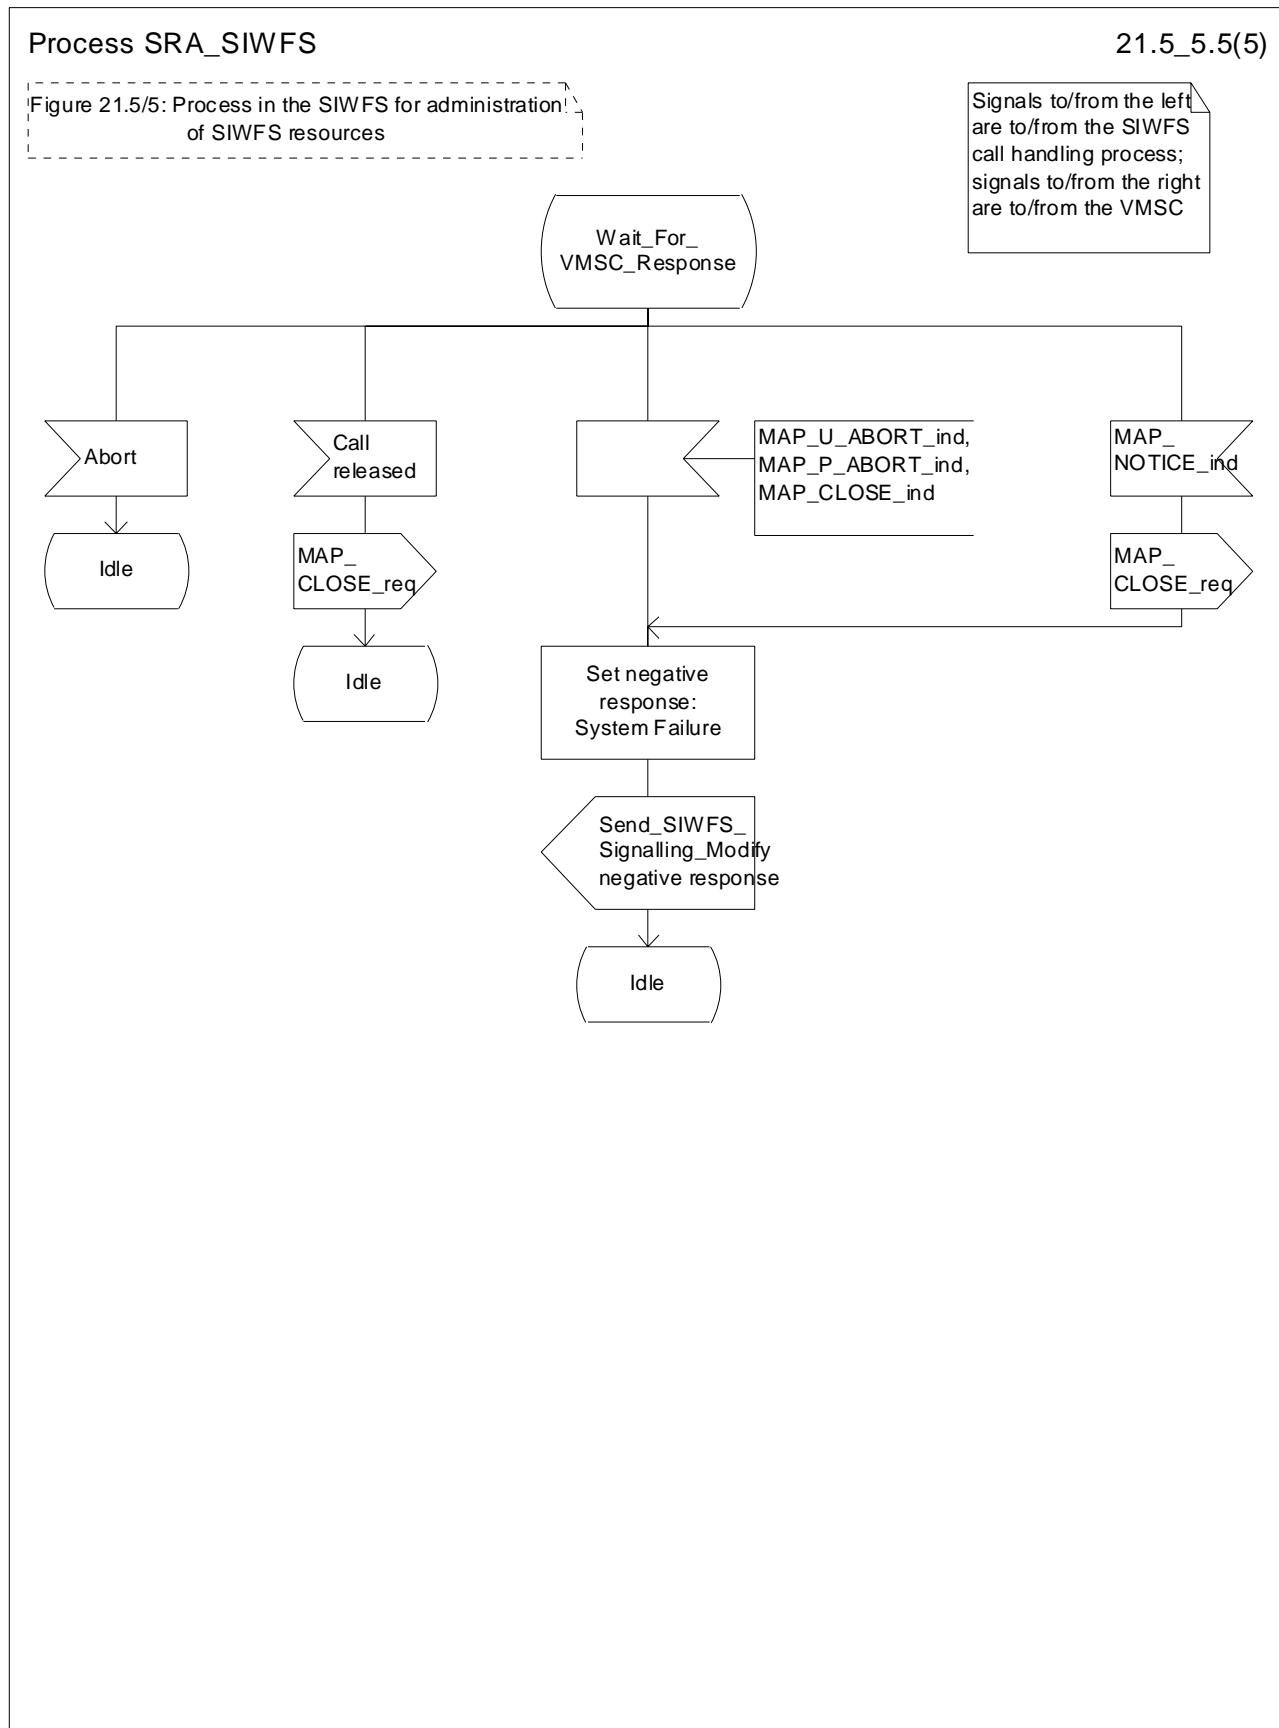


Figure 21.5/5 (sheet 5 of 5): Process SRA\_SIWFs

## 21.6 Setting of Reporting State

### 21.6.1 General

The message flow for setting the reporting state in a stand-alone dialogue is shown in figure 21.6.1/1.

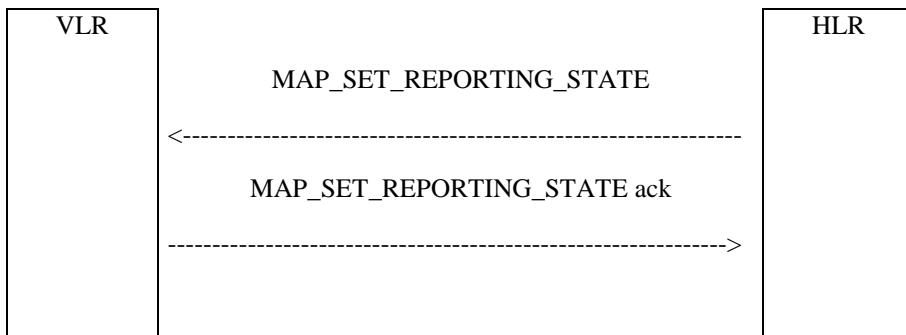

**Figure 21.6/1: Message Flow for Setting the Reporting State**

In Set Reporting State, the HLR can request a start or a stop of monitoring in the VLR.

### 21.6.2 Process in the HLR for Set Reporting State stand-alone

The MAP process in the HLR to set the reporting state in the VLR in a separate stand-alone dialogue is shown in figure 21.6/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- |                    |                    |
|--------------------|--------------------|
| Receive_Open_Cnf   | see clause 25.1.2; |
| Check_Confirmation | see clause 25.2.2. |

#### Successful Outcome

When the MAP process receives a Start Reporting or Stop Reporting request from the CCBS application process in the HLR, it requests a dialogue with the VLR whose identity is contained in the request by sending a MAP\_OPEN service request and sending the necessary information using a MAP\_SET\_REPORTING\_STATE service request. The HLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the VLR.

If the MAP process receives a MAP\_SET\_REPORTING\_STATE service confirm from the VLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit and the request was for Start Reporting, the MAP process sends a positive acknowledgement containing the information received from the VLR to the CCBS application process in the HLR and returns to the idle state. In the case of Stop Reporting the CCBS application process returns to the idle state.

#### Failure of dialogue opening with the VLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends (in the case of Start Reporting) a negative response to the CCBS application process in the HLR and returns to the idle state. In the case of Stop Reporting the process returns to the idle state.


#### Error in MAP\_SET\_REPORTING\_STATE confirm

If the MAP\_SET\_REPORTING\_STATE service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a negative response (in the case of Start Reporting) to the CCBS application process in the HLR and returns to the idle state. In the case of Stop Reporting the CCBS application process returns to the idle state.

#### Abort of VLR dialogue

After the dialogue with the VLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. If the request was for the Start Reporting, the MAP process sends a Start Reporting negative response to the CCBS application process in the HLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the VLR, sends a negative response (in the case of the Start Reporting) indicating system failure to the CCBS application process in the HLR and returns to the idle state. In the case of Stop Reporting the CCBS application process returns to the idle state.

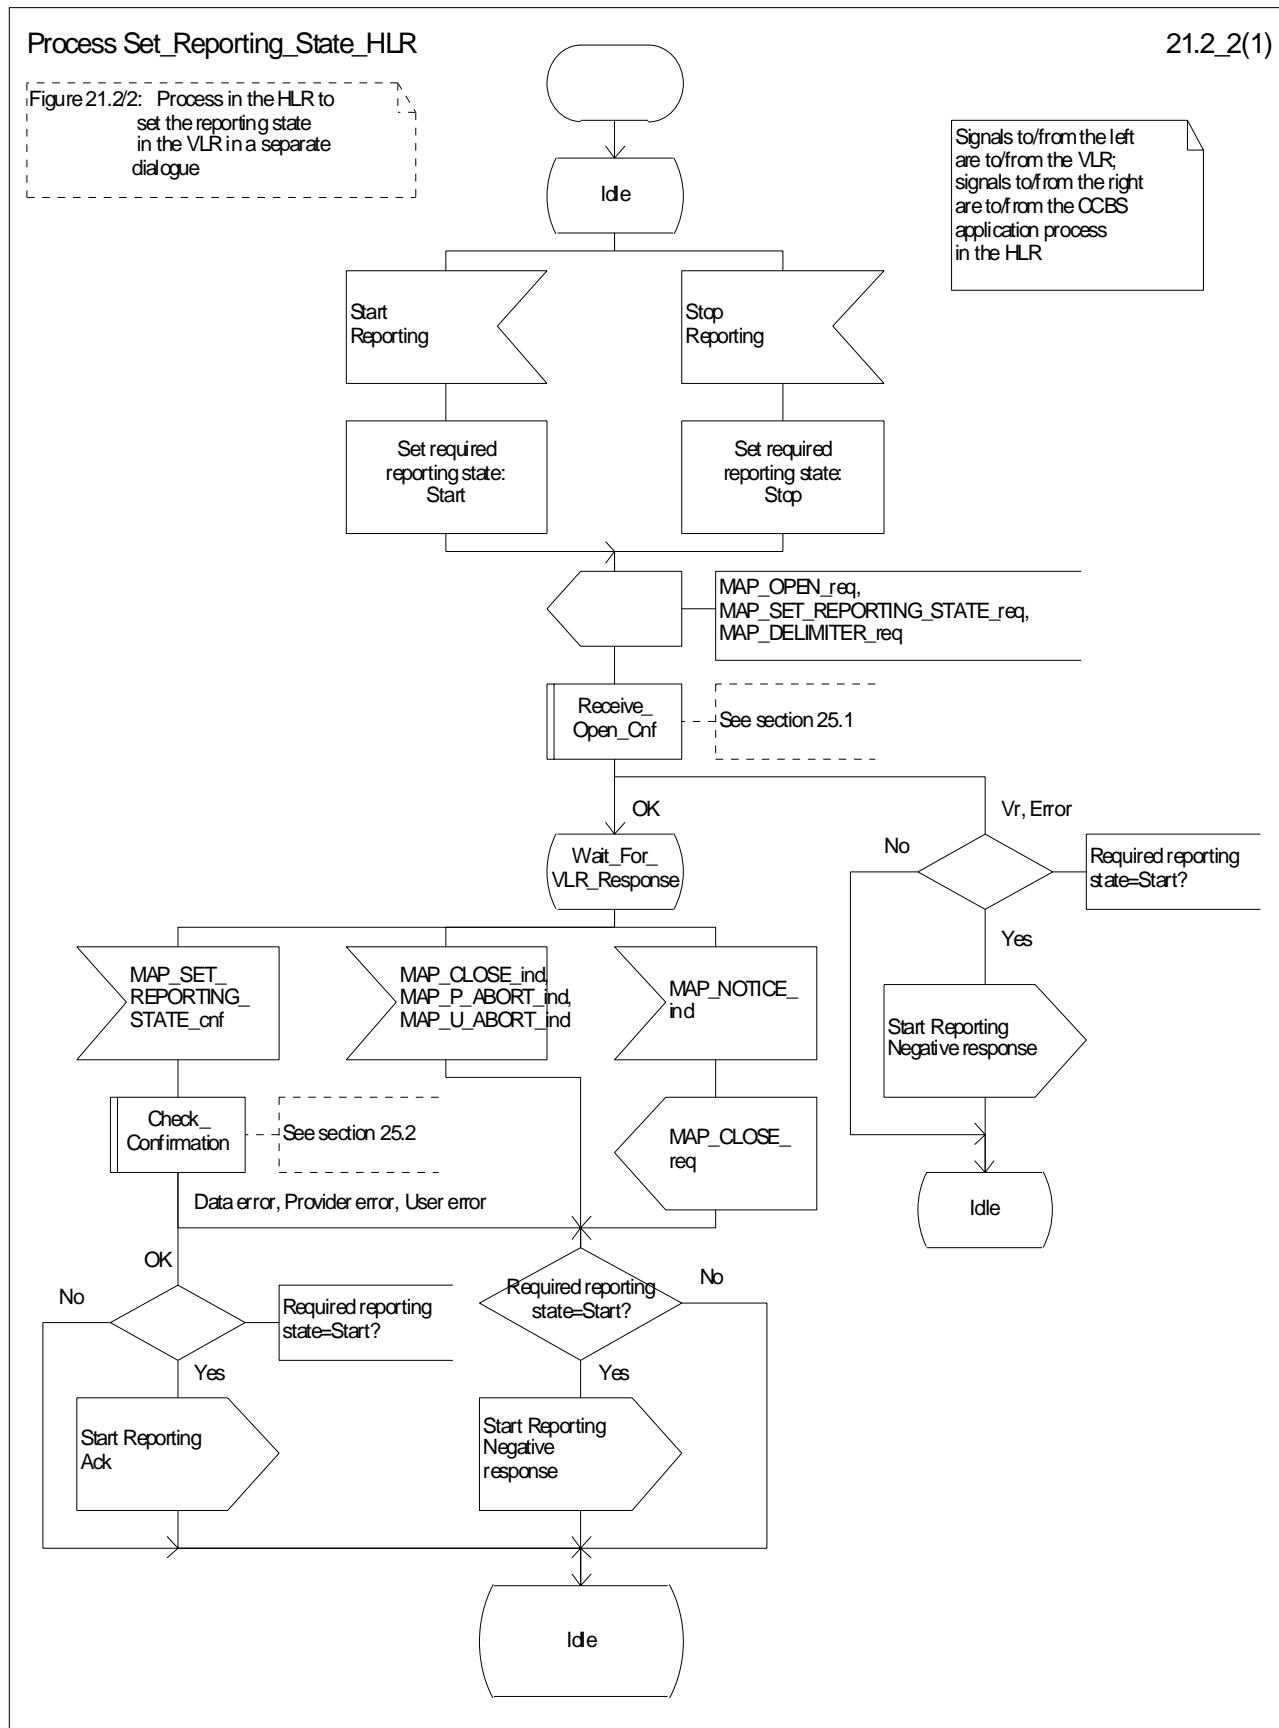

**Figure 21.6/2: Process Set\_Reportng\_State\_HLR**

### 21.6.3 Reporting co-ordinator process in the VLR

The MAP co-ordinating process in the VLR to handle a dialogue opened with the reporting application context is shown in figure 21.6/3. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind      see clause 25.1.1.

Any reporting process in the VLR starts by the VLR receiving a MAP-OPEN service indication. If that service is successful, the VLR can handle reporting indications from the HLR. Table 21.6/1 shows the co-ordinating process' reaction on receipt of specific reporting indications from the HLR. After the relevant process is invoked, the received service indication is sent to that process.

**Table 21.6/1: Relationship between received service indication and invoked process in the VLR**

Service indication received	Process invoked
MAP_REMOTE_USER_FREE_ind	REMOTE_USER_FREE_VLR
MAP_SET_REPORTING_STATE_ind	SET_REPORTING_STATE_VLR

After creation of the user process the co-ordinator relays the messages between the MAP protocol machine and the invoked process until a request or an indication for dialogue termination is received.

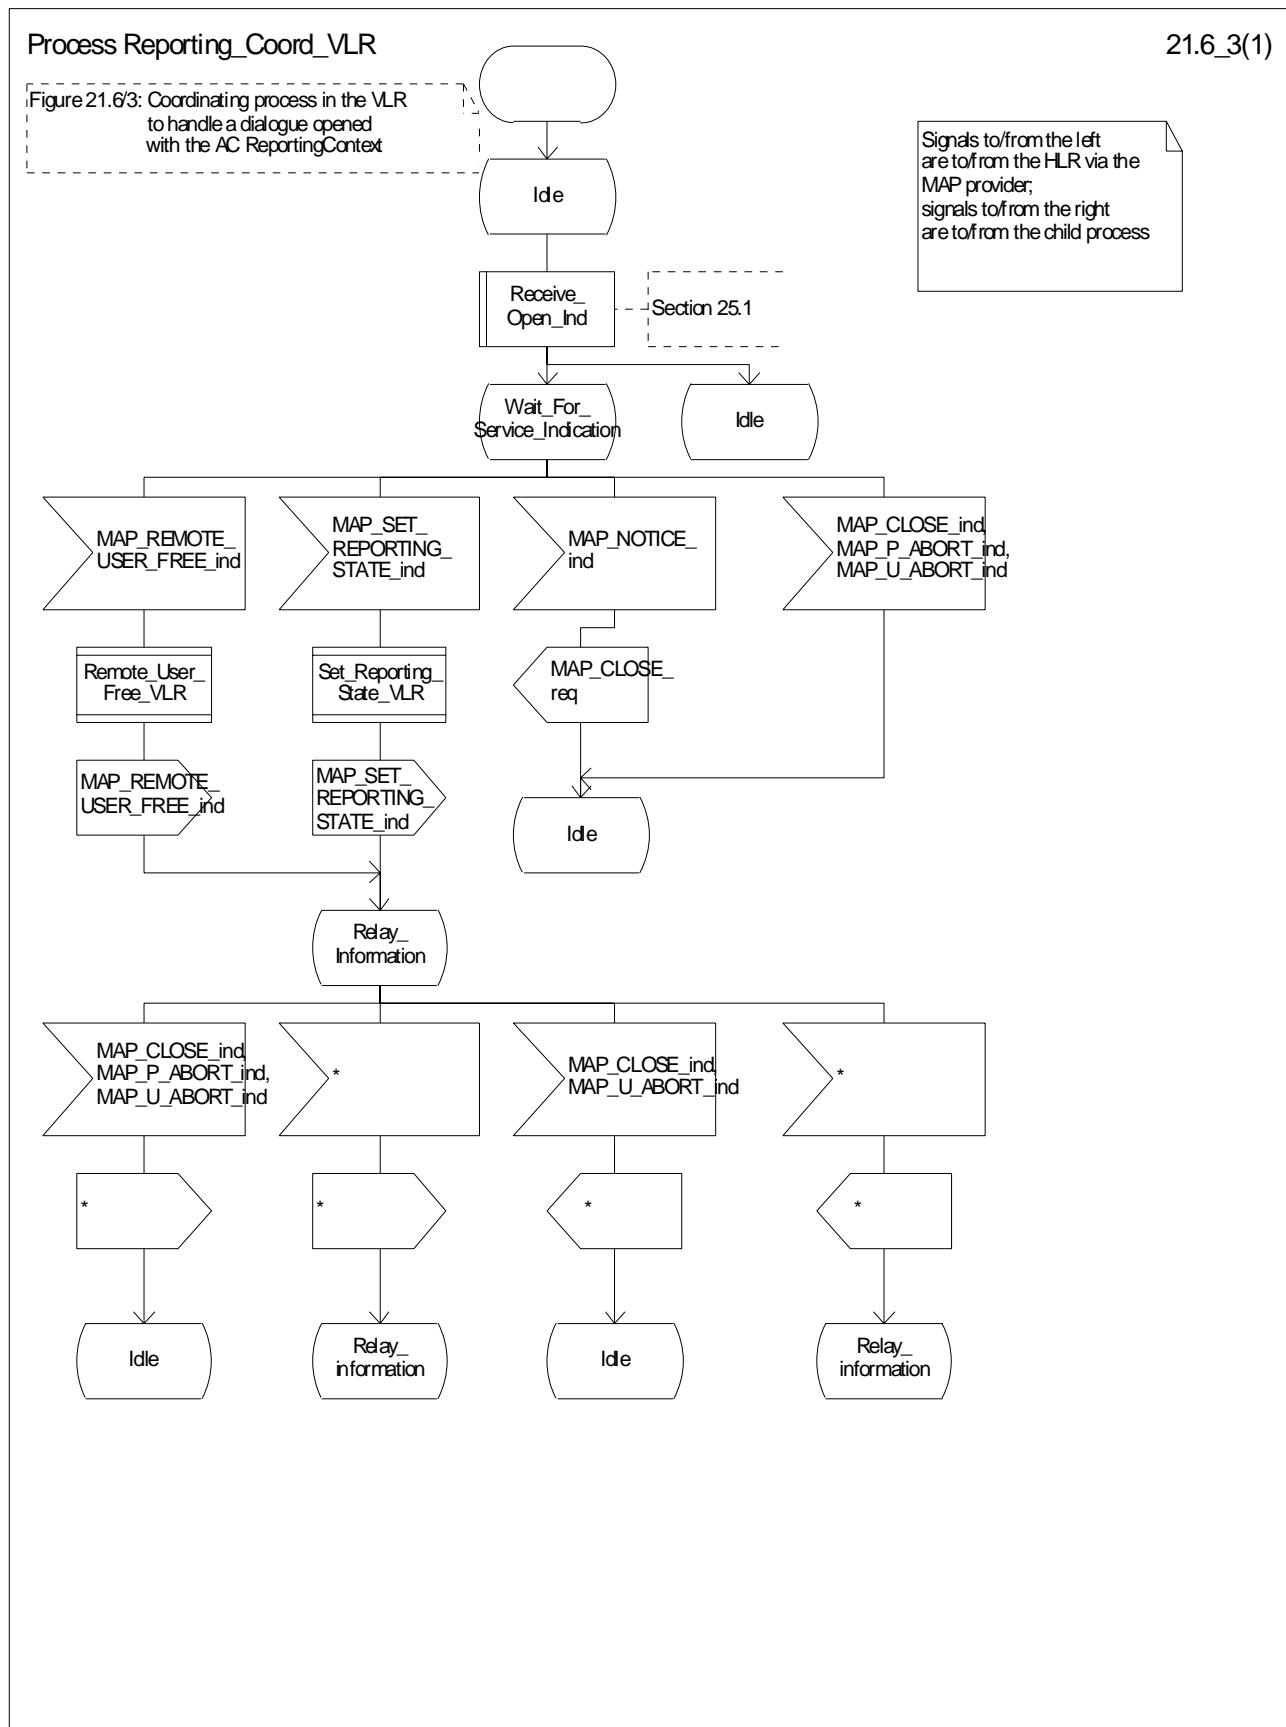


Figure 21.6/3: Process Reporting\_Coord\_VLR

## 21.6.4 Process in the VLR to set the reporting state

The MAP process in the VLR to set the reporting state is shown in figure 21.6/4.

The co-ordinator opens the process. The macro Receive\_Set\_Reportng\_State\_VLR handles the receipt of the request from the HLR, and the possible response from the CCBS application process in the VLR. When the macro exits, a MAP CLOSE is sent to the HLR and the process terminates.

The macro Set\_Reportng\_State\_VLR is defined in figure 21.6/5.

When the VLR receives a MAP\_SET\_REPORTING\_STATE service indication, it checks whether the required monitoring state is stopped.

If the required monitoring state is stopped, the MAP process sends a Stop Reporting message to the CCBS application in the VLR, sends a MAP\_SET\_REPORTING\_STATE response to the HLR and exits from the macro.

If the required monitoring state is started, the MAP process sends a Start Reporting message to the CCBS application in the VLR and waits for a response.

If the CCBS application sends a Start Reporting ack, the MAP process sends a MAP\_SET\_REPORTING\_STATE response to the HLR and exits from the macro.

If the CCBS application sends a Start Reporting negative response, the MAP process translates the negative response into a MAP user error, sends a MAP\_SET\_REPORTING\_STATE response to the HLR and exits from the macro.

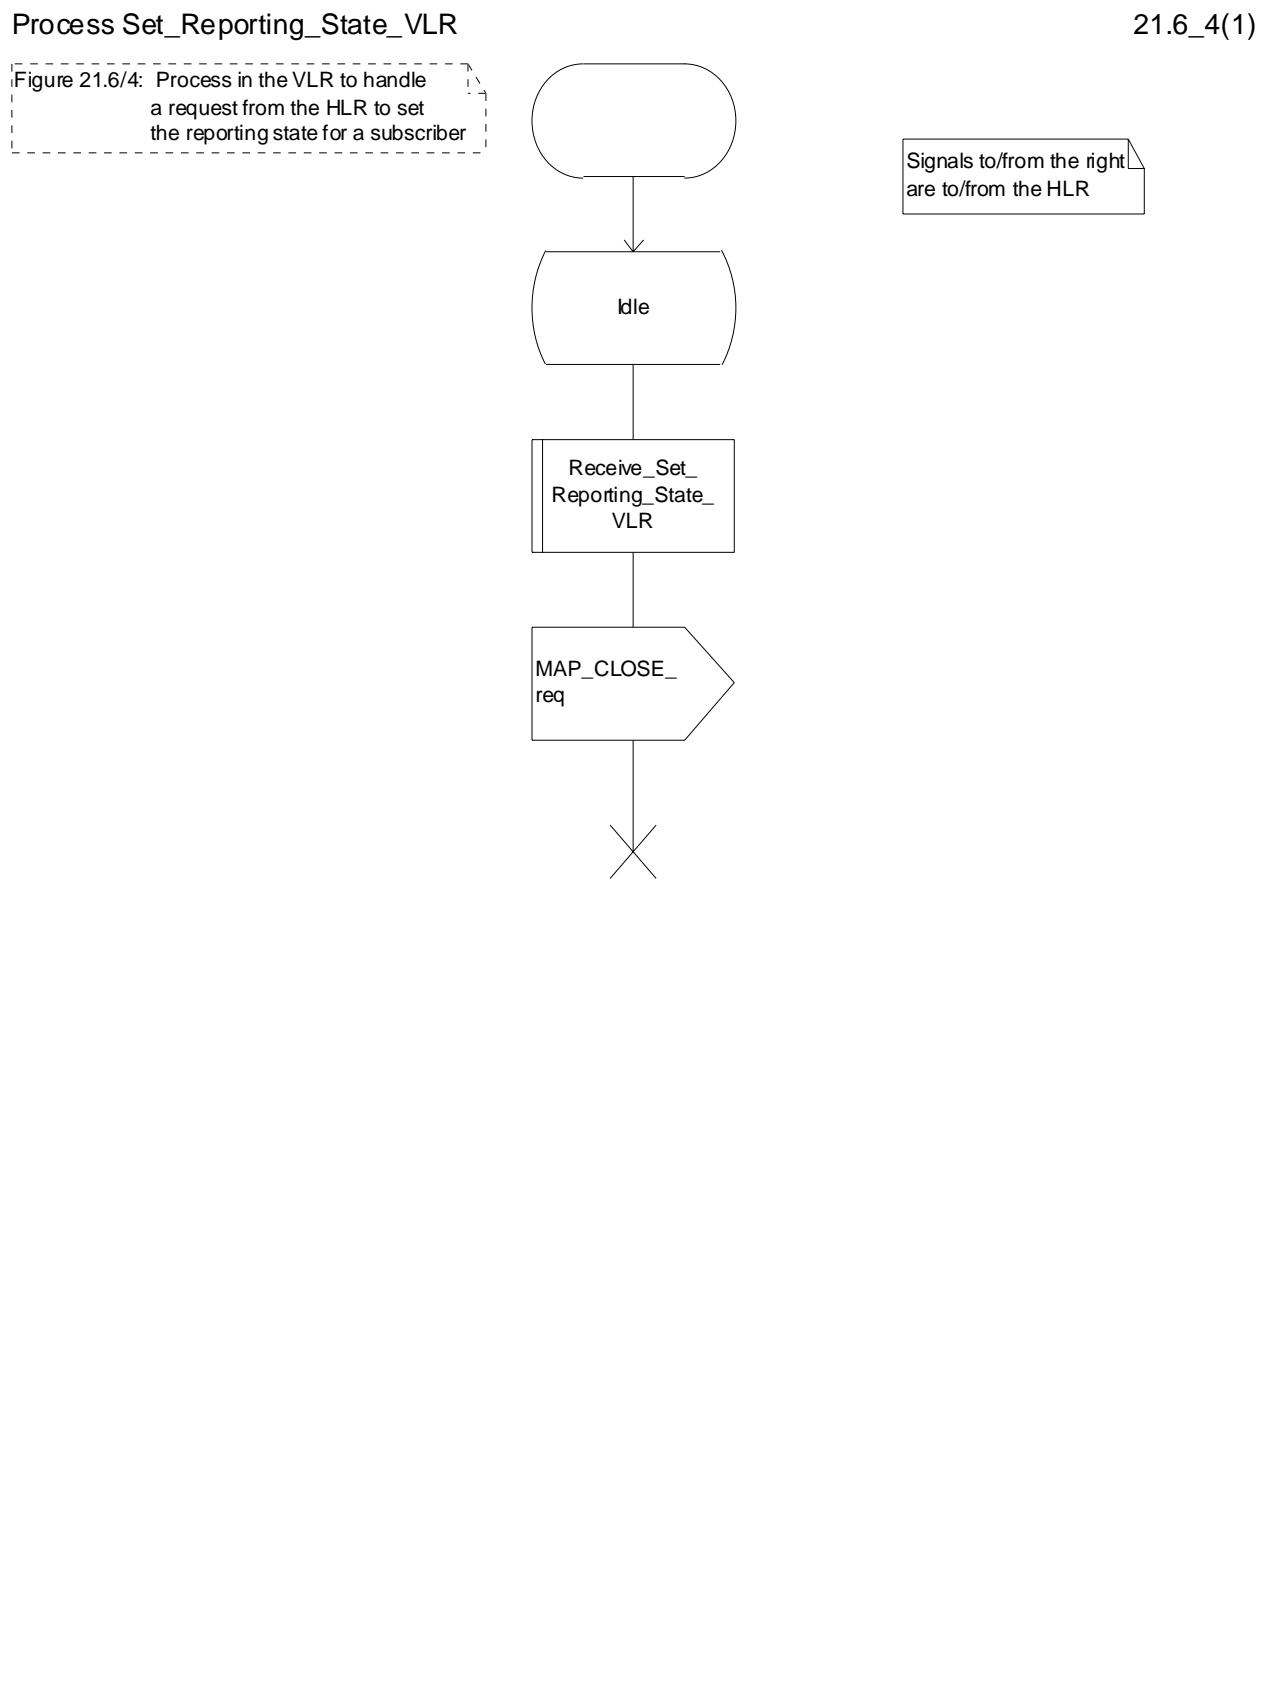
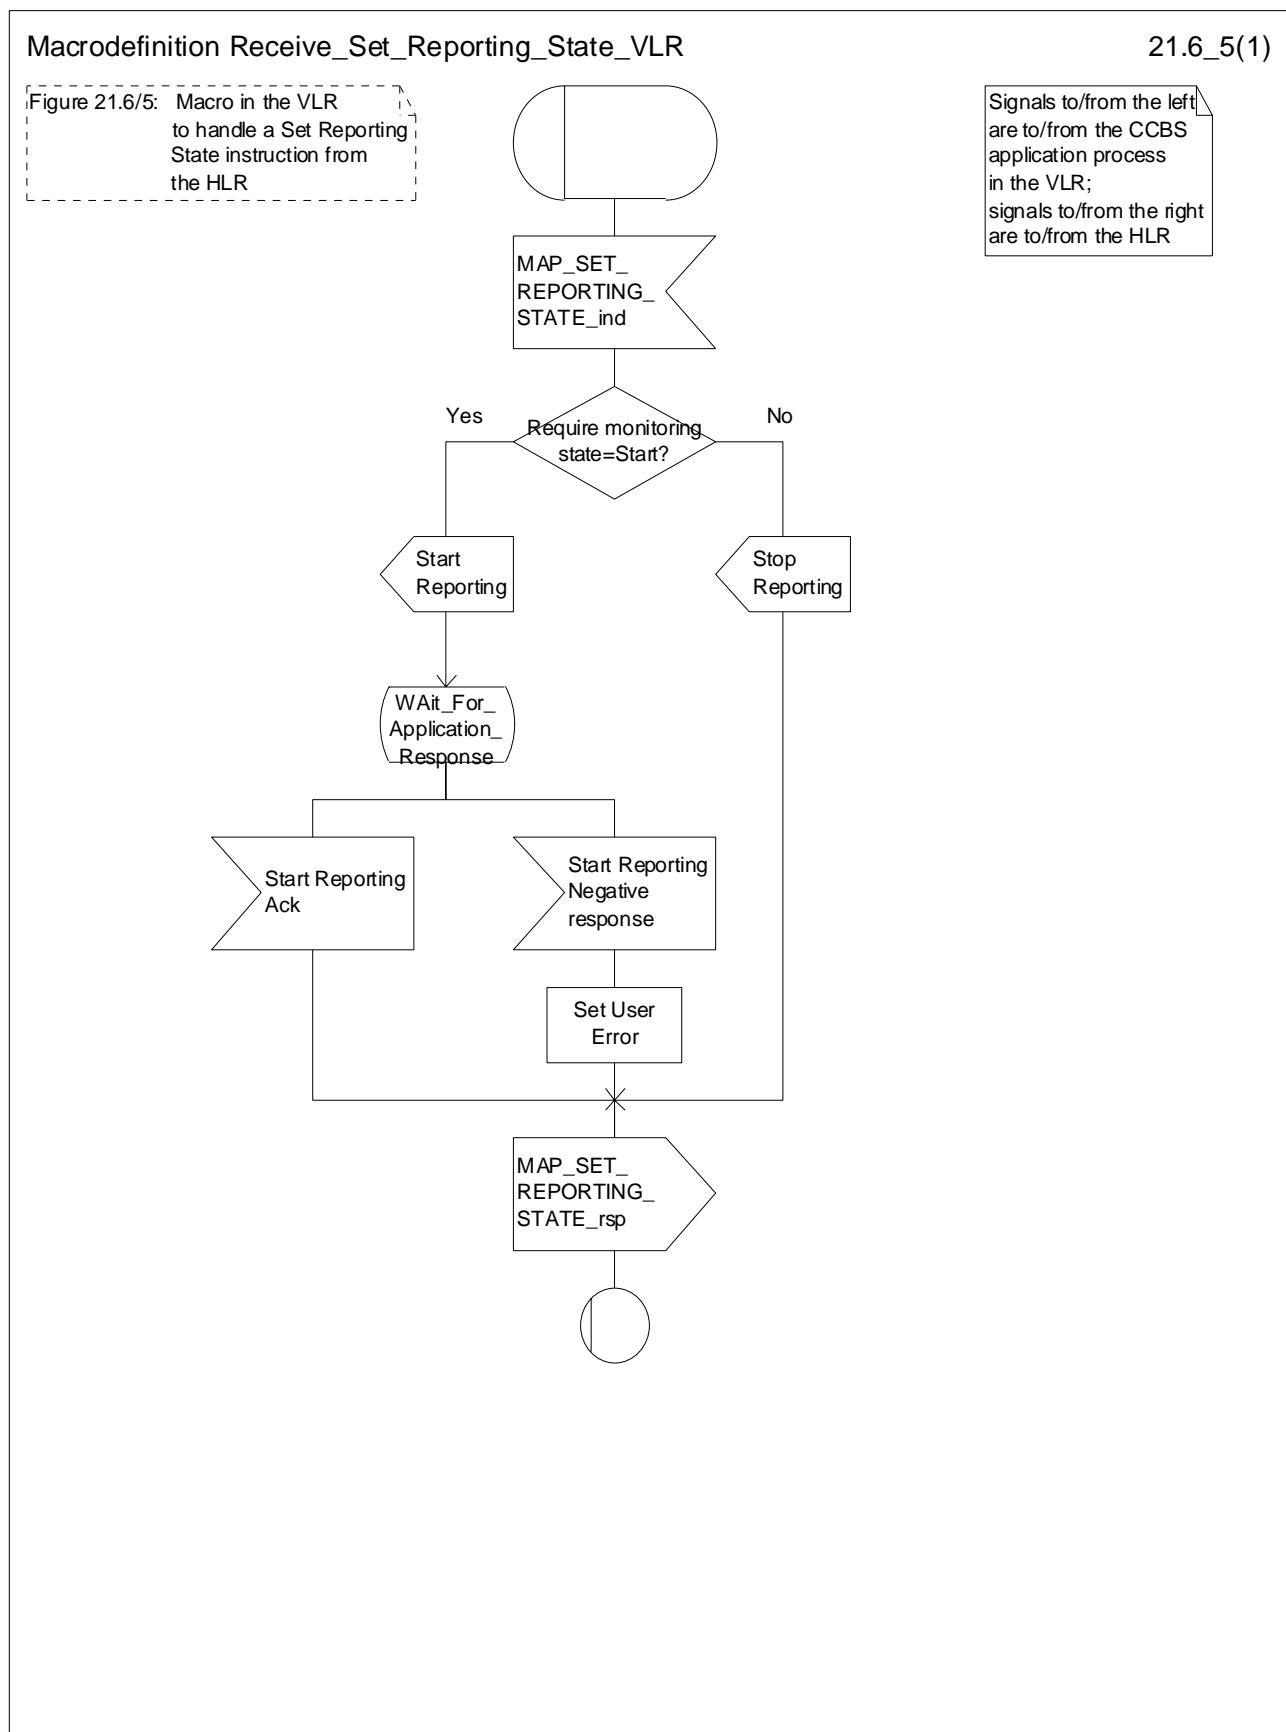



Figure 21.6/4: Process Set\_Reportng\_State\_VLR

**Figure 21.6/5: Macro Receive\_Set\_Reportin g\_ State\_VLR**


## 21.7 Status Reporting

### 21.7.1 General

The message flows for reporting the status of a subscriber are shown in figures 21.7/1 and 21.7/2.

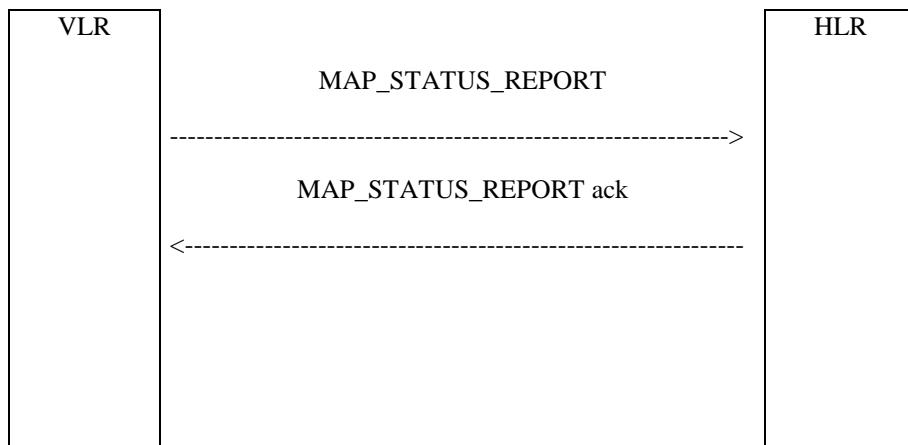

**Figure 21.7/1: Status reporting, when monitoring continues in the VLR**

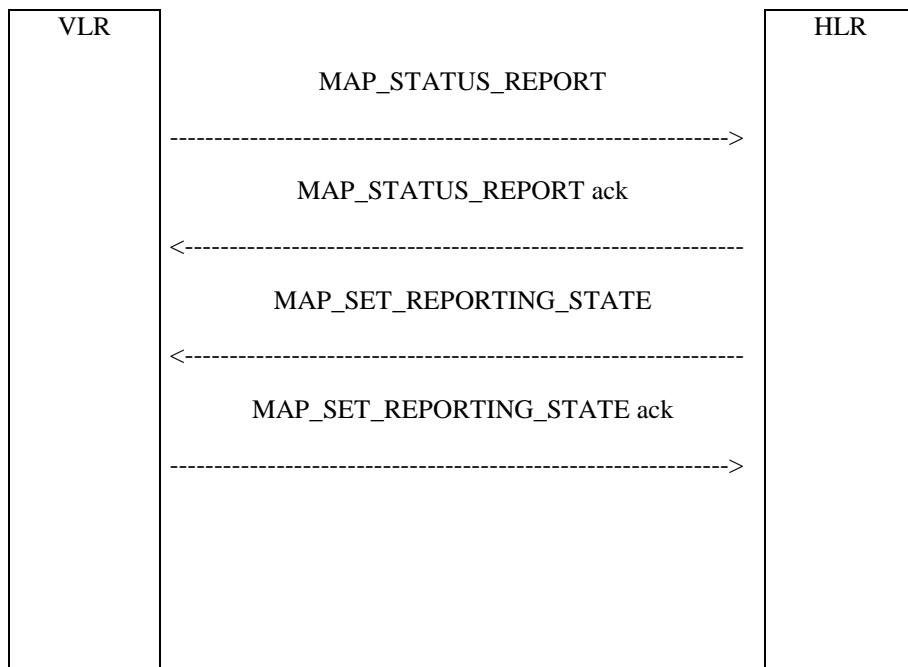

**Figure 21.7/2: Status reporting, when monitoring stops**

When the HLR sends a MAP\_SET\_REPORTING\_STATE, it requests the stop of monitoring in the VLR.

### 21.7.2 Process in the VLR for Status Reporting

The MAP process in the VLR to send a status report to the HLR is shown in figure 21.7/3. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Cnf see clause 25.1.2;

Check\_Confirmation see clause 25.2.2.

## **Successful Outcome**

When the MAP process receives a Event Report or CCBS Call Report from the CCBS application process in the VLR, it requests a dialogue with the HLR whose identity is contained in the request by sending a MAP\_OPEN service request, and requests status report using a MAP\_STATUS\_REPORT service request. The VLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_STATUS\_REPORT service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends an Event Report ack or a CCBS Call Report ack containing the information received from the HLR to the CCBS application process in the VLR and waits for a possible instruction from the HLR to set the reporting state.

If the HLR requests the VLR to set a reporting state (in the macro Receive\_Set\_Reporting\_State\_VLR), the VLR closes the dialogue with the HLR by sending a MAP CLOSE to the HLR.

If the HLR requires monitoring in the VLR to continue, it closes the dialogue by sending a MAP\_CLOSE, and the MAP process in the VLR sends Continue Monitoring message to the CCBS application process in the VLR and returns to the idle state.

## **Failure of dialogue opening with the HLR**

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a Event Report negative response or CCBS Call Report negative response to the CCBS application process in the VLR and returns to the idle state.

## **Error in MAP\_STATUS\_REPORT confirm**

If the MAP\_STATUS\_REPORT service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends an Event Report negative response or CCBS Call Report negative response to the CCBS application process in the VLR and returns to the idle state.

## **Abort of HLR dialogue in State Wait\_For\_HLR\_Response**

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a Event Report or CCBS Call Report negative response to the CCBS application process in the VLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR. The VLR sends an Event Report negative response or CCBS Call Report negative response indicating system failure to the CCBS application process in the VLR and returns to the idle state.

## **Abort of HLR dialogue in State Wait\_For\_Set\_Reporting**

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the VLR returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR and returns to the idle state.

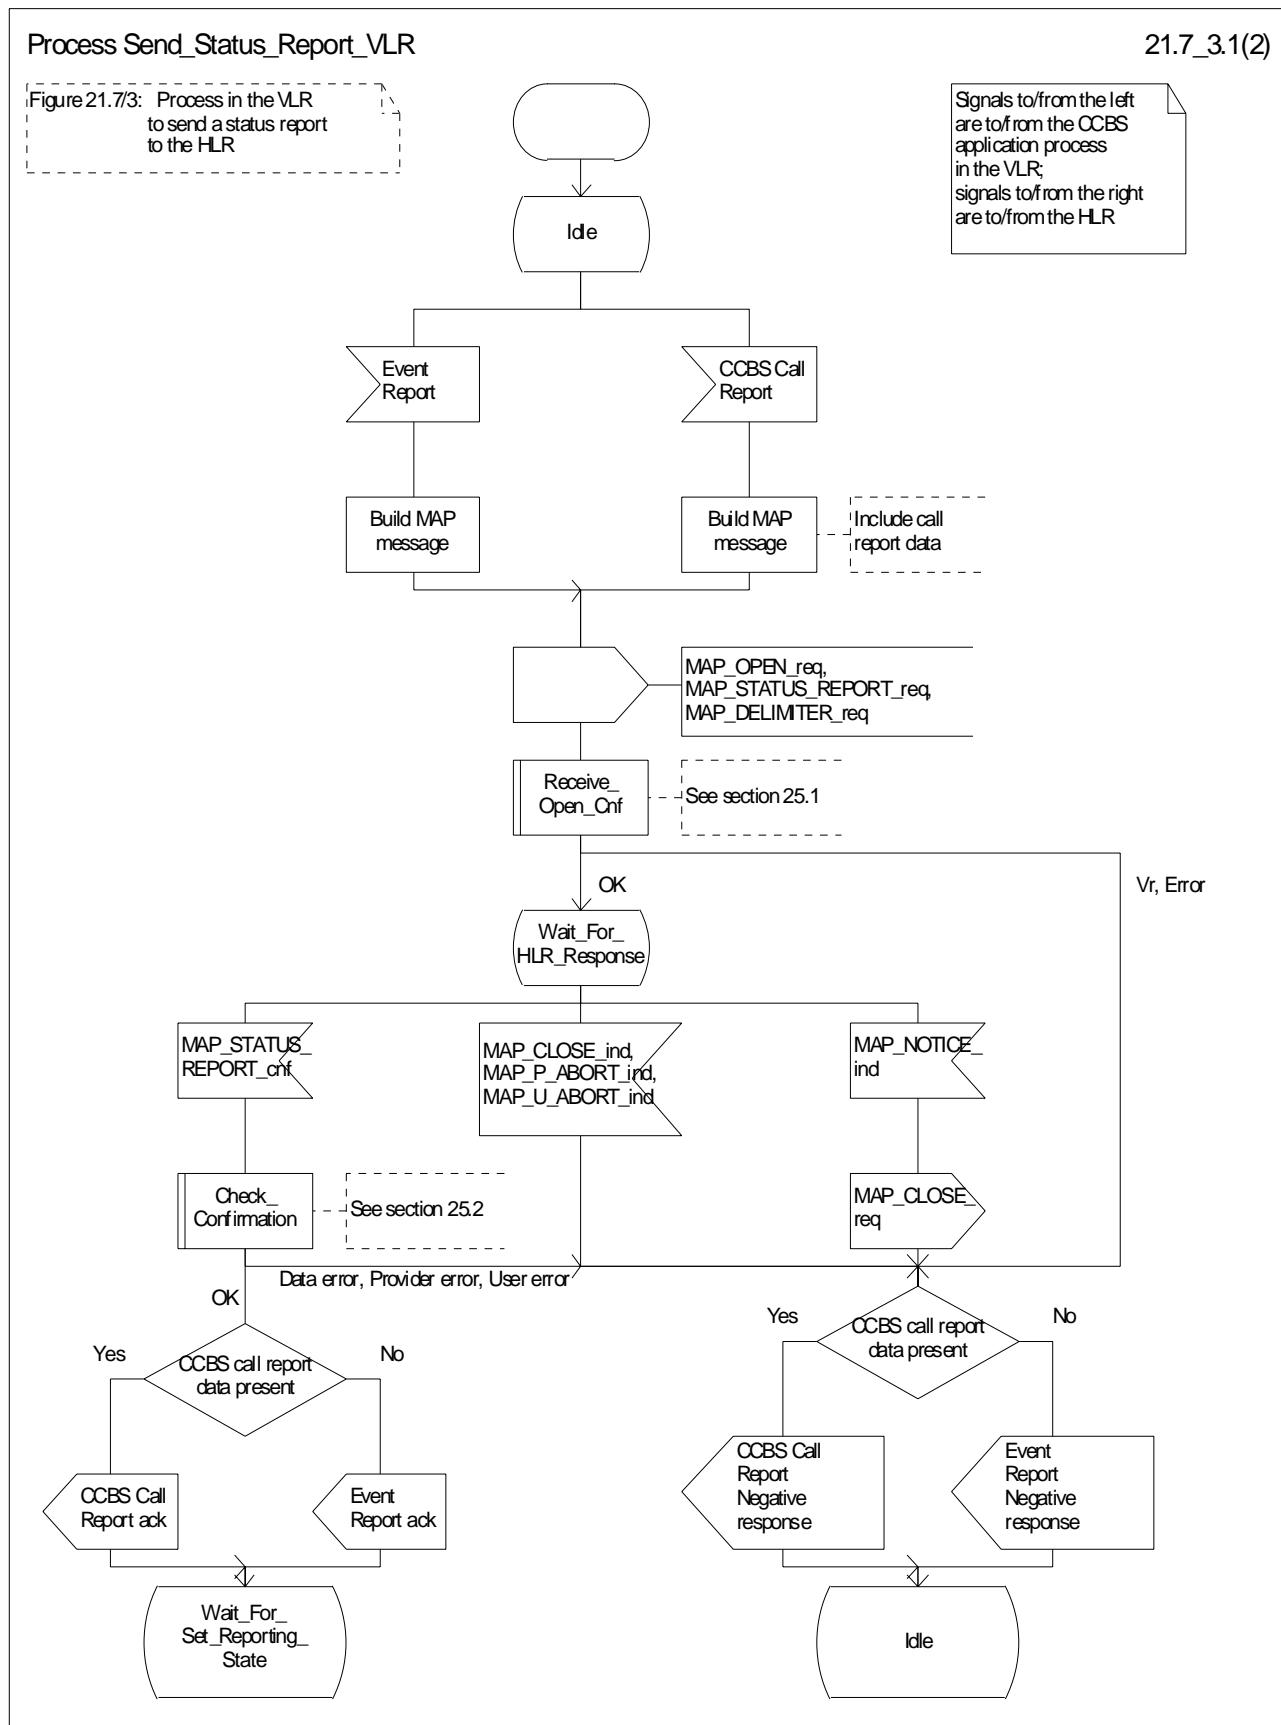


Figure 21.7/3 (sheet 1 of 2): Process Send\_Status\_Report\_VLR

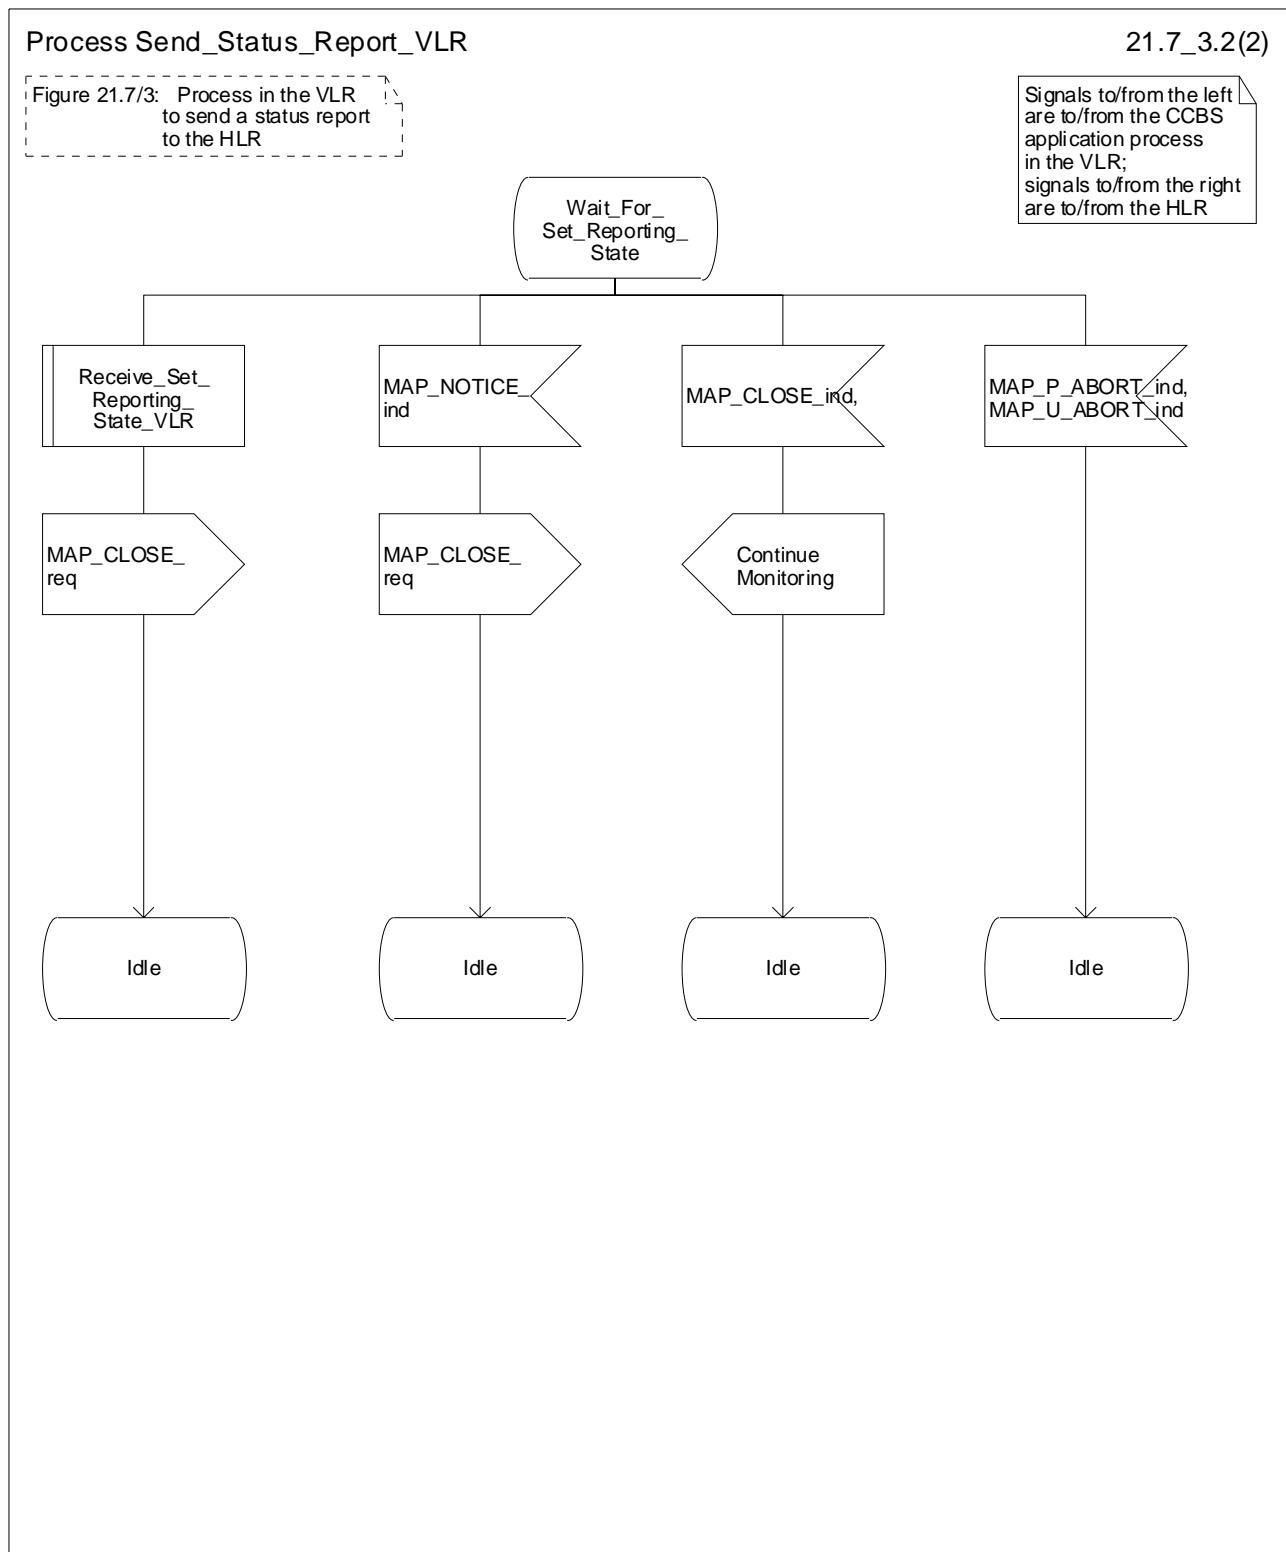


Figure 21.7/3 (sheet 2 of 2): Process Send\_Status\_Report\_VLR

### 21.7.3 Process in the HLR for Status Reporting

The MAP process in the HLR to handle a status report is shown in figure 21.7/4. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- |                    |                    |
|--------------------|--------------------|
| Receive_Open_Ind   | see clause 25.1.1; |
| Check_Confirmation | see clause 25.2.2. |

#### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context reporting, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

The MAP process invokes the macro Receive\_Status\_Report\_HLR to handle a MAP\_STATUS\_REPORT service indication; this macro is defined in figure 21.7/5. The MAP process then waits for a response from the CCBS application in the HLR.

If the MAP process receives a Stop Reporting message from the CCBS process, it sets the required monitoring state to stop, and may send a MAP\_DELIMITER service request to the VLR. The HLR then invokes the macro Set\_Reported\_State\_HLR. After exiting the macro, the MAP process returns to the idle state.

If the MAP process receives a Continue Monitoring from the CCBS process, it sends a MAP CLOSE Request to VLR and returns to the idle state.

#### **Failure of dialogue opening with the VLR**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

#### **Abort of VLR dialogue in State Wait\_For\_Service\_Indication**

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication. In this case, the MAP process returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the VLR and returns to the idle state.

#### **Macro Receive\_Status\_Report\_HLR**

The macro Receive\_Status\_Report\_HLR is shown in figure 21.7/5.

When a MAP\_STATUS\_REPORT service indication is received, the HLR checks whether call report data are present.

If call report data are present, the MAP process sends a CCBS Call Report message to the CCBS application process in the HLR and waits for a response; otherwise it sends an Event Report message to the CCBS application process in the HLR and waits for a response.

If the MAP process receives a CCBS Call Report ack or Event Report ack from the CCBS application process in the HLR, it sends a MAP\_STATUS\_REPORT service confirm to the VLR and exits from the macro.

If the MAP process receives a CCBS Call Report negative response or Event Report negative response from the CCBS application process in the HLR, it sets the User Error according to the negative response, sends a MAP\_STATUS\_REPORT service confirm to the VLR and exits from the macro.

#### **Macro Set\_Reported\_State\_HLR**

The macro Set\_Reported\_State\_HLR is shown in figure 21.7/6.

The MAP process in the HLR sends a MAP\_SET\_REPORTING\_STATE service request to the VLR and waits for a response.

If the MAP process receives a MAP\_SET\_REPORTING\_STATE service confirm from the VLR, it invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the macro Set\_Reportng\_State\_HLR takes the OK exit.

If the macro Check\_Confirmation takes the Data error, Provider error or User error exit, the macro Set\_Reportng\_State\_HLR takes the Error exit.

While the MAP process is waiting for a response from the VLR, the MAP provider may terminate the dialogue by sending a MAP\_CLOSE, MAP\_P\_ABORT or MAP\_U\_ABORT. In this case the macro takes the Aborted exit.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the VLR and the macro takes the Aborted exit.

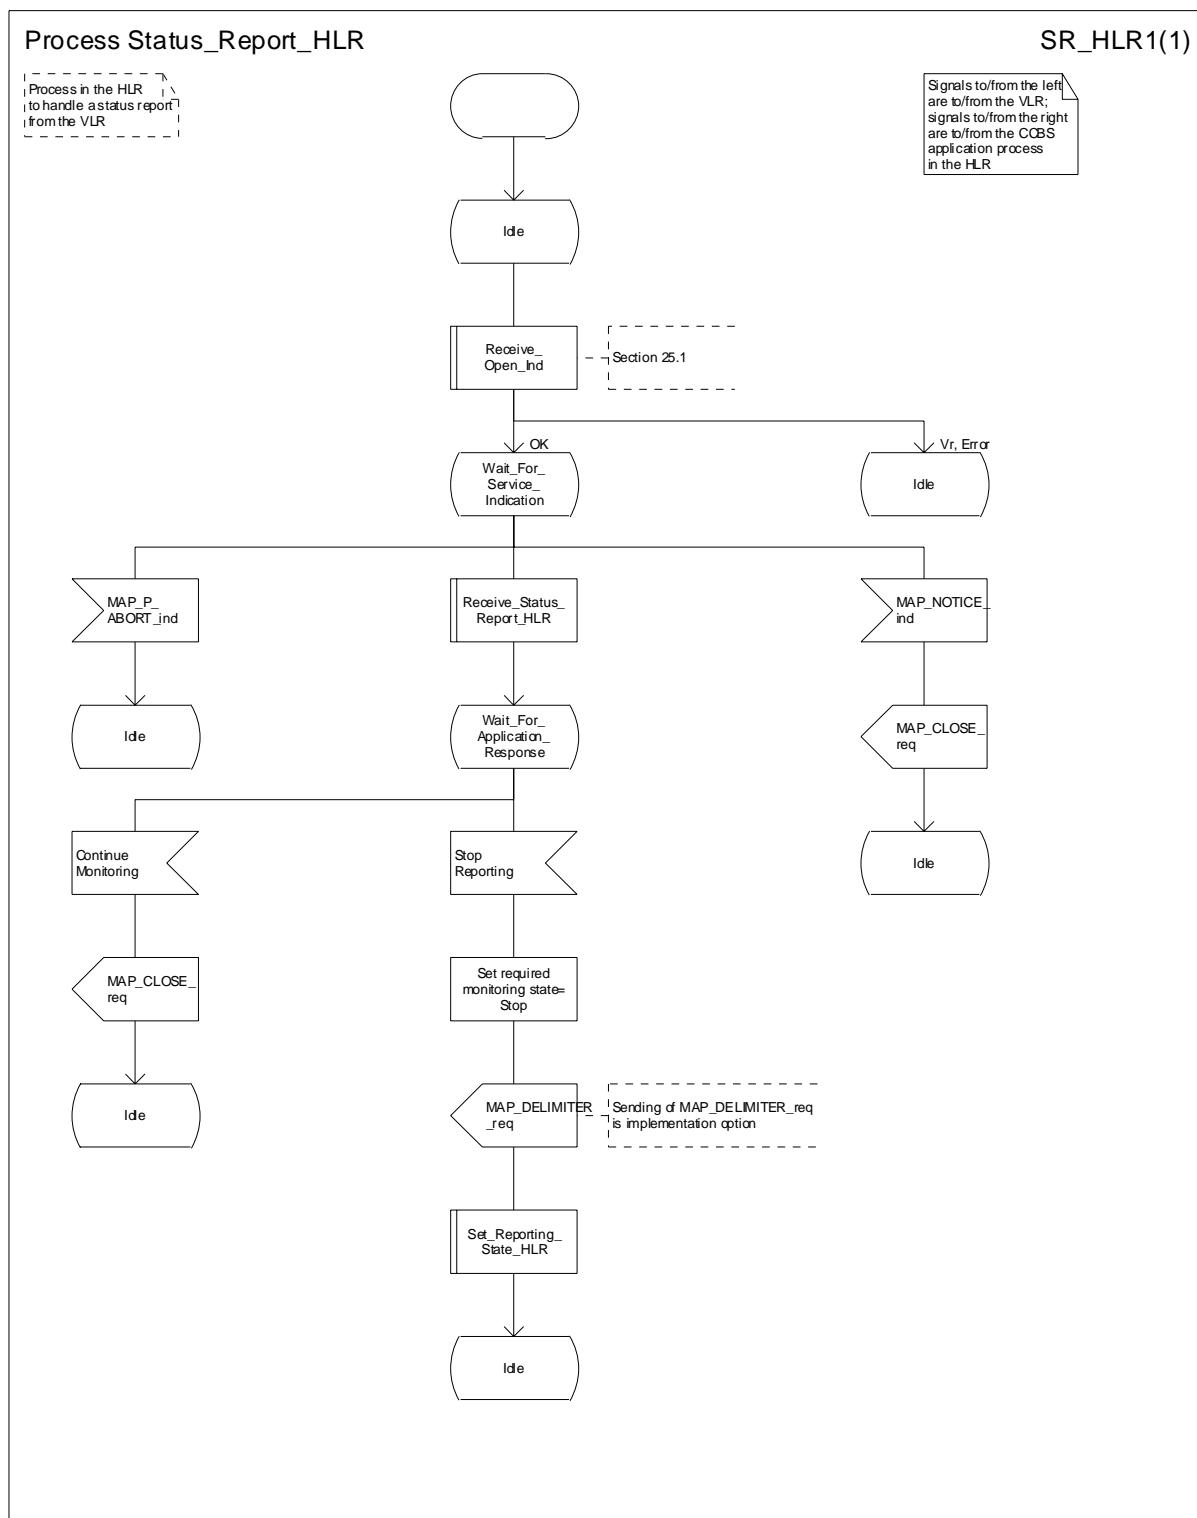


Figure 21.7/4: Process Status Report\_HLR

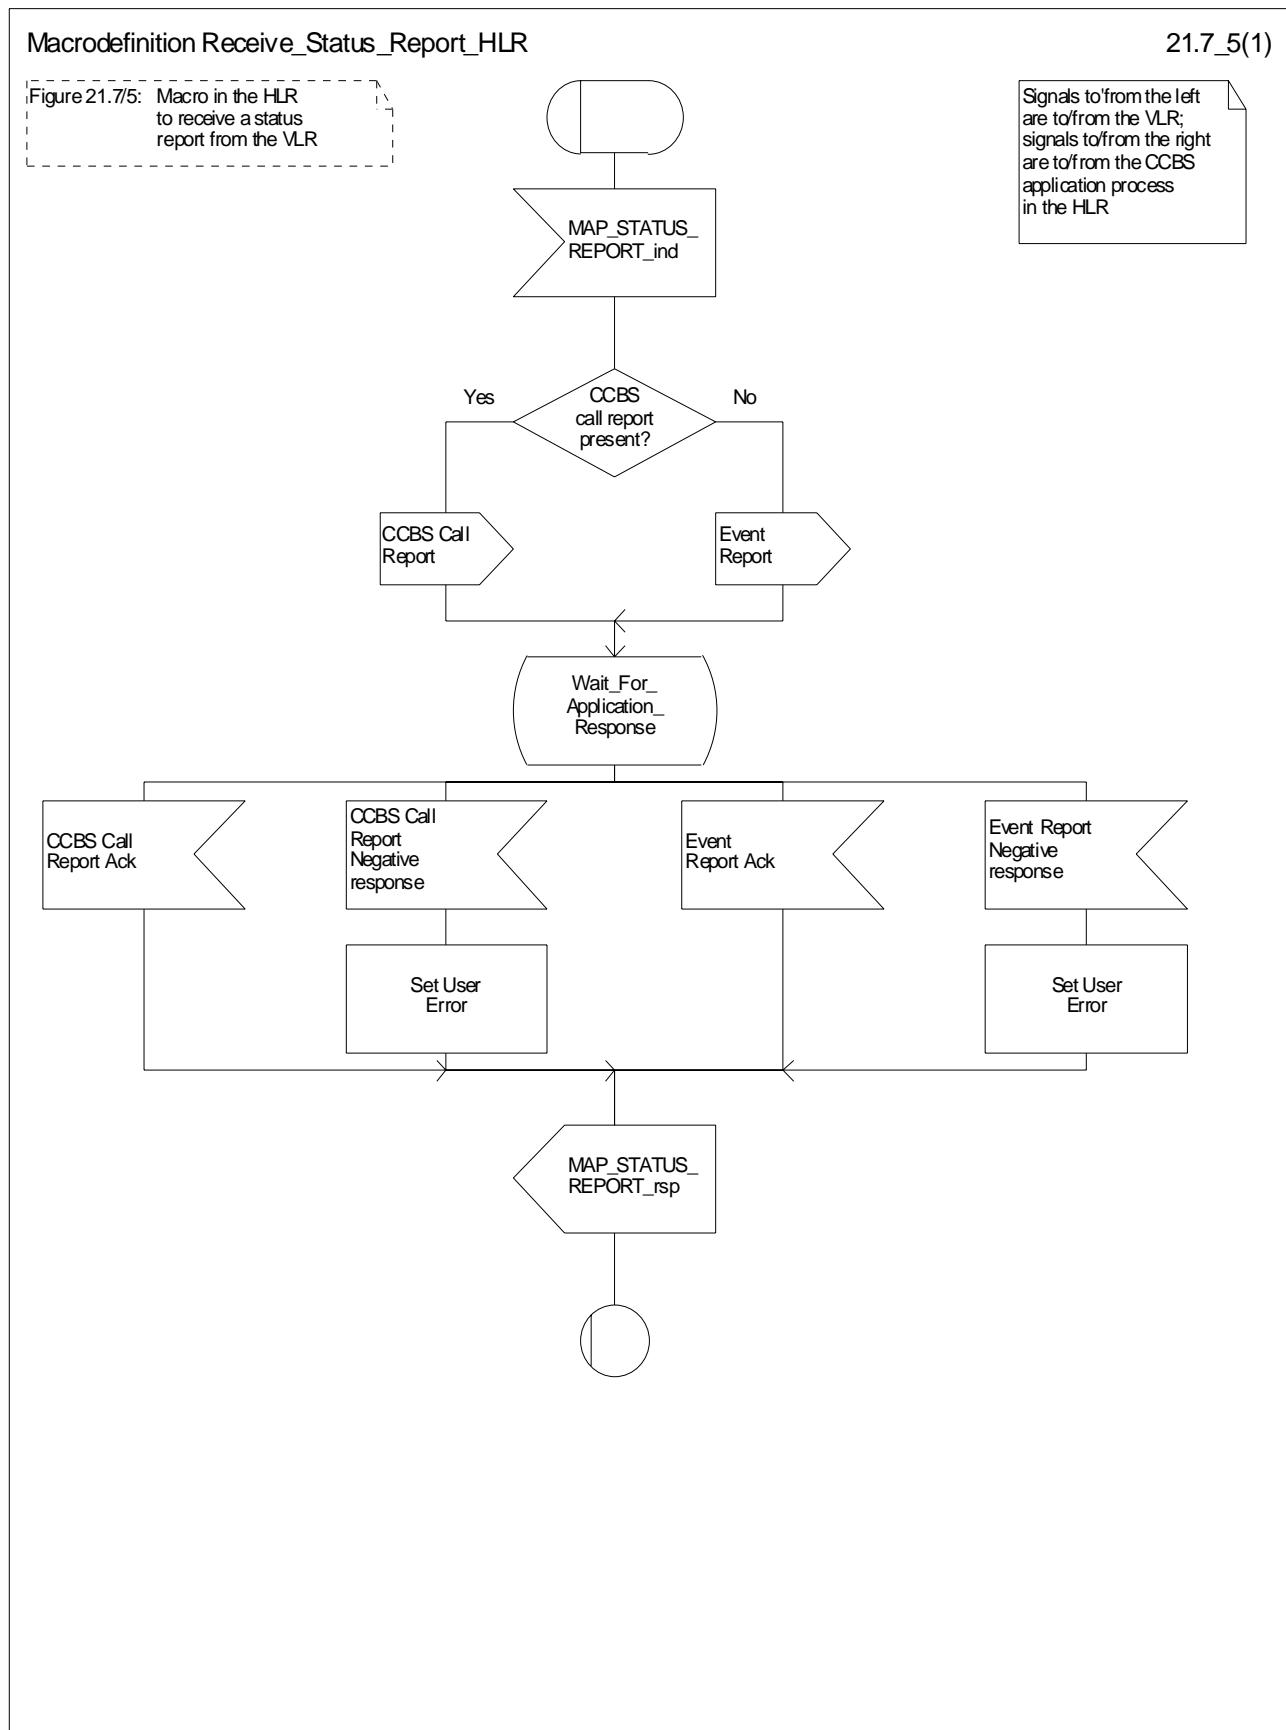
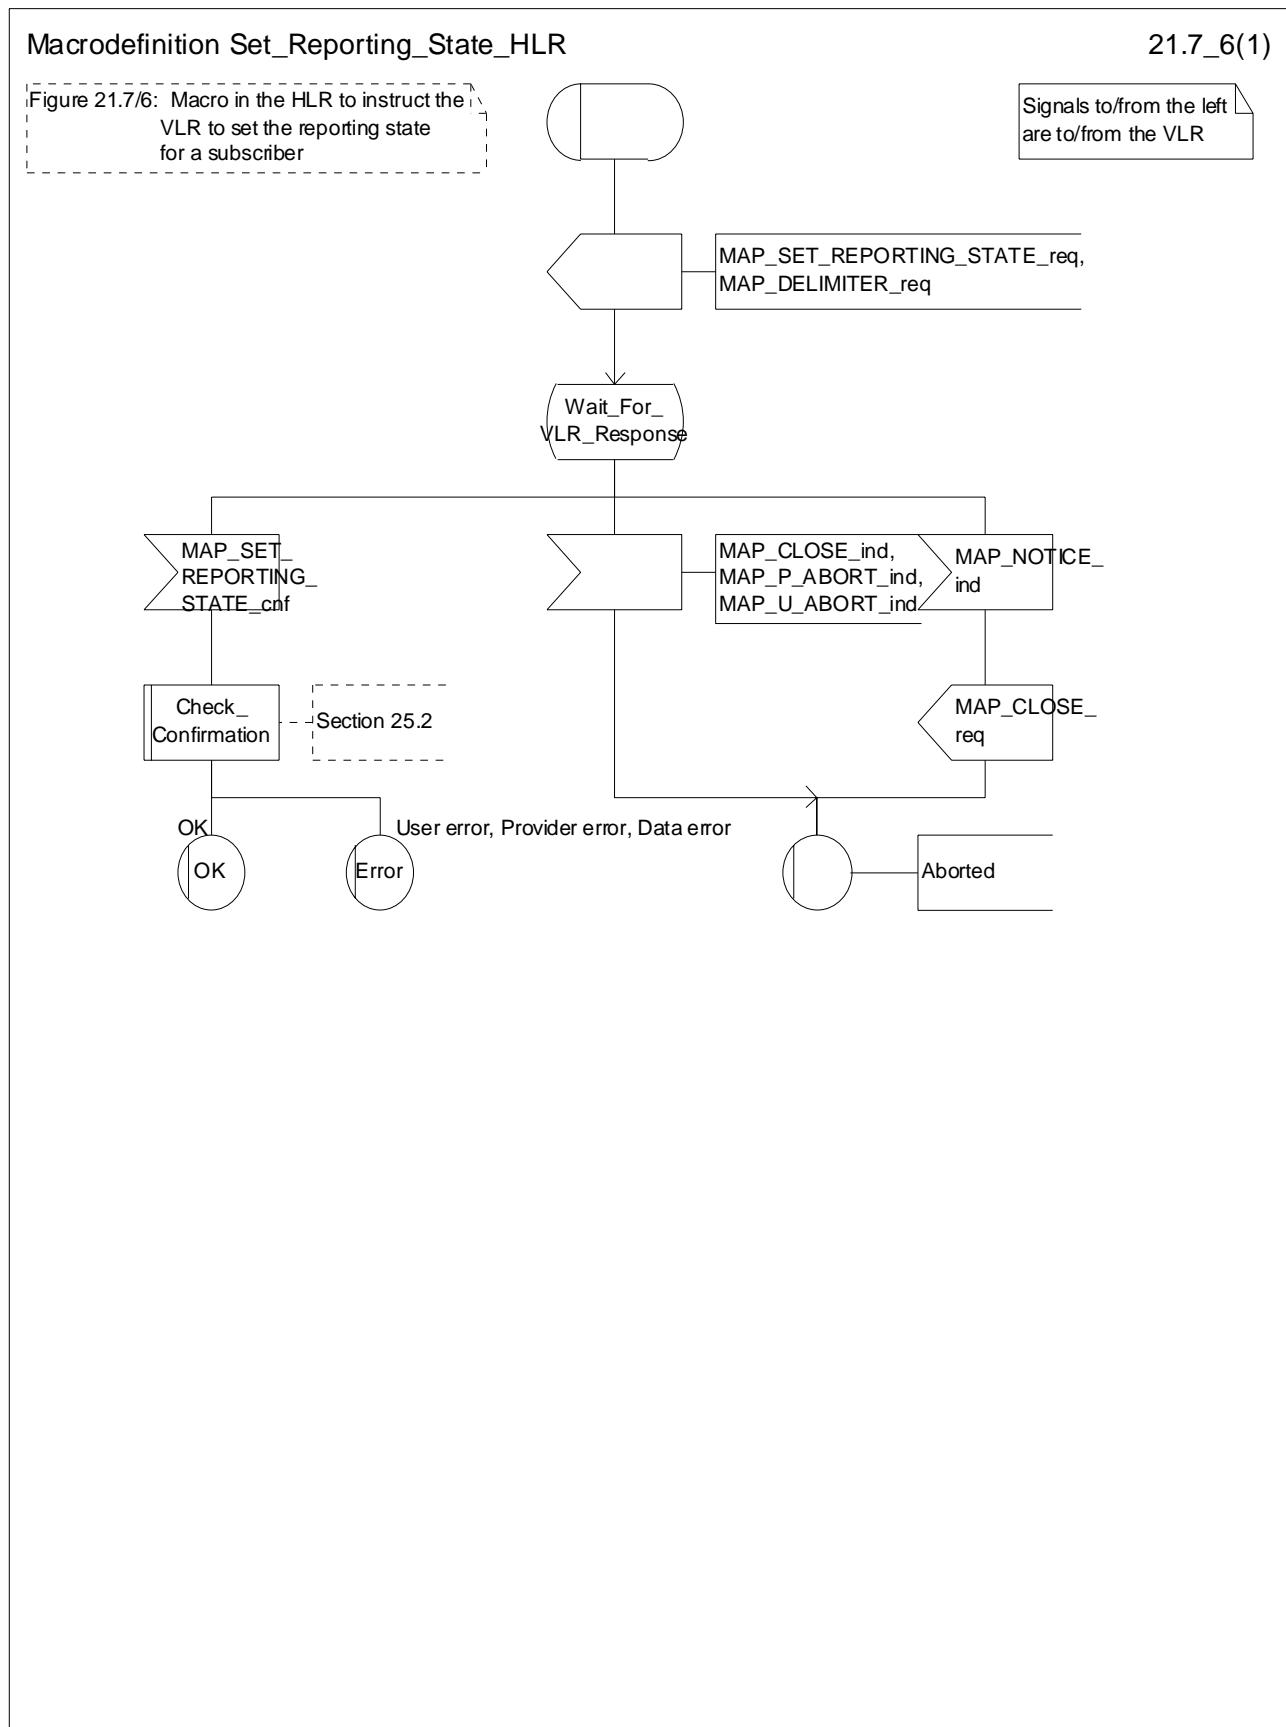



Figure 21.7/5: Macro Receive\_Status\_Report\_HLR

**Figure 21.7/6: Macro Set\_Reportin g\_State\_HLR**


## 21.8 Remote User Free

### 21.8.1 General

The message flows for handling remote user free are shown in figures 21.8/1 and 21.8/2.

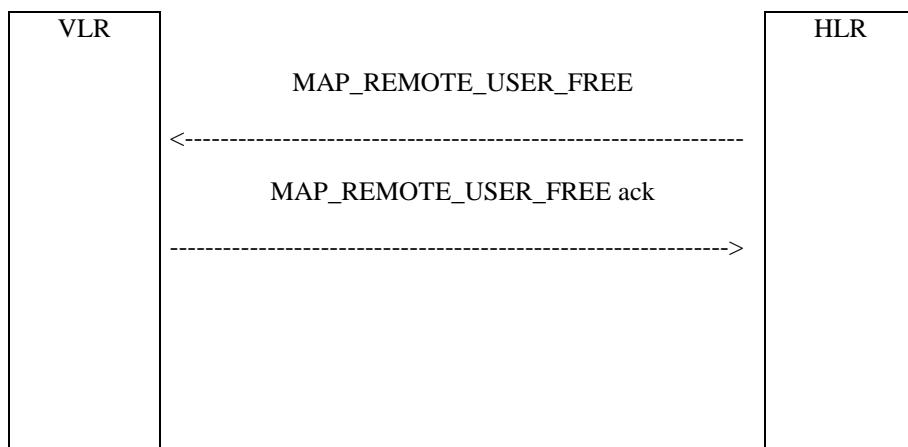

**Figure 21.8/1: Remote User Free: recall not accepted**

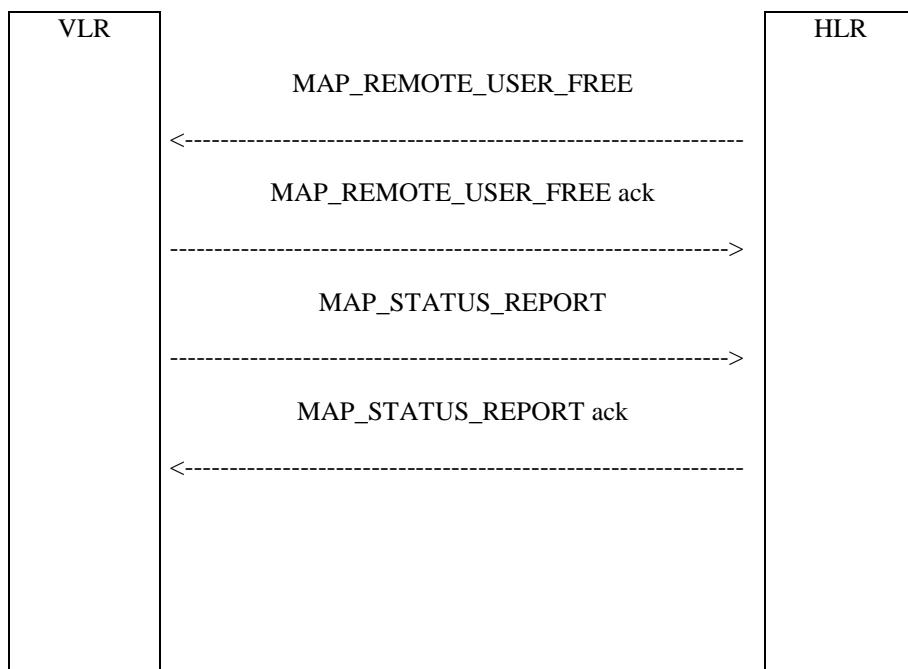

**Figure 21.8/2: Remote User Free: recall accepted**

### 21.8.2 Process in the HLR for Remote User Free

The MAP process in the HLR to handle Remote User Free is shown in figure 21.8/3. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Cnf see clause 25.1.2;

Check\_Confirmation see clause 25.2.2.

#### Successful Outcome

When the MAP process receives a CCBS RUF request from the CCBS application process in the HLR, it requests a dialogue with the VLR whose identity is contained in the request by sending a MAP\_OPEN service request and sending the necessary information using a MAP\_REMOTE\_USER\_FREE service request. The HLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the VLR.

If the MAP process receives a MAP\_REMOTE\_USER\_FREE service confirm from the VLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a CCBS RUF ack containing the information received from the VLR to the CCBS application process in the HLR and waits for a MAP\_STATUS\_REPORT service indication from the VLR. If in this state a MAP\_CLOSE service indication is received, the MAP process returns to the idle state. If in this state a MAP\_STATUS\_REPORT service indication is received, further processing is described by the macro Receive\_Status\_Report\_HLR (described in clause 21.7.3). When the macro exits, the MAP process constructs a MAP\_CLOSE service request, sends it to the VLR and returns to the idle state.

### **Failure of dialogue opening with the VLR**

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the CCBS application process in the HLR and returns to the idle state.

### **Error in MAP\_REMOTE\_USER\_FREE confirm**

If the MAP\_REMOTE\_USER\_FREE service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a CCBS RUF negative response to the CCBS application process in the HLR and returns to the idle state.

### **Abort of VLR dialogue**

When the MAP process is waiting for a VLR response to the MAP\_REMOTE\_USER\_FREE, the MAP service provider may abort the dialogue by issuing a MAP\_CLOSE, a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a CCBS RUF negative response to the CCBS application process in the HLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication when the MAP process is waiting for a VLR response to the MAP\_REMOTE\_USER\_FREE, the MAP process closes the dialogue with the VLR, sends a CCBS RUF negative response indicating system failure to the CCBS application process in the HLR and returns to the idle state.

When the MAP process is waiting for a possible MAP\_STATUS\_REPORT from the VLR, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication when the MAP process is waiting for a possible MAP\_STATUS\_REPORT from the VLR, the MAP process closes the dialogue with the VLR and returns to the idle state.

If the CCBS application in the HLR decides to abort the dialogue, it sends an Abort message to the MAP process, which closes the dialogue with the VLR and returns to the idle state.

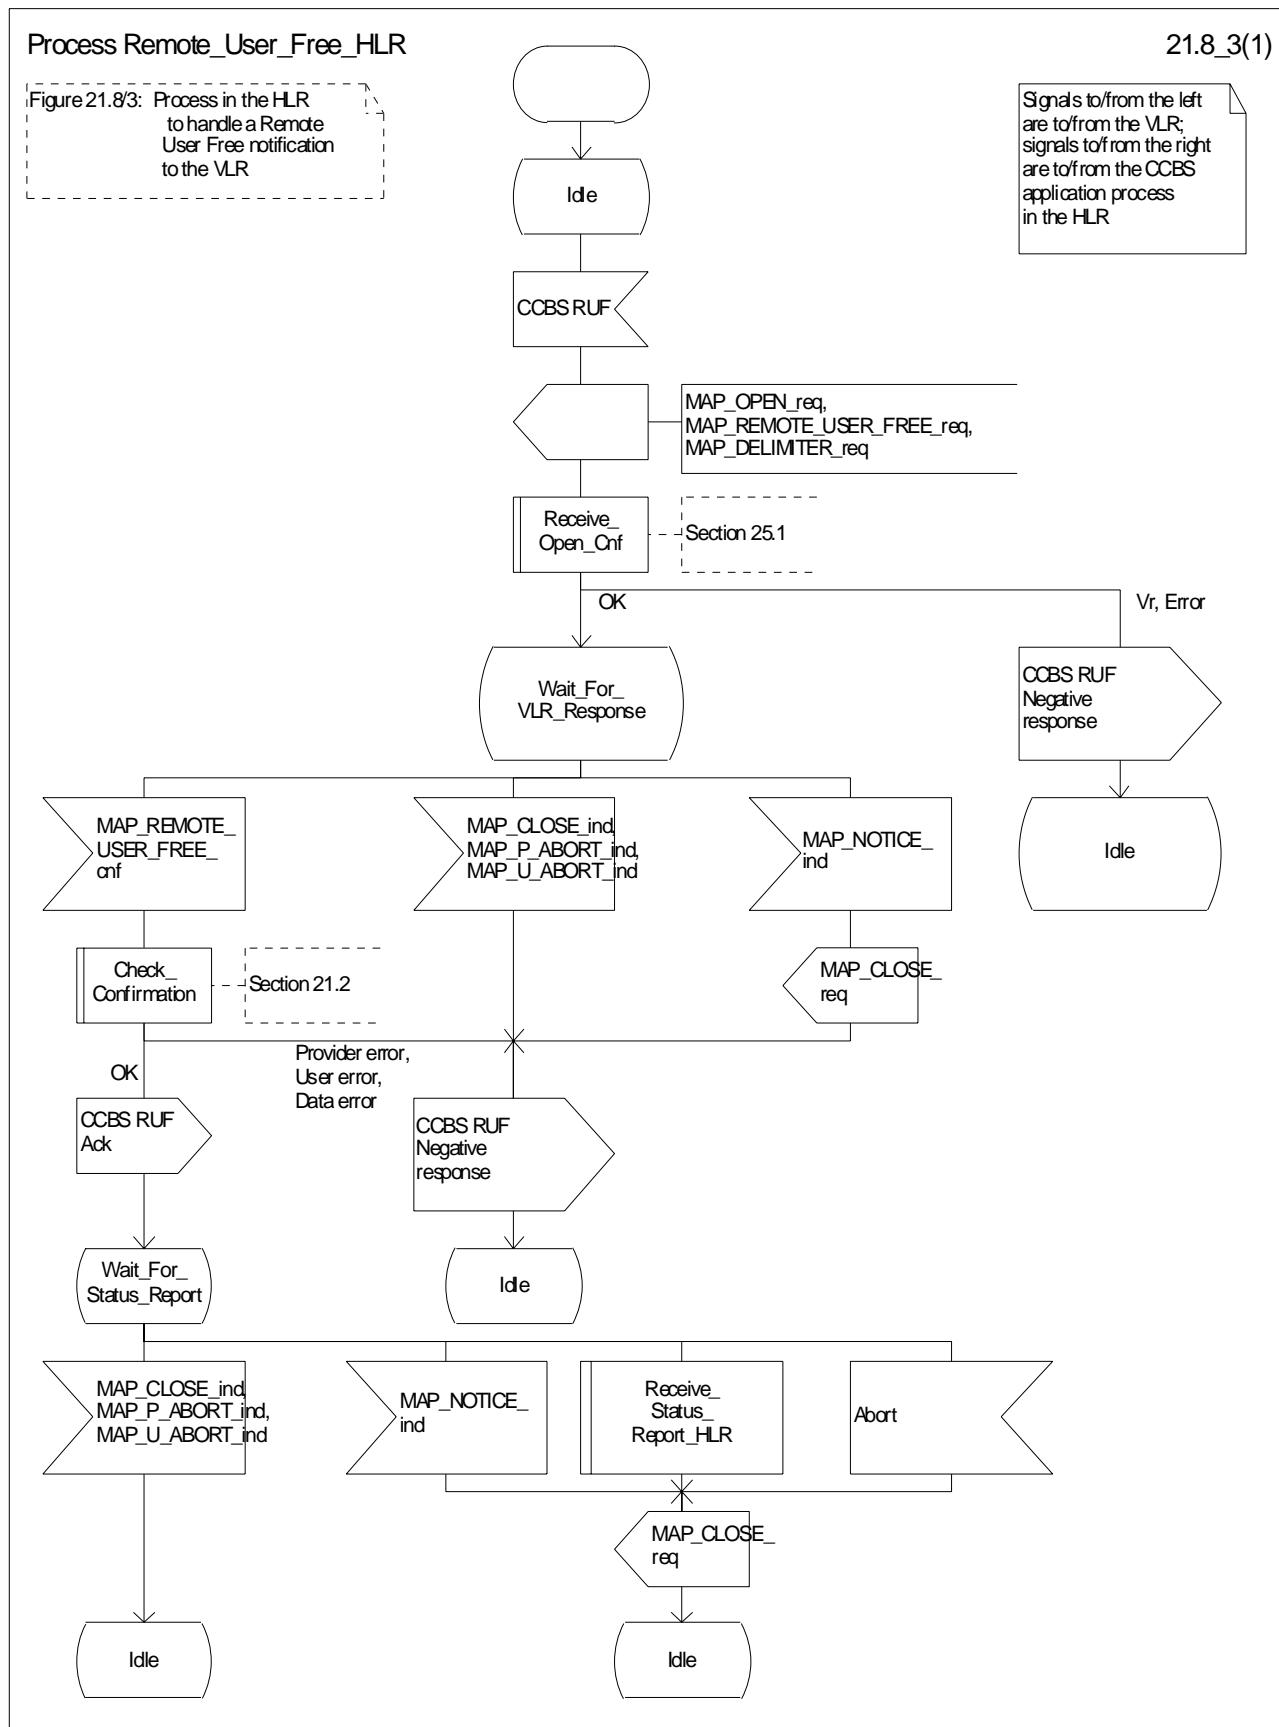


Figure 21.8/3: Process Remote\_User\_Free\_HLR

### 21.8.3 Process in the VLR for Remote User Free

The MAP process in the VLR to handle Remote User Free is shown in figure 21.8/4. The MAP process invokes a macro not defined in this clause; the definitions of this macro can be found as follows:

Check\_Confirmation see clause 25.2.2.

#### **Successful outcome (Recall accepted)**

When the MAP process receives a MAP\_REMOTE\_USER\_FREE service indication, the VLR sends a CCBS RUF request to the CCBS application process in the VLR, and waits for a response. The request contains the parameters received in the MAP\_REMOTE\_USER\_FREE service indication.

If the CCBS application process in the VLR returns a positive response indicating "recall accepted", the MAP process constructs a MAP\_REMOTE\_USER\_FREE service response and a MAP\_DELIMITER service request, sends them to the VLR and waits for a CCBS Call Report message from the CCBS application process in the VLR. When the MAP process receives the CCBS Call Report from the CCBS application process in the VLR, it constructs a MAP\_STATUS\_REPORT service request and a MAP\_DELIMITER service request, sends them to the HLR and waits for a response. If the MAP process receives a MAP\_STATUS\_REPORT service confirm, the VLR calls the macro Check\_Confirmation. If this macro takes the OK exit, the MAP process sends a CCBS Call Report ack to the CCBS application process in the VLR and the MAP process terminates.

#### **Successful outcome (Recall not accepted)**

If the CCBS application process in the VLR returns a positive response indicating "recall not accepted", the MAP process constructs a MAP\_REMOTE\_USER\_FREE service response and a MAP\_CLOSE service request, sends them to the HLR and terminates.

#### **Negative response from VLR CCBS application process**

If the CCBS application process in the VLR returns a negative response, the MAP process constructs a MAP\_REMOTE\_USER\_FREE service response containing the appropriate error and a MAP\_CLOSE service request, sends them to the HLR and terminates.

#### **Failure of dialogue with the HLR**

When waiting for a response or a call result from the CCBS application process in the VLR, the MAP process may receive a MAP\_CLOSE service indication, a MAP\_U\_ABORT service indication or a MAP\_P\_ABORT service indication from the co-ordinating process, in which case the MAP process terminates.

When waiting for a call result from the CCBS application process in the VLR, the MAP process may receive a MAP\_NOTICE indication from the co-ordinating process, in which case the MAP process constructs a MAP\_CLOSE service request, sends it to the co-ordinating process and terminates.

When waiting for a response from the HLR, the MAP process may receive a MAP\_CLOSE indication, a MAP\_U\_ABORT indication or a MAP\_P\_ABORT indication from the co-ordinating process, in which case the MAP process sends a CCBS Call Report negative response to the CCBS application process in the VLR and terminates.

When waiting for a response from the HLR, the MAP process may receive a MAP\_NOTICE indication from the co-ordinating process, in which case the MAP process constructs a MAP\_CLOSE service request, sends it to the co-ordinating process, sends a CCBS Call Report negative response to the CCBS application process in the VLR and terminates.

#### **Error in MAP\_STATUS\_REPORT confirm**

If the MAP\_STATUS\_REPORT service confirm contains a user error or a provider error, the MAP process sends a CCBS Call Report negative response to the CCBS application process in the VLR and terminates.

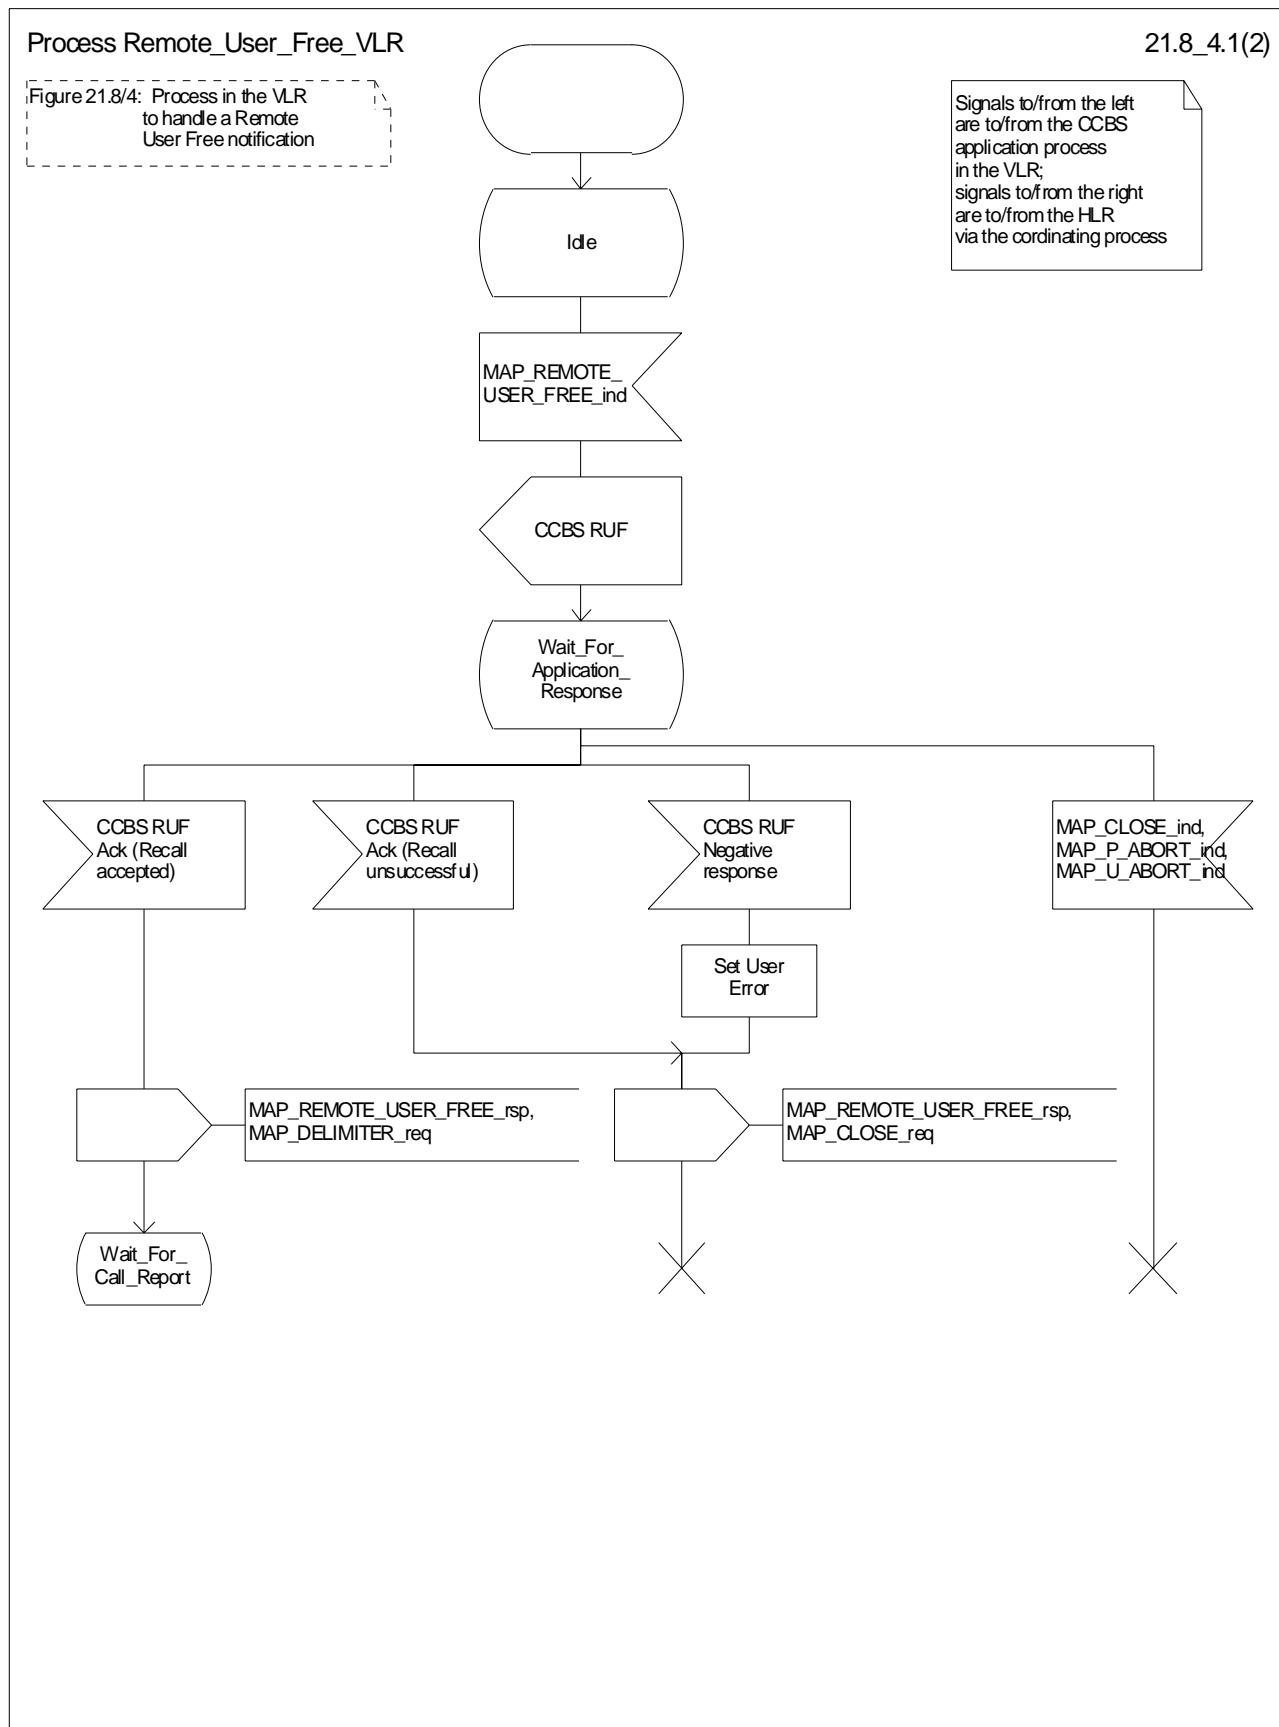


Figure 21.8/4 (sheet 1 of 2): Process Remote\_User\_Free\_VLR

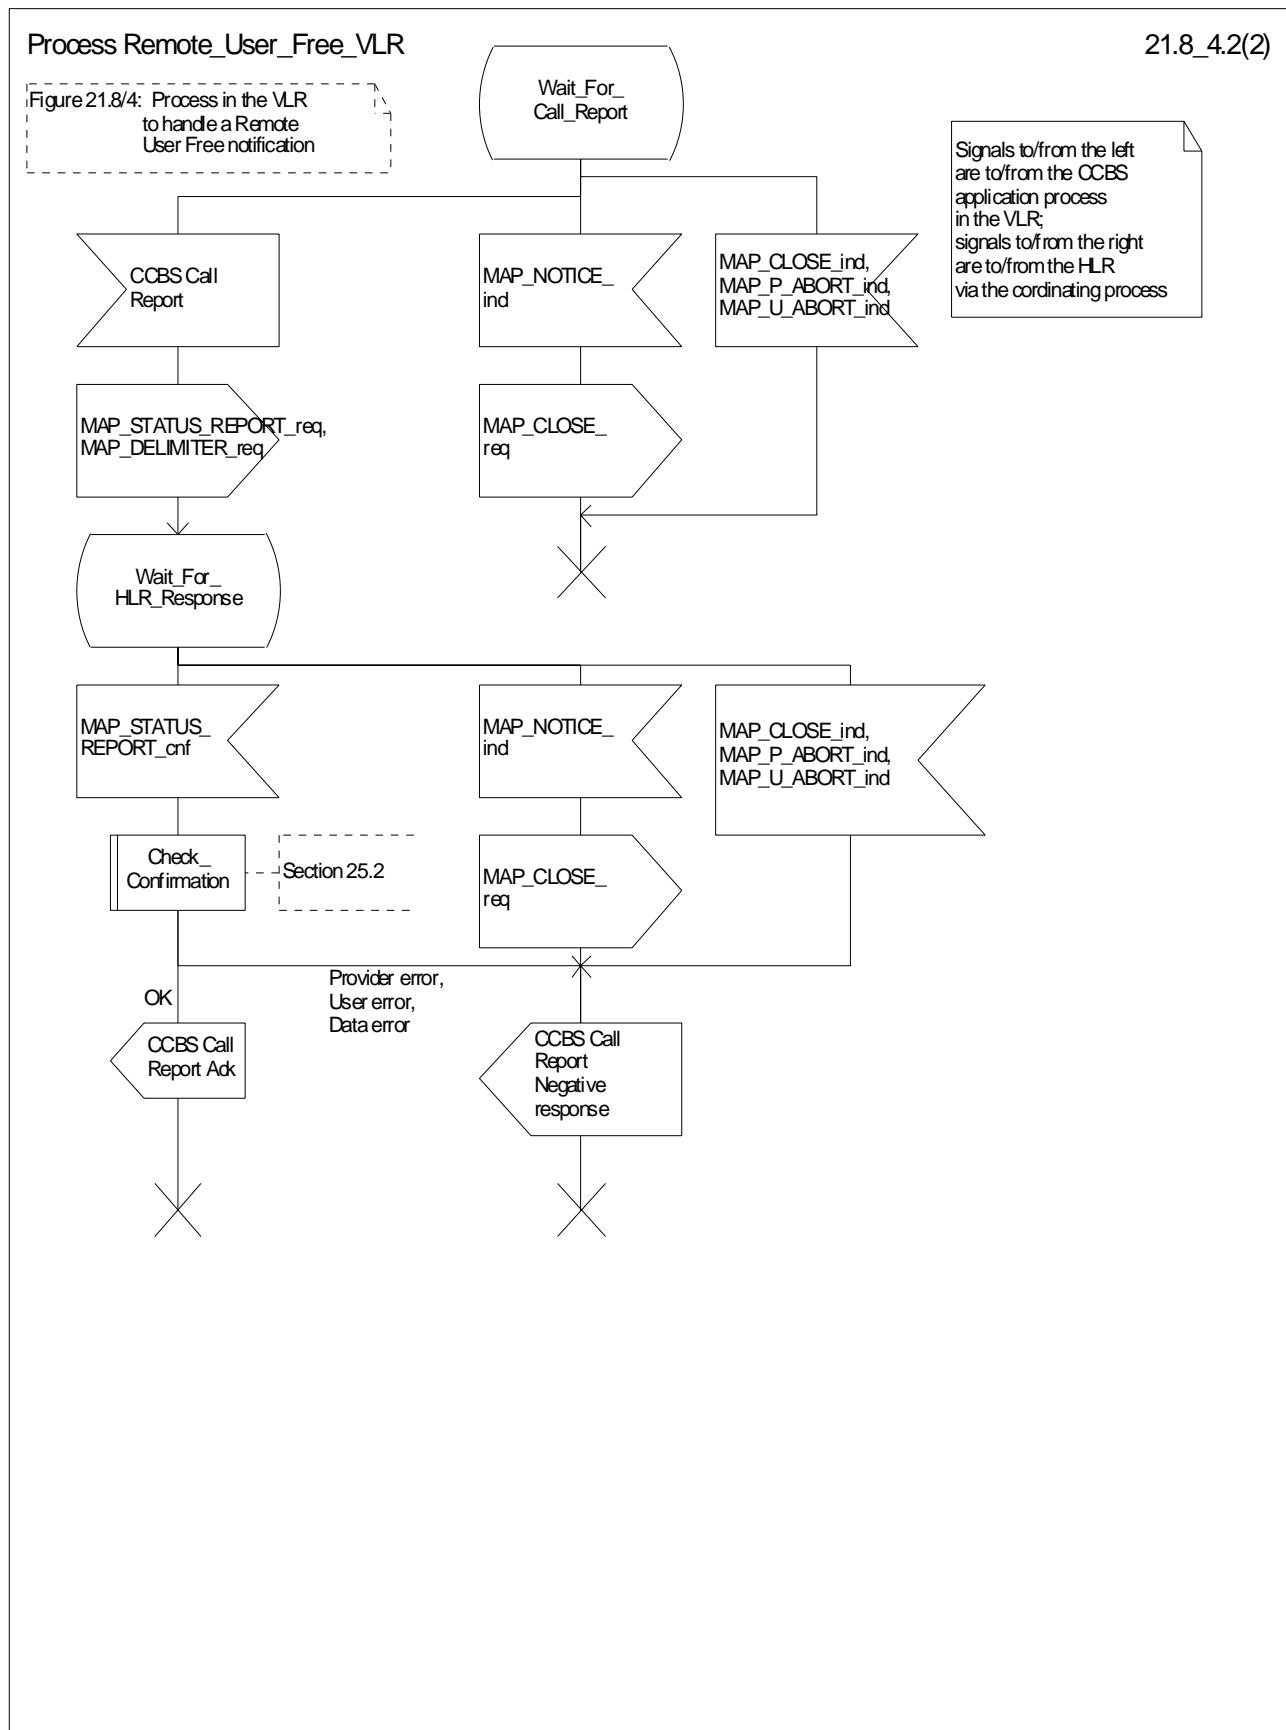



Figure 21.8/4 (sheet 2 of 2): Process Remote\_User\_Free\_VLR

## 21.9 IST Alert

### 21.9.1 General

The Immediate Service Termination Alert procedure is used to keep track of the call activities performed by IST subscribers and, eventually, to terminate the alerted call activities, or all the call activities related to the alerted subscriber.

The message flow for alerting and terminating the call(s) is shown in figure 21.9/1, where the MSC may be a Visited MSC or a Gateway MSC.

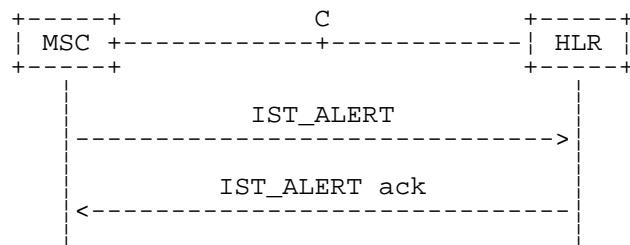

**Figure 21.9/1: IST Alert**

### 21.9.2 Procedure in the MSC

The MAP process in the MSC (Visited MSC or Gateway MSC) is shown in figure 21.9/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- |                    |                    |
|--------------------|--------------------|
| Receive_Open_Cnf   | see clause 25.1.2; |
| Check_Confirmation | see clause 25.2.2. |

#### Successful Outcome

When the MAP process receives an IST Alert request from a call handling process in the Visited MSC or Gateway MSC, it requests a dialogue with the HLR that the subscriber belongs to, by sending a MAP\_OPEN service request, a MAP\_IST\_ALERT service request, and a MAP\_DELIMITER service request. The MSC then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_IST\_ALERT service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a IST Alert ack containing the information received from the HLR to the call handling process in the MSC and returns to the idle state.

#### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the call handling process in the MSC, and returns to the idle state.


#### Error in MAP\_IST\_ALERT confirm

If the MAP\_IST\_ALERT service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a negative response to the call handling process in the MSC, and returns to the idle state.

#### Abort of HLR dialogue

When the MAP process is waiting for an HLR response to the MAP\_IST\_ALERT, the MAP service provider may abort the dialogue by issuing a MAP\_CLOSE, a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a negative response to the call handling process in the MSC, and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication when the MAP process is waiting for an HLR response to the MAP\_IST\_ALERT, the MAP process closes the dialogue with the HLR, sends a negative response to the call handling process in the MSC, and returns to the idle state.

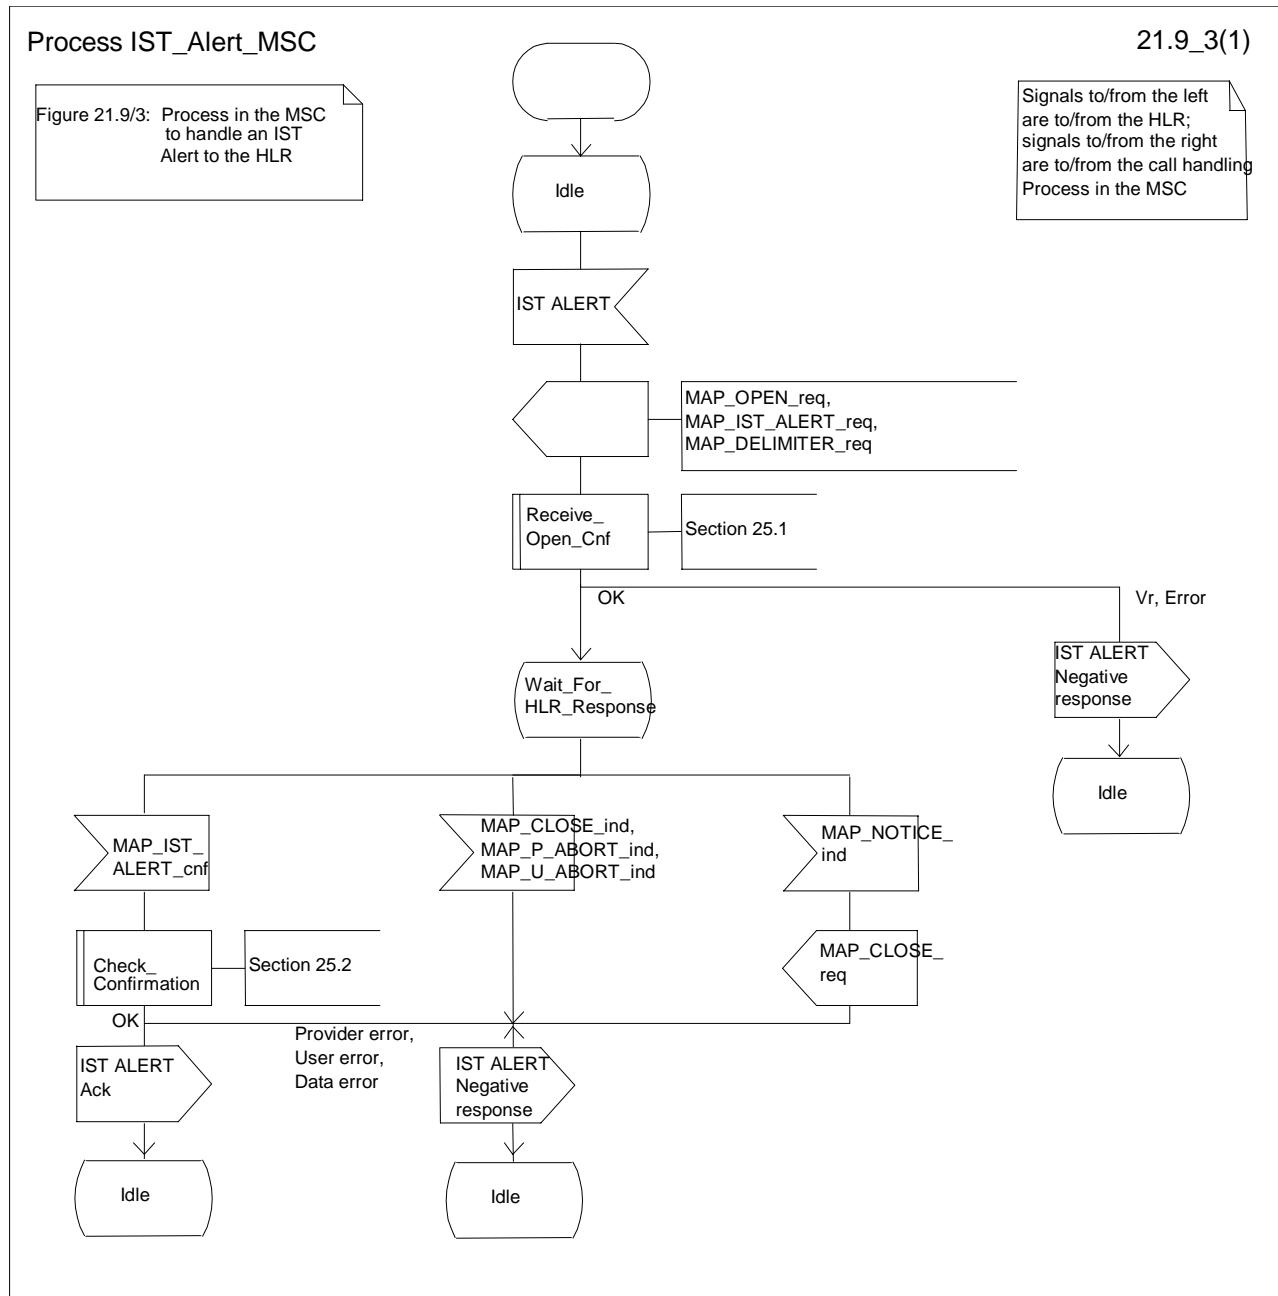

**Figure 21.9/2: Process IST\_Alert\_MSC**

### 21.9.3 Procedure in the HLR

The MAP process in the HLR is shown in figure 21.9/3. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

#### Successful outcome

When the MAP process in the HLR receives a request to open a dialogue, it invokes the macro Receive\_Open\_Ind to check if the dialogue can be opened.

If the dialogue can be opened, and the service indication received is a MAP\_IST\_ALERT, the HLR then sends the IST alert indication to the call handling process in the HLR, and waits for a response.

If the call handling process in the HLR returns a positive response, the MAP process constructs a MAP\_IST\_ALERT service response and a MAP\_CLOSE service request, sends them to the MSC, and returns to the idle state.

#### Negative response from HLR call handling process

If the call handling process in the HLR returns a negative response, the MAP process constructs a MAP\_IST\_ALERT service response containing the appropriate error and a MAP\_CLOSE service request, sends them to the MSC and returns to the idle state.

#### Failure of dialogue opening in the HLR

If the macro Reeive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

#### Abort of MSC dialogue

If the MAP process receives a MAP\_P\_ABORT indication before receiving a service indication, the MAP process returns to the idle state.

When the MAP process receives a MAP\_NOTICE indication before receiving a service indication, the MAP process closes the dialogue with the MSC, and returns to the idle state.

When the MAP process is waiting for the application response to the IST Alert, the MAP service provider may abort the dialogue by issuing a MAP\_CLOSE, a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process returns to the idle state.

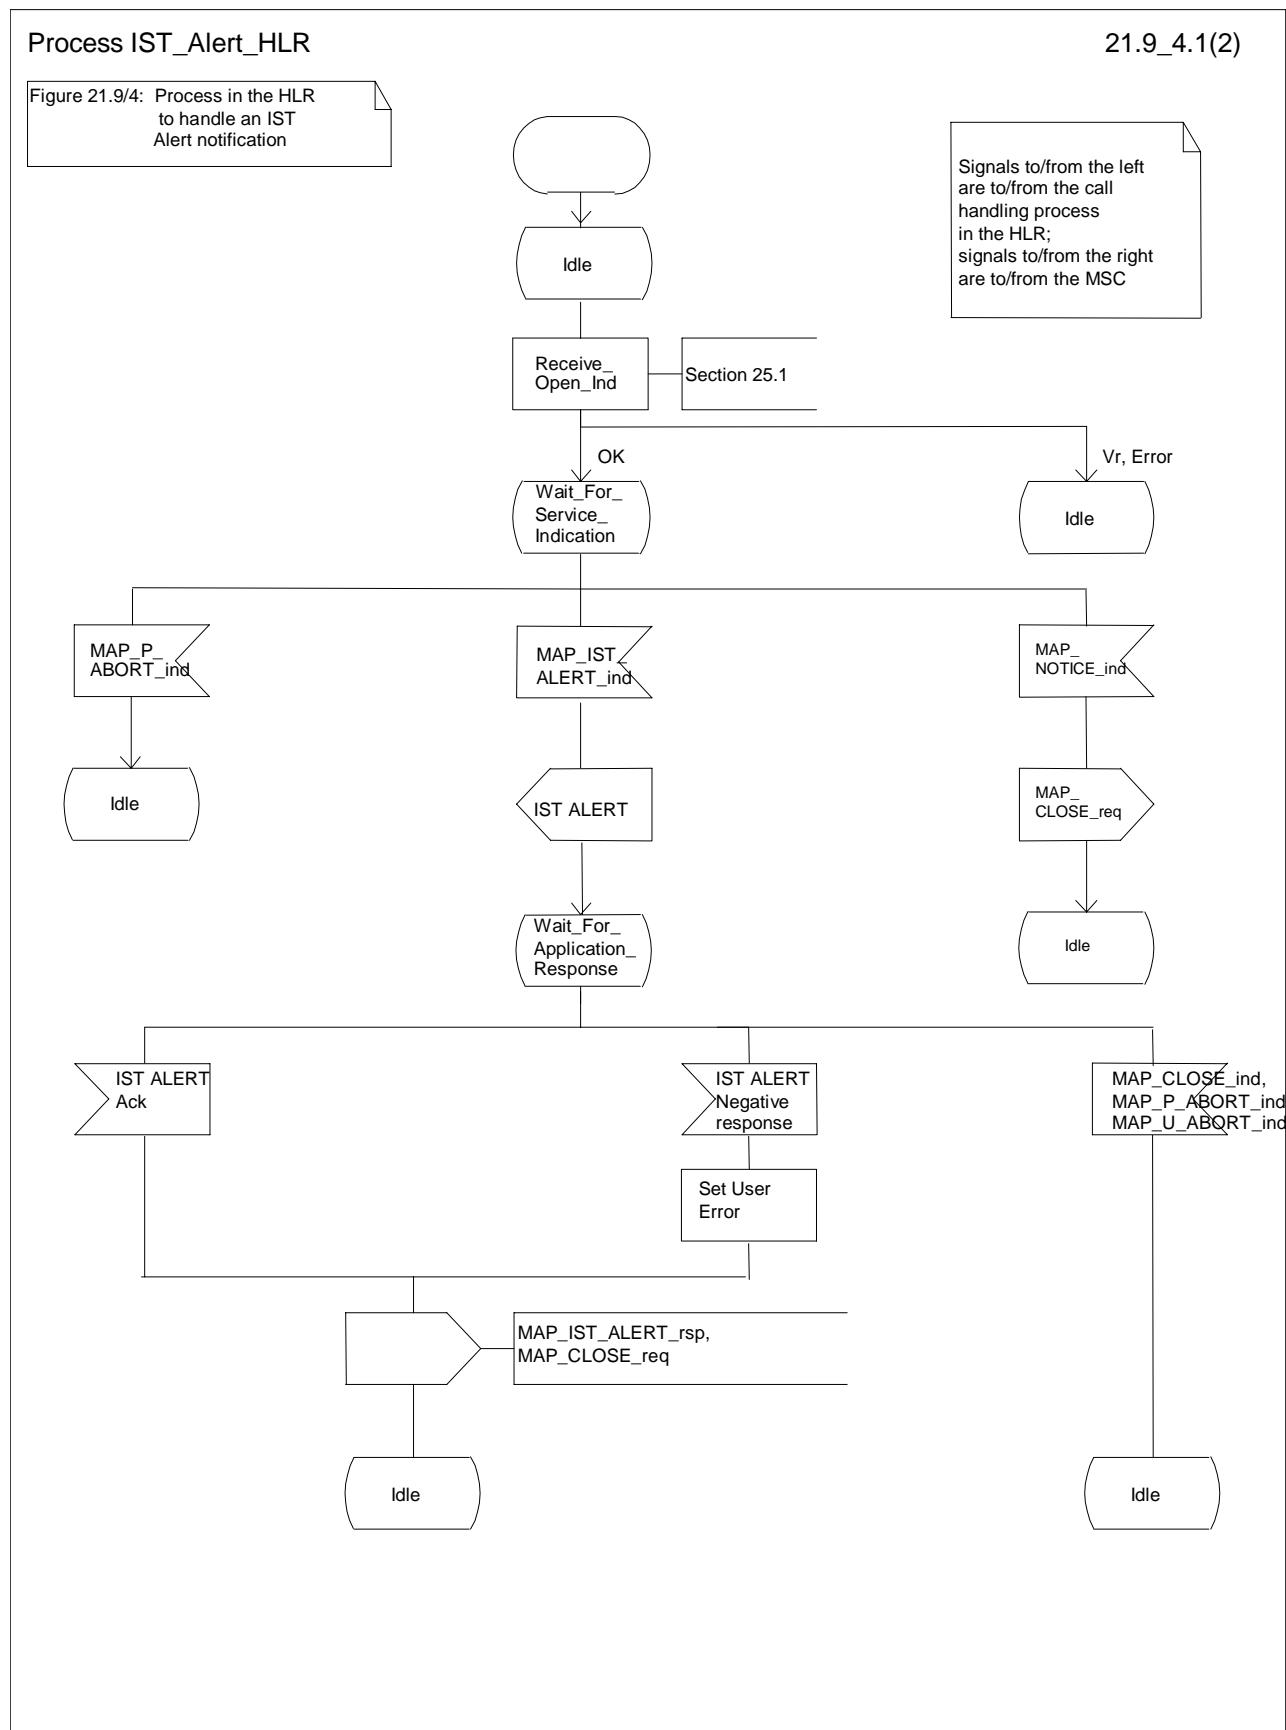



Figure 21.9/3: Process IST\_Alert\_HLR

## 21.10 IST Command

### 21.10.1 General

The Immediate Service Termination Command procedure is used to terminate the call activities related to a subscriber.

The message flow for the IST Command service is shown in figure 21.10/1, where the MSC may be a Visited MSC or a Gateway MSC.

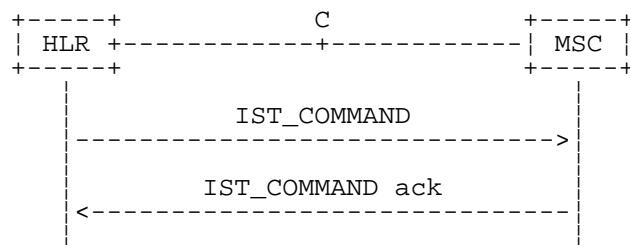

**Figure 21.10/1: IST Command**

### 21.10.2 Procedure in the HLR

The MAP process in the HLR is shown in figure 21.10/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- |                    |                    |
|--------------------|--------------------|
| Receive_Open_Cnf   | see clause 25.1.2; |
| Check_Confirmation | see clause 25.2.2. |

#### Successful Outcome

When the MAP process receives an IST Command request, it requests a dialogue with the MSC (Gateway MSC or Visited MSC), by sending a MAP\_OPEN service request, a MAP\_IST\_COMMAND service request, and a MAP\_DELIMITER service request. The HLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the MSC.

If the MAP process receives a MAP\_IST\_COMMAND service confirm from the MSC, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a IST Command ack containing the information received from the MSC to the call handling process in the HLR and returns to the idle state.

#### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the call handling process in the HLR, and returns to the idle state.

#### Error in MAP\_IST\_COMMAND confirm

If the MAP\_IST\_COMMAND service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a negative response to the call handling process in the HLR, and returns to the idle state.

#### Abort of MSC dialogue

When the MAP process is waiting for an MSC response to the MAP\_IST\_COMMAND, the MAP service provider may abort the dialogue by issuing a MAP\_CLOSE, a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a negative response to the call handling process in the HLR, and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication when the MAP process is waiting for an MSC response to the MAP\_IST\_COMMAND, the MAP process closes the dialogue with the MSC, sends a negative response to the call handling process in the HLR, and returns to the idle state.

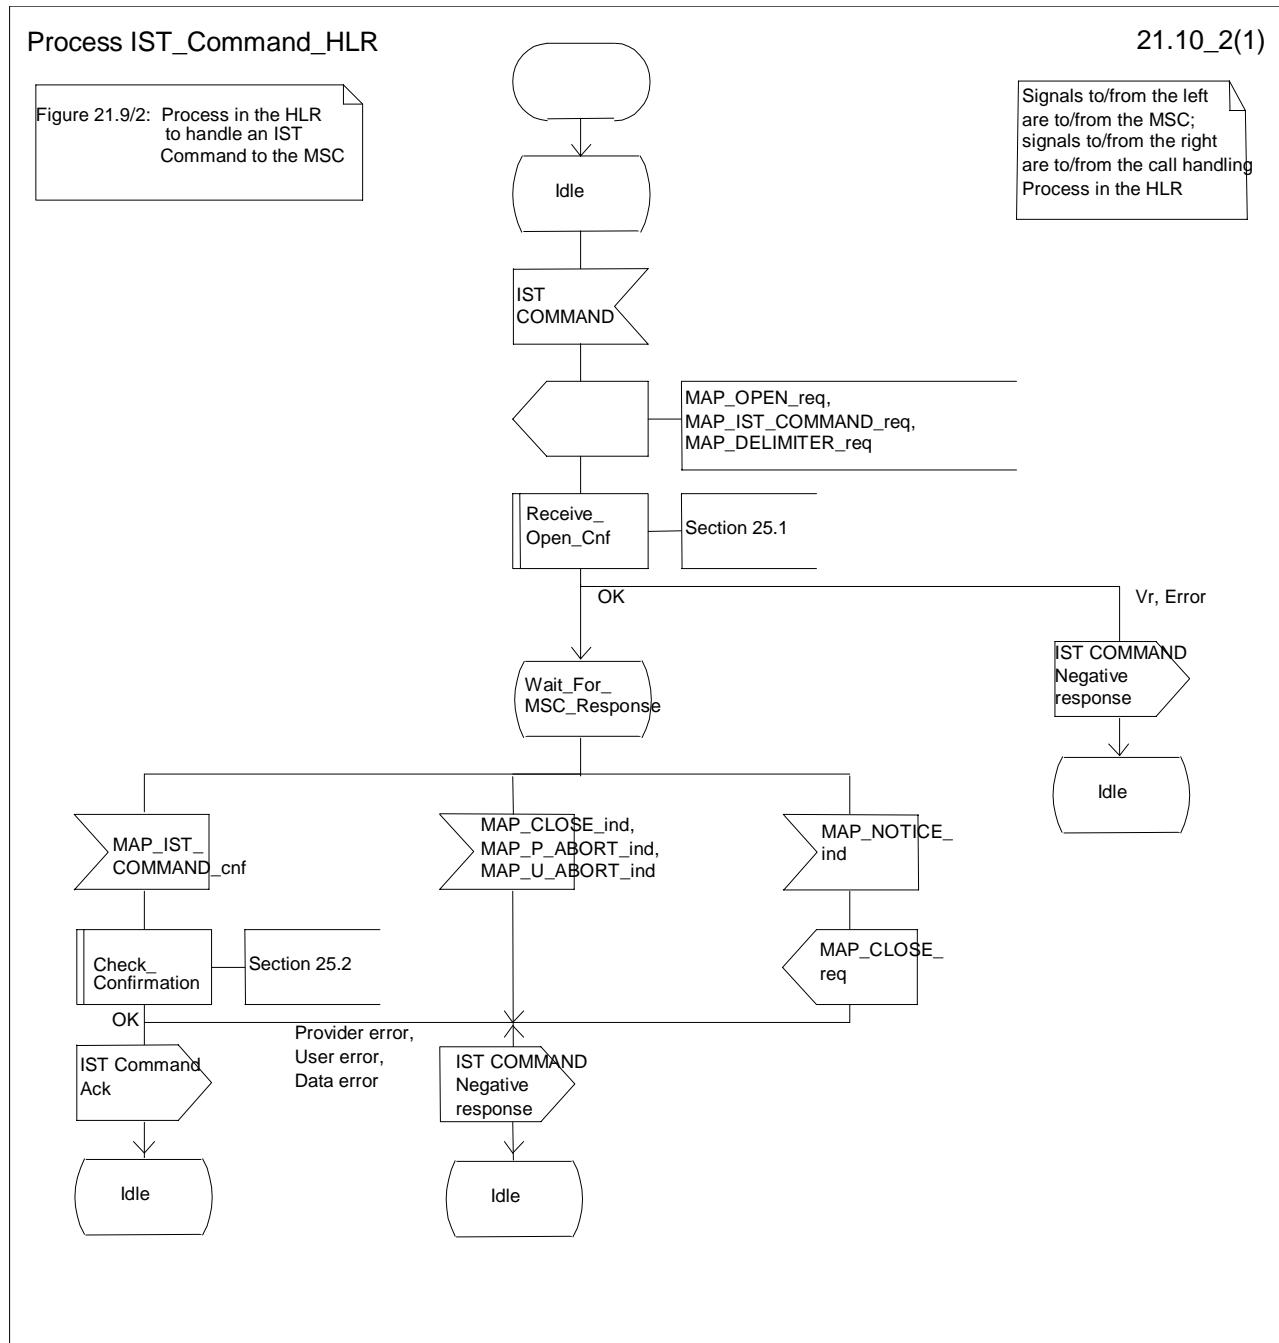


Figure 21.10/2: Process IST\_Command\_HLR

### 21.10.3 Procedure in the MSC

The MAP process in the MSC is shown in figure 21.10/3. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind      see clause 25.1.1.

#### **Successful outcome**

When the MAP process in the MSC receives a request to open a dialogue, it invokes the macro Receive\_Open\_Ind to check if the dialogue can be opened.

If the dialogue can be opened, and the service indication received is a MAP\_IST\_COMMAND, the MSC then sends the IST command indication to the call handling process in the MSC, and waits for a response.

If the call handling process in the MSC returns a positive response, the MAP process constructs a MAP\_IST\_COMMAND service response and a MAP\_CLOSE service request, sends them to the HLR, and returns to the idle state.

#### **Negative response from MSC call handling process**

If the call handling process in the MSC returns a negative response, the MAP process constructs a MAP\_IST\_COMMAND service response containing the appropriate error and a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

#### **Failure of dialogue opening in the MSC**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

#### **Abort of HLR dialogue**

If the MAP process receives a MAP\_P\_ABORT indication before receiving a service indication, the MAP process returns to the idle state.

When the MAP process receives a MAP\_NOTICE indication before receiving a service indication, the MAP process closes the dialogue with the HLR, and returns to the idle state.

When the MAP process is waiting for the application response to the IST Command, the MAP service provider may abort the dialogue by issuing a MAP\_CLOSE, a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process returns to the idle state.

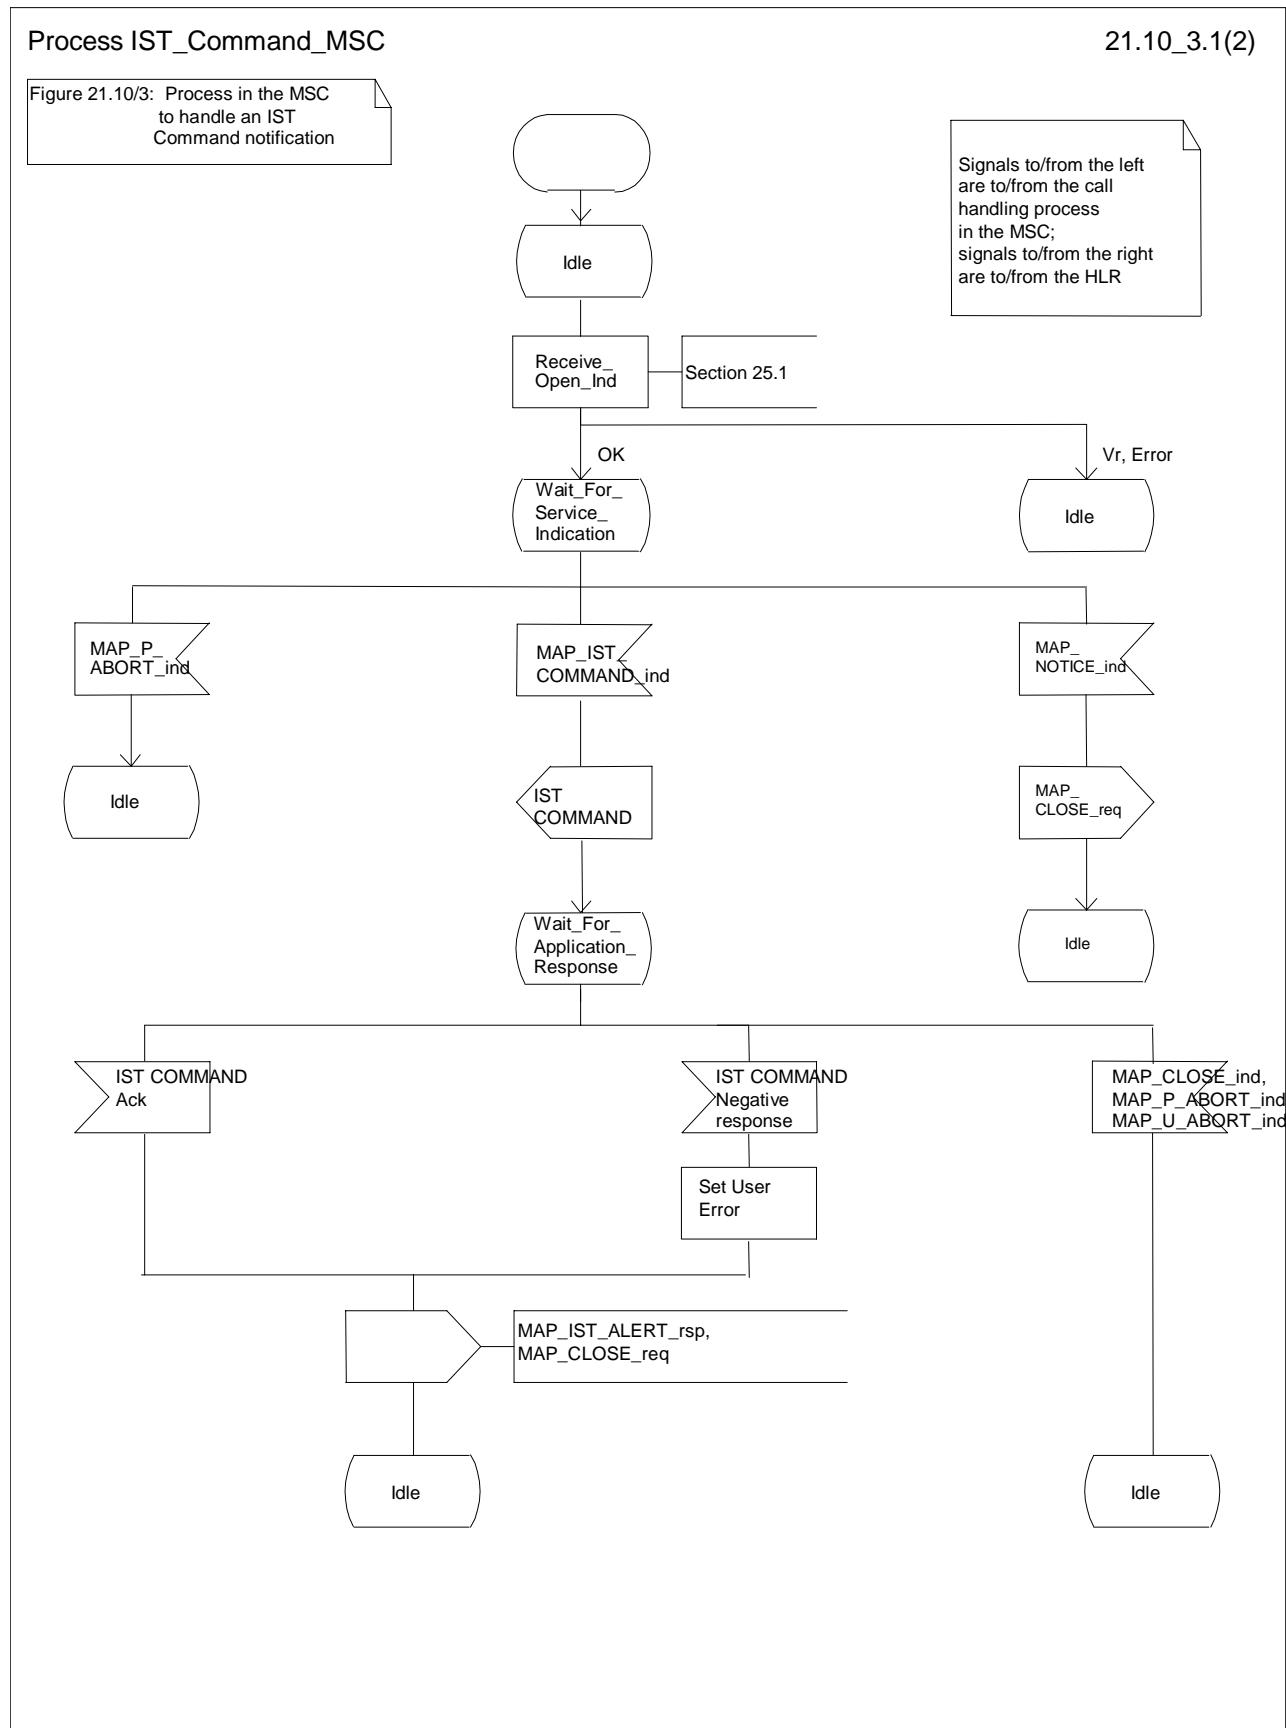


Figure 21.10/3: Process IST\_Command\_MSC

## 22 Supplementary services procedures

The following application contexts exist for handling of supplementary services:

- accessUnstructuredSsContext;
- accessFunctionalSsContext.

The accessUnstructuredSsContext refers to a simple MAP user, for which the corresponding MAP process can be identified by the MAP-Provider directly.

However, the accessFunctionalSsContext refers to a complex MAP-User consisting of several processes. For this user, a process co-ordinator is defined for each network entity, in order to identify the correct process to invoke. These processes open and validate the dialogue, then invoke the necessary operation-specific process. These processes are described below.

### 22.1 Functional supplementary service processes

#### 22.1.1 Functional supplementary service process co-ordinator for MSC

Upon receipt of a CM-Service request with CM-service type = SS, the MSC initiates the process access request procedure towards the VLR as described in clause 25 of the present document.

Once a CM connection is established, the MSC can handle supplementary service indications from the MS.

Table 22.1/1 shows the co-ordinating process' reaction on receipt of specific SS service indications on the air interface. After the relevant process is invoked, the received air interface service indication is sent to that process. The creation of service requests on the basis of air interface messages is described in 3GPP TS 29.011 [59].

**Table 22.1/1: Relationship between received service indication and invoked process in the MSC**

Service indication received	Process invoked
A_REGISTER_SS_ind	REGISTER_SS_MSC
A_ERASE_SS_ind	ERASE_SS_MSC
A_ACTIVATE_SS_ind	ACTIVATE_SS_MSC
A_DEACTIVATE_SS_ind	DEACTIVATE_SS_MSC
A_INTERROGATE_SS_ind	INTERROGATE_SS_MSC
A_REGISTER_PASSWORD	REGISTER_PASSWORD_MSC

Figure 22.1/1 shows the co-ordinating process in the MSC.

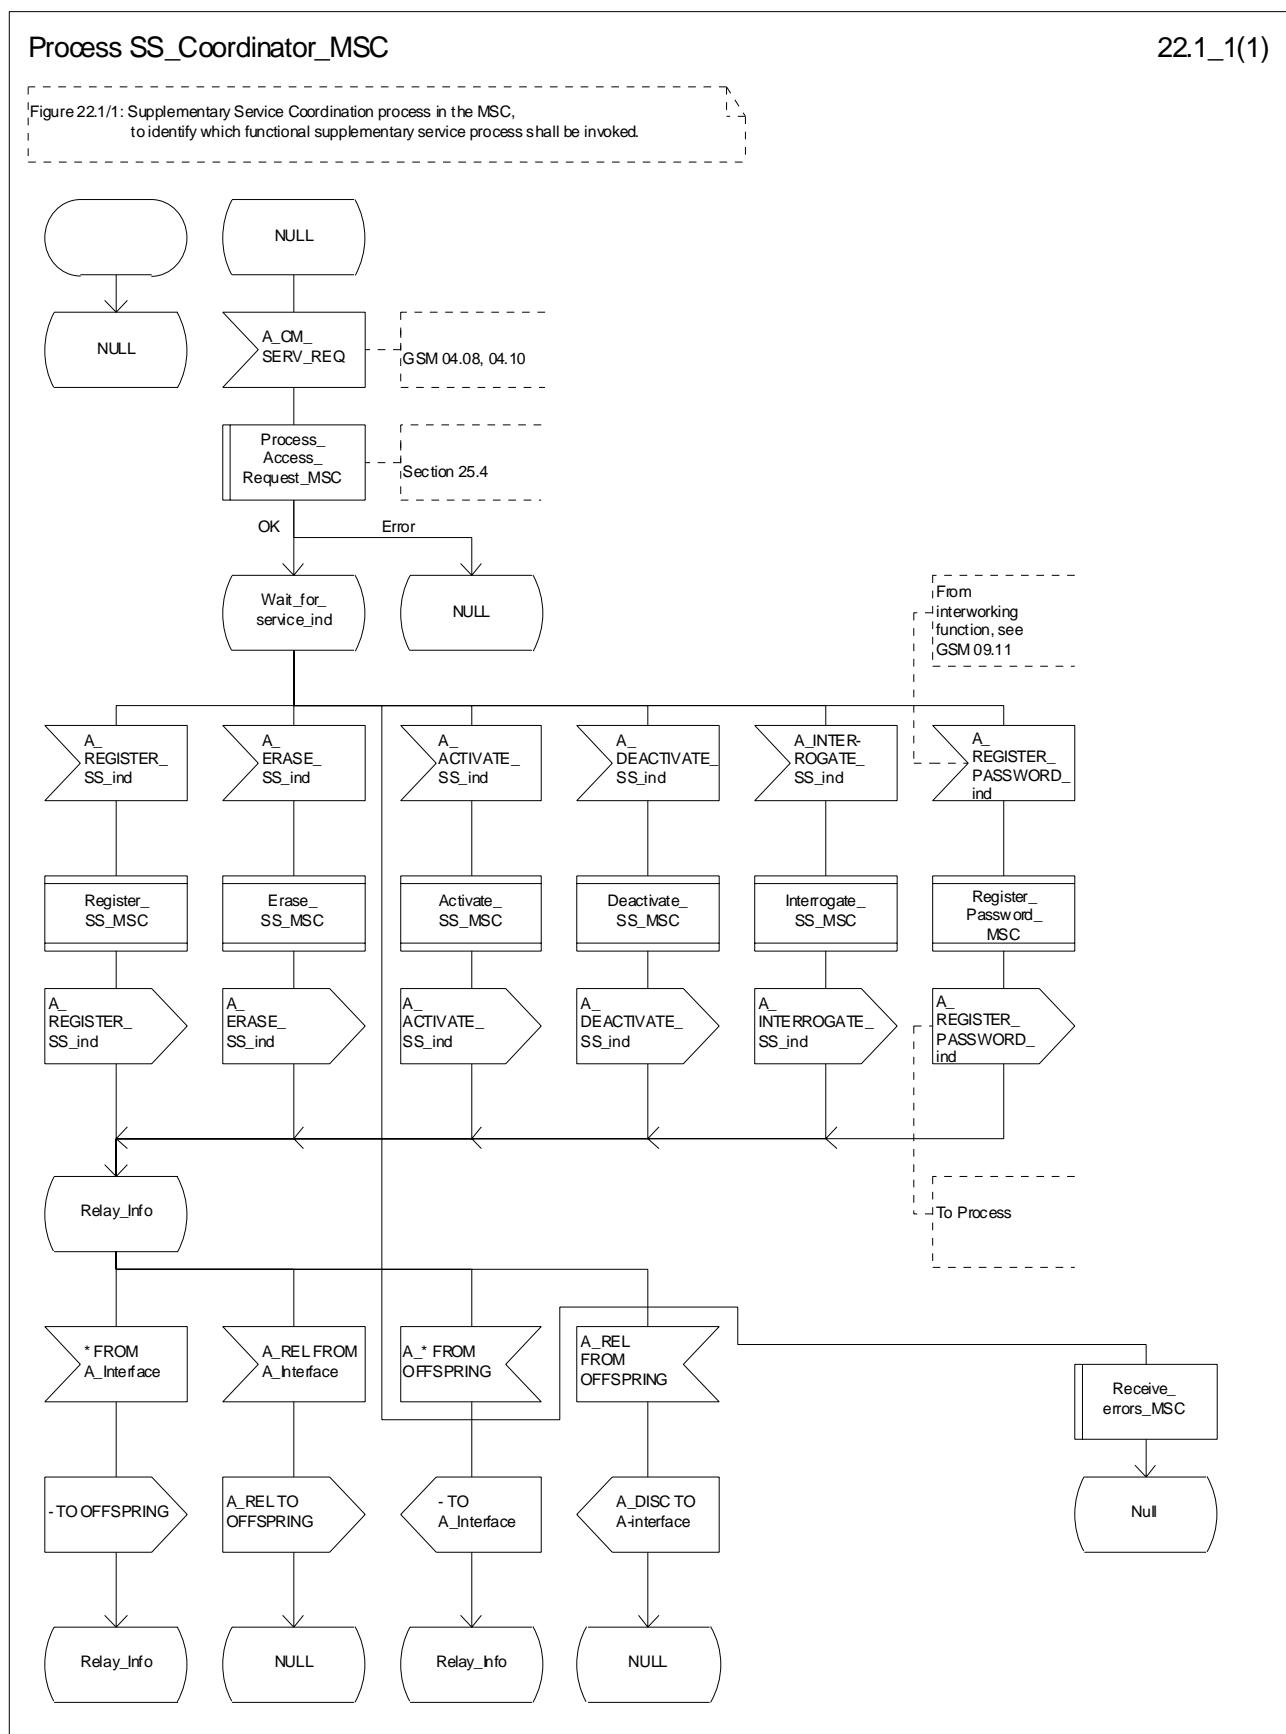


Figure 22.1/1: Process SS\_Coordinator\_MSC

## 22.1.2 Functional supplementary service process co-ordinator for VLR

Any functional SS process in the VLR starts by the VLR receiving the MAP\_PROCESS\_ACCESS\_REQUEST indication. The VLR then acts as described in clause 25 of the present document.

If the Process Access Request was successful, the VLR can handle supplementary service indications from the MSC. Table 22.1/2 shows the co-ordinating process' reaction on receipt of specific SS service indications from the MSC. After the relevant process is invoked, the received service indication is sent to that process, and the co-ordinating process terminates.

**Table 22.1/2: Relationship between received service indication and invoked process in the VLR**

Service indication received	Process invoked
MAP_REGISTER_SS_ind	REGISTER_SS_VLR
MAP_ERASE_SS_ind	ERASE_SS_VLR
MAP_ACTIVATE_SS_ind	ACTIVATE_SS_VLR
MAP_DEACTIVATE_SS_ind	DEACTIVATE_SS_VLR
MAP_INTERROGATE_SS_ind	INTERROGATE_SS_VLR
MAP_REGISTER_PASSWORD	REGISTER_PASSWORD_VLR

Figure 22.1/2 shows the co-ordinating process in the VLR.

## Process SS\_Coordinator\_VLR

22.1\_2.1(2)

Figure 22.1/2: Supplementary Service Coordination process in the VLR, to open and process the access request from the MSC, and then identify which functional supplementary service process shall be invoked.


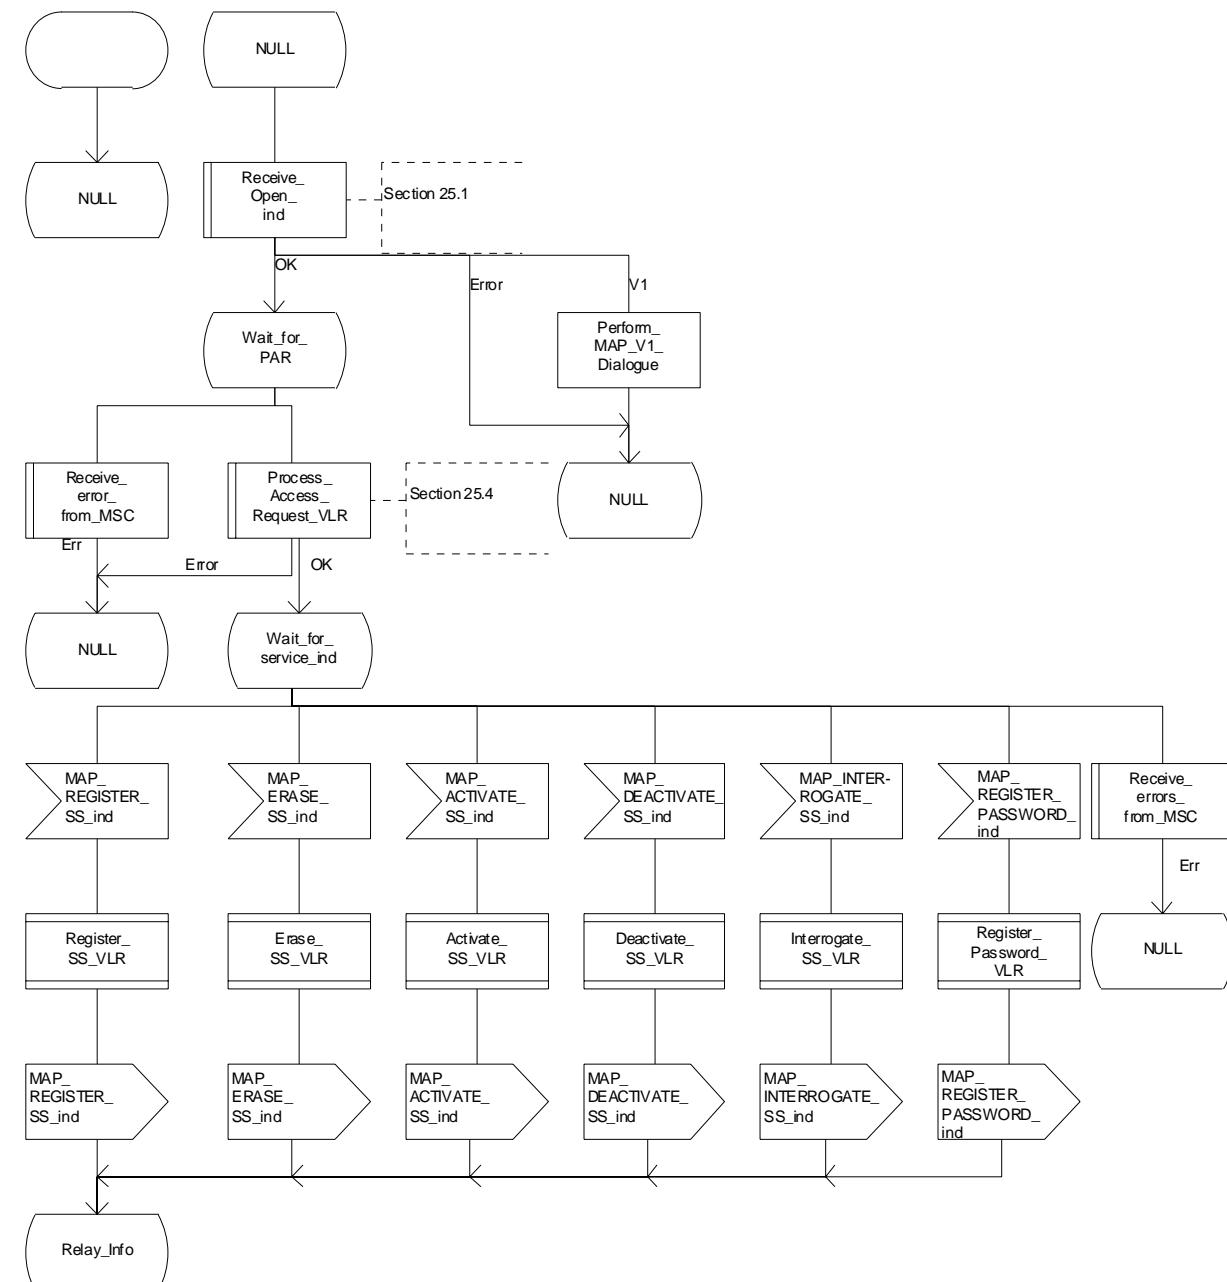


Figure 22.1/2 (sheet 1 of 2): Process SS\_Coordinator\_VLR

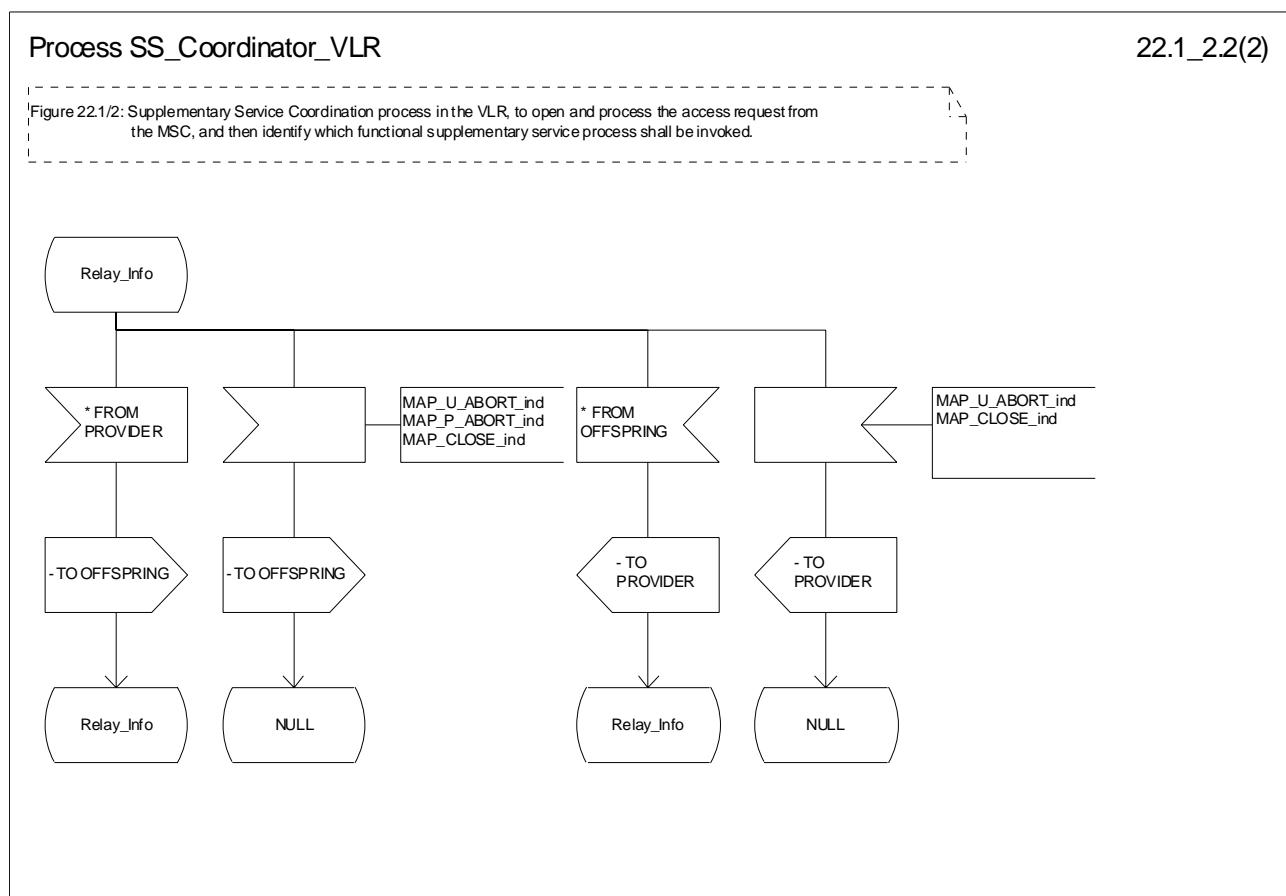

**Figure 22.1/2 (sheet 2 of 2): Process SS\_Coordinator\_VLR**

### 22.1.3 Functional supplementary service process co-ordinator for HLR

Any functional SS process in the HLR starts by the HLR receiving a MAP-OPEN service indication. If that service is successful, the HLR can handle supplementary service indications from the VLR. Table 22.1/3 shows the co-ordinating process' reaction on receipt of specific SS service indications from the VLR. After the relevant process is invoked, the received service indication is sent to that process, and the co-ordinating process terminates.

**Table 22.1/3: Relationship between received service indication and invoked process in the HLR**

Service indication received	Process invoked
MAP_REGISTER_SS_ind	REGISTER_SS_HLR
MAP_ERASE_SS_ind	ERASE_SS_HLR
MAP_ACTIVATE_SS_ind	ACTIVATE_SS_HLR
MAP_DEACTIVATE_SS_ind	DEACTIVATE_SS_HLR
MAP_INTERROGATE_SS_ind	INTERROGATE_SS_HLR
MAP_REGISTER_PASSWORD	REGISTER_PASSWORD_HLR

Figure 22.1/3 shows the co-ordinating process in the HLR.

## Process SS\_Coordinator\_HLR

22.1\_3.1(2)

Figure 22.1/3: Supplementary Service Coordination process in the HLR, to identify which functional supplementary service process shall be invoked.

Section 25.1


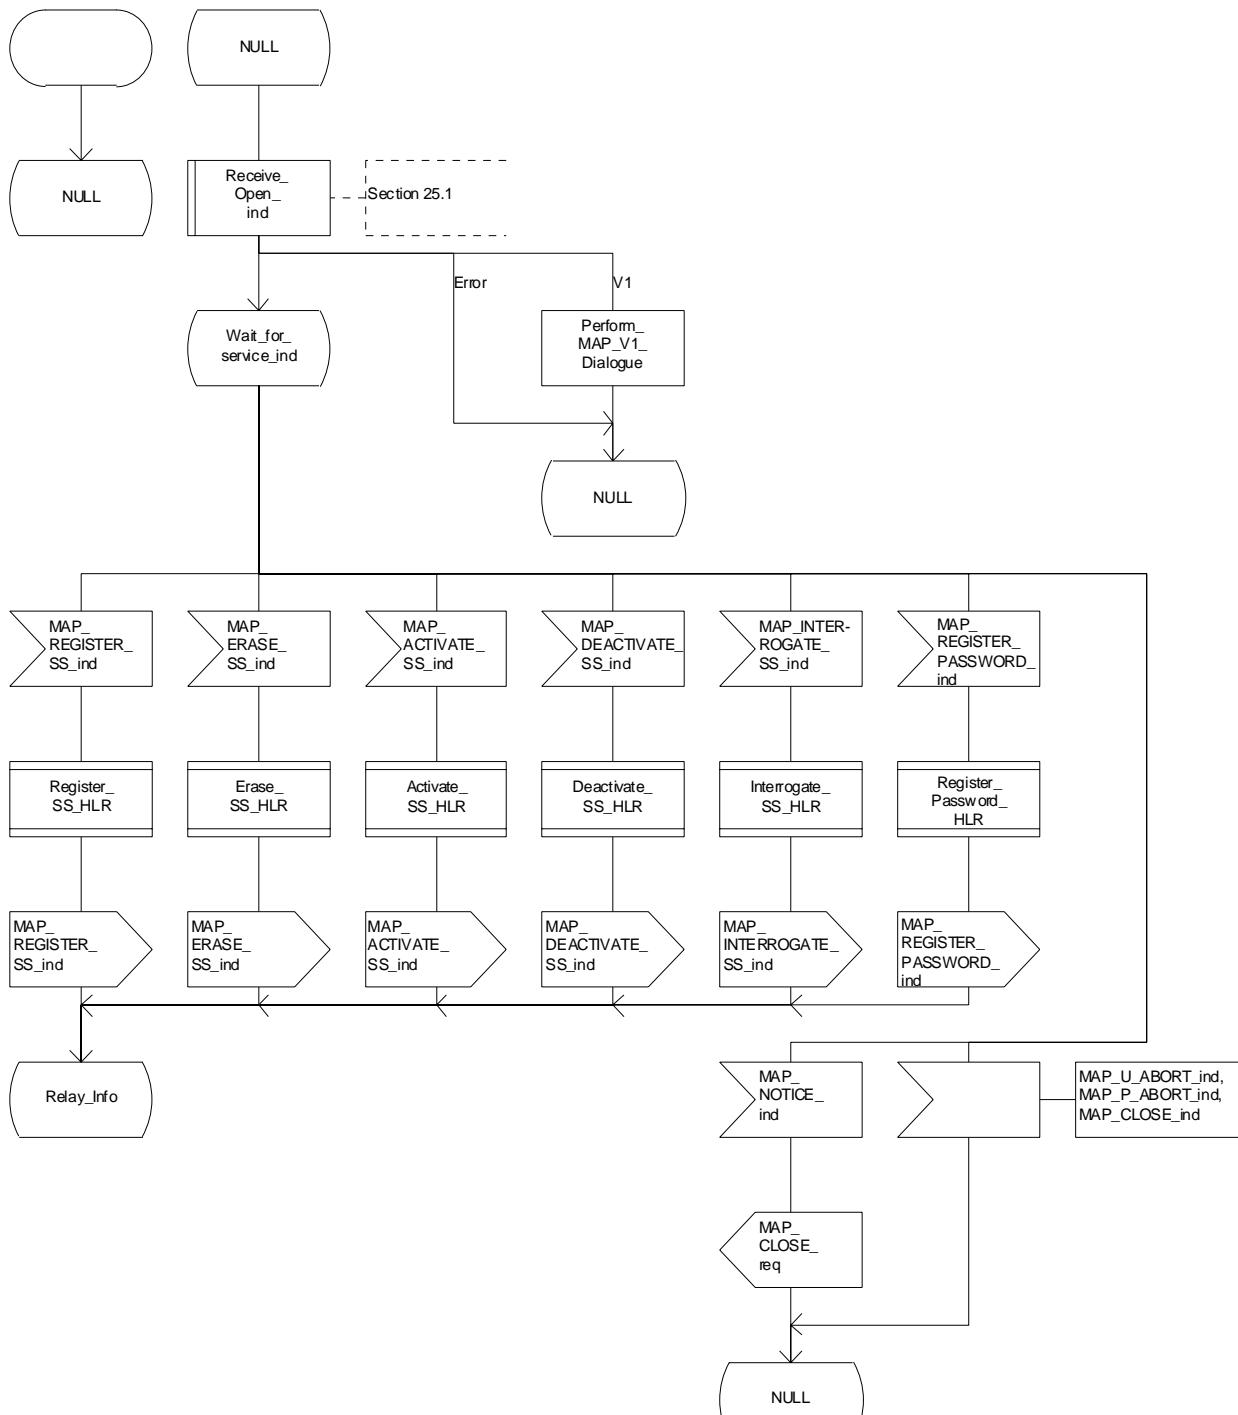


Figure 22.1/3 (sheet 1 of 2): Process SS\_Coordinator\_HLR

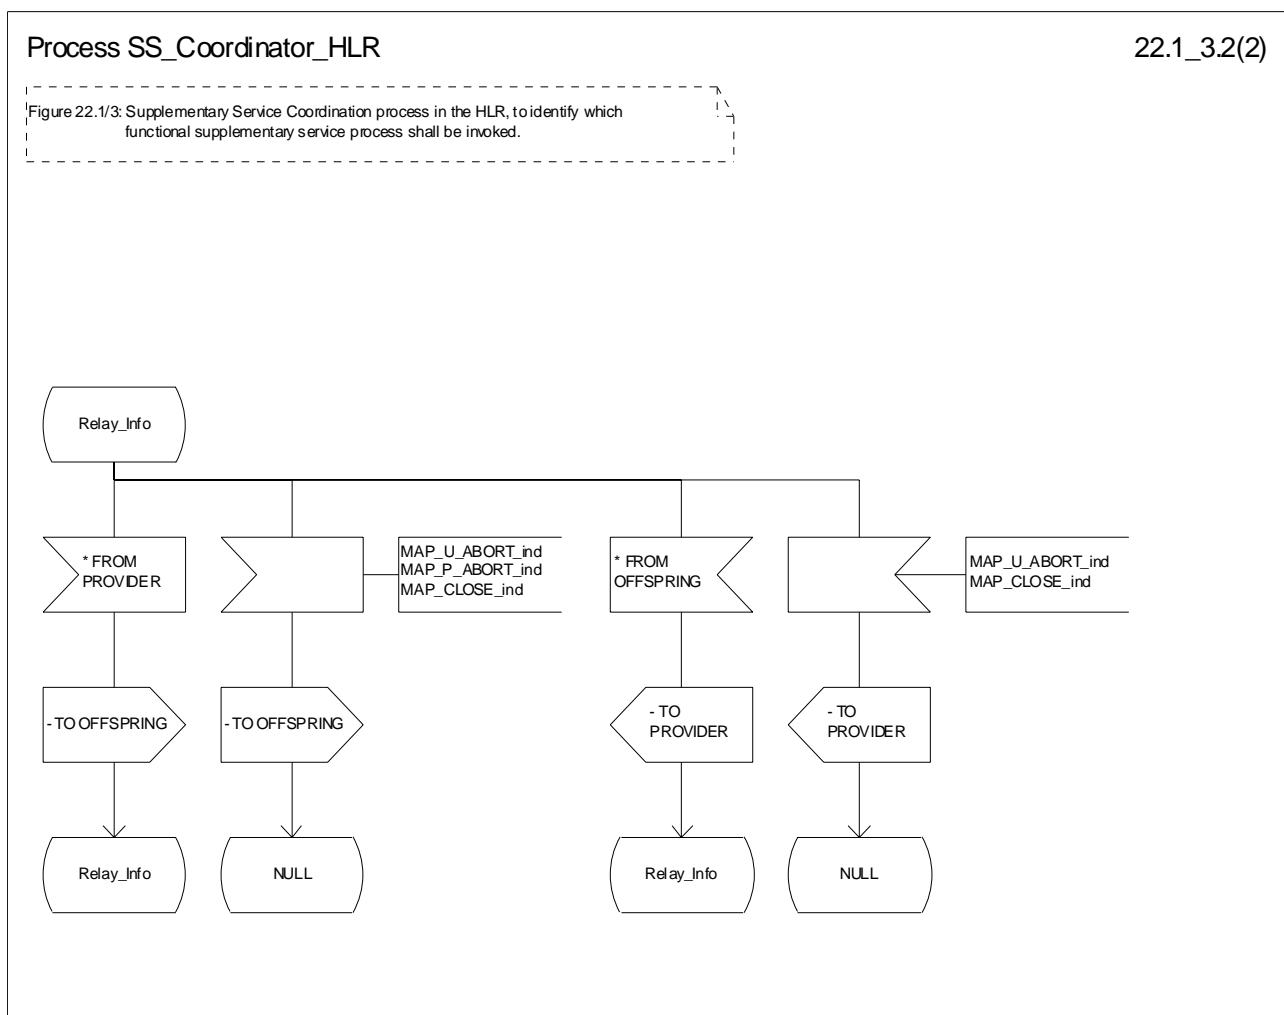

**Figure 22.1/3 (sheet 2 of 2): Process SS\_Coordinator\_HLR**

## 22.1.4 Call completion supplementary service process co-ordinator for HLR

The MAP co-ordinating process in the HLR to handle a dialogue opened with the callCompletion application context is shown in figure 22.1/4. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind      see clause 25.1.1.

Any call completion SS process in the HLR starts by the HLR receiving a MAP-OPEN service indication. If that service is successful, the HLR can handle call completion supplementary service indications from the VLR.


Table 22.1/4 shows the co-ordinating process' reaction on receipt of specific call completion SS service indications from the VLR. After the relevant process is invoked, the received service indication is sent to that process.

**Table 22.1/4: Relationship between received service indication and invoked process in the HLR**

Service indication received	Process invoked
MAP_REGISTER_CC_ENTRY_ind	REGISTER_CC_ENTRY_HLR
MAP_ERASE_CC_ENTRY_ind	ERASE_CC_ENTRY_HLR

After creation of the user process the Co-ordinator relays the messages between the MAP\_PM and the invoked process until a request or an indication for dialogue termination is received.

The Call\_Completion Co-ordinator is shown in figure 22.1/4.

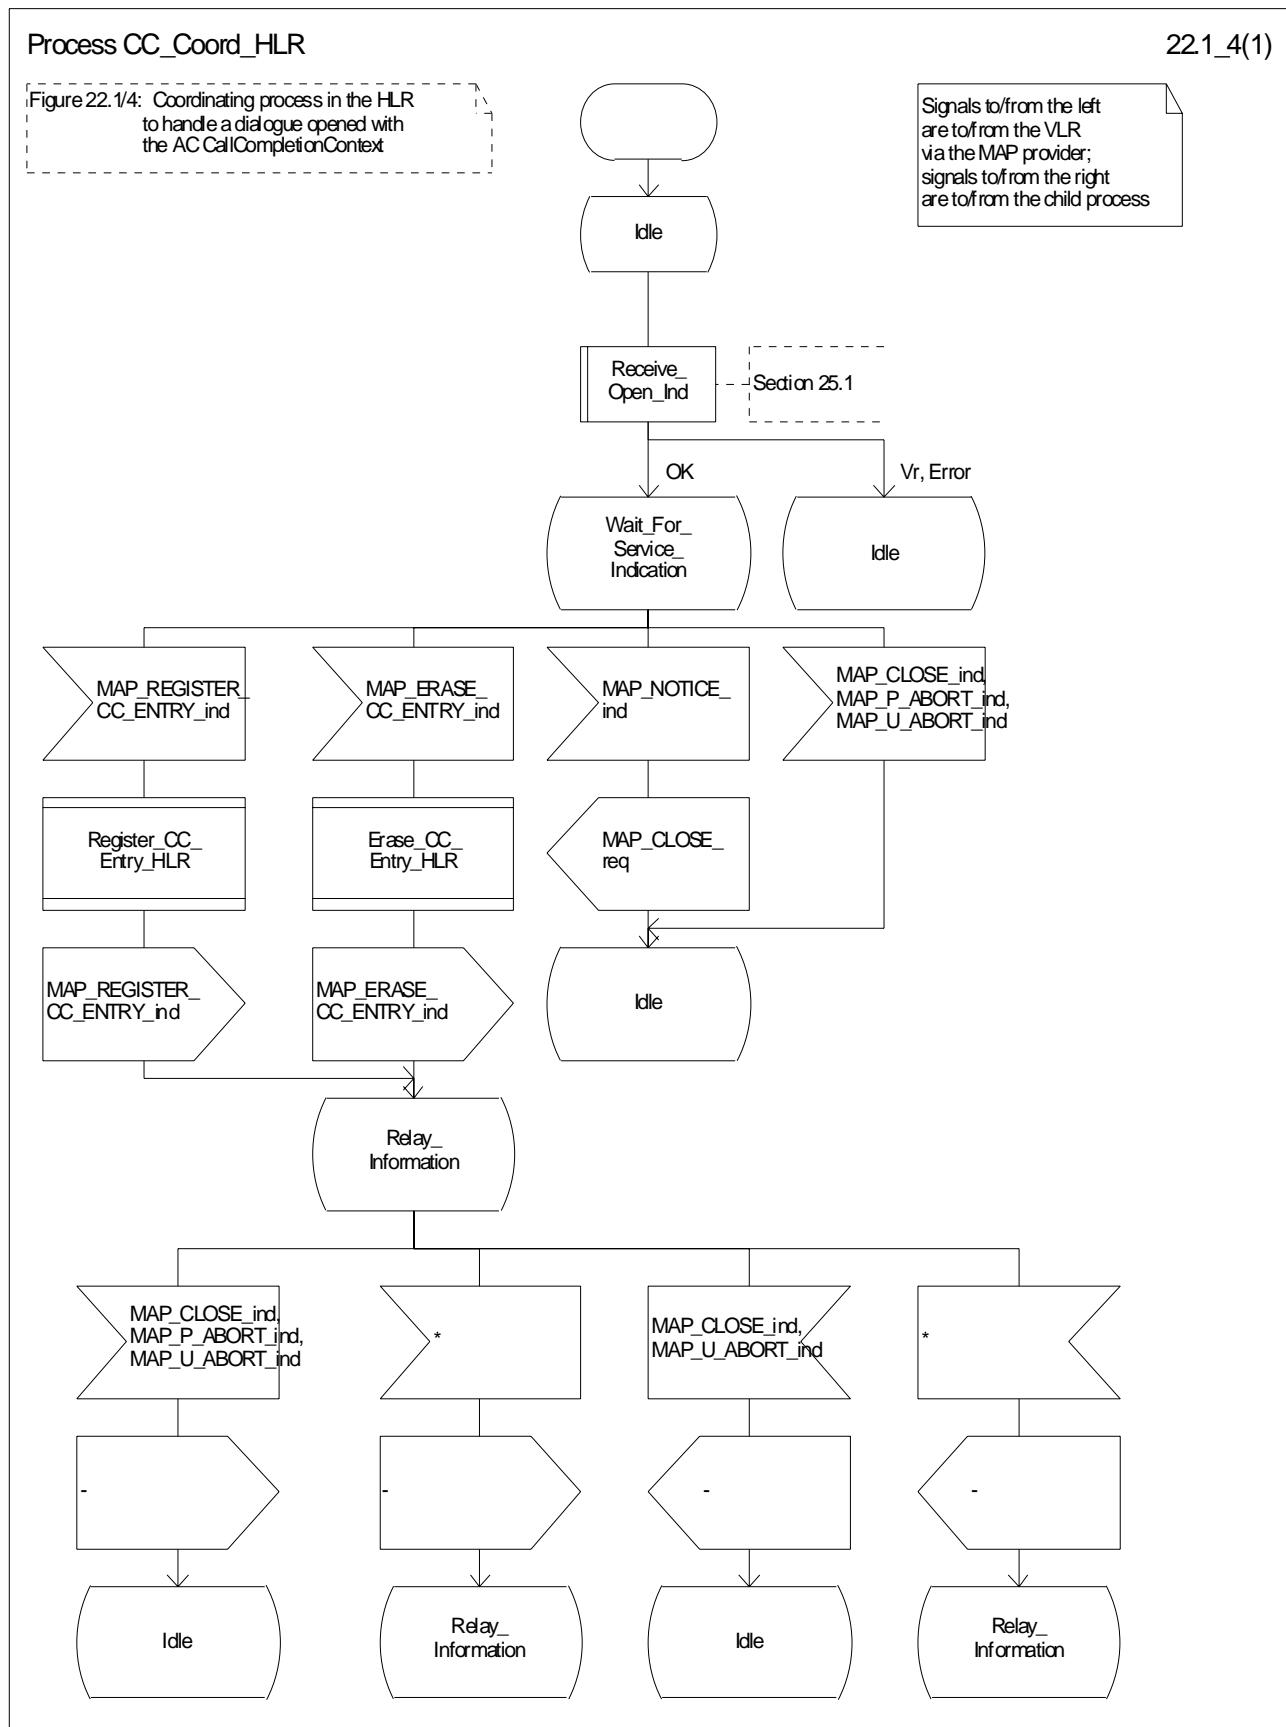**Figure 22.1/4: Process\_CC\_Coord\_HLR**

## 22.2 Registration procedure


### 22.2.1 General

The registration procedure is used to register data related to a supplementary service in the HLR. The registration procedure is a fully transparent communication between the MS and the HLR, except that some services may be invoked as a result of the procedure, as described in the clauses below.

The registration procedure is shown in figure 22.2.1/1.

The following services may be used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_INSERT_SUBSCRIBER_DATA	(defined in clauses 8 and 25);
MAP_REGISTER_SS	(defined in clause 11).

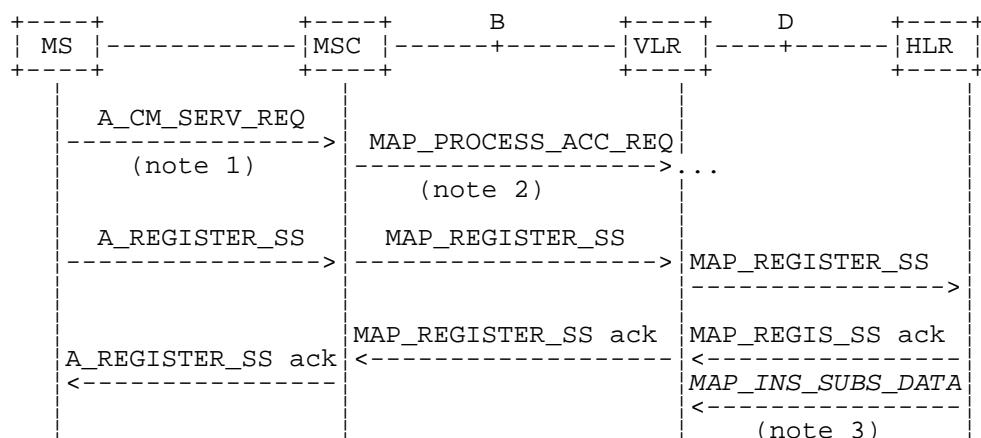

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.

NOTE 3: Services printed in *italics* are optional.

**Figure 22.2.1/1: Interfaces and services for supplementary service registration**

### 22.2.2 Procedures in the MSC

#### Supplementary service registration

The A\_REGISTER\_SS service indication received by the MAP user in the MSC contains the SS-Code and any parameters that are related to the supplementary service.

The MAP user transfers the received information to the VLR in the MAP\_REGISTER\_SS request without checking the contents of the service indication. Rules for the mapping are described in 3GPP TS 29.011 [59].

The MSC then awaits the receipt of the MAP\_REGISTER\_SS confirm from the VLR. The outcome of the procedure is reported to the MS in the A\_REGISTER\_SS response message as described in GSM 04.8x, 04.9x and 09.11. Finally the SS-connection is released.


For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

### Error handling

If at any time during the supplementary service part of this procedure a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE or unexpected MAP\_CLOSE indication is received from the VLR concerning the process, a CM\_RELEASE\_COMPLETE indication is sent to the MS (as specified in 3GPP TS 29.011 [59]). Upon receipt of a MAP\_NOTICE indication from the VLR, the MSC must close the VLR dialogue by sending a MAP\_CLOSE request. The process is then terminated.

If an A\_CM\_RELEASE indication is received from the MS, all open transactions shall be released using the MAP\_U\_ABORT request indicating application procedure cancellation, and the process is terminated.

The registration procedure in the MSC is shown in figure 22.2.2/1.

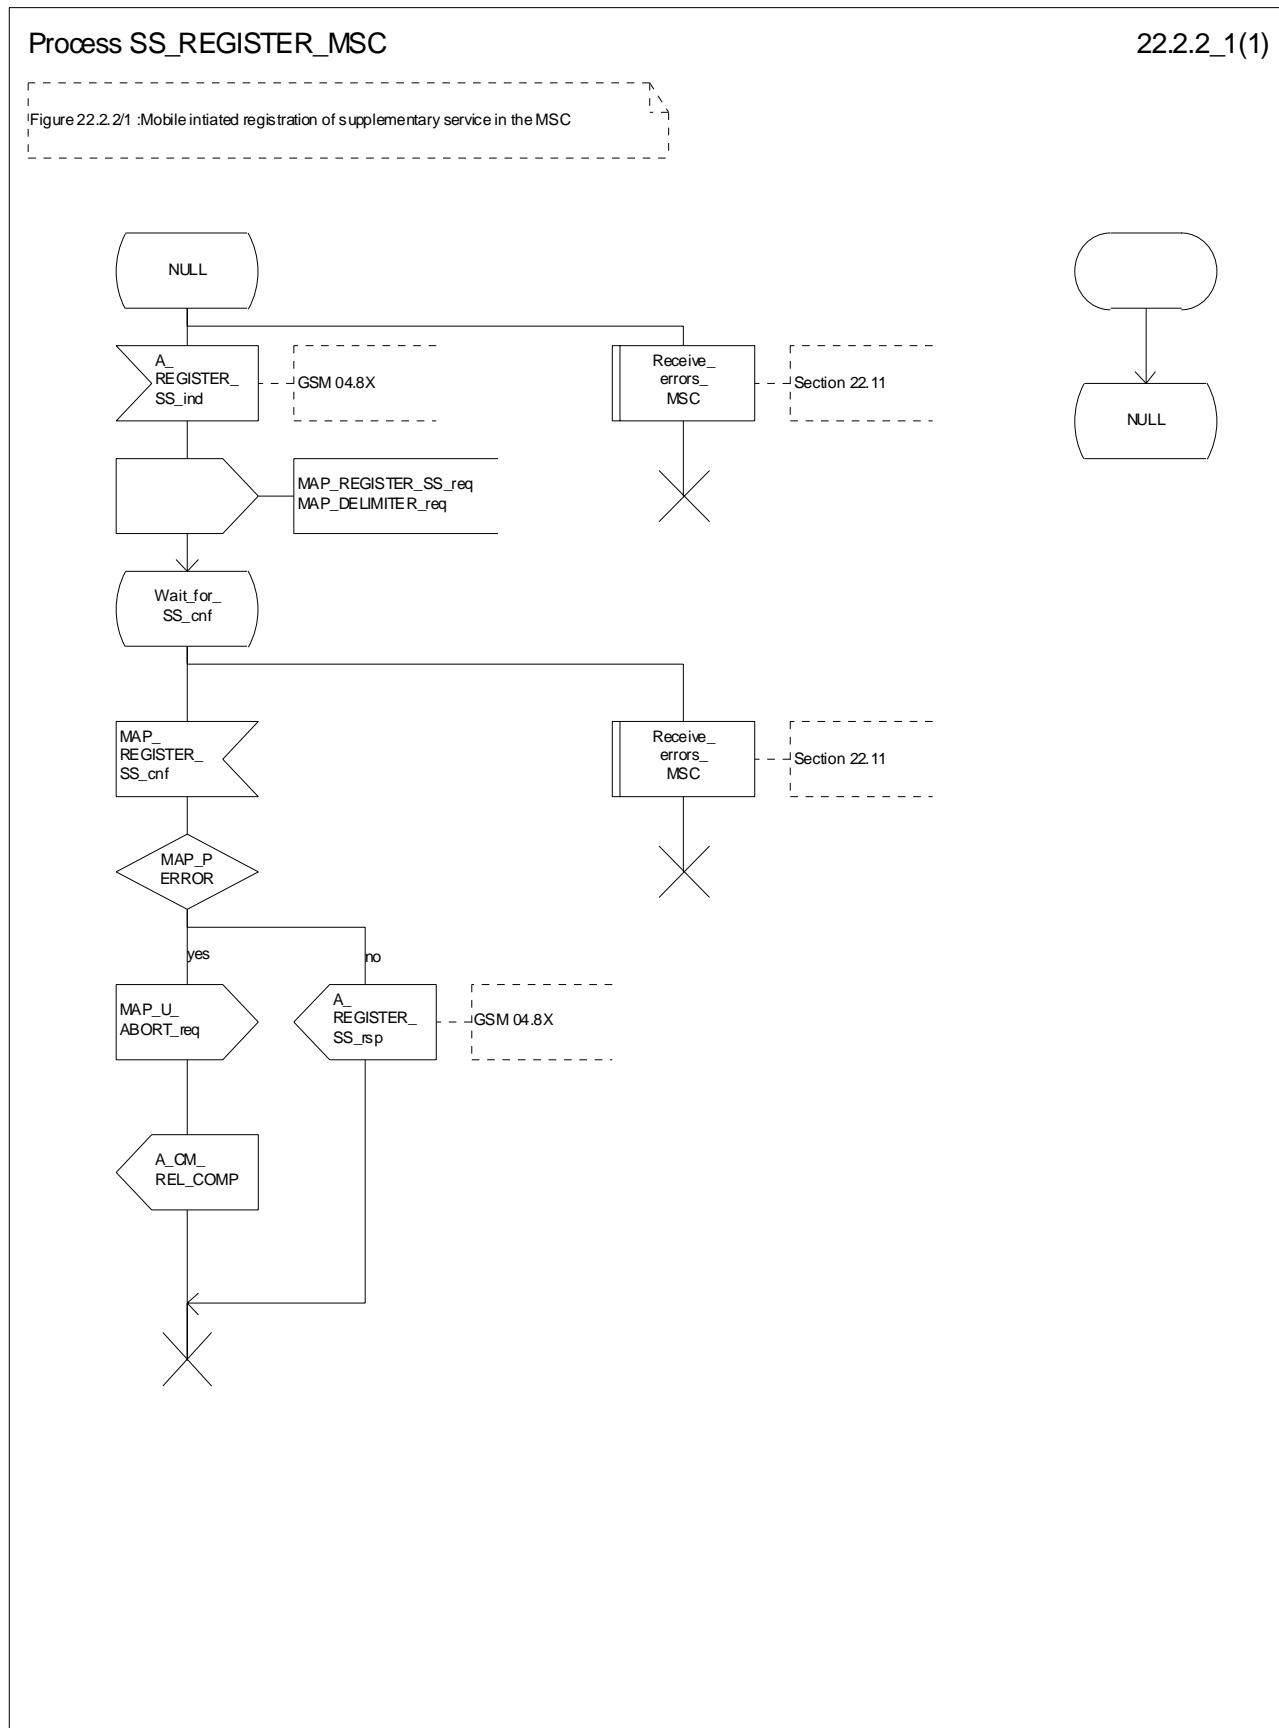**Figure 22.2.2/1: Procedure SS\_Register\_MSC**

## 22.2.3 Procedures in the VLR

### Supplementary service registration

When receiving the MAP\_REGISTER\_SS indication, the MAP user in the VLR transfers the information to the HLR in the MAP\_REGISTER\_SS request without checking the contents of the service indication.

The VLR then awaits the receipt of the MAP\_REGISTER\_SS confirm from the HLR. The MAP user in the VLR shall transfer the information contained in this primitive to the MSC in the MAP\_REGISTER\_SS response without checking its contents.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

### Error handling

If at any time during this procedure a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE or unexpected MAP\_CLOSE indication is received from the MSC concerning the process, a MAP\_U\_ABORT request indicating application procedure cancellation is sent to the HLR (if a connection exists). If a MAP\_NOTICE indication was received from the MSC, that dialogue must be closed by sending a MAP\_CLOSE request towards the MSC. The process is terminated.

If a MAP\_P\_ABORT, MAP\_U\_ABORT or MAP\_CLOSE indication is received from the HLR, a MAP\_U\_ABORT request shall be sent to the MSC terminating the process. If a MAP\_NOTICE indication was received from the HLR, that dialogue must be closed by sending a MAP\_CLOSE request towards the HLR. The process terminates.

The registration procedure in the VLR is shown in figure 22.2.3/1.

## Process SS\_REGISTER\_VLR

22.2.3\_1.1(2)

Figure 22.2.3/1: Mobile initiated registration of supplementary services in the VLR


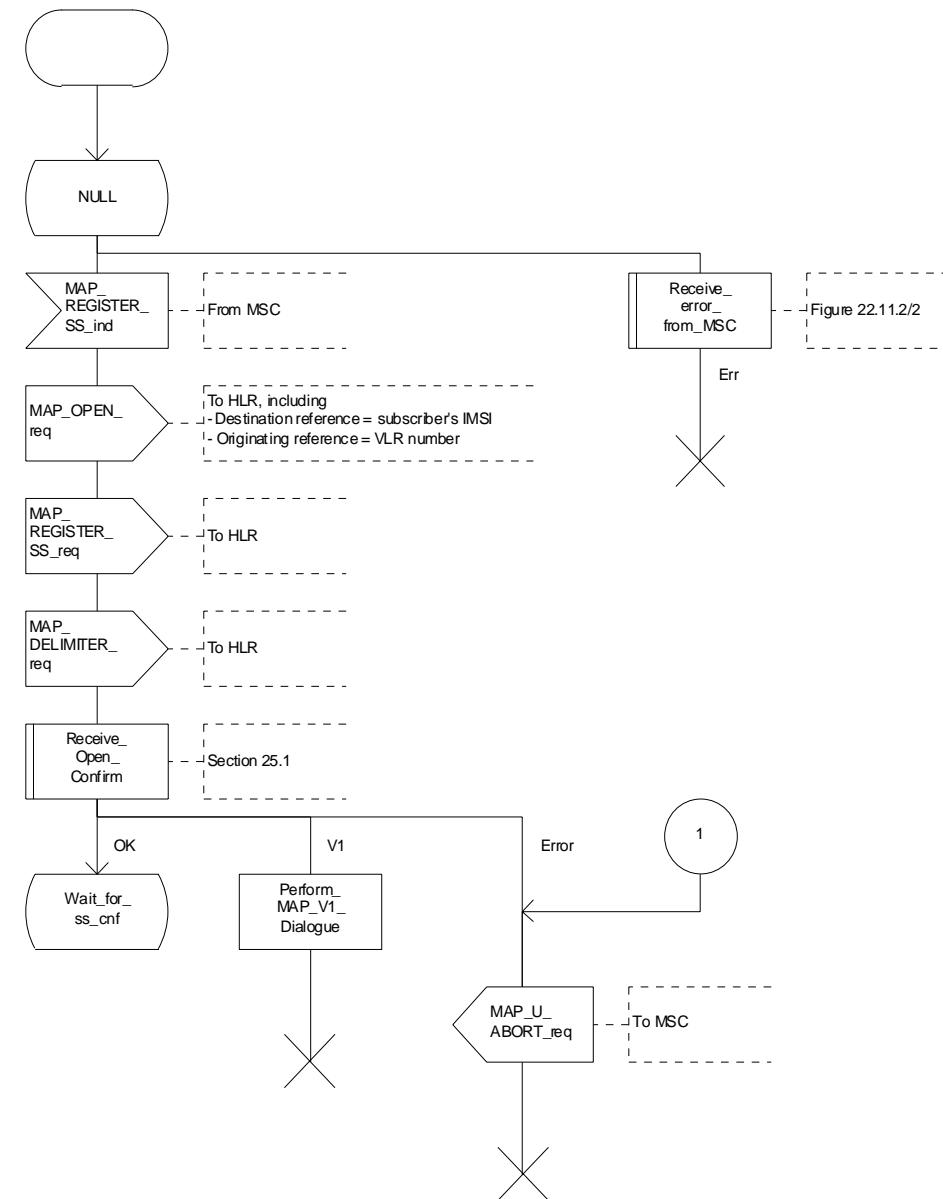


Figure 22.2.3/1 (sheet 1 of 2): Procedure SS\_Register\_VLR

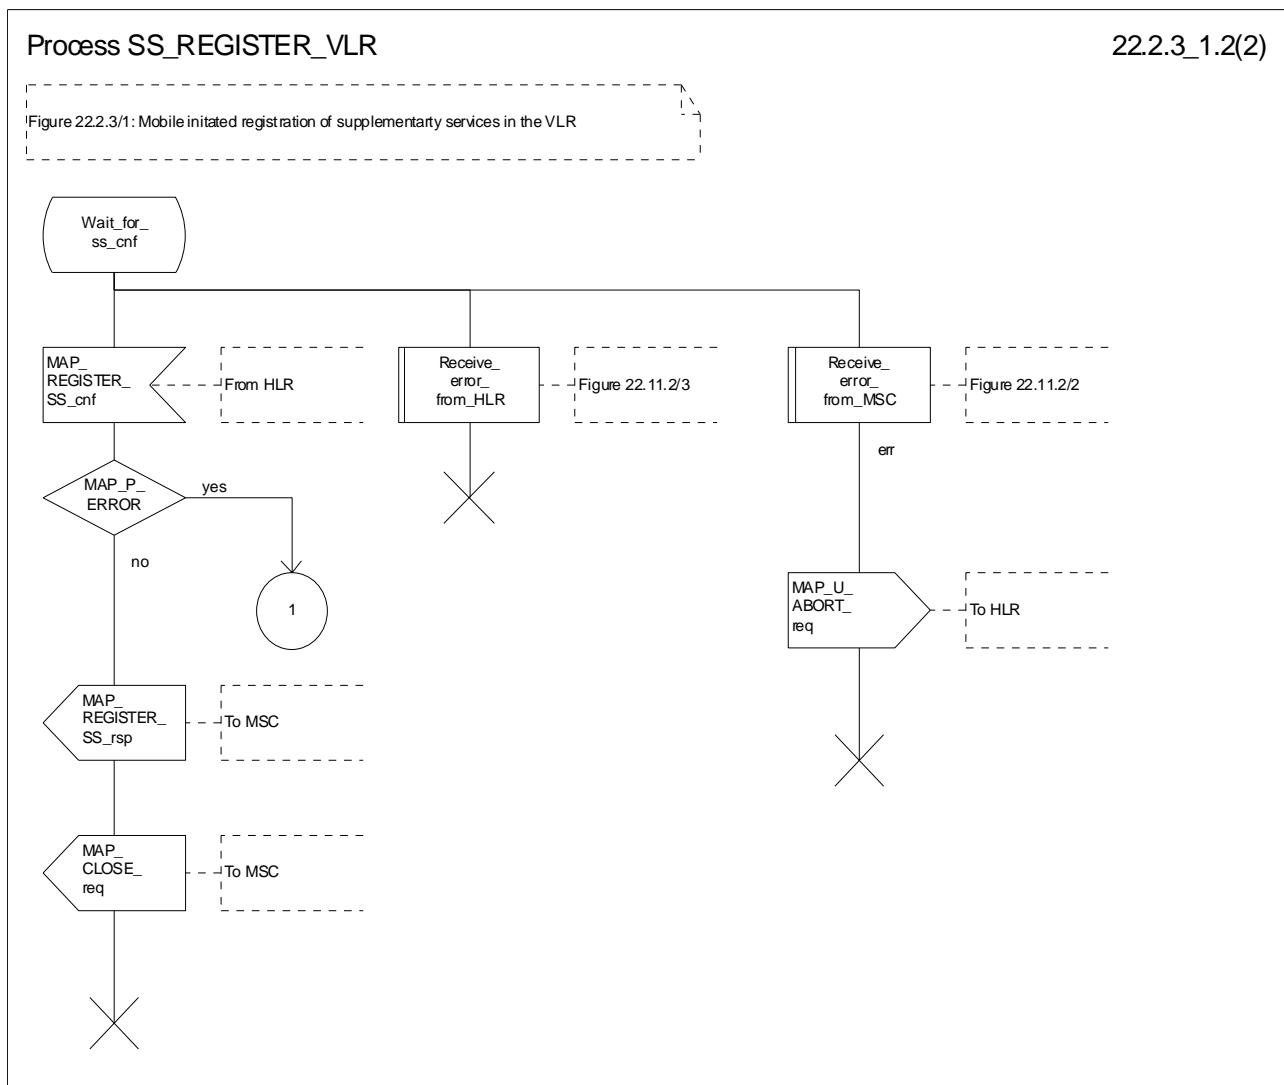

**Figure 22.2.3/1 (sheet 2 of 2): Procedure SS\_Register\_VLR**

## 22.2.4 Procedures in the HLR

The procedure in the HLR is initiated when it receives a MAP\_REGISTER\_SS indication.

The HLR acts as follows:

- if the operator has barred the subscriber from access to supplementary services, the Call Barred error should be returned to the VLR. The parameter "operatorBarring" shall be included with the error.

The supplementary service request shall then be processed according to 3GPP TS 23.011 [22] and the 03.8x and 03.9x-series of technical specifications. This handling may lead to either a successful result, a partially successful result, or an error being returned.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]):

- if the VLR is to be updated after the supplementary service registration, the MAP\_INSERT\_SUBS\_DATA\_HLR process shall be initiated;
- if at any time during this procedure a MAP\_P\_ABORT, MAP\_U\_ABORT or MAP\_CLOSE indication concerning the process is received from the VLR, the process is terminated. If a MAP\_NOTICE indication is received, a MAP\_CLOSE request is sent towards the VLR.

The registration procedure in the HLR is shown in figure 22.2.4/1.

## Process SS\_REGISTER\_HLR

22.2.4\_1.1(2)

Figure 22.2.4/1: Registration of supplementary services procedure in HLR

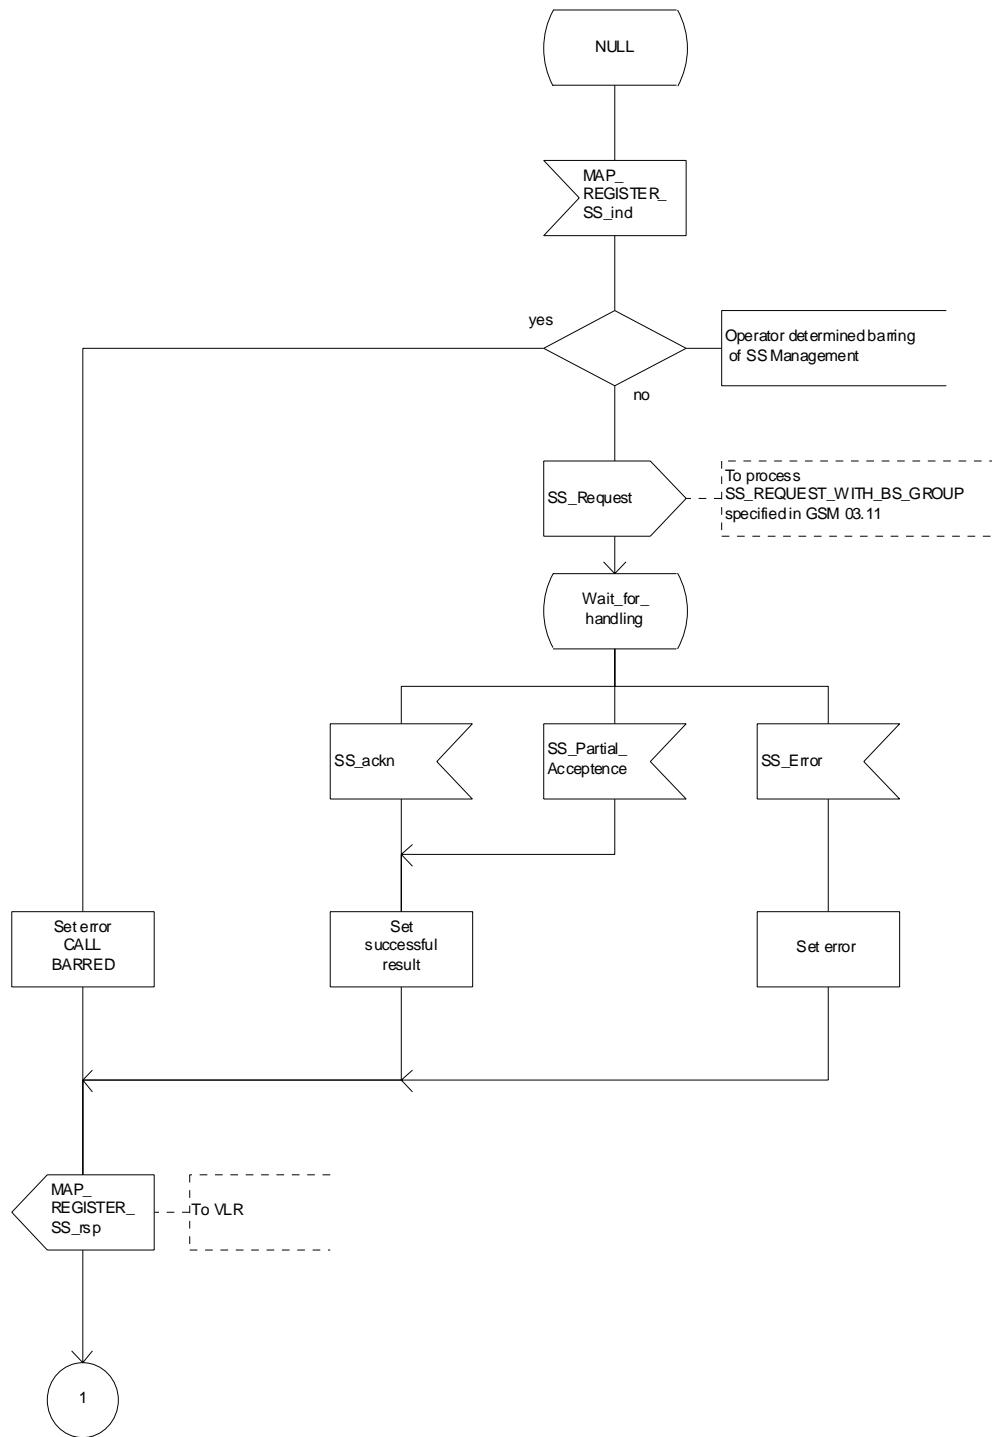


Figure 22.2.4/1 (sheet 1 of 2): Procedure SS\_Register\_HLR

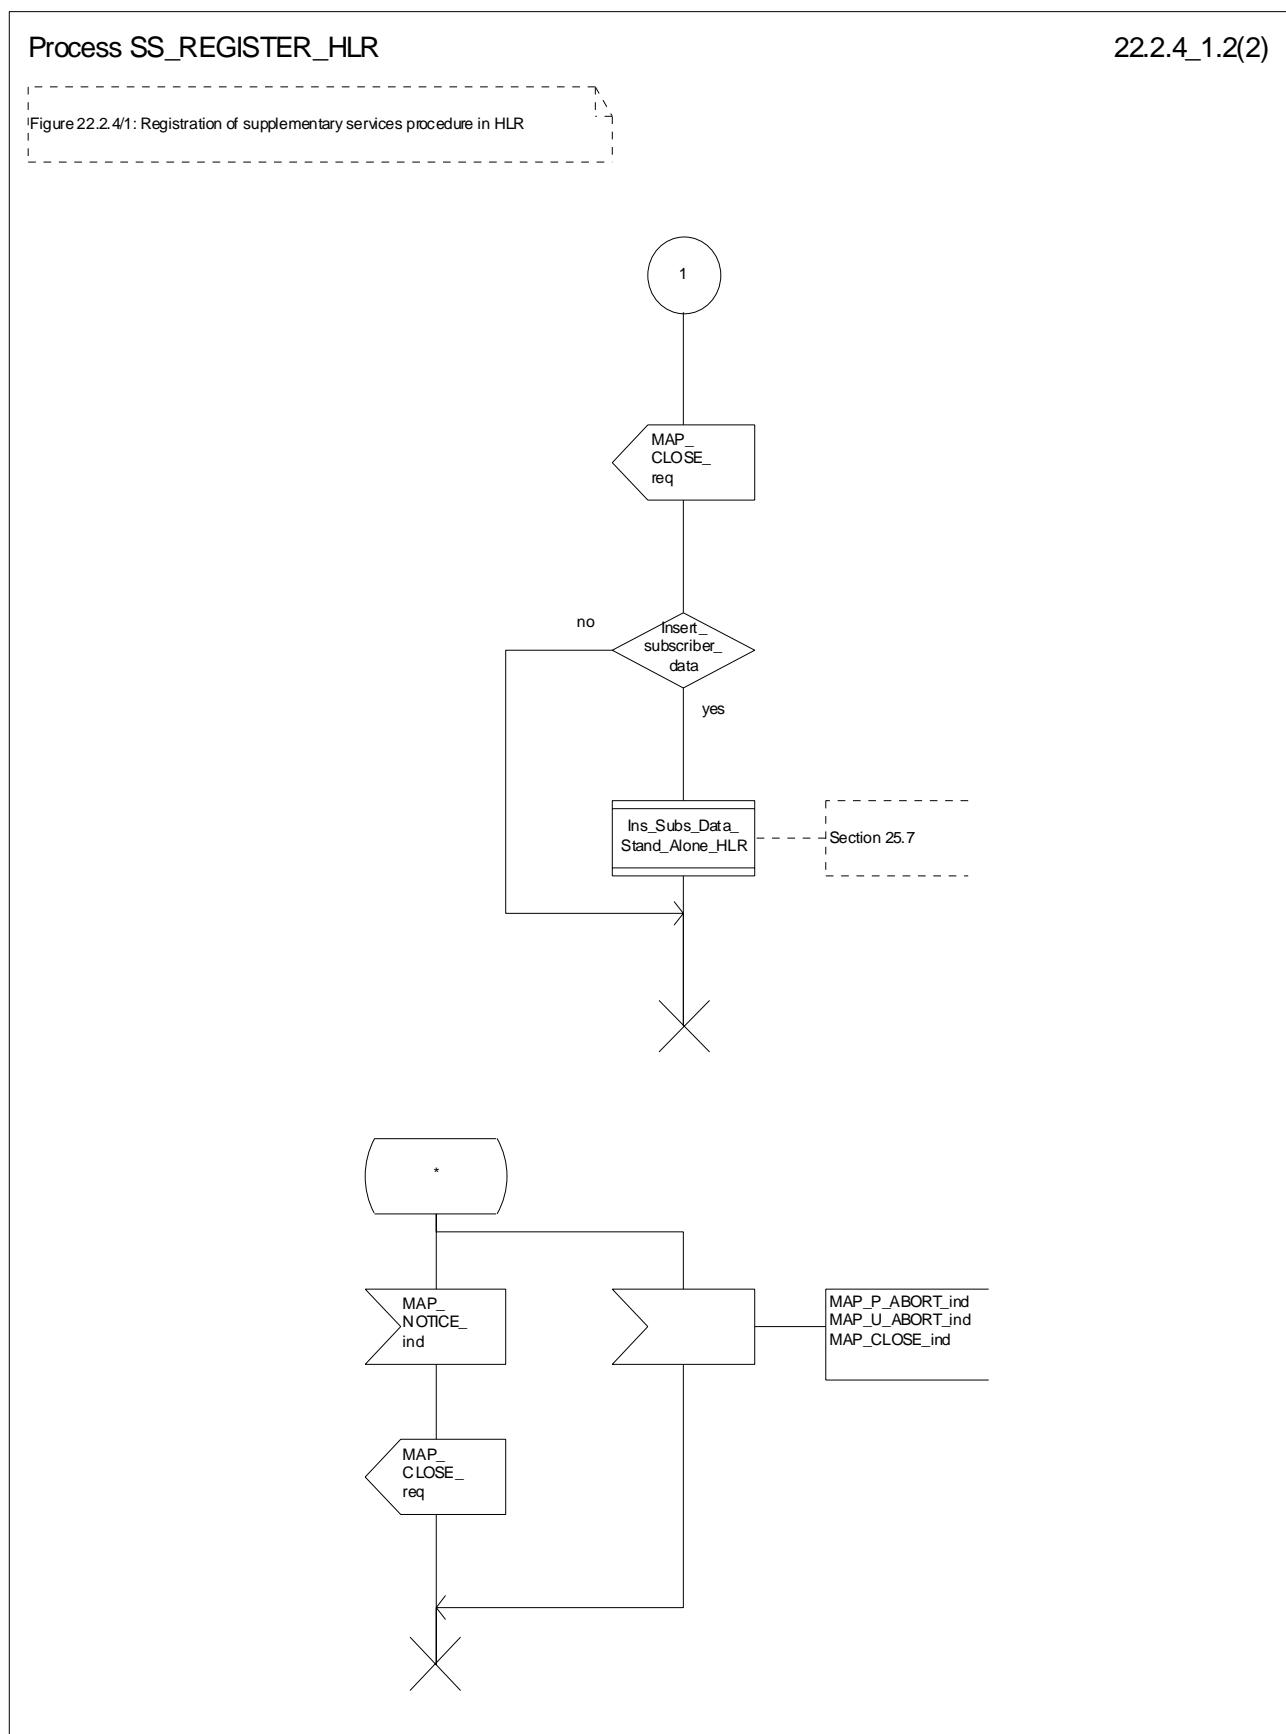


Figure 22.2.4/1 (sheet 2 of 2): Procedure SS\_Register\_HLR

## 22.3 Erasure procedure


### 22.3.1 General

The erasure procedure is used to erase data related to a supplementary service in the HLR. The erasure procedure is a fully transparent communication between the MS and the HLR, except that some services may be invoked as a result of the procedure, as described in the clauses below.

The erasure procedure is shown in figure 22.3.1/1.

The following services may be used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_INSERT_SUBSCRIBER_DATA	(defined in clauses 8 and 25);
MAP_ERASE_SS	(defined in clause 11).

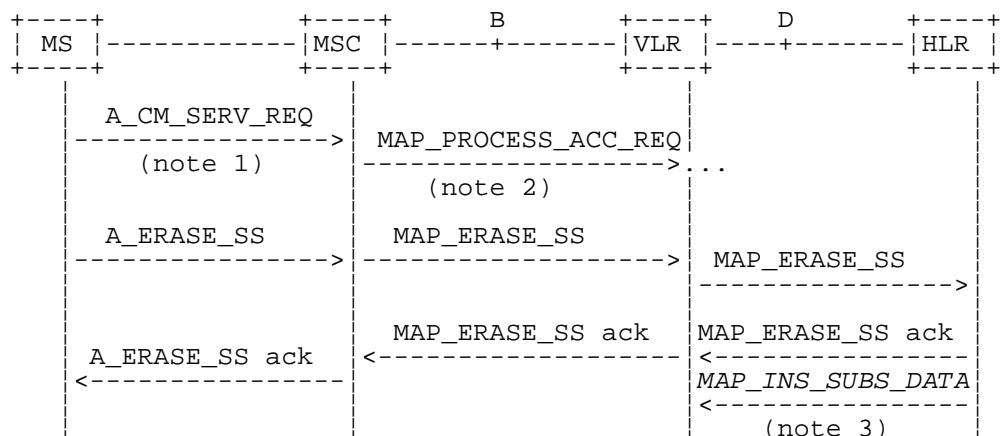

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.

NOTE 3: Services printed in *italics* are optional.

**Figure 22.3.1/1: Interfaces and services for supplementary service erasure**

### 22.3.2 Procedures in the MSC

The MSC procedures for erasure are identical to those specified for registration in clause 22.2.2. The text and diagrams in clause 22.2.2 apply with all references to registration changed to erasure.

### 22.3.3 Procedures in the VLR

The VLR procedures for erasure are identical to those specified for registration in clause 22.2.3. The text and diagrams in clause 22.2.3 apply with all references to registration changed to erasure.

### 22.3.4 Procedures in the HLR

The HLR procedure for erasure is identical to those specified for registration in clause 22.2.4. The text and diagrams in clause 22.2.4 apply with all references to registration changed to erasure.

## 22.4 Activation procedure


### 22.4.1 General

The activation procedure is used to activate a supplementary service in the HLR. The activation procedure is a fully transparent communication between the MS and the HLR, except that some services may be invoked as a result of the procedure, as described in the clauses below.

The activation procedure is shown in figure 22.4.1/1.

The following services may be used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_GET_PASSWORD	(defined in clause 11);
MAP_INSERT_SUBSCRIBER_DATA	(defined in clauses 8 and 25);
MAP_ACTIVATE_SS	(defined in clause 11).

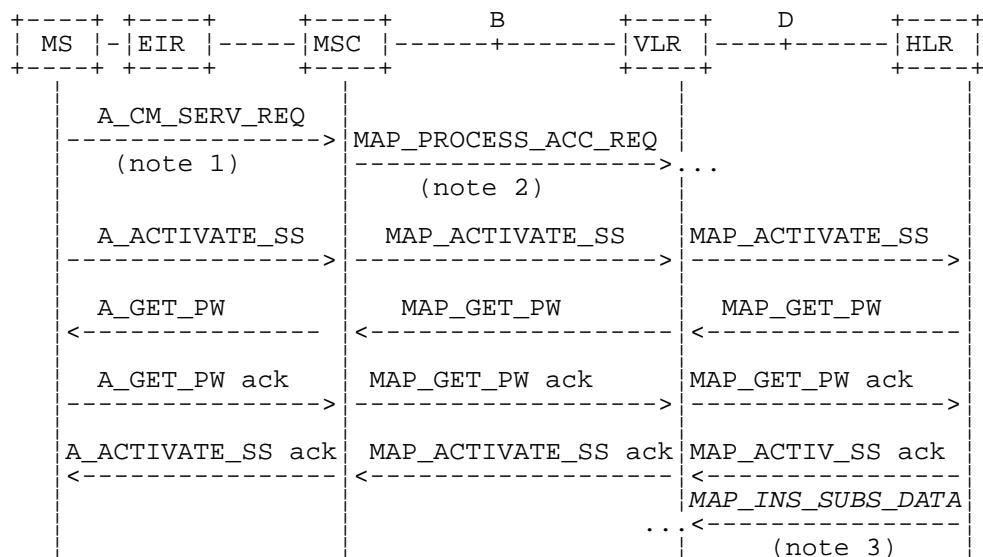

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 of this document.

NOTE 3: Services printed in italics are optional.

**Figure 22.4.1/1: Interfaces and services for supplementary service activation**

## 22.4.2 Procedures in the MSC

The A\_ACTIVATE\_SS service indication received by the MAP user in the MSC contains the SS-Code and any parameters related to the supplementary service.

The MSC transfers the received information to the VLR in the MAP\_ACTIVATE\_SS request without checking the contents of the service indication. Rules for the mapping are described in 3GPP TS 29.011 [59].

The MAP user may subsequently receive the MAP\_GET\_PASSWORD indication from the VLR. Upon receipt of this indication, the MSC sends the A\_GET\_PASSWORD message towards the MS and then awaits the response from the MS. When an A\_GET\_PASSWORD confirm message is received from the MS, the MSC initiates the MAP\_GET\_PASSWORD response towards the VLR without checking further the contents of the indication. Also see 3GPP TS 29.011 [59].

The MSC will receive a MAP\_ACTIVATE\_SS confirm from the VLR. The outcome of the procedure is reported to the MS in the A\_ACTIVATE\_SS response message, see GSM 04.8x, 04.9x and 09.11. Finally the SS connection is released.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

The handling of MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE and unexpected MAP\_CLOSE or A\_CM\_RELEASE in this procedure is identical to the handling in the Registration procedure in the MSC, see clause 22.2.2 of the present document.

The activation procedure in the MSC is shown in figure 22.4.2/1.

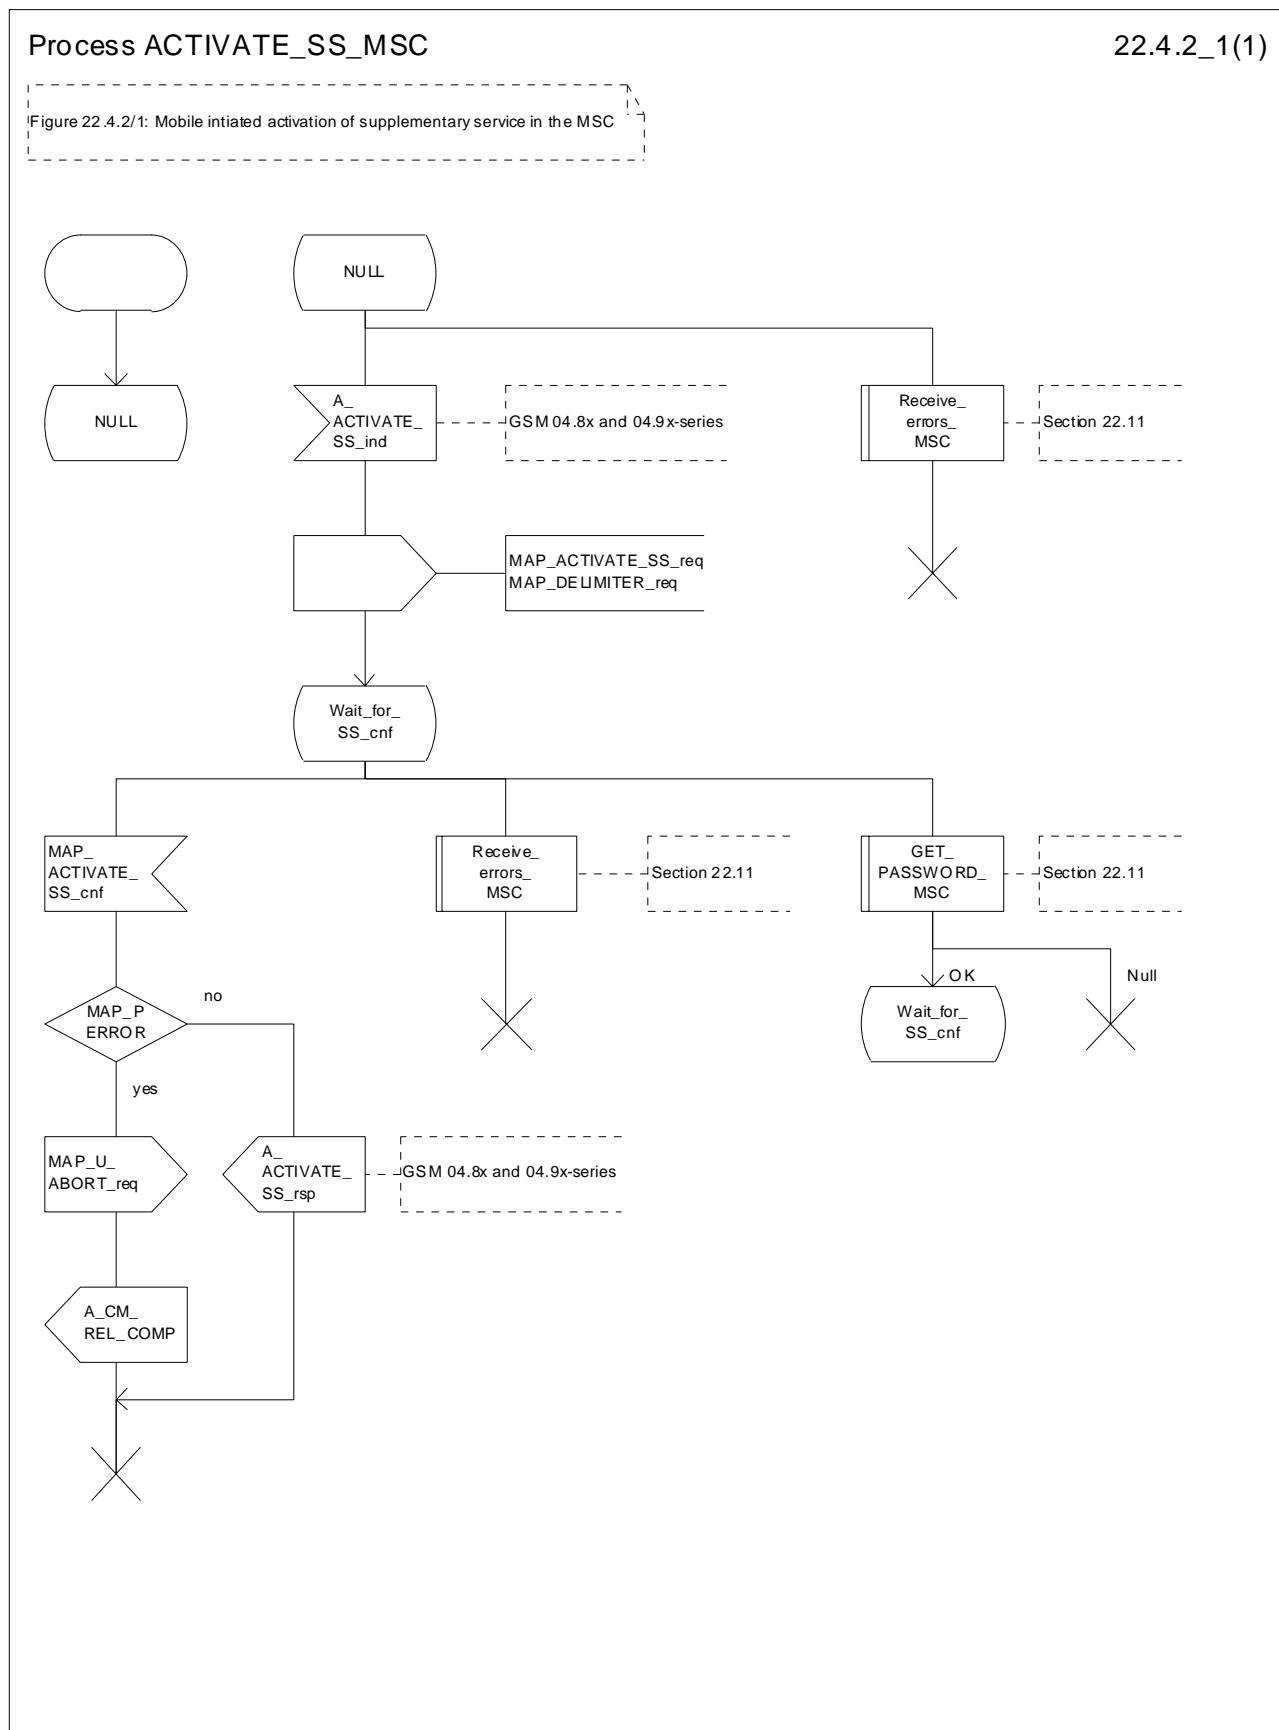


Figure 22.4.2/1: Procedure Activate\_SS\_MSC

## 22.4.3 Procedures in the VLR

### Supplementary service activation

When receiving the MAP\_ACTIVATE\_SS indication, the MAP user in the VLR transfers the information to the HLR in the MAP\_ACTIVATE\_SS request without checking the contents of the service indication.

The VLR may then receive the MAP\_GET\_PASSWORD indication. This information is transferred to the MSC in the MAP\_GET\_PASSWORD request. If a MAP\_GET\_PASSWORD confirm primitive is received from the MSC, the VLR initiates the MAP\_GET\_PASSWORD response towards the HLR.

The VLR will receive the MAP\_ACTIVATE\_SS confirm from the HLR. The MAP user in the VLR shall transfer the information contained in this primitive to the MSC in the MAP\_ACTIVATE\_SS response without checking its contents.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

### Error handling

The handling of MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE and unexpected MAP\_CLOSE in this procedure is identical to the handling in the Registration procedure in the VLR, see clause 22.2.3 of the present document.

The activation procedure in the VLR is shown in figure 22.4.3/1.

## Process ACTIVATE\_SS\_VLR

22.4.3\_1.1(2)

Figure 22.4.3/1: Activation of supplementary service procedure in the VLR

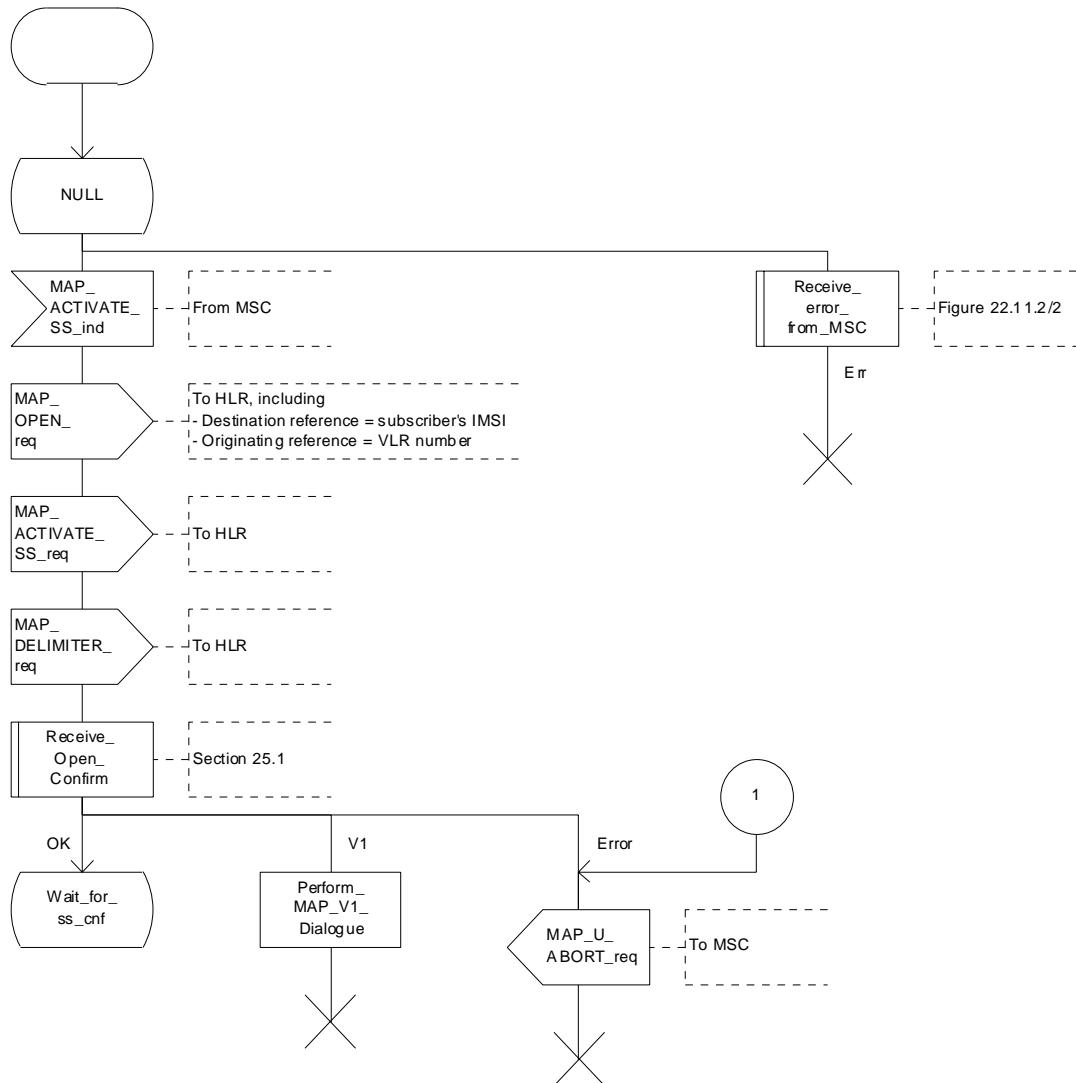


Figure 22.4.3/1 (sheet 1 of 2): Procedure Activate\_SS\_VLR

## Process ACTIVATE\_SS\_VLR

22.4.3\_1.2(2)

Figure 22.4.3/1: Activation of supplementary service procedure in the VLR

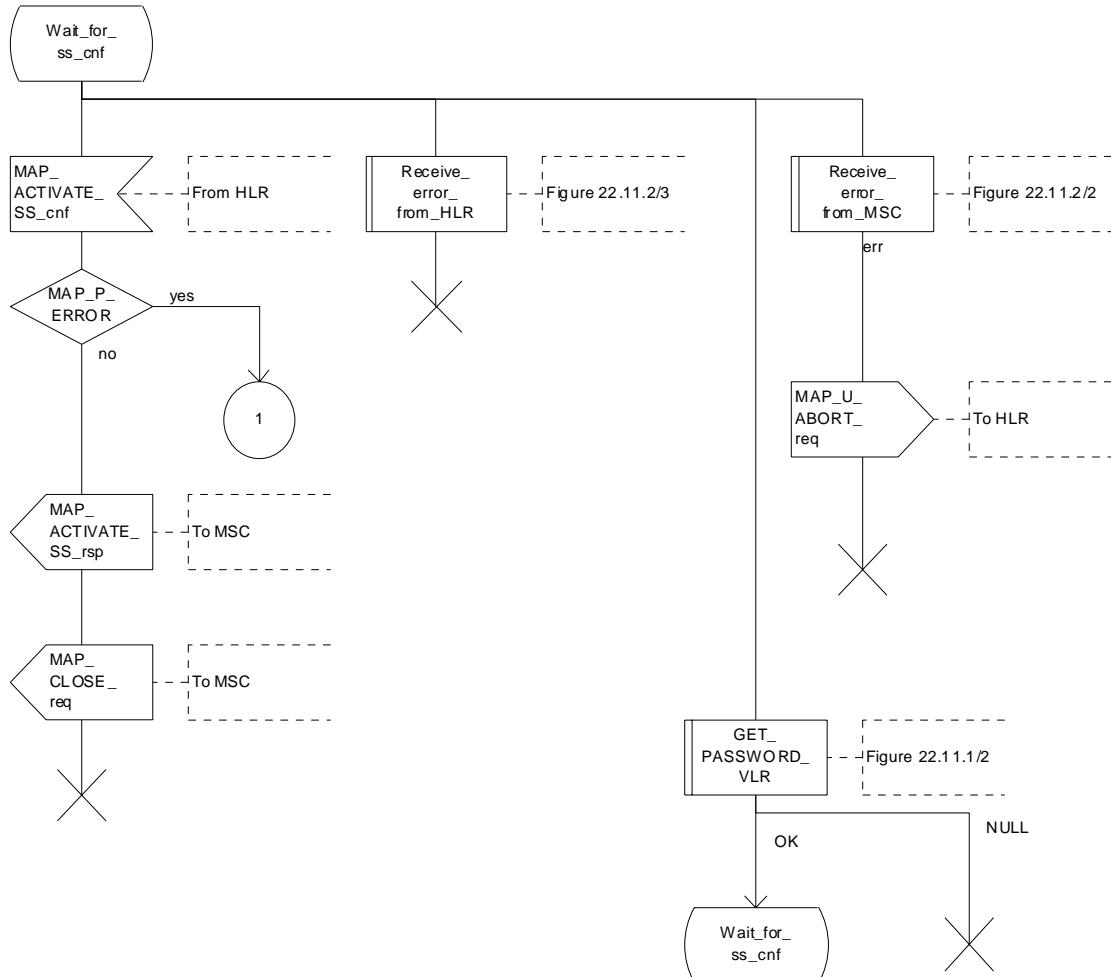


Figure 22.4.3/1 (sheet 2 of 2): Procedure SS\_Activate\_VLR

## 22.4.4 Procedures in the HLR

The procedure in the HLR is initiated when it receives a MAP\_ACTIVATE\_SS indication.

The HLR acts as follows:

- if the operator has barred the subscriber from access to supplementary services, the Call Barred error should be returned to the VLR. The parameter "operatorBarring" shall be included with the error.

The supplementary service request shall then be processed according to 3GPP TS 23.011 [22] and the 03.8x and 03.9x-series of technical specifications. This handling may lead to either a successful result, a partially successful result, or an error being returned.

During the handling of activation, the get password procedure may be initiated (as specified in 3GPP TS 23.011 [22]). This will involve the sending of a MAP\_GET\_PASSWORD request to the VLR.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]):

- if the VLR is to be updated after the supplementary service activation, the MAP\_INSERT\_SUBS\_DATA\_HLR process is initiated;
- handling of receipt of MAP\_P\_ABORT, MAP\_U\_ABORT or MAP\_CLOSE indications from the VLR is identical to their handling in the registration procedure, see clause 22.2.4 above.

The activation procedure in the HLR is shown in figure 22.4.4/1.

## Process ACTIVATE\_SS\_HLR

22.4.4\_1.1(2)

Figure 22.4.4/1: Activation of supplementary services procedure in HLR.

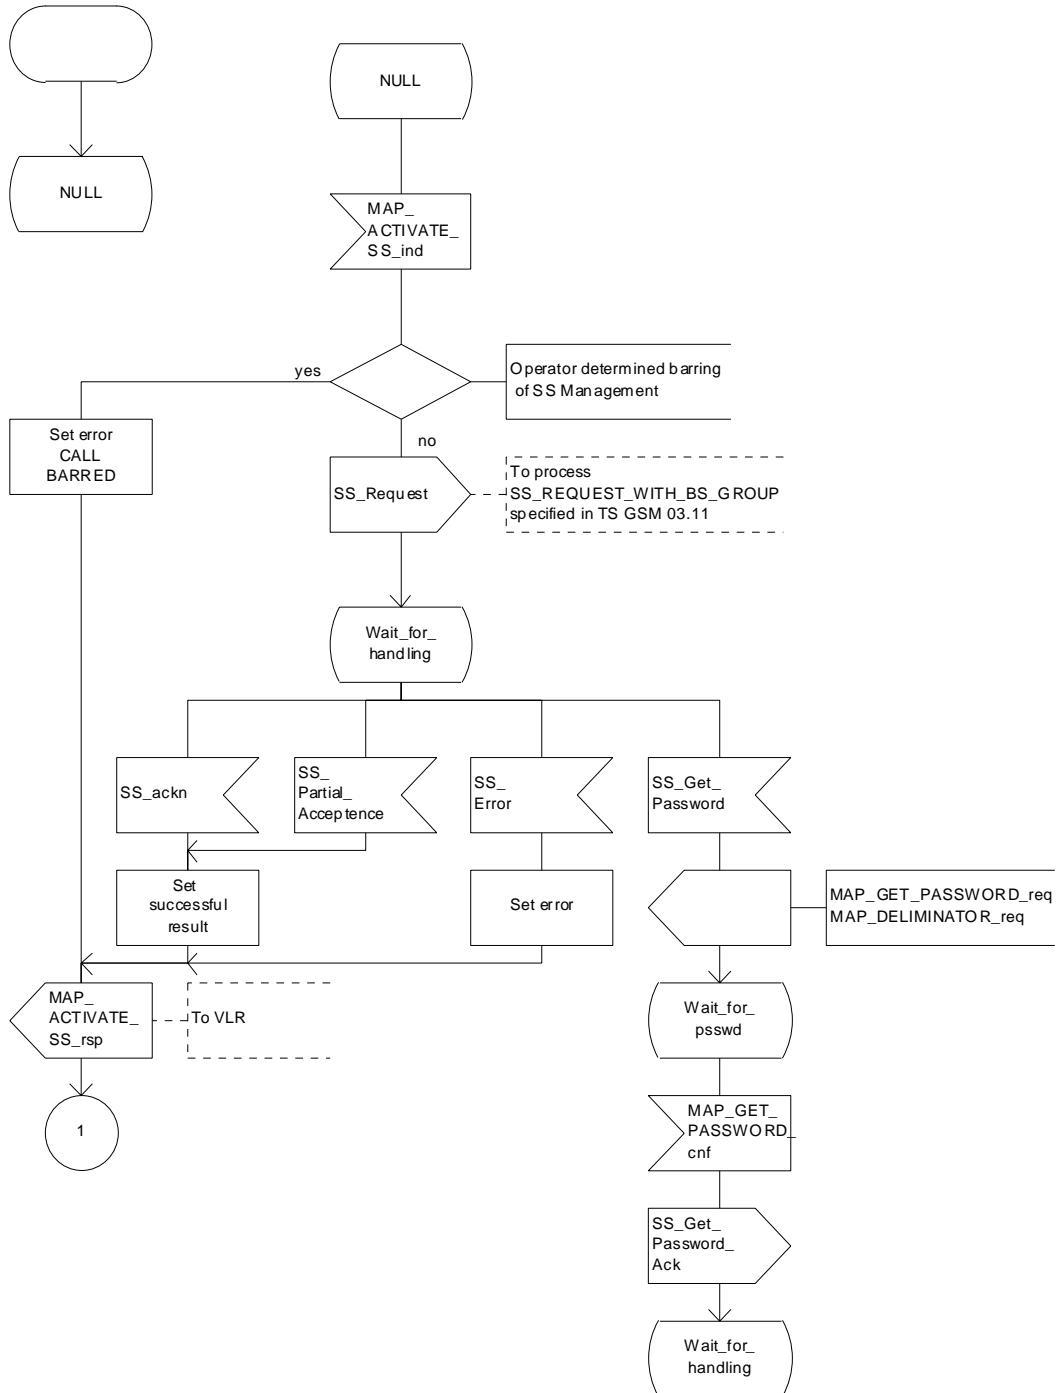


Figure 22.4.4/1 (sheet 1 of 2): Procedure Activate\_SS\_HLR

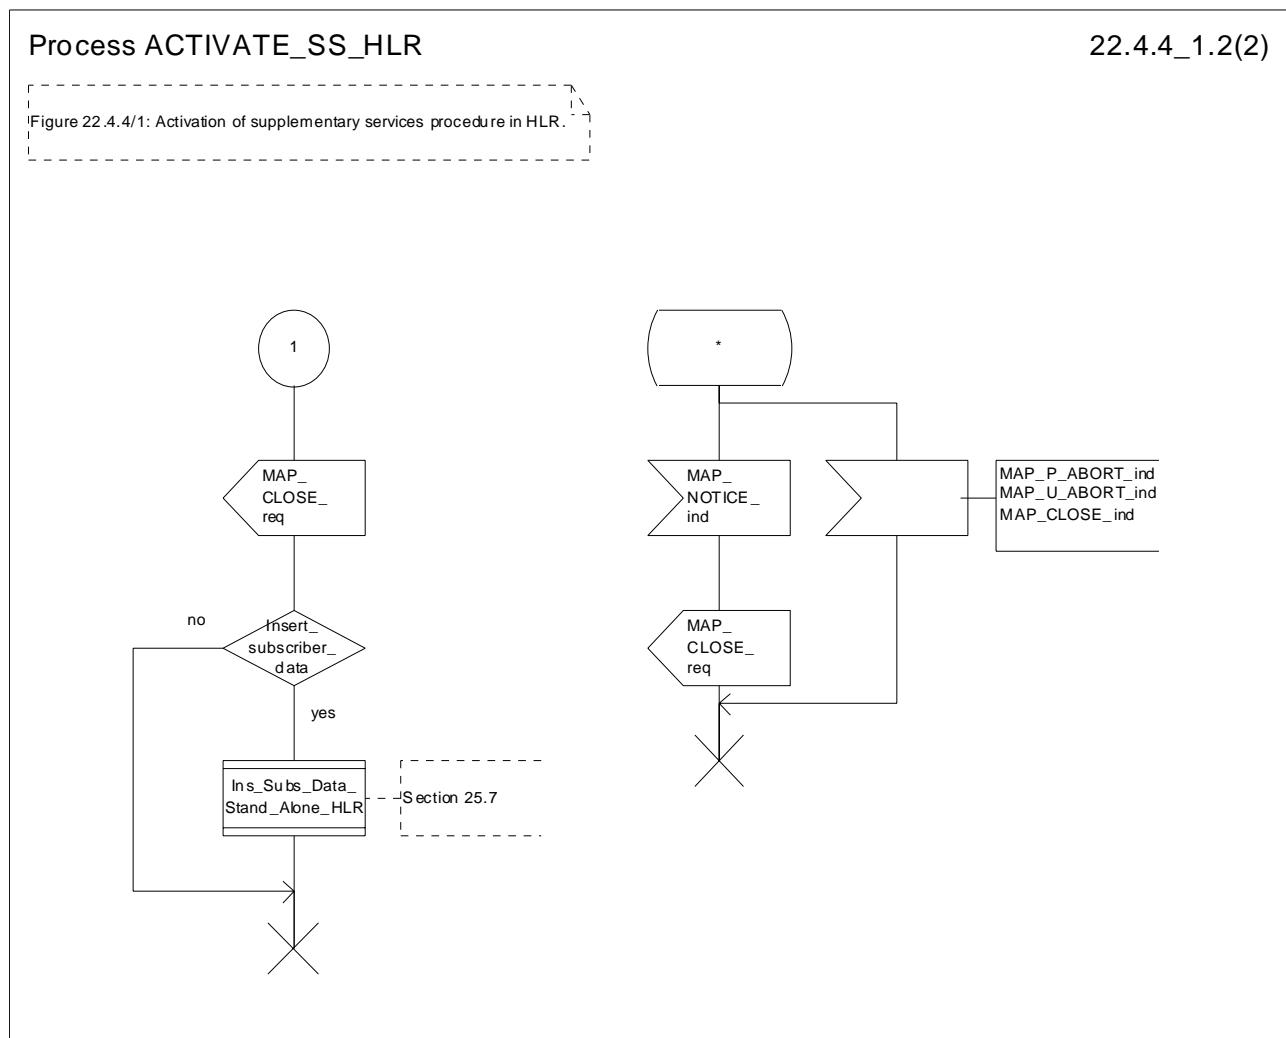


Figure 22.4.4/1 (sheet 2 of 2): Procedure Activate\_SS\_HLR

## 22.5 Deactivation procedure

### 22.5.1 General


The deactivation procedure is used to deactivate a supplementary service in the HLR. The deactivation procedure is a fully transparent communication between the MS and the HLR, except that some services may be invoked as a result of the procedure, as described in the clauses below.

The deactivation procedure is shown in figure 22.5.1/1.

The following services may be used:

- MAP\_PROCESS\_ACCESS\_REQUEST (defined in clauses 8 and 25);
- MAP\_TRACE\_SUBSCRIBER\_ACTIVITY (defined in clauses 9 and 25);
- MAP\_PROVIDE\_IMSI (defined in clauses 8 and 25);
- MAP\_FORWARD\_NEW\_TMSI (defined in clauses 8 and 25);
- MAP\_AUTHENTICATE (defined in clauses 8 and 25);
- MAP\_SET\_CIPHERING\_MODE (defined in clauses 8 and 25);
- MAP\_CHECK\_IMEI (defined in clauses 8 and 25);

MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_GET_PASSWORD	(defined in clause 11);
MAP_INSERT_SUBSCRIBER_DATA	(defined in clauses 8 and 25);
MAP_DEACTIVATE_SS	(defined in clause 11).

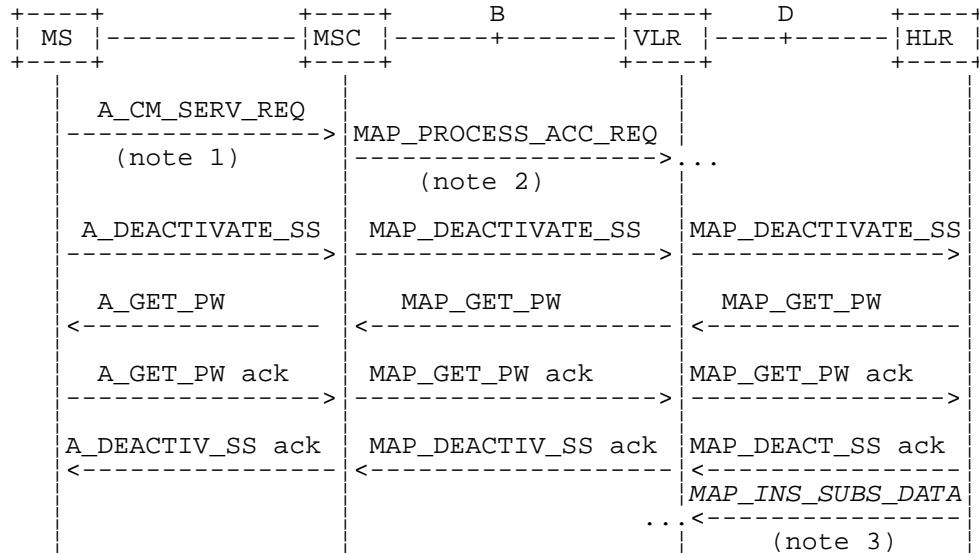

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.

NOTE 3: Services printed in *italics* are optional.

**Figure 22.5.1/1: Interfaces and services for supplementary service deactivation**

## 22.5.2 Procedures in the MSC

The MSC procedures for deactivation are identical to those specified for activation in clause 22.4.2. The text and diagrams in clause 22.4.2 apply with all references to activation changed to deactivation.

## 22.5.3 Procedures in the VLR

The VLR procedures for deactivation are identical to those specified for activation in clause 22.4.3. The text and diagrams in clause 22.4.3 apply with all references to activation changed to deactivation.

## 22.5.4 Procedures in the HLR

The HLR procedures for deactivation are identical to those specified for activation in clause 22.4.4. The text and diagrams in clause 22.4.4 apply with all references to activation changed to deactivation.

## 22.6 Interrogation procedure


### 22.6.1 General

The interrogation procedure is used to retrieve information related to a supplementary service from the VLR or the HLR. It is the VLR which decides whether an interrogation request should be forwarded to the HLR or not. Some non-supplementary service related services may be invoked as a result of the procedure, as described in the clauses below.

The interrogation procedure is shown in figure 22.6.1/1.

The following services may be used:

- MAP\_PROCESS\_ACCESS\_REQUEST (defined in clauses 8 and 25);
- MAP\_TRACE\_SUBSCRIBER\_ACTIVITY (defined in clauses 9 and 25);
- MAP\_PROVIDE\_IMSI (defined in clauses 8 and 25);
- MAP\_FORWARD\_NEW\_TMSI (defined in clauses 8 and 25);
- MAP\_AUTHENTICATE (defined in clauses 8 and 25);
- MAP\_SET\_CIPHERING\_MODE (defined in clauses 8 and 25);
- MAP\_CHECK\_IMEI (defined in clauses 8 and 25);
- MAP\_READY\_FOR\_SM (defined in clauses 12 and 25);
- MAP\_INTERROGATE\_SS (defined in clause 11).

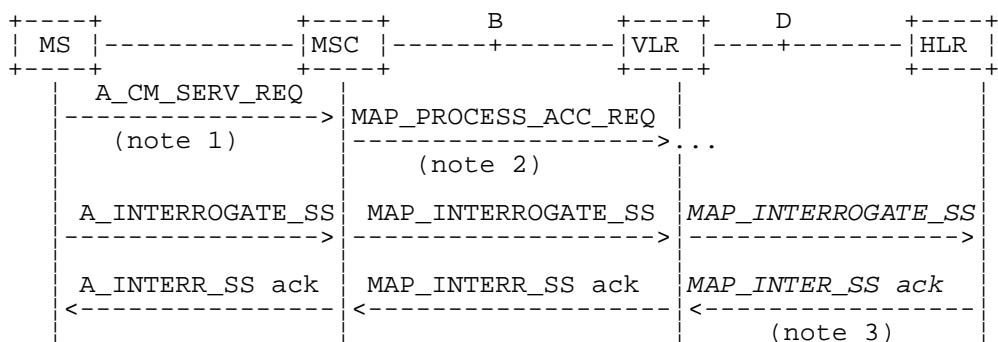

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.  
 NOTE 3: Services printed in italics are optional.

**Figure 22.6.1/1: Interfaces and services for supplementary service interrogation**

## 22.6.2 Procedures in the MSC

The MSC procedures for interrogation are identical to those specified for registration in clause 22.2.2. The text and diagrams in clause 22.2.2 apply with all references to registration changed to interrogation.

## 22.6.3 Procedures in the VLR

### Supplementary service interrogation

When receiving the MAP\_INTERROGATE\_SS indication, the MAP user acts as follows:

- if the operator has barred the subscriber from access to supplementary services, the error Call Barred is returned to the MSC. The parameter "operatorBarring" shall be included with the error.

The interrogation is either answered by the VLR or by the HLR, depending on the service interrogated.

#### a) Interrogation to be handled by the VLR

The supplementary service request shall then be processed according to 3GPP TS 23.011 [22] and the 03.8x and 03.9x-series of technical specifications. This handling may lead to either a successful result, a partially successful result, or an error being returned.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

**b) Interrogation to be handled by HLR**

If the interrogation is to be handled by the HLR, on receiving the MAP\_INTERROGATE\_SS indication, the MAP user in the VLR transfers the information to the HLR in the MAP\_INTERROGATE\_SS request without further checking the contents of the service indication.

The VLR will receive the MAP\_INTERROGATE\_SS confirm from the HLR. The MAP user in the VLR shall transfer the information contained in this primitive to the MSC in the MAP\_INTERROGATE\_SS response without checking its contents.

For call independent SS operations, each message shall only contain a single component. Messages which contain more than one component will be stopped at the air interface (as specified in 3GPP TS 29.011 [59]).

**Error handling**

Handling of MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE and unexpected MAP\_CLOSE in this procedure is identical to the handling in the Registration procedure in the VLR, clause 22.2.3. The Interrogation procedure is described in figure 22.6.3/1.

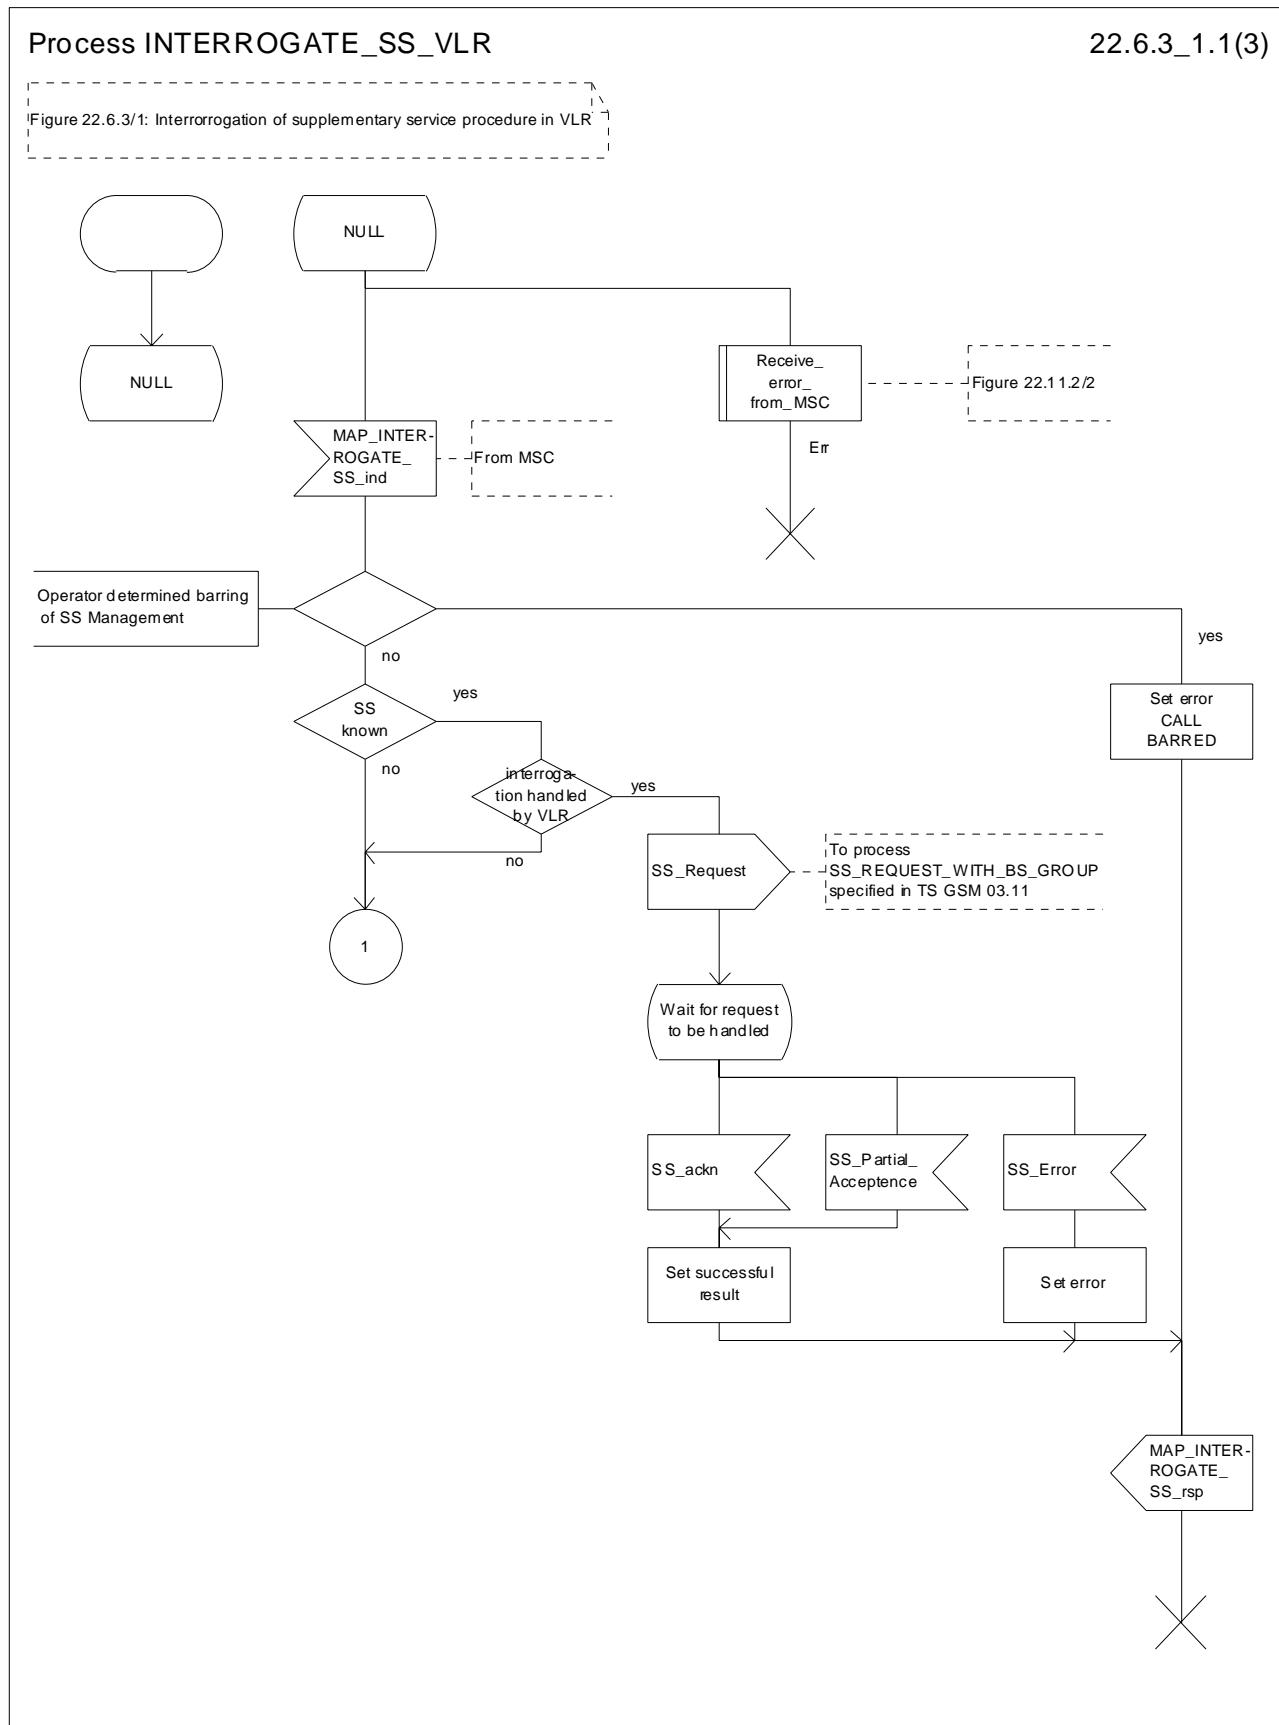


Figure 22.6.3/1 (sheet 1 of 3): Procedure Interrogate\_SS\_VLR

## Process INTERROGATE\_SS\_VLR

22.6.3\_1.2(3)

Figure 22.6.3/1: Interrogation of supplementary service procedure in VLR

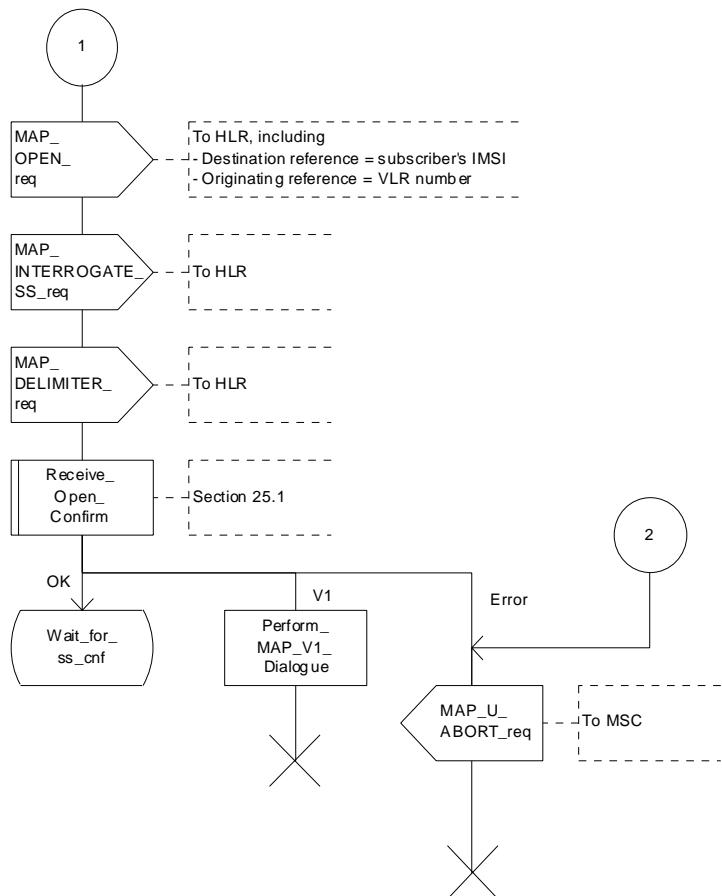


Figure 22.6.3/1 (sheet 2 of 3): Procedure Interrogate\_SS\_VLR

## Process INTERROGATE\_SS\_VLR

22.6.3\_1.3(3)

Figure 22.6.3/1: Interrogation of supplementary service procedure in VLR

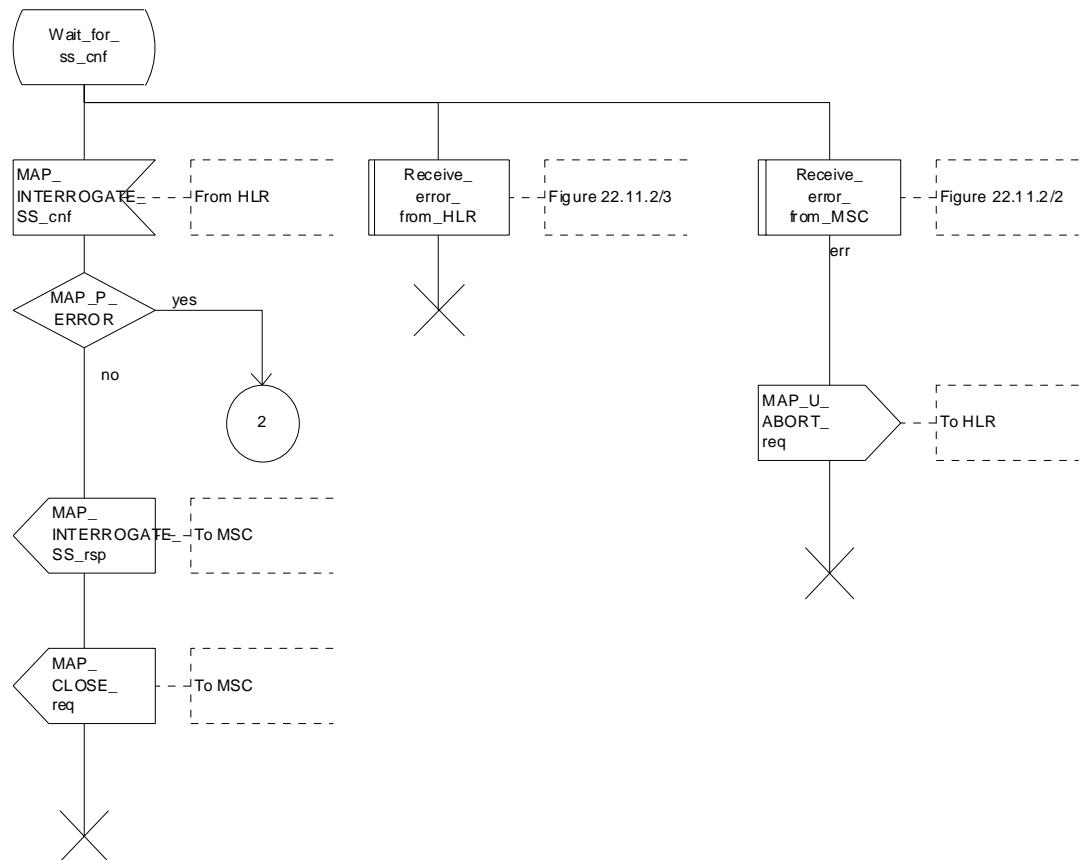


Figure 22.6.3/1 (sheet 3 of 3): Procedure Interrogate\_SS\_VLR

## 22.6.4 Procedures in the HLR

When receiving the MAP\_INTERROGATE\_SS indication, the MAP user acts as follows:

- if the operator has barred the subscriber from access to supplementary services, the error Call Barred is returned to the MSC. The parameter "operatorBarring" shall be included with the error;
- if the supplementary service is not supported in the HLR, the error Unexpected Data Value is returned to the VLR.

The interrogation is either answered by the VLR or by the HLR, depending on the service interrogated.

### a) Interrogation to be handled by the VLR

If the interrogation procedure should have been answered by the VLR, then the HLR assumes that the VLR does not support the interrogated supplementary service, and returns the SS Not Available error to the VLR.

### b) Interrogation to be handled by HLR

The supplementary service request shall be processed according to 3GPP TS 23.011 [22] and the 03.8x and 03.9x-series of technical specifications. This handling may lead to either a successful result or an error being returned.

For call independent SS operations, each message shall only contain a single component.

### Error handling

Handling of MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE and unexpected MAP\_CLOSE in this procedure is identical to the handling in the Registration procedure in the VLR, clause 22.2.3. The Interrogation procedure is described in figure 22.6.4/1.

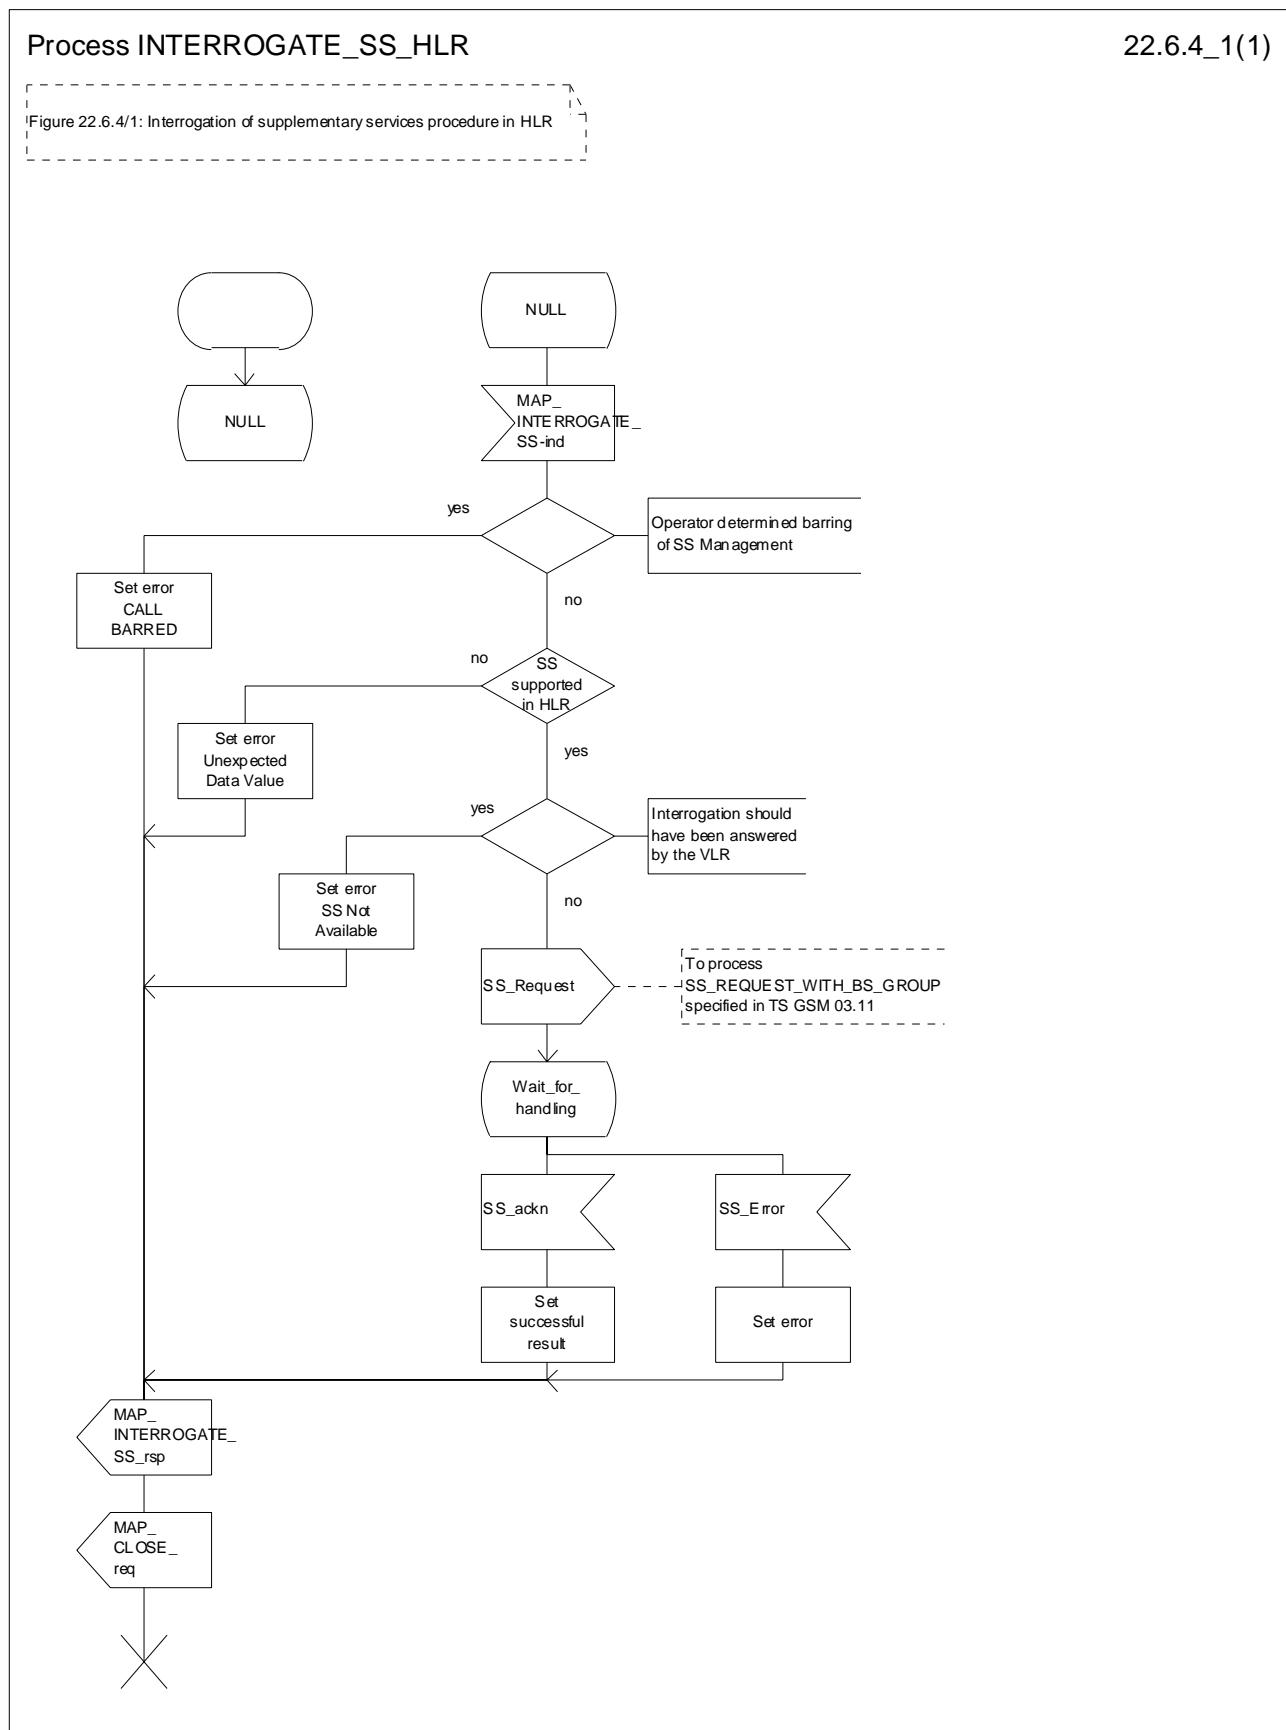


Figure 22.6.4/1: Procedure Interrogate\_SS\_HLR

## 22.7 Invocation procedure


### 22.7.1 General

The invocation procedure is used to check subscription data in the VLR for certain supplementary services which are invoked after the call set-up phase is finished. For invocation of supplementary services which are invoked during the call set-up phase, please refer to the Call Handling procedure descriptions.

The invocation procedure is shown in figure 22.7.1/1. Note that some optional services may be invoked in connection with this procedure, as described in the clause below.

The following services are used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_INVOKE_SS	(defined in clause 11).

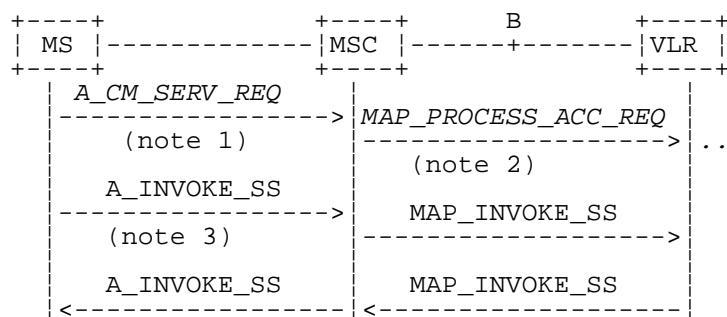

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines indicate the trigger provided by the signalling on the radio path, and the signalling triggered on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.

NOTE 3: A\_INVOKE\_SS is a generic message to illustrate any supplementary service invocation request message on the air interface, e.g. BuildMPTY, see 3GPP TS 24.080 [38].

**Figure 22.7.1/1: Interfaces and services for supplementary service invocation**

### 22.7.2 Procedures in the MSC

#### Process access request

Before the Call Hold or Multi-Party supplementary services can be invoked, a CC connection must be established between the MS and the MSC as described in 3GPP TS 24.008 [35] and the Call Handling procedure descriptions within the present document.

When an A\_INVOKE\_SS request message arrives at the MSC during a call (as described in 3GPP TS 24.010 [36], 04.8x and 04.9x-series of technical specifications), then if control of subscription to the invoked supplementary service is required, the MSC initiates the process access request procedure towards the VLR as described in clause 25 of the present document.

## Supplementary service invocation

If the Process Access Request procedure towards the VLR is successful, the MSC shall forward a MAP\_INVOKE\_SS service request towards the VLR. This request shall contain the SS-Code of the supplementary service to be invoked, and possibly the Basic service code. Mapping from the A\_INVOKE\_SS to this service request is described in 3GPP TS 29.011 [59].

The MSC will receive a MAP\_INVOKE\_SS confirm from the VLR. If the outcome of the service is successful (i.e. the service confirm is empty), the MSC will invoke the requested supplementary service as described in GSM 02.8x-series, 03.8x and 03.9x-series of technical specifications. If the outcome of the service is unsuccessful, the MSC shall send an appropriate A\_INVOKE\_SS response towards the MS. The structure of this message is described in 3GPP TS 29.011 [59] and 04.8x and 04.9x-series of technical specifications.

## Error handling

If at any time during this procedure a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE or MAP\_CLOSE indication concerning the process is received from the VLR, the process is terminated. If a MAP\_NOTICE indication was received from the VLR, the VLR dialogue must also be aborted by sending a MAP\_U\_ABORT request indicating Procedure error towards the VLR. Possible signalling to the MS is described in 3GPP TS 24.010 [36].


If an A\_CM\_RELEASE indication is received from the MS, all open transactions are released using the MAP\_U\_ABORT request indicating application procedure cancellation; the process terminates.

The invocation procedure in the MSC is shown in figure 22.7.2/1.

## Process INVOKE\_SS\_MSC

22.7.2\_1.1(2)

Figure 22.7.2/1: Mobile initiated invocation of supplementary service procedure in the MSC

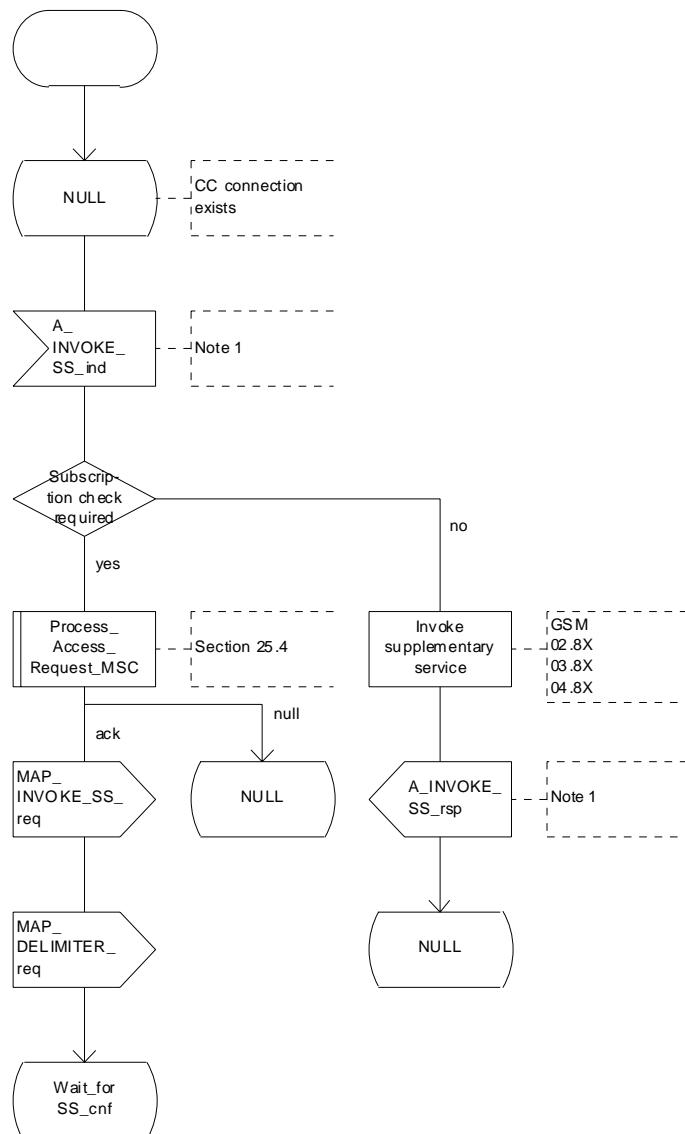


Note 1: Fictitious signal to indicate receipt/sending of SS invocation invoke component on the air interface (eg. BuildMPTY).  
Described in GSM 04.8X and 09.11.

Figure 22.7.2/1 (sheet 1 of 2): Procedure INVOKE\_SS\_MSC

## Process INVOKE\_SS\_MSC

22.7.2\_1.2(2)

Figure 22.7.2/1: Mobile initiated invocation of supplementary service procedure in the MSC

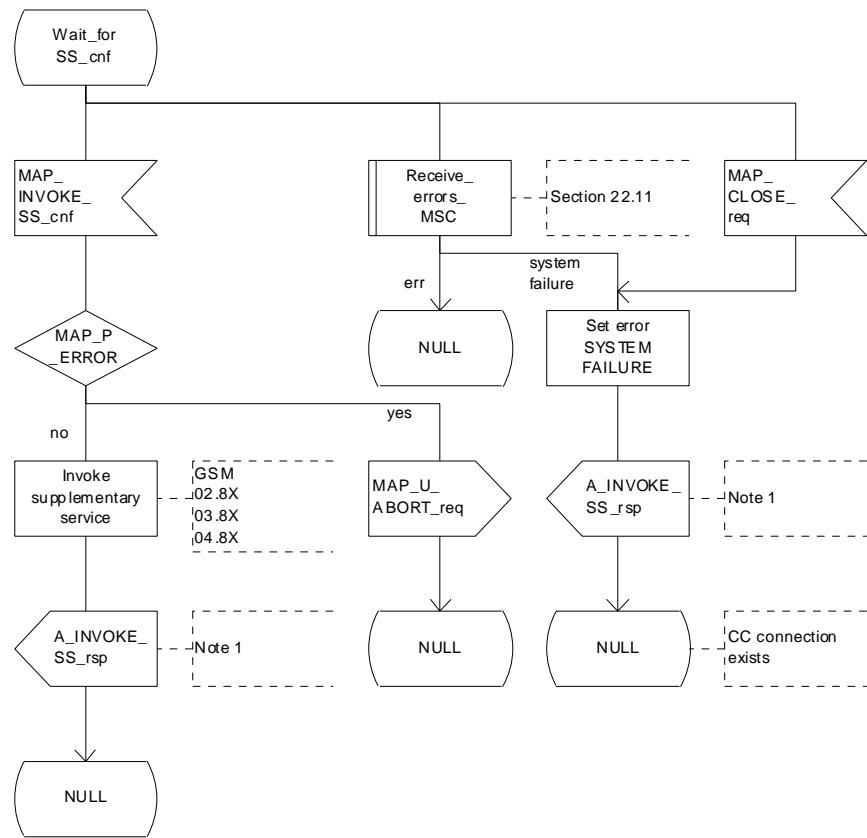

Note 1: Fictitious signal to indicate receipt/ sending of SS invocation invoke component on the air interface, (e.g. BuildMPTY).  
Described in GSM 04.8X and 09.11.

Figure 22.7.2/1 (sheet 2 of 2): Procedure INVOKE\_SS\_MSC

## 22.7.3 Procedures in the VLR

### Process Access Request

When receiving the MAP\_PROCESS\_ACCESS\_REQUEST indication, the VLR acts as described in clause 25 of the present document.

### Supplementary service invocation

When receiving the MAP\_INVOKE\_SS indication, the MAP user acts as follows:

- if the operator has barred the subscriber from access to supplementary services, the error "Call Barred" is returned to the MSC. The parameter "operatorBarring" shall be included with the error;
- if any irrelevant information elements (according to the service description) or invalid information element values are present in the service request, then the unexpected data value error is returned to the MSC in the MAP\_INVOKE\_SS response;
- if the VLR does not support the invoked supplementary service then the VLR shall respond with the SS Not Available error;
- if the requested supplementary service cannot be invoked by subscriber actions, then the VLR shall respond with the Illegal SS Operation error;
- if the subscriber is not provided with (i.e. subscribed to) the requested supplementary service, then the SS error status error (possibly including the SS-Status as parameter) is returned to the MSC in the MAP\_INVOKE\_SS response.

If all checks are passed the VLR returns an empty MAP\_INVOKE\_SS response to the MSC, thus indicating that the invocation request was accepted.

If at any time during this procedure a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_NOTICE or unexpected MAP\_CLOSE indication concerning the process is received from the MSC, the process terminates. If a MAP\_NOTICE indication was received from the MSC, that dialogue must be aborted by sending a MAP\_U\_ABORT request indicating Procedure error towards the MSC. The process terminates.

The invocation procedure in the VLR is shown in figure 22.7.3/1.

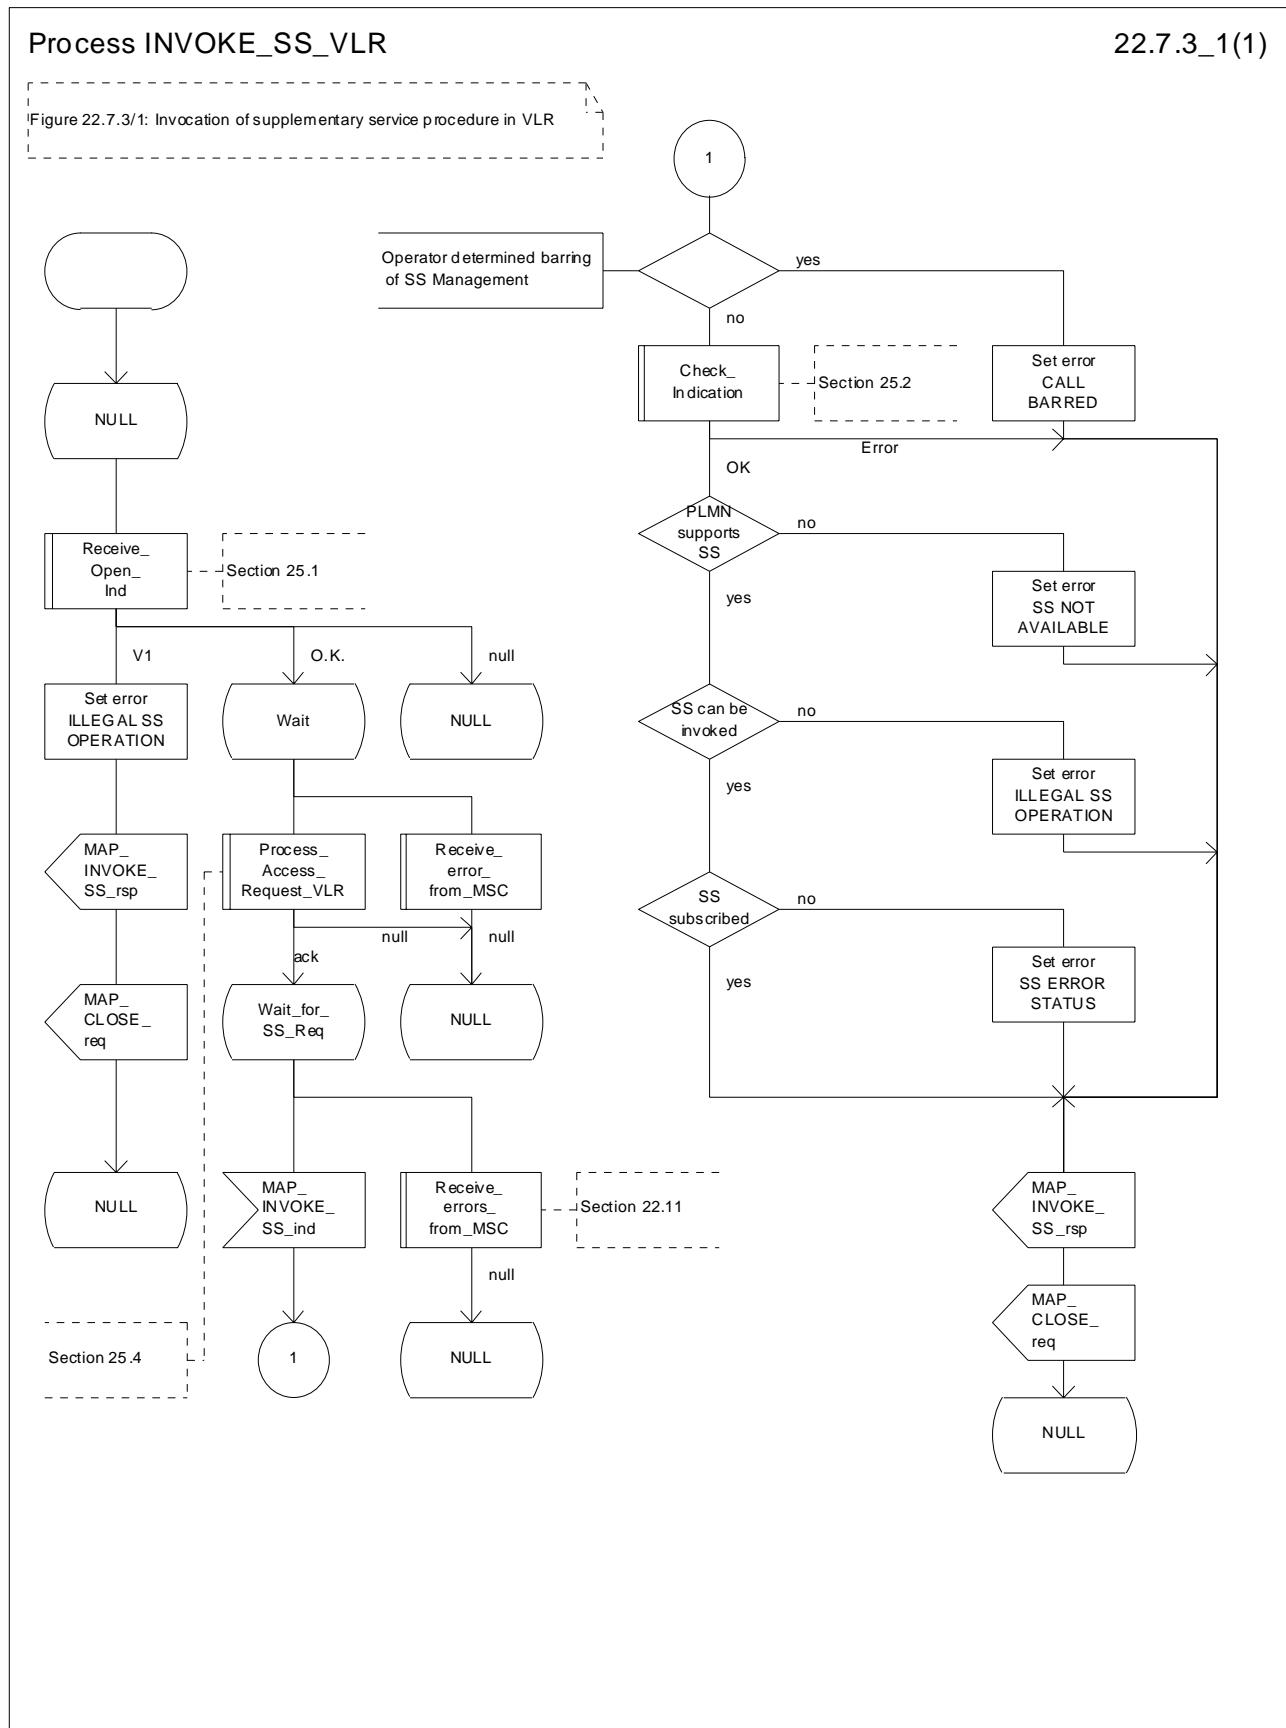


Figure 22.7.3/1: Procedure Invoke\_SS\_VLR

## 22.8 Password registration procedure


### 22.8.1 General

The password registration procedure is used to register a password in the HLR. The password registration procedure is a fully transparent communication between the MS and the HLR, except that some services may be invoked as a result of the procedure, as described below.

The password registration procedure is shown in figure 22.8.1/1.

The following services may be used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_GET_PASSWORD	(defined in clause 11).

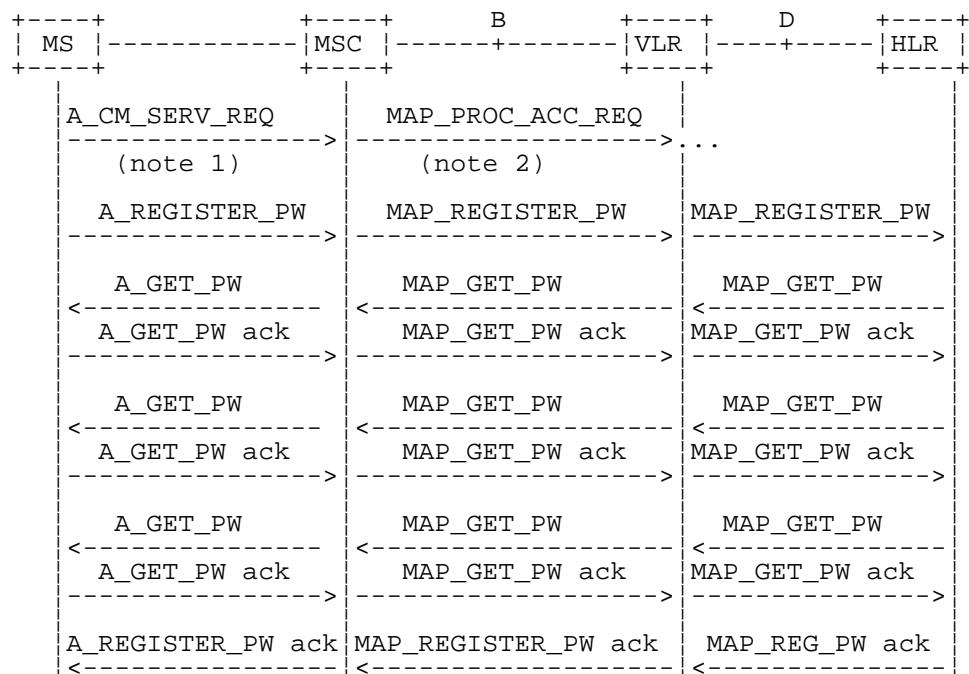

NOTE 1: For details of the procedure on the radio path, see 3GPP TS 24.008 [35], 04.10, 04.8x and 04.9x. Services shown in dotted lines are triggers/ triggered signalling on the radio path.

NOTE 2: For details on the Process Access Request procedure, please refer to clause 25 in the present document.

NOTE 3: Use of each of the three MAP\_GET\_PASSWORD operations is described in clause 22.8.4.

**Figure 22.8.1/1: Interfaces and services for supplementary service password registration**

## 22.8.2 Procedures in the MSC

The password registration procedure in the MSC is identical to that for activation specified in clause 22.4.2. All the text and diagrams in clause 22.4.2 apply with all references to activation changed to password registration.

## 22.8.3 Procedures in the VLR

The password registration procedure in the VLR is identical to that for activation specified in clause 22.4.3. All the text and diagrams in clause 22.4.3 apply with all references to activation changed to password registration.

## 22.8.4 Procedures in the HLR

The procedure in the HLR is initiated when it receives a MAP\_REGISTER\_PASSWORD indication.

The HLR acts as follows:

- if the operator has barred the subscriber for access to supplementary services, the Call Barred error is returned to the VLR. The parameter "operatorBarring" shall be included with the error;
- if any irrelevant information elements (according to the service description) or invalid information element values are present, then the unexpected data value error is returned to the VLR in the response. This error should thus be returned if the SS-Code provided by the mobile subscriber is not allocated.

The HLR shall then process the MAP\_REGISTER\_PASSWORD indication as specified in 3GPP TS 23.011 [22]. During the handling of password registration, the password procedure will be initiated (as specified in 3GPP TS 23.011 [22]) This will involve the sending of MAP\_GET\_PASSWORD requests to the VLR.

- Handling of receipt of MAP\_P\_ABORT, MAP\_U\_ABORT or MAP\_CLOSE indications from the VLR is identical to their handling in the registration procedure, see clause 22.2.4 above.

The password registration procedure in the HLR is shown in figure 22.8.4/1.


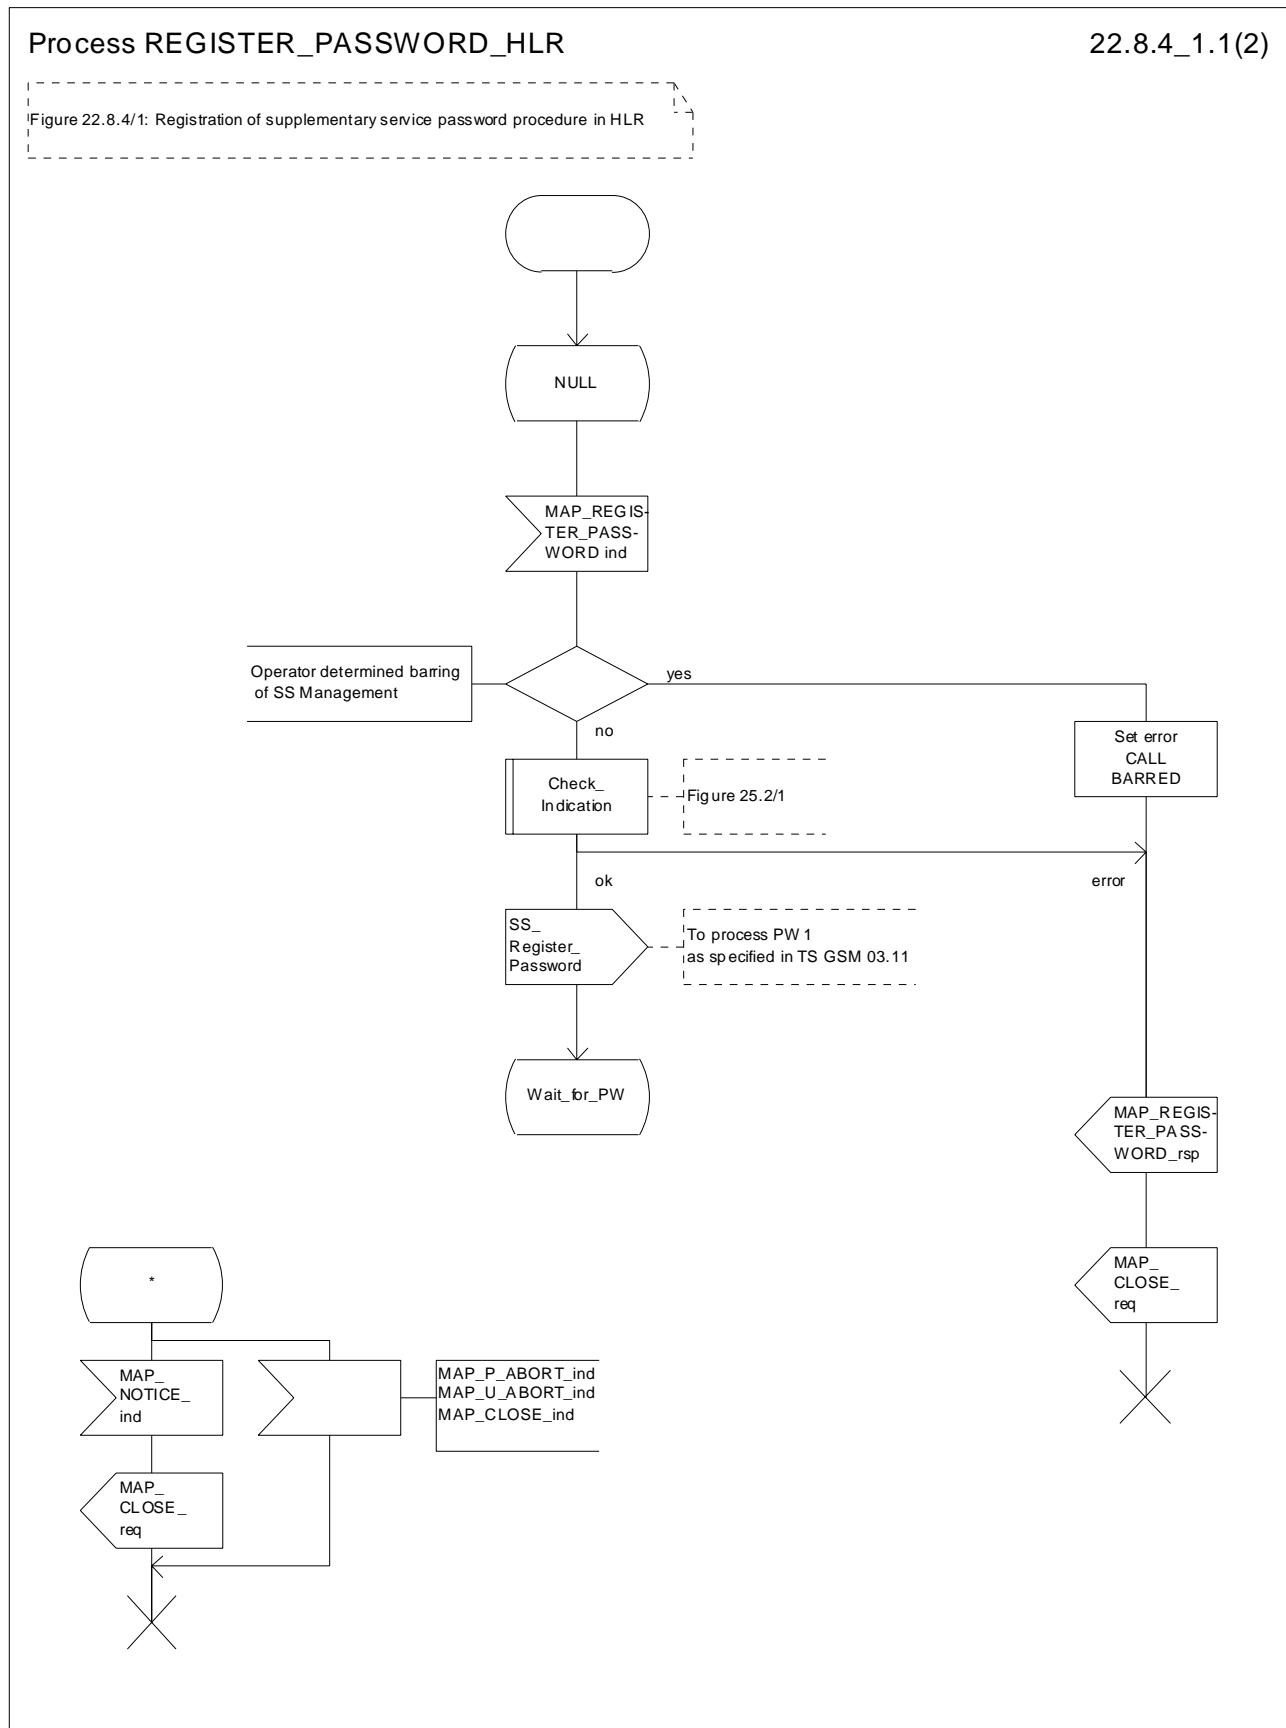


Figure 22.8.4/1 (sheet 1 of 2): Procedure Register\_PW\_HLR

## Process REGISTER\_PASSWORD\_HLR

22.8.4\_1.2(2)

**Figure 22.8.4/1:** Registration of supplementary service password procedure in HLR

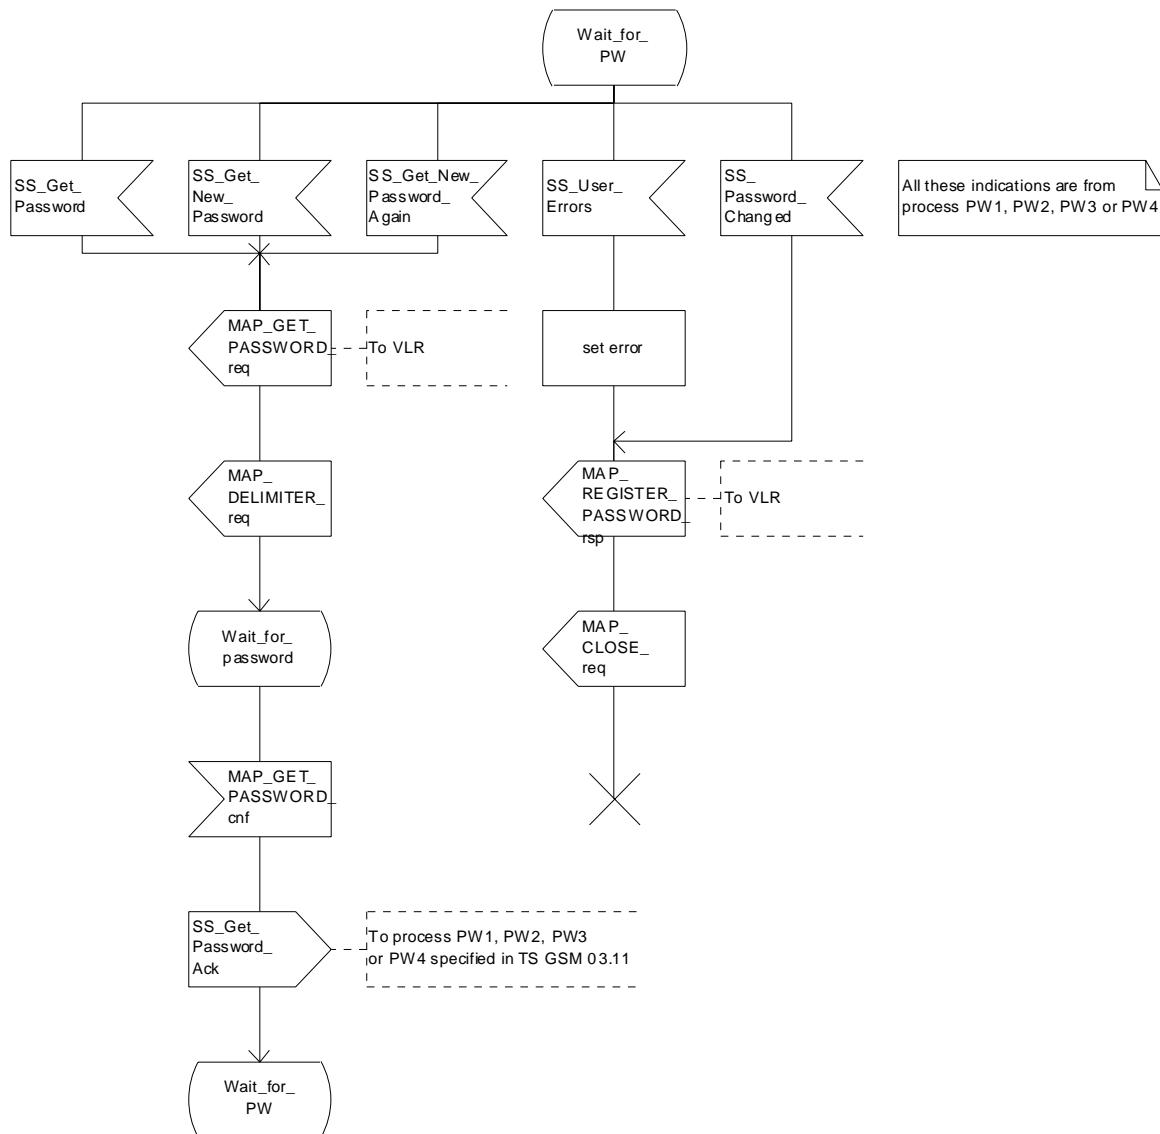

**Figure 22.8.4/1 (sheet 2 of 2): Procedure Register\_PW\_HLR**

## 22.9 Mobile Initiated USSD procedure

### 22.9.1 General

The procedure supports supplementary service signalling procedures which can allow PLMN specific services to be introduced.

The message flow for the procedure can be found in 3GPP TS 23.090 [34].

The following services may be used:

MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(defined in clauses 9 and 25);
MAP_PROVIDE_IMSI	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_CHECK_IMEI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25);
MAP_UNSTRUCTURED_SS_REQUEST	(defined in clause 11);
MAP_UNSTRUCTURED_SS_NOTIFY	(defined in clause 11).

The following service is certainly used:

MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST (defined in clause 11).

### 22.9.2 Procedures in the MSC

Before the Process Unstructured SS Request service can be invoked, a call independent CM connection must be created between the MS and the MSC.

Once a CM-connection is established, the MSC may handle the A\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST from the MS. This message contains information input by the user, the message may be fed to an application contained locally in the MSC or to the VLR. The rules for determining this are specified in 3GPP TS 23.090 [34].

#### 1) Message Destined for VLR

If the message is destined for the VLR then the MSC shall transfer the message to the VLR using the mapping specified in detail in 3GPP TS 29.011 [59].

The MSC may subsequently receive one or more MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications from the VLR. These shall be sent transparently to the MS. When a confirmation is received from the MS this shall be returned to the VLR.

When the MSC receives a MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST confirmation from the VLR then it shall pass this to the MS and initiate release of the CM connection.

#### 2) Message Destined for Local Application

If the message is destined for the local USSD application then the MSC shall transfer the message to the application.

The MSC may subsequently receive one or more requests from the application which correspond to the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications. These shall be sent transparently to the MS. When a confirmation is received from the MS this shall be returned to the application.

When the MSC receives the result of the original operation from the application then it shall pass this to the MS and initiate release of the CM connection.

### Error Handling

Both the MS and the VLR or USSD Application may initiate release of the CM-connection at any time. This is handled as shown in the diagrams.

The procedure in the MSC is shown in figure 22.9.2/1.

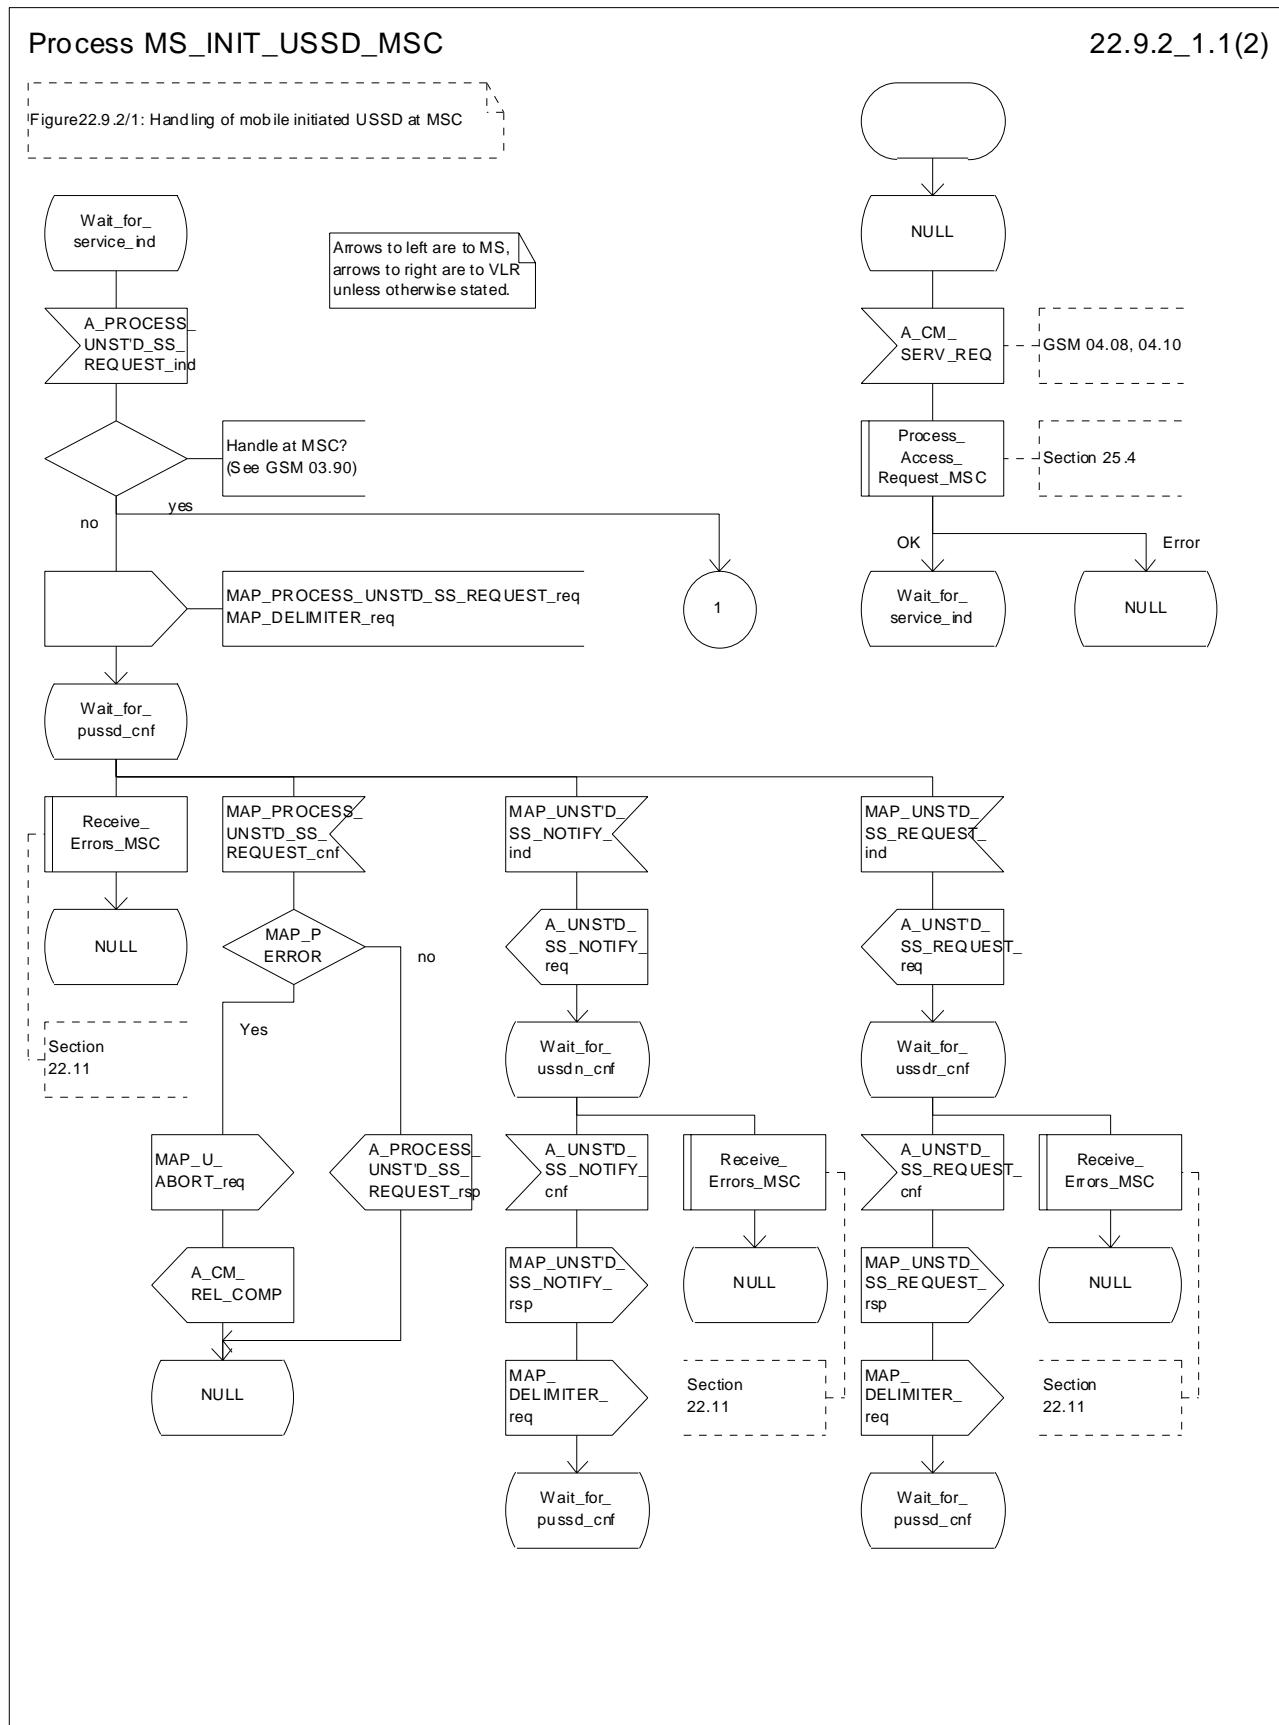


Figure 22.9.2/1 (sheet 1 of 2): Procedure MI\_USSD\_MSC

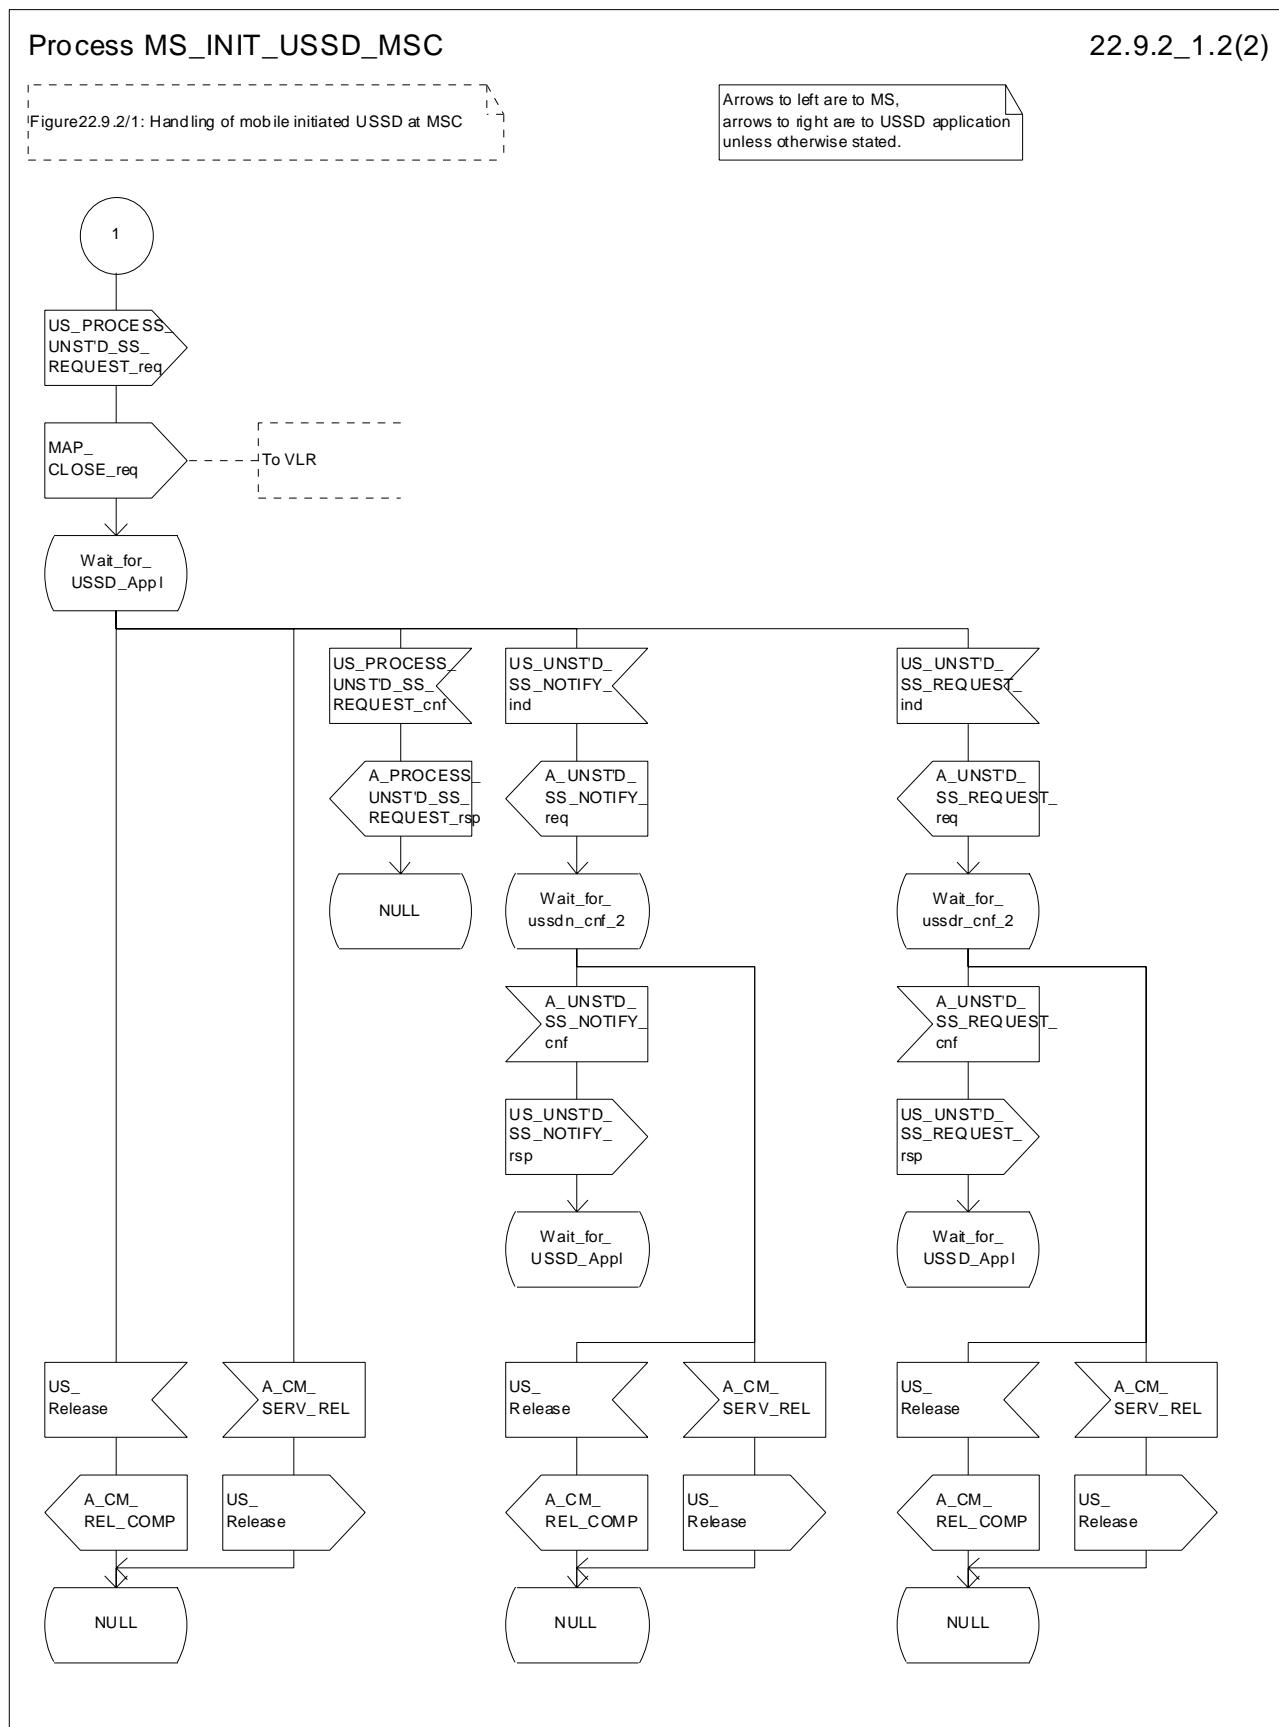


Figure 22.9.2/1 (sheet 2 of 2): Procedure MI\_USSD\_MSC

## 22.9.3 Procedures in the VLR

The initiation of the process is shown in clause 22.1.2.

Once a MAP dialogue is established, the VLR may handle the MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST from the MSC. This message contains information input by the user, the message may be fed to an application contained locally in the VLR or to the HLR. The rules for determining this are specified in 3GPP TS 23.090 [34].

### Message Destined for HLR

If the message is destined for the HLR then the VLR shall transfer the message transparently to the HLR.

The VLR may subsequently receive one or more MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications from the HLR. These shall be sent transparently to the MSC. When a confirmation is received from the MSC this shall be returned to the HLR.

When the VLR receives a MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST confirmation from the HLR then it shall pass this to the MS and close the MAP provider service.

### Message Destined for Local Application

If the message is destined for the local USSD application then the VLR shall transfer the message to the application.


The VLR may subsequently receive one or more requests from the application which correspond to the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications. These shall be sent transparently to the MSC. When a confirmation is received from the MSC this shall be returned to the application.

When the VLR receives the result of the original operation from the application then it shall pass this to the MSC and initiate release of the CM connection.

### Error Handling

Both the MSC and the HLR or USSD Application may initiate release of the MAP service at any time. This is handled as shown in the diagrams.

The procedure in the VLR is shown in figures 22.9.3/1 and 22.9.3/2.

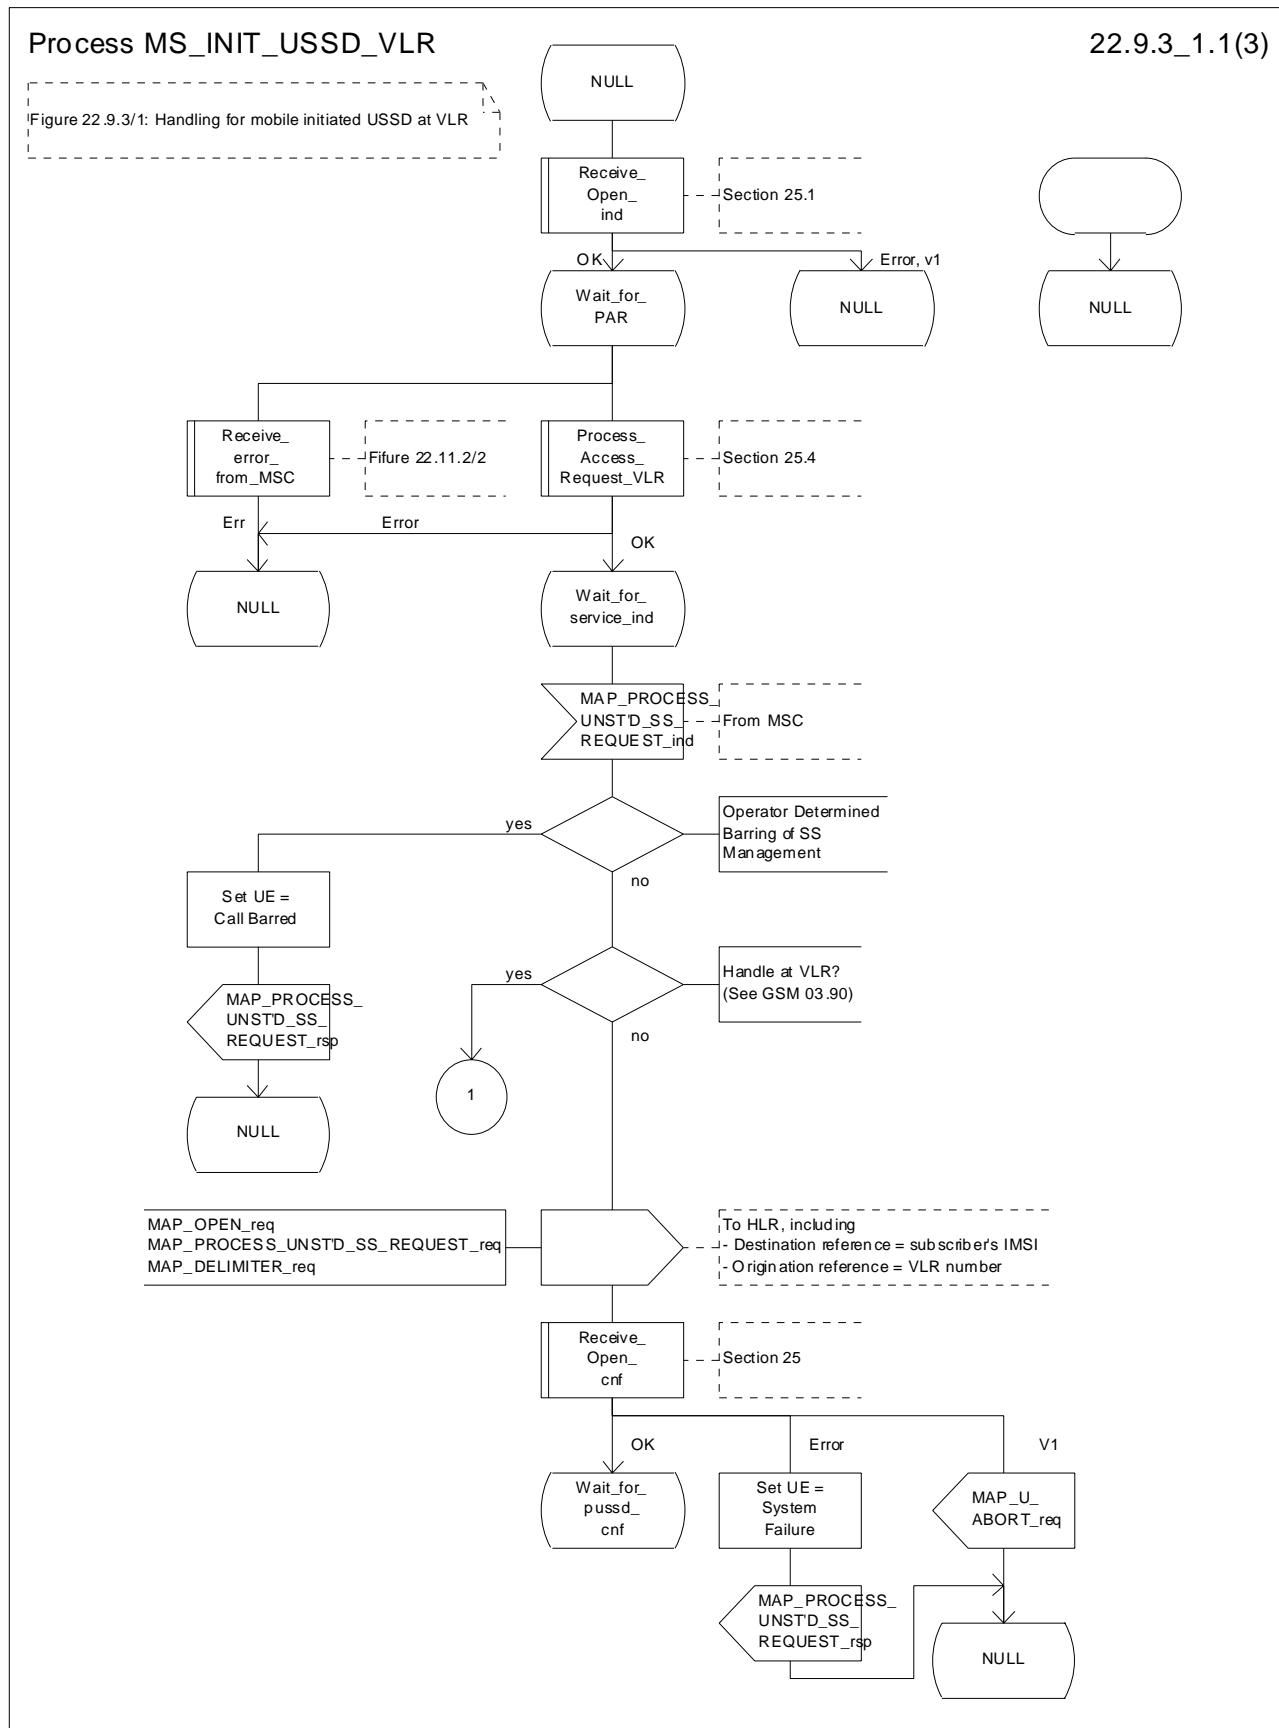

**Figure 22.9.3/1 (sheet 1 of 3): Procedure MI\_USSD\_VLR**

## Process MS\_INIT\_USSD\_VLR

22.9.3\_1.2(3)

Figure 22.9.3/1: Handling for mobile initiated USSD at VLR

Arrows to left are to MSC,  
arrows to right are to HLR  
unless otherwise stated.

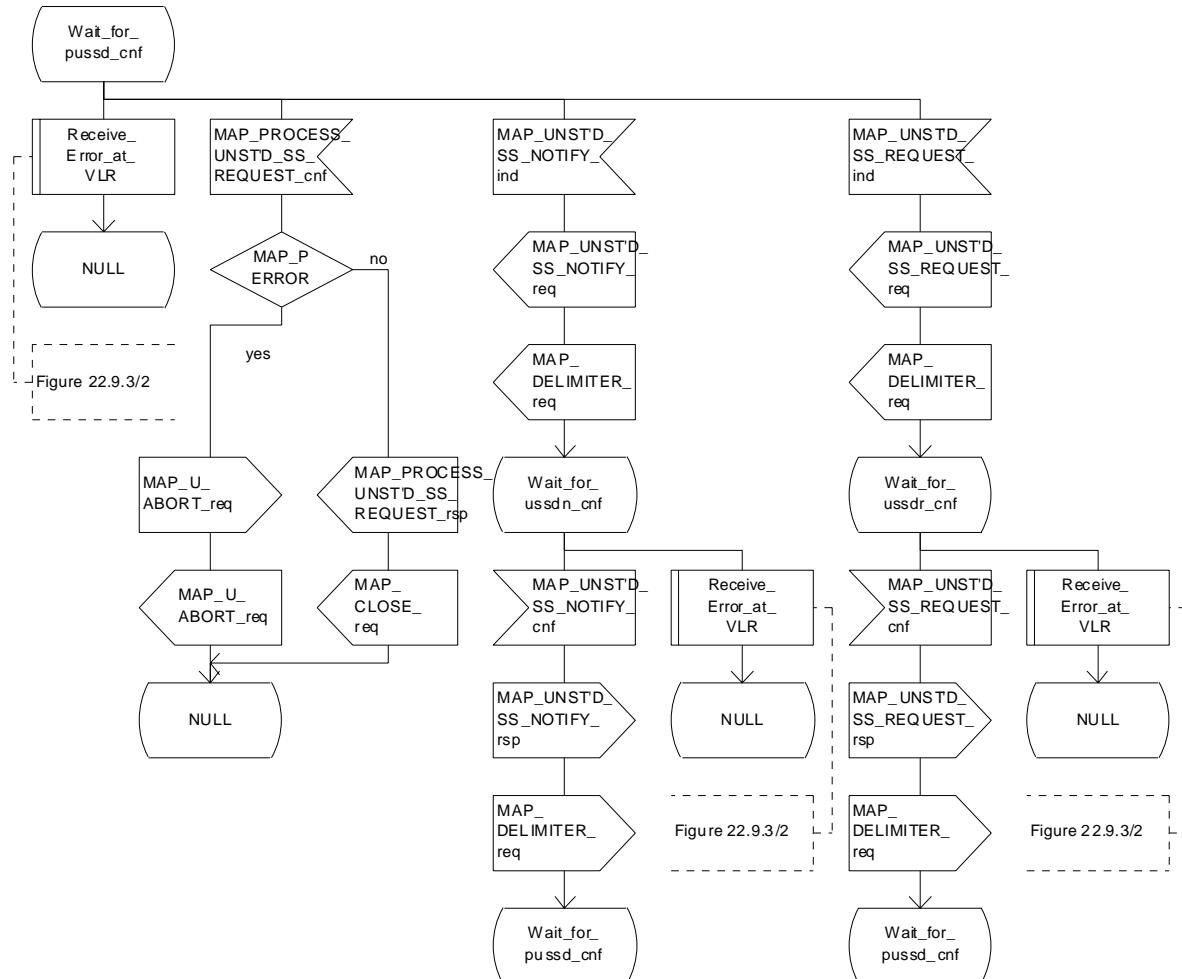


Figure 22.9.3/1 (sheet 2 of 3): Procedure MI\_USSD\_VLR

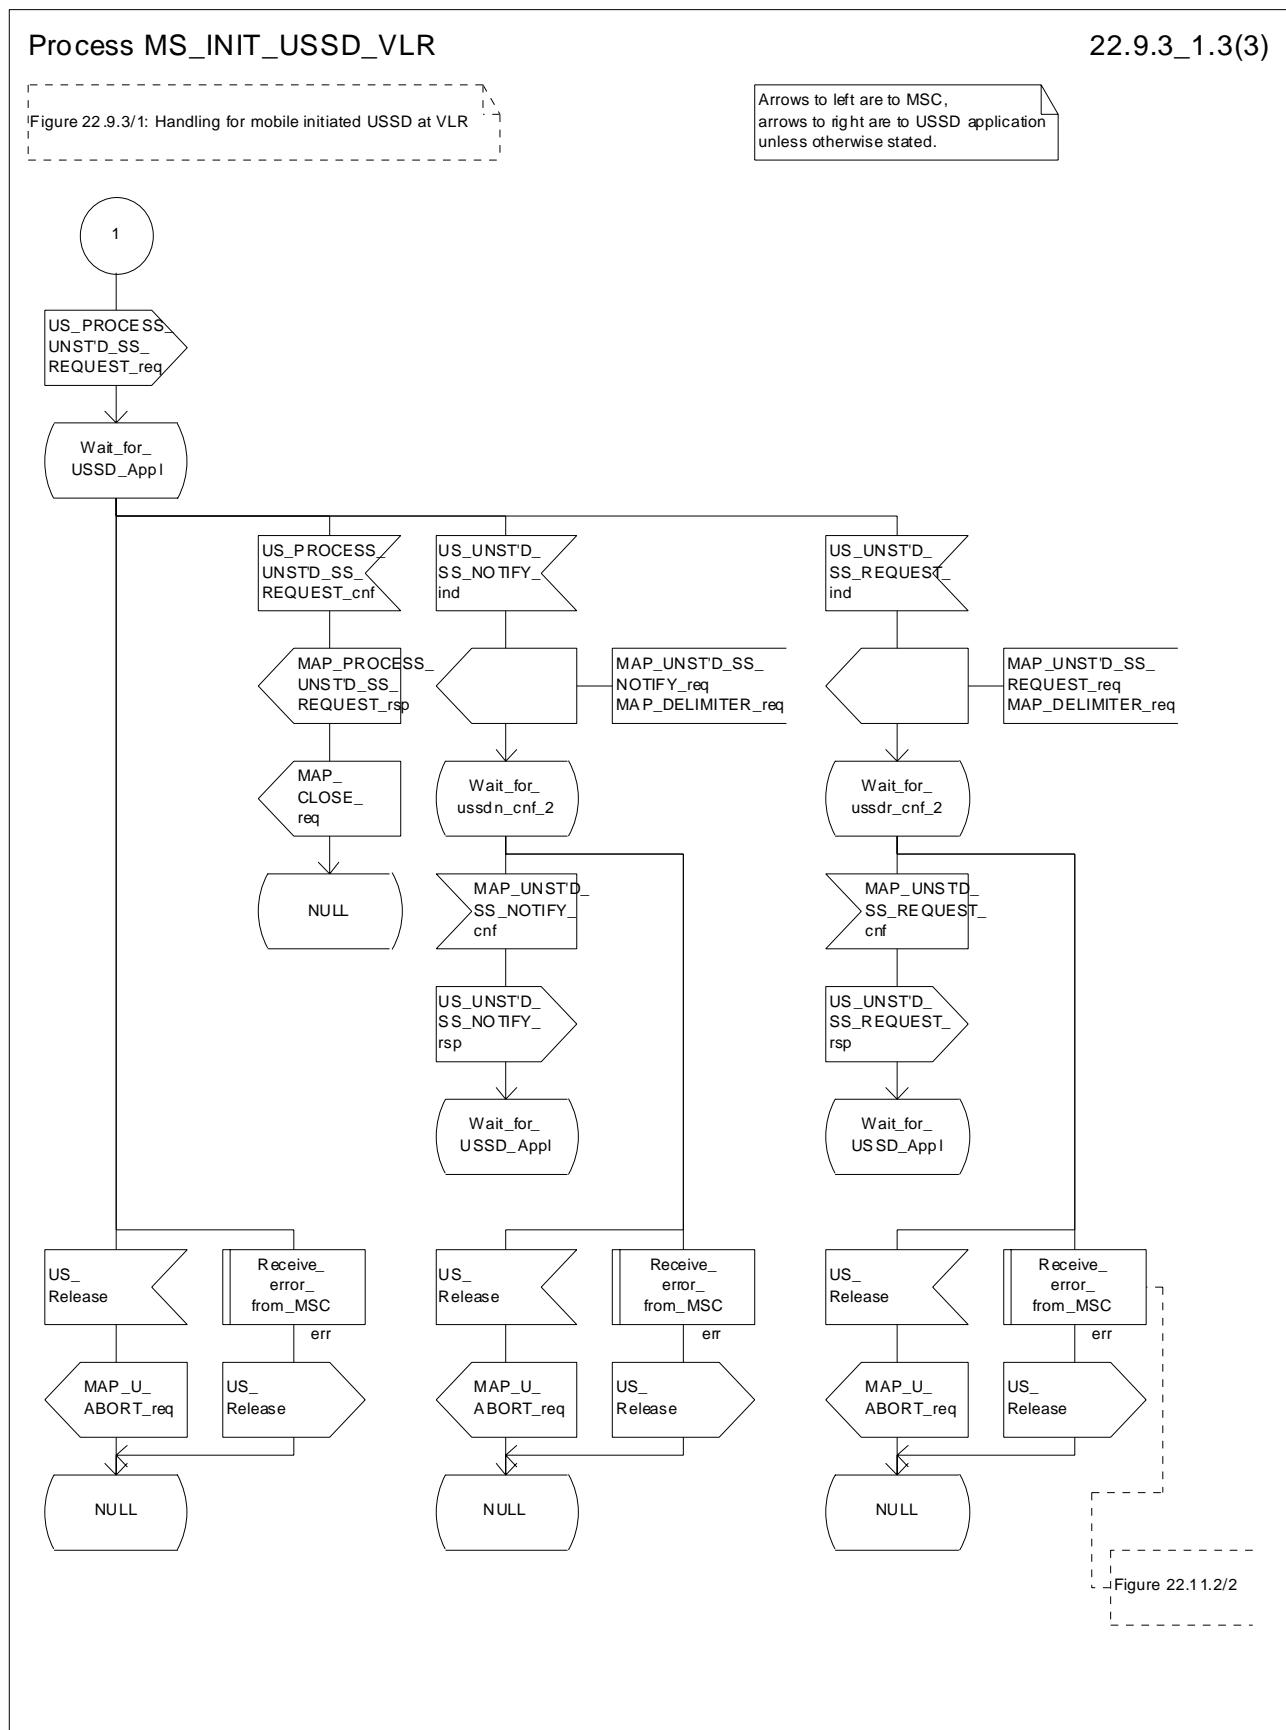


Figure 22.9.3/1 (sheet 3 of 3): Procedure\_MI\_USSD\_VLR

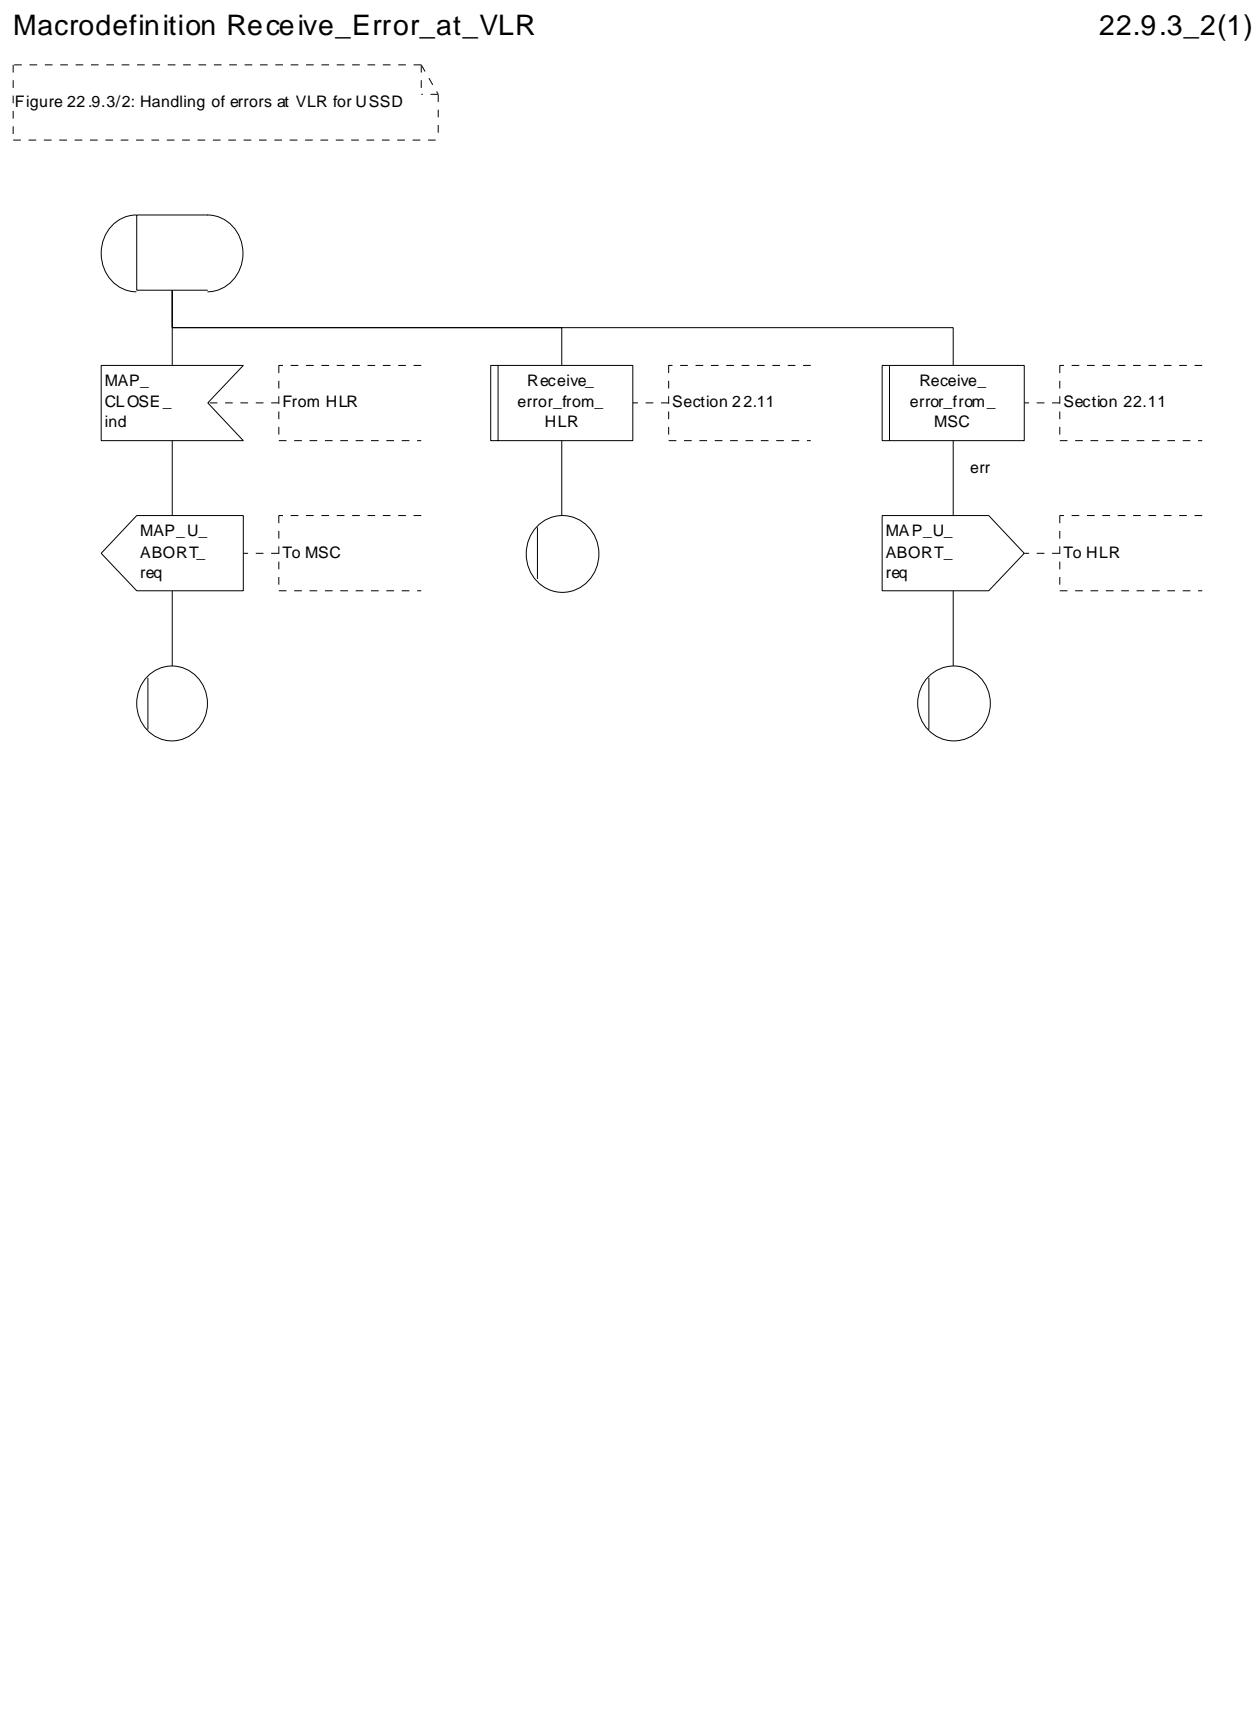


Figure 22.9.3/2: Macro Receive\_Error\_at\_VLR

## 22.9.4 Procedures in the HLR

The Mobile initiated USSD Procedure in the HLR starts by the HLR receiving a MAP-OPEN service indication from the VLR.

Once a MAP dialogue is established, the HLR may handle the MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST from the VLR. This message contains information input by the user. If the alphabet used for the message is understood then the message shall either be fed to an application contained locally in the HLR or to the gsmSCF or to a secondary HLR where the USSD application is located. If the alphabet is not understood then the error "UnknownAlphabet" shall be returned.

### Message Destined for Local Application

If the message is destined for the local USSD application then the HLR shall transfer the message to the local application.

The HLR may subsequently receive one or more requests from the application which correspond to the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications. These shall be sent transparently to the VLR. When a confirmation is received from the VLR this shall be returned to the application.

When the HLR receives the result of the original operation from the application then it shall pass this to the VLR and initiate release of the CM connection.

### Message Destined for gsmSCF or secondary HLR

If the message is destined for the gsmSCF or secondary HLR then the primary HLR shall transfer the message transparently to the next node.

The primary HLR may subsequently receive one or more MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications from the gsmSCF. These shall be sent transparently to the VLR. When a confirmation is received from the VLR this shall be returned to the gsmSCF.

When the primary HLR receives a MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST confirmation from the gsmSCF then it shall pass this to the VLR and closes the MAP provider service.

### Error Handling

The VLR, the USSD Application and the gsmSCF or secondary HLR may initiate release of the MAP service at any time. This is handled as shown in the diagrams.

The procedure in the primary HLR is shown in figure 22.9.4/1.

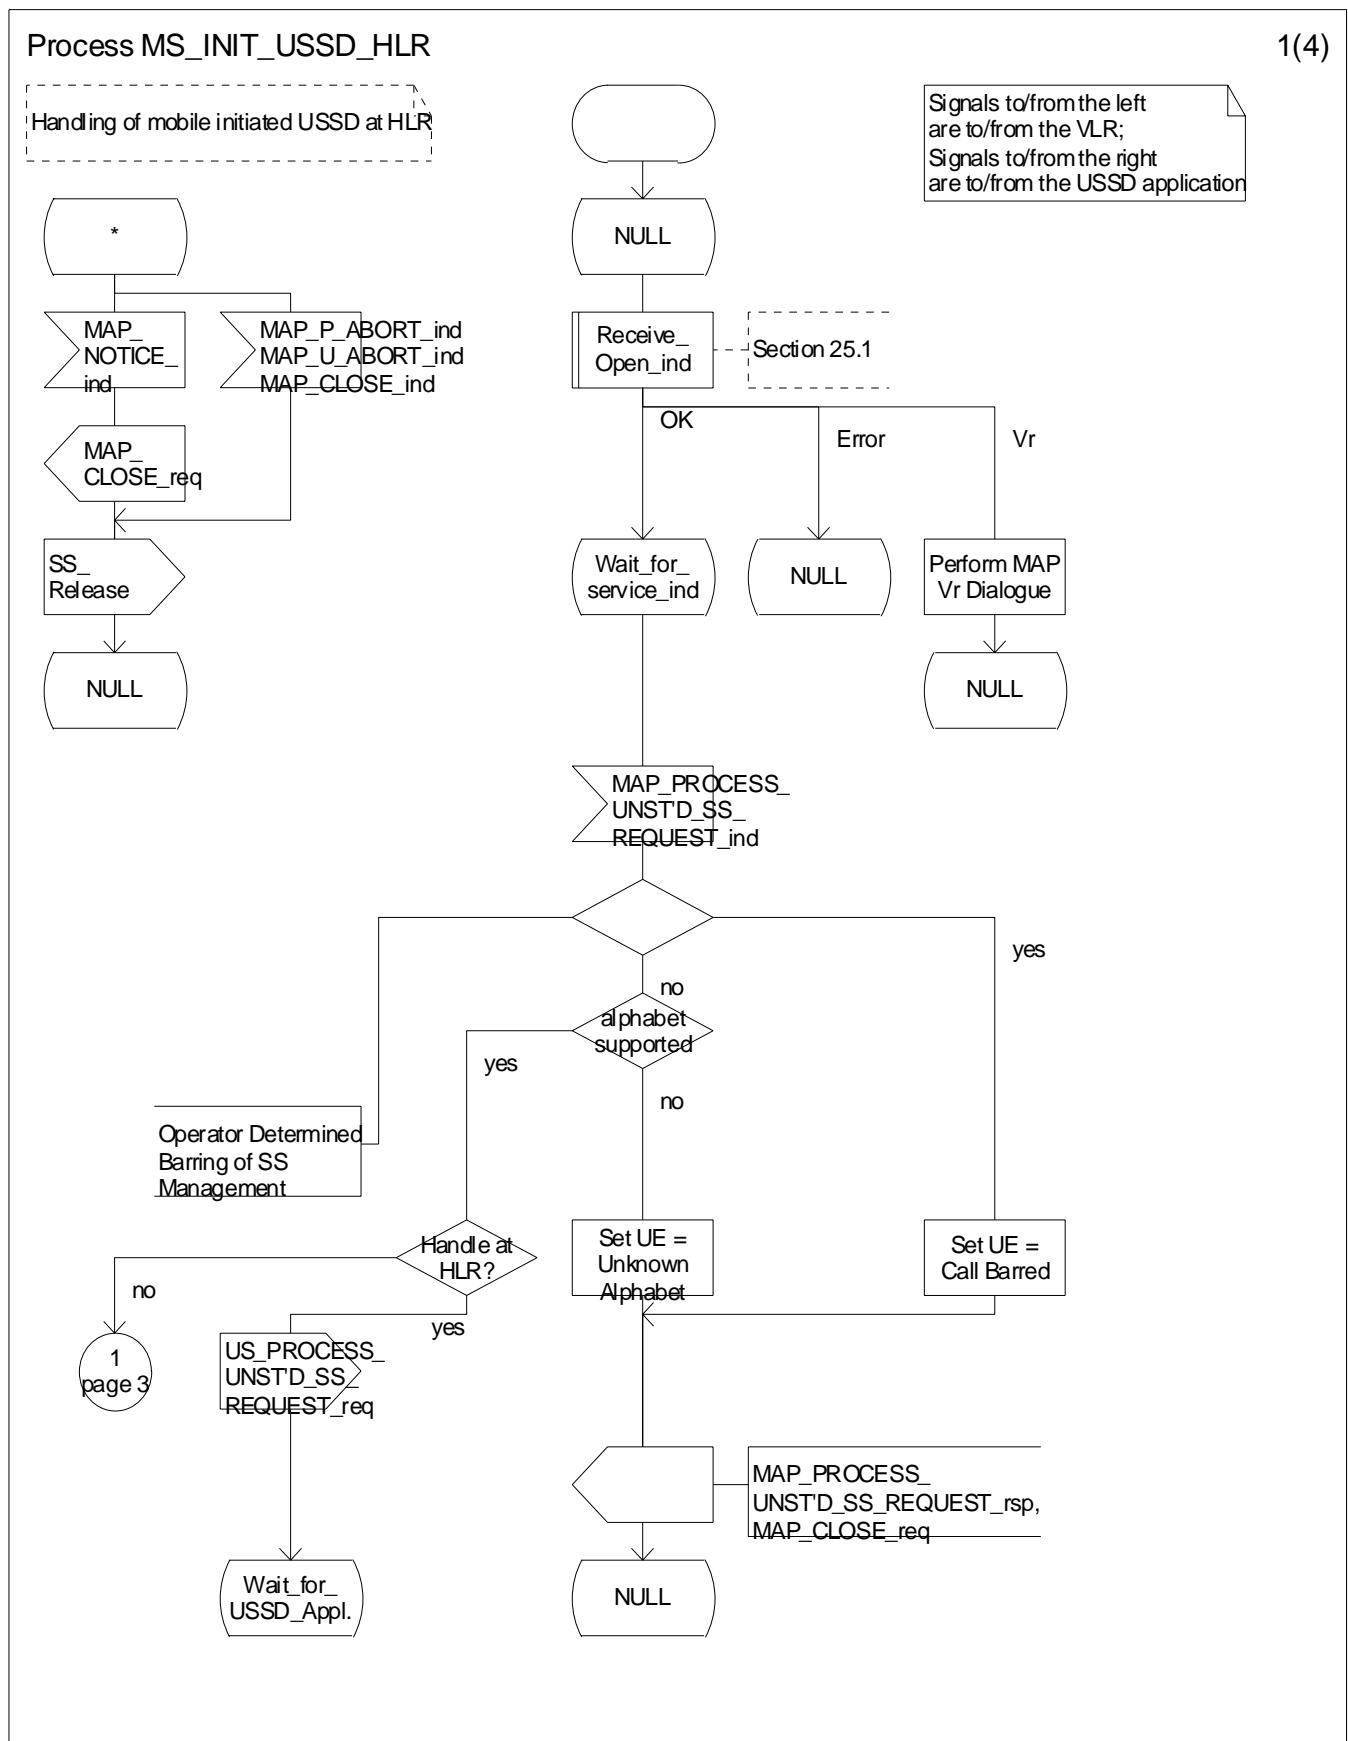


Figure 22.9.4/1 (sheet 1 of 4): Procedure MI\_USSD\_HLR

Process MS\_INIT\_USSD\_HLR 22.9.4\_1.2(4)

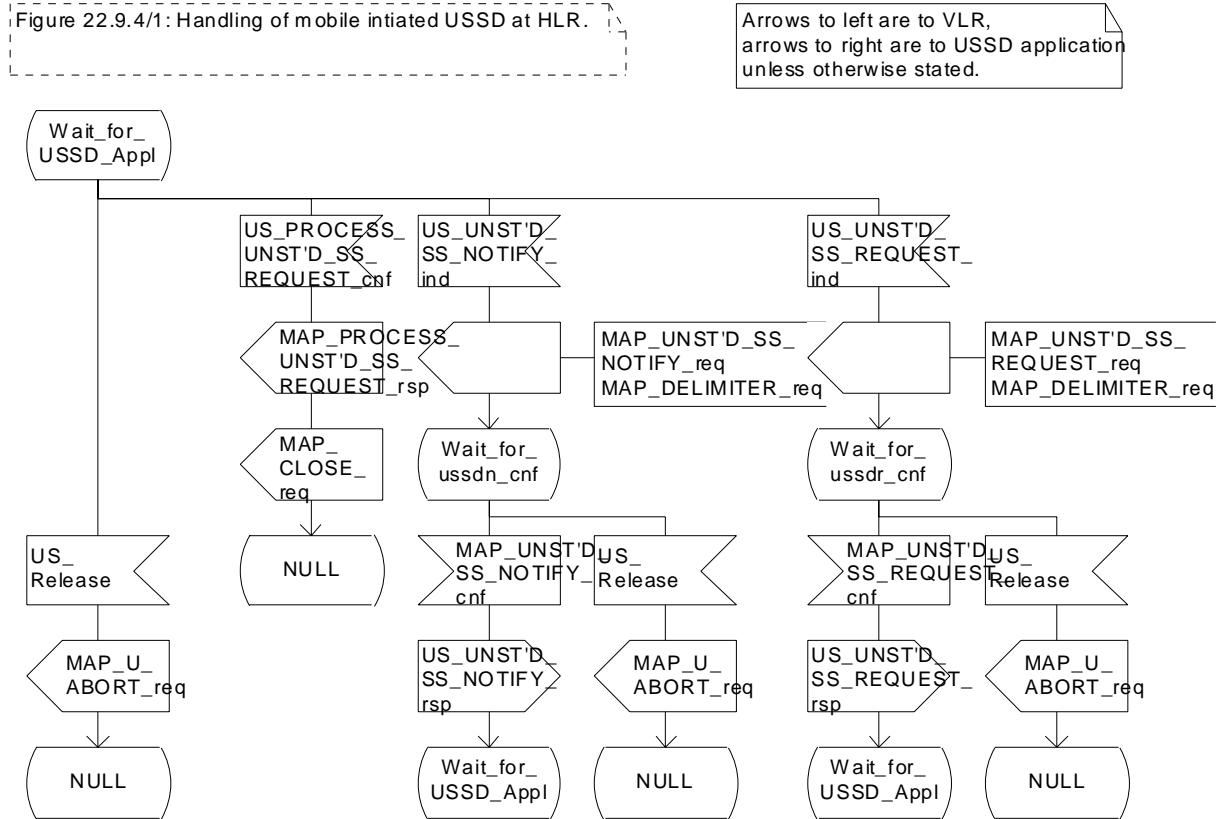


Figure 22.9.4/1 (sheet 2 of 4): Procedure MI\_USSD\_HLR

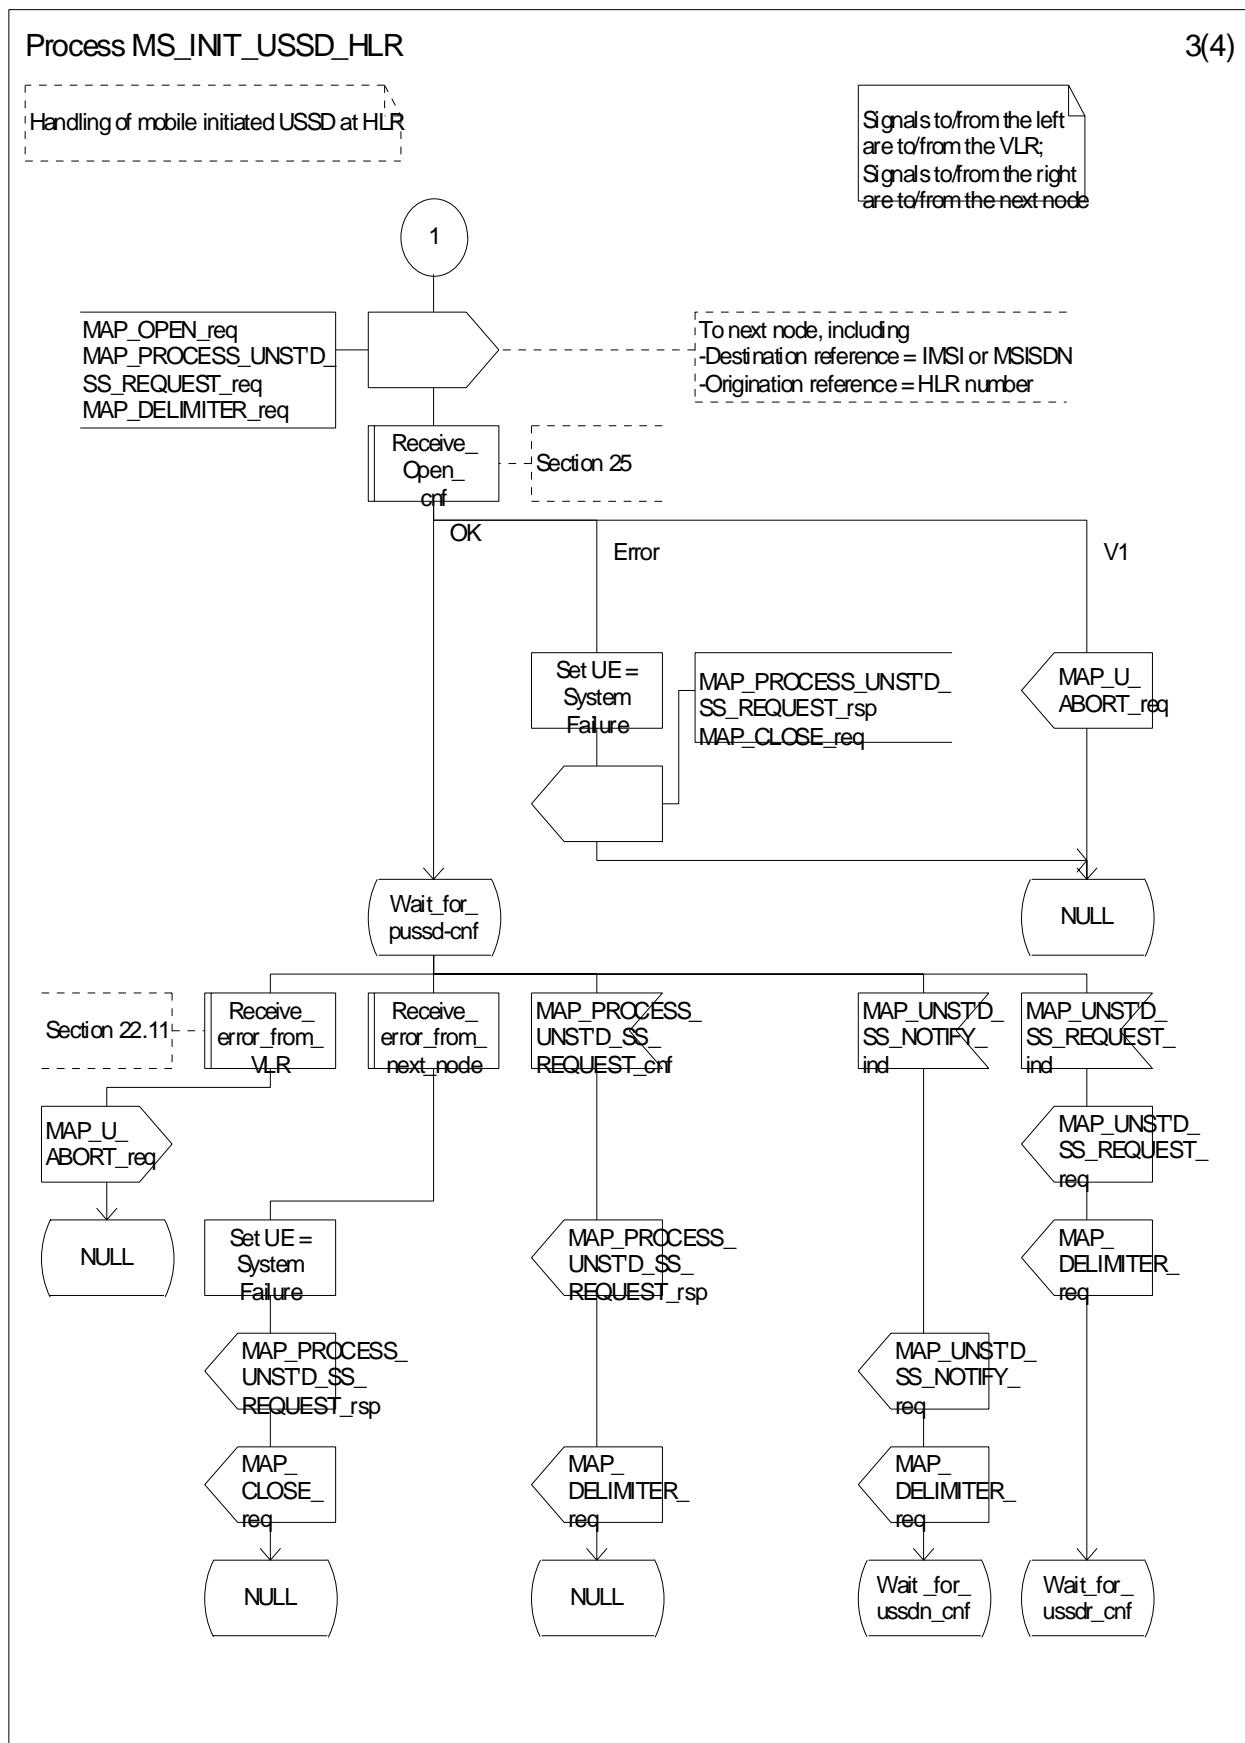


Figure 22.9.4/1 (sheet 3 of 4): Procedure MI\_USSD\_HLR

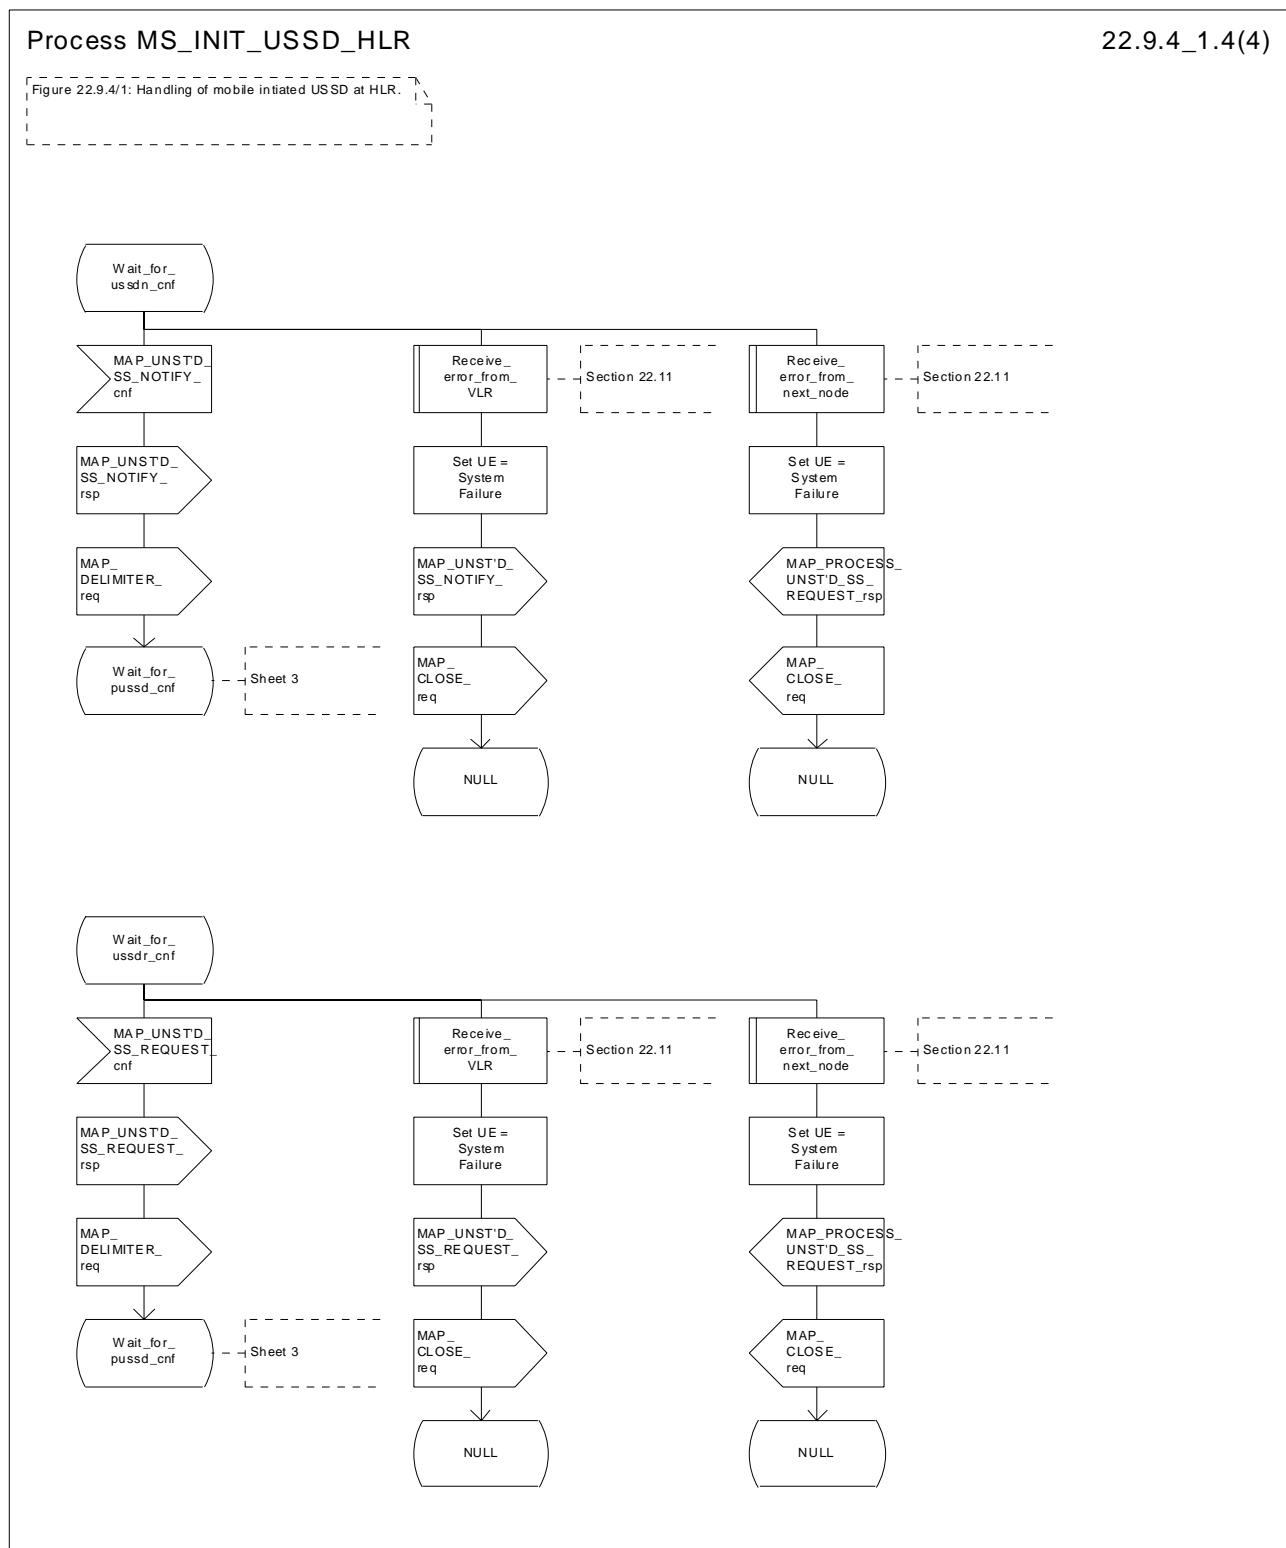


Figure 22.9.4/1 (sheet 4 of 4): Procedure MI\_USSD\_HLR

## 22.9.5 Procedures in the gsmSCF/secondary HLR

The Mobile initiated USSD Procedure in the gsmSCF/secondary HLR starts by the gsmSCF/secondary HLR receiving a MAP-OPEN service indication from the HLR.

Once a MAP dialogue is established, the gsmSCF/secondary HLR may handle the MAP\_PROCESS\_UNSTRUCTURED\_SS\_REQUEST from the HLR.

The gsmSCF/secondary HLR shall transfer the message to the local application.

The gsmSCF/secondary HLR may subsequently receive one or more requests from the application which correspond to the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY indications. These shall be sent transparently to the HLR. When a confirmation is received from the HLR this shall be returned to the application.

When the gsmSCF/secondary HLR receives the result of the original operation from the application then it shall pass this to the HLR and initiate release of the CM connection.

### Error Handling

Both the HLR and the USSD Application may initiate release of the MAP service at any time. This is handled as shown in the diagrams.

The procedure in the gsmSCF and secondary HLR is shown in figure 22.9.5/1.

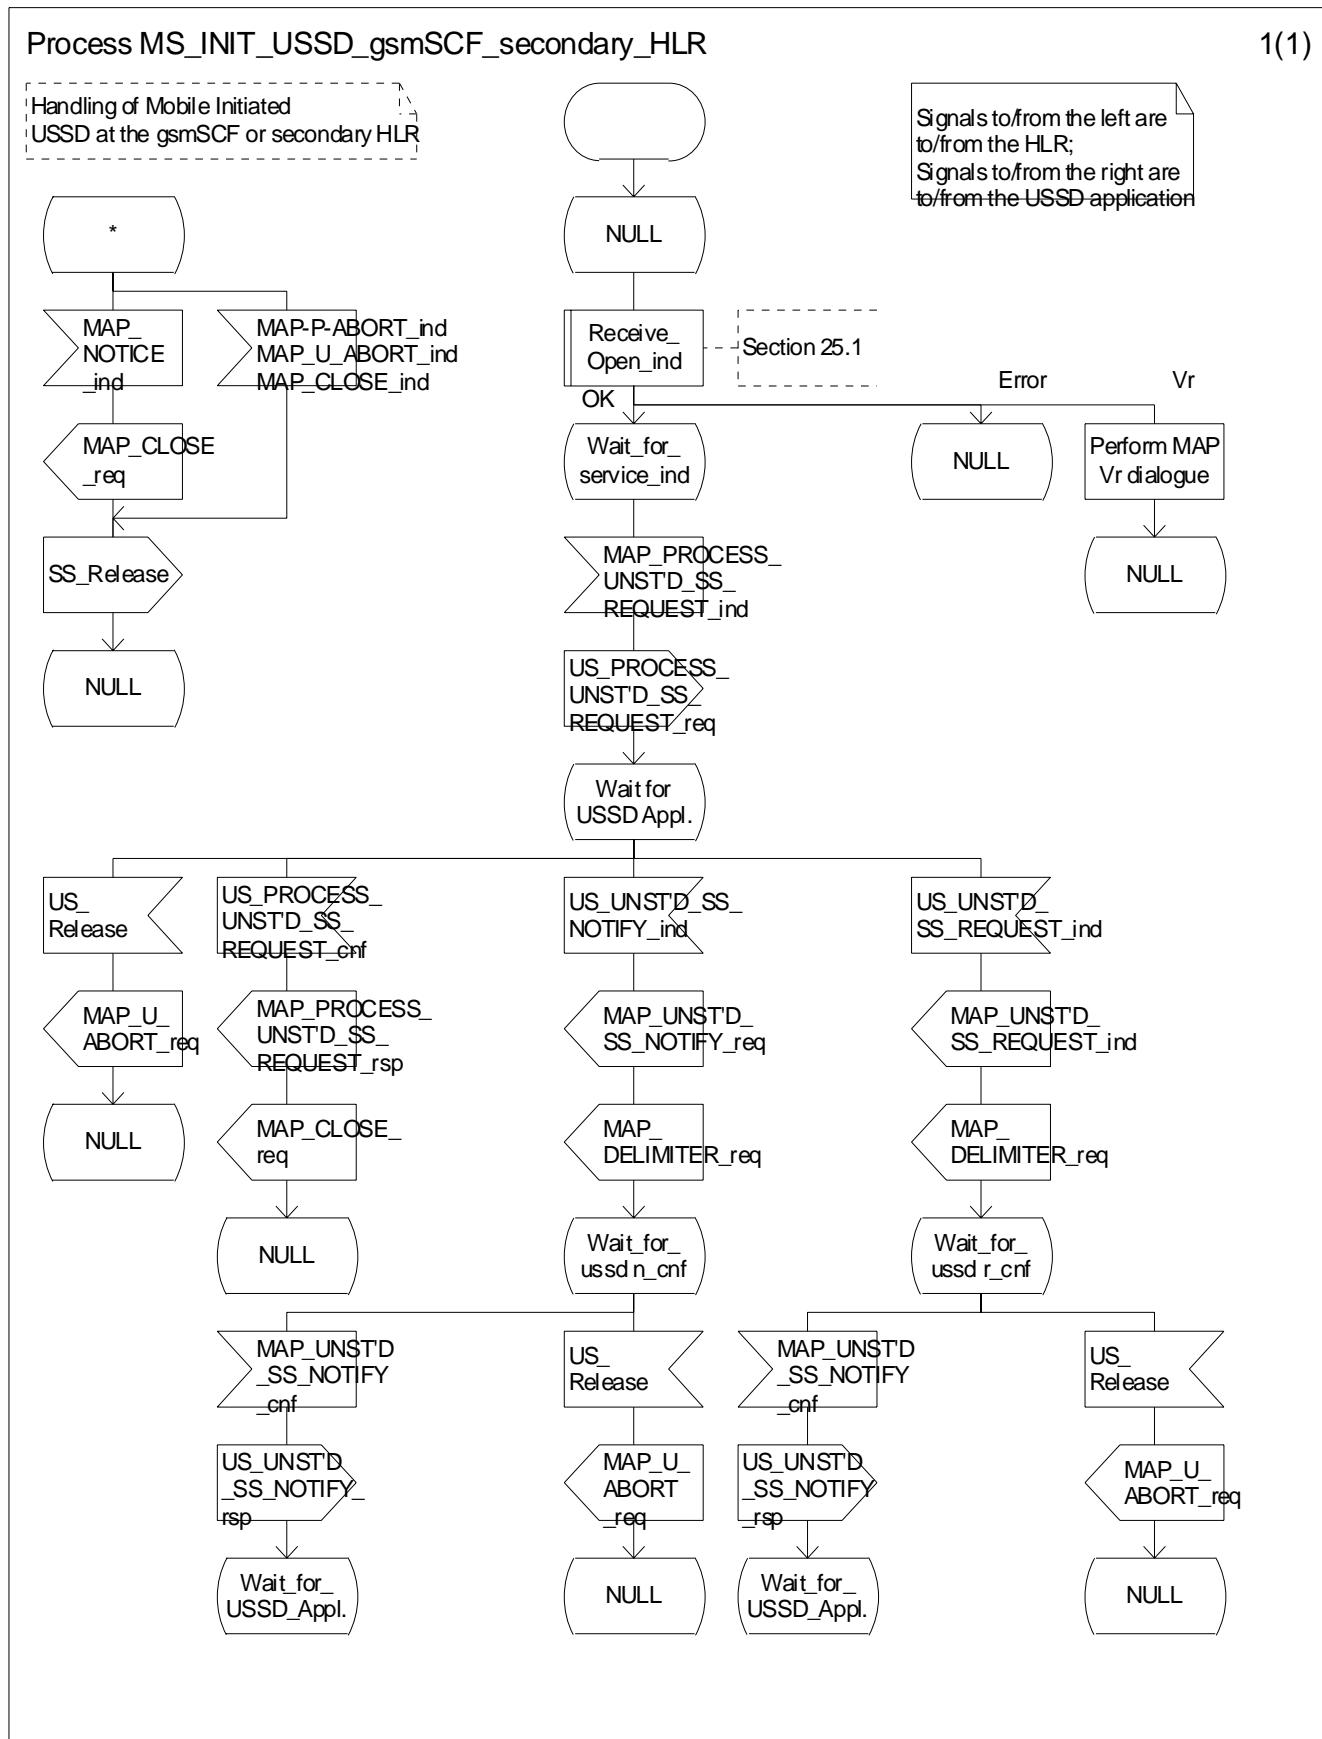


Figure 22.9.5/1 Process MS\_INIT\_USSD\_gsmSCF\_secondary\_HLR

## 22.10 Network initiated USSD procedure

### 22.10.1 General

The procedure supports supplementary service signalling procedures which can allow PLMN specific services to be introduced.

The message flow for the procedure can be found in 3GPP TS 23.090 [34].

The following services may be used:

MAP_PAGE	(defined in clauses 8 and 25);
MAP_SEARCH_FOR_MOBILE_SUBSCRIBER	(defined in clauses 8 and 25);
MAP_PROCESS_ACCESS_REQUEST	(defined in clauses 8 and 25);
MAP_AUTHENTICATE	(defined in clauses 8 and 25);
MAP_SET_CIPHERING_MODE	(defined in clauses 8 and 25);
MAP_FORWARD_NEW_TMSI	(defined in clauses 8 and 25);
MAP_READY_FOR_SM	(defined in clauses 12 and 25).

At least one of the following services will certainly be used, and both may be used:

MAP_UNSTRUCTURED_SS_REQUEST	(defined in clause 11);
MAP_UNSTRUCTURED_SS_NOTIFY	(defined in clause 11).

### 22.10.2 Procedure in the MSC

The procedure may be invoked either by the VLR or by a USSD application local to the MSC. They may start by using either the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY service. If the request is initiated by a local USSD application then the MSC will open a dialogue with the VLR.

In both cases the MSC will initiate a CM connection to the MS (using the page or search macros defined in clause 25.3). Once the connection is successfully established the message received from the VLR or USSD application will be sent to the MS using the mapping specified in 3GPP TS 29.011 [59].

Following transfer of the message the MSC will wait for a confirmation from the MS. This will be sent to the VLR or USSD application as appropriate.

Following this, the MSC may receive further uses of the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY services, or may receive an indication to release the connection to the MS.

In the event of an error, the connection to the MS shall be released, and the MAP process with the VLR shall be aborted as shown in the diagram.

The procedure in the MSC is shown in figure 22.10.2/1.

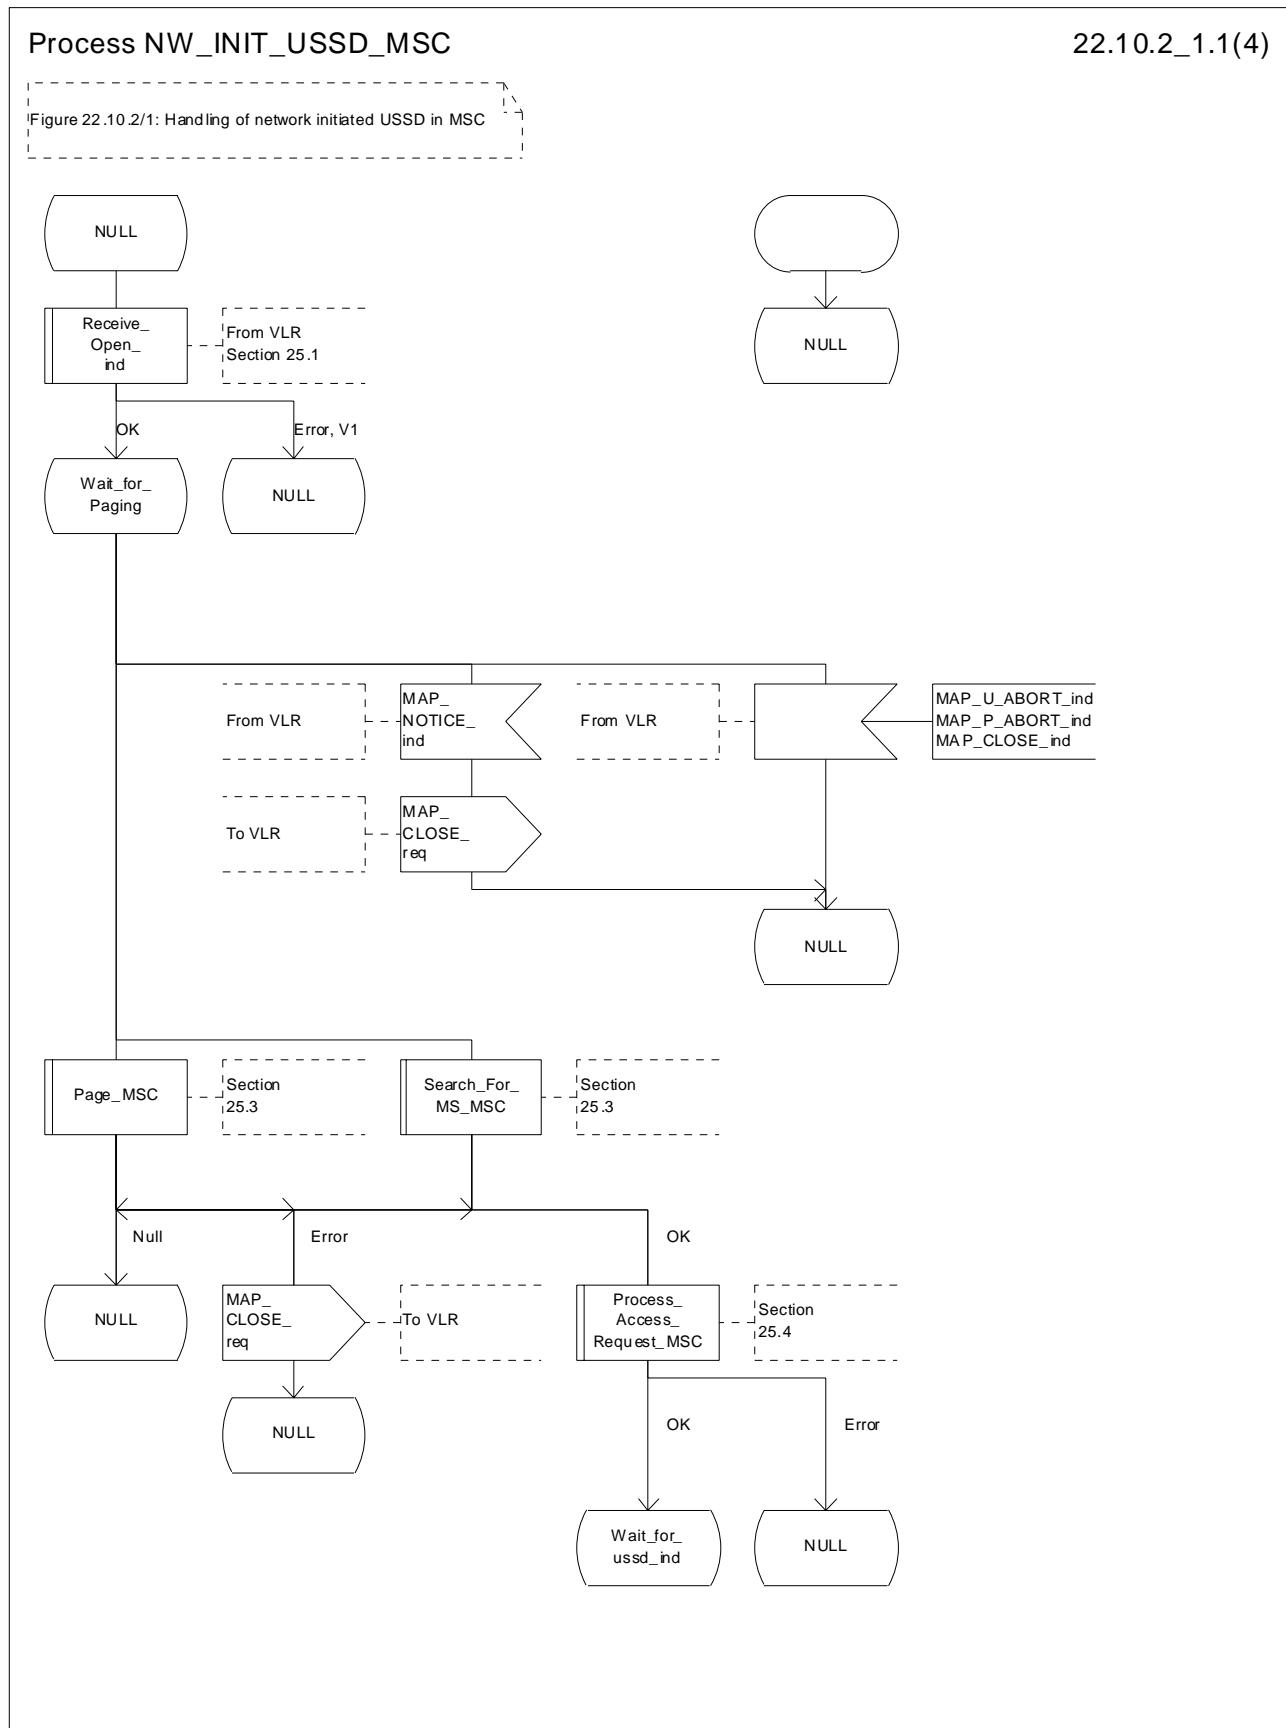


Figure 22.10.2/1 (sheet 1 of 4): Procedure NI\_USSD\_MSC

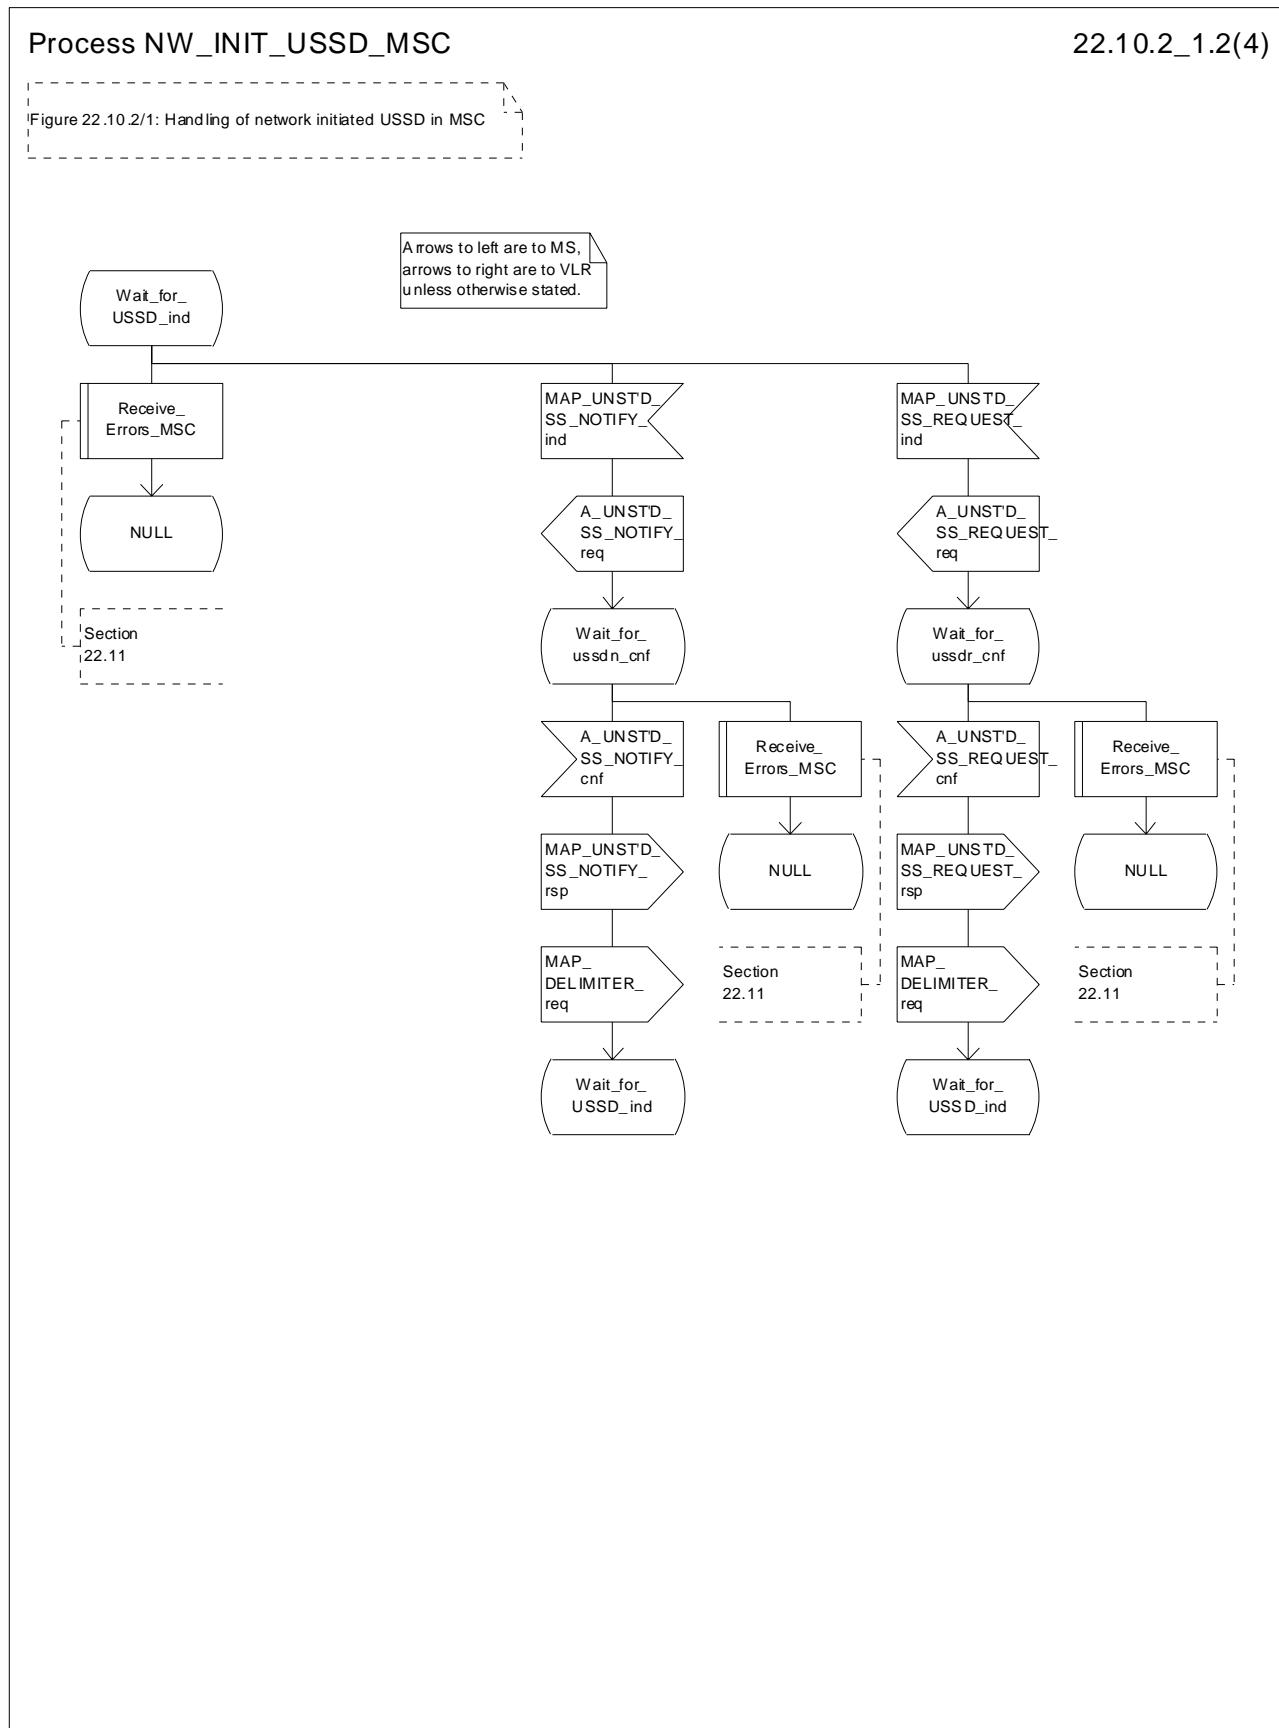


Figure 22.10.2/1 (sheet 2 of 4): Procedure NI\_USSD\_MSC

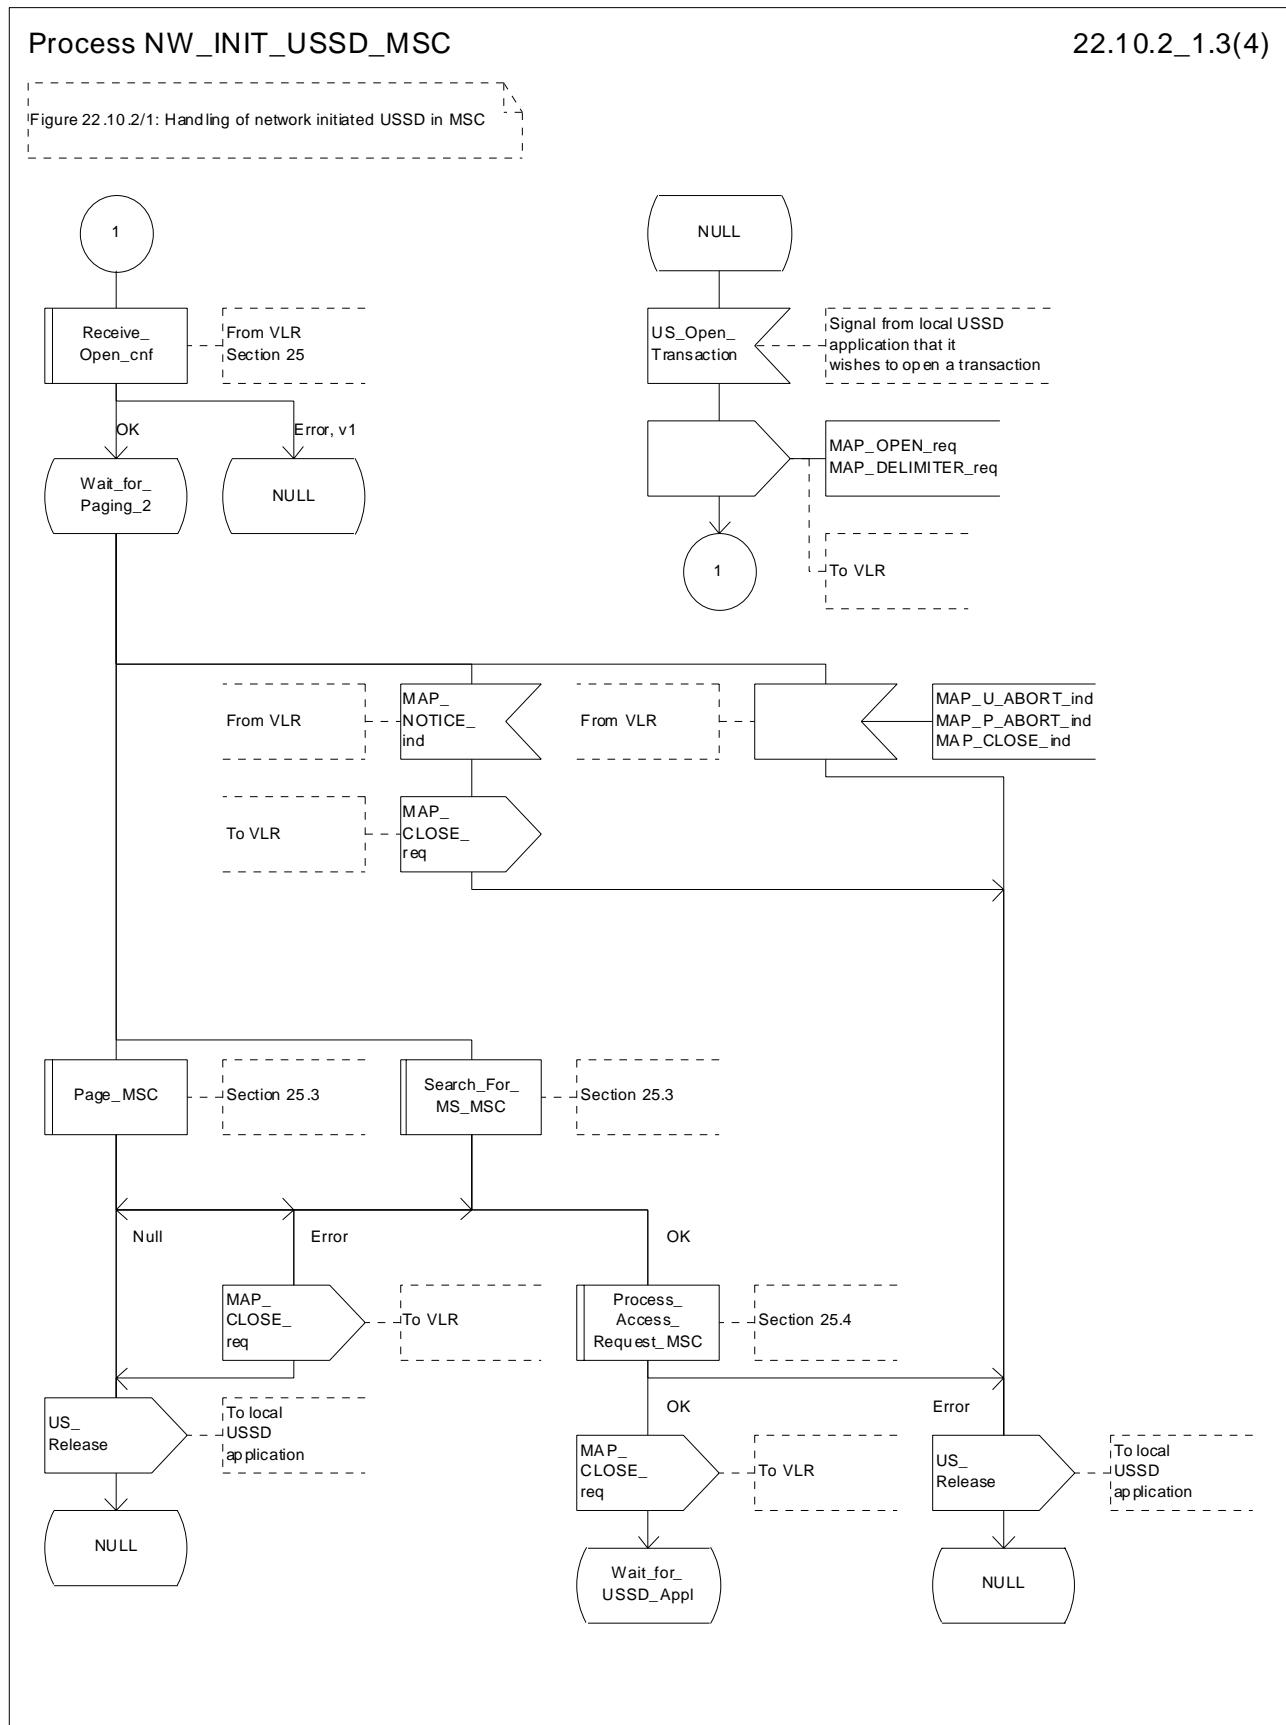


Figure 22.10.2/1 (sheet 3 of 4): Procedure NI\_USSD\_MSC

## Process NW\_INIT\_USSD\_MSC

22.10.2\_1.4(4)

**Figure 22.10.2/1:** Handling of network initiated USSD in MSC

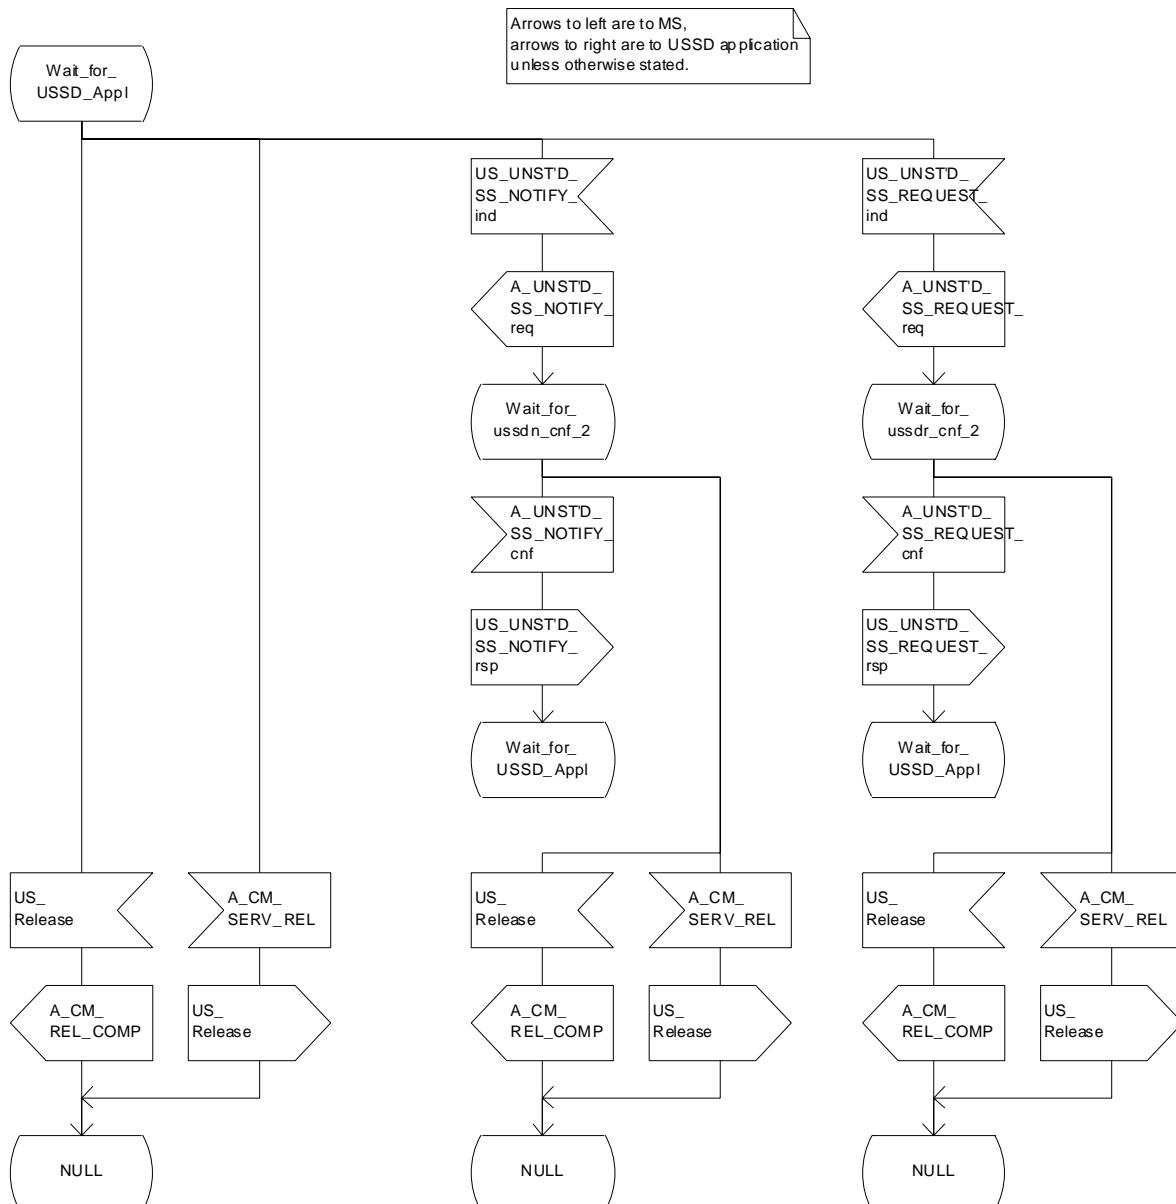


Figure 22.10.2/1 (sheet 4 of 4): Procedure NI USSD MSC

## 22.10.3 Procedure in the VLR

The procedure may be invoked either by the HLR or by a USSD application local to the VLR. They may start by using either the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY service.

In both cases the VLR will first initiate a MAP dialogue with the MSC. When the indication for the unstructured SS request or notify is received then the macro Start\_USSD\_VLR will be used to page the MS and open a CM connection. Once the CM connection is successfully established the indication received from the HLR or USSD application will be sent to the MSC.

Following transfer of the message the VLR will wait for a confirmation from the MSC. This will be sent to the HLR or USSD application as appropriate.

Following this, the VLR may receive further uses of the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY services, or may receive a MAP\_CLOSE\_ind.

In the event of an error, the MAP process with the MSC shall be released, and if necessary the MAP process with the HLR shall be aborted as shown in the diagram.

The procedure in the VLR is shown in figure 22.10.3/1.

### MSC Initiated USSD

If a USSD application in the MSC wishes to use the network initiated USSD procedure, and a connection to the MS does not exist then it shall open a dialogue to the VLR. This dialogue will automatically lead to the VLR performing page and search using the macro Start\_USSD\_VLR.


### Macro Start\_USSD\_VLR

This macro is used to initiate a CM connection with the MS for transfer of network initiated unstructured SS data.

It first checks for correct data in the VLR. If a problem is found then "Err" is returned.

A page or search procedure (as appropriate) will then be used to contact the MS. Following successful page or search the macro Process\_Access\_Request\_VLR specified in clause 25.4 will be used to handle the CM connection establishment.

The macro is shown in figure 22.10.3/2.

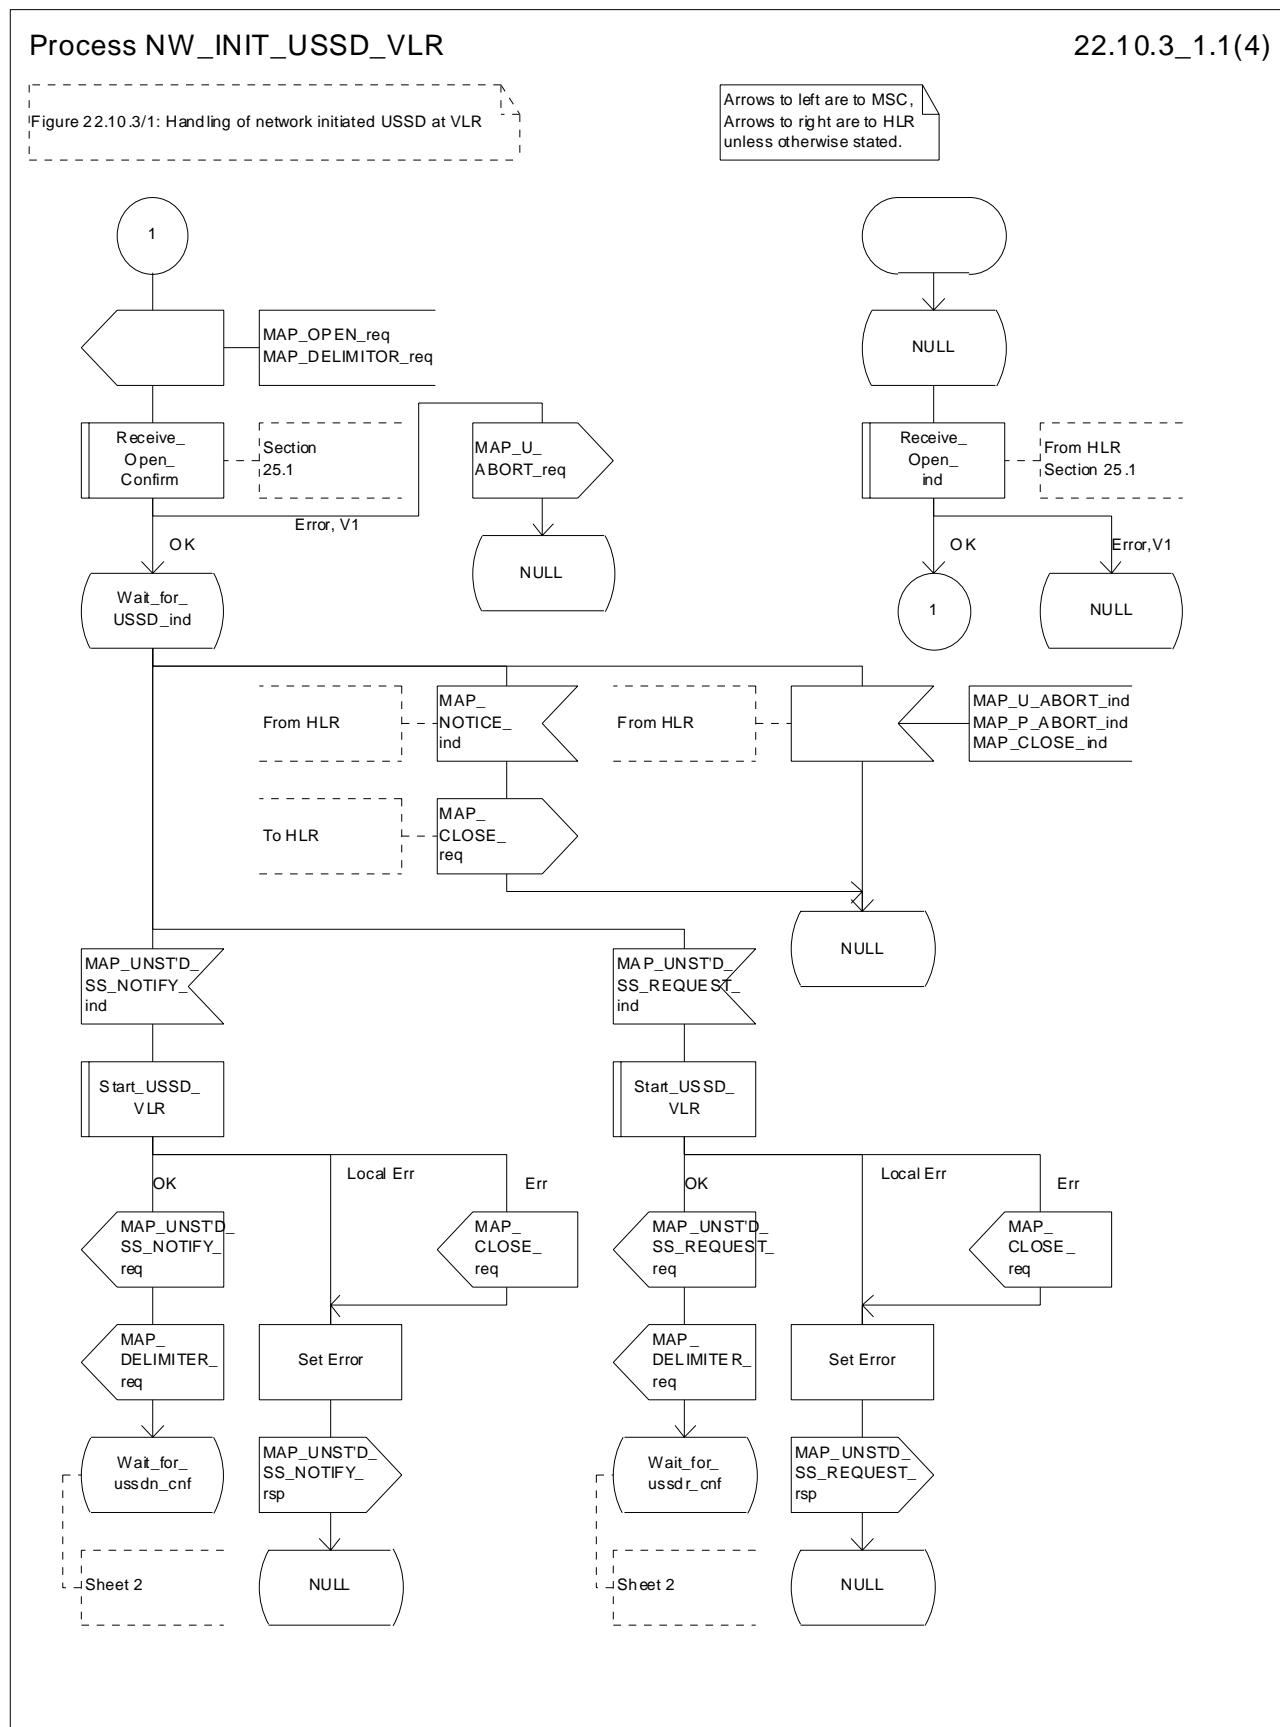


**Figure 22.10.3/1 (sheet 1 of 4): Procedure NI USSD VLR**

## Process NW\_INIT\_USSD\_VLR

22.10.3\_1.2(4)

**Figure 22.10.3/1: Handling of network initiated USSD at VLR**

Arrows to left are to MSC,  
arrows to right are to HLR  
unless otherwise stated.

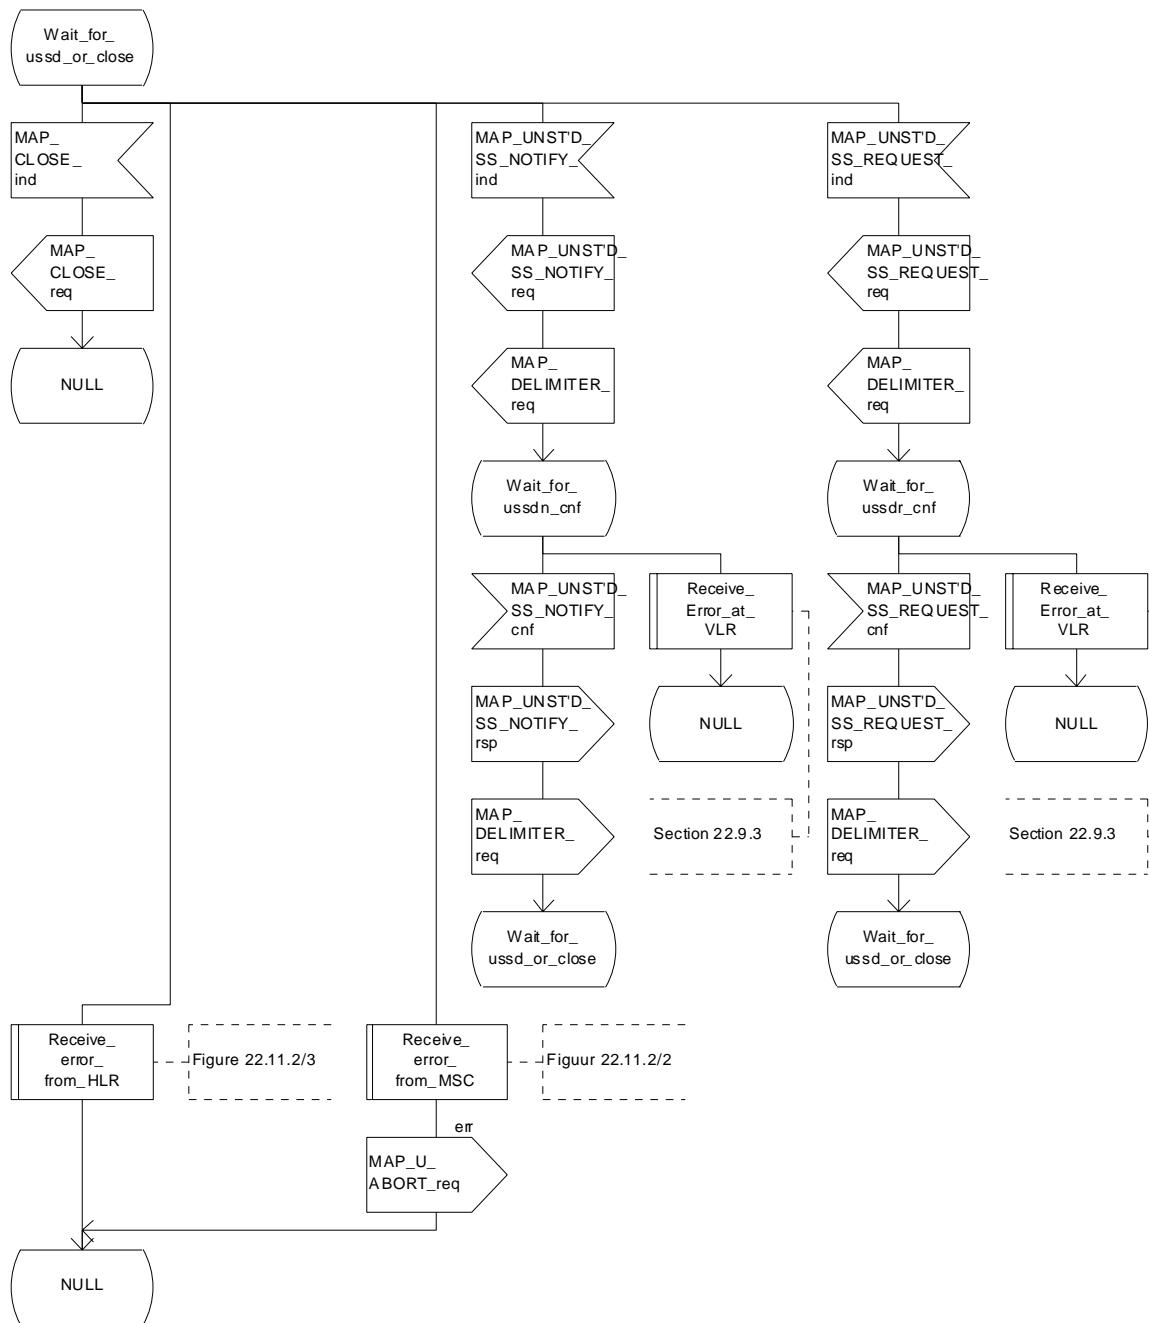

**Figure 22.10.3/1 (sheet 2 of 4): Procedure NI\_USSD\_VLR**

## Process NW\_INIT\_USSD\_VLR

22.10.3\_1.3(4)

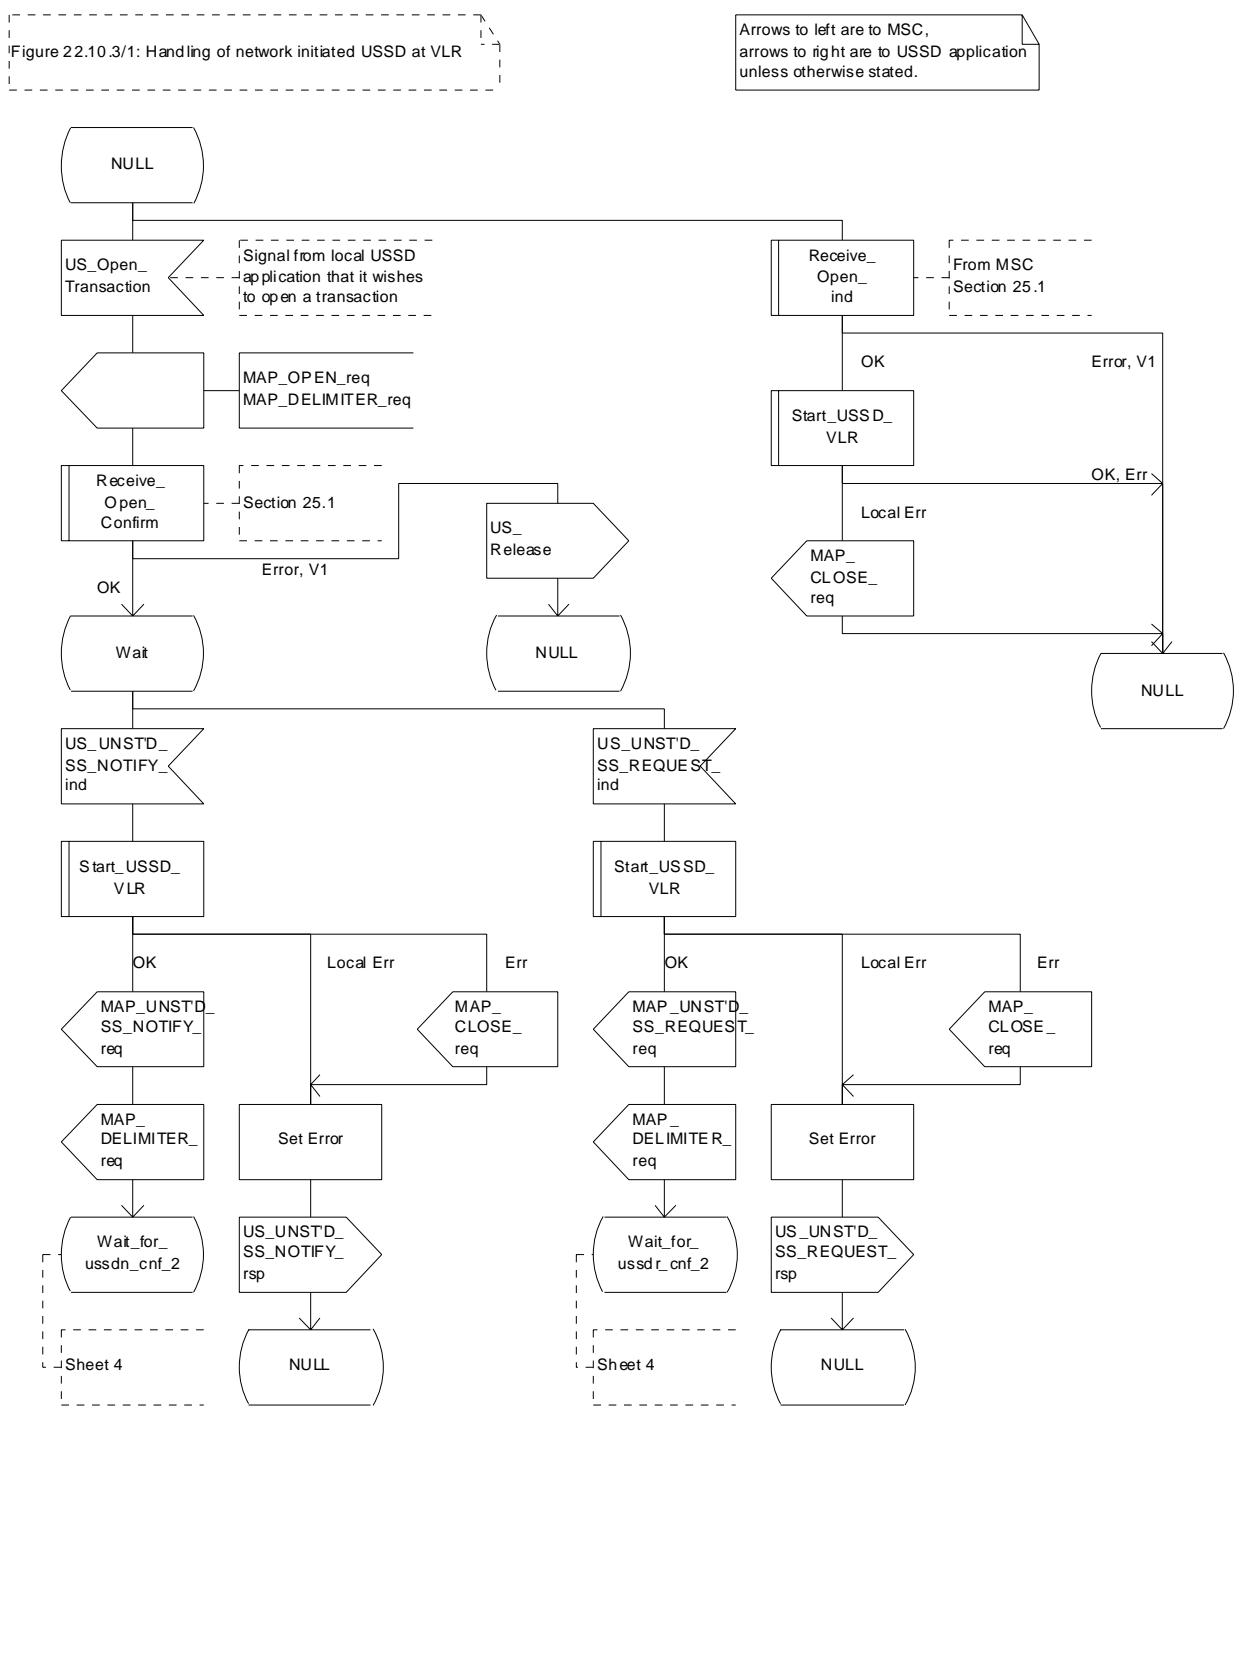


Figure 22.10.3/1 (sheet 3 of 4): Procedure NI\_USSD\_VLR

## Process NW\_INIT\_USSD\_VLR

22.10.3\_1.4(4)

Figure 22.10.3/1: Handling of network initiated USSD at VLR

Arrows to left are to MSC,  
arrows to right are to USSD application  
unless otherwise stated.

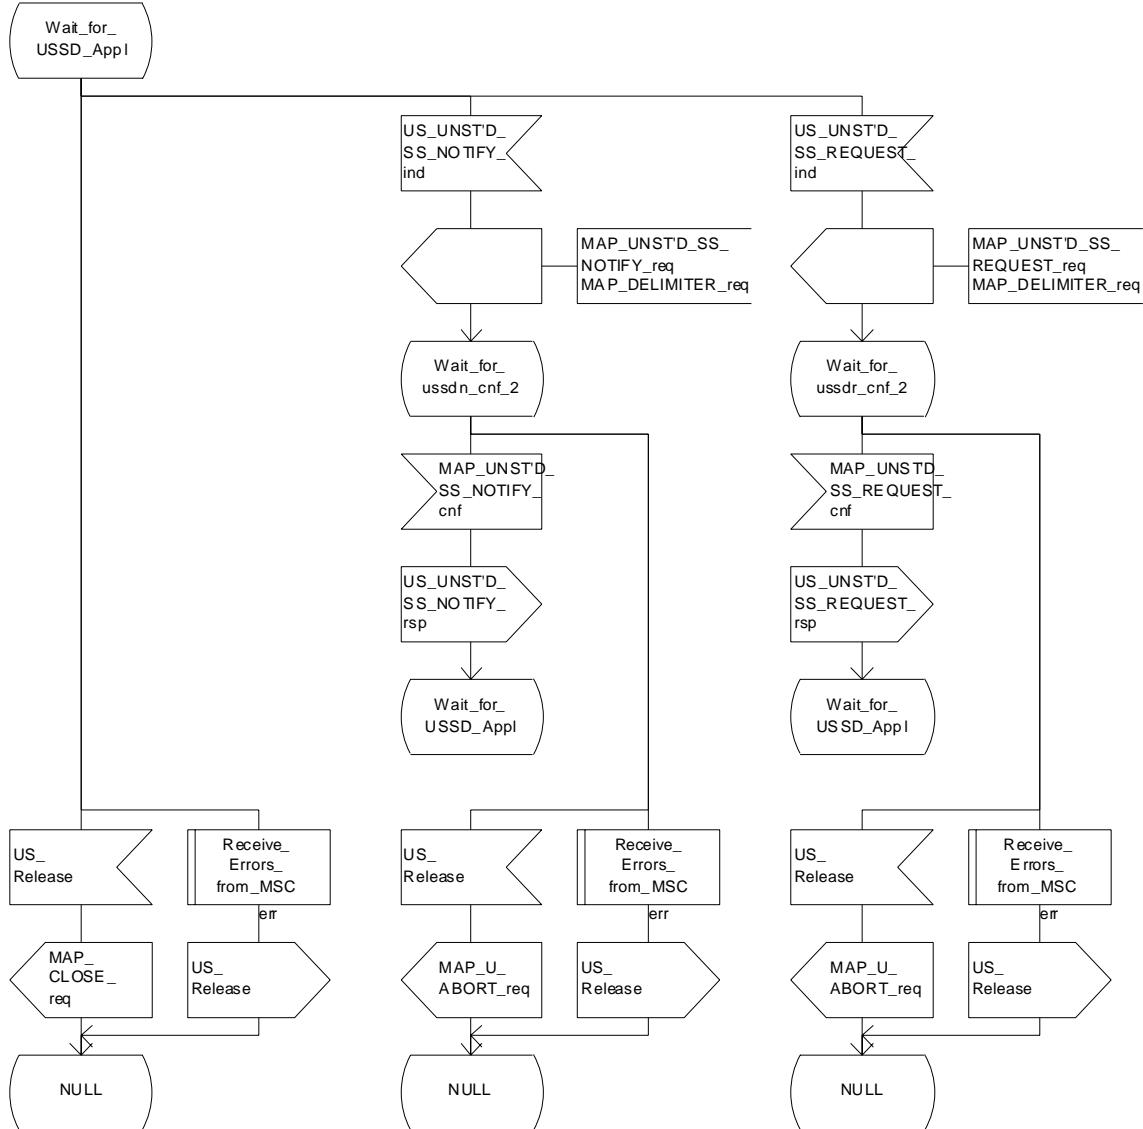


Figure 22.10.3/1 (sheet 4 of 4): Procedure NI\_USSD\_VLR

## Macrodefinition Start\_USSD\_VLR

22.10.3\_2.1(2)

Figure 22.10.3/2: Macro to establish a connection to the MS for a network initiated USSD operation.

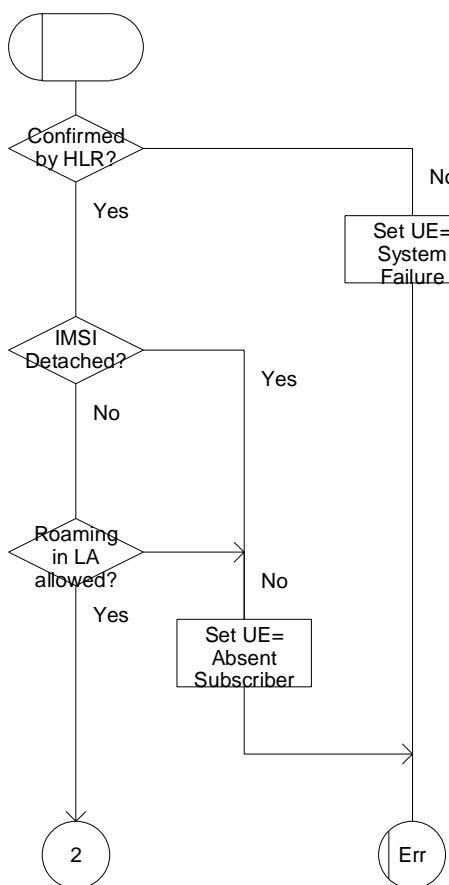


Figure 22.10.3/2 (sheet 1 of 2): Macro Start\_USSD\_VLR

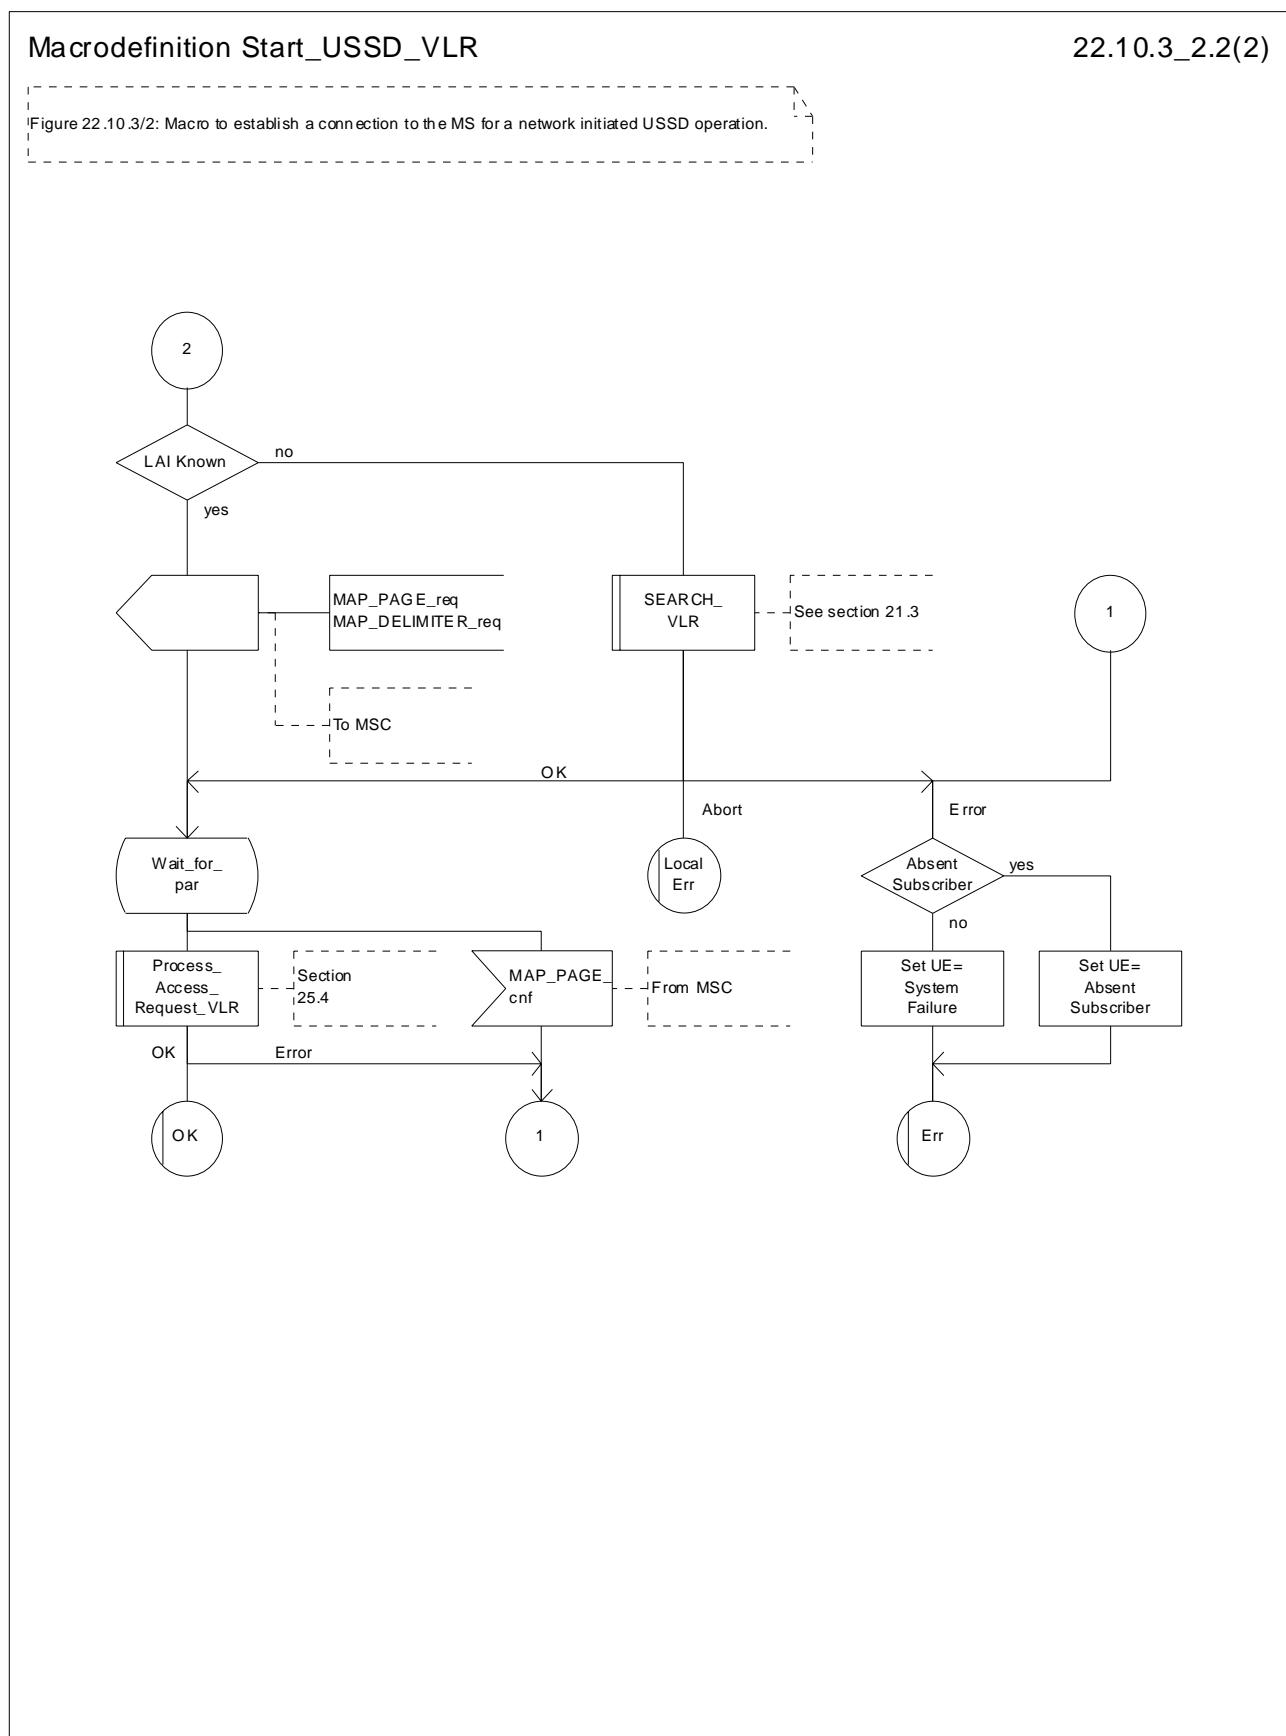


Figure 22.10.3/2 (sheet 2 of 2): Macro Start\_USSD\_VLR

## 22.10.4 Procedure in the HLR

The procedure may be invoked either by a gsmSCF, a secondary HLR or by a USSD application local to the primary HLR. It may start by using either the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY service.

In both cases the primary HLR will first check whether the MS is reachable .

If the MS is reachable, the primary HLR will initiate a MAP dialogue with the VLR and send the message received from the gsmSCF or secondary HLR or USSD application to the VLR.

Following transfer of the message the primary HLR will wait for a confirmation from the VLR. This will be sent to the gsmSCF or secondary HLR or USSD application as appropriate.

Following this, the primary HLR may receive further uses of the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY services, or may receive a MAP\_CLOSE\_ind.

In the event of an error, the MAP process with the VLR shall be released and if necessary the MAP process with the gsmSCF or secondary HLR shall be aborted, as shown in the diagram.

### Message Originated by gsmSCF or secondary HLR

If the message is originated by the gsmSCF or a secondary HLR then the primary HLR shall transfer the message transparently to the VLR.

The primary HLR may subsequently receive one or more MAP\_UNSTRUCTURED\_SS\_REQUEST\_ind or MAP\_UNSTRUCTURED\_SS\_NOTIFY\_ind indications from the gsmSCF or secondary HLR. These shall be sent transparently to the VLR. When a confirmation is received from the VLR this shall be returned to the next node as appropriate.

When the primary HLR receives a MAP\_CLOSE\_ind from the gsmSCF or secondary HLR then it shall pass this to the VLR and close the MAP dialogue.

The procedure in the primary HLR is shown in figure 22.10.4/1 and 22.10.4/2.

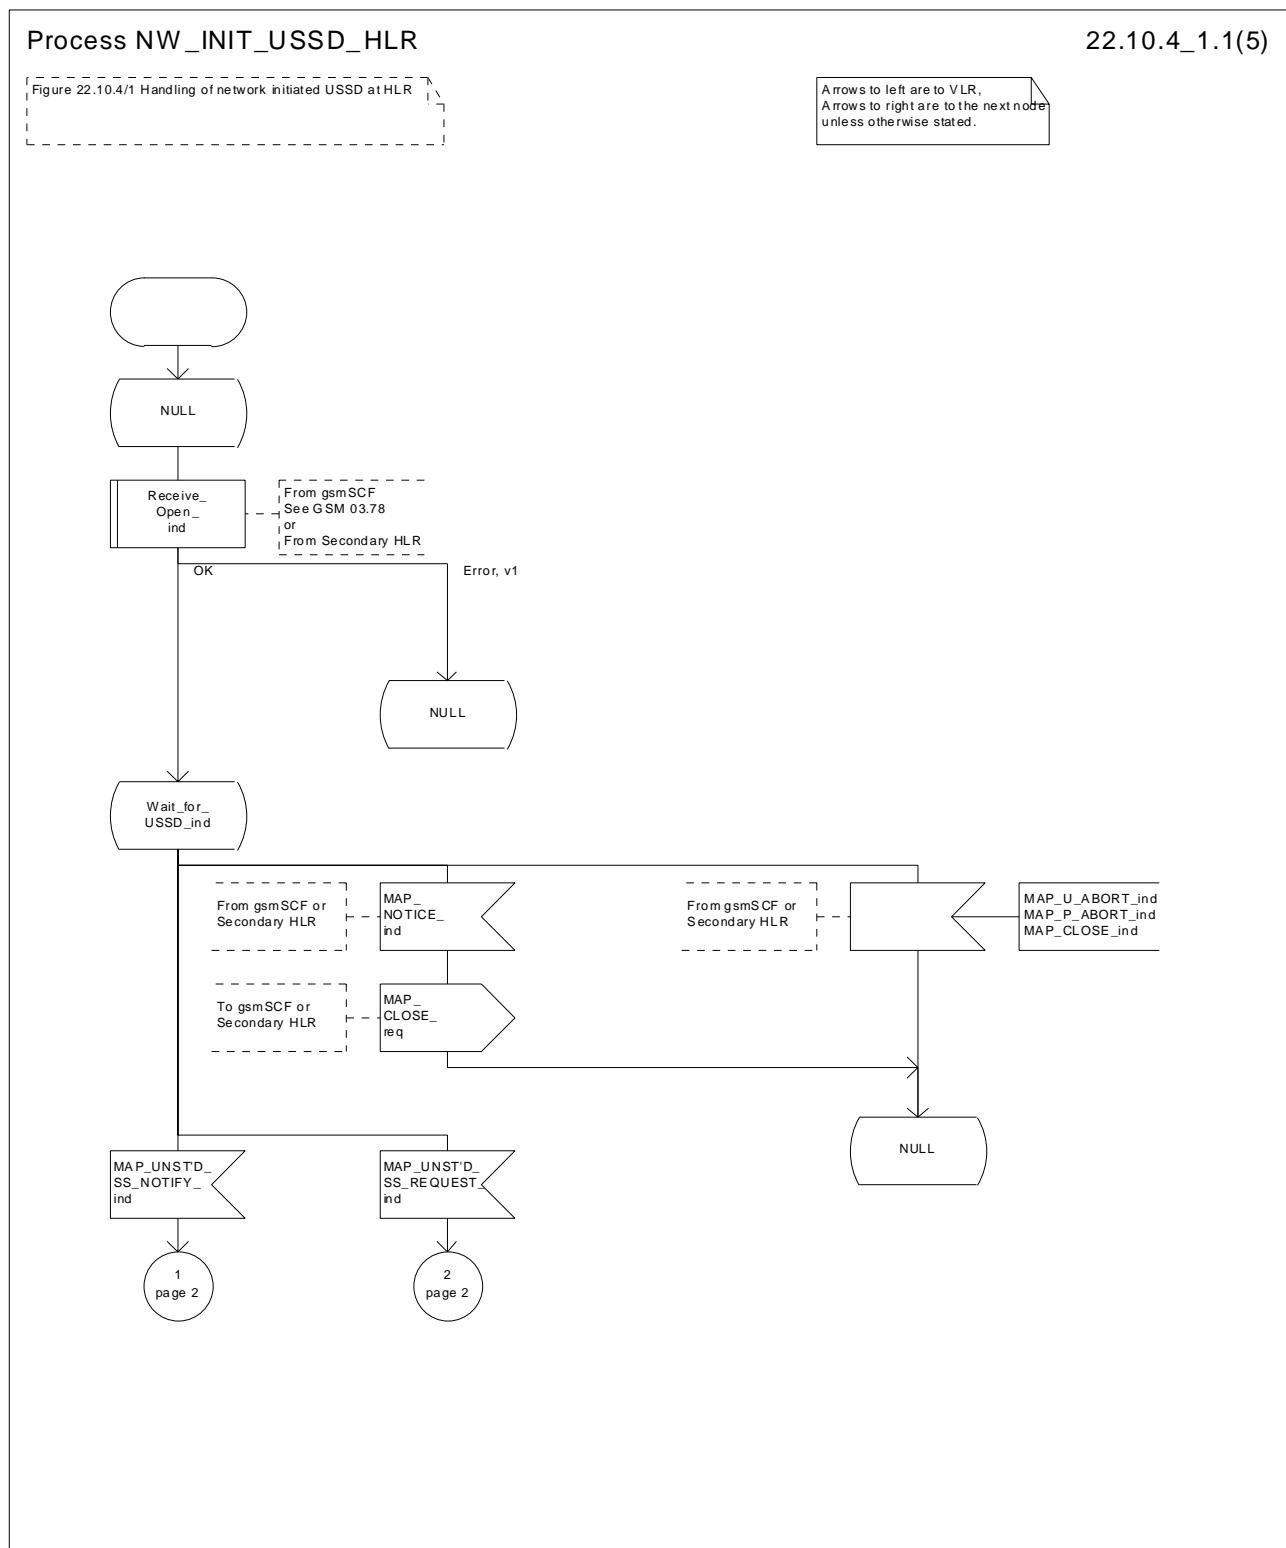


Figure 22.10.4/1 (sheet 1 of 5): Procedure NI\_USSD\_HLR

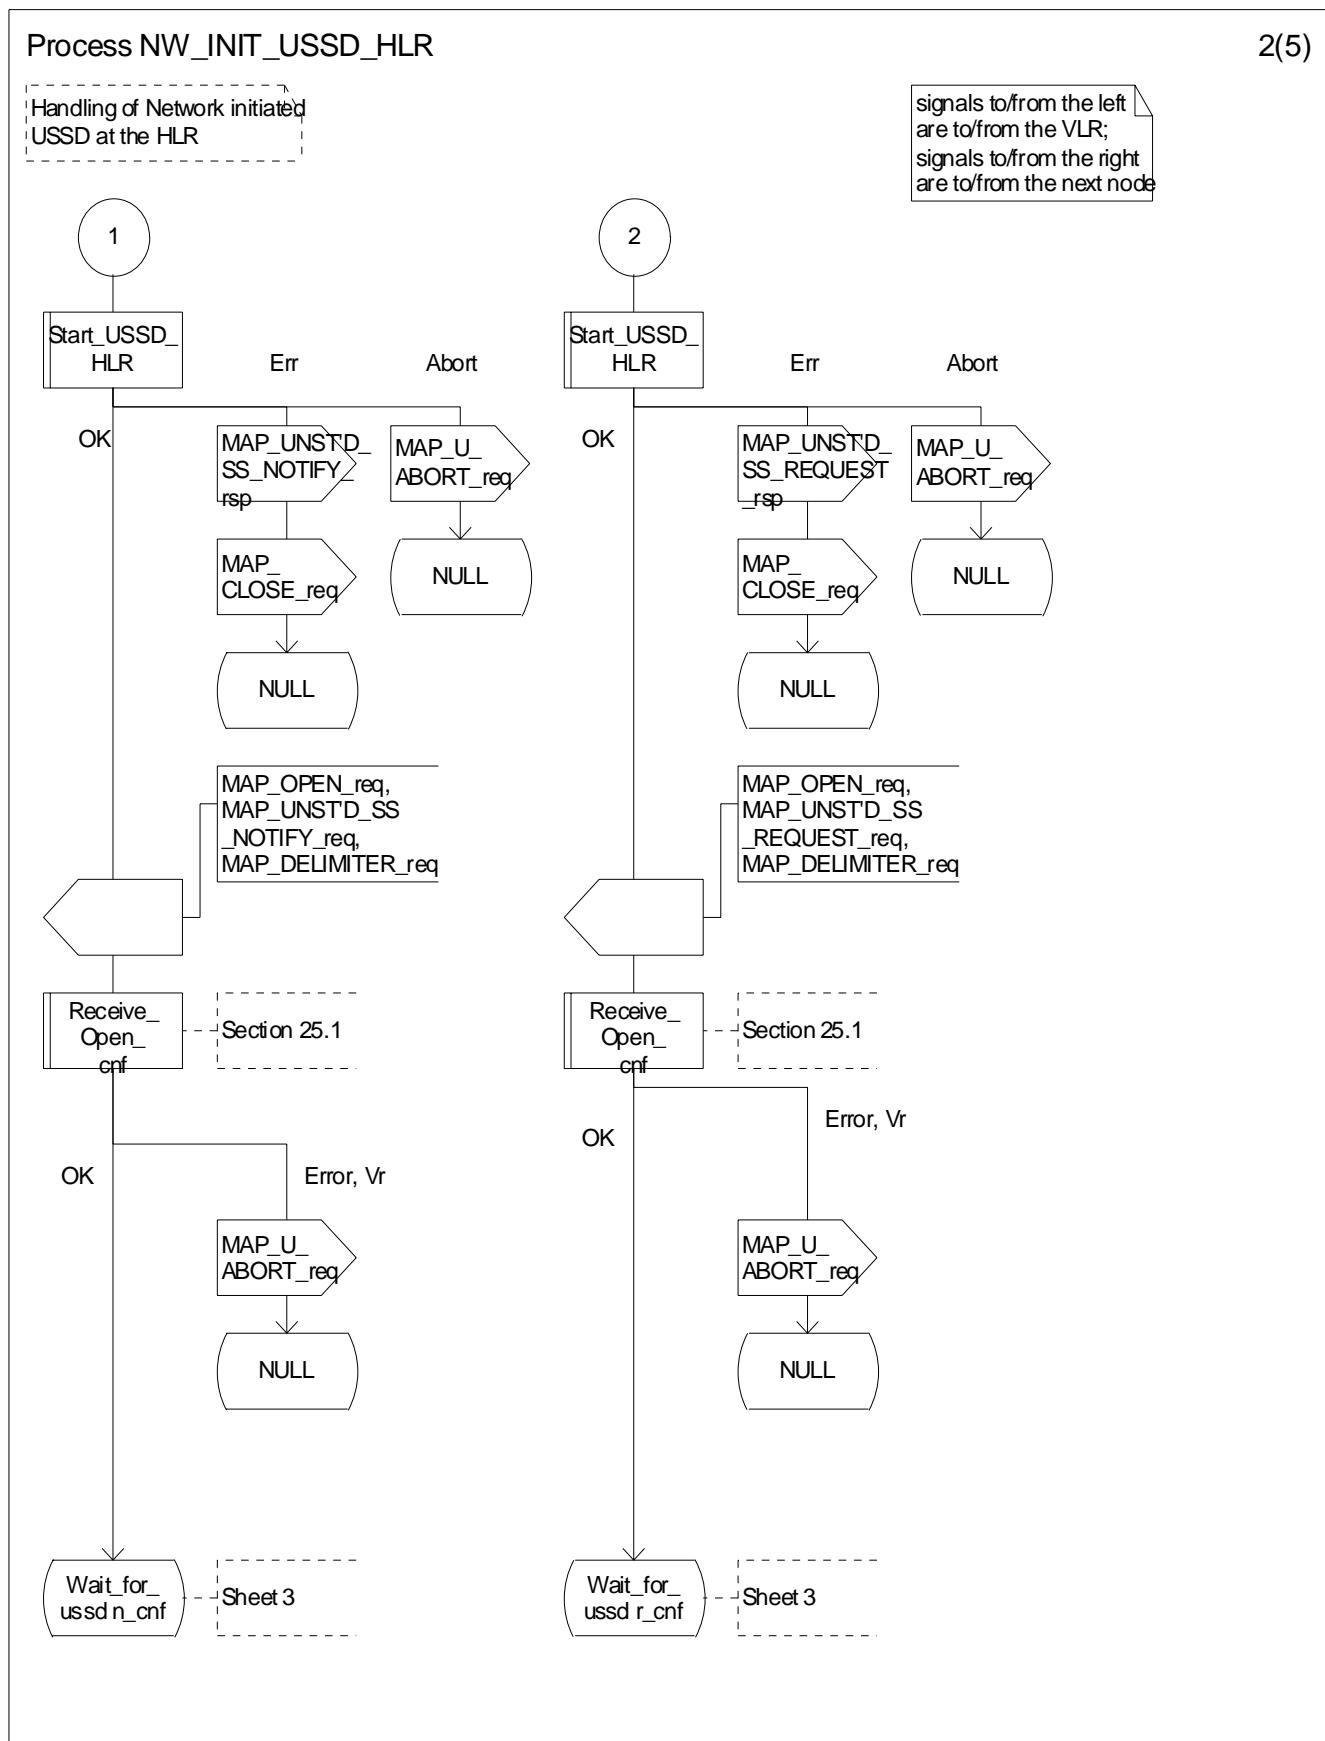


Figure 22.10.4/1 (sheet 2 of 5): Procedure NI\_USSD\_HLR

## Process NW\_INIT\_USSD\_HLR

22.10.4\_1.3(5)

|-----| Figure 22.10.4/1 Handling of network initiated USSD at HLR |-----|

|

|

Arrows to left are to VLR,  
Arrows to right are to the next node  
unless otherwise stated.

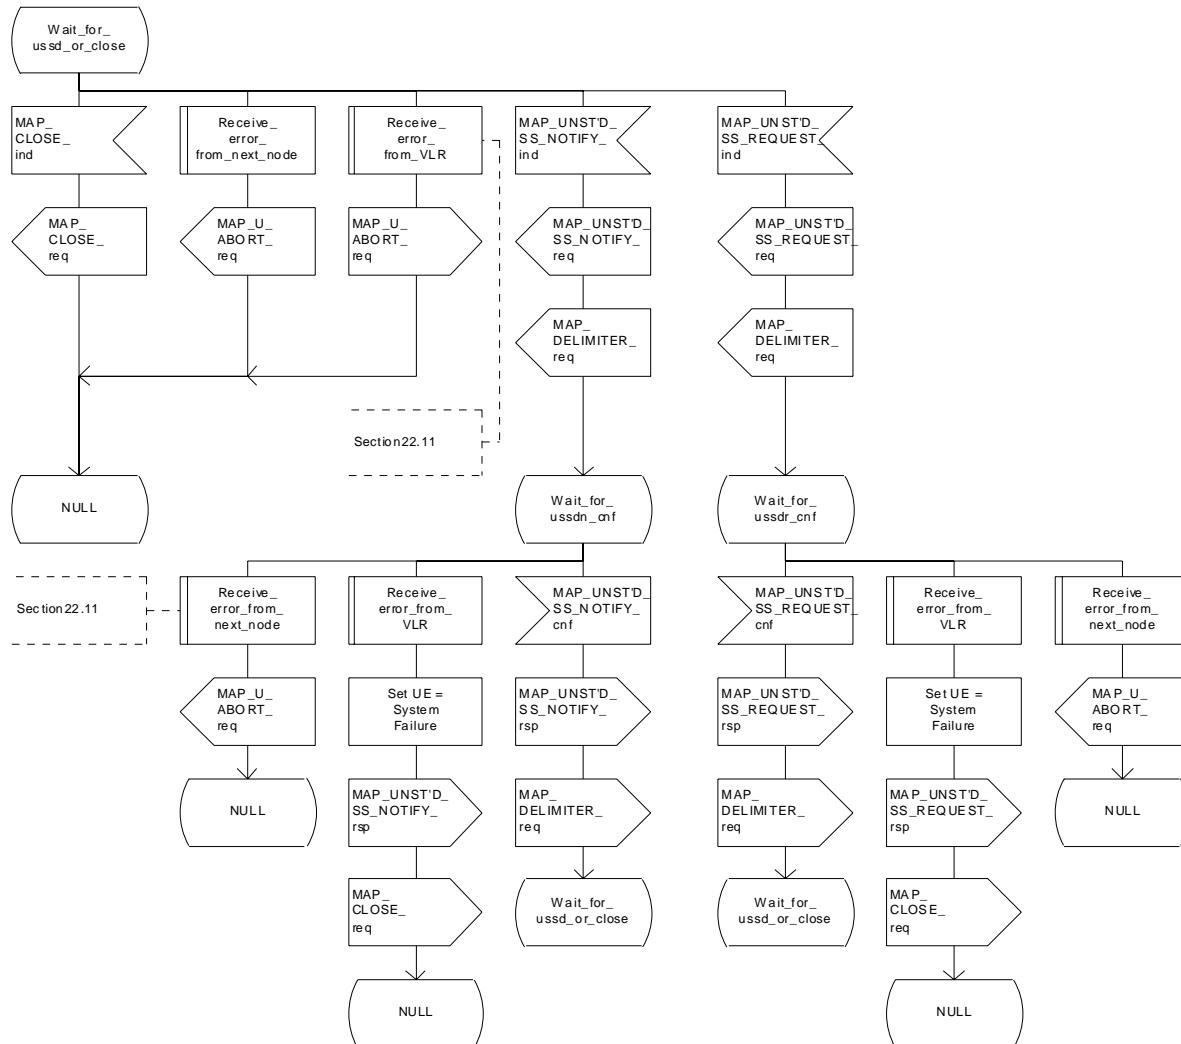


Figure 22.10.4/1 (sheet 3 of 5): Procedure NI\_USSD\_HLR

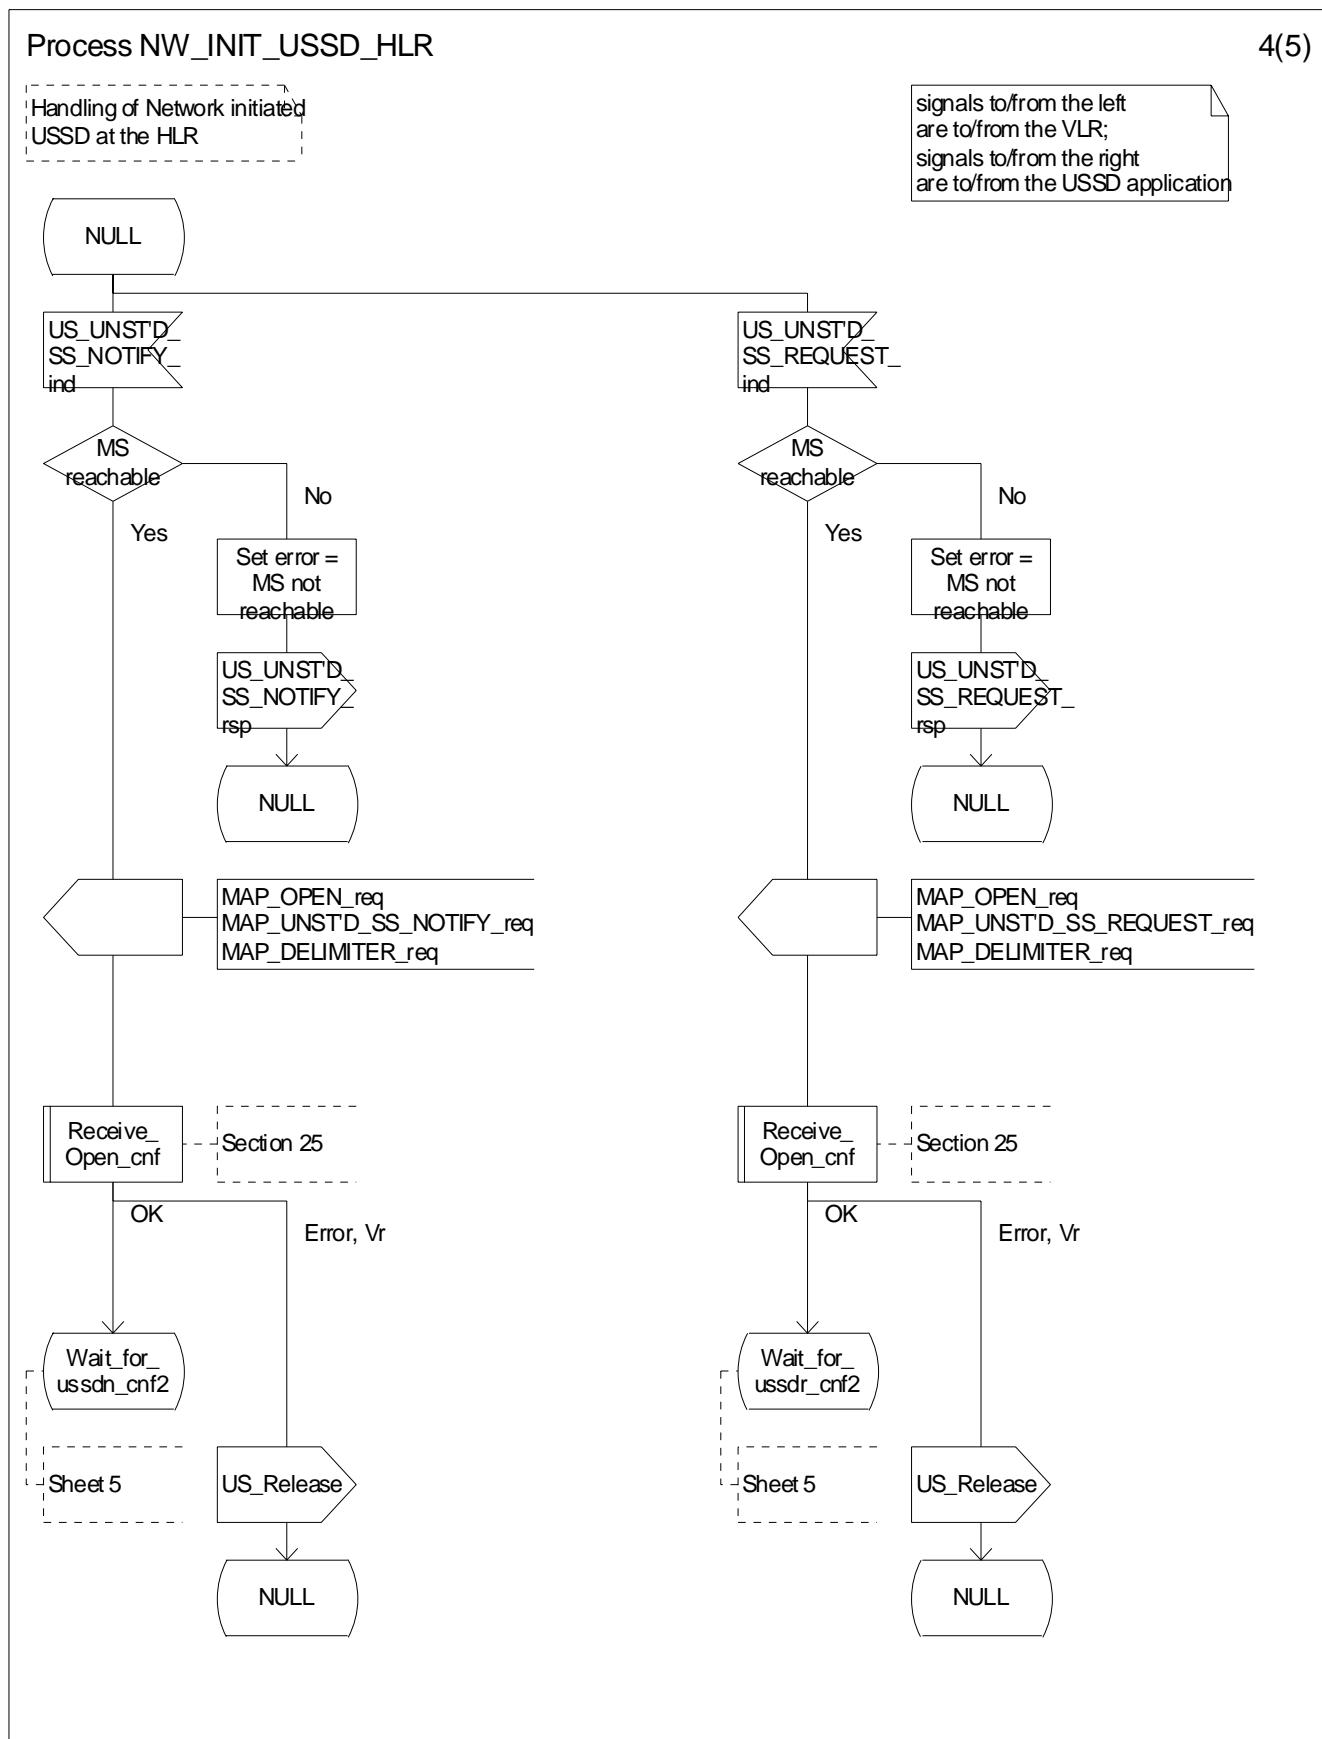


Figure 22.10.4/1 (sheet 4 of 5): Procedure NI\_USSD\_HLR

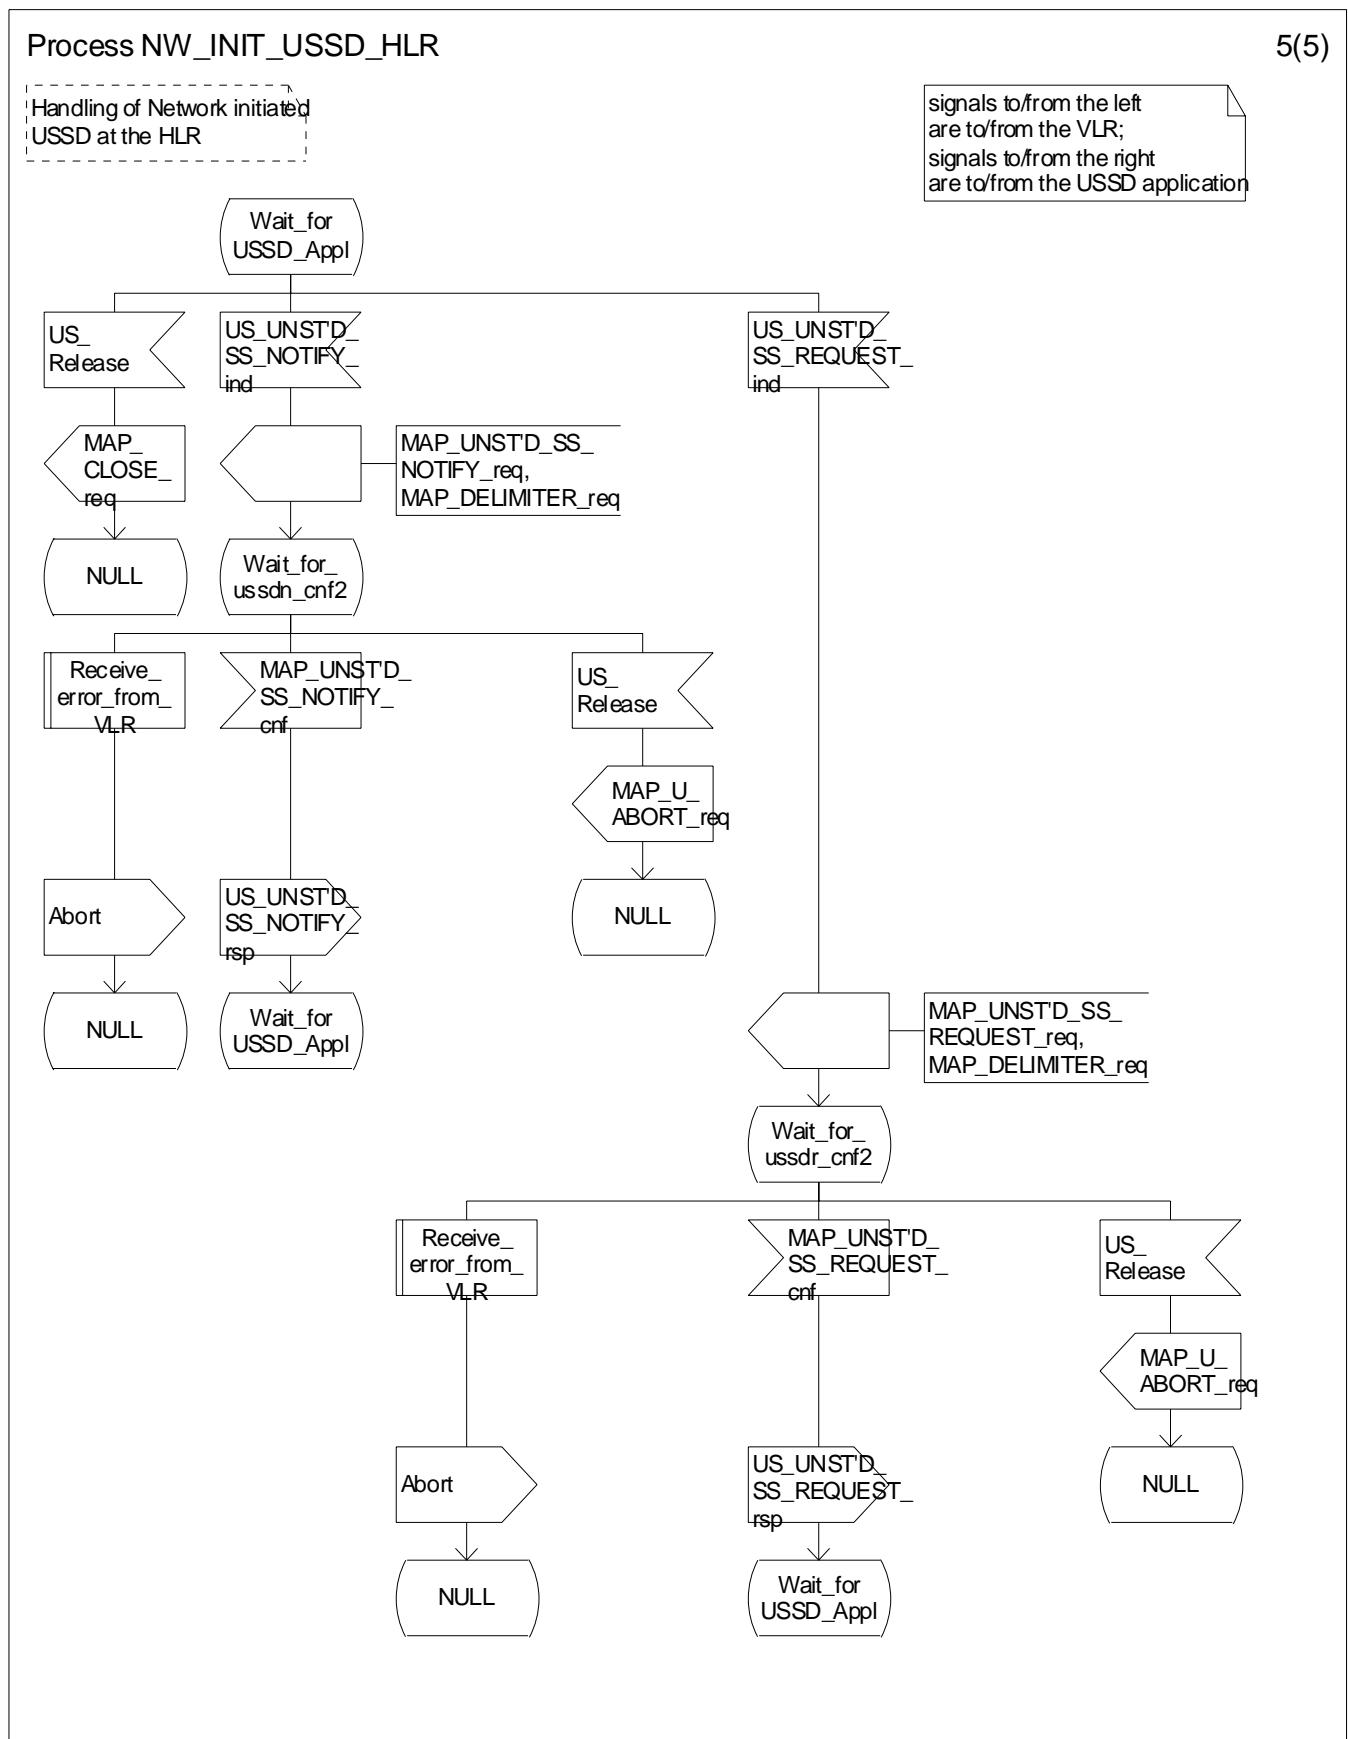


Figure 22.10.4/1 (sheet 5 of 5): Procedure NI\_USSD\_HLR

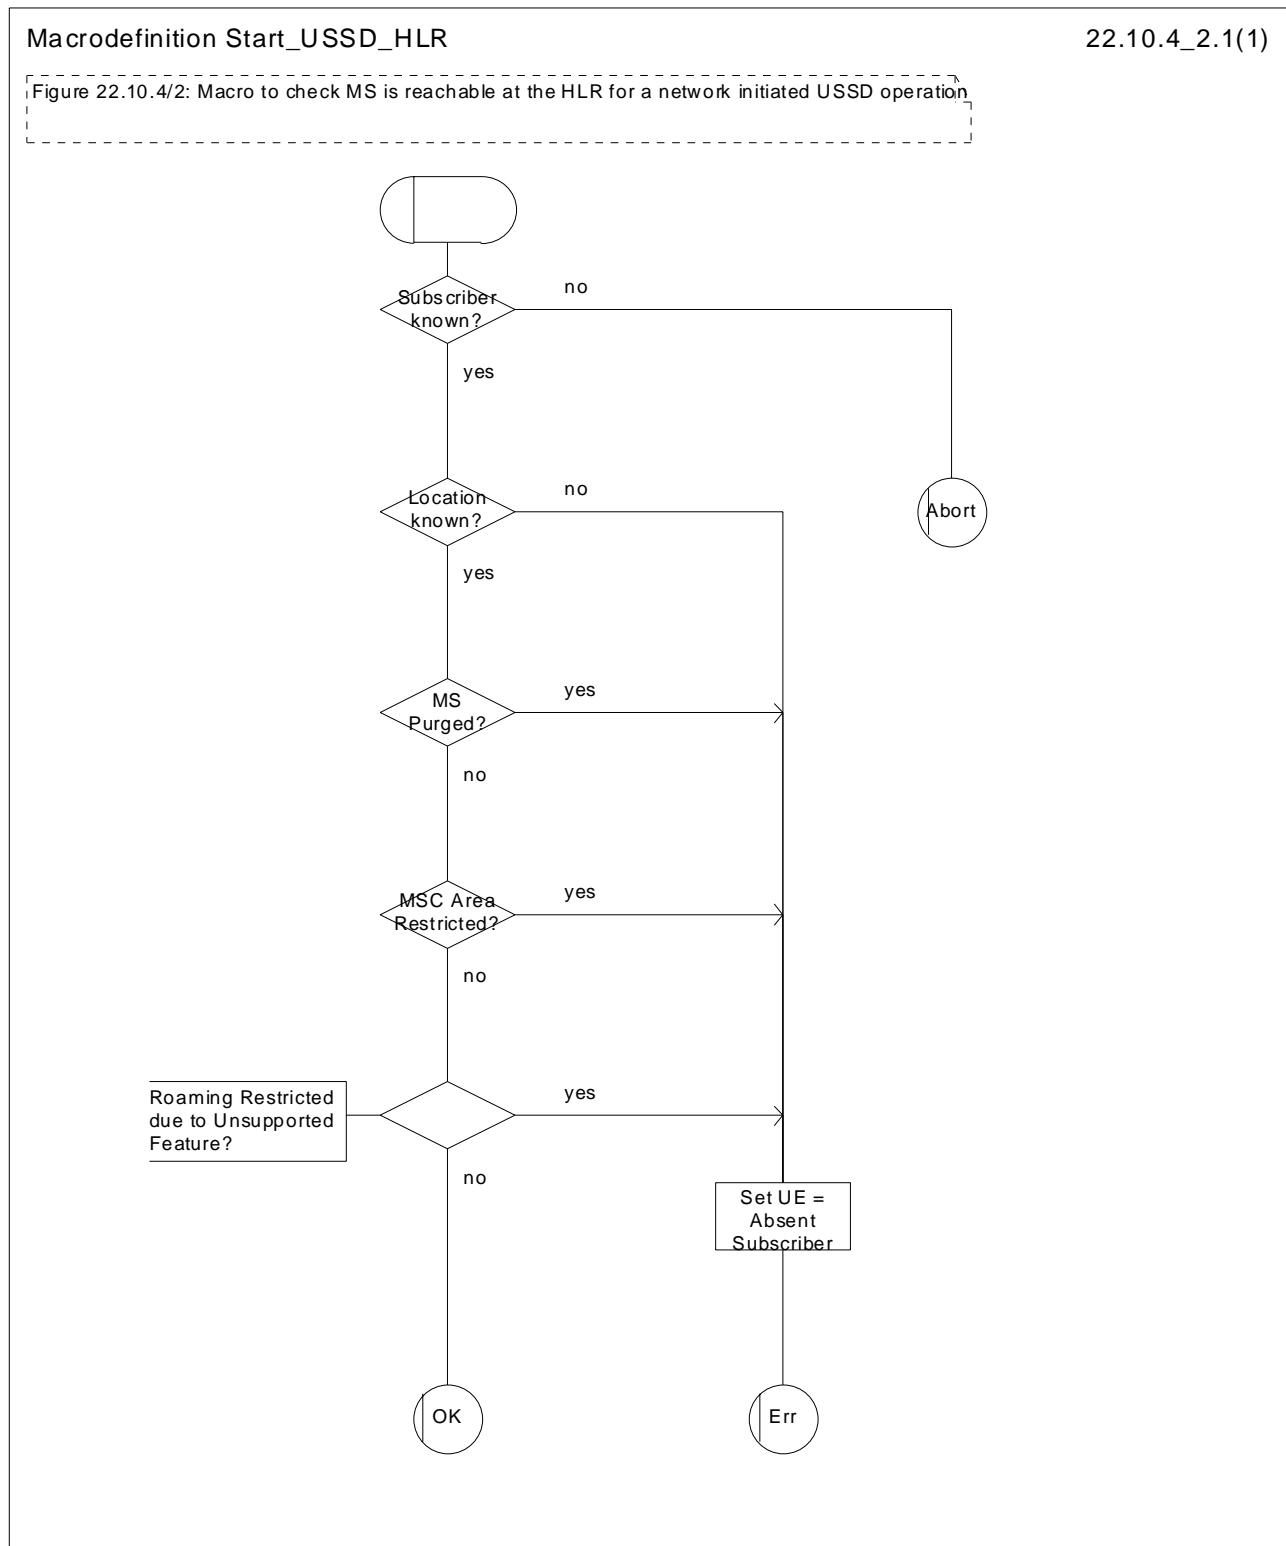


Figure 22.10.4/2: Macro Start\_USSD\_HLR

## 22.10.5 Procedure in the gsmSCF and secondary HLR

The procedure is invoked by an USSD application local to the gsmSCF/secondary HLR. It may start by using either the MAP\_UNSTRUCTURED\_SS\_REQUEST or MAP\_UNSTRUCTURED\_SS\_NOTIFY service.

In both cases the gsmSCF will initiate a MAP dialogue with the HLR and send the message received from the USSD application to the HLR.

Following transfer of the message the gsmSCF will wait for a confirmation from the HLR. This will be relayed to the USSD application..

Following this, the gsmSCF/secondary HLR may receive further UNSTRUCTURED\_SS\_REQUEST or UNSTRUCTURED\_SS\_NOTIFY requests, or may receive a Release from the USSD application.

In the event of an error, the MAP dialogue with the HLR shall be released as shown in the diagram.

The procedure in the gsmSCF and secondary HLR is shown in figure 22.10.5/1.

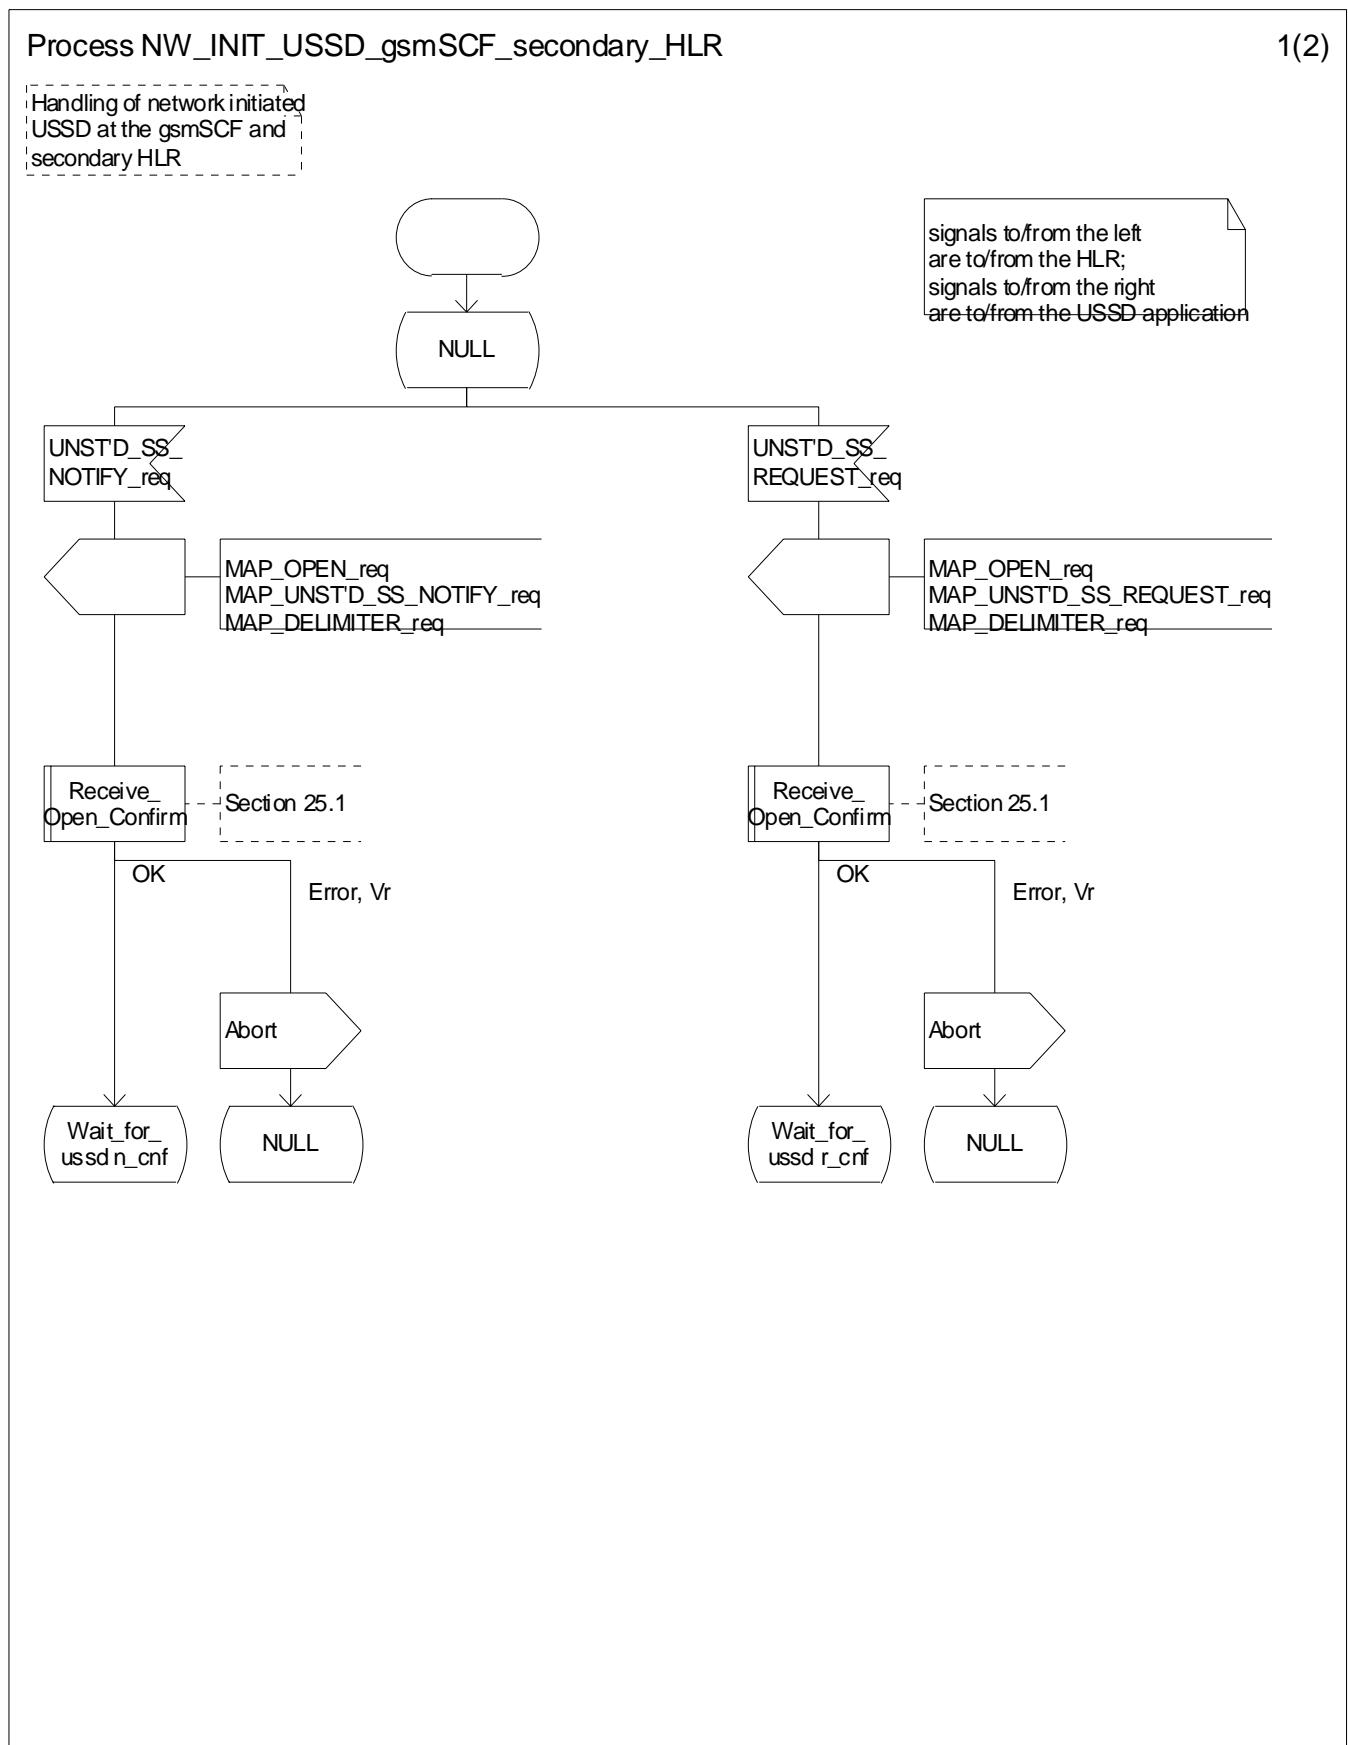


Figure 22.10.5/1 (sheet 1 of 2): Procedure NI\_USSD\_gsmSCF\_secondary\_HLR

## Process NW\_INIT\_USSD\_gsmSCF\_secondary\_HLR

2(2)

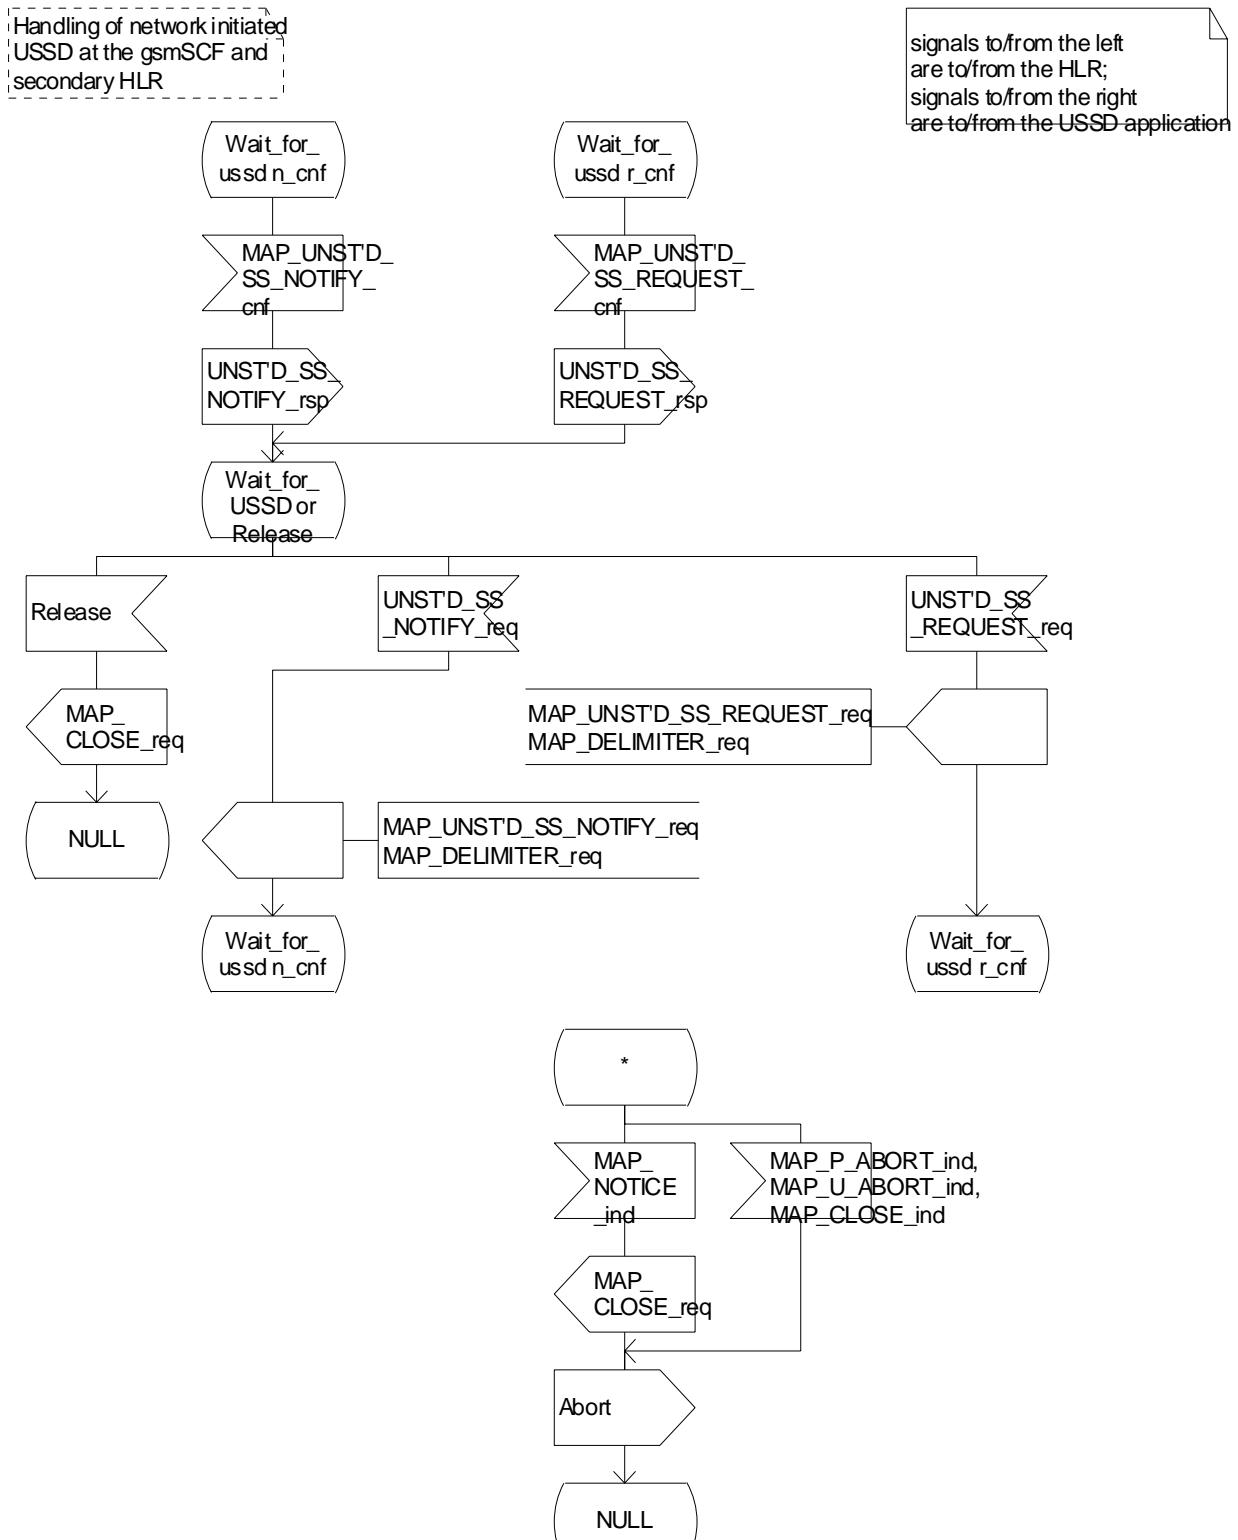


Figure 22.10.5/1 (sheet 2 of 2): Procedure NI\_USSD\_gsmSCF\_secondary\_HLR

## 22.11 Common macros for clause 22

The following macros are used for the description of more than one of the supplementary service processes described in clause 22.

### 22.11.1 SS Password handling macros

#### **Macro Get\_Password\_MSC**

This macro is used by the MSC to relay a request for password from the VLR to the MS, and to relay a response from the MS back to the VLR. The macro is described in figure 22.11.1/1.

#### **Macro Get\_Password\_VLR**

This macro is used by the VLR to relay a request for password from the HLR to the MSC, and to relay a response from the MSC back to the HLR. The macro is described in figure 22.11.1/2.

## Macrodefinition GET\_PASSWORD\_MSC

22.11.1\_1(1)

'-----  
 'Figure 22.11.1/1: Macro which relays a GetPassword request from the VLR to the MS  
 ,and relays the GetPassword response from the MS to the VLR  
 '-----

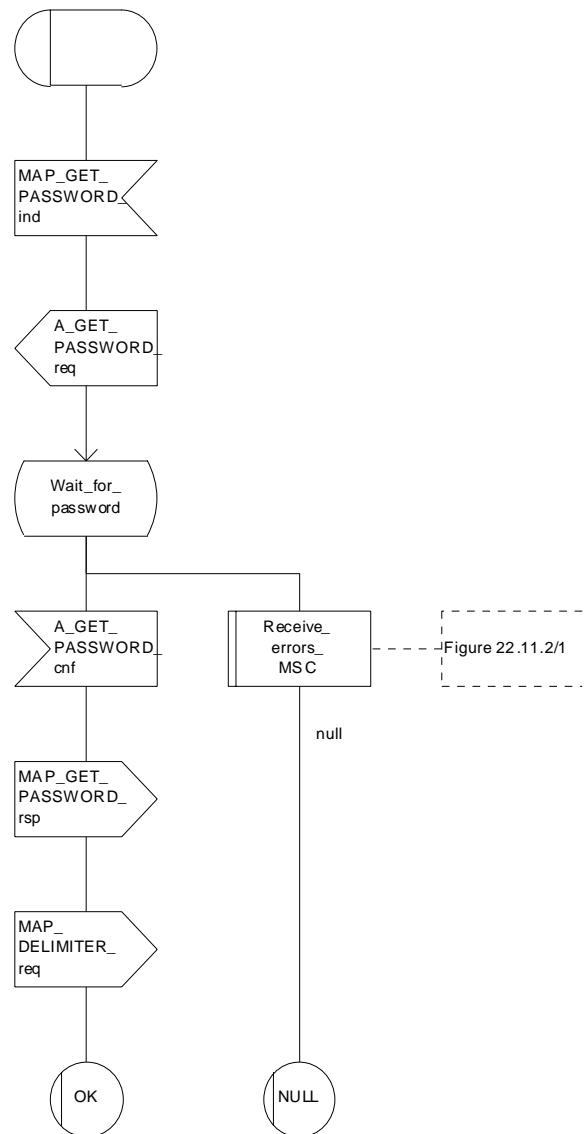


Figure 22.11.1/1: Macro Get\_PW\_MSC

## Macrodefinition GET\_PASSWORD\_VLR

22.11.1\_2(1)

'Figure 22.11.1/2: Macro which relay a GetPassword request from the HLR to the VLR  
and relays the GetPassword response from the VLR to the HLR

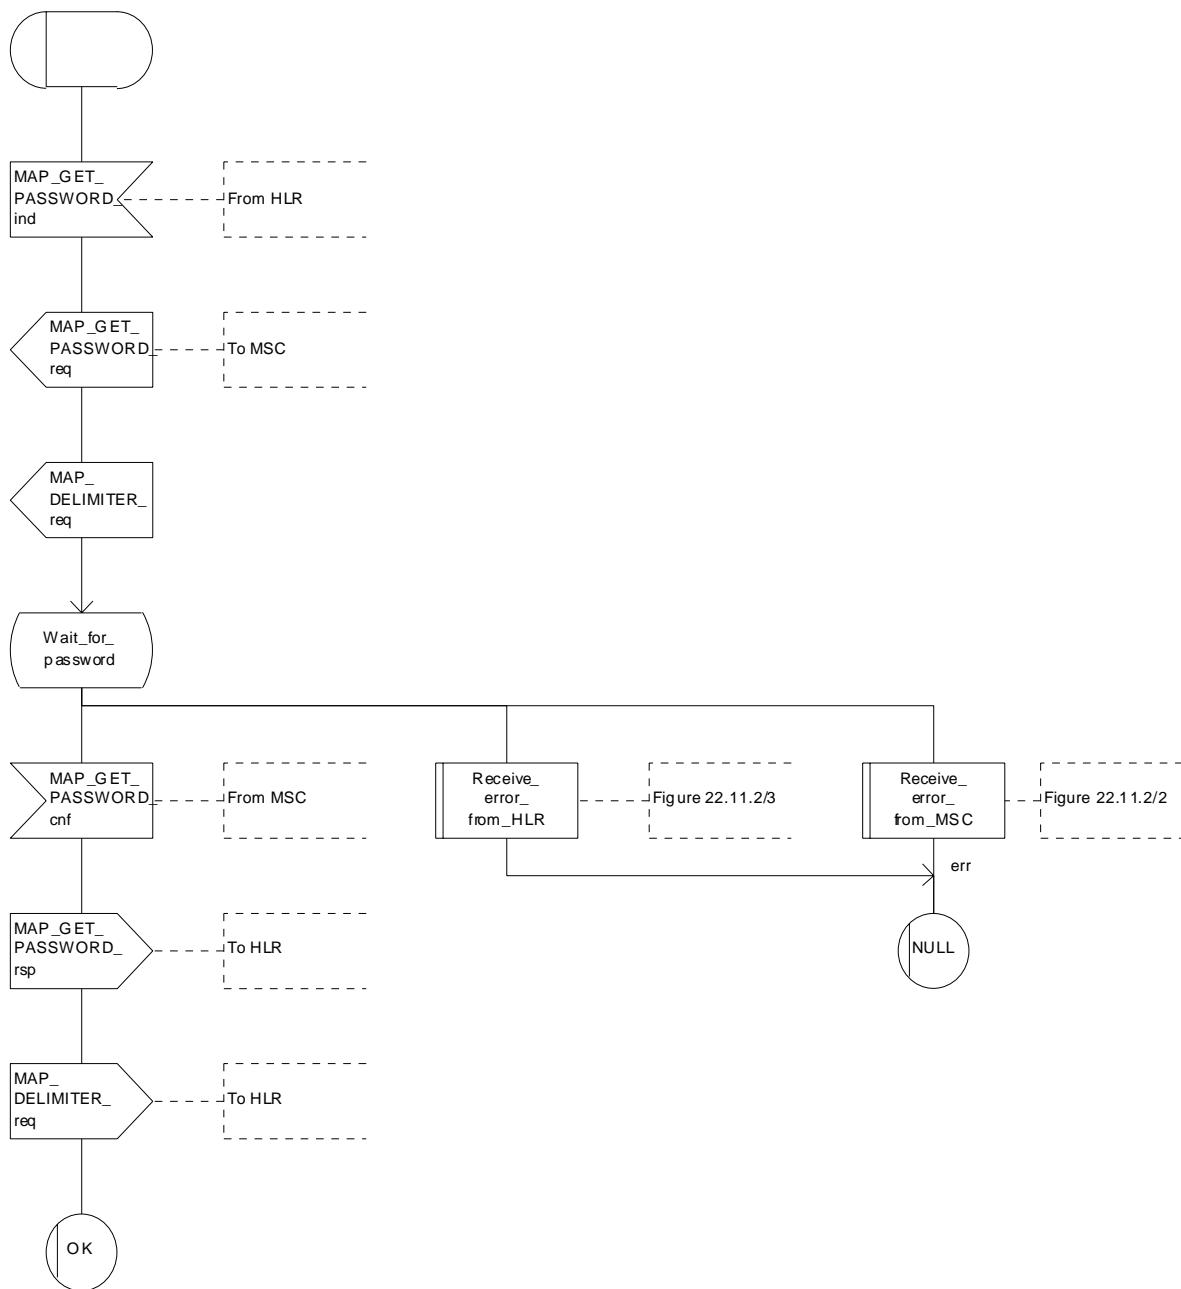


Figure 22.11.1/2: Macro Get\_PW\_VLR

## 22.11.2 SS Error handling macros

### **Macro Receive\_errors\_MSC**

This macro is used by the MSC to receive signals which should lead to failure if received in any state of a supplementary service process. If the air interface connection is released by the MS, the communication towards the VLR is aborted, and the MSC should return to a stable "NULL" state. If a MAP\_NOTICE indication is received from the VLR, or the VLR aborts or unexpectedly closes the connection, then the air interface connection shall be released. The macro is described in figure 22.11.2/1.

### **Macro Receive\_error\_from\_MSC**

This macro is used by the VLR to receive signals from the MSC which should lead to failure if received in any state of a supplementary service process. If a MAP\_NOTICE indication is received from the MSC, that connection is closed before the only outcome of the macro, "err" is reported back to the calling process. The macro is described in figure 22.11.2/2.

### **Macro Receive\_error\_from\_HLR**

This macro is used by the VLR to receive signals from the HLR which should lead to failure if received in any state of a supplementary service process. If a MAP\_NOTICE indication is received from the HLR, that connection is closed. The macro is described in figure 22.11.2/3.

### **Macro Receive\_error\_from\_VLR**


This macro is used by the HLR to receive signals from the VLR that should lead to failure if received in any state of a supplementary service process. If a MAP\_NOTICE indication is received from the VLR, that connection is closed before the only outcome of the macro, "err" is reported back to the calling process. The macro is described in figure 22.11.2/4.

### **Macro Receive\_error\_from\_next\_node**

This macro is used by the primary HLR to receive signals from the gsmSCF or secondary HLR that should lead to failure if received in any state of a supplementary service process. If a MAP\_NOTICE indication is received from the next node, that connection is closed. The macro is described in figure 22.11.2/5.

**Macrodefinition Receive\_errors\_MSC** 22.11.2\_1(1)

Figure 22.11.2/1: Macro which handles possible error situations while the MSC is waiting for a confirmation of a supplementary service request to the VLR

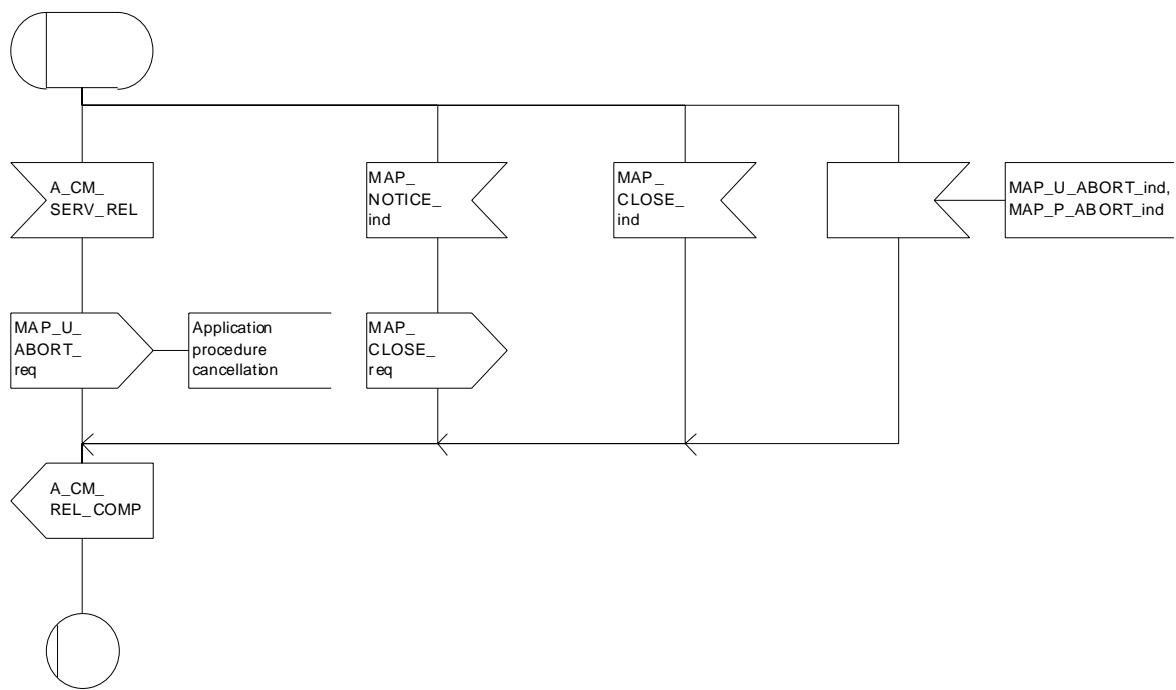

**Figure 22.11.2/1: Macro Receive\_Errors\_MSC**

## Macrodefinition Receive\_error\_from\_MSC

22.11.2\_2(1)

Figure 22.11.2/2: Macro to receive errors from the MSC during supplementary services procedures in the VLR

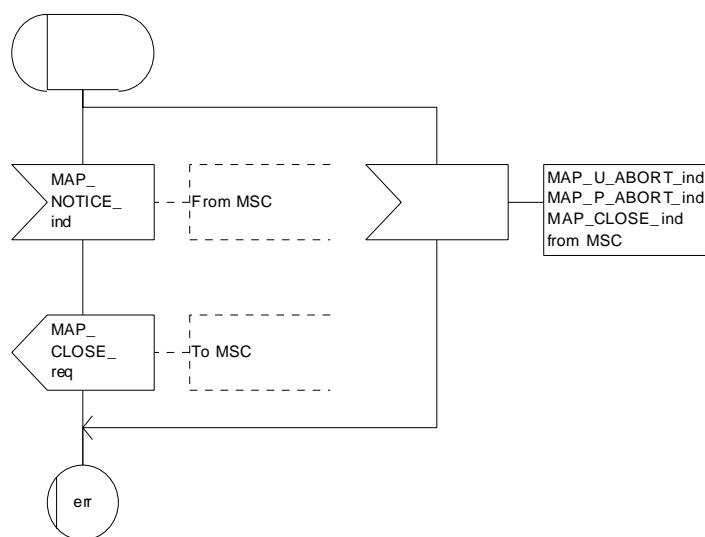


Figure 22.11.2/2: Macro Receive\_Error\_from\_MSC

## Macrodefinition Receive\_error\_from\_HLR

22.11.2\_3(1)

Figure 22.11.2/3: Macro to receive errors from the HLR while the VLR is waiting for a confirmation of a supplementary service request sent to the HLR

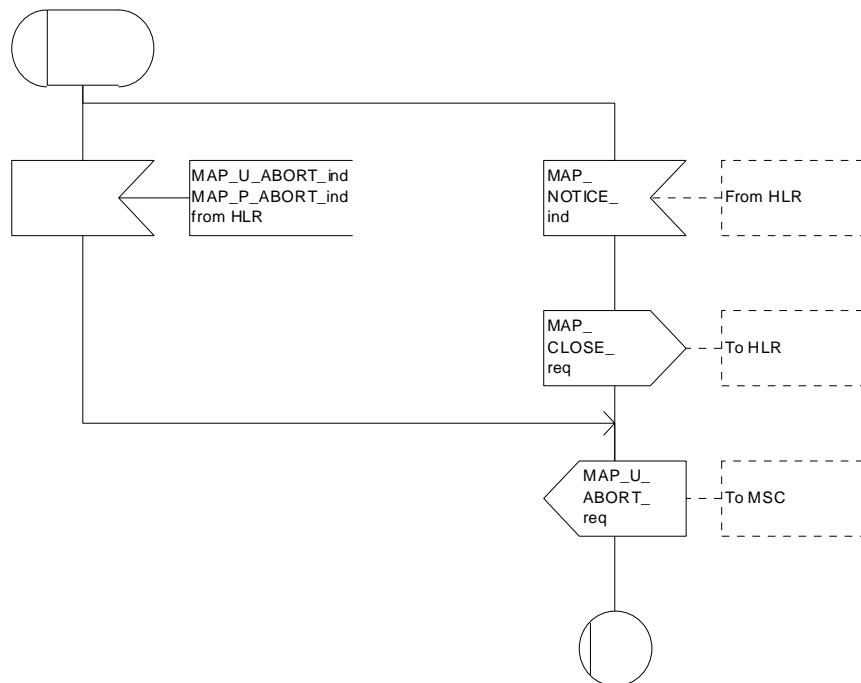


Figure 22.11.2/3: Macro Receive\_Error\_HLR

## Macrodefinition Receive\_error\_from\_VLR

22.11.2\_4(1)

Figure 22.11.2/4: Macro to receive errors from the VLR during supplementary services procedures in the HLR

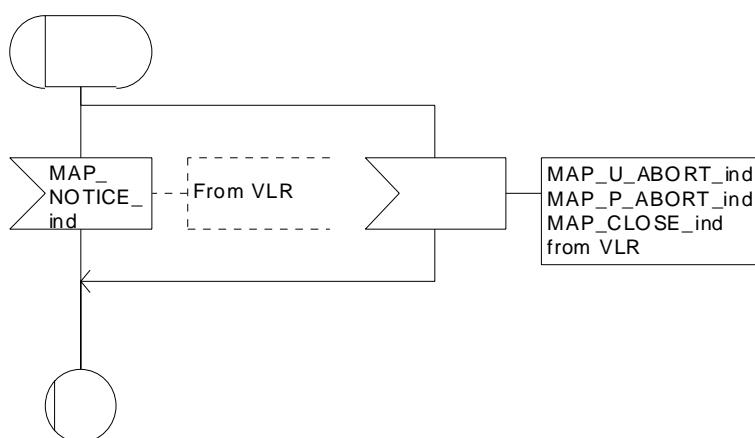


Figure 22.11.2/4: Macro Receive\_error\_from\_VLR

## Macro definition Receive\_error\_from\_next\_node

22.11.2\_5(1)

Figure 22.11.2/5: Macro to receive errors from the next node while the HLR is waiting for a confirmation of a supplementary service request sent to the next node

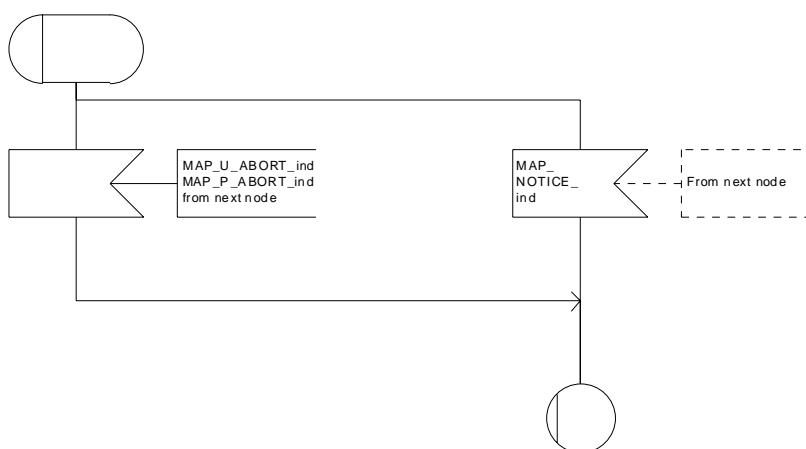


Figure 22.11.2/5: Macro Receive\_error\_from\_next\_node


## 22.12 Supplementary Service Invocation Notification procedure

### 22.12.1 General

The Supplementary Service Invocation Notification procedure is used to notify a gsmSCF about the invocation of a GSM Supplementary Service.

The password registration procedure is shown in figure 22.12.1/1.

The following services may be used:

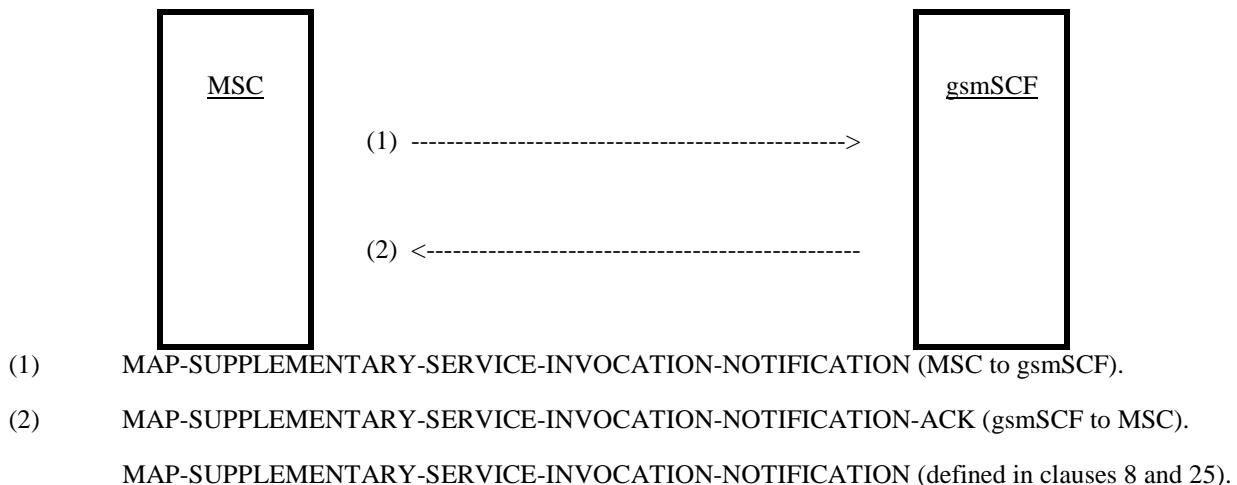

**Figure 22.12.1/1: Interfaces and services for supplementary service invocation notification**

### 22.12.2 Procedures in the MSC

The supplementary service invocation notification procedure in the MSC is triggered when the requested supplementary service is invoked at the MSC. The MSC notifies the gsmSCF of a supplementary service invocation via the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION service. This is sent in a TCAP TC-BEGIN primitive. The MSC then awaits a positive or negative acknowledgement from the gsmSCF to the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION. This is received in a TCAP TC-END primitive, and upon receipt the relationship between the MSC and the gsmSCF is terminated. Similarly, the relationship is terminated at the MSC by the sending of or receipt of a TCAP P-ABORT primitive. This is illustrated in figure 22.12.2/1.

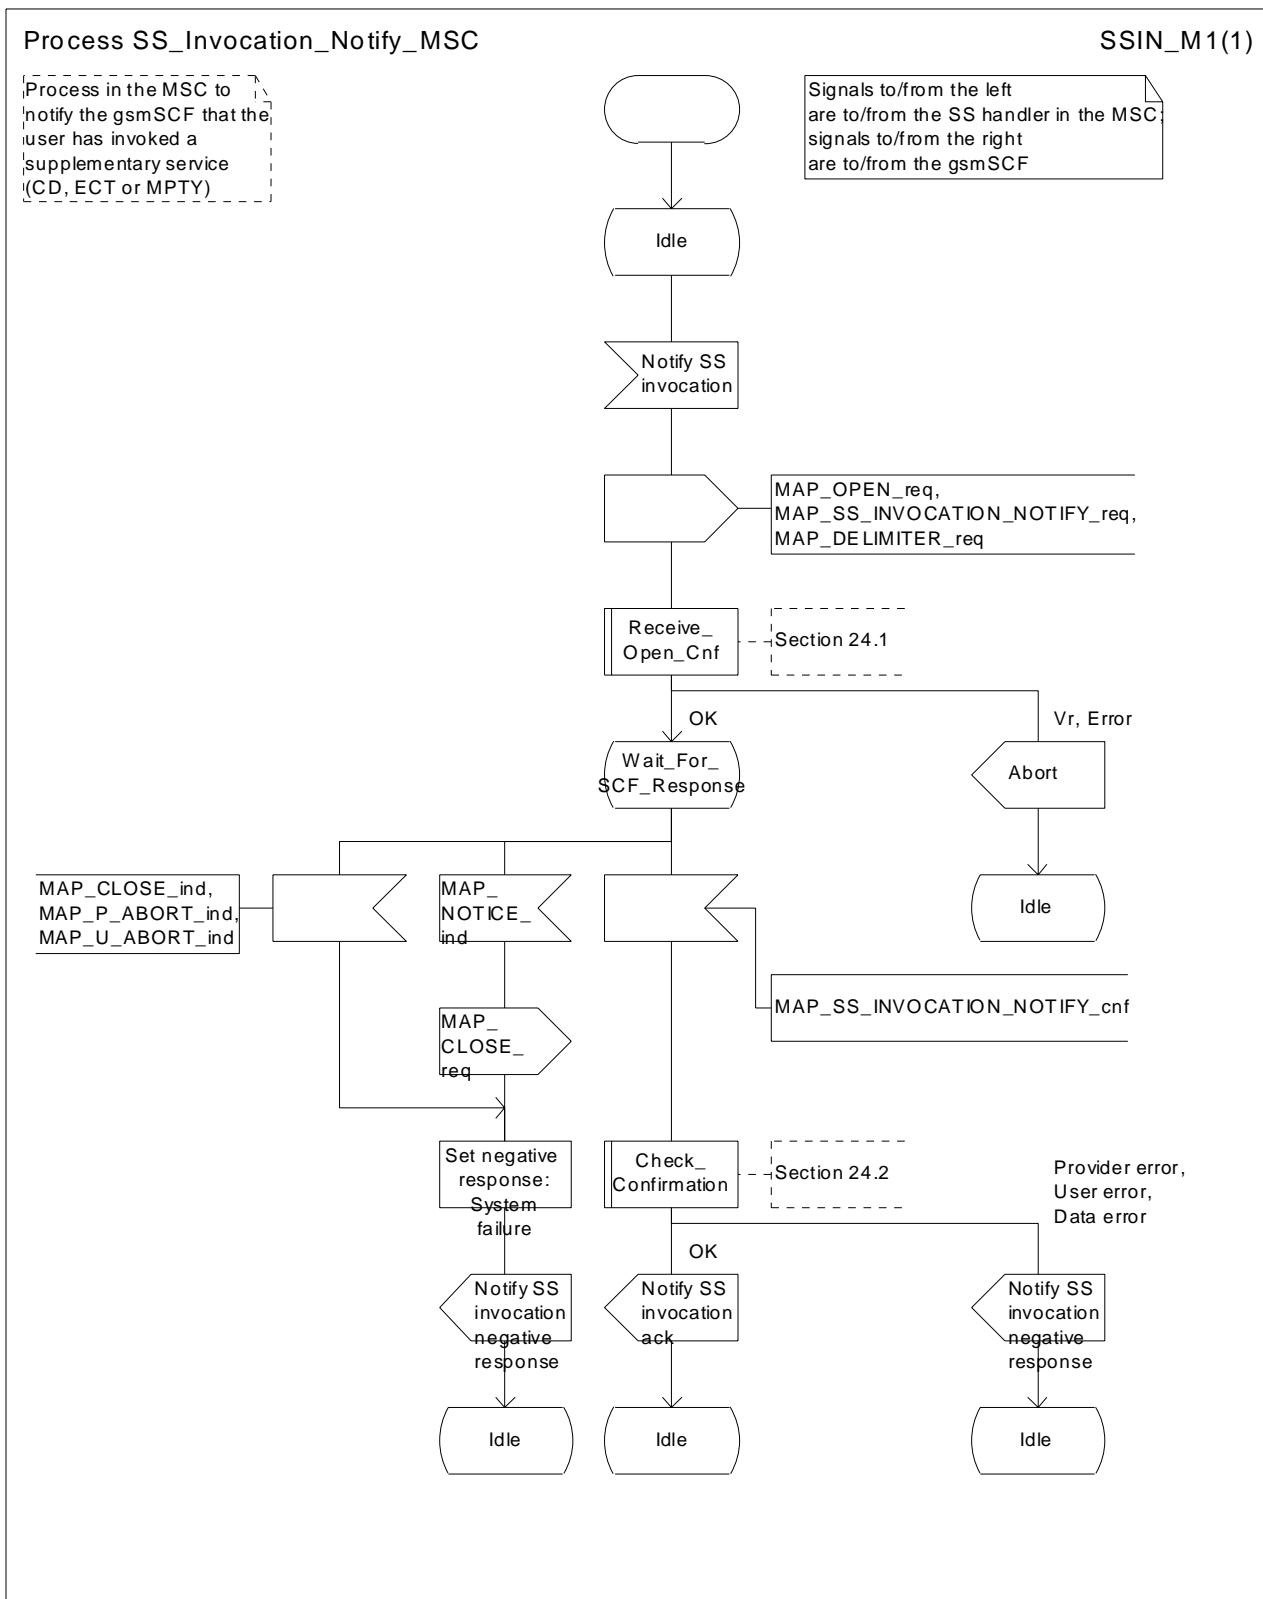


Figure 22.12.2/1: Process SS\_Invocation\_Notify\_MSC (sheet 1 of 1)

### 22.12.3 Procedures in the gsmSCF

Upon receiving notification of the supplementary service invocation via the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION service, the gsmSCF analyses the received information. If the gsmSCF understands the information sent via the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION service then it returns a positive acknowledgement to the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION, indicating the success of the service. This is returned in a TCAP TC-END primitive, using the basic end procedure.

Otherwise, a negative acknowledgement to the MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION is returned. This is also returned in a TCAP TC-END primitive, again using the basic end procedure. The gsmSCF TCAP service may also choose to abort the relationship to the MSC by sending a TCAP P-ABORT primitive. It will immediately terminate processing of a MAP-SUPPLEMENTARY-SERVICE-INVOCATION-NOTIFICATION should a TCAP P-ABORT primitive be received from the MSC. This is illustrated in figure 22.12.3/1.


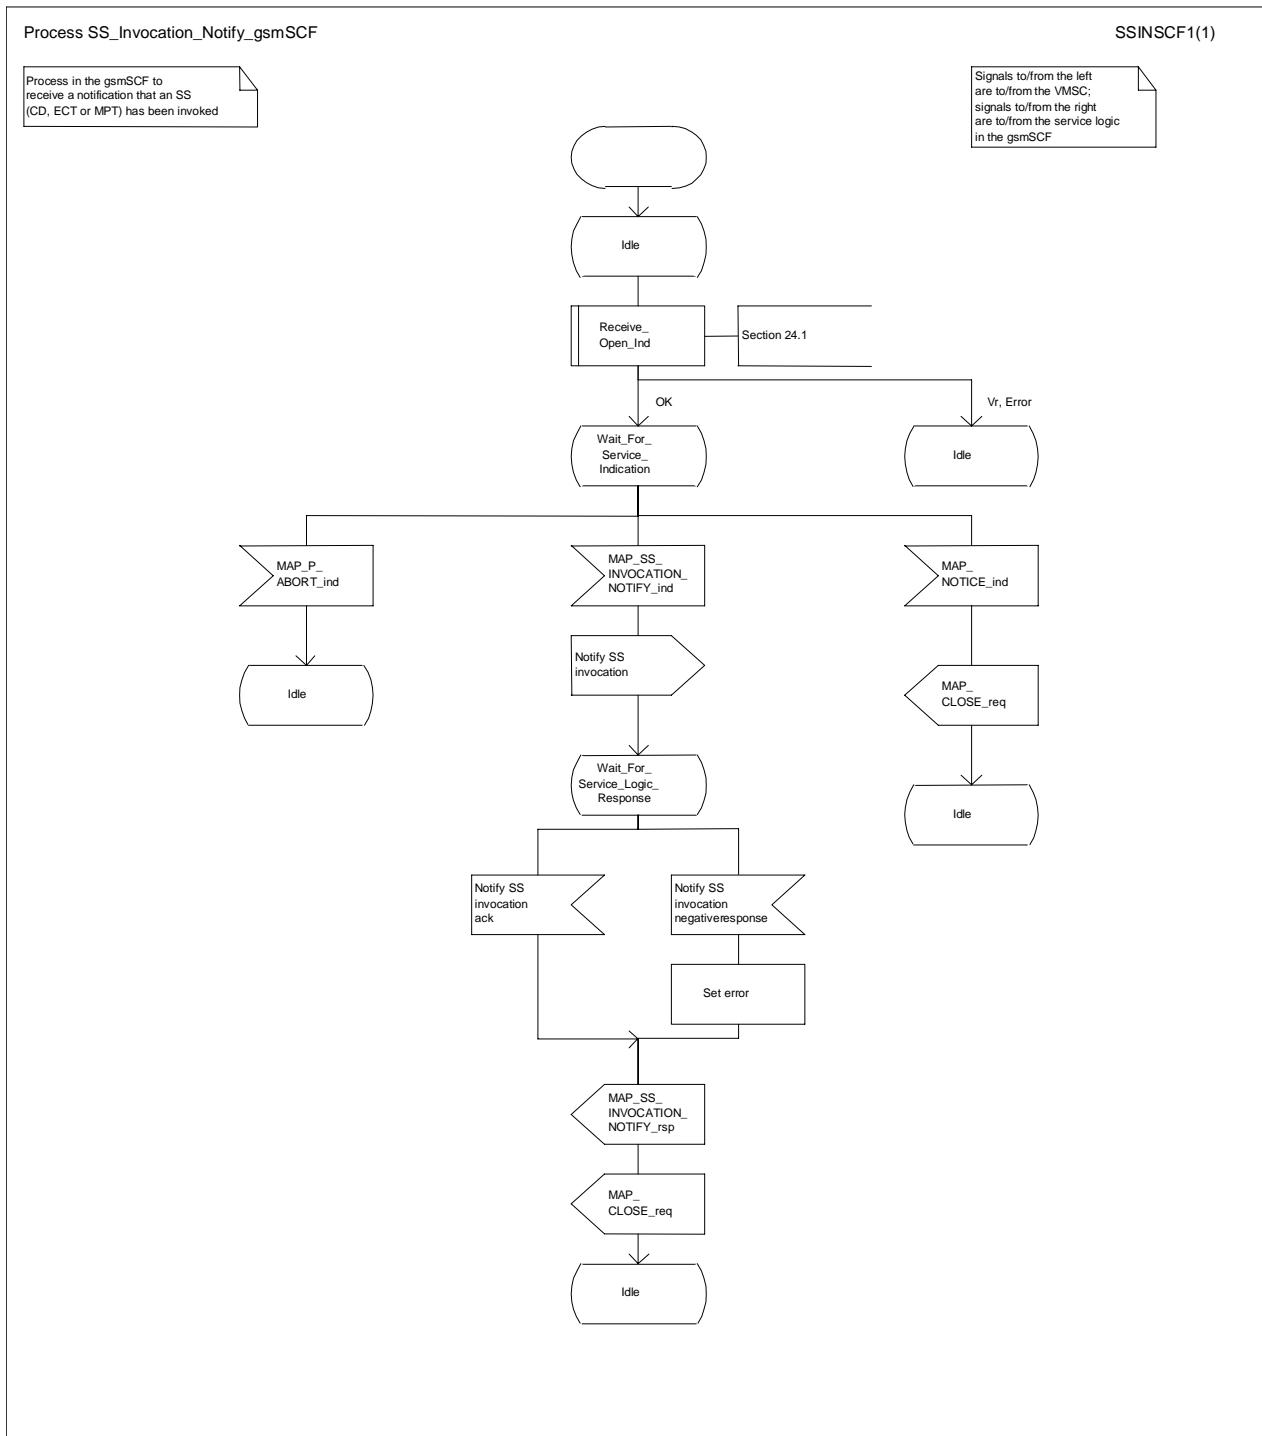


Figure 22.12.3/1: Process SS\_Invocation\_Notify\_gsmSCF (sheet 1 of 1)

## 22.13 Activation of a CCBS request

### 22.13.1 General

The message flow to activate a CCBS request is shown in figure 22.13.1/1.

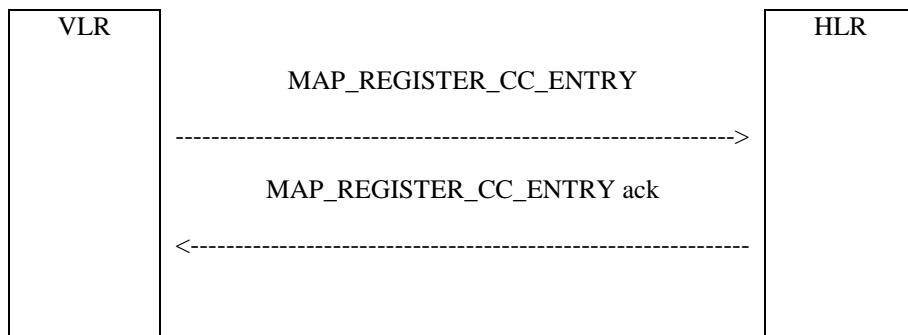

**Figure 22.13.1/1: Message flow to activate a CCBS request**

### 22.13.2 Procedure in the VLR

The MAP process in the VLR to activate a CCBS request is shown in figure 22.13.2/1. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

- |                    |                    |
|--------------------|--------------------|
| Receive_Open_Cnf   | see clause 25.1.2; |
| Check_Confirmation | see clause 25.2.2. |

#### Successful Outcome

When the MAP process receives a CCBS Request message from the CCBS application process in the VLR, it requests a dialogue with the HLR whose identity is contained in the request by sending a MAP\_OPEN service request and the necessary information in a MAP\_REGISTER\_CC\_ENTRY service request. The VLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_REGISTER\_CC\_ENTRY service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a CCBS Request Ack message containing the information received from the HLR to the CCBS application process in the VLR and returns to the idle state.

#### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a CCBS Request Negative response message to the CCBS application process in the VLR and returns to the idle state.

#### Error in MAP\_REGISTER\_CC\_ENTRY confirm

If the MAP\_REGISTER\_CC\_ENTRY service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a CCBS Request Negative response message to the CCBS application process in the VLR and returns to the idle state.

#### Abort of HLR dialogue

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication. In this case, the MAP process sends a CCBS Request negative response to the CCBS application process in the VLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR, sends a CCBS Request negative response indicating system failure to the CCBS application process in the VLR and returns to the idle state.

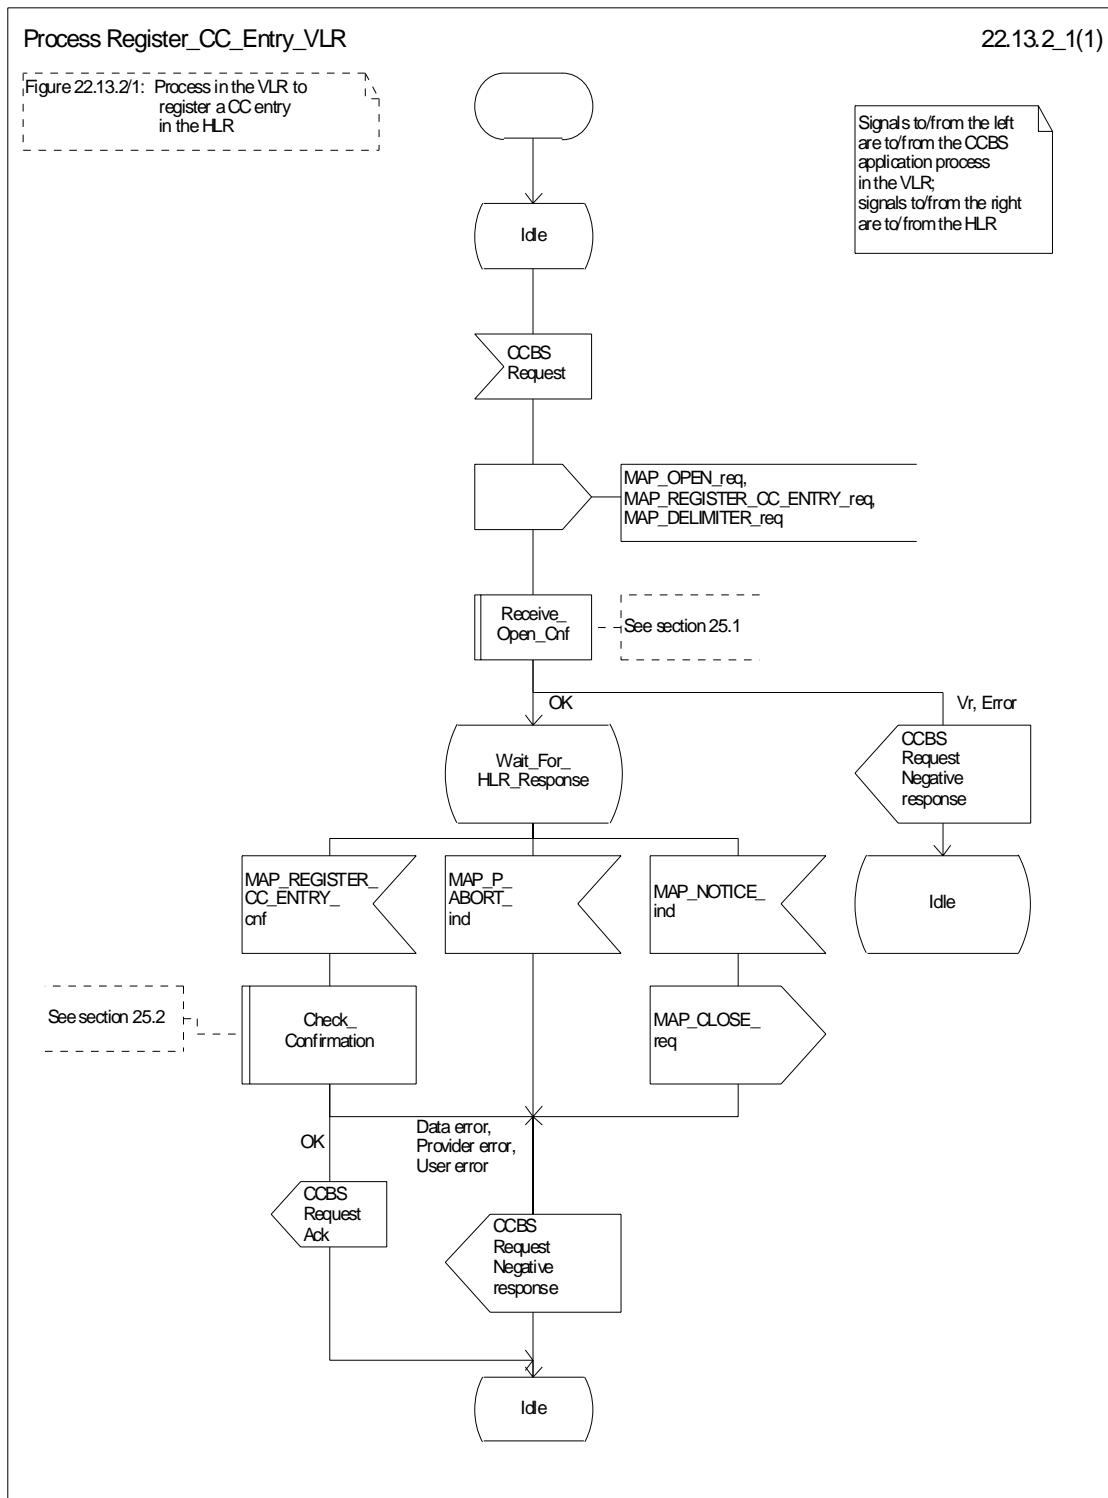


Figure 22.13.2/1: Process Register\_CC\_Entry\_VLR

### 22.13.3 Procedure in the HLR

#### **Successful outcome**

When the MAP process receives a MAP\_REGISTER\_CC\_ENTRY\_indication from the co-ordinating process, it sends a CCBS Request message to the CCBS application process in the HLR, and waits for a response. The request contains the parameters received in the MAP\_REGISTER\_CC\_ENTRY service indication.

If the CCBS application process in the HLR returns a positive response, the MAP process constructs a MAP\_REGISTER\_CC\_ENTRY service response, constructs a MAP\_CLOSE service request, sends them to the co-ordinating process and terminates.

#### **Negative response from HLR CCBS application process**

If the CCBS application process in the HLR returns a negative response, the MAP process constructs a MAP\_REGISTER\_CC\_ENTRY service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the co-ordinating process and terminates.


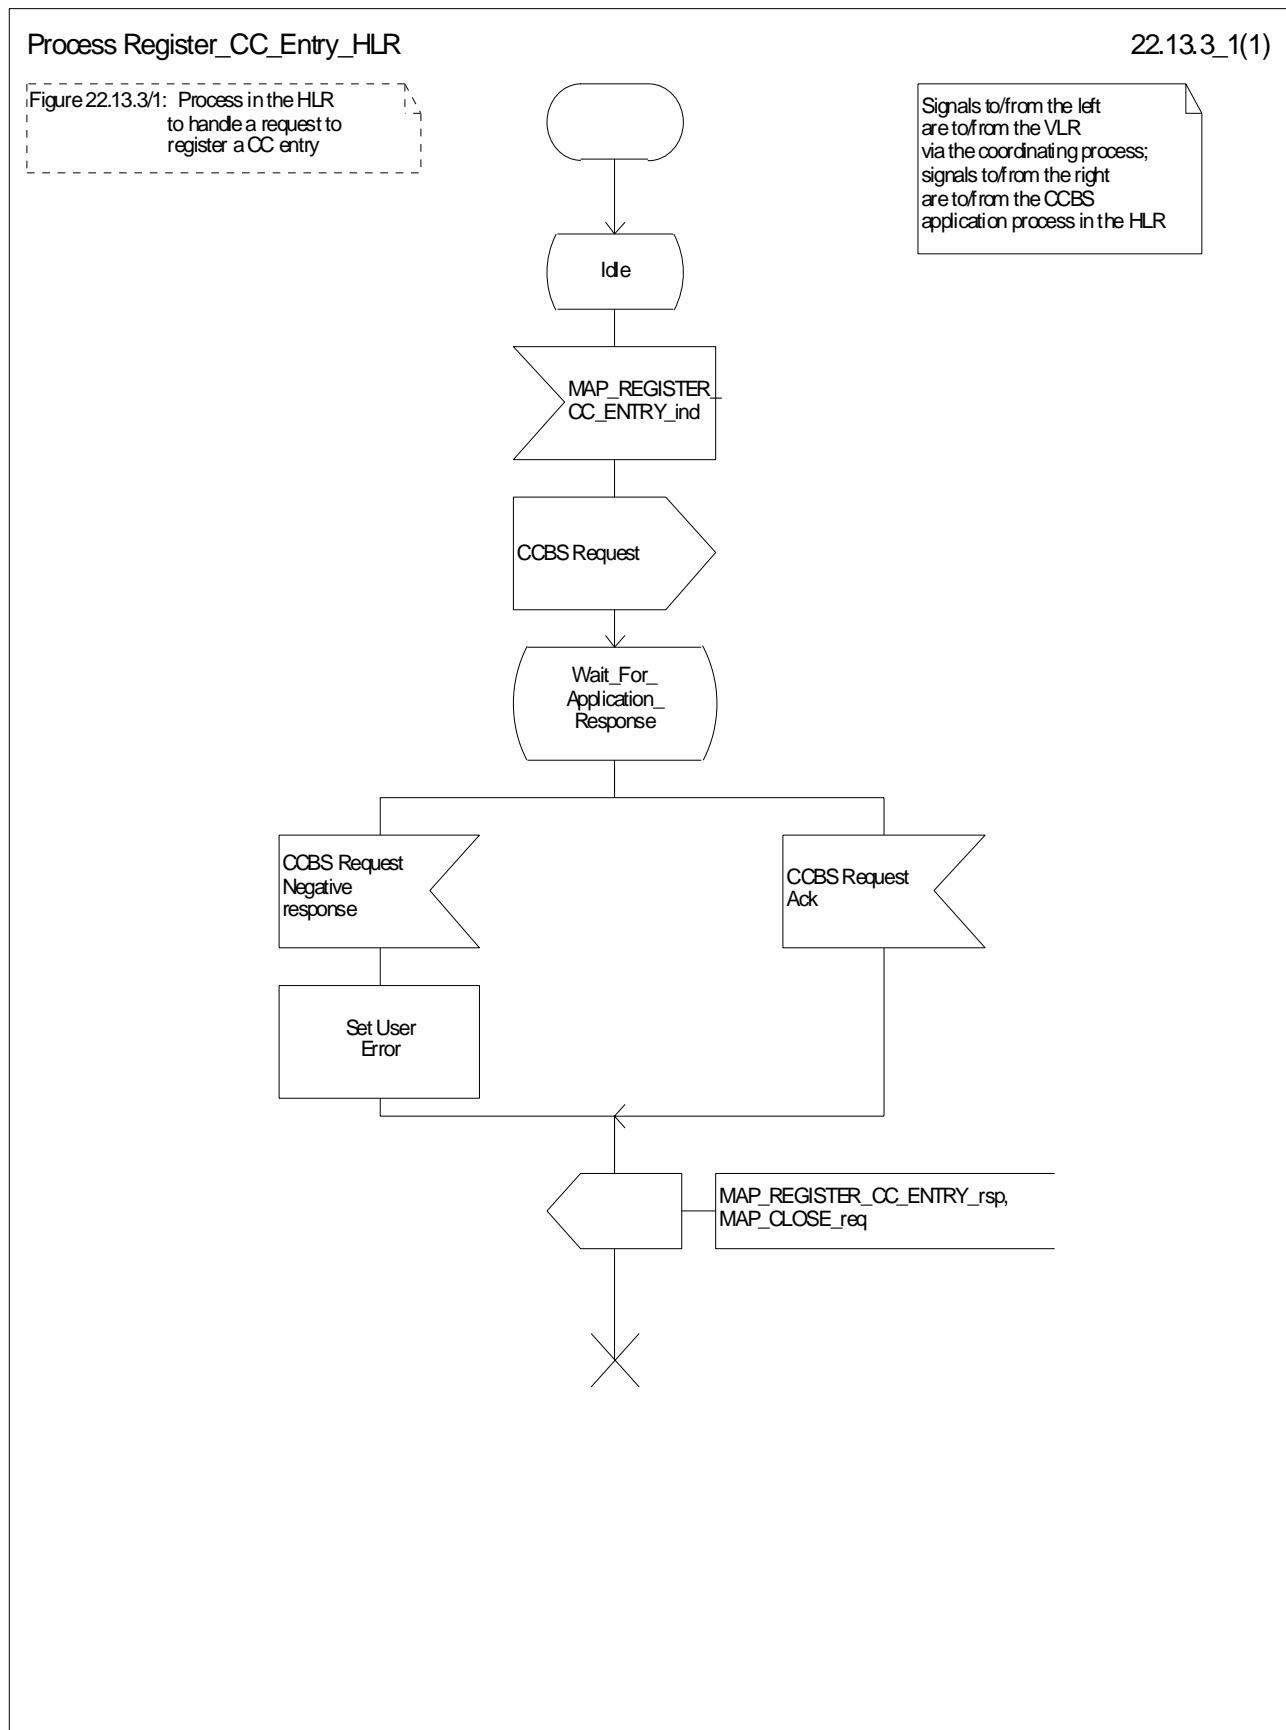


Figure 22.13.3/1: Process Register\_CC\_Entry\_HLR

## 22.14 Deactivation of a CCBS request

### 22.14.1 General

The message flow to deactivate a CCBS request is shown in figure 22.14.1/1.

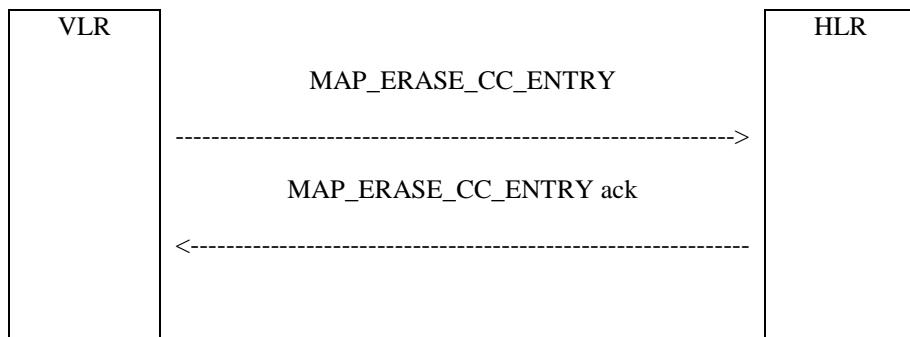

**Figure 22.14.1/1: Message flow to deactivate a CCBS request**

### 22.14.2 Procedure in the VLR

The MAP process in the VLR to deactivate a CCBS request is shown in figure 22.14.2/1. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive_Open_Cnf	see clause 25.1.2;
Check_Confirmation	see clause 25.2.2.

#### Successful Outcome

When the MAP process receives a Deactivate CCBS message from the CCBS application process in the VLR, it requests a dialogue with the HLR whose identity is contained in the request by sending a MAP\_OPEN service request and the necessary information in a MAP\_ERASE\_CC\_ENTRY service request. The VLR then invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_ERASE\_CC\_ENTRY service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Deactivate CCBS Ack message containing the information received from the HLR to the CCBS application process in the VLR and returns to the idle state.

#### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a Deactivate CCBS Negative response message to the CCBS application process in the VLR and returns to the idle state.

#### Error in MAP\_ERASE\_CC\_ENTRY confirm

If the MAP\_ERASE\_CC\_ENTRY service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Deactivate CCBS Negative response message to the CCBS application process in the VLR and returns to the idle state.

#### Abort of HLR dialogue

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication. In this case, the MAP process sends a Deactivate CCBS negative response to the CCBS application process in the VLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR, sends a Deactivate CCBS negative response indicating system failure to the CCBS application process in the VLR and returns to the idle state.

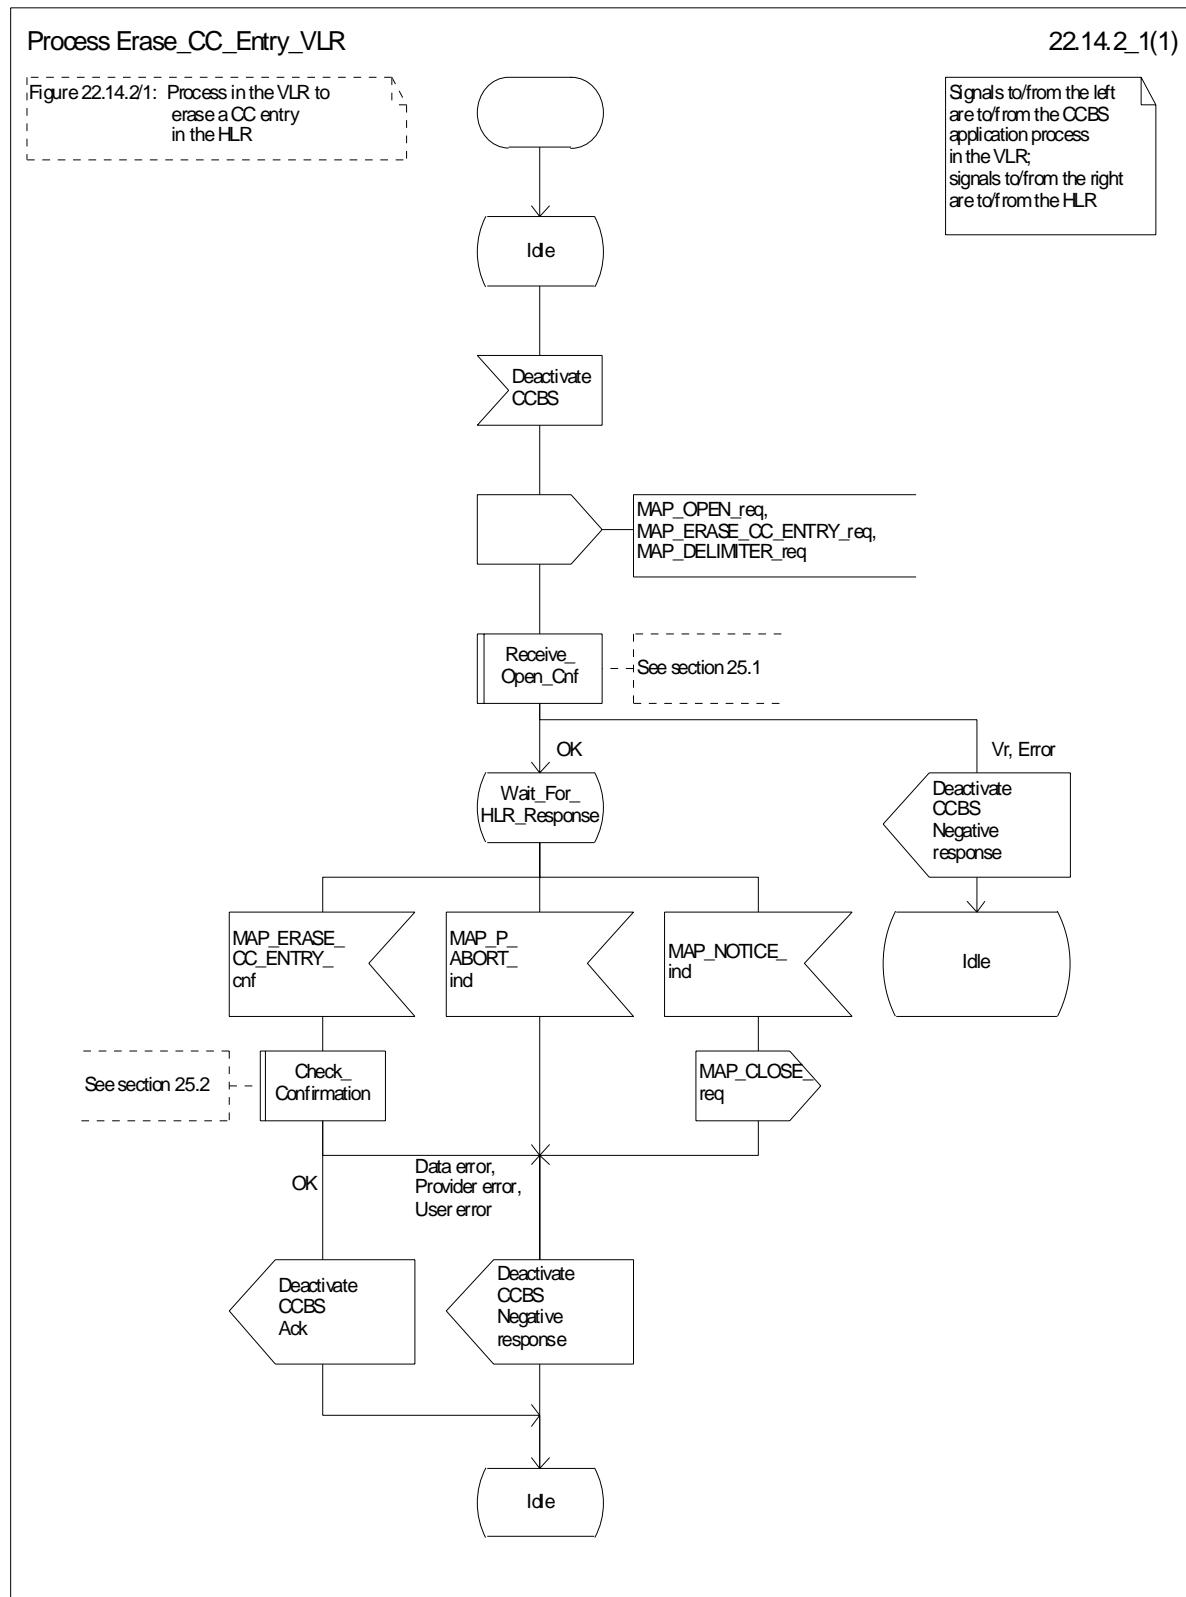


Figure 22.14.2/1: Process Erase\_CC\_Entry\_VLR

## 22.14.3 Procedure in the HLR

### Successful outcome

When the MAP process receives a MAP\_ERASE\_CC\_ENTRY\_indication from the co-ordinating process, it sends a Deactivate CCBS message to the CCBS application process in the HLR, and waits for a response. The message contains the parameters received in the MAP\_ERASE\_CC\_ENTRY service indication.

If the CCBS application process in the HLR returns a positive response, the MAP process constructs a MAP\_ERASE\_CC\_ENTRY service response, constructs a MAP\_CLOSE service request, sends them to the co-ordinating process and terminates.

### Negative response from HLR CCBS application process

If the CCBS application process in the HLR returns a negative response, the MAP process constructs a MAP\_ERASE\_CC\_ENTRY service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the co-ordinating process and terminates.

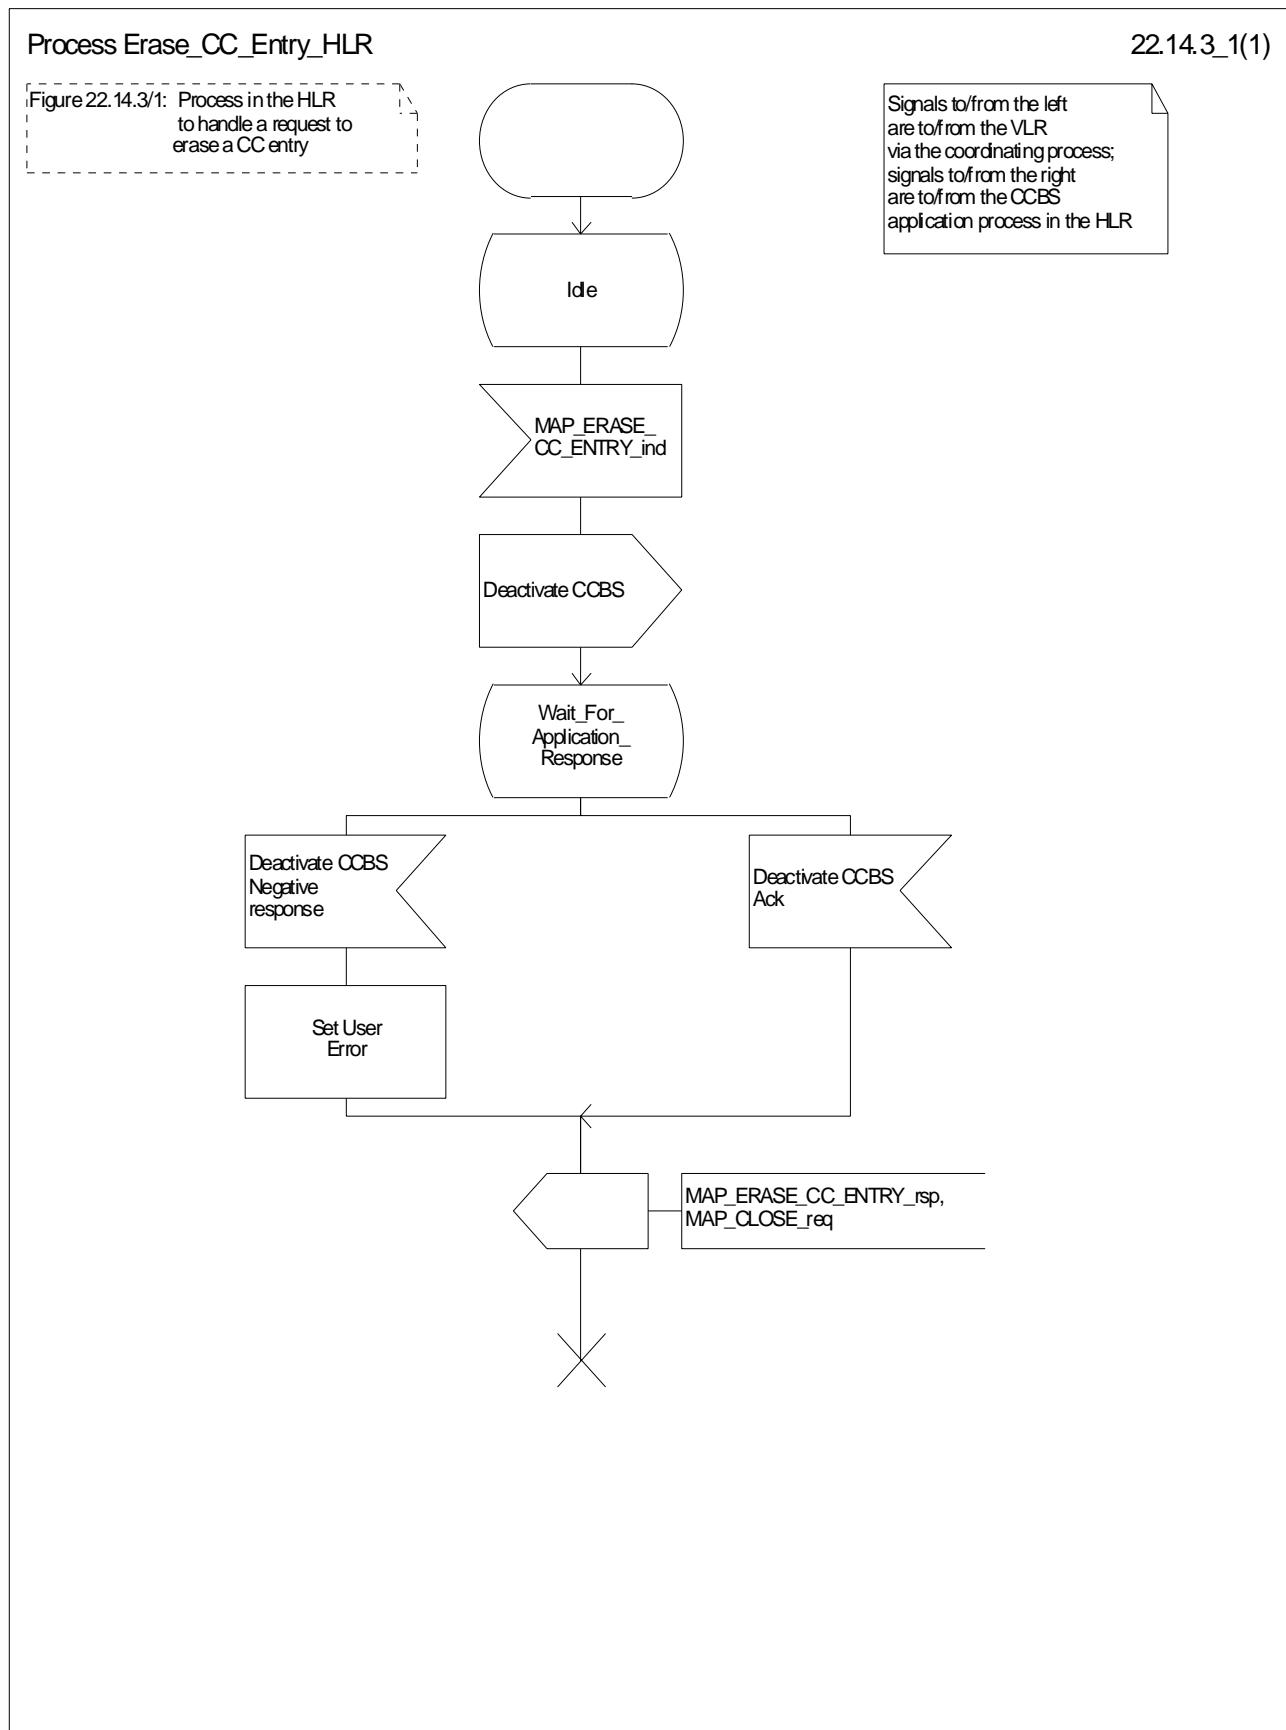


Figure 22.14.3/1: Process Erase\_CC\_Entry\_HLR

## 23 Short message service procedures

### 23.1 General

The short message service procedures are used to control both mobile originated and mobile terminated short message transfer.

Four procedures exist for short message services:

- mobile originated short message service transfer;
- mobile terminated short message service transfer;
- short message alert procedure;
- short message waiting data set procedure.

The following application context refers to a complex MAP user consisting of several processes:

- shortMessageGatewayContext.

This application context needs a co-ordinating process in the HLR. Additionally a co-ordinating process is needed for the mobile originated situation in the MSC, because the A\_CM\_SERV\_REQ message does not distinguish between mobile originated short message transfer and the short message alert procedures.

**NOTE:** the A\_CM\_SERV\_REQ message is not used for SMS over GPRS. The modelling is based on the assumption that the SGSN will trigger the appropriate process, according to whether an RP\_MO\_DATA or an RP\_SM\_MEMORY\_AVAILABLE is received over the LLC layer.

#### 23.1.1 Mobile originated short message service Co-ordinator for the MSC

When the MSC receives an A\_CM\_SERV\_REQ message (see 3GPP TS 24.008 [35]), with a CM service type indicating short message service, from the A-interface, it invokes the macro Process\_Access\_Request\_MSC to request the establishment of the CM connection.

If the macro Process\_Access\_Request\_MSC takes the "OK" exit (which means that the MSC has sent an A\_CM\_SERVICE\_ACCEPT to the MS), the MS initiates mobile originated short message transfer or sends an indication that it has memory available for more short messages. The MSC creates an instance of the appropriate process as follows:

- if the MSC receives an A\_RP\_MO\_DATA indication, it creates an instance of the process MO\_SM\_MSC (see subclause 23.2.1);
- if the MSC receives an A\_RP\_SM\_MEMORY\_AVAILABLE indication, it creates an instance of the process SC\_Alert\_MSC (see subclause 23.4.1).

After it has created the instance of the user process the Co-ordinator relays the messages between the A-interface and the child process and between the VLR and the child process until the dialogue is terminated.

The SMS Co-ordinator process in the MSC is shown in figure 23.1/1.


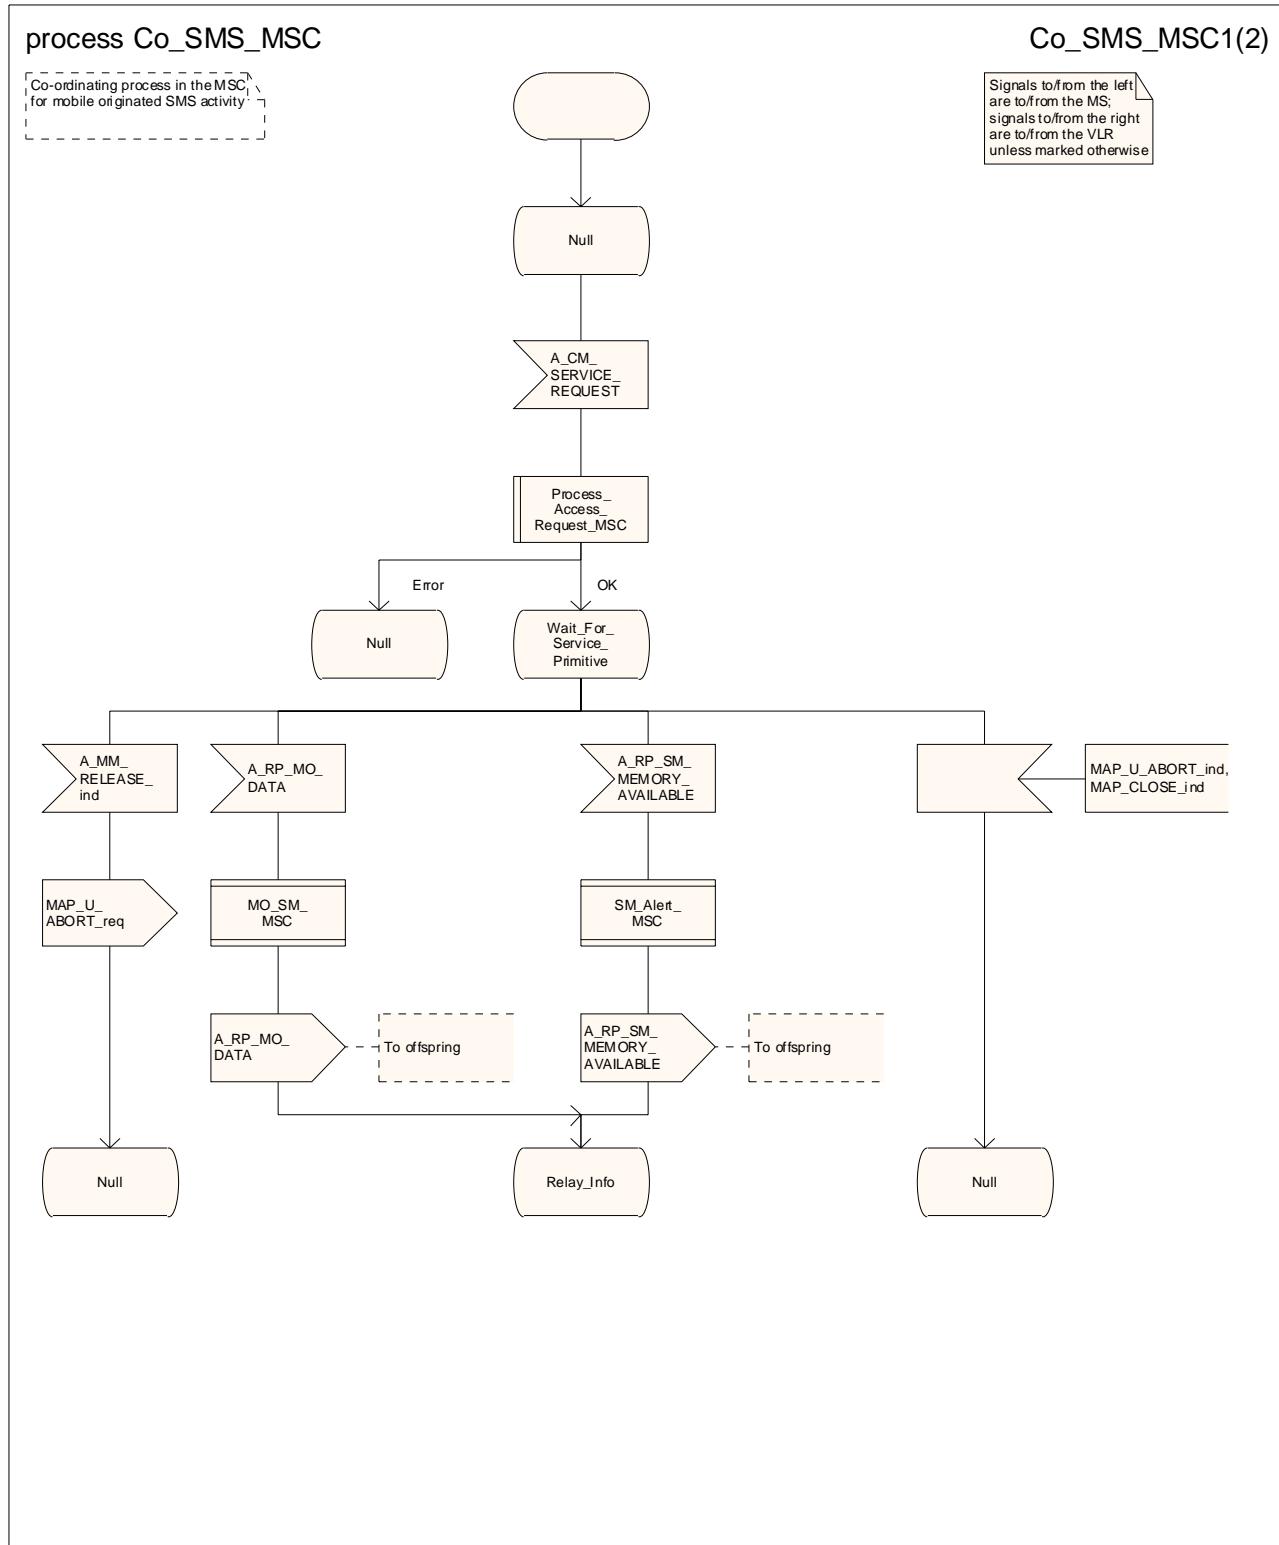


Figure 23.1/1 (sheet 1 of 2): Process Co\_SMS\_MSC

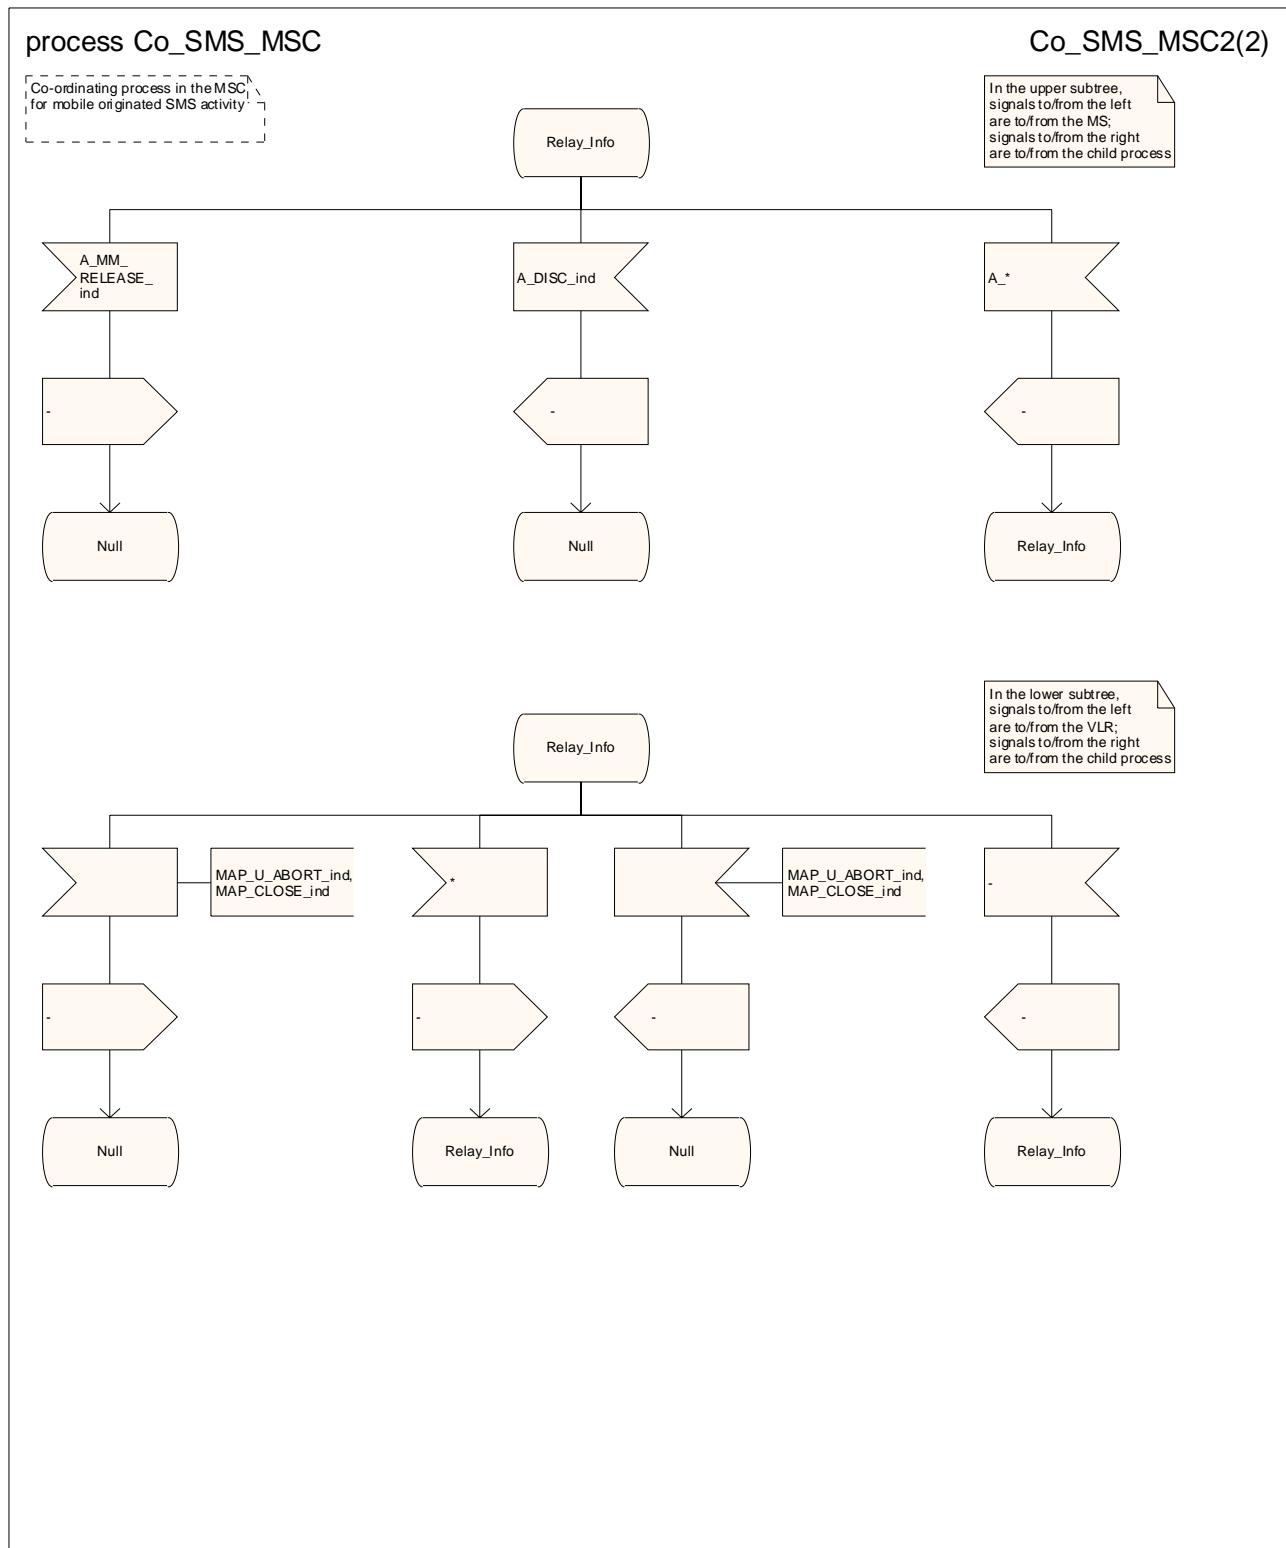

**Figure 23.1/1 (sheet 2 of 2): Process Co SMS MSC**

### 23.1.2 Short message Gateway Co-ordinator for the HLR

The process is started when the HLR receives a MAP\_OPEN indication using the application context shortMessageGatewayContext. If the dialogue opening is successful, the Co-ordinator can receive the first service primitive from the MAP Protocol Machine. The HLR creates an instance of the appropriate process as follows:


- if the HLR receives a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication , it creates an instance of the process Mobile Terminated SM HLR;

- if the HLR receives a MAP\_REPORT\_SM\_DELIVERY\_STATUS indication, it creates an instance of the process Report\_SM\_delivery\_stat\_HLR.

After it has created the instance of the user process, the Co-ordinator relays the messages between the MAP Protocol Machine and the child process until the dialogue is terminated.

The SM Gateway Co-ordinator process in the HLR is shown in figure 23.1/2.


If the Receive\_Open\_Ind macro takes the Vr exit then HLR shall perform the MAP dialogue as specified for the appropriate application context version. Depending on the subscriber data, handling at the MAP user application level may be performed as specified in subclauses 23.3.2 and 23.5.1 of the present document:

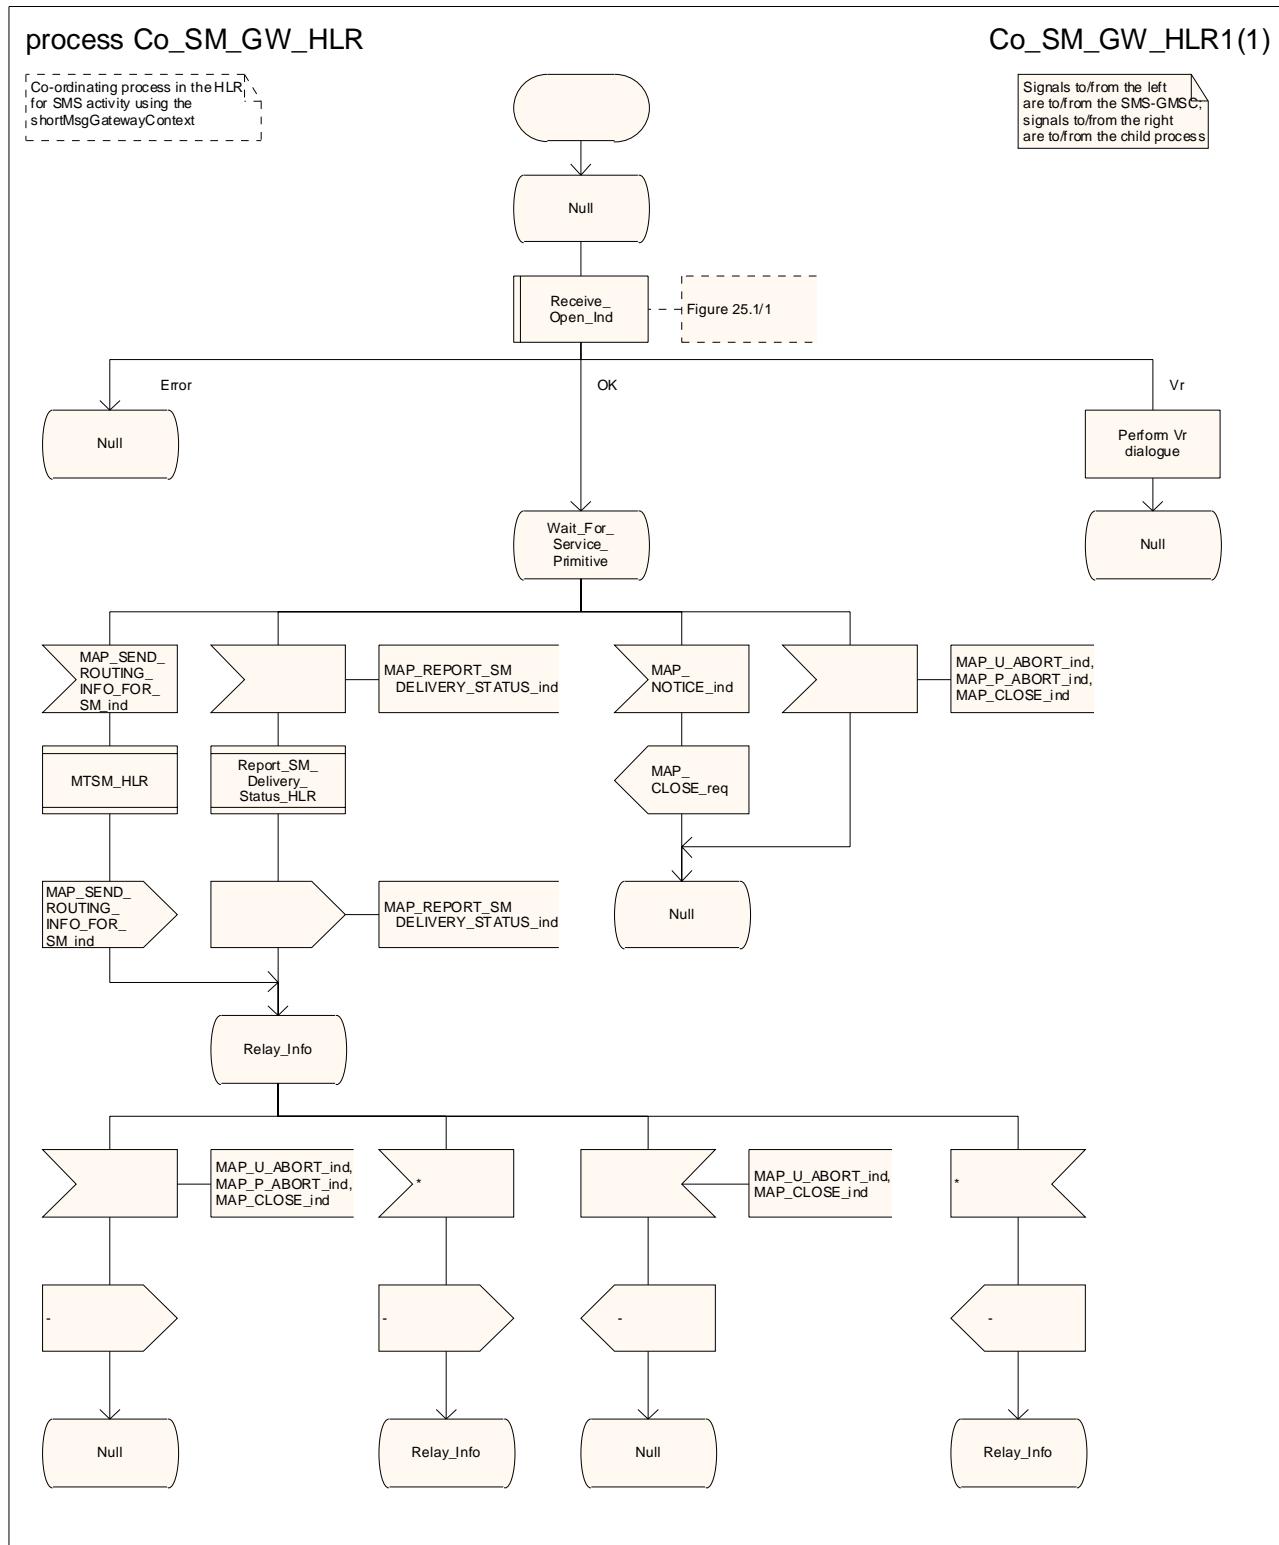

**Figure 23.1/2: Process Co\_SM\_Gateway\_HLR**

## 23.2 The mobile originated short message transfer procedure

The mobile originated short message service procedure is used to forward a short message from a mobile subscriber to a Service Centre. The message flow for the mobile originated short message service procedure is shown in figure 23.2/1.

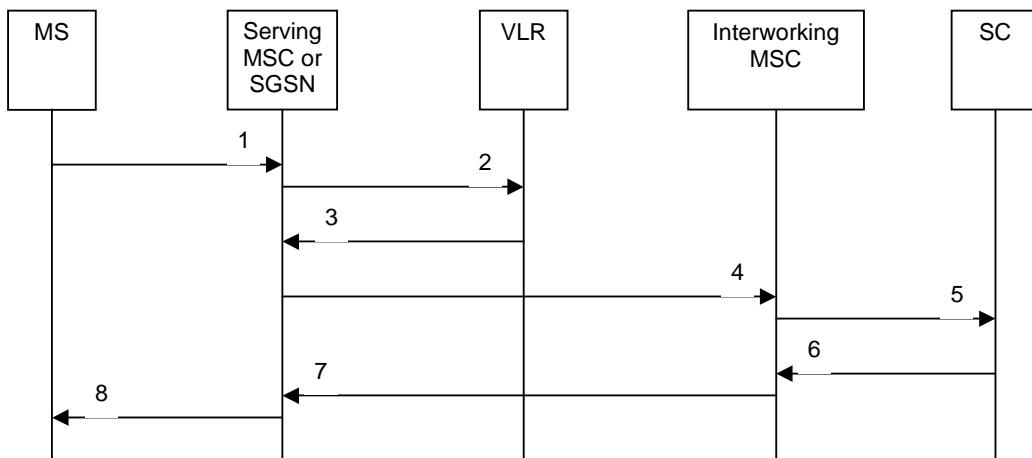**Figure 23.2/1: Mobile originated short message transfer**

In addition the following MAP services are used:

MAP_PROCESS_ACCESS_REQUEST	(see subclause 8.3); (*)
MAP_AUTHENTICATE	(see subclause 8.5); (*)
MAP_SET_CIPHERING_MODE	(see subclause 8.6); (*)
MAP_PROVIDE_IMSI	(see subclause 8.9); (*)
MAP_CHECK_IMEI	(see subclause 8.7);
MAP_FORWARD_NEW_TMSI	(see subclause 8.9); (*)
MAP_TRACE_SUBSCRIBER_ACTIVITY	(see subclause 9.1); (*)
MAP_READY_FOR_SM	(see subclause 12.4).

(\*) These messages are not used by the SGSN.

### 23.2.1 Procedure in the serving MSC

Any CAMEL-specific handling defined in this subclause is omitted if the MSC does not support CAMEL control of MO SMS, or if the subscriber does not have a subscription for CAMEL control of MO SMS.

When the MSC receives the short message from the A-interface, it sends a MAP\_SEND\_INFO\_FOR\_MO\_SMS request to the VLR and waits for a response. While the MSC is waiting for the response from the VLR:

- if the VLR aborts or prematurely closes the dialogue, the MSC reports to the gsmSCF that the short message submission has failed and sends an A\_RP\_ERROR with error cause "Network out of order" to the MS, and the process terminates;
- if it receives a MAP\_CONTINUE\_CAMEL\_SMS\_HANDLING indication, it checks the indication.
  - if the indication is badly formed, the MSC sends an A\_RP\_ERROR with error cause "Network out of order" to the MS and aborts the dialogue with the VLR, and the process terminates;
  - if the indication is OK, the MSC calls the procedure CAMEL\_O\_SMS\_INIT and tests the result.
    - if the result was "SMS\_Aborted", the MSC aborts the dialogue with the VLR, and the process terminates;
    - if the result was "Release\_SMS", the MSC returns an A\_RP\_ERROR with an error cause as instructed by the gsmSCF to the MS and aborts the dialogue with the VLR, and the process terminates;
    - if the result was "Redirect\_SMS", the MSC modifies the data for the submitted short message as instructed by the gsmSCF, sends to the VLR a MAP\_SEND\_INFO\_FOR\_MO\_SMS request and waits for a response;
    - if the result was "Continue", the MSC sends to the VLR a MAP\_SEND\_INFO\_FOR\_MO\_SMS request and waits for a response. The handling for this request is shown in the procedure CAMEL\_MO\_SMS\_VLR (see 3GPP TS 23.078 [98]).
- if it receives a MAP\_SEND\_INFO\_FOR\_MO\_SMS confirmation from the VLR, it checks the confirmation.
  - if the confirmation includes an error, the MSC reports to the gsmSCF that the short message submission has failed and sends an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates;
  - if the confirmation indicates a successful result, the MSC checks whether the MSC is also the SMS-IWMSC.
    - if the MSC is separate from the SMS-IWMSC, MSC handling continues as described below under the heading "Serving MSC is separate from SMS-IWMSC".
    - if the MSC is also the SMS-IWMSC, the MSC handling continues as described below under the heading "Serving MSC is SMS-IWMSC";

#### Serving MSC is separate from SMS-IWMSC

The MSC checks whether the MAP\_OPEN request and the MAP\_MT\_FORWARD\_SHORT\_MESSAGE request can be sent in a single message signal unit through the lower layers of the protocol.

- if the two requests can be grouped in a single TC message, the MSC requests a dialogue with the SMS-IWMSC, including the MAP\_MO\_FORWARD\_SHORT\_MESSAGE request;
  - if the dialogue opening is successful, the MSC waits for the response from the SMS-IWMSC;
  - if the macro Receive\_Open\_Cnf takes the "Error" exit, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with cause "Network out of order" to the MS, and the process terminates;
  - if the macro Receive\_Open\_Cnf takes the "Vr" exit, the MSC handles the dialogue according to the specification for the earlier version of the protocol and checks the process result.
    - if the submission was successful, the MSC reports to the gsmSCF that the short message submission was successful and returns an A\_RP\_ACK to the MS, and the process terminates;
    - if the submission failed, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates.
- if the two requests cannot be grouped in a single TC message, the MSC requests a dialogue with the SMS-IWMSC, omitting the MAP\_MO\_FORWARD\_SHORT\_MESSAGE request;
  - if the dialogue opening is successful, the MSC sends a MAP\_MO\_FORWARD\_SHORT\_MESSAGE request to the SMS-IWMSC, and waits for the response from the SMS-IWMSC;

- if the macro Receive\_Open\_Cnf takes the "Error" exit, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with cause "Network out of order" to the MS, and the process terminates;
- if the macro Receive\_Open\_Cnf takes the "Vr" exit, the MSC handles the dialogue according to the specification for the earlier version of the protocol, and checks the result.
  - if the submission was successful, the MSC reports to the gsmSCF that the short message submission was successful and returns an A\_RP\_ACK to the MS, and the process terminates;
  - if the submission failed, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates.
- if the MSC receives a MAP\_MO\_FORWARD\_SHORT\_MESSAGE confirmation from the SMS-IWMSC, it checks the content of the confirmation;
  - if the confirmation indicates that the submission of the short message was successful, the MSC reports to the gsmSCF that the short message submission was successful and returns an A\_RP\_ACK to the MS, and the process terminates;
  - if the confirmation indicates that the submission of the short message failed, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates;
- if the dialogue with the SMS-IWMSC fails, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with cause "Network out of order" to the MS, and the process terminates.

#### Serving MSC is SMS-IWMSC

The MSC sends an SC\_RP\_MO\_DATA request to the Short Message Service Centre (SMSC), and waits for the response.

- if the MSC receives an error response from the SMSC, it reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates;
- if the SMSC aborts the dialogue, the MSC reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with cause "Network out of order" to the MS, and the process terminates;
- if the MSC receives a positive response from the SMSC, it reports to the gsmSCF that the short message submission was successful and returns an A\_RP\_ACK to the MS, and the process terminates.

The mobile originated short message service process in the MSC is shown in figure 23.2/2.

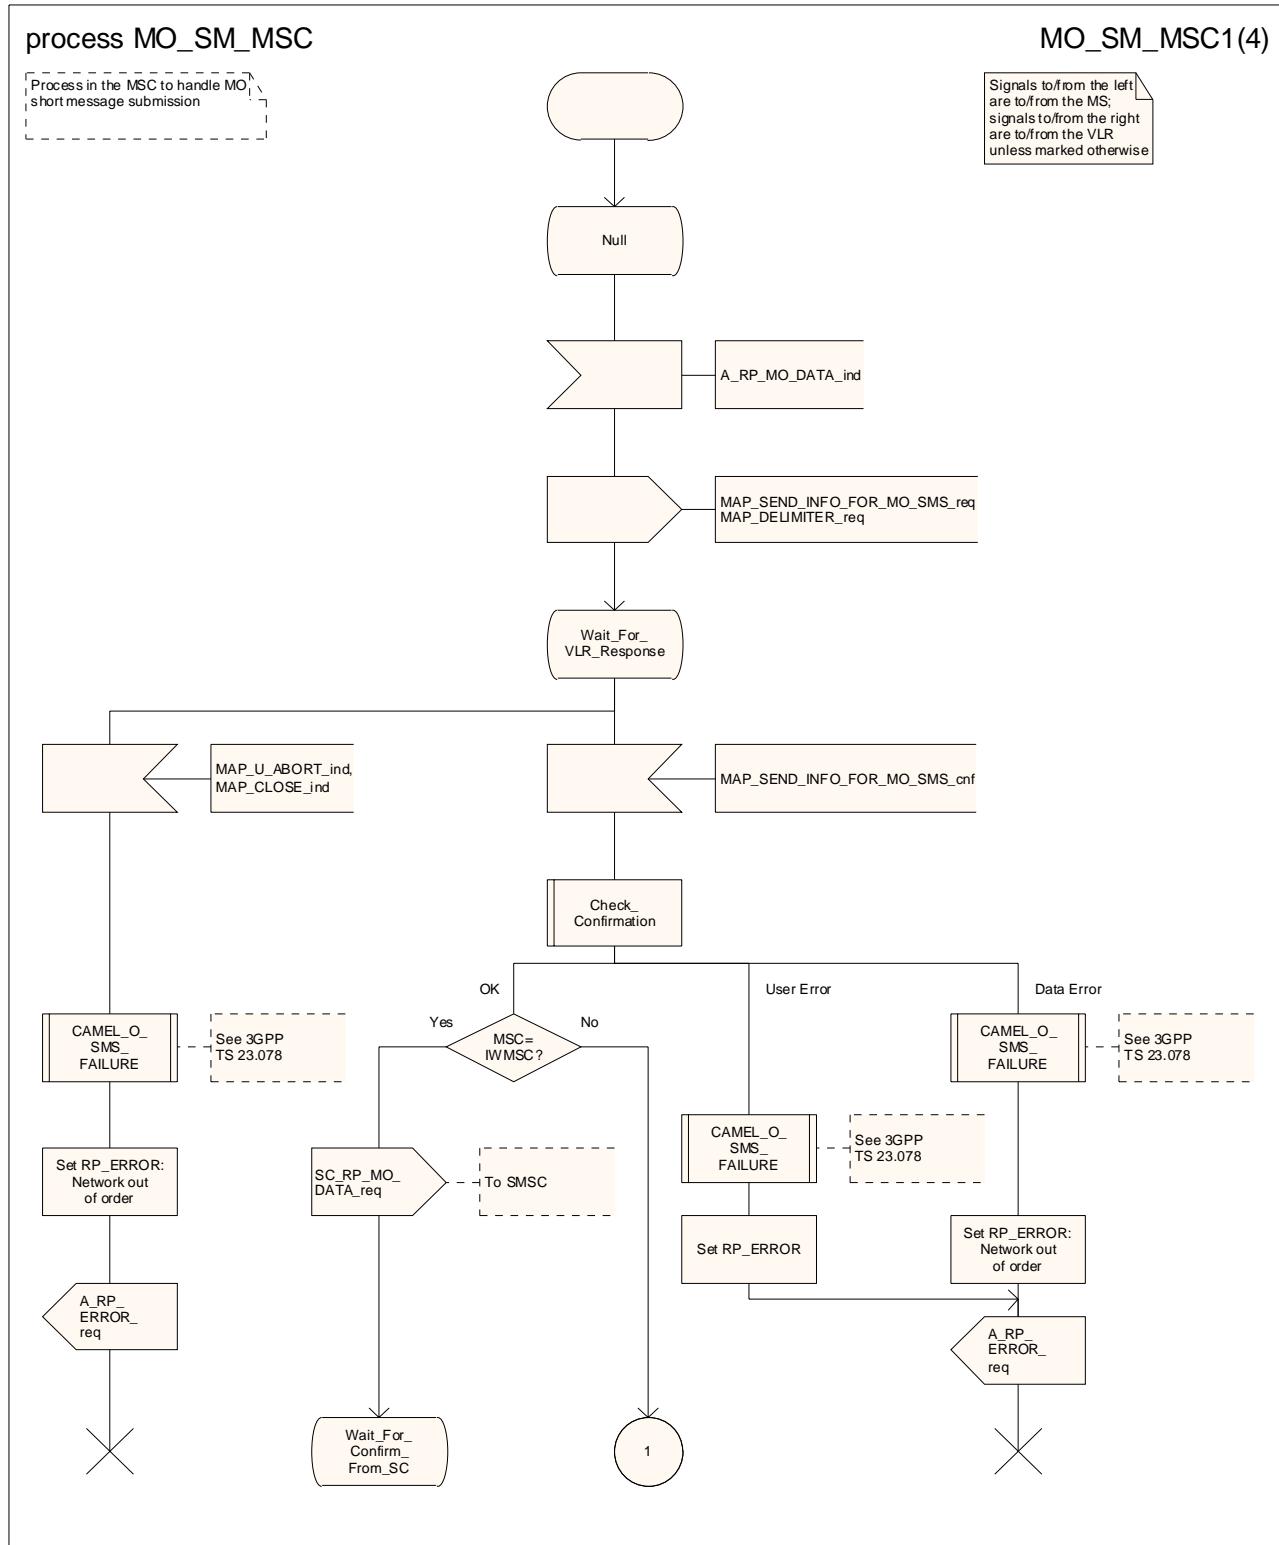


Figure 23.2/2 (sheet 1 of 4): Process MO\_SM\_MSC

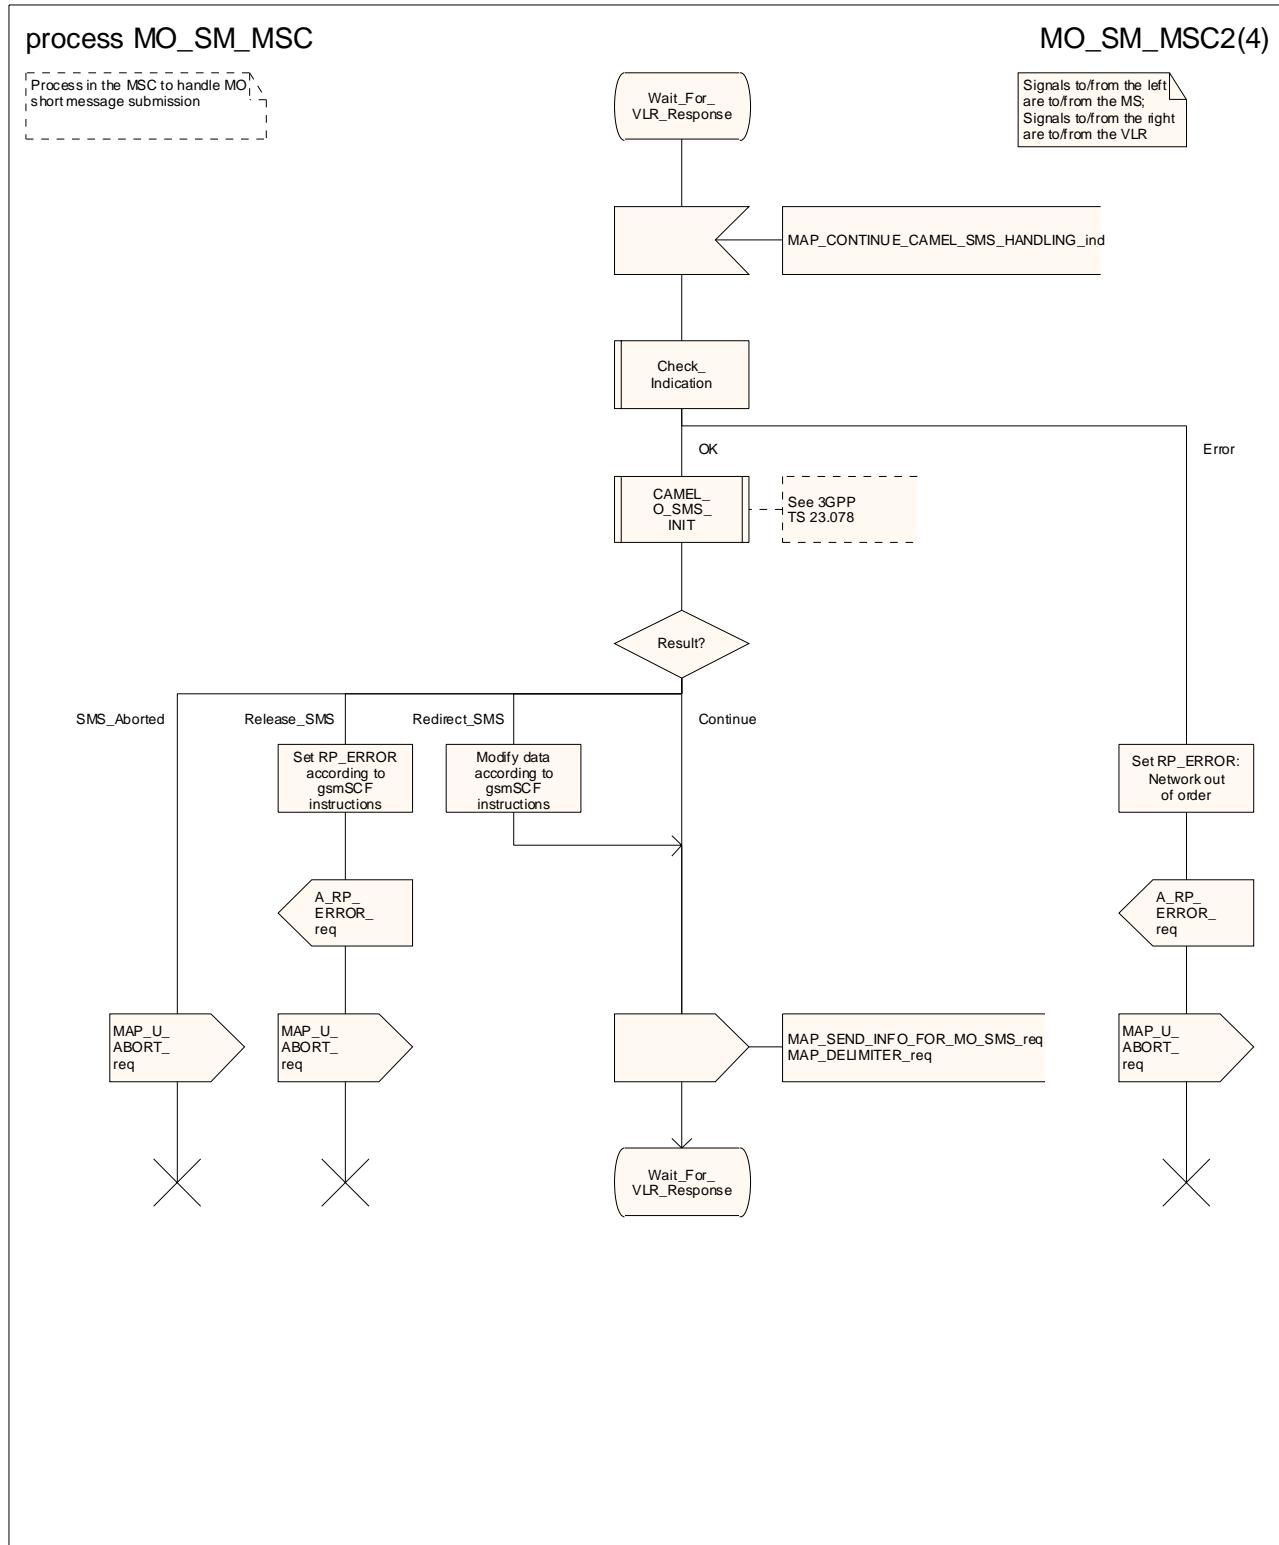


Figure 23.2/2 (sheet 2 of 4): Process MO\_SM\_MSC

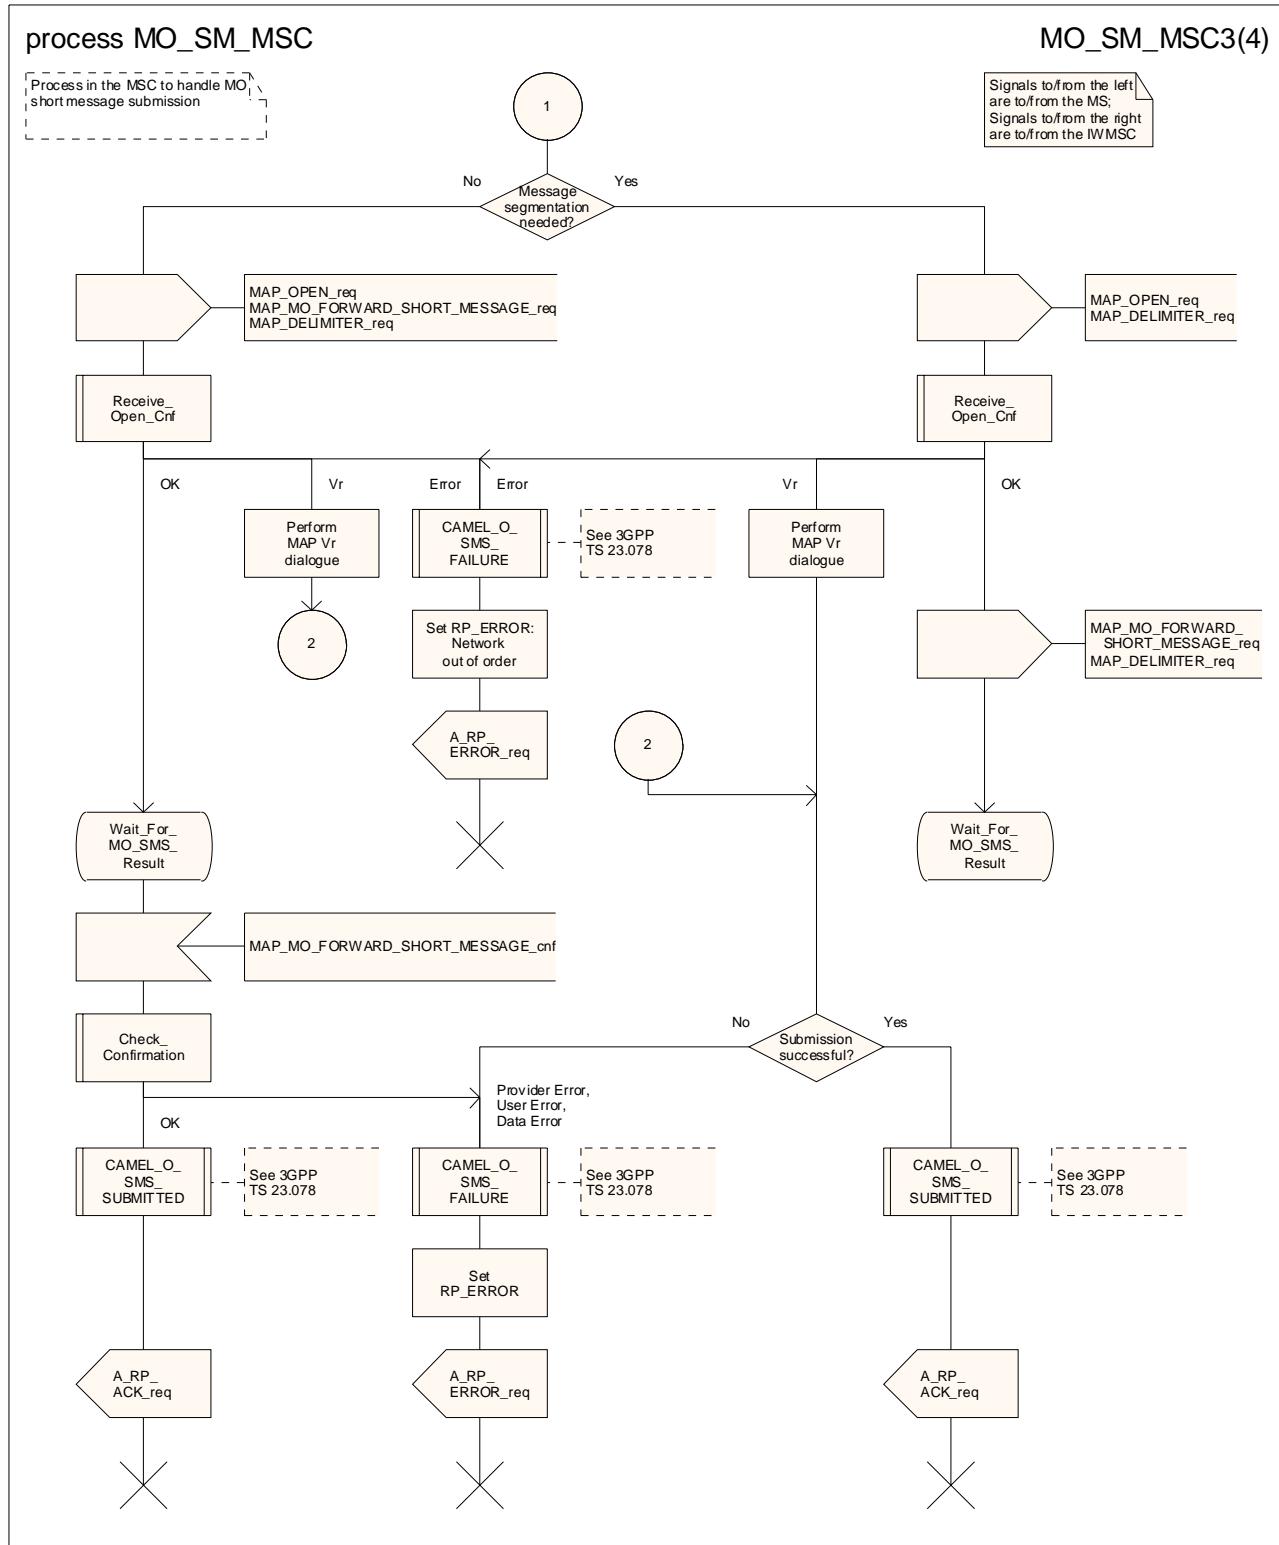


Figure 23.2/2 (sheet 3 of 4): Process MO\_SM\_MSC

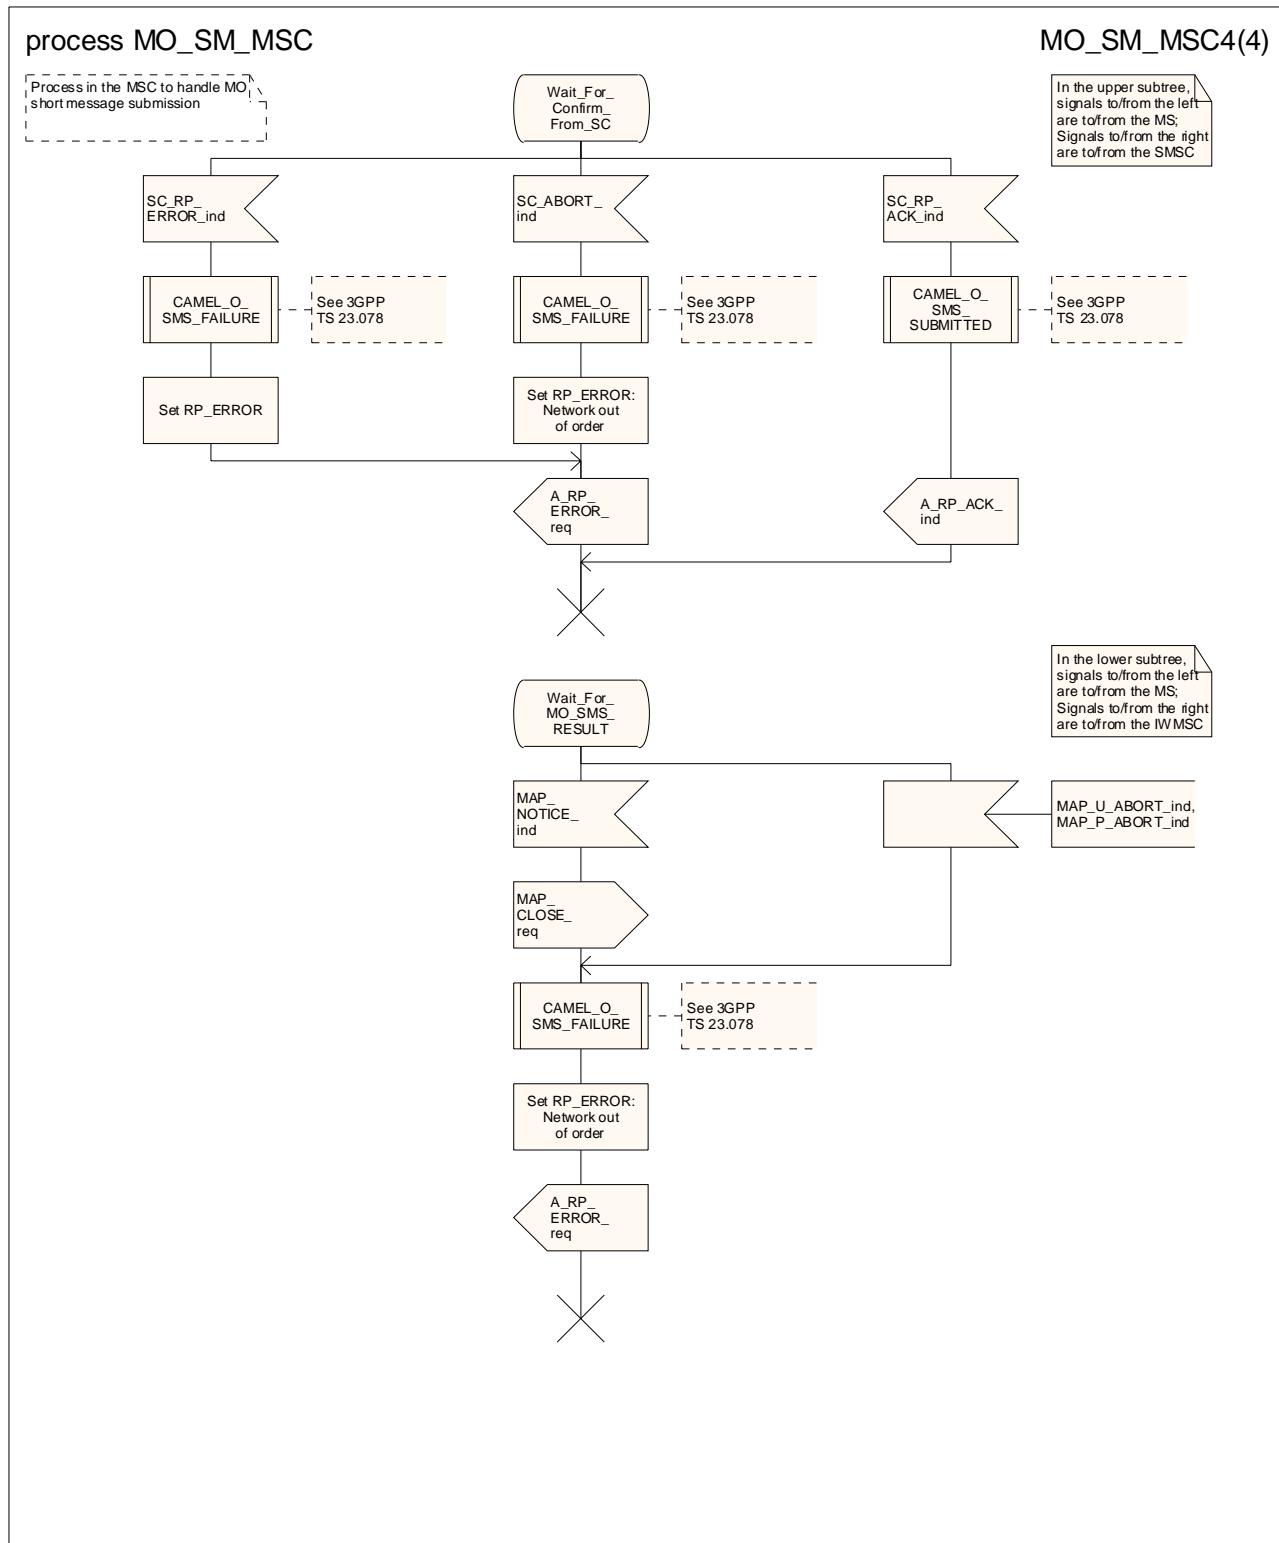


Figure 23.2/2 (sheet 4 of 4): Process MO\_SM\_MSC

### 23.2.2 Procedure in the VLR

Any CAMEL-specific handling defined in this subclause is omitted if the VLR does not support CAMEL control of MO SMS.

The process is triggered by a dialogue opening request followed by a MAP\_PROCESS\_ACCESS\_REQUEST including a CM service type Short Message Service.

If the macro Process\_Access\_Request\_VLR takes the "OK" exit, the VLR waits for a MAP\_SEND\_INFO\_FOR\_MO\_SMS indication from the MSC.

- If the MSC aborts the dialogue, the process returns to the Null state;
- if the indication is badly formed, the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the appropriate user error;
- if the indication is OK, the VLR checks whether the submission of the short message is allowed.
  - if MO SMS is not provisioned, VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the user error "Teleservice not provisioned";
  - if the submission of the short message is prevented by Operator Determined Barring of all outgoing calls, the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the user error "Call barred" with barring cause "Operator barring";
  - if the submission of the short message is prevented by supplementary service barring of all outgoing calls, the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the user error "Call barred" with barring cause "Barring service active";
  - the VLR calls the procedure CAMEL\_MO\_SMS\_VLR and checks the result.
    - if the result is "Fail", the process returns to the Null state;
    - if the result is "Pass", the VLR continues to check the subscription information.
  - if the submission of the short message is prevented by Operator Determined Barring (other than barring of all outgoing calls), the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the user error "Call barred" with barring cause "Operator barring";
  - if the submission of the short message is prevented by supplementary service barring (other than barring of all outgoing calls), the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the user error "Call barred" with barring cause "Barring service active";
  - if the submission of the short message is allowed, the VLR returns a MAP\_SEND\_INFO\_FOR\_MO\_SMS response containing the MSISDN of the requesting subscriber.

When the VLR has returned the MAP\_SEND\_INFO\_FOR\_MO\_SMS response, the process returns to the Null state.

The mobile originated short message transfer process in the VLR is shown in figure 23.2/3.

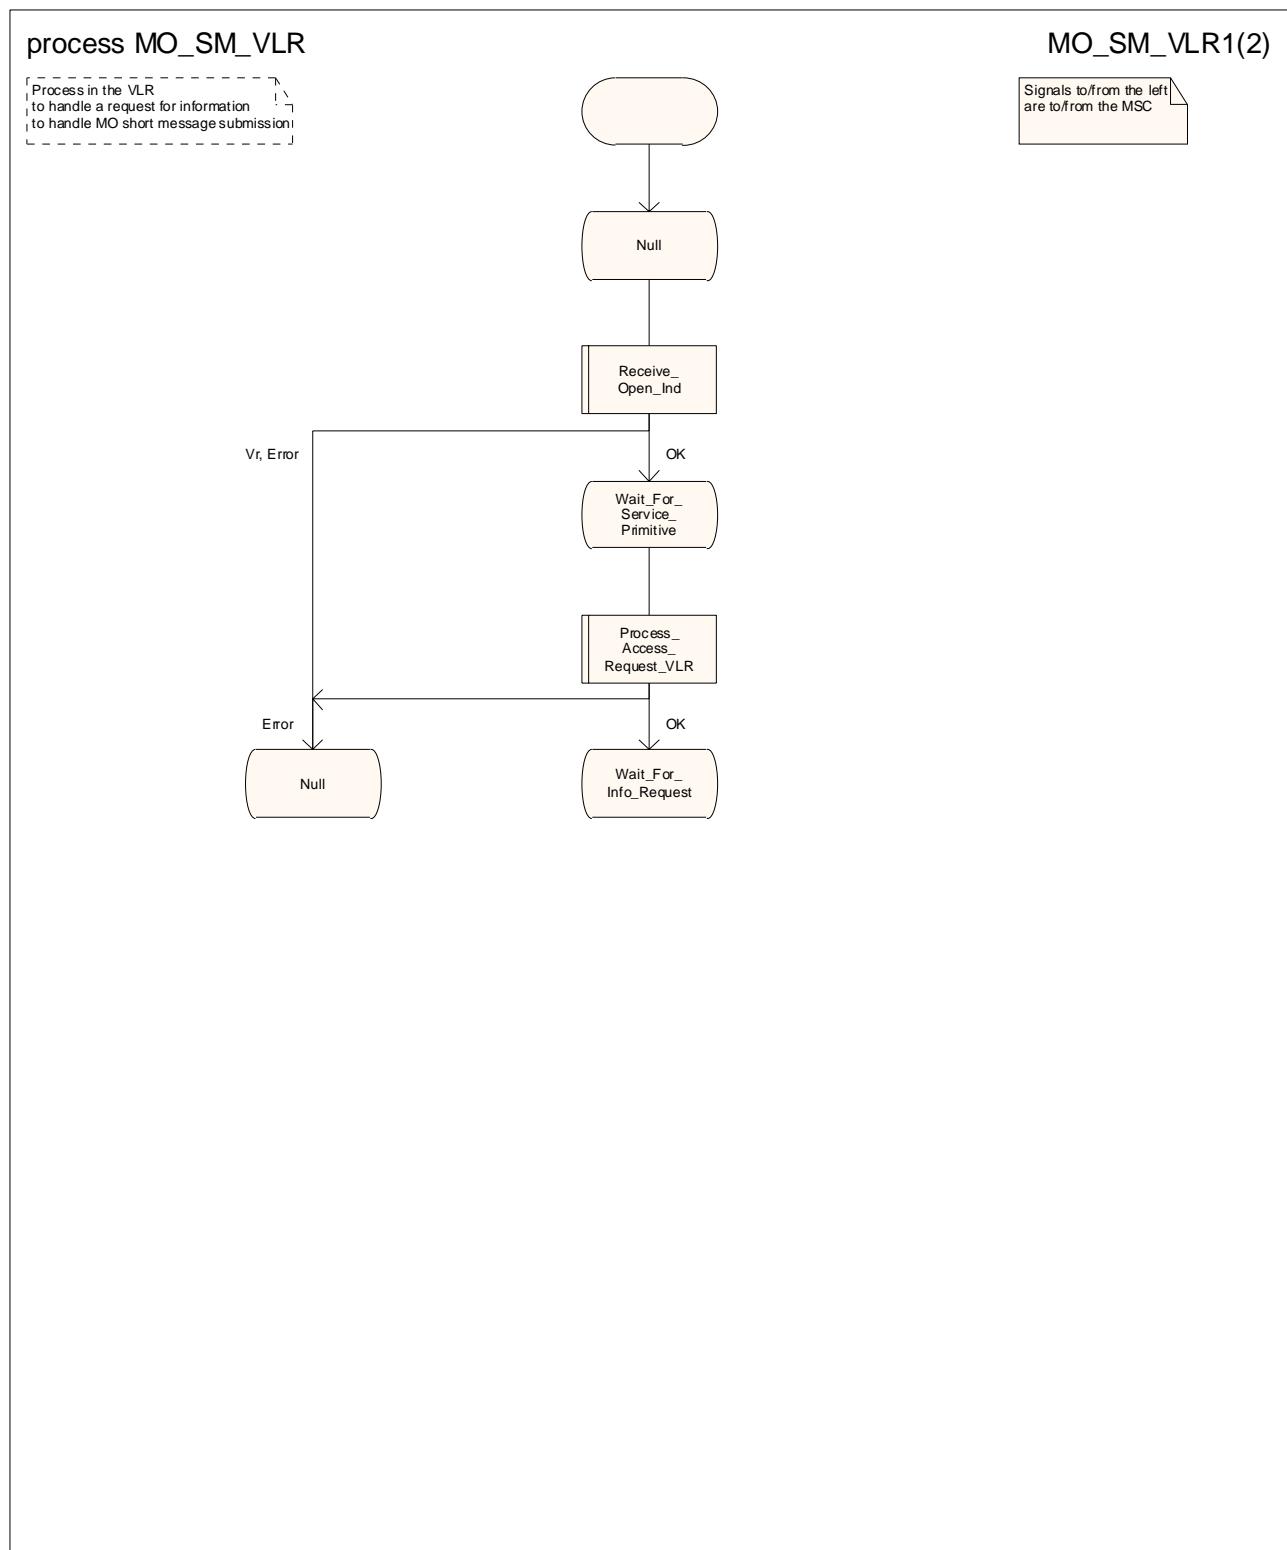
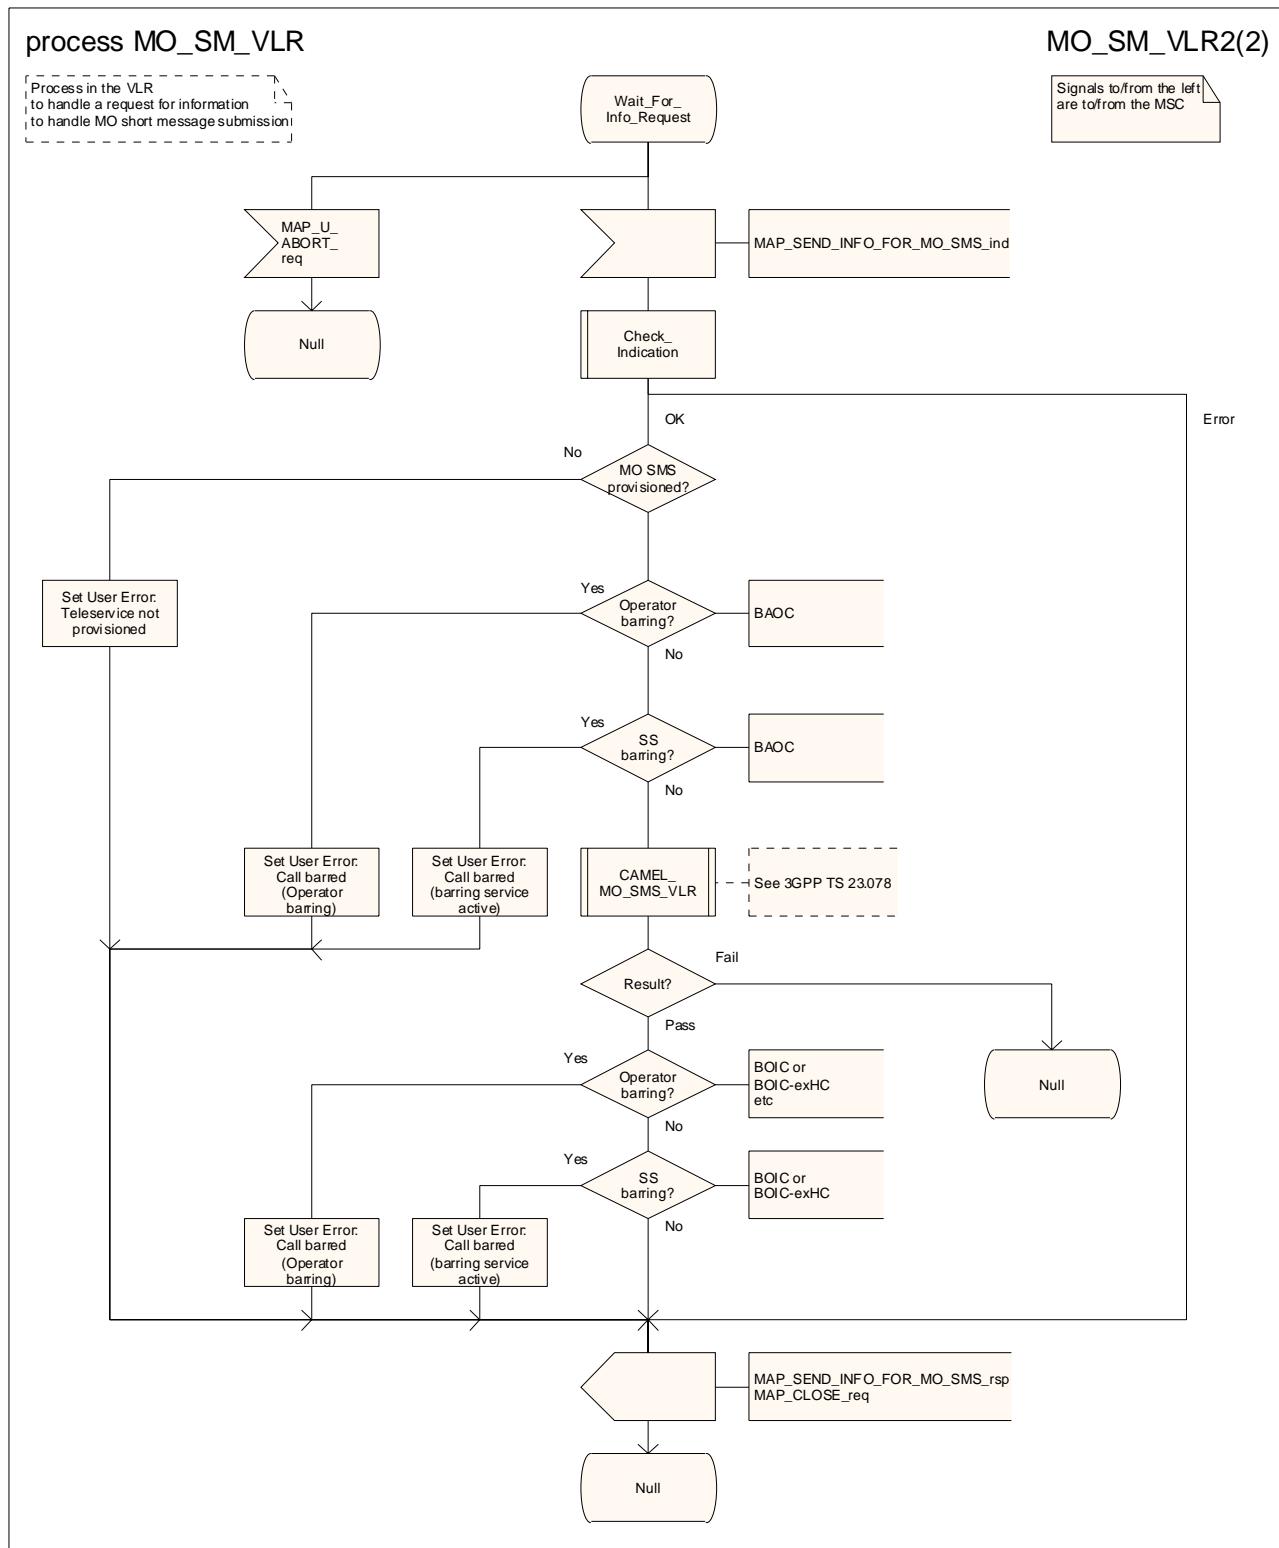


Figure 23.2/3 (sheet 1 of 2): Process MO\_SM\_VLR

**Figure 23.2/3 (sheet 2 of 2): Process MO\_SM\_VLR**

### 23.2.3 Procedure in the SMS Interworking MSC (SMS-IWMSC)

This procedure applies only when the SMS-IWMSC is not integrated with the serving MSC or SGSN.

The process is triggered by a dialogue opening request with the application context shortMsgMO-RelayContext.

- if the macro Receive\_Open\_Ind takes the "Error" exit, the process returns to the Null state;

- if the macro Receive\_Open\_Ind takes the "Vr" exit, the SMS-IWMSC handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "OK" exit, the SMS-IWMSC waits for a service primitive.
  - if the dialogue with the MSC fails, the process returns to the Null state;
  - if the next primitive received is a MAP\_DELIMITER indication, the SMS-IWMSC returns a MAP\_DELIMITER request, and waits for a service primitive;
  - if the next primitive received is a MAP\_MO\_FORWARD\_SHORT\_MESSAGE indication, the SMS-IWMSC checks the indication.
    - if the indication is badly formed, the SMS-IWMSC returns a MAP\_MO\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error and the process returns to the Null state;
    - if the indication is OK, the SMS-IWMSC checks whether the service centre is known.
      - if the service centre is not known, the SMS-IWMSC returns a MAP\_MO\_FORWARD\_SHORT\_MESSAGE response containing the user error "SM delivery failure" with delivery failure cause "Unknown service centre" and the process returns to the Null state;
      - if the service centre is known, the SMS-IWMSC sends an SC\_RP\_MO\_DATA request to the service centre, and waits for the response.
        - if the MAP dialogue with the serving MSC fails, the SMS-IWMSC sends an SC\_ABORT request to the service centre and the process returns to the Null state;
        - if the SMS-IWMSC receives an error response from the service centre, it returns a MAP\_MO\_FORWARD\_SHORT\_MESSAGE response containing the user error "SM delivery failure" with delivery failure cause set according to the error response received from the service centre, and the process returns to the Null state;
        - if the SMS-IWMSC receives a positive acknowledgement from the service centre, it returns a MAP\_MO\_FORWARD\_SHORT\_MESSAGE response and the process returns to the Null state.

The mobile originated short message service transfer process in the SMS-IWMSC is shown in figure 23.2/4.

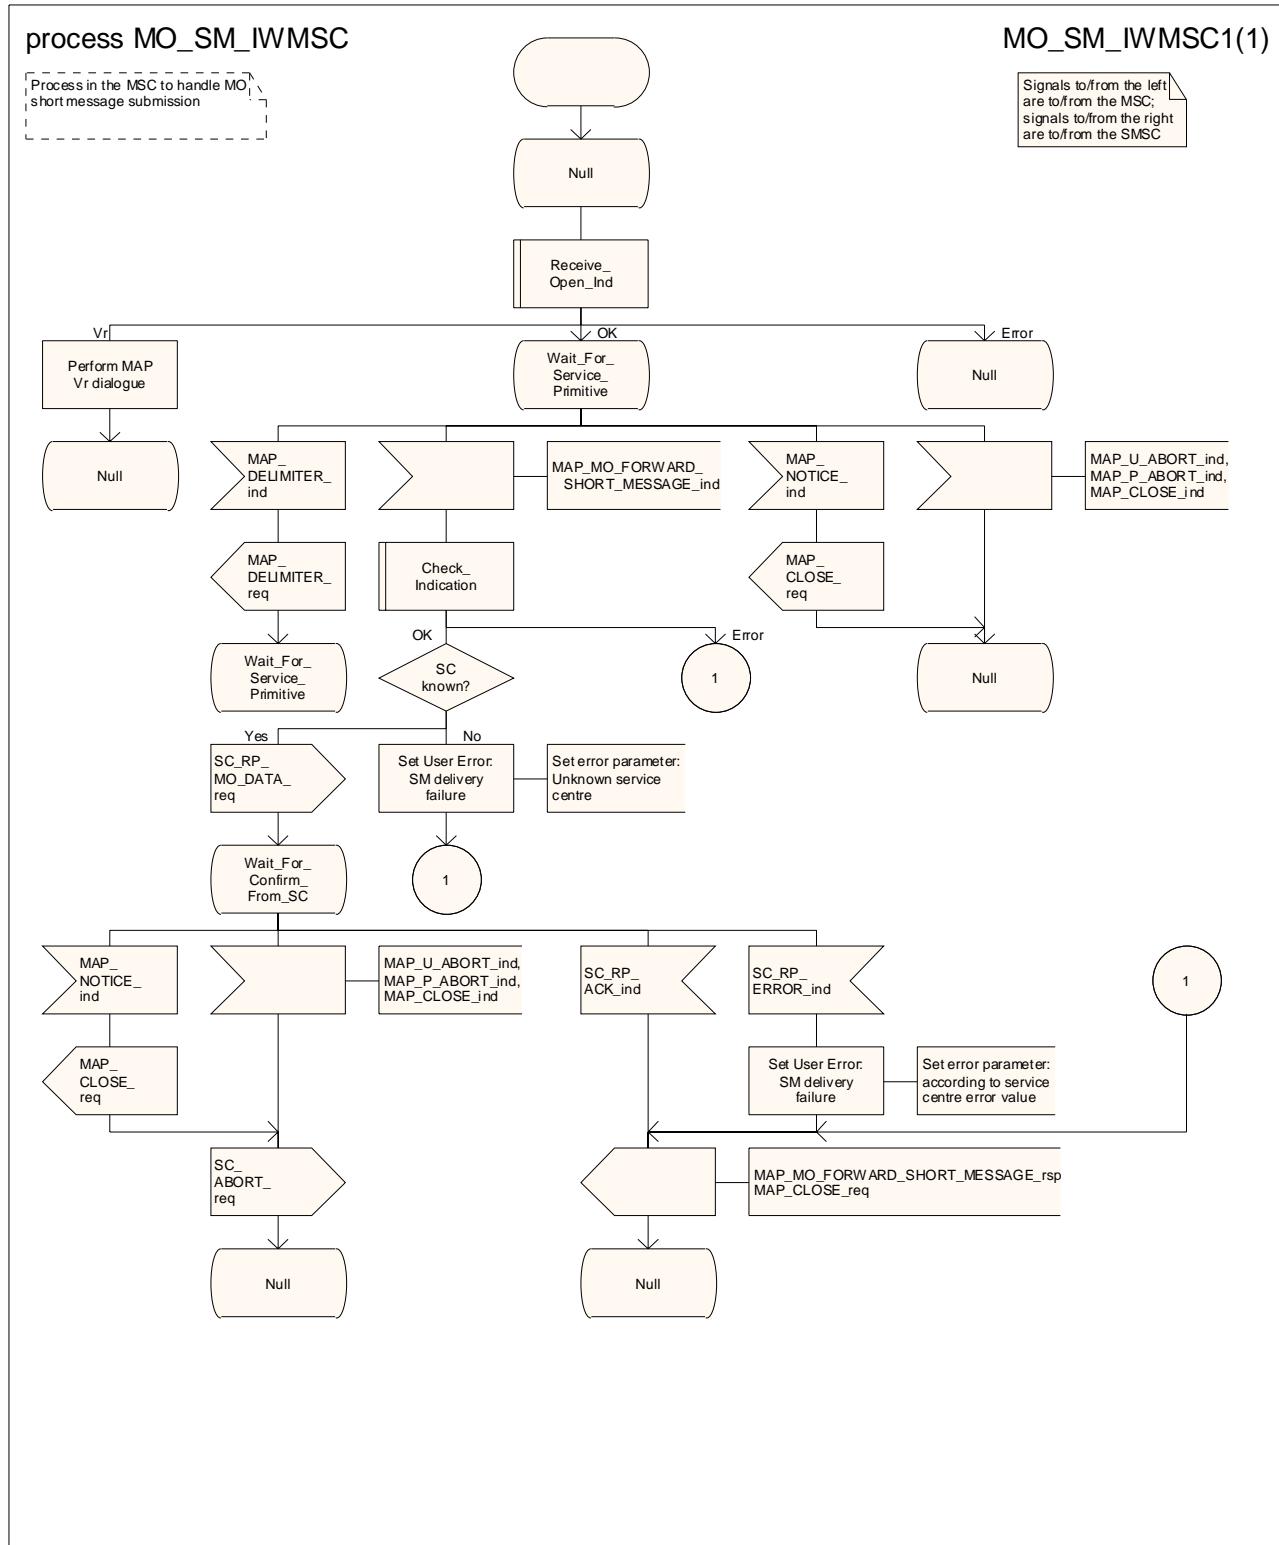


Figure 23.2/4: Process MO\_SM\_IWMSC

### 23.2.4 Procedure in the SGSN

Any CAMEL-specific handling defined in this subclause is omitted if the SGSN does not support CAMEL control of MO SMS, or if the subscriber does not have a subscription for CAMEL control of MO SMS.

The process is triggered by a short message received from the MS over the Gb interface.

If the MO SMS service is not provisioned, the SGSN returns a Gb\_RP\_ERROR with error cause "Requested facility not subscribed", and the process returns to the Null state.

If the MO SMS service is provisioned, the SGSN checks whether Operator Determined Barring of all outgoing calls is in force.

- if Operator Determined Barring would prevent the submission of the short message, the SGSN returns a Gb\_RP\_ERROR with error cause "Operator determined barring" to the MS, and the process returns to the Null state;
- if Operator Determined Barring would not prevent the submission of the short message, the SGSN handling continues.

The SGSN calls the procedure CAMEL\_O\_SMS\_INIT and tests the result.

- if the result was "SMS\_Aborted", the process returns to the Null state;
- if the result was "Release\_SMS", the SGSN returns a Gb\_RP\_ERROR with an error cause as instructed by the gsmSCF to the MS, and the process returns to the Null state;
- if the result was "Redirect\_SMS", the SGSN modifies the data for the submitted short message as instructed by the gsmSCF, and the MSC handling continues;
- if the result was "Continue", the SGSN handling continues.

The SGSN checks whether Operator Determined Barring of outgoing calls (other than barring of all outgoing calls) would prevent the submission of the short message.

- if Operator Determined Barring would prevent the submission of the short message, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with error cause "Operator determined barring" to the MS, and the process returns to the Null state;
- if Operator Determined Barring would not prevent the submission of the short message, the SGSN handling continues.

The SGSN checks whether the MAP\_OPEN request and the MAP\_MT\_FORWARD\_SHORT\_MESSAGE request can be sent in a single message signal unit through the lower layers of the protocol.

- if the two requests can be grouped in a single TC message, the SGSN requests a dialogue with the SMS-IWMSC, including the MAP\_MO\_FORWARD\_SHORT\_MESSAGE request;
  - if the dialogue opening is successful, the SGSN waits for the response from the SMS-IWMSC;
  - if the macro Receive\_Open\_Cnf takes the "Error" exit, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with cause "Network out of order" to the MS, and the process returns to the Null state.
  - if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SGSN handles the dialogue according to the specification for the earlier version of the protocol and checks the result.
    - if the submission was successful, the SGSN reports to the gsmSCF that the short message submission was successful and returns a Gb\_RP\_ACK to the MS, and the process returns to the Null state;
    - if the submission failed, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with the appropriate error cause to the MS, and the process returns to the Null state.
- if the two requests cannot be grouped in a single TC message, the SGSN requests a dialogue with the SMS-IWMSC, omitting the MAP\_MO\_FORWARD\_SHORT\_MESSAGE request;

- if the dialogue opening is successful, the SGSN sends a MAP\_MO\_FORWARD\_SHORT\_MESSAGE request to the SMS-IWMSC, and waits for the response from the SMS-IWMSC;
- if the macro Receive\_Open\_Cnf takes the "Error" exit, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with cause "Network out of order" to the MS, and the process returns to the Null state.
- if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SGSN handles the dialogue according to the specification for the earlier version of the protocol and checks the result.
  - if the submission was successful, the SGSN reports to the gsmSCF that the short message submission was successful and returns a Gb\_RP\_ACK to the MS, and the process returns to the Null state;
  - if the submission failed, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with the appropriate error cause to the MS, and the process returns to the Null state.
- if the SGSN receives a MAP\_MO\_FORWARD\_SHORT\_MESSAGE confirmation from the SMS-IWMSC, it checks the content of the confirmation;
  - if the confirmation indicates that the submission of the short message was successful, the SGSN reports to the gsmSCF that the short message submission was successful and returns a Gb\_RP\_ACK to the MS, and the process returns to the Null state;
  - if the confirmation indicates that the submission of the short message failed, the SGSN reports to the gsmSCF that the short message submission has failed and returns a Gb\_RP\_ERROR with the appropriate error cause to the MS, and the process returns to the Null state;
- if the dialogue with the SMS-IWMSC fails, the SGSN reports to the gsmSCF that the short message submission has failed and returns an A\_RP\_ERROR with cause "Network out of order" to the MS, and the process returns to the Null state.

The mobile originated short message service process in the SGSN is shown in figure 23.2/5.

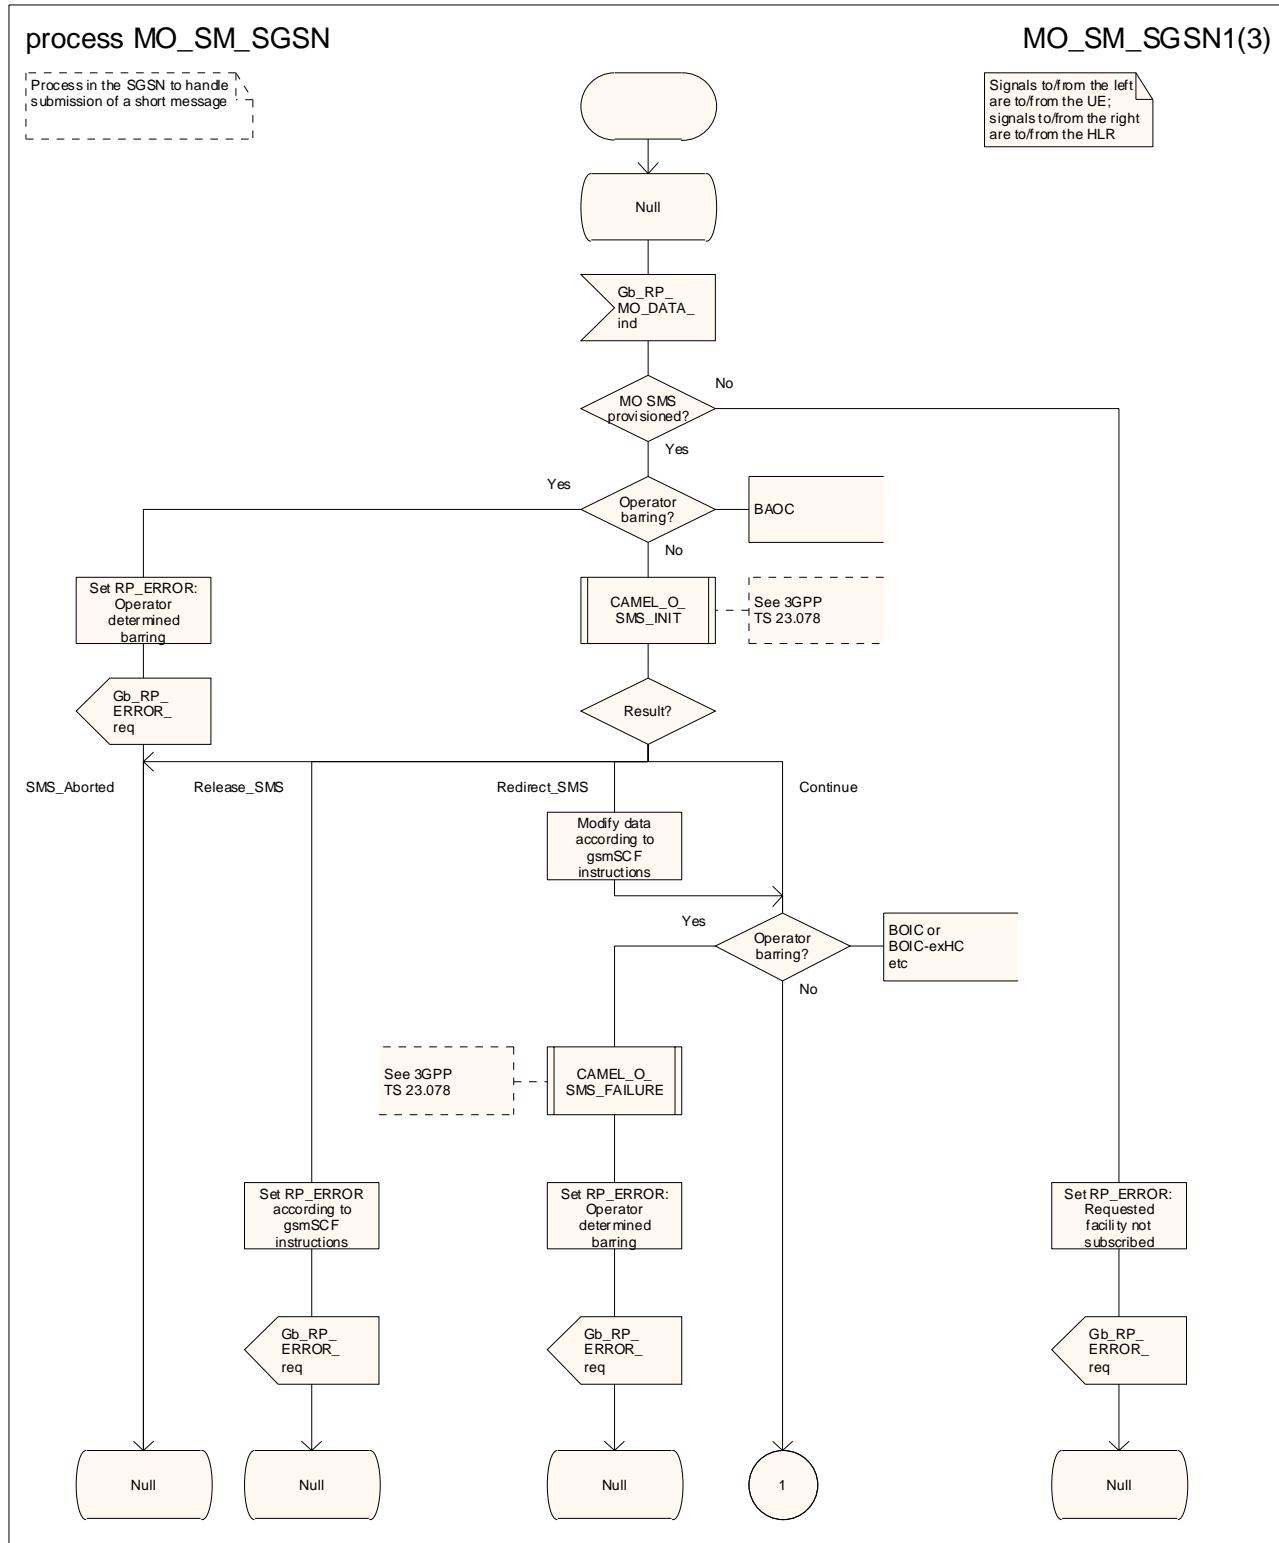


Figure 23.2/5 (sheet 1 of 3): Process MO\_SM\_SGSN

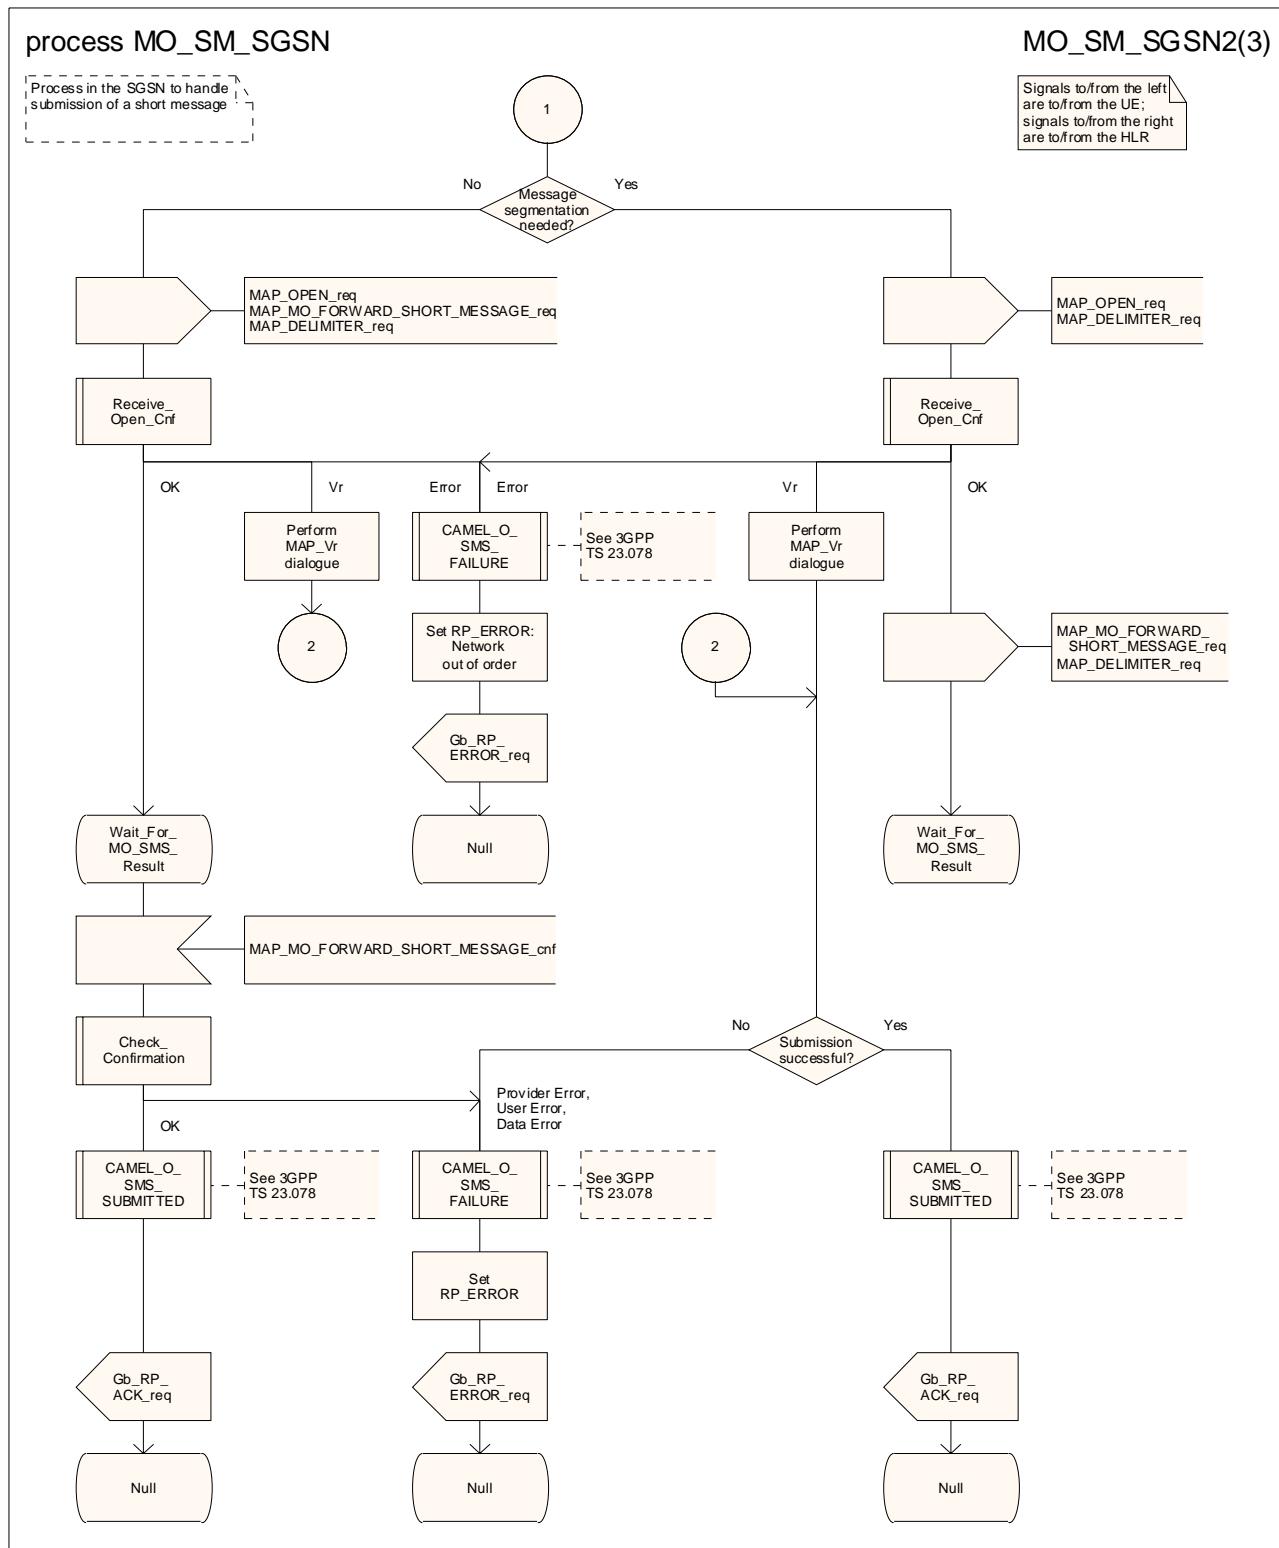


Figure 23.2/5 (sheet 2 of 3): Process MO\_SM\_SGSN


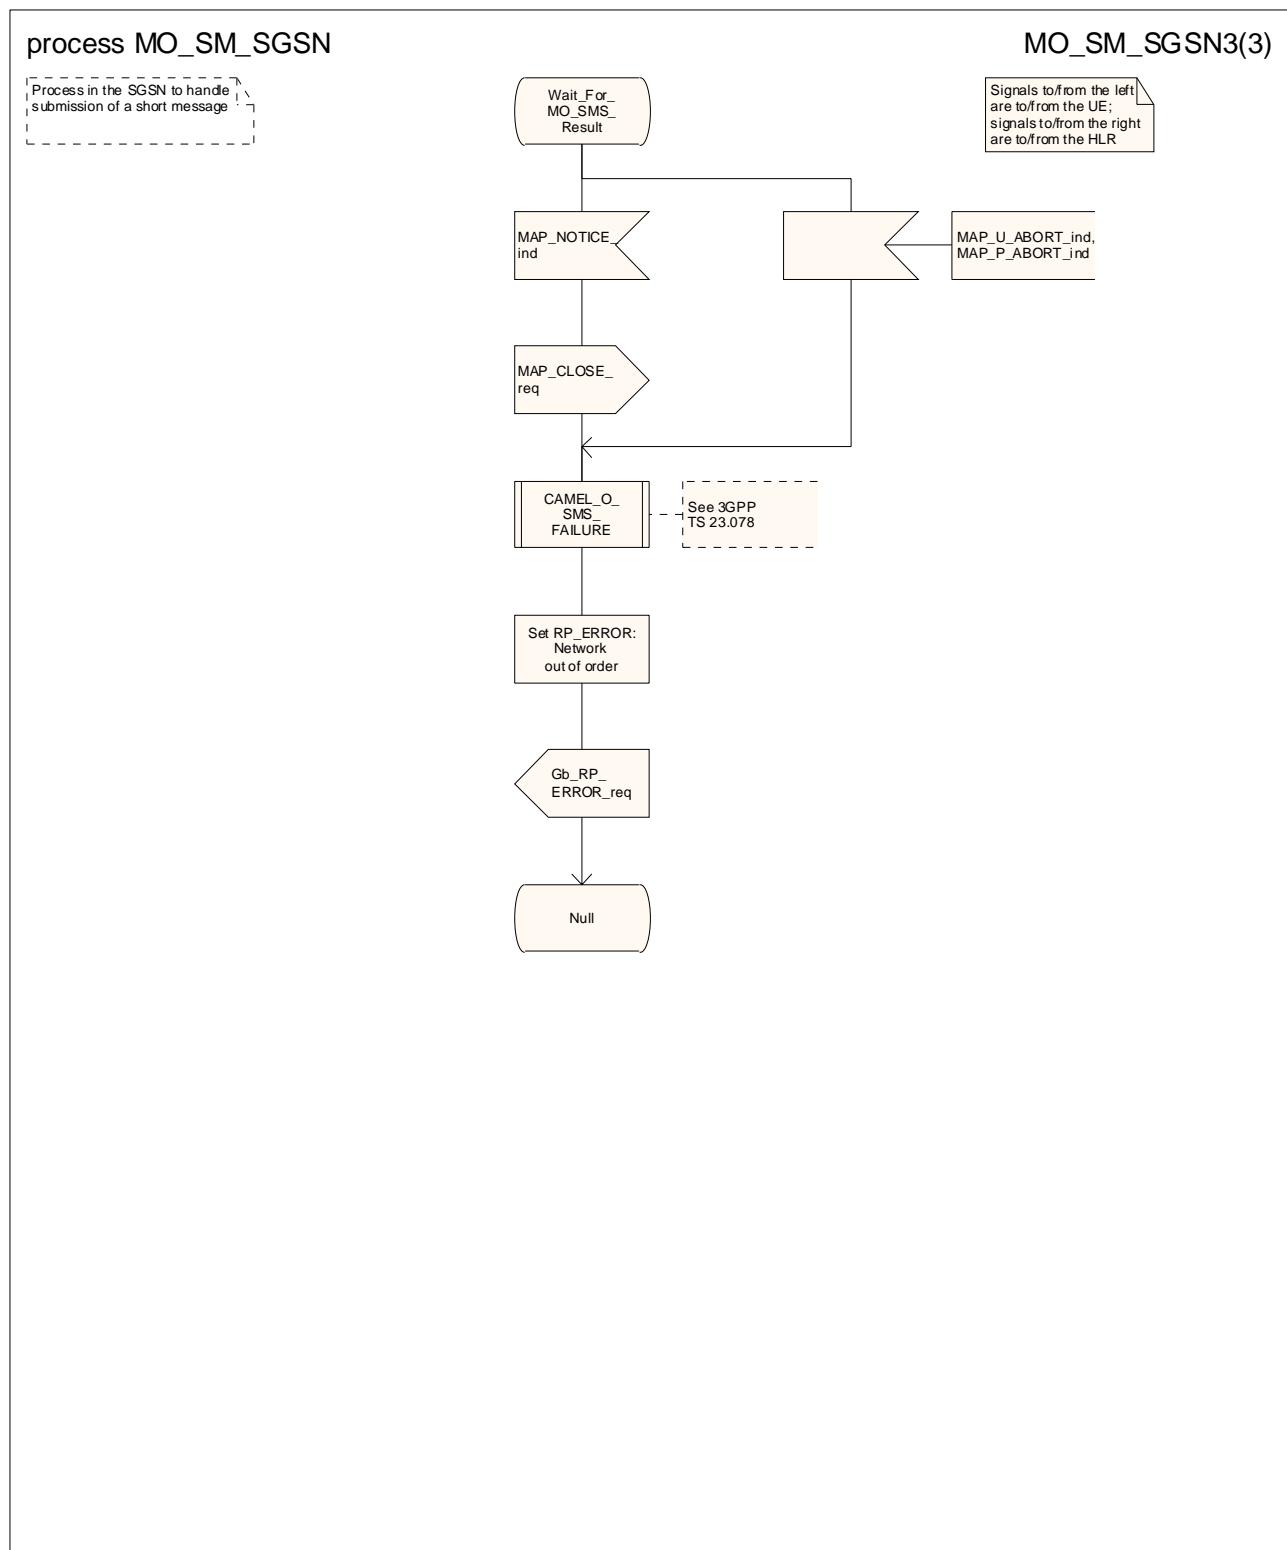


Figure 23.2/5 (sheet 3 of 3): Process MO\_SM\_SGSN

### 23.3 The mobile terminated short message transfer procedure


The mobile terminated short message transfer procedure is used for forwarding a short message or several short messages from a Service Centre to a mobile subscriber. The message flow for the mobile terminated short message procedure for a single short message transfer is shown in figure 23.3/1.

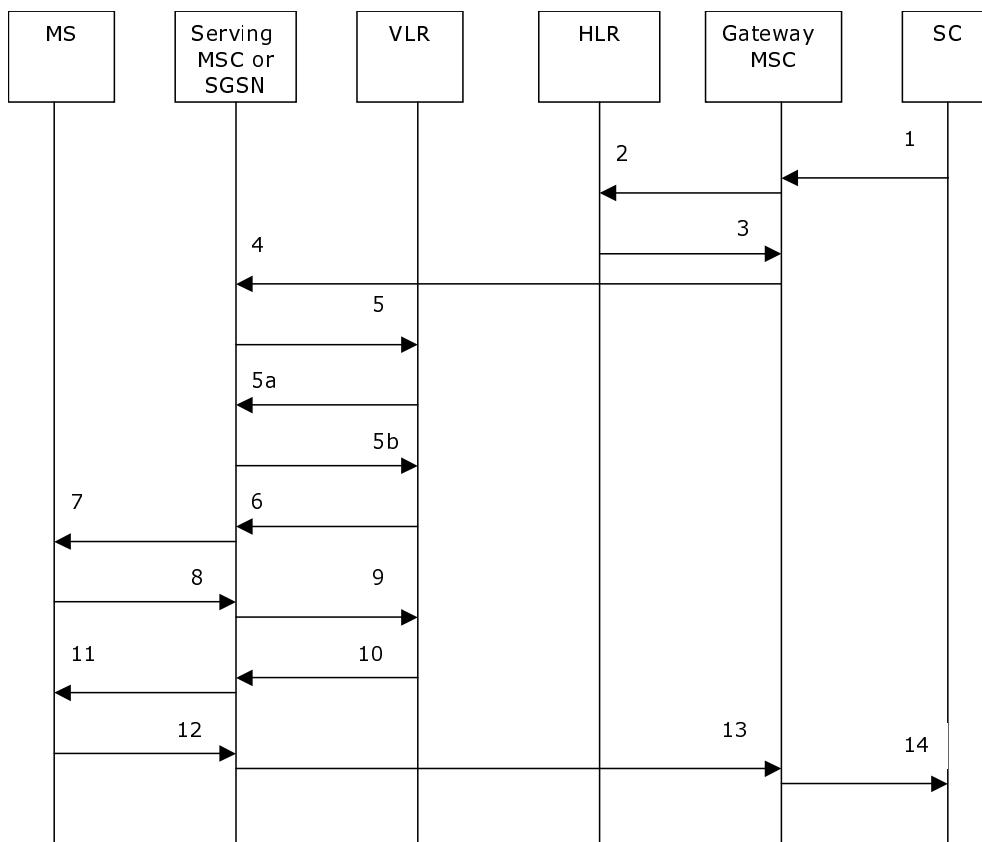

**Figure 23.3/1: Mobile terminated short message service procedures**

- 1) Short Message (3GPP TS 23.140).
  - 2) MAP\_SEND\_ROUTING\_INFO\_FOR\_SM.
  - 3) MAP\_SEND\_ROUTING\_INFO\_FOR\_SM\_ACK.
  - 4) MAP\_MT\_FORWARD\_SHORT\_MESSAGE.
  - 5) MAP\_SEND\_INFO\_FOR\_MT\_SMS (\*).
  - 5a) MAP\_CONTINUE\_CAMEL\_SMS\_HANDLING (\*)(\*\*)
  - 5b) MAP\_SEND\_INFO\_FOR\_MT\_SMS (\*)(\*\*)
  - 6) MAP\_PAGE/MAP\_SEARCH\_FOR\_MOBILE\_SUBSCRIBER (\*).
  - 7) Page (3GPP TS 24.008 [35]).
  - 8) Page response (3GPP TS 24.008 [35]).
  - 9) MAP\_PROCESS\_ACCESS\_REQUEST\_ACK and  
MAP\_SEARCH\_FOR\_MOBILE\_SUBSCRIBER\_ACK (\*).
  - 10) MAP\_SEND\_INFO\_FOR\_MT\_SMS\_ACK (\*).
  - 11) Short Message (3GPP TS 24.011 [37]).
  - 12) Short Message Acknowledgement (3GPP TS 24.011 [37]).
  - 13) MAP\_MT\_FORWARD\_SHORT\_MESSAGE\_ACK.
  - 14) Short Message Acknowledgement (3GPP TS 23.140).
- (\*) Messages 5), 5a), 5b), 6), 9), and 10) are not used by the SGSN.  
 These messages are used only for a subscriber provisioned with MT-SMS-CSI in the VLR.

The message flow for the mobile terminated short message procedure for multiple short message transfer is shown in figure 23.3/2.

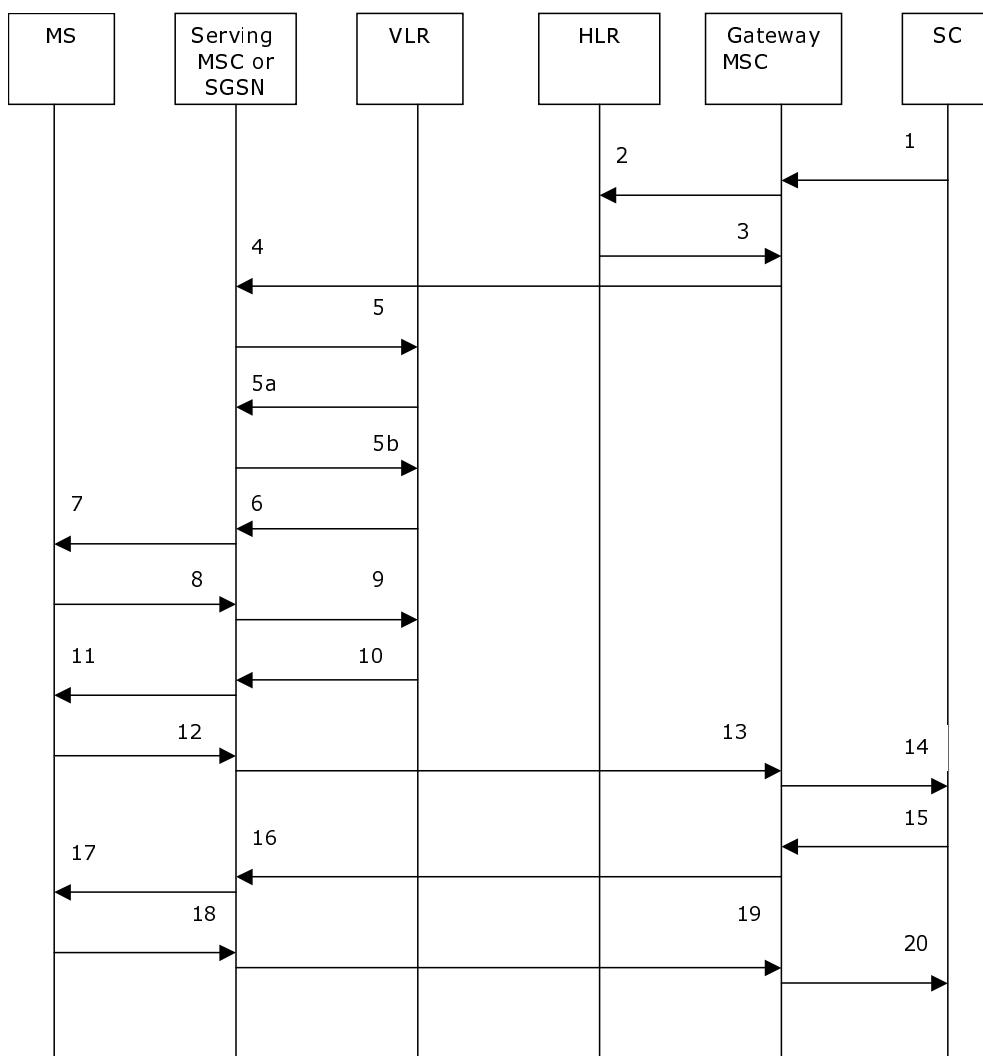

**Figure 23.3/2: Mobile terminated short message procedure for multiple short message transfer**

- 1) Short Message (3GPP TS 23.140).
- 2) MAP\_SEND\_ROUTING\_INFO\_FOR\_SM.
- 3) MAP\_SEND\_ROUTING\_INFO\_FOR\_SM\_ACK.
- 4) MAP\_MT\_FORWARD\_SHORT\_MESSAGE (note 1).
- 5) MAP\_SEND\_INFO\_FOR\_MT\_SMS (\*).
- 5a) MAP\_CONTINUE\_CAMEL\_SMS\_HANDLING (\*)(\*\*)
- 5b) MAP\_SEND\_INFO\_FOR\_MT\_SMS (\*)(\*\*)
- 6) MAP\_PAGE/MAP\_SEARCH\_FOR\_MOBILE\_SUBSCRIBER (\*).
- 7) Page (3GPP TS 48.008 [49]).
- 8) Page response (3GPP TS 24.008 [35]).
- 9) MAP\_PROCESS\_ACCESS\_REQUEST\_ACK and  
MAP\_SEARCH\_FOR\_MOBILE\_SUBSCRIBER\_ACK (\*).
- 10) MAP\_SEND\_INFO\_FOR\_MT\_SMS\_ACK (\*).
- 11) Short Message (3GPP TS 24.011 [37]).
- 12) Short Message Acknowledgement (3GPP TS 24.011 [37]).
- 13) MAP\_MT\_FORWARD\_SHORT\_MESSAGE\_ACK.
- 14) Short Message Acknowledgement (3GPP TS 23.140).
- 15) Short Message (3GPP TS 23.140).
- 16) MAP\_MT\_FORWARD\_SHORT\_MESSAGE (note 2).
- 17) Short Message (3GPP TS 24.011 [37]).
- 18) Short Message Acknowledgement (3GPP TS 24.011 [37]).
- 19) MAP\_MT\_FORWARD\_SHORT\_MESSAGE\_ACK.
- 20) Short Message Acknowledgement (3GPP TS 23.140).

- (\*) Messages 5), 5a), 5b) 6), 9), and 10) are not used by the SGSN.
- (\*\*) These messages are used only for a subscriber provisioned with MT-SMS-CSI in the VLR.

- NOTE 1: The "More Messages To Send" flag is TRUE.  
 NOTE 2: The "More Messages To Send" flag is FALSE.

In the multiple short message transfer the service MAP\_MT\_FORWARD\_SHORT\_MESSAGE can be used several times. However, the short message transfer is always acknowledged to the Service Centre before the next short message is sent.

In addition the following MAP services are used:

MAP_PROCESS_ACCESS_REQUEST	(see clause 8.3); (*)
MAP_PAGE	(see clause 8.2); (*)
MAP_SEARCH_FOR_MS	(see clause 8.2); (*)
MAP_AUTHENTICATE	(see clause 8.5); (*)
MAP_SET_CIPHERING_MODE	(see clause 8.6); (*)
MAP_CHECK_IMEI	(see clause 8.7);
MAP_FORWARD_NEW_TMSI	(see clause 8.9); (*)
MAP_REPORT_SM_DELIVERY_STATUS	(see clause 12.3);
MAP_INFORM_SERVICE_CENTRE	(see clause 12.6);
MAP_TRACE_SUBSCRIBER_ACTIVITY	(see clause 9.1); (*)
MAP_READY_FOR_SM	(see clause 12.4).

(\*) Those messages are not used by SGSN.

### 23.3.1 Procedure in the SMS-GMSC

Any CAMEL-specific handling described in this subclause is omitted if the SMS-GMSC does not support CAMEL. CAMEL-specific handling is invoked only if the SMS-GMSC is integrated with the VMSC.

The short message handling function of the SMS-GMSC requests routing information when it receives an SC\_RP\_MT\_DATA indication from a Service Centre.

The SMS-GMSC requests a MAP dialogue and sends a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM request, with an indication of whether the SMS-GMSC supports the delivery of short messages via an SGSN, to the HLR containing the subscriber data of the mobile subscriber.

- if the macro Receive\_Open\_Cnf takes the "Error" exit, the SMS-GMSC returns an SC\_RP\_ERROR with error cause "System Failure" and the process returns to the Null state;
- if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SMS-GMSC handles the dialogue according to the specification for the earlier version of the protocol, and the handling continues as follows:
  - if the HLR did not supply routeing information, the SMS-GMSC returns an SC\_RP\_ERROR with the error cause set according to the user error, and the process returns to the Null state;

NOTE: The mapping between the MAP error causes and the RP\_ERROR error causes is given in 3GPP TS 23.040 [26].

- if the HLR supplied routeing information, the handling continues as described below under the heading "Short message delivery attempts".
- if the macro Receive\_Open\_Cnf takes the "OK" exit, the SMS-GMSC waits for routeing information from the HLR.

While the SMS-GMSC is waiting for routeing information from the HLR:

- if the service centre aborts the dialogue with the SMS-GMSC, the SMS-GMSC aborts the dialogue with the HLR and the process returns to the Null state;
- If the dialogue with the HLR fails, the SMS-GMSC returns an SC\_RP\_ERROR with error cause "System Failure" and the process returns to the Null state;
- if the SMS-GMSC receives a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirmation, it checks the confirmation.
  - if the confirmation contained a provider error or a data error, the SMS-GMSC returns an SC\_RP\_ERROR with error cause "System Failure", and the process returns to the Null state;
  - if the confirmation contained a user error, the SMS-GMSC returns an SC\_RP\_ERROR with the error cause set according to the user error and waits for a possible MAP\_INFORM\_SERVICE\_CENTRE indication from the HLR;

NOTE: The mapping between the MAP error causes and the RP\_ERROR error causes is given in 3GPP TS 23.040 [26].

- if the confirmation contained routeing information, the SMS-GMSC checks whether the routeing information included an LMSI;
  - if the routeing information included an LMSI, the SMS-GMSC sets the destination reference to the IMSI of the destination subscriber, and the destination address in the short message relay protocol to the LMSI;
  - if the routeing information did not include an LMSI, the SMS-GMSC marks the destination reference as not included, and sets the destination address in the short message relay protocol to the IMSI of the destination subscriber.
- in both cases, the SMS-GMSC then waits for a possible MAP\_INFORM\_SERVICE\_CENTRE indication from the HLR;

While the SMS-GMSC is waiting for a possible MAP\_INFORM\_SERVICE\_CENTRE indication from the HLR:

- if the service centre aborts the dialogue with the SMS-GMSC, the SMS-GMSC aborts the dialogue with the HLR and the process returns to the Null state;
- if the dialogue with the HLR fails, the SMS-GMSC returns an SC\_RP\_ERROR including the IMSI and the MSISDN of the destination subscriber, and the process returns to the Null state;
- if the HLR closes the dialogue without sending a MAP\_INFORM\_SERVICE\_CENTRE, the SMS-GMSC checks whether routeing information was received from the HLR.
  - if the HLR did not supply routeing information, the SMS-GMSC returns an SC\_RP\_ERROR with the error cause set according to the user error, and the process returns to the Null state;

NOTE: The mapping between the MAP error causes and the RP\_ERROR error causes is given in 3GPP TS 23.040 [26].

- if the HLR supplied routeing information, the handling continues as described below under the heading "Short message delivery attempts".
- if the SMS-GMSC receives a MAP\_INFORM\_SERVICE\_CENTRE indication, it checks the indication.
  - if the indication is badly formed, the SMS-GMSC returns an SC\_RP\_ERROR including the IMSI and the MSISDN of the destination subscriber, and the process returns to the Null state;
  - if the indication is OK, the SMS-GMSC checks whether the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirmation contained an error.
    - if the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirmation contained an error, the SMS-GMSC returns an SC\_RP\_ERROR including the IMSI and the MSISDN of the destination subscriber, and the process returns to the Null state;

- if the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirmation did not contain an error, which implies that it contained routeing information, the handling continues as described below under the heading "Short message delivery attempts".

#### Short message delivery attempts

When the SMS-GMSC has obtained the routing information needed to forward a mobile terminated short message to the serving node (MSC or SGSN) it calls the procedure MT\_SM\_Delivery\_Attempt\_GMSC.

If the SMS-GMSC receives both MSC and SGSN numbers from the HLR as routeing information, it may choose which serving node to use for the first delivery attempt.

If the first delivery attempt succeeds, or the delivery is aborted, the process returns to the Null state. If the first delivery attempt fails and the HLR provided a second routeing address, the SMS-GMSC attempts to deliver the short message through the second choice serving node. The process then returns to the Null state.

For each delivery attempt, the SMS-GMSC checks whether the serving node for the delivery attempt is the SMS-GMSC. If the serving node for the delivery attempt is the SMS-GMSC, the handling continues as described under the heading "Serving node is SMS-GMSC"; if the serving node for the delivery attempt is not the SMS-GMSC, the handling continues as described under the heading "Serving node is separate from SMS-GMSC".

#### Serving node is SMS-GMSC

The SMS-GMSC invokes the macro MT\_SM\_Transfer\_MSC. This macro is described in subclause 23.3.3 and in figure 23.3/8.

If the macro takes the Abort exit, the SMS-GMSC reports the delivery failure to the gsmSCF as described in 3GPP TS 23.078 [98] and the procedure returns a Fail result.

If the macro takes the Error exit, the SMS-GMSC reports the delivery failure to the gsmSCF as described in 3GPP TS 23.078 [98]. If required, the SMS-GMSC reports the outcome of the delivery attempt to the HLR. The SMS-GMSC sends an error report to the service centre and the procedure returns a Fail result.

NOTE: if the macro takes the Error exit, the SMS-GMSC maps the MAP User Error to the corresponding SC\_RP error, as defined in 3GPP TS 23.040 [26].

If the macro takes the Release SMS exit, the SMS-GMSC sends an error report to the service centre and the procedure returns a Fail result.

If the macro takes the OK exit, the SMS-GMSC reports the successful delivery to the gsmSCF as described in 3GPP TS 23.078 [98] and checks whether the "More messages to send" indication was set in the request from the service centre.

- If the "More messages to send" indication was not set, the SMS-GMSC reports the successful delivery to the HLR, if necessary, and reports the successful delivery to the service centre. The procedure returns a Pass result.
- If the "More messages to send" indication was set, the SMS-GMSC reports the successful delivery to the service centre and waits for another message delivery request from the service centre. When the request is received, the SMS-GMSC opens a dialogue with the gsmSCF as described in 3GPP TS 23.078 [98].
  - If the gsmSCF bars the delivery of the short message (Release\_SMS result) the SMS-GMSC informs the service centre that the multiple message transfer was aborted and the procedure returns an Abort result.
  - If the gsmSCF instructs the SMS-GMSC to continue with the delivery, the SMS-GMSC sends the message over the access interface to the destination MS and waits for a response.
    - If the delivery was successful, the SMS-GMSC reports the successful delivery to the gsmSCF as described in 3GPP TS 23.078 [98] and checks whether the "More messages to send" indication was set in the request from the service centre, as above.
    - If the delivery was unsuccessful, the SMS-GMSC reports the delivery failure to the gsmSCF as described in 3GPP TS 23.078 [98]. If required, the SMS-GMSC reports the outcome of the delivery attempt to the HLR. The SMS-GMSC informs the service centre that the multiple message transfer was aborted and the procedure returns an Abort result.

#### Serving node is separate from SMS-GMSC

The SMS-GMSC checks whether the MAP\_OPEN request and the MAP\_MT\_FORWARD\_SHORT\_MESSAGE request can be sent in a single message signal unit through the lower layers of the protocol.

- if the two requests can be grouped in a single TC message, the SMS-GMSC requests a dialogue with the serving node, including the MAP\_MT\_FORWARD\_SHORT\_MESSAGE request;
  - if the dialogue opening is successful, the SMS-GMSC waits for the response from the serving node;
  - if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SMS-GMSC handles the dialogue according to the specification for the earlier version of the protocol.
    - if delivery was successful, the procedure returns a "Pass" result;
    - if delivery failed, the procedure returns a "Fail" result.
  - if the macro Receive\_Open\_Cnf takes the "Error" exit, the SMS-GMSC returns an SC\_RP\_ERROR with cause "System Failure" to the SC and the procedure returns a "Fail" result.
- if the two requests can be grouped in a single TC message, the SMS-GMSC requests a dialogue with the serving node, omitting the MAP\_MO\_FORWARD\_SHORT\_MESSAGE request;
  - if the dialogue opening is successful, the SMS-GMSC sends a MAP\_MO\_FORWARD\_SHORT\_MESSAGE request to the serving node, and waits for the response from the serving node;
  - if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SMS-GMSC handles the dialogue according to the specification for the earlier version of the protocol.
    - if delivery was successful, the procedure returns a "Pass" result;
    - if delivery failed, the procedure returns a "Fail" result.
  - if the macro Receive\_Open\_Cnf takes the "Error" exit, the SMS-GMSC returns an SC\_RP\_ERROR with cause "System Failure" to the SC and the procedure returns a "Fail" result.

If the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirmation included an LMSI, it can be included in the sm-RP-DA information field of the first MAP\_MT\_FORWARD\_SHORT\_MESSAGE request sent to the serving MSC. In this case, the IMSI shall be included in the Destination Reference of the MAP\_OPEN request. The SMS-GMSC shall not send an LMSI to an SGSN. If the SMS-GMSC does not send an LMSI to the serving node, the sm-RP-DA information field in the first MAP\_MT\_FORWARD\_SHORT\_MESSAGE request sent to the serving MSC or SGSN shall contain the IMSI, and the Destination Reference in the MAP\_OPEN request shall not be present. The parameter SM\_RP\_OA shall contain the Service Centre address. The More Messages To Send flag is set to TRUE or FALSE according to the information received from the Service Centre.

When the SMS-GMSC receives the response from the serving node, it checks the content of the response.

If the response indicates successful delivery, the SMS-GMSC checks whether the "More messages to send" indication was set in the request from the service centre.

- If the " More messages to send" indication was not set, the SMS-GMSC reports the successful delivery to the HLR, if necessary, and reports the successful delivery to the service centre. The procedure returns a Pass result.
- If the " More messages to send" indication was set, the SMS-GMSC reports the successful delivery to the service centre and waits for another message delivery request from the service centre. When the request is received, the SMS-GMSC sends a MAP\_MT\_FORWARD\_SHORT\_MESSAGE request to the serving node and waits for a response.
  - If the delivery was successful, the SMS-GMSC checks whether the "More messages to send" indication was set in the request from the service centre, as above.
  - If the delivery was unsuccessful, the SMS-GMSC reports the outcome of the delivery attempt to the HLR, if required. The SMS-GMSC informs the service centre that the multiple message transfer was aborted and the procedure returns an Abort result.

The SMS-GMSC invokes the procedure MAP\_REPORT\_SM\_DELIVERY\_STATUS, if:

- the reason received from the serving node for failure to deliver the message is absent subscriber\_SM, unidentified subscriber or SM delivery failure with error cause MS memory capacity exceeded, and the SC address is not yet included in the MWD set, or
- the reason received from the serving node for failure to deliver the message is absent subscriber\_SM, unidentified subscriber or SM delivery failure with error cause MS memory capacity exceeded, and the corresponding flag in the HLR (as indicated the information received in the MAP\_INFORM\_SERVICE\_CENTRE) is not set, or
- the reason received from the serving node (MSC or SGSN) for failure to deliver the message is absent subscriber\_SM and the absent subscriber diagnostic is different from the absent subscriber diagnostic received in the MAP\_INFORM\_SERVICE\_CENTRE.

If absent subscriber diagnostic information (see 3GPP TS 23.040 [26]) is included with the absent subscriber\_SM error indication then the SMS-GMSC relays this information to the HLR using the MAP\_REPORT\_SM\_DELIVERY\_STATUS service.

If there was an attempt to deliver the short message through both the MSC and the SGSN, and both delivery attempts failed with causes as described above, the SMS-GMSC reports to the HLR the two unsuccessful SMS delivery outcomes for GPRS and non GPRS.

If there was an attempt to deliver the short message through both the MSC and the SGSN, and the first delivery failed with causes described above but the second delivery succeeded, the SMS-GMSC reports to the HLR the unsuccessful and successful SMS delivery outcomes for GPRS and non GPRS.

The SMS-GMSC may also report successful delivery to the HLR when the first SMS delivery through the MSC was successful, if the MNRF or MCEF or both were set in the HLR.

The SMS-GMSC may also report successful delivery to the HLR when the first SMS delivery through the SGSN was successful, if the MNRG or MCEF or both were set in the HLR.

This procedure is described in detail in clause 23.5.

The SMS-GMSC maps "Unexpected data value" and "System failure" MAP errors from the serving node to a "System failure" error to the SC. Other MAP errors are mapped to appropriate cause values and diagnostic information from the SMS-GMSC to the SC as described in 3GPP TS 23.040 [26] and 3GPP TS 24.011 [37].

The SMS-GMSC maps the "Unidentified subscriber" MAP error to an "Absent subscriber" error with diagnostic information set to "Unidentified subscriber" to the SC as described in 3GPP TS 23.040 [26].

Note that the indication of which number belongs to the SGSN and which to the MSC, received from the HLR in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM confirm (see clause 23.3.2) will enable the SMS-GMSC to map the causes received from one or both serving nodes into the appropriate causes for non GPRS, GPRS or both, and send them to the SC and the HLR.

The mobile terminated short message transfer procedure in the SMS-GMSC is shown in figure 23.3/3.

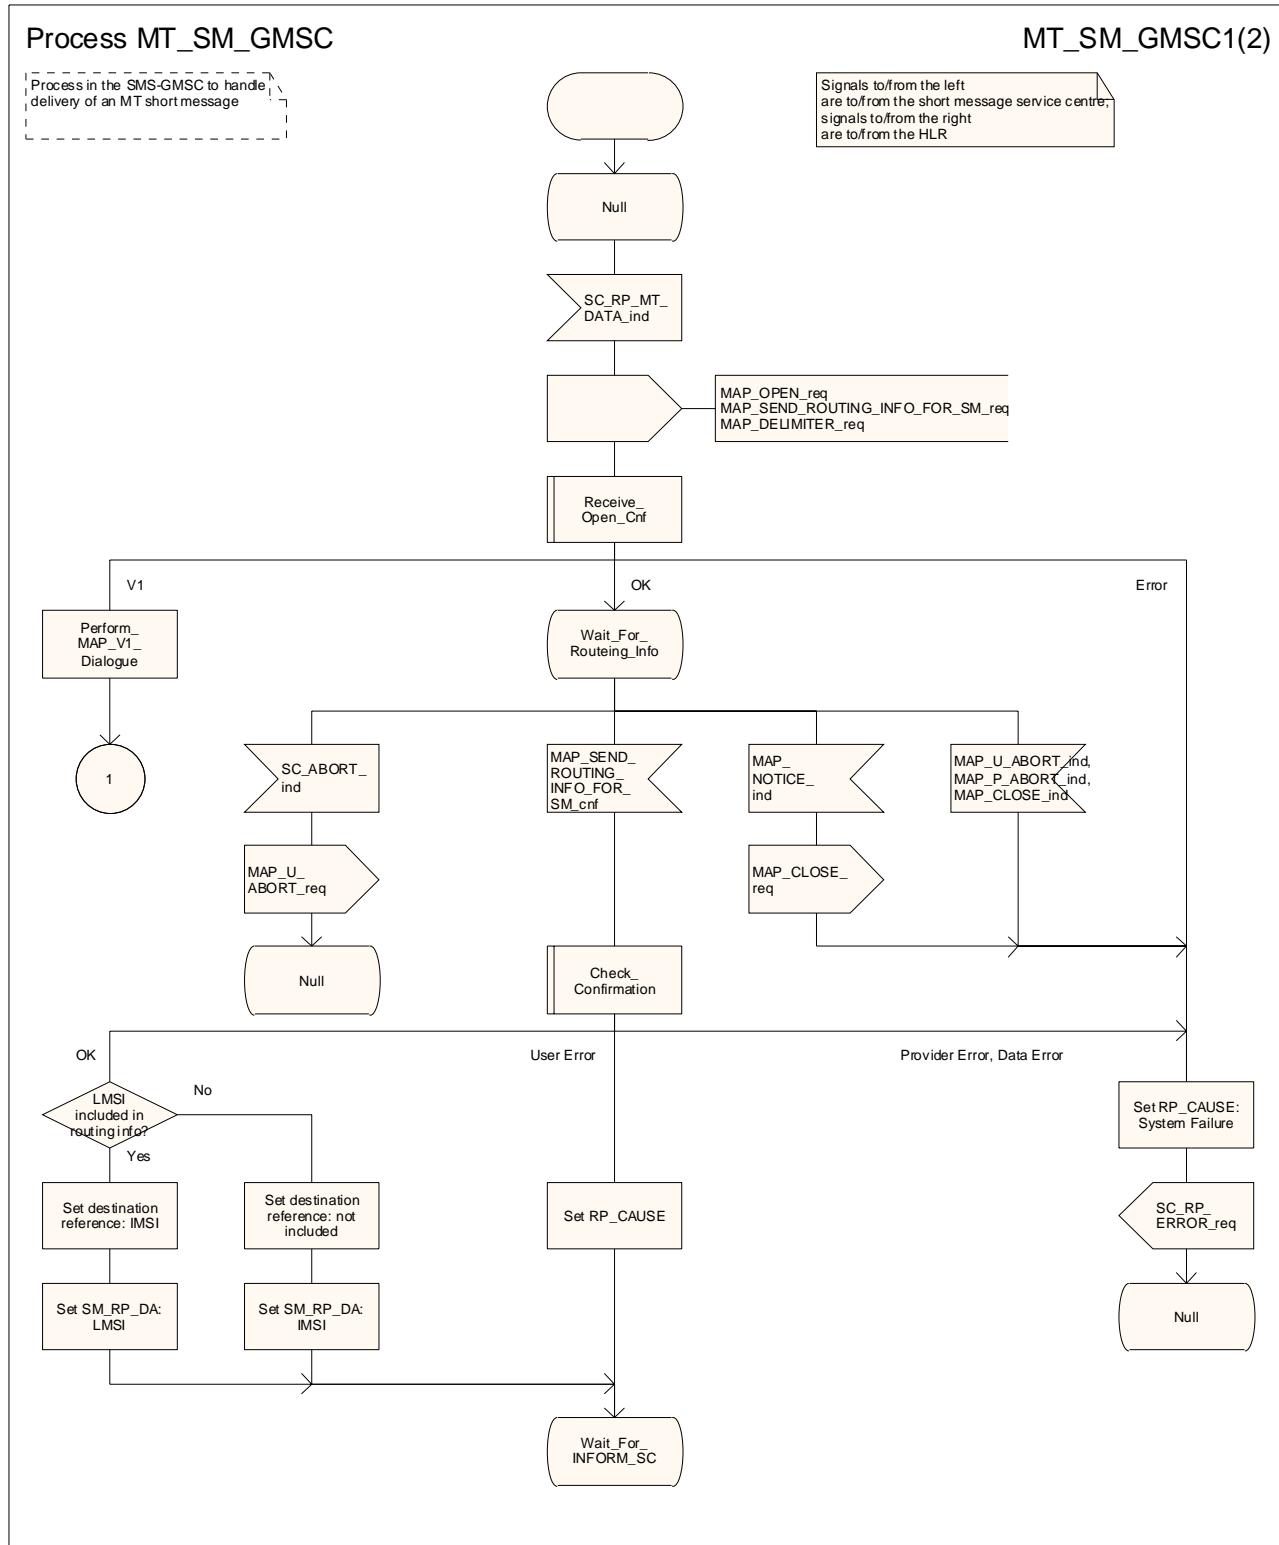


Figure 23.3/3 (sheet 1 of 2): Process MT\_SM\_GMSC

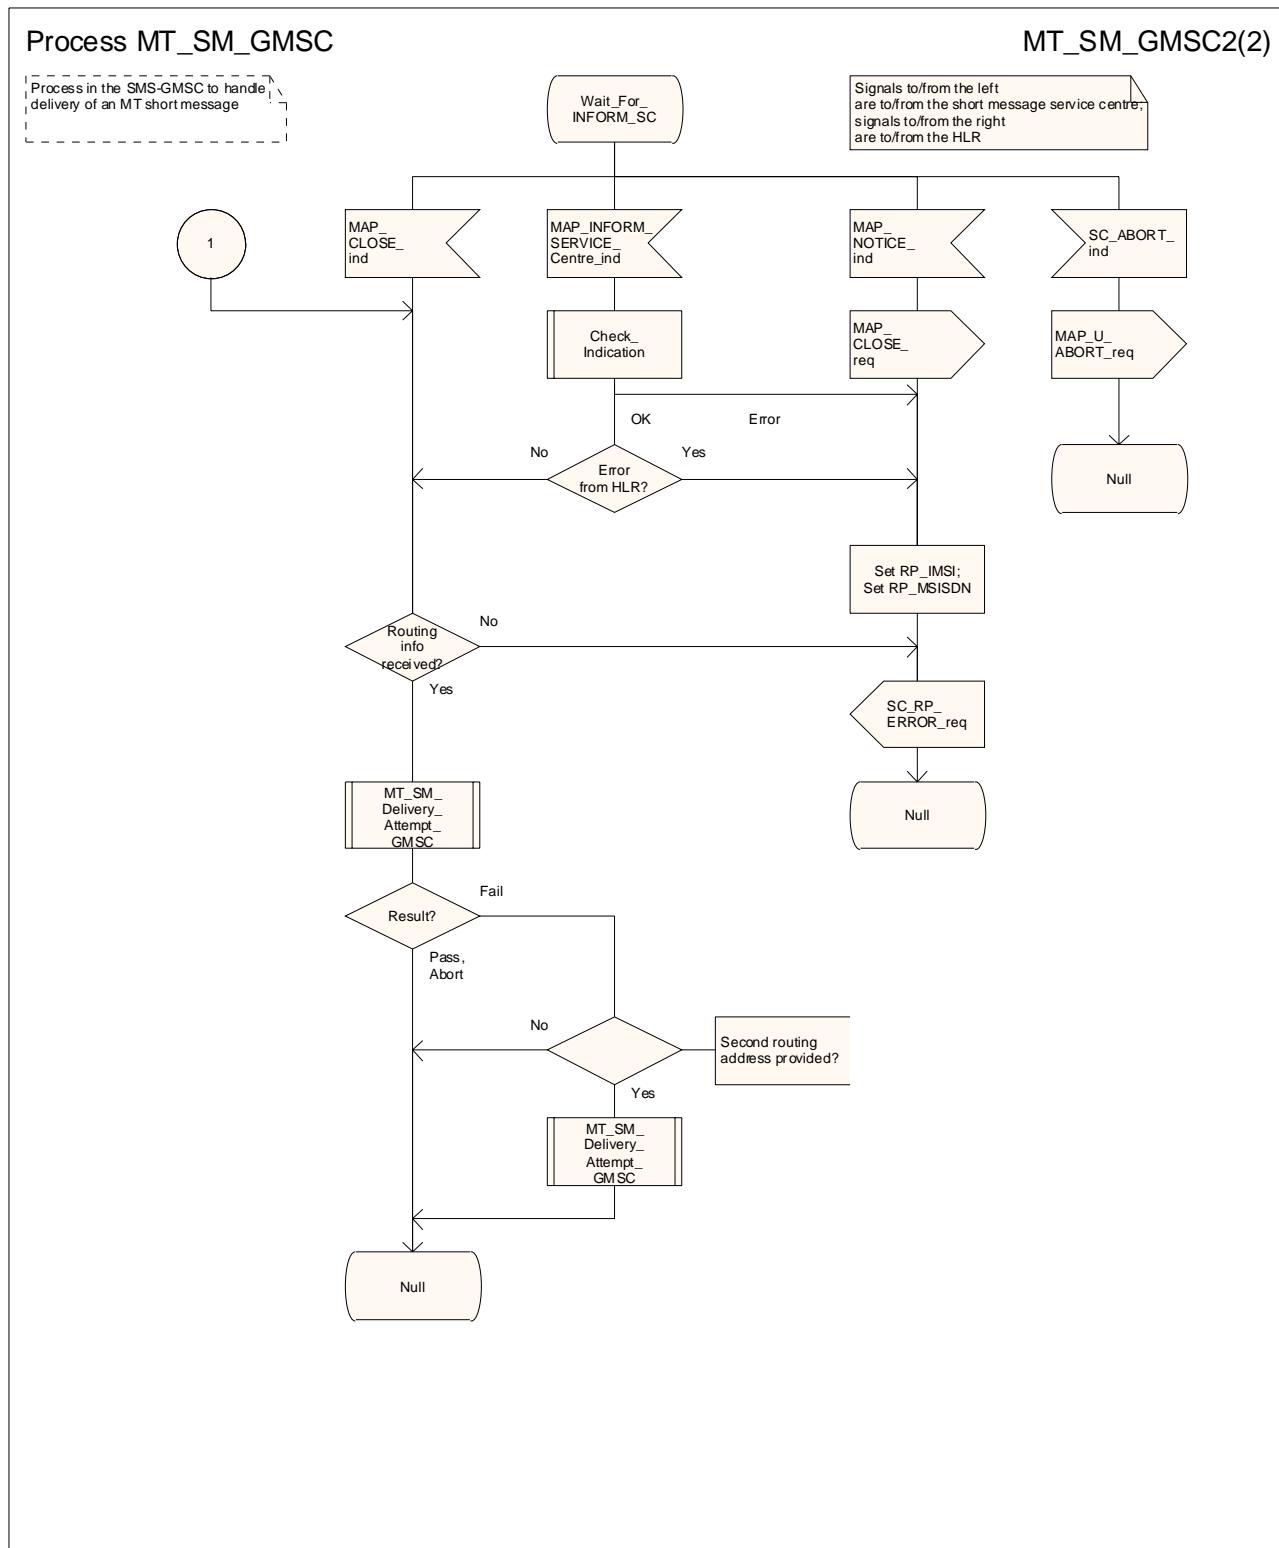


Figure 23.3/3 (sheet 2 of 2): Process MT\_SM\_GMSC

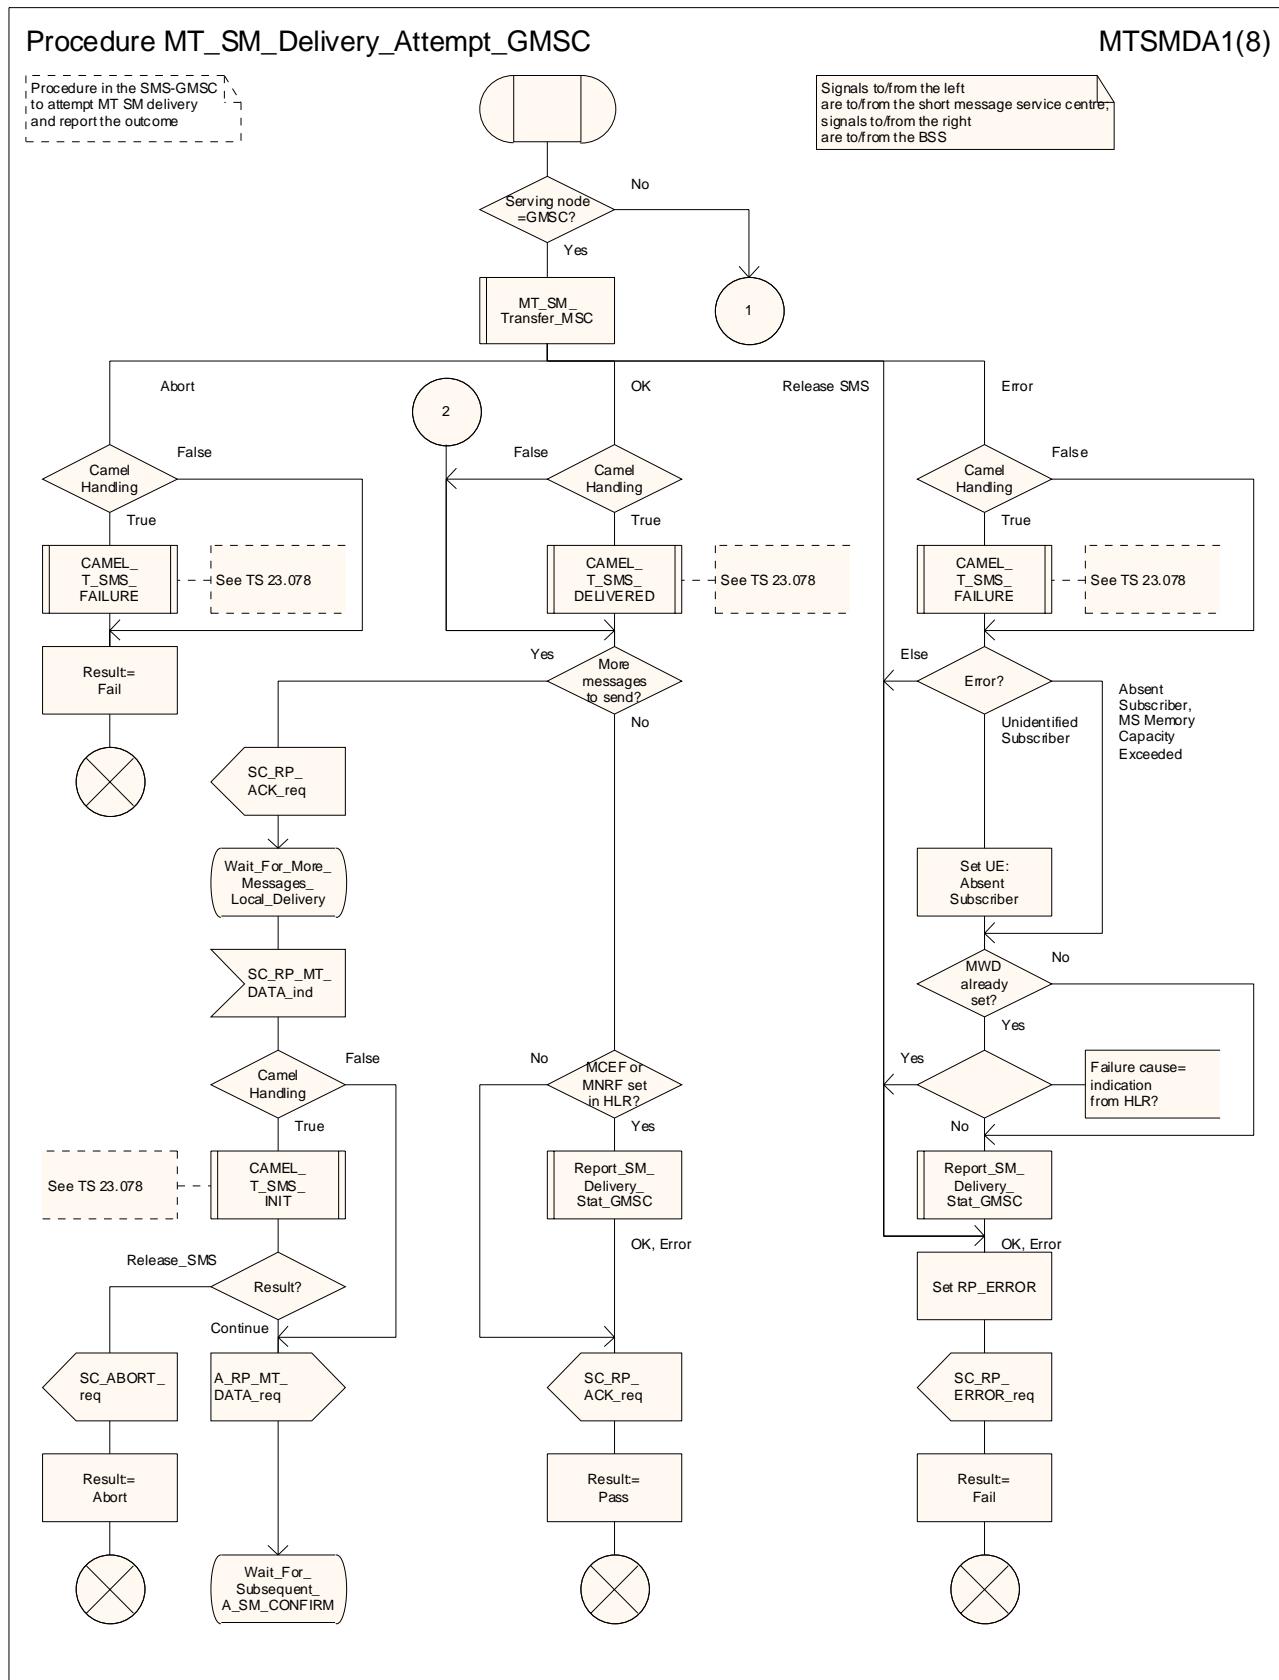


Figure 23.3/4 (sheet 1 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

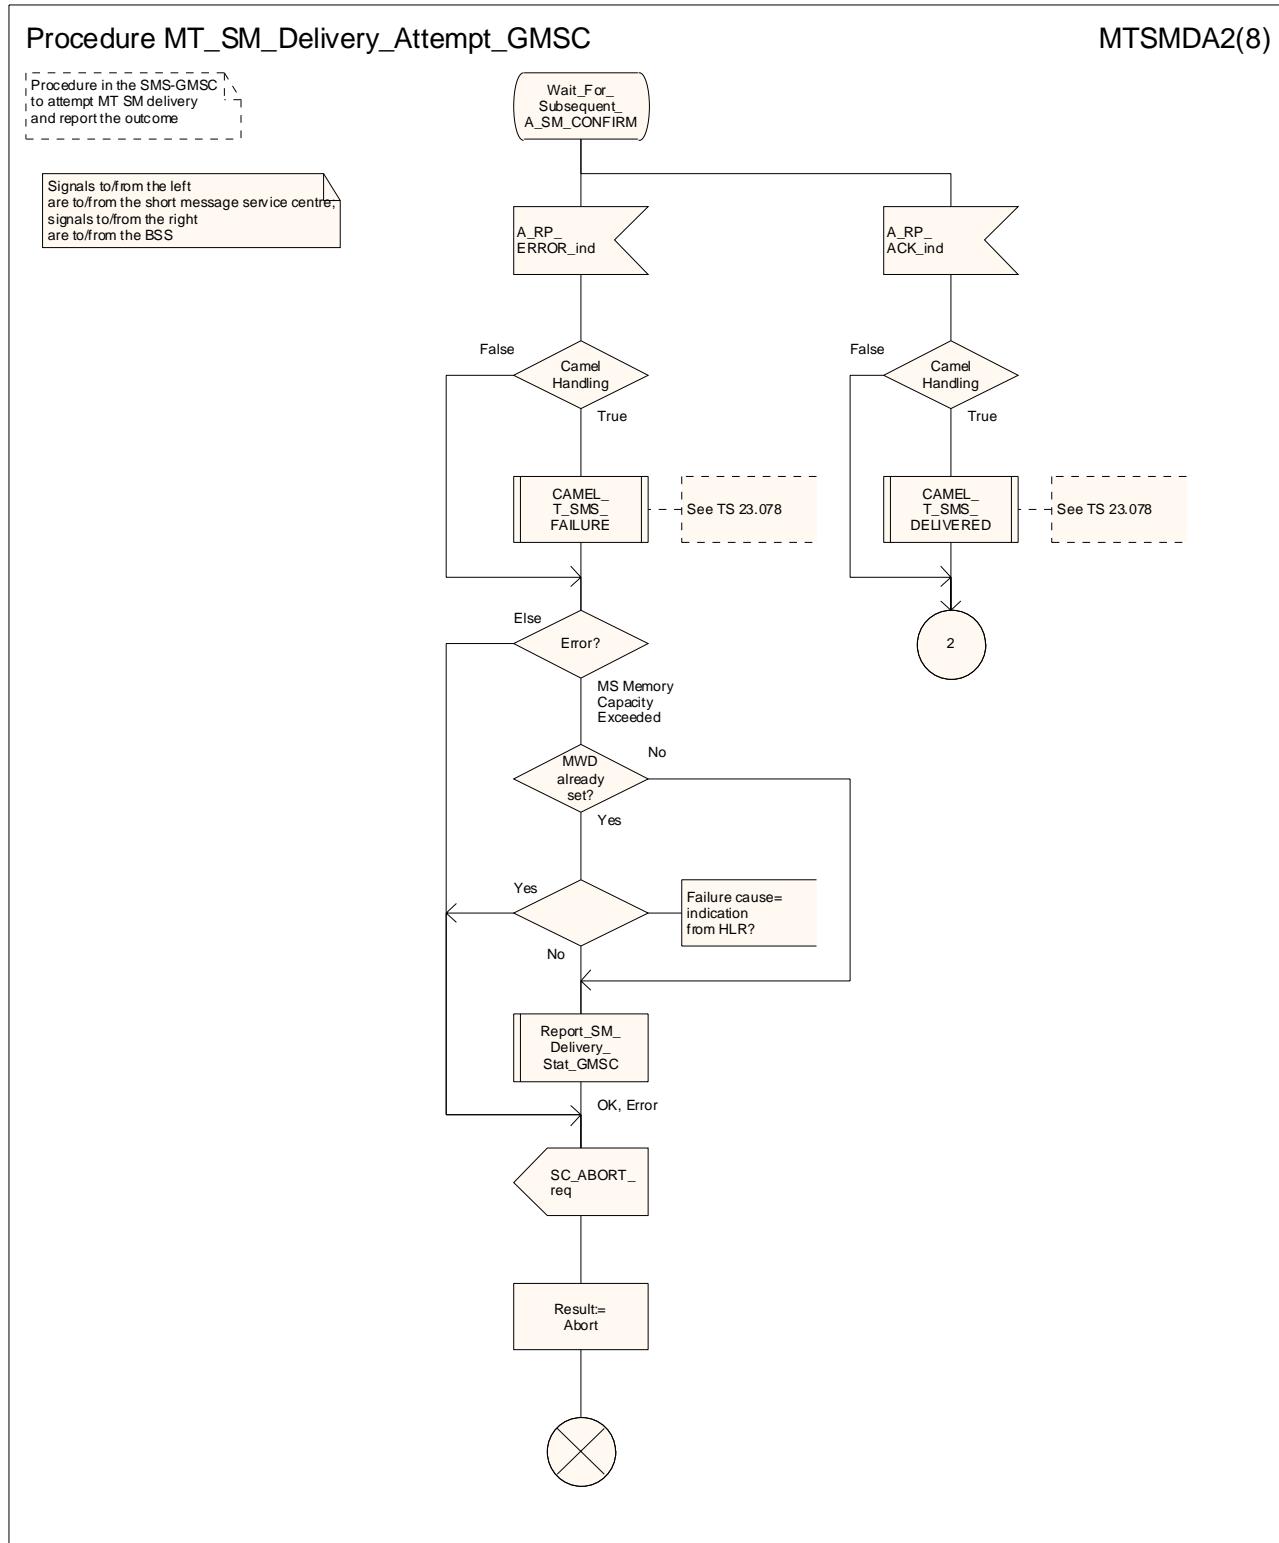


Figure 23.3/4 (sheet 2 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

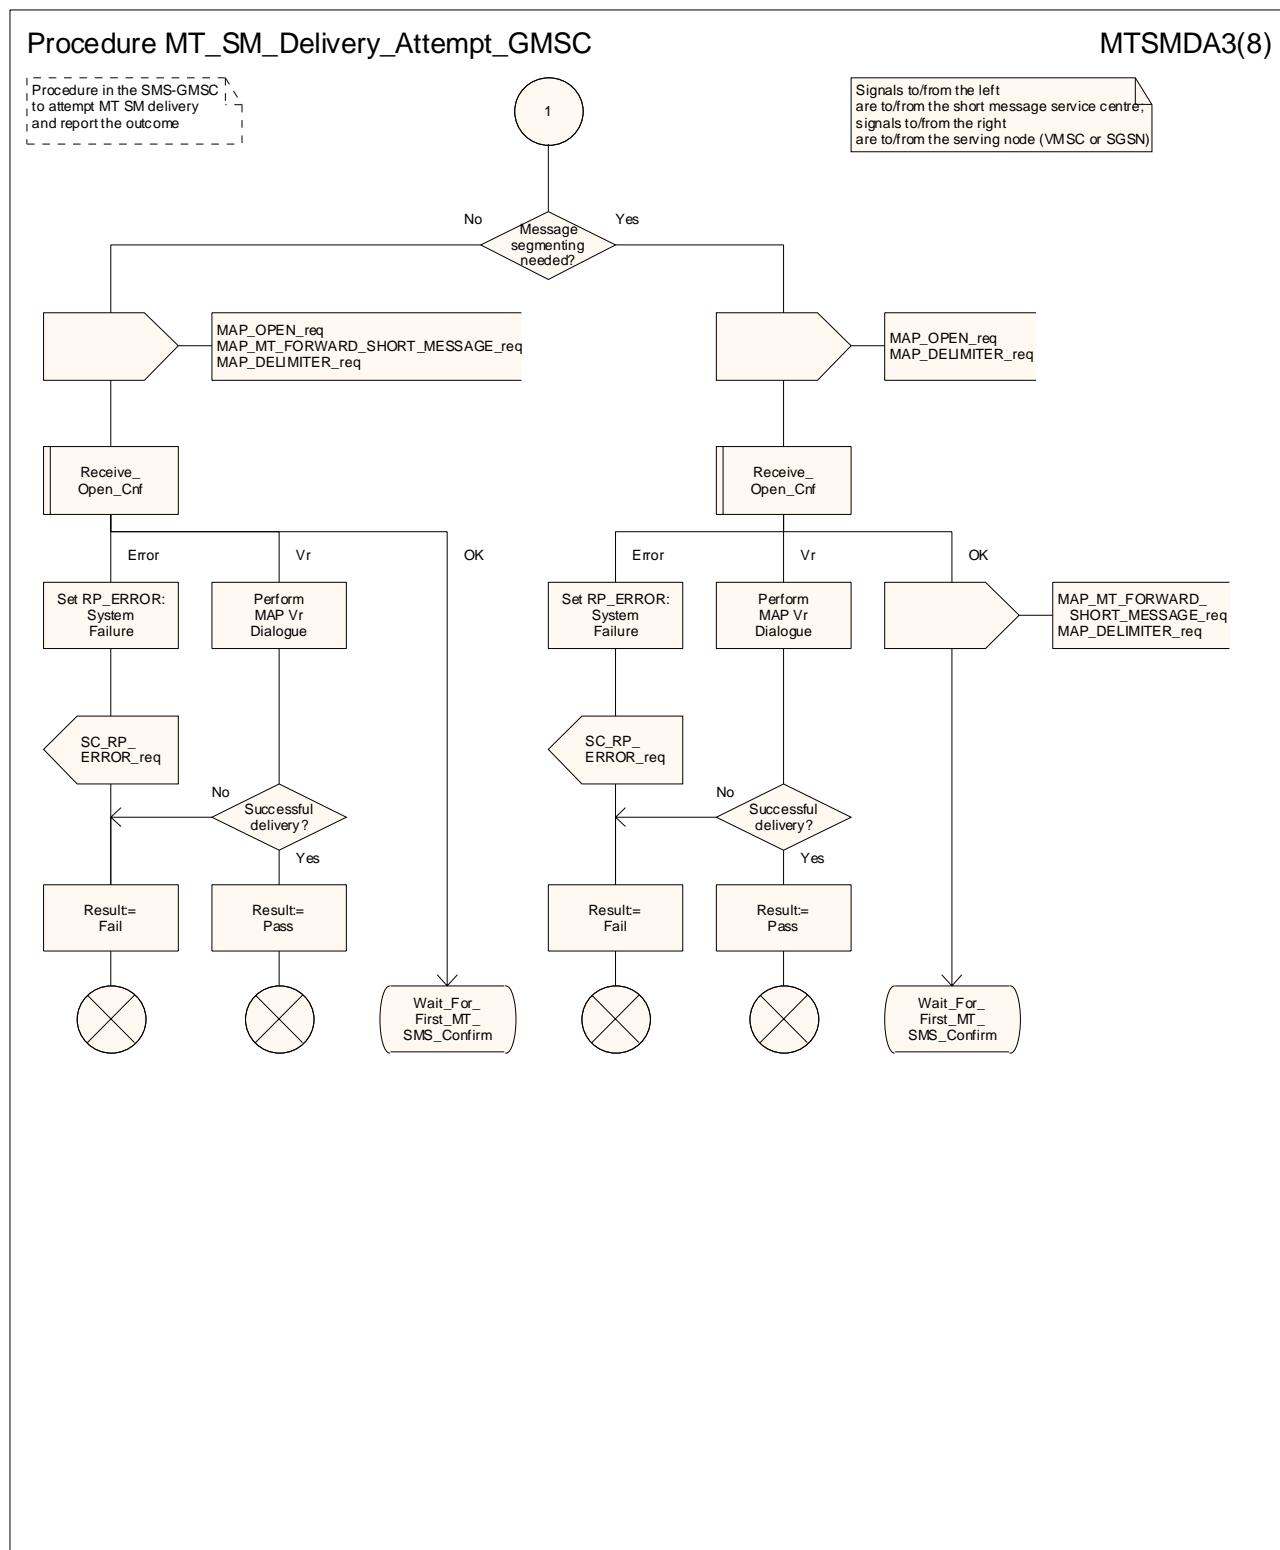


Figure 23.3/4 (sheet 3 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

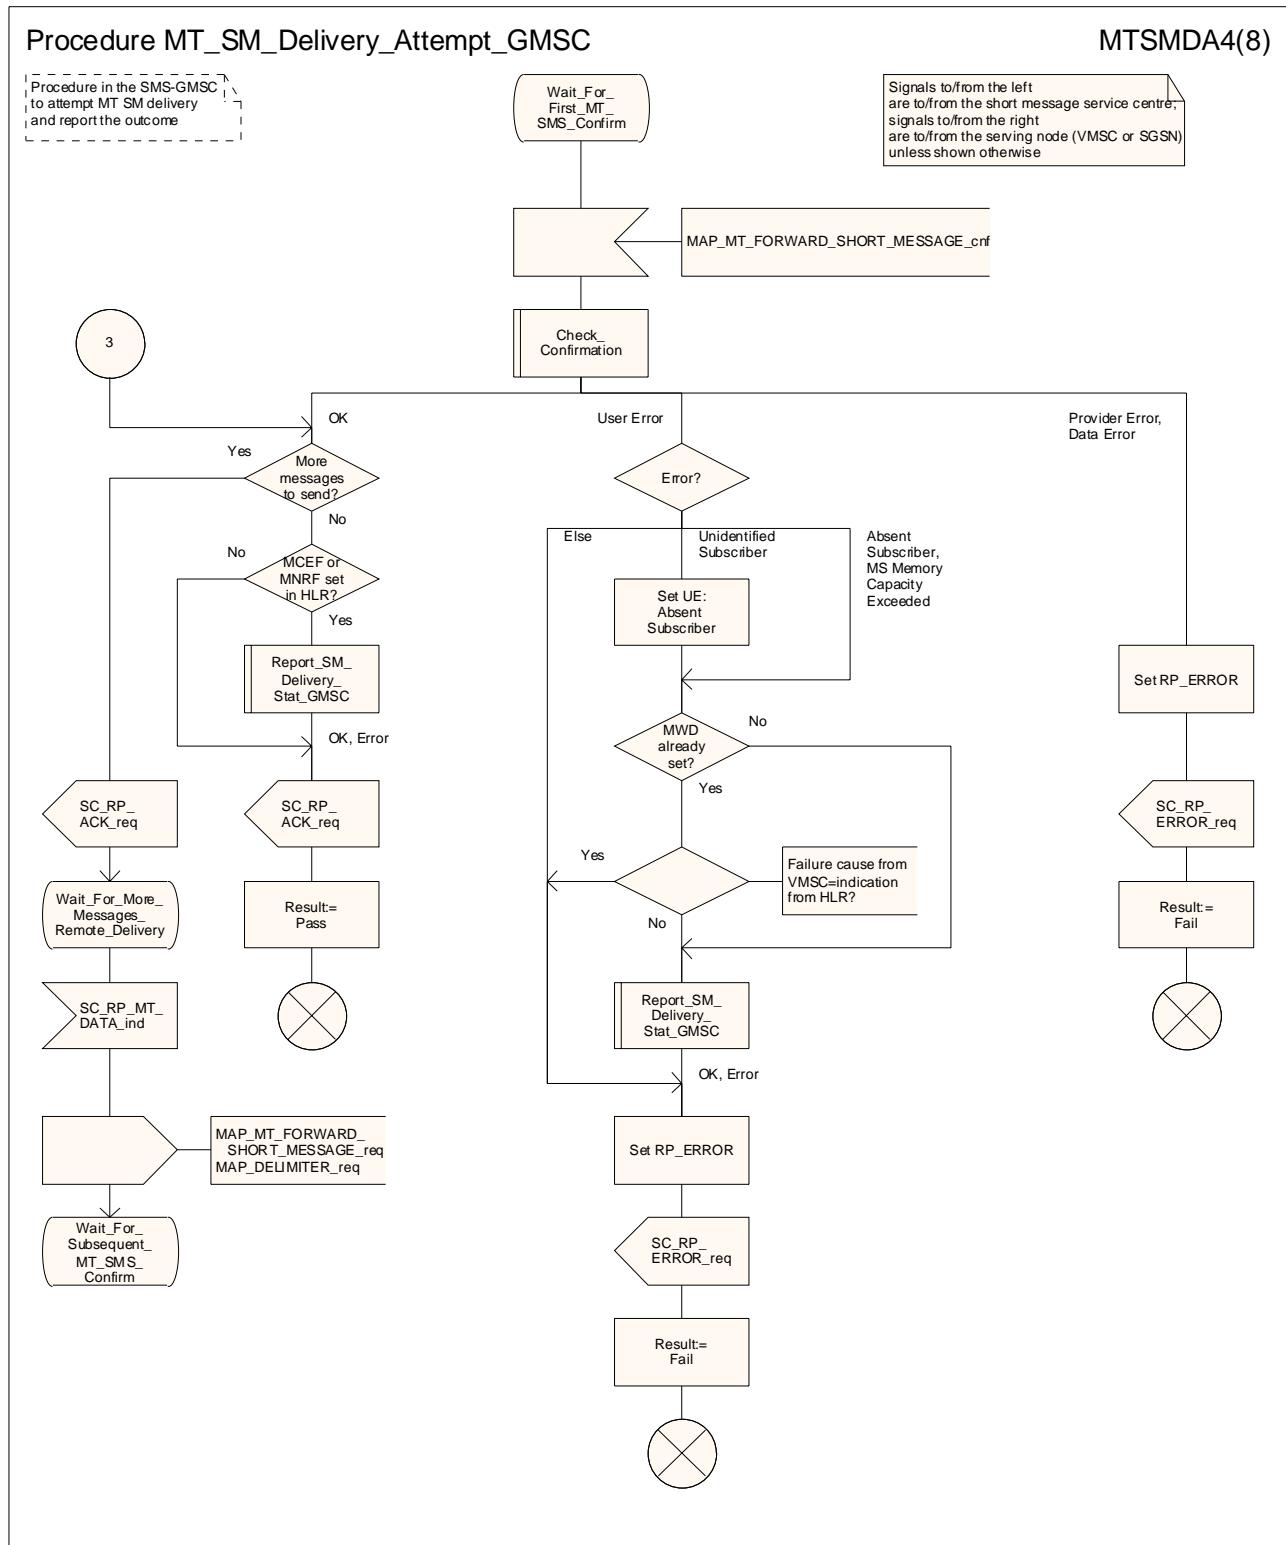


Figure 23.3/4 (sheet 4 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

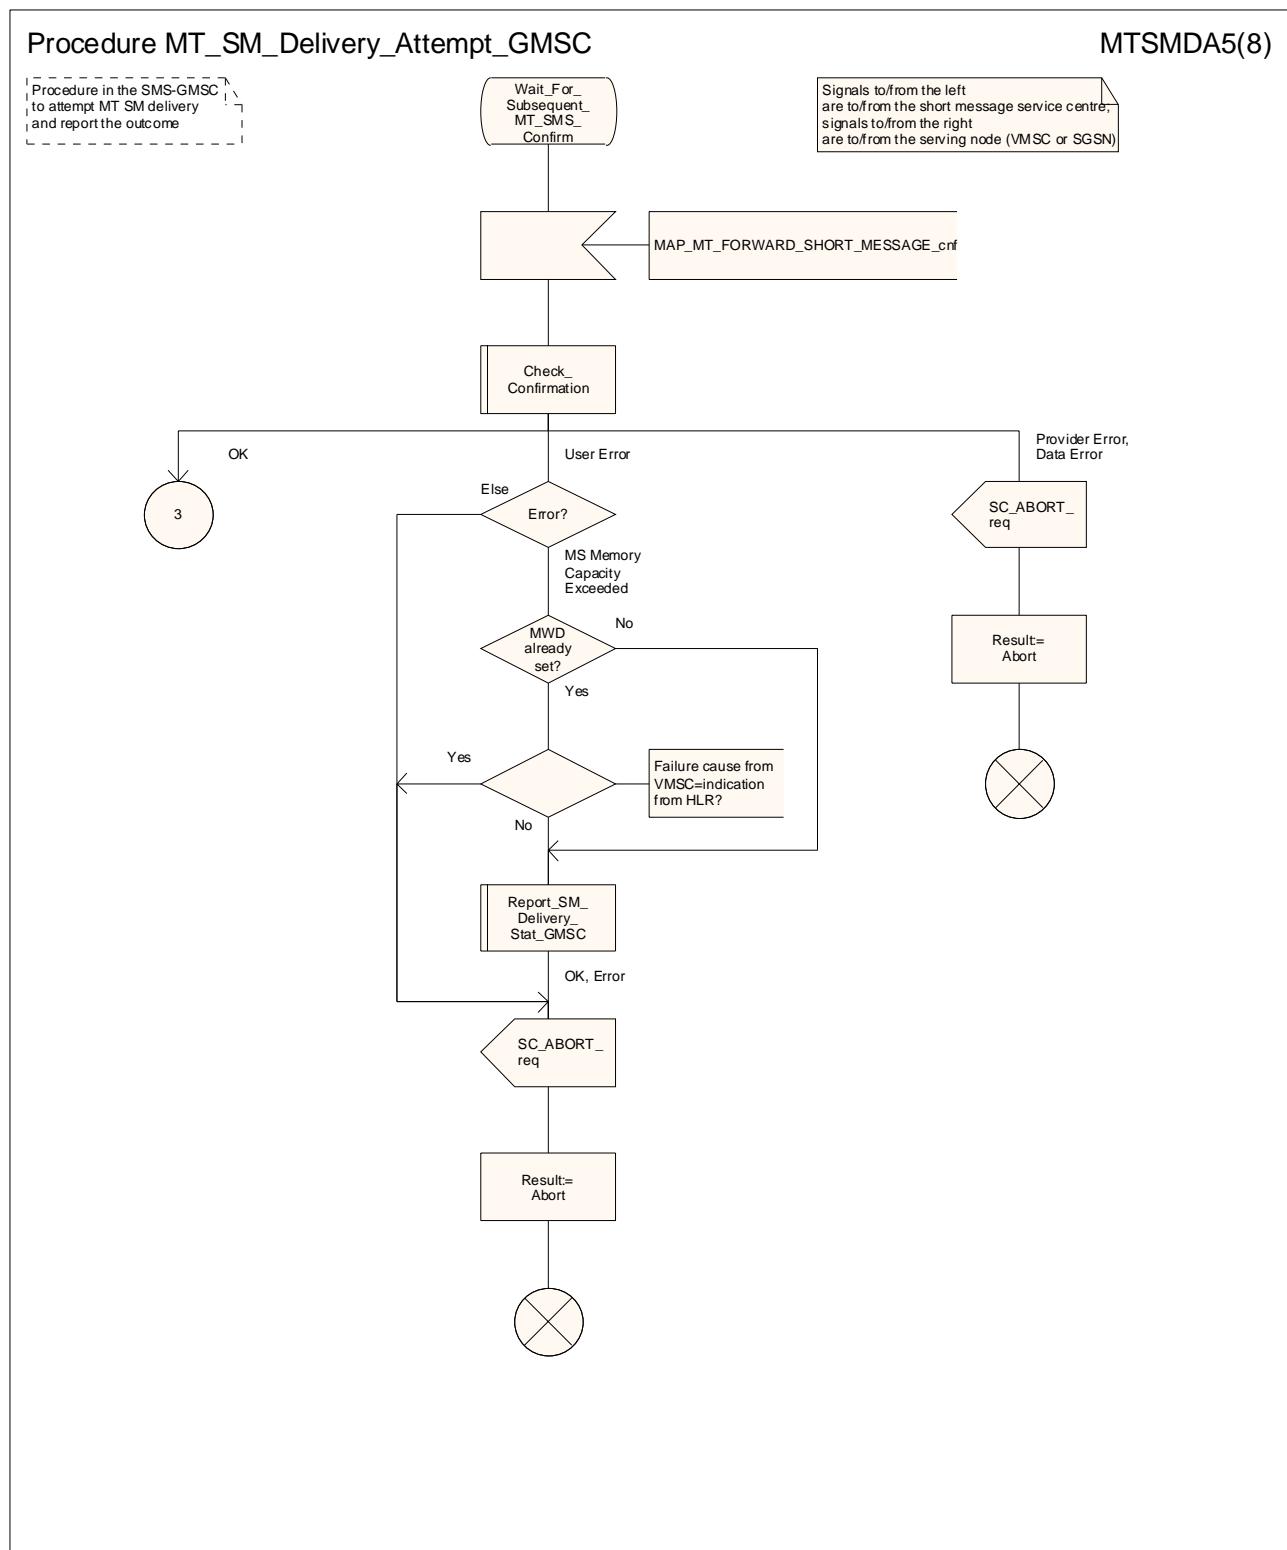


Figure 23.3/4 (sheet 5 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

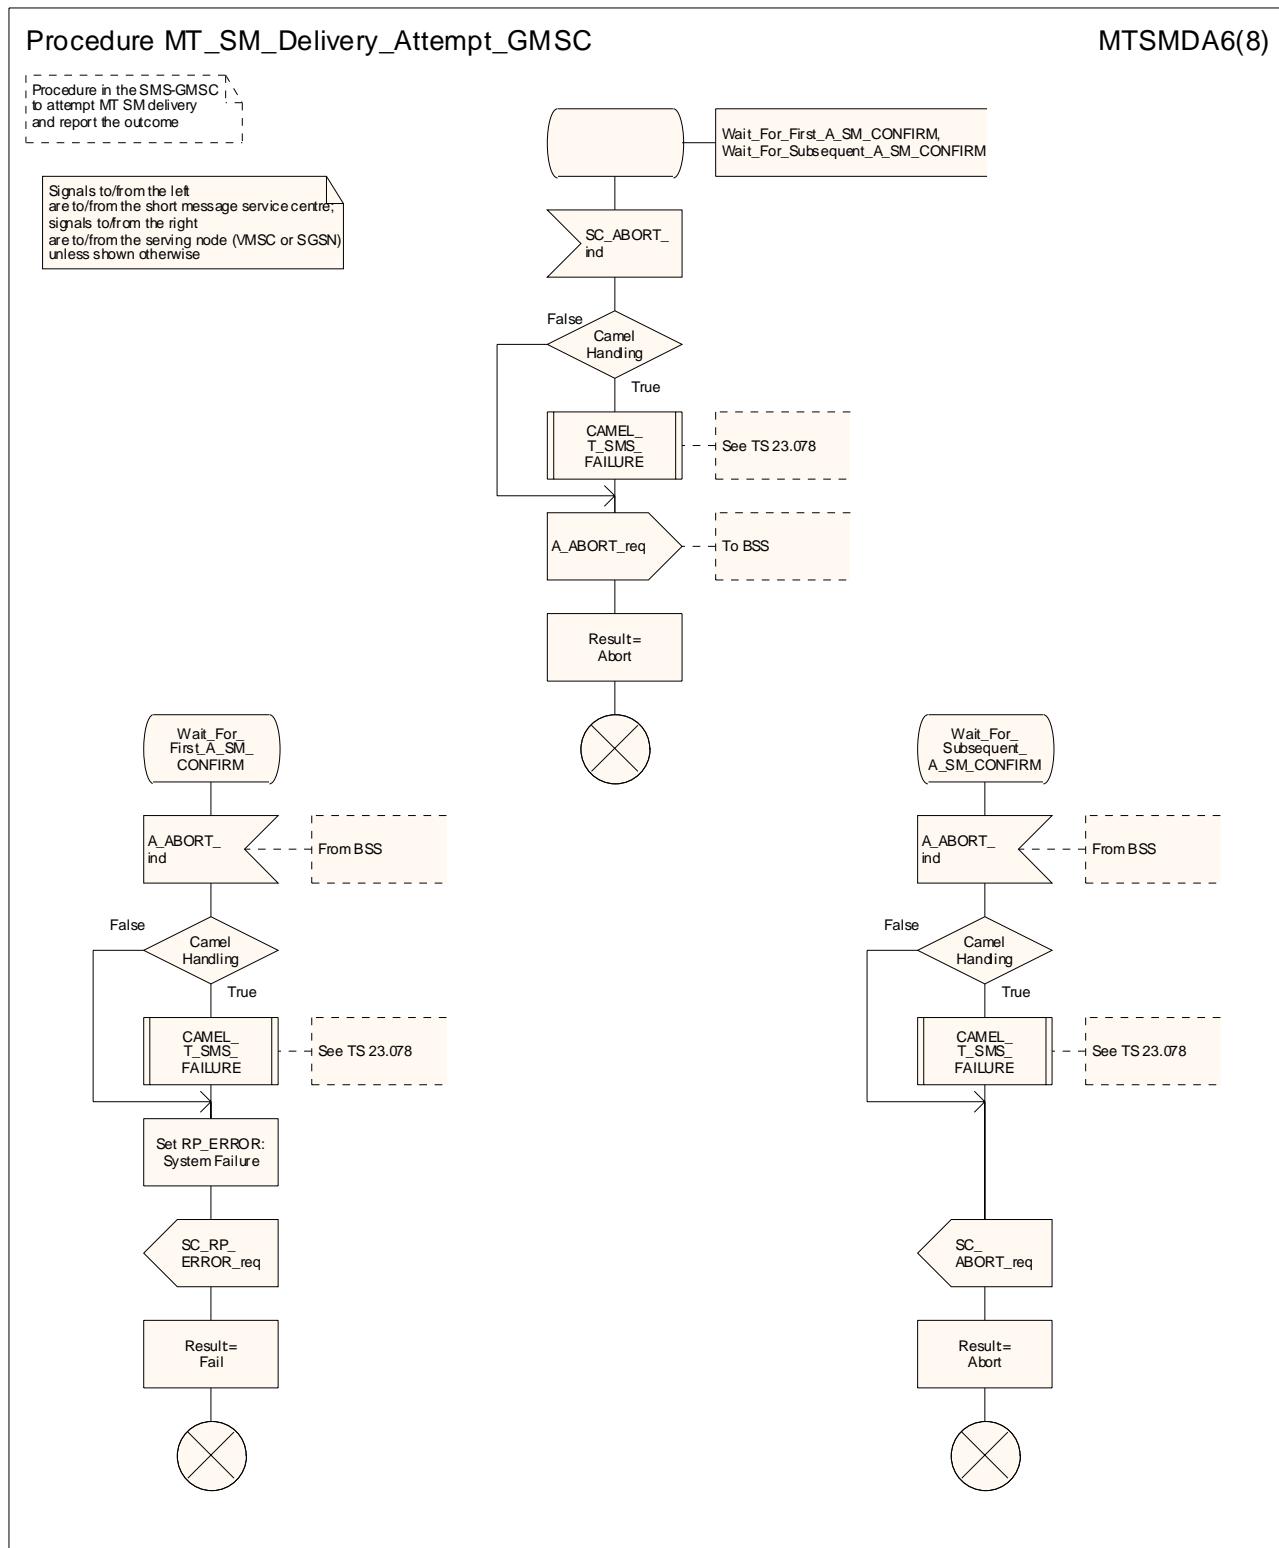


Figure 23.3/4 (sheet 6 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC


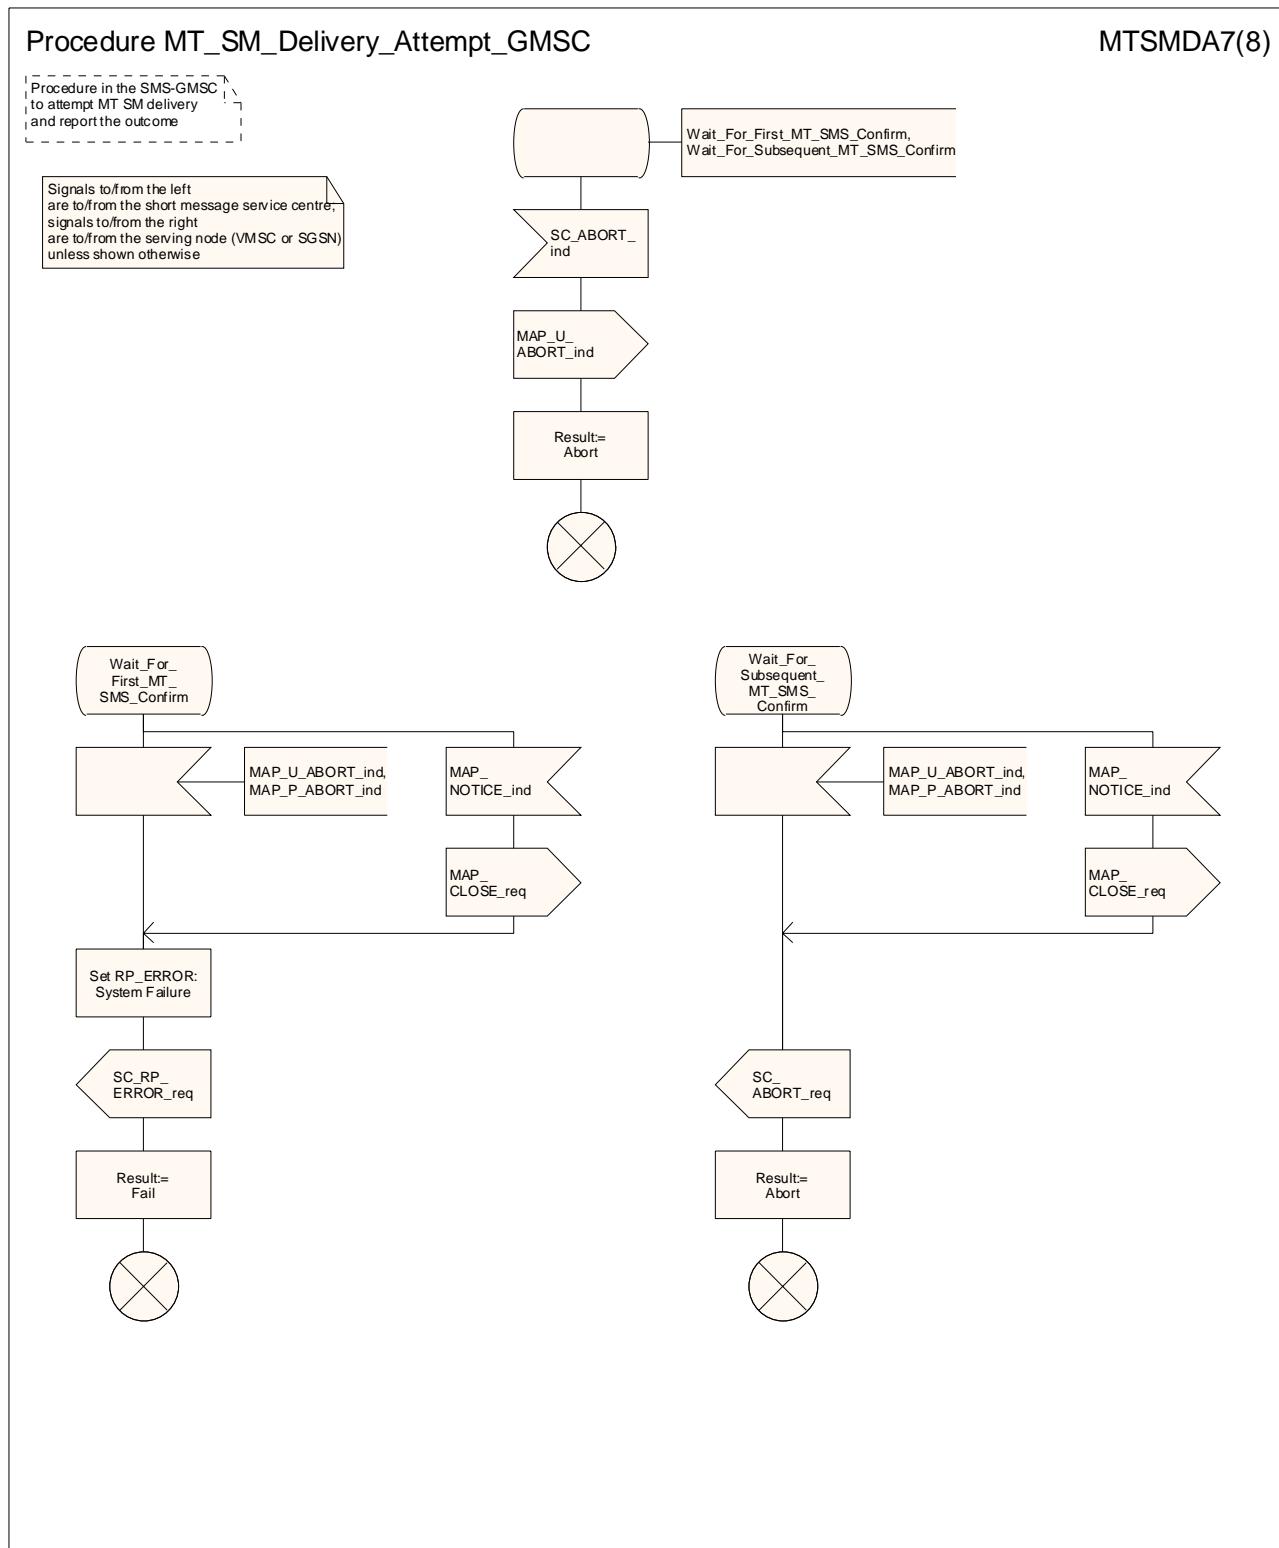


Figure 23.3/4 (sheet 7 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC

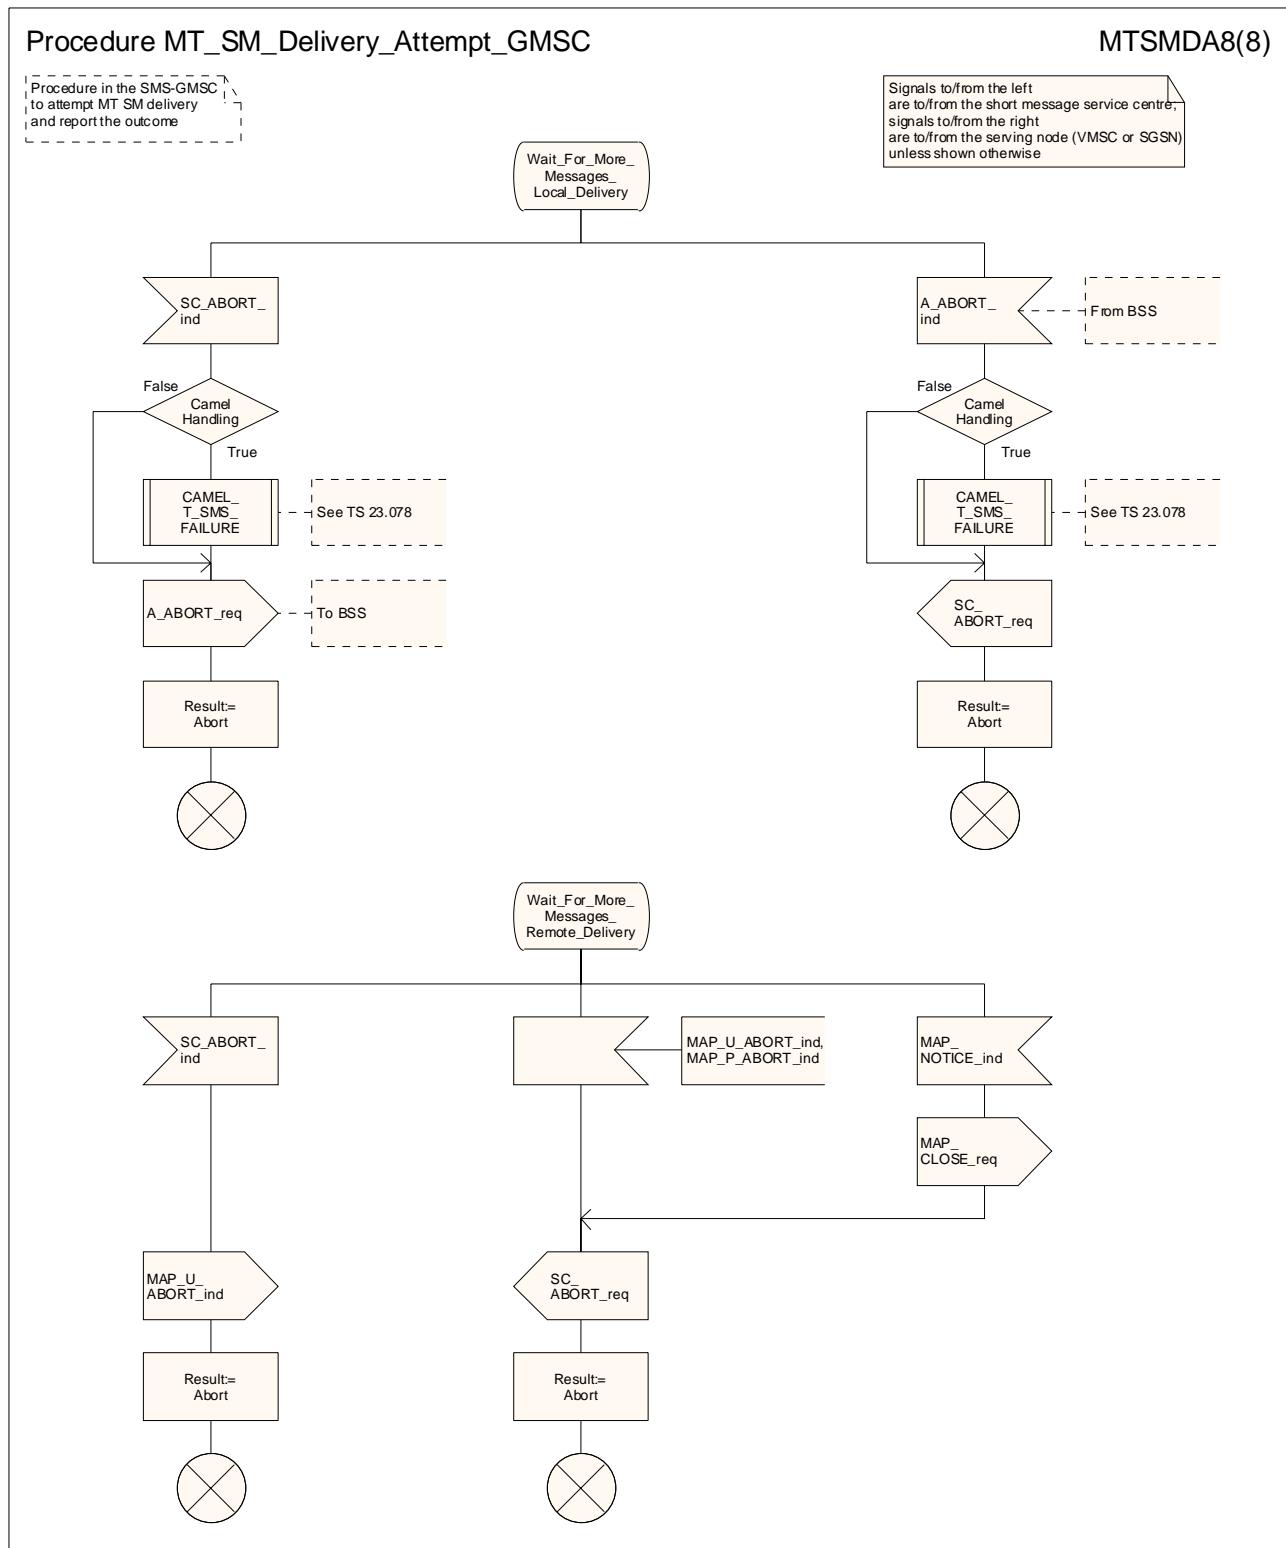

**Figure 23.3/4 (sheet 8 of 8): Procedure MT\_SM\_Delivery\_Attempt\_GMSC**

### 23.3.2 Procedures in the HLR

The process is triggered by a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication from the SMS-GMSC. For any of the following error cases, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the appropriate user error, closes the dialogue and terminates the process:

- if the indication is badly formed, the HLR returns the appropriate User Error;

- if the mobile subscriber is unknown, i.e. it cannot be identified from the MSISDN given, the HLR returns the User Error "Unknown subscriber";
- if the subscription does not include the MT SMS teleservice, the HLR returns the User Error "Teleservice not provisioned";
- if the short message transfer would contravene operator determined barring, the HLR returns the User Error "Call barred" with cause "Operator barring";
- if the short message transfer would contravene the "SM filtering by the HPLMN" function criteria, the HLR returns the User Error "Call barred" with cause "Unauthorised Message Originator". The definition of the filtering function is out of the scope of UMTS specifications. Filtering may be based on the SM-RP-SMEA information element if it is received from the SMS-GMSC;
- depending on the Network Access Mode ("Non-GPRS", "GPRS" or "Non-GPRS and GPRS"), the HLR behaves as follows:
  - if the Network Access Mode is "Non-GPRS", i.e. the subscriber is not a GPRS subscriber, then:
    - if the MS is not reachable in an MSC, i.e. no MSC identity is stored for the mobile subscriber or the "MSC Area Restricted Flag" is set or the "MS purged for non GPRS" flag is set, the HLR sets the MNRF and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber" with the appropriate diagnostic, i.e. "Deregistered in HLR for non GPRS", "Roaming Restricted" or "MS-Purged for non GPRS". The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
    - if the MSC where the subscriber is registered does not support MT SMS, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Facility not supported", closes the dialogue and terminates the process;
    - if the short message transfer would contravene operator determined barring, the HLR returns the User Error "Call barred" with cause "Operator barring";
    - if the short message transfer would contravene supplementary service barring, the HLR returns the User Error "Call barred" with cause "Barring service active";
    - if the MNRF is set, the HLR checks whether the SM-RP-Priority information element was present in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication. If the priority information element was present, the HLR sets the "mnrf-Set" and "mcef-Set" bits of the mw-Status parameter according to the state of the corresponding flags, and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the MSC number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information because the SM-RP-Priority is true". If the priority information element was not present, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber". If a reason for the subscriber's absence for non-GPRS is stored in the mobile not reachable reason (MNRR) in the subscriber data, the HLR includes this as the diagnostic for the "Absent subscriber" error. The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
    - if the MNRF is not set, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the MSC number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information – normal case".
  - if the Network Access Mode is "GPRS", i.e. the subscriber is a GPRS subscriber, then:
    - if the MS is not reachable in an SGSN, i.e. no MSC identity is stored for the mobile subscriber or the "SGSN Area Restricted Flag" is set or the "MS purged for GPRS" flag is set, the HLR sets the MNRG flag and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber" with the appropriate diagnostic. The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
    - if the SGSN where the subscriber is registered does not support MT SMS, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Facility not supported", closes the dialogue and terminates the process;

- if the short message transfer would contravene operator determined barring, the HLR returns the User Error "Call barred" with cause "Operator barring";
- if the MNRG flag is set, the HLR checks whether the SM-RP-Priority information element was present in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication. If the priority information element was present, the HLR sets the "mnrg-Set" and "mcef-Set" bits of the mw-Status parameter according to the state of the corresponding flags, and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the SGSN number as routeing information. If the SMS-GMSC did not indicate in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication that it supports GPRS functionality (i.e. it can handle two routeing addresses in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response), the HLR maps the state of the MNRG flag into the "mnrf-Set" bit of the mw-Status parameter.

**NOTE:** If the SMS-GMSC does not support GPRS functionality, it uses the protocol defined in the Release 96 version of the specification. The parameter "msc-Number" in "RoutingInfoForSM-Res" in the Release 96 version of the protocol definition corresponds to the parameter "networkNode-Number" in "RoutingInfoForSM-Res" in the Release 97 (and later) version of the protocol definition; therefore if the HLR populates the parameter "networkNode-Number" with the SGSN number, the Release 96 SMS-GMSC will interpret the SGSN number as an MSC number. If the HLR populates the "gprsNodeIndicator" parameter in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response, a Release 96 SMS-GMSC will silently discard the parameter.

The HLR then continues processing as described below under the heading "Return of Routeing Information because the SM-RP-Priority is true";

- if the priority information element was not present, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber". If a reason for the subscriber's absence for GPRS is stored in the mobile not reachable reason (MNRR) in the subscriber data, the HLR includes this as the diagnostic for the "Absent subscriber" error. The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
- if the MNRG flag is not set, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the SGSN number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information – normal case".
- if the Network Access Mode is "Non-GPRS and GPRS", i.e. the subscriber is a non-GPRS and GPRS subscriber, then:
  - the HLR checks whether the SMS-GMSC supports GPRS functionality, i.e. it can handle two routeing addresses in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response;
  - if the SMS-GMSC does not support GPRS functionality then:
    - if the subscription option for MT SMS delivery when the SMS-GMSC does not support GPRS is set to "Delivery via the MSC", the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "Non-GPRS";
    - if the subscription option for MT SMS delivery when the SMS-GMSC does not support GPRS is set to "Delivery via the SGSN", the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "GPRS".
  - if the SMS-GMSC supports GPRS functionality then:
    - if the MS is not reachable in an MSC (see the definition above under Network Access Mode "Non-GPRS") and not reachable in an SGSN (see the definition above under Network Access Mode "GPRS"), the HLR sets the MNRF and the MNRG flag and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber" with the appropriate diagnostic. The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
    - if the MS is not reachable in an SGSN (see the definition above under Network Access Mode "GPRS") but is reachable in an MSC, the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "Non-GPRS";

- if the MS is not reachable in an MSC (see the definition above under Network Access Mode "Non-GPRS") but is reachable in an SGSN, the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "GPRS";
- if the MS is reachable in both an MSC and an SGSN, the HLR continues as described below;
- if neither the MSC nor the SGSN where the subscriber is registered supports MT SMS, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Facility not supported", closes the dialogue and terminates the process;
- if only the MSC where the subscriber is registered supports MT SMS, the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "Non-GPRS";
- if only the SGSN where the subscriber is registered supports MT SMS, the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "GPRS";
- if both the MSC and the SGSN where the subscriber is registered support MT SMS, the HLR checks whether the short message transfer would contravene operator determined barring or supplementary service barring.
- if the short message transfer would contravene operator determined barring, the HLR returns the User Error "Call barred" with cause "Operator barring";
- if the short message transfer would contravene supplementary service barring, the HLR processes the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication as described above for Network Access Mode "Non-GPRS";

**NOTE:** supplementary service barring is specified to apply only for SMS transfer via an MSC, not for SMS transfer via an SGSN.

- if the short message transfer is not prevented by operator determined barring or supplementary service barring, the HLR checks the states of the MNRF and the MNRG flag, and whether the SM-RP-Priority information element was present in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM indication.
- if both the MNRF and the MNRG flag are set and the priority information element was absent, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the User Error "Absent subscriber". If a reason for the subscriber's absence for non-GPRS or GPRS is stored in the mobile not reachable reason (MNRR) in the subscriber data, the HLR includes this as the diagnostic for the "Absent subscriber" error. The HLR then continues processing as described below under the heading "Addition of the Service Centre Address to the MWD list";
- if one or both of the MNRF and the MNRG flag is set and the priority information element was present, the HLR sets the "mnrf-Set", "mnrng-Set" and "mcef-Set" bits of the mw-Status parameter according to the state of the corresponding flags, and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the MSC number and SGSN number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information because the SM-RP-Priority is true";
- if the MNRG flag is set but the priority information element was absent, the HLR sets the "mnrf-Set", "mnrng-Set" and "mcef-Set" bits of the mw-Status parameter according to the state of the corresponding flags, and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the MSC number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information because the SM-RP-Priority is true";
- if the MNRF is set but the priority information element was absent, the HLR sets the "mnrf-Set", "mnrng-Set" and "mcef-Set" bits of the mw-Status parameter according to the state of the corresponding flags, and returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the SGSN number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information because the SM-RP-Priority is true";

- if neither the MNRF nor the MNRG flag is set, the HLR returns a MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response containing the MSC number and SGSN number as routeing information. The HLR then continues processing as described below under the heading "Return of Routeing Information – normal case".

#### Addition of the Service Centre Address to the MWD list

The HLR checks whether the service centre address is included in the Message Waiting Data (MWD) list.

- if the service centre address is not in the MWD list, the HLR attempts to add the service centre address. If it was not possible to add the service centre address to the MWD list (e.g. because the MWD list was full), the HLR sets the MWD status to show that the service centre address was not included, otherwise the HLR sets the MWD status to show that the service centre address was included;
- if the service centre address is in the MWD list, the HLR sets the MWD status to show that the service centre address was included.

The HLR then checks whether the MSISDN used to address the destination subscriber is the same as the MSISDN-Alert. If the MSISDN used to address the destination subscriber is not the same as the MSISDN-Alert, the HLR sets the MSISDN-Alert parameter in the MAP\_INFORM\_SERVICE\_CENTRE request.

The HLR then sends a MAP\_INFORM\_SERVICE\_CENTRE request to the SMS-GMSC, closes the MAP dialogue and terminates the process.

#### Return of Routeing Information because the SM-RP-Priority is true

The HLR checks whether the service centre address is included in the Message Waiting Data (MWD) list.

- if the service centre address is not in the MWD list, the HLR sets the MWD status to show that the service centre address was not included;
- if the service centre address is in the MWD list, the HLR sets the MWD status to show that the service centre address was included.

The HLR then checks whether the MSISDN used to address the destination subscriber is the same as the MSISDN-Alert. If the MSISDN used to address the destination subscriber is not the same as the MSISDN-Alert, the HLR sets the MSISDN-Alert parameter in the MAP\_INFORM\_SERVICE\_CENTRE request.

The HLR then sends a MAP\_INFORM\_SERVICE\_CENTRE request to the SMS-GMSC, closes the MAP dialogue and terminates the process.

#### Return of Routeing Information – normal case


The HLR checks the MCEF.

- if the MCEF is set, the HLR:
  - sets the "mcef-Set" bit of the mw-Status parameter;
  - checks whether the MSISDN used to address the destination subscriber is the same as the MSISDN-Alert. If the MSISDN used to address the destination subscriber is not the same as the MSISDN-Alert, the HLR sets the MSISDN-Alert parameter in the MAP\_INFORM\_SERVICE\_CENTRE request;
  - sends a MAP\_INFORM\_SERVICE\_CENTRE request to the SMS-GMSC, closes the MAP dialogue and terminates the process.
- if the MCEF is not set, the HLR:
  - checks whether the MSISDN used to address the destination subscriber is the same as the MSISDN-Alert. If the MSISDN used to address the destination subscriber is not the same as the MSISDN-Alert, the HLR sends to the SMS-GMSC a MAP\_INFORM\_SERVICE\_CENTRE request including the MSISDN-Alert parameter;
  - closes the MAP dialogue and terminates the process.

### Use of LMSI

If the HLR received a LMSI from the VLR at location updating, it shall include the LMSI in the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response only if the MAP\_SEND\_ROUTING\_INFO\_FOR\_SM response also includes the MSC number.

The mobile terminated short message transfer process in the HLR is shown in figure 23.3/5.

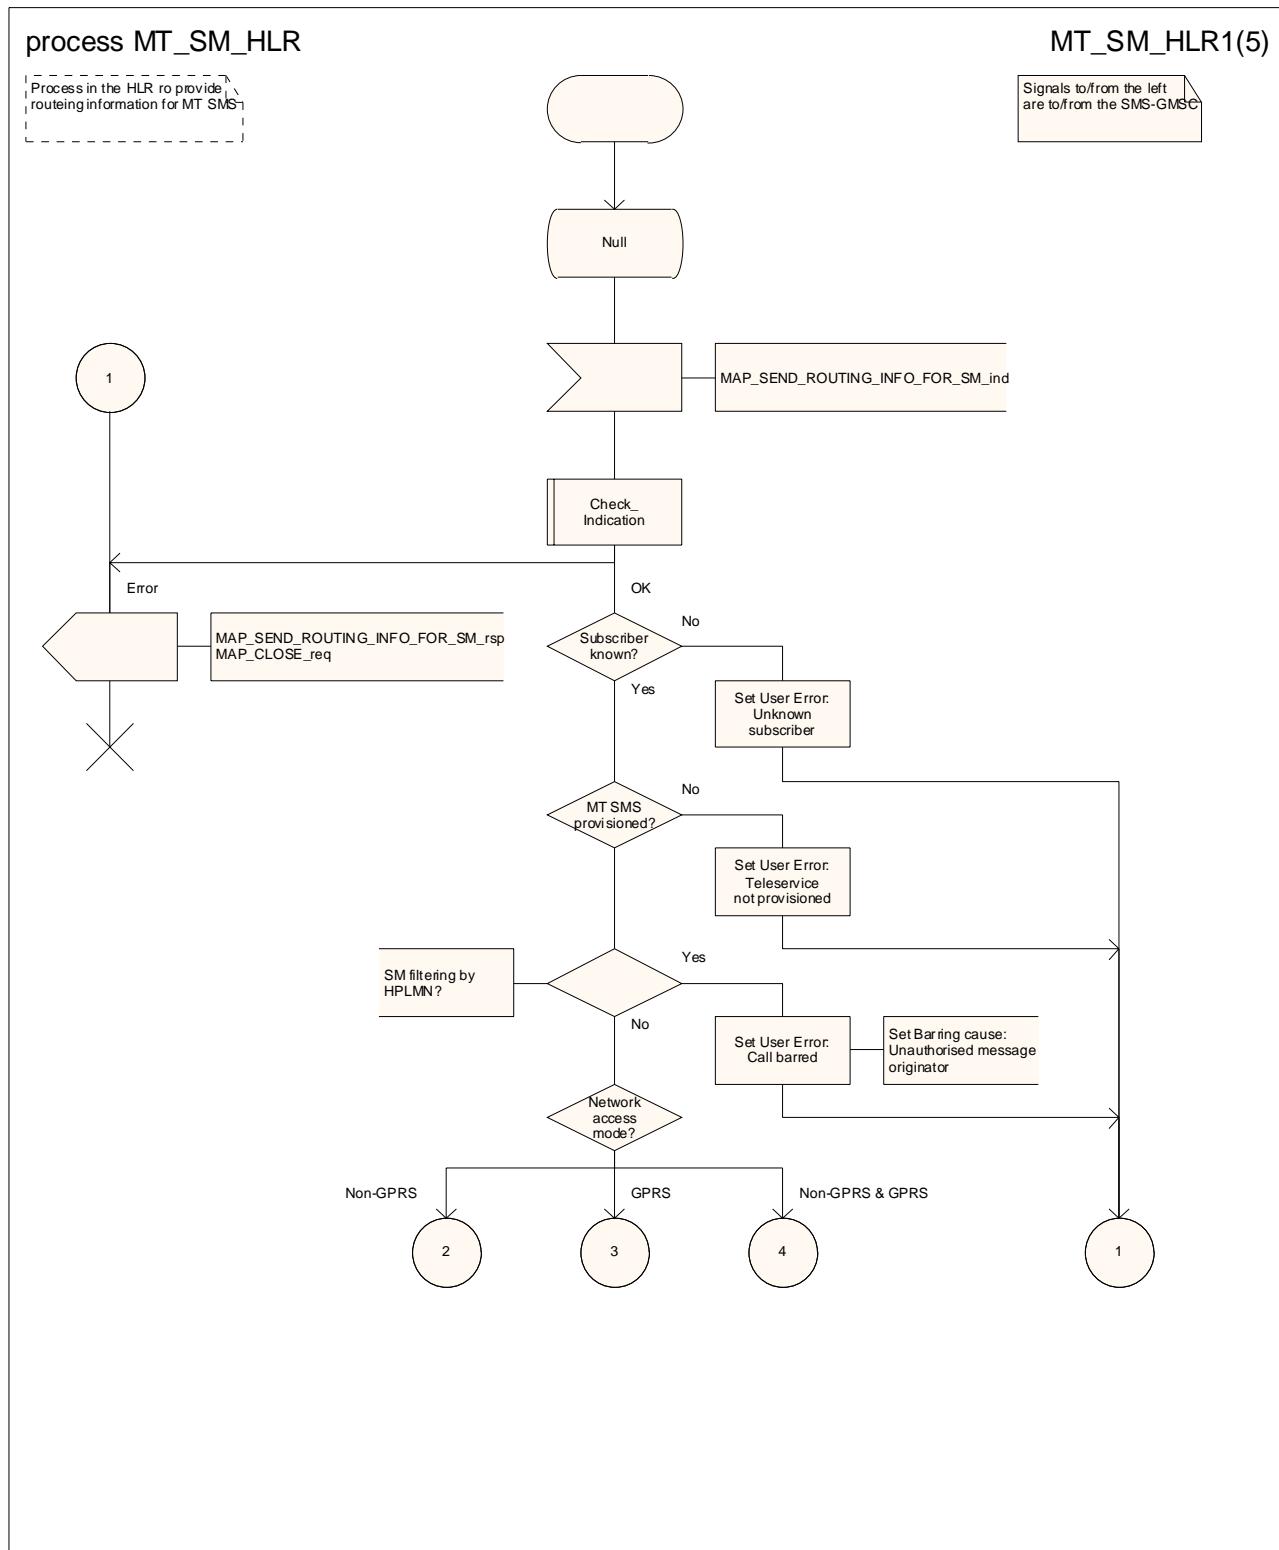

**Figure 23.3/5 (sheet 1 of 5): Process MT\_SM\_HLR**

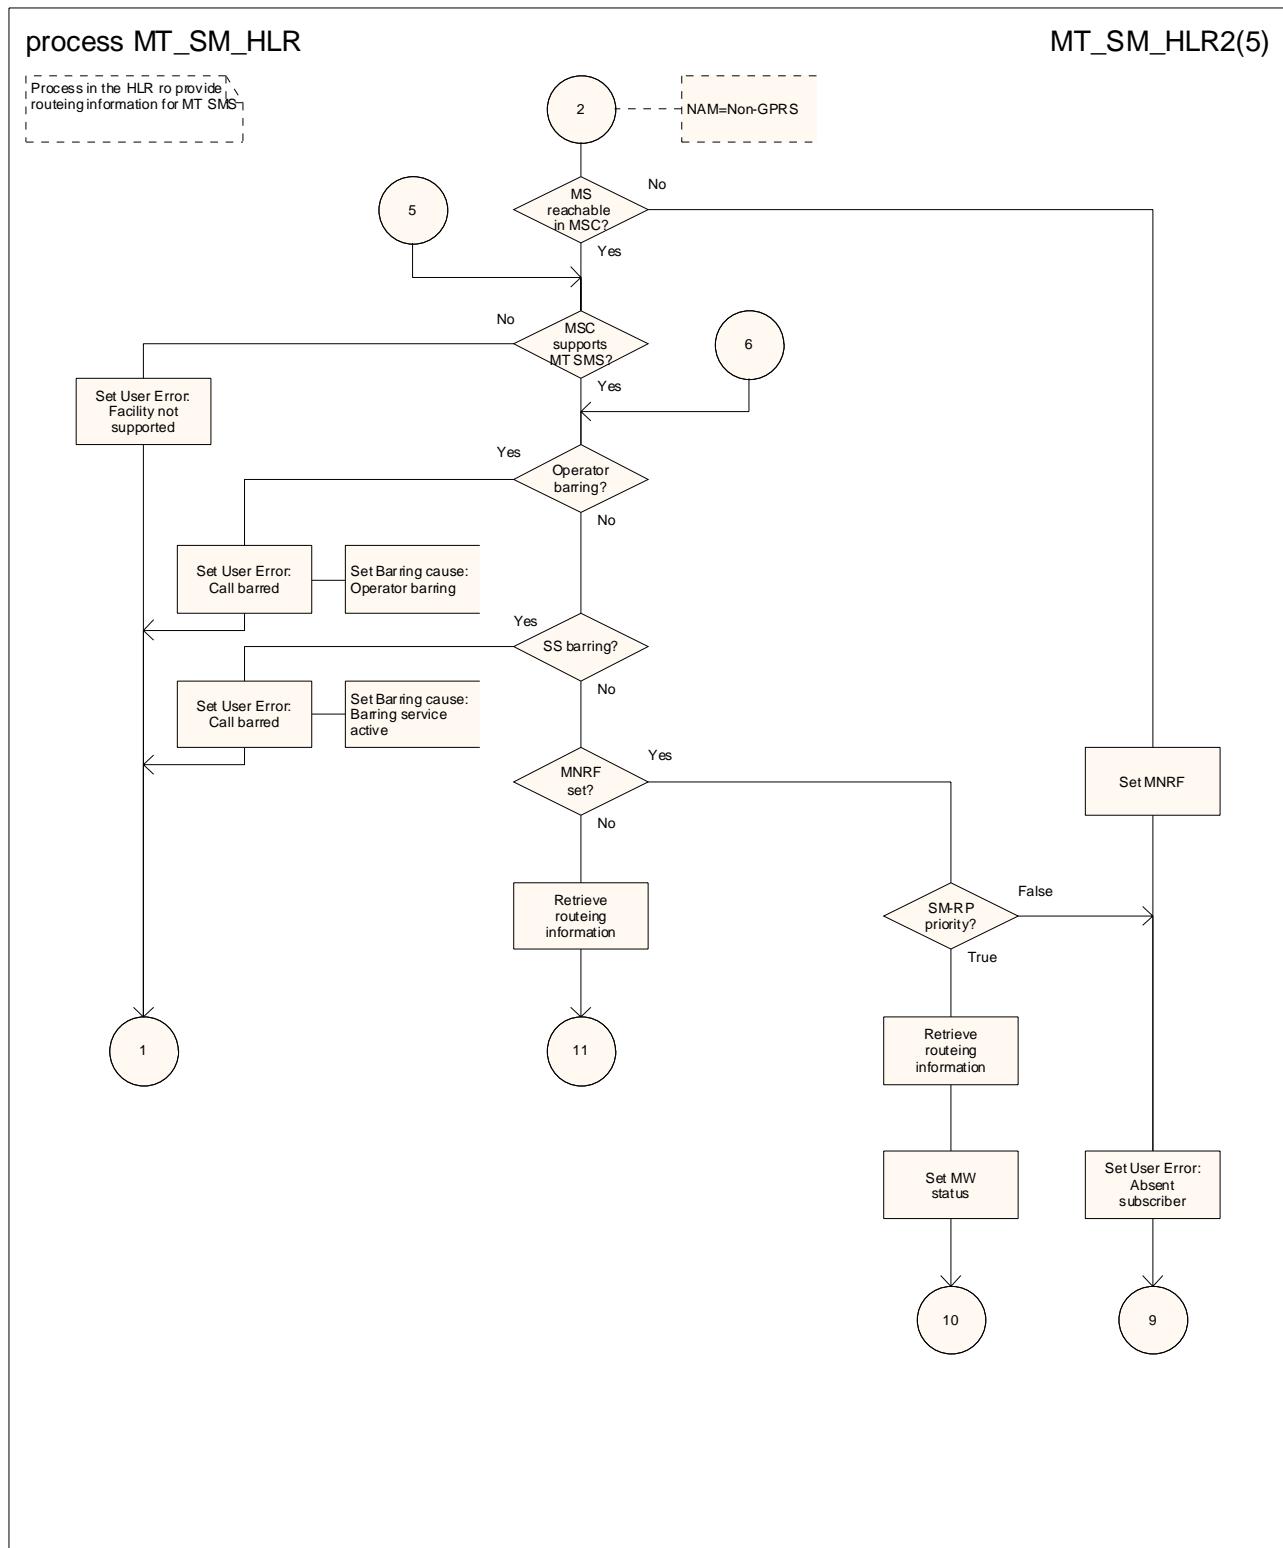


Figure 23.3/5 (sheet 2 of 5): Process MT\_SM\_HLR


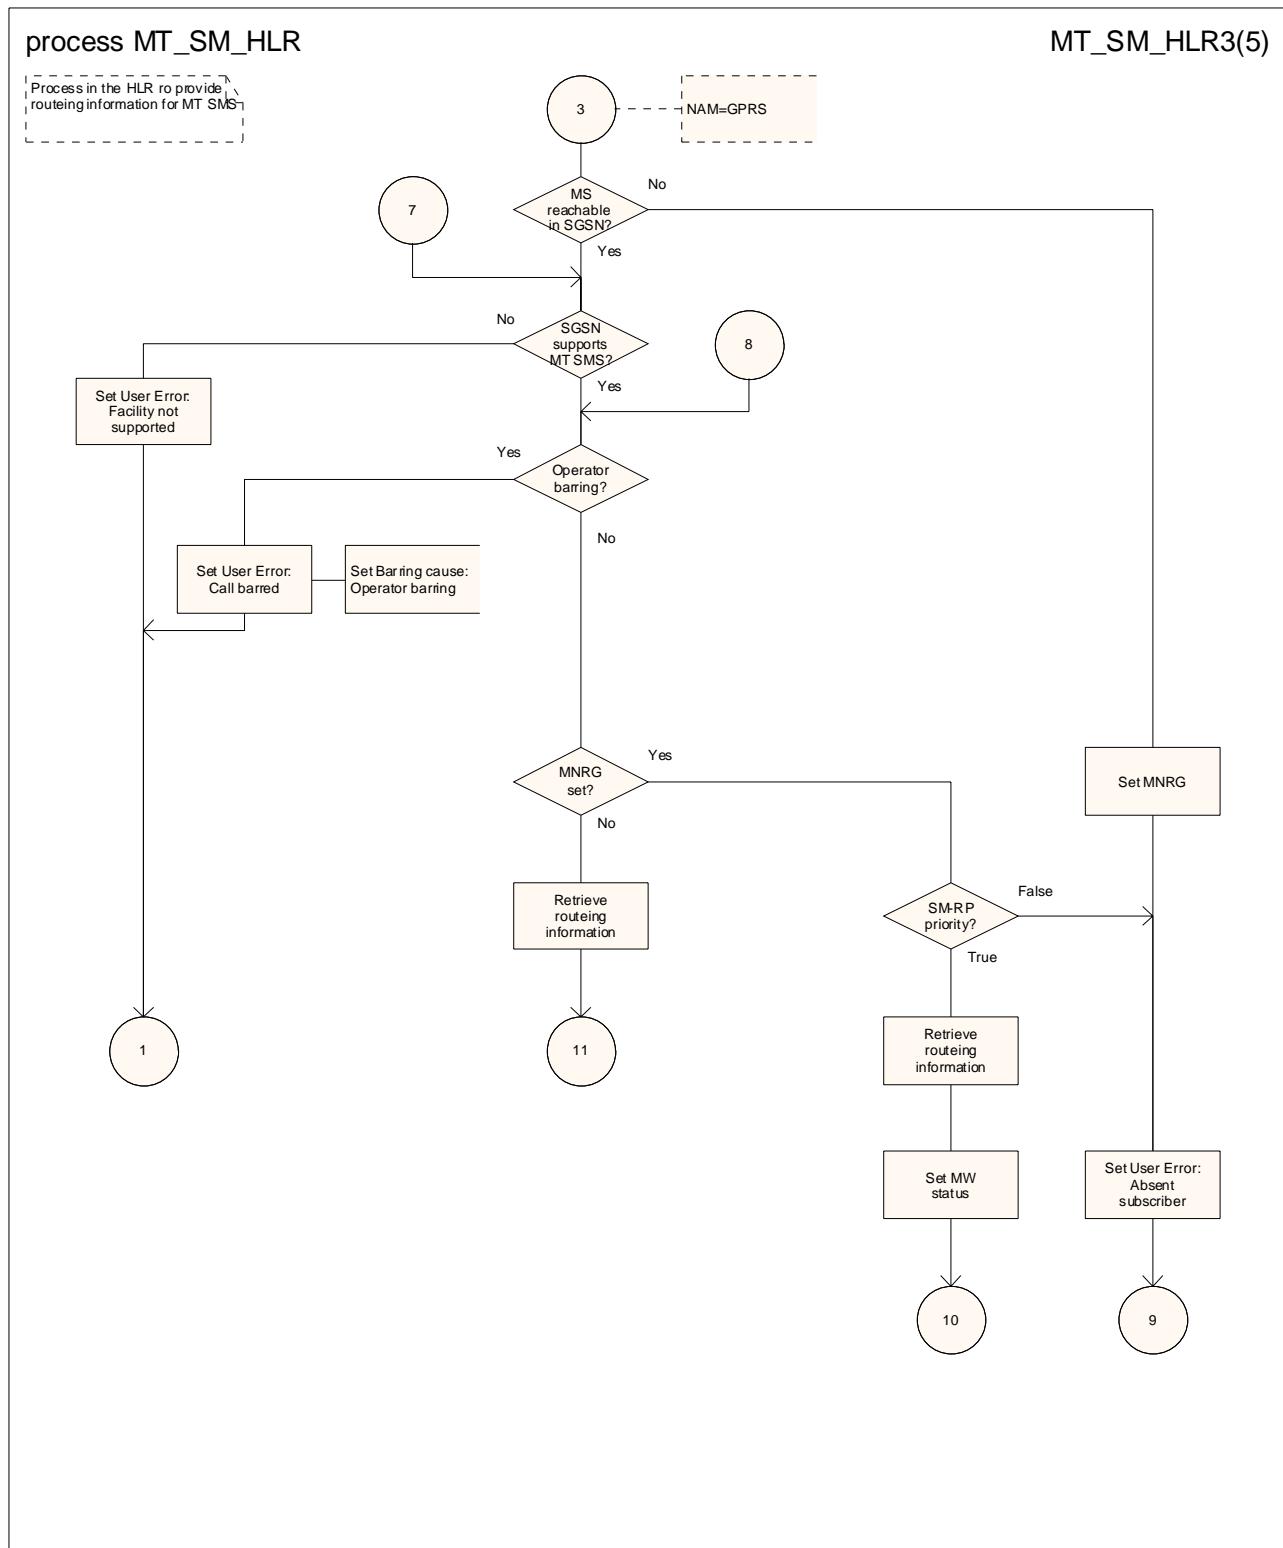


Figure 23.3/5 (sheet 3 of 5): Process MT\_SM\_HLR

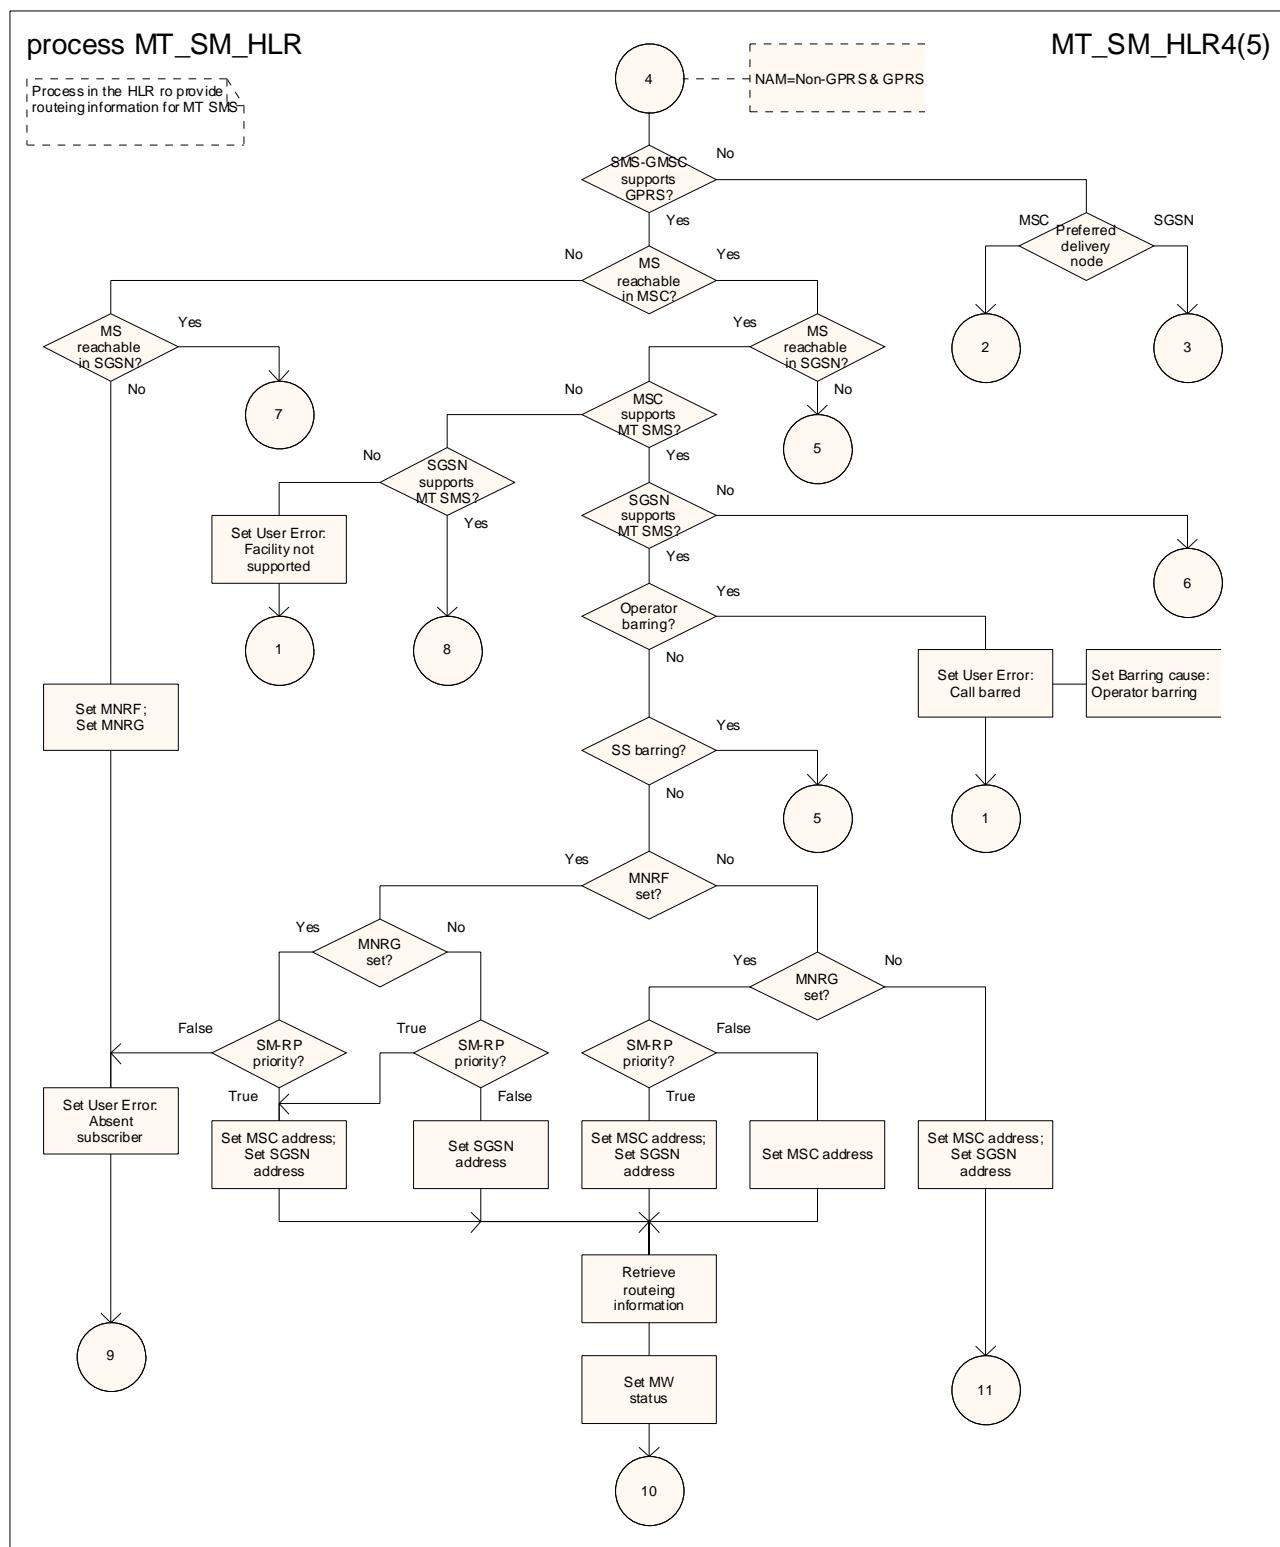

**Figure 23.3/5 (sheet 4 of 5): Process MT\_SM\_HLR**

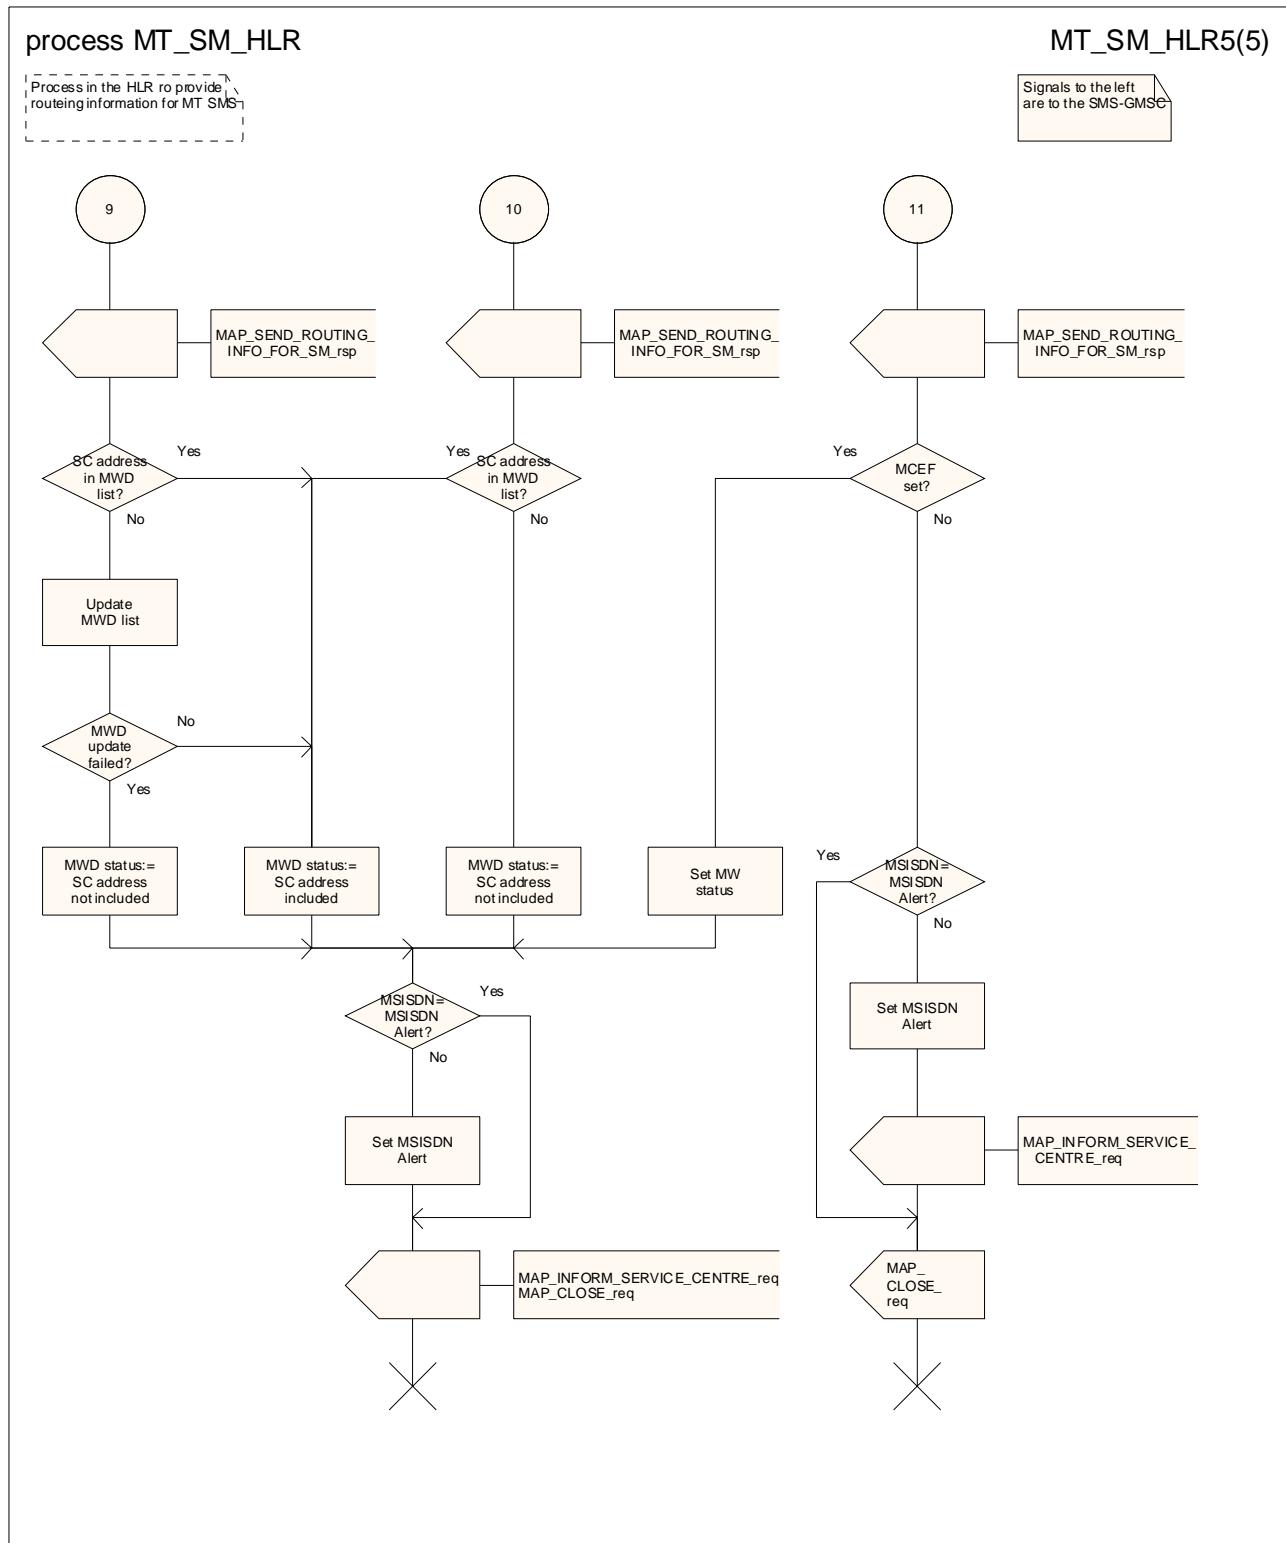


Figure 23.3/5 (sheet 5 of 5): Process MT\_SM\_HLR

### 23.3.3 Procedure in the Serving MSC

Any CAMEL-specific handling defined in this subclause is omitted if the MSC does not support CAMEL control of MT SMS, or if the subscriber does not have a subscription for CAMEL control of MT SMS.

The process is triggered by a dialogue opening request with the application context shortMsgMT-RelayContext.

- if the macro Receive\_Open\_Ind takes the "Error" exit, the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "Vr" exit, the MSC handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "OK" exit, the MSC checks whether the dialogue opening request included a destination reference. If a destination reference was included, the MSC stores it and waits for a service primitive.
  - if the dialogue with the SMS-GMSC fails, the process returns to the Null state;
  - if the next primitive received is a MAP\_DELIMITER indication, the MSC returns a MAP\_DELIMITER request, and waits for a service primitive;
  - if the next primitive received is a MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication, the MSC checks the indication.
    - if the indication is badly formed, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
    - if the indication is OK, the MSC invokes the macro MT\_SM\_Transfer\_MSC to transfer the short message to the MS.
      - if the macro takes the "Release SMS" exit, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
      - if the macro takes the "Error" exit, the MSC reports the delivery failure to the gsmSCF (if CAMEL handling was invoked) and returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
      - if the macro takes the "Abort" exit, the MSC reports the delivery failure to the gsmSCF (if CAMEL handling was invoked), and the process returns to the Null state;
      - if the macro takes the "OK" exit, the MSC reports the successful delivery to the gsmSCF (if CAMEL handling was invoked) and checks whether the MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication included the parameter "More messages to send".
        - if there are no more messages to send, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery and closes the dialogue with the SMS-GMSC, and the process returns to the Null state;
        - if there are more messages to send, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery followed by a MAP\_DELIMITER request to maintain the dialogue with the SMS-GMSC, and waits for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC.
  - When the MSC is waiting for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC:
    - if the dialogue with the SMS-GMSC fails, the MSC sends an Abort request to the MS, and the process returns to the Null state;
    - if it receives a Release indication over the A-interface, the MSC aborts the dialogue with the SMS-GMSC, and the process returns to the Null state;

- if it receives a MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC, it checks the indication.
  - if the indication is badly formed, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
  - if the indication is OK, the MSC checks whether CAMEL handling is required.
    - if CAMEL handling is required, the MSC calls the procedure CAMEL\_T\_SMS\_INIT to determine whether the delivery should continue, and checks the result.
      - if the result is Release\_SMS, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the user error defined by the gsmSCF, and the process returns to the Null state;
      - if the result is Continue, the MSC forwards the short message to the MS over the A interface, as described below.
    - if CAMEL handling is not required, the MSC forwards the short message to the MS over the A interface, as described below;
  - the MSC sends an A\_RP\_MT\_DATA request to the MS, and waits for the response from the MS.
- When the MSC is waiting for the response from the MS for delivery of a subsequent short message:
  - if the dialogue with the SMS-GMSC fails, the MSC sends an Abort request to the MS and reports the delivery failure to the gsmSCF (if CAMEL handling is required), and the process returns to the Null state;
  - if the MSC receives a Release indication over the A-interface, the MSC aborts the dialogue with the SMS-GMSC and reports the delivery failure to the gsmSCF (if CAMEL handling is required), and the process returns to the Null state;
  - if the MSC receives an error response from the MS, it maps the error to a MAP user error, reports the delivery failure to the gsmSCF (if CAMEL handling is required) and returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the user error, and the process returns to the Null state;
  - if the MSC receives a positive acknowledgement from the MS, it reports the successful delivery to the gsmSCF (if CAMEL handling is required) and checks whether the MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication included the parameter "More messages to send".
    - if there are no more messages to send, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery and closes the dialogue with the SMS-GMSC, and the process returns to the Null state;
    - if there are more messages to send, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery followed by a MAP\_DELIMITER request to maintain the dialogue with the SMS-GMSC, and waits for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC.

The mobile terminated short message transfer process in the serving MSC is shown in figures 23.3/6.3.

The macro MT\_SM\_Transfer\_MSC may be invoked either in a stand-alone serving MSC or in a serving MSC which is integrated with the SMS-GMSC. It is used to transfer the first MT short message of a possible sequence of messages.

If the MSC does not support MT SMS, it sets the User Error to "Facility not supported" and the macro takes the "Error" exit.

If the MSC supports MT SMS, it invokes the macro Check\_Subscr\_Identity\_for\_SMS. If the macro Check\_Subscr\_Identity\_for\_SMS takes the "Error" exit, the macro MT\_SM\_Transfer\_MSC takes the "Error" exit.

If the macro Check\_Subscr\_Identity\_for\_SMS takes the the "OK" exit, the MSC sends a dialogue opening request, followed by a MAP\_SEND\_INFO\_FOR\_MT\_SMS request, to the VLR and waits for a response.

If the dialogue opening fails, the macro takes the "Error" exit.

If the dialogue opening succeeds, the MSC sets the variable CAMEL Handling to False and waits for the response from the VLR.

When the MSC is waiting for the response from the VLR:

- if it receives a MAP\_CONTINUE\_CAMEL\_SMS\_HANDLING indication from the VLR, it sets the variable CAMEL Handling to True, calls the procedure CAMEL\_T\_SMS\_INIT to determine whether the delivery should continue, and checks the result.
  - if the result is Release\_SMS, the MSC aborts the dialogue with the VLR, and the macro takes the "Release SMS" exit;
  - if the result is Continue, the MSC sends a second MAP\_SEND\_INFO\_FOR\_MT\_SMS request, with the "Suppress MT-SMS-CSI parameter set, to the VLR, and waits for the response from the VLR.
- if it receives a MAP\_SEND\_INFO\_FOR\_MT\_SMS confirmation, it sets the User Error parameter according to the User Error parameter received in the MAP\_SEND\_INFO\_FOR\_MT\_SMS confirmation, and the macro takes the "Error" exit;
- if it receives a MAP\_PAGE indication, it invokes the Page\_MSC macro described in subclause 25.3.
  - if the Page\_MSC macro takes the "Null" exit, the MSC sets the User Error to "System Failure", and the macro takes the "Error" exit;
  - if the Page\_MSC macro takes the "Error" exit, the MSC waits for a further response from the VLR;
  - if the Page\_MSC macro takes the "OK" exit, the MSC checks whether the MS supports SMS, as described below.
- if it receives a MAP\_SEARCH\_FOR\_MS indication, it invokes the Search\_For\_MS\_MSC macro described in subclause 25.3.
  - if the Search\_For\_MS\_MSC macro takes the "Null" exit, the MSC sets the User Error to "System Failure", and the macro takes the "Error" exit;
  - if the Search\_For\_MS\_MSC macro takes the "Error" exit, the MSC waits for a further response from the VLR;
  - if the Search\_For\_MS\_MSC macro takes the "OK" exit, the MSC checks whether the MS supports SMS, as described below.
- if the MS does not support SMS, the MSC sets the User Error to "SM Delivery Failure" with delivery failure cause "Equipment not SM equipped", aborts the dialogue with the VLR and aborts the connection to the MS, and the macro takes the "Error" exit;
- if the MS supports SMS, the MSC invokes the macro Process\_Access\_Request\_MSC described in subclause 25.4.
  - if the Process\_Access\_Request\_MSC macro takes the "Error" exit, the MSC sets the User Error to "System Failure", and the macro takes the "Error" exit;
  - if the Process\_Access\_Request\_MSC macro takes the "OK" exit, the MSC waits for a further response from the VLR.

When the MSC is waiting for a further response from the VLR:


- if it receives a MAP\_TRACE\_SUBSCRIBER\_ACTIVITY indication from the VLR, it performs tracing activity as described in subclause 25.9, and waits for a further response from the VLR;
- if it receives a MAP\_SEND\_INFO\_FOR\_MT\_SMS confirmation, it checks the confirmation.
  - if the confirmation contains a User Error, the MSC sets the User Error according to the User Error received in the confirmation, and the macro takes the "Error" exit;
  - if the confirmation contains a Provider Error or a Data Error, the MSC sets the User Error to "System failure", and the macro takes the "Error" exit;


- if the confirmation indicates success, the MSC forwards the short message to the MS, and waits for a response from the MS.
- if the MS returns an error, the MSC sets the User Error according to the response from the MS, and the macro takes the "Error" exit;
- if the MS returns a positive acknowledgement, the macro takes the "OK" exit.


When the MSC is waiting for a response from the VLR for the MAP\_SEND\_INFO\_FOR\_MT\_SMS request, or a response from the VLR for the MAP\_PROCESS\_ACCESS\_REQUEST request, or the response from the MS for the first short message:

- if the MSC receives a Release on the A-interface, it aborts the dialogue with the VLR (if the dialogue is still open) and sets the User Error to "System failure", and the macro takes the "Error" exit;
- if the dialogue with the VLR fails, the MSC aborts the connection to the MS and sets the User Error to "System failure", and the macro takes the "Error" exit;
- if the dialogue with the SMS-GMSC fails, the the MSC aborts the dialogue with the VLR (if the dialogue is still open) and aborts the connection to the MS, and the macro takes the "Abort" exit.

The macro MT\_SM\_Transfer\_MSC is shown in figure 23.3/7. The macro Check\_Subscr\_Identity\_For\_MT\_SMS is shown in figure 23.3/8.

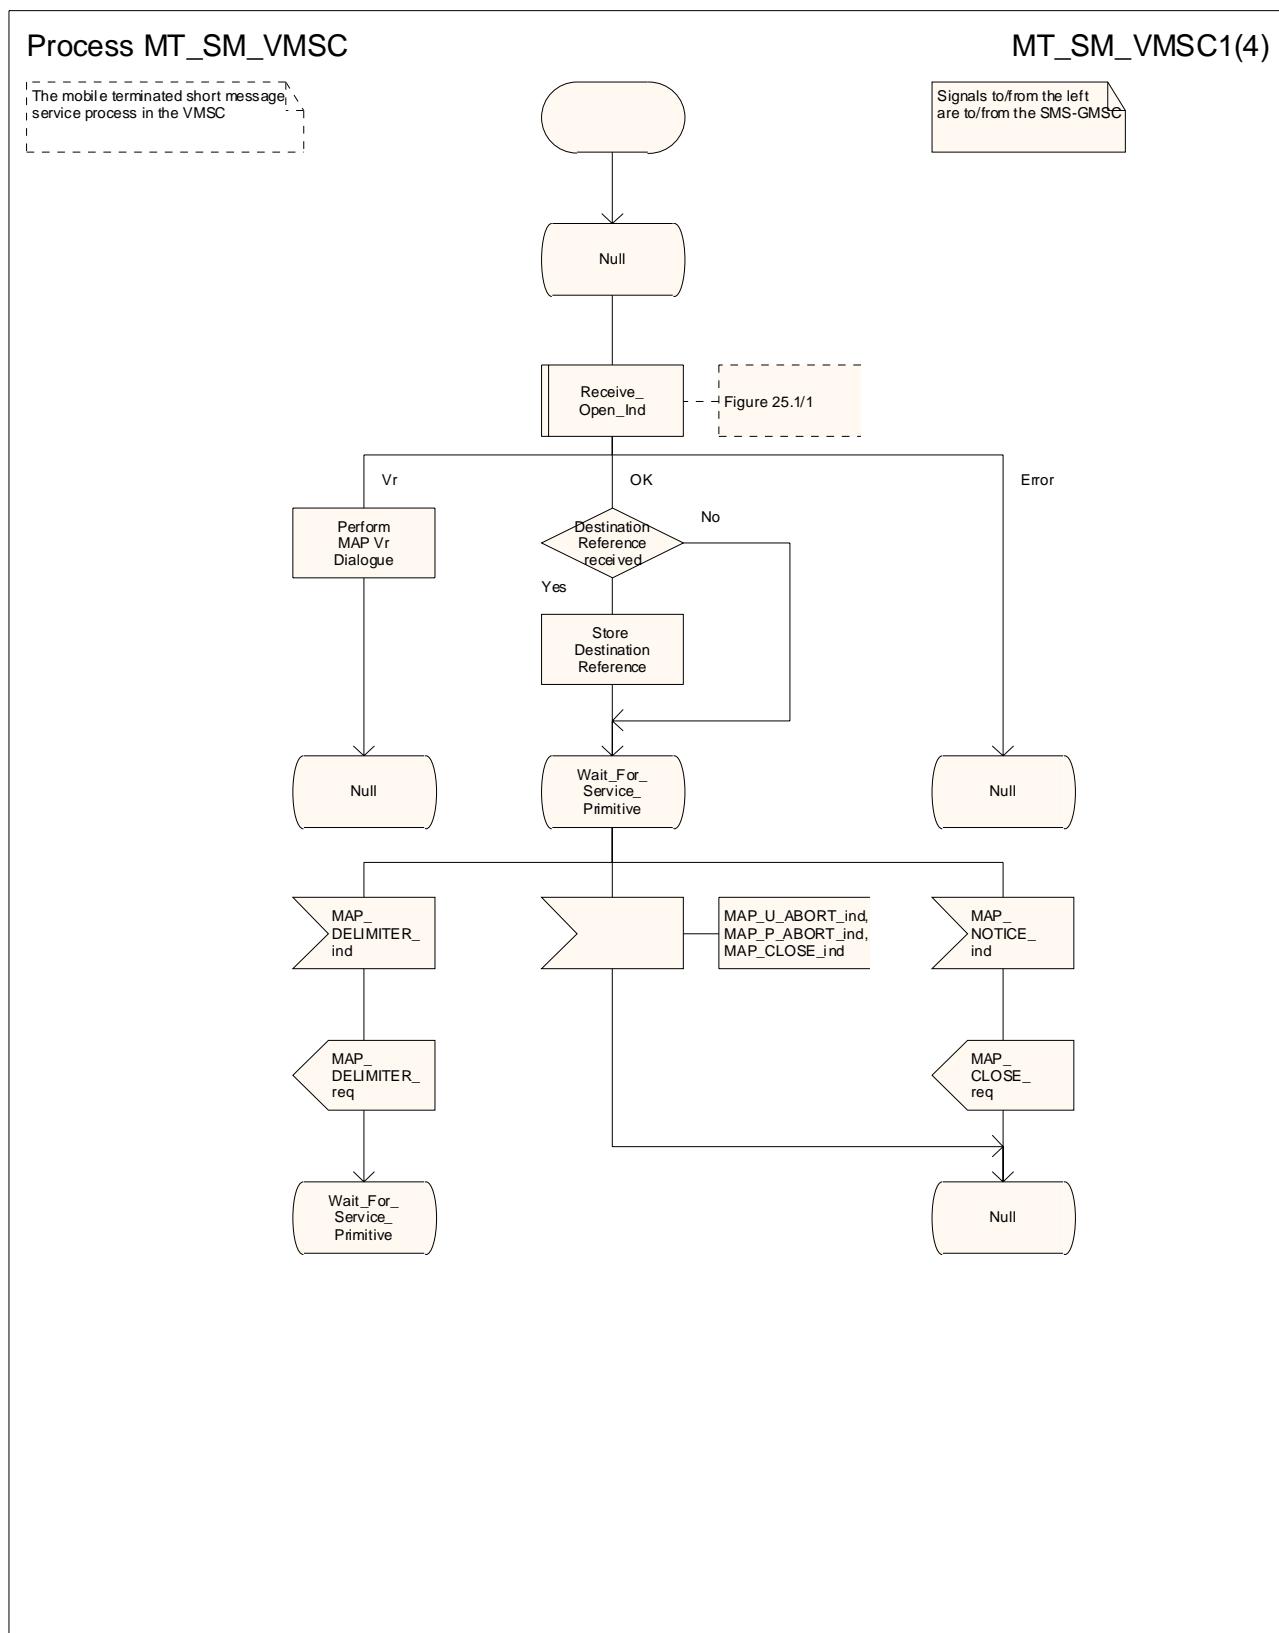**Figure 23.3/6 (sheet 1 of 4): Procedure MT\_SM\_VMSC**

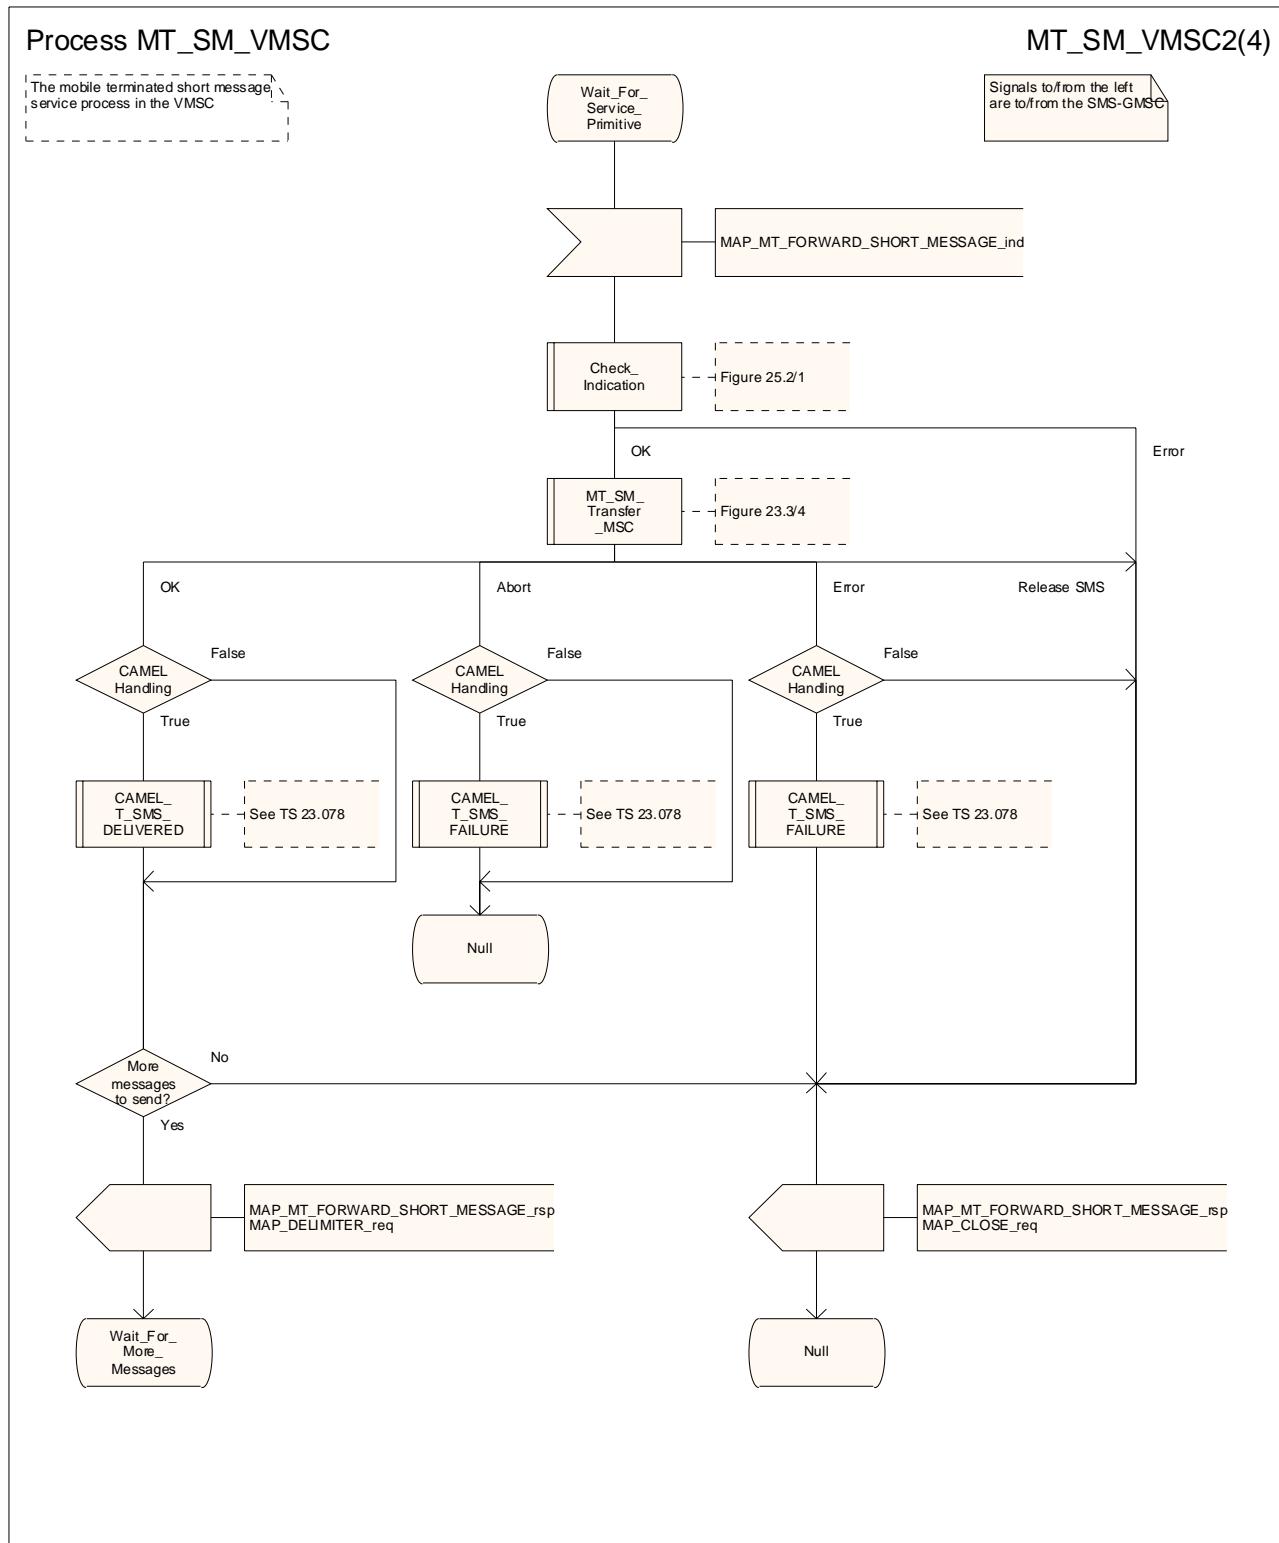**Figure 23.3/6 (sheet 2 of 4): Procedure MT\_SM\_VMSC**

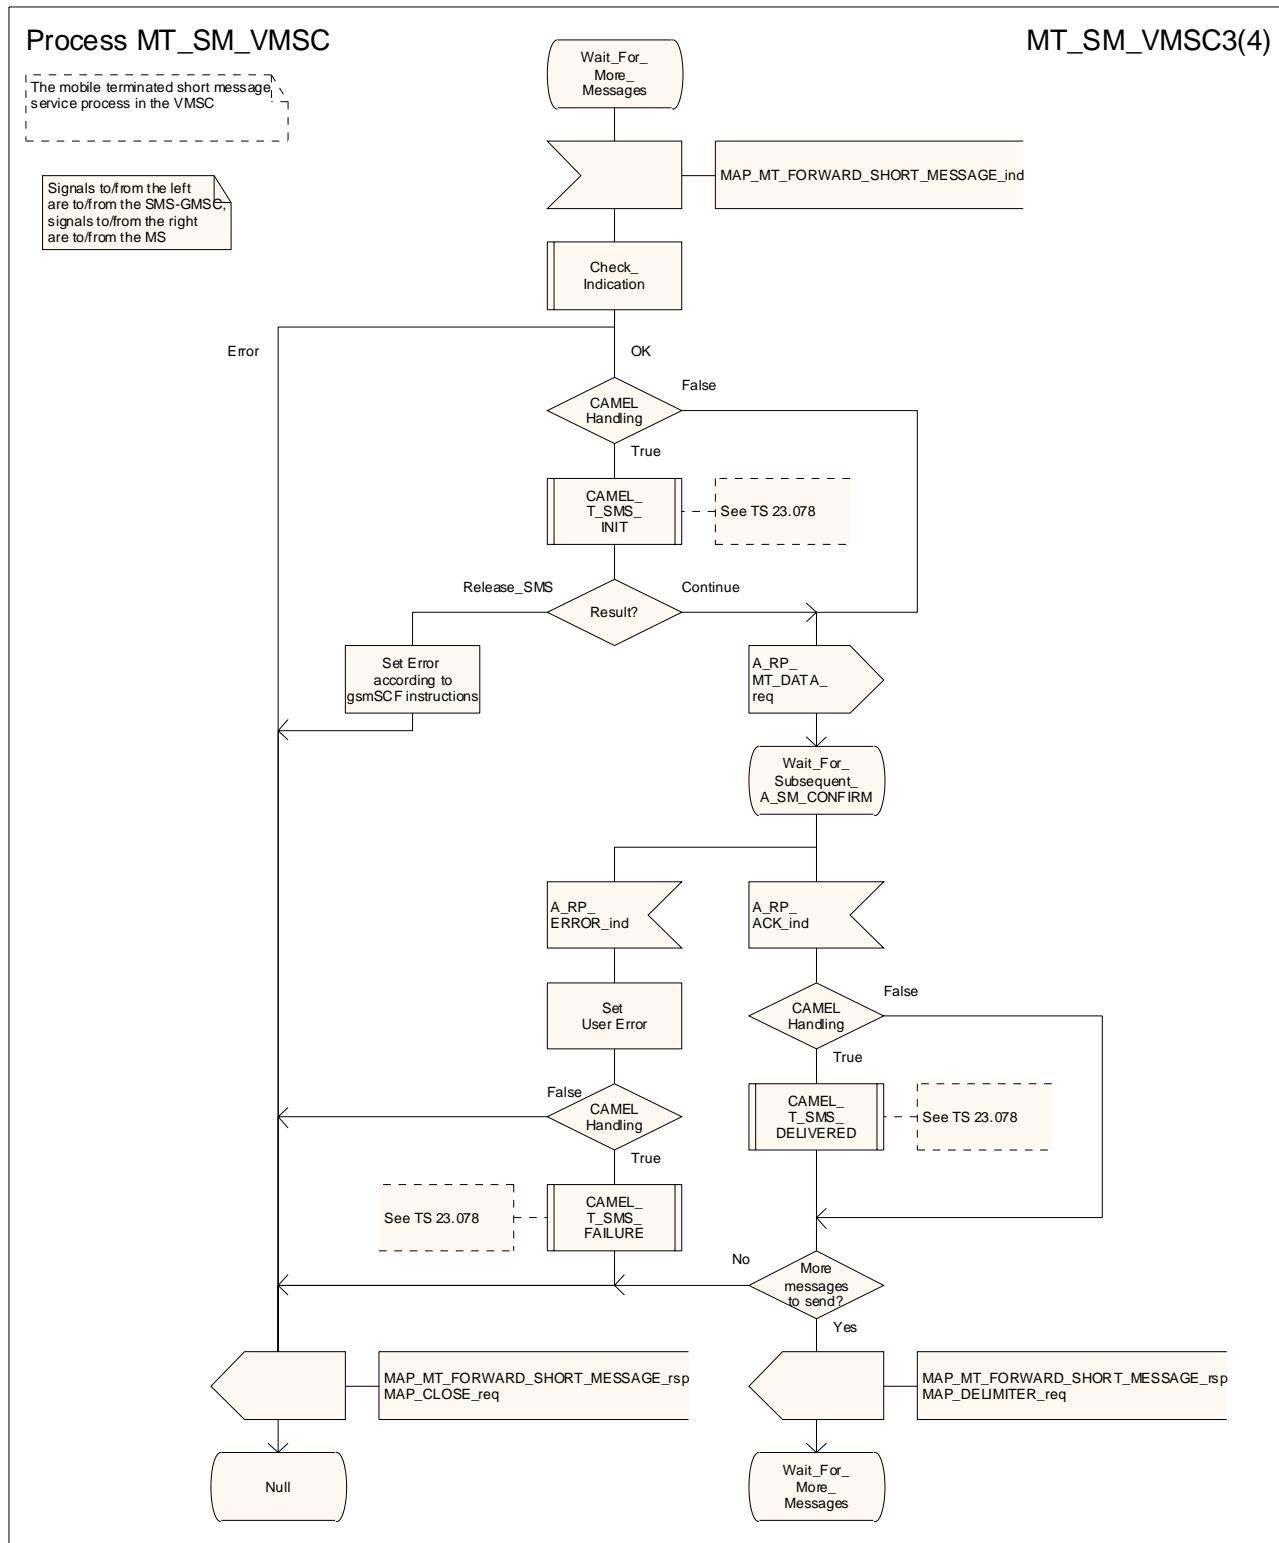**Figure 23.3/6 (sheet 3 of 4): Procedure MT\_SM\_VMSC**

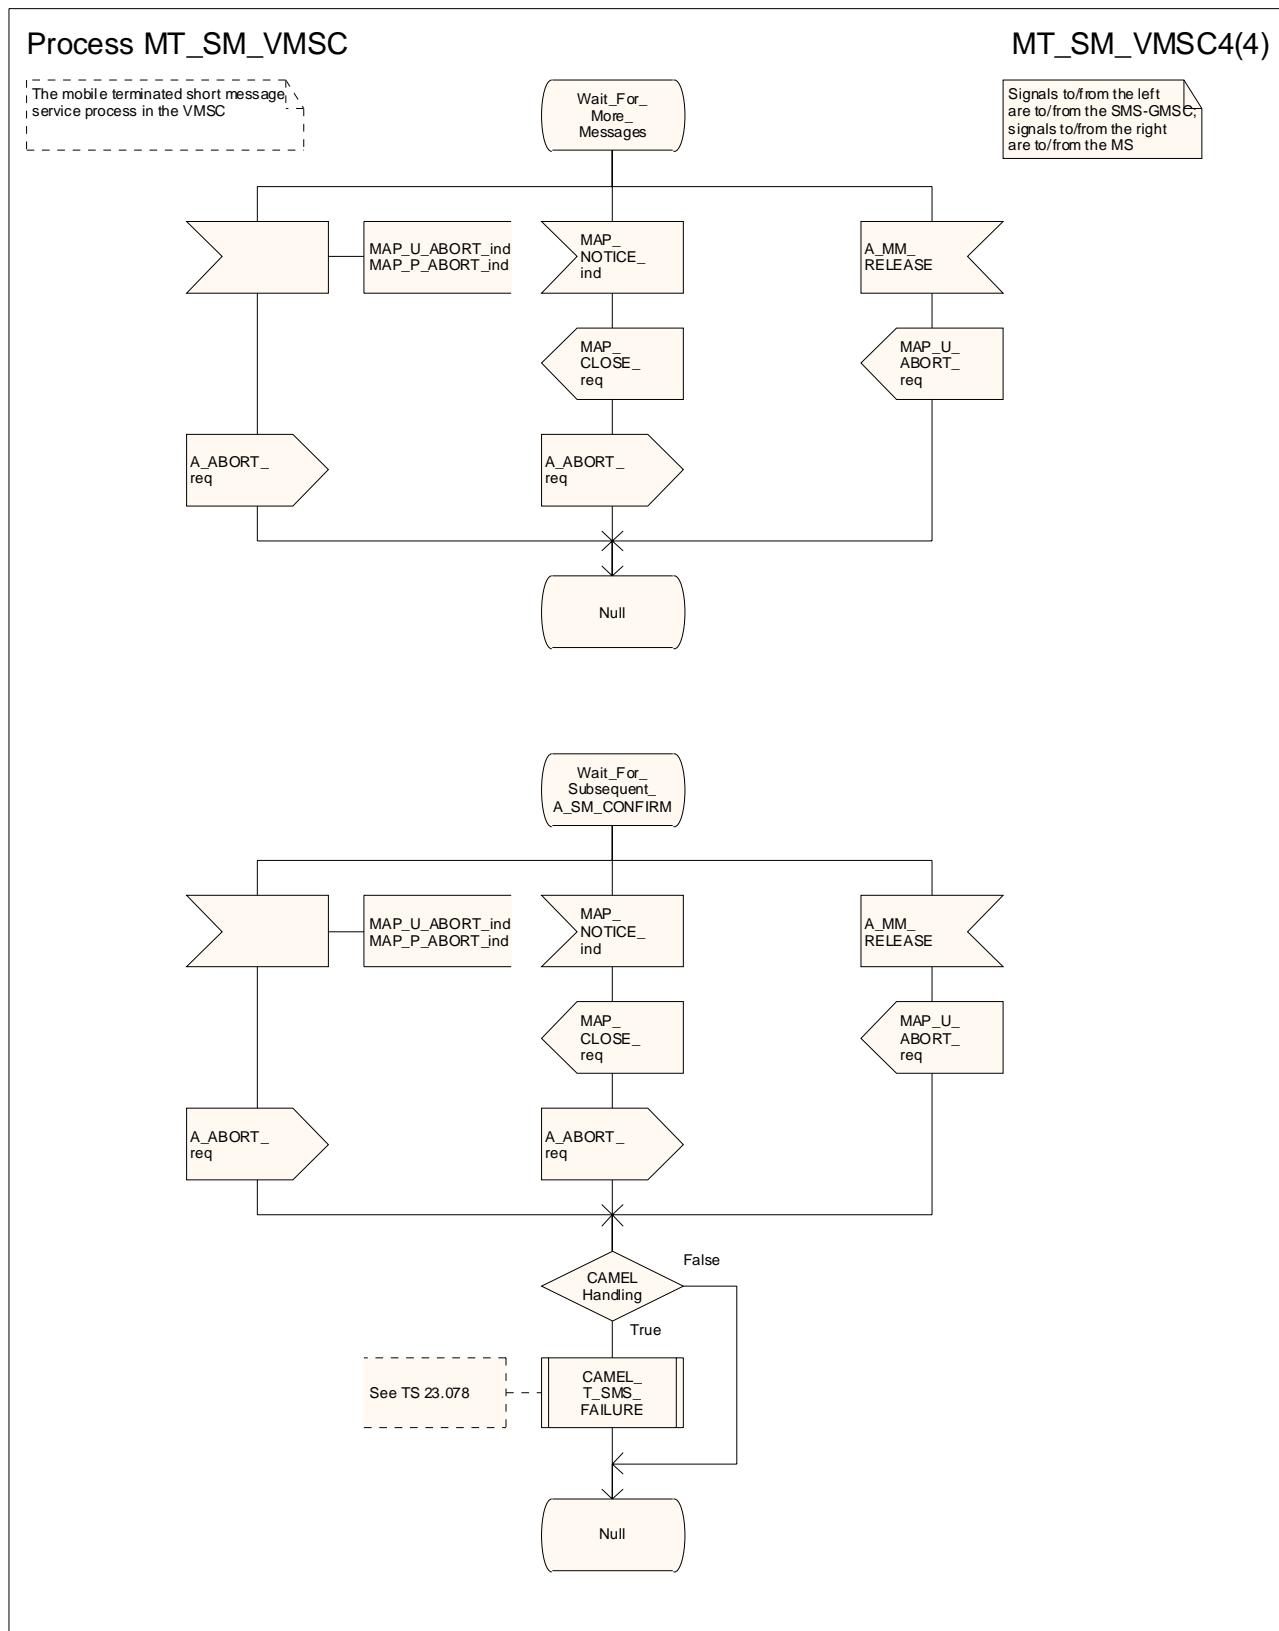


Figure 23.3/6 (sheet 4 of 4): Procedure MT\_SM\_VMSC

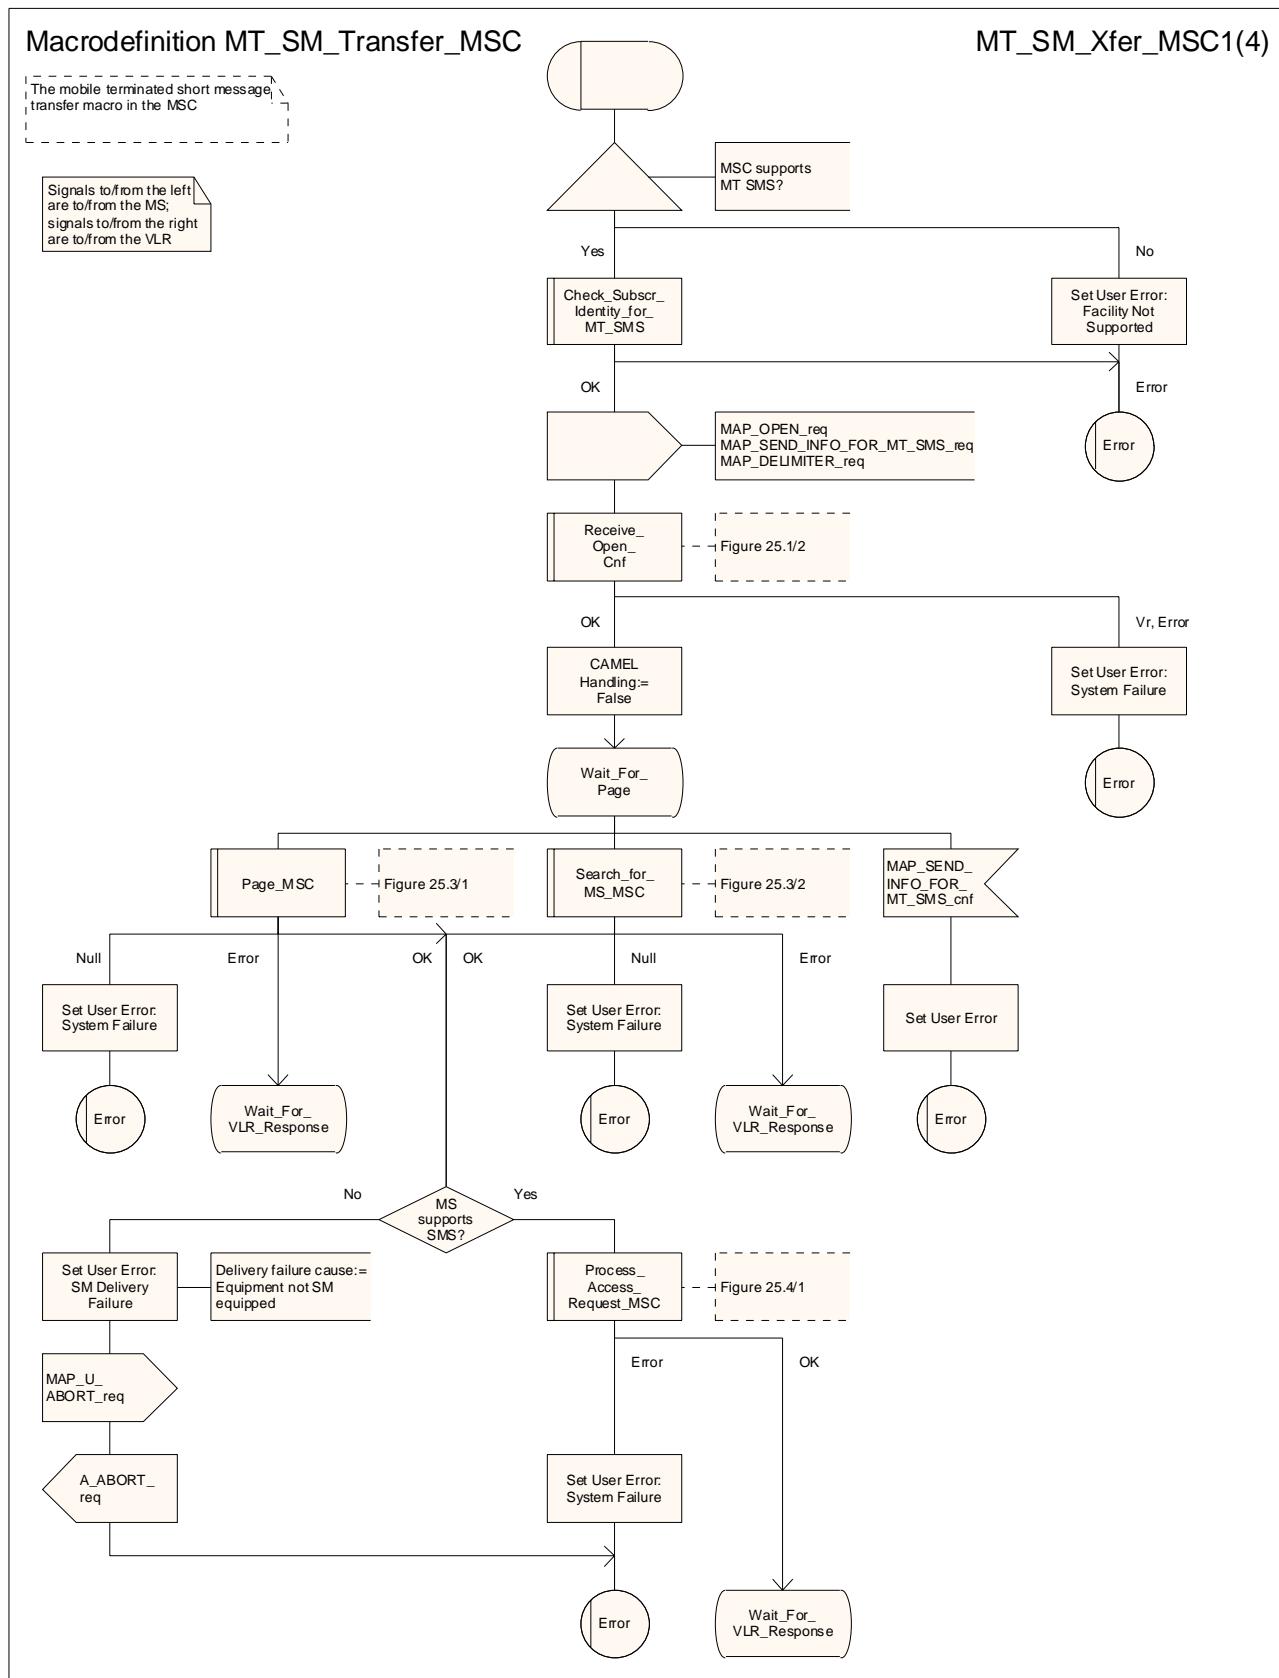


Figure 23.3/7 (sheet 1 of 4): Macro MT\_SM\_Transfer\_MSC

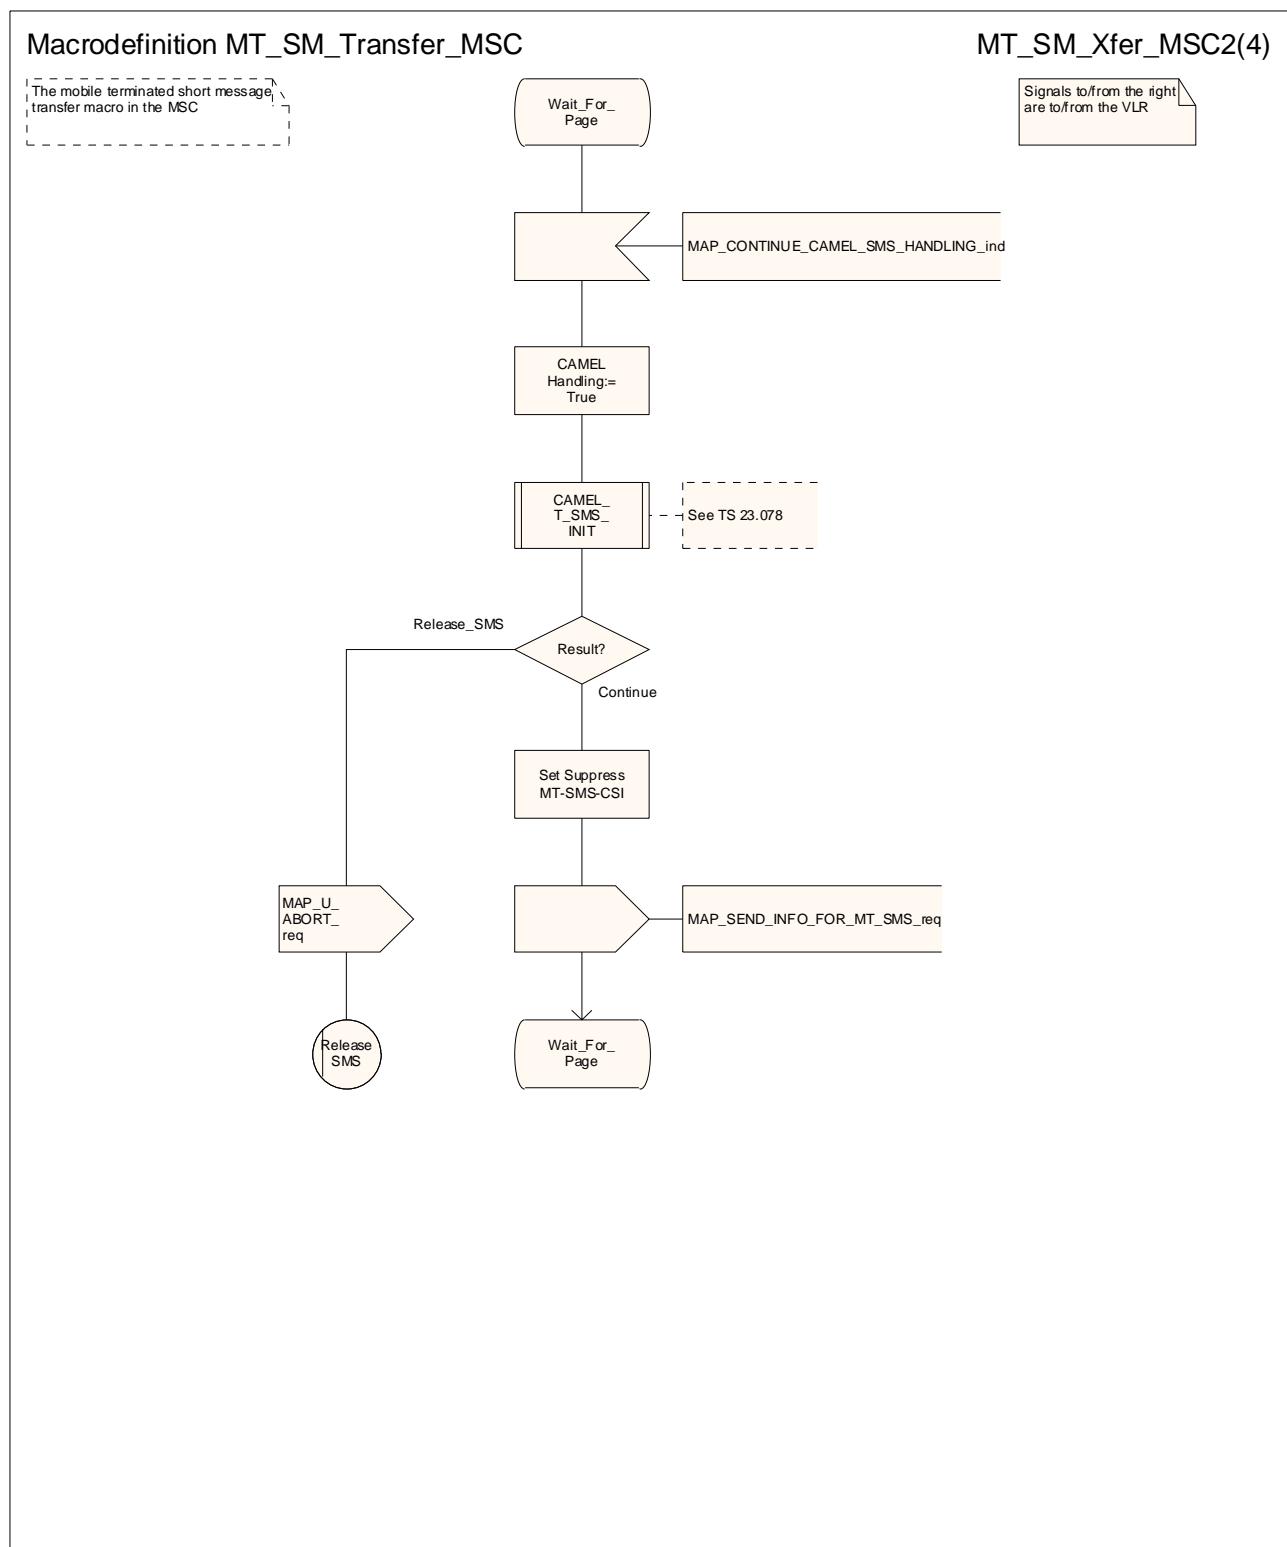


Figure 23.3/7 (sheet 2 of 4): Macro MT\_SM\_Transfer\_MSC

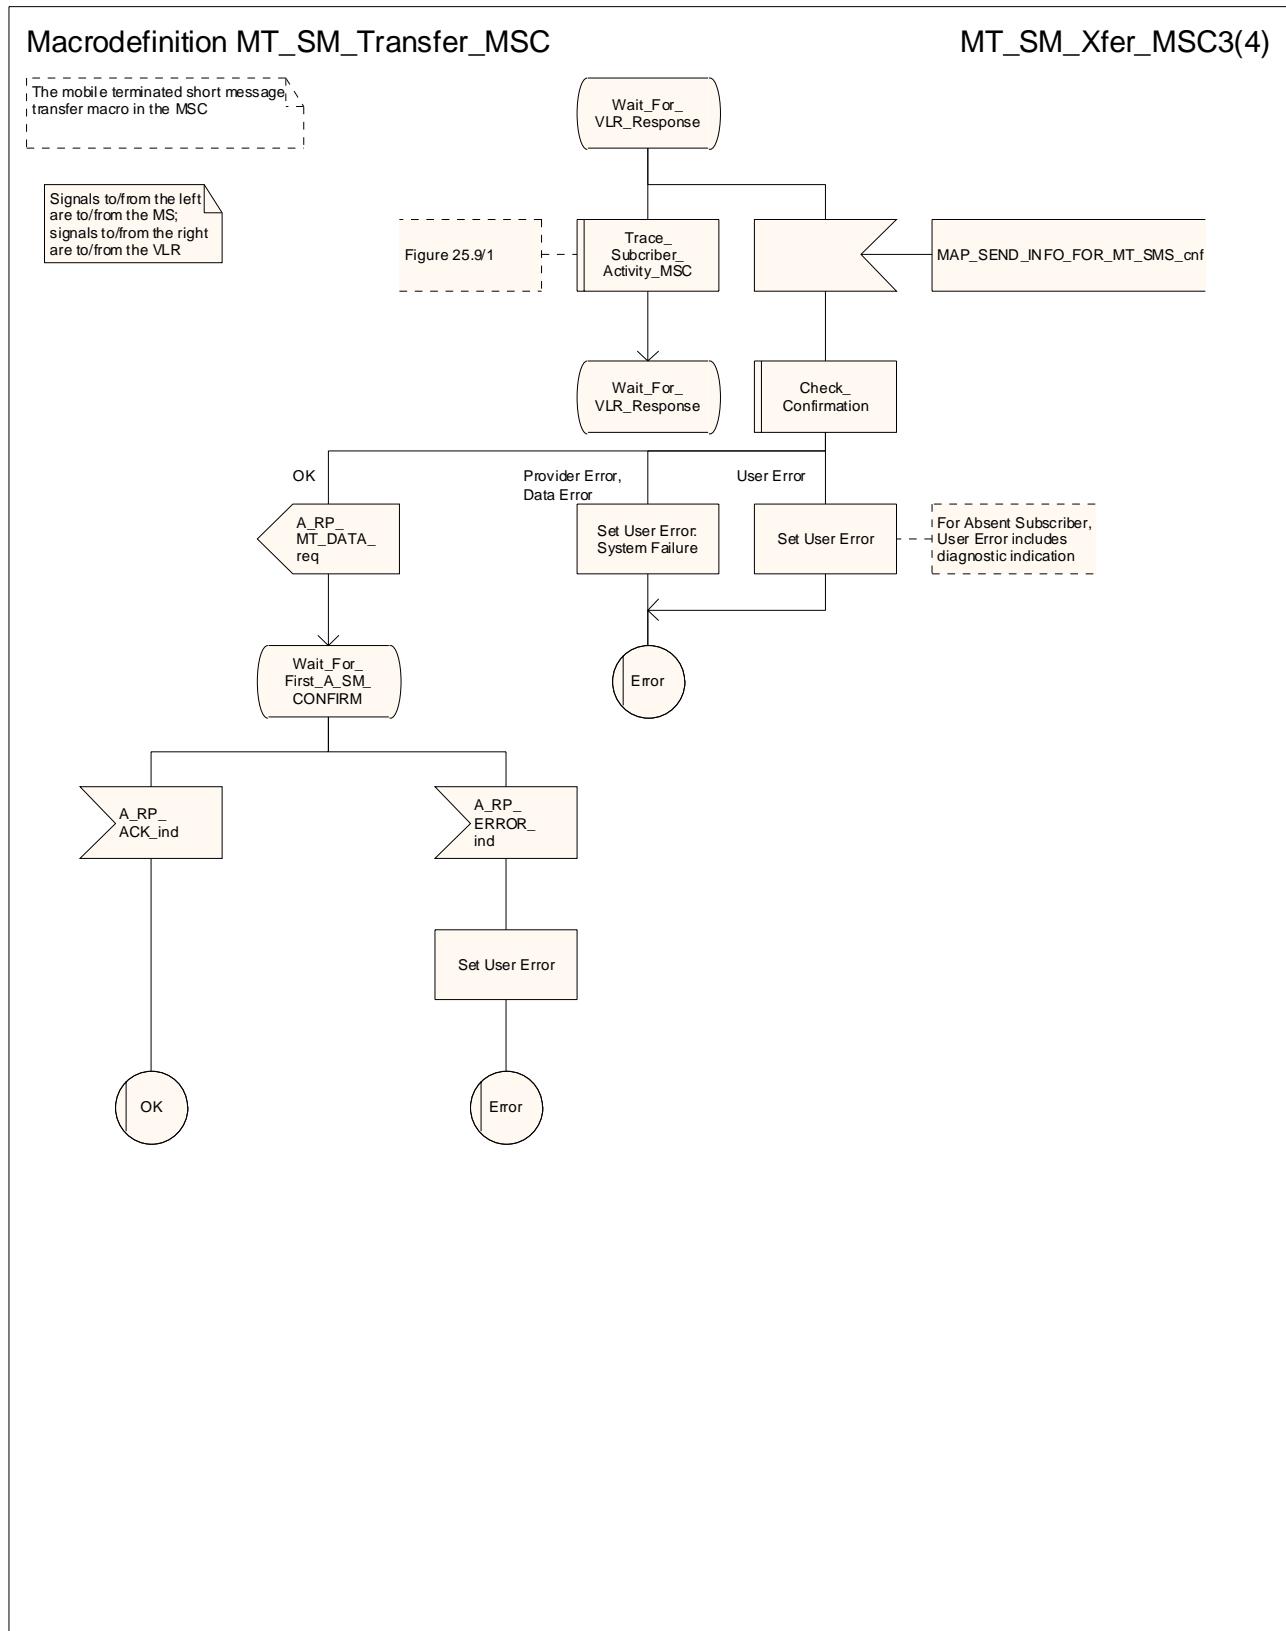


Figure 23.3/7 (sheet 3 of 4): Macro MT\_SM\_Transfer\_MSC

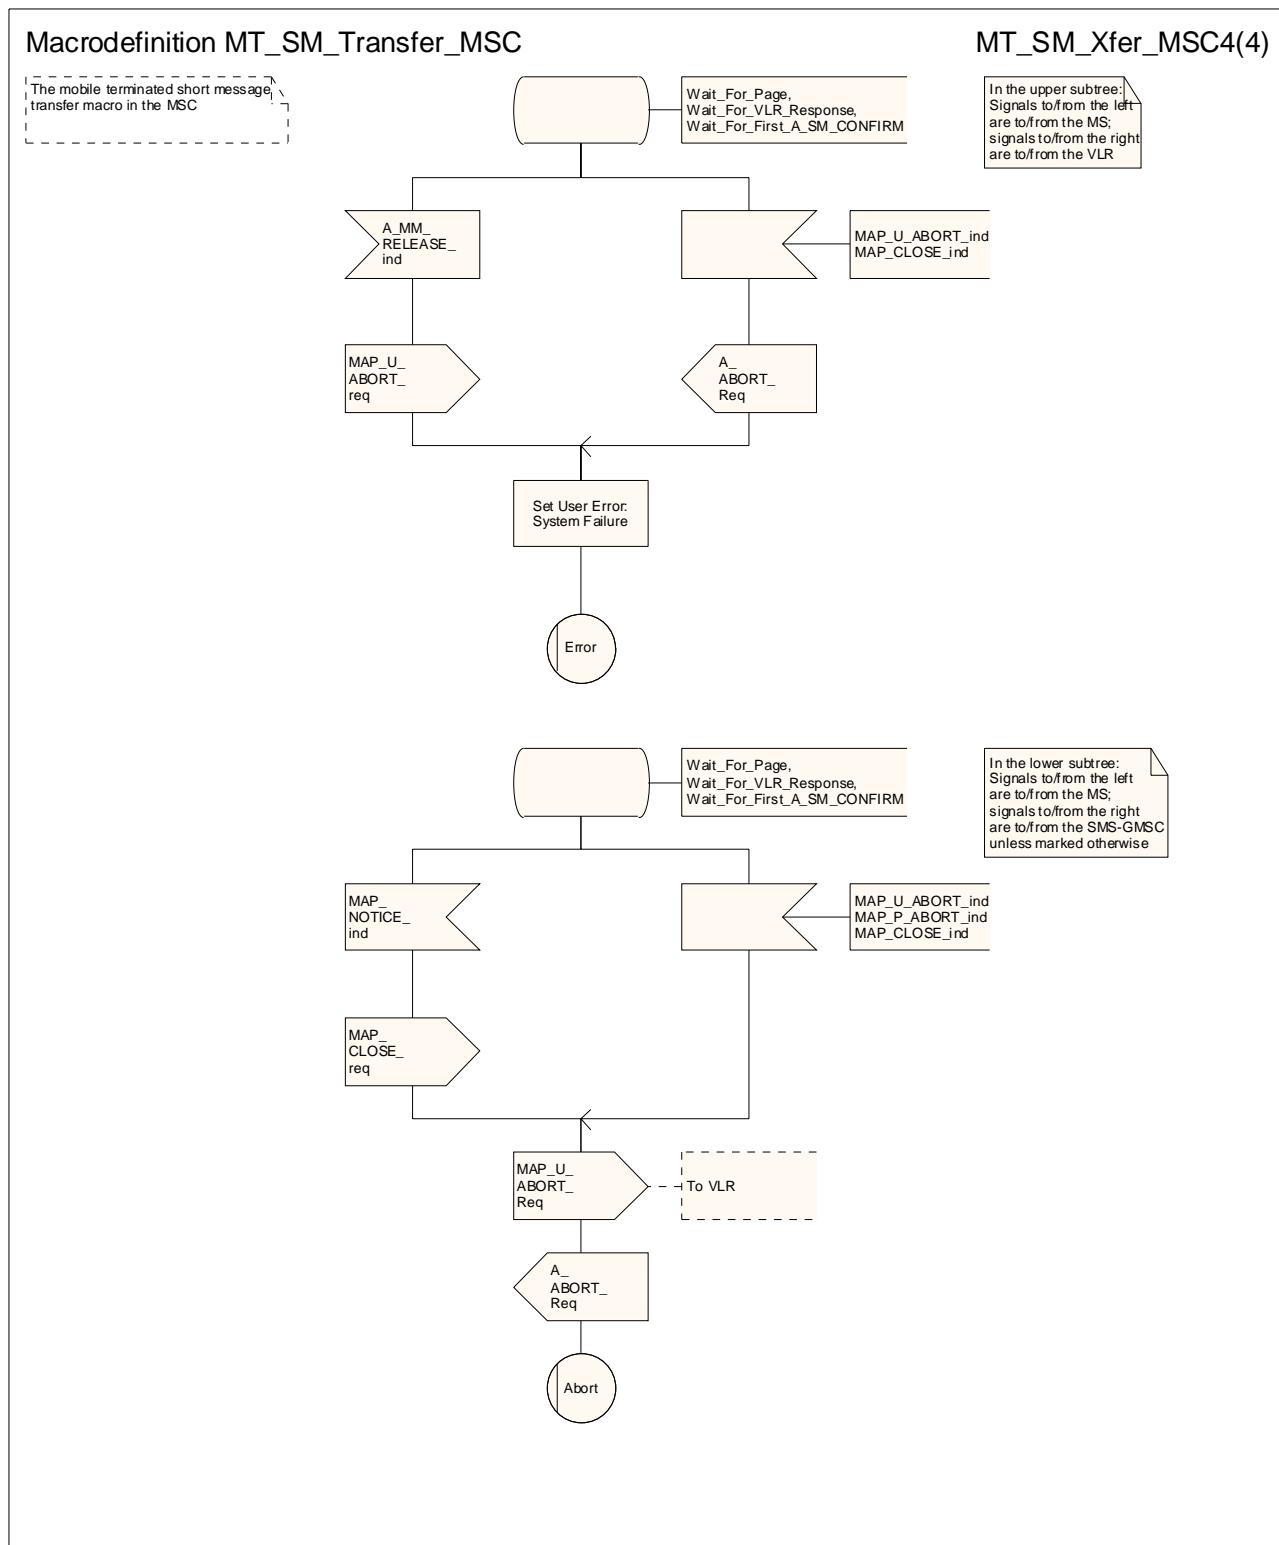


Figure 23.3/7 (sheet 4 of 4): Macro MT\_SM\_Transfer\_MSC

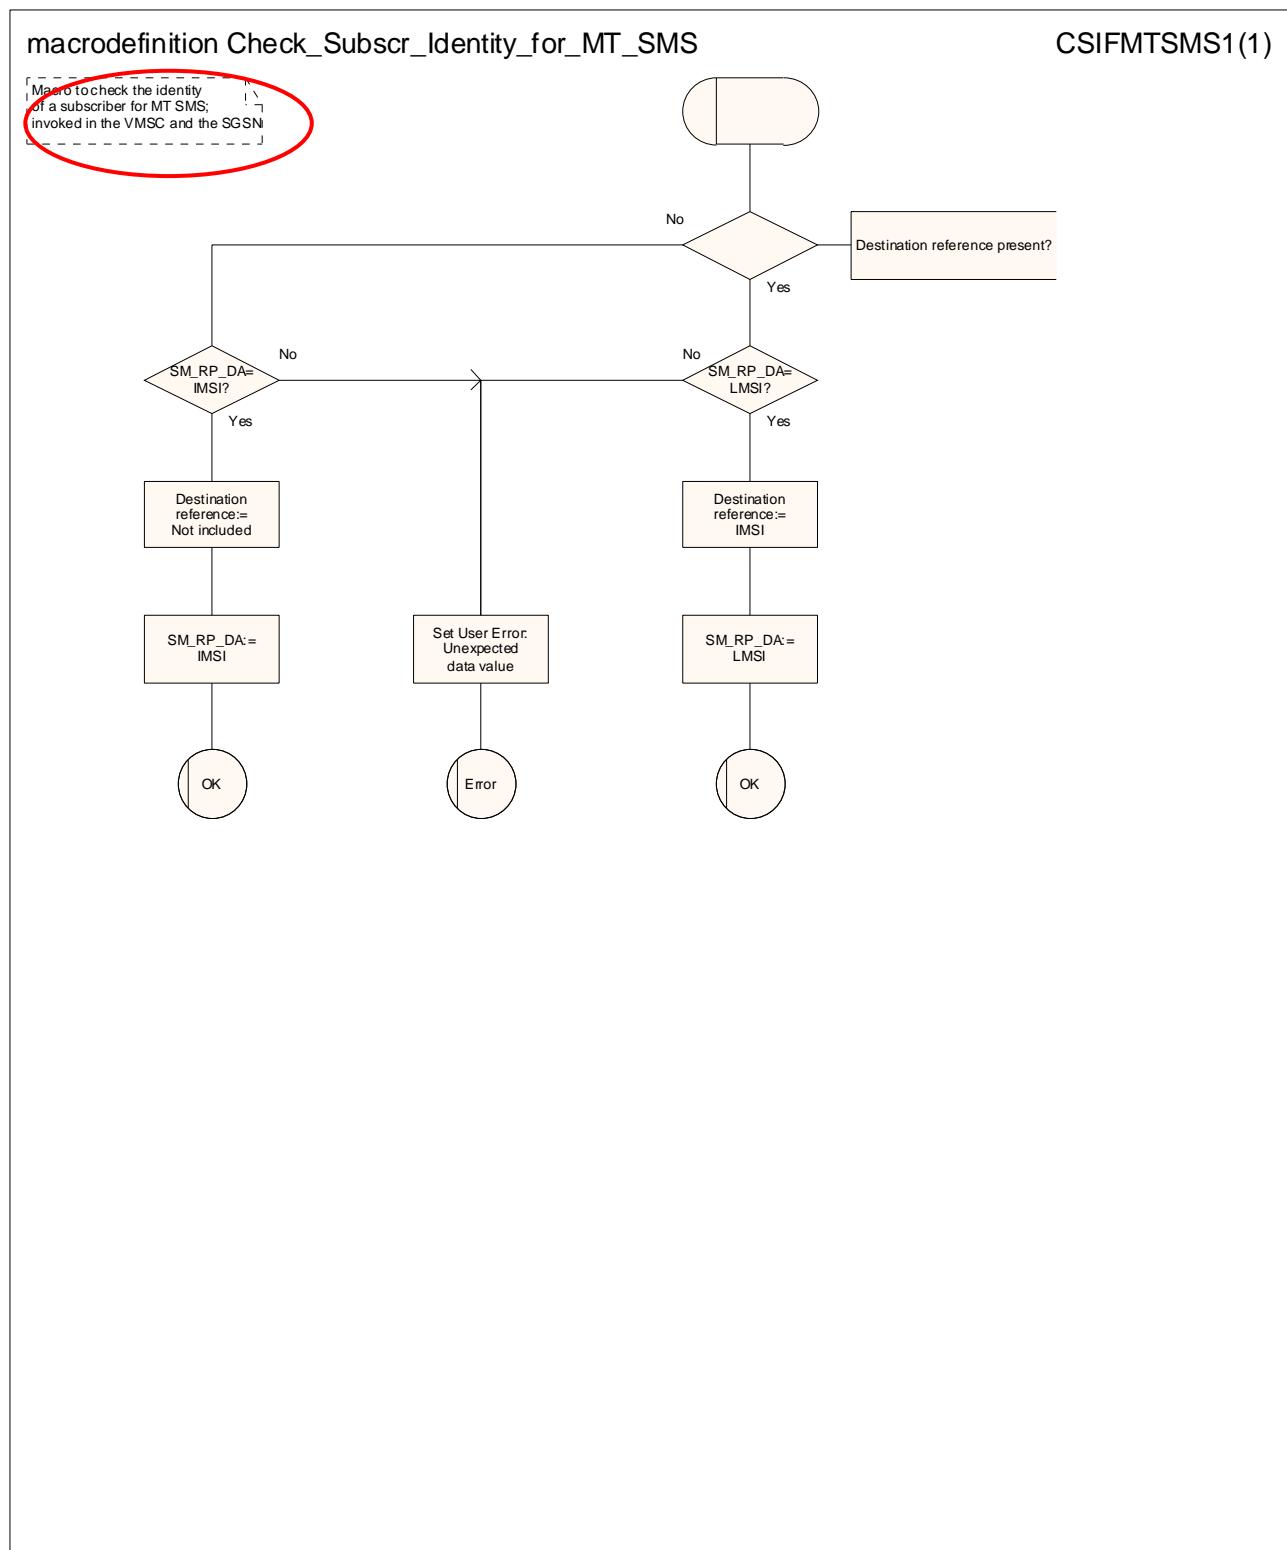


Figure 23.3/8: Macro Check\_Subscr\_Identity\_For\_MT\_SMS

### 23.3.4 Procedures in the VLR

Any CAMEL-specific handling defined in this subclause is omitted if the VLR does not support CAMEL control of MT SMS.

The process is triggered by a dialogue opening request from the MSC.

If the macro Receive\_Open\_Ind takes the "Vr" exit or the "Error" exit, the process returns to the Null state.

If the macro Receive\_Open\_Ind takes the "OK" exit, the VLR waits for a service primitive.

When the VLR receives a MAP\_SEND\_INFO\_FOR\_MT\_SMS indication, it checks the indication.

- if the indication is badly formed, the VLR returns a MAP\_SEND\_INFO\_FOR\_MT\_SMS response containing the appropriate User Error, and the process returns to the Null state;
- if the indication is OK, the VLR checks the subscription information.

If the VLR has no record for the subscriber, or the subscriber record is marked as not confirmed by the HLR, the VLR returns a MAP\_SEND\_INFO\_FOR\_MT\_SMS response containing the User Error "Unidentified subscriber", and the process returns to the Null state.

If the subscriber is marked as IMSI detached, or service is not allowed in the location area where the subscriber is currently registered, the VLR returns a MAP\_SEND\_INFO\_FOR\_MT\_SMS response containing the User Error "Absent subscriber" with the diagnostic "IMSI detached", and the process returns to the Null state.

If the subscription checks are successful, the VLR calls the procedure CAMEL\_MT\_SMS\_VLR, which is specified in 3GPP TS 23.078 [98], and checks the result.

- if the result is Fail, the process returns to the Null state;
- if the result is Pass, the VLR checks whether the location of the MS is known, and whether the location is confirmed by radio contact.
  - if the location is known and confirmed by radio contact, the VLR sends a MAP\_PAGE request to the MSC;
  - if the location is not known, or not confirmed by radio contact, the VLR sends a MAP\_SEARCH\_FOR\_MS request to the MSC.
- the VLR waits for a MAP\_PROCESS\_ACCESS\_REQUEST indication from the MSC.


When the VLR is waiting for a MAP\_PROCESS\_ACCESS\_REQUEST indication from the MSC:

- if the dialogue is aborted by the MSC, the process returns to the NULL state;
- if it receives a MAP\_PAGE confirmation, it checks the User Error received in the confirmation, as below;
  - if it receives a MAP\_SEARCH\_FOR\_MS confirmation, it checks the confirmation.
    - if the confirmation contained a Provider Error or a Data Error, the process returns to the Null state;
    - if the confirmation contained a User Error, the VLR checks the User Error, as below;
      - if the confirmation indicated a successful result, the VLR updates the LAI and sets the Confirmed by Radio Contact indicator to Confirmed, and waits for a MAP\_PROCESS\_ACCESS\_REQUEST indication from the MSC.
- if it receives a MAP\_PROCESS\_ACCESS\_REQUEST indication, it invokes the macro Process\_Access\_Request\_VLR.
  - if the macro takes the "Error" exit, the process returns to the Null state;
  - if the macro takes the "OK" exit, the VLR returns a MAP\_SEND\_INFO\_FOR\_MT\_SMS response containing the MSISDN of the subscriber, and the process returns to the Null state.


If the VLR receives a MAP\_PAGE confirmation or a MAP\_SEARCH\_FOR\_MS confirmation containing a User Error, it checks the user error.


- if the User Error is Absent Subscriber, the VLR sets the MNRF and returns a MAP\_SEND\_INFO\_FOR\_MT\_SMS response containing the User Error "Absent subscriber" with diagnostic "No response to paging", and the process returns to the Null state;
- for any other User Error, the VLR relays the User Error in a MAP\_SEND\_INFO\_FOR\_MT\_SMS response, and the process returns to the Null state.

The mobile terminated short message transfer process in the VLR is shown in figure 23.3/9.

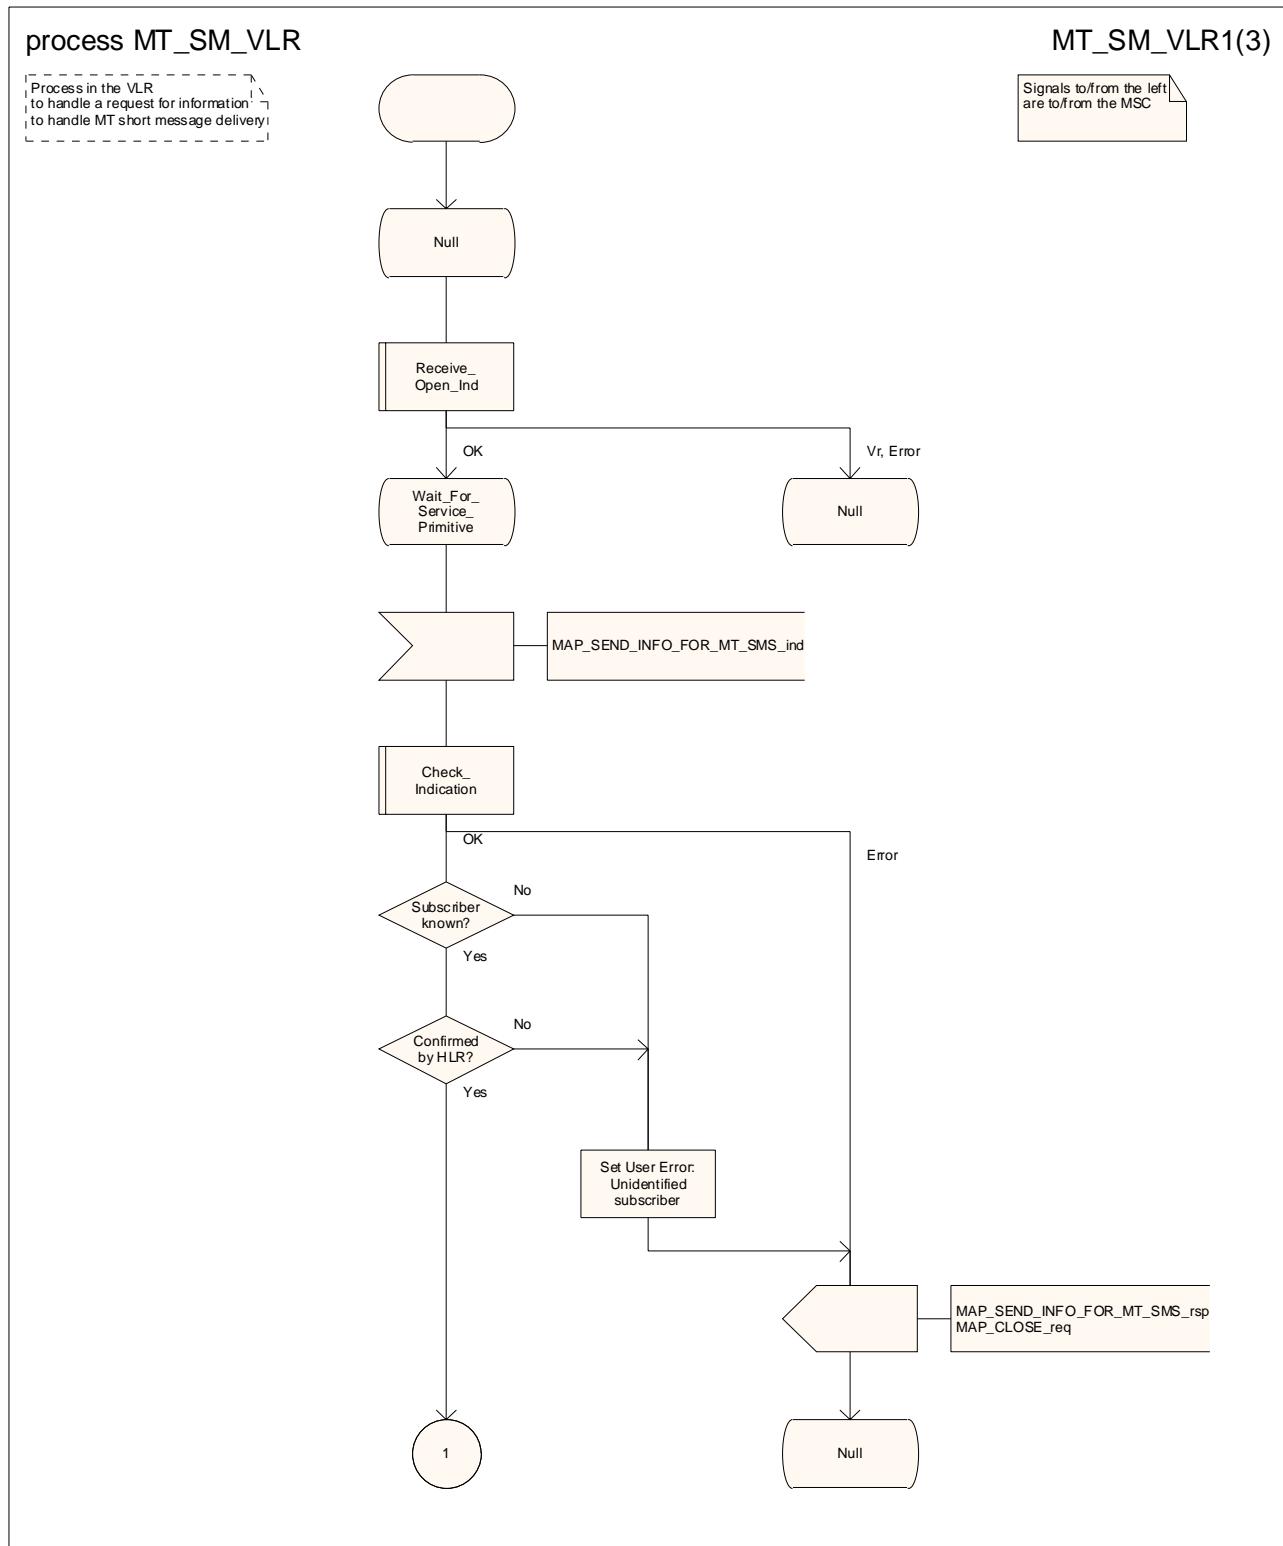

**Figure 23.3/9 (sheet 1 of 3): Process MT\_SM\_VLR**

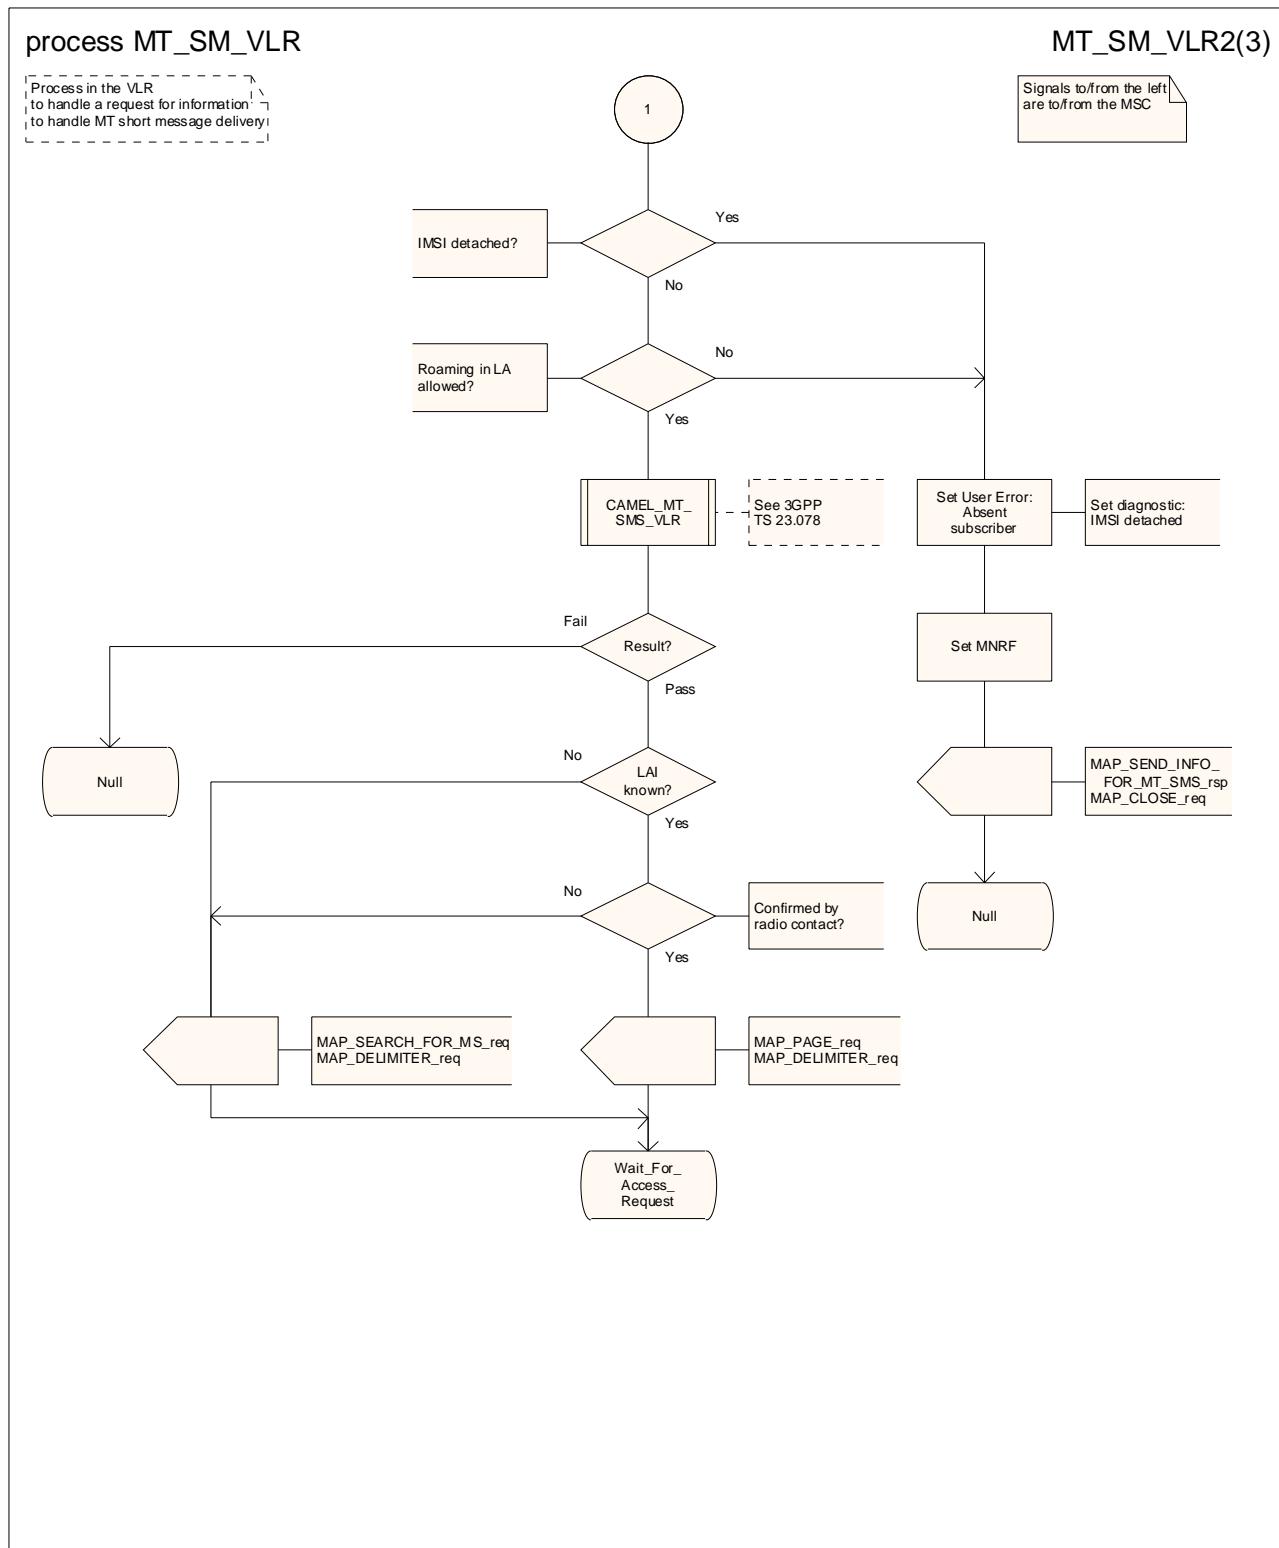**Figure 23.3/9 (sheet 2 of 3): Process MT\_SM\_VLR**

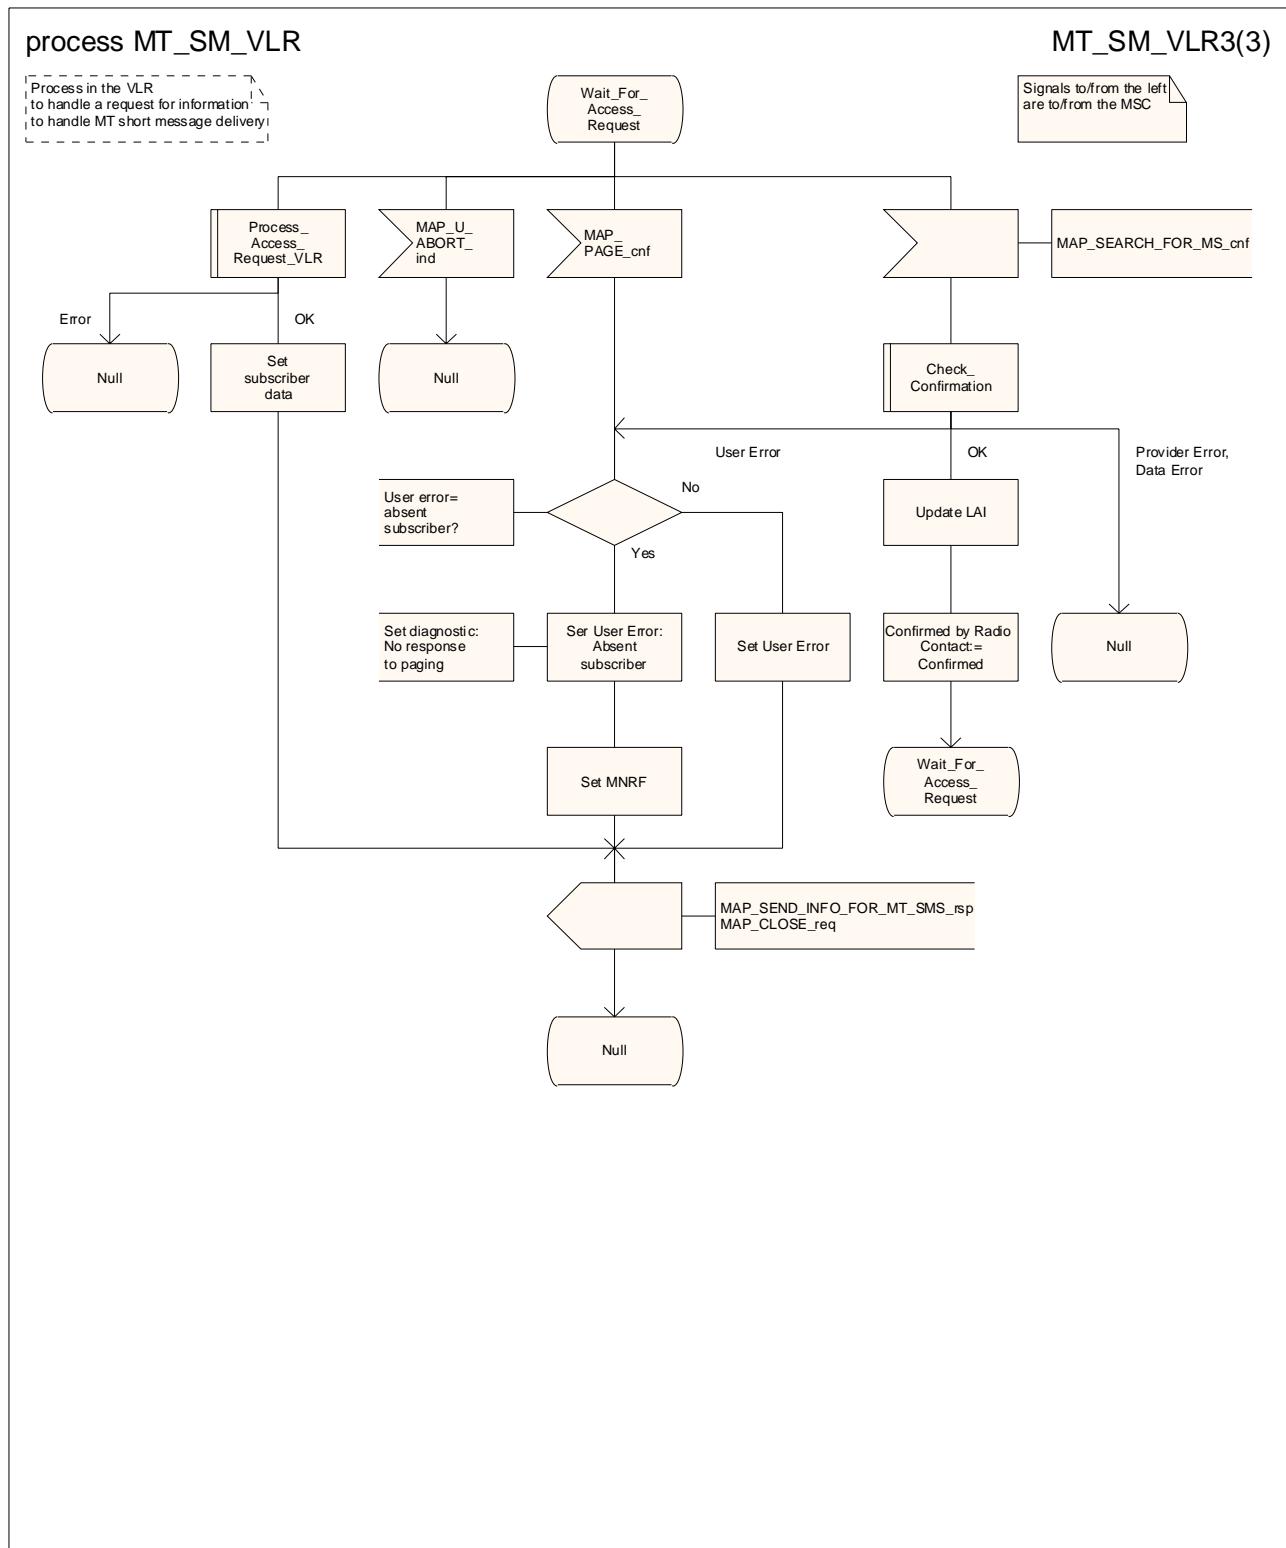**Figure 23.3/9 (sheet 3 of 3): Process MT\_SM\_VLR**

### 23.3.5 Procedure in the SGSN

Any CAMEL-specific handling defined in this subclause is omitted if the SGSN does not support CAMEL control of MT SMS, or if the subscriber does not have a subscription for CAMEL control of MT SMS.

The process is triggered by a dialogue opening request with the application context shortMsgMT-RelayContext.

- if the macro Receive\_Open\_Ind takes the "Error" exit, the process returns to the Null state;

- if the macro Receive\_Open\_Ind takes the "Vr" exit, the SGSN handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "OK" exit, the SGSN checks whether the dialogue opening request included a destination reference. If a destination reference was included, the SGSN stores it and waits for a service primitive.
  - if the dialogue with the SMS-GMSC fails, the process returns to the Null state;
  - if the next primitive received is a MAP\_DELIMITER indication, the SGSN returns a MAP\_DELIMITER request, and waits for a service primitive;
  - if the next primitive received is a MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication, the SGSN checks the indication.
    - if the indication is badly formed, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
    - if the indication is OK, the MSC invokes the macro MT\_SM\_Transfer\_SGSN to transfer the short message to the MS.
      - if the macro takes the "Release SMS" exit, the MSC returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
      - if the macro takes the "Error" exit, the SGSN reports the delivery failure to the gsmSCF (if CAMEL handling was invoked) and returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
      - if the macro takes the "Abort" exit, the SGSN reports the delivery failure to the gsmSCF (if CAMEL handling was invoked), and the process returns to the Null state;
      - if the macro takes the "OK" exit, the SGSN reports the successful delivery to the gsmSCF (if CAMEL handling was invoked) and checks whether the MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication included the parameter "More messages to send".
        - if there are no more messages to send, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery and closes the dialogue with the SMS-GMSC, and the process returns to the Null state;
        - if there are more messages to send, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery followed by a MAP\_DELIMITER request to maintain the dialogue with the SMS-GMSC, and waits for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC.
- When the SGSN is waiting for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC:
  - if the dialogue with the SMS-GMSC fails, the SGSN releases the LLC connection to the MS, and the process returns to the Null state;
  - if it receives a Release indication over the Gb-interface, the SGSN aborts the dialogue with the SMS-GMSC, and the process returns to the Null state;
  - if it receives a MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC, it checks the indication.
    - if the indication is badly formed, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the appropriate user error, and the process returns to the Null state;
    - if the indication is OK, the SGSN checks whether CAMEL handling is required.
      - if CAMEL handling is required, the SGSN calls the procedure CAMEL\_T\_SMS\_INIT to determine whether the delivery should continue, and checks the result.

- if the result is Release\_SMS, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the user error defined by the gsmSCF, and the process returns to the Null state;
  - if the result is Continue, the SGSN forwards the short message to the MS over the Gb interface, as described below.
  - if CAMEL handling is not required, the SGSN forwards the short message to the MS over the Gb interface, as described below;
  - the SGSN sends a Gb\_RP\_MT\_DATA request to the MS, and waits for the response from the MS.
- When the SGSN is waiting for the response from the MS for delivery of a subsequent short message:
- if the dialogue with the SMS-GMSC fails, the SGSN releases the LLC connection to the MS and reports the delivery failure to the gsmSCF (if CAMEL handling is required), and the process returns to the Null state;
  - if the SGSN receives a Release indication over the Gb-interface, the MSC aborts the dialogue with the SMS-GMSC and reports the delivery failure to the gsmSCF (if CAMEL handling is required), and the process returns to the Null state;
  - if the SGSN receives an error response from the MS, it maps the error to a MAP user error, reports the delivery failure to the gsmSCF (if CAMEL handling is required) and returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response containing the user error, and the process returns to the Null state;
  - if the SGSN receives a positive acknowledgement from the MS, it reports the successful delivery to the gsmSCF (if CAMEL handling is required) and checks whether the MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication included the parameter "More messages to send".
    - if there are no more messages to send, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery and closes the dialogue with the SMS-GMSC, and the process returns to the Null state;
    - if there are more messages to send, the SGSN returns a MAP\_MT\_FORWARD\_SHORT\_MESSAGE response indicating successful delivery followed by a MAP\_DELIMITER request to maintain the dialogue with the SMS-GMSC, and waits for the next MAP\_MT\_FORWARD\_SHORT\_MESSAGE indication from the SMS-GMSC.

The mobile terminated short message transfer procedure in the serving SGSN is shown in figure 23.3/10.

The macro MT\_SM\_Transfer\_SGSN is used to transfer the first MT short message of a possible sequence of messages.

If the SGSN does not support MT SMS, it sets the User Error to "Facility not supported" and the macro takes the "Error" exit.

If the SGSN supports MT SMS, it invokes the macro Check\_Subscr\_Identity\_for\_SMS.

- if the macro Check\_Subscr\_Identity\_for\_SMS takes the "Error" exit, the macro MT\_SM\_Transfer\_SGSN takes the "Error" exit;
- if the macro Check\_Subscr\_Identity\_for\_SMS takes the "OK" exit, the SGSN checks the subscription information.
  - if the SGSN has no record for the subscriber, or the subscriber record is marked as not confirmed by the HLR, the SGSN sets the User Error to "Unidentified subscriber", and the macro takes the "Release SMS" exit;
  - if the subscriber is marked as GPRS detached, or service is not allowed in the routeing area where the subscriber is currently registered, the SGSN sets the User Error to "Absent subscriber" with the diagnostic "GPRS detached" and sets the MNRG flag, and the macro takes the "Release SMS" exit.
- if the subscription checks are successful, the SGSN calls the procedure CAMEL\_MT\_SMS\_SGSN, which is specified in 3GPP TS 23.078 [98], and checks the result.

- if the result is Continue, the SGSN sets the variable CAMEL Handling to False, and continues the processing for the delivery attempt;
- if the result is CAMEL Handling, the SGSN sets the variable CAMEL Handling to True, calls the procedure CAMEL\_T\_SMS\_INIT and checks the result.
  - if the result is Release\_SMS, the SGSN sets the User Error according to the instructions from the gsmSCF, and the macro takes the "Release SMS" exit;
  - if the result is Continue, the SGSN continues the processing for the delivery attempt.
- the SGSN checks whether the location of the MS is known, and whether the location is confirmed by radio contact.
  - if the location is known and confirmed by radio contact, the SGSN calls the procedure Page\_SMS\_SGSN and checks the result;
  - if the location is not known, or not confirmed by radio contact, the SGSN calls the procedure Search\_SMS\_SGSN and checks the result.
- if the procedure Page\_SMS\_SGSN or the procedure Search\_SMS\_SGSN returns a Fail result, the SGSN checks the error cause.
  - if the error cause is Absent Subscriber, the SGSN sets the User Error to "Absent Subscriber" with the diagnostic "No response to paging" and sets the MNRG flag, and the macro takes the "Error" exit;
  - for any other error, the SGSN sets the User Error accordingly, and the macro takes the "Error" exit.
- if the procedure Page\_SMS\_SGSN or the procedure Search\_SMS\_SGSN returns a Fail result, the SGSN checks whether the MS supports SMS.
  - if the MS does not support SMS, the SGSN releases the LLC connection and sets the User Error to "SM delivery failure" with delivery failure cause "Equipment not SM equipped", and the macro takes the "Error" exit;
  - if the MS supports SMS, the SGSN forwards the short message to the MS, and waits for a response from the MS.
    - if the MS returns an error, the SGSN sets the User Error according to the response from the MS, and the macro takes the "Error" exit;
    - if the MS returns a positive acknowledgement, the macro takes the "OK" exit;
    - if the LLC connection is released, the SGSN sets the User Error to "System failure", and the macro takes the "Error" exit;
    - if the dialogue with the SMS-GMSC fails, the SGSN releases the LLC connection, and the macro takes the "Abort" exit.

The macro MT\_SM\_Transfer\_SGSN is shown in figure 23.3/11

The page and search procedures are shown in figures 23.3/12 and 23.3/13.

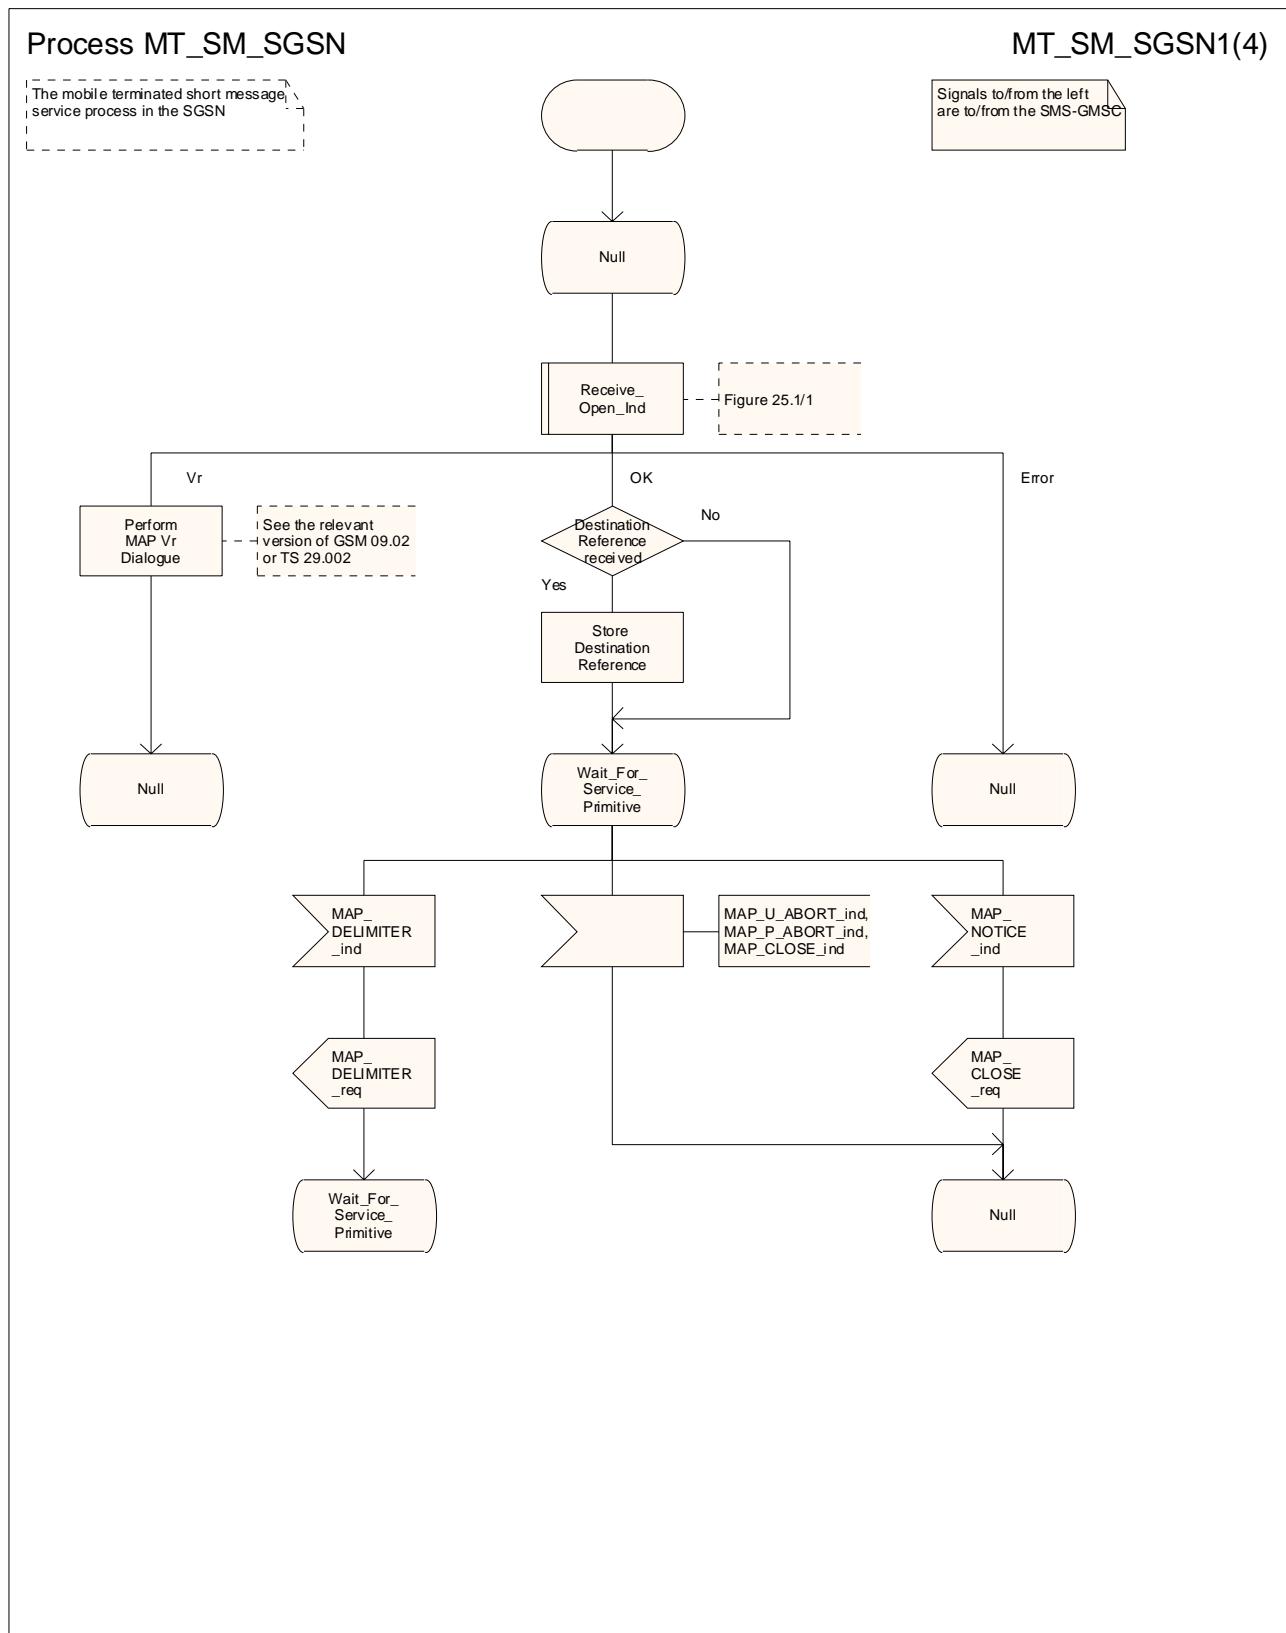


Figure 23.3/10 (sheet 1 of 4): Process MT\_SM\_SGSN

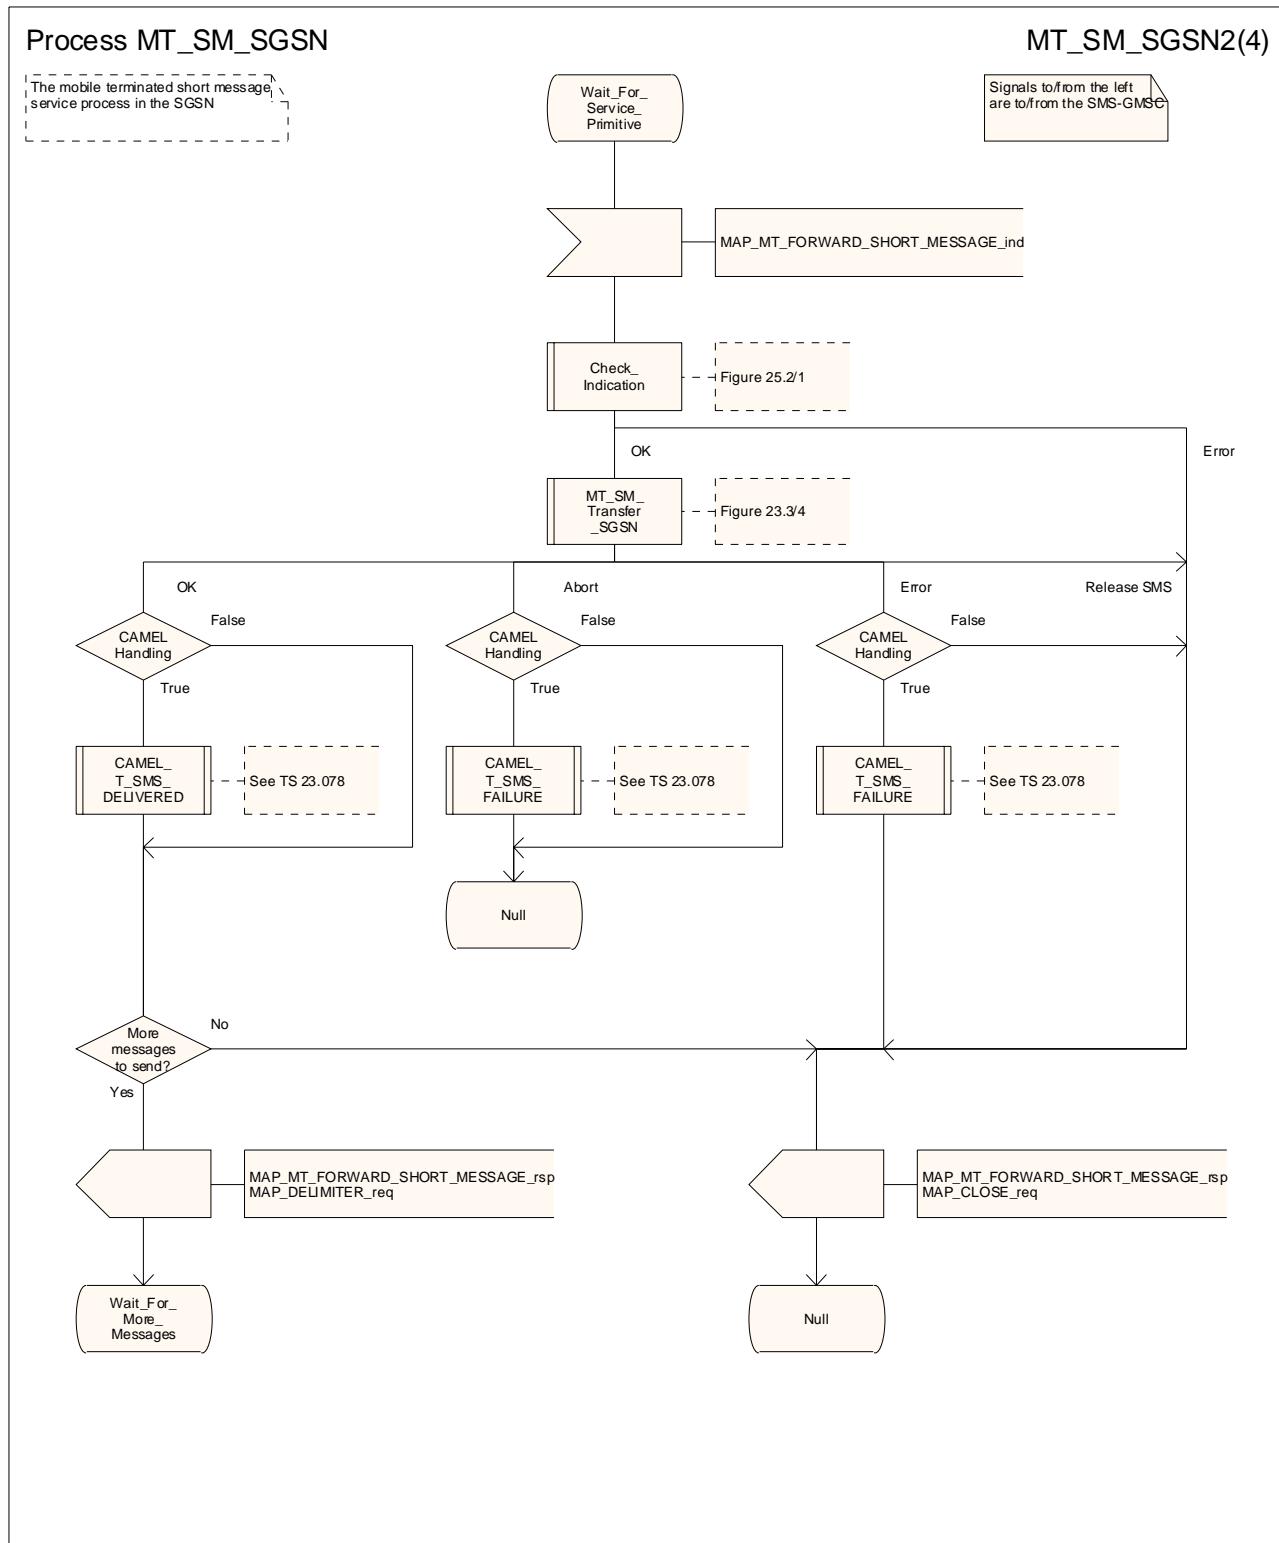


Figure 23.3/10 (sheet 2 of 4): Process MT\_SM\_SGSN

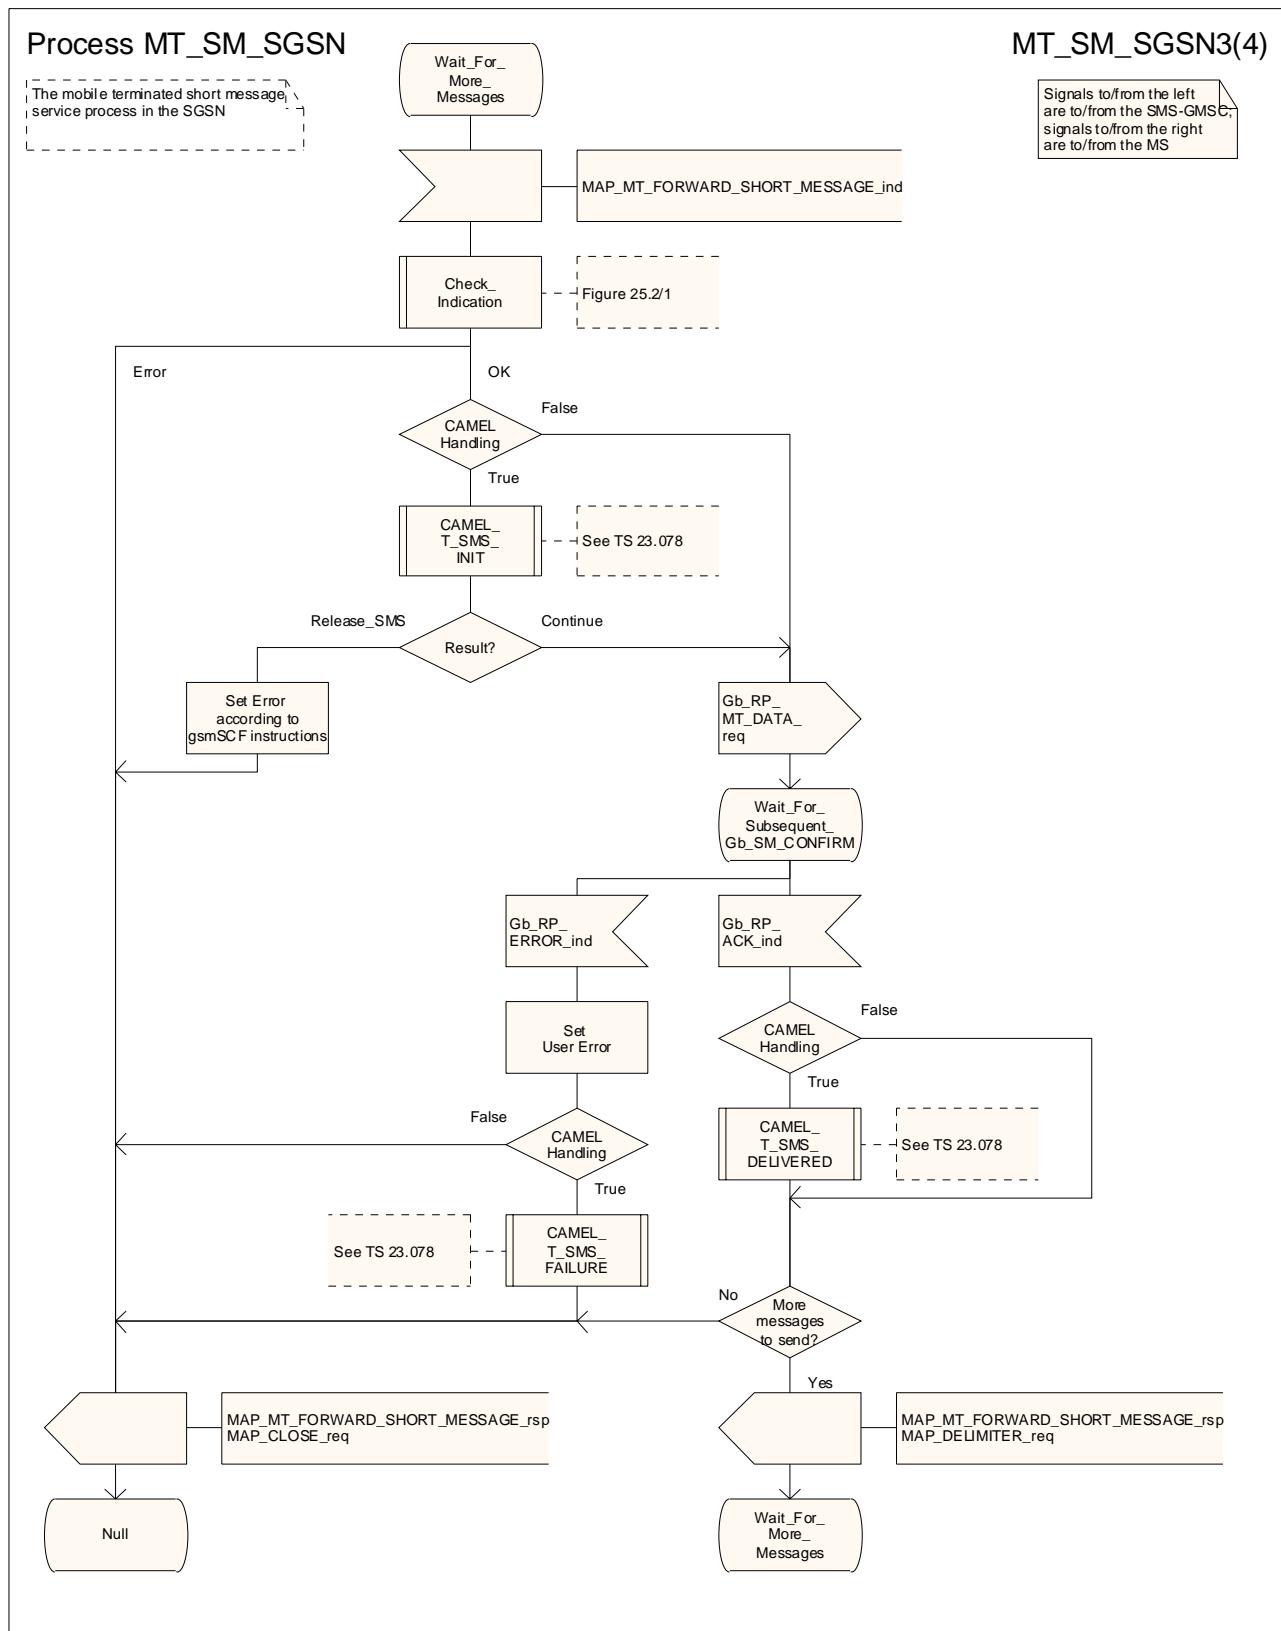


Figure 23.3/10 (sheet 3 of 4): Process MT\_SM\_SGSN

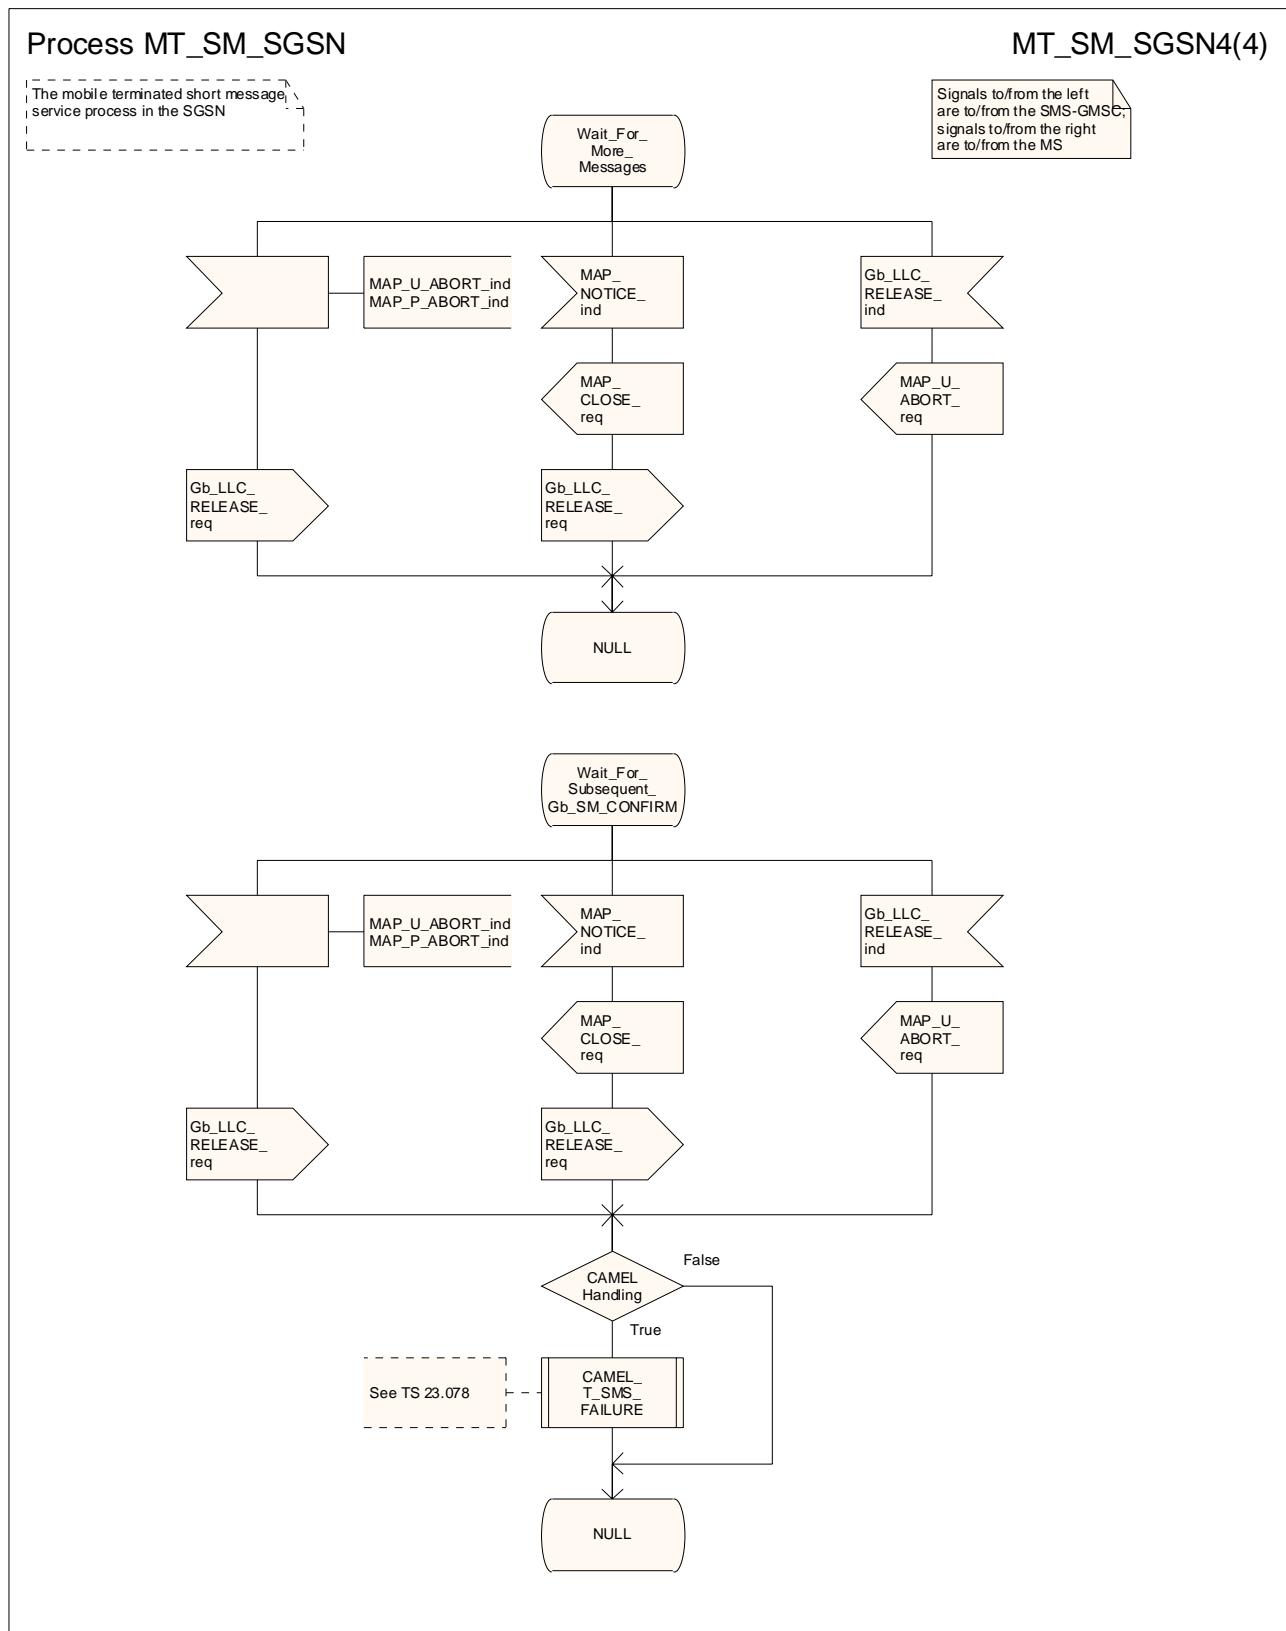


Figure 23.3/10 (sheet 4 of 4): Process MT\_SM\_SGSN

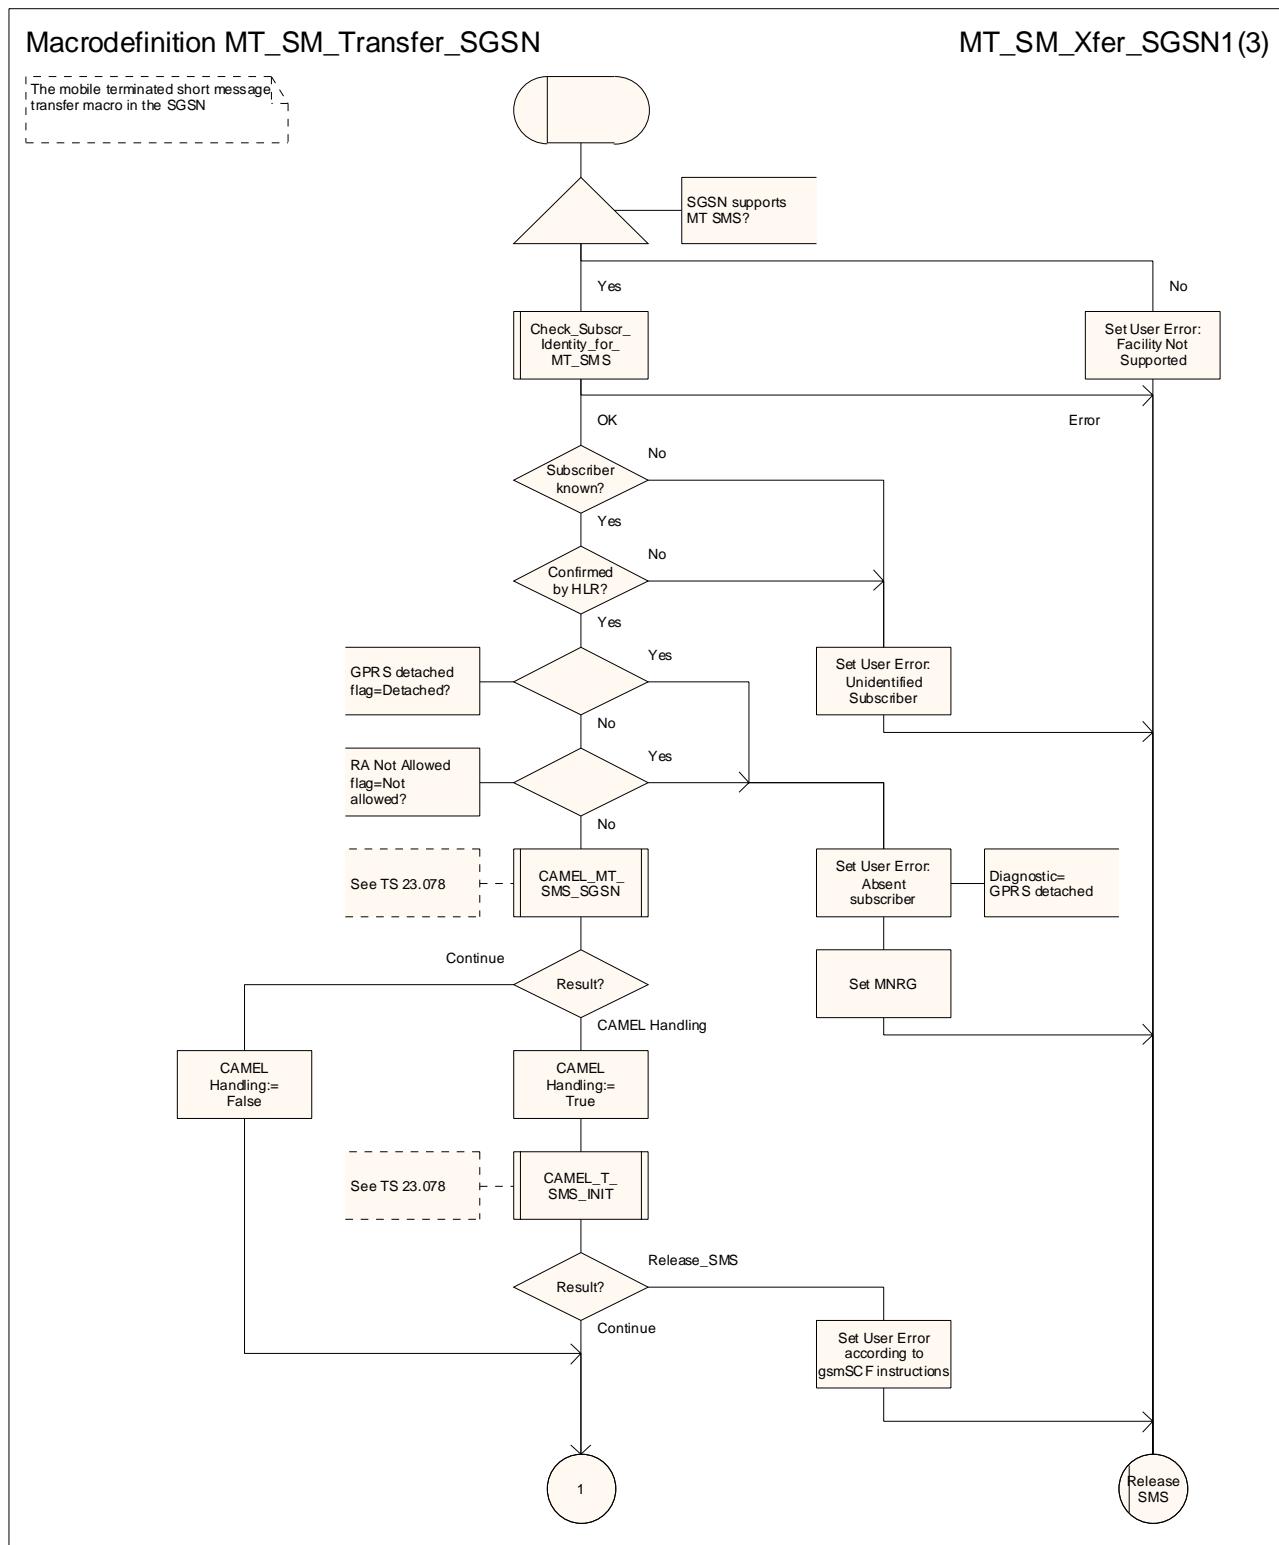


Figure 23.3/11 (sheet 1 of 3): Macro MT\_SM\_TRANSFER\_SGSN

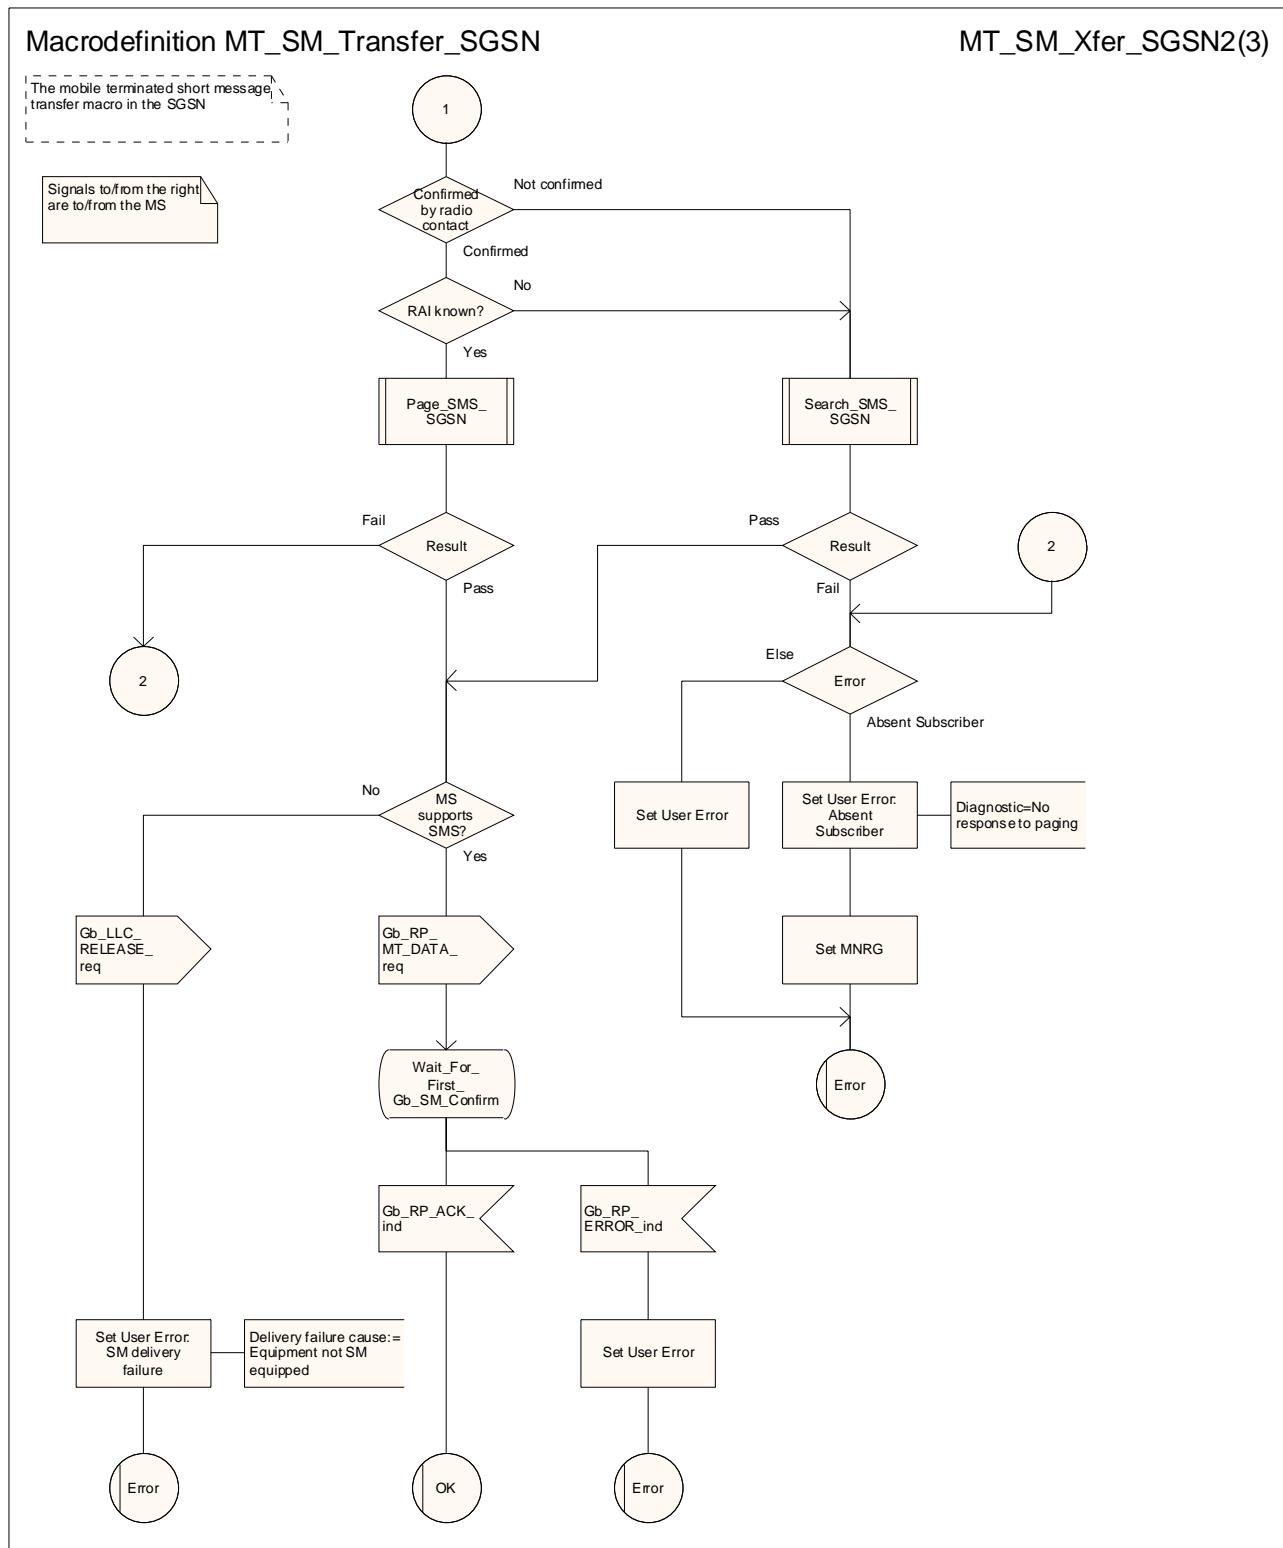


Figure 23.3/11 (sheet 2 of 3): Macro MT\_SM\_TRANSFER\_SGSN

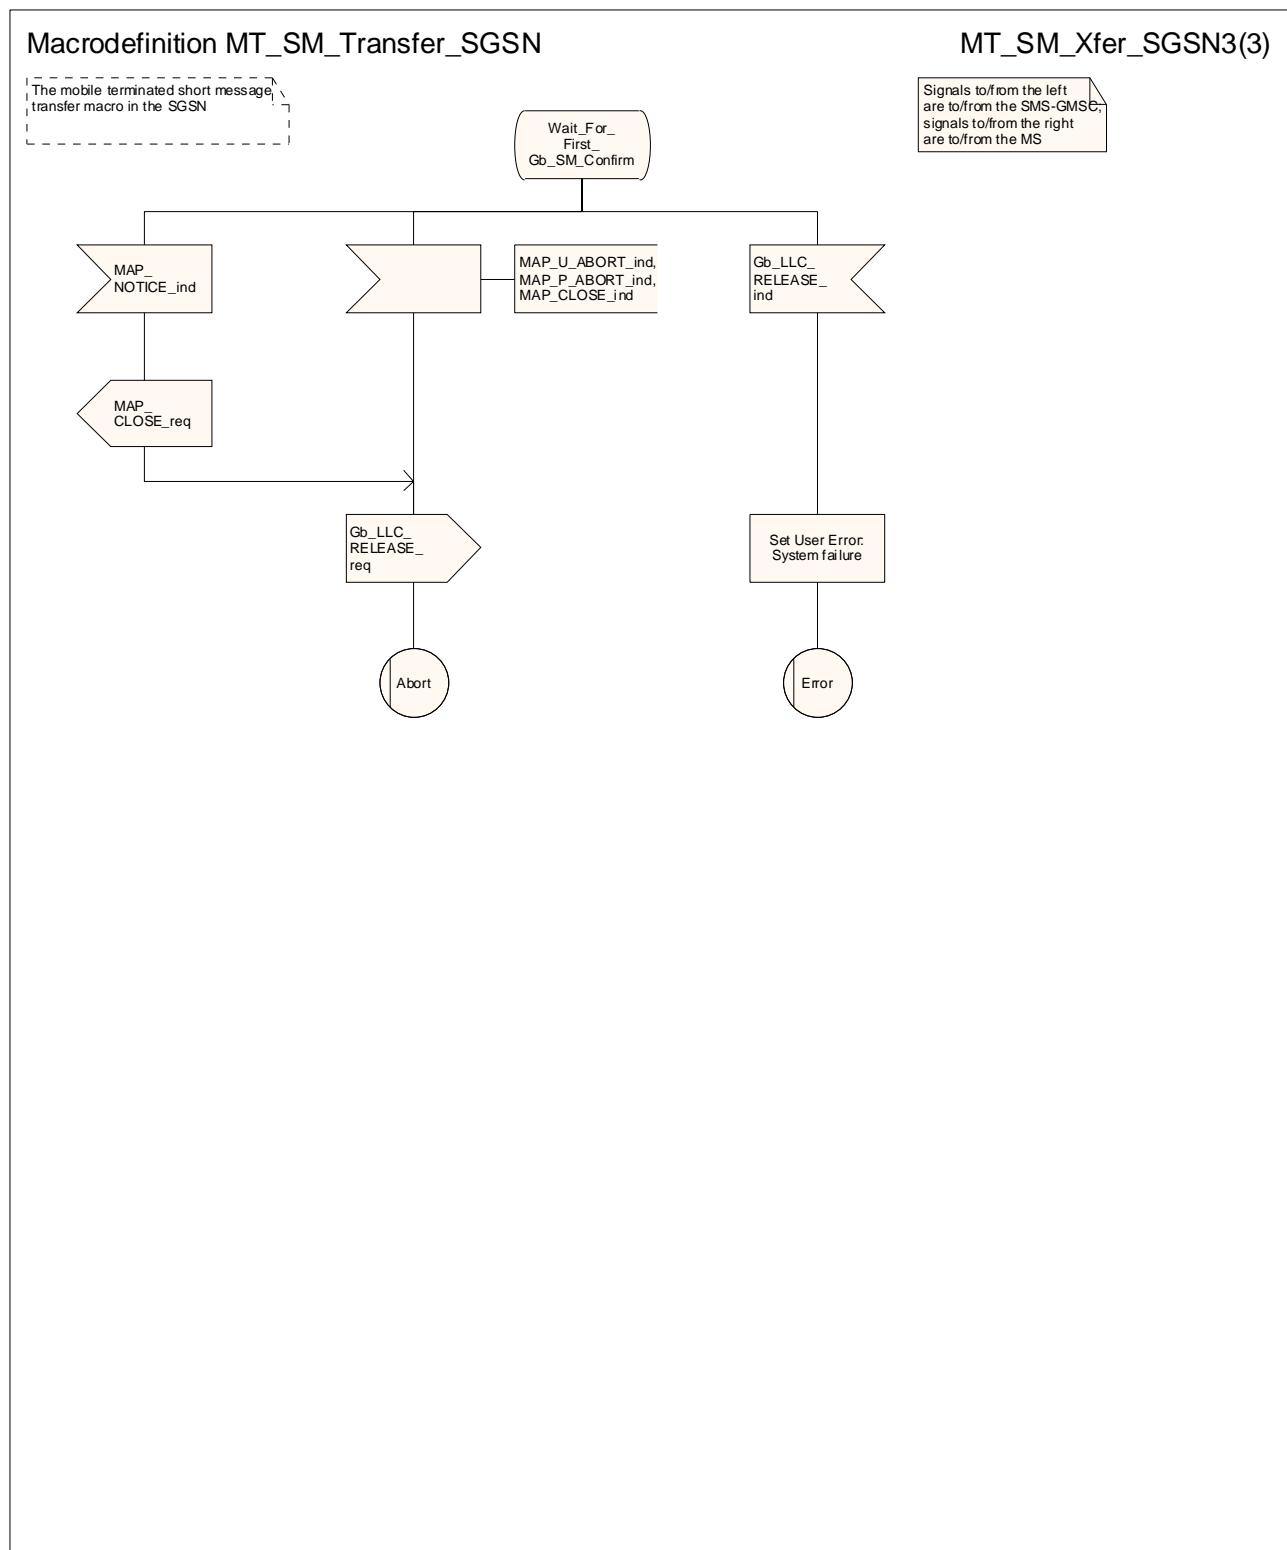


Figure 23.3/11 (sheet 3 of 3): Macro MT\_SM\_TRANSFER\_SGSN

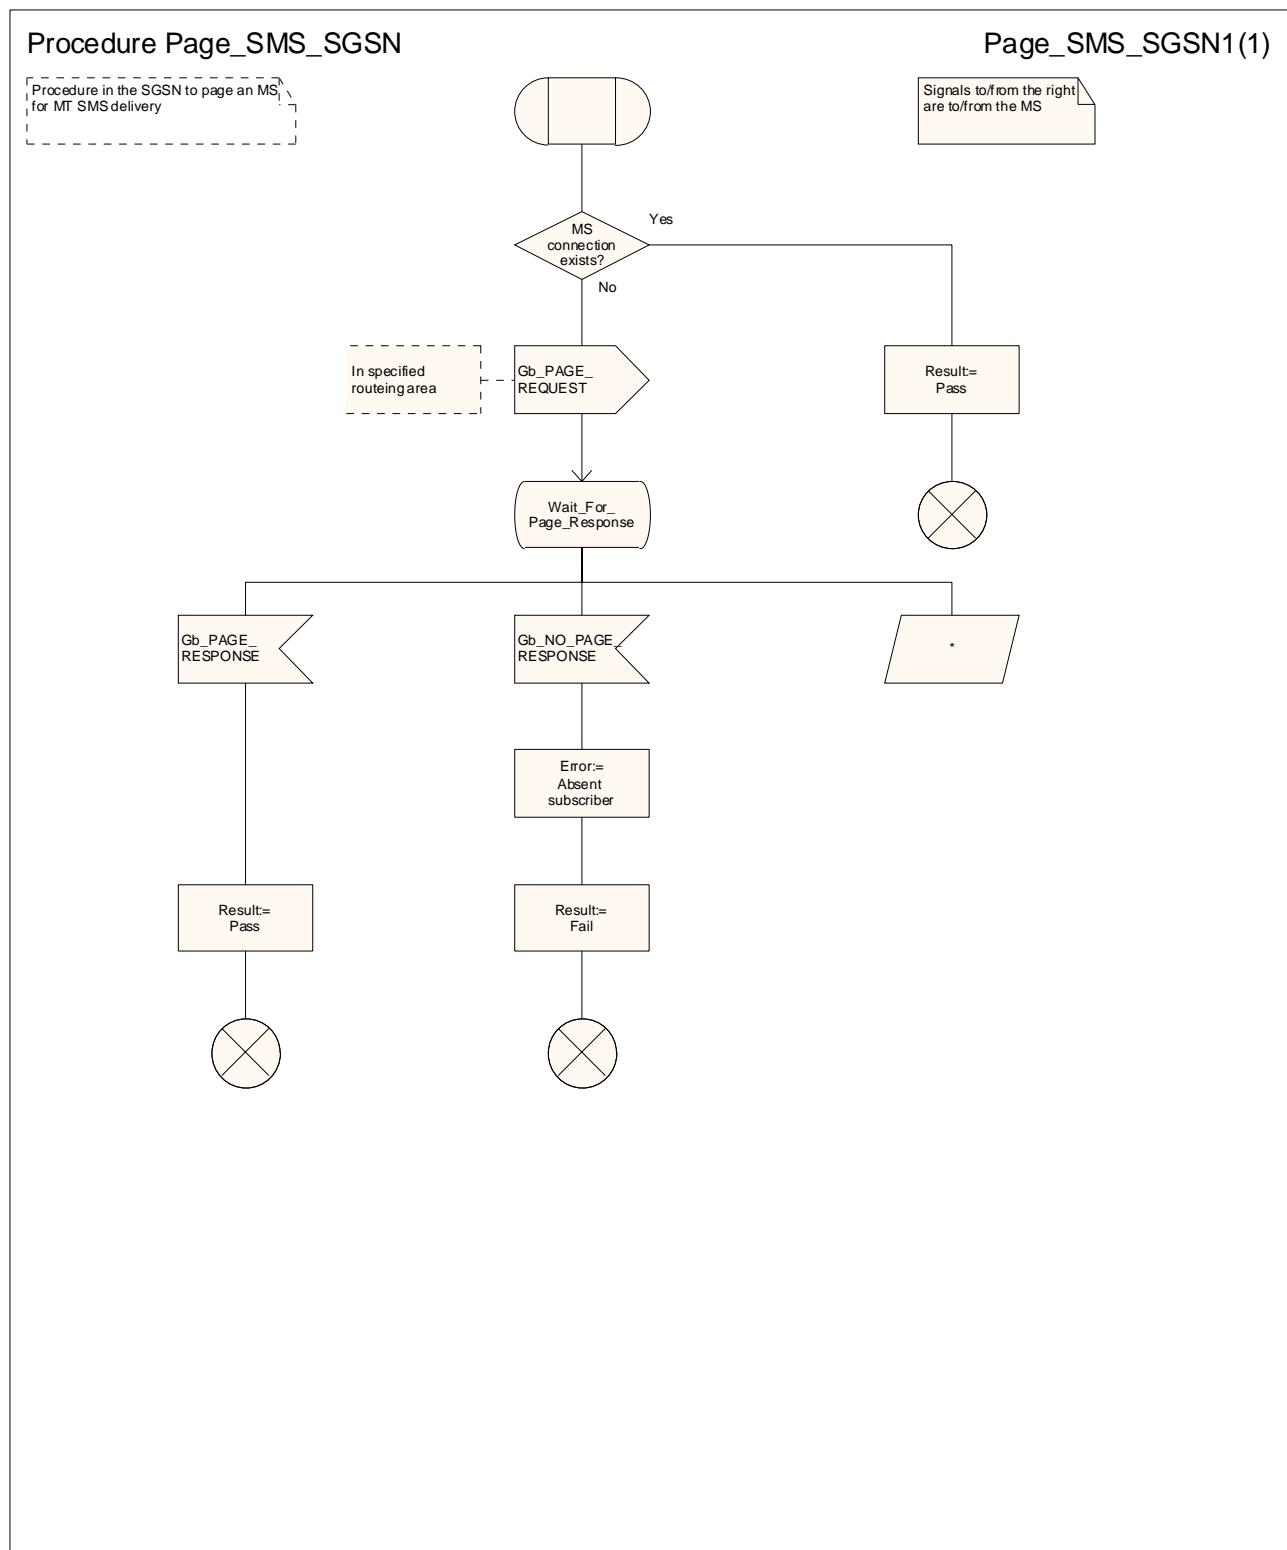


Figure 23.3/12 (sheet 1 of 1): Procedure Page\_SMS\_SGSN


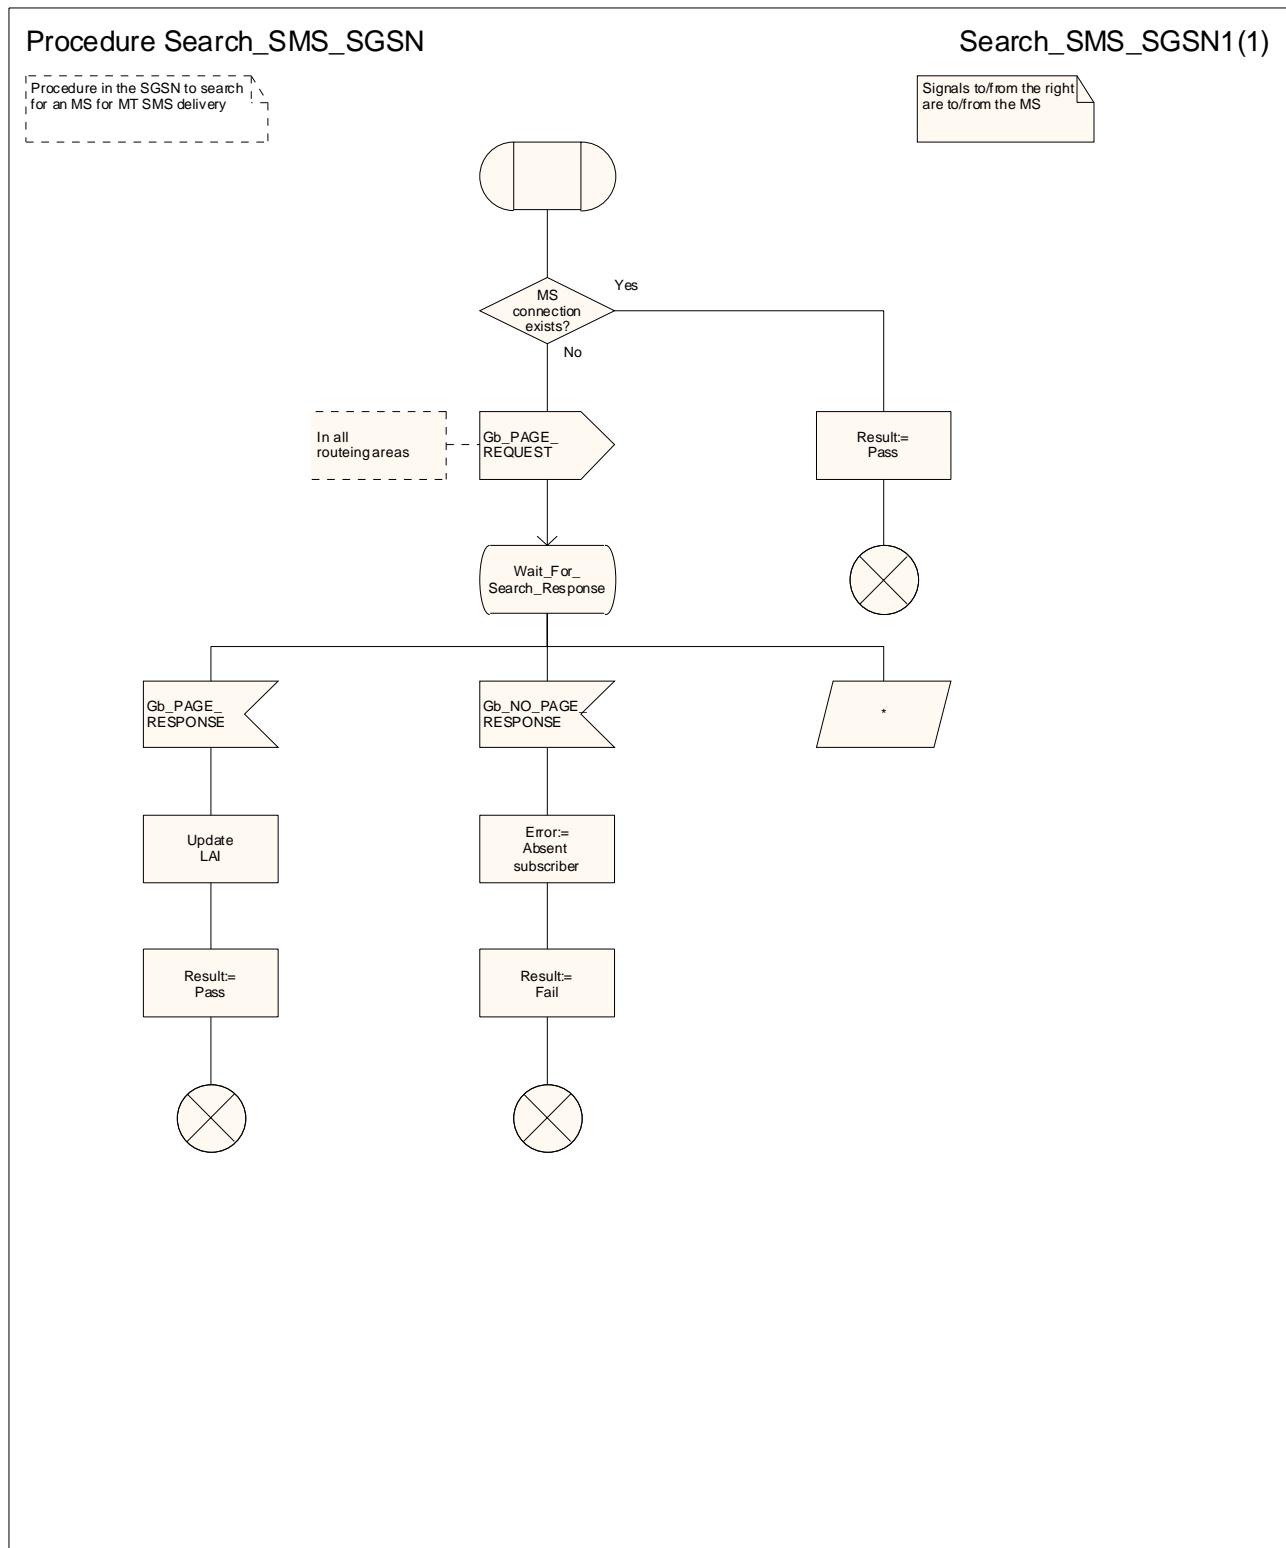


Figure 23.3/13 (sheet 1 of 1): Procedure Search\_SMS\_SGSN

## 23.4 The Short Message Alert procedure

The Short Message Alert procedure is used to alert the Service Centre when the mobile subscriber is active after a short message transfer has failed because the mobile subscriber is not reachable, or when the MS has indicated that it has memory capacity to accept a short message.

The message flow for the Short Message Alert procedure for the case when the mobile subscriber was not reachable is shown in figure 23.4/1.

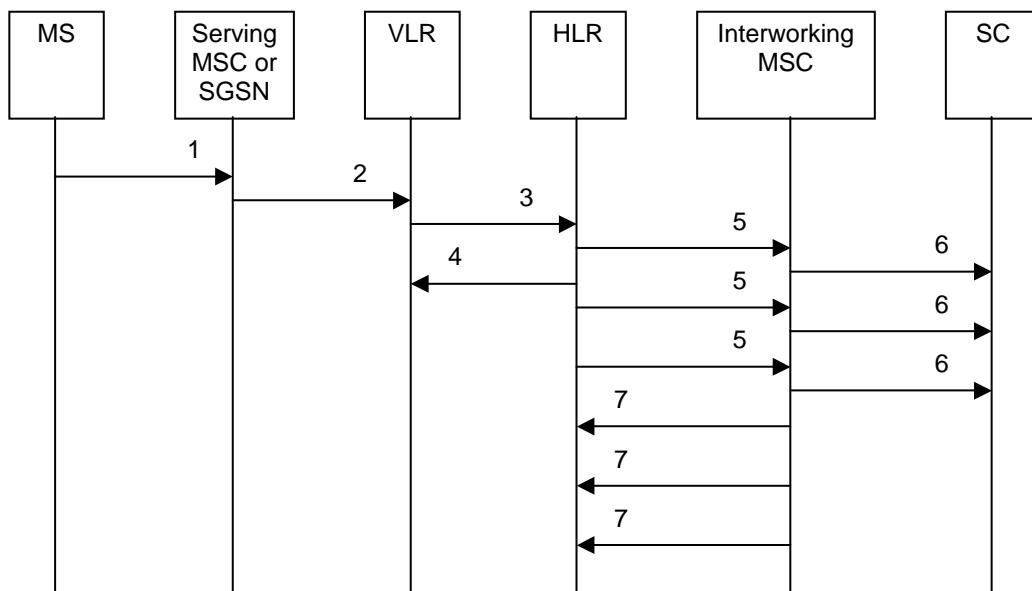

1) CM Service Request (\*\*), Page response or Location Updating [35].

2) MAP\_PROCESS\_ACCESS\_REQUEST / MAP\_UPDATE\_LOCATION\_AREA (\*\*).

3) MAP\_READY\_FOR\_SM (Mobile Present) / MAP\_UPDATE\_LOCATION /  
Supplementary Service Control Request (\*).

4) MAP\_READY\_FOR\_SM\_ACK (\*).

5) MAP\_ALERT\_SERVICE CENTRE (notes 1 and 2).

6) Alert Service Centre [23.140].

7) MAP\_ALERT\_SERVICE CENTRE ACK.

NOTE 1: To all Service Centres in the Message Waiting List.


NOTE 2: The HLR initiates the MAP\_ALERT\_SERVICE CENTRE service only if the MS Memory Capacity Exceeded flag is clear.

(\*) For GPRS, messages 3) and 4) are sent/received by the SGSN.

(\*\*) Those messages are not used by the SGSN.

**Figure 23.4/1: Short message alert procedure (Mobile is present)**

The message flow for the Short Message Alert procedure for the case where the MS indicates that it has memory capacity to accept one or more short messages is shown in figure 23.4/2.

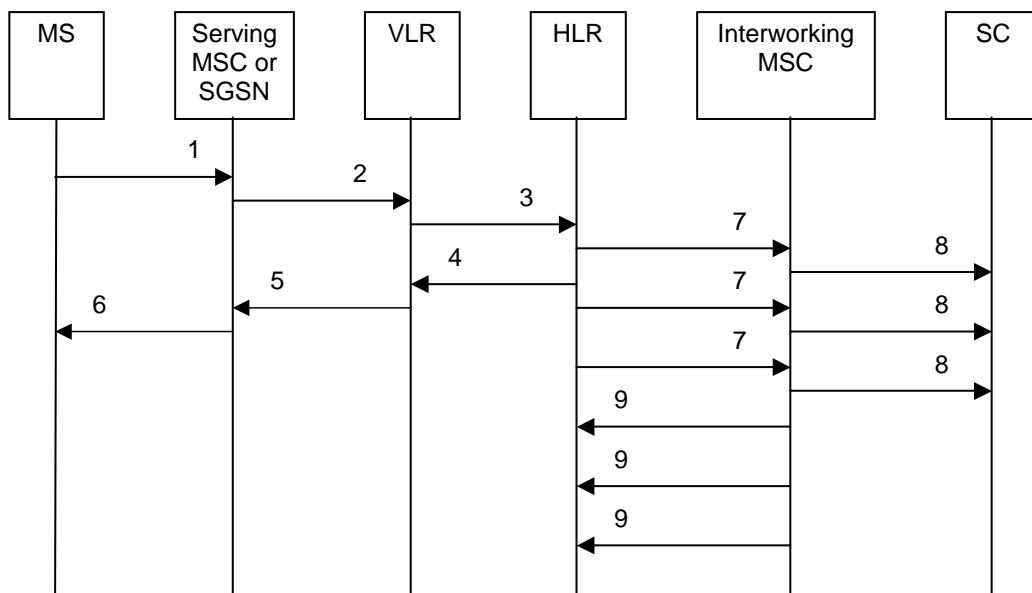

- 1) SM memory capacity available ( 3GPP TS 24.011 [37]).  
 2) MAP\_READY\_FOR\_SM (Memory Available) (\*).  
 3) MAP\_READY\_FOR\_SM (Memory Available) (\*\*).  
 4) MAP\_READY\_FOR\_SM\_ACK (\*\*).  
 5) MAP\_READY\_FOR\_SM\_ACK (\*).  
 6) SM memory capacity available (Acknowledge) (3GPP TS 24.011 [37]).  
 7) MAP\_ALERT\_SERVICE\_CENTRE (note).  
 8) Alert Service Centre (3GPP TS 23.140).  
 9) MAP\_ALERT\_SERVICE\_CENTRE\_ACK.
- NOTE: To all Service Centres in the Message Waiting List.  
 (\*) Message 2) and 5) are not used by the SGSN.  
 (\*\*) For GPRS, messages 3) and 4) are sent/received by the SGSN.


**Figure 23.4/2: Short message alert procedure (MS memory capacity available)**

In addition the following MAP services are used in the MS memory available case:

MAP_PROCESS_ACCESS_REQUEST	(see subclause 8.3); (*)
MAP_AUTHENTICATE	(see subclause 8.5); (*)
MAP_SET_CIPHERING_MODE	(see subclause 8.6); (*)
MAP_PROVIDE_IMSI	(see subclause 8.9); (*)
MAP_CHECK_IMEI	(see subclause 8.7);
MAP_FORWARD_NEW_TMSI	(see subclause 8.9); (*)
MAP_TRACE_SUBSCRIBER_ACTIVITY	(see subclause 9.1). (*)

(\*) Those messages are not used by the SGSN.

The Short Message Alert procedure when the MS indicates successful transfer after polling is shown in figure 23.4/3.

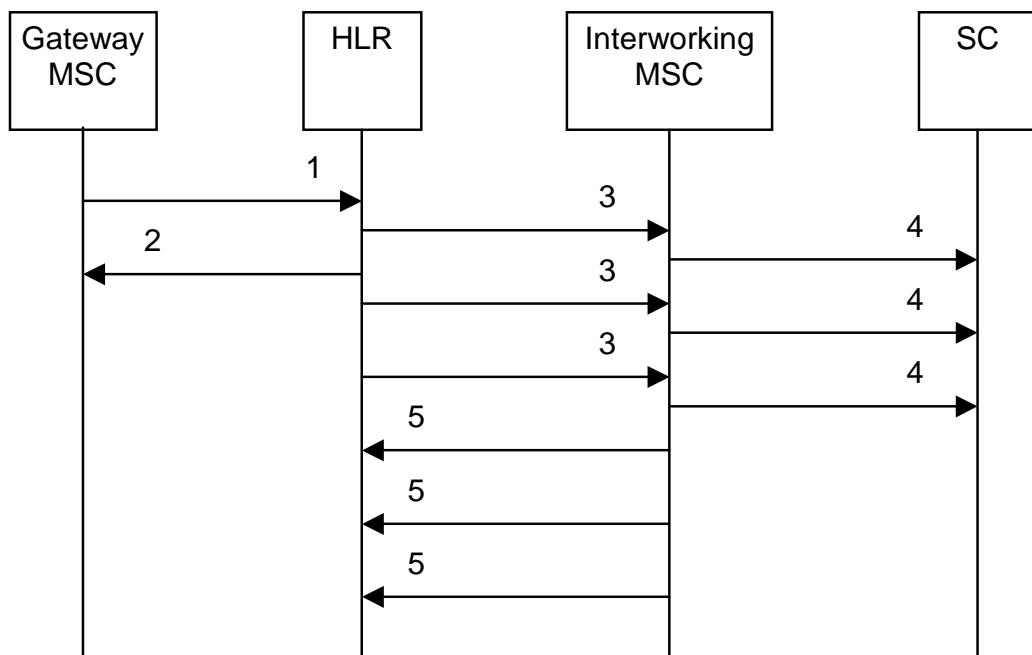

- 1) MAP\_REPORT\_SM\_DELIVERY\_STATUS (Successful Transfer).
  - 2) MAP\_REPORT\_SM\_DELIVERY\_STATUS\_ACK.
  - 3) MAP\_ALERT\_SERVICE CENTRE (note).
  - 4) Alert Service Centre (3GPP TS 23.140).
  - 5) MAP\_ALERT\_SERVICE CENTRE ACK.
- NOTE: To all Service Centres in the Message Waiting List.


**Figure 23.4/3: Short message alert procedure (Successful transfer after polling)**

### 23.4.1 Procedure in the Serving MSC – the MS has memory available

When the MSC receives an SM memory capacity available indication, it sends to the VLR a MAP\_READY\_FOR\_SM request indicating that the MS has memory available, and waits for a response. While the MSC is waiting for the response from the VLR:

- if the MSC receives a Release indication from the A-interface, it aborts the dialogue with the VLR, and the process terminates;
- if the VLR aborts, or prematurely closes, the dialogue, the MSC sends an A\_RP\_ERROR with error cause "Network out of order" to the MS, and the process terminates;
- if the MSC receives a MAP\_READY\_FOR\_SM confirmation from the VLR, it checks the confirmation.
  - if the confirmation includes an error, the MSC sends an A\_RP\_ERROR with the appropriate error cause to the MS, and the process terminates;
  - if the confirmation indicates a successful outcome, the MSC sends an RP\_ACK to the MS, and the process terminates.

The short message alert process in the MSC for the MS memory capacity available case is shown in figure 23.4/4.

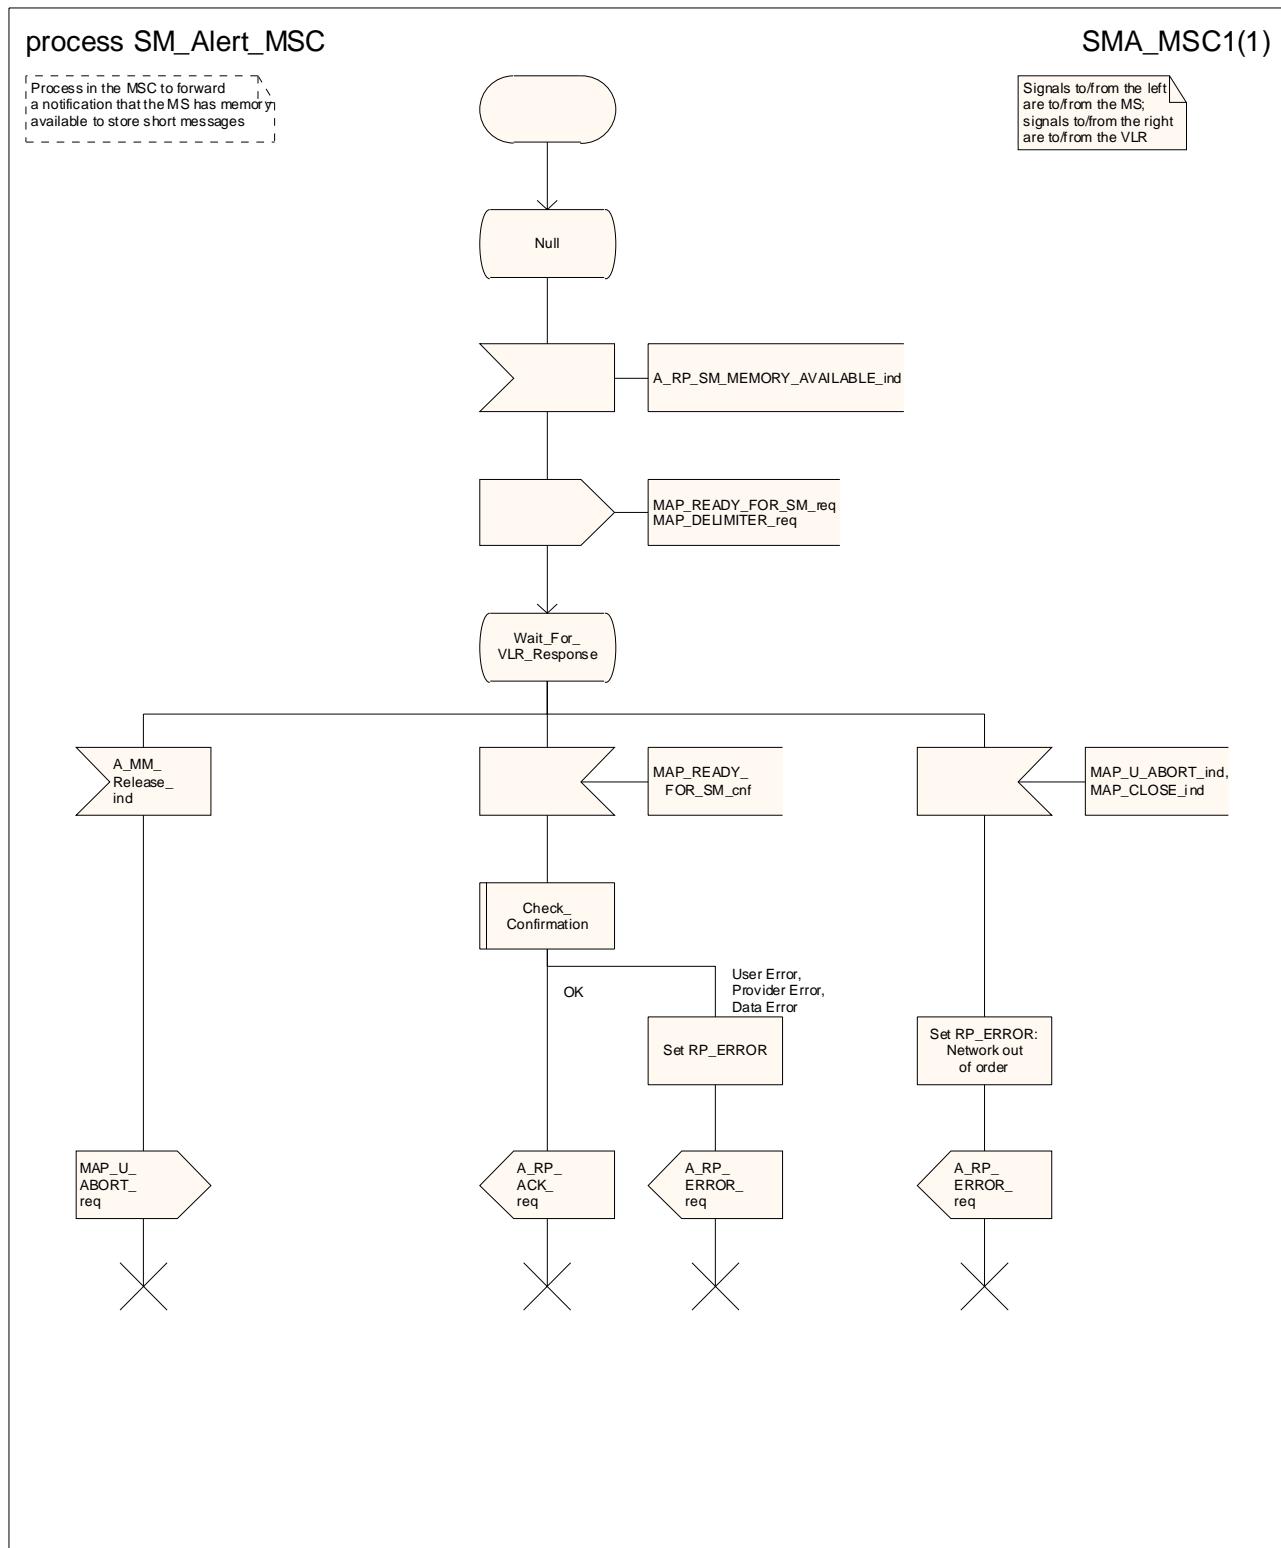**Figure 23.4/4: Procedure SM\_Alert\_MSC**

## 23.4.2 Procedures in the VLR

### 23.4.2.1 The Mobile Subscriber is present

If the VLR successfully handles aMAP\_PROCESS\_ACCESS\_REQUEST indication or a MAP\_UPDATE\_LOCATION\_AREA indication while the MS Not Reachable Flag (MNRF) is set, the VLR sends a MAP\_READY\_FOR\_SM request to the HLR. The Alert Reason is set to indicate that the mobile subscriber is present

for non GPRS. If authentication fails during the handling of a MAP\_PROCESS\_ACCESS\_REQUEST indication or a MAP\_UPDATE\_LOCATION\_AREA indication, the VLR shall not send a MAP\_READY\_FOR\_SM request to the HLR. The process in the VLR is described in detail in subclause 25.10.

### 23.4.2.2 The MS has memory available

The process is triggered by a dialogue opening request followed by a MAP\_PROCESS\_ACCESS\_REQUEST indication including a CM service type Short Message Service.

- if the macro Process\_Access\_Request\_VLR takes the "Error" exit, the process returns to the Null state.
  
- if the macro Process\_Access\_Request\_VLR takes the "OK" exit, the VLR waits for a MAP\_READY\_FOR\_SM indication from the MSC.

When the VLR receives a MAP\_READY\_FOR\_SM indication from the MSC, it checks the indication.

- if the indication is badly formed, the VLR returns a MAP\_READY\_FOR\_SM response containing the appropriate User Error;
- if the indication is OK, the VLR requests a dialogue with the HLR, including a MAP\_READY\_FOR\_SM request with Ready for SM reason Memory available for non-GPRS, and waits for the confirmation of the dialogue.
  - if the macro Receive\_Open\_Cnf takes the "Error" exit, the VLR returns a MAP\_READY\_FOR\_SM response containing a User Error "System failure", and the process returns to the Null state;
  - if the macro Receive\_Open\_Cnf takes the "V1" exit, the VLR returns a MAP\_READY\_FOR\_SM response containing a User Error "Facility not supported", and the process returns to the Null state;
  - if the macro Receive\_Open\_Cnf takes the "Vr" (for a version higher than 1) exit, the VLR handles the dialogue according to the specification for the earlier version of the protocol, and the process returns to the Null state;
  - if the macro Receive\_Open\_Cnf takes the "OK" exit, the VLR waits for a response from the HLR.

When the VLR is waiting for a response from the HLR:

- if the dialogue with the HLR fails, the VLR returns a MAP\_READY\_FOR\_SM response containing a User Error "System failure", and the process returns to the Null state;
- if it receives a MAP\_READY\_FOR\_SM confirmation, it checks the confirmation.
  - if the confirmation contains an error, the VLR returns a MAP\_READY\_FOR\_SM response containing the appropriate User Error , and the process returns to the Null state;
  - if the confirmation indicates success, the VLR returns a MAP\_READY\_FOR\_SM response indicating success, and the process returns to the Null state.

The short message alert process in the VLR is shown in figure 23.4/5.

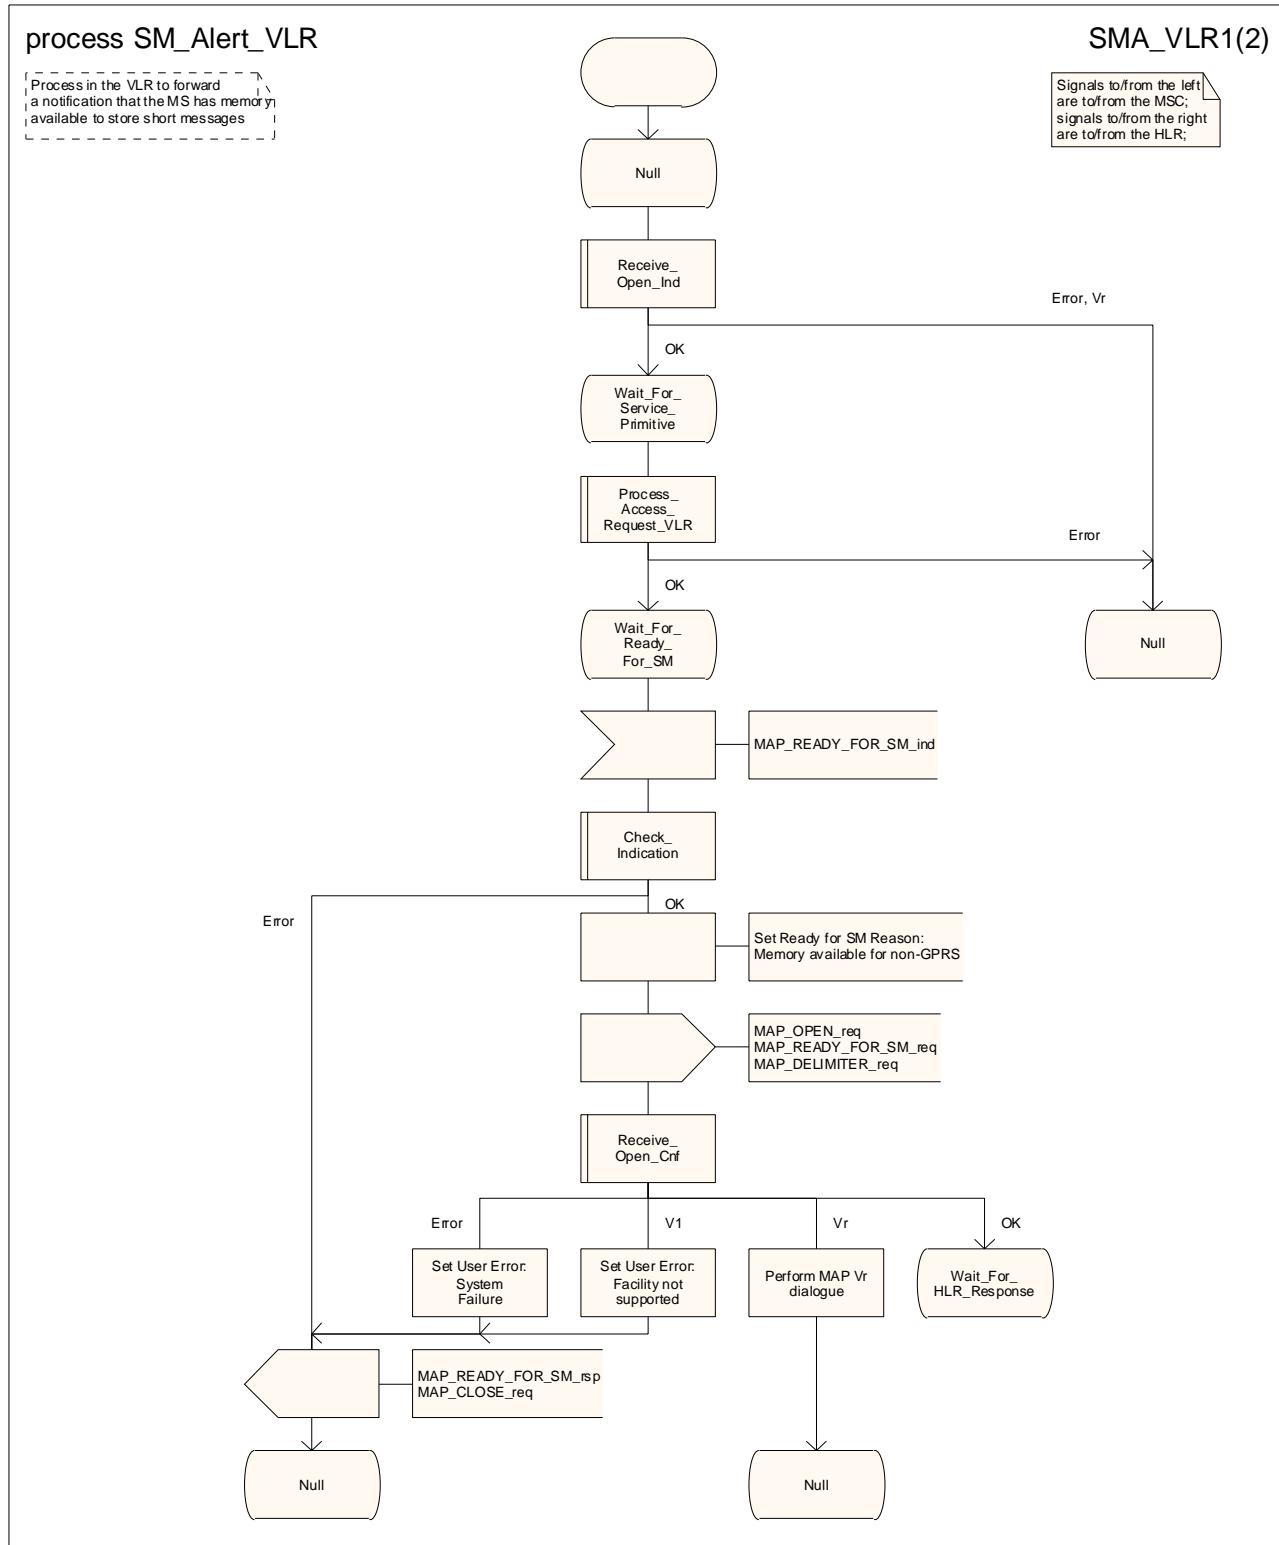


Figure 23.4/5 (sheet 1 of 2): Procedure SM\_Alert\_VLR

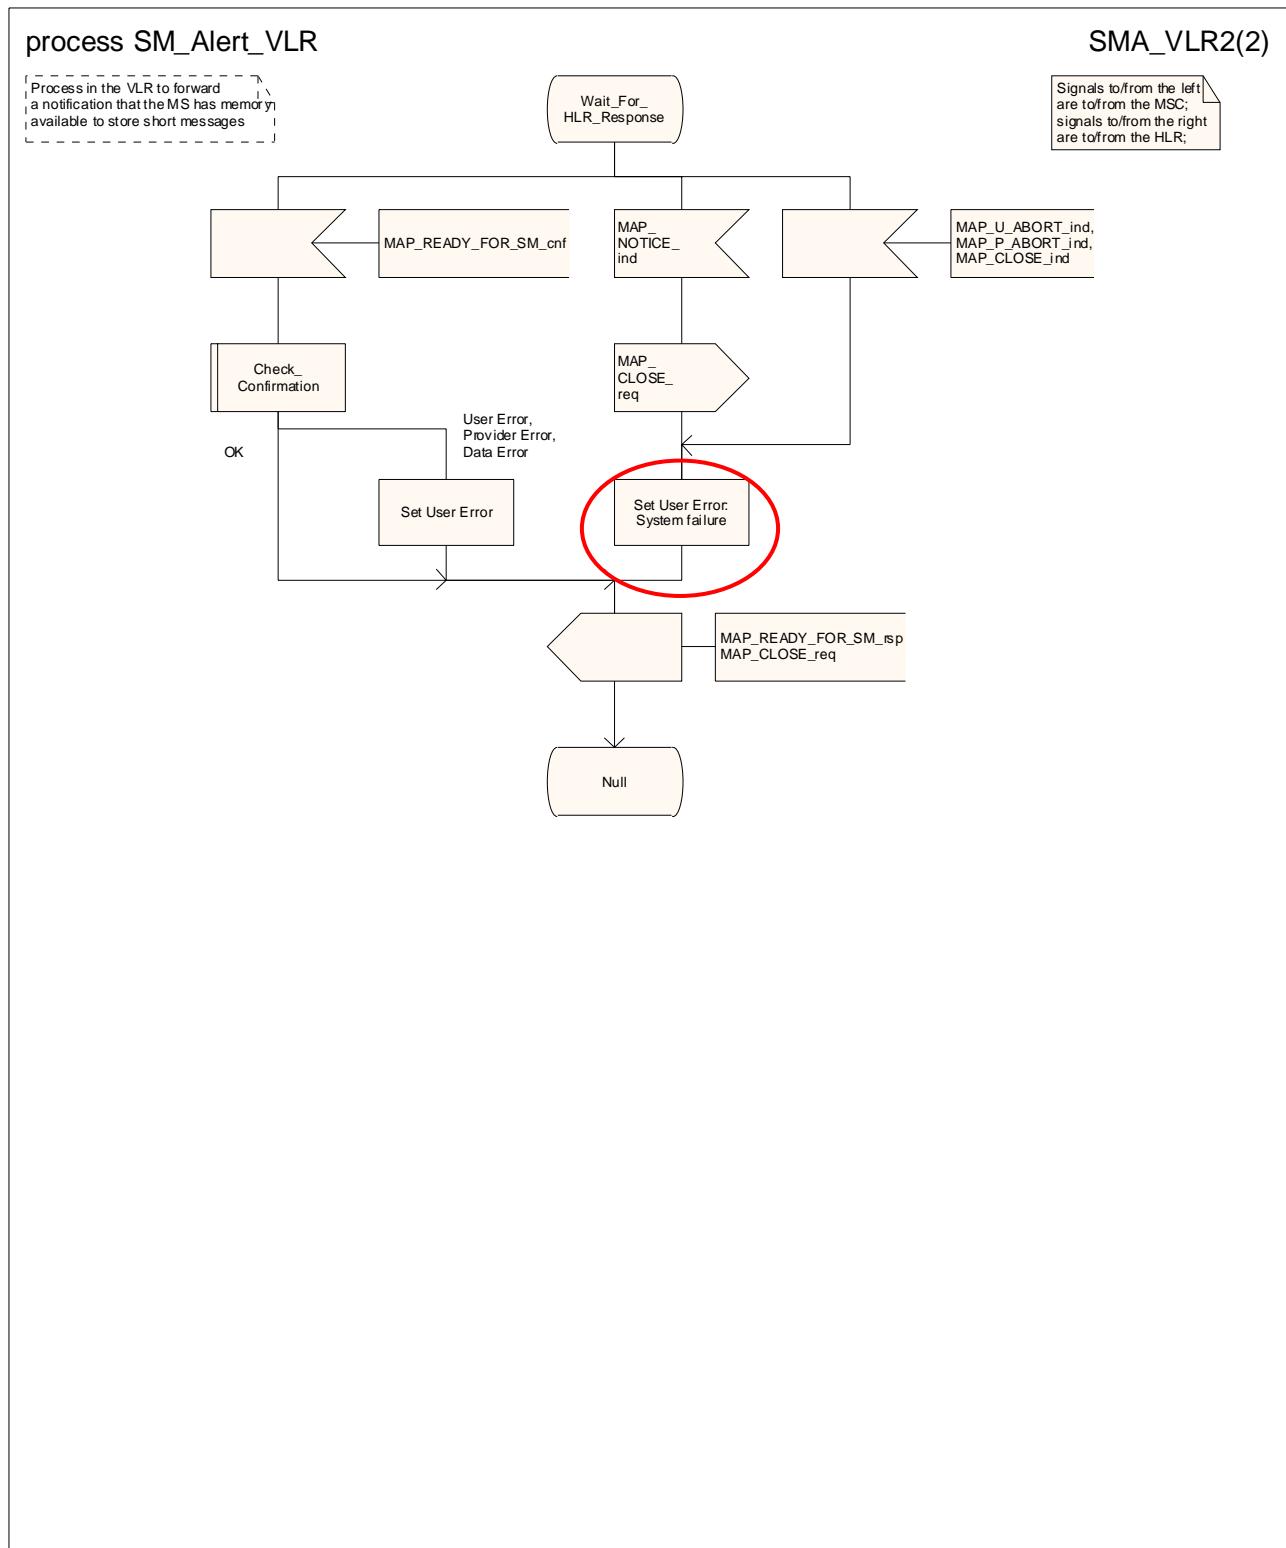


Figure 23.4/5 (sheet 2 of 2): Procedure SM\_Alert\_VLR

### 23.4.3 Procedure in the HLR

The process is triggered by a dialogue opening request using the application context mwdMngtContext.

- if the macro Receive\_Open\_Ind takes the "Error" exit, the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "Vr" exit, the HLR handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;

NOTE: if the dialogue opening request is from an SGSN, version 2 and version 1 of the application context are not applicable.

- if the macro Receive\_Open\_Ind takes the "OK" exit, the HLR waits for a service primitive.

While the HLR is waiting for the service primitive:

- if the dialogue fails, the process returns to the Null state;
- if it receives a MAP\_READY\_FOR\_SM indication, it checks the indication.
  - if the indication is badly formed, the HLR returns a MAP\_READY\_FOR\_SM response containing the appropriate user error, and the process returns to the Null state;
  - if the indication is OK, the HLR checks whether it supports:
    - one or both of MNRF and MNRG, and
    - MCEF and
    - MWD.
  - if the HLR does not support the message waiting features listed, it returns a MAP\_READY\_FOR\_SM response containing the user error "Facility not supported", and the process returns to the Null state;
  - if the HLR supports the message waiting features listed, but the subscriber is not known, it returns a MAP\_READY\_FOR\_SM response containing the user error "Unknown subscriber", and the process returns to the Null state;
  - if the subscriber is known, the HLR returns a MAP\_READY\_FOR\_SM response indicating a successful result, and checks whether one or more of MNRF, MNRG and MCEF is set.
    - if none of MNRF, MNRG and MCEF is set, the HLR starts a race timer and waits for a possible delivery failure report. This allows for the race condition where a delivery failure report is delayed in the path through the SMS-GMSC, and is overtaken by a subsequent "ready for SM" condition reported by the serving node to the HLR;
    - if one or more of MNRF, MNRG and MCEF is set, the HLR continues by handling the alerting process as described below under the heading "Alerting the Service Centre(s)".
- if it receives a MAP\_REPORT\_SM\_DELIVERY\_STATUS indication, it invokes the macro Report\_SM\_Delivery\_Stat\_HLR.
  - if the macro takes the "Error" exit, the HLR waits for a possible MAP\_READY\_FOR\_SM indication;
  - if the macro takes the "OK" exit, the HLR checks whether the delivery was successful.
    - if the delivery was unsuccessful, the HLR waits for a possible MAP\_READY\_FOR\_SM indication;
    - if the delivery was successful, the HLR stops the Race timer, and the process returns to the Null state.

When the HLR is waiting for a possible MAP\_READY\_FOR\_SM indication or MAP\_REPORT\_SM\_DELIVERY\_STATUS indication with the race timer running:

- if the race timer expires, the process returns to the Null state;
- if the HLR receives a dialogue opening request, it invokes the macro Receive\_Open\_Ind.
  - if the macro takes the "Error" exit, the process returns to the Null state;
  - if the macro takes the "Vr" exit, the HLR handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;
  - if the macro Receive\_Open\_Ind takes the "OK" exit, the HLR waits for a service primitive.

#### Alerting the Service Centre(s)

The HLR checks the Ready for SM reason which was received from the serving node.

- if the reason was "Memory available for GPRS", the HLR clears the MNRG flag and the MCEF and invokes the macro Alert\_Service\_Centre HLR (described in subclause 25.10), and the process returns to the Null state;
- if the reason was "Subscriber present for GPRS", the HLR clears the MNRG flag and checks the MCEF.
  - if the MCEF is not set, the HLR invokes the macro Alert\_Service\_Centre HLR (described in subclause 25.10), and the process returns to the Null state;
  - if the MCEF is set, the process returns to the Null state;
- if the reason was "Memory available for non-GPRS", the HLR clears the MNRF and the MCEF and invokes the macro Alert\_Service\_Centre HLR (described in subclause 25.10), and the process returns to the Null state;
- if the reason was "Subscriber present for non-GPRS", the HLR clears the MNRF and checks the MCEF.
  - if the MCEF is not set, the HLR invokes the macro Alert\_Service\_Centre HLR (described in subclause 25.10), and the process returns to the Null state;
  - if the MCEF is set, the process returns to the Null state.

The short message alert process in the HLR is shown in figure 23.4/6.


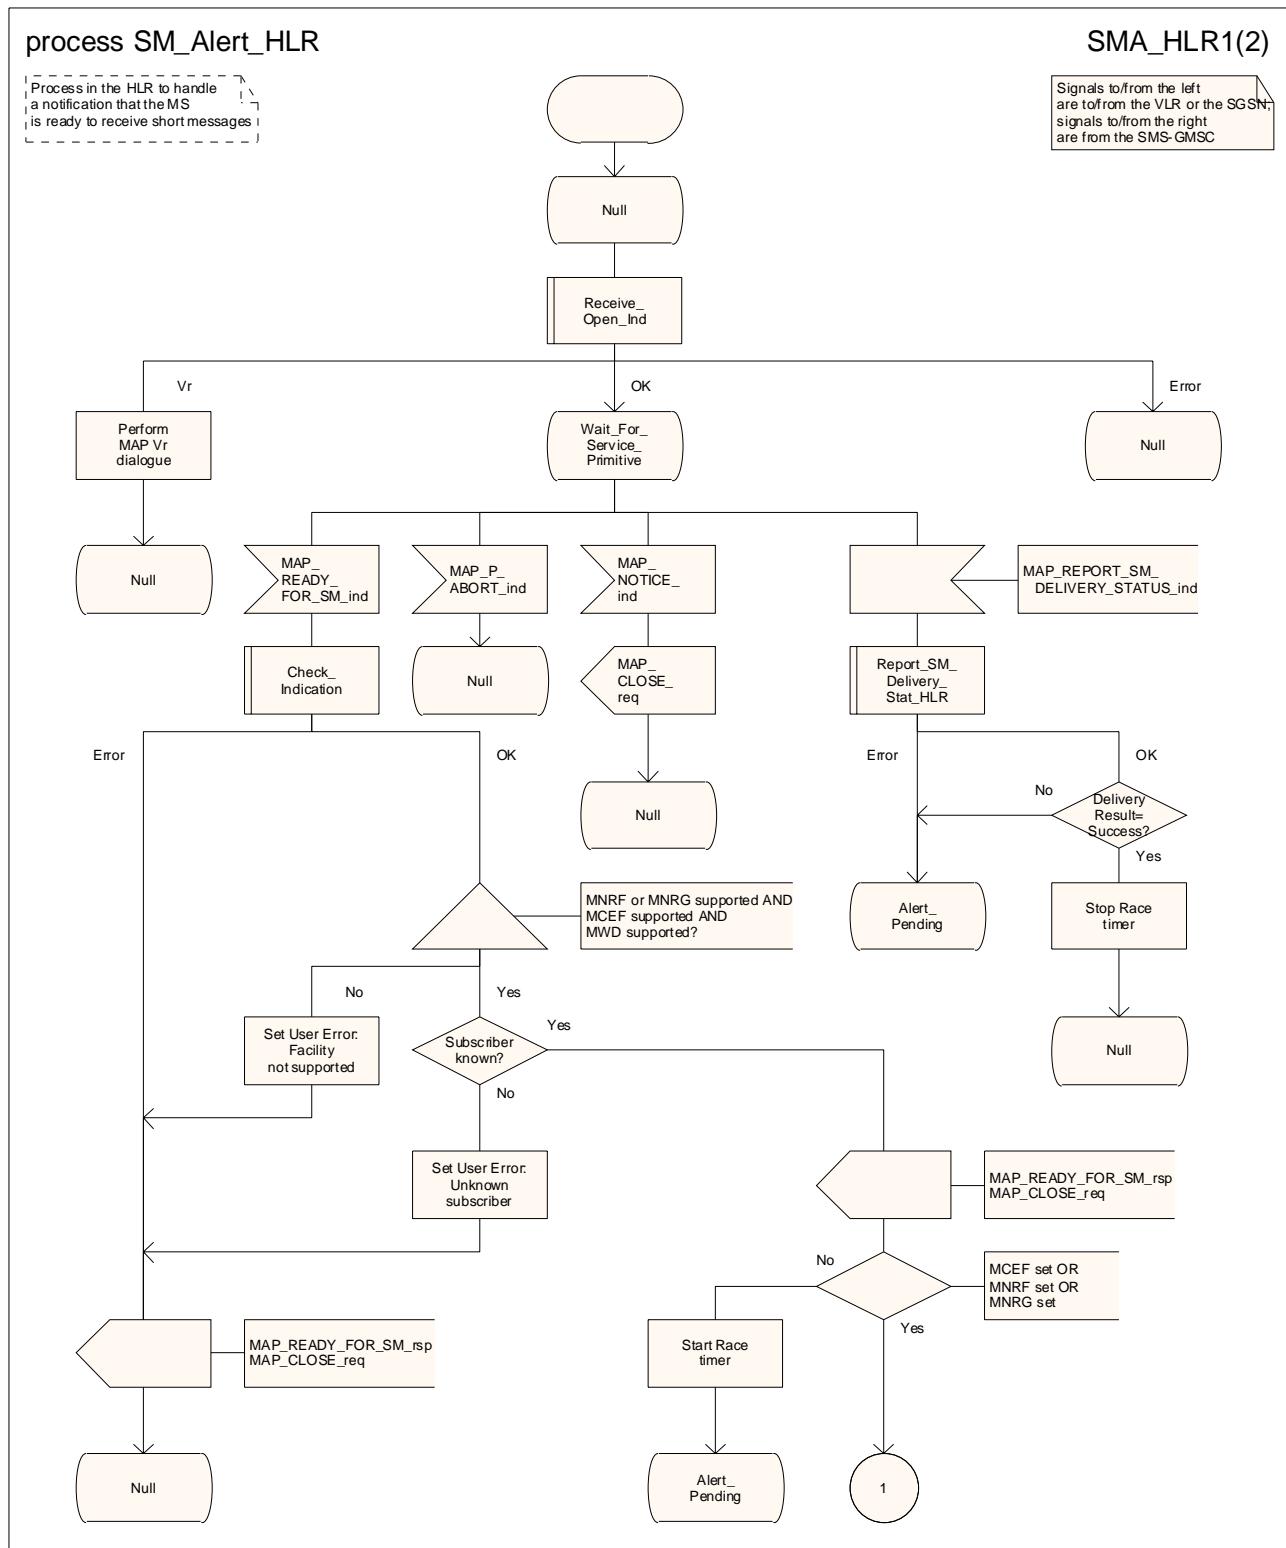


Figure 23.4/6 (sheet 1 of 2): Process SM\_Alert\_HLR

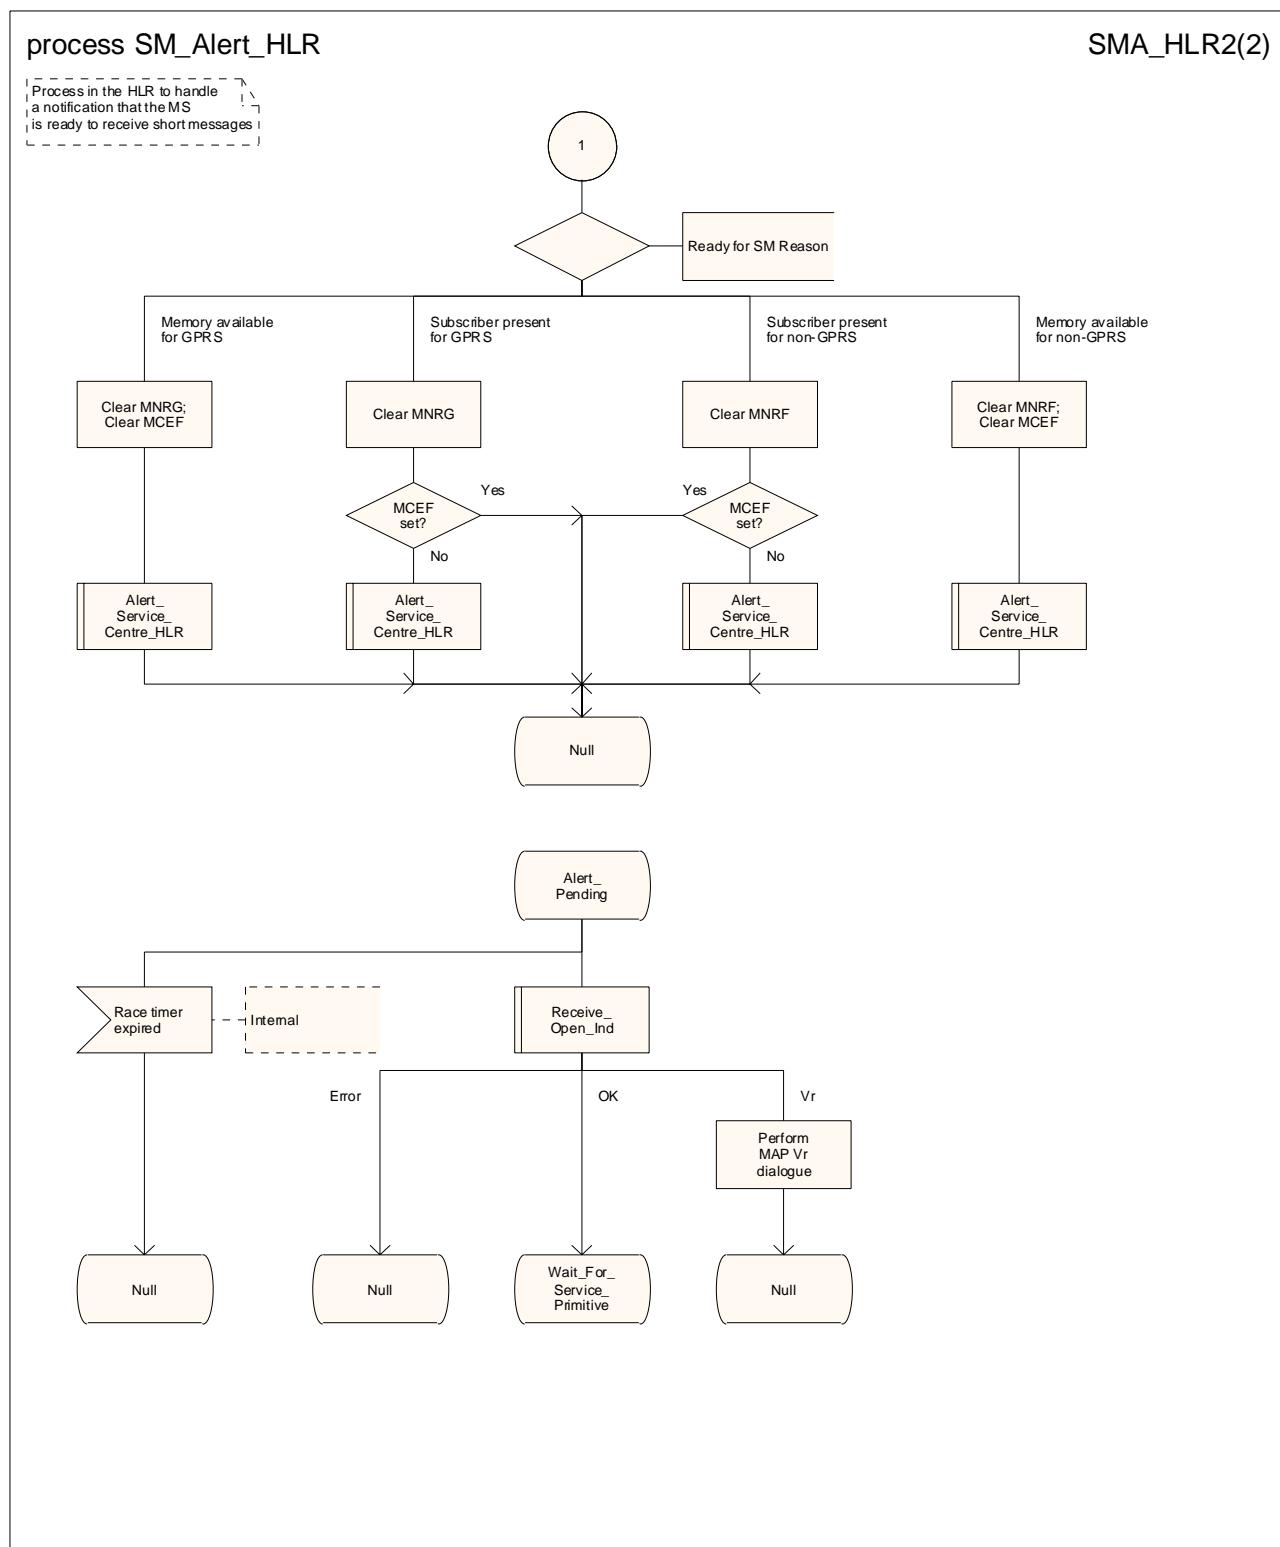

**Figure 23.4/6 (sheet 2 of 2): Process SM\_Alert\_HLR**

### 23.4.4 Procedures in the SMS Interworking MSC


The process is triggered by a dialogue opening request using the application context shortMsgAlertContext.

- if the macro Receive\_Open\_Ind takes the "Error" exit, the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "Vr" exit, the SMS-IWMSC handles the dialogue according to the specification for the earlier version of the protocol and the process returns to the Null state;
- if the macro Receive\_Open\_Ind takes the "OK" exit, the SMS-IWMSC waits for a service primitive.

While the SMS-IWMSC is waiting for the service primitive:

- if the dialogue fails, the process returns to the Null state;
- if it receives a MAP\_ALERT\_SERVICE\_CENTRE indication, it checks the indication.
  - if the indication is badly formed, the SMS-IWMSC returns a MAP\_ALERT\_SERVICE\_CENTRE response containing the appropriate user error, and the process returns to the Null state;
  - if the indication is OK, the SMS-IWMSC sends an SC\_RP\_ALERT\_SC request to the Service Centre and returns a MAP\_ALERT\_SERVICE\_CENTRE response indicating a successful result, and the process returns to the Null state.

The short message alert process in the SMS-IWMSC is shown in figure 23.4/7.

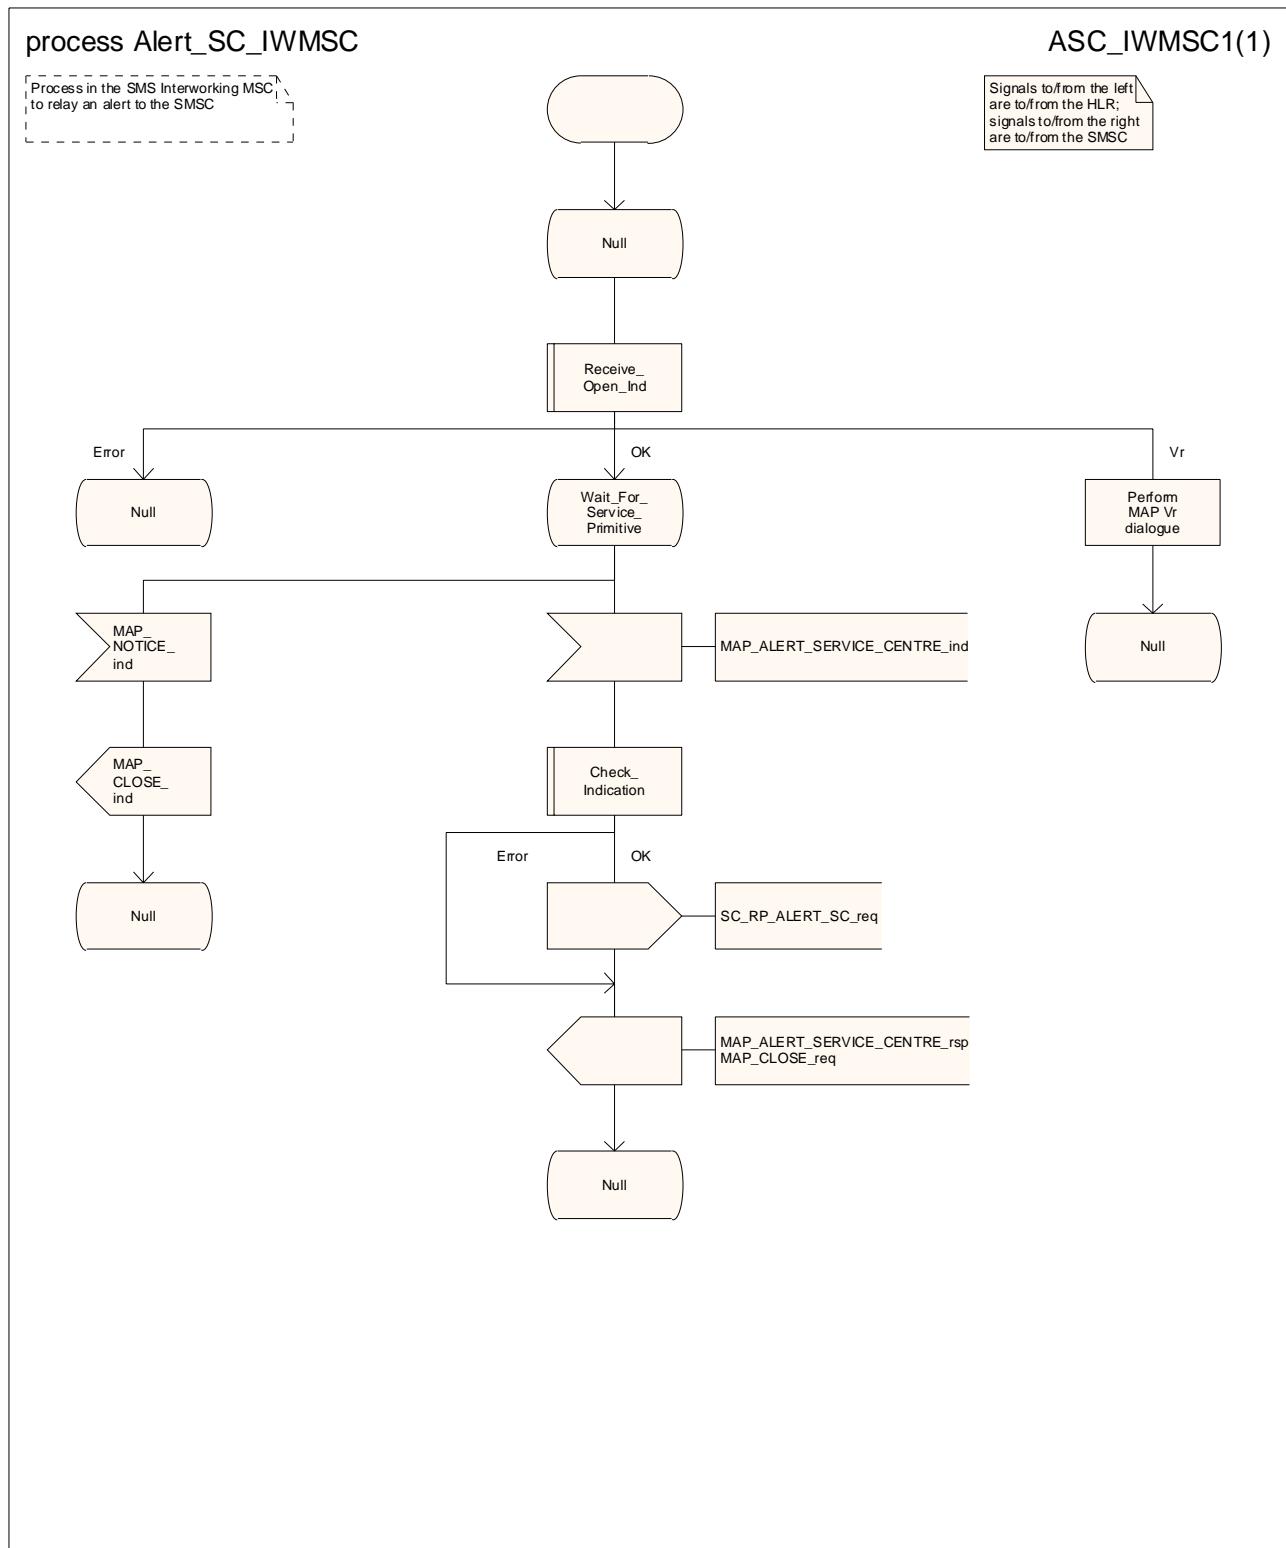**Figure 23.4/7: Process Alert\_SC\_IWMSC**

## 23.4.5 Procedures in the SGSN

### 23.4.5.1 The Mobile Subscriber is present

If the SGSN successfully handles a Page response, Attach request or Routing Area Update request message (3GPP TS 24.008 [35]), while the MS Not Reachable for GPRS (MNRG) flag is set, the SGSN sends a MAP\_READY\_FOR\_SM request to the HLR. The Alert Reason is set to indicate that the mobile subscriber is present for GPRS. If authentication

fails during the handling of a Page response, Attach request or Routing Area Update request, the SGSN shall not send a MAP\_READY\_FOR\_SM request to the HLR

The process in the SGSN is described in detail in subclause 25.10/3.

### 23.4.5.2 The Mobile Equipment has memory available

The process is triggered by an RP\_SM\_MEMORY\_AVAILABLE indication from the MS.

The SGSN requests a dialogue with the HLR, including a MAP\_READY\_FOR\_SM request with Ready for SM reason Memory available for GPRS, and waits for the confirmation of the dialogue.

- if the macro Receive\_Open\_Cnf takes the "Error" exit, the SGSN returns an error response containing an RP\_ERROR "Network out of order", and the process returns to the Null state;
- if the macro Receive\_Open\_Cnf takes the "Vr" exit, the SGSN returns an error response containing an RP\_ERROR "Facility not supported", and the process returns to the Null state;
- if the macro Receive\_Open\_Cnf takes the "OK" exit, the VLR waits for a response from the HLR.

When the SGSN is waiting for a response from the HLR:

- if the dialogue with the HLR fails, the SGSN returns an error response containing an RP\_ERROR "Network out of order", and the process returns to the Null state;
- if it receives a Release indication from the Gb interface, it aborts the dialogue with the HLR, and the process returns to the Null state;
- if the SGSN receives a MAP\_READY\_FOR\_SM confirmation, it checks the confirmation.
  - if the confirmation contains an error, the SGSN returns an error response containing the appropriate RP\_ERROR, and the process returns to the Null state;
  - if the confirmation indicates success, the SGSN returns an RP\_ACK, and the process returns to the Null state.

The short message alert procedure in the SGSN for the MS memory capacity available case is shown in figure 23.4/8.

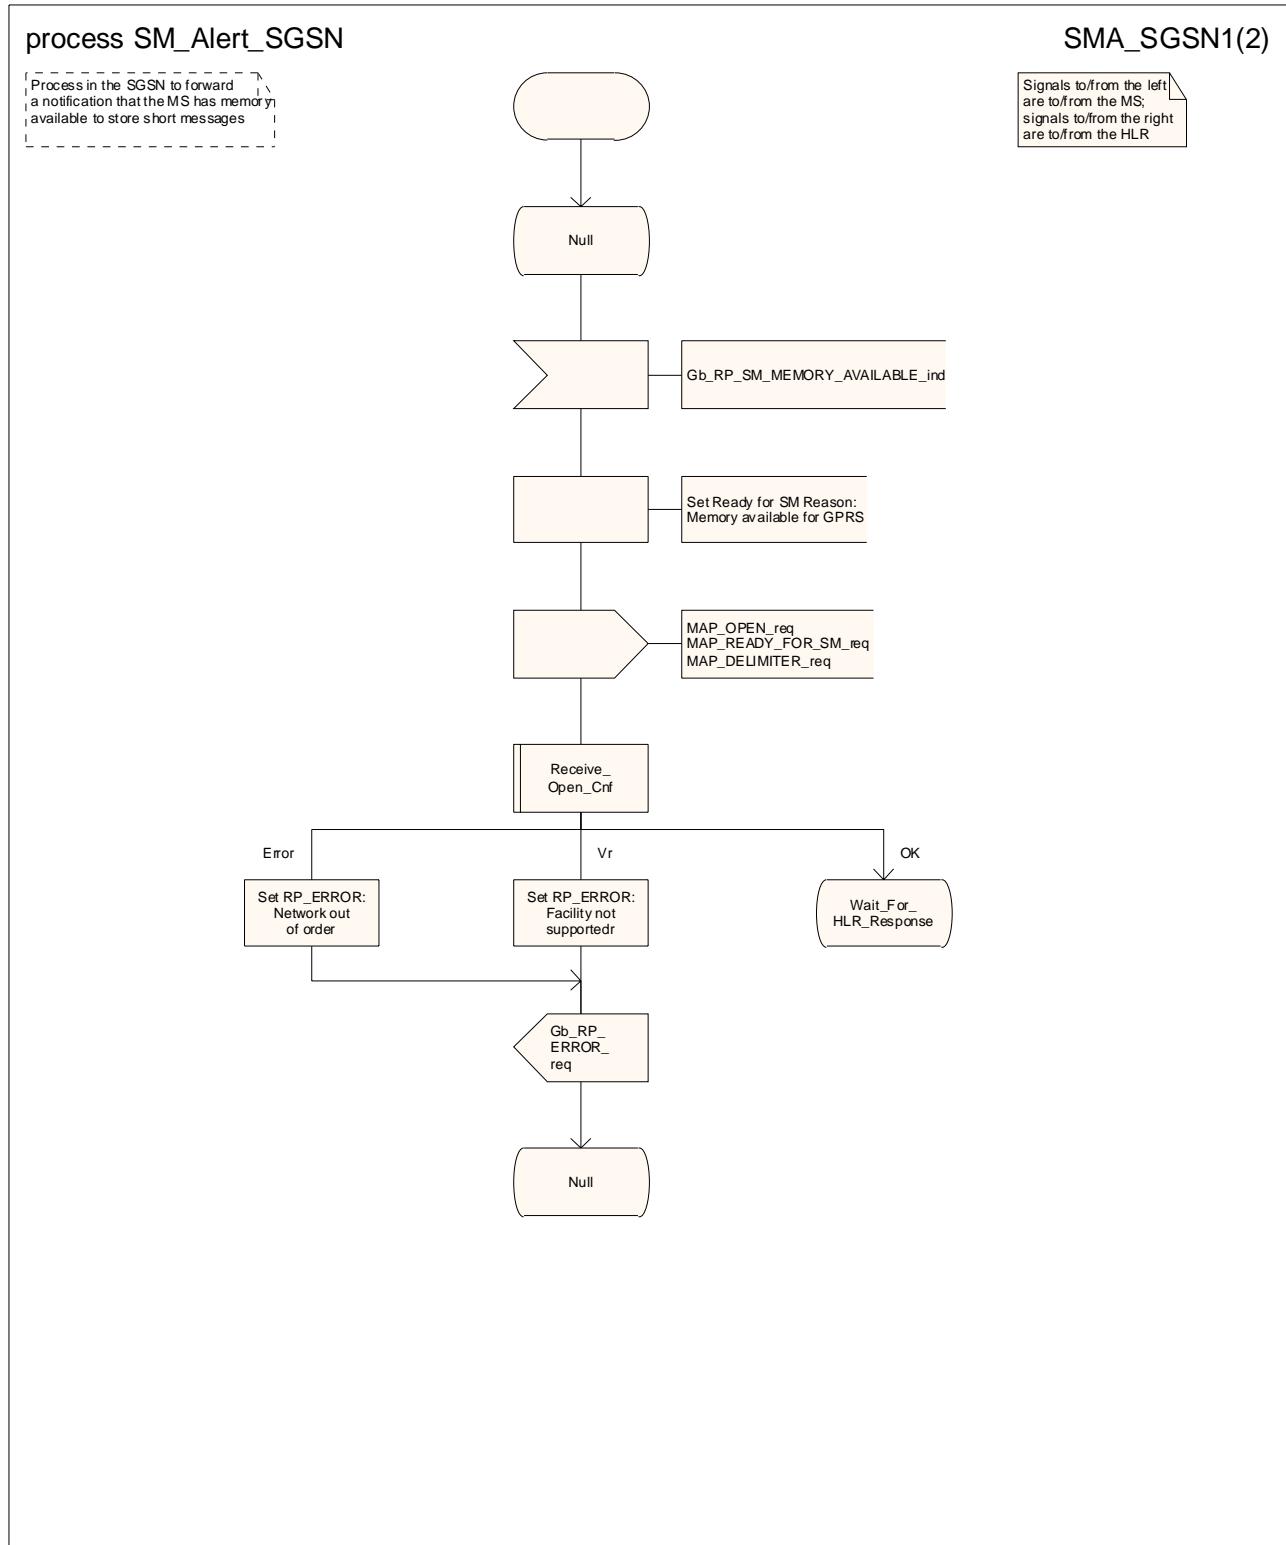


Figure 23.4/8 (sheet 1 of 2): SM\_Alert\_SGSN

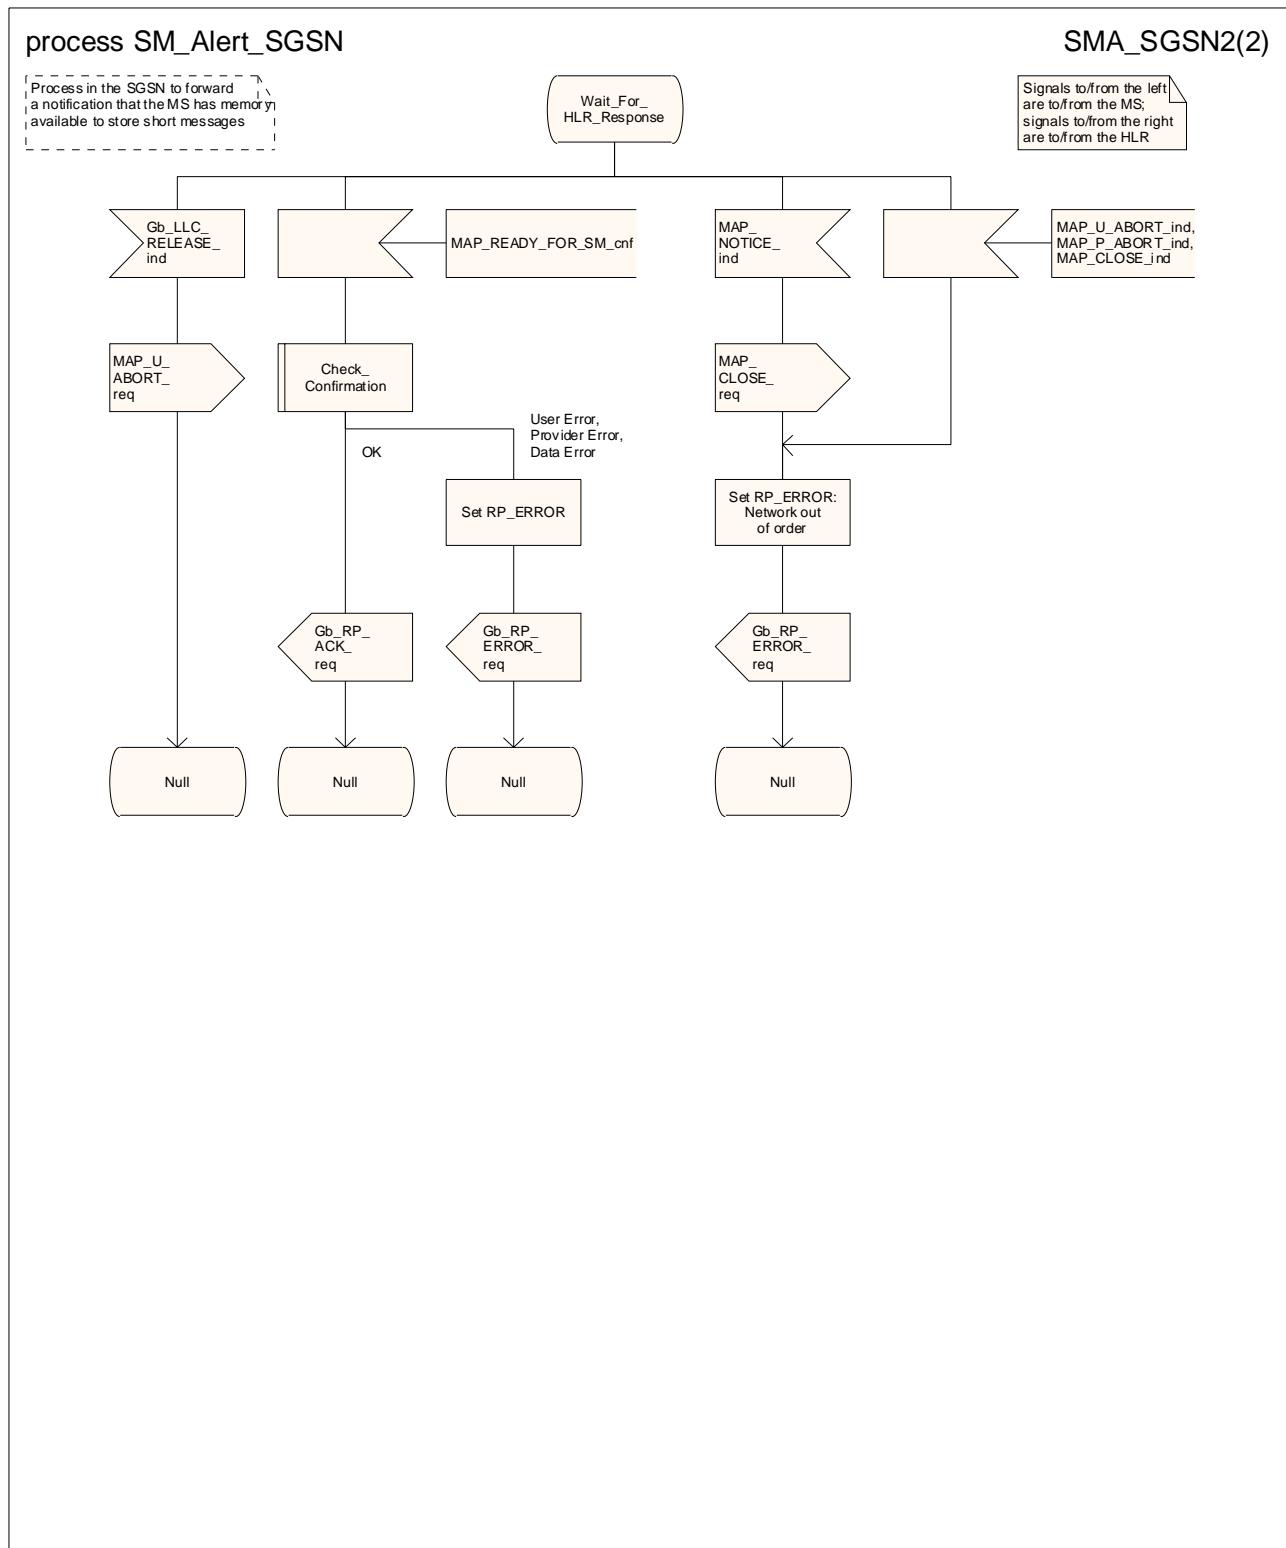


Figure 23.4/8 (sheet 2 of 2): Process SM\_Alert\_SGSN


## 23.5 The SM delivery status report procedure

The SM delivery status report procedure is used:

- to set the Service Centre address into the message waiting list in the HLR after short message delivery has failed because the subscriber is absent or unidentified or the memory capacity is exceeded. The procedure sets:

- the Memory Capacity Exceeded Flag (MCEF) in the HLR if the MS memory does not have room for more messages;
  - and/or the MS Not Reachable Flag for non-GPRS if there is no record for the subscriber in the VLR or the subscriber does not respond to paging for delivery via the MSC;
  - and/or the MS Not Reachable for GPRS (MNRG) flag if there is no record for the subscriber in the SGSN or the subscriber does not respond to paging for delivery via the SGSN.
- to report to the HLR that delivery has succeeded. The conditions for report of a successful delivery are described in subclause 23.3.1.

The message flow for the SM delivery status report procedure is shown in figure 23.5/1.

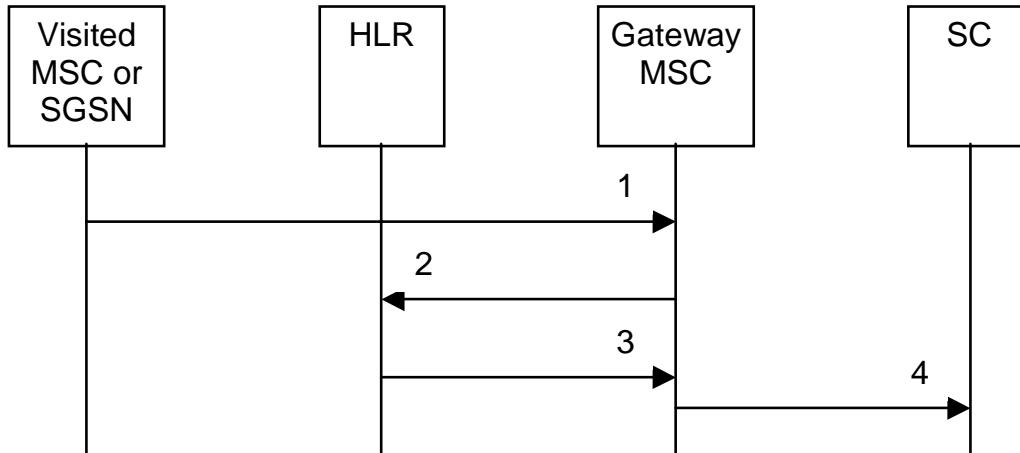


- 1) MAP\_MT\_FORWARD\_SHORT\_MESSAGE\_ACK/\_NACK (Absent subscriber\_SM, unidentified subscriber or memory capacity exceeded).
- 2) MAP\_REPORT\_SM\_DELIVERY\_STATUS.
- 3) MAP\_REPORT\_SM\_DELIVERY\_STATUS\_ACK.
- 4) Short Message Negative Acknowledgement (3GPP TS 23.140).

**Figure 23.5/1: Short message delivery status report procedure**

### 23.5.1 Procedure in the HLR

When the HLR receives a MAP\_REPORT\_SM\_DELIVERY\_STATUS indication, it acts as described in subclause 23.6, macro Report\_SM\_Delivery\_Stat\_HLR.

The short message delivery status report process in the HLR is shown in figure 23.5/2.

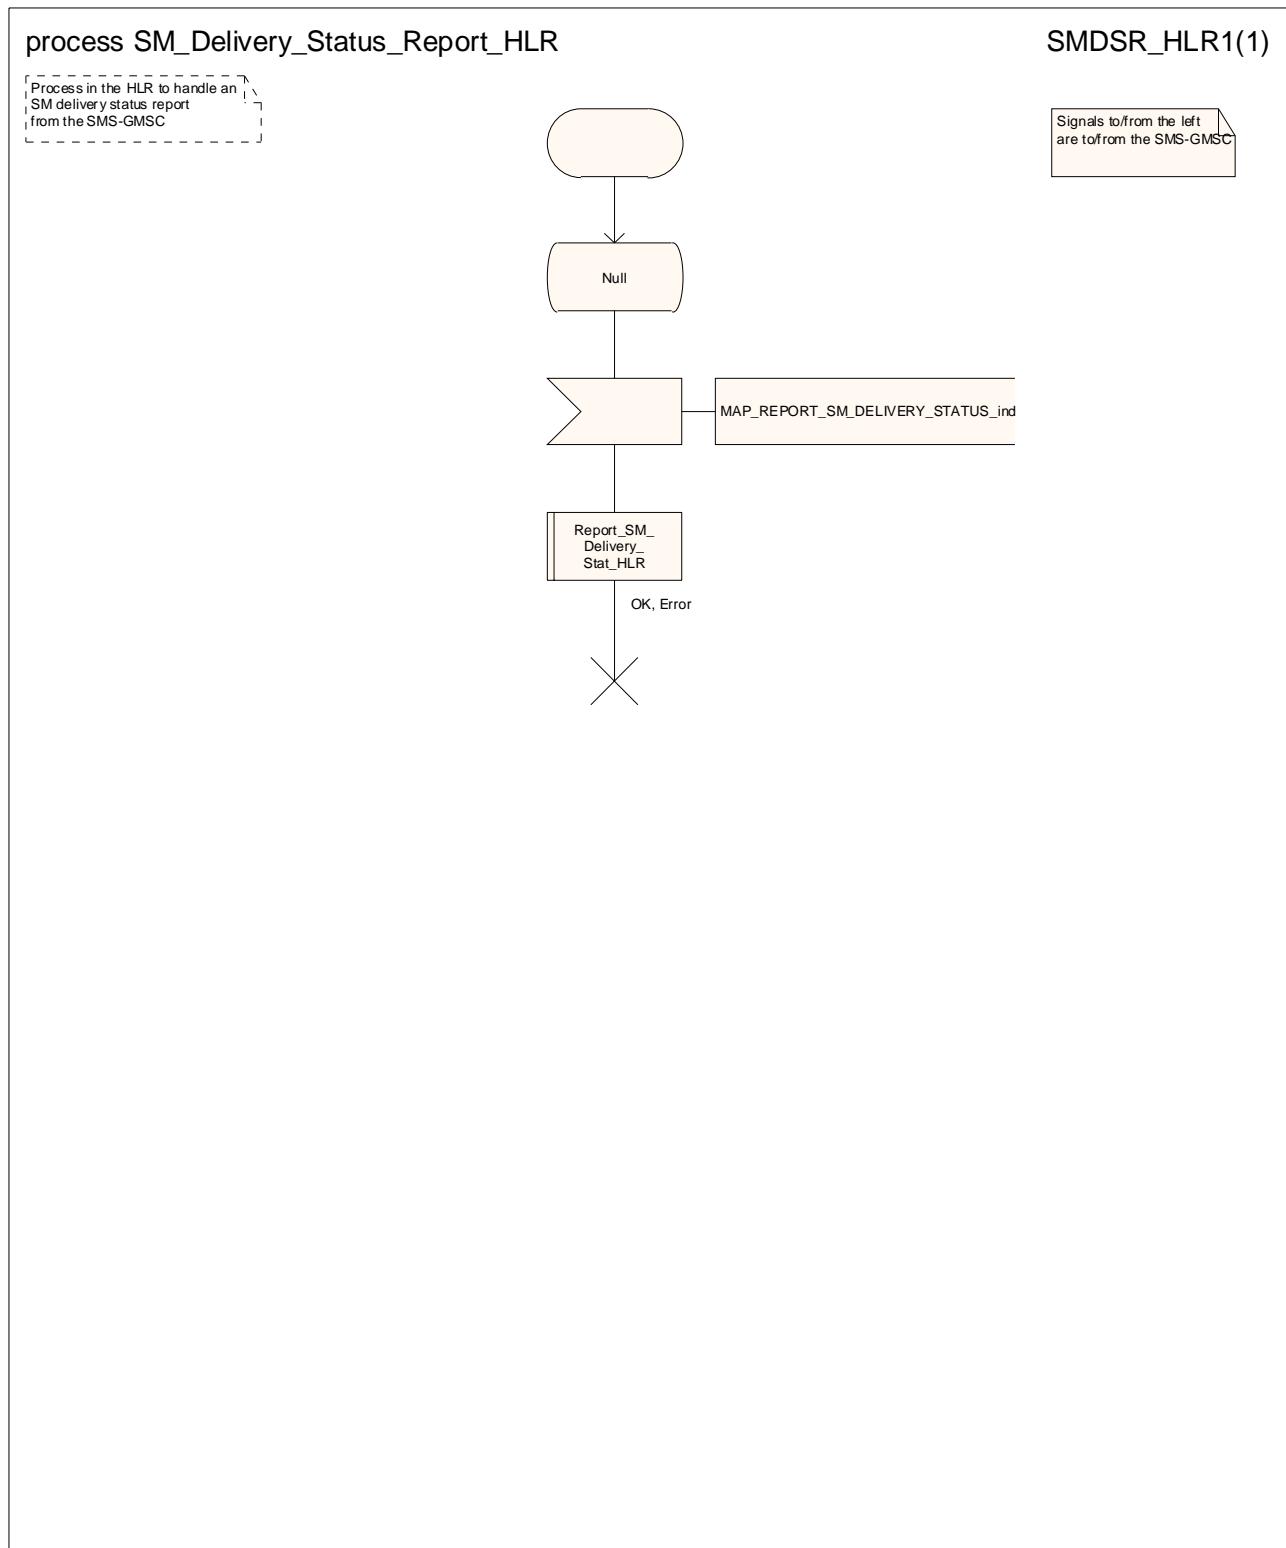

**Figure 23.5/2: Process SM\_Delivery\_Status\_Report\_HLR**

### 23.5.2 Procedure in the SMS-GMSC

The conditions for the GMSC to invoke the short message delivery status report procedure are specified in subclause 23.3.1.

The SMS-GMSC requests a MAP dialogue and sends a MAP\_REPORT\_SM\_DELIVERY\_STATUS request to the HLR containing the subscriber data of the mobile subscriber.

- if the macro Receive\_Open\_Cnf takes the "Error" exit, the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "Error" exit;
- if the macro Receive\_Open\_Cnf takes the "V1" exit, the SMS-GMSC checks the delivery result.
  - if delivery was successful, or delivery failed with any reason other than "Absent subscriber", the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "Error" exit;
  - if delivery failed with a reason of "Absent subscriber", the SMS-GMSC handles the dialogue according to the specification for version 1 of the protocol, and the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "OK" exit;
- if the macro Receive\_Open\_Cnf takes the "Vr" exit (for a version greater than 1), the SMS-GMSC handles the dialogue according to the specification for the earlier version of the protocol, and the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "OK" exit;
- if the macro Receive\_Open\_Cnf takes the "OK" exit, the SMS-GMSC waits for a response from the HLR.

When the SMS-GMSC is waiting for a response from the HLR:

- if the dialogue with the HLR fails, the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "Error" exit;
- if it receives a MAP\_REPORT\_SM\_DELIVERY\_STATUS confirmation, it checks the confirmation.
  - if the confirmation contains an error, the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "Error" exit;
  - if the confirmation indicates a successful result, the macro Report\_SM\_Delivery\_Stat\_GMSC takes the "OK" exit.

If delivery was successful, the MAP\_REPORT\_SM\_DELIVERY\_STATUS request indicates whether delivery succeeded for GPRS or non-GPRS.


If delivery was unsuccessful because the subscriber was absent, the MAP\_REPORT\_SM\_DELIVERY\_STATUS request includes the absent subscriber diagnostic indication (if available).

If the reason for unsuccessful delivery is absent subscriber with diagnostic 'Paging failure' for GPRS or non GPRS, the MAP\_REPORT\_SM\_DELIVERY\_STATUS request includes the two SM Delivery Outcomes absent subscriber with both diagnostics 'Paging failure' for GPRS and non-GPRS.

Note that the indication of which number belongs the SGSN and which to the MSC, received from the HLR in the routing information result (see subclause 23.3.2) will enable the GMSC to map the causes received from the SGSN, MSC or both into the appropriate causes for GPRS, non-GPRS or both, and send them to the SC and HLR.

The dialogue with the Service Centre may be aborted. If so the SMS-GMSC aborts the dialogue with the HLR.

The short message delivery status report macro in the SMS-GMSC is shown in figure 23.5/3.

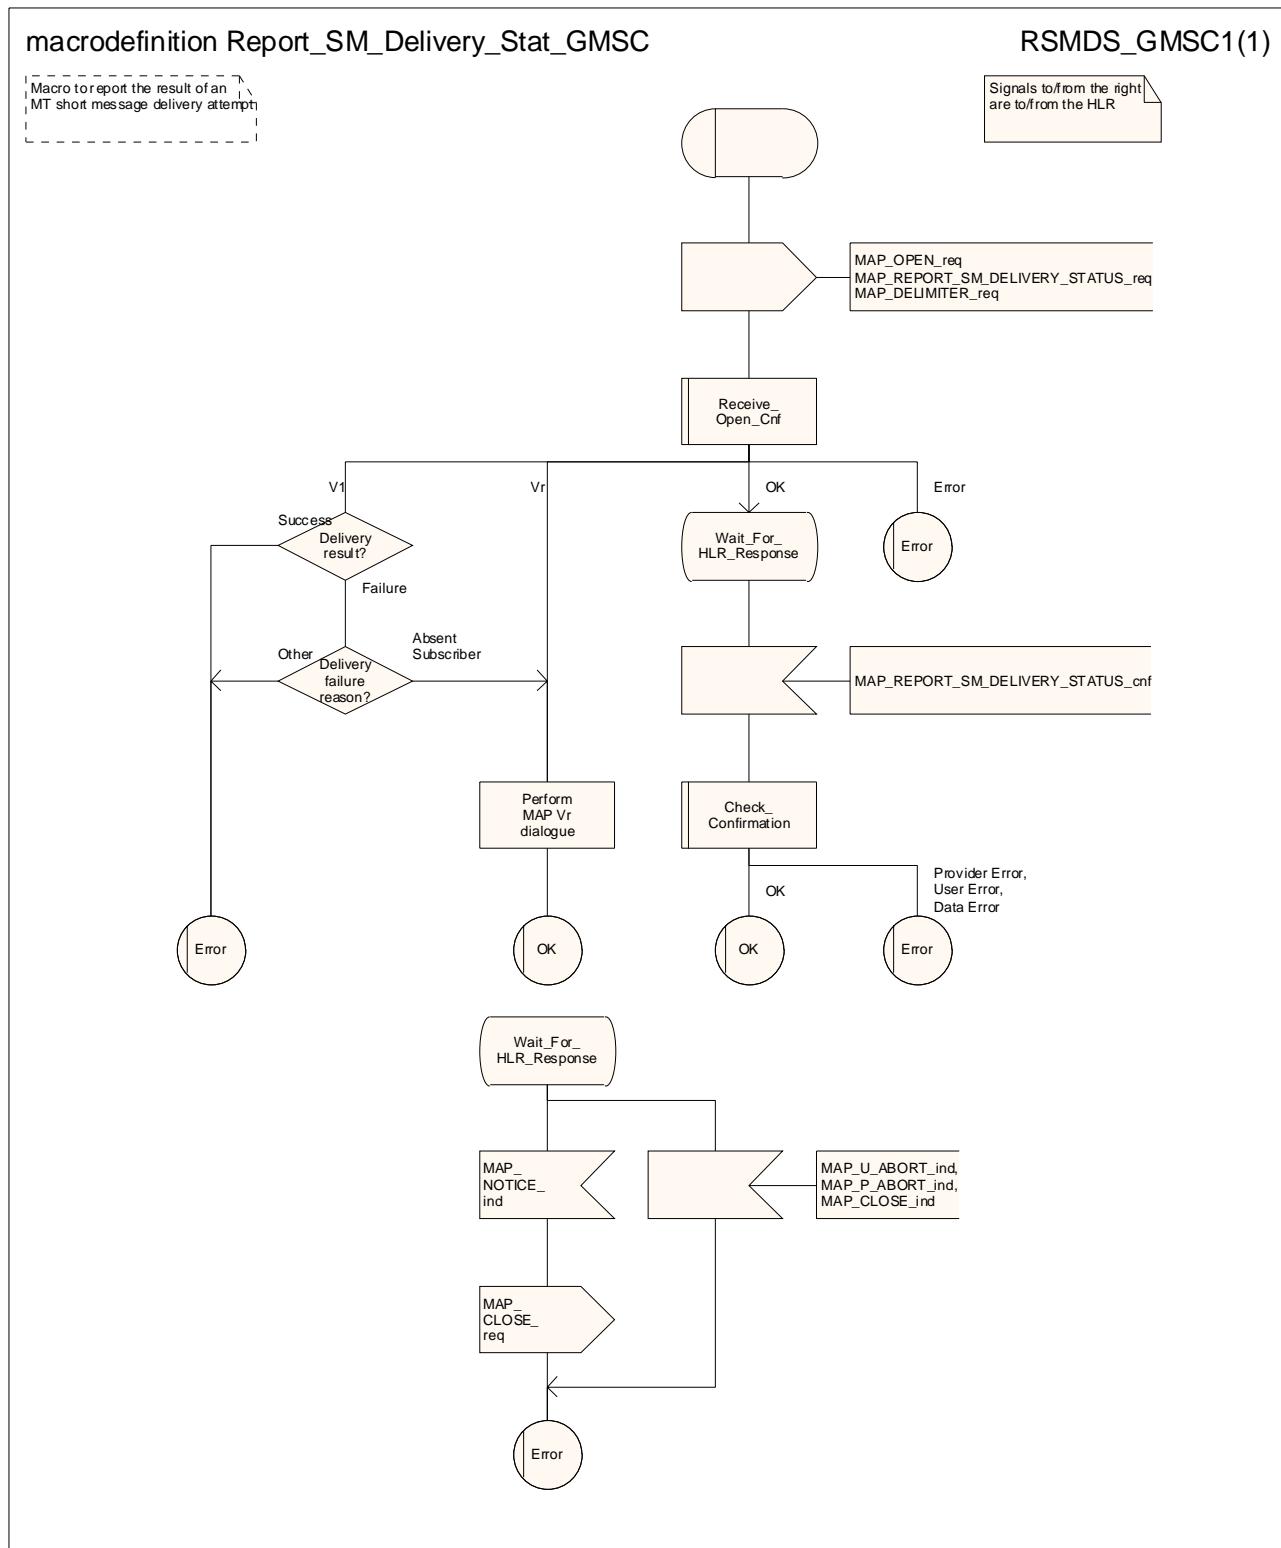

**Figure 23.5/3: Macro Report\_SM\_Delivery\_Stat\_GMSC**

### 23.6 The macro Report\_SM\_Delivery\_Stat\_HLR

This macro is invoked when the HLR receives a MAP\_REPORT\_SM\_DELIVERY\_STATUS indication from the SMS-GMSC. The HLR handles the indication as follows:

- if the indication is badly formed, the HLR returns a MAP\_REPORT\_SM\_DELIVERY\_STATUS response containing the appropriate User Error, and the macro takes the "Error" exit;

- if there is no record in the HLR for the subscriber, the HLR returns a MAP\_REPORT\_SM\_DELIVERY\_STATUS response containing the User Error "Unknown subscriber", and the macro takes the "Error" exit;
- if the MAP\_REPORT\_SM\_DELIVERY\_STATUS indication did not include the GPRS support indicator, the HLR deduces the domain for which the delivery report applies as follows:
  - if the subscriber is a GPRS-only subscriber, the report applies for GPRS;
  - if the subscriber is a non-GPRS-only subscriber, the report applies for non-GPRS;
  - if the subscriber is a GPRS and non-GPRS subscriber and the subscription option for MT SMS delivery when the SMS-GMSC does not support GPRS is set to "Delivery via the SGSN", the report applies for GPRS;
  - if the subscriber is a GPRS and non-GPRS subscriber and the subscription option for MT SMS delivery when the SMS-GMSC does not support GPRS is set to "Delivery via the MSC", the report applies for non-GPRS;
- if the MAP\_REPORT\_SM\_DELIVERY\_STATUS indication indicated delivery failure, the HLR attempts to add the SC address to the MWD list.
  - if the update of the MWD list failed, the HLR returns a MAP\_REPORT\_SM\_DELIVERY\_STATUS response containing the User Error "MWD list full", and the macro takes the "Error" exit;
  - if the update of the MWD list succeeded, the HLR sets the variable Delivery Result to Failure, and continues to process the delivery failure report:
    - if the MSISDN used to define the destination MS was not the MSISDN-Alert, the HLR sets the MSISDN-Alert parameter in the MAP\_REPORT\_SM\_DELIVERY\_STATUS response;
    - if the delivery failure cause was MS memory capacity exceeded for non-GPRS, the HLR sets the MCEF and clears the MNRF;
    - if the delivery failure cause was MS memory capacity exceeded for GPRS, the HLR sets the MCEF and clears the MNRG flag;
    - if the delivery failure cause was Absent Subscriber for non-GPRS, the HLR sets the MNRF;
    - if the delivery failure cause was Absent Subscriber for GPRS, the HLR sets the MNRG flag;
    - if the delivery failure cause was Absent Subscriber for non-GPRS and GPRS, the HLR sets the MNRF and the MNRG flag;
    - if the delivery cause was absent subscriber and the MAP\_REPORT\_SM\_DELIVERY\_STATUS indication included a reason for absence, the HLR stores the reason for absence in the Mobile Not Reachable Reason and calls the procedure Check\_Absent\_Subscriber\_SM\_In\_HLR (see 3GPP TS 23.116 [110]);
    - the HLR returns a MAP\_REPORT\_SM\_DELIVERY\_STATUS response indicating success, and the macro takes the "OK" exit.
- if the MAP\_REPORT\_SM\_DELIVERY\_STATUS indication indicated successful transfer, the HLR handles the indication as follows:
  - if the delivery outcome was for non-GPRS, the HLR clears the MNRF and the MCEF;
  - if the delivery outcome was for GPRS, the HLR clears the MNRG flag and the MCEF;
  - the HLR returns a MAP\_REPORT\_SM\_DELIVERY\_STATUS response indicating success;
  - the HLR invokes the macro Alert\_Service\_Centre\_HLR to alert the service centres whose addresses are in the MWD list, as described in subclause 25.10;
  - the HLR sets the variable Delivery Result to Success, and the macro takes the "OK" exit.

The short message delivery status report macro in the HLR is shown in figure 23.6/1.

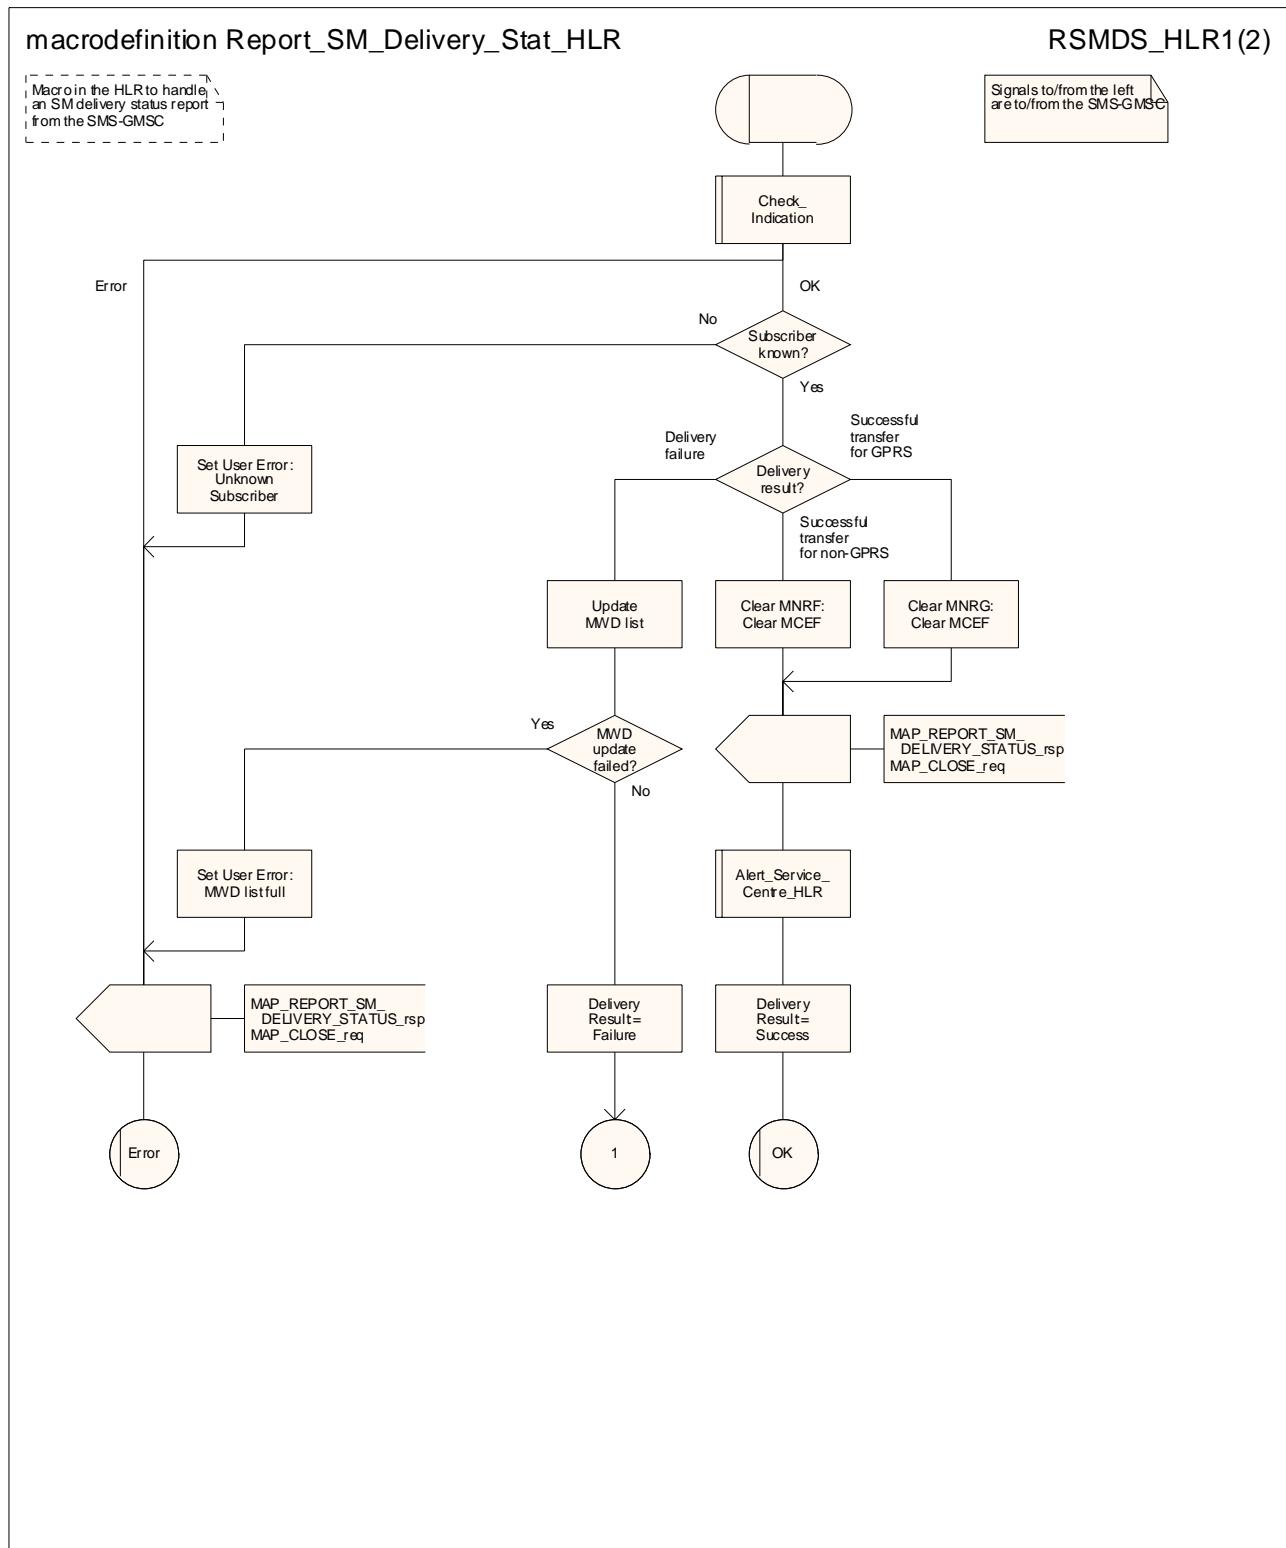


Figure 23.6/1 (sheet 1 of 2): Macro Report\_SM\_Delivery\_Stat\_HLR

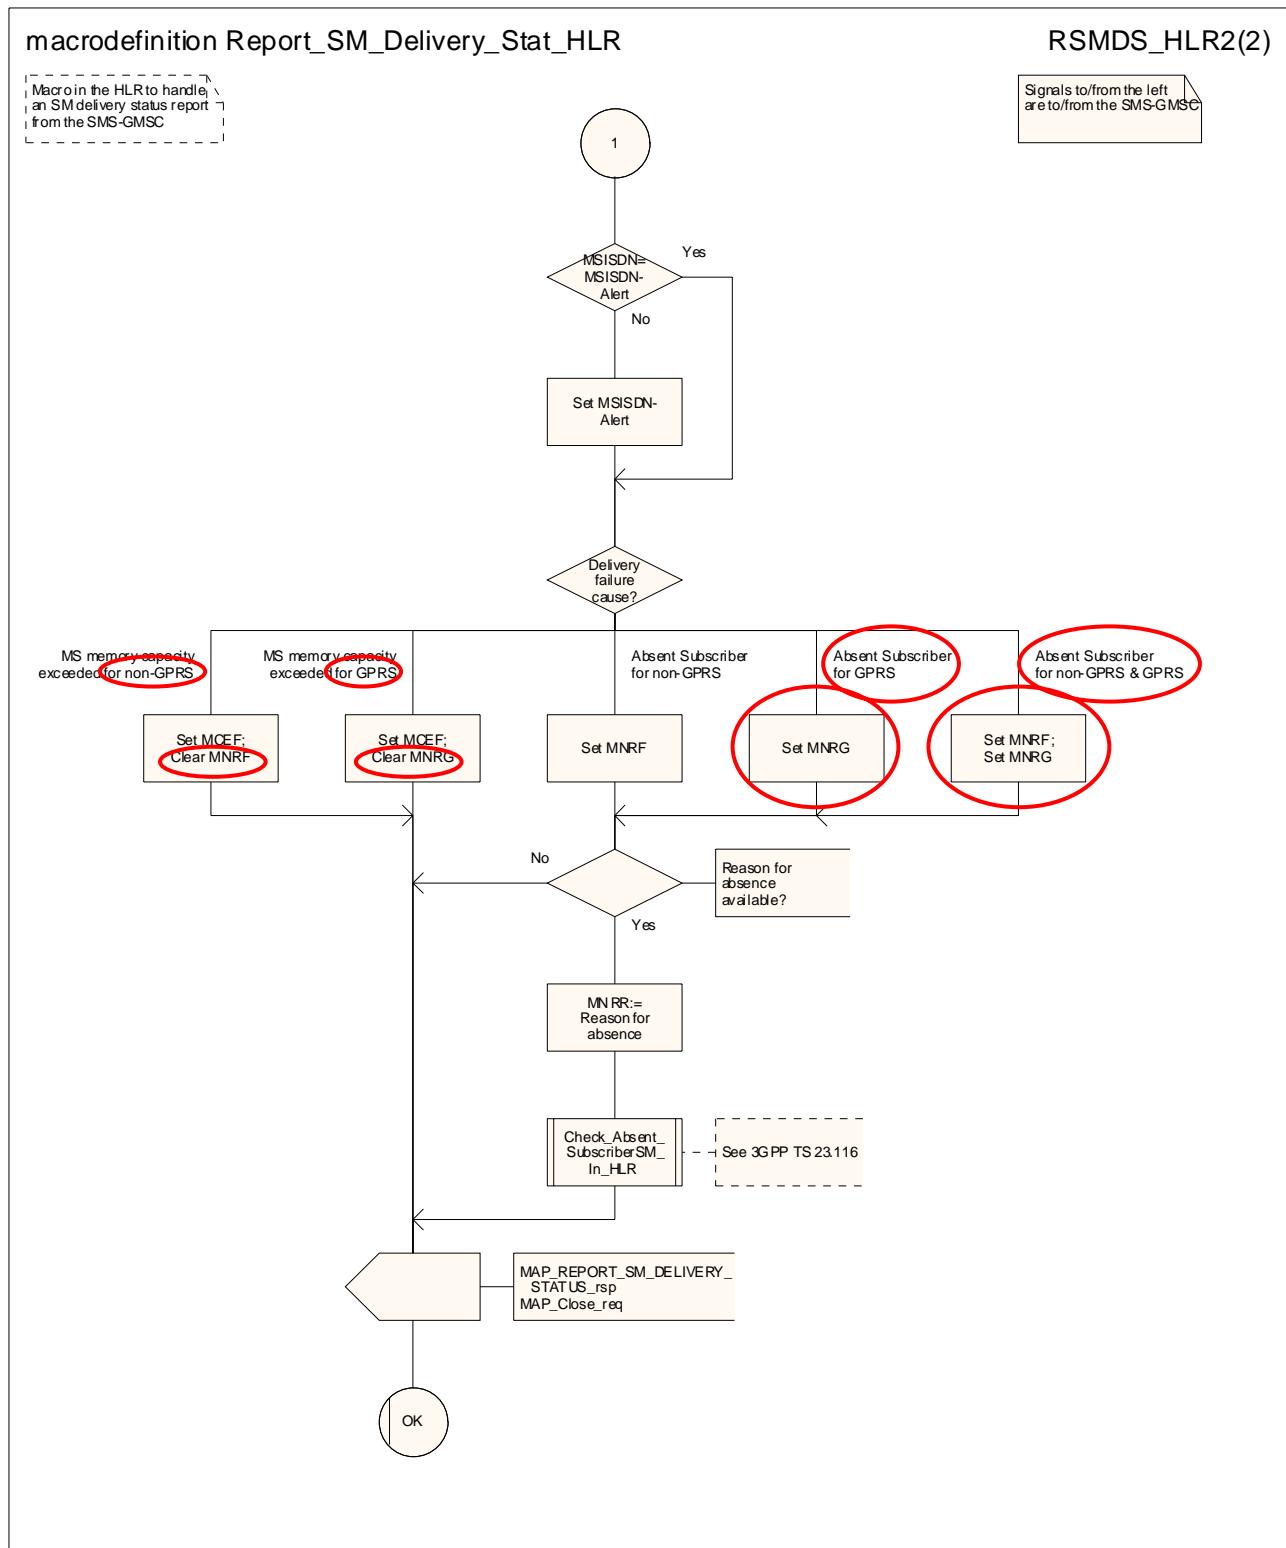


Figure 23.6/1 (sheet 2 of 2): Macro Report\_SM\_Delivery\_Stat\_HLR

## 24 GPRS process description

### 24.1 General

The MAP GPRS procedures are used for the Network Requested PDP-Context Activation procedures.

The stage 2 specification for General Packet Radio Service (GPRS) is in 3GPP TS 23.060 [104] [100].

### 24.1.1 Process in the HLR for Send Routing Information for GPRS

The MAP process in the HLR to provide routing information for a network-requested PDP context activation is shown in figure 24.1/1. The MAP process invokes macros not defined in this clause; the definition of these macros can be found as follows:

Receive_Open_Ind	see clause 25.1.1;
Check_Indication	see clause 25.2.1.

#### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context gprsLocationInfoRetrieval, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service indication is received, the HLR sends a Send Routing Info For Gprs request to the GPRS application process in the HLR, and waits for a response. The Send Routing Info For Gprs request contains the parameter received in the MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service indication.

If the GPRS application process in the HLR returns a positive response containing the routing information, the MAP process constructs a MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service response containing the routing info, constructs a MAP\_CLOSE service request, sends them to the GGSN and returns to the idle state.

#### Negative response from HLR GPRS application process

If the GPRS application process in the HLR returns a negative response, the MAP process constructs a MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the GGSN and returns to the idle state.

#### Failure of dialogue opening with the GGSN

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

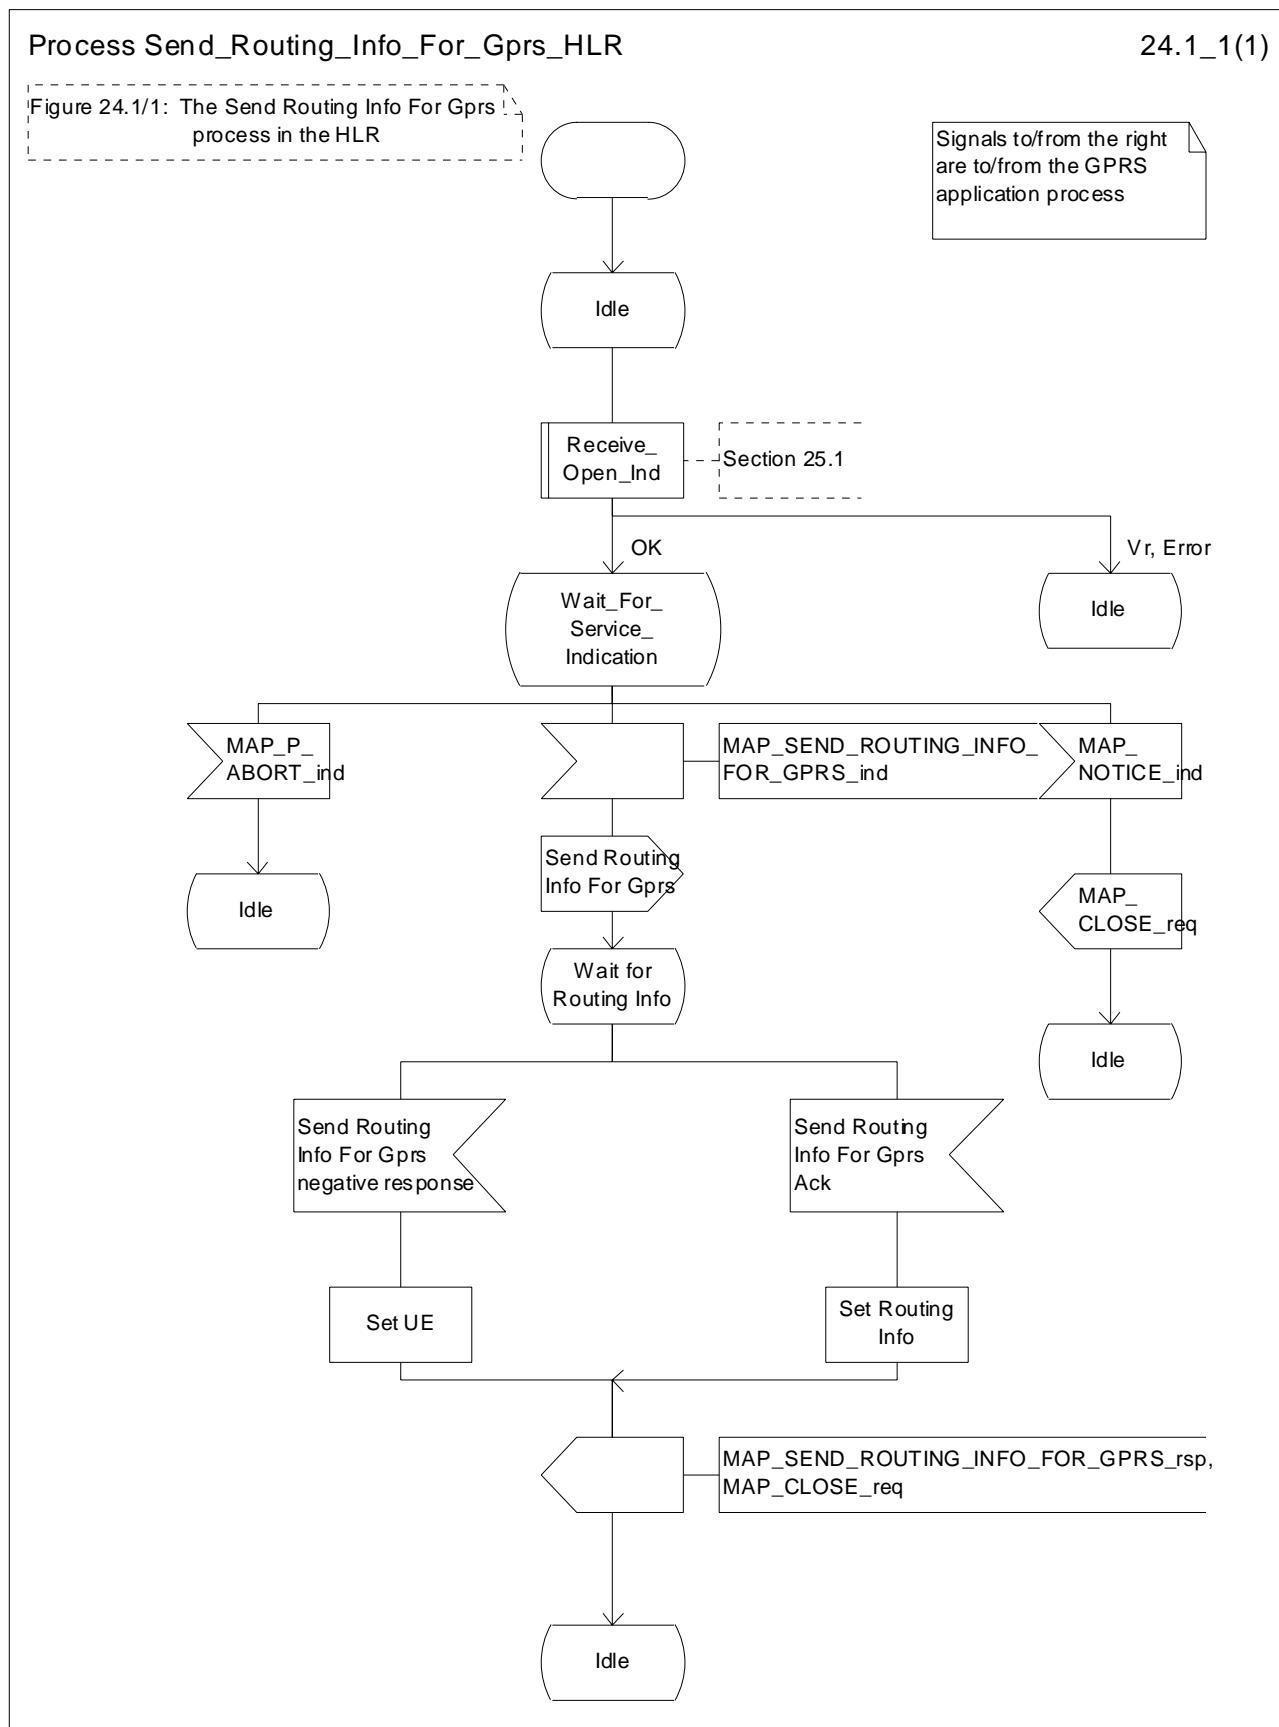


Figure 24.1/1: Process Send Routing Info For Gprs\_HLR

## 24.1.2 Process in the GGSN for Send Routing Information for GPRS

### Successful Outcome

When the MAP process receives a Send Routing Info For Gprs request from the GPRS application process in the GGSN, it requests a dialogue with the HLR whose identity is contained in the Send Routing Info For Gprs request by sending a MAP\_OPEN service request, requests routeing information using a MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Send Routing Info For Gprs ack containing the routing information received from the HLR to the GPRS application process in the GGSN and returns to the idle state.

### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the GPRS application process in the GGSN and returns to the idle state.

### Error in MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS confirm

If the MAP\_SEND\_ROUTING\_INFO\_FOR\_GPRS service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Send Routing Info For Gprs negative response to the GPRS application process in the GGSN and returns to the idle state.

### Abort of HLR dialogue

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a Send Routing Info For Gprs negative response to the GPRS application process in the GGSN and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR, sends a Send Routing Info For Gprs negative response indicating system failure to the GPRS application process in the GGSN and returns to the idle state.

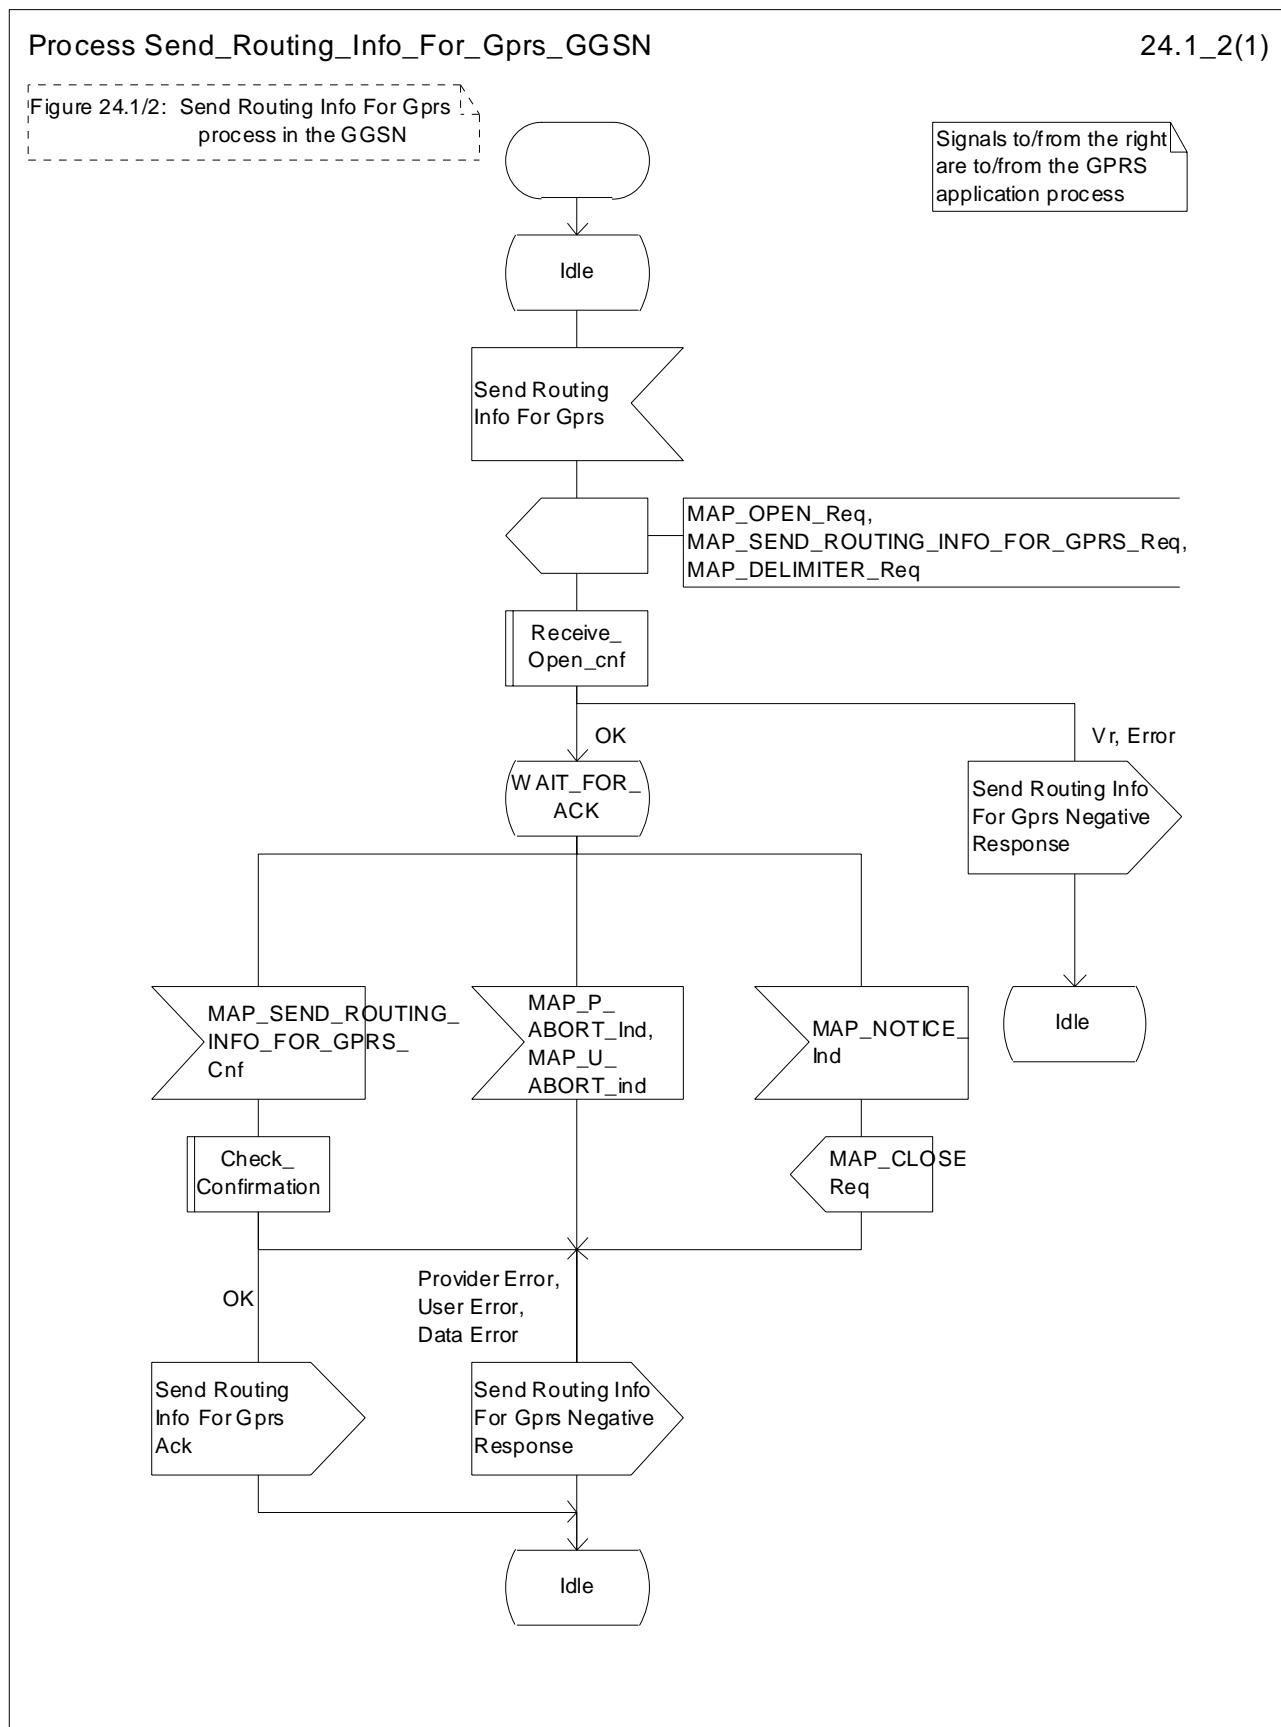


Figure 24.1/2: Process Send\_Routing\_Info\_For\_Gprs\_GGSN

## 24.2.1 Process in the HLR for Failure Report

The MAP process in the HLR to set the MNRG (Mobile station Not Reachable for GPRS) flag for the subscriber is shown in figure 24.2/1. The MAP process invokes macros not defined in this clause; the definition of these macros can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

Check Indication see clause 25.2.1.

### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context failureReport, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_FAILURE\_REPORT service indication is received, the HLR sends a Failure Report request to the GPRS application process in the HLR, and waits for a response. The Failure Report request contains the parameter received in the MAP\_FAILURE\_REPORT service indication.

If a positive response is received, the MAP process constructs a MAP\_FAILURE\_REPORT service response, constructs a MAP\_CLOSE service request, sends them to the GGSN and returns to the idle state.

### **Negative response from HLR GPRS application process**

If the GPRS application process in the HLR returns a negative response, the MAP process constructs a MAP\_FAILURE\_REPORT service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the GGSN and returns to the idle state.

### **Failure of dialogue opening with the GGSN**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

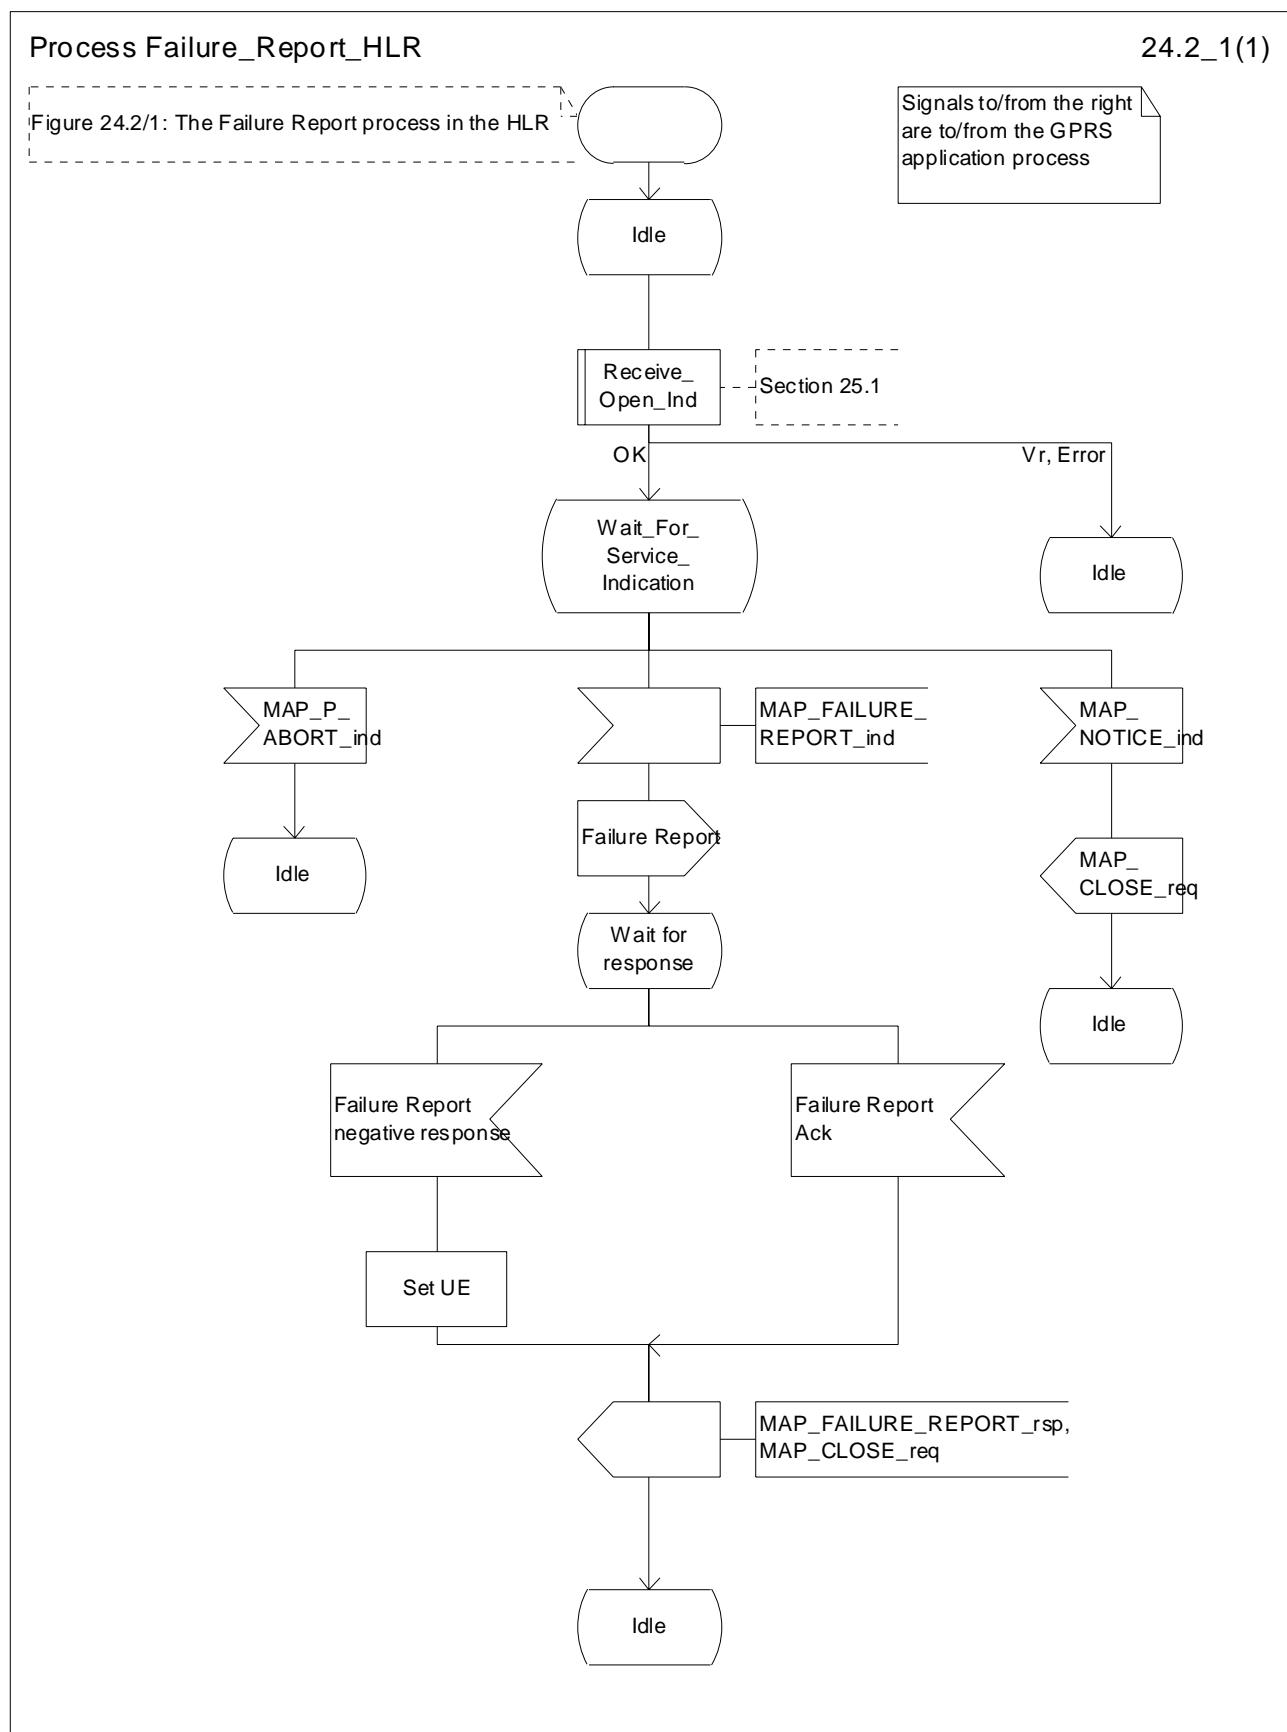


Figure 24.2/1: Process Failure\_Report\_HLR

## 24.2.2 Process in the GGSN for Failure Report

### Successful Outcome

When the MAP process receives a Failure Report request from the GPRS application process in the GGSN, it requests a dialogue with the HLR whose identity is contained in the Failure Report request by sending a MAP\_OPEN service request, sending failure information using a MAP\_FAILURE\_REPORT service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the HLR.

If the MAP process receives a MAP\_FAILURE\_REPORT service confirm from the HLR, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Failure Report ack containing the information received from the HLR to the GPRS application process in the GGSN and returns to the idle state.

### Failure of dialogue opening with the HLR

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the GPRS application process in the GGSN and returns to the idle state.

### Error in MAP\_FAILURE\_REPORT confirm

If the MAP\_FAILURE\_REPORT service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Failure Report negative response to the GPRS application process in the GGSN and returns to the idle state.

### Abort of HLR dialogue

After the dialogue with the HLR has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a Failure Report negative response to the GPRS application process in the GGSN and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the HLR, sends a Failure Report negative response indicating system failure to the GPRS application process in the GGSN and returns to the idle state.

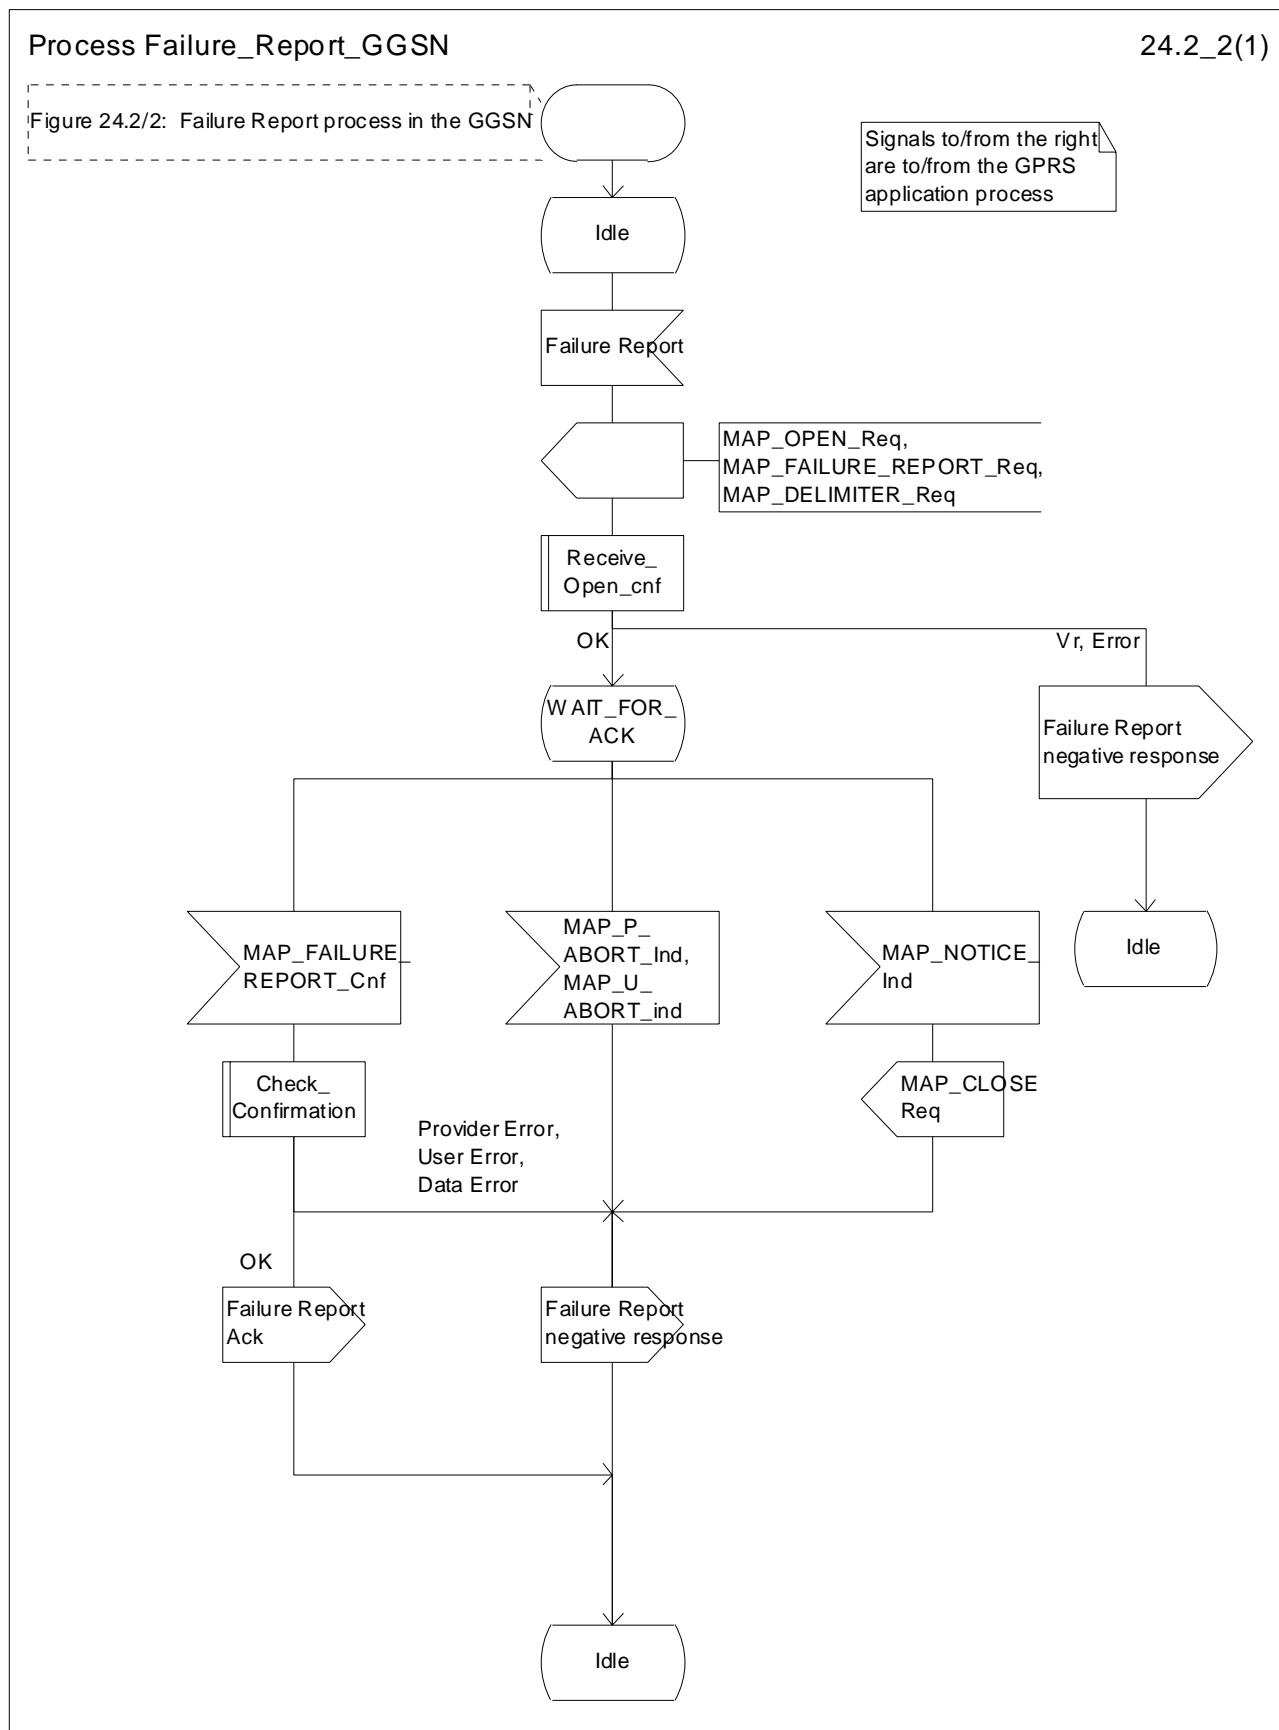


Figure 24.2/2: Process Failure\_Report\_GGSN

### 24.3.1 Process in the GGSN for Note Ms Present For Gprs

The MAP process in the GGSN to inform that the subscriber is present for GPRS again is shown in figure 24.3/1. The MAP process invokes macros not defined in this clause; the definition of these macros can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

Check\_Indication see clause 25.2.1.

#### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context gprsNotify, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service indication is received, the GGSN sends a Note Ms Present For Gprs request to the GPRS application process in the GGSN, and waits for a response. The Note Ms Present For Gprs request contains the parameter received in the MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service indication.

If the GPRS application process in the GGSN returns a positive response, the MAP process constructs a MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service response, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

#### **Negative response from GGSN GPRS application process**

If the GPRS application process in the GGSN returns a negative response, the MAP process constructs a MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

#### **Failure of dialogue opening with the HLR**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

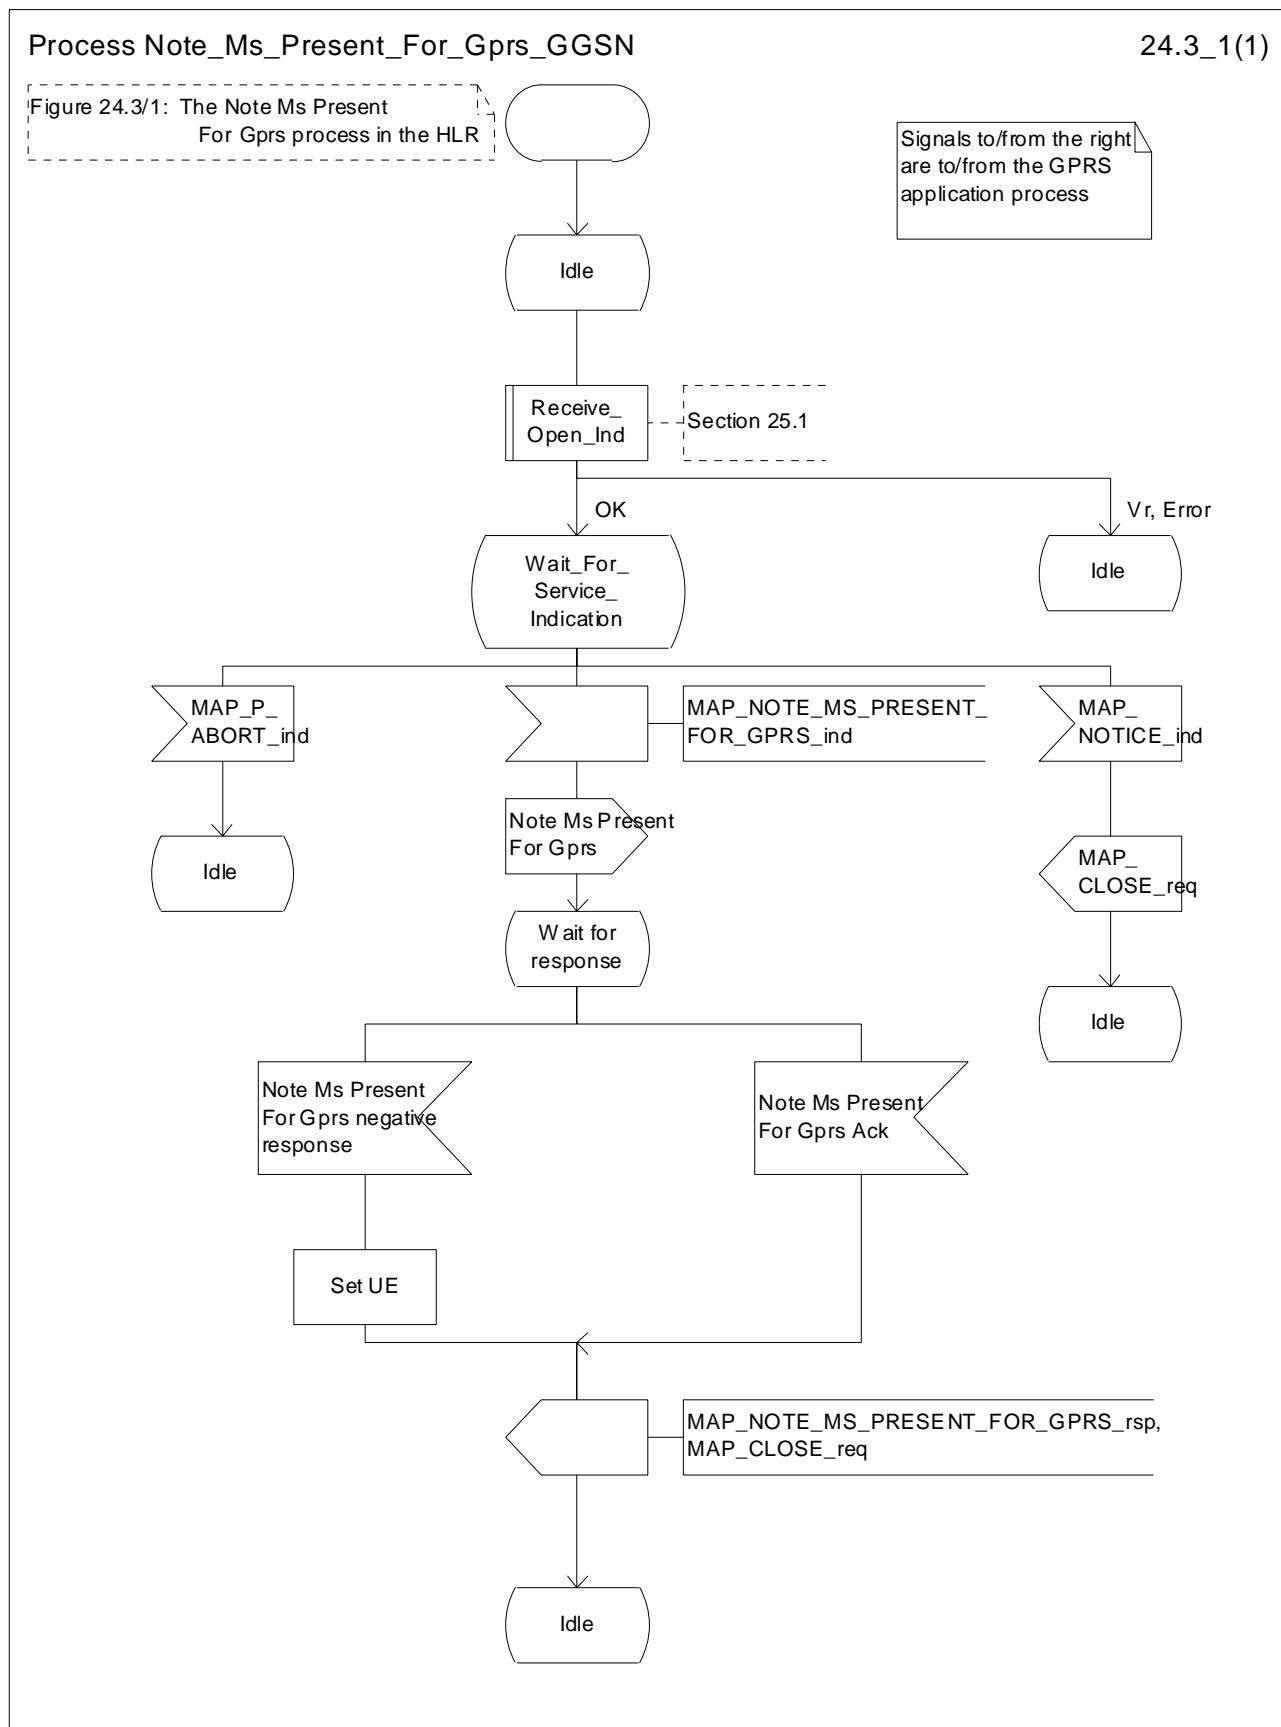


Figure 24.3/1: Process Note\_Ms\_Present\_For\_Gprs\_GGSN

## 24.3.2 Process in the HLR for Note Ms Present For Gprs

### Successful Outcome

When the MAP process receives a Note Ms Present For Gprs request from the GPRS application process in the HLR, it requests a dialogue with the GGSN whose identity is contained in the Note Ms Present For Gprs request by sending a MAP\_OPEN service request, sending necessary information using a MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the GGSN.

If the MAP process receives a MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service confirm from the GGSN, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process sends a Note Ms Present For Gprs ack containing the information received from the GGSN to the GPRS application process in the HLR and returns to the idle state.

### Failure of dialogue opening with the GGSN

If the macro Receive\_Open\_Cnf takes the Vr exit or the Error exit, the MAP process sends a negative response to the GPRS application process in the HLR and returns to the idle state.


### Error in MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS confirm

If the MAP\_NOTE\_MS\_PRESENT\_FOR\_GPRS service confirm contains a user error or a provider error, or the macro Check\_Confirmation indicates that there is a data error, the MAP process sends a Note Ms Present For Gprs negative response to the GPRS application process in the HLR and returns to the idle state.

### Abort of GGSN dialogue

After the dialogue with the GGSN has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT or a MAP\_U\_ABORT indication. In this case, the MAP process sends a Note Ms Present For Gprs negative response to the GPRS application process in the HLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the GGSN, sends a Failure Report negative response indicating system failure to the GPRS application process in the HLR and returns to the idle state.

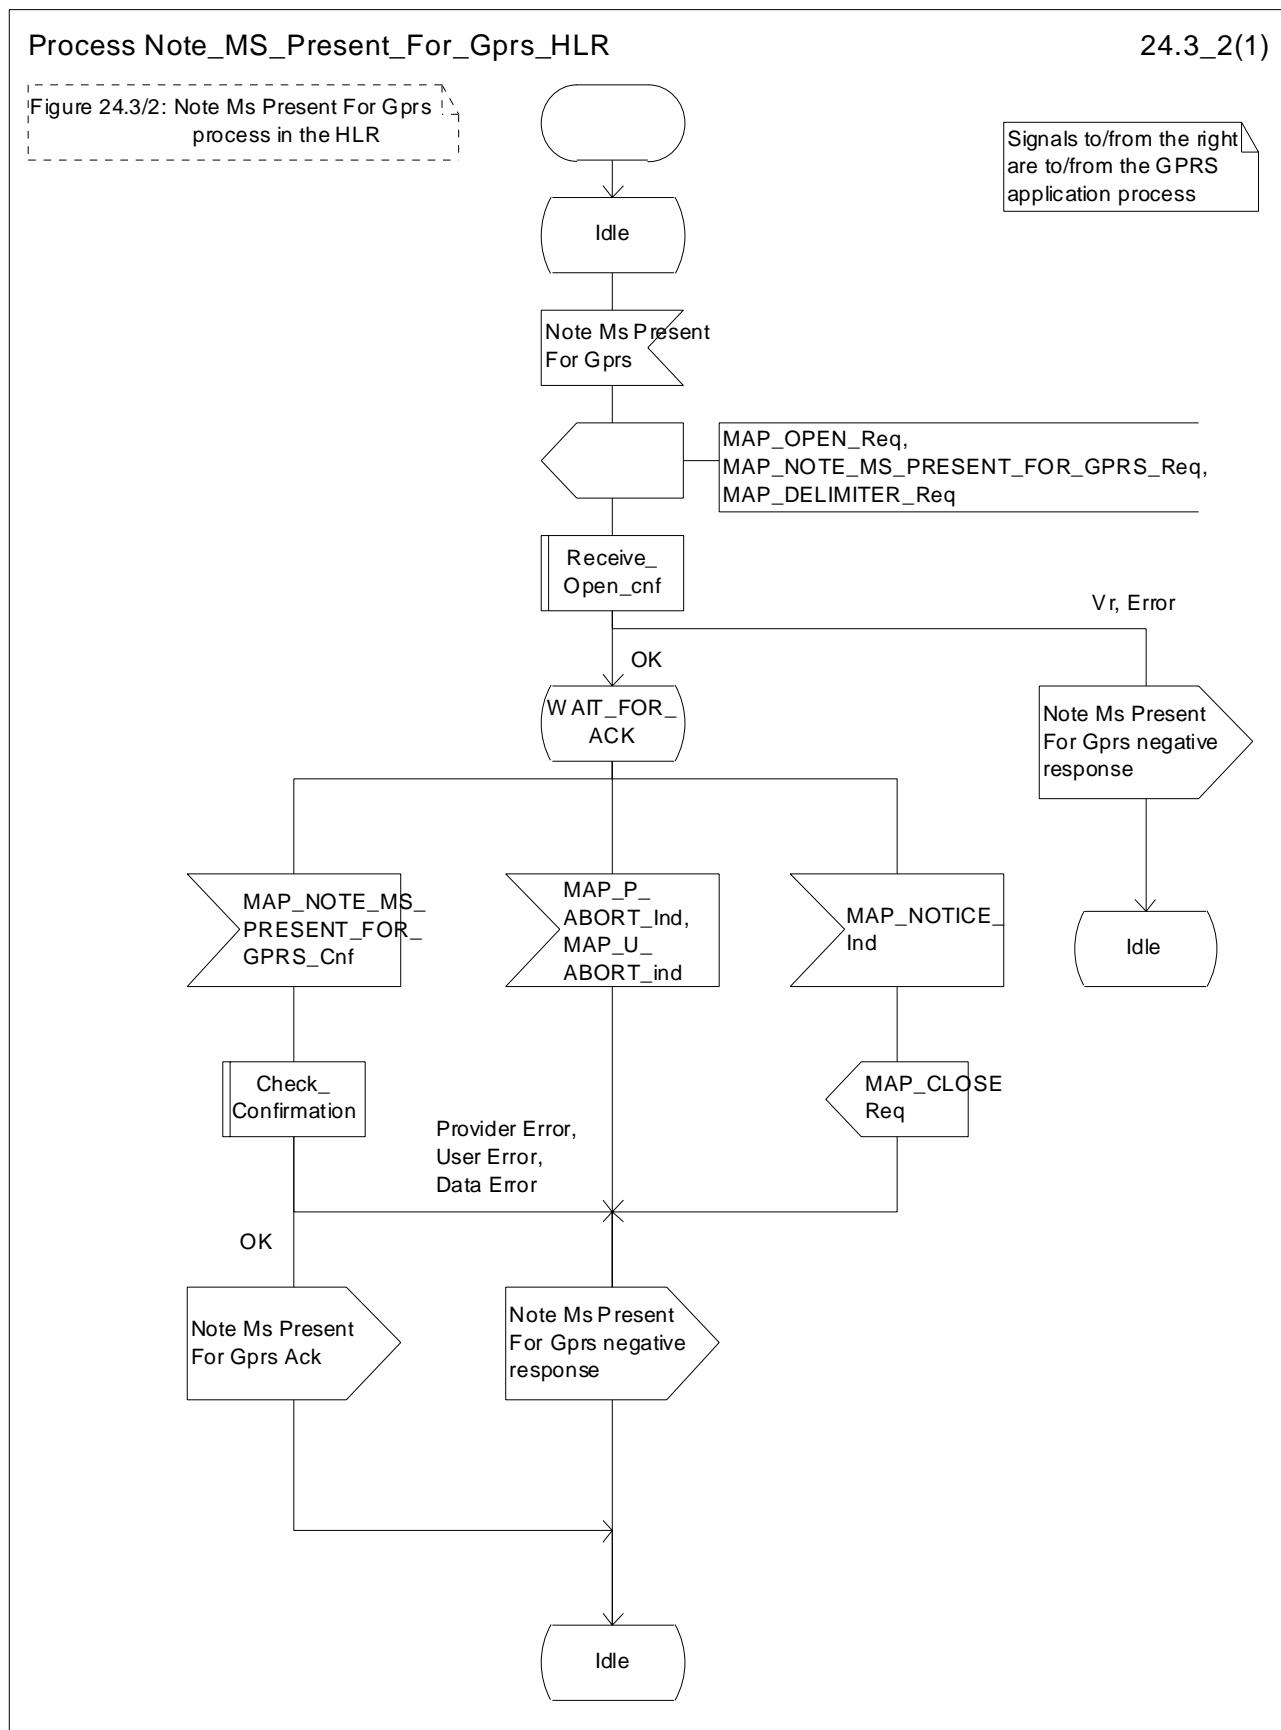
**Figure 24.3/2: Process Note\_MS\_Present\_For\_Gprs\_HLR**

## 24A CSE control of subscriber data

### 24A.1 Any Time Subscription Interrogation procedure

#### 24A.1.1 General

The message flows for successful retrieval of subscription information related to an any time interrogation from the CAMEL server are shown in figure 24A.1/1. In an IP Multimedia Core Network, an IM-SSF can take on the role of a gsmSCF for this procedure (see 3GPP TS 23.278).

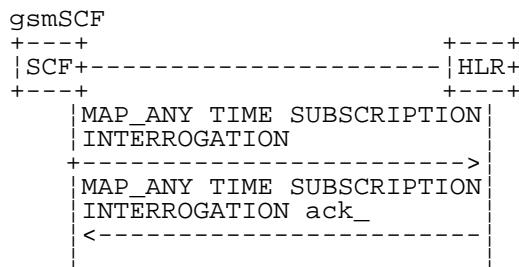

**Figure 24A.1/1: Message flow for any time subscription interrogation**

The following MAP services are used to retrieve requested information:

MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION see clause 8.11.x.

#### 24A.1.2 Process in the gsmSCF

Out of the scope of the MAP specification.

#### 24A.1.3 Process in the HLR

The MAP process in the HLR to provide subscription information in response to an interrogation from the CAMEL server is shown in figure 24A.1/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Ind      see clause 25.1.1;

##### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context anyTimeInformationHandIing, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION service indication is received, the MAP process sends an Any Time Subscription Interrogation request to the call handling process in the HLR (described in 3GPP TS 23.078 and 3GPP TS 23.278), and waits for a response. The Any Time Subscription Interrogation request contains the parameters received in the MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION service indication.

If the call handling process in the HLR returns an Any Time Subscription Interrogation response, the MAP process constructs a MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION service response containing the subscription information contained in the Any Time Subscription Interrogation response, constructs a MAP\_CLOSE service request, sends them to the CAMEL server and returns to the idle state. If the MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION service response cannot be carried in a single TC-Result component, it is carried in one or more TC-Result-NL components (each sent in a TC-CONTINUE), followed by a TC-Result-L component in a TC-END message.

##### Negative response from HLR call handling process

If the call handling process in the HLR returns a negative response to obtain subscription information, the MAP process constructs a MAP\_ANY\_TIME\_SUBSCRIPTION\_INTERROGATION service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the CAMEL server and returns to the idle state.

#### **Failure of dialogue opening with the CAMEL server**

If the macro Receive\_Open\_Ind takes the Vr or Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.


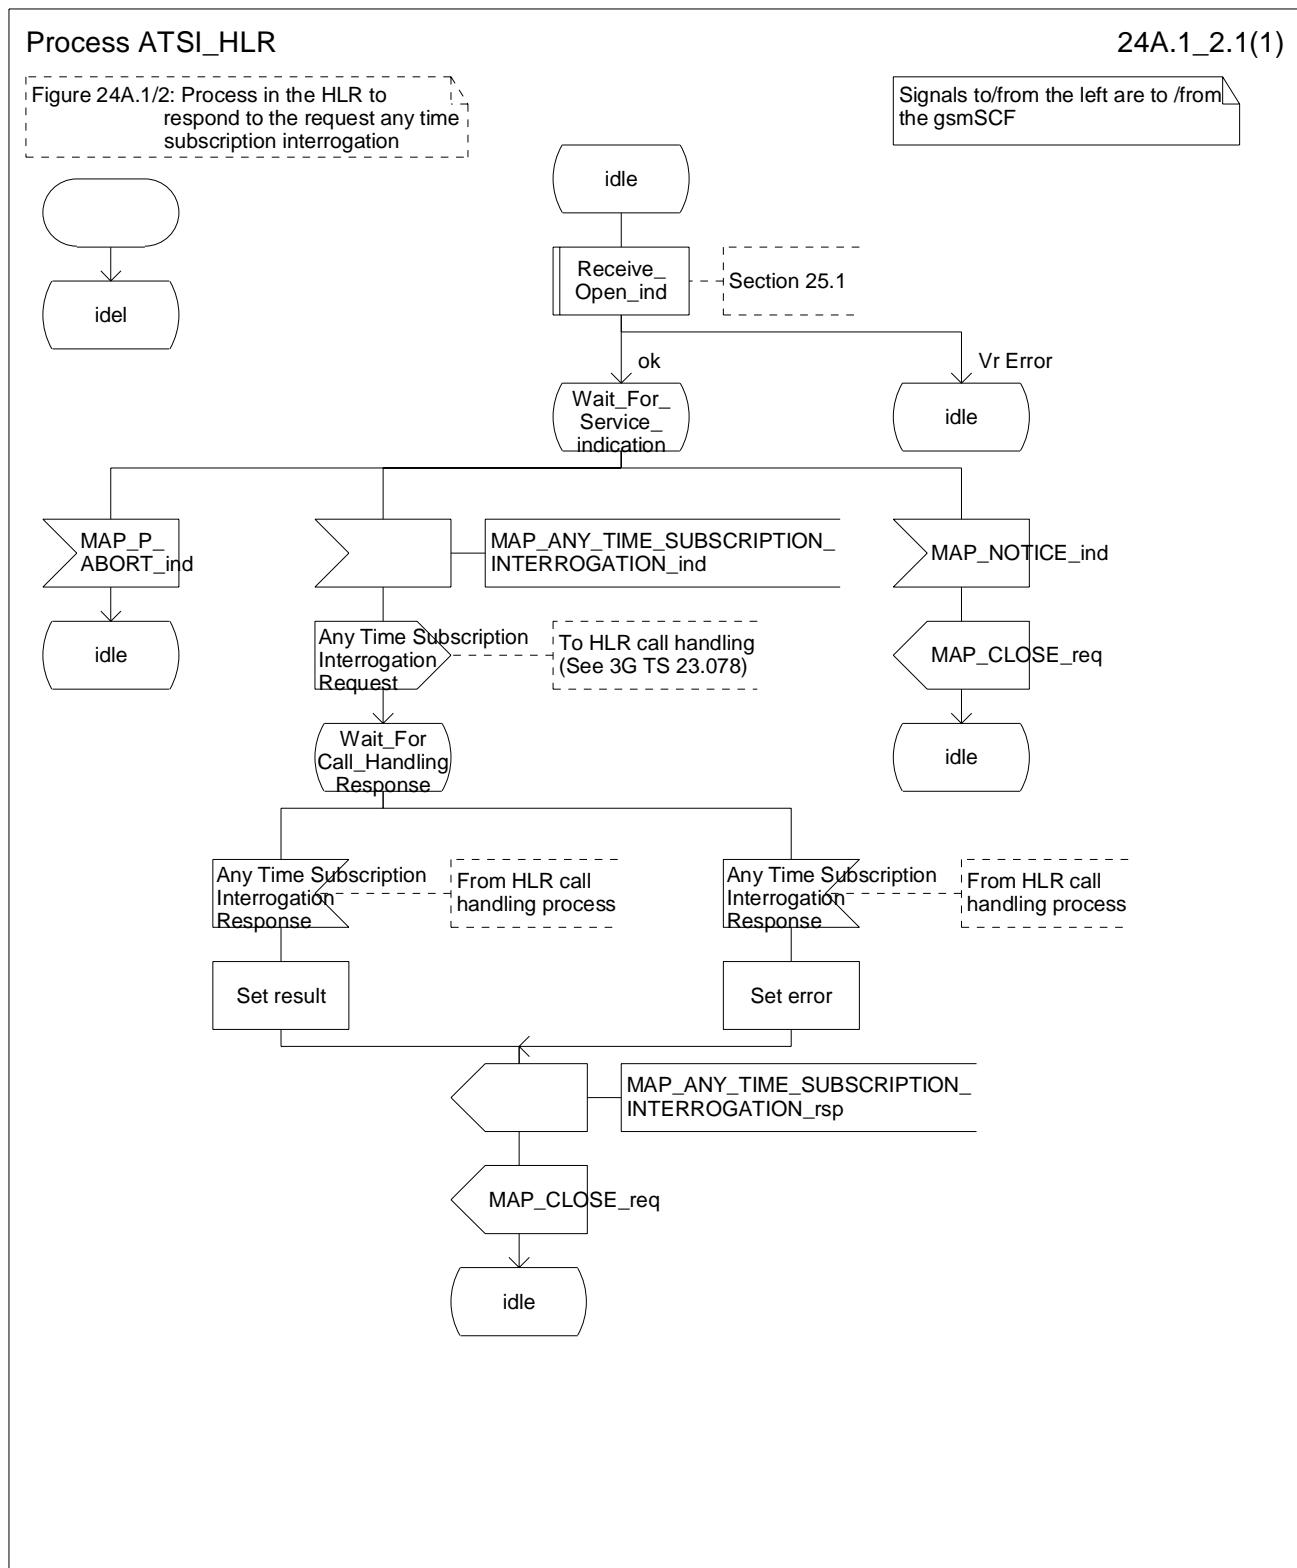


Figure 24A.1/2: Process ATSI\_HLR

## 24A.2 Any Time Modification procedure

### 24A.2.1 General

The message flows for successful modification of subscriber information related to an any time modification from the CAMEL server are shown in figure 24A.2/1

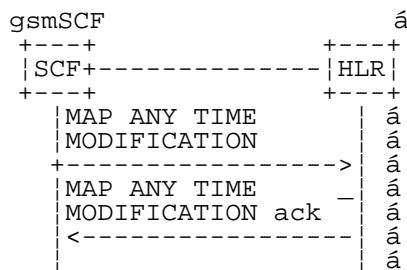

**Figure 24A.2/1: Message flow for any time modification**

The following MAP services are used to modify subscription information:

MAP\_ANY\_TIME\_MODIFICATION see clause 8.11.x.

### 24A.2.2 Process in the gsmSCF

Out of the scope of the MAP specification.

### 24A.2.3 Process in the HLR

The MAP process in the HLR to modify subscriber information in response to a modification request from the CAMEL server is shown in figure 24A.2/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Ind see clause 25.1.1;

Insert\_Subs\_Data\_Stand\_Alone\_HLR see clause 25.7.2;

#### Successful outcome

When the MAP process receives a MAP\_OPEN indication with the application context anyTimeInfromationHandling, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_ANY\_TIME\_MODIFICATION service indication is received, the MAP process sends an Any Time modification request to the call handling process in the HLR (described in 3GPP TS 23.078 and 3GPP TS 23.278), and waits for a response. The Any Time modification request contains the parameters received in the MAP\_ANY\_TIME\_MODIFICATION service indication.

If the call handling process in the HLR returns an Any Time modification response, the MAP process constructs a MAP\_ANY\_TIME\_MODIFICATION service response containing the modified subscription information contained in the Any Time modification response, constructs a MAP\_CLOSE service request, sends them to the CAMEL server. If the MAP\_ANY\_TIME\_MODIFICATION service response cannot be carried in a single TC-Result component, it is carried in one or more TC-Result-NL components (each sent in a TC-CONTINUE), followed by a TC-Result-L component in a TC-END message. IF the VLR/SGSN is to be updated after the modification, the MAP\_INSERT\_SUBS\_DATA\_HLR process shall be initiated and then returns to the idle state.

#### Negative response from HLR call handling process

If the call handling process in the HLR returns a negative response to modify subscription information, the MAP process constructs a MAP\_ANY\_TIME\_MODIFICATION service response containing the appropriate error, constructs a MAP\_CLOSE service request, sends them to the CAMEL server and returns to the idle state.

**Failure of dialogue opening with the CAMEL server**

If the macro Receive\_Open\_Ind takes the Vr or Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle state.

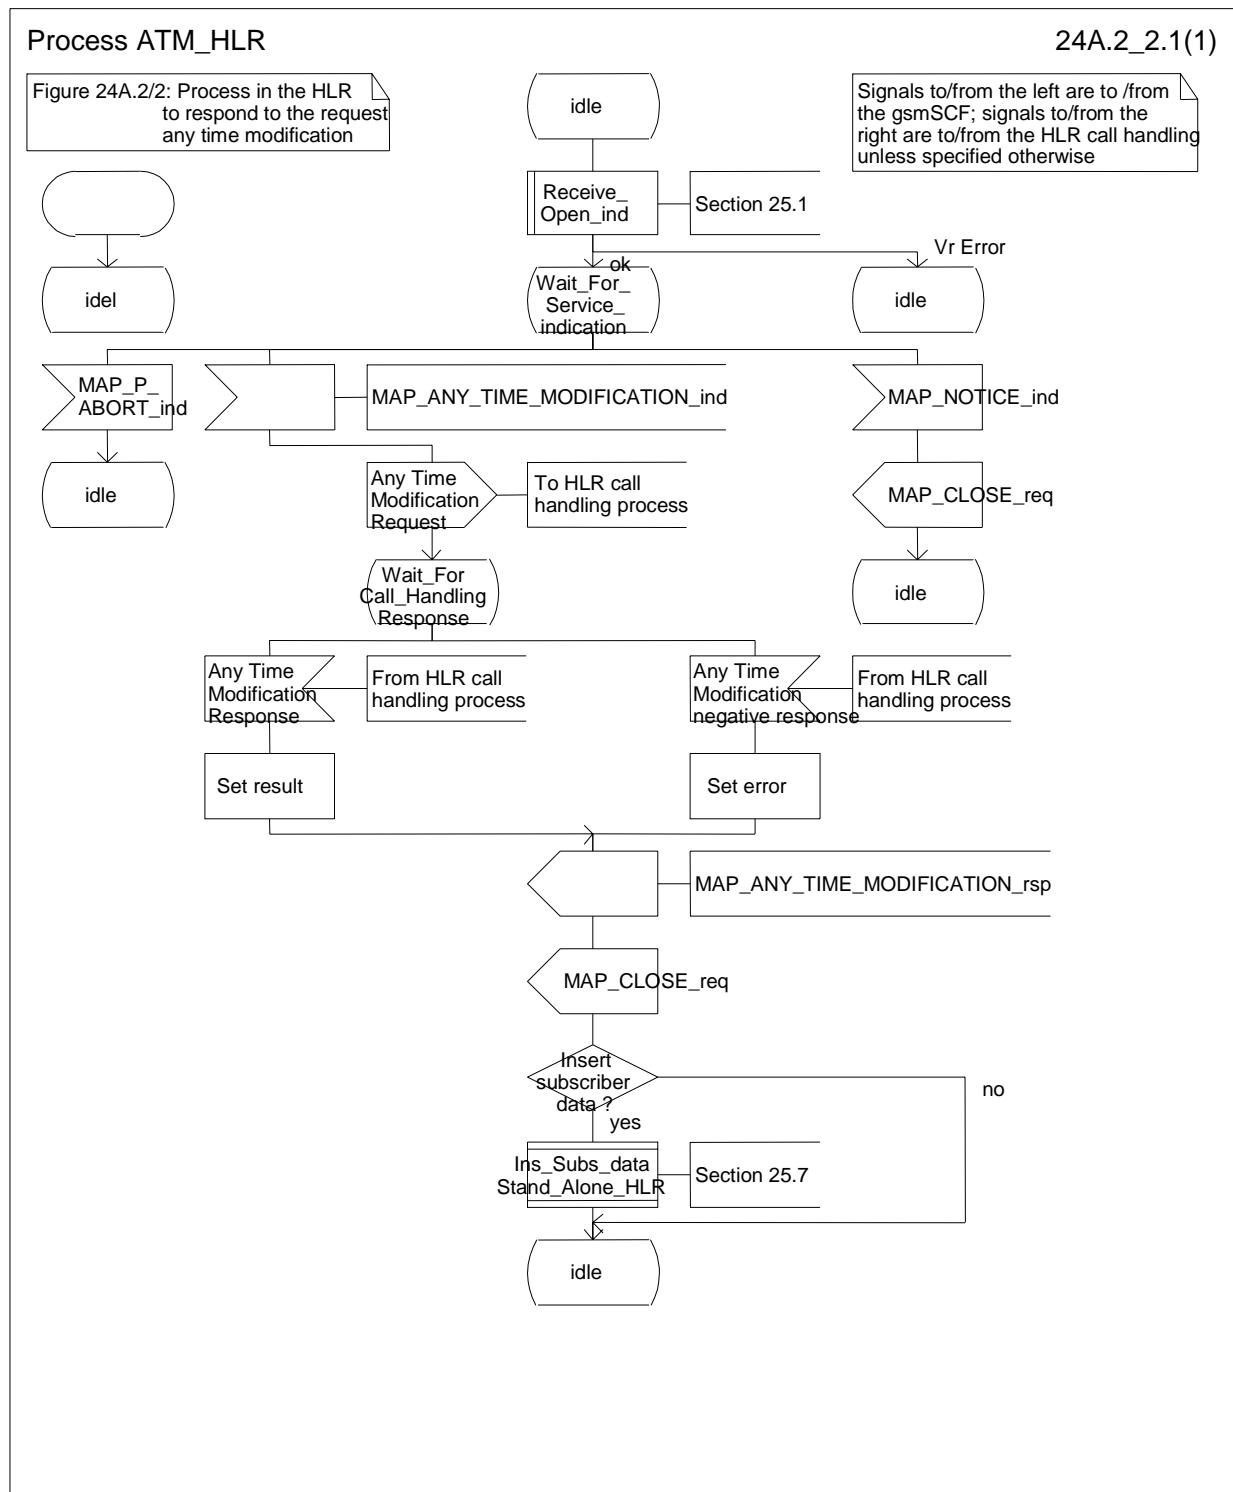


Figure 24A.2/2: Process ATM\_HLR


## 24A.3 Subscriber Data Modification Notification procedure

### 24A.3.1 General

The Subscriber Data Modification Notification procedure is used to notify a gsmSCF about the modification of subscriber data. In an IP Multimedia Core Network, an IM-SSF can take on the role of a gsmSCF for this procedure.

The stage 2 specification for Subscriber Data Modification Notification is in 3GPP TS 23.078 and 3GPP TS 23.278. The interworking between the MAP signalling procedures and the Subscriber Data Modification Notification procedures for each entity (HLR, gsmSCF) is shown by the transfer of signals between these procedures.

The following services are used:

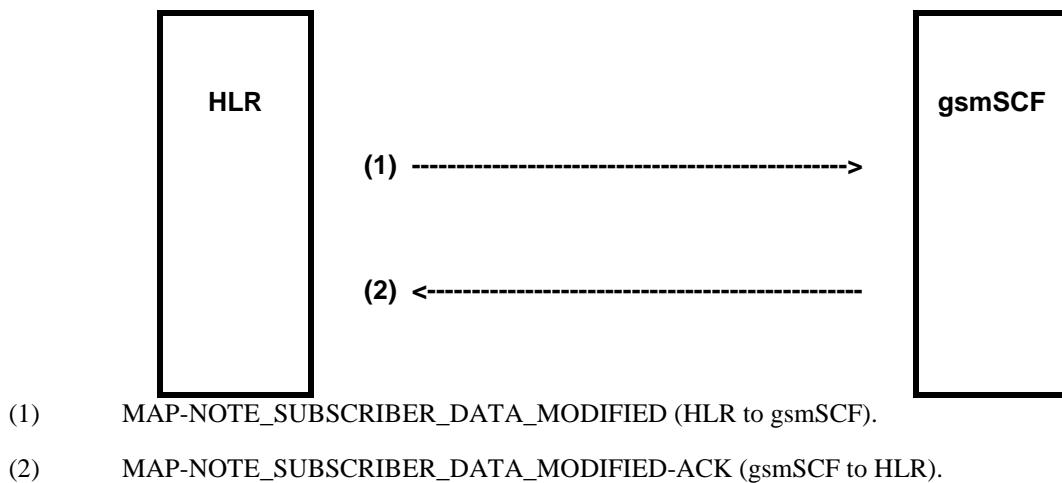

**Figure 24A.3/1: Interfaces and services for subscriber data modification notification**

### 24A.3.2 Processes in the MAP Entities

The text in this clause is a supplement to the definition in the SDL diagrams; it does not duplicate the information in the SDL diagrams.

#### 24A.3.2.1 Process in the HLR

The MAP process in the HLR to send modified data to the gsmSCF is shown in figure 24A.3/2. The MAP process invokes macros not defined in this clause; the definitions of these macros can be found as follows:

Receive\_Open\_Cnf see clause 25.1.2;

Check\_Confirmation see clause 25.2.2.

#### Successful Outcome

When the MAP process receives a Notify Subscriber Data Change request from the process in the HLR, it requests a dialogue with the gsmSCF whose identity is contained in the Note Subscriber Data Modified request by sending a MAP\_OPEN service request, notifies modified subscriber data to the gsmSCF using a MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service request and invokes the macro Receive\_Open\_Cnf to wait for the response to the dialogue opening request. If the dialogue opening is successful, the MAP process waits for a response from the gsmSCF.

If the HLR notices after receiving a Notify Subscriber Data Change request that the segmentation is needed the HLR does not set the “All Information Sent” indicator. Otherwise the indicator is set and the process returns to the Wait for SCF response state.

If the MAP process receives a MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service confirm from the gsmSCF, the MAP process invokes the macro Check\_Confirmation to check the content of the confirm.

If the macro Check\_Confirmation takes the OK exit, the MAP process checks if the “All Information Sent” indicator is set. If it is set the MAP process sends a Notify Subscriber Data Modified ack to the process in the HLR and returns to the idle state. If the “All Information Sent” indicator is not set the MAP process checks if the further segmentation is needed. If segmentation is needed the HLR does not set the indicator and sends MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service request to the gsmSCF. Otherwise the indicator is set and the MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service request is sent to the gsmSCF.

#### **Dialogue opening failure**

If the macro Receive\_Open\_Cnf indicates that the dialogue with the gsmSCF could not be opened or that the dialogue can be opened only at an earlier version, the MAP process sends a Notify Subscriber Data Modified negative response indicating system failure to the process in the HLR and returns to the idle state.

#### **Error in MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED confirm**

If the MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service confirm contains a user error or a provider error, the MAP process sends a Notify Subscriber Data Change negative response to the process in the HLR and returns to the idle state.

#### **Abort of gsmSCF dialogue**

After the dialogue with the gsmSCF has been established, the MAP service provider may abort the dialogue by issuing a MAP\_P\_ABORT indication, or the gsmSCF may send a MAP\_CLOSE indication. In either of these cases, the MAP process sends a Notify Subscriber Data Change negative response to the process in the HLR and returns to the idle state.

If the MAP provider indicates a protocol problem by sending a MAP\_NOTICE indication, the MAP process closes the dialogue with the gsmSCF, sends a Notify Subscriber Data Change negative response indicating system failure to the process in the HLR and returns to the idle state.

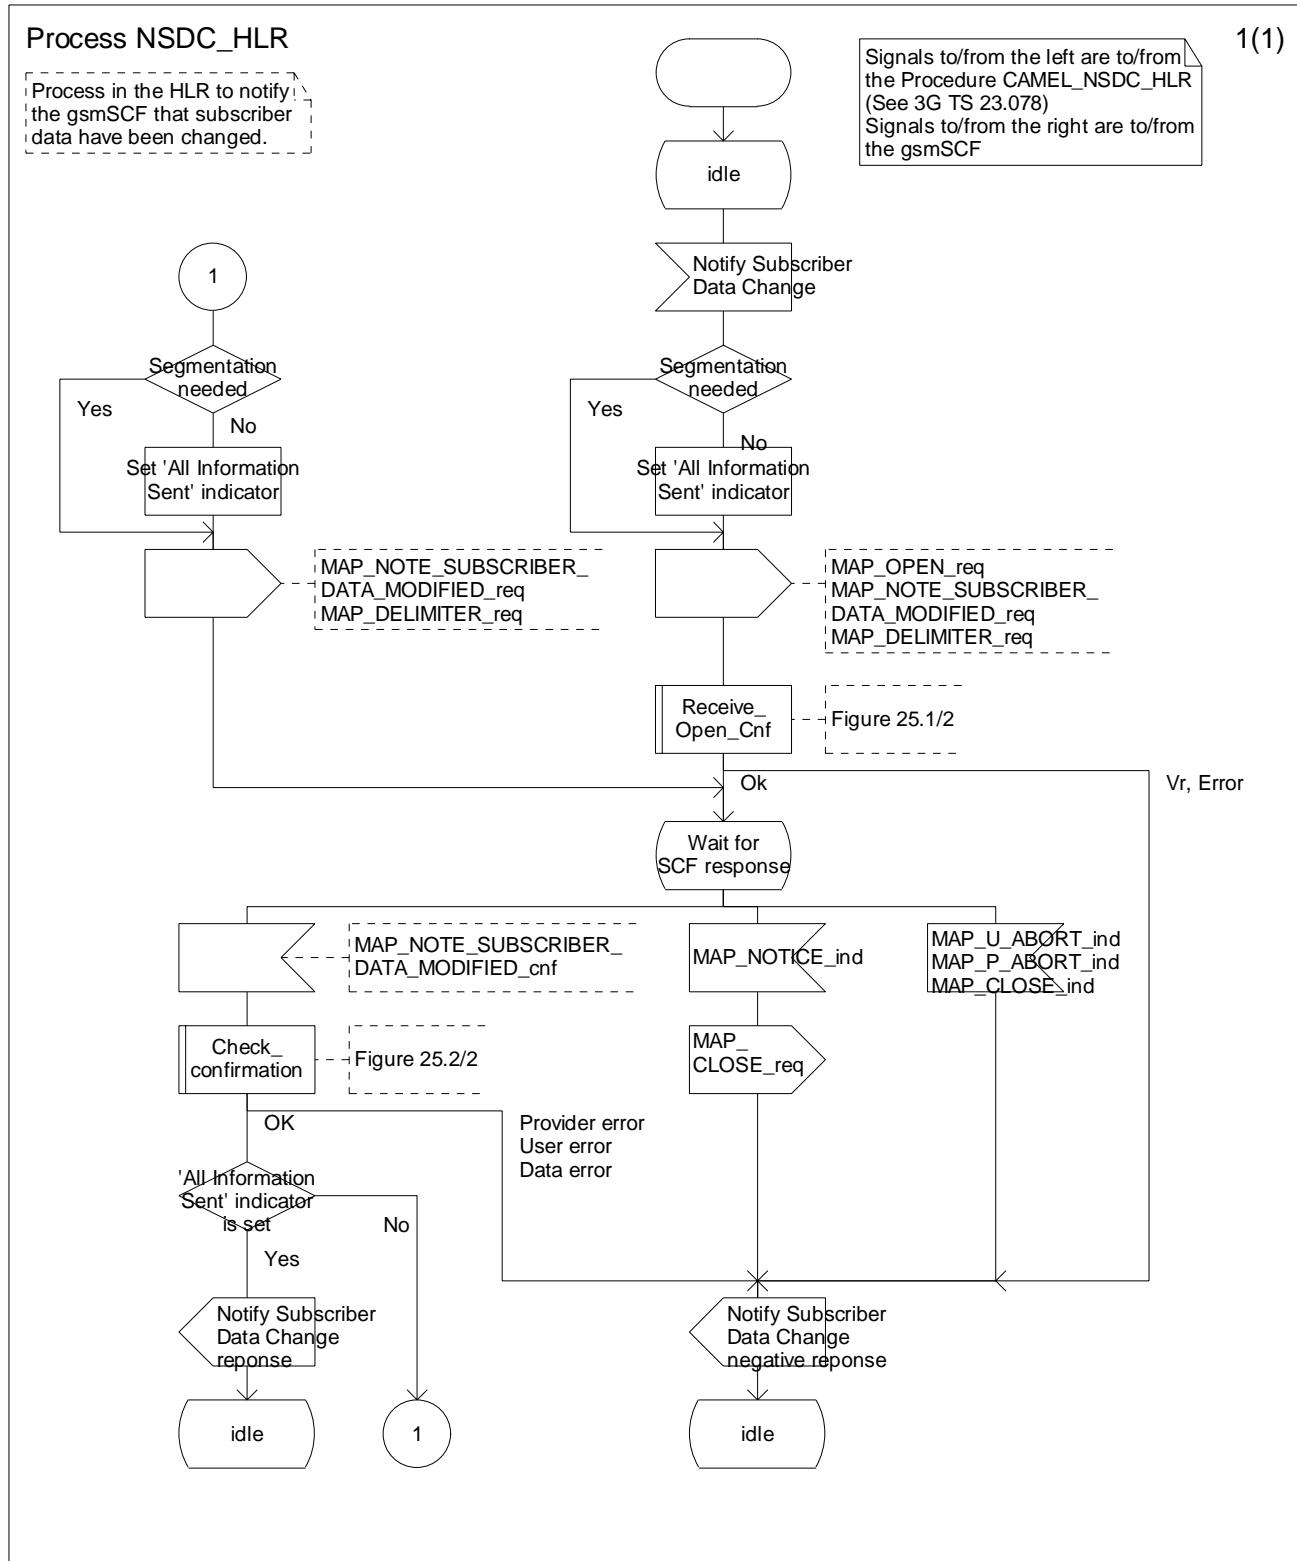


Figure 24A.3/2 Process Subscriber\_Data\_Modification\_Notification\_HLR (sheet 1 of 1)

### 24A.3.2.2 Process in the gsmSCF

The MAP process in the gsmSCF to handle a notification to the gsmSCF of change of subscriber data resume is shown in figure 24A.3/3. The MAP process invokes a macro not defined in this clause; the definition of this macro can be found as follows:

Receive\_Open\_Ind      see clause 25.1.1;

#### **Successful outcome**

When the MAP process receives a MAP\_OPEN indication with the application context noteSubscriberDataModified, it checks it by invoking the macro Receive\_Open\_Ind.

If the macro takes the OK exit, the MAP process waits for a service indication.

If a MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service indication is received, the MAP process checks if the “All Information Sent” indicator is set and if so it sends a Subscriber Data Changed request including all the stored data to the process in the gsmSCF, and waits for a response. The Subscriber Data Changed request contains the parameters received in the MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service indication. If the “All Information Sent” indicator is not set, the received data is stored and the MAP process constructs an empty MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service response, sends it to the HLR and returns to the Wait for response state.

If the process in the gsmSCF returns a negative response, the MAP process constructs a MAP\_NOTE\_SUBSCRIBER\_DATA\_MODIFIED service response, constructs a MAP\_CLOSE service request, sends them to the HLR and returns to the idle state.

#### **Failure of dialogue opening with the HLR**

If the macro Receive\_Open\_Ind takes the Vr exit or the Error exit, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_P\_ABORT while the MAP process is waiting for a service indication, the MAP process returns to the idle state.

If the MAP provider sends a MAP\_NOTICE while the MAP process is waiting for a service indication, the MAP process sends a MAP\_CLOSE request to terminate the dialogue and returns to the idle.

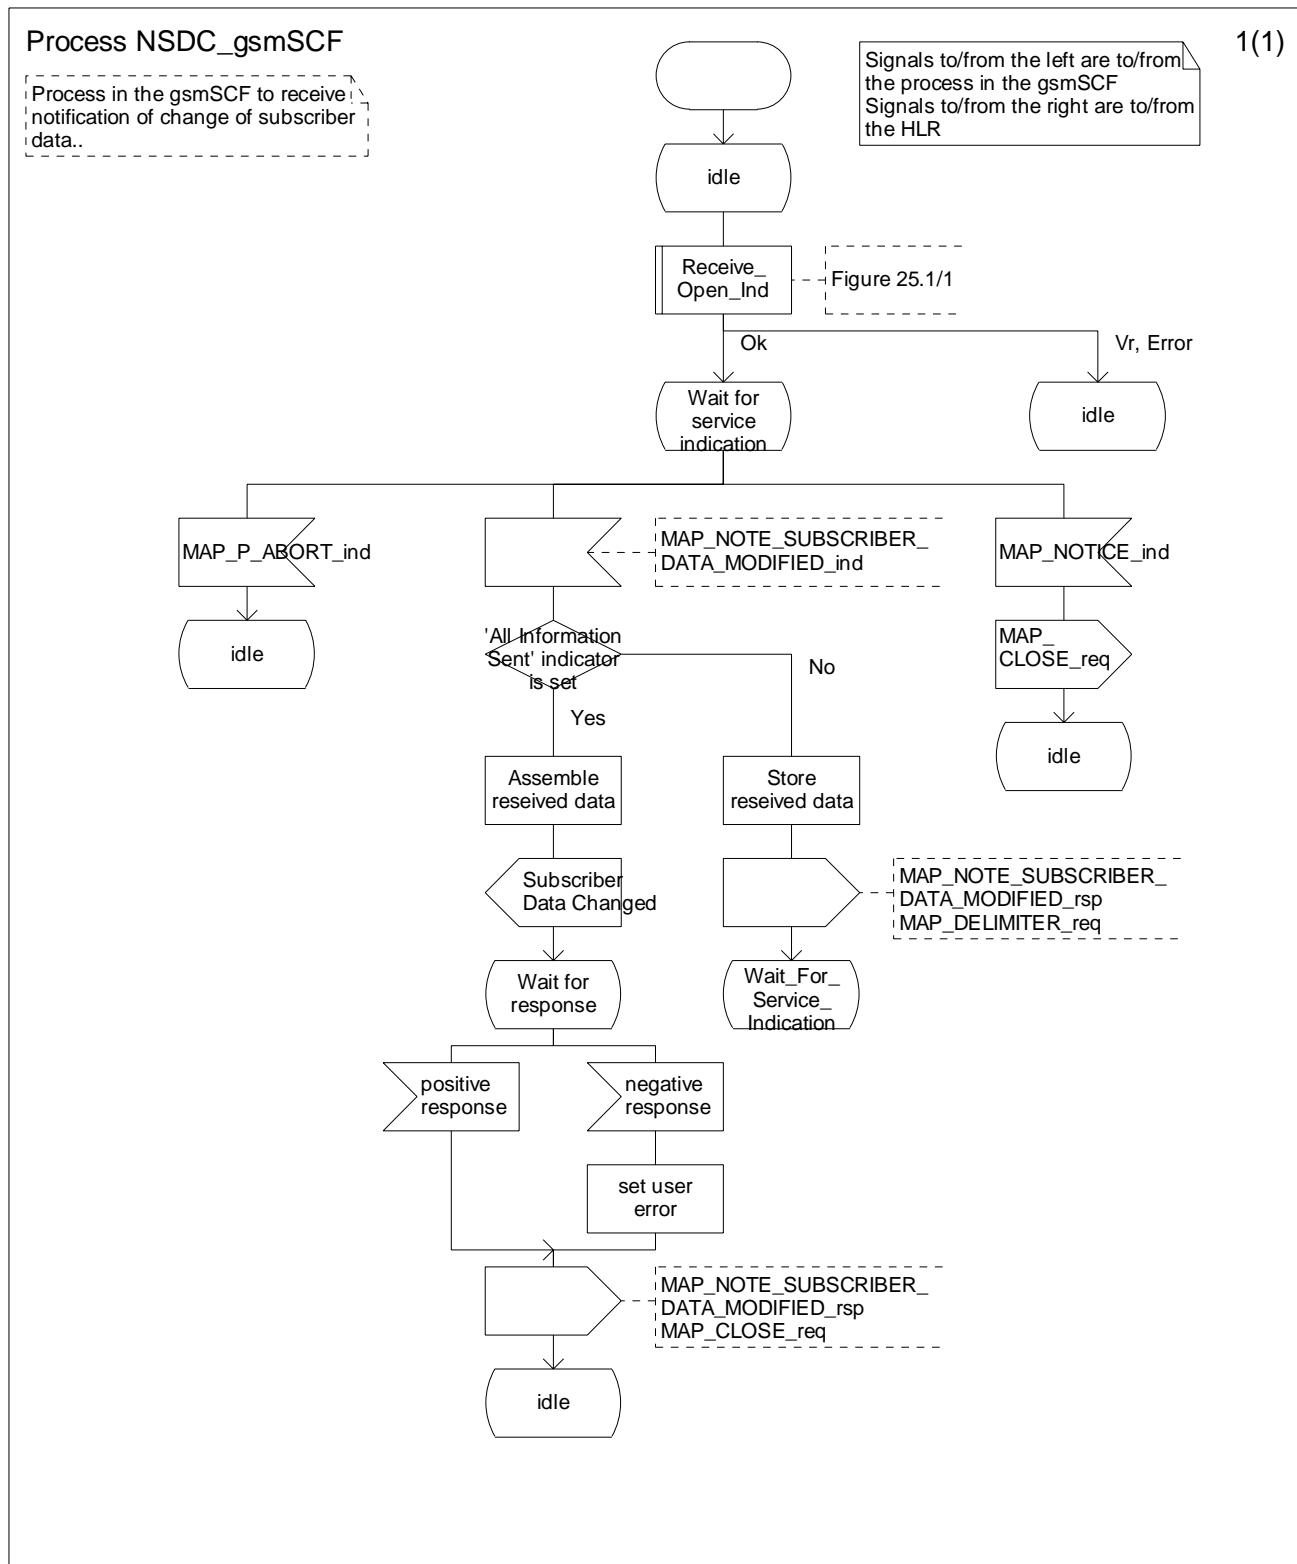



Figure 24A.3/3: Process Subscriber\_Data\_Modification\_Notification\_gsmSCF (sheet 1 of 1)

## 24B Location Service process description

### 24B.1 Routeing information retrieval procedure for LCS

### 24B.1.1 General

The message flows for successful retrieval of routeing information related to location services are shown in figure 24B.1/1.

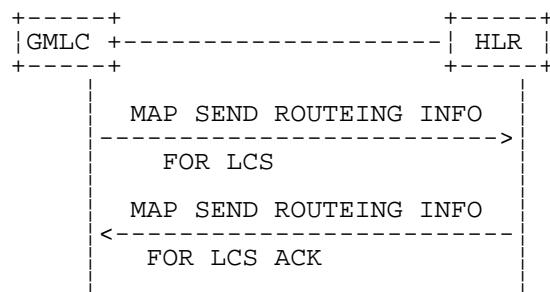

**Figure 24B.1/1: Message flow for retrieval of routeing information for LCS**

The following MAP services are used to retrieve routeing information:

MAP\_SEND\_ROUTING\_INFO\_FOR\_LCS see clause 13A.1.

## 24B.1.2 Process in the GMLC

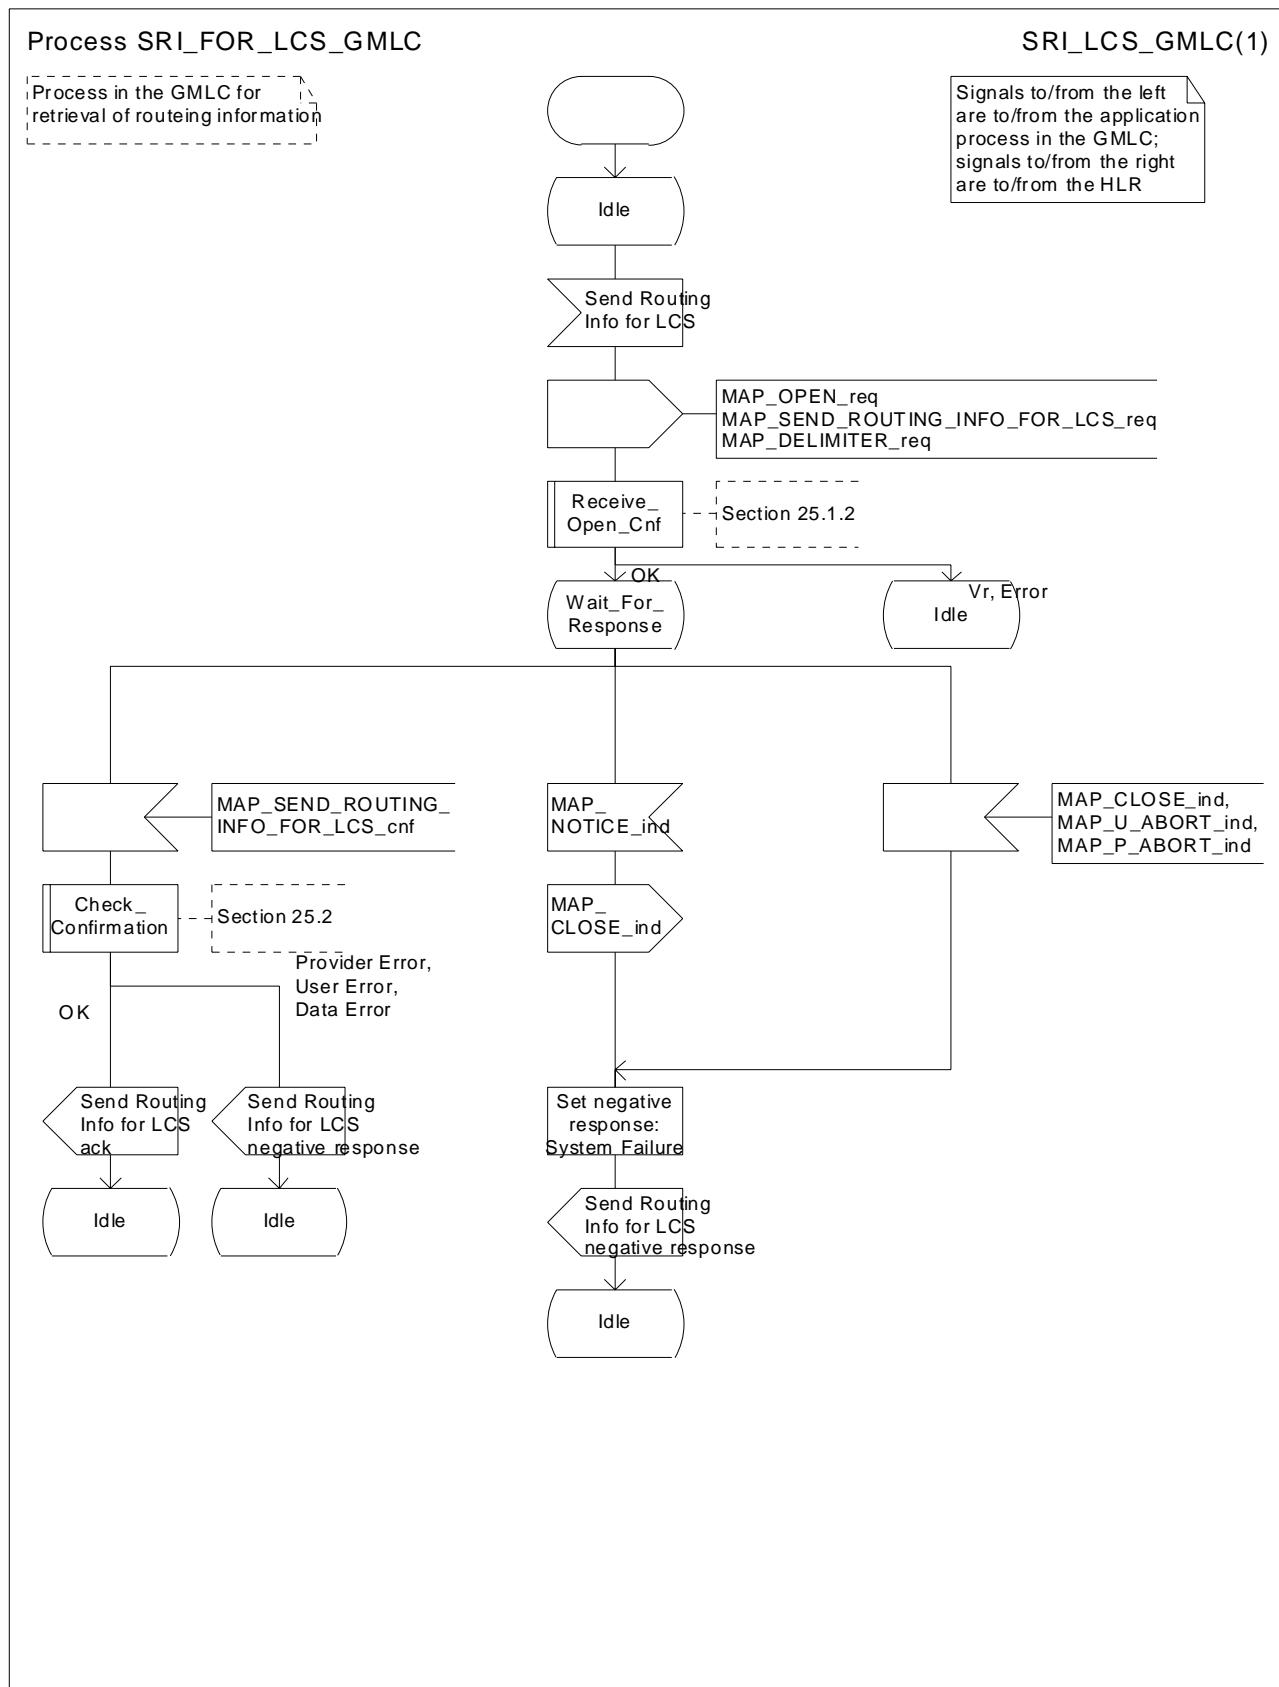


Figure 24B.1/2: Process SRI\_FOR\_LCS\_GMLC

### 24B.1.3 Process in the HLR


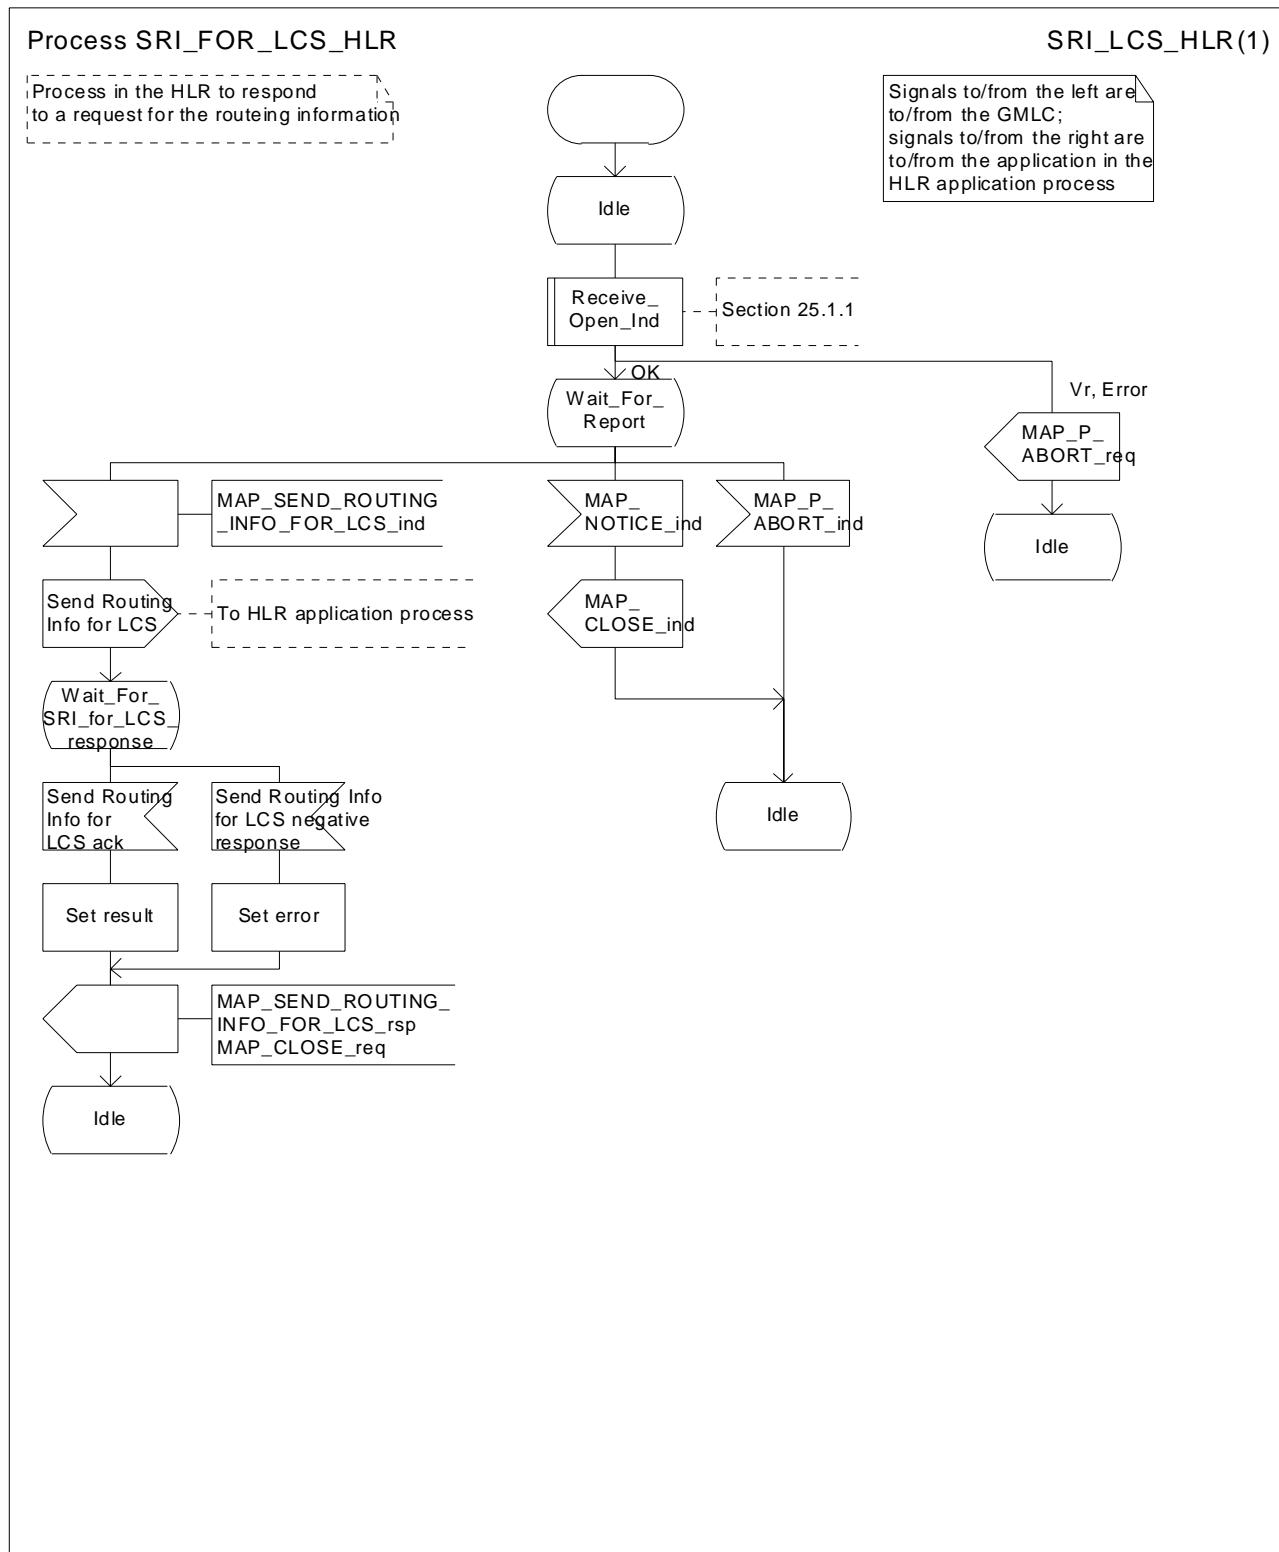


Figure 24B.1/3: Process SRI\_FOR\_LCS\_HLR

## 24B.2 Provide Subscriber Location procedure

### 24B.2.1 General

The message flows for successful retrieval of the location information of a target MS related to location services are shown in figure 24B.1/1.

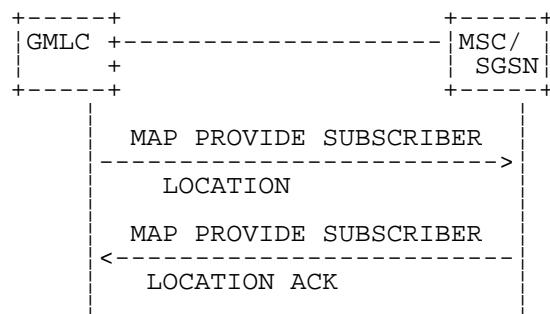

**Figure 24B.2/1: Message flow for request of the location information**

The following MAP services are used to retrieve location information:

MAP\_PROVIDE\_SUBSCRIBER\_LOCATION see clause 13A.2.

## 24B.2.2 Process in the GMLC

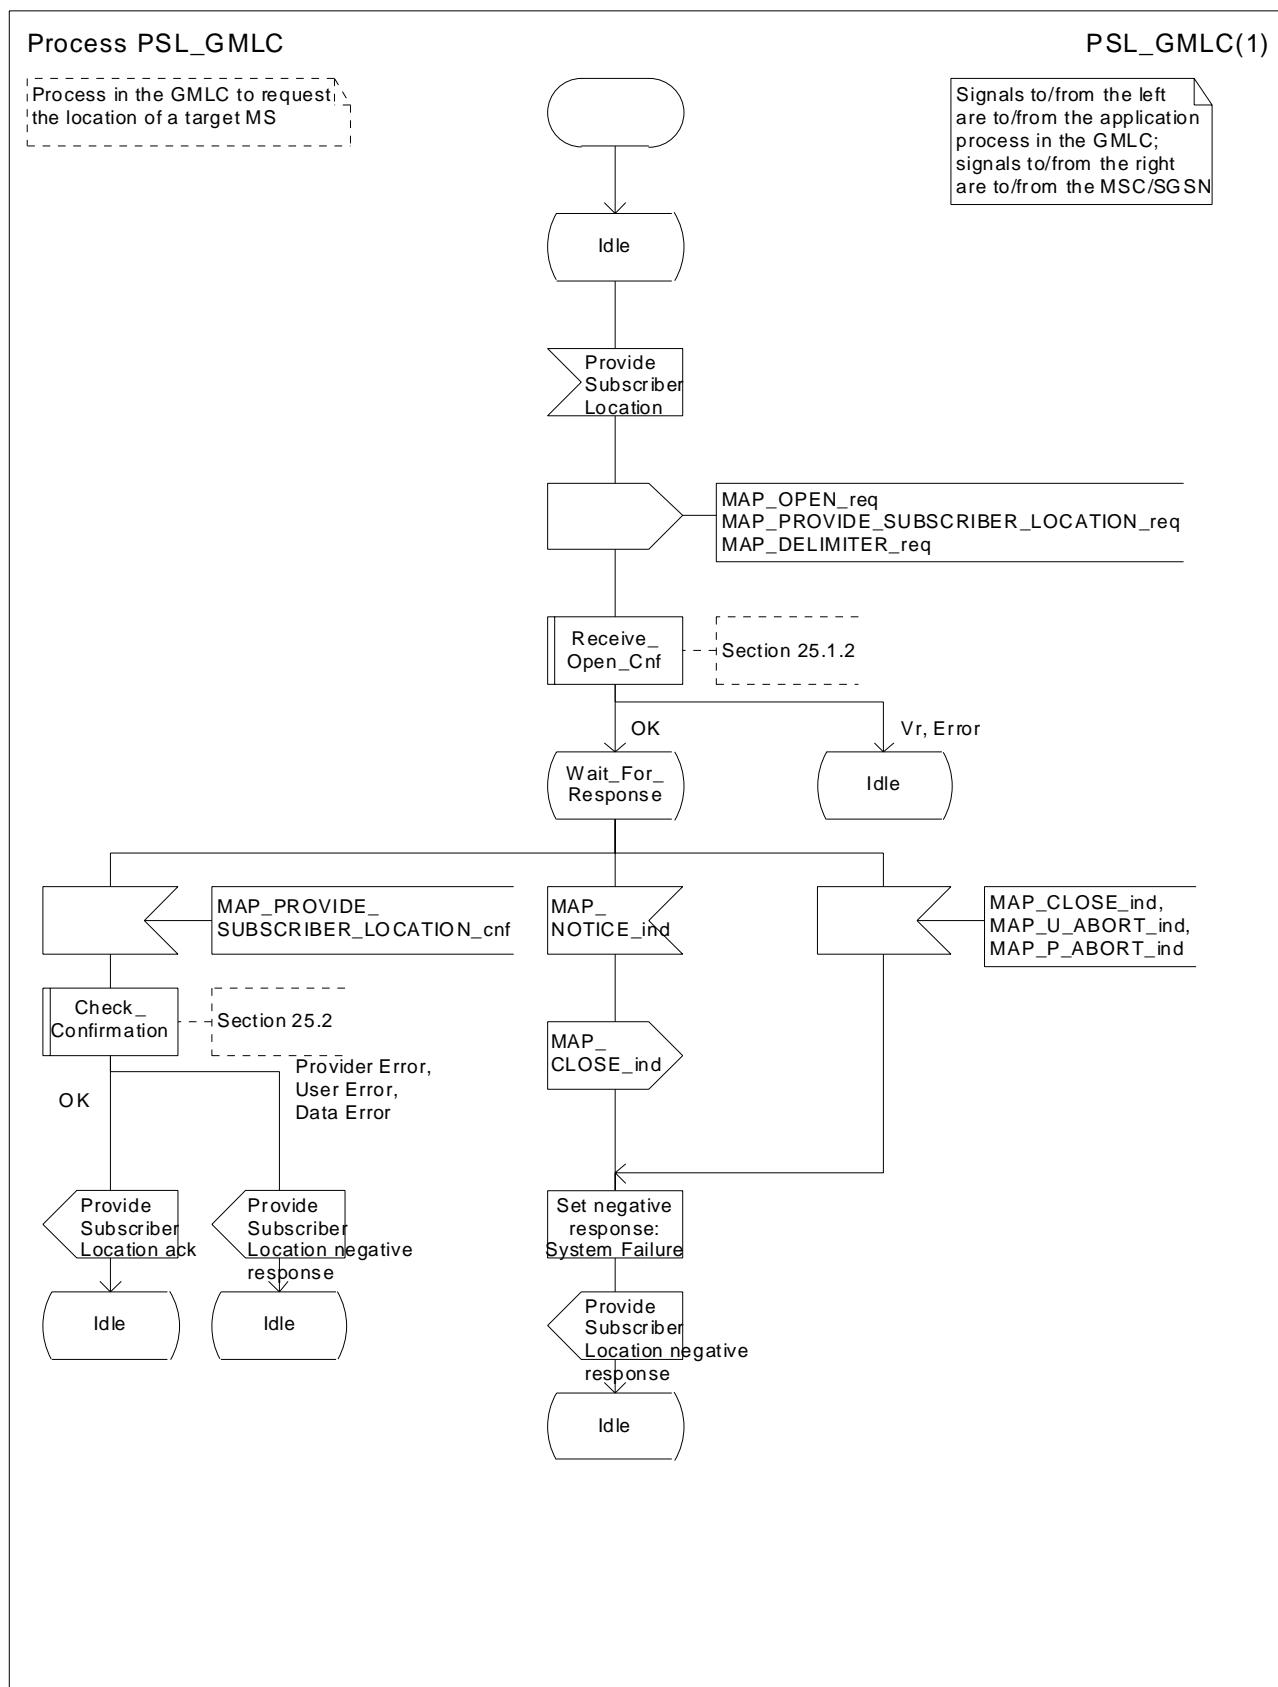


Figure 24B.2/2: Process PSL\_GMLC

### 24B.2.3 Process in the MSC

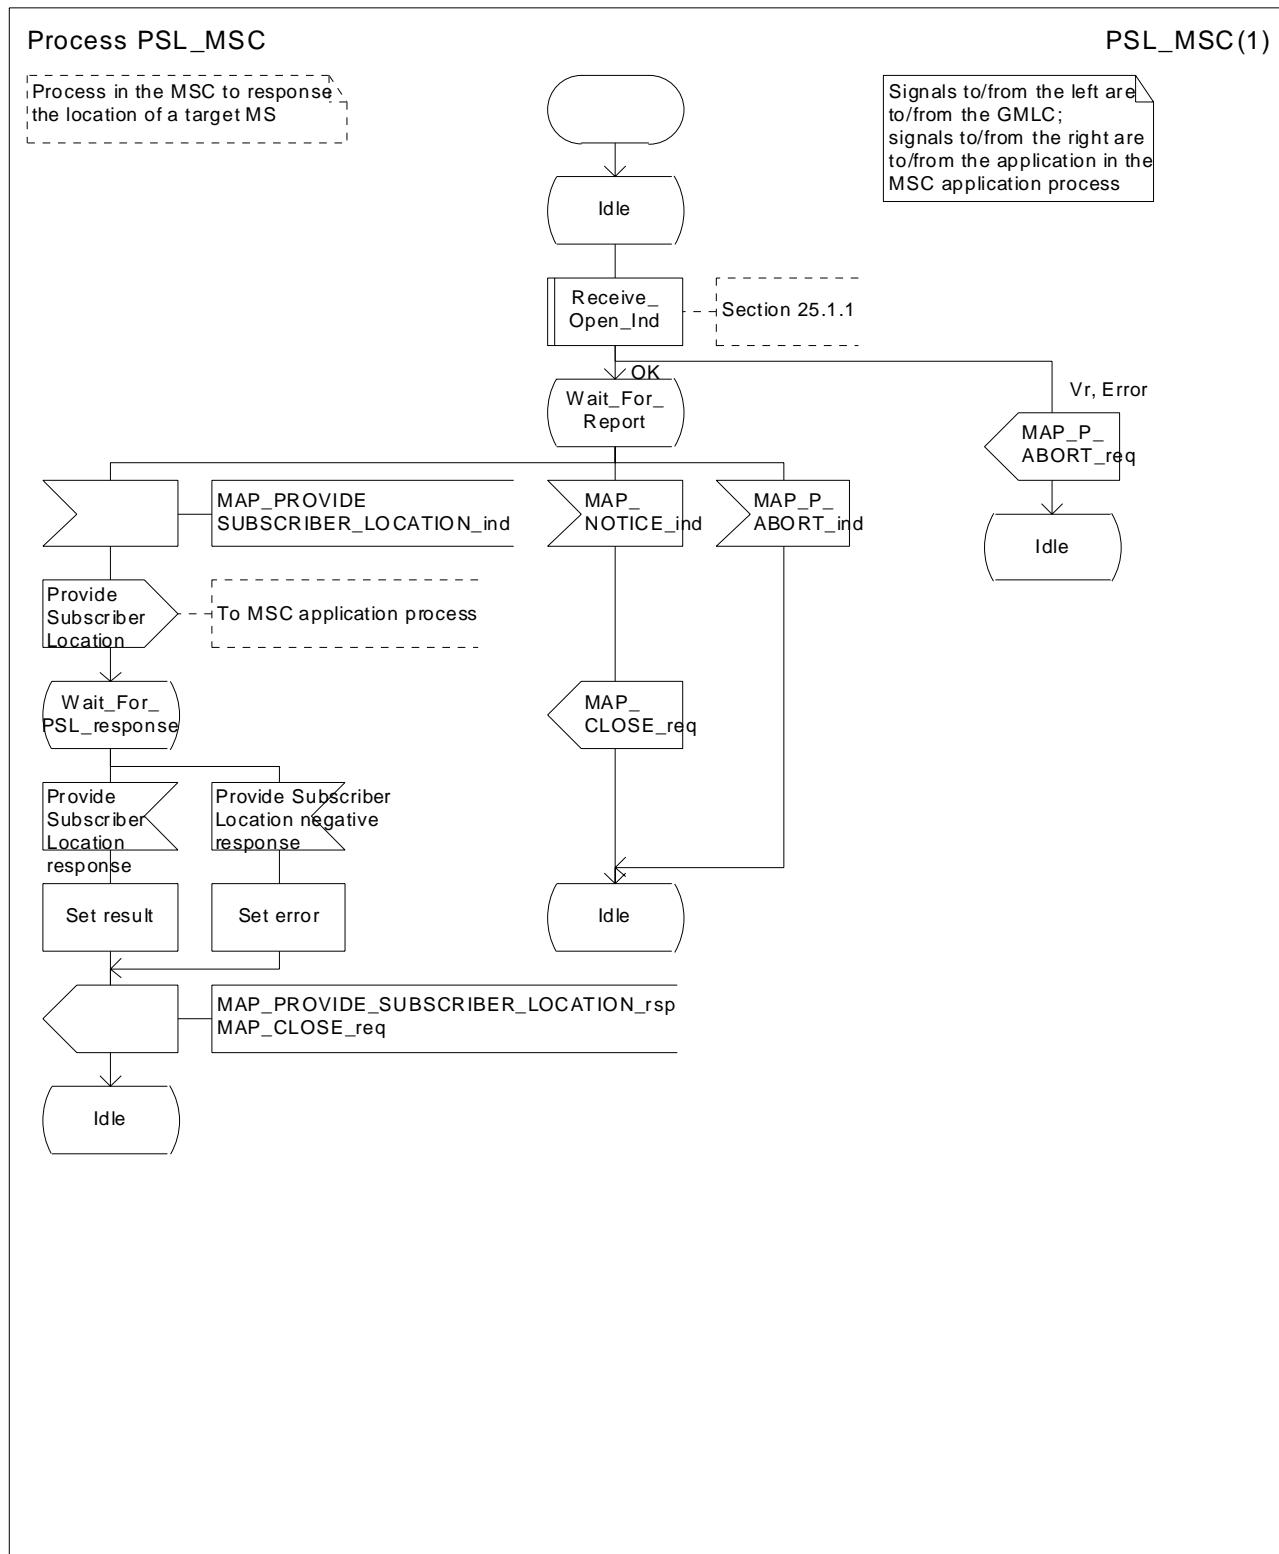


Figure 24B.2/3: Process PSL\_MSC

### 24B.2.4 Process in the SGSN


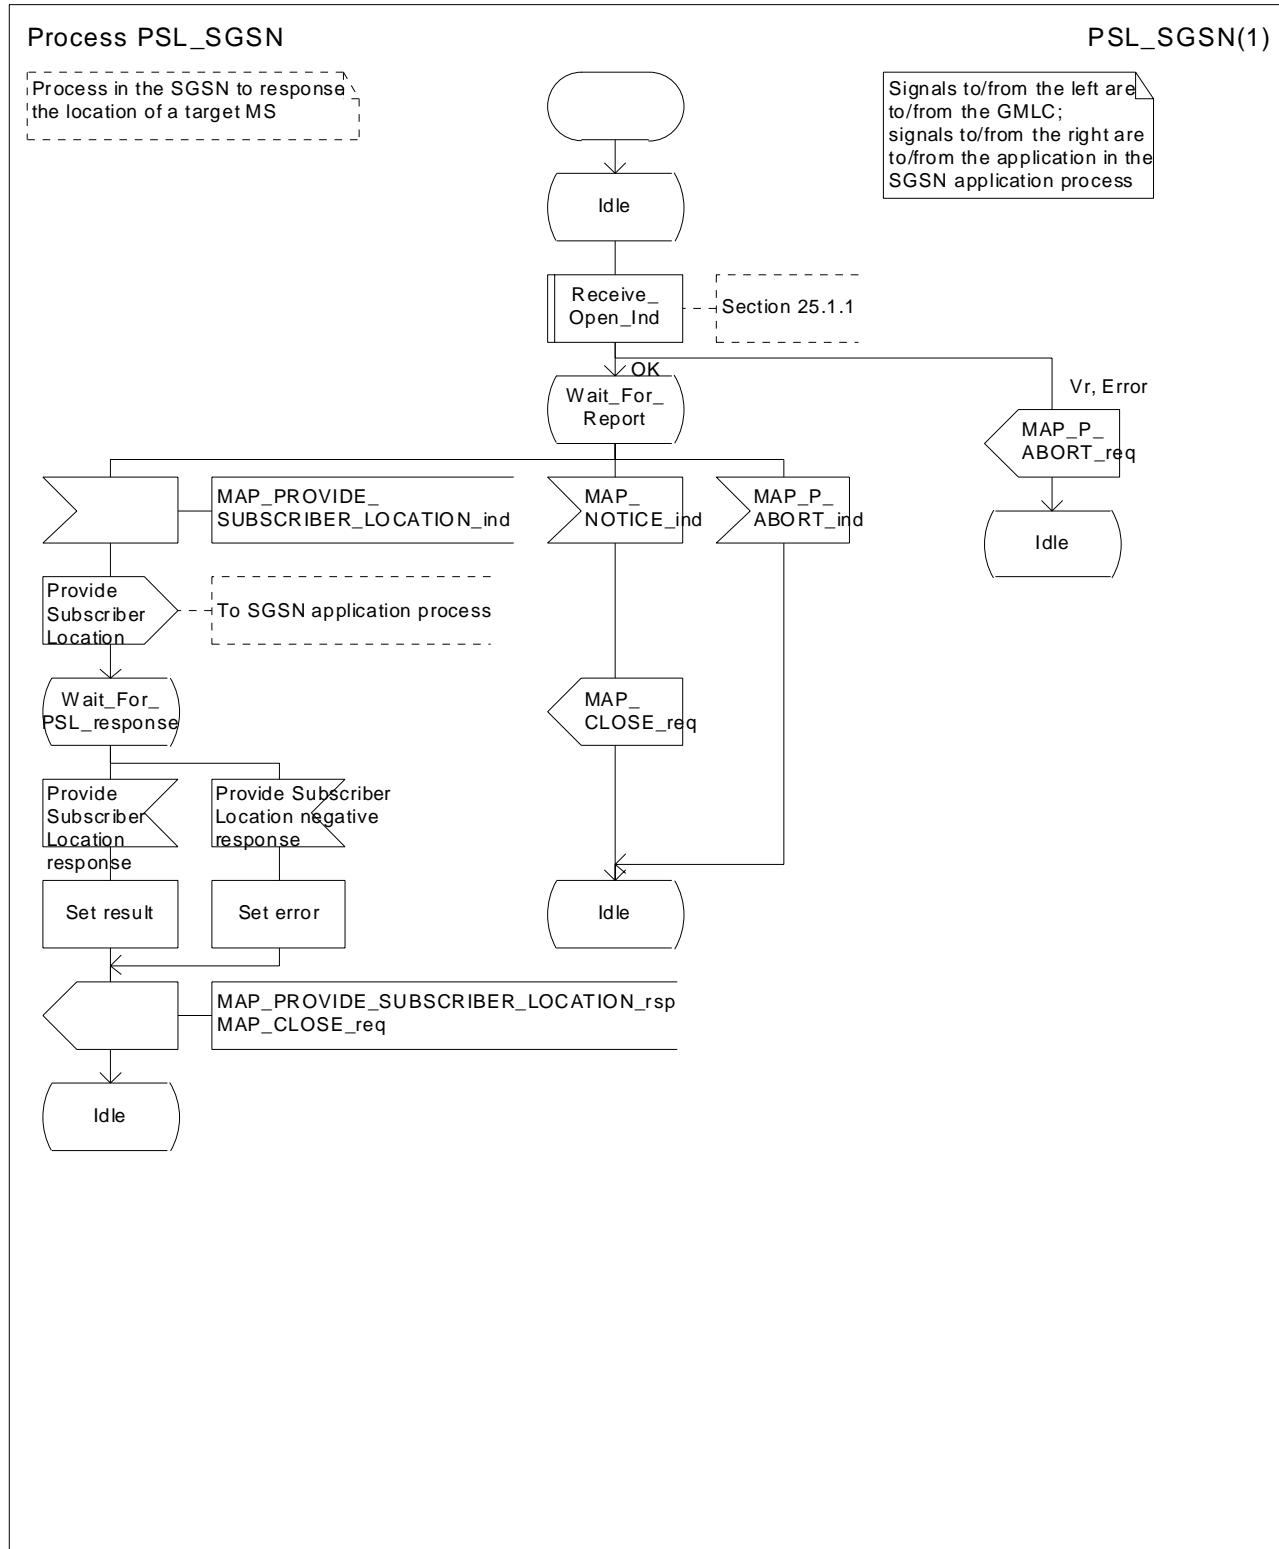


Figure 24B.2/4: Process PSL\_SGSN

## 24B.3 Subscriber Location Report procedure

### 24B.3.1 General

The message flows for successful report of the location information of a target MS related to location services are shown in figure 24B.3/1.

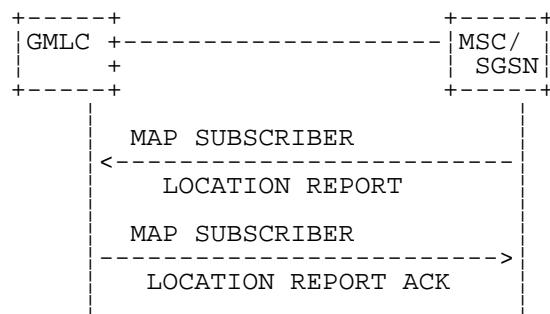

**Figure 24B.3/1: Message flow for report of the location information**

The following MAP services are used to report location information:

MAP\_SUBSCRIBER\_LOCATION\_REPORT see clause 13A.3.

### 24B.3.2 Process in the GMLC

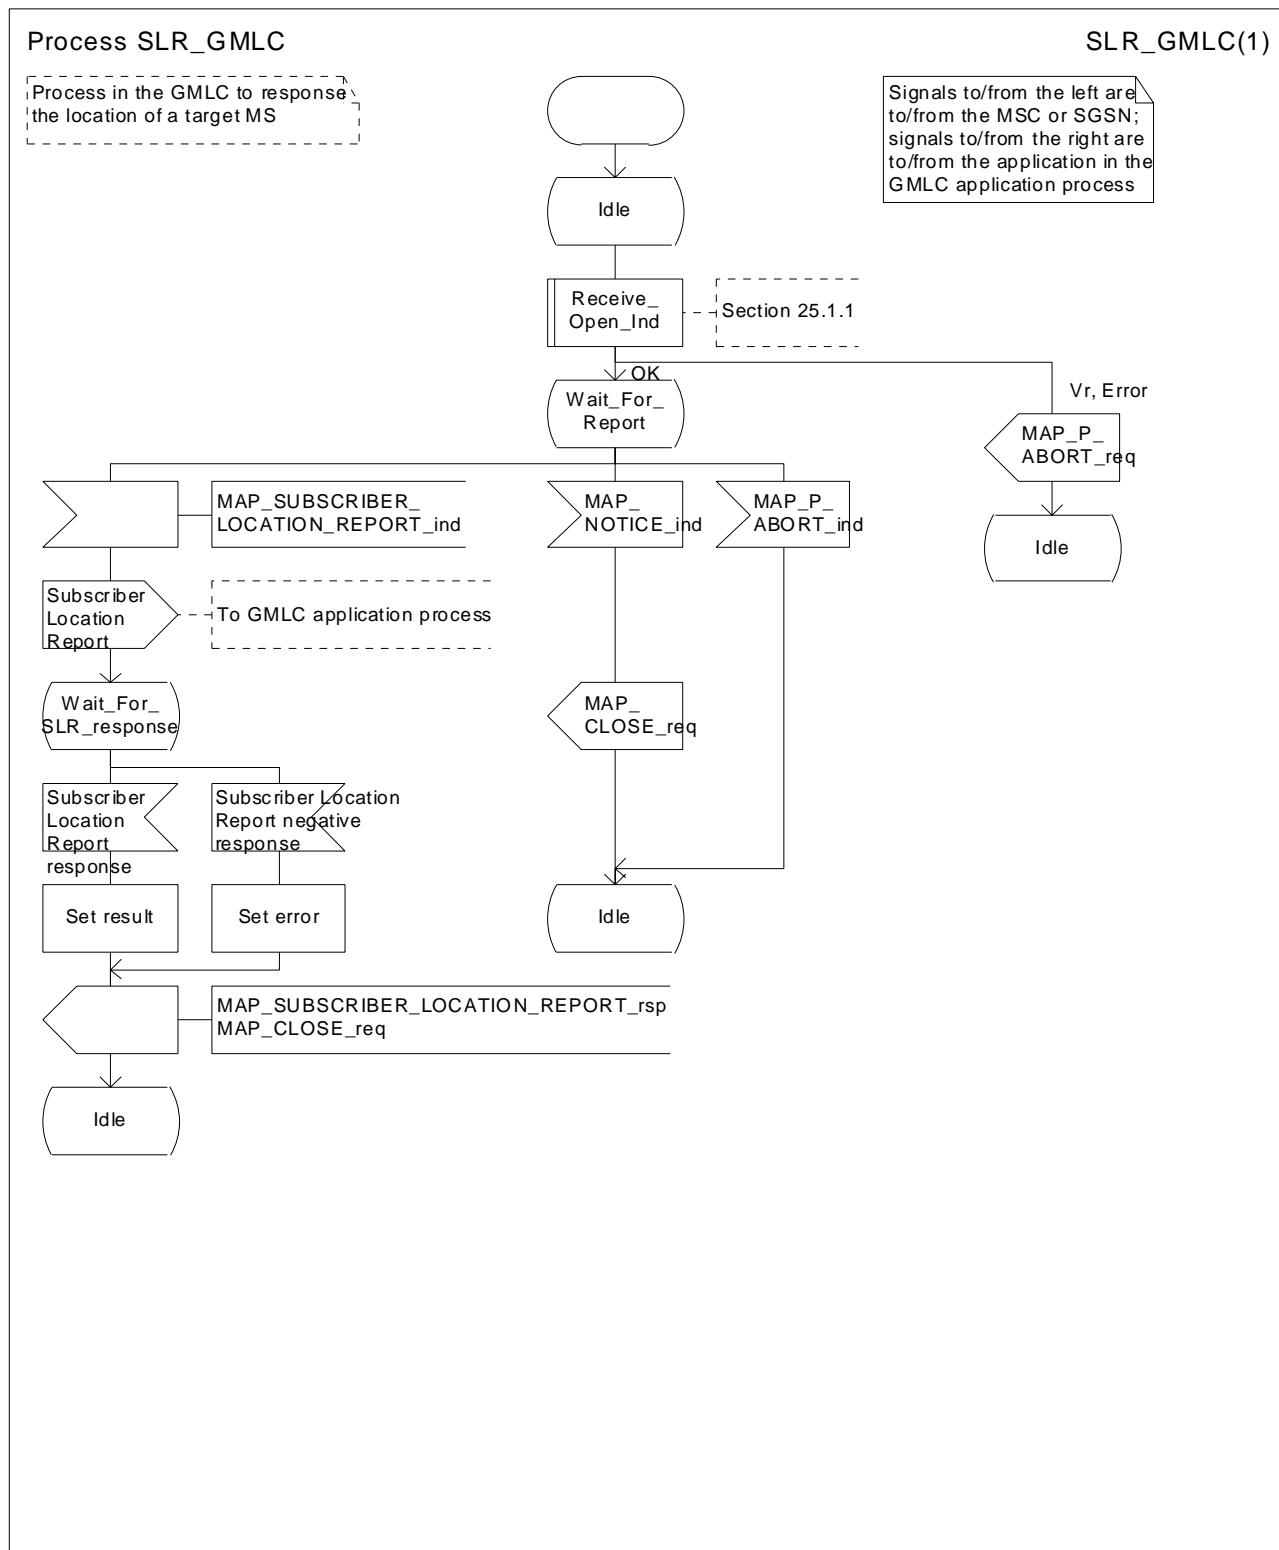


Figure 24B.3/2 Process SLR\_GMLC

### 24B.3.3 Process in the MSC


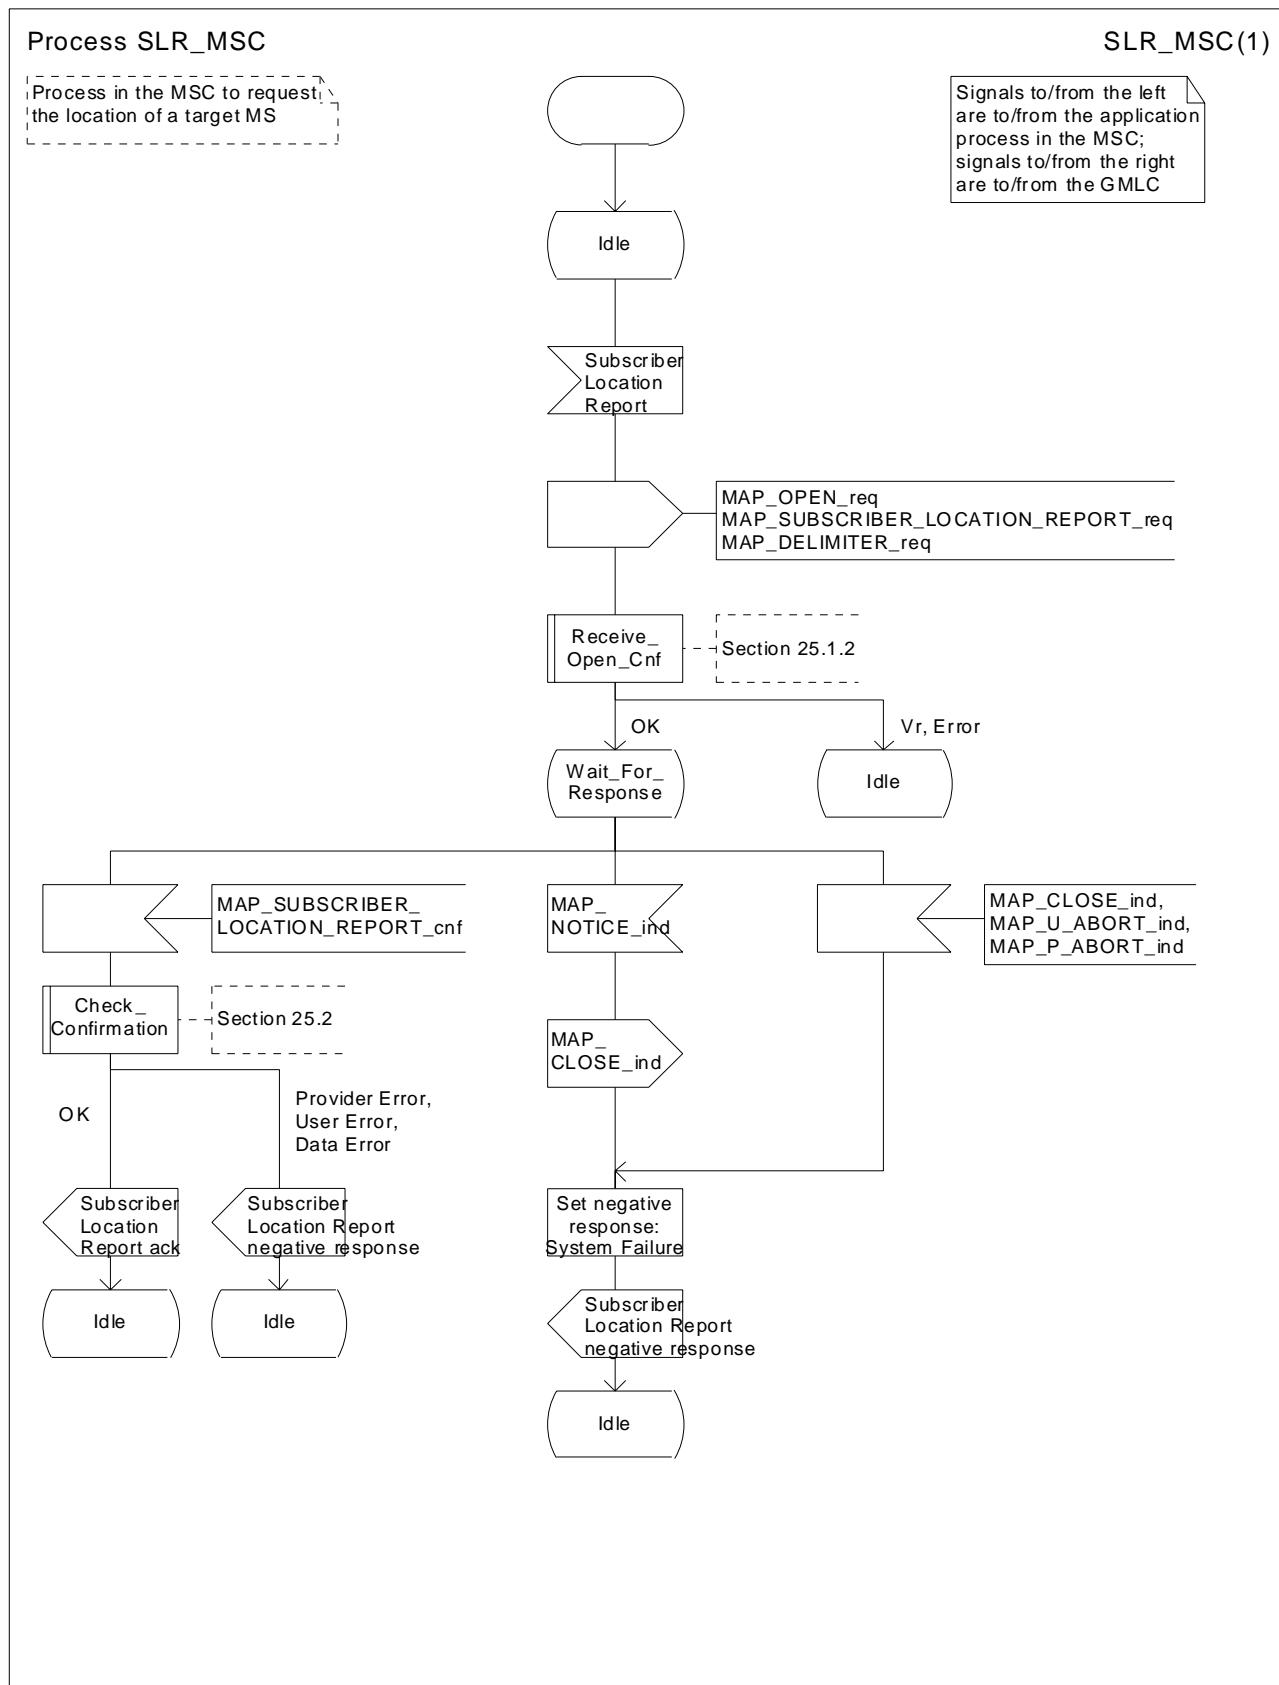


Figure 24B.3/3 Process SLR\_MSC

#### 24B.3.4 Process in the SGSN

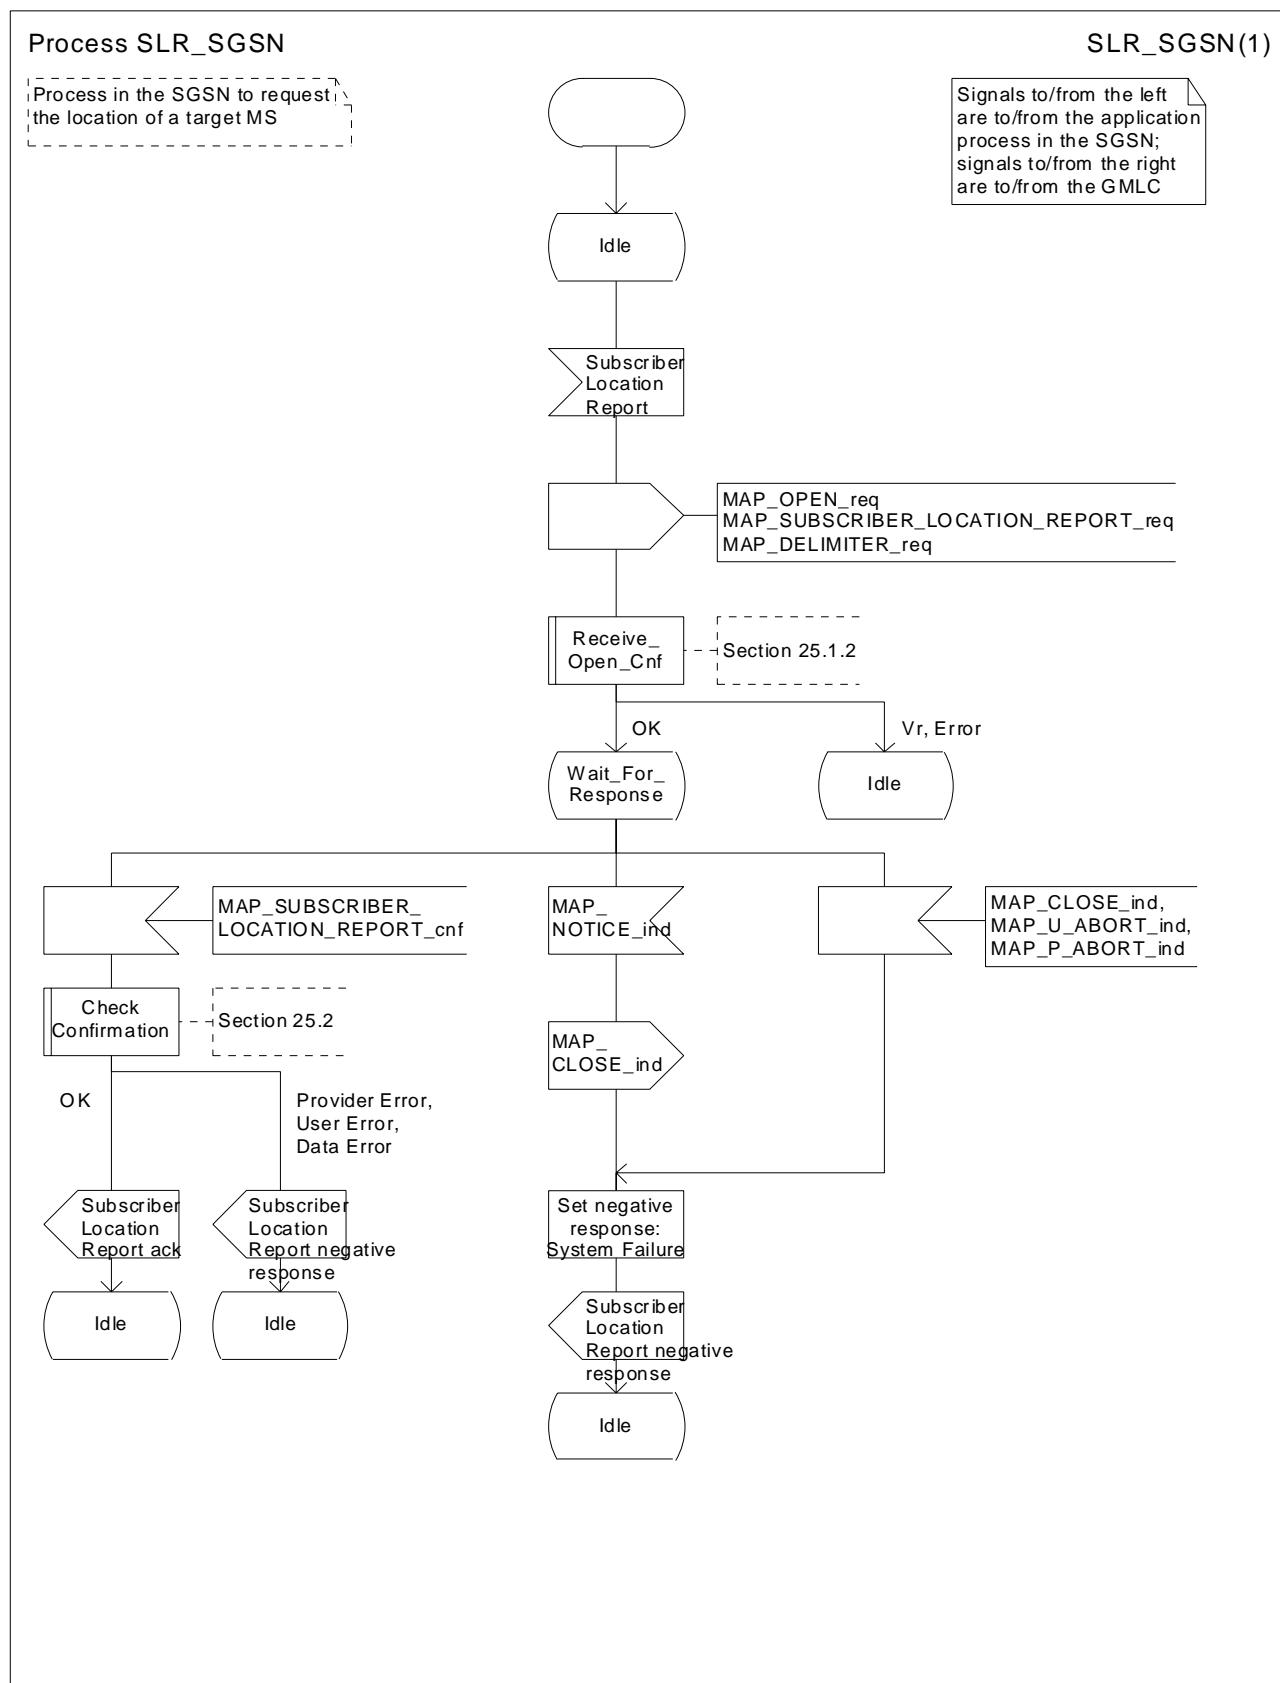

**Figure 24B.3/4 Process SLR SGSN**

## 25 General macro description

### 25.1 MAP open macros

#### 25.1.1 Macro Receive\_Open\_Ind

This macro is used by a MAP service-user procedure when a peer entity requests opening of a dialogue.

If the application context received in the MAP-OPEN indication primitive indicates a context name of the MAP version one context set, the macro takes the Vr exit..

If an application-context different from version 1 is received, the presence of MAP\_OPEN information is checked. If no MAP\_OPEN information has been received, the MAP\_OPEN response with:

- Result set to Dialogue Accepted; and
- Application Context Name set to the received value,

is returned.

If the received version (Vr) is the one described in this version of MAP, the macro takes the OK exit, otherwise it takes the Vr exit..

If MAP\_OPEN information is received, the macro "CHECK\_REFERENCE" is called in order to check whether the received values for Destination Reference and Originating Reference correspond with the requirements of the received application-context-name. If the outcome of this check is an error, the MAP\_OPEN responds with:

- Result set to Dialogue Refused;
- Refuse Reason set to Invalid Destination Reference or Invalid Originating Reference;
- Application Context Name set to the highest version supported,

is returned and the macro takes the error exit.

If the data values received for Destination Reference and Originating Reference are accepted for the associated application-context-name it is checked whether the Destination Reference is known if this check is required by the process that calls the macro.

If the Destination Reference (e.g. a subscribers IMSI) is unknown, the MAP\_OPEN response with

- Result set to Dialogue Refused;
- Refuse Reason set to Invalid Destination Reference;
- Application Context Name set to the highest version supported,

is returned and the macro takes the error exit.

Else, if the Destination Reference is accepted or if no check is required, the MAP\_OPEN response with

- Result set to Dialogue Accepted; and
- Application Context Name set to the received value,

is returned and

If the received version (Vr) is the one described in this version of MAP, the macro takes the OK exit, otherwise it takes the Vr exit..

#### 25.1.2 Macro Receive\_Open\_Cnf

This macro is used by a user procedure after it requested opening of a dialogue towards a peer entity.


On receipt of a MAP\_OPEN Confirmation with a "Result" parameter indicating "Dialogue Accepted", the macro takes the OK exit.


If the "Result" parameter indicates "Dialogue Refused", the "Refuse-reason" parameter is examined. If the "Refuse-reason" parameter indicates "Potential Version Incompatibility", the macro terminates in a way that causes restart of the dialogue by using the version 1 protocol.

If the "Refuse-reason" parameter indicates "Application Context Not Supported" and if the received Application Context Name indicates "Version Vr" ( $Vr < Vn$ ), the macro terminates in a way that causes restart of the dialogue by using the version Vr protocol. Otherwise, the macro takes the Error exit.

If the "Refuse-reason" parameter indicates neither "Potential Version Incompatibility" nor "Application Context Not Supported", the macro takes the Error exit.

If a MAP\_U\_ABORT, a MAP\_P\_ABORT or a MAP\_NOTICE Indication is received, the macro takes the Error exit.

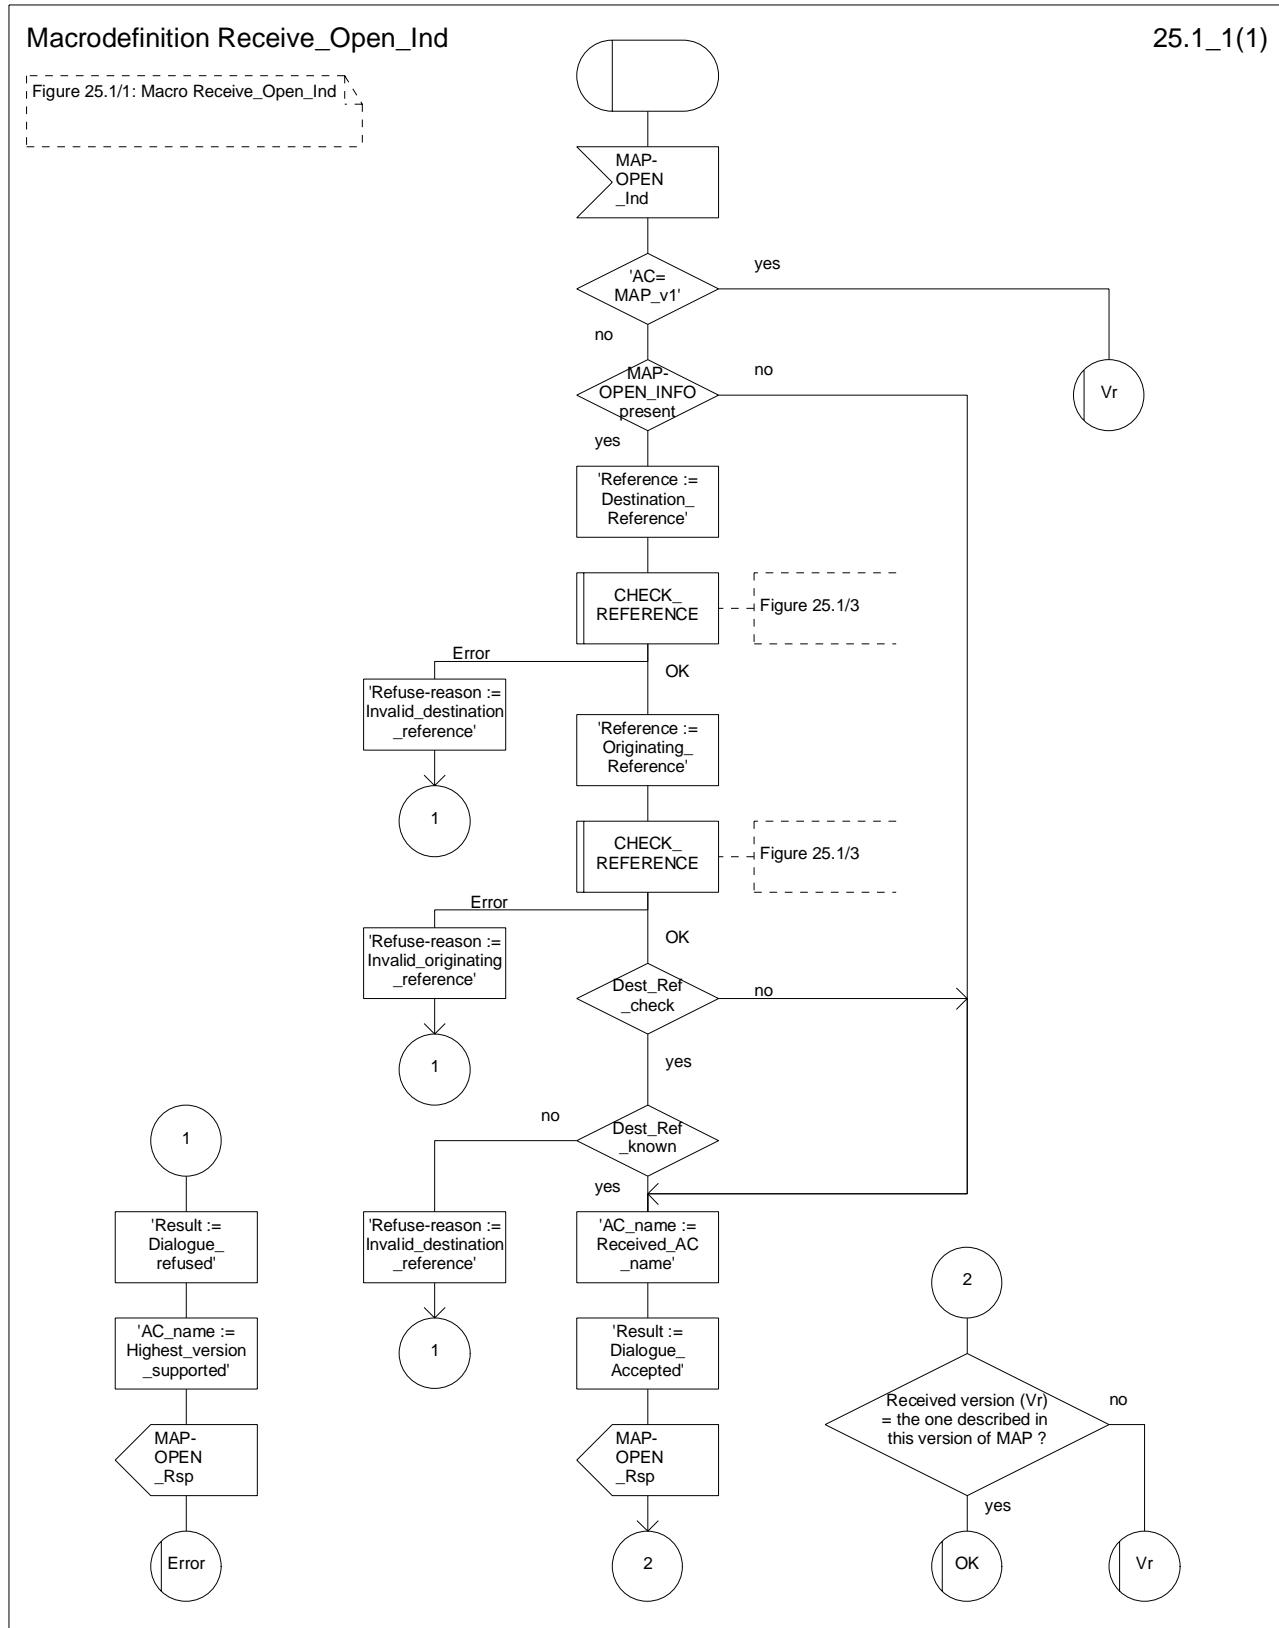**Figure 25.1/1: Macro Receive\_Open\_Ind**

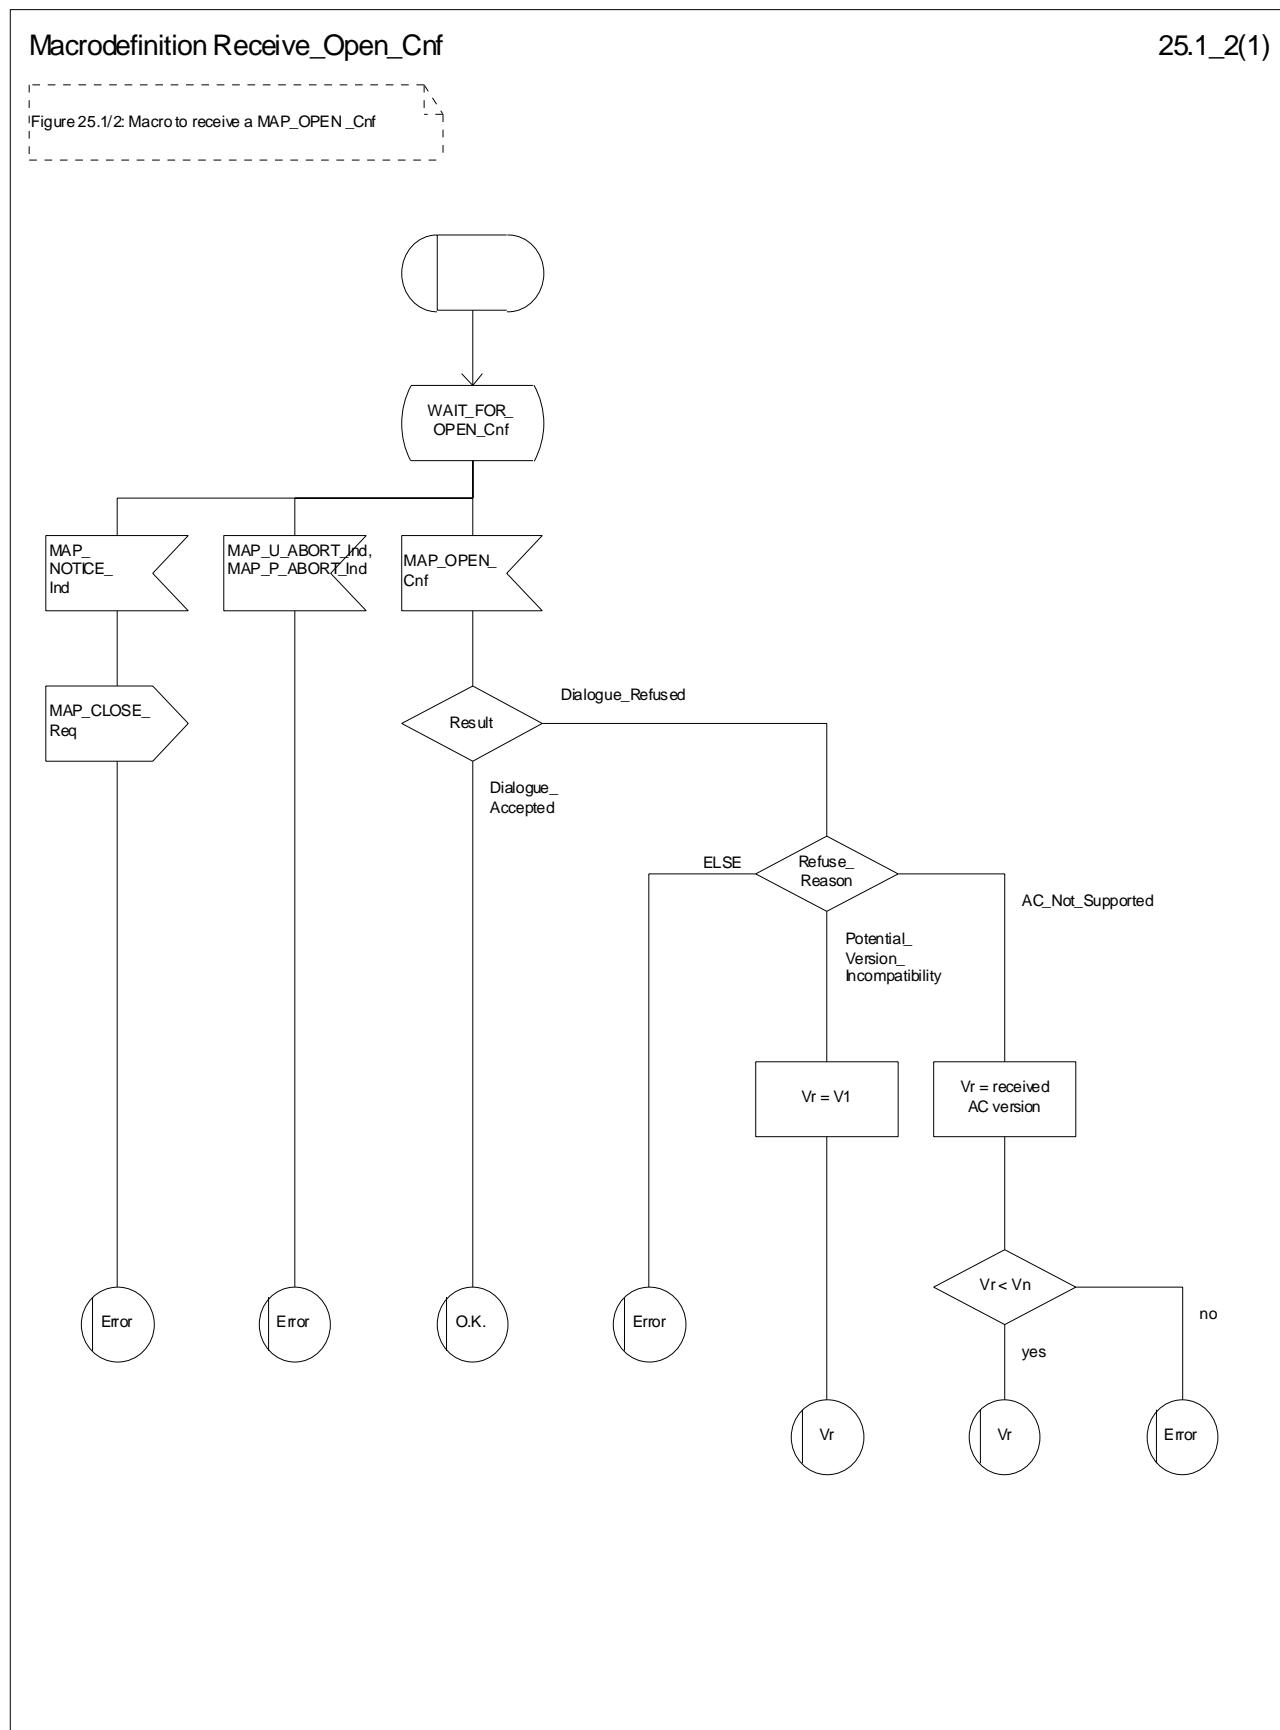

**Figure 25.1/2: Macro Receive Open Cnf**

## Macrodefinition CHECK\_REFERENCE

25.1\_3(1)

Figure 25.1/3: Check of Destination Reference and Originating Reference received in a MAP-OPEN indication primitive

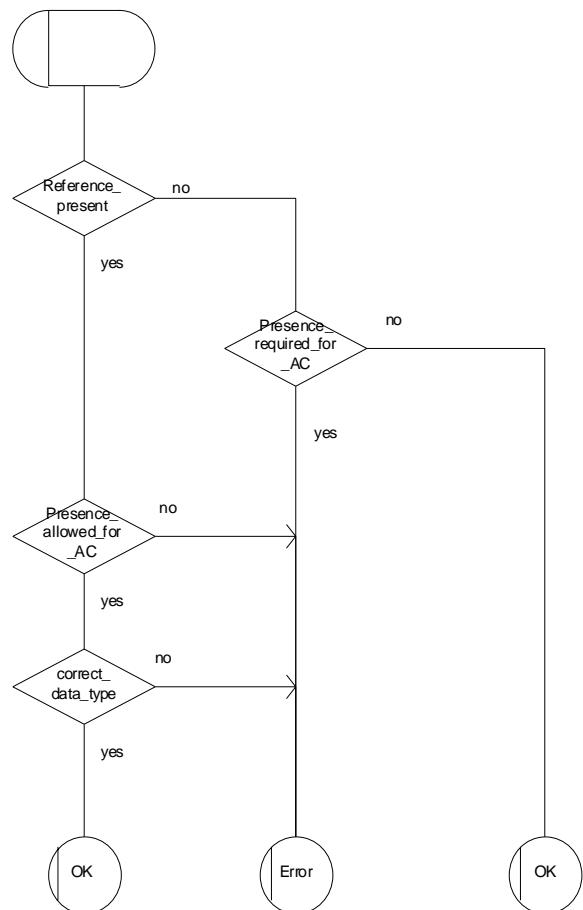


Figure 25.1/3: Macro CHECK\_REFERENCE

## 25.2 Macros to check the content of indication and confirmation primitives

### 25.2.1 Macro Check\_Indication

If a parameter required by the application is missing from the indication, the macro takes the error exit, with a user error of "Data Missing".

If a parameter not expected by the application is present in the indication, or an expected parameter has a value not in the set of values permitted by the application, the macro takes the error exit, with a user error of "Unexpected Data Value".

Otherwise the macro takes the "OK" exit.

The macro is shown in figure 25.2/1.

### 25.2.2 Macro Check\_Confirmation

If the confirmation contains a provider error the macro issues a MAP CLOSE request and takes the provider error exit.

Otherwise, if the confirmation contains a user error the macro takes the user error exit.

Otherwise, if a parameter required by the application is missing from the confirmation, or a parameter not expected by the application is present in the confirmation, or an expected parameter has a value not in the set of values permitted by the application, the macro takes the data error exit.

Otherwise the macro takes the "OK" exit.

The macro is shown in figure 25.2/2.

## Macrodefinition Check\_Indication

25.2\_1(1)

Figure 25.2/1: Macro to check the parameters of an indication primitive

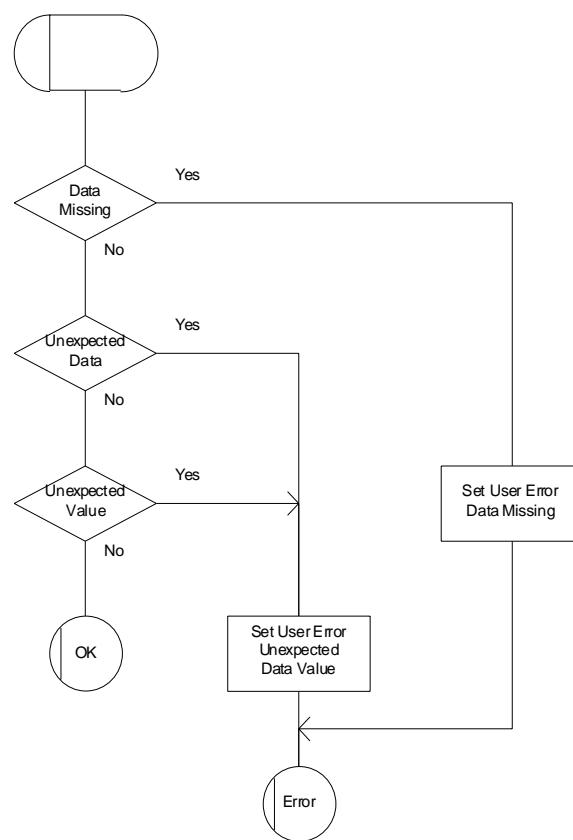


Figure 25.2/1: Macro Check\_Indication

## Macrodefinition Check\_Confirmation

25.2\_2(1)

Figure 25.2/2: Macro to check the parameters of a confirmation primitive

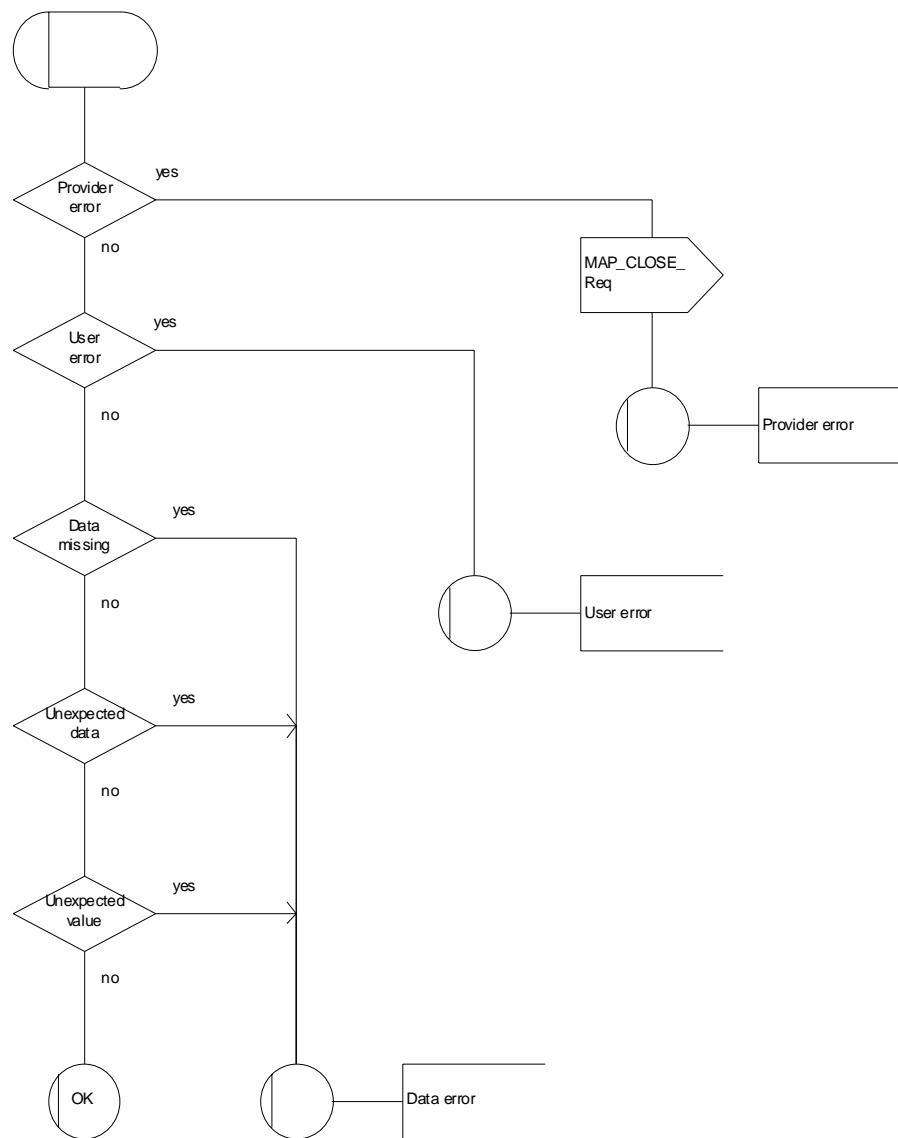


Figure 25.2/2: Macro Check\_Confirmation

## 25.3 The page and search macros

### 25.3.1 Macro PAGE\_MSC

This macro (see figure 25.3/1) is called if a mobile terminating call set-up, an unstructured SS notification, a network-initiated unstructured SS request or a mobile terminating short message is to be delivered to the MS and the current location area identity of the MS is known in the VLR.

When the MSC receives a MAP\_PAGE indication, parameter checks are performed first (macro Check\_Indication, see clause 25.2). If parameter errors are detected, the MSC returns a MAP\_PAGE response containing the appropriate error cause and the macro terminates with unsuccessful outcome.

Thereafter, several checks on the indication content are performed. The macro terminates by returning the MAP\_PAGE response with error:

Unknown Location Area if the LAI is not known in the MSC;

System Failure if the call has been released by the calling subscriber or the SMS or SS transaction for this subscriber has been released by the originating entity in the meantime.

Next, the MSC checks if an MM-connection over the radio link already exists for the given IMSI. If so,

- in the case of mobile terminating call set-up the MSC determines whether the busy condition can be established (see 3GPP TS 22.001 [2] for a definition of busy states). If the MSC determines that the MS is busy, it returns a MAP\_PAGE response with error Busy Subscriber, qualified by either More Calls Allowed or No More Calls Allowed. The macro then terminates with unsuccessful outcome.
- if the service requested is short message service or an unstructured SS notification or network-initiated unstructured SS request, or if the service is mobile terminating call set-up, but the existing connection is for signalling purposes only (i.e. a service different from call set-up), the access connection status is set according to the characteristics of the existing connection (i.e. RR-connection established, ciphering mode on/off, MM-connection existing and authenticated or not), and the macro terminates with successful outcome.

If no MM-connection for the given IMSI exists, paging is initiated at the radio interface within all cells of the location area indicated by the VLR. If the VLR provided the TMSI, the MSC uses it to identify the MS at the radio interface; otherwise the MSC uses the IMSI. The IMSI will also be used to determine the page group (see 3GPP TS 24.008 [35]). There are several possible outcomes of paging:

- the MS responds to paging, causing the access connection status to be set accordingly (i.e. no RR-connection, in which case other values are not significant), and the macro terminates with successful outcome;
- the MS responds with a channel request containing an establishment cause which is not "answer to paging". The MSC sends a MAP\_PAGE response primitive with user error Busy Subscriber before the macro terminates with unsuccessful outcome. This will give priority to the mobile originating request. Alternatively, as an implementation option, the MSC may treat this as a response to paging, which will give priority to the mobile terminating request.
- there is no response from the MS. The MSC sends a MAP\_PAGE response primitive with user error Absent Subscriber before the macro terminates with unsuccessful outcome;
- the call handling connection or MAP transaction on which the call, SMS or unstructured SS transaction is waiting for delivery, is released before a response is received from the MS (indicated in the SDL by the input signal I-REL). The MAP transaction with the VLR will be released in this case by a MAP\_U\_ABORT request, and the unsuccessful macro termination will indicate transaction termination.
- the MAP transaction with the VLR may be released by receiving a MAP\_U\_ABORT or MAP\_P\_ABORT indication. The call handling connection or MAP transaction on which the call, SMS or unstructured SS transaction is waiting for delivery, is released (indicated in the SDL by the output signal I-REL), and the unsuccessful macro termination will indicate transaction termination.

### 25.3.2 Macro Search\_For\_MS\_MSC

This macro (see figure 25.3/2) is called if a mobile terminating call set-up, an unstructured SS notification, a network-initiated unstructured SS request or a mobile terminating short message is to be delivered to the MS and the current location area identity of the MS is not known in VLR.

When the MSC receives a MAP\_SEARCH\_FOR\_MS Indication, parameter checks are performed first (macro Check\_indication, see clause 25.2). If parameter errors are detected, the MSC returns a MAP\_SEARCH\_FOR\_MS response containing the appropriate error cause and the macro terminates with unsuccessful outcome.


Thereafter, the MSC checks whether the call or the SMS or SS transaction still exists in the MSC. If the call or the SMS or SS transaction has been released, the MSC returns a MAP\_SEARCH\_FOR\_MS response with error System Failure and the macro terminates with unsuccessful outcome.

Next, the MSC checks if an MM-connection over the radio link already exists for the given IMSI. If so,


- in the case of mobile terminating call set-up the MSC determines whether the busy condition can be established (see 3GPP TS 22.001 [2] for a definition of busy states). If the MSC determines that the MS is busy, it returns a MAP\_SEARCH\_FOR\_MS response with error Busy Subscriber, qualified by either More Calls Allowed or No More Calls Allowed. The macro then terminates with unsuccessful outcome.
- if the service requested is short message service or an unstructured SS notification or network-initiated unstructured SS request, or if the service is mobile terminating call set-up, but the existing connection is for signalling purposes only (i.e. a service different from call set-up), a MAP\_SEARCH\_FOR\_MS response containing the IMSI and current location area identification of the called MS is returned to the VLR. The access connection status is set according to the characteristics of the existing connection (i.e. RR-connection established, ciphering mode on/off, MM-connection existing and authenticated or not), and the macro terminates with successful outcome.

If no MM-connection for the given IMSI exists, paging is initiated at the radio interface within all cells of all location areas of the VLR, using the IMSI to identify the subscriber and the page group (see 3GPP TS 24.008 [35]). There are several possible outcomes of paging:

- the MS responds to paging, causing a MAP\_SEARCH\_FOR\_MS response containing the IMSI and current location area identification of the called MS to be returned to the VLR. The access connection status will be set accordingly (i.e. no RR-connection, in which case other values are not significant), and the macro terminates with successful outcome.
- the MS responds with a channel request containing an establishment cause which is not "answer to paging". The MSC sends a MAP\_SEARCH\_FOR\_MS response primitive with user error "Busy Subscriber" before the macro terminates with unsuccessful outcome. This will give priority to the mobile originating request. Alternatively, as an implementation option, the MSC may treat this as a response to paging, which will give priority to the mobile terminating request.
- there is no response from the MS. The MSC sends a MAP\_SEARCH\_FOR\_MS response primitive with user error "Absent Subscriber" before the macro terminates with unsuccessful outcome.
- the call handling connection or MAP transaction on which the call, SMS or unstructured SS transaction is waiting for delivery, is released before a response is received from the MS (indicated in the SDL by the input signal I-REL). The MAP transaction with the VLR will be released in this case by a MAP\_U\_ABORT request, and the unsuccessful macro termination will indicate transaction termination.
- the MAP transaction with the VLR may be released by receiving a MAP\_U\_ABORT or MAP\_P\_ABORT indication. The call handling connection or MAP transaction on which the call, SMS or unstructured SS transaction is waiting for delivery, is released (indicated in the SDL by the output signal I-REL), and the unsuccessful macro termination will indicate transaction termination.

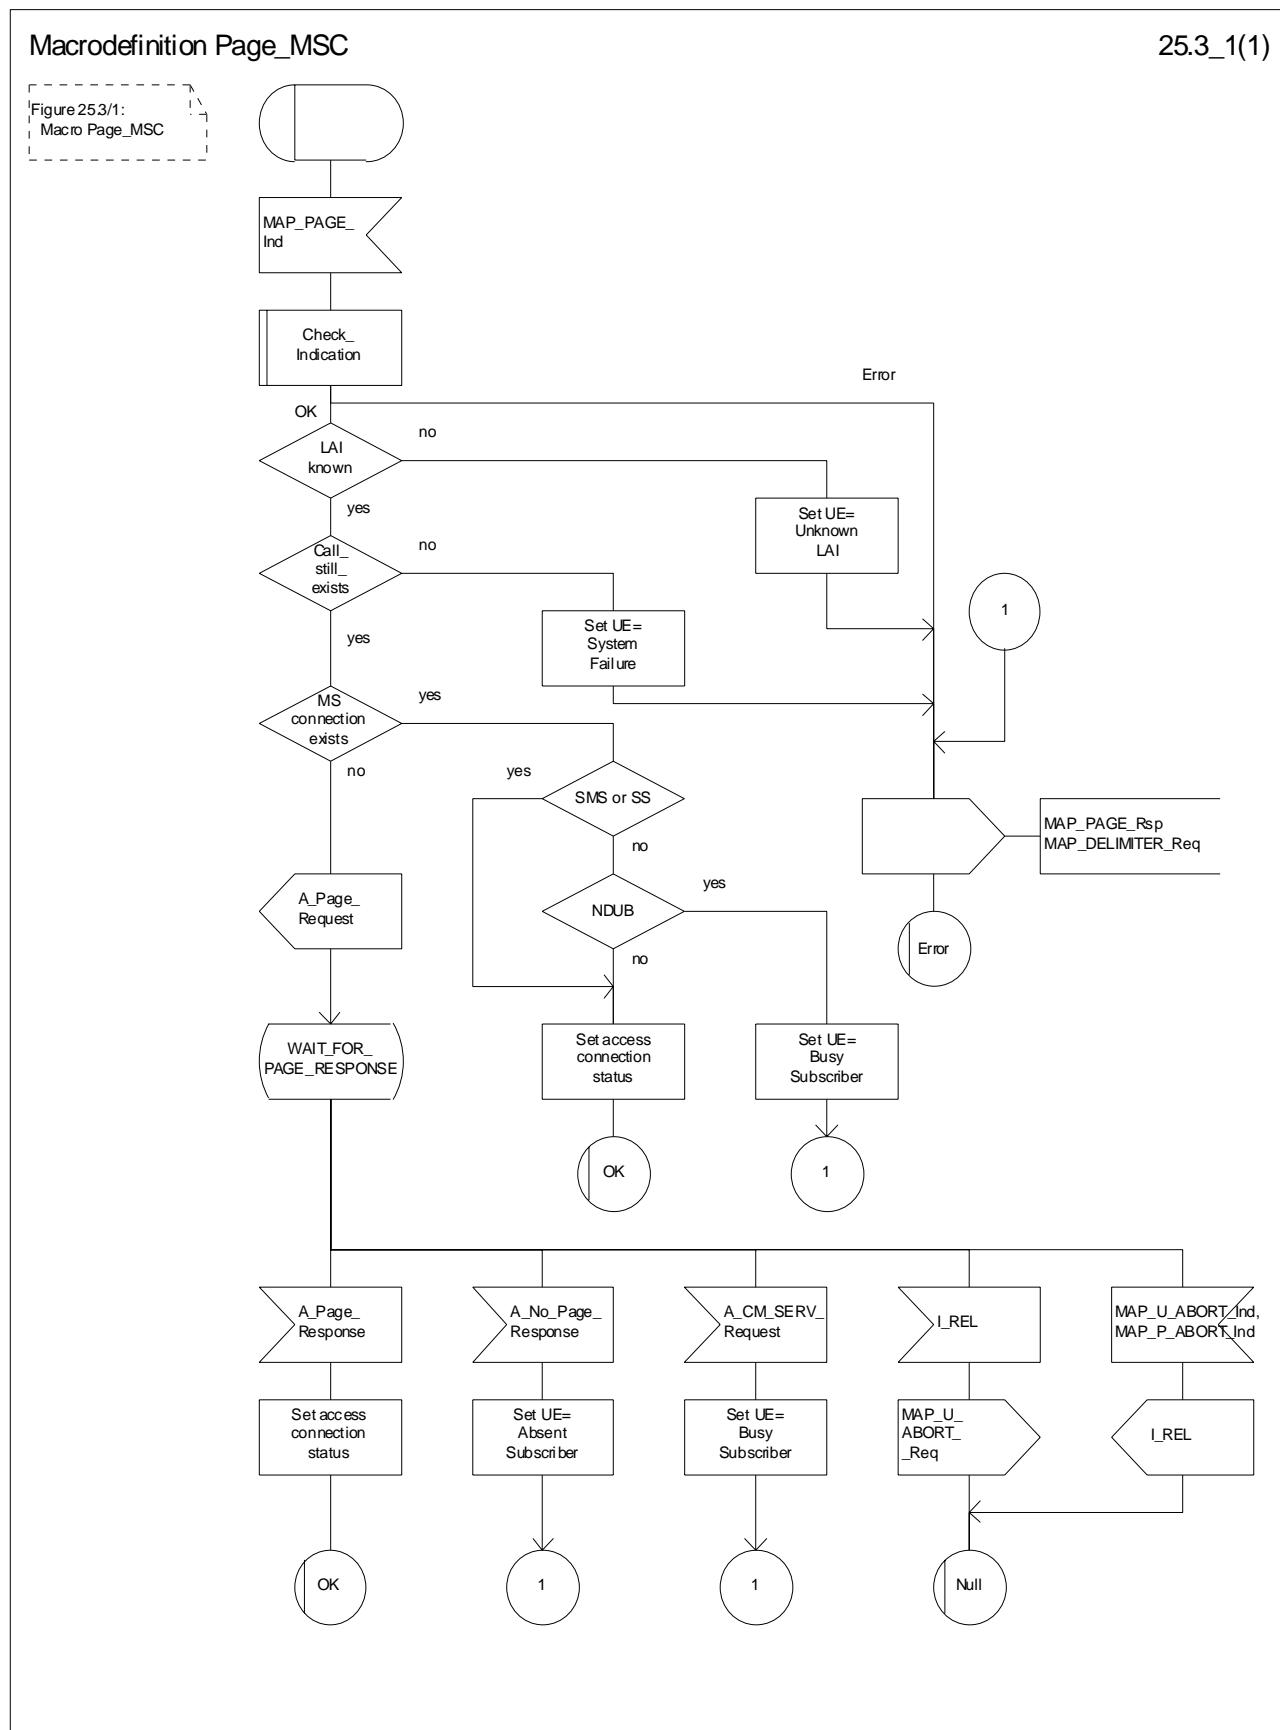

**Figure 25.3/1: Macro Page\_MSC**

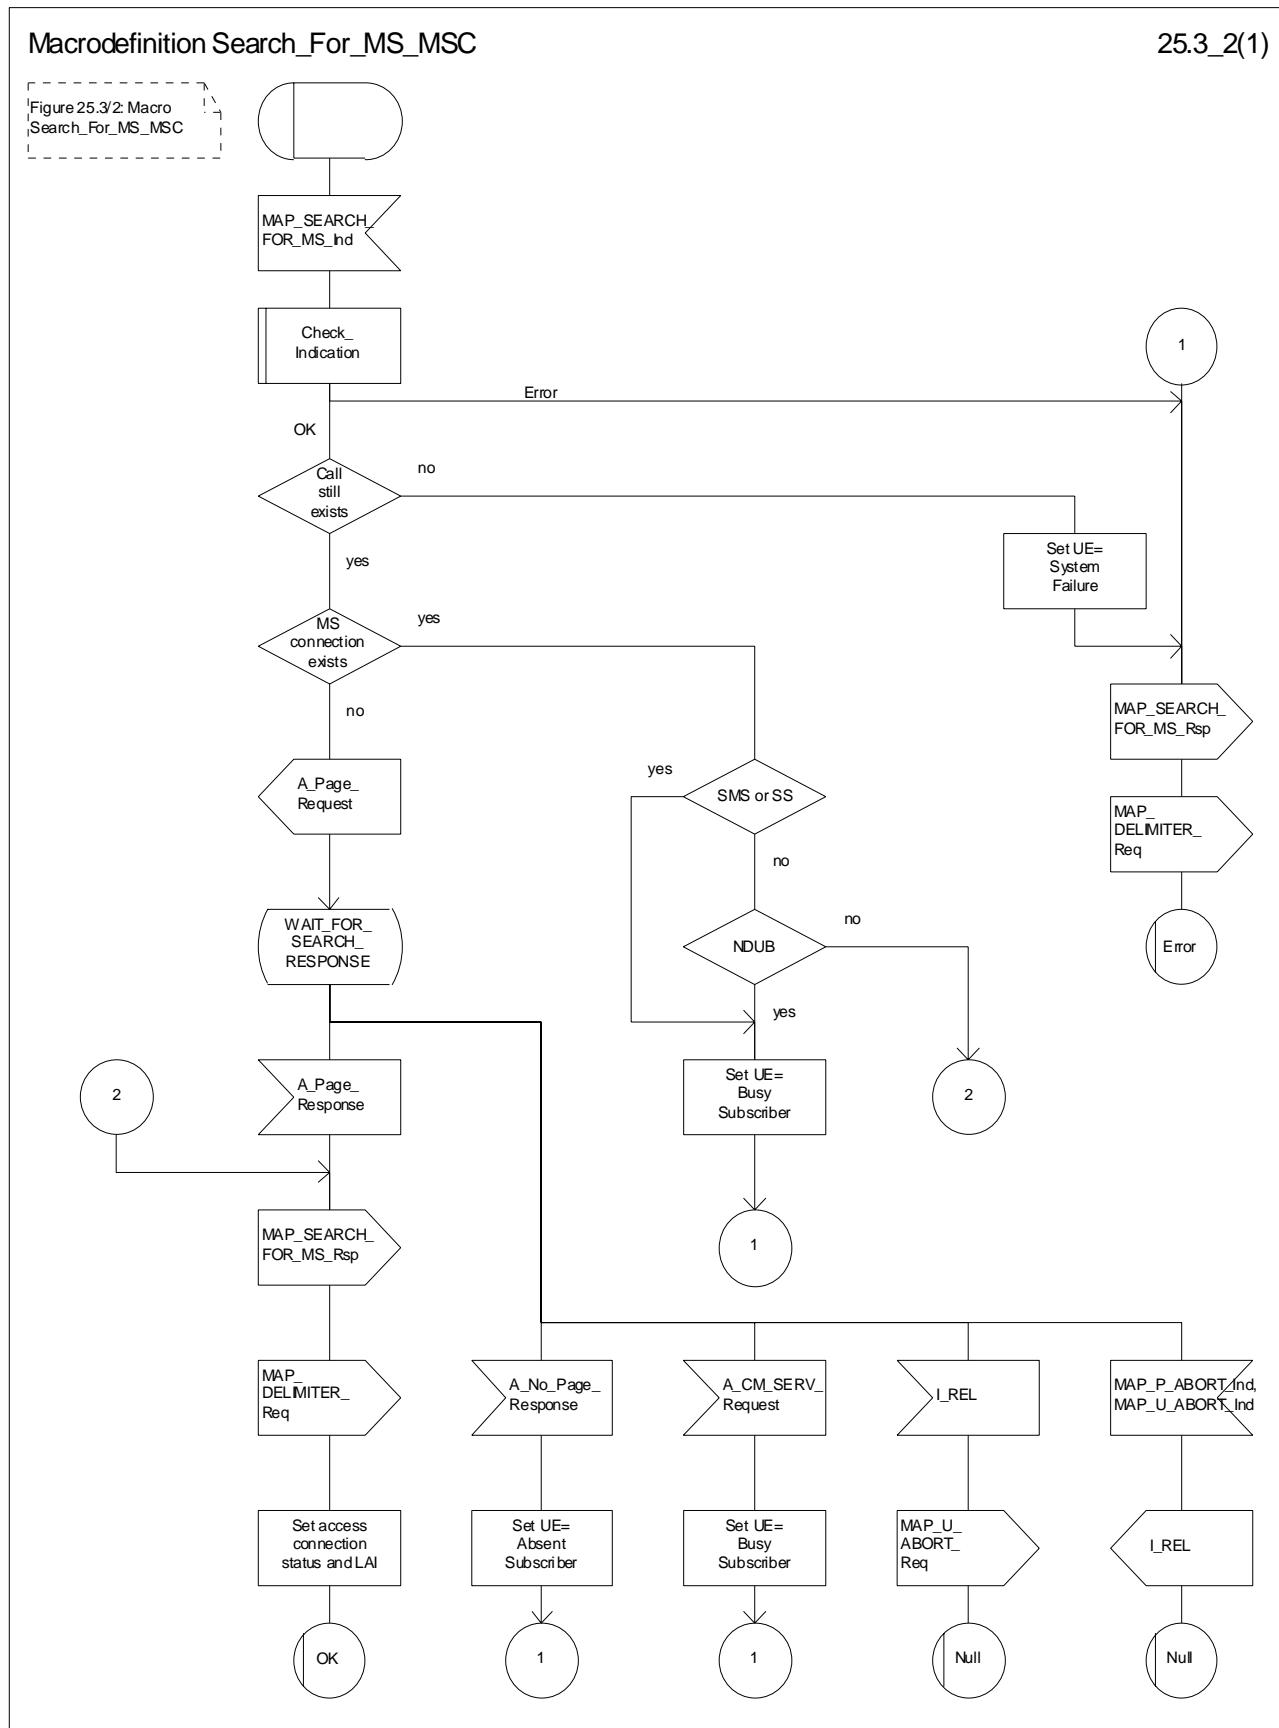**Figure 25.3/2: Macro Search\_for\_MS\_MSC**

## 25.4 Macros for handling an Access Request

These macros are invoked when a MS accesses the network, e.g. to set up an outgoing call or when responding to paging. The macro handles identification and authentication of the mobile subscriber as well as invocation of security related features (see 3GPP TS 42.009 [6]).

### 25.4.1 Macro Process\_Access\_Request\_MSC

This macro is invoked by any procedure receiving an access request from the MS, e.g. the page response at mobile terminating call set-up or the request for outgoing call set-up.

If no dialogue with the VLR exists (e.g. within the procedure for outgoing call set-up), the MSC will open a dialogue towards the VLR by sending a MAP\_OPEN request without any user specific parameters.

In any case, the parameters received from the MS are mapped to a MAP\_PROCESS\_ACCESS\_REQUEST request primitive, containing:

- the received subscriber identification (IMSI, TMSI) or - in case of emergency call set-up - an IMEI;
- the CM service type, indicating the type of request;
- the status of the access connection, i.e. whether a connection to this MS already exists and if so, whether it is already authenticated and ciphered;
- the current location area id of the MS; and
- the CKSN received from the MS.

If opening of the dialogue was required, the MSC will wait for the dialogue confirmation (see macro Receive\_Open\_Confirmation, clause 25.1), leading either to:

- immediate unsuccessful exit from the macro, in case no dialogue is possible;
- reversion to MAP version one dialogue if indicated by the VLR. The macro terminates with unsuccessful outcome, as the complete dialogue will be covered by the version one procedure, so that no further action from the calling process is required;
- continuation as given below, if the dialogue is accepted by the VLR.

The MSC waits then for the MAP\_PROCESS\_ACCESS\_REQUEST confirmation. In between, several other indications may be received from the VLR:

- the MSC may receive a MAP\_PROVIDE\_IMSI indication, handled by the macro Obtain\_IMSI\_MSC defined in clause 25.8. In case of positive outcome, the procedure continues waiting for the MAP\_PROCESS\_ACCESS\_REQUEST confirmation, else the macro terminates with unsuccessful outcome;
- the MSC may receive a MAP\_AUTHENTICATE indication, handled by the macro Authenticate\_MSC defined in clause 25.5. In case of positive outcome, the procedure continues waiting for the MAP\_PROCESS\_ACCESS\_REQUEST confirmation, else the macro terminates with unsuccessful outcome;
- the MSC may receive a MAP\_TRACE\_SUBSCRIBER\_ACTIVITY indication, handled by the macro Trace\_Subscriber\_Activity\_MSC defined in clause 25.9;
- the MSC may receive a MAP\_SET\_CIPHERING\_MODE indication, which will be stored for initiating ciphering later on;
- the MSC may receive a MAP\_CHECK\_IMEI indication, handled by the macro Check\_IMEI\_MSC defined in clause 25.6. In case of positive outcome, the procedure continues waiting for the MAP\_PROCESS\_ACCESS\_REQUEST confirmation, else the macro terminates with unsuccessful outcome;
- the MSC may receive a MAP\_OBTAIN\_IMEI indication, handled by the macro Obtain\_IMEI\_MSC defined in clause 25.6. In case of positive outcome, the procedure continues waiting for the MAP\_PROCESS\_ACCESS\_REQUEST confirmation, else the macro terminates with unsuccessful outcome;

- the MSC may receive a MAP\_U\_ABORT or MAP\_P\_ABORT indication, or a premature MAP\_CLOSE indication from the VLR. In all these cases, the macro terminates with unsuccessful outcome, after sending the appropriate reject towards the MS (see 3GPP TS 29.010 [58]);
- the MSC may receive a MAP\_NOTICE indication from the VLR. In this case, the dialogue towards the VLR is terminated by a MAP\_CLOSE primitive, the appropriate reject is sent towards the MS (see 3GPP TS 29.010 [58]), and the macro terminates with unsuccessful outcome;
- the MSC may receive an indication for release of the radio path, in which case the dialogue towards the VLR will be terminated by a MAP\_U\_ABORT primitive, containing the diagnostic information Radio Channel Release.

When the MAP\_PROCESS\_ACCESS\_REQUEST confirmation is received, the parameters of this primitive are checked first. In case of unsuccessful outcome of the service, the MAP User Error received is mapped onto the appropriate radio interface message (see 3GPP TS 29.010 [58]), before the macro terminates with unsuccessful outcome.

In case of positive outcome of the service, ciphering is initiated on the radio path, if this had been requested by the VLR (see above). Otherwise, if the access request was not triggered by a page response from the MS, the access request is accepted explicitly by sending a CM\_Service\_Accept message to the MS. If the access request was triggered by a page response from the MS then no CM Service Accept message is sent.

After ciphering has been initiated, the MSC will wait for the MAP\_FORWARD\_NEW\_TMSI indication from the VLR. While waiting, the MSC may receive:

- a MAP\_U\_ABORT or MAP\_P\_ABORT indication, or a premature MAP\_CLOSE indication from the VLR. In these cases, the macro terminates with unsuccessful outcome, after sending a release request towards the MS (see 3GPP TS 29.010 [58]);
- a MAP\_NOTICE indication from the VLR. In this case, the dialogue towards the VLR is terminated by a MAP\_CLOSE primitive, the appropriate reject is sent towards the MS (see 3GPP TS 29.010 [58]), and the macro terminates with unsuccessful outcome;
- an indication for release of the radio path, in which case the dialogue towards the VLR will be terminated by a MAP\_U\_ABORT primitive, containing the diagnostic information Radio Channel Release;
- a MAP\_DELIMITER request from the VLR. This will be taken as a successful outcome of the macro (i.e. the VLR did not require TMSI reallocation), and it terminates successfully;
- an A\_SETUP request from the MS. This will be saved for handling by the procedure which invoked the macro Process\_Access\_Request\_MSC after the macro has terminated.

When the MAP\_FORWARD\_NEW\_TMSI indication is received in the MSC, the TMSI Reallocation Command is sent to the MS, and the MSC waits for an acknowledgement from the MS. In case a positive acknowledgement is received, the MSC sends an empty MAP\_FORWARD\_NEW\_TMSI response primitive to the VLR and terminates successfully. Else, the dialogue is terminated locally (MAP\_CLOSE\_Req with Release method Prearranged End) without any further action.

If the MSC receives an A\_SETUP request while it is waiting for the TMSI acknowledgement from the MS, the A\_SETUP is saved for handling by the procedure which invoked the macro Process\_Access\_Request\_MSC after the macro has terminated.

If the dialogue is aborted by the VLR while waiting for the TMSI acknowledgement from the MS, the MSC regards the access request to be failed and terminates with unsuccessful outcome, after sending a release request towards the MS (see 3GPP TS 29.010 [58]).

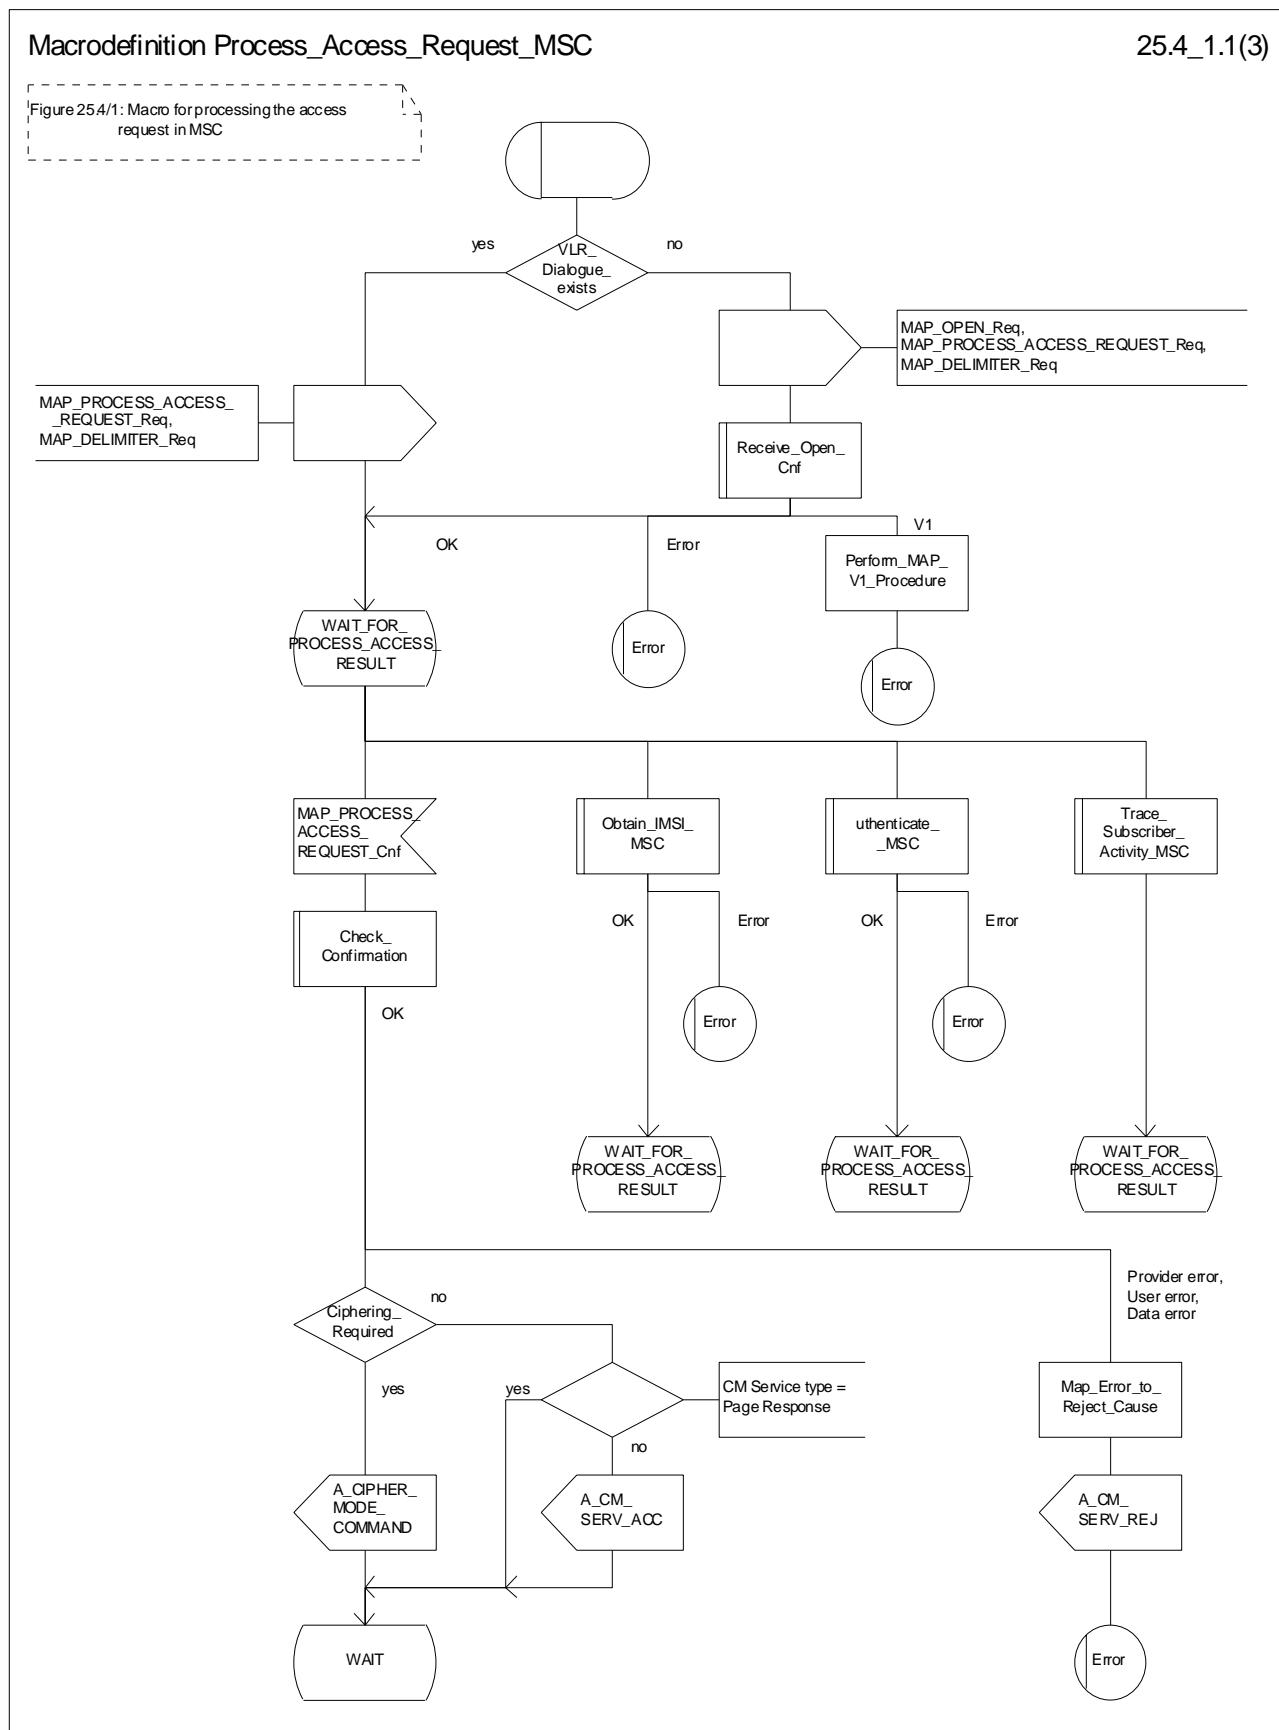


Figure 25.4/1 (sheet 1 of 3): Macro Process\_Access\_Request\_MSC

## Macrodefinition Process\_Access\_Request\_MSC

25.4\_1.2(3)

Figure 25.4/1: Macro for processing the access request in MSC

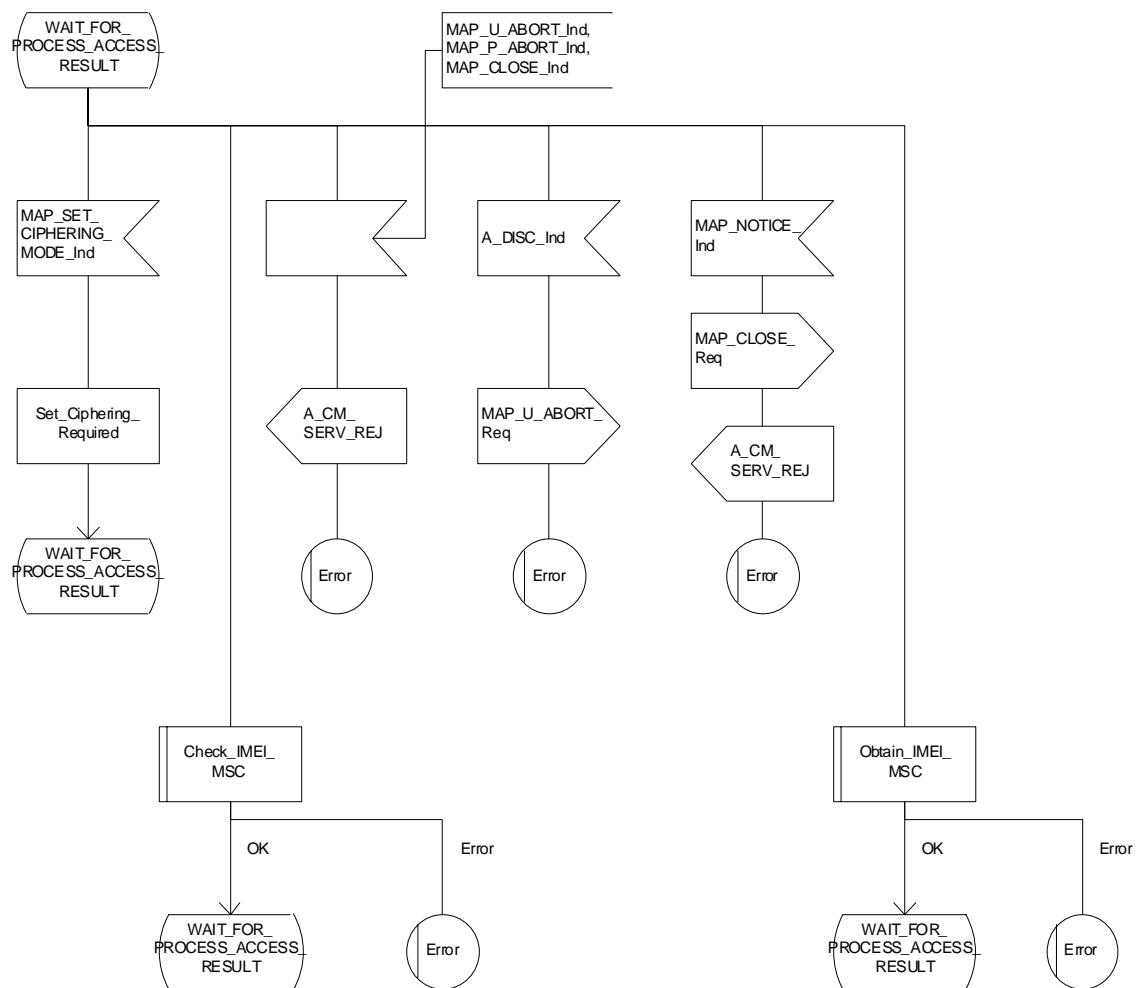


Figure 25.4/1 (sheet 2 of 3): Macro Process\_Access\_Request\_MSC

## Macrodefinition Process\_Access\_Request\_MSC

25.4\_1.3(3)

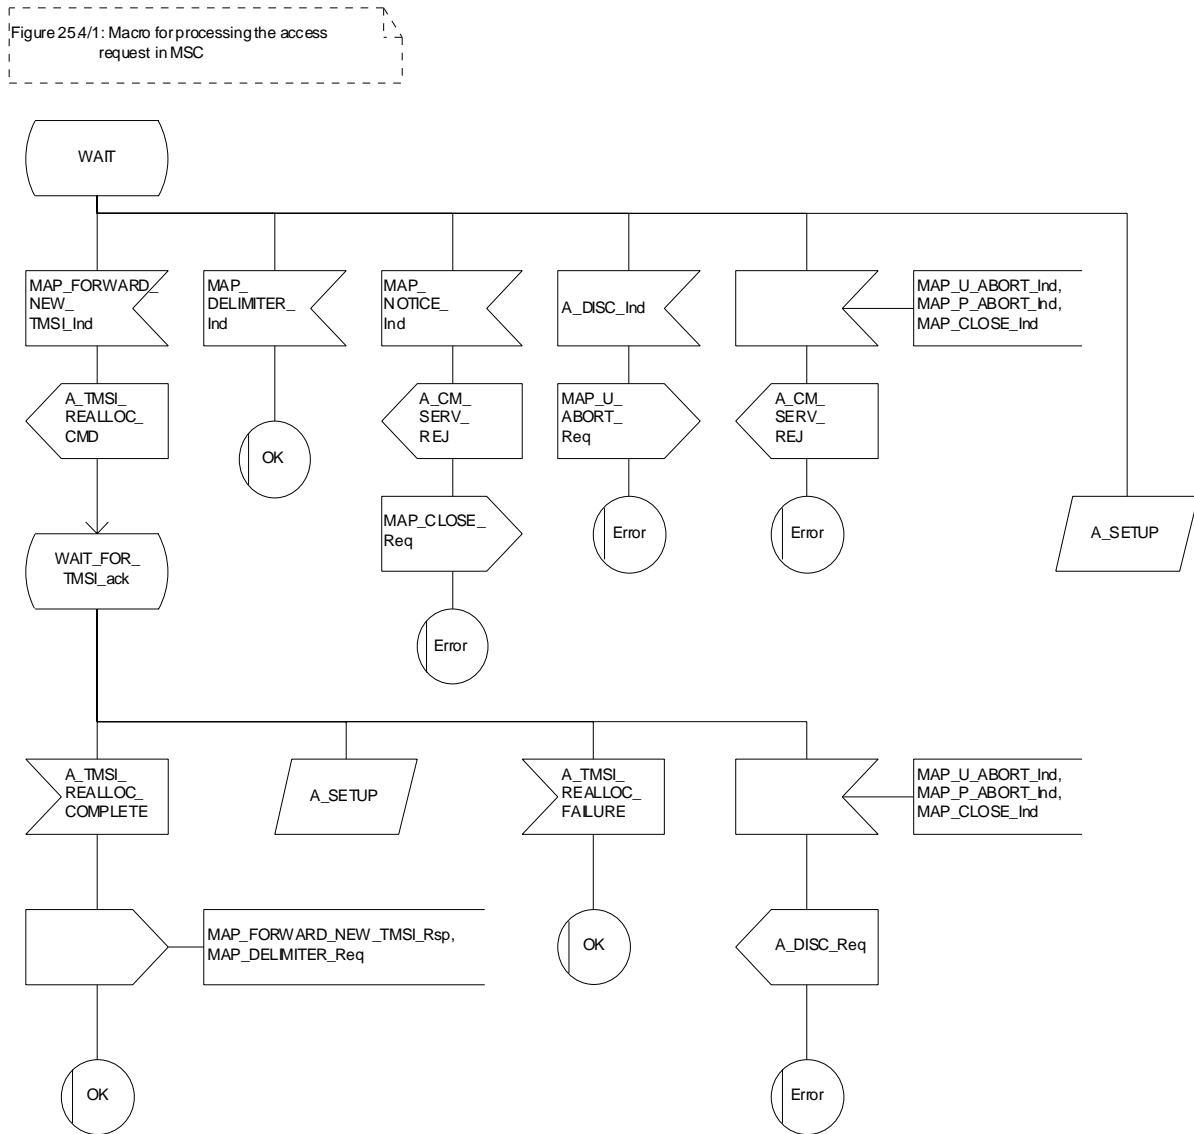


Figure 25.4/1 (sheet 3 of 3): Macro Process\_Access\_Request\_MSC

## 25.4.2 Macro Process\_Access\_Request\_VLR

When the VLR receives a MAP\_PROCESS\_ACCESS\_REQUEST indication, the VLR will check this indication first (macro Check\_Indication, see clause 25.2). In case of negative outcome, the macro will proceed with the error handling described below.

If the indication data are correct, it is checked first whether the subscriber identification (IMSI or TMSI) is known if included:

- if the identification is not known, the IMSI may be requested from the MS, described in the macro Identification\_Procedure (see below) with outcome:
  - OK, if a IMSI known in the VLR has been received;
  - Error, if the VLR did not recognise the subscriber's identity. The macro will proceed with the error handling described below;
  - Aborted, if the transaction to the MSC is released. The macro will terminate immediately with unsuccessful.

In case the identity received is an IMEI, the error System Failure is set and the macro proceeds with the error handling described below.

NOTE: Emergency Call with IMEI may be accepted within the error handling phase.

For a known subscriber the authentication check is performed next (see macro Authenticate\_VLR, clause 25.5), if required. If a negative result is received, the VLR proceeds on receipt of user error:

- illegal subscriber depending on the identity used for authentication;

In case IMSI is already used or no new authentication attempt with IMSI shall not be performed (operator option), the error Illegal Subscriber is set and the macro proceeds with the error handling described below.

If a new authentication attempt with IMSI shall be performed, the IMSI is requested from the MS (macro Obtain\_IMSI\_VLR, see clause 25.8):

- the authentication will be performed again if a IMSI known in the VLR is received;
- the error Unidentified Subscriber is set and the macro proceeds with the error handling described below, if the IMSI received is unknown in VLR;
- if the IMSI request procedure fails for any other reason, the error System Failure is set and the macro proceeds with the error handling described below;
- if the dialogue has been aborted during the IMSI request, the macro terminates immediately with unsuccessful outcome;
- unknown subscriber by setting the error Unidentified Subscriber and proceeding with the error handling described below.

NOTE: This can occur only in case of data inconsistency between HLR and VLR;

- procedure error by setting the error System Failure and proceeding with the error handling described below;
- null (i.e. the dialogue towards the MSC is terminated) by terminating immediately with unsuccessful outcome.

The MS access is accepted if no authentication is required or after successful authentication. Then, the indicator "Confirmed by Radio Contact" is set to "Confirmed". If the indicator "Location Information Confirmed in HLR" is set to "Not Confirmed", HLR updating will be started as an independent process (Update\_Location\_VLR, see clause 19.1.1.6).

If the indicator "Confirmed by HLR" is set to "Not Confirmed", the error Unidentified Subscriber is set and the macro proceeds with the error handling described below.

If roaming is not allowed in the location area indicated in the Current Location Area Id parameter, the error Roaming Not Allowed qualified by the roaming restriction reason is set and the macro proceeds with the error handling described below.

In case roaming is allowed, the IMSI is set to attached and the process for notifying the HLR that the subscriber is present is started if required (Subscriber Present VLR, see clause 25.10).

At next, tracing is invoked if required by the operator (macro Trace\_Subscriber\_Activity\_VLR, see clause 25.9). Thereafter,

if ciphering is not required, IMEI checking is invoked if required by the operator (see macro Check\_IMEI\_VLR defined in clause 25.6).

The error Illegal Equipment is set in case of unsuccessful outcome of the IMEI check, the subscriber is marked as detached and the macro proceeds with the error handling described below.

The macro terminates immediately with unsuccessful outcome if the MSC dialogue has been released during the IMEI check.

Else, the macro terminates successfully by returning the MAP\_PROCESS\_ACCESS\_REQUEST response containing the IMSI to indicate acceptance of the MS access.

if ciphering is required, the MAP\_SET\_CIPHERING\_MODE request containing:

- the cipher mode indicating the cipher algorithm required; and
- the cipher key to be used;

is sent to the MSC.

As a further operator option, IMEI checking may be performed next.

The error Illegal Equipment is set in case of unsuccessful outcome of the IMEI check, the subscriber is marked as detached and the macro proceeds with the error handling described below.

The macro terminates immediately with unsuccessful outcome if the MSC dialogue has been released during the IMEI check.

Else, the macro terminates successfully by returning the MAP\_PROCESS\_ACCESS\_REQUEST response containing the IMSI to indicate acceptance of the MS access.

IF no TMSI reallocation is required (again an operator option), the macro terminates thereafter. Else, TMSI reallocation is performed by sending a MAP\_FORWARD\_NEW\_TMSI request, containing the new TMSI as parameter. The old TMSI will be frozen until an acknowledgement from the MS has been received. Before the macro terminates, the VLR will wait for the MAP\_FORWARD\_NEW\_TMSI response, containing no parameters if reallocation has been confirmed by the MS, or a Provider Error, otherwise, in which case the old TMSI is kept frozen to avoid double allocation. In this case, both the old as the new TMSI are subsequently regarded valid when used by the MS.

### Error handling

In case some error is detected during handling the access request, a respective error has been set. Before returning this error cause to the MSC in a MAP\_PROCESS\_ACCESS\_REQUEST response, it need to be checked whether this access is for emergency call set-up, as this will require extra treatment.

If the CM Service type given in the MAP\_PROCESS\_ACCESS\_REQUEST indication is emergency call set-up, it is checked whether EC set-up in the particular error situation is permitted (operator option). If so, it is checked whether the IMEI is required, and if so the IMEI is requested from the MS (macro Obtain\_IMEI\_VLR, see clause 25.6).

The macro will terminate immediately with unsuccessful outcome if the MSC transaction has been aborted during the IMEI retrieval.

In case of an error reported back from IMEI retrieval, MAP\_PROCESS\_ACCESS\_REQUEST response containing the error cause set previously is returned to the MSC, the dialogue is closed (MAP\_CLOSE request indicating normal release) and the macro terminates with unsuccessful outcome.

When a subscriber identity required by the operator (IMSI or IMEI) is available, the user error set previously is deleted, the respective identity is returned in the MAP\_PROCESS\_ACCESS\_REQUEST response to indicate acceptance of emergency call, and the macro terminates with successful outcome.

In all other cases, the MAP\_PROCESS\_ACCESS\_REQUEST response containing the error cause set previously is returned to the MSC, the dialogue is closed (MAP\_CLOSE request indicating normal release) and the macro terminates with unsuccessful outcome.

### 25.4.3 Macro Identification Procedure

This macro is invoked by the macro Process\_Access\_Request\_VLR in case the subscribers identity is not known in the VLR.

If the identity received from the MS is an IMSI, the error Unidentified Subscriber will be set and reported back to the calling macro (to be sent in the MAP\_PROCESS\_ACCESS\_REQUEST response). The same error is used in case a TMSI was received from the MS, but the operator does not allow open identification of the MS.

If open identification of the MS is allowed, the macro Obtain\_IMSI\_VLR is invoked, requesting the subscribers IMSI from the MS (see clause 25.8), with outcome


OK, in which case it is checked whether for the IMSI received there exists a subscriber record in the VLR. If so, the macro terminates successfully, else the error Unidentified Subscriber will be set and reported back to the calling macro.

Error, in which case the error System Failure will be set and reported back to the calling macro.

Aborted, i.e. the MSC transaction is released, in which the macro terminates accordingly.

## Macrodefinition Process\_Access\_Request\_VLR

25.4\_2.1(3)

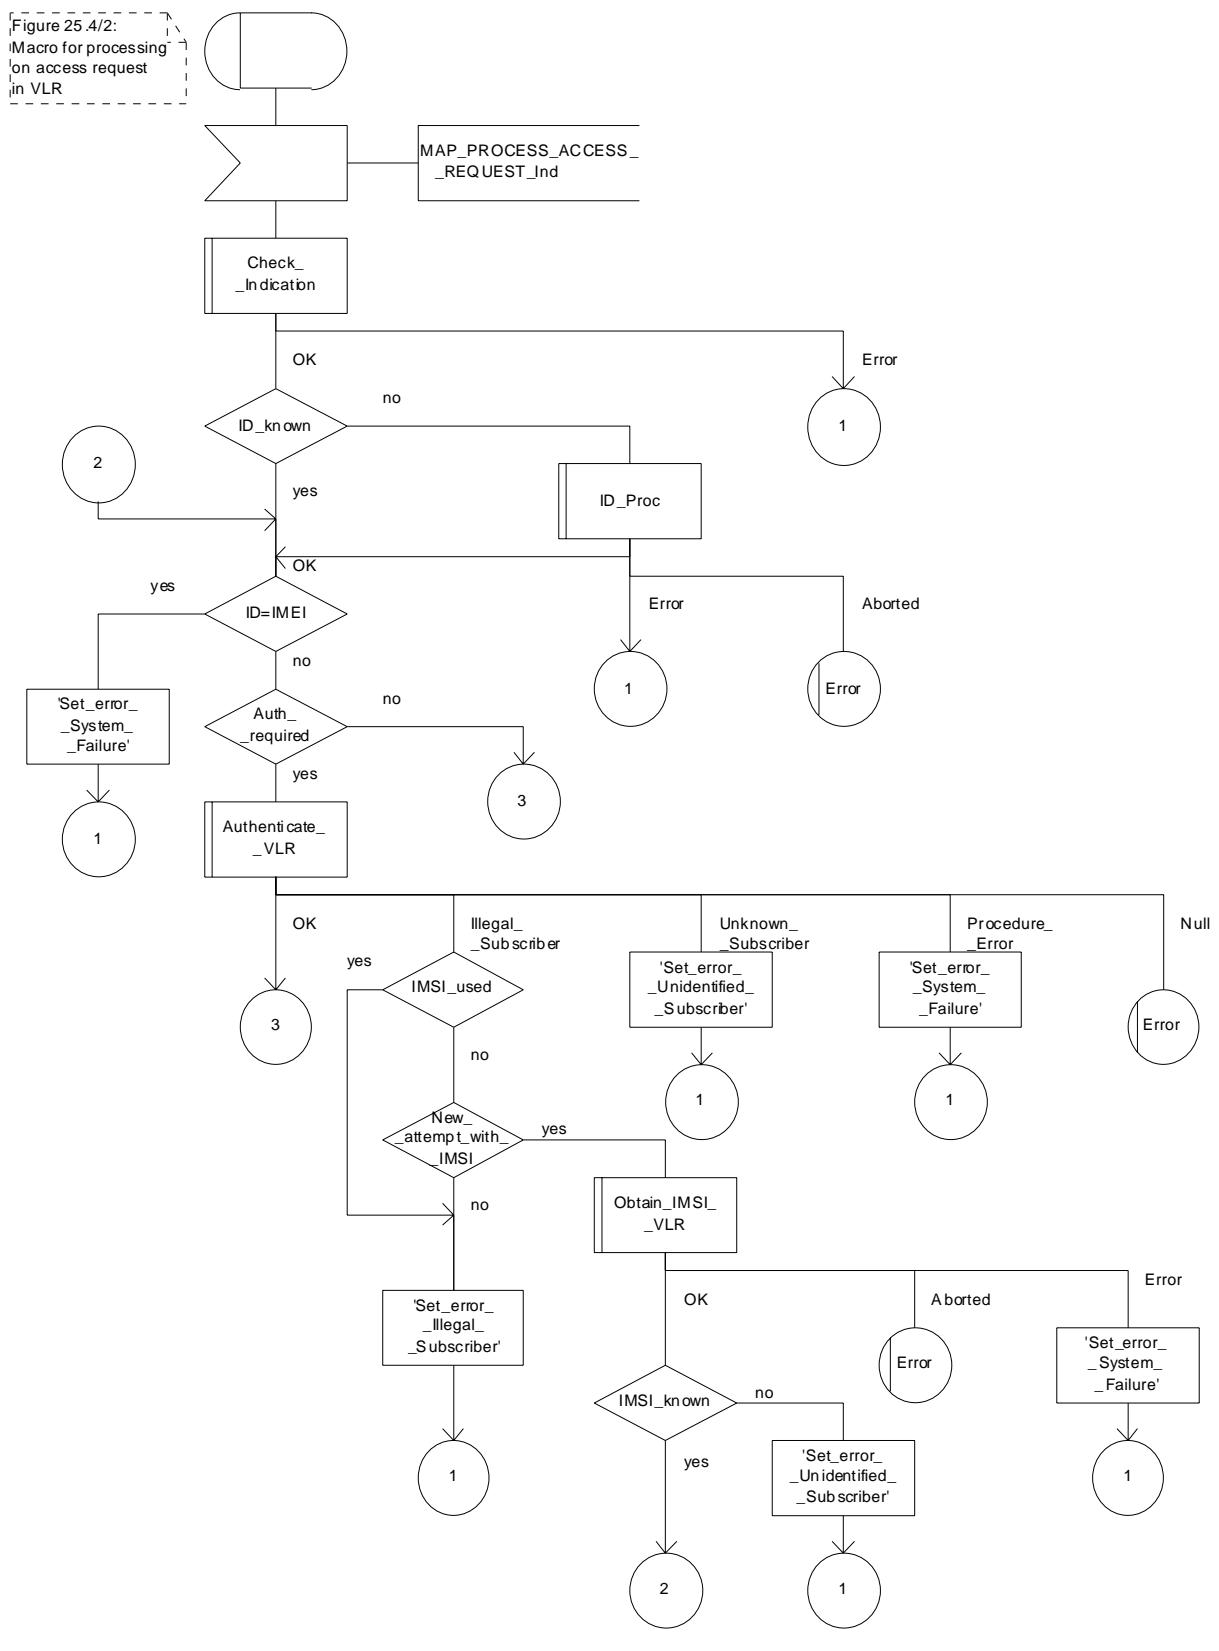

**Figure 25.4/2 (sheet 1 of 3): Macro Process Access Request VLR**

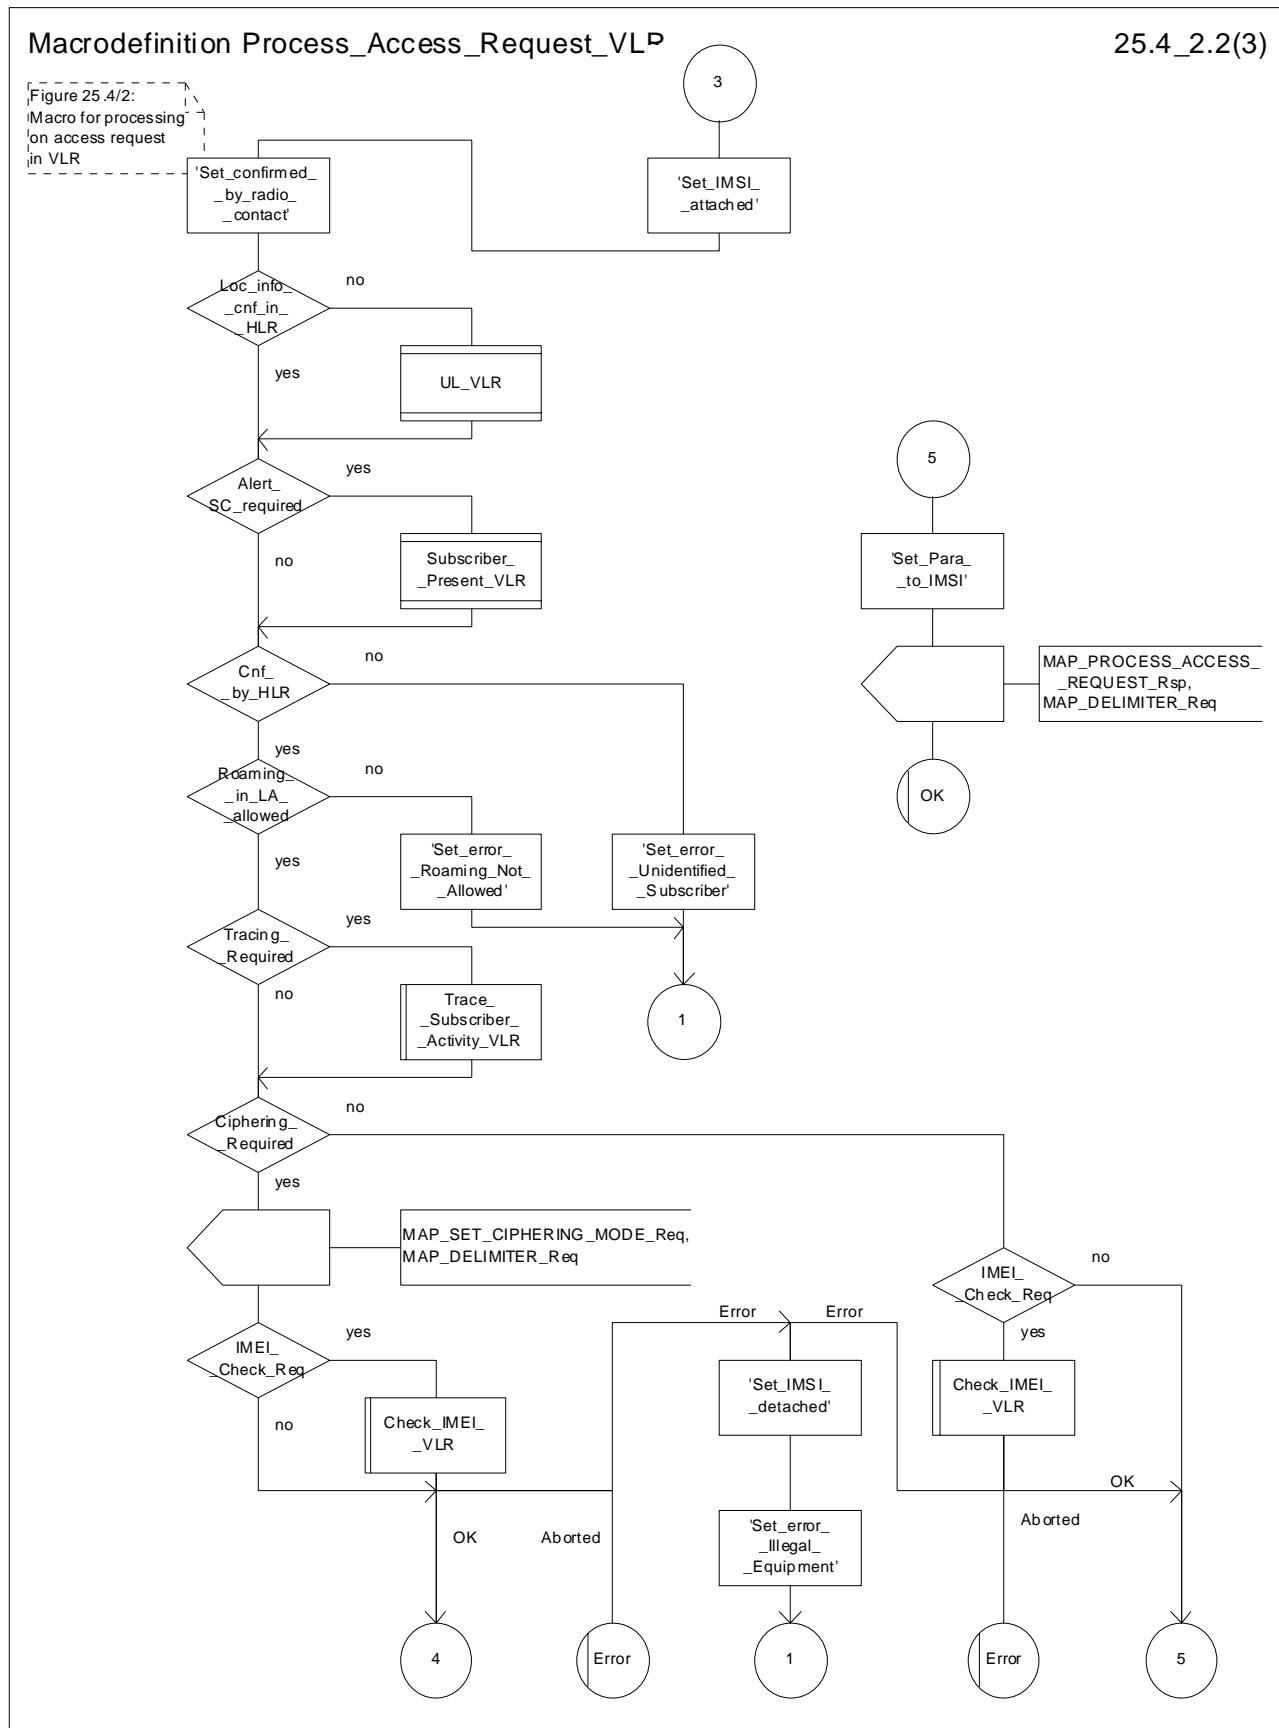


Figure 25.4/2 (sheet 2 of 3): Macro Process\_Access\_Request\_VLR

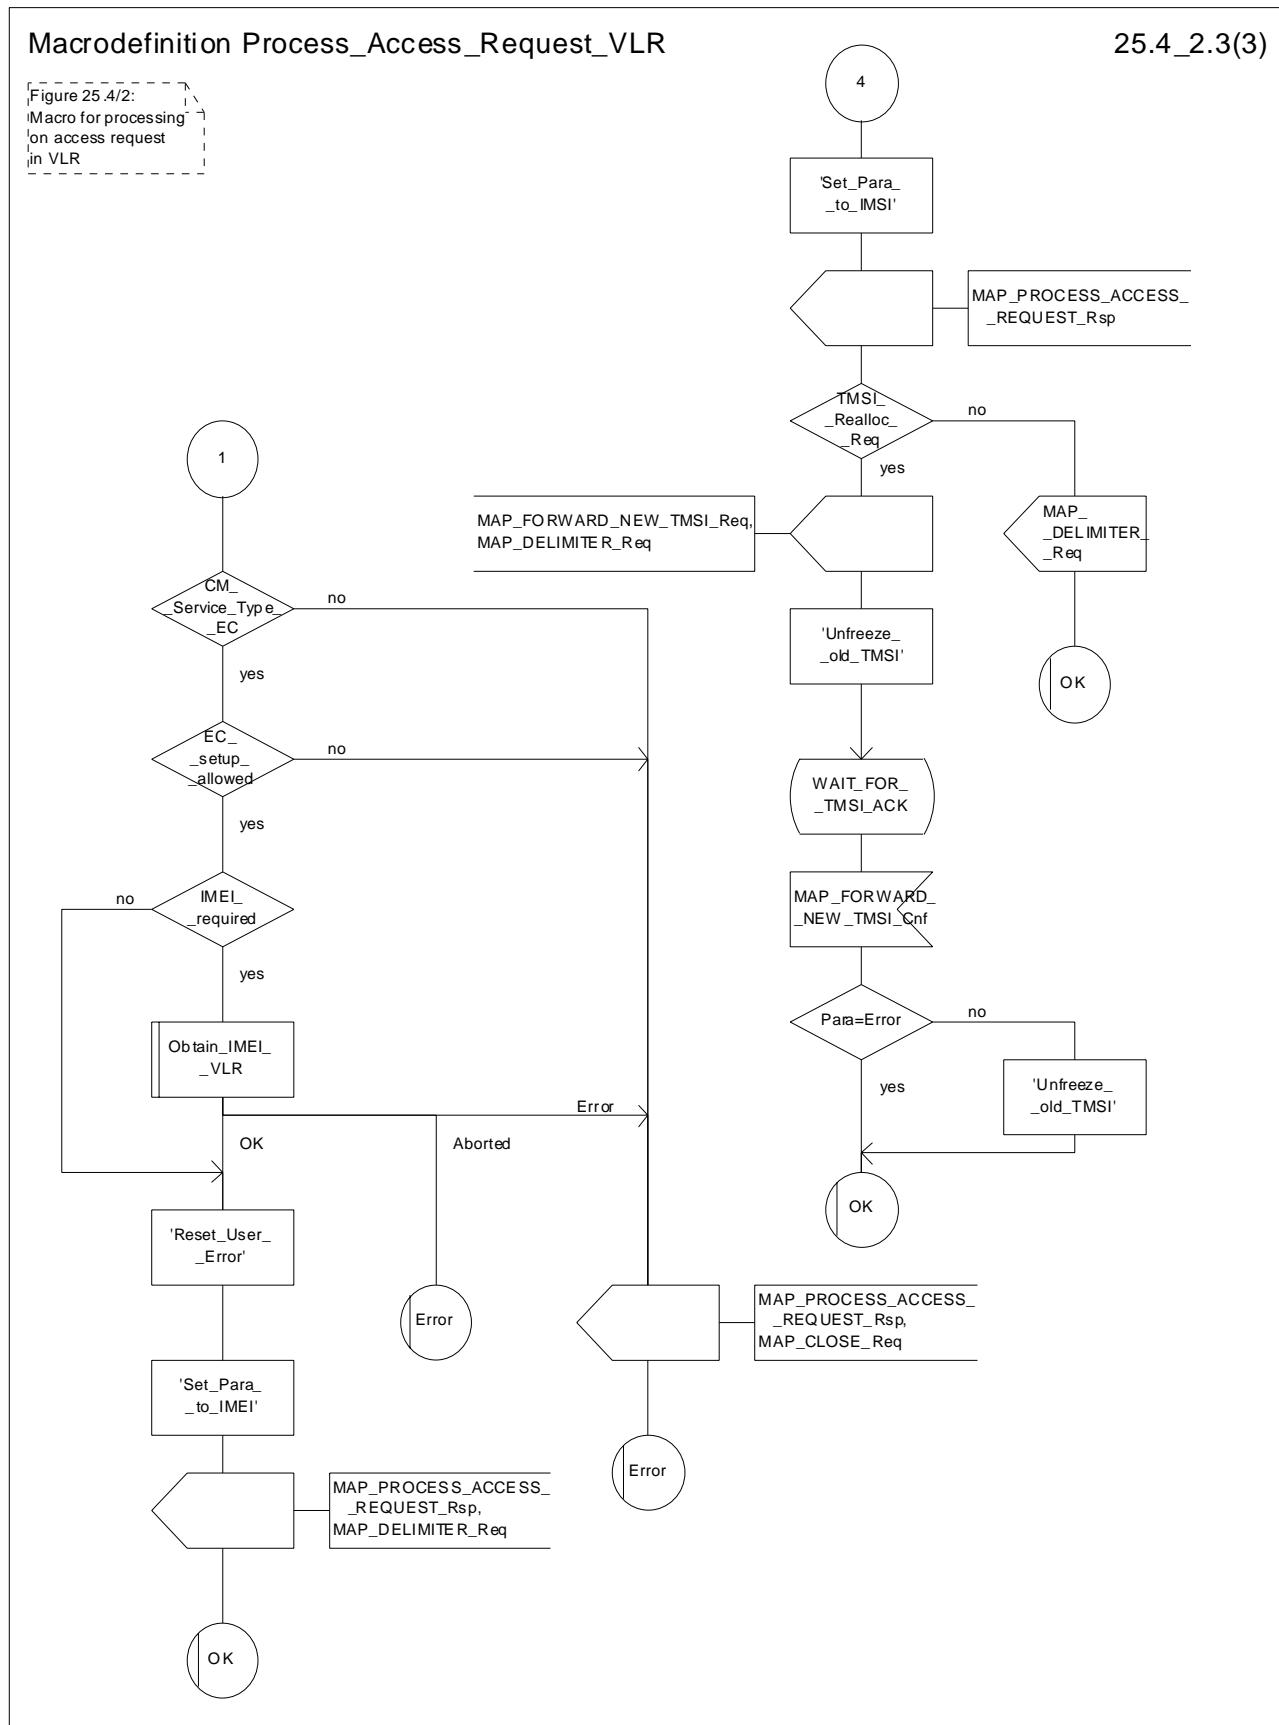


Figure 25.4/2 (sheet 3 of 3): Macro Process\_Access\_Request\_VLR

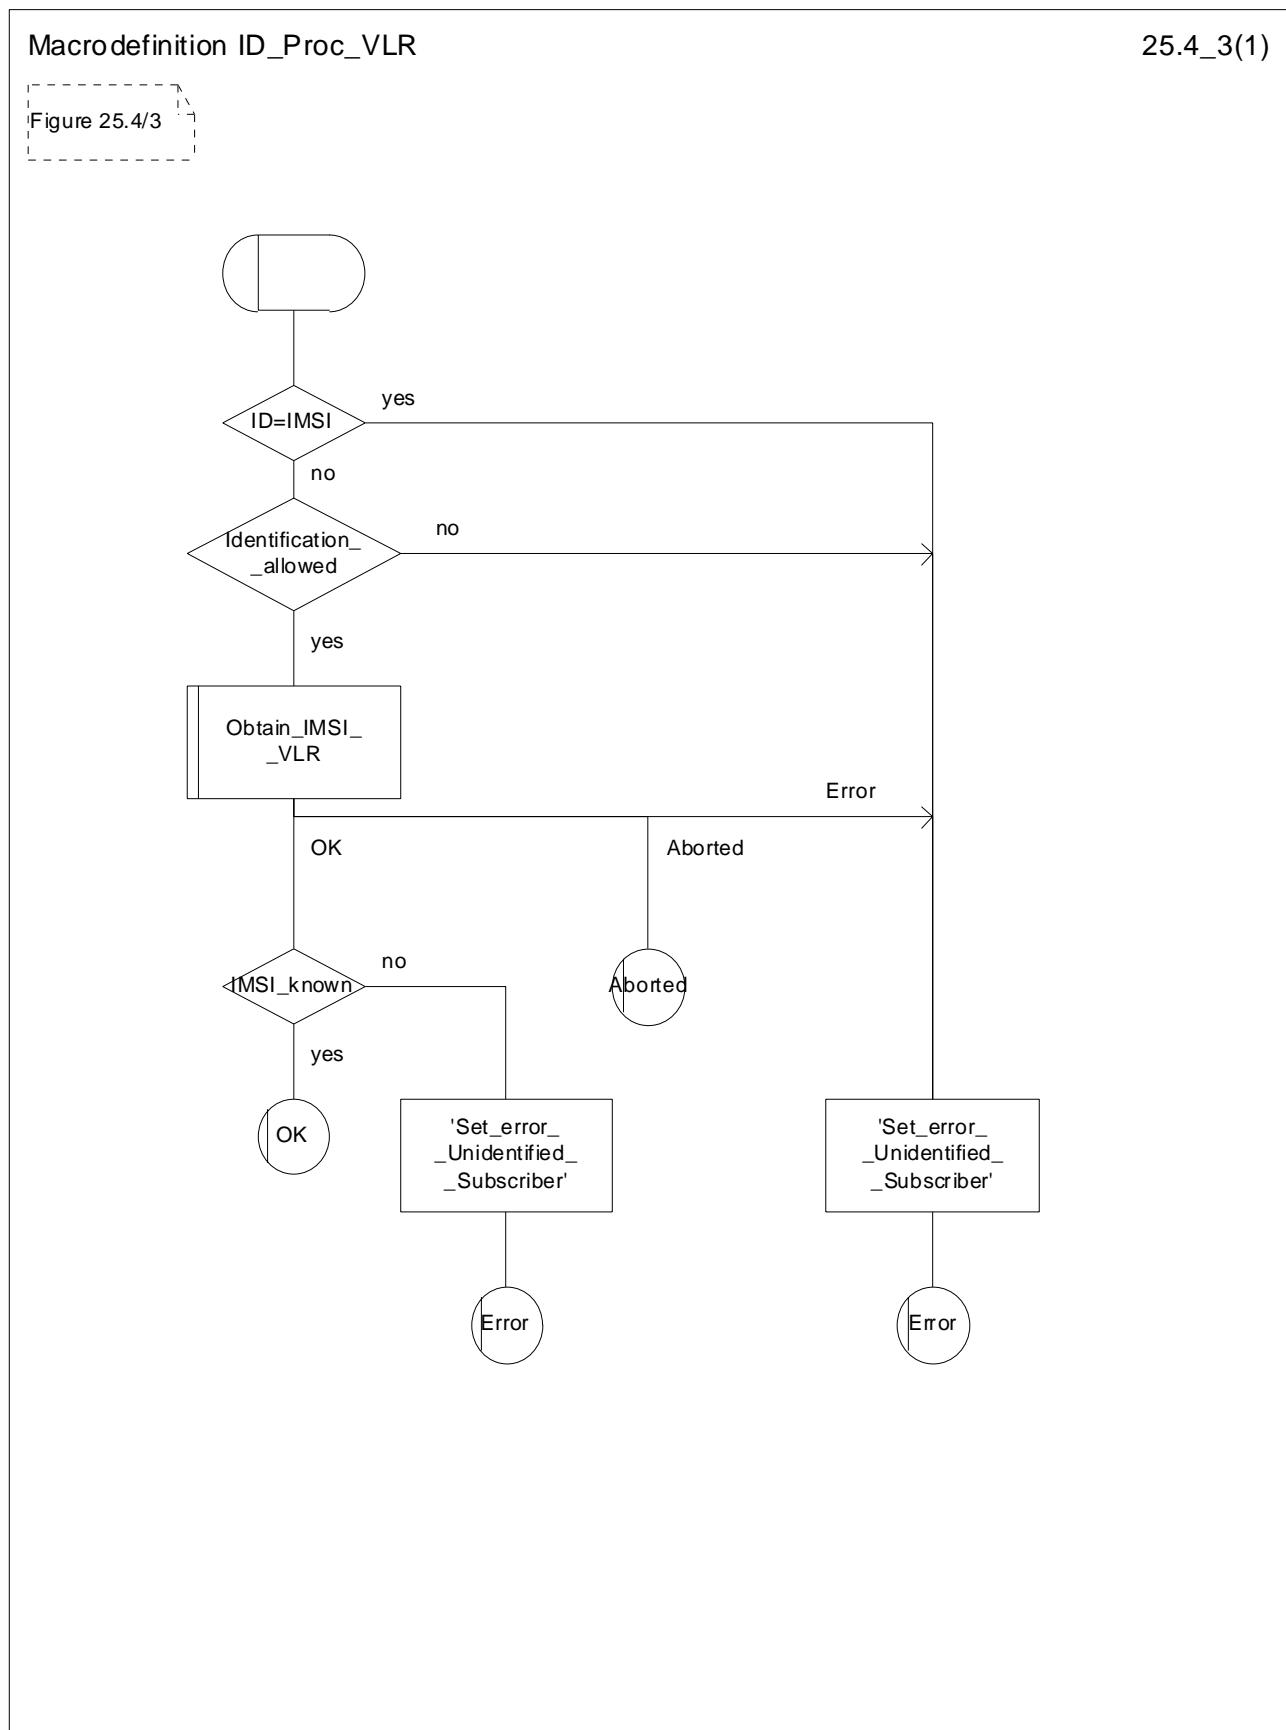


Figure 25.4/3: Macro ID\_Proc\_VLR

## 25.5 Authentication macros and processes

The following macros are used in the GSM network in order to enable authentication of a mobile subscriber.

### 25.5.1 Macro Authenticate\_MSC

This macro is used by the MSC to relay a request for authentication transparently from the VLR to the MS, wait for a response from the MS and to relay the response from the MS back to the VLR. If, while the MSC is waiting for the authentication response, the air interface connection is released or a MAP\_U\_ABORT, MAP\_P\_ABORT or MAP\_CLOSE indication is received from the VLR, then necessary connections are released and the "Error" exit is used. The macro is described in figure 25.5/1.

### 25.5.2 Macro Authenticate\_VLR

This macro is used by the VLR to control the authentication of a subscriber. The macro proceeds as follows:

- if there are not enough authentication vectors in the VLR to perform the authentication, then the macro "Obtain\_Authent\_Para\_VLR" described below is invoked. If this macro fails, then the corresponding error (Unknown Subscriber or Procedure Error) is returned to the calling process;
- if there are enough authentication vectors in the VLR, or the Obtain\_Authent\_Para\_VLR macro was successful, then a MAP\_AUTHENTICATE request is sent to the MSC. This request contains the RAND, CKSN or KSI, and possibly AUTN parameters as indicated in the service description;
- the VLR then waits for a response from the MSC;
- if a MAP\_U\_ABORT, MAP\_P\_ABORT or MAP\_CLOSE indication is received from the MSC in this wait state, the VLR checks whether authentication sets are available. If no sets are available the process Obtain\_Authent\_Sets\_VLR is invoked to fetch authentication sets from the HLR. The "Null" exit is then used;
- if a MAP\_NOTICE indication is received from the MSC in this wait state, the VLR closes the dialogue with the MSC, then checks whether authentication sets are available. If no sets are available the process Obtain\_Authent\_Sets\_VLR is invoked to fetch authentication sets from the HLR. The "Null" exit is then used;
- if a MAP\_AUTHENTICATE confirmation is received by the VLR, it checks whether the received Signed Result (SRES) is identical to the stored one (see 3GPP TS 43.020 [24]), or whether the received RES is identical to the stored XRES. If this is not the case, the "Illegal Subscriber" exit is used. If the SRES values or RES and XRES are identical, then the "OK" exit is used;
- before exit, the VLR may fetch a new set of triplets from the HLR. This is done by initiating a separate Obtain\_Authent\_Sets\_VLR process described below.

The macro is described in figure 25.5/2.

### 25.5.3 Process Obtain\_Authentication\_Sets\_VLR

This process is initiated by the VLR to fetch authentication vectors from a subscriber's HLR in a stand-alone, independent manner. The Obtain\_Authent\_Para\_VLR macro described below is simply called; the process is described in figure 25.5/3.

### 25.5.4 Macro Obtain\_Authent\_Para\_VLR

This macro is used by the VLR to request authentication vectors from the HLR. The macro proceeds as follows:

- a connection is opened, and a MAP\_SEND\_AUTHENTICATION\_INFO request sent to the HLR;
- if the HLR indicates that a MAP version 1 or 2 dialogue is to be used, the VLR performs the equivalent MAP version 1 or 2 dialogue, which can return a positive result containing authentication sets, an empty positive result, or an error;
- if the dialogue opening fails, the "Procedure Error" exit is used. Otherwise, the VLR waits for the response from the HLR;

- if a MAP\_SEND\_AUTHENTICATION\_INFO confirmation is received from the HLR, the VLR checks the received data.

One of the following positive responses may be received from a MAP version 1 or MAP version 2 dialogue with the HLR:

- Authentication triplets, in which case the outcome is successful;
- Empty response, in which case the VLR may re-use old triplets, if allowed by the PLMN operator.

If the VLR cannot re-use old triplets (or no such triplets are available) then the "Procedure Error" exit is used.

If the outcome was successful or re-use of old parameters in the VLR is allowed, then the "OK" exit is used.

If an "Unknown Subscriber" error is returned by the MAP version 1 or 2 dialogue, then the "Unknown Subscriber" exit is used.

In a MAP version 3 dialogue a (possibly empty) set of authentication vectors may be received, transferred by means of the TC-RESULT-L service, from the HLR followed by a MAP\_CLOSE\_Indication or by a MAP\_DELIMITER\_Indication. If a MAP\_DELIMITER\_Indication is received, the VLR may request additional authentication vectors from the HLR by sending a new MAP\_SEND\_AUTHENTICATION\_INFO\_Request with no parameter part. If a MAP\_CLOSE\_Indication is received, and authentication vectors have been received during the dialogue, then the "OK" exit is used. If no authentication vectors have been received during the dialogue, the VLR checks whether old GSM Triplets are available and can be re-used. If so, the "OK" exit is used, otherwise the "Procedure Error" exit is used. Note that re-use of old UMTS Quintuplets is not allowed.

If in a MAP version 3 dialogue an "Unknown Subscriber" error is received, then the "Unknown Subscriber" exit is used. If other errors are received, the VLR checks whether old GSM Triplets are available and can be re-used. If so, the "OK" exit is used, otherwise the "Procedure Error" exit is used. Note that re-use of old UMTS Quintuplets is not allowed.

- if a MAP-U-ABORT, MAP\_P\_ABORT, MAP\_NOTICE or unexpected MAP\_CLOSE service indication is received from the MSC, then open connections are terminated, and the macro takes the "Null" exit;
- if a MAP-U-ABORT, MAP\_P\_ABORT or unexpected MAP\_CLOSE service indication is received from the HLR, then the VLR checks whether old authentication parameters (GSM triplets) can be re-used. If old parameters cannot be re-used the macro takes the "Procedure Error" exit; otherwise it takes the "OK" exit; note that re-use of old UMTS Quintuplets is not allowed;
- if a MAP\_NOTICE service indication is received from the HLR, then the dialogue with the HLR is closed. The VLR then checks whether old authentication parameters (GSM triplets) can be re-used. If old parameters cannot be re-used the macro takes the "Procedure Error" exit; otherwise it takes the "OK" exit; note that re-use of old UMTS Quintuplets is not allowed.

The macro is described in figure 25.5/4.

### 25.5.5 Process Obtain\_Auth\_Sets\_HLR

Opening of the dialogue is described in the macro Receive\_Open\_Ind in clause 25.1, with outcomes:

- reversion to version one or two procedure;
- procedure termination; or
- dialogue acceptance, with proceeding as below.

This process is used by the HLR to obtain authentication vectors from the AuC, upon request from the VLR or from the SGSN. The process acts as follows:

- a MAP\_SEND\_AUTHENTICATION\_INFO indication is received by the HLR;
- the HLR checks the service indication for errors. If any, they are reported to the VLR or to the SGSN in the MAP\_SEND\_AUTHENTICATION\_INFO response. If no errors are detected, authentication vectors are fetched from the AuC. Further details are found in 3GPP TS 43.020 [24];

- If Network Access Mode is set to “non-GPRS only” and if the Requesting Node Type is present and indicates ‘SGSN’, the error Unknown Subscriber (with diagnostic value set to “Gprs Subscription Unknown”) is returned in the response. The process terminates;
- If Network Access Mode is set to “GPRS only” and if the Requesting Node Type is present and indicates ‘VLR’, the error Unknown Subscriber is returned in the response. The process terminates;
- if errors are detected they are reported to the VLR or to the SGSN in the MAP\_SEND\_AUTHENTICATION\_INFO response. Otherwise the authentication vectors are returned by means of the TC-RESULT-L service.
- if segmentation of the response message is required and allowed, a MAP\_SEND\_AUTHENTICATION\_INFO\_response transferred by means of the TC-RESULT-L service, containing at least one authentication vector, followed by a MAP\_DELIMITER\_request is returned to the VLR or SGSN, the remaining authentication vectors are stored and the HLR waits for a new service indication from the VLR or SGSN.

The process is described in figure 25.5/5.

## Macrodefinition Authenticate\_MSC

25.5\_1(1)

Figure 25.5/1: Authentication macro in the MSC, relaying authentication indication from the VLR to the MS, and relaying the confirmation from the MSC to the VLR

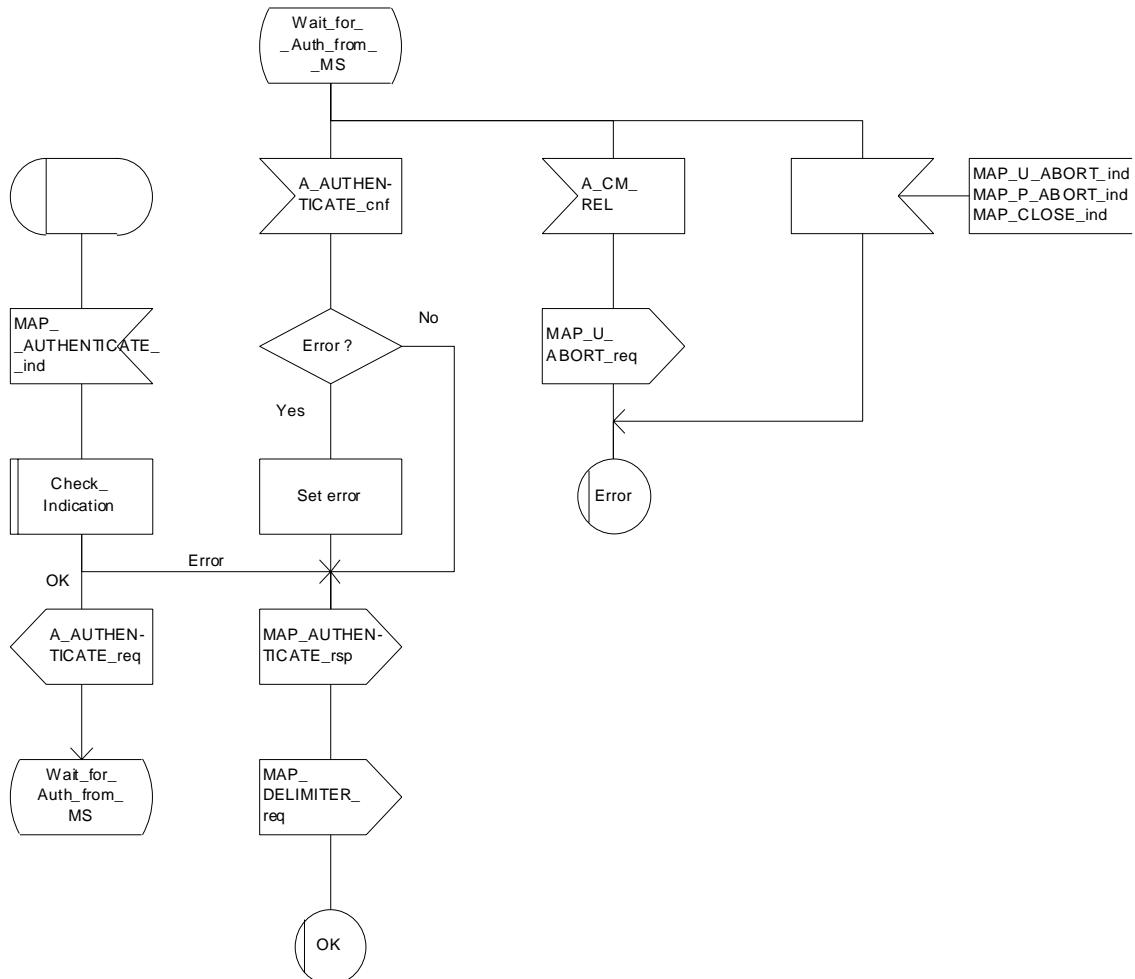


Figure 25.5/1: Macro Authenticate\_MSC

## Macrodefinition Authenticate\_VLR

215\_2(1)

Figure 25.5/2: Authentication macro in the VLR, controlling the authentication procedure towards the MSC/MS and obtaining authentication vectors from the HLR as applicable.

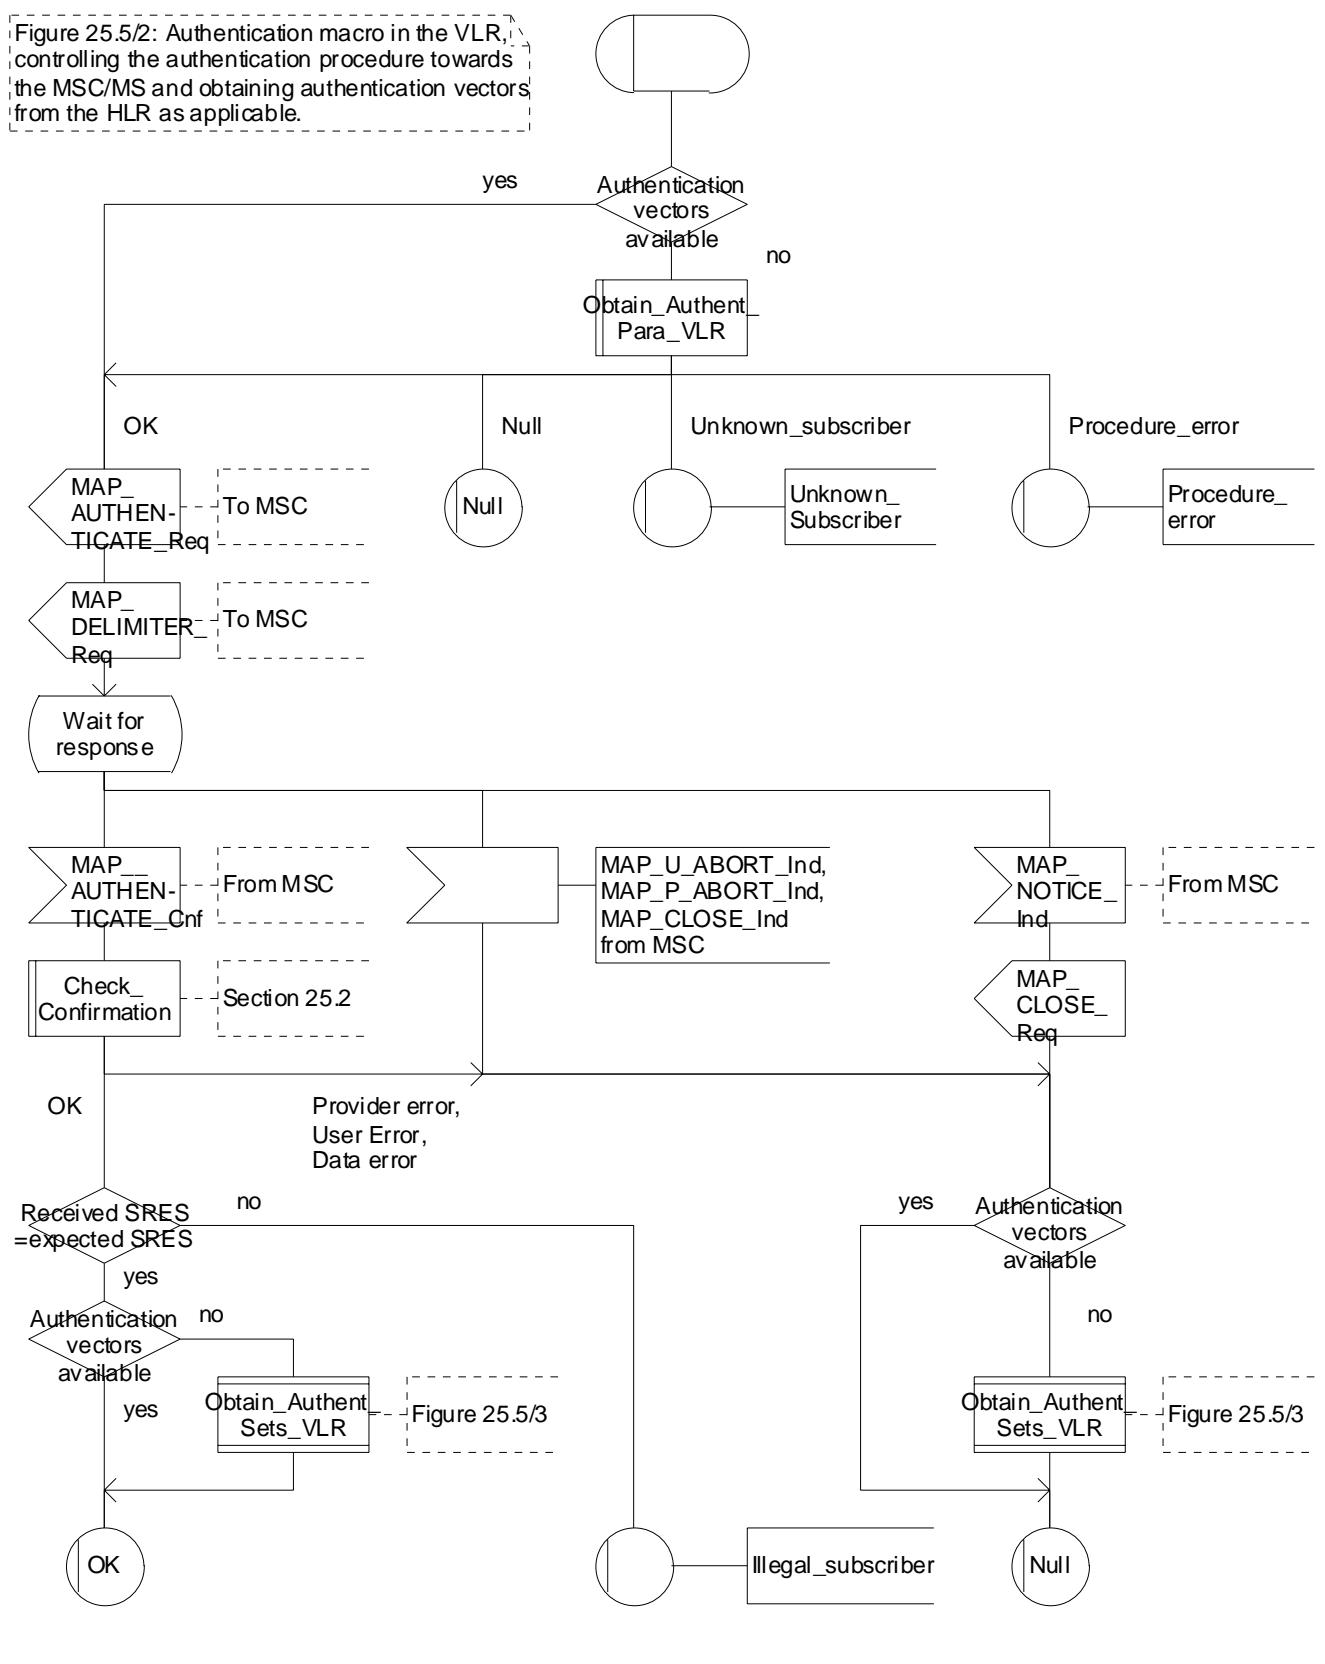


Figure 25.5/2: Macro Authenticate\_VLR

## Process Obtain\_Authent\_Sets\_VLR

25.5\_3(1)

Figure 25.5/3: Process to obtain authentication sets from the HLR to the VLR

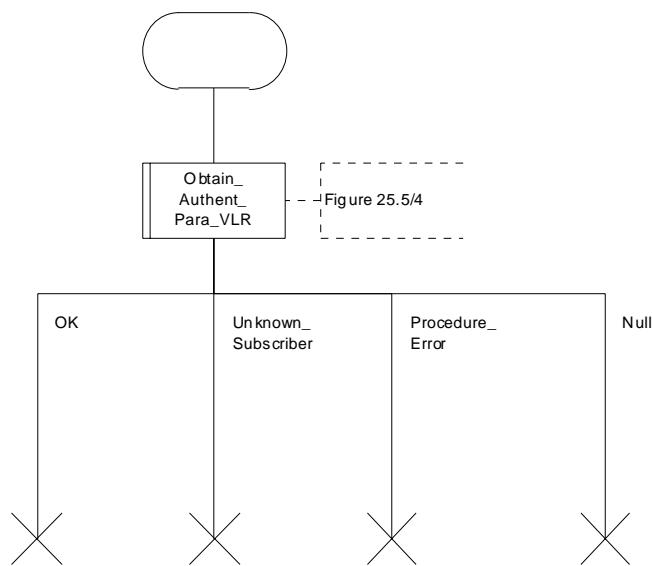


Figure 25.5/3: Process Obtain\_Authentication\_Sets\_VLR

## Macrodefinition OBTAIN\_AUTHENT\_PARA\_VLR

1(3)

Figure 25.5/4: Macro to obtain authentication parameters from the HLR to the VLR

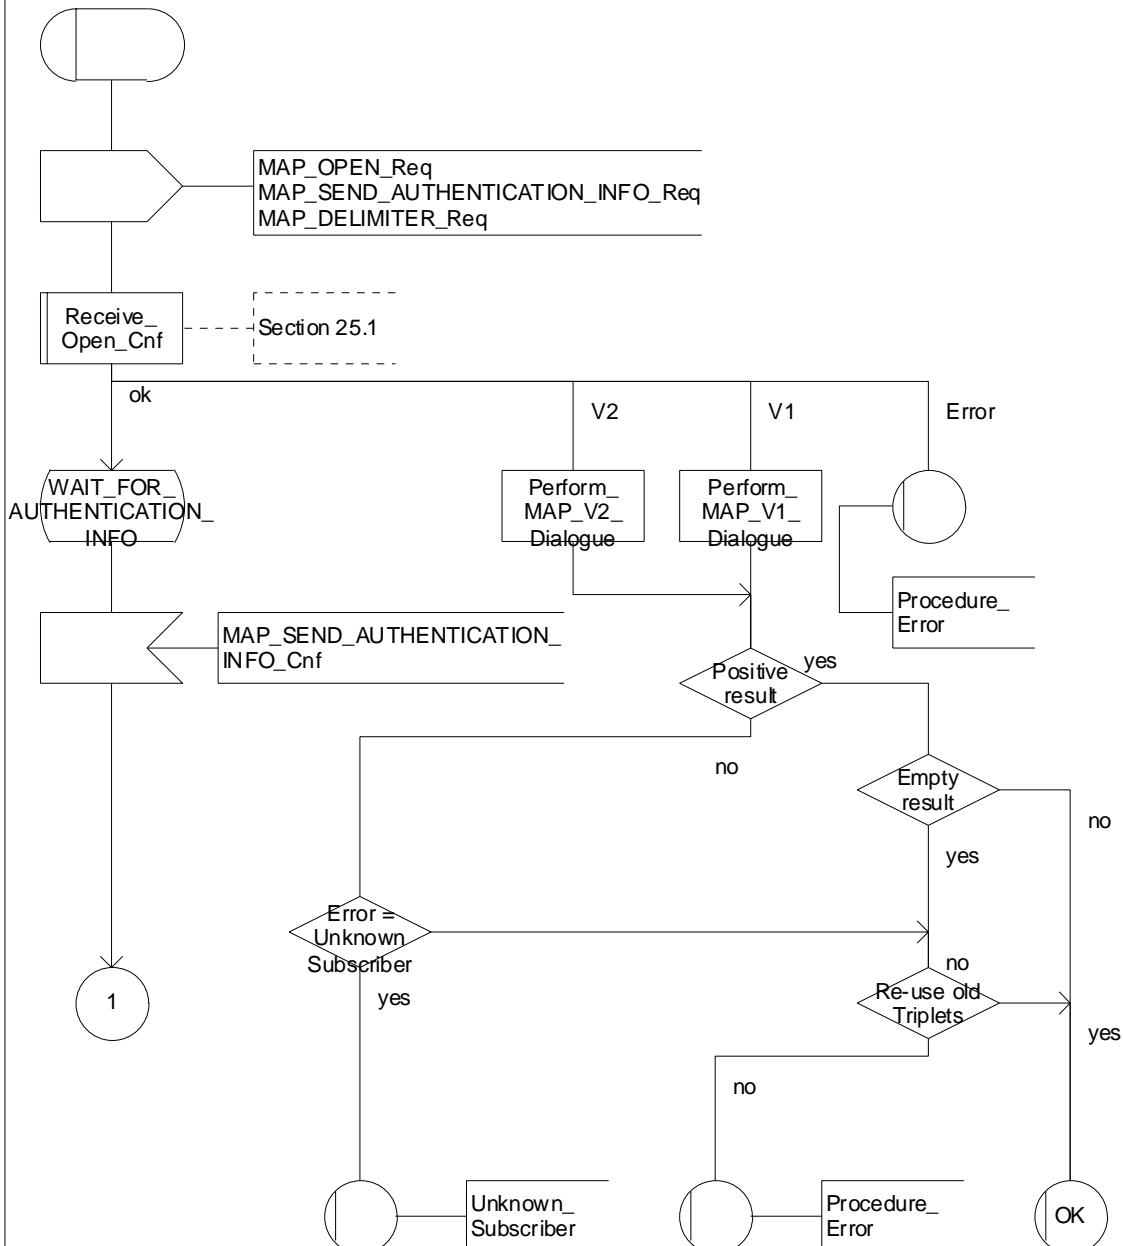


Figure 25.5/4 (sheet 1 of 3): Macro Obtain\_Authent\_Para\_VLR

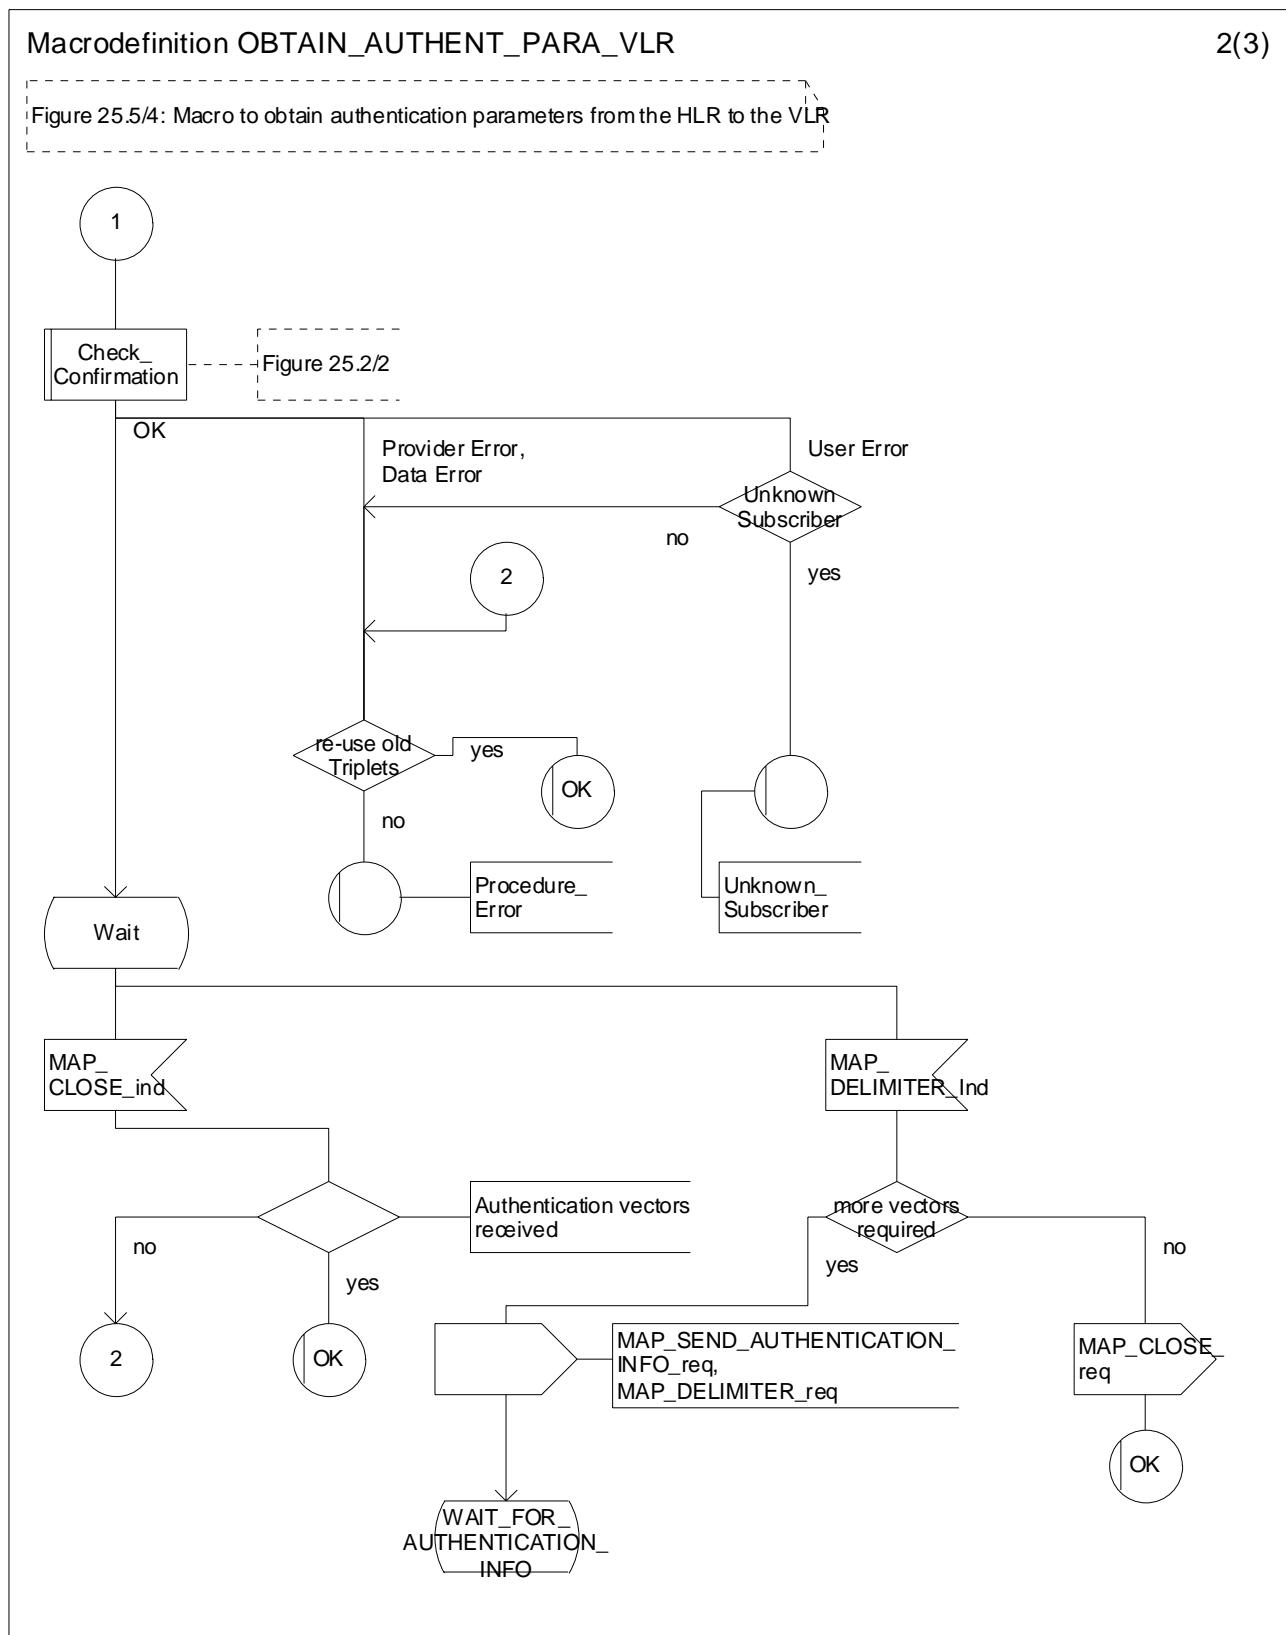


Figure 25.5/4 (sheet 2 of 3): Macro Obtain\_Authent\_Para\_VLR

## Macrodefinition OBTAIN\_AUTHENT\_PARA\_VLR

3(3)

Figure 25.5/4: Macro to obtain authentication parameters from the HLR to the VLR

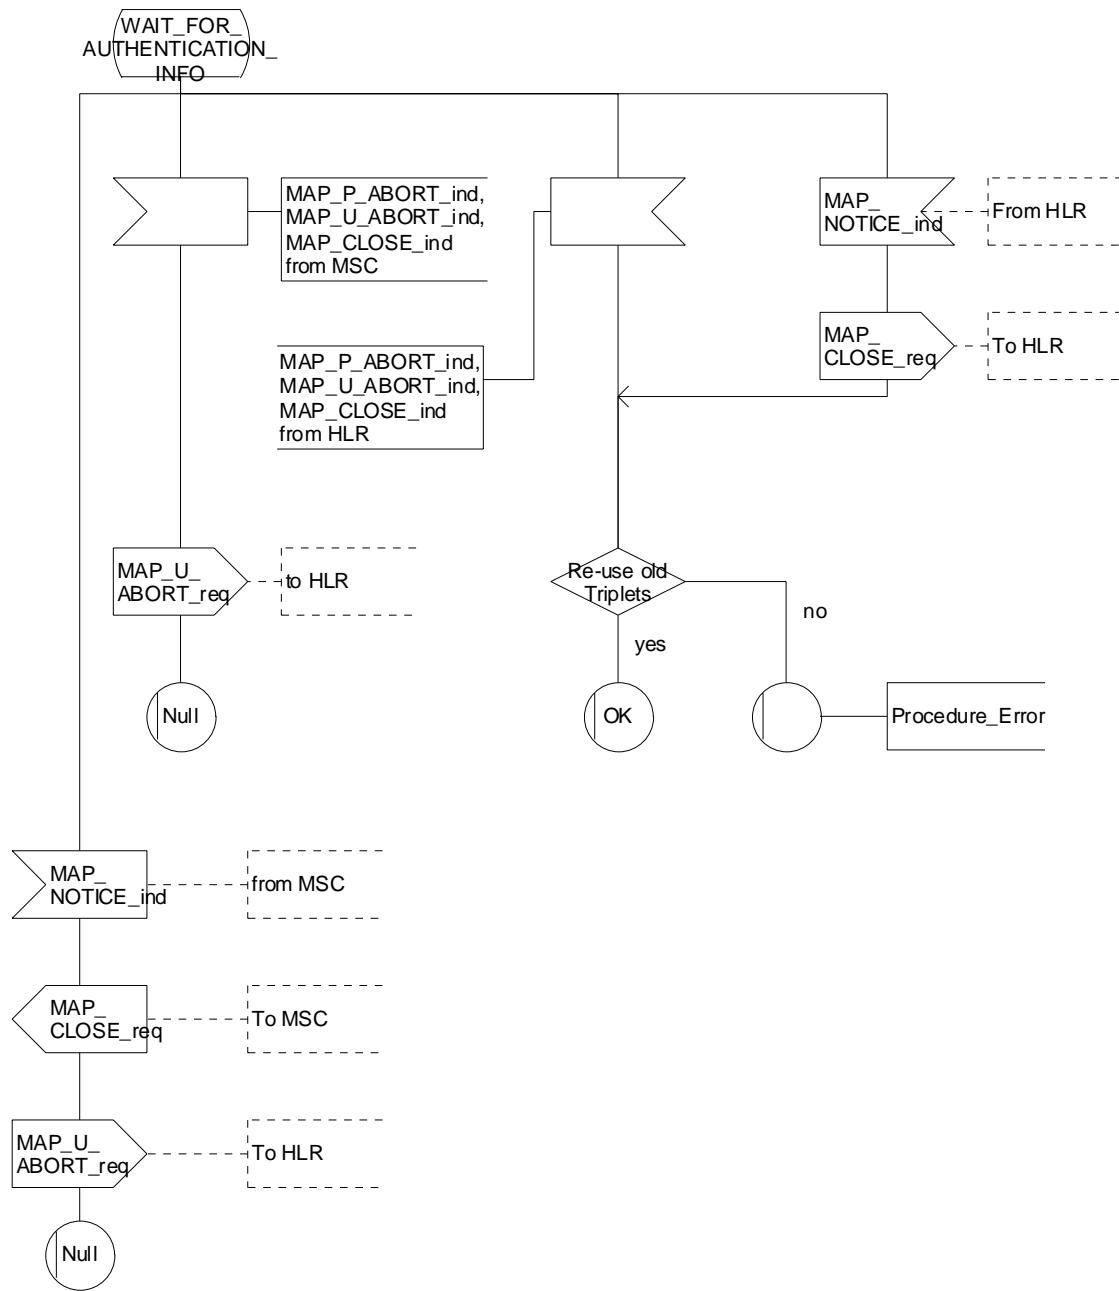


Figure 25.5/4 (sheet 3 of 3): Macro Obtain\_Authent\_Para\_VLR

## Process Obtain\_Auth\_Sets\_HLR

1(2)

Figure 25.5/5: Process in the HLR to obtain authentication sets from the AuC and relay them to the VLR

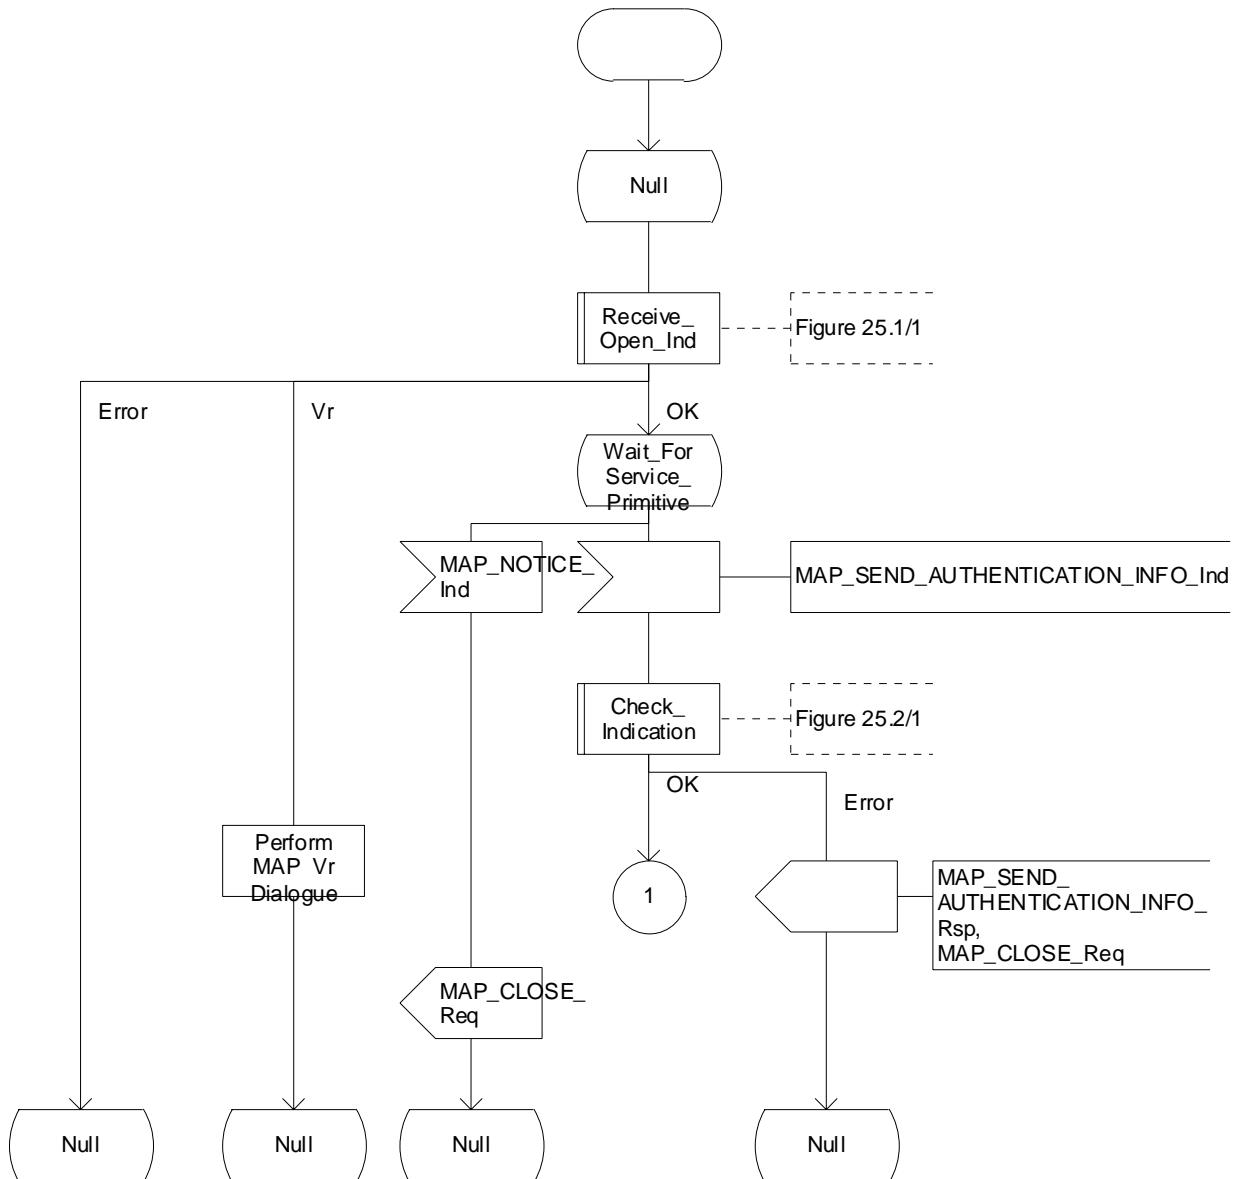


Figure 25.5/5 (sheet 1 of 2): Process Obtain\_Auth\_Sets\_HLR

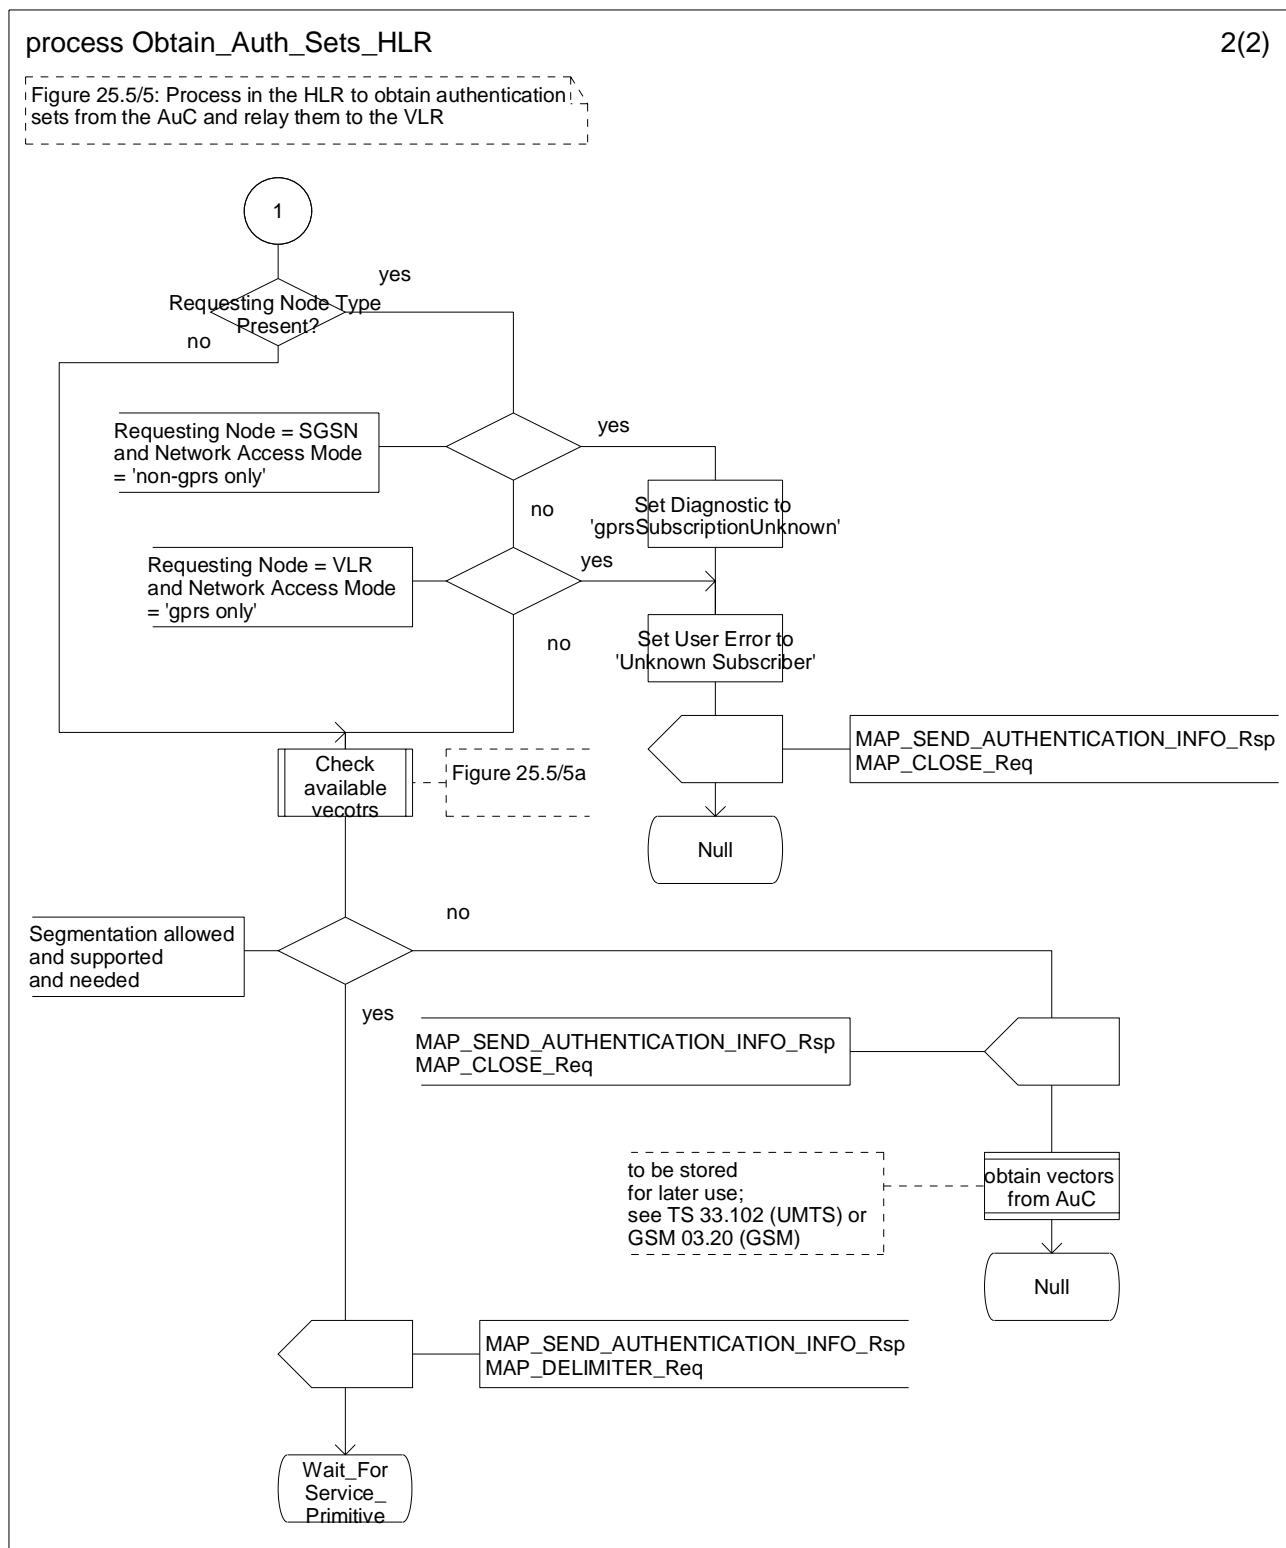


Figure 25.5/5 (sheet 2 of 2): Process Obtain\_Auth\_Sets\_HLR

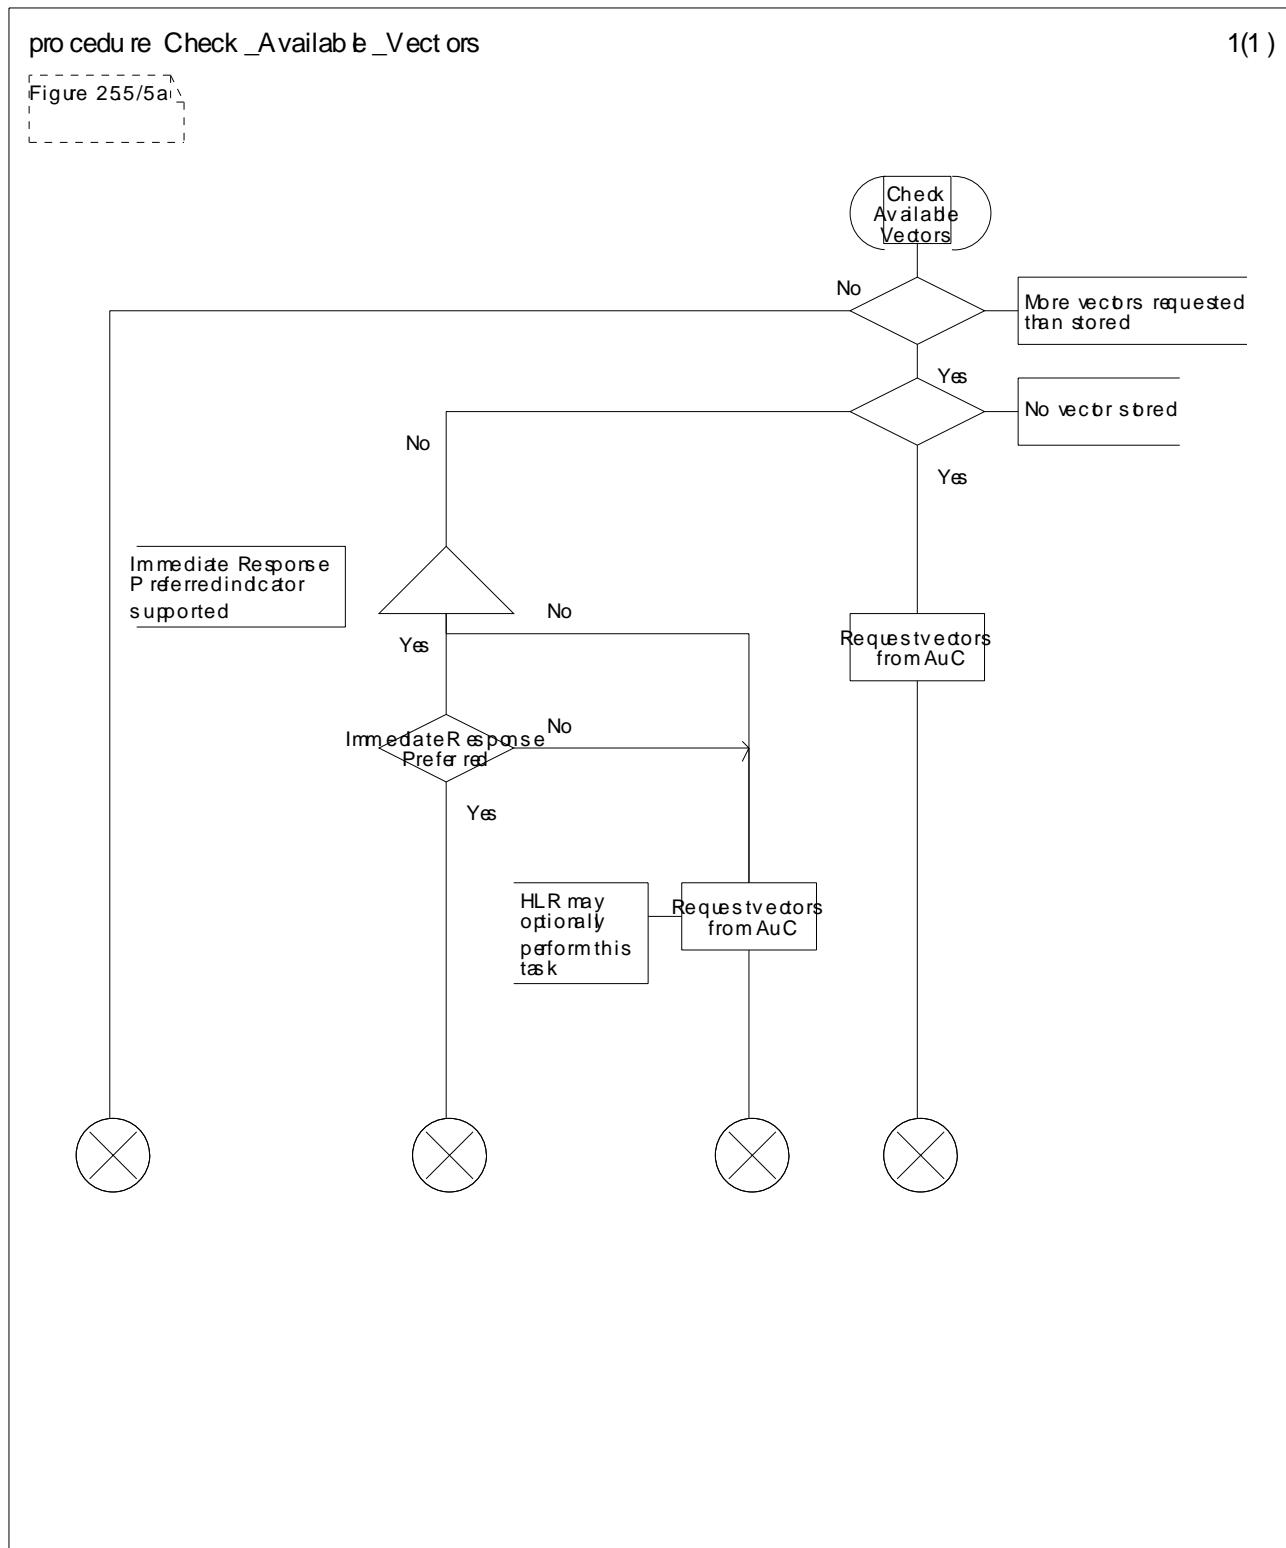


Figure 25.5/6: Procedure Check\_Available\_Vectors

## 25.5.6 Process Obtain\_Authent\_Para\_SGSN

For authentication procedure description see 3GPP TS 23.060 [104] and 3GPP TS 24.008 [35].

This Process is used by the SGSN to request authentication vectors from the HLR.

If the SGSN does not know the subscriber's HLR address (e.g. no IMSI translation exists), the Authentication Parameter negative response with error "Unknown HLR" is returned to the requesting process.

Otherwise, the Process proceeds as follows:

- a connection is opened, and a MAP\_SEND\_AUTHENTICATION\_INFO request sent to the HLR;
- if the HLR indicates that a MAP version 1 or 2 dialogue is to be used, the SGSN performs the equivalent MAP version 1 or 2 dialogue, which can return a positive result containing authentication sets, an empty positive result, or an error;
- if the dialogue opening fails, the Authentication Parameters negative response with appropriate error is sent to the requesting process. Otherwise, the SGSN waits for the response from the HLR;
- if a MAP\_SEND\_AUTHENTICATION\_INFO confirmation is received from the HLR, the SGSN checks the received data.

One of the following positive responses may be received from a MAP version 1 or MAP version 2 dialogue with the HLR:

- Authentication triplets, in which case the outcome is successful;
- Empty response, in which case the SGSN may re-use old triplets, if allowed by the PLMN operator.

If the SGSN cannot re-use old triplets (or no such triplets are available) then the Authentication Parameters negative response with appropriate error is sent to the requesting process.

If the outcome was successful or re-use of old parameters in the SGSN is allowed, then the Authentication Parameters response is sent to the requesting process

If an "Unknown Subscriber" error is included in the MAP\_SEND\_AUTHENTICATION\_INFO confirm or is returned by the MAP version 1 dialogue, then the appropriate error is sent to the requesting process in the Authentication Parameters negative response

In a MAP version 3 dialogue a (possibly empty) set of authentication vectors may be received, transferred by means of the TC-RESULT-L service, from the HLR followed by a MAP\_CLOSE\_Indication or by a MAP\_DELIMITER\_Indication. If a MAP\_DELIMITER\_Indication is received, the SGSN may request additional authentication vectors from the HLR by sending a new MAP\_SEND\_AUTHENTICATION\_INFO\_Request. If a MAP\_CLOSE\_Indication is received, and authentication vectors have been received during the dialogue, then the "OK" exit is used. If no authentication vectors have been received during the dialogue, the SGSN checks whether old GSM Triplets are available and can be re-used. If so, the "OK" exit is used, otherwise the "Procedure Error" exit is used. Note that re-use of old UMTS Quintuplets is not allowed.

If in a MAP version 3 dialogue an "Unknown Subscriber" error is received, then the "Unknown Subscriber" exit is used. If other errors are received, the SGSN checks whether old GSM Triplets are available and can be re-used. If so, the "OK" exit is used, otherwise the "Procedure Error" exit is used. Note that re-use of old UMTS Quintuplets is not allowed.

- if a MAP-U-ABORT, MAP\_P\_ABORT or unexpected MAP\_CLOSE service indication is received from the HLR, then the SGSN checks whether old authentication parameters can be re-used. If old parameters cannot be re-used the Authentication Parameters negative response with appropriate error is sent to the requesting process.
- if a MAP\_NOTICE service indication is received from the HLR, then the dialogue with the HLR is closed. The SGSN then checks whether old authentication parameters can be re-used. If old parameters cannot be re-used the process terminates and the Authentication Parameters negative response with appropriate error is sent to the requesting process; Otherwise the Authentication Parameters response is sent to requesting process.

The process is described in figure 25.5/6.

Process Obtain\_Authent\_Para\_SGSN

1(3)

Figure 25.5/6: Process to obtain authentication parameters from the HLR to the SGSN

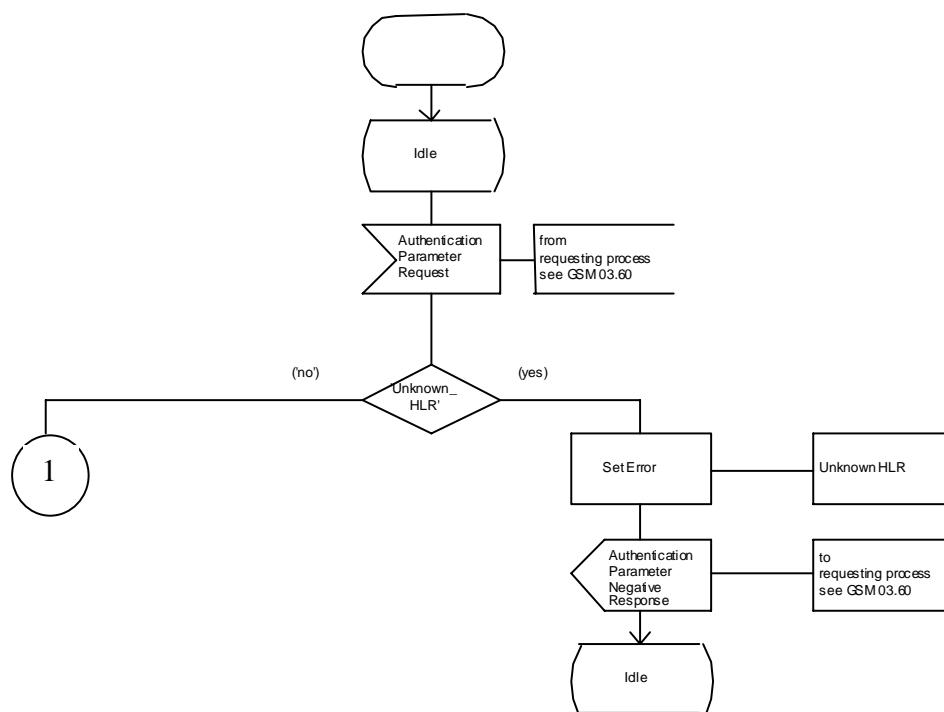


Figure 25.5/6 (sheet 1 of 3): Process Obtain\_Authen\_Para\_SGSN

## Process Obtain\_Authent\_Para\_SGSN

2(3)

Figure 25.5/6: Process to obtain authentication parameters from the HLR to the SGSN

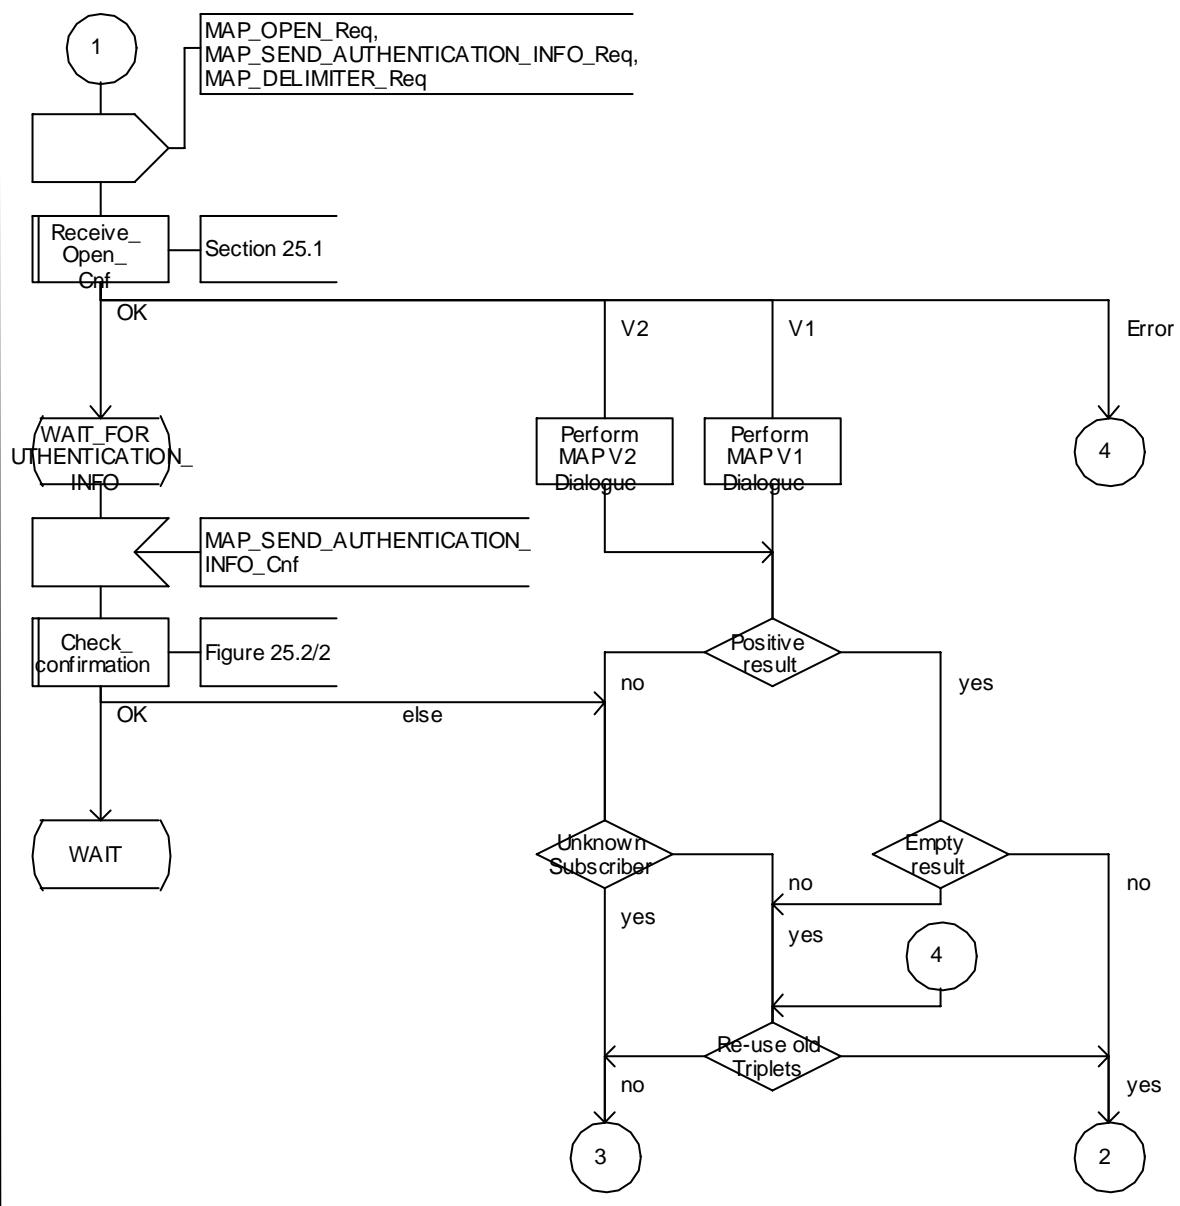


Figure 25.5/6 (sheet 2 of 3): Process Obtain\_Authen\_Para\_SGSN

## Process Obtain\_Authent\_Para\_SGSN

3(3)

Figure 25.5/6: Process to obtain authentication parameters from the HLR to the SGSN

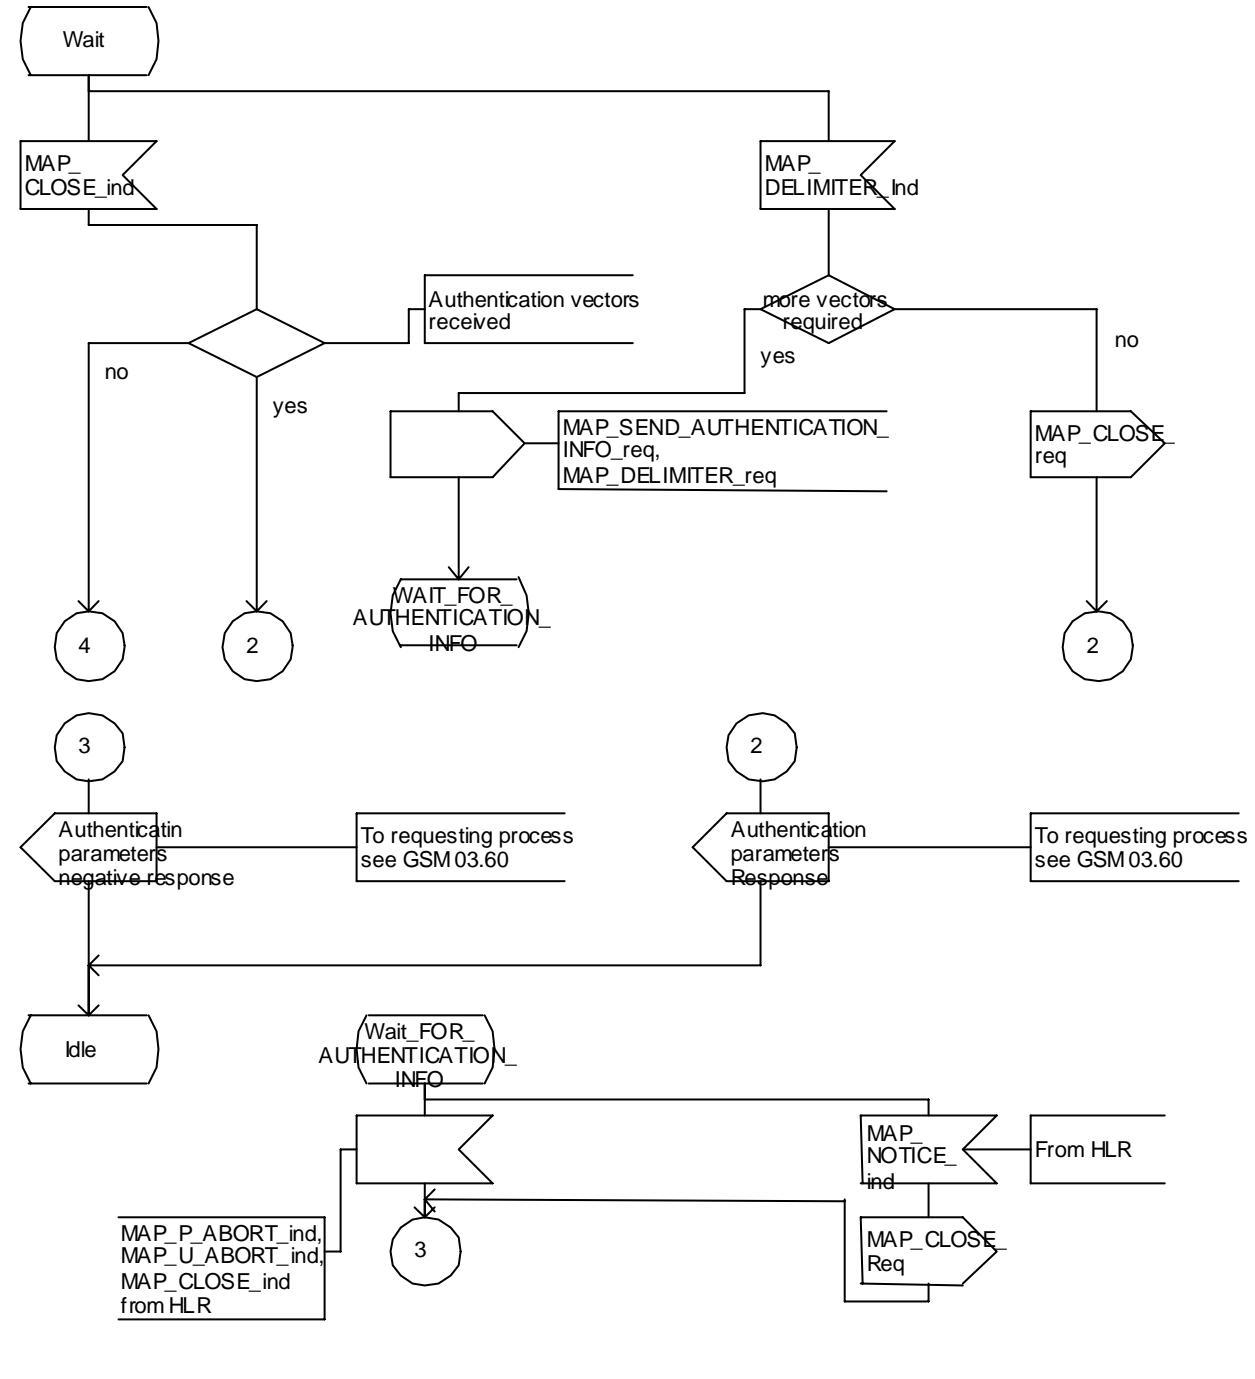



Figure 25.5/6 (sheet 3 of 3): Process Obtain\_Authen\_Para\_SGSN

## 25.5.7 Process Authentication\_Failure\_Report


### 25.5.7.1 General

The Authentication Failure Report procedure is used to notify a HLR about the occurrence of an authentication failure in the SGSN or VLR.

The procedure is shown in figure 25.5/7.

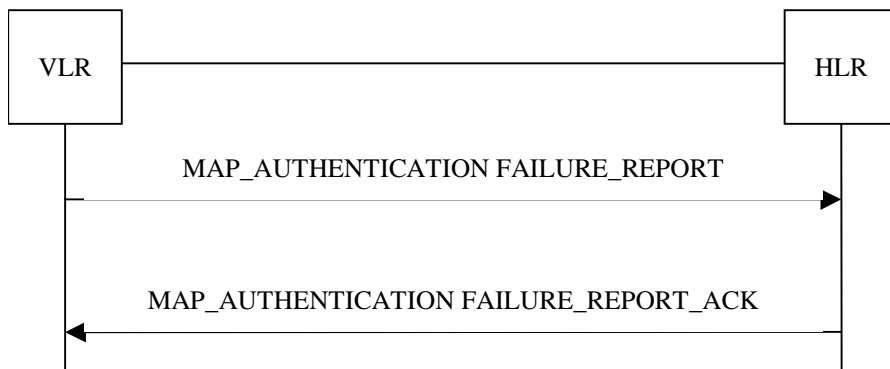

**Figure 25.5/7: Message Flows to Authentication Failure Report**

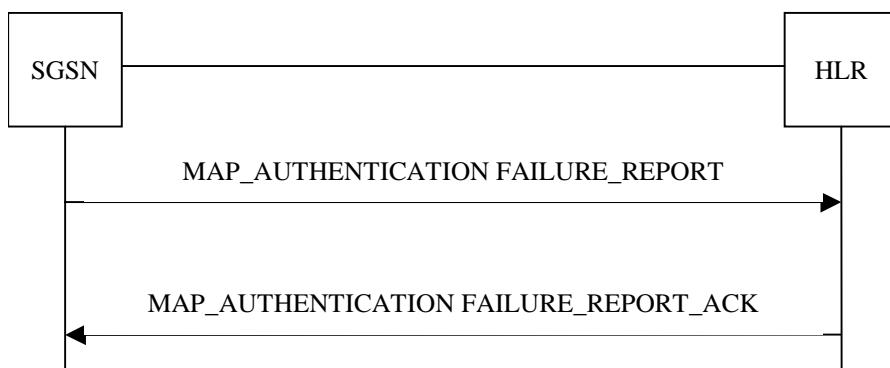

**Figure 25.6/7: Message Flows to Authentication Failure Report**

### 25.5.7.2 Process in the VLR

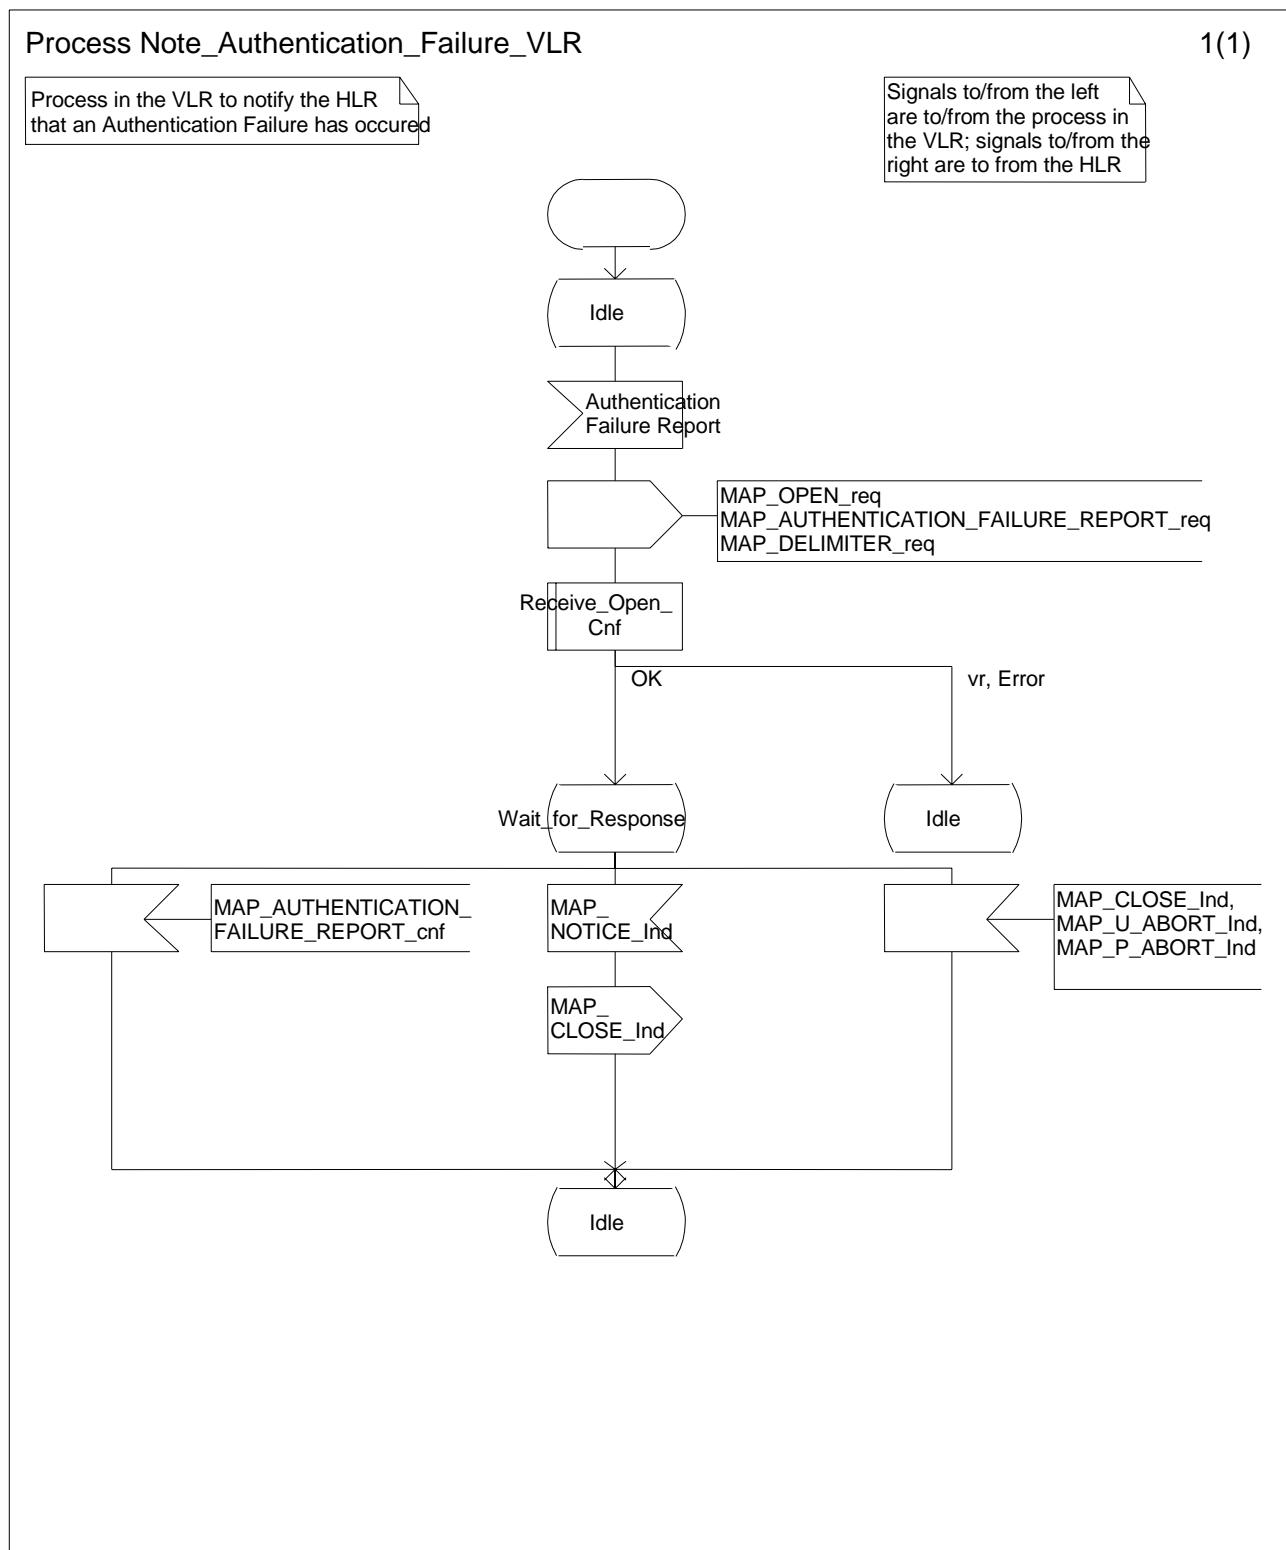


Figure 25.6/8: Process Note\_Authentication\_Failure\_VLR

## 25.5.7.3 Process in the SGSN

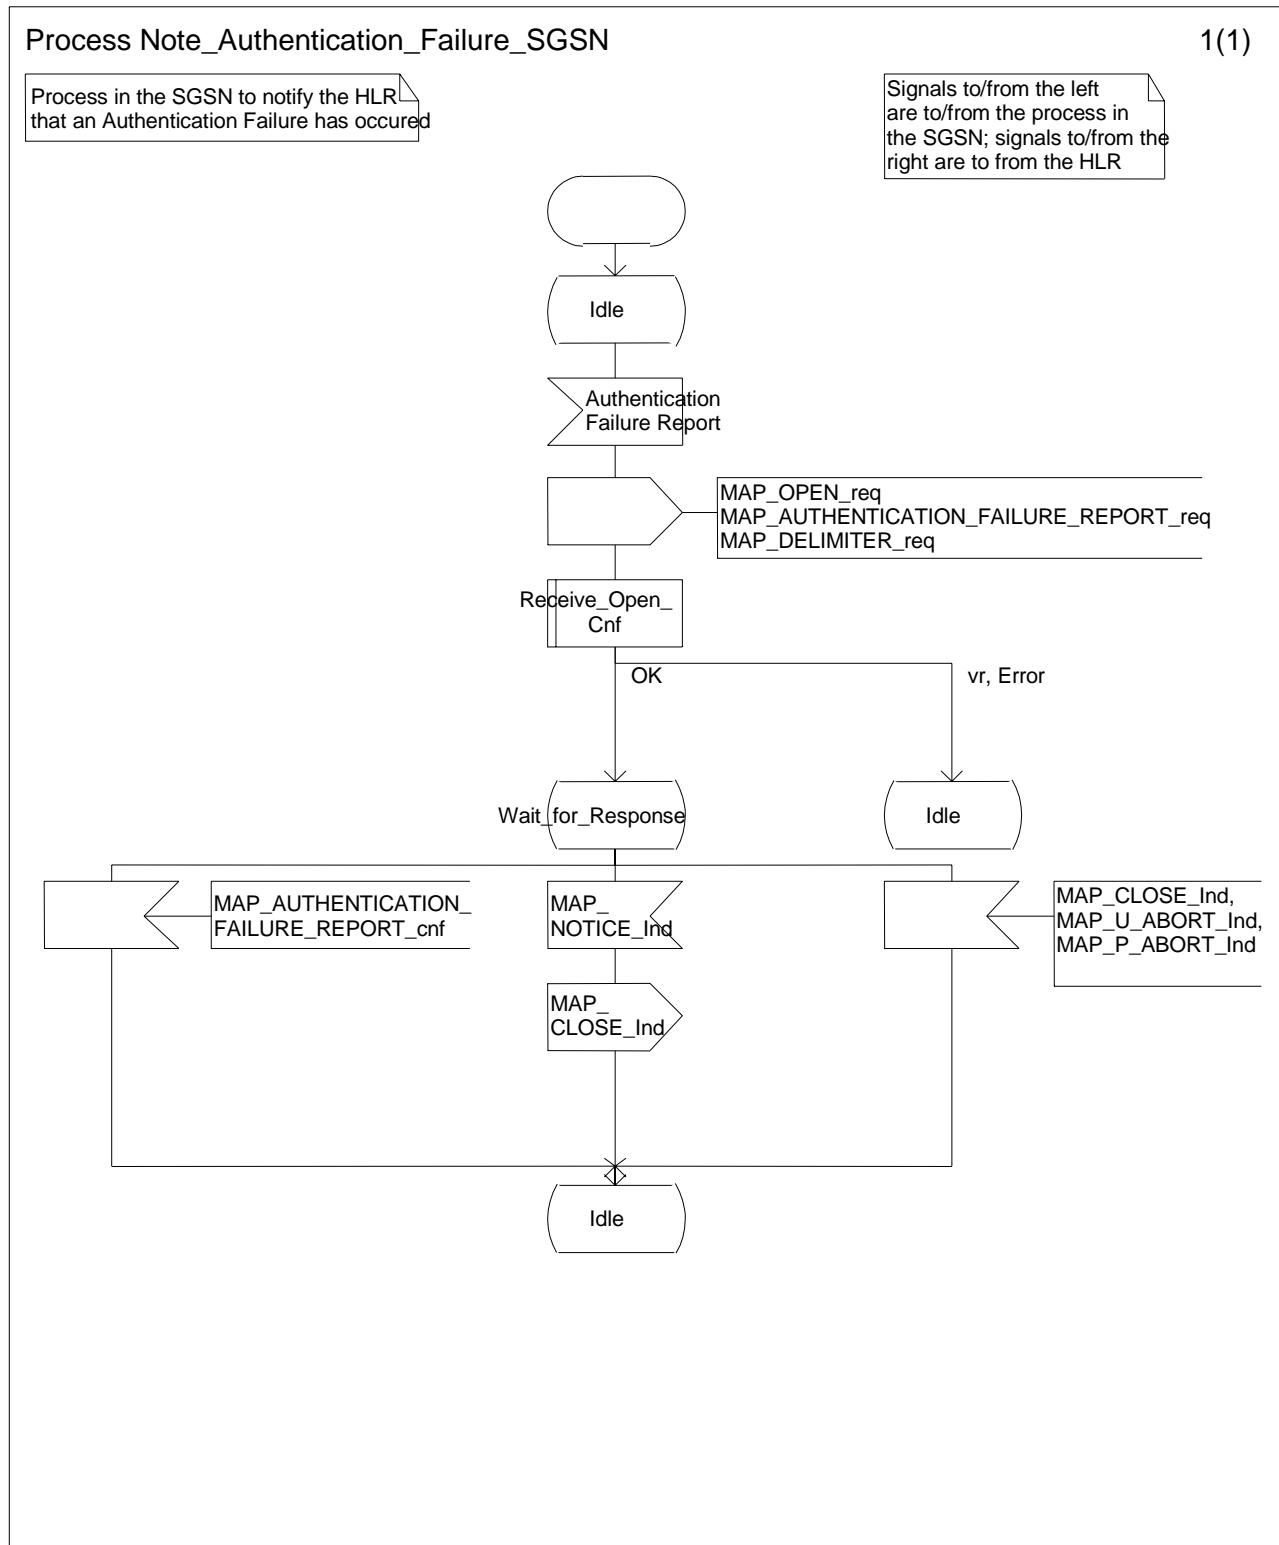


Figure 25.6/9: Process Note\_Authentication\_Failure\_SGSN

## 25.5.7.4 Process in the HLR

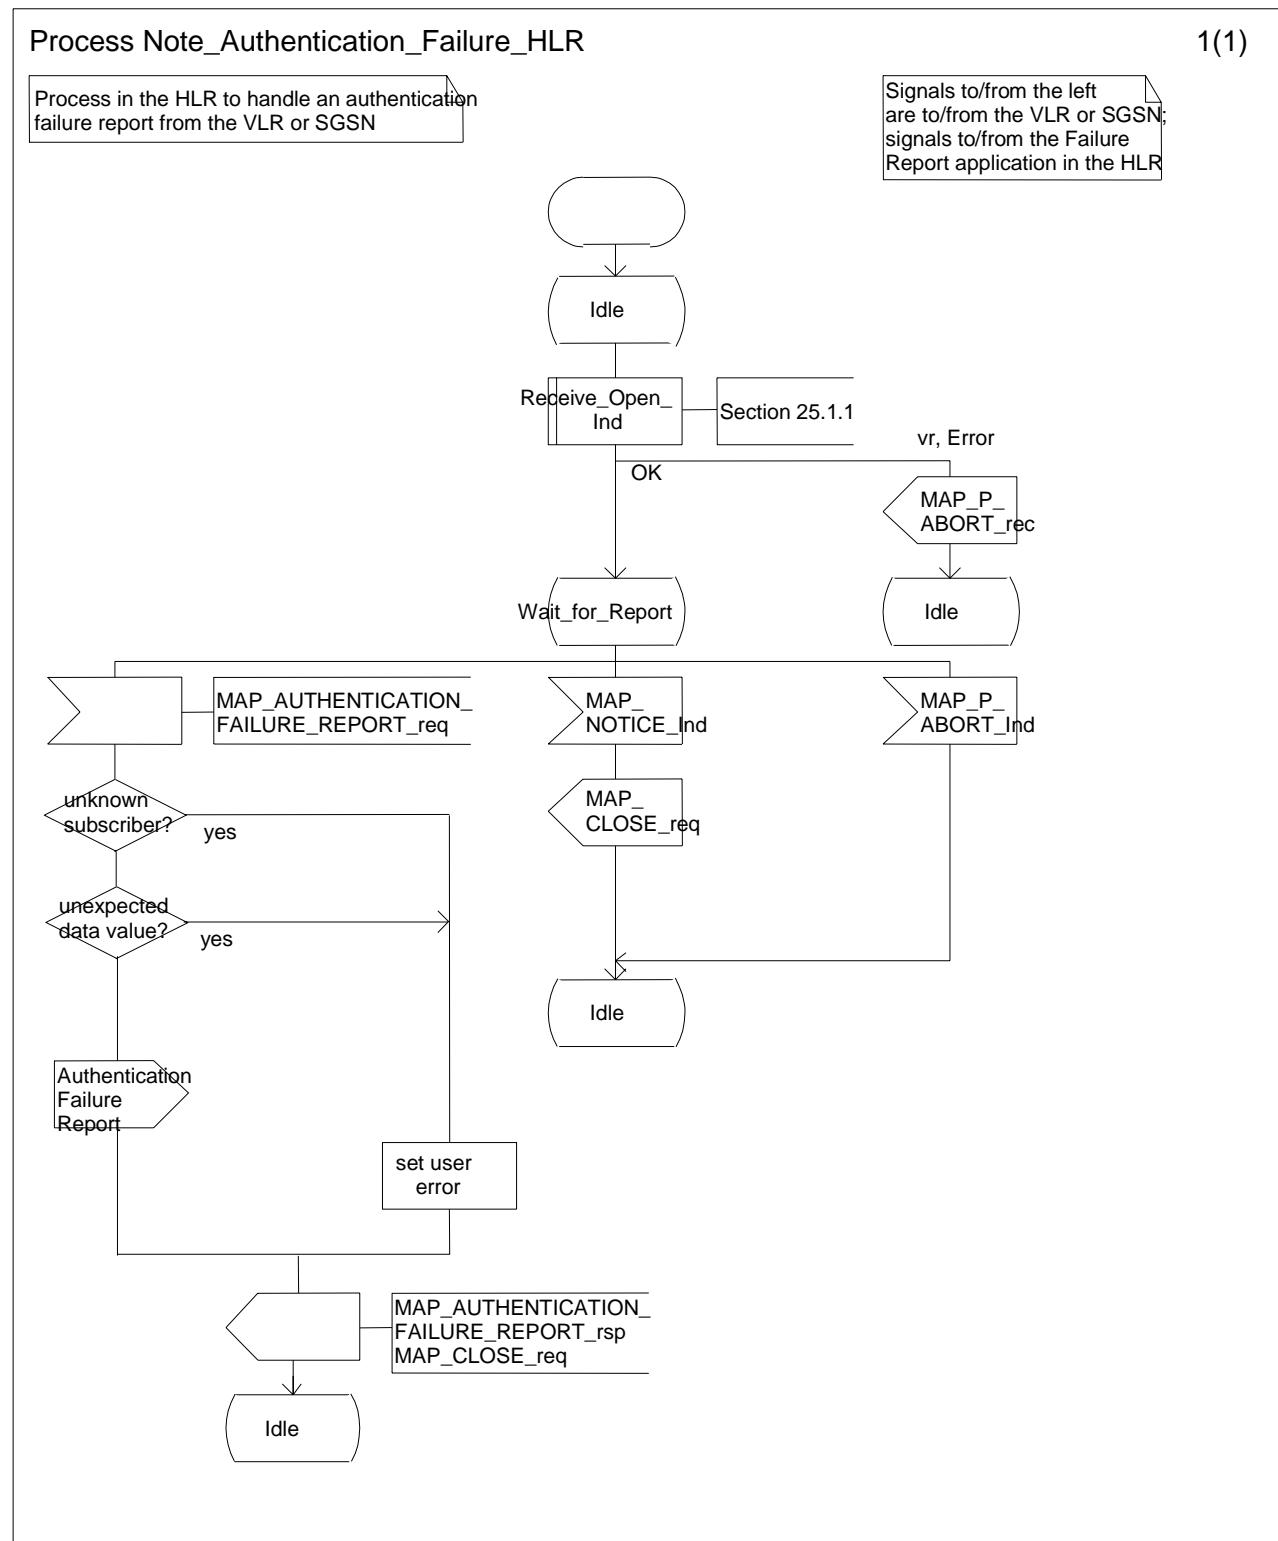


Figure 25.6/10: Process Note\_Authentication\_Failure\_HLR

## 25.6 IMEI Handling Macros

The following macros are used in the GSM network in order to enable handling and checking of the mobile equipment identity.

### 25.6.1 Macro Check\_IMEI\_MSC

This macro is used by the MSC to receive a request from the VLR, relay it to the EIR, and pass the result from the EIR back to the VLR. The macro proceeds as follows:

- a MAP\_CHECK\_IMEI service indication containing only the Invoke Id is received from the VLR;
- if the IMEI is not available in the MSC, it is requested from the MS using the IDENTITY REQUEST message;
- if the MS releases the radio resources, a MAP\_U\_ABORT request indicating "Application procedure Cancellation" is sent to the VLR, and the "Error" exit of the macro is used;
- when the IMEI is known, a connection is set up towards the EIR, and a MAP\_CHECK\_IMEI service request is sent including the IMEI;
- if the opening of the dialogue fails, a System Failure is reported to the VLR. Otherwise, the MSC waits for a response from the EIR;
- when the MAP\_CHECK\_IMEI service confirm is received, it is checked for errors. Any errors discovered in the MSC lead to the System Failure error to be reported to the VLR in the MAP\_CHECK\_IMEI response. Any errors reported from the EIR are sent directly to the VLR in the MAP\_CHECK\_IMEI service response. If no errors are detected by or reported to the MSC, the IMEI is added to the MAP\_CHECK\_IMEI service response returned to the VLR. The "OK" exit is used in all cases;
- if a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_CLOSE or MAP\_NOTICE service indication is received from the EIR, the MSC closes the transaction with the EIR (if necessary), reports a System Failure error back to the VLR in the MAP\_CHECK\_IMEI response, and uses the macro's "OK" exit;
- if a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_CLOSE or MAP\_NOTICE indication is received from the VLR, the MSC closes the transaction with the VLR (if necessary) and aborts the connections towards the EIR and the MS; the macro takes the "Error" exit.

If the dialogue with the EIR drops back to version 1, the result or error returned by the EIR is checked. The use of the "Check\_Confirmation" macro in the SDL diagram indicates that the checks carried out on the result returned by the EIR in a MAP v1 dialogue are functionally equivalent to those carried out on the parameters of the MAP\_CHECK\_IMEI confirm received from the EIR in a MAP v2 dialogue.

The macro is described in figure 25.6/1.

### 25.6.2 Macro Check\_IMEI\_VLR

This macro is used by the VLR to control the check of a mobile equipment's IMEI. The macro proceeds as follows:

- a MAP\_CHECK\_IMEI service request is sent to the MSC, including only the Invoke Id;
- the VLR then waits for the response from the MSC;
- if a MAP\_CHECK\_IMEI service confirm including either:
  - the IMEI and the Equipment Status; or
  - an error;

is received, the VLR checks whether the response requires that an alarm be generated on the Operation and Maintenance interface. The criteria for such alarms are PLMN operator dependent;

- the VLR then checks whether the response from the MSC means that service is granted to the MS. The criteria for granting service depending on the equipment status or errors received in the MAP\_CHECK\_IMEI service response are also PLMN operator dependent;

- if a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_CLOSE or MAP\_NOTICE indication is received from the MSC, then the MSC connection is closed (if necessary) and the macro takes the "Aborted" exit.

The macro is described in figure 25.6/2.

### 25.6.3 Process Check\_IMEI\_EIR

This process is used by the EIR to obtain the status of a piece of mobile equipment, upon request from the MSC or from the SGSN. The process acts as follows:

- a MAP\_OPEN service indication is received (macro Receive\_Open\_Ind, clause 25.1.1). If the dialogue opening fails, the process terminates;
- otherwise, a MAP\_CHECK\_IMEI indication is received by the EIR, containing the IMEI to be checked;
- the EIR checks the service indication for errors. If there are any, they are reported to the MSC or to the SGSN in the MAP\_CHECK\_IMEI response. If no errors are detected, the EIR data base function is interrogated for the status of the given equipment. Further details are found in 3GPP TS 22.016 [7];
- the status of the equipment (white-listed, grey-listed, black-listed or unknown) is returned to the MSC or to the SGSN in the MAP\_CHECK\_IMEI service response;
- if a MAP\_U\_ABORT, MAP\_P\_ABORT, MAP\_NOTICE or MAP\_CLOSE indication is received from the MSC or from the SGSN at any time during this process, the process in the EIR terminates.

The process is described in figure 25.6/3.

### 25.6.4 Macro Obtain\_IMEI\_MSC

This macro is used by the MSC to respond to a request from the VLR to provide the IMEI. The macro proceeds as follows:

- a MAP\_OBTAIN\_IMEI service indication containing only the Invoke Id is received from the VLR;
- if the IMEI is not available in the MSC, it is requested from the MS using the IDENTITY REQUEST message;
- when the IMEI is known, it is returned to the VLR in the MAP\_OBTAIN\_IMEI service response. The macro terminates at the "OK" exit;
- if the IMEI cannot be obtained by the MSC, the System Failure error is reported back to the VLR in the MAP\_OBTAIN\_IMEI service response. The macro terminates at the "OK" exit;
- if a MAP\_P\_ABORT, MAP\_U\_ABORT or MAP\_CLOSE indication is received from the VLR, the macro terminates at the "Error" exit.

The macro is described in figure 25.6/4.

### 25.6.5 Macro Obtain\_IMEI\_VLR

This macro is used by the VLR to obtain the IMEI from the MSC, e.g. to enable handling of emergency calls in case of authentication failure (in which case the IMEI may be used by some operators as an alternative to the IMSI). It proceeds as follows:

- the MAP\_OBTAIN\_IMEI service request is sent to the MSC, including only the Invoke Id;
- the VLR then waits for the response from the MSC;
- if the IMEI is received in the MAP\_OBTAIN\_IMEI service response, the macro terminates at the "OK" exit;
- if the System Failure error is reported in the MAP\_OBTAIN\_IMEI service response, the "Error" exit is used;
- if the MSC terminates the dialogue using a MAP\_P\_ABORT, MAP\_U\_ABORT, MAP\_CLOSE or MAP\_NOTICE service indication, the necessary connections are released, and the "Aborted" exit is used for termination of the macro.

The macro is shown in figure 25.6/5.

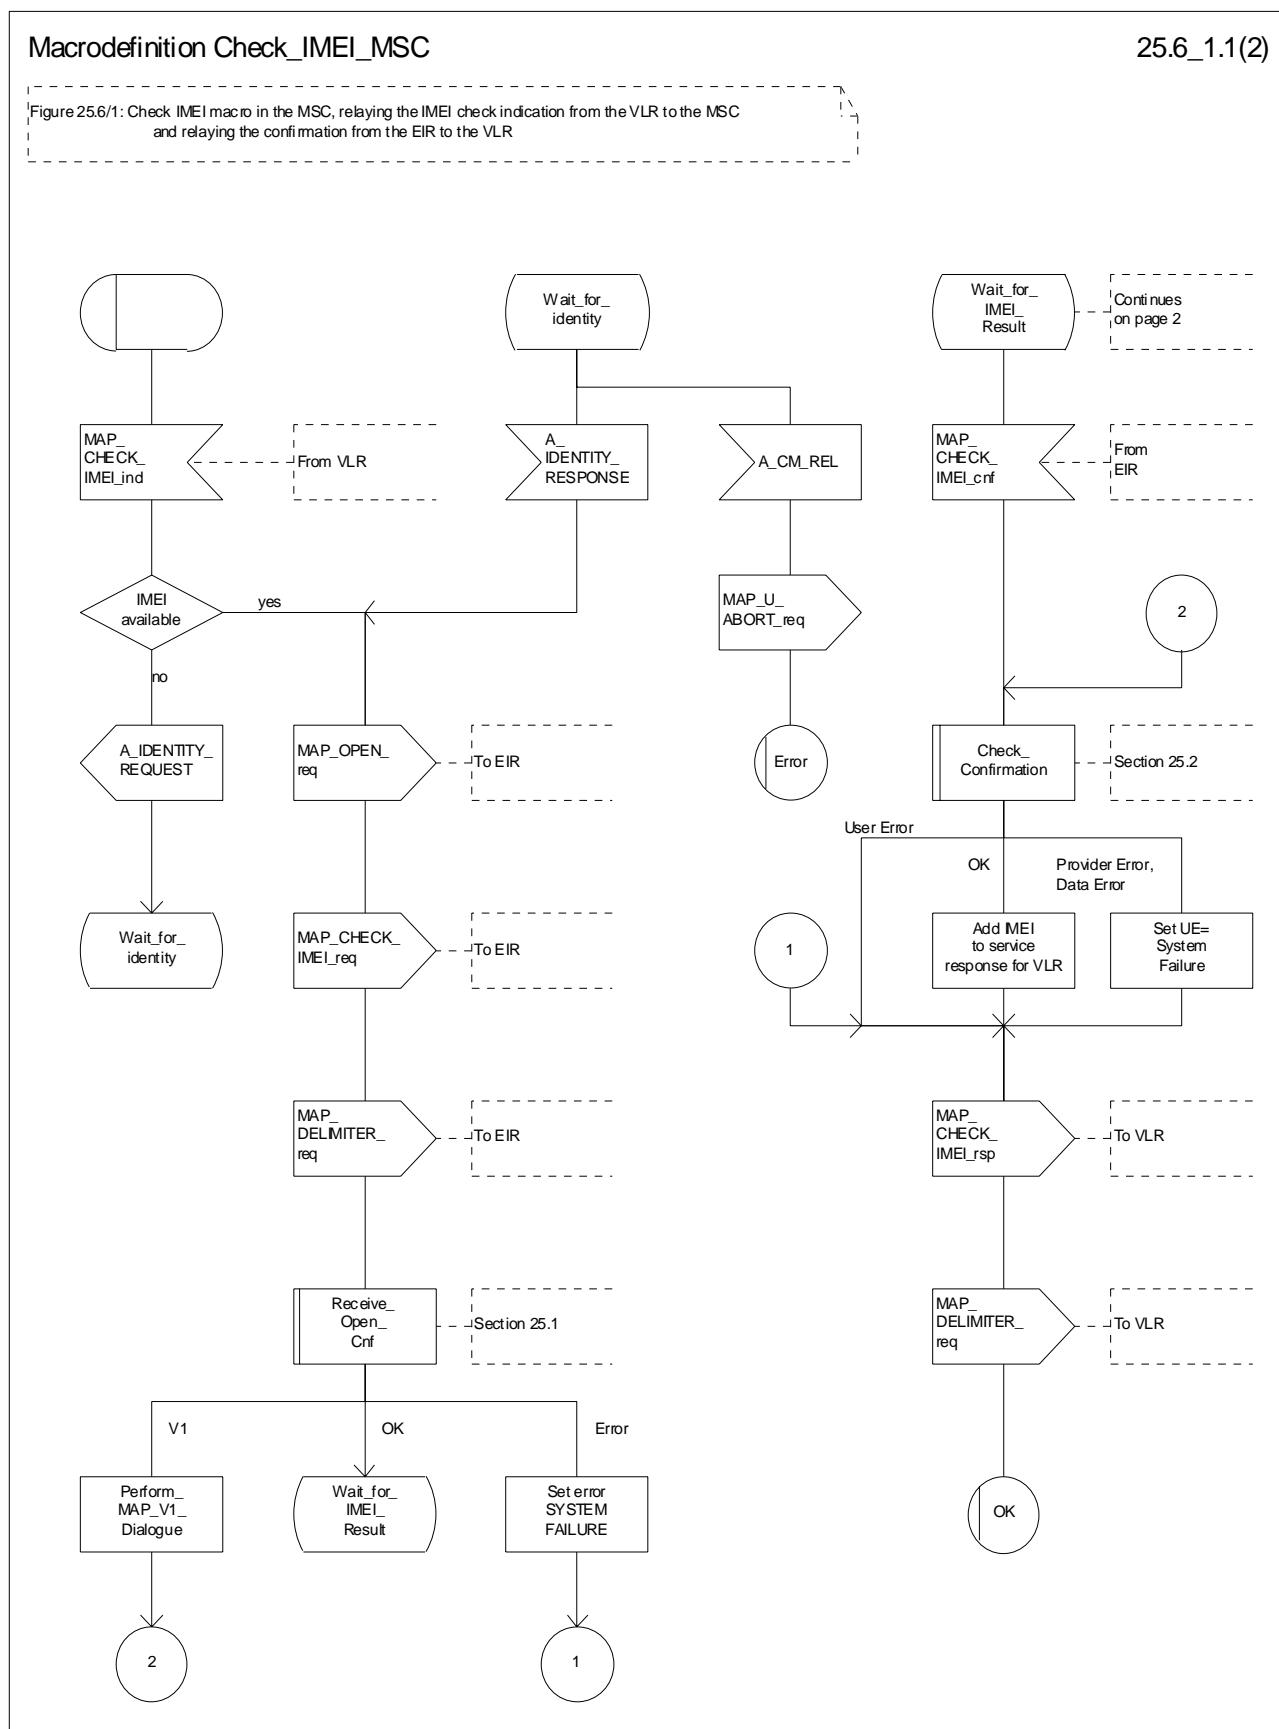


Figure 25.6/1 (sheet 1 of 2): Process Check\_IMEI\_MSC

## Macrodefinition Check\_IMEI\_MSC

25.6\_1.2(2)

Figure 25.6/1: Check IMEI macro in the MSC, relaying the IMEI check indication from the VLR to the MSC and relaying the confirmation from the EIR to the VLR

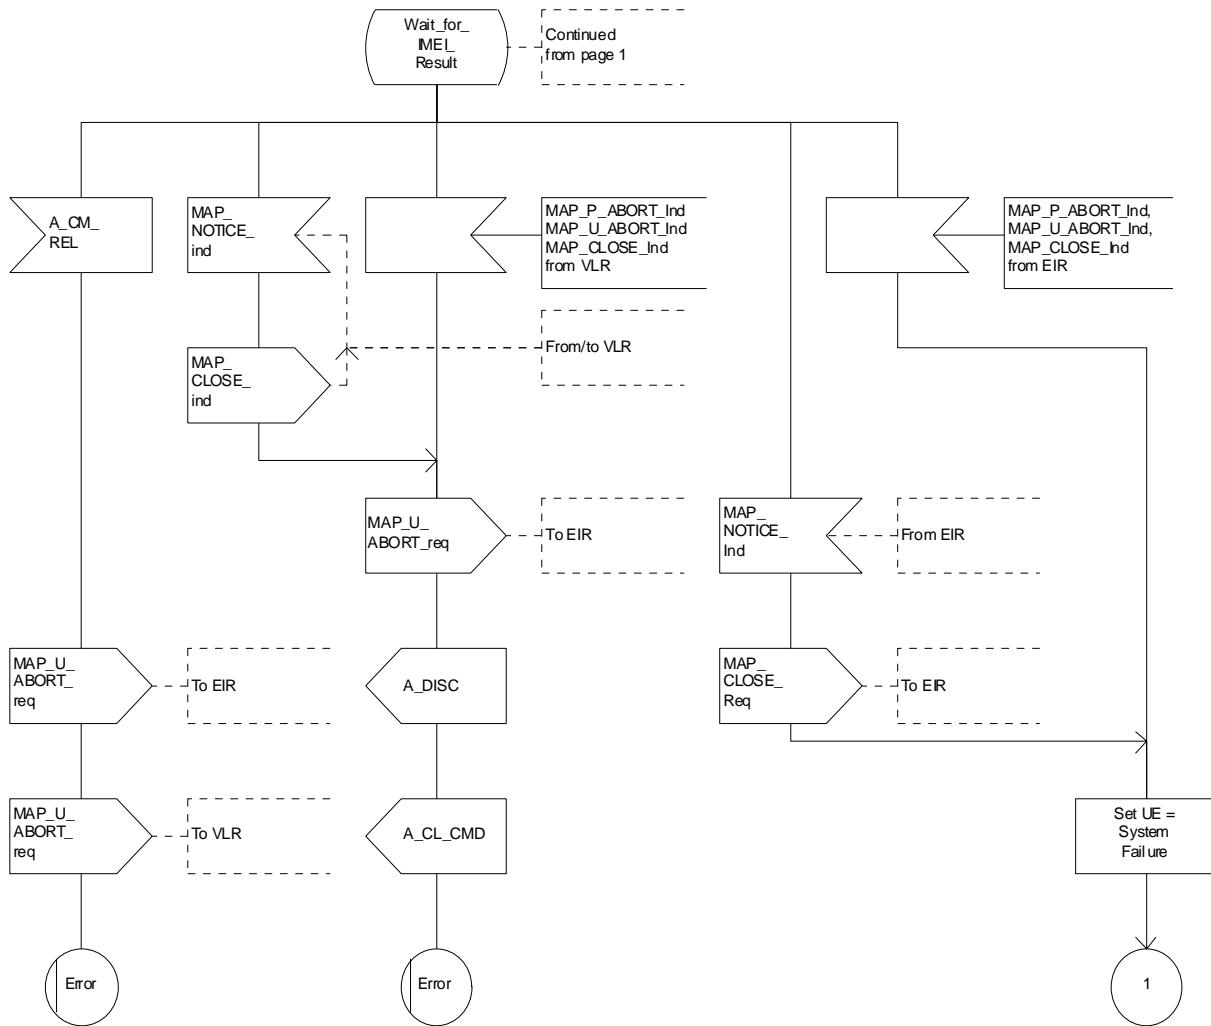


Figure 25.6/1 (sheet 2 of 2): Process Check\_IMEI\_MSC

## Macrodefinition Check\_IMEI\_VLR

25.6\_2(1)

Figure 25.6/2: Check IMEI macro in the VLR, containing the request towards the MSC/EIR

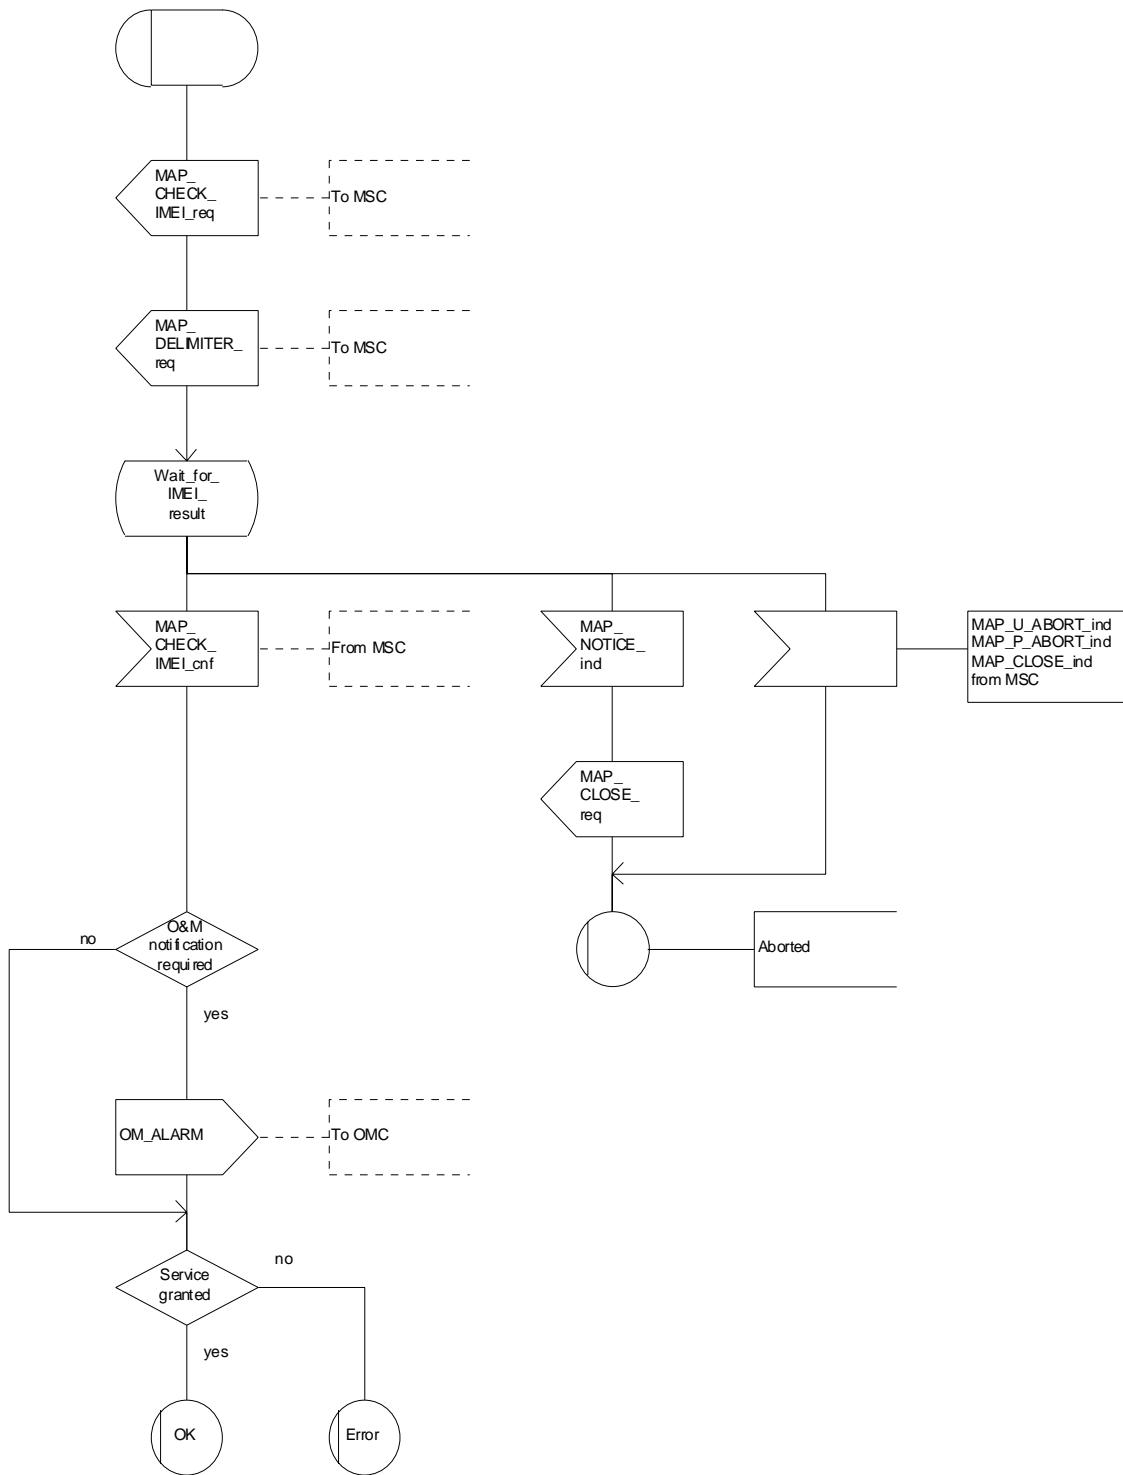
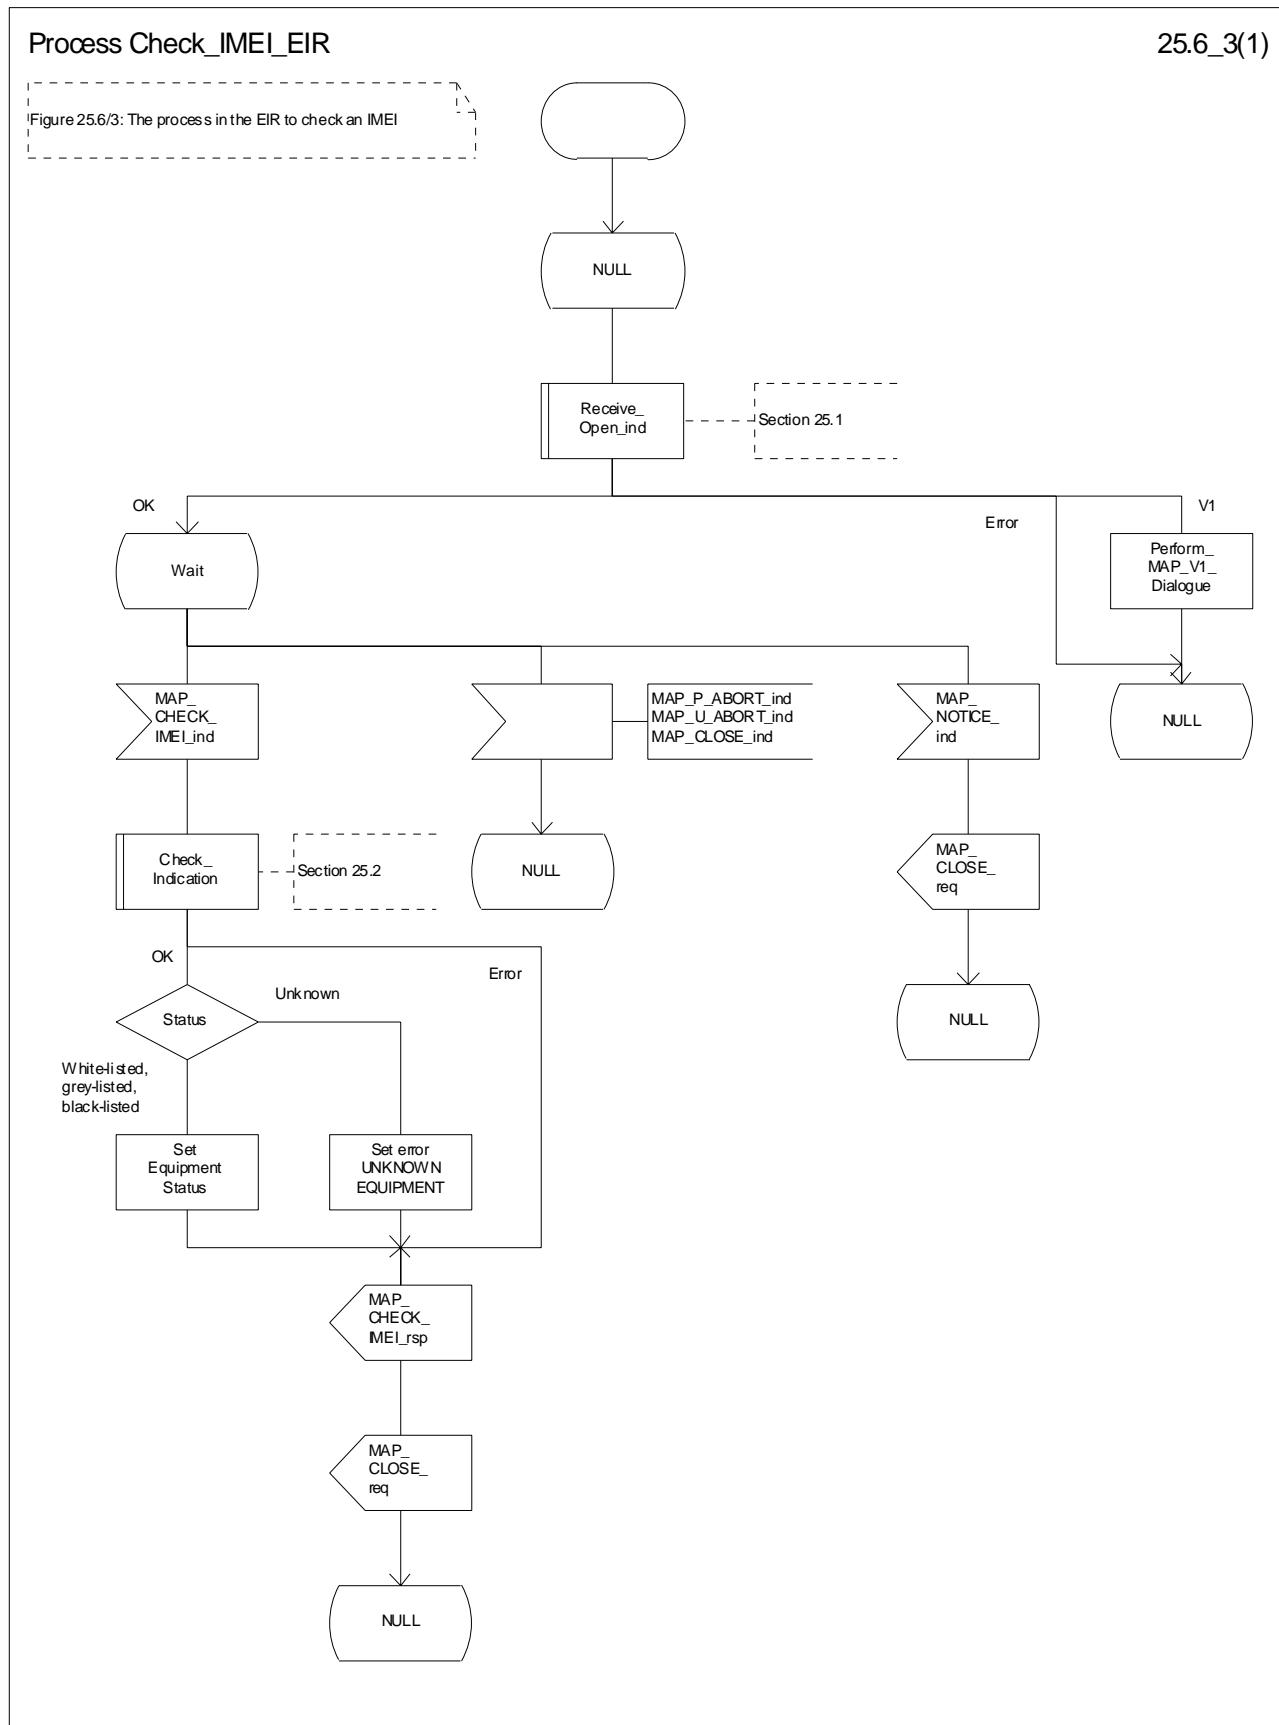


Figure 25.6/2: Process Check\_IMEI\_VLR

**Figure 25.6/3: Process Check\_IMEI\_EIR**

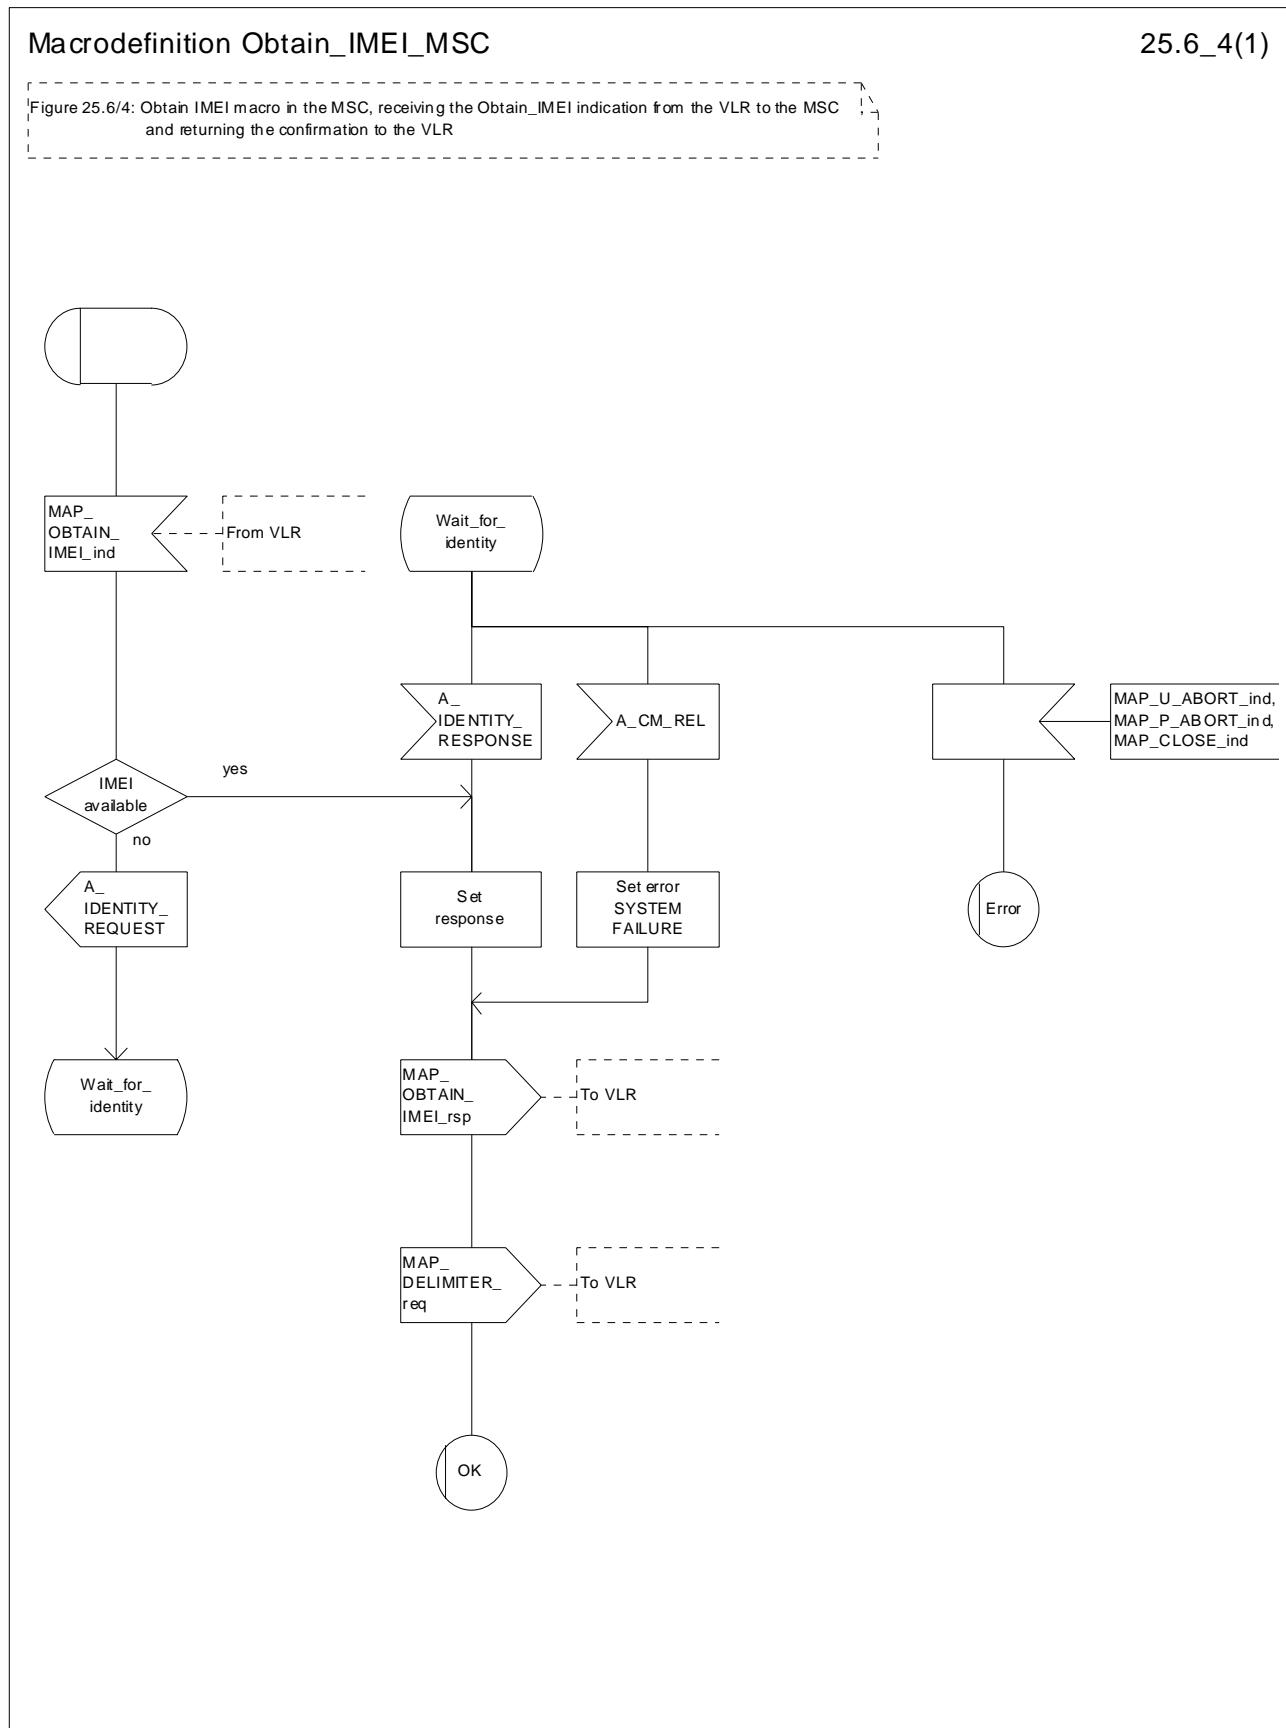
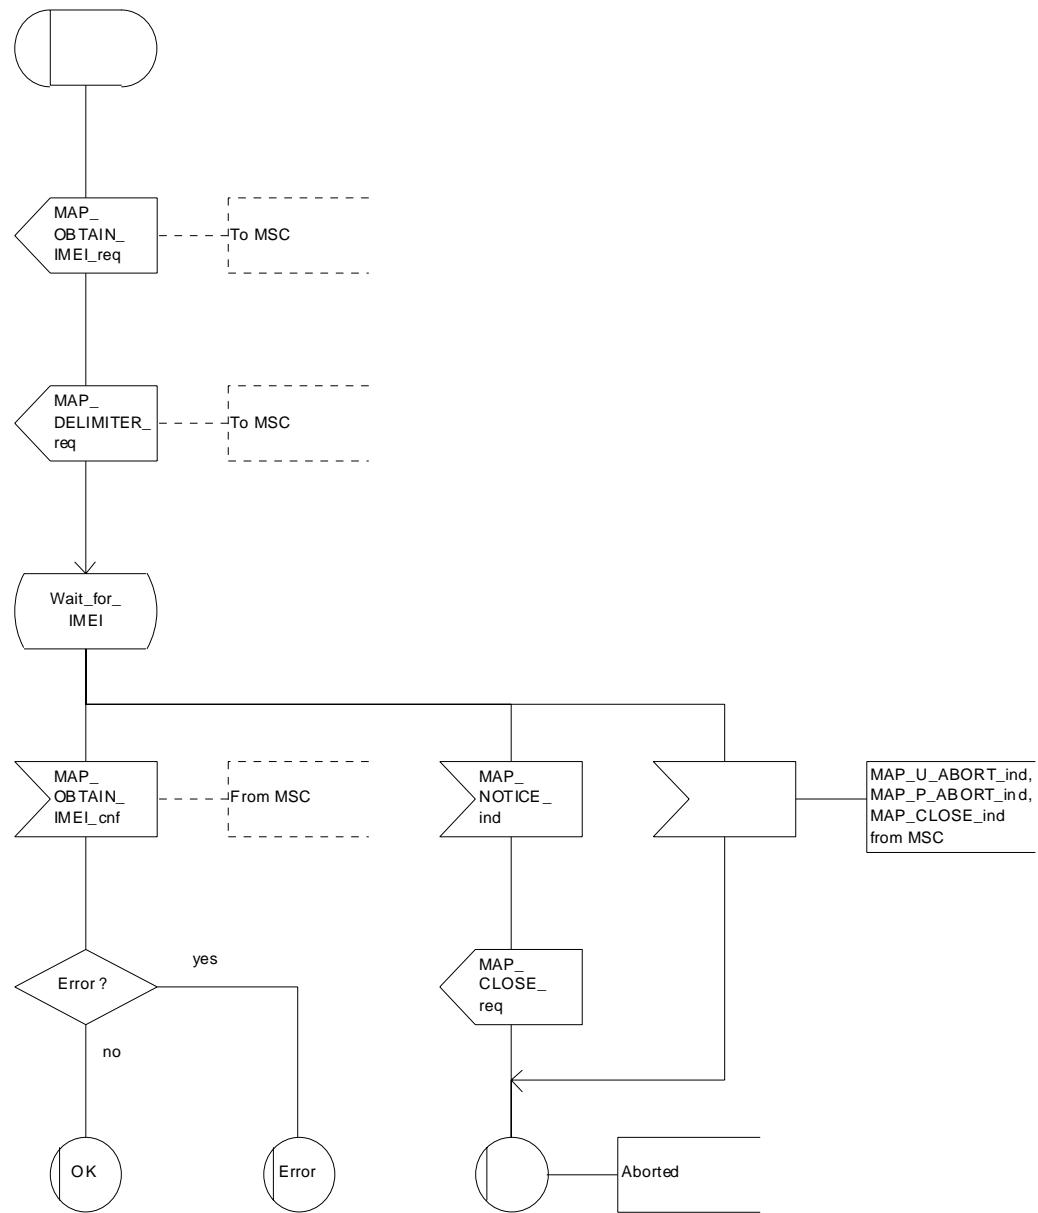


Figure 25.6/4: Process Obtain\_IMEI\_MSC

**Macrodefinition Obtain\_IMEI\_VLR** 25.6\_5(1)

Figure 25.6/5: Obtain IMEI macro in the VLR, controlling the request towards the MSC


**Figure 25.6/5: Process Obtain\_IMEI\_VLR**

## 25.6.6 Process Check\_IMEI\_SGSN

This process is used by the SGSN to control the check of a mobile equipment's IMEI. The process proceeds as follows:

- if the MS does not complete successfully the procedure, the "Error" exit of the macro is used;
- when the IMEI is known, a connection is set up towards the EIR, and a MAP\_CHECK\_IMEI service request is sent including the IMEI;
- if the opening of the dialogue fails, a System Failure is set. Otherwise, the SGSN waits for a response from the EIR;
- if a MAP\_CHECK\_IMEI service confirm including either:
  - the IMEI and the Equipment Status; or
  - an error;

is received, the SGSN checks whether the response requires that an alarm be generated on the Operation and Maintenance interface. The criteria for such alarms are PLMN operator dependent;

- the SGSN then checks whether the response from the EIR means that service is granted to the MS. The criteria for granting service depending on the equipment status or errors received in the MAP\_CHECK\_IMEI service response are also PLMN operator dependent;

If the dialogue with the EIR drops back to version 1, the result or error returned by the EIR is checked. The use of the "Check\_Confirmation" macro in the SDL diagram indicates that the checks carried out on the result returned by the EIR in a MAP v1 dialogue are functionally equivalent to those carried out on the parameters of the MAP\_CHECK\_IMEI confirm received from the EIR in a MAP v2 dialogue.

The process is described in figure 25.6/6.

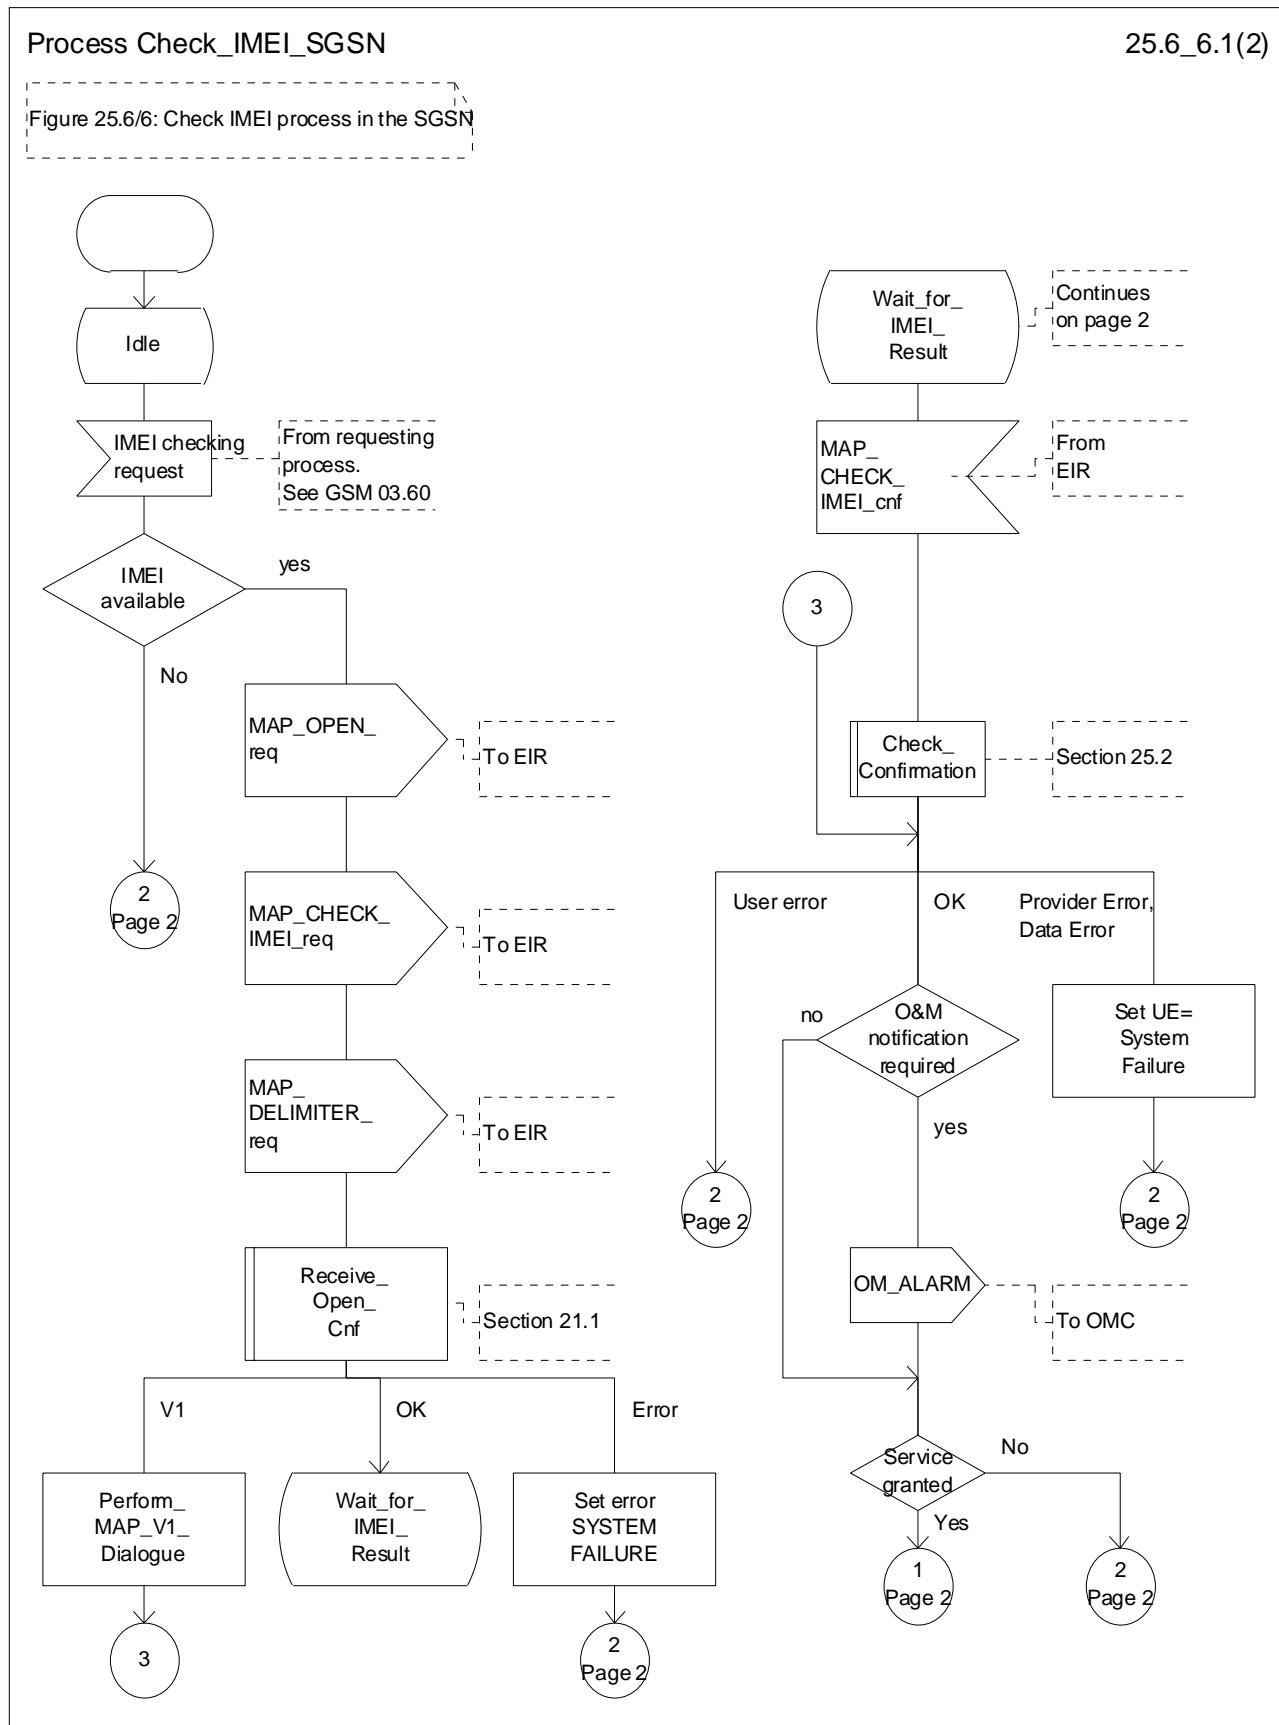


Figure 25.6/6 (sheet 1 of 2): Process Check\_IMEI\_SGSN

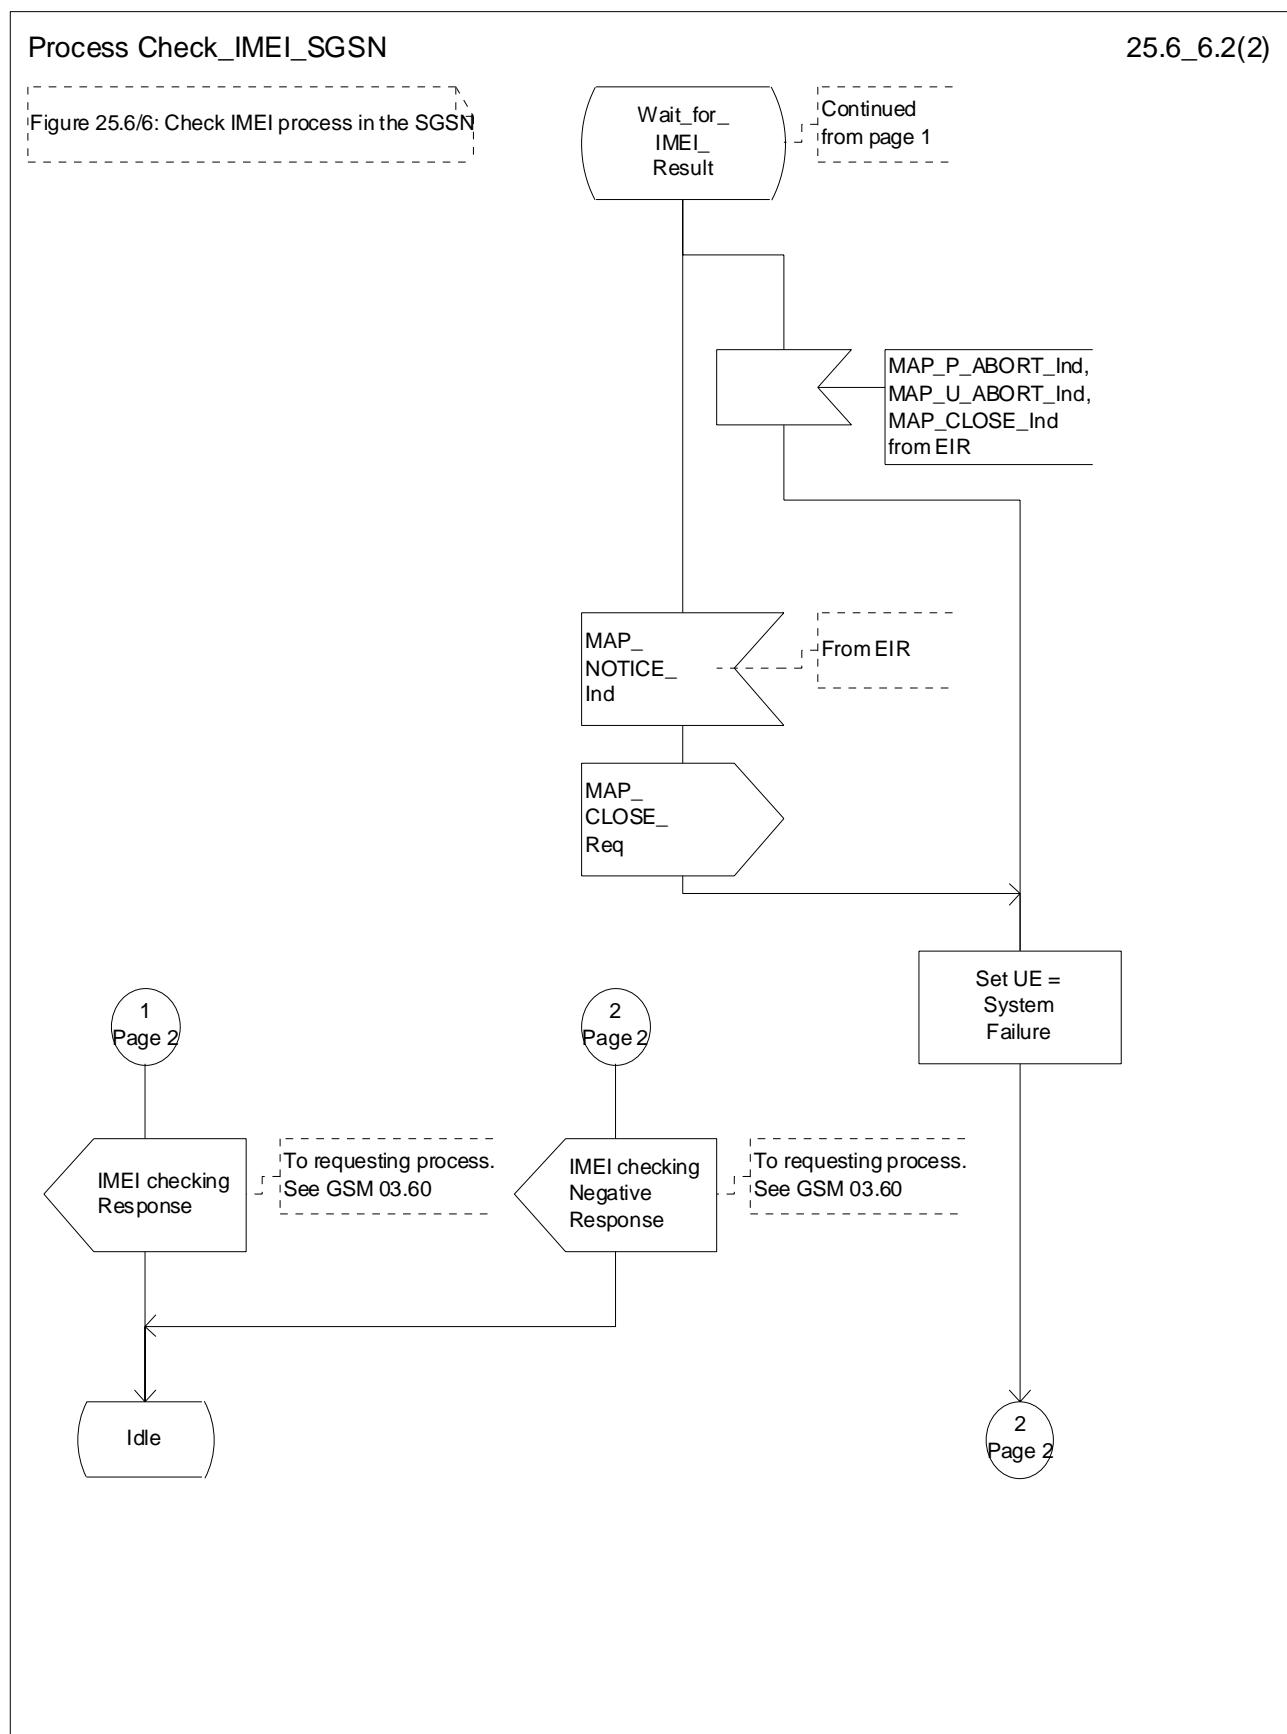


Figure 25.6/6 (sheet 2 of 2): Process Check\_IMEI\_SGSN

## 25.7 Insert Subscriber Data Macros


### 25.7.1 Macro Insert\_Subs\_Data\_VLR

This macro describes the reception of the InsertSubscriberData service indication. This macro is used by any procedure that triggers the reception of subscriber data (e.g. Update Location or Restore Data).

If the VLR does not support any basic or supplementary service or the network feature Operator Determined Barring, or there is a problem with Regional Subscription Data then it reports it to the HLR.

If the entire MSC area is restricted due to regional subscription this is reported to the HLR.

The SDL diagram is shown in figure 25.7/1.

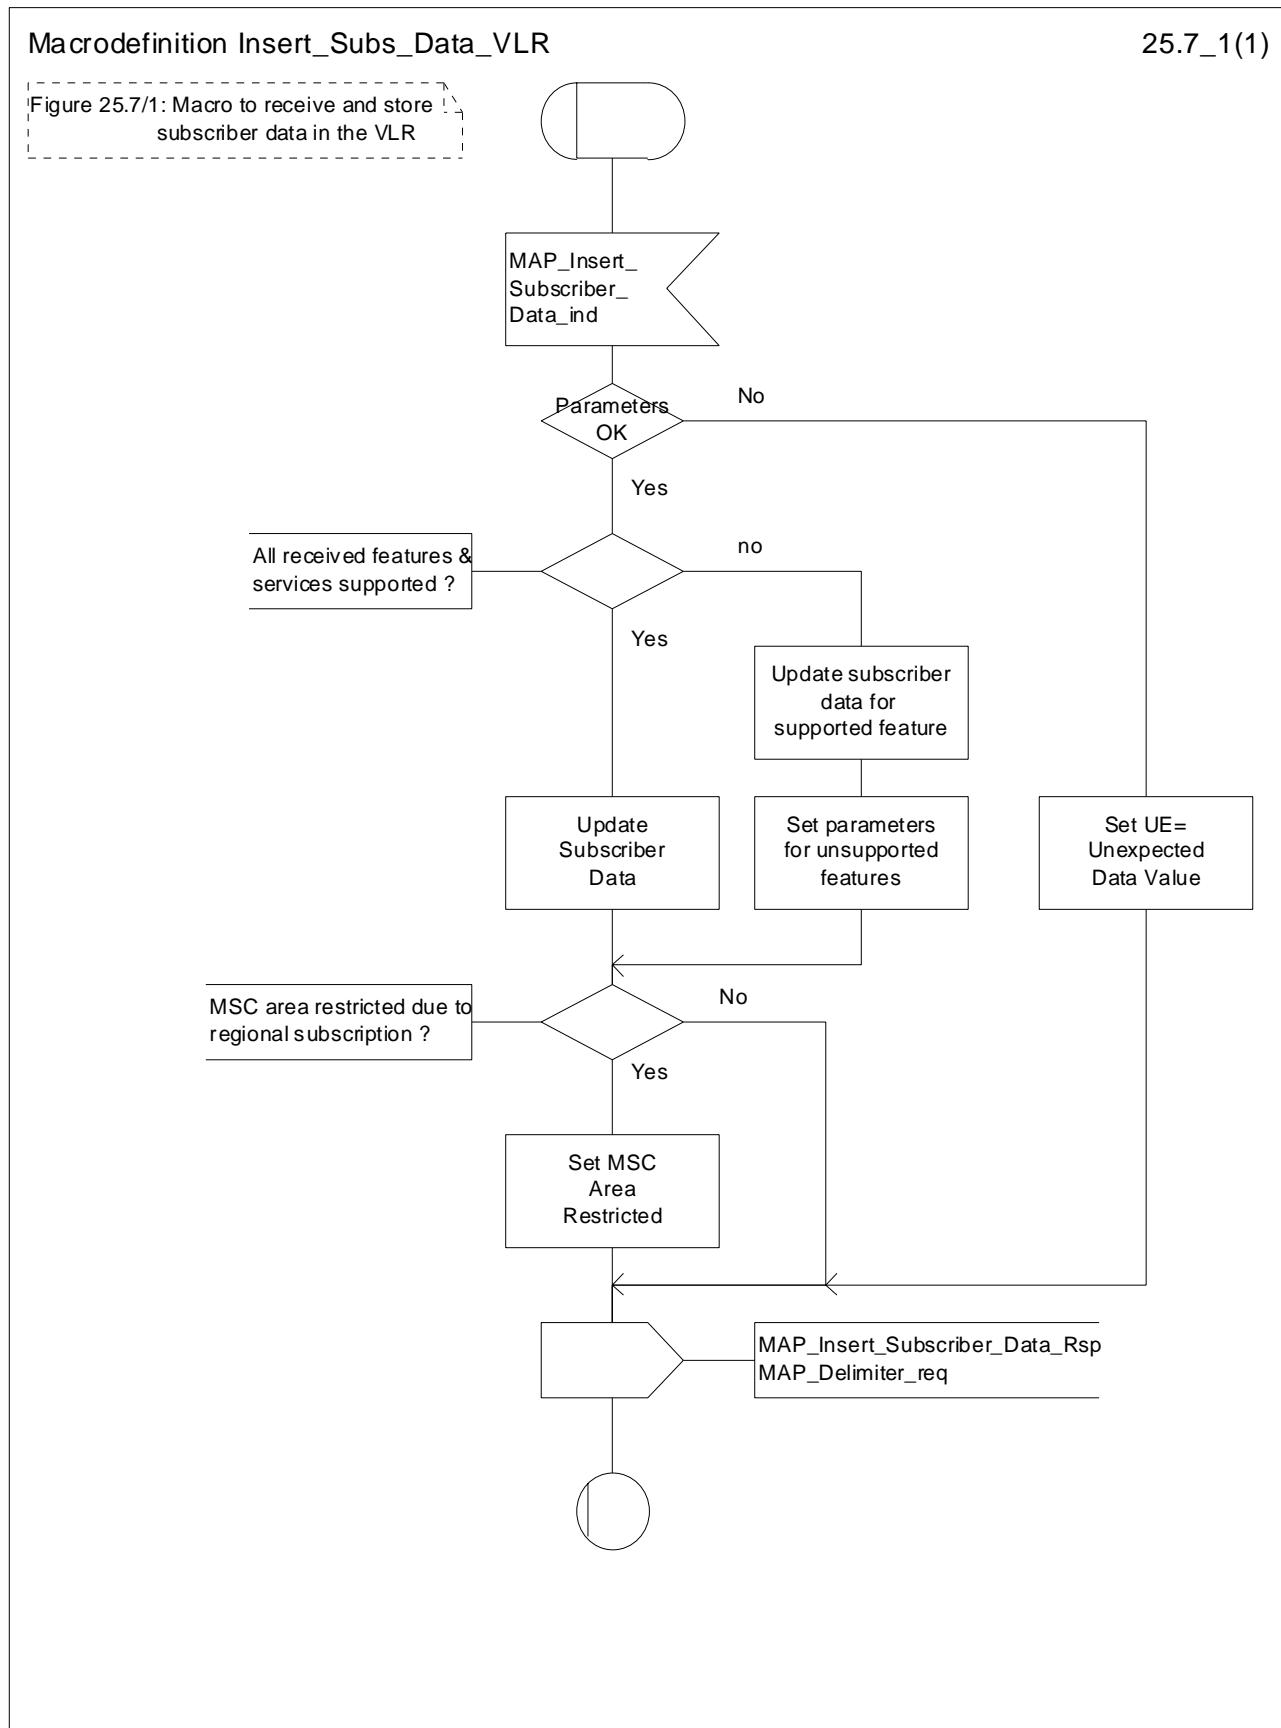**Figure 25.7/1: Macro Insert\_Subs\_Data\_VLR**

## 25.7.2 Process Insert\_Subs\_Data\_Stand\_Alone\_HLR

This process is used by HLR to transfer subscriber data to VLR or to SGSN in a stand alone mode, i.e. in its own dialogue. This is done whenever a change of subscriber data is performed either by the operator or by the subscriber and this change has to be reported to VLR or to SGSN.

The process, after opening the dialogue with VLR or with SGSN, sends as many requests of the InsertSubscriberData service as necessary to transfer the subscriber data. The call to the process "Send\_Insert\_Subs\_Data" (see clause 25.7.4) is meant to describe two possible behaviours of the HLR when more than one service request has to be sent:

- either the HLR handles the requests and the confirmations in parallel; or
- the HLR sends every request after receiving the confirmation to the previous one.

The macros "Wait\_for\_Insert\_Subs\_Data\_Cnf" and "Wait\_for\_Insert\_GPRS\_Subs\_Data\_Cnf" (see clauses 25.7.3 and 25.7.6) are also called in order to handle every single confirmation.

If the result of a primitive received from the VLR or from the SGSN is unsuccessful, the HLR may initiate re-attempts; the number of repeat attempts and the time in between are HLR operator options, depending on the error returned by the VLR or by the SGSN.

If certain services required for a subscriber are not supported by the VLR or by the SGSN (e.g. Advice of Charge Charging Level), this may result in one of the following outcomes:

- the HLR stores and sends "Roaming Restriction Due To Unsupported Feature" in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. If "Roaming Restriction Due To Unsupported Feature" is stored in the HLR, the "MSC Area Restricted Flag" shall be set to "restricted". This will prevent MT calls, MT SM and MT USSD from being forwarded to the MSC/VLR.
- the HLR stores and sends other induced subscriber data (e.g. a specific barring program) in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. This will cause rejection of mobile originated service requests, except emergency calls.
- the HLR stores and sends "Roaming Restricted In SGSN Due To Unsupported Feature" in a subsequent MAP\_INSERT\_SUBSCRIBER\_DATA service. If "Roaming Restricted In SGSN Due To Unsupported Feature" is stored in the HLR, the "SGSN Area Restricted Flag" shall be set to "restricted". This will prevent MT SM from being forwarded to the SGSN and Network Requested PDP-Context activation.

When the VLR receives regional subscription data (Zone Code List) it may respond with "MSC Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response. In this case the "MSC Area Restricted Flag" shall be set to "restricted" in the HLR. This will prevent MT calls, MT SM and MT USSD from being forwarded to the MSC/VLR.

When the SGSN receives regional subscription data (Zone Code List) it may respond with "SGSN Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response. In this case the "SGSN Area Restricted Flag" shall be set to "restricted" in the HLR. This will prevent MT SM from being forwarded to the SGSN and Network Requested PDP-Context activation.

If subscriber data for CAMEL Phase 2 or 3 services are sent to a VLR which does not support CAMEL Phase 2 or 3, the service behaviour may be unpredictable or incorrect. The HLR therefore needs to ensure that at the conclusion of a stand alone Insert Subscriber data procedure that the data in the VLR do not require a capability that the VLR does not have. Possible mechanisms to ensure this are described in 3GPP TS 23.078.

The HLR should send a Forwarded-to number which is not in E.164 international format to the VLR only when the HLR has ascertained that the VLR supports CAMEL Phase 2 or 3. Thus, the ISD message containing the Forwarded-to number which is not in E.164 international format shall be sent to the VLR only if the HLR previously received confirmation from the VLR at Location Update that CAMEL Phase 2 or 3 is supported.


A Forwarded-to number in non-international E.164 format shall only be sent from an HLR to a VLR if the VLR supports CAMEL Phase 2, or a subsequent version of CAMEL.

If the HLR does not store "Roaming Restriction Due To Unsupported Feature" as a consequence of the stand alone Insert Subscriber Data procedure and the HLR does not receive "MSC Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response and "Roaming Restriction Due To Unsupported Feature" has not been stored in the HLR in the course of a previous subscriber data retrieval procedure, the "MSC Area Restricted Flag" in the HLR shall be set to "not restricted".

If the HLR does not store "Roaming Restricted In SGSN Due To Unsupported Feature" as a consequence of the stand alone Insert Subscriber Data procedure and the HLR does not receive "SGSN Area Restricted" in the MAP\_INSERT\_SUBSCRIBER\_DATA response and "Roaming Restricted In SGSN Due To Unsupported Feature" has not been stored in the HLR in the course of a previous subscriber data retrieval procedure, the "SGSN Area Restricted Flag" in the HLR shall be set to "not restricted".

The SDL diagram of process between HLR and VLR is shown in figure 25.7/2;

The SDL diagram of process between HLR and SGSN is shown in figure 25.7/5.

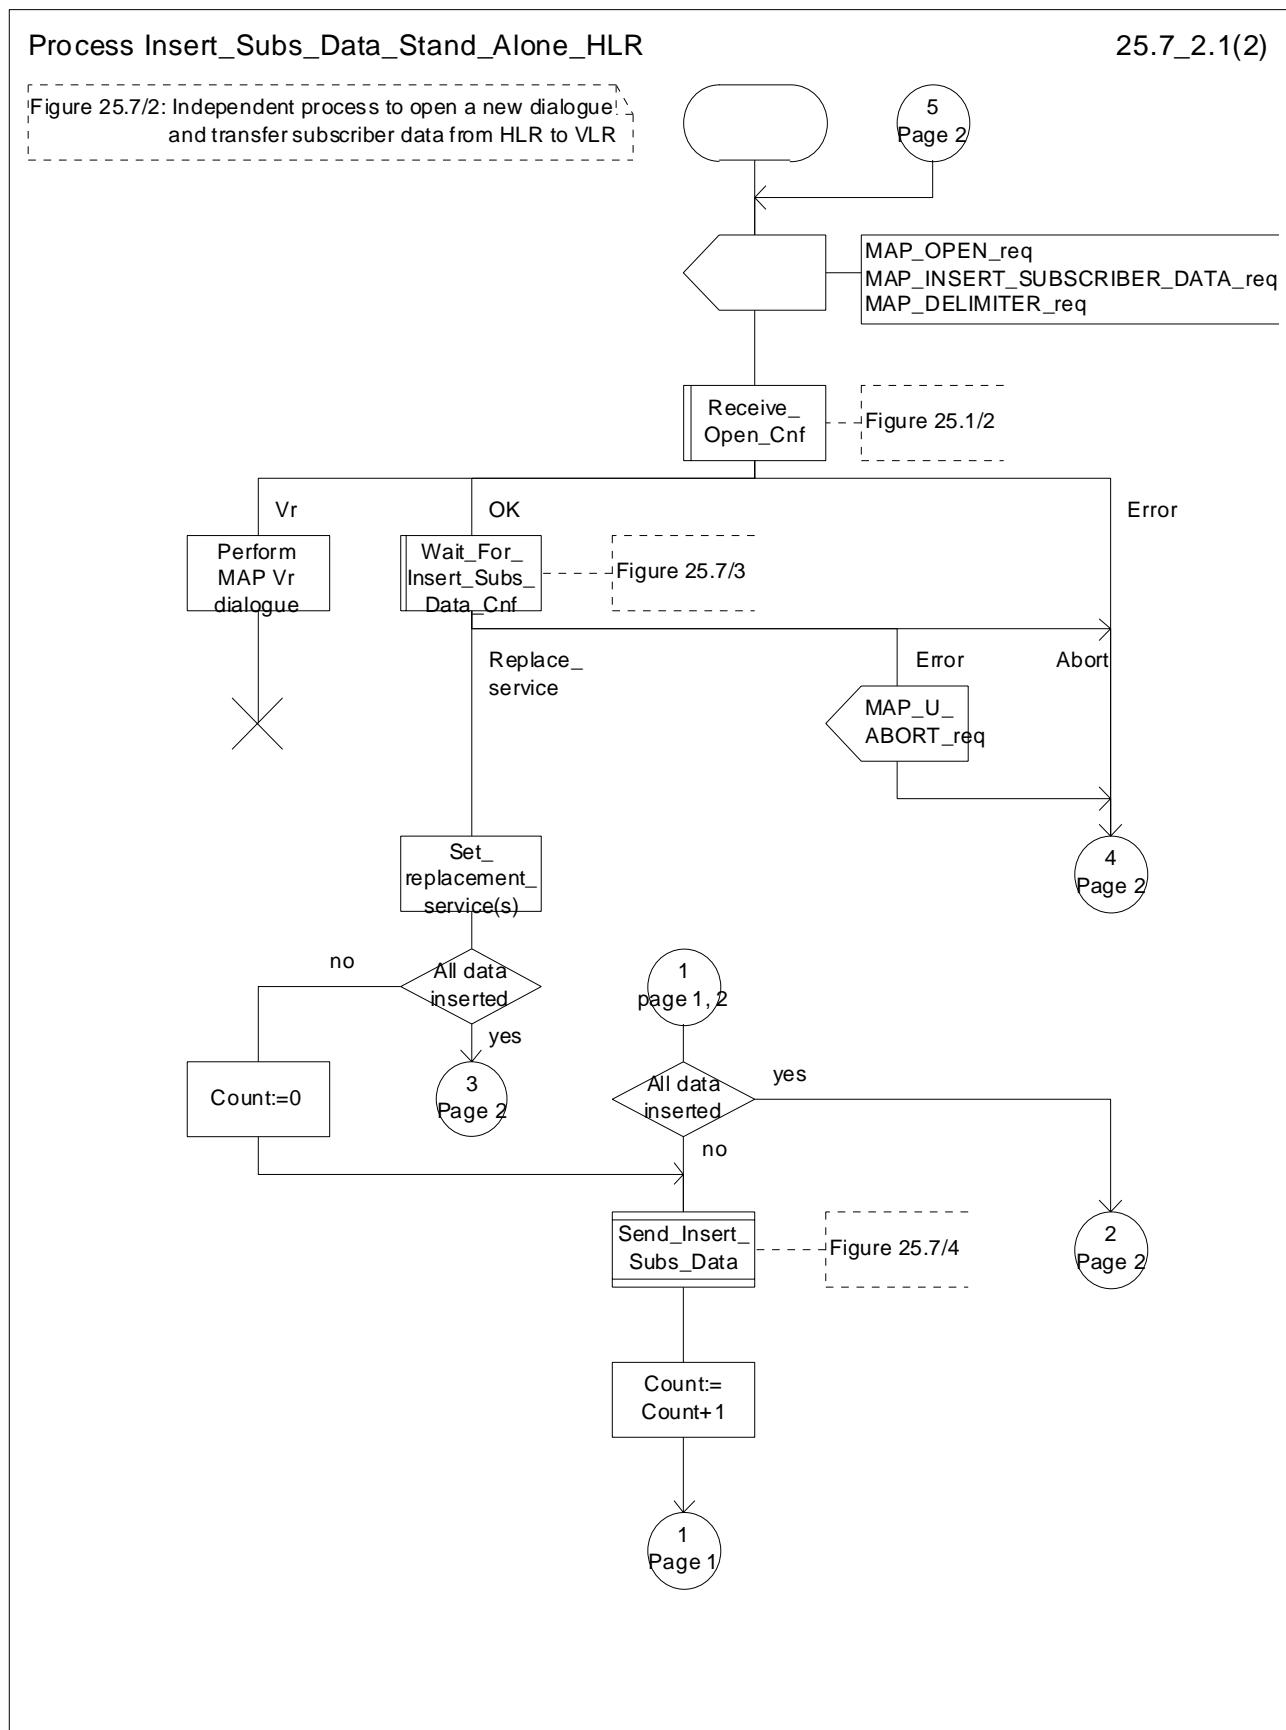**Figure 25.7/2 (sheet 1 of 2): Process Insert\_Subs\_Data\_Stand\_Alone\_HLR**

## Process Insert\_Subs\_Data\_Stand\_Alone\_HLR

25.7\_2.2(2)

Figure 25.7/2: Independent process to open a new dialogue and transfer subscriber data from HLR to VLR

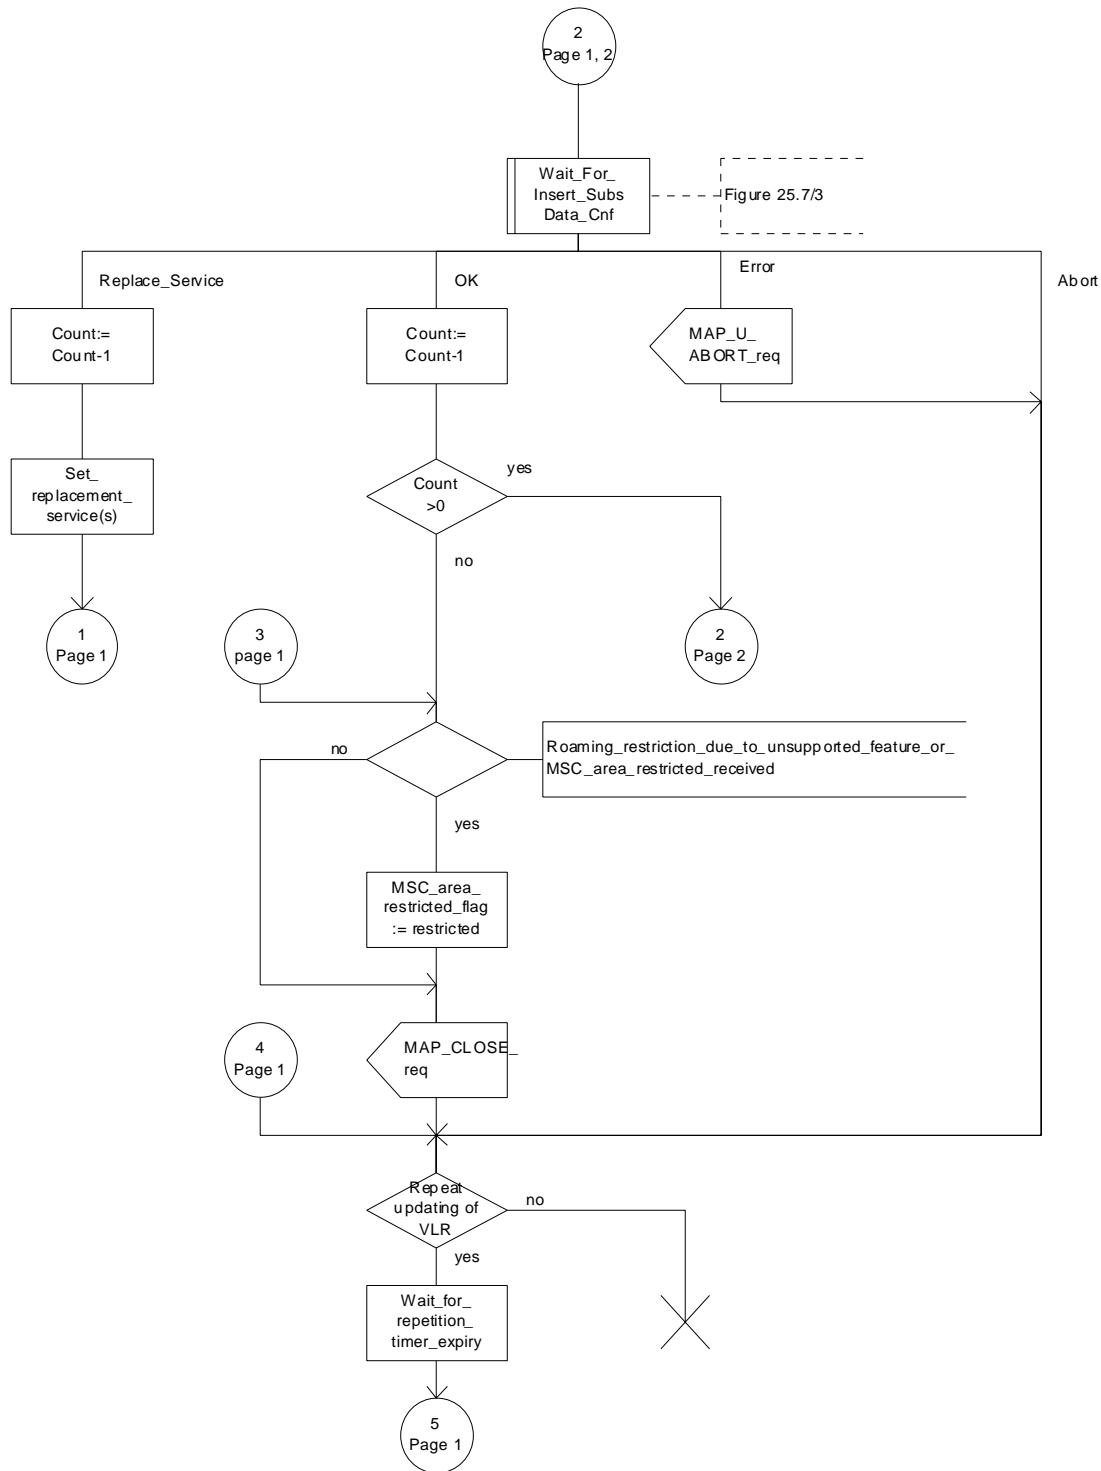


Figure 25.7/2 (sheet 2 of 2): Process Insert\_Subs\_Data\_Stand\_Alone\_HLR

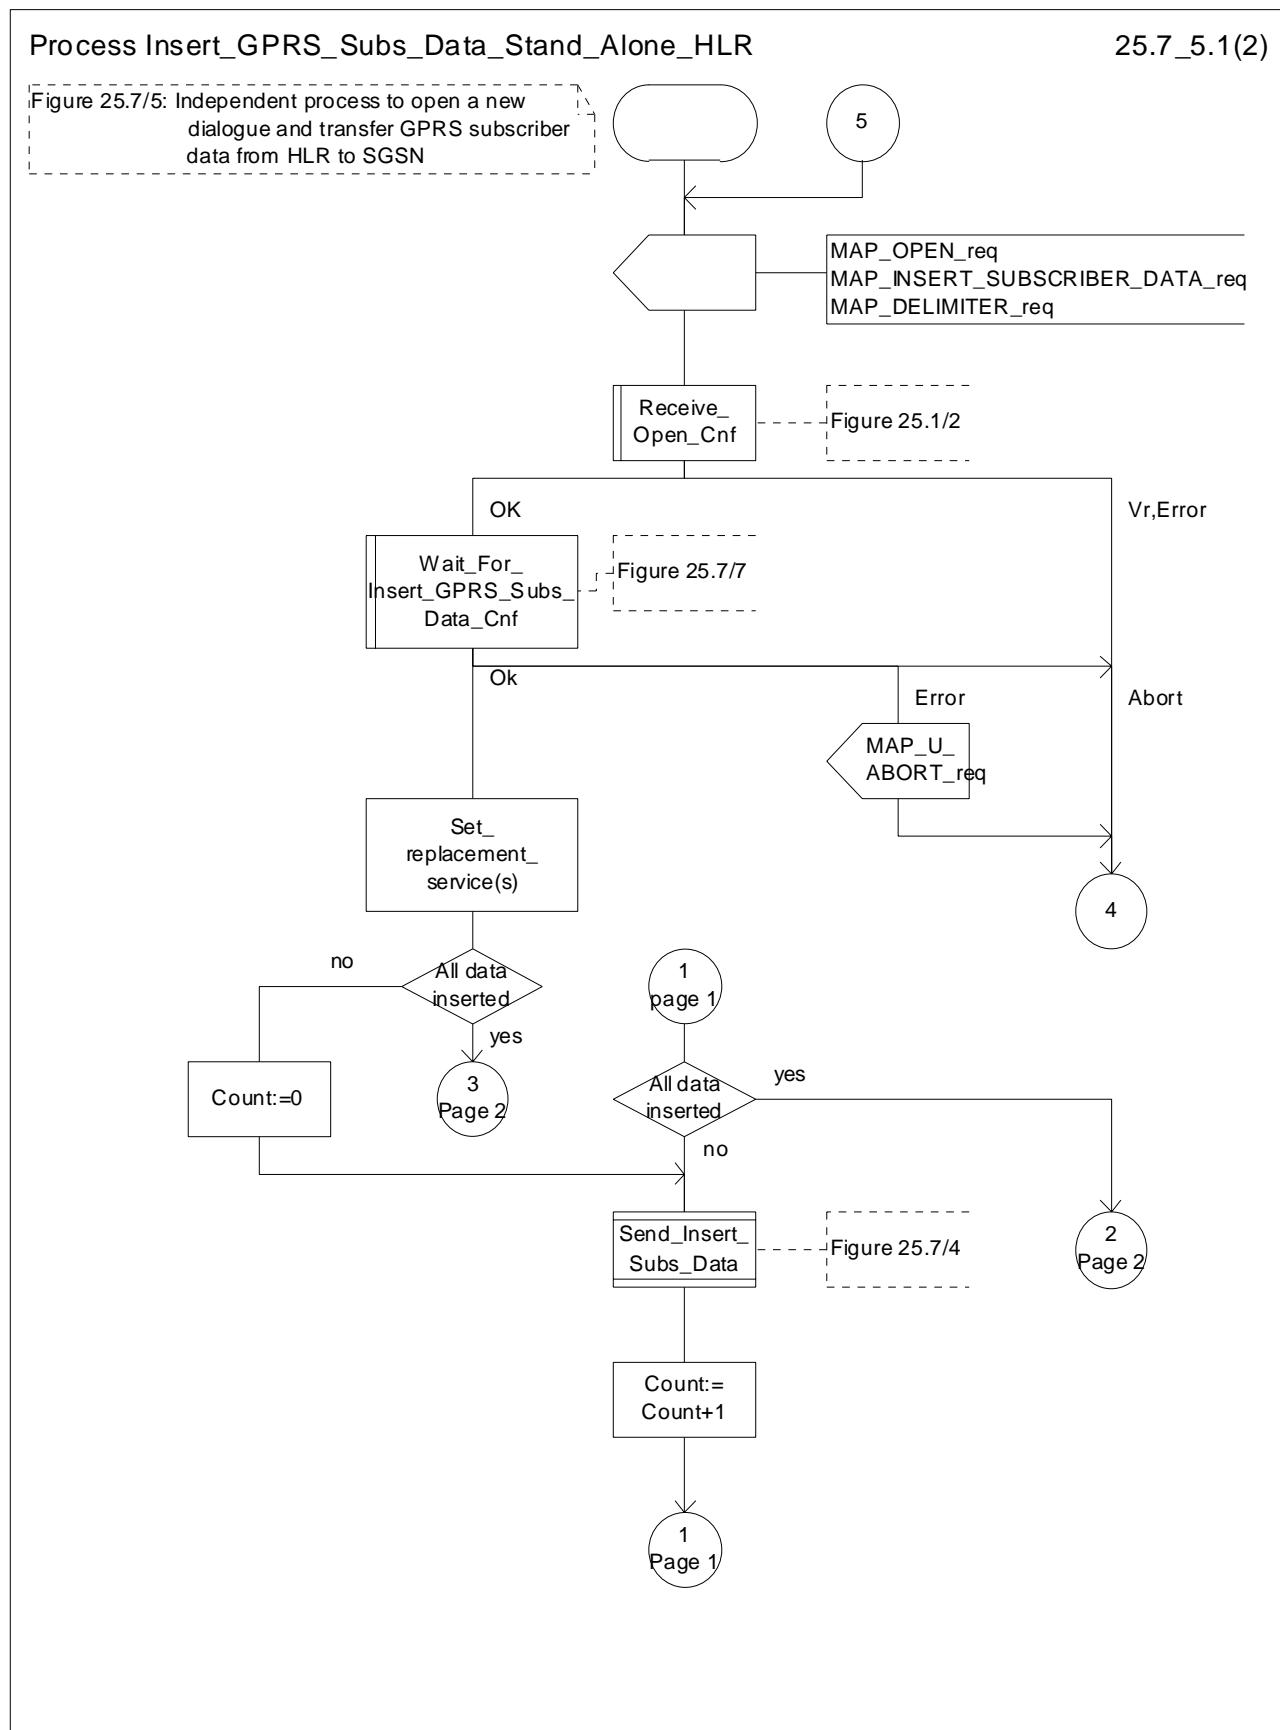


Figure 25.7/5 (sheet 1 of 2): Process Insert\_GPRS\_Subs\_Data\_Stand\_Alone\_HLR

Process Insert\_GPRS\_Subs\_Data\_Stand\_Alone\_HLR 25.7\_5.2(2)

Figure 25.7/5: Independent process to open a new dialogue and transfer GPRS subscriber data from HLR to SGSN

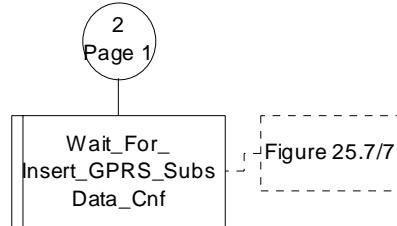


Figure 25.7/7

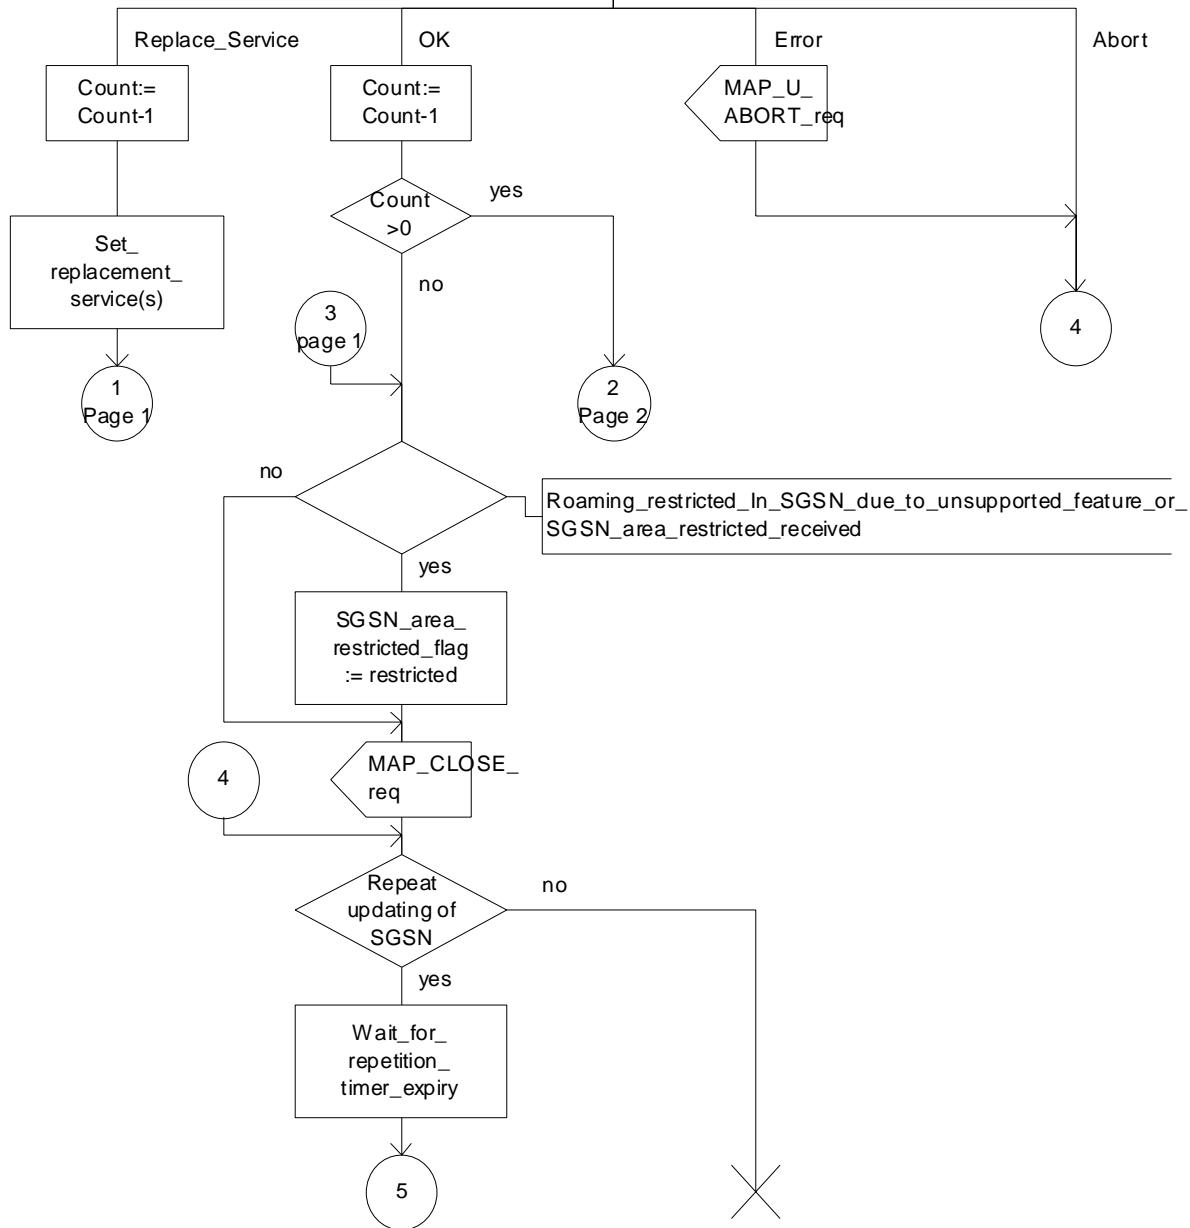


Figure 25.7/5 (sheet 2 of 2): Process Insert\_GPRS\_Subs\_Data\_Stand\_Alone\_HLR

### 25.7.3 Macro Wait\_for\_Insert\_Subs\_Data\_Cnf

This macro is used by any process or macro that describes the handling of the reception of the Insert\_Subscriber\_Data service in HLR that is coming from VLR (e.g. Update Location or Restore Data).

If the VLR reports the non-support of some basic or supplementary service or the network feature Operator Determined Barring then three actions are possible:

- to ignore the information received;
- to replace the not supported service;
- or to perform any other internal action.

The SDL diagram is shown in figure 25.7/3.


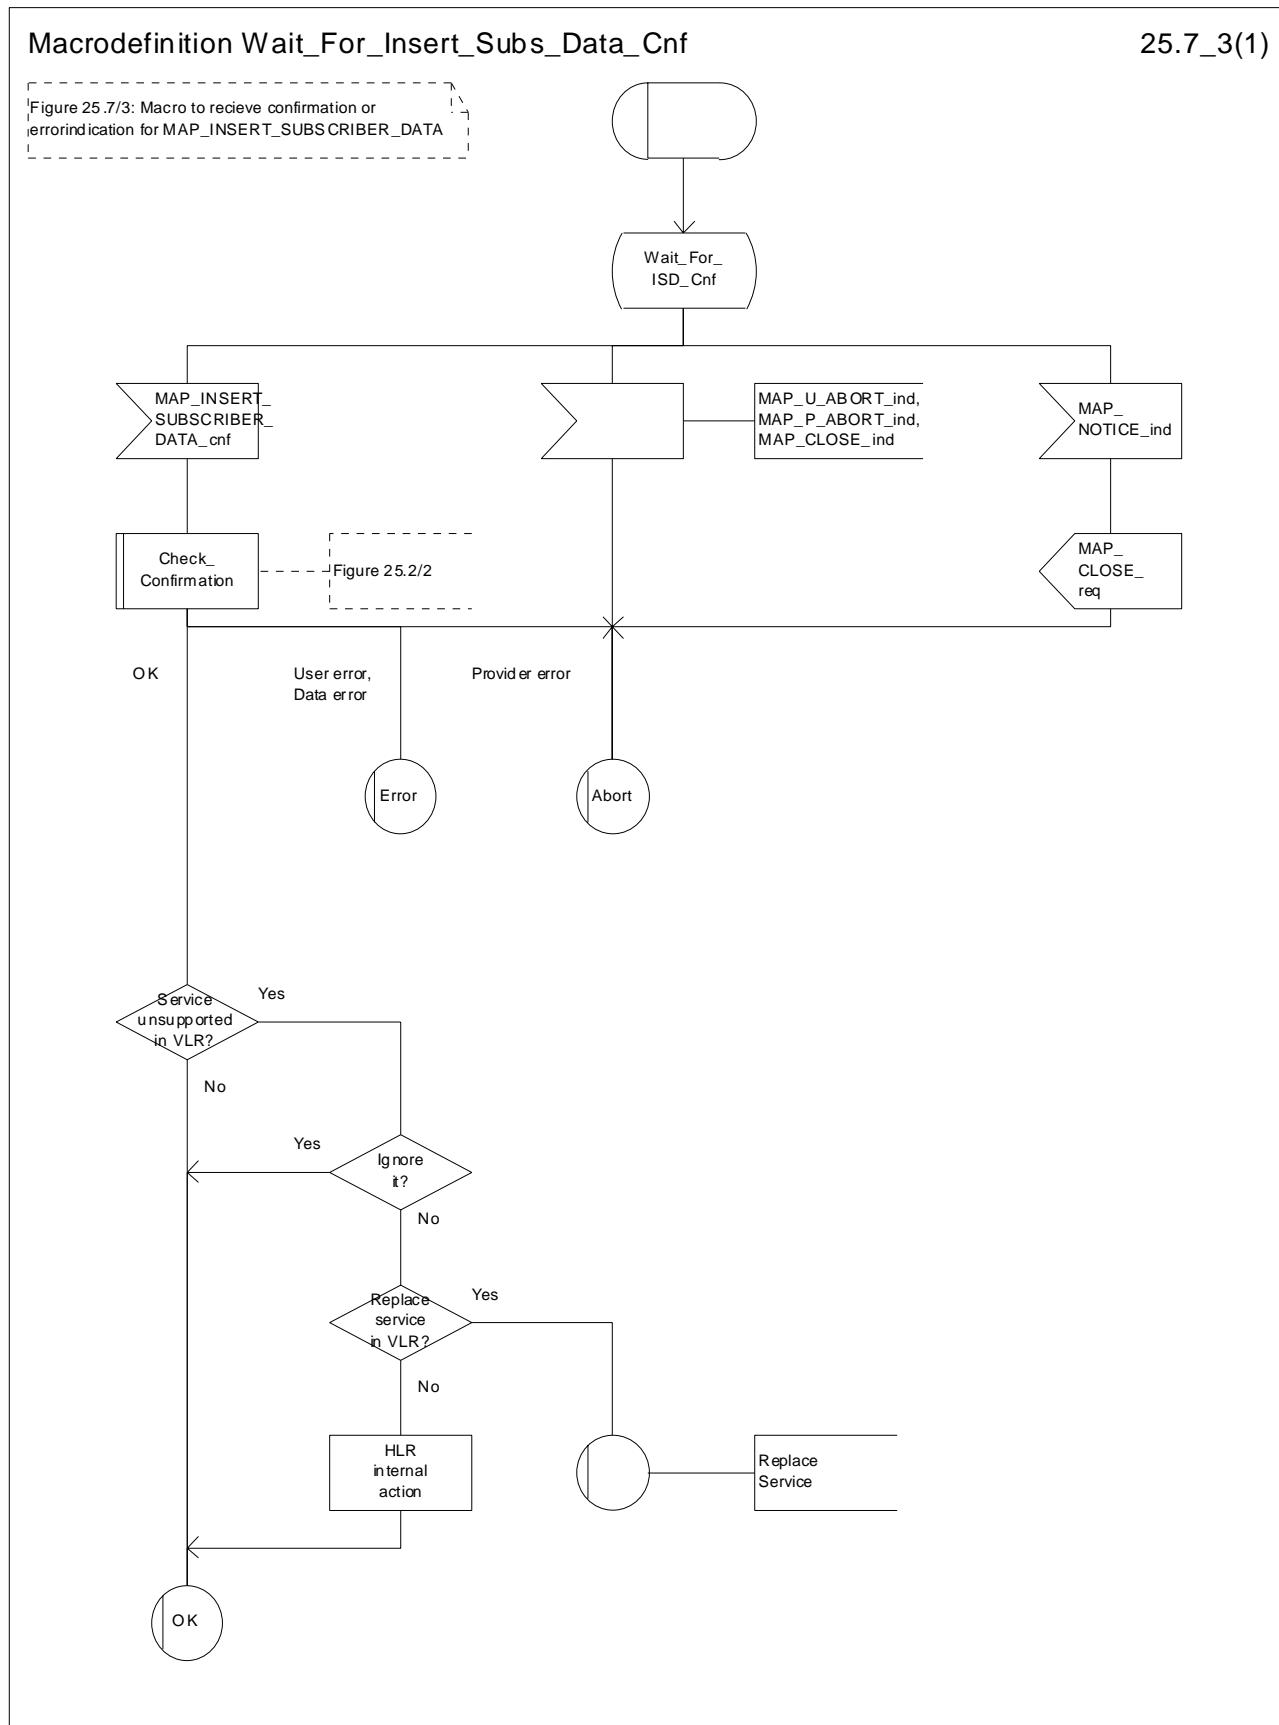


Figure 25.7/3: Macro Wait\_for\_Insert\_Subs\_Data\_Cnf

### 25.7.4 Process Send\_Insert\_Subs\_Data

This process is used by any process or macro where the Insert\_Subscriber\_Data request is sent to VLR or to SGSN.

The SDL diagram is shown in figure 25.7/4.

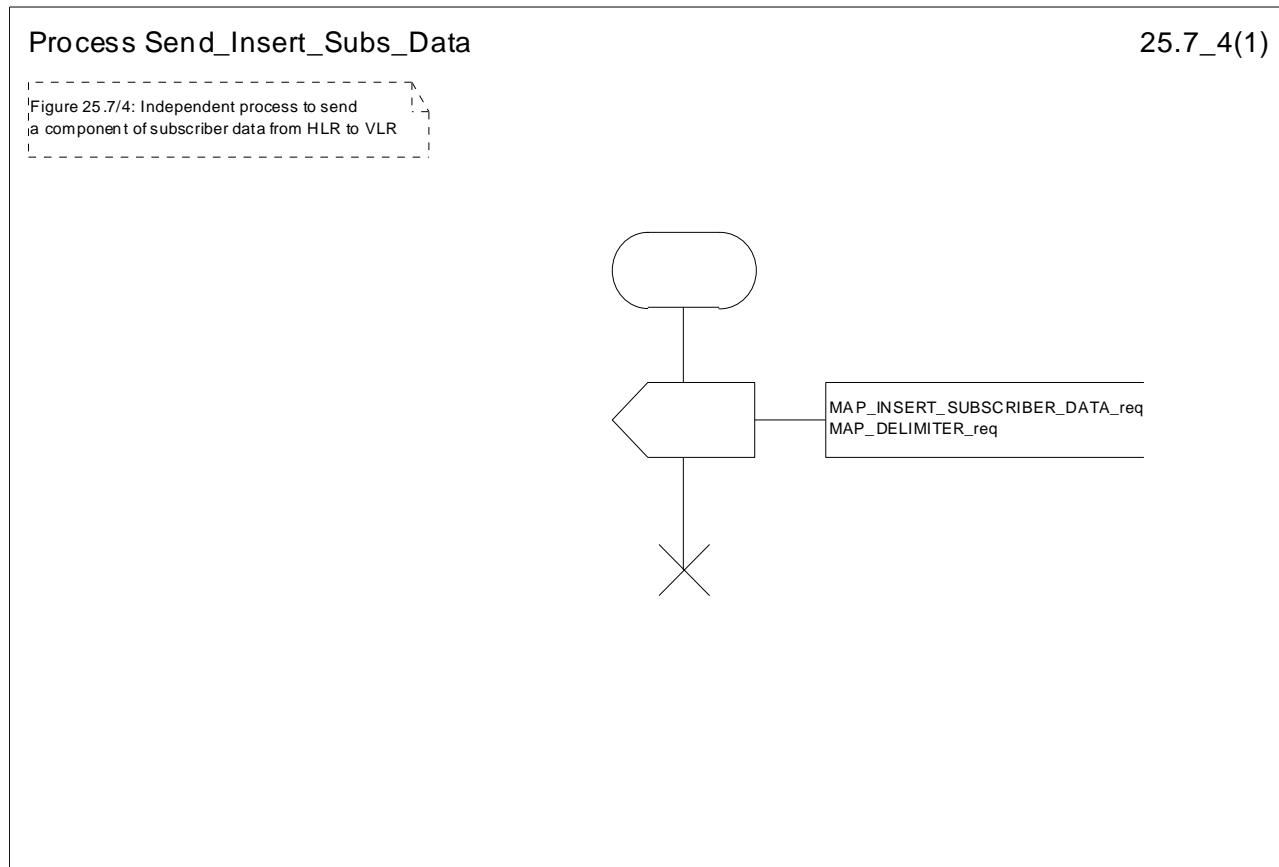

**Figure 25.7/4: Process Send\_Insert\_Subs\_Data**


### 25.7.5 Macro Insert\_Subs\_Data\_SGSN

This macro describes the reception of the InsertSubscriberData service indication. This macro is used by any procedure that triggers the reception of subscriber data (e.g. Update GPRS Location ).

If the SGSN does not support any basic or the network feature Operator Determined Barring, or there is a problem with Regional Subscription Data then it reports it to the HLR.

If the entire SGSN area is restricted due to regional subscription this is reported to the HLR.

The SDL diagram is shown in figure 25.7/6.

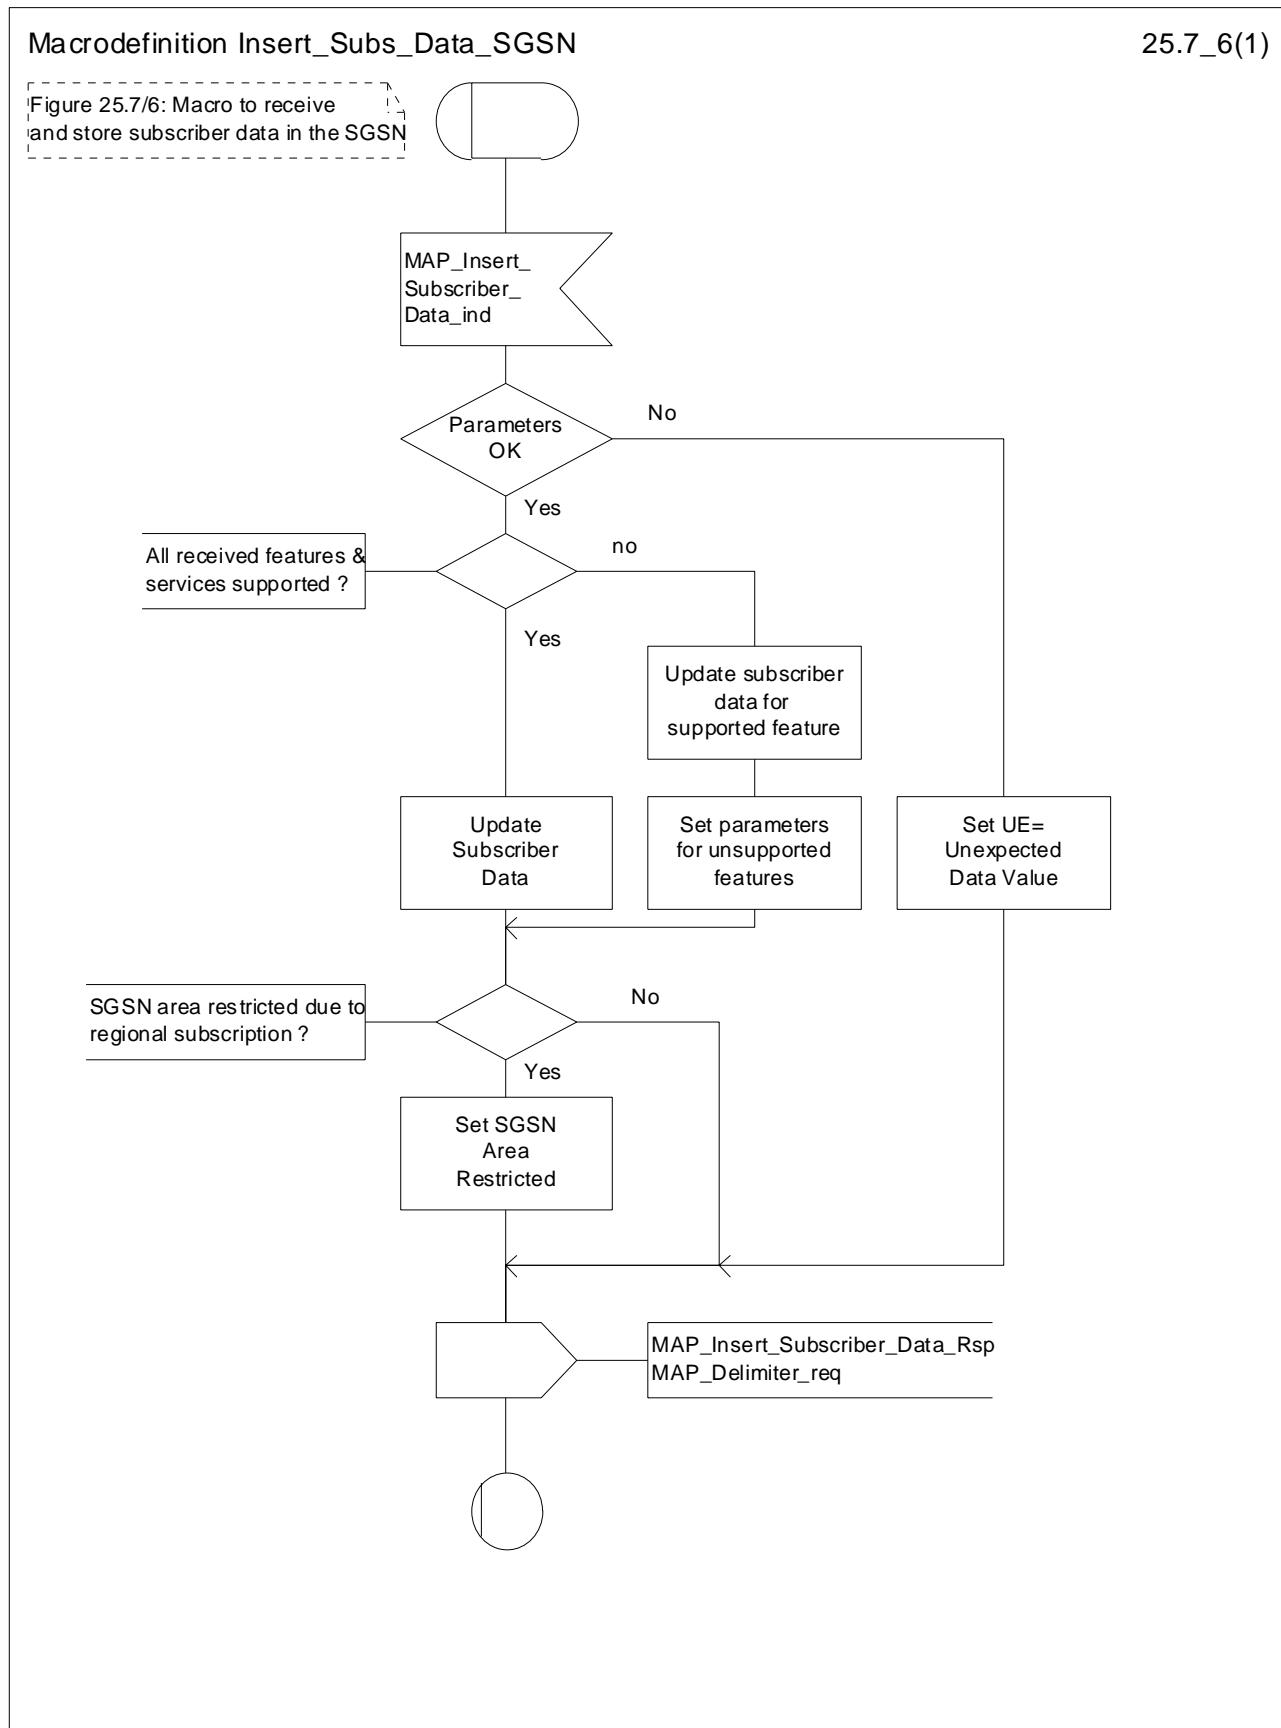**Figure 25.7/6: Macro Insert\_Subs\_Data\_SGSN**

## 25.7.6 Macro Wait\_for\_Insert\_GPRS\_Subs\_Data\_Cnf

This macro is used by any process or macro that describes the handling of the reception of the Insert\_Subscriber\_Data service in HLR that is coming from SGSN (e.g. Update GPRS Location).

If the SGSN reports the non-support of some basic or the network feature Operator Determined Barring then three actions are possible:

- to ignore the information received;
- to replace the not supported service;
- or to perform any other internal action.

The SDL diagram is shown in figure 25.7/7.

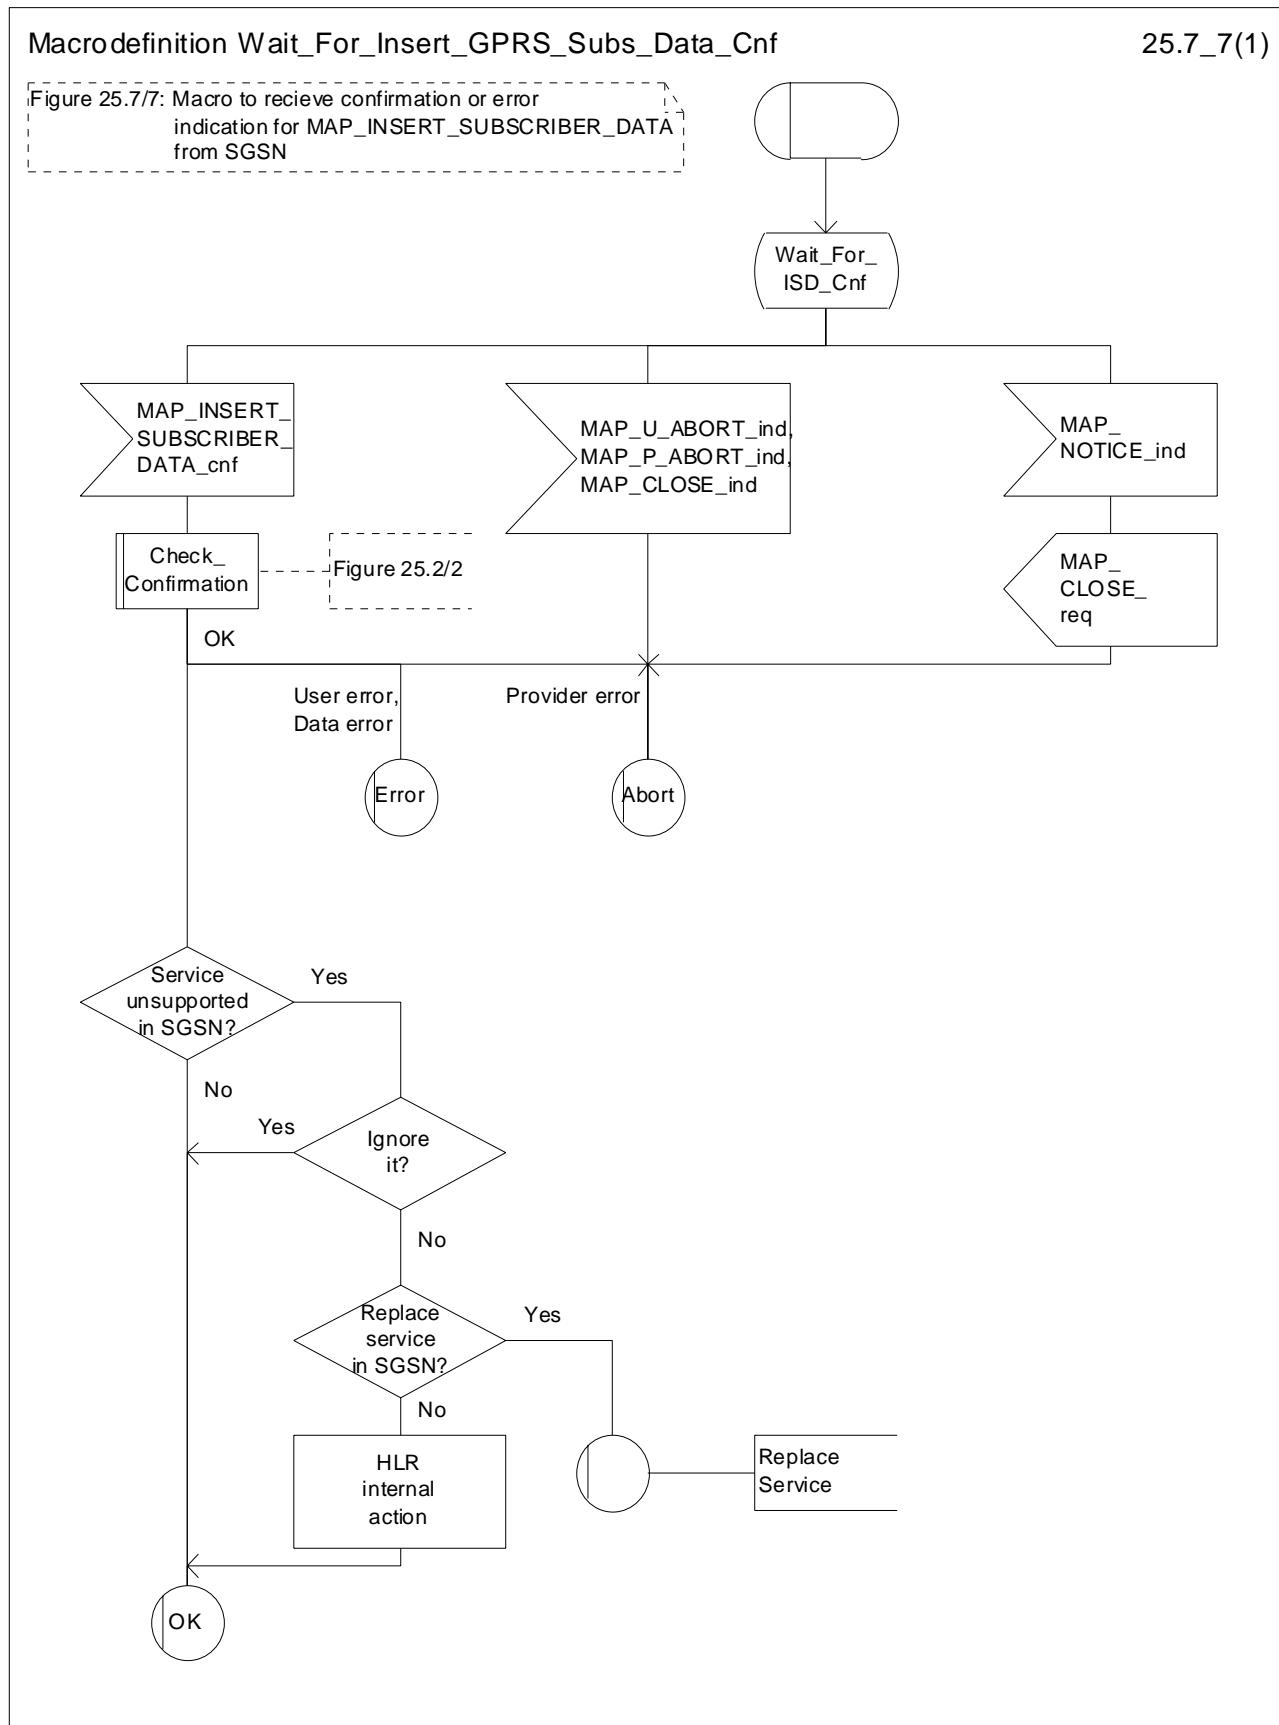



Figure 25.7/7: Macro Wait\_for\_Insert\_GPRS\_Subs\_Data\_Cnf

## 25.8 Request IMSI Macros

### 25.8.1 Macro Obtain\_IMSI\_MSC

This macro describes the handling of the request received from the VLR to provide the IMSI of a subscriber (e.g. at Location Updating).

The SDL diagram is shown in figure 25.8/1.

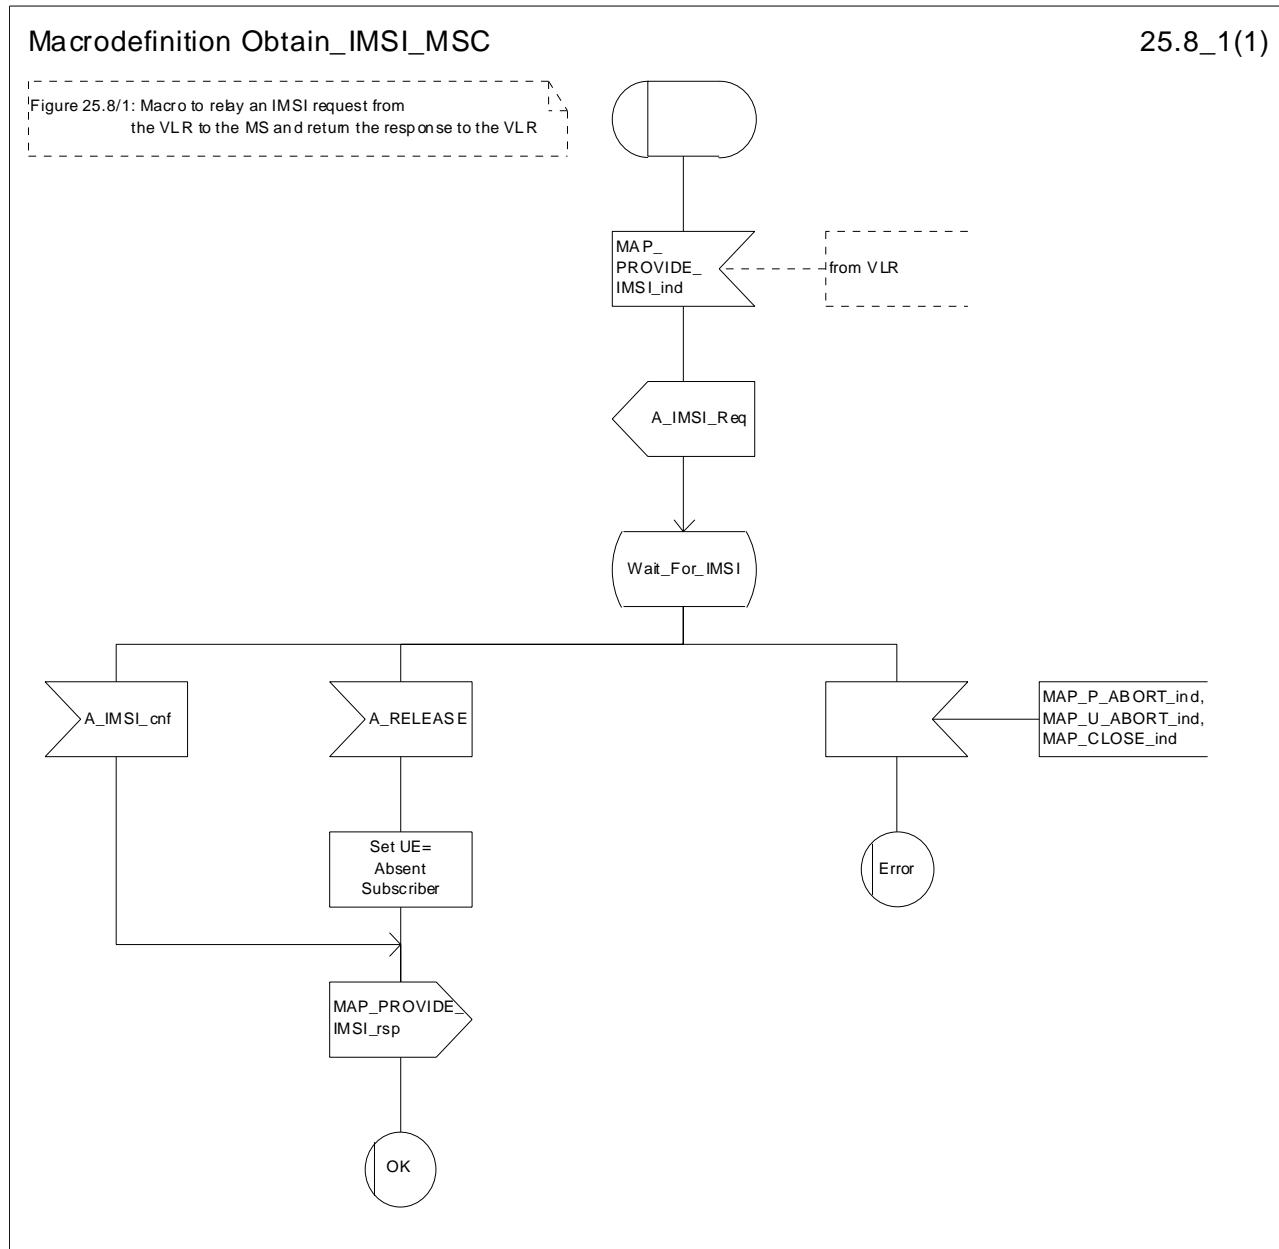


**Figure 25.8/1: Macro Obtain\_IMSI\_MSC**

### 25.8.2 Macro Obtain\_IMSI\_VLR

This macro describes the way VLR requests the MSC the IMSI of a subscriber (e.g. at Location Updating).

The SDL diagram is shown in figure 25.8/2.

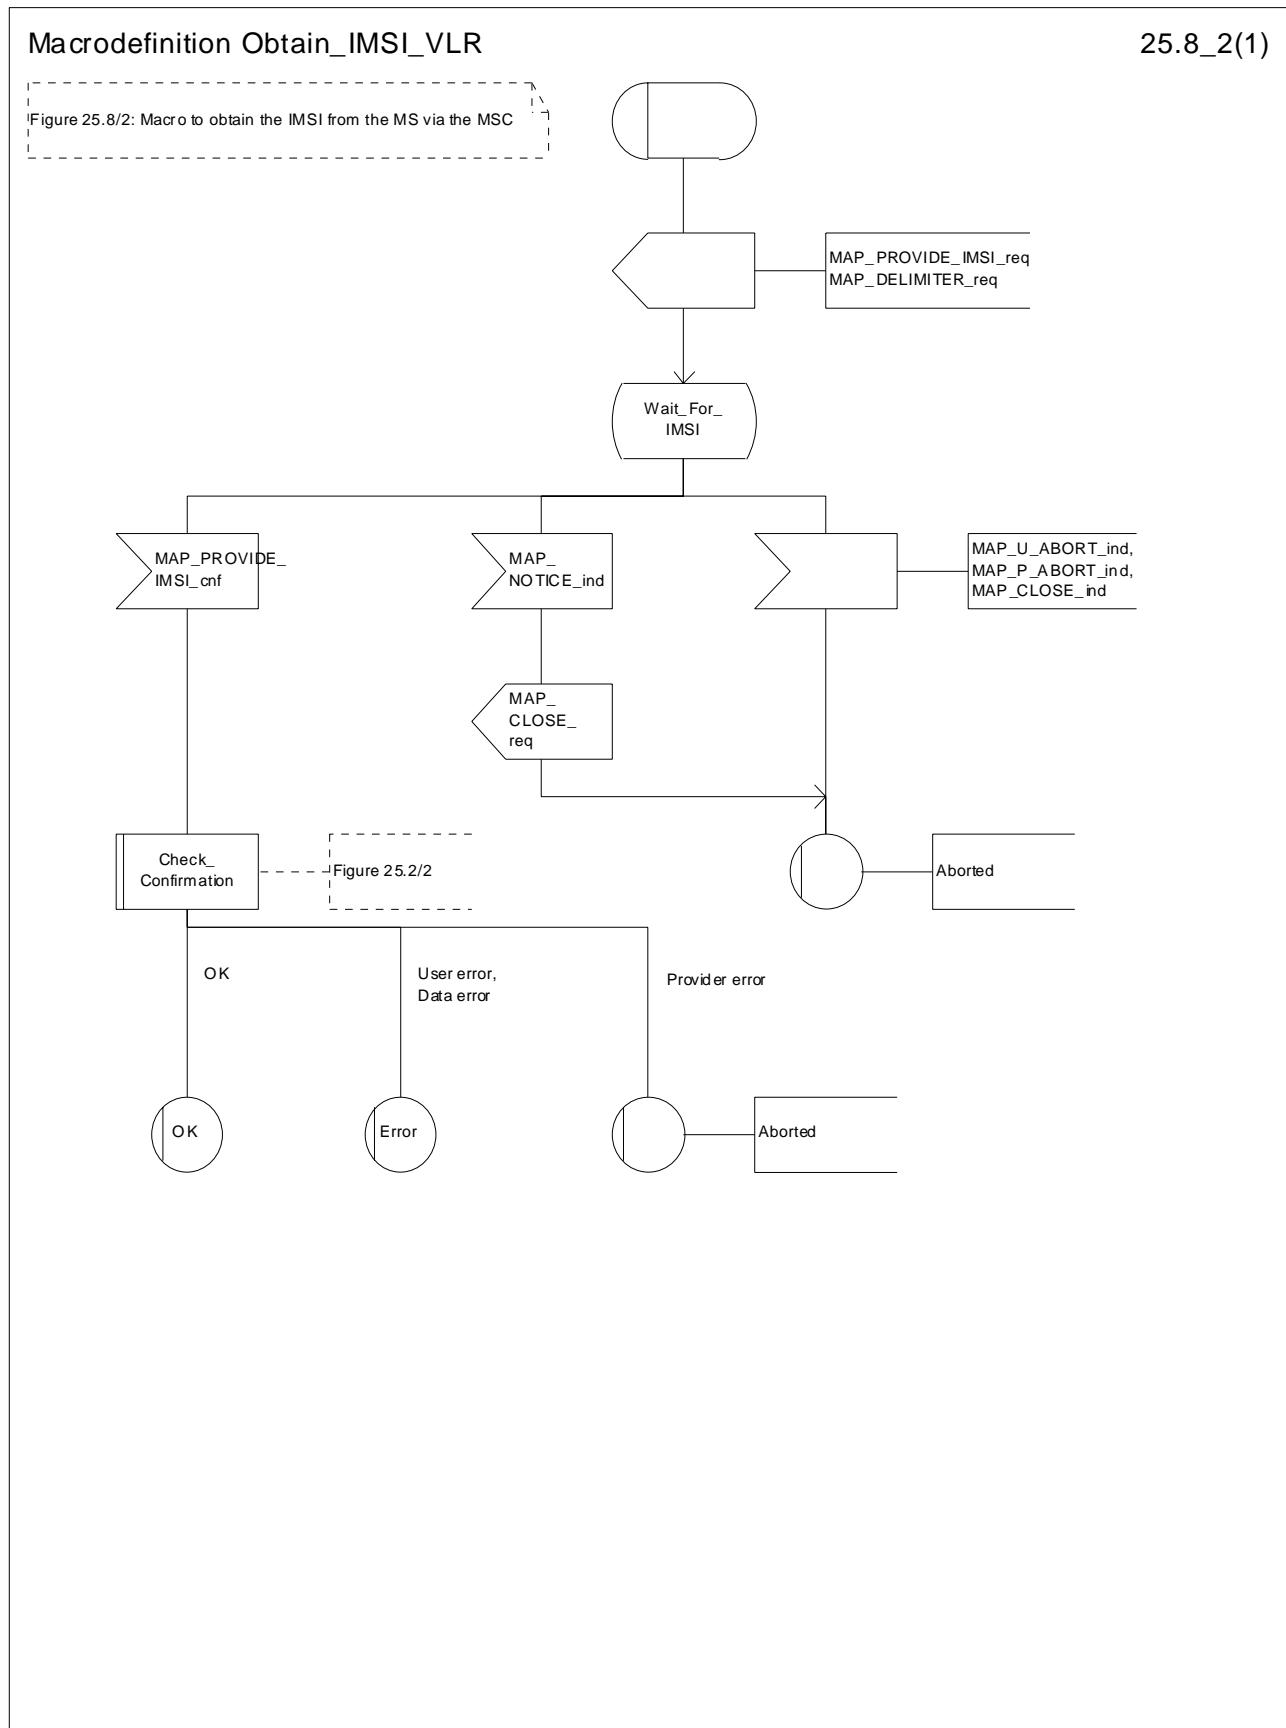
**Figure 25.8/2: Macro Obtain\_IMSI\_VLR**

## 25.9 Tracing macros

### 25.9.1 Macro Trace\_Subscriber\_Activity\_MSC

The Trace\_Subscriber\_Activity\_MSC is invoked in the MSC, when the MSC receives the MAP\_TRACE\_SUBSCRIBER\_ACTIVITY indication from the VLR. The data of the primitive is checked and the tracing in the MSC is started if the content includes no errors. No response is returned to the VLR.

The Trace\_Subscriber\_Activity\_MSC macro is described in the figure 25.9/1.

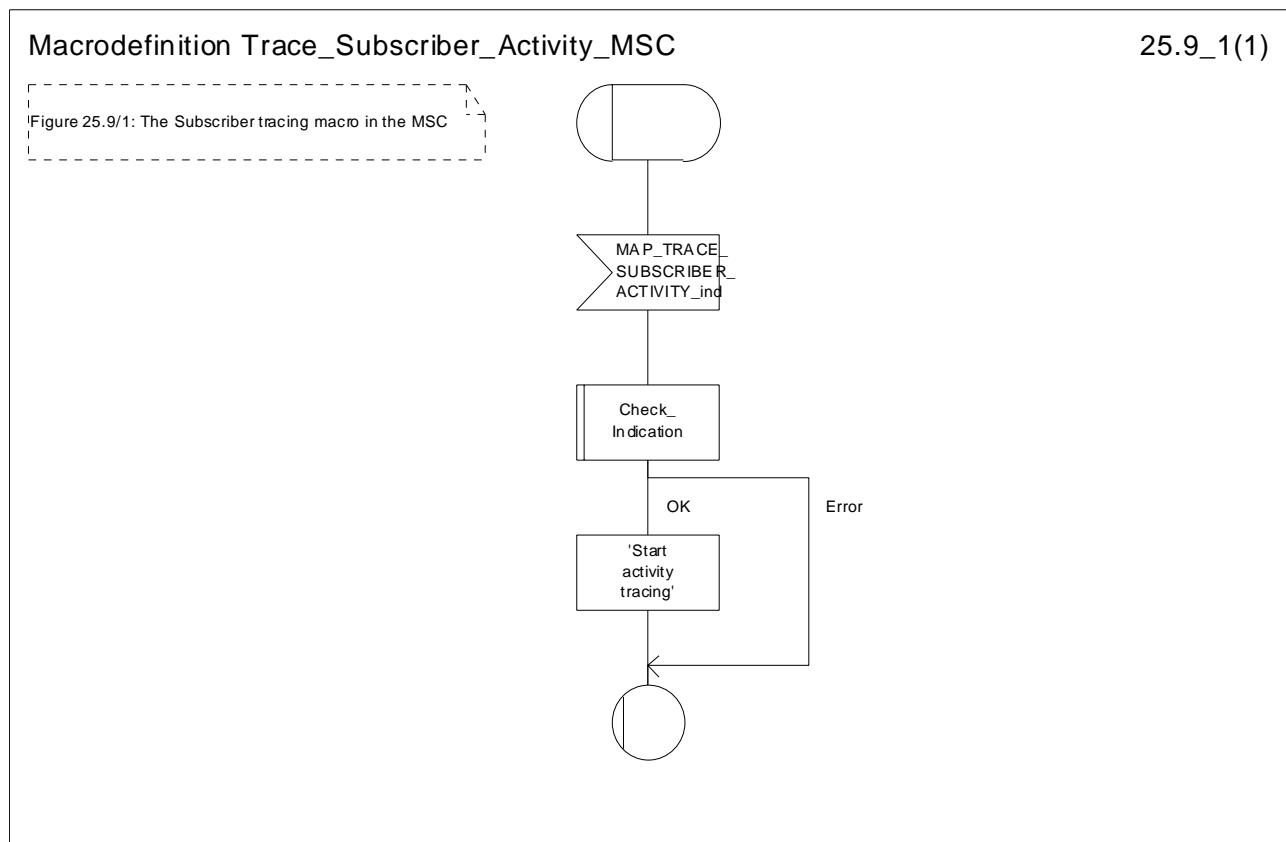

**Figure 25.9/1: Macro Trace\_Subscriber\_Activity\_MSC**

### 25.9.2 Macro Trace\_Subscriber\_Activity\_VLR

The macro Trace\_Subscriber\_Activity\_VLR is invoked, if the subscriber activity is detected by the VLR and the tracing is active. The VLR sends MAP\_TRACE\_SUBSCRIBER\_ACTIVITY request to the MSC. No answer is awaited from the MSC.

The Trace\_Subscriber\_Activity\_VLR macro is shown in the figure 25.9/2.

## Macrodefinition Trace\_Subscriber\_Activity\_VLR

25.9\_2(1)

Figure 25.9/2: The subscriber tracing macro in the VLR

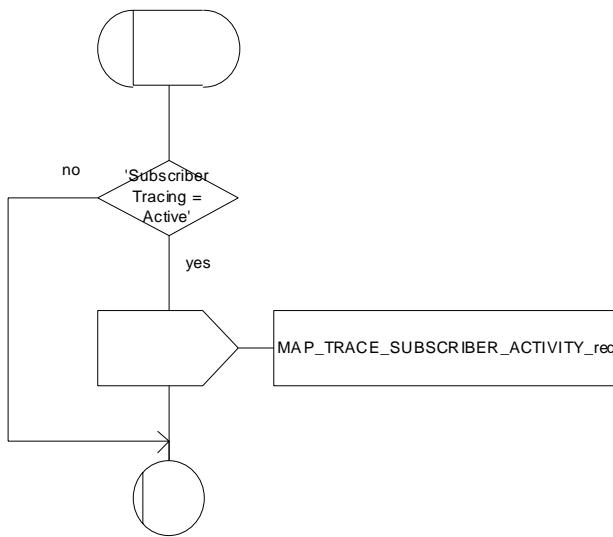


Figure 25.9/2: Macro Trace\_Subscriber\_Activity\_VLR

### 25.9.3 Macro Activate\_Tracing\_VLR

The Activate\_Tracing\_VLR macro is invoked, when the MAP\_ACTIVATE\_TRACE\_MODE indication is received from the HLR. The primitive is processed in the VLR as follows:

- if the data contains errors, a data missing or unexpected data value indication is returned to the HLR;
- if the tracing is not supported, a facility not supported indication is returned to the HLR;
- if the tracing buffer does not have any space left for the data, a tracing buffer full indication is returned to the HLR;
- if no errors are detected, the tracing is set active and a positive acknowledgement is returned to the HLR.

The Activate\_Tracing\_VLR macro is described in the figure 25.9/3.

## Macrodefinition Activate\_Tracing\_VLR

25.9\_3(1)

Figure 25.9/3: The activate trace mode macro in the VLR

```

graph TD
    Start(( )) --> MAP[MAP_ACTIVATE_TRACE_MODE_ind]
    MAP --> Check[Check_Indication]
    Check -- Error --> End(( ))
    Check -- OK --> Sub{Subscriber known?}
    Sub -- no --> SetUEUnidentified[SET UE = UNIDENTIFIED SUBSCRIBER]
    SetUEUnidentified --> End
    Sub -- yes --> Trace{Tracing supported?}
    Trace -- no --> SetUENotSupported[SET UE = FACILITY NOT SUPPORTED]
    SetUENotSupported --> End
    Trace -- yes --> Buffer{Tracing buffer full?}
    Buffer -- no --> SetSubActive[Set Subscriber Tracing = Active]
    SetSubActive --> SetUETracingFull[SET UE = TRACING BUFFER FULL]
    SetUETracingFull --> End
    Buffer -- yes --> SetUETracingFull
    SetUETracingFull --> End
    End(( ))

```

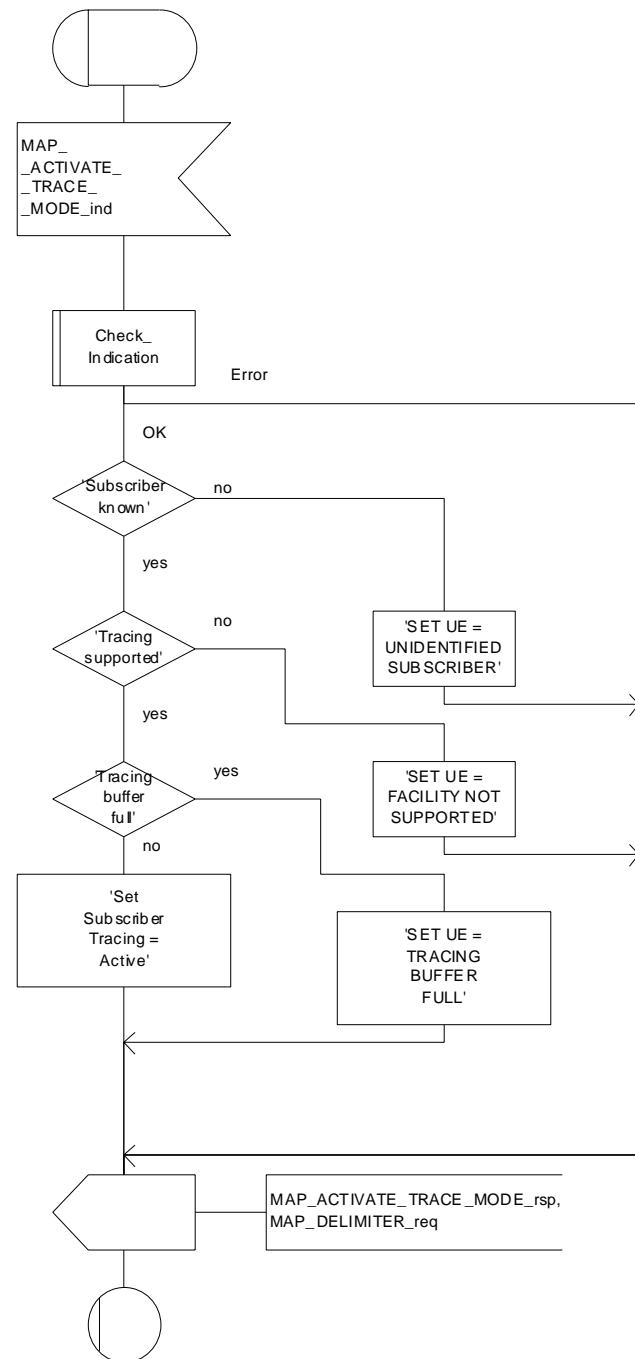


Figure 25.9/3: Macro Activate\_Tracing\_VLR

## 25.9.4 Macro Control\_Tracing\_HLR

The Control\_Tracing\_HLR macro may be invoked in the HLR, if subscriber related activity is detected. If the tracing is active in the HLR and not active in the VLR or in the SGSN, the MAP\_ACTIVATE\_TRACE\_MODE request is sent to the VLR or to the SGSN.

The MAP\_ACTIVATE\_TRACE\_MODE confirmation from the VLR or from the SGSN is processed as follows:

- if the primitive contains a successful acknowledgement, the tracing in VLR or in the SGSN is set active;
- if the primitive contains errors, the tracing in VLR or in SGSN is set to deactivate.

The Control\_Tracing\_HLR macro between HLR and VLR is shown in the figure 25.9/4.

The Control\_Tracing\_HLR\_with\_SGSN macro between HLR and SGSN is shown in the figure 25.9/5.

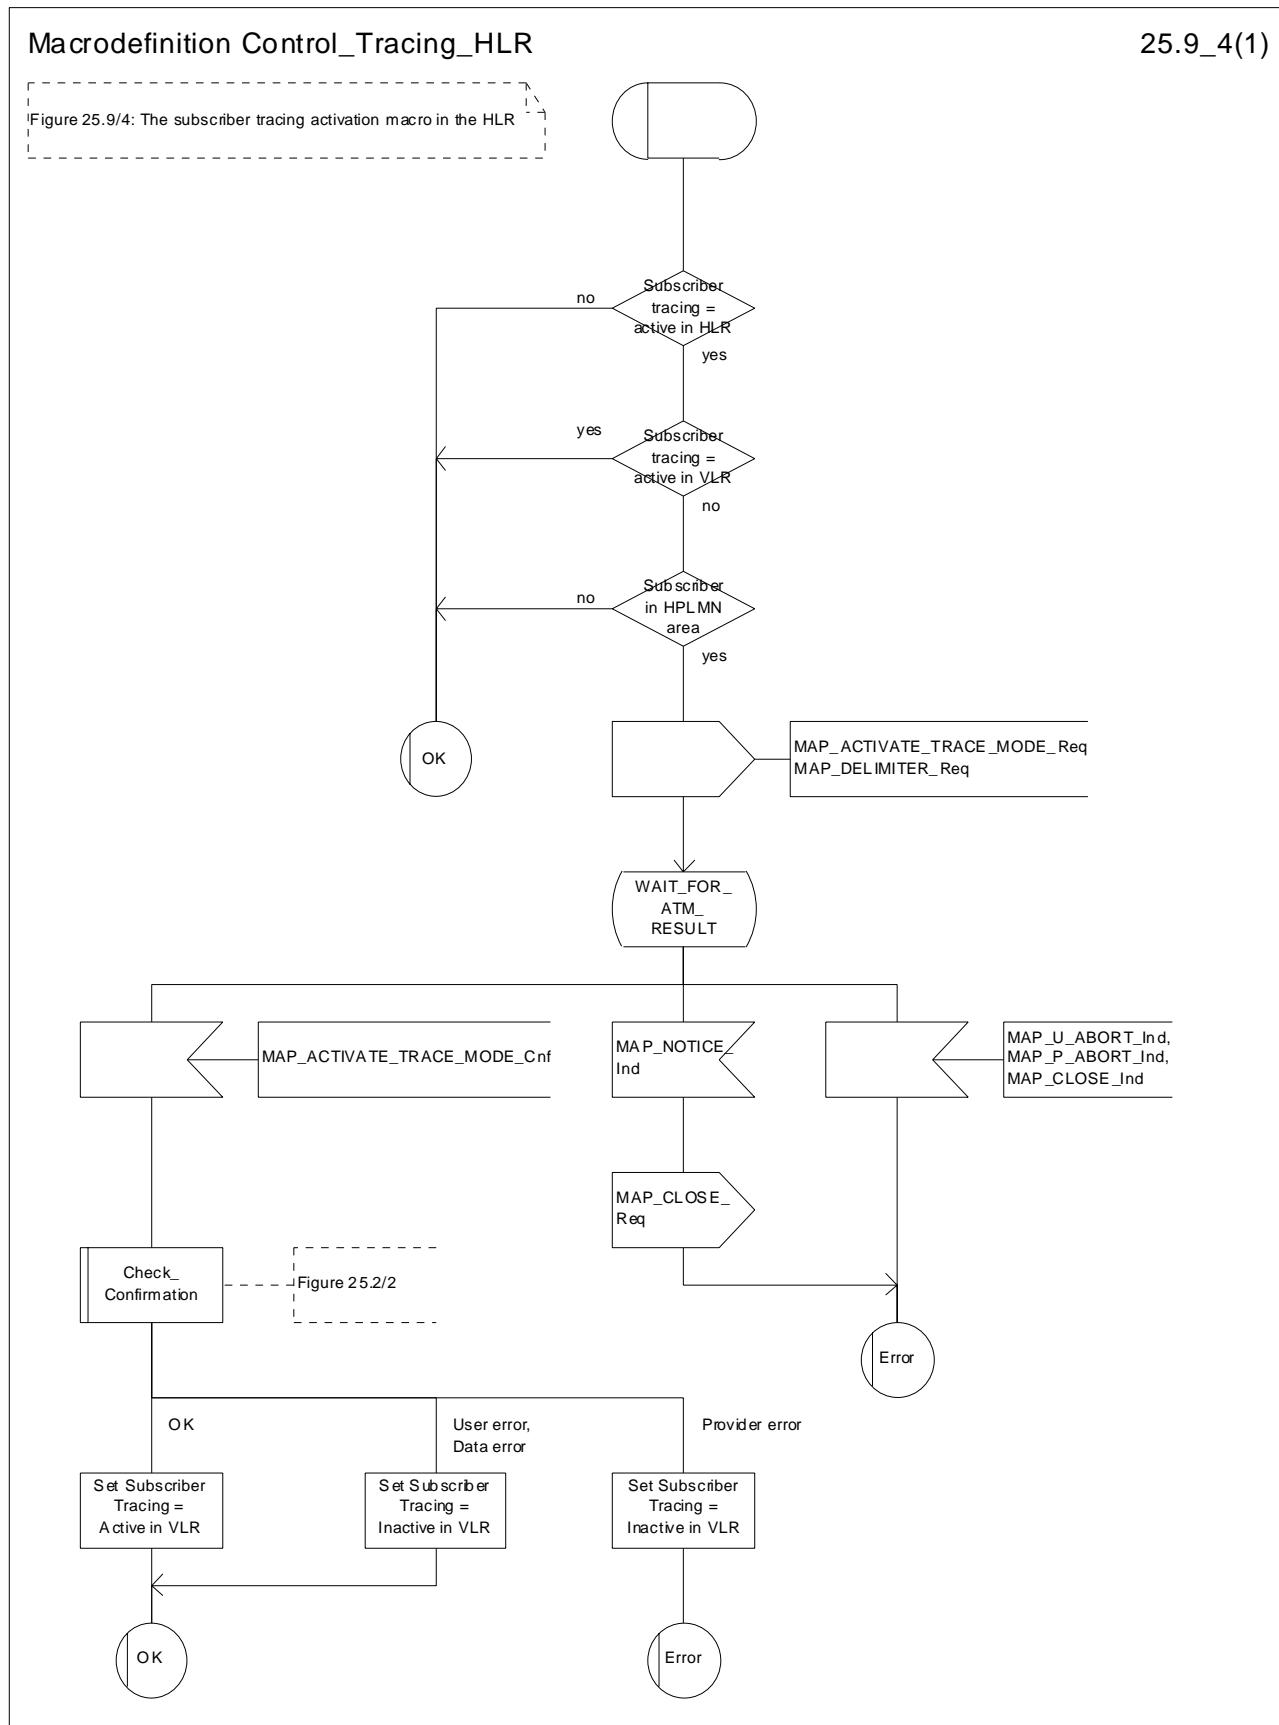


Figure 25.9/4: Macro Control\_Tracing\_HLR


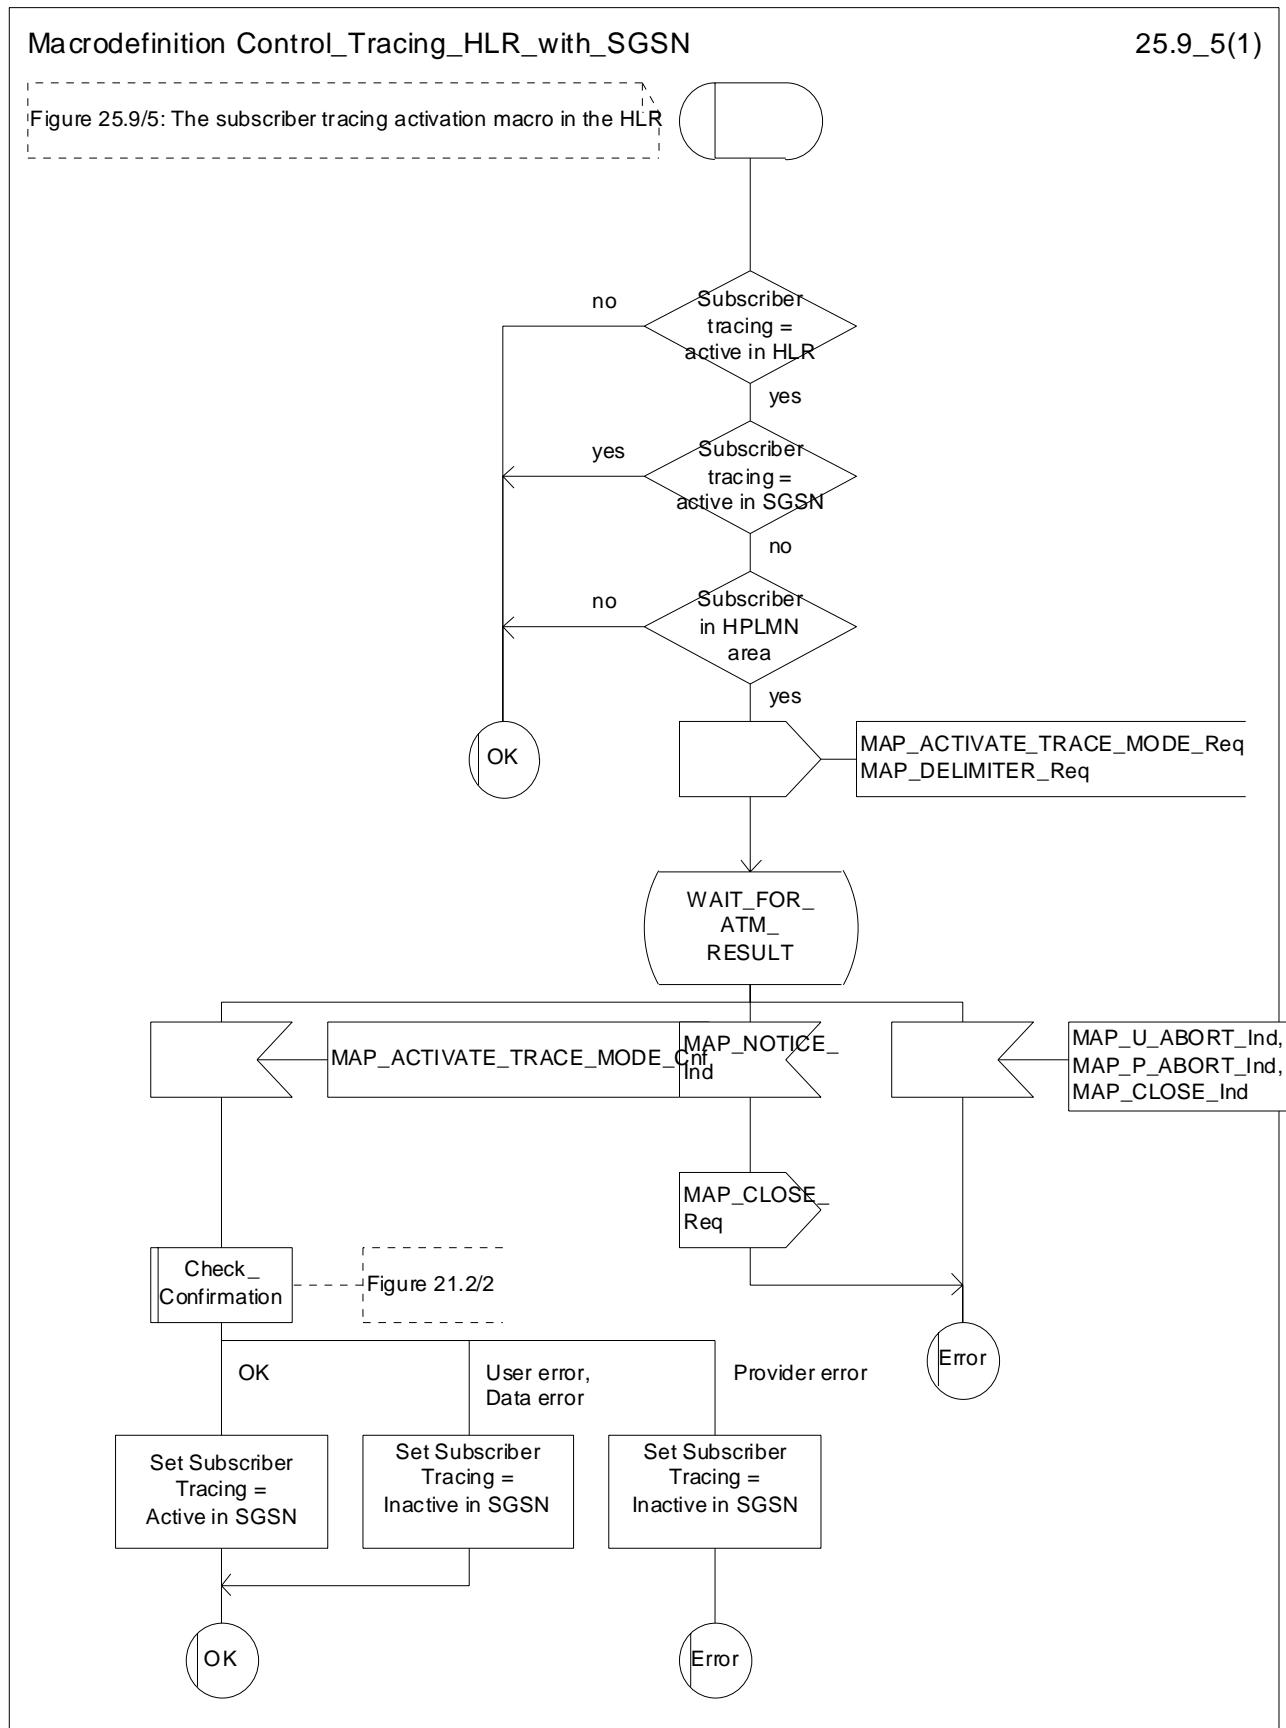


Figure 25.9/5: Macro Control\_Tracing\_HLR\_with\_SGSN

### 25.9.5 Macro Trace\_Subscriber\_Activity\_SGSN

The macro Trace\_Subscriber\_Activity\_SGSN is invoked, if the subscriber activity is detected by the SGSN and the tracing is active.

The Trace\_Subscriber\_Activity\_SGSN macro is shown in the figure 25.9/6.

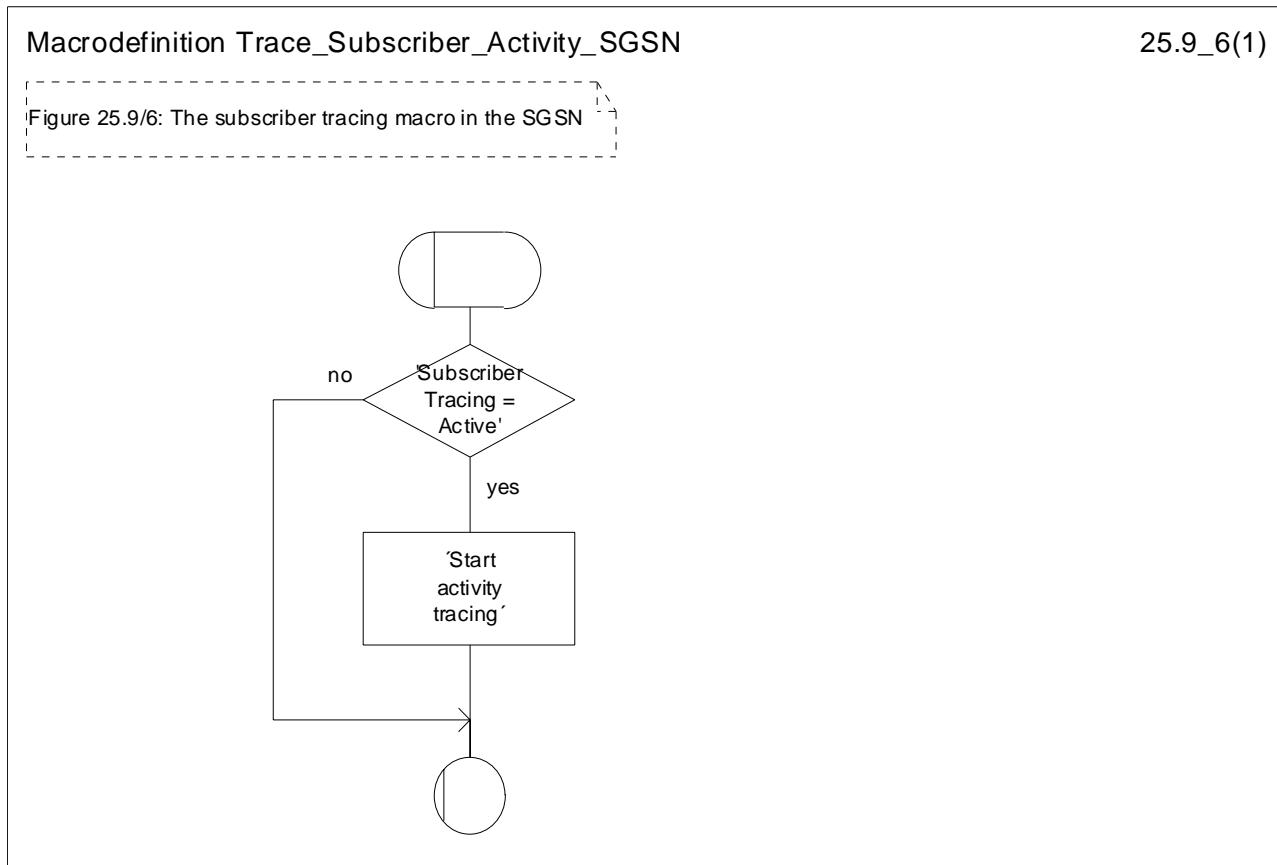

**Figure 25.9/6: Macro Trace\_Subscriber\_Activity\_SGSN**

### 25.9.6 Macro Activate\_Tracing\_SGSN

The Activate\_Tracing\_SGSN macro is invoked, when the MAP\_ACTIVATE\_TRACE\_MODE indication is received from the HLR. The primitive is processed in the SGSN as follows:

- if the data contains errors, a data missing or unexpected data value indication is returned to the HLR;
- if the tracing is not supported, a facility not supported indication is returned to the HLR;
- if the tracing buffer does not have any space left for the data, a tracing buffer full indication is returned to the HLR;
- if no errors are detected, the tracing is set active and a positive acknowledgement is returned to the HLR.

The Activate\_Tracing\_SGSN macro is described in the figure 25.9/7.

## Macrodefinition Activate\_Tracing\_SGSN

25.9\_7(1)

Figure 25.9/7: The activate trace mode macro in the SGSN

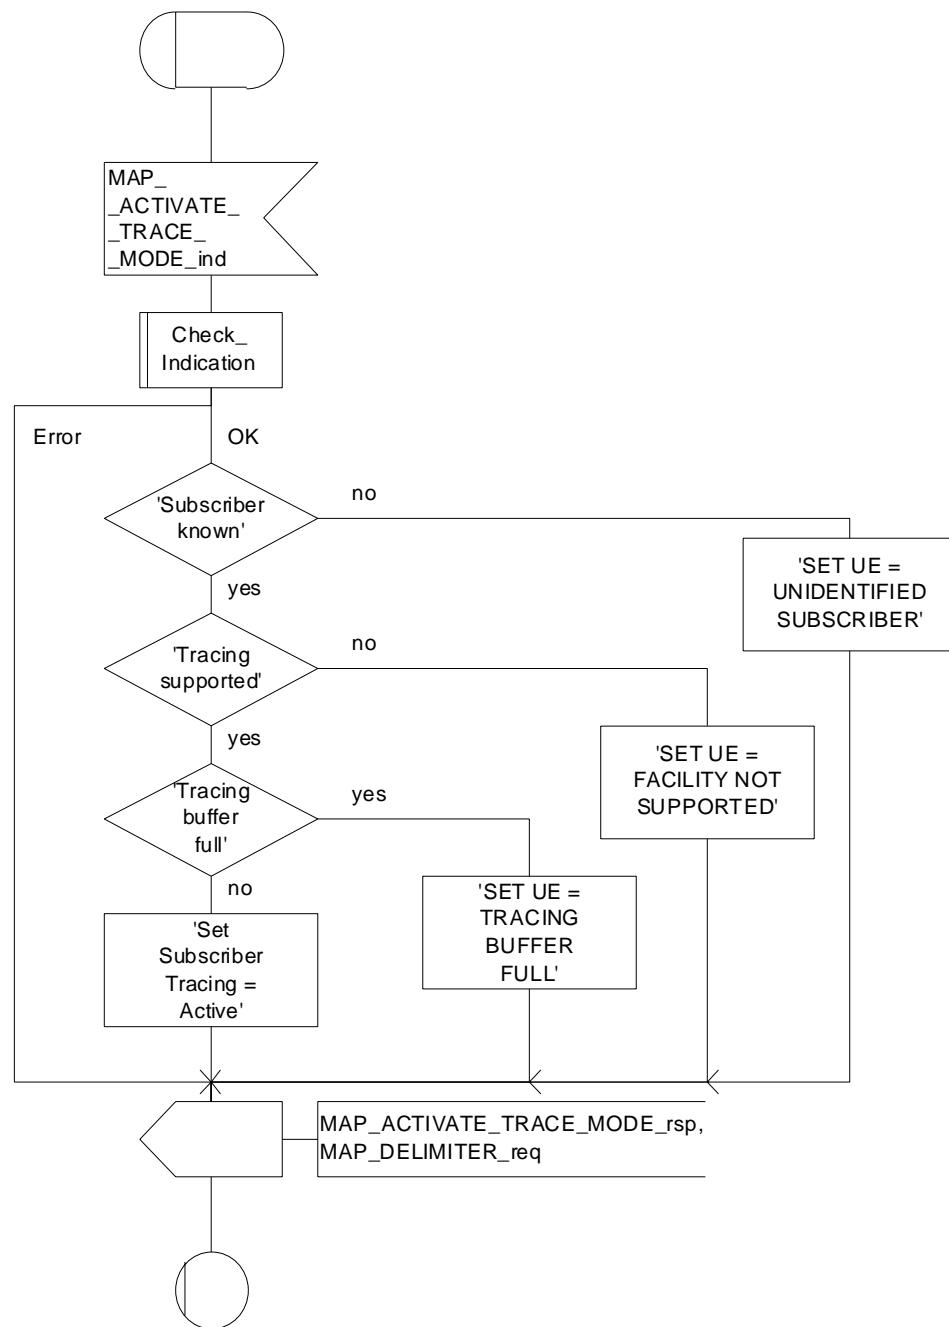


Figure 25.9/7: Macro Activate\_Tracing\_SGSN

## 25.10 Short Message Alert procedures


### 25.10.1 Subscriber\_Present\_VLR process

The Subscriber\_Present\_VLR process is invoked by the VLR, when the mobile subscriber becomes active and the MNRF flag is set. The general description of the short message alert procedures is in the clause 23.4.

The VLR sends the MAP\_READY\_FOR\_SM request to the HLR and waits for the HLR to answer. When receiving the answer, the VLR will act as follows:

- the MNRF flag is cleared if the procedure is successful;
- the MNRF flag is not cleared if the procedure is not successful.

The Subscriber\_Present\_VLR process is shown in the figure 25.10/1.

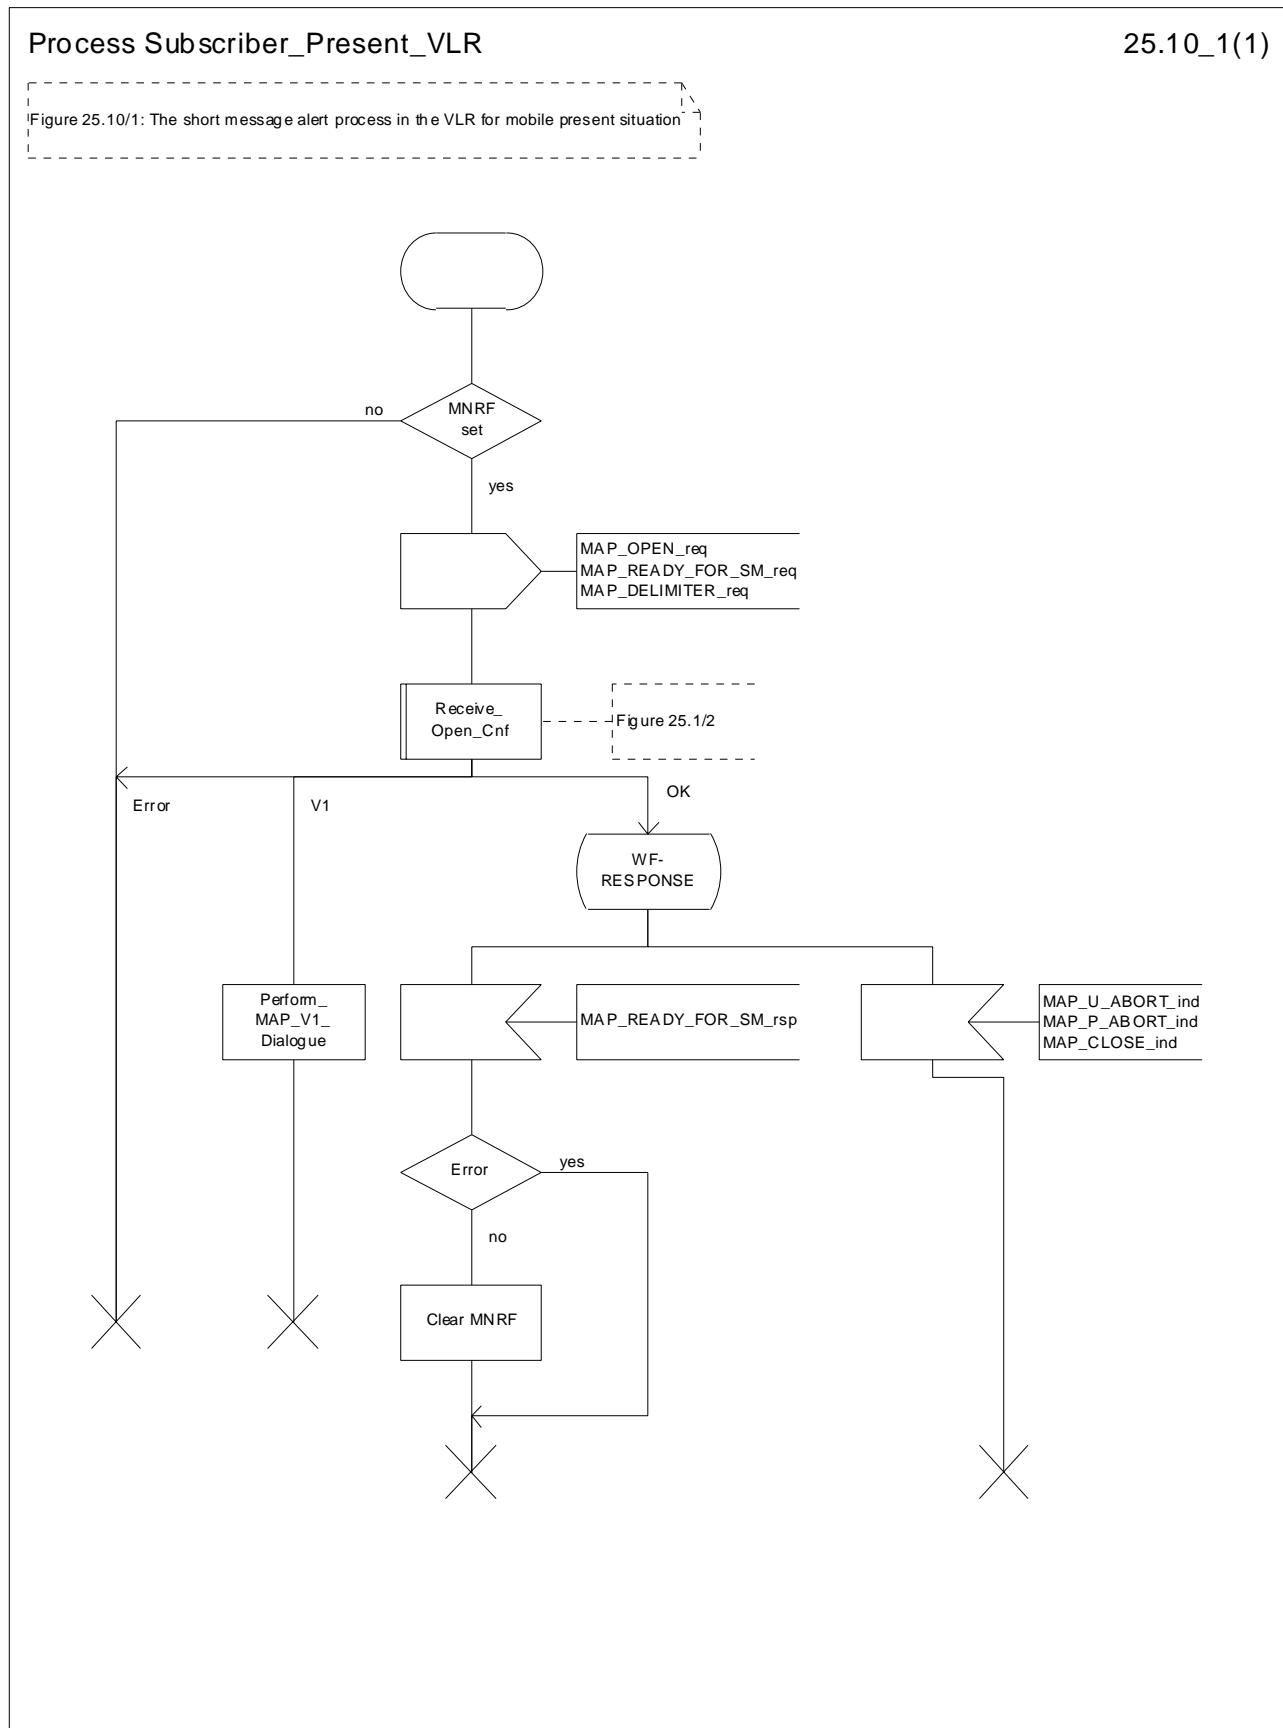
**Figure 25.10/1: Process Subscriber\_Present\_VLR**

## 25.10.2 Macro Alert\_Service\_Centre\_HLR

The Alert\_Service\_Centre\_HLR macro is initiated when the HLR notices that the Service Centre(s) shall be alerted. The macro starts process Alert\_Service\_Centre\_HLR for every SC address in the MWD list.

In the process Alert\_Service\_Centre\_HLR the HLR sends MAP\_ALERT\_SERVICE\_CENTRE request to the appropriate IWMSC. The MWD entry is deleted when the positive acknowledgement is received from the IWMSC. The unsuccessful alert may be repeated. The MWD entry should be purged in the unsuccessful case, at least when a suitable time period has expired.

The Alert\_Service\_Centre\_HLR macro is shown in the figure 25.10/2 and the Alert\_Service\_Centre\_HLR process is shown in the figure 25.10/3.

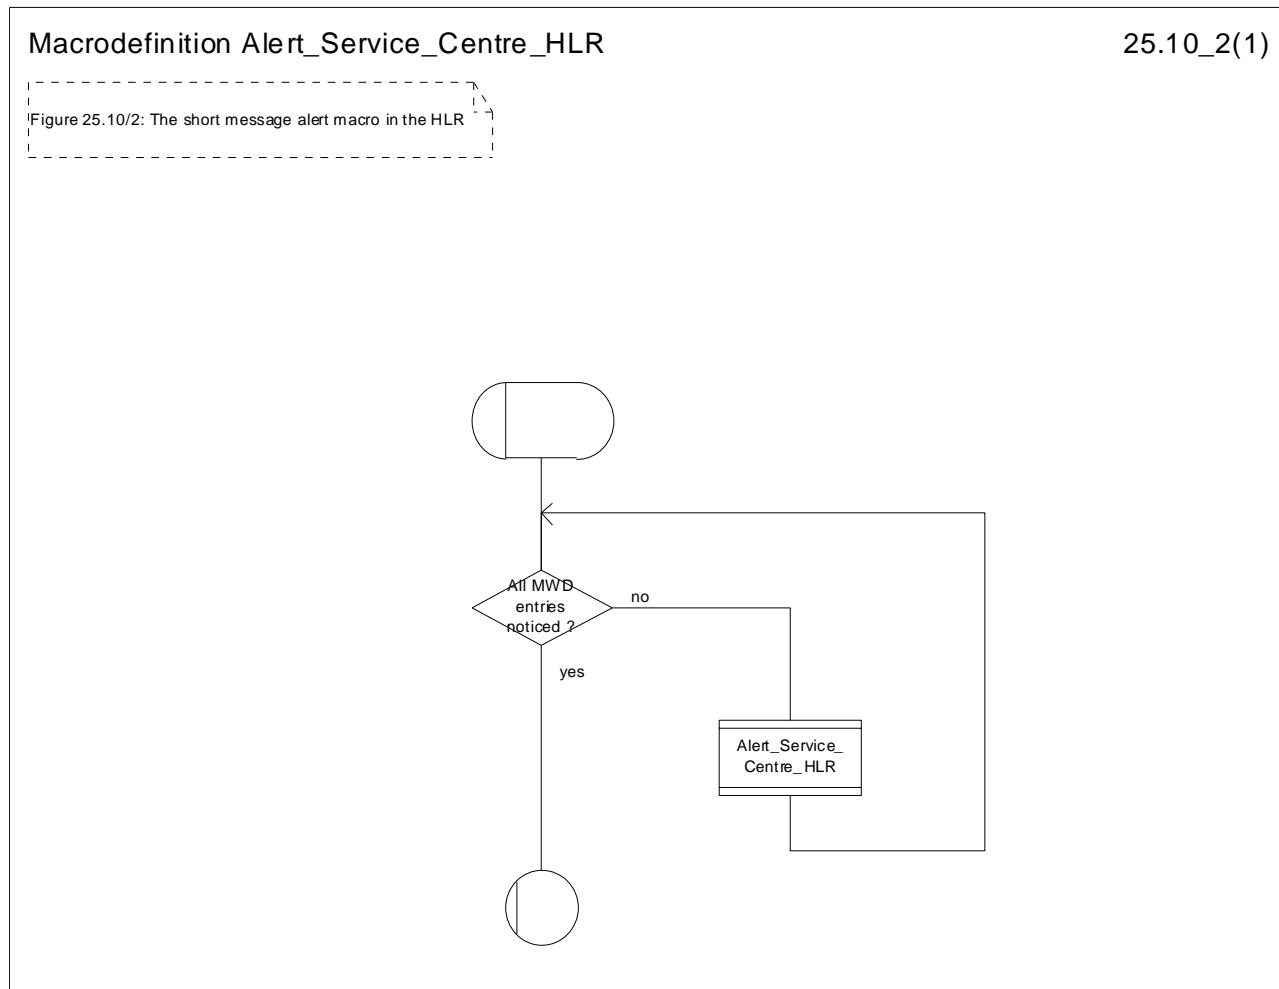

**Figure 25.10/2: Macro Alert\_Service\_Centre\_HLR**

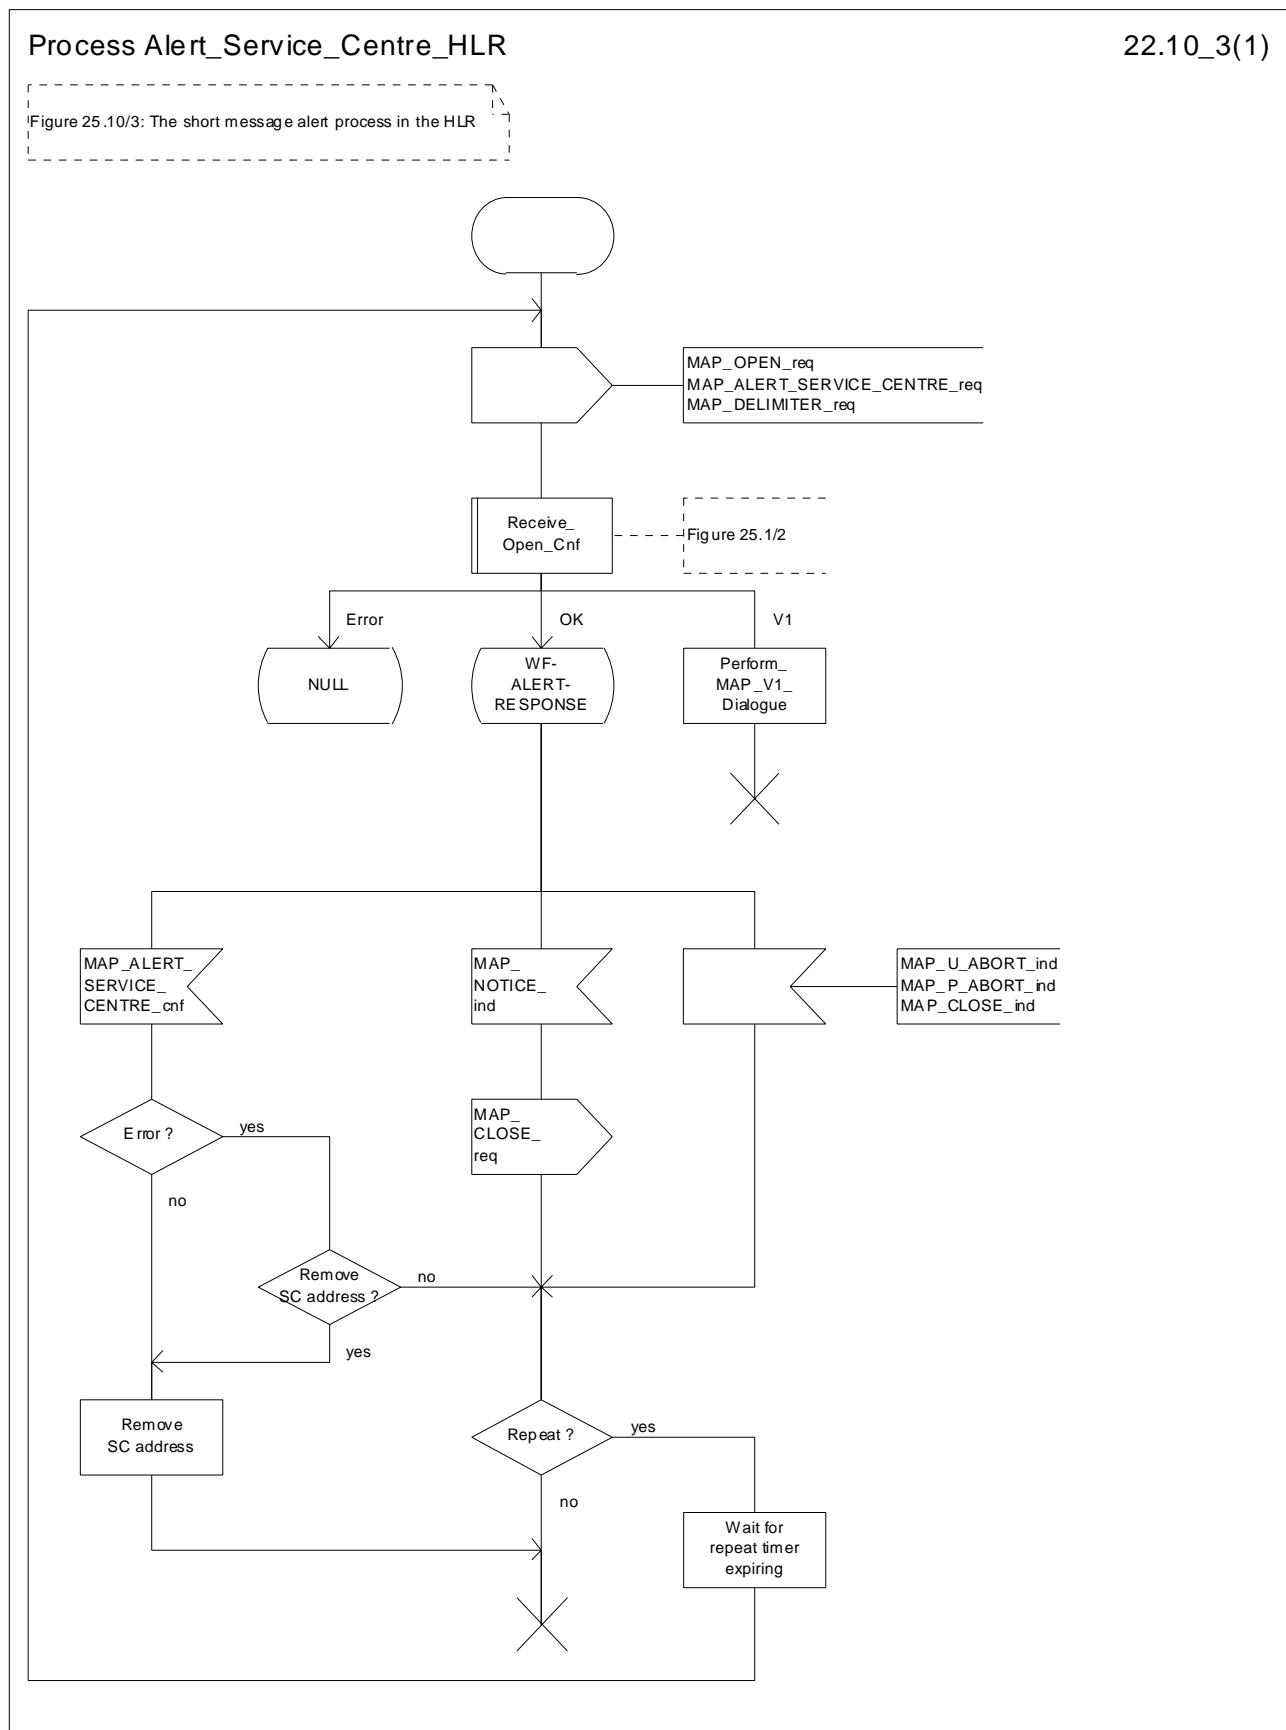


Figure 25.10/3: Process Alert\_Service\_Centre\_HLR

### 25.10.3 The Mobile Subscriber is present

When receiving Page response, Attach request or Routing area update request messages (3GPP TS 24.008 [35]), while the MS not reachable for GPRS (MNRG) flag is set, the SGSN will send the MAP\_READY\_FOR\_SM request towards the HLR. The Alert Reason is set to indicate that the mobile subscriber is present for GPRS.

When receiving the answer, the SGSN will act as follows:

- MNRG is cleared if the procedure is successful
- MNRG is not cleared if the procedure is not successful

The Subscriber\_Present\_SGSN process is shown in the figure 25.10/4.

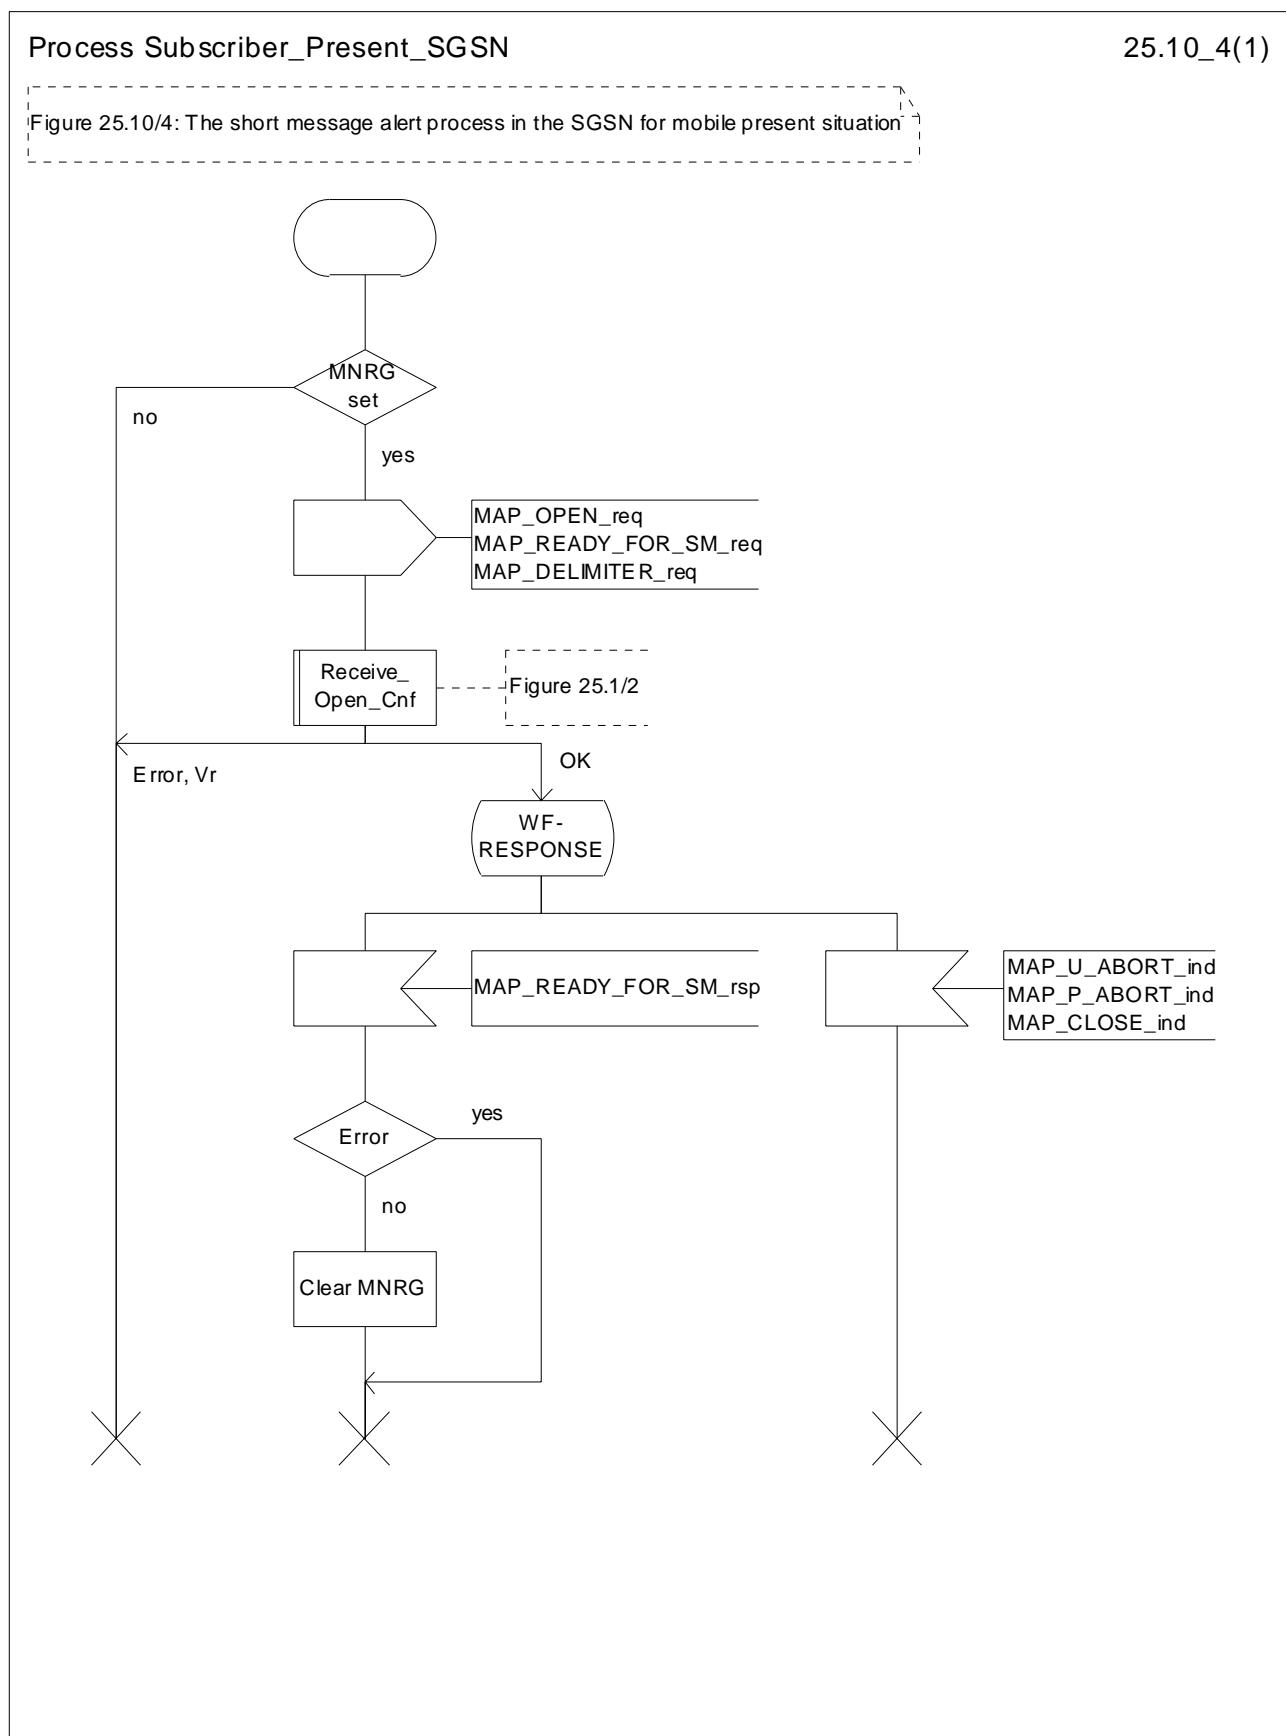


Figure 25.10/4: Process Subscriber\_Present\_SGSN

# Annex A (informative): Cross-reference for abstract syntaxes of MAP

Annex A is not part of the standard, it is included for information purposes only.

For every ASN.1 item such as identifier, type-reference or value-reference the cross-reference allows to locate all occurrences by means of module-name and line numbers. For that purpose line numbers are printed at the left margin in front of each ASN.1 source line starting with 1 for every module.

The items are sorted alphabetically in the cross-reference in a case-insensitive manner. Occurrences of an item are its definition and all its usages such as in exports, imports or within a type or value assignment.

For every item additional information is provided such as kind of item (identifier, value reference, type reference), and tag, associated type and value if applicable.

The cross-reference for a root module includes all modules referred to directly or indirectly via imports. The cross-references for the root modules MAP-Protocol/TCAPMessages and MAP-DialoguePDU are included.

TAG R5.61 Cross Reference Listing for MAP-Protocol

2003-03-27 10:33:38 PAGE 1

```
&alwaysReturns.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 22

&ArgumentType.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 14
        USED in MAP-MobileServiceOpe : 178 191 202 214 226 240 252 267 285
            307 322 335 342 347 352 366 384 398
                411 423 437 445 459 475 490 504
        USED in MAP-OperationAndMainte : 52 67 81
        USED in MAP-CallHandlingOperat : 83 107 122 135 147 160 175 188 202
            216
        USED in MAP-SupplementaryServi : 89 107 125 146 166 182 195 212 227
            245 252 264 282
        USED in MAP-ShortMessageServic : 68 84 97 116 129 139 144
        USED in MAP-Group-Call-Operati : 47 58 65 70
        USED in MAP-LocationServiceOpe : 54 69 88
        USED in MAP-SecureTransportOpe : 43 55 65 73

&argumentTypeOptional.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 15

&Both.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 56

&Consumer.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 57

&errorCode.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 46
        USED in MAP-Errors : 173 180 187 194 200 206 215 221 224
            231 234 242 249 256 263 270 276 279
            285 293 302 309 316 322 328 334 340
            346 352 360 367 373 379 389 395 402
            409 415 418 421 426 429 432 438 444
            452 457 463 469 477 485 491 497 503
            509 516

&Errors.....identifier of Fieldspec
    DEFINED in Remote-Operations-Info : 19
        USED in MAP-MobileServiceOpe : 182 196 207 218 230 244 256 271 289
            312 326 356 376 389 402 416 428 449
            463 480 495 508
        USED in MAP-OperationAndMainte : 57 72 85
        USED in MAP-CallHandlingOperat : 87 111 127 139 152 165 180 192 207
            221
        USED in MAP-SupplementaryServi : 94 112 130 151 170 186 200 215 231
            257 268 286
        USED in MAP-ShortMessageServic : 72 89 102 121 132 149
        USED in MAP-Group-Call-Operati : 51
```

USED in MAP-LocationServiceOpe : 58 73 92  
USED in MAP-SecureTransportOpe : 47 57

&extensionId.....identifier of Fieldspec  
DEFINED in MAP-ExtensionDataTypes : 24  
USED in MAP-ExtensionDataTypes : 39

&ExtensionType.....identifier of Fieldspec  
DEFINED in MAP-ExtensionDataTypes : 23  
USED in MAP-ExtensionDataTypes : 41

&id.....identifier of Fieldspec  
DEFINED in Remote-Operations-Info : 59

&operationCode.....identifier of Fieldspec  
DEFINED in Remote-Operations-Info : 25  
USED in MAP-MobileServiceOpe : 188 199 211 221 235 247 262 282 302  
316 332 339 344 349 361 381 393 406  
420 432 439 442 454 470 485 500 513  
USED in MAP-OperationAndMainte : 64 78 89  
USED in MAP-CallHandlingOperat : 103 119 132 144 157 172 185 199 213  
227  
USED in MAP-SupplementaryServi : 104 122 143 163 179 192 209 224 242  
249 261 279 293  
USED in MAP-ShortMessageServic : 81 94 113 126 136 141 154  
USED in MAP-Group-Call-Operati : 55 62 67 72  
USED in MAP-LocationServiceOpe : 66 85 100  
USED in MAP-SecureTransportOpe : 51 61 69 75

&ParameterType.....identifier of Fieldspec  
DEFINED in Remote-Operations-Info : 43

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 2

USED in MAP-Errors : 170 176 183 190 197 203 211 218 227  
                   240 245 252 259 266 282 290 299 305  
                   313 319 325 331 337 343 349 357 364  
                   370 376 385 392 398 405 412 424 435  
                   441 449 455 460 466 474 482 488 494  
                   500 506 514

&parameterTypeOptional.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 44

&ResultType.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 17  
     USED in MAP-MobileServiceOpe : 180 193 204 216 228 242 254 269 287  
         309 324 337 354 373 386 400 413 425  
         447 461 477 492 506  
     USED in MAP-OperationAndMainte : 54 69 83  
     USED in MAP-CallHandlingOperat : 85 109 124 137 149 162 177 190 204  
         218  
     USED in MAP-SupplementaryServi : 91 109 127 148 168 184 197 229 247  
         254 266 284  
     USED in MAP-ShortMessageServic : 70 86 99 118 146  
     USED in MAP-Group-Call-Operati : 49 60  
     USED in MAP-LocationServiceOpe : 56 71 90  
     USED in MAP-SecureTransportOpe : 45 67

&resultTypeOptional.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 18

&returnResult.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 16  
     USED in MAP-SupplementaryServi : 214  
     USED in MAP-ShortMessageServic : 131

&Supplier.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 58

&synchronous.....identifier of Fieldspec

DEFINED in Remote-Operations-Info : 21

absentSubscriber.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 304  
     USED in MAP-MobileServiceOpe : 94 464  
     USED in MAP-CallHandlingOperat : 41 97 117 196  
     USED in MAP-SupplementaryServi : 51 204 219  
     USED in MAP-LocationServiceOpe : 29 64 81  
     USED in MAP-Errors : 48

absentSubscriber.....identifier of Named Number, 1

DEFINED in MAP-SM-DataTypes : 167

absentSubscriberDiagnosticSM.....identifier of [0] AbsentSubscriberDiagnosticSM

DEFINED in MAP-SM-DataTypes : 146

absentSubscriberDiagnosticSM.....identifier of AbsentSubscriberDiagnosticSM

DEFINED in MAP-SM-DataTypes : 186

absentSubscriberDiagnosticSM.....identifier of AbsentSubscriberDiagnosticSM

DEFINED in MAP-ER-DataTypes : 162

AbsentSubscriberDiagnosticSM.....type reference INTEGER

DEFINED in MAP-ER-DataTypes : 172  
     USED in MAP-MS-DataTypes : 203 1831  
     USED in MAP-SM-DataTypes : 41 146 159 186 187  
     USED in MAP-ER-DataTypes : 43 162 167

AbsentSubscriberParam.....type reference SEQUENCE

DEFINED in MAP-ER-DataTypes : 250

    USED in MAP-Errors : 128 306

    USED in MAP-ER-DataTypes : 34

absentSubscriberReason.....identifier of [0] AbsentSubscriberReason

DEFINED in MAP-ER-DataTypes : 253

AbsentSubscriberReason.....type reference ENUMERATED

DEFINED in MAP-ER-DataTypes : 255

USED in MAP-ER-DataTypes : 253

absentSubscriberSM.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 465

USED in MAP-ShortMessageServic : 41 80 112

USED in MAP-Errors : 80

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 3

AbsentSubscriberSM-Param.....type reference SEQUENCE

DEFINED in MAP-ER-DataTypes : 161  
 USED in MAP-Errors : 138 467  
 USED in MAP-ER-DataTypes : 42

accepted.....identifier of Named Number, 0

DEFINED in MAP-CH-DataTypes : 411

accessNetworkProtocolId.....identifier of AccessNetworkProtocolId

DEFINED in MAP-CommonDataTypes : 242

AccessNetworkProtocolId.....type reference ENUMERATED

DEFINED in MAP-CommonDataTypes : 257  
 USED in MAP-CommonDataTypes : 242

AccessNetworkSignalInfo.....type reference SEQUENCE

DEFINED in MAP-CommonDataTypes : 241  
 USED in MAP-MS-DataTypes : 174 448 510 567 615 623 628 674  
 USED in MAP-CommonDataTypes : 23

accessOutsideLSAsAllowed.....identifier of Named Number, 0

DEFINED in MAP-MS-DataTypes : 944

accessOutsideLSAsRestricted.....identifier of Named Number, 1

DEFINED in MAP-MS-DataTypes : 945

accessType.....identifier of AccessType

DEFINED in MAP-MS-DataTypes : 387

AccessType.....type reference ENUMERATED

DEFINED in MAP-MS-DataTypes : 392  
 USED in MAP-MS-DataTypes : 387

activate.....identifier of Named Number, 1

DEFINED in MAP-MS-DataTypes : 2279

activateDeferredLocation.....identifier of Named Number, 3

DEFINED in MAP-LCS-DataTypes : 123

activateSS.....information object reference OPERATION, Information Object

DEFINED in MAP-SupplementaryServi : 124  
 USED in MAP-Protocol : 75 141  
 USED in MAP-SupplementaryServi : 15

activateTraceMode.....information object reference OPERATION, Information Object

DEFINED in MAP-OperationAndMainte : 51  
 USED in MAP-Protocol : 50 138  
 USED in MAP-OperationAndMainte : 13

ActivateTraceModeArg.....type reference SEQUENCE

DEFINED in MAP-OM-DataTypes : 36  
 USED in MAP-OperationAndMainte : 35 53  
 USED in MAP-OM-DataTypes : 14

ActivateTraceModeRes.....type reference SEQUENCE

DEFINED in MAP-OM-DataTypes : 50  
 USED in MAP-OperationAndMainte : 36 55  
 USED in MAP-OM-DataTypes : 15

active.....identifier of Named Number, 2

DEFINED in MAP-SS-DataTypes : 287

additionalAbsentSubscriberDiagnosticsSM..identifier of [5] AbsentSubscriberDiagnosticSM

DEFINED in MAP-SM-DataTypes : 159

additionalAbsentSubscriberDiagnosticSM..identifier of [0] AbsentSubscriberDiagnosticSM

DEFINED in MAP-SM-DataTypes : 187

additionalAbsentSubscriberDiagnosticSM..identifier of [0] AbsentSubscriberDiagnosticSM

DEFINED in MAP-ER-DataTypes : 167

additionalRequestedCAMEL-SubscriptionInfoIdentifier of [7] AdditionalRequestedCAMEL-SubscriptionInfo

DEFINED in MAP-MS-DataTypes : 2147

AdditionalRequestedCAMEL-SubscriptionInfoType reference ENUMERATED

DEFINED in MAP-MS-DataTypes : 2162  
USED in MAP-MS-DataTypes : 2148 2272

additionalRequestedCAMEL-SubscriptionInfoIdentifier of [4] AdditionalRequestedCAMEL-SubscriptionInfo  
DEFINED in MAP-MS-DataTypes : 2271

additionalSignallInfo.....identifier of [17] Ext-ExternalSignallInfo

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 4

DEFINED in MAP-CH-DataTypes : 112

additionalSignalInfo.....identifier of [14] Ext-ExternalSignalInfo  
DEFINED in MAP-CH-DataTypes : 219

additionalSM-DeliveryOutcome.....identifier of [4] SM-DeliveryOutcome  
DEFINED in MAP-SM-DataTypes : 156

additional-Number.....identifier of [6] Additional-Number  
DEFINED in MAP-SM-DataTypes : 92

Additional-Number.....type reference CHOICE  
DEFINED in MAP-SM-DataTypes : 96  
USED in MAP-SM-DataTypes : 28 92  
USED in MAP-LCS-DataTypes : 60 88

additional-Number.....identifier of [3] Additional-Number  
DEFINED in MAP-LCS-DataTypes : 88

AddressString.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 100  
USED in MAP-MS-DataTypes : 170 2242  
USED in MAP-CommonDataTypes : 16 144 150 378  
USED in MAP-OM-DataTypes : 21 40  
USED in MAP-SS-DataTypes : 44 74 300  
USED in MAP-SM-DataTypes : 32 56 134 139 144 178  
USED in MAP-LCS-DataTypes : 30 139

Add-GeographicalInformation.....type reference OCTET STRING  
DEFINED in MAP-LCS-DataTypes : 317  
USED in MAP-LCS-DataTypes : 24 243 351

add-Ics-PrivacyExceptionList.....identifier of [3] LCS-PrivacyExceptionList  
DEFINED in MAP-MS-DataTypes : 809

add-LocationEstimate.....identifier of [2] Add-GeographicalInformation  
DEFINED in MAP-LCS-DataTypes : 243

add-LocationEstimate.....identifier of [8] Add-GeographicalInformation  
DEFINED in MAP-LCS-DataTypes : 351

AgeIndicator.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 240  
USED in MAP-MS-DataTypes : 238 789

ageOfLocationEstimate.....identifier of [0] AgeOfLocationInformation  
DEFINED in MAP-LCS-DataTypes : 240

ageOfLocationEstimate.....identifier of [6] AgeOfLocationInformation  
DEFINED in MAP-LCS-DataTypes : 348

ageOfLocationInformation.....identifier of AgeOfLocationInformation  
DEFINED in MAP-MS-DataTypes : 1976

ageOfLocationInformation.....identifier of [9] AgeOfLocationInformation  
DEFINED in MAP-MS-DataTypes : 2004

AgeOfLocationInformation.....type reference INTEGER  
DEFINED in MAP-CommonDataTypes : 511  
USED in MAP-MS-DataTypes : 188 1976 2004  
USED in MAP-CommonDataTypes : 57  
USED in MAP-LCS-DataTypes : 36 240 348

alertingCategory-1.....value reference AlertingPattern, '00000100'B  
DEFINED in MAP-CommonDataTypes : 285

alertingCategory-2.....value reference AlertingPattern, '00000101'B  
DEFINED in MAP-CommonDataTypes : 286

alertingCategory-3.....value reference AlertingPattern, '00000110'B  
DEFINED in MAP-CommonDataTypes : 287

alertingCategory-4.....value reference AlertingPattern, '00000111'B  
DEFINED in MAP-CommonDataTypes : 288

alertingCategory-5.....value reference AlertingPattern, '00001000'B  
DEFINED in MAP-CommonDataTypes : 289

alertingDP.....identifier of Named Number, 9  
DEFINED in MAP-MS-DataTypes : 1656

alertingLevel-0.....value reference AlertingPattern, '00000000'B

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 5

DEFINED in MAP-CommonDataTypes : 279

alertingLevel-1.....value reference AlertingPattern, '00000001'B  
DEFINED in MAP-CommonDataTypes : 280

alertingLevel-2.....value reference AlertingPattern, '00000010'B  
DEFINED in MAP-CommonDataTypes : 281

AlertingPattern.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 266  
USED in MAP-CommonDataTypes : 26 279 280 281 285 286 287 288 289  
USED in MAP-CH-DataTypes : 72 109 216 401  
USED in MAP-SS-DataTypes : 50 224

alertingPattern.....identifier of [14] AlertingPattern  
DEFINED in MAP-CH-DataTypes : 109

alertingPattern.....identifier of [12] AlertingPattern  
DEFINED in MAP-CH-DataTypes : 216

alertingPattern.....identifier of [5] AlertingPattern  
DEFINED in MAP-CH-DataTypes : 401

alertingPattern.....identifier of AlertingPattern  
DEFINED in MAP-SS-DataTypes : 224

alertReason.....identifier of AlertReason  
DEFINED in MAP-SM-DataTypes : 203

AlertReason.....type reference ENUMERATED  
DEFINED in MAP-SM-DataTypes : 215  
USED in MAP-SM-DataTypes : 27 203

alertReasonIndicator.....identifier of NULL  
DEFINED in MAP-SM-DataTypes : 204

alertServiceCentre.....information object reference OPERATION, Information Object  
DEFINED in MAP-ShortMessageServic : 128  
USED in MAP-Protocol : 95 145  
USED in MAP-ShortMessageServic : 17

AlertServiceCentreArg.....type reference SEQUENCE  
DEFINED in MAP-SM-DataTypes : 176  
USED in MAP-ShortMessageServic : 54 130  
USED in MAP-SM-DataTypes : 22

allAdditionalInfoTransferSS.....value reference SS-Code, '10000000'B  
DEFINED in MAP-SS-Code : 107

allAlternateSpeech-DataCDA.....value reference BearerServiceCode, '00110000'B  
DEFINED in MAP-BS-Code : 81

allAlternateSpeech-DataCDS.....value reference BearerServiceCode, '00111000'B  
DEFINED in MAP-BS-Code : 83

allAsynchronousServices.....value reference BearerServiceCode, '01100000'B  
DEFINED in MAP-BS-Code : 94

allBarringSS.....value reference SS-Code, '10010000'B  
DEFINED in MAP-SS-Code : 117

allBearerServices.....value reference BearerServiceCode, '00000000'B  
DEFINED in MAP-BS-Code : 48

allCallCompletionSS.....value reference SS-Code, '01000000'B  
DEFINED in MAP-SS-Code : 72

allCallOfferingSS.....value reference SS-Code, '00110000'B  
DEFINED in MAP-SS-Code : 63

allCallPrioritySS.....value reference SS-Code, '10100000'B  
DEFINED in MAP-SS-Code : 153

allChargingSS.....value reference SS-Code, '01110000'B  
DEFINED in MAP-SS-Code : 99

allCommunityOfInterest-SS.....value reference SS-Code, '01100000'B  
DEFINED in MAP-SS-Code : 93

allCondForwardingSS.....value reference SS-Code, '00101000'B  
DEFINED in MAP-SS-Code : 52

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 6

allDataCDA-Services.....value reference BearerServiceCode, '00010000'B  
 DEFINED in MAP-BS-Code : 50

allDataCDS-Services.....value reference BearerServiceCode, '00011000'B  
 DEFINED in MAP-BS-Code : 59

allDataCircuitAsynchronous.....value reference BearerServiceCode, '01010000'B  
 DEFINED in MAP-BS-Code : 91

allDataCircuitSynchronous.....value reference BearerServiceCode, '01011000'B  
 DEFINED in MAP-BS-Code : 97

allDataPDS-Services.....value reference BearerServiceCode, '00101000'B  
 DEFINED in MAP-BS-Code : 75

allDataTeleservices.....value reference TeleserviceCode, '01110000'B  
 DEFINED in MAP-TS-Code : 55

allEECT-Barred.....identifier of Named Number, 9  
 DEFINED in MAP-MS-DataTypes : 1026

allFacsimileTransmissionServices.....value reference TeleserviceCode, '01100000'B  
 DEFINED in MAP-TS-Code : 48

allForwardingSS.....value reference SS-Code, '00100000'B  
 DEFINED in MAP-SS-Code : 48

allGPRSData.....identifier of NULL  
 DEFINED in MAP-MS-DataTypes : 1375

allIC-CallsBarred.....identifier of Named Number, 19  
 DEFINED in MAP-MS-DataTypes : 1036

allInformationSent.....identifier of [4] NULL  
 DEFINED in MAP-MS-DataTypes : 2290

allInformationSent.....identifier of [11] NULL  
 DEFINED in MAP-CH-DataTypes : 243

allLCSPrivacyException.....value reference SS-Code, '10110000'B  
 DEFINED in MAP-SS-Code : 159

allLineIdentificationSS.....value reference SS-Code, '00010000'B  
 DEFINED in MAP-SS-Code : 25

allLSAData.....identifier of NULL  
 DEFINED in MAP-MS-DataTypes : 1382

allMOLR-SS.....value reference SS-Code, '11000000'B  
 DEFINED in MAP-SS-Code : 173

allMultiPartySS.....value reference SS-Code, '01010000'B  
 DEFINED in MAP-SS-Code : 87

allNameIdentificationSS.....value reference SS-Code, '00011000'B  
 DEFINED in MAP-SS-Code : 40

allOG-CallsBarred.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 1017

allowedGSM-Algorithms.....identifier of [4] AllowedGSM-Algorithms  
 DEFINED in MAP-MS-DataTypes : 452

AllowedGSM-Algorithms.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 465  
 USED in MAP-MS-DataTypes : 452 516

allowedGSM-Algorithms.....identifier of [9] AllowedGSM-Algorithms  
 DEFINED in MAP-MS-DataTypes : 516

allowedUMTS-Algorithms.....identifier of [5] AllowedUMTS-Algorithms  
 DEFINED in MAP-MS-DataTypes : 453

AllowedUMTS-Algorithms.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 470

USED in MAP-MS-DataTypes : 453 517

allowedUMTS-Algorithms.....identifier of [10] AllowedUMTS-Algorithms  
DEFINED in MAP-MS-DataTypes : 517

allPacketOrientedServicesBarred.....identifier of Named Number, 15  
DEFINED in MAP-MS-DataTypes : 1032

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 7

allPadAccessCA-Services.....value reference BearerServiceCode, '00100000'B  
 DEFINED in MAP-BS-Code : 66

allPLMN-specificBS.....value reference BearerServiceCode, '11010000'B  
 DEFINED in MAP-BS-Code : 109

allPLMN-specificSS.....value reference SS-Code, '11110000'B  
 DEFINED in MAP-SS-Code : 136

allPLMN-specificTS.....value reference TeleserviceCode, '11010000'B  
 DEFINED in MAP-TS-Code : 71

allShortMessageServices.....value reference TeleserviceCode, '00100000'B  
 DEFINED in MAP-TS-Code : 44

allSpeechFollowedByDataCDA.....value reference BearerServiceCode, '01000000'B  
 DEFINED in MAP-BS-Code : 85

allSpeechFollowedByDataCDS.....value reference BearerServiceCode, '01001000'B  
 DEFINED in MAP-BS-Code : 87

allSpeechTransmissionServices.....value reference TeleserviceCode, '00010000'B  
 DEFINED in MAP-TS-Code : 40

allSS.....value reference SS-Code, '00000000'B  
 DEFINED in MAP-SS-Code : 21

allSynchronousServices.....value reference BearerServiceCode, '01101000'B  
 DEFINED in MAP-BS-Code : 100

allTeleservices.....value reference TeleserviceCode, '00000000'B  
 DEFINED in MAP-TS-Code : 38

allTeleservices-ExeptSMS.....value reference TeleserviceCode, '10000000'B  
 DEFINED in MAP-TS-Code : 58

allVoiceGroupCallServices.....value reference TeleserviceCode, '10010000'B  
 DEFINED in MAP-TS-Code : 67

anonymousLocation.....identifier of Named Number, 3  
 DEFINED in MAP-CommonDataTypes : 386

anyTimeInterrogation.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 251  
 USED in MAP-Protocol : 35 136  
 USED in MAP-MobileServiceOpera : 27

AnyTimeInterrogationArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2105  
 USED in MAP-MobileServiceOpera : 152 253  
 USED in MAP-MS-DataTypes : 111

AnyTimeInterrogationRes.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2112  
 USED in MAP-MobileServiceOpera : 153 255  
 USED in MAP-MS-DataTypes : 112

anyTimeModification.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 284  
 USED in MAP-Protocol : 37 136  
 USED in MAP-MobileServiceOpera : 31

AnyTimeModificationArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2220  
 USED in MAP-MobileServiceOpera : 148 286  
 USED in MAP-MS-DataTypes : 117

AnyTimeModificationRes.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2231  
 USED in MAP-MobileServiceOpera : 149 288  
 USED in MAP-MS-DataTypes : 118

anyTimeSubscriptionInterrogation....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 266

USED in MAP-Protocol : 36 136  
USED in MAP-MobileServiceOpera : 30

AnyTimeSubscriptionInterrogationArg....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2119  
USED in MAP-MobileServiceOpera : 146 268  
USED in MAP-MS-DataTypes : 115

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 8

AnyTimeSubscriptionInterrogationRes.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2127  
 USED in MAP-MobileServiceOpera : 147 270  
 USED in MAP-MS-DataTypes : 116

an-APDU.....identifier of AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 448

an-APDU.....identifier of [2] AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 510

an-APDU.....identifier of [2] AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 567

an-APDU.....identifier of [3] AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 615

an-APDU.....identifier of AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 623

an-APDU.....identifier of AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 628

an-APDU.....identifier of AccessNetworkSignallInfo  
 DEFINED in MAP-MS-DataTypes : 674

aocc.....value reference SS-Code, '01110010'B  
 DEFINED in MAP-SS-Code : 104

aoci.....value reference SS-Code, '01110001'B  
 DEFINED in MAP-SS-Code : 102

apn.....identifier of [20] APN  
 DEFINED in MAP-MS-DataTypes : 842

APN.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 916  
 USED in MAP-MS-DataTypes : 88 842 2063 2064  
 USED in MAP-LCS-DataTypes : 55 143

apn-InUse.....identifier of [5] APN  
 DEFINED in MAP-MS-DataTypes : 2064

apn-Subscribed.....identifier of [4] APN  
 DEFINED in MAP-MS-DataTypes : 2063

asciCallReference.....identifier of [20] ASCI-CallReference  
 DEFINED in MAP-MS-DataTypes : 525

asciCallReference.....identifier of ASCI-CallReference  
 DEFINED in MAP-GR-DataTypes : 51

ASCI-CallReference.....type reference TBCD-STRING  
 DEFINED in MAP-CommonDataTypes : 309  
 USED in MAP-MS-DataTypes : 193 525  
 USED in MAP-CommonDataTypes : 40  
 USED in MAP-GR-DataTypes : 26 51

assetManagement.....value reference LCSServiceTypeID, 4  
 DEFINED in MAP-CommonDataTypes : 399

assumedIdle.....identifier of [0] NULL  
 DEFINED in MAP-MS-DataTypes : 2041

ati-NotAllowed.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 356  
 USED in MAP-MobileServiceOpera : 91 258  
 USED in MAP-Errors : 55

ATI-NotAllowedParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 286  
 USED in MAP-Errors : 135 358  
 USED in MAP-ER-DataTypes : 39

atm-NotAllowed.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 369  
USED in MAP-MobileServiceOpera : 97 290  
USED in MAP-Errors : 59

ATM-NotAllowedParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 294

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 9

USED in MAP-Errors : 150 371  
USED in MAP-ER-DataTypes : 56

atsi-NotAllowed.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 363  
USED in MAP-MobileServiceOpera : 96 272  
USED in MAP-Errors : 58

ATSI-NotAllowedParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 290  
USED in MAP-Errors : 149 365  
USED in MAP-ER-DataTypes : 55

attach.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 905

attachChangeOfPosition.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 906

authenticationFailureReport.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 383  
USED in MAP-Protocol : 27 134  
USED in MAP-MobileServiceOpera : 46

AuthenticationFailureReportArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 381  
USED in MAP-MobileServiceOpera : 134 385  
USED in MAP-MS-DataTypes : 46

AuthenticationFailureReportRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 407  
USED in MAP-MobileServiceOpera : 135 387  
USED in MAP-MS-DataTypes : 47

AuthenticationQuintuplet.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 336  
USED in MAP-MS-DataTypes : 328

AuthenticationSetList.....type reference CHOICE  
DEFINED in MAP-MS-DataTypes : 320  
USED in MAP-MS-DataTypes : 753

authenticationSetList.....identifier of AuthenticationSetList  
DEFINED in MAP-MS-DataTypes : 753

AuthenticationTriplet.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 330  
USED in MAP-MS-DataTypes : 325

auth.....identifier of AUTN  
DEFINED in MAP-MS-DataTypes : 341

AUTN.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 371  
USED in MAP-MS-DataTypes : 341

automaticFacsimileGroup3.....value reference TeleserviceCode, '01100010'B  
DEFINED in MAP-TS-Code : 50

autonomousSelfLocation.....value reference SS-Code, '11000010'B  
DEFINED in MAP-SS-Code : 177

AUTS.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 373  
USED in MAP-MS-DataTypes : 749

auts.....identifier of AUTS  
DEFINED in MAP-MS-DataTypes : 749

availableCodecsList.....identifier of [12] AvailableCodecsList  
DEFINED in MAP-MS-DataTypes : 462

availableCodecsList.....identifier of [18] AvailableCodecsList  
DEFINED in MAP-MS-DataTypes : 528

AvailableCodecsList.....type reference SEQUENCE  
  DEFINED in MAP-MS-DataTypes : 637  
  USED in MAP-MS-DataTypes : 462 528

a-side.....identifier of Named Number, 0  
  DEFINED in MAP-CH-DataTypes : 374

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 10

baic.....value reference SS-Code, '10011010'B  
DEFINED in MAP-SS-Code : 130

baoc.....value reference SS-Code, '10010010'B  
DEFINED in MAP-SS-Code : 121

barringOfIncomingCalls.....value reference SS-Code, '10011001'B  
DEFINED in MAP-SS-Code : 128

barringOfOutgoingCalls.....value reference SS-Code, '10010001'B  
DEFINED in MAP-SS-Code : 119

barringServiceActive.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 114

basicCall.....identifier of Named Number, 0  
DEFINED in MAP-CH-DataTypes : 125

basicISTSupported.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 245

basicSelfLocation.....value reference SS-Code, '11000001'B  
DEFINED in MAP-SS-Code : 175

basicService.....identifier of Ext-BasicServiceCode  
DEFINED in MAP-MS-DataTypes : 1083

basicService.....identifier of Ext-BasicServiceCode  
DEFINED in MAP-MS-DataTypes : 1142

basicService.....identifier of Ext-BasicServiceCode  
DEFINED in MAP-MS-DataTypes : 1185

basicService.....identifier of [1] Ext-BasicServiceCode  
DEFINED in MAP-MS-DataTypes : 2240

basicService.....identifier of [1] Ext-BasicServiceCode  
DEFINED in MAP-MS-DataTypes : 2251

basicService.....identifier of [5] Ext-BasicServiceCode  
DEFINED in MAP-CH-DataTypes : 158

basicService.....identifier of BasicServiceCode  
DEFINED in MAP-SS-DataTypes : 73

basicService.....identifier of BasicServiceCode  
DEFINED in MAP-SS-DataTypes : 99

basicService.....identifier of BasicServiceCode  
DEFINED in MAP-SS-DataTypes : 156

basicService.....identifier of BasicServiceCode  
DEFINED in MAP-SS-DataTypes : 185

basicService.....identifier of BasicServiceCode  
DEFINED in MAP-ER-DataTypes : 136

BasicServiceCode.....type reference CHOICE  
DEFINED in MAP-CommonDataTypes : 445  
USED in MAP-CommonDataTypes : 47  
USED in MAP-SS-DataTypes : 49 73 99 156 185 209 264  
USED in MAP-ER-DataTypes : 73 136

basicServiceCriteria.....identifier of [1] BasicServiceCriteria  
DEFINED in MAP-MS-DataTypes : 1549

basicServiceCriteria.....identifier of [0] BasicServiceCriteria  
DEFINED in MAP-MS-DataTypes : 1557

BasicServiceCriteria.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1577  
USED in MAP-MS-DataTypes : 73 1549 1557

basicServiceGroup.....identifier of [9] Ext-BasicServiceCode  
DEFINED in MAP-CH-DataTypes : 103

basicServiceGroup.....identifier of [1] Ext-BasicServiceCode  
DEFINED in MAP-CH-DataTypes : 234

basicServiceGroup.....identifier of [3] BasicServiceCode  
DEFINED in MAP-SS-DataTypes : 209

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 11

basicServiceGroupList.....identifier of Ext-BasicServiceGroupList  
DEFINED in MAP-MS-DataTypes : 1160

basicServiceGroupList.....identifier of Ext-BasicServiceGroupList  
DEFINED in MAP-MS-DataTypes : 1205

basicServiceGroupList.....identifier of BasicServiceGroupList  
DEFINED in MAP-SS-DataTypes : 164

basicServiceGroupList.....identifier of [2] BasicServiceGroupList  
DEFINED in MAP-SS-DataTypes : 216

BasicServiceGroupList.....type reference SEQUENCE OF  
DEFINED in MAP-SS-DataTypes : 263  
USED in MAP-SS-DataTypes : 164 216

basicServiceList.....identifier of [1] BasicServiceList  
DEFINED in MAP-MS-DataTypes : 1335

BasicServiceList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1388  
USED in MAP-MS-DataTypes : 1335

bearerService.....identifier of [2] BearerServiceCode  
DEFINED in MAP-CommonDataTypes : 446

BearerServiceCode.....type reference OCTET STRING  
DEFINED in MAP-BS-Code : 11  
USED in MAP-CommonDataTypes : 70 446  
USED in MAP-BS-Code : 48 50 51 52 53 54 55 56 57  
59 60 61 62 63 64 66 67 68  
69 70 71 72 73 75 76 77 78  
79 81 83 85 87 91 94 97 100  
109 110 111 112 113 114 115 116 117  
118 119 120 121 122 123 124

bearerServiceList.....identifier of [4] BearerServiceList  
DEFINED in MAP-MS-DataTypes : 978

BearerServiceList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1000  
USED in MAP-MS-DataTypes : 978 1318

bearerServiceList.....identifier of [2] BearerServiceList  
DEFINED in MAP-MS-DataTypes : 1318

bearerServiceNotProvisioned.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 258  
USED in MAP-MobileServiceOpera : 98 276 294  
USED in MAP-CallHandlingOperat : 38 95  
USED in MAP-SupplementaryServi : 38 98 116 134 155 174  
USED in MAP-Errors : 32

BearerServNotProvParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 234  
USED in MAP-Errors : 123 260  
USED in MAP-ER-DataTypes : 30

bicRoam.....value reference SS-Code, '10011011'B  
DEFINED in MAP-SS-Code : 132

blackListed.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 769

boic.....value reference SS-Code, '10010011'B  
DEFINED in MAP-SS-Code : 123

boicExHC.....value reference SS-Code, '10010100'B  
DEFINED in MAP-SS-Code : 125

bothMSCAndSGSN.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 824

broadcastInitEntitlement.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 1901

broadcastService.....identifier of Named Number, 0  
DEFINED in MAP-CommonDataTypes : 383

bssmap-ServiceHandover.....identifier of [9] BSSMAP-ServiceHandover  
DEFINED in MAP-MS-DataTypes : 458

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 12

bssmap-ServiceHandover.....identifier of [13] BSSMAP-ServiceHandover  
 DEFINED in MAP-MS-DataTypes : 522

bssmap-ServiceHandover.....identifier of BSSMAP-ServiceHandover  
 DEFINED in MAP-MS-DataTypes : 535

BSSMAP-ServiceHandover.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 542  
 USED in MAP-MS-DataTypes : 458 522 535

BSSMAP-ServiceHandoverInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 534  
 USED in MAP-MS-DataTypes : 532

bssmap-ServiceHandoverList.....identifier of [10] BSSMAP-ServiceHandoverList  
 DEFINED in MAP-MS-DataTypes : 460

bssmap-ServiceHandoverList.....identifier of [15] BSSMAP-ServiceHandoverList  
 DEFINED in MAP-MS-DataTypes : 524

BSSMAP-ServiceHandoverList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 531  
 USED in MAP-MS-DataTypes : 460 524

busy.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 134

busy.....identifier of Named Number, 2  
 DEFINED in MAP-CH-DataTypes : 384

busySubscriber.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 312  
 USED in MAP-CallHandlingOperat : 42 98 198  
 USED in MAP-Errors : 46

BusySubscriberParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 268  
 USED in MAP-Errors : 129 314  
 USED in MAP-ER-DataTypes : 35

b-side.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 375

b-subscriberNumber.....identifier of [1] ISDN-AddressString  
 DEFINED in MAP-SS-DataTypes : 207

b-subscriberNumber.....identifier of [5] ISDN-AddressString  
 DEFINED in MAP-SS-DataTypes : 280

b-subscriberSubaddress.....identifier of [2] ISDN-SubaddressString  
 DEFINED in MAP-SS-DataTypes : 208

b-Subscriber-Address.....identifier of [3] ISDN-AddressString  
 DEFINED in MAP-CH-DataTypes : 295

call.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 393

callBarred.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 324  
 USED in MAP-MobileServiceOpera : 100 278 296 469  
 USED in MAP-CallHandlingOperat : 44 100  
 USED in MAP-SupplementaryServi : 40 100 118 136 157 176 191 235 272  
 290  
 USED in MAP-ShortMessageServic : 37 79  
 USED in MAP-Errors : 49

CallBarredParam.....type reference CHOICE  
 DEFINED in MAP-ER-DataTypes : 106  
 USED in MAP-Errors : 131 326  
 USED in MAP-ER-DataTypes : 15

callBarringCause.....identifier of CallBarringCause  
 DEFINED in MAP-ER-DataTypes : 107

CallBarringCause.....type reference ENUMERATED  
DEFINED in MAP-ER-DataTypes : 113  
USED in MAP-ER-DataTypes : 107 118

callBarringCause.....identifier of CallBarringCause  
DEFINED in MAP-ER-DataTypes : 118

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 13

callBarringData.....identifier of [2] CallBarringData  
DEFINED in MAP-MS-DataTypes : 2129

CallBarringData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2177  
USED in MAP-MS-DataTypes : 2129

CallBarringFeature.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 155  
USED in MAP-SS-DataTypes : 153

callBarringFeatureList.....identifier of Ext-CallBarFeatureList  
DEFINED in MAP-MS-DataTypes : 1134

callBarringFeatureList.....identifier of Ext-CallBarFeatureList  
DEFINED in MAP-MS-DataTypes : 2178

callBarringFeatureList.....identifier of [1] Ext-CallBarFeatureList  
DEFINED in MAP-MS-DataTypes : 2331

callBarringFeatureList.....identifier of CallBarringFeatureList  
DEFINED in MAP-SS-DataTypes : 149

CallBarringFeatureList.....type reference SEQUENCE OF  
DEFINED in MAP-SS-DataTypes : 152  
USED in MAP-SS-DataTypes : 149

callBarringInfo.....identifier of [1] Ext-CallBarInfo  
DEFINED in MAP-MS-DataTypes : 1068

callBarringInfo.....identifier of [1] CallBarringInfo  
DEFINED in MAP-SS-DataTypes : 86

CallBarringInfo.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 147  
USED in MAP-SS-DataTypes : 86

callBarringInfoFor-CSE.....identifier of [1] Ext-CallBarringInfoFor-CSE  
DEFINED in MAP-MS-DataTypes : 2287

callBarringInfoFor-CSE.....identifier of [1] Ext-CallBarringInfoFor-CSE  
DEFINED in MAP-MS-DataTypes : 2319

CallDirection.....type reference OCTET STRING  
DEFINED in MAP-CH-DataTypes : 302  
USED in MAP-CH-DataTypes : 294

callDiversionTreatmentIndicator.....identifier of [20] CallDiversionTreatmentIndicator  
DEFINED in MAP-CH-DataTypes : 115

CallDiversionTreatmentIndicator.....type reference OCTET STRING  
DEFINED in MAP-CH-DataTypes : 143  
USED in MAP-CH-DataTypes : 115

calledPartySS-InteractionViolation.....identifier of Named Number, 7  
DEFINED in MAP-ER-DataTypes : 132

callForwardingData.....identifier of [1] CallForwardingData  
DEFINED in MAP-MS-DataTypes : 2128

CallForwardingData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2171  
USED in MAP-MS-DataTypes : 2128

callInfo.....identifier of [1] ExternalSignalInfo  
DEFINED in MAP-CH-DataTypes : 397

callInfo.....identifier of [3] ExternalSignalInfo  
DEFINED in MAP-SS-DataTypes : 313

callOriginator.....identifier of [8] NULL  
DEFINED in MAP-GR-DataTypes : 118

callOutcome.....identifier of [1] CallOutcome  
DEFINED in MAP-CH-DataTypes : 369

CallOutcome.....type reference ENUMERATED

DEFINED in MAP-CH-DataTypes : 381

USED in MAP-CH-DataTypes : 369

callReferenceNumber.....identifier of [7] CallReferenceNumber

DEFINED in MAP-CH-DataTypes : 101

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 14

CallReferenceNumber.....type reference OCTET STRING

DEFINED in MAP-CH-DataTypes : 130  
USED in MAP-CH-DataTypes : 22 101 212 233

callReferenceNumber.....identifier of [9] CallReferenceNumber  
DEFINED in MAP-CH-DataTypes : 212

callReferenceNumber.....identifier of [0] CallReferenceNumber  
DEFINED in MAP-CH-DataTypes : 233

callReportdata.....identifier of [2] CallReportData  
DEFINED in MAP-CH-DataTypes : 358

CallReportData.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 367  
USED in MAP-CH-DataTypes : 358

callSessionRelated.....value reference SS-Code, '10110010'B  
DEFINED in MAP-SS-Code : 163

callSessionUnrelated.....value reference SS-Code, '10110011'B  
DEFINED in MAP-SS-Code : 166

callTerminationIndicator.....identifier of [2] CallTerminationIndicator  
DEFINED in MAP-CH-DataTypes : 434

CallTerminationIndicator.....type reference ENUMERATED  
DEFINED in MAP-CH-DataTypes : 447  
USED in MAP-CH-DataTypes : 434

callToClientNotSetup.....identifier of Named Number, 2  
DEFINED in MAP-ER-DataTypes : 355

callTypeCriteria.....identifier of [2] CallTypeCriteria  
DEFINED in MAP-MS-DataTypes : 1550

CallTypeCriteria.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1588  
USED in MAP-MS-DataTypes : 1550

call-Direction.....identifier of [2] CallDirection  
DEFINED in MAP-CH-DataTypes : 294

camelBusy.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 2042

camelCapabilityHandling.....identifier of [1] CamelCapabilityHandling  
DEFINED in MAP-MS-DataTypes : 870

camelCapabilityHandling.....identifier of [1] CamelCapabilityHandling  
DEFINED in MAP-MS-DataTypes : 1443

camelCapabilityHandling.....identifier of [0] CamelCapabilityHandling  
DEFINED in MAP-MS-DataTypes : 1501

CamelCapabilityHandling.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 1618  
USED in MAP-MS-DataTypes : 72 870 1443 1501 1669 1785

camelCapabilityHandling.....identifier of [1] CamelCapabilityHandling  
DEFINED in MAP-MS-DataTypes : 1669

camelCapabilityHandling.....identifier of [0] CamelCapabilityHandling  
DEFINED in MAP-MS-DataTypes : 1785

camellInfo.....identifier of [11] CamellInfo  
DEFINED in MAP-CH-DataTypes : 105

CamellInfo.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 265  
USED in MAP-CH-DataTypes : 105

camelRoutingInfo.....identifier of [8] CamelRoutingInfo  
DEFINED in MAP-CH-DataTypes : 274

CamelRoutingInfo.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 276  
USED in MAP-CH-DataTypes : 274

camelSubscriptionInfoWithdraw.....identifier of [9] NULL  
DEFINED in MAP-MS-DataTypes : 1343

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 15

camel-invoked.....identifier of Named Number, 1  
 DEFINED in MAP-SS-DataTypes : 319

camel-SubscriptionInfo.....identifier of [4] CAMEL-SubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2131

CAMEL-SubscriptionInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2193  
 USED in MAP-MS-DataTypes : 2131 2233 2289

camel-SubscriptionInfo.....identifier of [1] CAMEL-SubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2233

camel-SubscriptionInfo.....identifier of [3] CAMEL-SubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2289

cancelDeferredLocation.....identifier of Named Number, 4  
 DEFINED in MAP-LCS-DataTypes : 124

cancellationType.....identifier of CancellationType  
 DEFINED in MAP-MS-DataTypes : 272

CancellationType.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 276  
 USED in MAP-MS-DataTypes : 272

cancelLocation.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 190  
 USED in MAP-Protocol : 17 131  
 USED in MAP-MobileServiceOpera : 16

CancelLocationArg.....type reference [3] SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 270  
 USED in MAP-MobileServiceOpera : 116 192  
 USED in MAP-MS-DataTypes : 18

CancelLocationRes.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 282  
 USED in MAP-MobileServiceOpera : 117 194  
 USED in MAP-MS-DataTypes : 19

category.....identifier of [2] Category  
 DEFINED in MAP-MS-DataTypes : 976

Category.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 993  
 USED in MAP-MS-DataTypes : 976

CauseValue.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 1606  
 USED in MAP-MS-DataTypes : 1597 1600

ccbsIdle.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 347

ccbsNotIdle.....identifier of Named Number, 0  
 DEFINED in MAP-CH-DataTypes : 346

ccbsNotReachable.....identifier of Named Number, 2  
 DEFINED in MAP-CH-DataTypes : 348

ccbs-A.....value reference SS-Code, '01000011'B  
 DEFINED in MAP-SS-Code : 79

ccbs-B.....value reference SS-Code, '01000100'B  
 DEFINED in MAP-SS-Code : 81

ccbs-Busy.....identifier of [1] NULL  
 DEFINED in MAP-ER-DataTypes : 272

ccbs-Call.....identifier of [15] NULL  
 DEFINED in MAP-CH-DataTypes : 110

ccbs-Call.....identifier of [13] NULL

DEFINED in MAP-CH-DataTypes : 217  
ccbs-Data.....identifier of [1] CCBS-Data  
DEFINED in MAP-SS-DataTypes : 306  
CCBS-Data.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 309

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 16

USED in MAP-SS-DataTypes : 306

ccbs-Feature.....identifier of [2] CCBS-Feature  
DEFINED in MAP-CH-DataTypes : 398

CCBS-Feature.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 205  
USED in MAP-CH-DataTypes : 59 398  
USED in MAP-SS-DataTypes : 36 201 310 324

ccbs-Feature.....identifier of [0] CCBS-Feature  
DEFINED in MAP-SS-DataTypes : 310

ccbs-Feature.....identifier of [0] CCBS-Feature  
DEFINED in MAP-SS-DataTypes : 324

ccbs-FeatureList.....identifier of [2] CCBS-FeatureList  
DEFINED in MAP-SS-DataTypes : 195

CCBS-FeatureList.....type reference SEQUENCE OF  
DEFINED in MAP-SS-DataTypes : 200  
USED in MAP-SS-DataTypes : 195

ccbs-Index.....identifier of [0] CCBS-Index  
DEFINED in MAP-SS-DataTypes : 206

CCBS-Index.....type reference INTEGER  
DEFINED in MAP-SS-DataTypes : 212  
USED in MAP-SS-DataTypes : 206 329

ccbs-Index.....identifier of [1] CCBS-Index  
DEFINED in MAP-SS-DataTypes : 329

ccbs-Indicators.....identifier of [11] CCBS-Indicators  
DEFINED in MAP-CH-DataTypes : 165

CCBS-Indicators.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 182  
USED in MAP-CH-DataTypes : 165

ccbs-Monitoring.....identifier of [2] ReportingState  
DEFINED in MAP-CH-DataTypes : 328

ccbs-Possible.....identifier of [0] NULL  
DEFINED in MAP-CH-DataTypes : 183

ccbs-Possible.....identifier of [8] NULL  
DEFINED in MAP-CH-DataTypes : 240

ccbs-Possible.....identifier of [0] NULL  
DEFINED in MAP-ER-DataTypes : 271

ccbs-RequestState.....identifier of [6] CCBS-RequestState  
DEFINED in MAP-SS-DataTypes : 281

CCBS-RequestState.....type reference ENUMERATED  
DEFINED in MAP-SS-DataTypes : 284  
USED in MAP-SS-DataTypes : 281

ccbs-SubscriberStatus.....identifier of [0] CCBS-SubscriberStatus  
DEFINED in MAP-CH-DataTypes : 341

CCBS-SubscriberStatus.....type reference ENUMERATED  
DEFINED in MAP-CH-DataTypes : 345  
USED in MAP-CH-DataTypes : 341 363

ccbs-SubscriberStatus.....identifier of [0] CCBS-SubscriberStatus  
DEFINED in MAP-CH-DataTypes : 363

cd.....value reference SS-Code, '00100100'B  
DEFINED in MAP-SS-Code : 60

cellGlobalIdOrServiceAreaIdFixedLength..identifier of [0] CellGlobalIdOrServiceAreaIdFixedLength  
DEFINED in MAP-CommonDataTypes : 412

CellGlobalIdOrServiceAreaIdFixedLength..type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 415  
USED in MAP-CommonDataTypes : 412

cellGlobalIdOrServiceAreaIdOrLAI.....identifier of [3] CellGlobalIdOrServiceAreaIdOrLAI  
DEFINED in MAP-MS-DataTypes : 1980

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 17

cellGlobalIdOrServiceAreaIdOrLAI.....identifier of [0] CellGlobalIdOrServiceAreaIdOrLAI  
 DEFINED in MAP-MS-DataTypes : 1994

CellGlobalIdOrServiceAreaIdOrLAI.....type reference CHOICE  
 DEFINED in MAP-CommonDataTypes : 411  
 USED in MAP-MS-DataTypes : 182 1980 1994  
 USED in MAP-CommonDataTypes : 44

cfb.....value reference SS-Code, '00101001'B  
 DEFINED in MAP-SS-Code : 54

fnrc.....value reference SS-Code, '00101011'B  
 DEFINED in MAP-SS-Code : 58

fnry.....value reference SS-Code, '00101010'B  
 DEFINED in MAP-SS-Code : 56

fu.....value reference SS-Code, '00100001'B  
 DEFINED in MAP-SS-Code : 50

cf-Enhancements.....identifier of Named Number, 14  
 DEFINED in MAP-MS-DataTypes : 1661

changeOfPositionDP.....identifier of Named Number, 11  
 DEFINED in MAP-MS-DataTypes : 1658

channelType.....identifier of [0] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 315

chargeableECT-Barred.....identifier of Named Number, 10  
 DEFINED in MAP-MS-DataTypes : 1027

chargingCharacteristics.....identifier of [18] ChargingCharacteristics  
 DEFINED in MAP-MS-DataTypes : 793

ChargingCharacteristics.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 940  
 USED in MAP-MS-DataTypes : 793 846 2074

chargingCharacteristics.....identifier of [15] ChargingCharacteristics  
 DEFINED in MAP-MS-DataTypes : 2074

chargingId.....identifier of [14] GPRSChargingID  
 DEFINED in MAP-MS-DataTypes : 2073

chargingIndicator.....identifier of Named Number, 8  
 DEFINED in MAP-MS-DataTypes : 1655

checkIMEI.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 397  
 USED in MAP-Protocol : 28 134  
 USED in MAP-MobileServiceOpera : 49

chosenChannel.....identifier of [4] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 296

chosenChannel.....identifier of [1] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 316

chosenChannel.....identifier of [0] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 321

chosenChannellInfo.....identifier of [0] ChosenChannellInfo  
 DEFINED in MAP-MS-DataTypes : 597

ChosenChannellInfo.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 602  
 USED in MAP-MS-DataTypes : 597

ChosenEncryptionAlgorithm.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 589  
 USED in MAP-MS-DataTypes : 578

ChosenIntegrityProtectionAlgorithm.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 582

USED in MAP-MS-DataTypes : 577

chosenRadioResourceInformation.....identifier of [6] ChosenRadioResourceInformation  
DEFINED in MAP-MS-DataTypes : 571

ChosenRadioResourceInformation.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 596

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 18

USED in MAP-MS-DataTypes : 571 631

chosenRadioResourceInformation.....identifier of [3] ChosenRadioResourceInformation  
DEFINED in MAP-MS-DataTypes : 631

chosenSpeechVersion.....identifier of [1] ChosenSpeechVersion  
DEFINED in MAP-MS-DataTypes : 598

ChosenSpeechVersion.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 606  
USED in MAP-MS-DataTypes : 598

cipheringAlgorithm.....identifier of CipheringAlgorithm  
DEFINED in MAP-GR-DataTypes : 53

CipheringAlgorithm.....type reference OCTET STRING  
DEFINED in MAP-GR-DataTypes : 99  
USED in MAP-GR-DataTypes : 53

citySightseeing.....value reference LCSServiceTypeID, 9  
DEFINED in MAP-CommonDataTypes : 404

ck.....identifier of CK  
DEFINED in MAP-MS-DataTypes : 339

ck.....identifier of CK  
DEFINED in MAP-MS-DataTypes : 354

CK.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 367  
USED in MAP-MS-DataTypes : 339 354

cksn.....identifier of Cksn  
DEFINED in MAP-MS-DataTypes : 350

Cksn.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 375  
USED in MAP-MS-DataTypes : 350

clientIdentity.....identifier of LCSClientExternalID  
DEFINED in MAP-MS-DataTypes : 1257

clientNotInMSPrivacyExceptionList.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 354

clip.....value reference SS-Code, '00010001'B  
DEFINED in MAP-SS-Code : 28

clir.....value reference SS-Code, '00010010'B  
DEFINED in MAP-SS-Code : 30

cliRestrictionOption.....identifier of [2] CliRestrictionOption  
DEFINED in MAP-SS-DataTypes : 171

CliRestrictionOption.....type reference ENUMERATED  
DEFINED in MAP-SS-DataTypes : 174  
USED in MAP-SS-DataTypes : 29 171 191

cliRestrictionOption.....identifier of CliRestrictionOption  
DEFINED in MAP-SS-DataTypes : 191

clir-invoked.....identifier of Named Number, 0  
DEFINED in MAP-SS-DataTypes : 318

cnap.....value reference SS-Code, '00011001'B  
DEFINED in MAP-SS-Code : 42

Code.....type reference CHOICE  
DEFINED in Remote-Operations-Info : 114  
USED in Remote-Operations-Info : 25 46

Codec.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 657  
USED in MAP-MS-DataTypes : 461 527 574 635 645 646 647 648 649  
650 651 652

codec1.....identifier of [1] Codec  
DEFINED in MAP-MS-DataTypes : 645

codec2.....identifier of [2] Codec  
DEFINED in MAP-MS-DataTypes : 646

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 19

codec3.....identifier of [3] Codec  
DEFINED in MAP-MS-DataTypes : 647

codec4.....identifier of [4] Codec  
DEFINED in MAP-MS-DataTypes : 648

codec5.....identifier of [5] Codec  
DEFINED in MAP-MS-DataTypes : 649

codec6.....identifier of [6] Codec  
DEFINED in MAP-MS-DataTypes : 650

codec7.....identifier of [7] Codec  
DEFINED in MAP-MS-DataTypes : 651

codec8.....identifier of [8] Codec  
DEFINED in MAP-MS-DataTypes : 652

CodecList.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 644  
USED in MAP-MS-DataTypes : 638 639

codec-Info.....identifier of CODEC-Info  
DEFINED in MAP-GR-DataTypes : 52

CODEC-Info.....type reference OCTET STRING  
DEFINED in MAP-GR-DataTypes : 95  
USED in MAP-GR-DataTypes : 52

collectedInfo.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1529

colp.....value reference SS-Code, '00010011'B  
DEFINED in MAP-SS-Code : 32

colr.....value reference SS-Code, '00010100'B  
DEFINED in MAP-SS-Code : 34

completed.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 288

completeDataListIncluded.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 851

completeDataListIncluded.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 960

congestion.....identifier of Named Number, 3  
DEFINED in MAP-LCS-DataTypes : 392

congestion.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 371

ContextId.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 848  
USED in MAP-MS-DataTypes : 837 1379 2059

contextIdList.....identifier of ContextIdList  
DEFINED in MAP-MS-DataTypes : 1376

ContextIdList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1378  
USED in MAP-MS-DataTypes : 1376

continueCall.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1611

continueTransaction.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 897

continueTransaction.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1719

controllingMSC.....identifier of Named Number, 4  
DEFINED in MAP-CommonDataTypes : 355

csiActive.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 1503

csi-Active.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 873

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 20

csi-Active.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 1446

csi-Active.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 1473

csi-Active.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 1672

csi-Active.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 1732

csi-Active.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 1743

csi-Active.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 1787

cs-AllocationRetentionPriority.....identifier of [29] CS-AllocationRetentionPriority  
DEFINED in MAP-MS-DataTypes : 791

CS-AllocationRetentionPriority.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 798  
USED in MAP-MS-DataTypes : 791

cs-Domain.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1969

cs-LCS-NotSupportedByUE.....identifier of [12] NULL  
DEFINED in MAP-MS-DataTypes : 223

cug.....value reference SS-Code, '01100001'B  
DEFINED in MAP-SS-Code : 96

cugIC-CallBarred.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1171

cugOG-CallBarred.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1172

cugSubscriptionFlag.....identifier of [6] NULL  
DEFINED in MAP-CH-DataTypes : 155

CUG-CheckInfo.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 85  
USED in MAP-CH-DataTypes : 95 154 237

cug-CheckInfo.....identifier of [1] CUG-CheckInfo  
DEFINED in MAP-CH-DataTypes : 95

cug-CheckInfo.....identifier of [3] CUG-CheckInfo  
DEFINED in MAP-CH-DataTypes : 154

cug-CheckInfo.....identifier of [4] CUG-CheckInfo  
DEFINED in MAP-CH-DataTypes : 237

CUG-Feature.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1184  
USED in MAP-MS-DataTypes : 1177

cug-FeatureList.....identifier of CUG-FeatureList  
DEFINED in MAP-MS-DataTypes : 1149

CUG-FeatureList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1176  
USED in MAP-MS-DataTypes : 1149

cug-Index.....identifier of CUG-Index  
DEFINED in MAP-MS-DataTypes : 1157

CUG-Index.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 1164  
USED in MAP-MS-DataTypes : 78 1157 1186

cug-Info.....identifier of [2] CUG-Info

DEFINED in MAP-MS-DataTypes : 1069  
CUG-Info.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1147  
USED in MAP-MS-DataTypes : 79 1069  
cug-Interlock.....identifier of CUG-Interlock

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 21

DEFINED in MAP-MS-DataTypes : 1158

CUG-Interlock.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1167  
USED in MAP-MS-DataTypes : 80 1158  
USED in MAP-CH-DataTypes : 43 86

cug-Interlock.....identifier of CUG-Interlock  
DEFINED in MAP-CH-DataTypes : 86

cug-OutgoingAccess.....identifier of NULL  
DEFINED in MAP-CH-DataTypes : 87

cug-Reject.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 342  
USED in MAP-CallHandlingOperat: 47 101  
USED in MAP-Errors : 52

cug-RejectCause.....identifier of CUG-RejectCause  
DEFINED in MAP-ER-DataTypes : 124

CUG-RejectCause.....type reference ENUMERATED  
DEFINED in MAP-ER-DataTypes : 128  
USED in MAP-ER-DataTypes : 124

CUG-RejectParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 123  
USED in MAP-Errors : 134 344  
USED in MAP-ER-DataTypes : 16

CUG-Subscription.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1156  
USED in MAP-MS-DataTypes : 1154

cug-SubscriptionList.....identifier of CUG-SubscriptionList  
DEFINED in MAP-MS-DataTypes : 1148

CUG-SubscriptionList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1153  
USED in MAP-MS-DataTypes : 1148

currentLocation.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 1961

currentLocation.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 119

currentLocationRetrieved.....identifier of [8] NULL  
DEFINED in MAP-MS-DataTypes : 1986

currentLocationRetrieved.....identifier of [8] NULL  
DEFINED in MAP-MS-DataTypes : 2003

currentlyUsedCodec.....identifier of [11] Codec  
DEFINED in MAP-MS-DataTypes : 461

currentlyUsedCodec.....identifier of [17] Codec  
DEFINED in MAP-MS-DataTypes : 527

currentOrLastKnownLocation.....identifier of Named Number, 1  
DEFINED in MAP-LCS-DataTypes : 120

currentSecurityContext.....identifier of [2] CurrentSecurityContext  
DEFINED in MAP-MS-DataTypes : 314

CurrentSecurityContext.....type reference CHOICE  
DEFINED in MAP-MS-DataTypes : 344  
USED in MAP-MS-DataTypes : 314

cw.....value reference SS-Code, '01000001'B  
DEFINED in MAP-SS-Code : 75

dataCDA-1200bps.....value reference BearerServiceCode, '00010010'B  
DEFINED in MAP-BS-Code : 52

dataCDA-1200-75bps.....value reference BearerServiceCode, '00010011'B  
DEFINED in MAP-BS-Code : 53

dataCDA-2400bps.....value reference BearerServiceCode, '00010100'B  
DEFINED in MAP-BS-Code : 54

dataCDA-300bps.....value reference BearerServiceCode, '00010001'B

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 22

DEFINED in MAP-BS-Code : 51

dataCDA-4800bps.....value reference BearerServiceCode, '00010101'B  
DEFINED in MAP-BS-Code : 55

dataCDA-9600bps.....value reference BearerServiceCode, '00010110'B  
DEFINED in MAP-BS-Code : 56

dataCDS-1200bps.....value reference BearerServiceCode, '00011010'B  
DEFINED in MAP-BS-Code : 60

dataCDS-2400bps.....value reference BearerServiceCode, '00011100'B  
DEFINED in MAP-BS-Code : 61

dataCDS-4800bps.....value reference BearerServiceCode, '00011101'B  
DEFINED in MAP-BS-Code : 62

dataCDS-9600bps.....value reference BearerServiceCode, '00011110'B  
DEFINED in MAP-BS-Code : 63

dataCodingScheme.....identifier of [0] USSD-DataCodingScheme  
DEFINED in MAP-LCS-DataTypes : 158

dataCodingScheme.....identifier of [0] USSD-DataCodingScheme  
DEFINED in MAP-LCS-DataTypes : 172

dataCodingScheme.....identifier of [0] USSD-DataCodingScheme  
DEFINED in MAP-LCS-DataTypes : 230

dataMissing.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 175  
USED in MAP-MobileServiceOpe : 84 184 197 208 219 245 259 273 291  
313 328 358 378 404 417 429 451 466  
482 497 509  
USED in MAP-OperationAndMainte : 25 59 74 86  
USED in MAP-CallHandlingOperat : 32 89 113 131 141 154 169 184 194  
USED in MAP-SupplementaryServi : 35 96 114 132 153 172 188 202 217  
233 258 270 288  
USED in MAP-ShortMessageServic : 29 74 104 122 134 150  
USED in MAP-LocationServiceOpe : 25 60 75 94  
USED in MAP-SecureTransportOpe : 25 49 59  
USED in MAP-Errors : 15

DataMissingParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 187  
USED in MAP-Errors : 114 177  
USED in MAP-ER-DataTypes : 21

dataPDS-2400bps.....value reference BearerServiceCode, '00101100'B  
DEFINED in MAP-BS-Code : 76

dataPDS-4800bps.....value reference BearerServiceCode, '00101101'B  
DEFINED in MAP-BS-Code : 77

dataPDS-9600bps.....value reference BearerServiceCode, '00101110'B  
DEFINED in MAP-BS-Code : 78

deactivate.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 2278

deactivateSS.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 145  
USED in MAP-Protocol : 76 141  
USED in MAP-SupplementaryServi : 16

deactivateTraceMode.....information object reference OPERATION, Information Object  
DEFINED in MAP-OperationAndMainte : 66  
USED in MAP-Protocol : 51 138  
USED in MAP-OperationAndMainte : 14

DeactivateTraceModeArg.....type reference SEQUENCE  
DEFINED in MAP-OM-DataTypes : 54  
USED in MAP-OperationAndMainte : 37 68  
USED in MAP-OM-DataTypes : 16

DeactivateTraceModeRes.....type reference SEQUENCE  
  DEFINED in MAP-OM-DataTypes : 60  
  USED in MAP-OperationAndMainte : 38 70  
  USED in MAP-OM-DataTypes : 17

defaultCallHandling.....identifier of DefaultCallHandling  
  DEFINED in MAP-MS-DataTypes : 1464

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 23

defaultCallHandling.....identifier of [1] DefaultCallHandling  
DEFINED in MAP-MS-DataTypes : 1521

DefaultCallHandling.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1610  
USED in MAP-MS-DataTypes : 71 1464 1521 1805

defaultCallHandling.....identifier of [1] DefaultCallHandling  
DEFINED in MAP-MS-DataTypes : 1805

DefaultGPRS-Handling.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 896  
USED in MAP-MS-DataTypes : 891

defaultPriority.....identifier of EMLPP-Priority  
DEFINED in MAP-CommonDataTypes : 455

defaultPriority.....identifier of [7] EMLPP-Priority  
DEFINED in MAP-SS-DataTypes : 78

defaultPriority.....identifier of EMLPP-Priority  
DEFINED in MAP-SS-DataTypes : 166

defaultPriority.....identifier of [1] EMLPP-Priority  
DEFINED in MAP-SS-DataTypes : 194

defaultSessionHandling.....identifier of [3] DefaultGPRS-Handling  
DEFINED in MAP-MS-DataTypes : 891

defaultSMS-Handling.....identifier of [3] DefaultSMS-Handling  
DEFINED in MAP-MS-DataTypes : 1691

DefaultSMS-Handling.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1718  
USED in MAP-MS-DataTypes : 1691

deferredLocationEventType.....identifier of [1] DeferredLocationEventType  
DEFINED in MAP-LCS-DataTypes : 116

DeferredLocationEventType.....type reference BIT STRING  
DEFINED in MAP-LCS-DataTypes : 129  
USED in MAP-LCS-DataTypes : 116 371

deferredLocationEventType.....identifier of DeferredLocationEventType  
DEFINED in MAP-LCS-DataTypes : 371

deferredmt-IrData.....identifier of [9] Deferredmt-IrData  
DEFINED in MAP-LCS-DataTypes : 352

Deferredmt-IrData.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 370  
USED in MAP-LCS-DataTypes : 352

deferredmt-IrResponse.....identifier of Named Number, 3  
DEFINED in MAP-LCS-DataTypes : 383

deferredmt-IrResponseIndicator.....identifier of [3] NULL  
DEFINED in MAP-LCS-DataTypes : 244

delaytolerant.....identifier of Named Number, 1  
DEFINED in MAP-LCS-DataTypes : 211

deleted.....identifier of Named Number, 6  
DEFINED in MAP-SS-DataTypes : 291

deleteSubscriberData.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 422  
USED in MAP-Protocol : 30 135  
USED in MAP-MobileServiceOpera : 53

DeleteSubscriberDataArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1333  
USED in MAP-MobileServiceOpera : 139 424  
USED in MAP-MS-DataTypes : 57

DeleteSubscriberDataRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1393  
USED in MAP-MobileServiceOpera : 140 426  
USED in MAP-MS-DataTypes : 58

deliveryOutcomeIndicator.....identifier of [3] NULL

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 24

DEFINED in MAP-SM-DataTypes : 153

destinationNumberCriteria.....identifier of [0] DestinationNumberCriteria  
DEFINED in MAP-MS-DataTypes : 1548

DestinationNumberCriteria.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1561  
USED in MAP-MS-DataTypes : 1548

destinationNumberLengthList.....identifier of [2] DestinationNumberLengthList  
DEFINED in MAP-MS-DataTypes : 1564

DestinationNumberLengthList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1574  
USED in MAP-MS-DataTypes : 1564

destinationNumberList.....identifier of [1] DestinationNumberList  
DEFINED in MAP-MS-DataTypes : 1563

DestinationNumberList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1569  
USED in MAP-MS-DataTypes : 1563

dfc-WithArgument.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 1652

diagnosticInfo.....identifier of SignallInfo  
DEFINED in MAP-ER-DataTypes : 157

dialedNumber.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1461

disallowedByLocalRegulatoryRequirements.identifier of Named Number, 4  
DEFINED in MAP-ER-DataTypes : 357

disconnectLeg.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1650

DomainType.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1968  
USED in MAP-MS-DataTypes : 1962

doublyChargeableECT-Barred.....identifier of Named Number, 13  
DEFINED in MAP-MS-DataTypes : 1030

downlinkAttached.....identifier of [5] NULL  
DEFINED in MAP-GR-DataTypes : 115

dp-AnalysedInfoCriteriaList.....identifier of [0] DP-AnalysedInfoCriteriaList  
DEFINED in MAP-MS-DataTypes : 1442

DP-AnalysedInfoCriteriaList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1455  
USED in MAP-MS-DataTypes : 1442

DP-AnalysedInfoCriterium.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1460  
USED in MAP-MS-DataTypes : 1456

dtrmf-MidCall.....identifier of Named Number, 7  
DEFINED in MAP-MS-DataTypes : 1654

dualCommunication.....identifier of [7] NULL  
DEFINED in MAP-GR-DataTypes : 117

d-csi.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1357

d-CSI.....identifier of [9] D-CSI  
DEFINED in MAP-MS-DataTypes : 1409

D-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1441  
USED in MAP-MS-DataTypes : 66 1409 2196 2215  
USED in MAP-CH-DataTypes : 45 245 289

d-csi.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1635

d-csi.....identifier of Named Number, 8  
DEFINED in MAP-MS-DataTypes : 2160

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 25

d-CSI.....identifier of [2] D-CSI  
DEFINED in MAP-MS-DataTypes : 2196

d-csi.....identifier of [12] D-CSI  
DEFINED in MAP-CH-DataTypes : 245

d-csi.....identifier of [5] D-CSI  
DEFINED in MAP-CH-DataTypes : 289

d-IM-CSI.....identifier of Named Number, 12  
DEFINED in MAP-MS-DataTypes : 1366

d-IM-CSI.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 2166

d-IM-CSI.....identifier of [20] D-CSI  
DEFINED in MAP-MS-DataTypes : 2215

ect.....value reference SS-Code, '00110001'B  
DEFINED in MAP-SS-Code : 66

eir.....identifier of Named Number, 6  
DEFINED in MAP-CommonDataTypes : 357

ellipsoidArc.....identifier of Named Number, 6  
DEFINED in MAP-LCS-DataTypes : 223

ellipsoidPoint.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 217

ellipsoidPointWithAltitude.....identifier of Named Number, 4  
DEFINED in MAP-LCS-DataTypes : 221

ellipsoidPointWithAltitudeAndUncertainty.....identifier of Named Number, 5  
DEFINED in MAP-LCS-DataTypes : 222

ellipsoidPointWithUncertaintyCircle.....identifier of Named Number, 1  
DEFINED in MAP-LCS-DataTypes : 218

ellipsoidPointWithUncertaintyEllipse.....identifier of Named Number, 2  
DEFINED in MAP-LCS-DataTypes : 219

emergencyAlertServices.....value reference LCSServiceTypeID, 1  
DEFINED in MAP-CommonDataTypes : 396

emergencyCall.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 394

emergencyCallOrigination.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 379

emergencyCallRelease.....identifier of Named Number, 1  
DEFINED in MAP-LCS-DataTypes : 380

emergencyCalls.....value reference TeleserviceCode, '00010010'B  
DEFINED in MAP-TS-Code : 42

emergencyServices.....value reference LCSServiceTypeID, 0  
DEFINED in MAP-CommonDataTypes : 395

emergencyServices.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 147

emlpp.....value reference SS-Code, '10100001'B  
DEFINED in MAP-SS-Code : 156

emlpp-Info.....identifier of [4] EMLPP-Info  
DEFINED in MAP-MS-DataTypes : 1071

EMLPP-Info.....type reference SEQUENCE  
DEFINED in MAP-CommonDataTypes : 453  
USED in MAP-MS-DataTypes : 185 1071  
USED in MAP-CommonDataTypes : 49

EMLPP-Priority.....type reference INTEGER

DEFINED in MAP-CommonDataTypes : 459  
USED in MAP-CommonDataTypes : 50 454 455 465 466 467 468 469 470  
471  
USED in MAP-SS-DataTypes : 51 78 166 193 194  
USED in MAP-GR-DataTypes : 25 56

enabling.....identifier of Named Number, 1

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 26

DEFINED in MAP-MS-DataTypes : 1594

encryptionAlgorithm.....identifier of [1] ChosenEncryptionAlgorithm  
DEFINED in MAP-MS-DataTypes : 578

encryptionAlgorithms.....identifier of [1] PermittedEncryptionAlgorithms  
DEFINED in MAP-MS-DataTypes : 472

encryptionInfo.....identifier of [1] EncryptionInformation  
DEFINED in MAP-MS-DataTypes : 450

encryptionInfo.....identifier of [6] EncryptionInformation  
DEFINED in MAP-MS-DataTypes : 514

EncryptionInformation.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 724  
USED in MAP-MS-DataTypes : 450 514

enterNewPW.....identifier of Named Number, 1  
DEFINED in MAP-SS-DataTypes : 249

enterNewPW-Again.....identifier of Named Number, 2  
DEFINED in MAP-SS-DataTypes : 250

enterPW.....identifier of Named Number, 0  
DEFINED in MAP-SS-DataTypes : 248

entityReleased.....identifier of Named Number, 4  
DEFINED in MAP-MS-DataTypes : 1651

equipmentNotSM-Equipped.....identifier of Named Number, 2  
DEFINED in MAP-ER-DataTypes : 149

equipmentProtocolError.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 148

EquipmentStatus.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 767  
USED in MAP-MobileServiceOpera : 136 401  
USED in MAP-MS-DataTypes : 50

eraseCC-Entry.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 281  
USED in MAP-Protocol : 85 143  
USED in MAP-SupplementaryServi : 25

EraseCC-EntryArg.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 327  
USED in MAP-SupplementaryServi : 73 283  
USED in MAP-SS-DataTypes : 39

EraseCC-EntryRes.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 332  
USED in MAP-SupplementaryServi : 74 285  
USED in MAP-SS-DataTypes : 40

eraseSS.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 106  
USED in MAP-Protocol : 74 141  
USED in MAP-SupplementaryServi : 14

ERROR.....information object class reference CLASS  
DEFINED in Remote-Operations-Info : 42  
USED in Remote-Operations-Info : 19  
USED in MAP-Errors : 101 169 175 182 189 196 202 210 217  
223 226 233 239 244 251 258 265 275  
278 281 289 298 304 312 318 324 330  
336 342 348 356 363 369 375 384 391  
397 404 411 417 420 423 428 431 434  
440 448 454 459 465 473 481 487 493  
499 505 513

errorCode.....identifier of [1] ErrorCode  
DEFINED in MAP-ST-DataTypes : 85

ErrorCode.....type reference CHOICE  
  DEFINED in MAP-ST-DataTypes : 92  
  USED in MAP-ST-DataTypes : 85

errorundefined.....identifier of Named Number, 1  
  DEFINED in MAP-LCS-DataTypes : 390

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 27

ets-300102-1.....identifier of Named Number, 4  
DEFINED in MAP-CommonDataTypes : 222

ets-300356.....identifier of Named Number, 1  
DEFINED in MAP-CommonDataTypes : 233

eventMet.....identifier of [0] MM-Code  
DEFINED in MAP-MS-DataTypes : 2302

eventReportData.....identifier of [1] EventReportData  
DEFINED in MAP-CH-DataTypes : 357

EventReportData.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 362  
USED in MAP-CH-DataTypes : 357

extendedRoutingInfo.....identifier of ExtendedRoutingInfo  
DEFINED in MAP-CH-DataTypes : 153

ExtendedRoutingInfo.....type reference CHOICE  
DEFINED in MAP-CH-DataTypes : 272  
USED in MAP-CH-DataTypes : 153

extensibleCallBarredParam.....identifier of ExtensibleCallBarredParam  
DEFINED in MAP-ER-DataTypes : 109

ExtensibleCallBarredParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 117  
USED in MAP-ER-DataTypes : 109

extensibleSystemFailureParam.....identifier of ExtensibleSystemFailureParam  
DEFINED in MAP-ER-DataTypes : 178

ExtensibleSystemFailureParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 182  
USED in MAP-ER-DataTypes : 178

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 219

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 227

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 267

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 273

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 283

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 290

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 296

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 306

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 315

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 384

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 408

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 421

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 429

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 442

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 455

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 28

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 473

extensionContainer.....identifier of [8] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 519

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 572

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 579

extensionContainer.....identifier of [5] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 617

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 624

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 633

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 640

extensionContainer.....identifier of [9] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 653

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 675

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 679

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 741

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 754

extensionContainer.....identifier of [14] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 777

extensionContainer.....identifier of [21] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 843

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 855

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 861

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 871

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 892

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 956

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 965

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1013

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1076

extensionContainer.....identifier of [9] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1092

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1135

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1144

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1150

extensionContainer.....identifier of [0] ExtensionContainer

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 29

DEFINED in MAP-MS-DataTypes : 1161

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1188

extensionContainer.....identifier of [5] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1206

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1229

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1262

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1294

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1305

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1323

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1344

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1395

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1400

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1444

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1465

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1470

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1481

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1499

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1522

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1553

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1670

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1692

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1730

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1741

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1783

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1806

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1825

extensionContainer.....identifier of [3] ExtensionContainer

DEFINED in MAP-MS-DataTypes : 1832  
extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1841  
extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1846

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 30

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1855

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1859

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1872

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1879

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1896

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1902

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1915

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1920

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1926

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1959

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1981

extensionContainer.....identifier of [5] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 1999

extensionContainer.....identifier of [17] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2076

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2109

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2114

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2123

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2134

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2145

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2174

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2182

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2190

extensionContainer.....identifier of [13] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2207

extensionContainer.....identifier of [5] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2226

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2234

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2246

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2256

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2262

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 31

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2269

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2291

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2295

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2307

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2314

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2326

extensionContainer.....identifier of [5] ExtensionContainer  
DEFINED in MAP-MS-DataTypes : 2335

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 203

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 229

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 245

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 362

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 379

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 456

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-CommonDataTypes : 478

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-OM-DataTypes : 41

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-OM-DataTypes : 51

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-OM-DataTypes : 57

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-OM-DataTypes : 61

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 88

extensionContainer.....identifier of [13] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 107

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 161

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 185

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 199

extensionContainer.....identifier of [11] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 214

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 229

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 239

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 252

extensionContainer.....identifier of ExtensionContainer

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 32

DEFINED in MAP-CH-DataTypes : 262

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 268

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 279

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 285

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 299

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 311

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 317

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 322

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 329

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 342

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 359

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 364

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 370

extensionContainer.....identifier of [0] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 392

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 402

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 407

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 428

extensionContainer.....identifier of [3] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 435

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 440

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-CH-DataTypes : 444

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-SS-DataTypes : 278

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SS-DataTypes : 295

extensionContainer.....identifier of [6] ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 57

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 81

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 87

extensionContainer.....identifier of ExtensionContainer

DEFINED in MAP-SM-DataTypes : 109

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 115

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 123

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 33

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 128

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 148

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 172

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 184

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 207

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-SM-DataTypes : 211

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 58

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 63

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 68

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 72

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 82

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-GR-DataTypes : 90

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 70

extensionContainer.....identifier of [2] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 76

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 84

extensionContainer.....identifier of [8] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 102

extensionContainer.....identifier of [4] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 189

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 241

extensionContainer.....identifier of [7] ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 349

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-LCS-DataTypes : 406

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 99

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 119

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 125

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 158

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 165

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 184

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 188

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 34

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 192

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 196

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 202

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 206

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 219

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 223

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 227

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 231

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 235

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 239

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 243

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 247

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 251

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 269

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 275

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 279

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 283

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 287

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 291

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 295

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 299

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 303

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 307

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 311

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 315

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 322

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 326

extensionContainer.....identifier of ExtensionContainer

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 35

DEFINED in MAP-ER-DataTypes : 330

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 334

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 344

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 349

extensionContainer.....identifier of [1] ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 367

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 385

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 389

extensionContainer.....identifier of ExtensionContainer  
DEFINED in MAP-ER-DataTypes : 393

ExtensionContainer.....type reference SEQUENCE

DEFINED in MAP-ExtensionDataTypes : 30

USED in MAP-MS-DataTypes : 198 219 227 267 273 283 290 296 306

315 384 408 421 429 442 455 473 519  
572 579 617 624 633 640 653 675 679  
741 754 777 843 855 861 871 892 956  
965 1013 1076 1092 1135 1144 1150 1161 1188  
1206 1229 1262 1294 1305 1323 1344 1395 1400  
1444 1465 1470 1481 1499 1522 1553 1670 1692  
1730 1741 1783 1806 1825 1832 1841 1846 1855  
1859 1872 1879 1896 1902 1915 1920 1926 1959  
1981 1999 2076 2109 2114 2123 2134 2145 2174  
2182 2190 2207 2226 2234 2246 2256 2262 2269  
2291 2295 2307 2314 2326 2335

USED in MAP-CommonDataTypes : 81 203 229 245 362 379 456 478

USED in MAP-OM-DataTypes : 27 41 51 57 61

USED in MAP-CH-DataTypes : 78 88 107 161 185 199 214 229 239  
252 262 268 279 285 299 311 317 322  
329 342 359 364 370 392 402 407 428

435 440 444

USED in MAP-SS-DataTypes : 59 278 295

USED in MAP-SM-DataTypes : 46 57 81 87 109 115 123 128 148  
172 184 207 211

USED in MAP-GR-DataTypes : 42 58 63 68 72 82 90

USED in MAP-LCS-DataTypes : 44 70 76 84 102 189 241 349 406

USED in MAP-ER-DataTypes : 91 99 119 125 158 165 184 188 192  
196 202 206 219 223 227 231 235 239  
243 247 251 269 275 279 283 287 291  
295 299 303 307 311 315 322 326 330

334 344 349 367 385 389 393

USED in MAP-ExtensionDataTypes : 16

ExtensionSet.....information object set reference MAP-EXTENSION, Information Object Set

DEFINED in MAP-ExtensionDataTypes : 46

USED in MAP-ExtensionDataTypes : 40 42

externalAddress.....identifier of [0] AddressString

DEFINED in MAP-CommonDataTypes : 378

ExternalClient.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1256

USED in MAP-MS-DataTypes : 1242 1252

externalClientList.....identifier of [1] ExternalClientList

DEFINED in MAP-MS-DataTypes : 1222

ExternalClientList.....type reference SEQUENCE OF

DEFINED in MAP-MS-DataTypes : 1241

USED in MAP-MS-DataTypes : 1222

ExternalSignalInfo.....type reference SEQUENCE

DEFINED in MAP-CommonDataTypes : 198

USED in MAP-CommonDataTypes : 21  
USED in MAP-CH-DataTypes : 67 104 208 209 292 293 296 297 298  
315 316 321 397  
USED in MAP-SS-DataTypes : 54 313 314

extId.....identifier of InformationObjectClassFieldType  
DEFINED in MAP-ExtensionDataTypes : 39

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 36

extType.....identifier of InformationObjectClassFieldType  
 DEFINED in MAP-ExtensionDataTypes : 41

Ext-BasicServiceCode.....type reference CHOICE  
 DEFINED in MAP-CommonDataTypes : 449  
   USED in MAP-MS-DataTypes : 183 1083 1142 1180 1185 1389 1578 2240 2251  
   USED in MAP-CommonDataTypes : 48  
   USED in MAP-CH-DataTypes : 71 103 158 234

Ext-BasicServiceGroupList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1179  
   USED in MAP-MS-DataTypes : 1160 1205

ext-BearerService.....identifier of [2] Ext-BearerServiceCode  
 DEFINED in MAP-CommonDataTypes : 450

Ext-BearerServiceCode.....type reference OCTET STRING  
 DEFINED in MAP-BS-Code : 25  
   USED in MAP-MS-DataTypes : 159 1001  
   USED in MAP-CommonDataTypes : 71 450

Ext-CallBarFeatureList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1138  
   USED in MAP-MS-DataTypes : 1134 2178 2331

Ext-CallBarInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1132  
   USED in MAP-MS-DataTypes : 1068

Ext-CallBarringFeature.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1141  
   USED in MAP-MS-DataTypes : 1139

Ext-CallBarringInfoFor-CSE.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2329  
   USED in MAP-MS-DataTypes : 2287 2319

ext-externalClientList.....identifier of [4] Ext-ExternalClientList  
 DEFINED in MAP-MS-DataTypes : 1231

Ext-ExternalClientList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1251  
   USED in MAP-MS-DataTypes : 1231

Ext-ExternalSignalInfo.....type reference SEQUENCE  
 DEFINED in MAP-CommonDataTypes : 224  
   USED in MAP-CommonDataTypes : 22  
   USED in MAP-CH-DataTypes : 68 112 219

Ext-ForwardingInfoFor-CSE.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2322  
   USED in MAP-MS-DataTypes : 2286 2318

Ext-ForwFeature.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1082  
   USED in MAP-MS-DataTypes : 1080

Ext-ForwFeatureList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1079  
   USED in MAP-MS-DataTypes : 1075 2172 2324

Ext-ForwInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1073  
   USED in MAP-MS-DataTypes : 1067

Ext-ForwOptions.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 1096  
   USED in MAP-MS-DataTypes : 1090

Ext-GeographicalInformation.....type reference OCTET STRING  
 DEFINED in MAP-LCS-DataTypes : 257  
   USED in MAP-LCS-DataTypes : 22 239 347

Ext-NoRepCondTime.....type reference INTEGER

DEFINED in MAP-MS-DataTypes : 1125  
USED in MAP-MS-DataTypes : 1091 2244

ext-ProtocolId.....identifier of Ext-ProtocolId  
DEFINED in MAP-CommonDataTypes : 225

Ext-ProtocolId.....type reference ENUMERATED

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 37

DEFINED in MAP-CommonDataTypes : 232  
 USED in MAP-CommonDataTypes : 225

ext-QoS-Subscribed.....identifier of [0] Ext-QoS-Subscribed  
 DEFINED in MAP-MS-DataTypes : 845

Ext-QoS-Subscribed.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 933  
 USED in MAP-MS-DataTypes : 59 845 2070 2071 2072

Ext-SS-Data.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1201  
 USED in MAP-MS-DataTypes : 1070

Ext-SS-Info.....type reference CHOICE  
 DEFINED in MAP-MS-DataTypes : 1066  
 USED in MAP-MS-DataTypes : 1064

Ext-SS-InfoFor-CSE.....type reference CHOICE  
 DEFINED in MAP-MS-DataTypes : 2317  
 USED in MAP-MS-DataTypes : 2232

Ext-SS-InfoList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1063  
 USED in MAP-MS-DataTypes : 984

Ext-SS-Status.....type reference OCTET STRING  
 DEFINED in MAP-CommonDataTypes : 487  
 USED in MAP-MS-DataTypes : 191 1084 1143 1203 1216 1304 2241 2252  
 USED in MAP-CommonDataTypes : 54 475

ext-Teleservice.....identifier of [3] Ext-TeleserviceCode  
 DEFINED in MAP-CommonDataTypes : 451

Ext-TeleserviceCode.....type reference OCTET STRING  
 DEFINED in MAP-TS-Code : 20  
 USED in MAP-MS-DataTypes : 164 1006  
 USED in MAP-CommonDataTypes : 65 451  
 USED in MAP-GR-DataTypes : 31 50

FacilityNotSupParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 195  
 USED in MAP-Errors : 116 191  
 USED in MAP-ER-DataTypes : 23

facilityNotSupported.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 189  
 USED in MAP-OperationAndMainte : 27 61 76  
 USED in MAP-CallHandlingOperat : 34 91 115 171 212 226  
 USED in MAP-SupplementaryServi : 56 278  
 USED in MAP-ShortMessageServic : 31 76 92 106 152  
 USED in MAP-LocationServiceOpe : 27 62 77  
 USED in MAP-Errors : 17

facsimileGroup3AndAlterSpeech.....value reference TeleserviceCode, '01100001'B  
 DEFINED in MAP-TS-Code : 49

facsimileGroup4.....value reference TeleserviceCode, '01100011'B  
 DEFINED in MAP-TS-Code : 51

failure.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 383

failureCause.....identifier of FailureCause  
 DEFINED in MAP-MS-DataTypes : 383

FailureCause.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 411  
 USED in MAP-MS-DataTypes : 383

failureReport.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 474  
 USED in MAP-Protocol : 39 137  
 USED in MAP-MobileServiceOpera : 64

FailureReportArg.....type reference SEQUENCE  
  DEFINED in MAP-MS-DataTypes : 1837  
    USED in MAP-MobileServiceOpera : 156 476  
    USED in MAP-MS-DataTypes : 129

FailureReportRes.....type reference SEQUENCE  
  DEFINED in MAP-MS-DataTypes : 1844

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 38

USED in MAP-MobileServiceOpera : 157 478  
USED in MAP-MS-DataTypes : 130

fleetManagement.....value reference LCSServiceTypeID, 3  
DEFINED in MAP-CommonDataTypes : 398

foreignNumberPortedToForeignNetwork.....identifier of Named Number, 2  
DEFINED in MAP-CH-DataTypes : 176

forwardAccessSignalling.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 346  
USED in MAP-Protocol : 24 133  
USED in MAP-MobileServiceOpera : 41

ForwardAccessSignalling-Arg.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 447  
USED in MAP-MobileServiceOpera : 126 348  
USED in MAP-MS-DataTypes : 33

forwardCheckSS-Indication.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 441  
USED in MAP-Protocol : 32 135  
USED in MAP-MobileServiceOpera : 57

forwarded.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1589

forwardedToNumber.....identifier of [5] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1085

forwardedToNumber.....identifier of [3] AddressString  
DEFINED in MAP-MS-DataTypes : 2242

forwardedToNumber.....identifier of [5] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 193

forwardedToNumber.....identifier of [4] AddressString  
DEFINED in MAP-SS-DataTypes : 74

forwardedToNumber.....identifier of [5] ISDN-AddressString  
DEFINED in MAP-SS-DataTypes : 101

forwardedToSubaddress.....identifier of [8] ISDN-SubaddressString  
DEFINED in MAP-MS-DataTypes : 1089

forwardedToSubaddress.....identifier of [4] ISDN-SubaddressString  
DEFINED in MAP-MS-DataTypes : 2243

forwardedToSubaddress.....identifier of [4] ISDN-SubaddressString  
DEFINED in MAP-CH-DataTypes : 197

forwardedToSubaddress.....identifier of [6] ISDN-SubaddressString  
DEFINED in MAP-SS-DataTypes : 75

forwardedToSubaddress.....identifier of [8] ISDN-SubaddressString  
DEFINED in MAP-SS-DataTypes : 102

forwardGroupCallSignalling.....information object reference OPERATION, Information Object  
DEFINED in MAP-Group-Call-Operati : 69  
USED in MAP-Protocol : 105 146  
USED in MAP-Group-Call-Operati : 15

ForwardGroupCallSignallingArg.....type reference SEQUENCE  
DEFINED in MAP-GR-DataTypes : 75  
USED in MAP-Group-Call-Operati : 36 71  
USED in MAP-GR-DataTypes : 18

forwarding.....identifier of Named Number, 1  
DEFINED in MAP-CH-DataTypes : 126

forwardingData.....identifier of ForwardingData  
DEFINED in MAP-CH-DataTypes : 190

ForwardingData.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 192

USED in MAP-CH-DataTypes : 190 235 277

forwardingData.....identifier of [2] ForwardingData  
DEFINED in MAP-CH-DataTypes : 235

forwardingData.....identifier of ForwardingData  
DEFINED in MAP-CH-DataTypes : 277

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 39

forwardingFailed.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 336  
USED in MAP-CallHandlingOperat : 46 128  
USED in MAP-Errors : 51

ForwardingFailedParam.....type reference SEQUENCE

DEFINED in MAP-ER-DataTypes : 282  
USED in MAP-Errors : 133 338  
USED in MAP-ER-DataTypes : 38

ForwardingFeature.....type reference SEQUENCE

DEFINED in MAP-SS-DataTypes : 98  
USED in MAP-SS-DataTypes : 96

forwardingFeatureList.....identifier of Ext-ForwFeatureList

DEFINED in MAP-MS-DataTypes : 1075

forwardingFeatureList.....identifier of Ext-ForwFeatureList

DEFINED in MAP-MS-DataTypes : 2172

forwardingFeatureList.....identifier of [1] Ext-ForwFeatureList

DEFINED in MAP-MS-DataTypes : 2324

forwardingFeatureList.....identifier of ForwardingFeatureList

DEFINED in MAP-SS-DataTypes : 91

ForwardingFeatureList.....type reference SEQUENCE OF

DEFINED in MAP-SS-DataTypes : 94  
USED in MAP-SS-DataTypes : 91 217

forwardingFeatureList.....identifier of [3] ForwardingFeatureList

DEFINED in MAP-SS-DataTypes : 217

forwardingInfo.....identifier of [0] Ext-ForwInfo

DEFINED in MAP-MS-DataTypes : 1067

forwardingInfo.....identifier of [0] ForwardingInfo

DEFINED in MAP-SS-DataTypes : 85

ForwardingInfo.....type reference SEQUENCE

DEFINED in MAP-SS-DataTypes : 89  
USED in MAP-SS-DataTypes : 85

forwardingInfoFor-CSE.....identifier of [0] Ext-ForwardingInfoFor-CSE

DEFINED in MAP-MS-DataTypes : 2286

forwardingInfoFor-CSE.....identifier of [0] Ext-ForwardingInfoFor-CSE

DEFINED in MAP-MS-DataTypes : 2318

forwardingInterrogationRequired.....identifier of [4] NULL

DEFINED in MAP-CH-DataTypes : 159

forwardingOptions.....identifier of [6] Ext-ForwOptions

DEFINED in MAP-MS-DataTypes : 1090

forwardingOptions.....identifier of [6] ForwardingOptions

DEFINED in MAP-CH-DataTypes : 198

forwardingOptions.....identifier of [6] ForwardingOptions

DEFINED in MAP-SS-DataTypes : 103

ForwardingOptions.....type reference OCTET STRING

DEFINED in MAP-SS-DataTypes : 123  
USED in MAP-CH-DataTypes : 57 198  
USED in MAP-SS-DataTypes : 31 103

forwardingReason.....identifier of [8] ForwardingReason

DEFINED in MAP-CH-DataTypes : 102

ForwardingReason.....type reference ENUMERATED

DEFINED in MAP-CH-DataTypes : 132  
USED in MAP-CH-DataTypes : 102

forwardingViolation.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 330  
USED in MAP-CallHandlingOperat : 45 102  
USED in MAP-Errors : 50

ForwardingViolationParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 278  
USED in MAP-Errors : 132 332

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 40

USED in MAP-ER-DataTypes : 37

freezeP-TMSI.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 295

freezeTMSI.....identifier of [0] NULL  
DEFINED in MAP-MS-DataTypes : 294

frozen.....identifier of Named Number, 5  
DEFINED in MAP-SS-DataTypes : 290

FTN-AddressString.....type reference AddressString  
DEFINED in MAP-CommonDataTypes : 149  
USED in MAP-MS-DataTypes : 173 1094  
USED in MAP-CommonDataTypes : 19  
USED in MAP-CH-DataTypes : 66 201  
USED in MAP-SS-DataTypes : 47 106

general-dataCDA.....value reference BearerServiceCode, '00010111'B  
DEFINED in MAP-BS-Code : 57

general-dataCDS.....value reference BearerServiceCode, '00011111'B  
DEFINED in MAP-BS-Code : 64

general-dataPDS.....value reference BearerServiceCode, '00101111'B  
DEFINED in MAP-BS-Code : 79

general-padAccessCA.....value reference BearerServiceCode, '00100111'B  
DEFINED in MAP-BS-Code : 73

GenericServiceInfo.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 189  
USED in MAP-SS-DataTypes : 218

genericServiceInfo.....identifier of [4] GenericServiceInfo  
DEFINED in MAP-SS-DataTypes : 218

geodeticInformation.....identifier of [7] GeodeticInformation  
DEFINED in MAP-MS-DataTypes : 1985

geodeticInformation.....identifier of [7] GeodeticInformation  
DEFINED in MAP-MS-DataTypes : 2002

GeodeticInformation.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 2025  
USED in MAP-MS-DataTypes : 1985 2002

geographicalInformation.....identifier of [0] GeographicalInformation  
DEFINED in MAP-MS-DataTypes : 1977

geographicalInformation.....identifier of [2] GeographicalInformation  
DEFINED in MAP-MS-DataTypes : 1996

GeographicalInformation.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 2015  
USED in MAP-MS-DataTypes : 96 1977 1996

geranCodecList.....identifier of [1] CodecList  
DEFINED in MAP-MS-DataTypes : 639

geran-classmark.....identifier of [16] GERAN-Classmark  
DEFINED in MAP-MS-DataTypes : 526

geran-classmark.....identifier of [6] GERAN-Classmark  
DEFINED in MAP-MS-DataTypes : 619

GERAN-Classmark.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 665  
USED in MAP-MS-DataTypes : 526 619

getPassword.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 244  
USED in MAP-Protocol : 82 143  
USED in MAP-SupplementaryServi : 22

ggsn-Address.....identifier of [1] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1823

ggsn-Address.....identifier of [1] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1830

ggsn-Address.....identifier of [2] GSN-Address

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 41

DEFINED in MAP-MS-DataTypes : 1840

ggsn-Address.....identifier of [0] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1845

ggsn-Address.....identifier of [2] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1854

ggsn-Address.....identifier of [10] GSN-Address  
DEFINED in MAP-MS-DataTypes : 2069

ggsn-Number.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1824

ggsn-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1839

global.....identifier of OBJECT IDENTIFIER  
DEFINED in Remote-Operations-Info : 115

GlobalCellId.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 337  
USED in MAP-MS-DataTypes : 181 507 612  
USED in MAP-CommonDataTypes : 36

globalValue.....identifier of OBJECT IDENTIFIER  
DEFINED in MAP-ST-DataTypes : 90

globalValue.....identifier of OBJECT IDENTIFIER  
DEFINED in MAP-ST-DataTypes : 94

gmcl-List.....identifier of [0] GMLC-List  
DEFINED in MAP-MS-DataTypes : 805

GMLC-List.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 817  
USED in MAP-MS-DataTypes : 805

gmcl-List.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1266

gmcl-ListWithdraw.....identifier of [13] NULL  
DEFINED in MAP-MS-DataTypes : 1349

gmcl-Restriction.....identifier of [0] GMLC-Restriction  
DEFINED in MAP-MS-DataTypes : 1258

GMLC-Restriction.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1265  
USED in MAP-MS-DataTypes : 1258 1290

gmcl-Restriction.....identifier of [0] GMLC-Restriction  
DEFINED in MAP-MS-DataTypes : 1290

gmscCamelSubscriptionInfo.....identifier of [0] GmscCamelSubscriptionInfo  
DEFINED in MAP-CH-DataTypes : 278

GmscCamelSubscriptionInfo.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 282  
USED in MAP-CH-DataTypes : 278

gmsc-Address.....identifier of [8] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 211

gmsc-OrGsmSCF-Address.....identifier of [6] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 100

gprsAttach.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 398

GPRSChargingID.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 2092  
USED in MAP-MS-DataTypes : 108 2073

gprsConnectionSuspended.....identifier of NULL

DEFINED in MAP-ER-DataTypes : 317

GPRSDataList.....type reference SEQUENCE OF

DEFINED in MAP-MS-DataTypes : 831

USED in MAP-MS-DataTypes : 854

gprsDataList.....identifier of [1] GPRSDataList

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 42

DEFINED in MAP-MS-DataTypes : 854

gprsEnhancementsSupportIndicator.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 432

GPRSMSClass.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1943  
USED in MAP-MS-DataTypes : 98 1932

gprsNodeIndicator.....identifier of [5] NULL  
DEFINED in MAP-SM-DataTypes : 89

gprsNodeIndicator.....identifier of [2] NULL  
DEFINED in MAP-LCS-DataTypes : 86

gprsSubscriptionData.....identifier of [16] GPRSSubscriptionData  
DEFINED in MAP-MS-DataTypes : 781

GPRSSubscriptionData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 850  
USED in MAP-MS-DataTypes : 781

gprsSubscriptionDataWithdraw.....identifier of [10] GPRSSubscriptionDataWithdraw  
DEFINED in MAP-MS-DataTypes : 1346

GPRSSubscriptionDataWithdraw.....type reference CHOICE  
DEFINED in MAP-MS-DataTypes : 1374  
USED in MAP-MS-DataTypes : 1346

gprsSubscriptionUnknown.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 212

gprsSupportIndicator.....identifier of [7] NULL  
DEFINED in MAP-SM-DataTypes : 59

gprsSupportIndicator.....identifier of [2] NULL  
DEFINED in MAP-SM-DataTypes : 150

GPRS-CamelTDPData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 887  
USED in MAP-MS-DataTypes : 883

gprs-CamelTDPDataList.....identifier of [0] GPRS-CamelTDPDataList  
DEFINED in MAP-MS-DataTypes : 869

GPRS-CamelTDPDataList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 882  
USED in MAP-MS-DataTypes : 869

gprs-CSI.....identifier of [0] GPRS-CSI  
DEFINED in MAP-MS-DataTypes : 859

GPRS-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 868  
USED in MAP-MS-DataTypes : 859 2203

gprs-csi.....identifier of Named Number, 7  
DEFINED in MAP-MS-DataTypes : 1361

gprs-CSI.....identifier of Named Number, 4  
DEFINED in MAP-MS-DataTypes : 2156

gprs-CSI.....identifier of [9] GPRS-CSI  
DEFINED in MAP-MS-DataTypes : 2203

gprs-MS-Class.....identifier of [7] GPRSMSClass  
DEFINED in MAP-MS-DataTypes : 1932

gprs-TriggerDetectionPoint.....identifier of [0] GPRS-TriggerDetectionPoint  
DEFINED in MAP-MS-DataTypes : 888

GPRS-TriggerDetectionPoint.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 904  
USED in MAP-MS-DataTypes : 888

greyListed.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 770

groupCallNumber.....identifier of ISDN-AddressString  
DEFINED in MAP-GR-DataTypes : 62

groupId.....identifier of GroupId

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 43

DEFINED in MAP-MS-DataTypes : 1895

groupid.....identifier of GroupId  
DEFINED in MAP-MS-DataTypes : 1900

GroupId.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1905  
USED in MAP-MS-DataTypes : 1895 1900

groupKey.....identifier of [1] Kc  
DEFINED in MAP-GR-DataTypes : 55

groupKeyNumber.....identifier of [0] GroupKeyNumber  
DEFINED in MAP-GR-DataTypes : 54

GroupKeyNumber.....type reference INTEGER  
DEFINED in MAP-GR-DataTypes : 93  
USED in MAP-GR-DataTypes : 54

gsmSCF-Address.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 890

gsmSCF-Address.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1463

gsmSCF-Address.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1480

gsmSCF-Address.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1520

gsmSCF-Address.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1690

gsmSCF-Address.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1729

gsmSCF-Address.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1740

gsmSCF-Address.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1804

gsmSCF-Address.....identifier of [3] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 2108

gsmSCF-Address.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 2122

gsmSCF-Address.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 2222

gsmSCF-InitiatedCall.....identifier of [24] NULL  
DEFINED in MAP-CH-DataTypes : 119

gsm-0408.....identifier of Named Number, 1  
DEFINED in MAP-CommonDataTypes : 218

gsm-0806.....identifier of Named Number, 2  
DEFINED in MAP-CommonDataTypes : 219

gsm-BearerCapability.....identifier of [5] ExternalSignallInfo  
DEFINED in MAP-CH-DataTypes : 208

gsm-BearerCapability.....identifier of [0] ExternalSignallInfo  
DEFINED in MAP-CH-DataTypes : 292

gsm-BSSMAP.....identifier of Named Number, 3  
DEFINED in MAP-CommonDataTypes : 220

gsm-SecurityContextData.....identifier of [0] GSM-SecurityContextData  
DEFINED in MAP-MS-DataTypes : 345

GSM-SecurityContextData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 348

USED in MAP-MS-DataTypes : 345

GSN-Address.....type reference OCTET STRING

DEFINED in MAP-MS-DataTypes : 437

USED in MAP-MS-DataTypes : 30 420 1823 1829 1830 1840 1845 1853 1854  
2069 2075

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 44

GuidanceInfo.....type reference ENUMERATED  
DEFINED in MAP-SS-DataTypes : 247  
USED in MAP-SupplementaryServi : 68 246  
USED in MAP-SS-DataTypes : 25

handoverNumber.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 565

handoverNumber.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 700

highLayerCompatibility.....identifier of [6] ExternalSignallInfo  
DEFINED in MAP-CH-DataTypes : 298

hlr.....identifier of Named Number, 1  
DEFINED in MAP-CommonDataTypes : 352

HLR-Id.....type reference IMSI  
DEFINED in MAP-CommonDataTypes : 326  
USED in MAP-CommonDataTypes : 331

hlr-List.....identifier of HLR-List  
DEFINED in MAP-MS-DataTypes : 1866

HLR-List.....type reference SEQUENCE OF  
DEFINED in MAP-CommonDataTypes : 330  
USED in MAP-MS-DataTypes : 178 1866  
USED in MAP-CommonDataTypes : 34

hlr-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 266

hlr-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 441

hlr-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1865

hlr-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1877

hold.....value reference SS-Code, '01000010'B  
DEFINED in MAP-SS-Code : 77

home-Country.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1267

horizontal-accuracy.....identifier of [0] Horizontal-Accuracy  
DEFINED in MAP-LCS-DataTypes : 186

Horizontal-Accuracy.....type reference OCTET STRING  
DEFINED in MAP-LCS-DataTypes : 192  
USED in MAP-LCS-DataTypes : 20 186

ho-NumberNotRequired.....Identifier of NULL  
DEFINED in MAP-MS-DataTypes : 508

identity.....identifier of Identity  
DEFINED in MAP-MS-DataTypes : 271

Identity.....type reference CHOICE  
DEFINED in MAP-CommonDataTypes : 299  
USED in MAP-MS-DataTypes : 180 271  
USED in MAP-CommonDataTypes : 31

ik.....identifier of IK  
DEFINED in MAP-MS-DataTypes : 340

ik.....identifier of IK  
DEFINED in MAP-MS-DataTypes : 355

IK.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 369  
USED in MAP-MS-DataTypes : 340 355

illegalEquipment.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 251  
USED in MAP-SupplementaryServi : 53 206 221  
USED in MAP-ShortMessageServic : 35 109  
USED in MAP-LocationServiceOpe : 36 80  
USED in MAP-Errors : 31

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 45

IllegalEquipmentParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 230  
USED in MAP-Errors : 122 253  
USED in MAP-ER-DataTypes : 29

illegalSS-Operation.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 384  
USED in MAP-MobileServiceOpera : 101 279 297  
USED in MAP-SupplementaryServi : 41 101 119 137 158 177 273 291  
USED in MAP-Errors : 63

IllegalSS-OperationParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 298  
USED in MAP-Errors : 151 386  
USED in MAP-ER-DataTypes : 57

illegalSubscriber.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 244  
USED in MAP-SupplementaryServi : 52 205 220  
USED in MAP-ShortMessageServic : 34 108  
USED in MAP-LocationServiceOpe : 37 79  
USED in MAP-Errors : 30

IllegalSubscriberParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 226  
USED in MAP-Errors : 121 246  
USED in MAP-ER-DataTypes : 28

imei.....identifier of [5] IMEI  
DEFINED in MAP-MS-DataTypes : 1930

imei.....identifier of [6] NULL  
DEFINED in MAP-MS-DataTypes : 1963

IMEI.....type reference TBCD-STRING  
DEFINED in MAP-CommonDataTypes : 319  
USED in MAP-MobileServiceOpera : 168 399  
USED in MAP-MS-DataTypes : 176 1930  
USED in MAP-CommonDataTypes : 33  
USED in MAP-LCS-DataTypes : 32 99 344

imei.....identifier of [5] IMEI  
DEFINED in MAP-LCS-DataTypes : 99

imei.....identifier of [2] IMEI  
DEFINED in MAP-LCS-DataTypes : 344

immediateResponsePreferred.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 739

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 215

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 287

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 310

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 382

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 418

imsi.....identifier of [4] IMSI  
DEFINED in MAP-MS-DataTypes : 512

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 736

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 775

imsi.....identifier of [0] IMSI

DEFINED in MAP-MS-DataTypes : 1334

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 1822

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 1838

TAG R5.61 Cross Reference Listing for MAP-Protocol

2003-03-27 10:33:38 PAGE 46

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 1852

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 1870

imsi.....identifier of [0] IMSI  
DEFINED in MAP-MS-DataTypes : 1912

imsi.....identifier of IMSI  
DEFINED in MAP-MS-DataTypes : 2284

imsi.....identifier of [1] IMSI  
DEFINED in MAP-MS-DataTypes : 2303

IMSI.....type reference TBCD-STRING  
DEFINED in MAP-CommonDataTypes : 296  
USED in MAP-OperationAndMainte : 44 84  
USED in MAP-MS-DataTypes : 175 215 287 310 382 418 512 736 775  
1334 1822 1838 1852 1870 1912 2284 2303  
USED in MAP-CommonDataTypes : 29 300 304 316 326 373  
USED in MAP-OM-DataTypes : 22 37 55  
USED in MAP-CH-DataTypes : 69 149 204 236 326 356 396 427 439  
USED in MAP-SS-DataTypes : 48 269  
USED in MAP-SM-DataTypes : 35 79 111 132 202  
USED in MAP-GR-DataTypes : 24 67 76  
USED in MAP-LCS-DataTypes : 33 96 343  
USED in MAP-ST-DataTypes : 18

imsi.....identifier of IMSI  
DEFINED in MAP-CommonDataTypes : 300

imsi.....identifier of IMSI  
DEFINED in MAP-CommonDataTypes : 304

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CommonDataTypes : 316

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CommonDataTypes : 373

imsi.....identifier of [0] IMSI  
DEFINED in MAP-OM-DataTypes : 37

imsi.....identifier of [0] IMSI  
DEFINED in MAP-OM-DataTypes : 55

imsi.....identifier of [9] IMSI  
DEFINED in MAP-CH-DataTypes : 149

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 204

imsi.....identifier of [3] IMSI  
DEFINED in MAP-CH-DataTypes : 236

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 326

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 356

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 396

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 427

imsi.....identifier of [0] IMSI  
DEFINED in MAP-CH-DataTypes : 439

imsi.....identifier of [0] IMSI  
DEFINED in MAP-SS-DataTypes : 269

imsi.....identifier of IMSI  
DEFINED in MAP-SM-DataTypes : 79

imsi.....identifier of IMSI  
DEFINED in MAP-SM-DataTypes : 111

imsi.....identifier of [0] IMSI

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 47

DEFINED in MAP-SM-DataTypes : 132

imsi.....identifier of [0] IMSI  
DEFINED in MAP-SM-DataTypes : 202

imsi.....identifier of IMSI  
DEFINED in MAP-GR-DataTypes : 67

imsi.....identifier of IMSI  
DEFINED in MAP-GR-DataTypes : 76

imsi.....identifier of [2] IMSI  
DEFINED in MAP-LCS-DataTypes : 96

imsi.....identifier of [1] IMSI  
DEFINED in MAP-LCS-DataTypes : 343

imsiDetach.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 256

imsiDetached.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 2099

imsiUnknown.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 211

imsi-WithLMSI.....identifier of IMSI-WithLMSI  
DEFINED in MAP-CommonDataTypes : 301

IMSI-WithLMSI.....type reference SEQUENCE  
DEFINED in MAP-CommonDataTypes : 303  
USED in MAP-CommonDataTypes : 301

incomingCallsBarredWithinCUG.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 129

incompatibleTerminal.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 196  
USED in MAP-CallHandlingOperat : 49 195  
USED in MAP-Errors : 18

IncompatibleTerminalParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 333  
USED in MAP-Errors : 141 198  
USED in MAP-ER-DataTypes : 46

inconsistentMeasurementData.....identifier of Named Number, 3  
DEFINED in MAP-ER-DataTypes : 374

informationNotAvailable.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 375  
USED in MAP-MobileServiceOpera : 106 281 301  
USED in MAP-Errors : 60

InformationNotAvailableParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 310  
USED in MAP-Errors : 154 377  
USED in MAP-ER-DataTypes : 60

informPreviousNetworkEntity.....identifier of [11] NULL  
DEFINED in MAP-MS-DataTypes : 222

informPreviousNetworkEntity.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 424

informServiceCentre.....information object reference OPERATION, Information Object  
DEFINED in MAP-ShortMessageServic : 138  
USED in MAP-Protocol : 96 145  
USED in MAP-ShortMessageServic : 18

InformServiceCentreArg.....type reference SEQUENCE  
DEFINED in MAP-SM-DataTypes : 181  
USED in MAP-ShortMessageServic : 55 140  
USED in MAP-SM-DataTypes : 23

inhibiting.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1593

initialisationVector.....identifier of InitialisationVector  
DEFINED in MAP-ST-DataTypes : 44

InitialisationVector.....type reference OCTET STRING

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 48

DEFINED in MAP-ST-DataTypes : 71  
USED in MAP-ST-DataTypes : 44

initialLocation.....identifier of Named Number, 2  
DEFINED in MAP-LCS-DataTypes : 121

initiateCallAttempt.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1647

insertSubscriberData.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 410  
USED in MAP-Protocol : 29 134  
USED in MAP-MobileServiceOpera : 52

InsertSubscriberDataArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 774  
USED in MAP-MobileServiceOpera : 137 412  
USED in MAP-MS-DataTypes : 54

InsertSubscriberDataRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1316  
USED in MAP-MobileServiceOpera : 138 414  
USED in MAP-MS-DataTypes : 55

insufficientMeasurementData.....identifier of Named Number, 2  
DEFINED in MAP-ER-DataTypes : 373

insufficientResources.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 372

integrityProtectionAlgorithm.....identifier of [0] ChosenIntegrityProtectionAlgorithm  
DEFINED in MAP-MS-DataTypes : 577

integrityProtectionAlgorithms.....identifier of [0] PermittedIntegrityProtectionAlgorithms  
DEFINED in MAP-MS-DataTypes : 471

integrityProtectionInfo.....identifier of [0] IntegrityProtectionInformation  
DEFINED in MAP-MS-DataTypes : 449

integrityProtectionInfo.....identifier of [5] IntegrityProtectionInformation  
DEFINED in MAP-MS-DataTypes : 513

IntegrityProtectionInformation.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 715  
USED in MAP-MS-DataTypes : 449 513

interCUG-Restrictions.....identifier of InterCUG-Restrictions  
DEFINED in MAP-MS-DataTypes : 1187

InterCUG-Restrictions.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1191  
USED in MAP-MS-DataTypes : 81 1187

internalTimeout.....identifier of Named Number, 2  
DEFINED in MAP-LCS-DataTypes : 391

internationalECT-Barred.....identifier of Named Number, 11  
DEFINED in MAP-MS-DataTypes : 1028

internationalOGCallsBarred.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1018

internationalOGCallsNotToHPLMN-CountryBaidentifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1019

interrogateSS.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 165  
USED in MAP-Protocol : 77 141  
USED in MAP-SupplementaryServi : 17

InterrogateSS-Res.....type reference CHOICE  
DEFINED in MAP-SS-DataTypes : 214  
USED in MAP-SupplementaryServi : 64 169  
USED in MAP-SS-DataTypes : 19

interrogationType.....identifier of [3] InterrogationType  
DEFINED in MAP-CH-DataTypes : 97

InterrogationType.....type reference ENUMERATED  
DEFINED in MAP-CH-DataTypes : 124  
USED in MAP-CH-DataTypes : 97

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 49

interzonalECT-Barred.....identifier of Named Number, 12  
 DEFINED in MAP-MS-DataTypes : 1029

interzonalOGCallsAndInternationalOGCalls.....identifier of Named Number, 8  
 DEFINED in MAP-MS-DataTypes : 1022

interzonalOGCallsBarred.....identifier of Named Number, 6  
 DEFINED in MAP-MS-DataTypes : 1020

interzonalOGCallsNotToHPLMN-CountryBarcode.....identifier of Named Number, 7  
 DEFINED in MAP-MS-DataTypes : 1021

intraCUG-Options.....identifier of IntraCUG-Options  
 DEFINED in MAP-MS-DataTypes : 1159

IntraCUG-Options.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 1169  
 USED in MAP-MS-DataTypes : 82 1159

invalidFormat.....identifier of Named Number, 1  
 DEFINED in MAP-ER-DataTypes : 142

invalidSME-Address.....identifier of Named Number, 5  
 DEFINED in MAP-ER-DataTypes : 152

ISDN-AddressString.....type reference AddressString  
 DEFINED in MAP-CommonDataTypes : 143  
 USED in MAP-OperationAndMainte : 43 82  
 USED in MAP-MS-DataTypes : 171 216 217 266 288 289 389 390 419  
   441 565 613 700 818 890 975 1085 1461  
   1463 1480 1520 1570 1690 1729 1740 1804 1824  
   1839 1865 1877 1978 1984 1997 2108 2122 2222  
   2285 2304  
 USED in MAP-CommonDataTypes : 17 374  
 USED in MAP-CH-DataTypes : 64 94 100 160 166 189 193 205 206  
   211 228 241 295 310 399  
 USED in MAP-SS-DataTypes : 45 101 207 225 270 280 311  
 USED in MAP-SM-DataTypes : 33 54 85 97 98 138 143 171 177  
   182  
 USED in MAP-GR-DataTypes : 23 62  
 USED in MAP-LCS-DataTypes : 31 68 81 93 97 342 345 346

isdn-BearerCapability.....identifier of [1] ExternalSignalInfo  
 DEFINED in MAP-CH-DataTypes : 293

ISDN-SubaddressString.....type reference OCTET STRING  
 DEFINED in MAP-CommonDataTypes : 158  
 USED in MAP-MS-DataTypes : 172 1089 2243  
 USED in MAP-CommonDataTypes : 20  
 USED in MAP-CH-DataTypes : 65 197  
 USED in MAP-SS-DataTypes : 46 75 102 208

istAlertTimer.....identifier of [26] IST-AlertTimerValue  
 DEFINED in MAP-MS-DataTypes : 788

istAlertTimer.....identifier of [14] IST-AlertTimerValue  
 DEFINED in MAP-CH-DataTypes : 168

istAlertTimer.....identifier of [0] IST-AlertTimerValue  
 DEFINED in MAP-CH-DataTypes : 432

istCommandSupported.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 246

istInformationWithdraw.....identifier of [14] NULL  
 DEFINED in MAP-MS-DataTypes : 1350

istInformationWithdraw.....identifier of [1] NULL  
 DEFINED in MAP-CH-DataTypes : 433

istSupportIndicator.....identifier of [1] IST-SupportIndicator  
 DEFINED in MAP-MS-DataTypes : 230

istSupportIndicator.....identifier of [18] IST-SupportIndicator  
 DEFINED in MAP-CH-DataTypes : 113

ist-Alert.....information object reference OPERATION, Information Object  
DEFINED in MAP-CallHandlingOperat : 201  
USED in MAP-Protocol : 66 140  
USED in MAP-CallHandlingOperat : 21

IST-AlertArg.....type reference SEQUENCE

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 50

DEFINED in MAP-CH-DataTypes : 426  
 USED in MAP-CallHandlingOperat : 71 203  
 USED in MAP-CH-DataTypes : 33

IST-AlertRes.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 431  
 USED in MAP-CallHandlingOperat : 72 205  
 USED in MAP-CH-DataTypes : 34

IST-AlertTimerValue.....type reference INTEGER  
 DEFINED in MAP-MS-DataTypes : 802  
 USED in MAP-MS-DataTypes : 85 788  
 USED in MAP-CH-DataTypes : 49 168 432

ist-Command.....information object reference OPERATION, Information Object  
 DEFINED in MAP-CallHandlingOperat : 215  
 USED in MAP-Protocol : 67 141  
 USED in MAP-CallHandlingOperat : 22

IST-CommandArg.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 438  
 USED in MAP-CallHandlingOperat : 73 217  
 USED in MAP-CH-DataTypes : 35

IST-CommandRes.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 443  
 USED in MAP-CallHandlingOperat : 74 219  
 USED in MAP-CH-DataTypes : 36

IST-SupportIndicator.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 244  
 USED in MAP-MS-DataTypes : 26 230  
 USED in MAP-CH-DataTypes : 48 113

kc.....identifier of Kc  
 DEFINED in MAP-MS-DataTypes : 333

kc.....identifier of Kc  
 DEFINED in MAP-MS-DataTypes : 349

Kc.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 363  
 USED in MAP-MS-DataTypes : 51 333 349  
 USED in MAP-GR-DataTypes : 36 55

keepCCBS-CallIndicator.....identifier of [1] NULL  
 DEFINED in MAP-CH-DataTypes : 184

keyStatus.....identifier of [2] KeyStatus  
 DEFINED in MAP-MS-DataTypes : 451

KeyStatus.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 498  
 USED in MAP-MS-DataTypes : 451

ksi.....identifier of KSI  
 DEFINED in MAP-MS-DataTypes : 356

KSI.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 378  
 USED in MAP-MS-DataTypes : 356

laiFixedLength.....identifier of [1] LAIFixedLength  
 DEFINED in MAP-CommonDataTypes : 413

LAIFixedLength.....type reference OCTET STRING  
 DEFINED in MAP-CommonDataTypes : 431  
 USED in MAP-CommonDataTypes : 413

lawfullInterceptServices.....identifier of Named Number, 3  
 DEFINED in MAP-LCS-DataTypes : 150

lcsAPN.....identifier of [5] APN  
 DEFINED in MAP-LCS-DataTypes : 143

IcsCapabilitySet1.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 252

IcsCapabilitySet2.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 253

IcsCapabilitySet3.....identifier of Named Number, 2

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 51

DEFINED in MAP-MS-DataTypes : 254

IcsClientDialedByMS.....identifier of [2] AddressString  
DEFINED in MAP-LCS-DataTypes : 139

LCSClientExternalID.....type reference SEQUENCE  
DEFINED in MAP-CommonDataTypes : 377  
USED in MAP-MS-DataTypes : 189 1257  
USED in MAP-CommonDataTypes : 58  
USED in MAP-LCS-DataTypes : 37 138

IcsClientExternalID.....identifier of [1] LCSClientExternalID  
DEFINED in MAP-LCS-DataTypes : 138

LCSClientInternalID.....type reference ENUMERATED  
DEFINED in MAP-CommonDataTypes : 382  
USED in MAP-MS-DataTypes : 190 1247  
USED in MAP-CommonDataTypes : 59  
USED in MAP-LCS-DataTypes : 38 140

IcsClientInternalID.....identifier of [3] LCSClientInternalID  
DEFINED in MAP-LCS-DataTypes : 140

IcsClientName.....identifier of [4] LCSClientName  
DEFINED in MAP-LCS-DataTypes : 141

LCSClientName.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 157  
USED in MAP-LCS-DataTypes : 18 141

IcsClientType.....identifier of [0] LCSClientType  
DEFINED in MAP-LCS-DataTypes : 137

LCSClientType.....type reference ENUMERATED  
DEFINED in MAP-LCS-DataTypes : 146  
USED in MAP-LCS-DataTypes : 137

IcsCodeword.....identifier of [12] LCSCodeword  
DEFINED in MAP-LCS-DataTypes : 107

LCSCodeword.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 229  
USED in MAP-LCS-DataTypes : 26 107

IcsCodewordString.....identifier of [1] LCSCodewordString  
DEFINED in MAP-LCS-DataTypes : 231

LCSCodewordString.....type reference USSD-String  
DEFINED in MAP-LCS-DataTypes : 234  
USED in MAP-LCS-DataTypes : 231

IcsInformation.....identifier of [22] LCSInformation  
DEFINED in MAP-MS-DataTypes : 787

LCSInformation.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 804  
USED in MAP-MS-DataTypes : 787

IcsLocationInfo.....identifier of [1] LCSLocationInfo  
DEFINED in MAP-LCS-DataTypes : 75

LCSLocationInfo.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 80  
USED in MAP-LCS-DataTypes : 75 341 373

IcsLocationInfo.....identifier of LCSLocationInfo  
DEFINED in MAP-LCS-DataTypes : 341

IcsLocationInfo.....identifier of [1] LCSLocationInfo  
DEFINED in MAP-LCS-DataTypes : 373

IcsRequestorID.....identifier of [6] LCSRequestorID  
DEFINED in MAP-LCS-DataTypes : 144

LCSRequestorID.....type reference SEQUENCE

DEFINED in MAP-LCS-DataTypes : 171  
USED in MAP-LCS-DataTypes : 25 144

LCSServiceTypeID.....type reference INTEGER  
DEFINED in MAP-CommonDataTypes : 391  
USED in MAP-MS-DataTypes : 192 1289  
USED in MAP-CommonDataTypes : 60 395 396 397 398 399 400 401 402

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 52

403 404 405 406  
USED in MAP-LCS-DataTypes : 39 106

IcsServiceTypeID.....identifier of [11] LCSServiceTypeID  
DEFINED in MAP-LCS-DataTypes : 106

Ics-ClientID.....identifier of [0] LCS-ClientID  
DEFINED in MAP-LCS-DataTypes : 94

LCS-ClientID.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 136  
USED in MAP-LCS-DataTypes : 94 340

Ics-ClientID.....identifier of LCS-ClientID  
DEFINED in MAP-LCS-DataTypes : 340

Ics-Event.....identifier of LCS-Event  
DEFINED in MAP-LCS-DataTypes : 339

LCS-Event.....type reference ENUMERATED  
DEFINED in MAP-LCS-DataTypes : 378  
USED in MAP-LCS-DataTypes : 339

Ics-Priority.....identifier of [6] LCS-Priority  
DEFINED in MAP-LCS-DataTypes : 100

LCS-Priority.....type reference OCTET STRING  
DEFINED in MAP-LCS-DataTypes : 180  
USED in MAP-LCS-DataTypes : 100

LCS-PrivacyClass.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1214  
USED in MAP-MS-DataTypes : 1210

Ics-PrivacyExceptionList.....identifier of [1] LCS-PrivacyExceptionList  
DEFINED in MAP-MS-DataTypes : 806

LCS-PrivacyExceptionList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1209  
USED in MAP-MS-DataTypes : 806 809

Ics-QoS.....identifier of [7] LCS-QoS  
DEFINED in MAP-LCS-DataTypes : 101

LCS-QoS.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 185  
USED in MAP-LCS-DataTypes : 19 101

Ics-ReferenceNumber.....identifier of [10] LCS-ReferenceNumber  
DEFINED in MAP-LCS-DataTypes : 105

LCS-ReferenceNumber.....type reference OCTET STRING  
DEFINED in MAP-LCS-DataTypes : 227  
USED in MAP-LCS-DataTypes : 105 353

Ics-ReferenceNumber.....identifier of [10] LCS-ReferenceNumber  
DEFINED in MAP-LCS-DataTypes : 353

Imsi.....identifier of [10] LMSI  
DEFINED in MAP-MS-DataTypes : 218

Imsi.....identifier of LMSI  
DEFINED in MAP-MS-DataTypes : 1871

Imsi.....identifier of LMSI  
DEFINED in MAP-MS-DataTypes : 1913

Imsi.....identifier of LMSI  
DEFINED in MAP-CommonDataTypes : 305

LMSI.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 335  
USED in MAP-MS-DataTypes : 179 218 1871 1913  
USED in MAP-CommonDataTypes : 35 305  
USED in MAP-CH-DataTypes : 70 207 327

USED in MAP-SM-DataTypes : 36 86 133  
USED in MAP-LCS-DataTypes : 34 83 98

lmsi.....identifier of [4] LMSI  
DEFINED in MAP-CH-DataTypes : 207

lmsi.....identifier of [1] LMSI

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 53

DEFINED in MAP-CH-DataTypes : 327

lmsi.....identifier of LMSI  
DEFINED in MAP-SM-DataTypes : 86

lmsi.....identifier of [1] LMSI  
DEFINED in MAP-SM-DataTypes : 133

lmsi.....identifier of [0] LMSI  
DEFINED in MAP-LCS-DataTypes : 83

lmsi.....identifier of [4] LMSI  
DEFINED in MAP-LCS-DataTypes : 98

lmu-Indicator.....identifier of [21] NULL  
DEFINED in MAP-MS-DataTypes : 786

local.....identifier of INTEGER  
DEFINED in Remote-Operations-Info : 114  
USED in MAP-MobileServiceOpe : 188 199 211 221 235 247 262 282 302  
316 332 339 344 349 361 381 393 406  
420 432 439 442 454 470 485 500 513  
USED in MAP-OperationAndMainte : 64 78 89  
USED in MAP-CallHandlingOperat : 103 119 132 144 157 172 185 199 213  
227  
USED in MAP-SupplementaryServi : 104 122 143 163 179 192 209 224 242  
249 261 279 293  
USED in MAP-ShortMessageServic : 81 94 113 126 136 141 154  
USED in MAP-Group-Call-Operati : 55 62 67 72  
USED in MAP-LocationServiceOpe : 66 85 100  
USED in MAP-SecureTransportOpe : 51 61 69 75  
USED in MAP-Errors : 173 180 187 194 200 206 215 221 224  
231 234 242 249 256 263 270 276 279  
285 293 302 309 316 322 328 334 340  
346 352 360 367 373 379 389 395 402  
409 415 418 421 426 429 432 438 444  
452 457 463 469 477 485 491 497 503  
509 516

localizedAdvertising.....value reference LCSServiceTypeID, 10  
DEFINED in MAP-CommonDataTypes : 405

localValue.....identifier of INTEGER  
DEFINED in MAP-ST-DataTypes : 89

localValue.....identifier of INTEGER  
DEFINED in MAP-ST-DataTypes : 93

locationAtAlerting.....identifier of Named Number, 10  
DEFINED in MAP-MS-DataTypes : 1657

locationEstimate.....identifier of Ext-GeographicalInformation  
DEFINED in MAP-LCS-DataTypes : 239

locationEstimate.....identifier of [5] Ext-GeographicalInformation  
DEFINED in MAP-LCS-DataTypes : 347

locationEstimateType.....identifier of [0] LocationEstimateType  
DEFINED in MAP-LCS-DataTypes : 114

LocationEstimateType.....type reference ENUMERATED  
DEFINED in MAP-LCS-DataTypes : 118  
USED in MAP-LCS-DataTypes : 114

locationInformation.....identifier of [0] LocationInformation  
DEFINED in MAP-MS-DataTypes : 1924

locationInformation.....identifier of [0] NULL  
DEFINED in MAP-MS-DataTypes : 1957

LocationInformation.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1975  
USED in MAP-MS-DataTypes : 104 1924 2305

locationInformation.....identifier of [3] LocationInformation

DEFINED in MAP-MS-DataTypes : 2305

locationInformationGPRS.....identifier of [3] LocationInformationGPRS  
DEFINED in MAP-MS-DataTypes : 1928

LocationInformationGPRS.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1993

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 54

USED in MAP-MS-DataTypes : 105 1928 2309

locationInformationGPRS.....identifier of [7] LocationInformationGPRS  
DEFINED in MAP-MS-DataTypes : 2309

locationInfoWithLMSI.....identifier of [0] LocationInfoWithLMSI  
DEFINED in MAP-SM-DataTypes : 80

LocationInfoWithLMSI.....type reference SEQUENCE  
DEFINED in MAP-SM-DataTypes : 84  
USED in MAP-SM-DataTypes : 80

locationNotAllowed.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1278

locationNumber.....identifier of [2] LocationNumber  
DEFINED in MAP-MS-DataTypes : 1979

LocationNumber.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 2037  
USED in MAP-MS-DataTypes : 1979

locationProcedureNotCompleted.....identifier of Named Number, 4  
DEFINED in MAP-ER-DataTypes : 375

locationProcedureNotSupportedByTargetMS.....identifier of Named Number, 5  
DEFINED in MAP-ER-DataTypes : 376

locationType.....identifier of LocationType  
DEFINED in MAP-LCS-DataTypes : 92

LocationType.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 113  
USED in MAP-LCS-DataTypes : 17 92

locationUpdating.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 395

longForwardedToNumber.....identifier of [10] FTN-AddressString  
DEFINED in MAP-MS-DataTypes : 1094

longForwardedToNumber.....identifier of [8] FTN-AddressString  
DEFINED in MAP-CH-DataTypes : 201

longForwardedToNumber.....identifier of [9] FTN-AddressString  
DEFINED in MAP-SS-DataTypes : 106

longFTN-Supported.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 232

longFTN-Supported.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 2124

longFTN-Supported.....identifier of [6] NULL  
DEFINED in MAP-MS-DataTypes : 2227

longFTN-Supported.....identifier of [21] NULL  
DEFINED in MAP-CH-DataTypes : 116

longFTN-Supported.....identifier of [18] NULL  
DEFINED in MAP-CH-DataTypes : 222

longFTN-Supported.....identifier of [9] NULL  
DEFINED in MAP-SS-DataTypes : 80

longFTN-Supported.....identifier of [4] NULL  
DEFINED in MAP-SS-DataTypes : 187

LongSignalInfo.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 248  
USED in MAP-CommonDataTypes : 243

longTermDenial.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 440  
USED in MAP-SupplementaryServ : 55 277

USED in MAP-Errors : 74

LongTermDenialParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 340  
USED in MAP-Errors : 143 442  
USED in MAP-ER-DataTypes : 48

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 55

lowdelay.....identifier of Named Number, 0  
 DEFINED in MAP-LCS-DataTypes : 210

lowerLayerCompatibility.....identifier of [5] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 297

IsaActiveModelIndicator.....identifier of [2] NULL  
 DEFINED in MAP-MS-DataTypes : 955

IsaAttributes.....identifier of [1] LSAAttributes  
 DEFINED in MAP-MS-DataTypes : 954

LSAAttributes.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 971  
 USED in MAP-MS-DataTypes : 954

LSAData.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 952  
 USED in MAP-MS-DataTypes : 948

LSADataList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 947  
 USED in MAP-MS-DataTypes : 964

IsaDataList.....identifier of [2] LSADataList  
 DEFINED in MAP-MS-DataTypes : 964

IsalIdentity.....identifier of [0] LSAlIdentity  
 DEFINED in MAP-MS-DataTypes : 953

LSAlIdentity.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 968  
 USED in MAP-MS-DataTypes : 56 953 1386 1983 1998

IsalIdentityList.....identifier of LSAlIdentityList  
 DEFINED in MAP-MS-DataTypes : 1383

LSAlIdentityList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1385  
 USED in MAP-MS-DataTypes : 1383

IsaInformation.....identifier of [25] LSAInformation  
 DEFINED in MAP-MS-DataTypes : 785

LSAInformation.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 959  
 USED in MAP-MS-DataTypes : 785

IsaInformationWithdraw.....identifier of [12] LSAInformationWithdraw  
 DEFINED in MAP-MS-DataTypes : 1348

LSAInformationWithdraw.....type reference CHOICE  
 DEFINED in MAP-MS-DataTypes : 1381  
 USED in MAP-MS-DataTypes : 1348

LSAOnlyAccessIndicator.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 943  
 USED in MAP-MS-DataTypes : 963

IsaOnlyAccessIndicator.....identifier of [1] LSAOnlyAccessIndicator  
 DEFINED in MAP-MS-DataTypes : 963

mah.....value reference SS-Code, '00110010'B  
 DEFINED in MAP-SS-Code : 68

MAP-BS-Code.....module reference  
 DEFINED in MAP-BS-Code : 1  
 USED in MAP-MS-DataTypes : 160  
 USED in MAP-CommonDataTypes : 72

MAP-CallHandlingOperations.....module reference  
 DEFINED in MAP-CallHandlingOperat : 1  
 USED in MAP-Protocol : 68

MAP-CH-DataTypes.....module reference

DEFINED in MAP-CH-DataTypes : 1  
USED in MAP-CallHandlingOperat : 75

MAP-CommonDataTypes.....module reference  
DEFINED in MAP-CommonDataTypes : 1  
USED in MAP-MobileServiceOpera : 169  
USED in MAP-OperationAndMainte : 45

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 56

USED in MAP-MS-DataTypes	:	194
USED in MAP-OM-DataTypes	:	23
USED in MAP-CH-DataTypes	:	74
USED in MAP-SS-DataTypes	:	55
USED in MAP-SM-DataTypes	:	37
USED in MAP-GR-DataTypes	:	27
USED in MAP-LCS-DataTypes	:	40
USED in MAP-ST-DataTypes	:	20
USED in MAP-ER-DataTypes	:	75

MAP-Errors.....module reference

DEFINED in MAP-Errors	:	1
USED in MAP-MobileServiceOpe	:	110
USED in MAP-OperationAndMainte	:	31
USED in MAP-CallHandlingOperat	:	52
USED in MAP-SupplementaryServi	:	57
USED in MAP-ShortMessageServic	:	42
USED in MAP-Group-Call-Operati	:	28
USED in MAP-LocationServiceOpe	:	38
USED in MAP-SecureTransportOpe	:	29

MAP-ER-DataTypes.....module reference

DEFINED in MAP-ER-DataTypes	:	1
USED in MAP-Errors	:	161
USED in MAP-MS-DataTypes	:	204
USED in MAP-SM-DataTypes	:	42

MAP-EXTENSION.....information object class reference CLASS

DEFINED in MAP-ExtensionDataTypes	:	22
USED in MAP-ExtensionDataTypes	:	39 41 46

MAP-ExtensionDataTypes.....module reference

DEFINED in MAP-ExtensionDataTypes	:	1
USED in MAP-MS-DataTypes	:	199
USED in MAP-CommonDataTypes	:	82
USED in MAP-OM-DataTypes	:	28
USED in MAP-CH-DataTypes	:	79
USED in MAP-SS-DataTypes	:	60
USED in MAP-SM-DataTypes	:	47
USED in MAP-GR-DataTypes	:	43
USED in MAP-LCS-DataTypes	:	45
USED in MAP-ER-DataTypes	:	92

MAP-Group-Call-Operations.....module reference

DEFINED in MAP-Group-Call-Operati	:	1
USED in MAP-Protocol	:	107

MAP-GR-DataTypes.....module reference

DEFINED in MAP-GR-DataTypes	:	1
USED in MAP-Group-Call-Operati	:	38

MAP-LCS-DataTypes.....module reference

DEFINED in MAP-LCS-DataTypes	:	1
USED in MAP-LocationServiceOpe	:	48

MAP-LocationServiceOperations.....module reference

DEFINED in MAP-LocationServiceOpe	:	1
USED in MAP-Protocol	:	115

MAP-MobileServiceOperations.....module reference

DEFINED in MAP-MobileServiceOpe	:	1
USED in MAP-Protocol	:	45

MAP-MS-DataTypes.....module reference

DEFINED in MAP-MS-DataTypes	:	1
USED in MAP-MobileServiceOpe	:	164
USED in MAP-CH-DataTypes	:	53
USED in MAP-GR-DataTypes	:	37
USED in MAP-LCS-DataTypes	:	56

MAP-OM-DataTypes.....module reference

DEFINED in MAP-OM-DataTypes	:	1
USED in MAP-OperationAndMainte	:	39

MAP-OperationAndMaintenanceOperations...module reference

DEFINED in MAP-OperationAndMainte : 1  
USED in MAP-Protocol : 53

MAP-Protocol.....module reference  
DEFINED in MAP-Protocol : 1

MAP-SecureTransportOperations.....module reference

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 57

DEFINED in MAP-SecureTransportOpe : 1  
USED in MAP-Protocol : 125

MAP-ShortMessageServiceOperations.....module reference  
DEFINED in MAP-ShortMessageServic : 1  
USED in MAP-Protocol : 98

MAP-SM-DataTypes.....module reference  
DEFINED in MAP-SM-DataTypes : 1  
USED in MAP-ShortMessageServic : 58  
USED in MAP-LCS-DataTypes : 61

MAP-SS-Code.....module reference  
DEFINED in MAP-SS-Code : 1  
USED in MAP-SupplementaryServi : 80  
USED in MAP-MS-DataTypes : 155  
USED in MAP-CommonDataTypes : 77  
USED in MAP-SS-DataTypes : 65  
USED in MAP-ER-DataTypes : 87

MAP-SS-DataTypes.....module reference  
DEFINED in MAP-SS-DataTypes : 1  
USED in MAP-SupplementaryServi : 75  
USED in MAP-Errors : 106  
USED in MAP-MS-DataTypes : 150  
USED in MAP-CH-DataTypes : 60  
USED in MAP-LCS-DataTypes : 51  
USED in MAP-ER-DataTypes : 68

MAP-ST-DataTypes.....module reference  
DEFINED in MAP-ST-DataTypes : 1  
USED in MAP-SecureTransportOpe : 36  
USED in MAP-ER-DataTypes : 81

MAP-SupplementaryServiceOperations.....module reference  
DEFINED in MAP-SupplementaryServi : 1  
USED in MAP-Protocol : 86

MAP-TS-Code.....module reference  
DEFINED in MAP-TS-Code : 1  
USED in MAP-MS-DataTypes : 165  
USED in MAP-CommonDataTypes : 66  
USED in MAP-GR-DataTypes : 32

matchType.....identifier of [0] MatchType  
DEFINED in MAP-MS-DataTypes : 1562

MatchType.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1592  
USED in MAP-MS-DataTypes : 1562

maxAddressLength.....value reference INTEGER, 20  
DEFINED in MAP-CommonDataTypes : 141  
USED in MAP-CommonDataTypes : 100

maxAdd-GeographicalInformation.....value reference INTEGER, 91  
DEFINED in MAP-LCS-DataTypes : 335  
USED in MAP-LCS-DataTypes : 317

maxEventSpecification.....value reference INTEGER, 2  
DEFINED in MAP-SS-DataTypes : 302  
USED in MAP-SS-DataTypes : 299

maxExt-GeographicalInformation.....value reference INTEGER, 20  
DEFINED in MAP-LCS-DataTypes : 313  
USED in MAP-LCS-DataTypes : 257

maxFTN-AddressLength.....value reference INTEGER, 15  
DEFINED in MAP-CommonDataTypes : 156  
USED in MAP-CommonDataTypes : 150

maximumEntitledPriority.....identifier of EMLPP-Priority  
DEFINED in MAP-CommonDataTypes : 454

maximumEntitledPriority.....identifier of [0] EMLPP-Priority

DEFINED in MAP-SS-DataTypes : 193

maxISDN-AddressLength.....value reference INTEGER, 9

DEFINED in MAP-CommonDataTypes : 147

USED in MAP-CommonDataTypes : 18 144

maxISDN-SubaddressLength.....value reference INTEGER, 21

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 58

DEFINED in MAP-CommonDataTypes : 196  
USED in MAP-CommonDataTypes : 159

maxLCSCodewordStringLength.....value reference INTEGER, 127  
DEFINED in MAP-LCS-DataTypes : 236  
USED in MAP-LCS-DataTypes : 234

maxLongSignallInfoLength.....value reference INTEGER, 2560  
DEFINED in MAP-CommonDataTypes : 250  
USED in MAP-CommonDataTypes : 248

MaxMC-Bearers.....type reference INTEGER  
DEFINED in MAP-CommonDataTypes : 481  
USED in MAP-CommonDataTypes : 52 476  
USED in MAP-SS-DataTypes : 52 196

maxNameStringLength.....value reference INTEGER, 63  
DEFINED in MAP-LCS-DataTypes : 169  
USED in MAP-LCS-DataTypes : 167

maxNrOfRABs.....value reference INTEGER, 255  
DEFINED in MAP-MS-DataTypes : 707  
USED in MAP-MS-DataTypes : 705

maxNumOfBasicServiceGroups.....value reference INTEGER, 13  
DEFINED in MAP-SS-DataTypes : 266  
USED in MAP-SS-DataTypes : 95 152 263

maxNumOfBasicServices.....value reference INTEGER, 70  
DEFINED in MAP-MS-DataTypes : 1391  
USED in MAP-MS-DataTypes : 1388

maxNumOfBearerServices.....value reference INTEGER, 50  
DEFINED in MAP-MS-DataTypes : 1003  
USED in MAP-MS-DataTypes : 1000

maxNumOfCamelBasicServiceCriteria.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 1586  
USED in MAP-MS-DataTypes : 1577

maxNumOfCamelDestinationNumberLengths...value reference INTEGER, 3  
DEFINED in MAP-MS-DataTypes : 1584  
USED in MAP-MS-DataTypes : 1574

maxNumOfCamelDestinationNumbers.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1582  
USED in MAP-MS-DataTypes : 1569

maxNumOfCamelSSEvents.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1495  
USED in MAP-MS-DataTypes : 1484

maxNumOfCamelTDPData.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1515  
USED in MAP-MS-DataTypes : 77 882 1414 1508 1540 1543 1682 1793

maxNumOfCAMEL-O-CauseValueCriteria.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 1602  
USED in MAP-MS-DataTypes : 1596

maxNumOfCAMEL-T-CauseValueCriteria.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 1604  
USED in MAP-MS-DataTypes : 1599

maxNumOfCCBS-Requests.....value reference INTEGER, 5  
DEFINED in MAP-SS-DataTypes : 203  
USED in MAP-SS-DataTypes : 200 212

maxNumOfCUG.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1174  
USED in MAP-MS-DataTypes : 1153

maxNumOfDP-AnalysedInfoCriteria.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1458  
USED in MAP-MS-DataTypes : 1455

maxNumOfEncryptionInfo.....value reference INTEGER, 100  
DEFINED in MAP-MS-DataTypes : 731  
USED in MAP-MS-DataTypes : 724

maxNumOfExternalClient.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 1244

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 59

USED in MAP-MS-DataTypes : 1241

maxNumOfExt-BasicServiceGroups.....value reference INTEGER, 32  
DEFINED in MAP-MS-DataTypes : 1182  
USED in MAP-MS-DataTypes : 1079 1138 1176 1179

maxNumOfExt-ExternalClient.....value reference INTEGER, 35  
DEFINED in MAP-MS-DataTypes : 1254  
USED in MAP-MS-DataTypes : 1251

maxNumOfGMLC.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 821  
USED in MAP-MS-DataTypes : 817

maxNumOfHLR-Id.....value reference INTEGER, 50  
DEFINED in MAP-CommonDataTypes : 333  
USED in MAP-CommonDataTypes : 330

maxNumOfIntegrityInfo.....value reference INTEGER, 100  
DEFINED in MAP-MS-DataTypes : 722  
USED in MAP-MS-DataTypes : 715

maxNumOfISDN-AddressDigits.....value reference INTEGER, 15  
DEFINED in MAP-MS-DataTypes : 1580  
USED in MAP-MS-DataTypes : 1575

maxNumOfLSAs.....value reference INTEGER, 20  
DEFINED in MAP-MS-DataTypes : 950  
USED in MAP-MS-DataTypes : 947 1385

maxNumOfMC-Bearers.....value reference INTEGER, 7  
DEFINED in MAP-CommonDataTypes : 485  
USED in MAP-CommonDataTypes : 481 483

maxNumOfMobilityTriggers.....value reference INTEGER, 10  
DEFINED in MAP-MS-DataTypes : 1751  
USED in MAP-MS-DataTypes : 1748

maxNumOfMOLR-Class.....value reference INTEGER, 3  
DEFINED in MAP-MS-DataTypes : 1300  
USED in MAP-MS-DataTypes : 1297

maxNumOfPDP-Contexts.....value reference INTEGER, 50  
DEFINED in MAP-MS-DataTypes : 834  
USED in MAP-MS-DataTypes : 831 848 1378 2055

maxNumOfPLMNClient.....value reference INTEGER, 5  
DEFINED in MAP-MS-DataTypes : 1249  
USED in MAP-MS-DataTypes : 1246

maxNumOfPrivacyClass.....value reference INTEGER, 4  
DEFINED in MAP-MS-DataTypes : 1212  
USED in MAP-MS-DataTypes : 1209

maxNumOfPrivateExtensions.....value reference INTEGER, 10  
DEFINED in MAP-ExtensionDataTypes : 44  
USED in MAP-ExtensionDataTypes : 35

maxNumOfRadioResources.....value reference INTEGER, 7  
DEFINED in MAP-MS-DataTypes : 562  
USED in MAP-MS-DataTypes : 553

maxNumOfRelocationNumber.....value reference INTEGER, 7  
DEFINED in MAP-MS-DataTypes : 709  
USED in MAP-MS-DataTypes : 694 697

maxNumOfServiceHandovers.....value reference INTEGER, 7  
DEFINED in MAP-MS-DataTypes : 540  
USED in MAP-MS-DataTypes : 531

maxNumOfServiceType.....value reference INTEGER, 32  
DEFINED in MAP-MS-DataTypes : 1286  
USED in MAP-MS-DataTypes : 1283

maxNumOfSS.....value reference INTEGER, 30

DEFINED in MAP-SS-DataTypes : 258  
USED in MAP-MS-DataTypes : 145 1063  
USED in MAP-SS-DataTypes : 32 255 260

maxNumOfTeleservices.....value reference INTEGER, 20  
DEFINED in MAP-MS-DataTypes : 1008  
USED in MAP-MS-DataTypes : 1005

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 60

maxNumOfTPDUTypes.....value reference INTEGER, 5  
 DEFINED in MAP-MS-DataTypes : 1426  
 USED in MAP-MS-DataTypes : 1422

maxNumOfVBSGroupIds.....value reference INTEGER, 50  
 DEFINED in MAP-MS-DataTypes : 1890  
 USED in MAP-MS-DataTypes : 1884

maxNumOfVGCSGroupIds.....value reference INTEGER, 50  
 DEFINED in MAP-MS-DataTypes : 1892  
 USED in MAP-MS-DataTypes : 1887

maxNumOfZoneCodes.....value reference INTEGER, 10  
 DEFINED in MAP-MS-DataTypes : 1314  
 USED in MAP-MS-DataTypes : 64 1308

maxPermittedEncryptionAlgorithmsLength..value reference INTEGER, 9  
 DEFINED in MAP-MS-DataTypes : 496  
 USED in MAP-MS-DataTypes : 488

maxPermittedIntegrityProtectionAlgorithmvalue reference INTEGER, 9  
 DEFINED in MAP-MS-DataTypes : 485  
 USED in MAP-MS-DataTypes : 477

maxRequestorIDStringLength.....value reference INTEGER, 127  
 DEFINED in MAP-LCS-DataTypes : 178  
 USED in MAP-LCS-DataTypes : 176

maxSignallInfoLength.....value reference INTEGER, 200  
 DEFINED in MAP-CommonDataTypes : 209  
 USED in MAP-CommonDataTypes : 25 207

maxUSSD-StringLength.....value reference INTEGER, 160  
 DEFINED in MAP-SS-DataTypes : 241  
 USED in MAP-SS-DataTypes : 237

mc.....value reference SS-Code, '01000101'B  
 DEFINED in MAP-SS-Code : 84

mcef-Set.....identifier of Named Number, 2  
 DEFINED in MAP-SM-DataTypes : 196

mci.....value reference SS-Code, '00010101'B  
 DEFINED in MAP-SS-Code : 36

MC-Bearers.....type reference INTEGER  
 DEFINED in MAP-CommonDataTypes : 483  
 USED in MAP-CommonDataTypes : 53 477  
 USED in MAP-SS-DataTypes : 53 79 167 197 198

mc-SS-Info.....identifier of [28] MC-SS-Info  
 DEFINED in MAP-MS-DataTypes : 790

MC-SS-Info.....type reference SEQUENCE  
 DEFINED in MAP-CommonDataTypes : 473  
 USED in MAP-MS-DataTypes : 186 790  
 USED in MAP-CommonDataTypes : 51

memoryAvailable.....identifier of Named Number, 1  
 DEFINED in MAP-SM-DataTypes : 217

memoryCapacityExceeded.....identifier of Named Number, 0  
 DEFINED in MAP-SM-DataTypes : 166

memoryCapacityExceeded.....identifier of Named Number, 0  
 DEFINED in MAP-ER-DataTypes : 147

messageWaitingListFull.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 459  
 USED in MAP-ShortMessageServic : 40 125  
 USED in MAP-Errors : 79

MessageWaitListFullParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 321

USED in MAP-Errors : 137 461  
USED in MAP-ER-DataTypes : 41

mg-csi.....identifier of [5] MG-CSI  
DEFINED in MAP-MS-DataTypes : 865

mg-csi.....identifier of Named Number, 10

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 61

DEFINED in MAP-MS-DataTypes : 1364

mg-csi.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 1639

MG-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1737  
USED in MAP-MS-DataTypes : 865 2212

mg-csi.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 2164

mg-csi.....identifier of [17] MG-CSI  
DEFINED in MAP-MS-DataTypes : 2212

mlcNumber.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 68

mlc-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 93

MM-Code.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1753  
USED in MAP-MS-DataTypes : 1749 2302

mm-EventNotSupported.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 505  
USED in MAP-MobileServiceOpera : 95 512  
USED in MAP-Errors : 92

MM-EventNotSupported-Param.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 388  
USED in MAP-Errors : 148 507  
USED in MAP-ER-DataTypes : 53

mnrf-Set.....identifier of Named Number, 1  
DEFINED in MAP-SM-DataTypes : 195

mnrg-Set.....identifier of Named Number, 3  
DEFINED in MAP-SM-DataTypes : 197

mobileNotReachableReason.....identifier of [2] AbsentSubscriberDiagnosticSM  
DEFINED in MAP-MS-DataTypes : 1831

mobileYellowPages.....value reference LCSServiceTypeID, 11  
DEFINED in MAP-CommonDataTypes : 406

mobilityTriggers.....identifier of MobilityTriggers  
DEFINED in MAP-MS-DataTypes : 1727

mobilityTriggers.....identifier of MobilityTriggers  
DEFINED in MAP-MS-DataTypes : 1738

MobilityTriggers.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1748  
USED in MAP-MS-DataTypes : 1727 1738

ModificationInstruction.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 2277  
USED in MAP-MS-DataTypes : 2245 2255 2261 2267 2268

modificationRequestFor-CB-Info.....identifier of [3] ModificationRequestFor-CB-Info  
DEFINED in MAP-MS-DataTypes : 2224

ModificationRequestFor-CB-Info.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2249  
USED in MAP-MS-DataTypes : 2224

modificationRequestFor-CF-Info.....identifier of [2] ModificationRequestFor-CF-Info  
DEFINED in MAP-MS-DataTypes : 2223

ModificationRequestFor-CF-Info.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2238  
USED in MAP-MS-DataTypes : 2223

modificationRequestFor-CSI.....identifier of [4] ModificationRequestFor-CSI  
DEFINED in MAP-MS-DataTypes : 2225

ModificationRequestFor-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2265  
USED in MAP-MS-DataTypes : 2225

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 62

modificationRequestFor-ODB-data.....identifier of [7] ModificationRequestFor-ODB-data  
DEFINED in MAP-MS-DataTypes : 2229

ModificationRequestFor-ODB-data.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2259  
USED in MAP-MS-DataTypes : 2229

modifyCSI-State.....identifier of [2] ModificationInstruction  
DEFINED in MAP-MS-DataTypes : 2268

modifyNotificationToCSE.....identifier of [6] ModificationInstruction  
DEFINED in MAP-MS-DataTypes : 2245

modifyNotificationToCSE.....identifier of [5] ModificationInstruction  
DEFINED in MAP-MS-DataTypes : 2255

modifyNotificationToCSE.....identifier of [1] ModificationInstruction  
DEFINED in MAP-MS-DataTypes : 2261

modifyNotificationToCSE.....identifier of [1] ModificationInstruction  
DEFINED in MAP-MS-DataTypes : 2267

MOLR-Class.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1302  
USED in MAP-MS-DataTypes : 1298

molr-List.....identifier of [2] MOLR-List  
DEFINED in MAP-MS-DataTypes : 807

MOLR-List.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1297  
USED in MAP-MS-DataTypes : 807

monitoringMode.....identifier of [0] MonitoringMode  
DEFINED in MAP-CH-DataTypes : 368

MonitoringMode.....type reference ENUMERATED  
DEFINED in MAP-CH-DataTypes : 373  
USED in MAP-CH-DataTypes : 368

moreMessagesToSend.....identifier of NULL  
DEFINED in MAP-SM-DataTypes : 122

moveLeg.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1649

mo-ForwardSM.....information object reference OPERATION, Information Object  
DEFINED in MAP-ShortMessageServic : 83  
USED in MAP-Protocol : 92 144  
USED in MAP-ShortMessageServic : 14

MO-ForwardSM-Arg.....type reference SEQUENCE  
DEFINED in MAP-SM-DataTypes : 105  
USED in MAP-ShortMessageServic : 48 85  
USED in MAP-SM-DataTypes : 16

MO-ForwardSM-Res.....type reference SEQUENCE  
DEFINED in MAP-SM-DataTypes : 113  
USED in MAP-ShortMessageServic : 49 87  
USED in MAP-SM-DataTypes : 17

mo-lr.....identifier of Named Number, 2  
DEFINED in MAP-LCS-DataTypes : 381

mo-sms-CSI.....identifier of [1] SMS-CSI  
DEFINED in MAP-MS-DataTypes : 860

mo-sms-csi.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 1359

mo-sms-CSI.....identifier of [6] SMS-CSI  
DEFINED in MAP-MS-DataTypes : 1406

mo-sms-CSI.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 2157

mo-sms-CSI.....identifier of [10] SMS-CSI  
DEFINED in MAP-MS-DataTypes : 2204

msAvailable.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 130

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 63

msc-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 216

msc-Number.....identifier of [6] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1984

msc-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 205

msc-Number.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-SM-DataTypes : 97

msisdn.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 975

msisdn.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 2285

msisdn.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 2304

msisdn.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-CommonDataTypes : 374

msisdn.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 94

msisdn.....identifier of [12] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 166

msisdn.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 206

msisdn.....identifier of [9] ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 241

msisdn.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-SS-DataTypes : 225

msisdn.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-SS-DataTypes : 270

msisdn.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-SM-DataTypes : 54

msisdn.....identifier of [2] ISDN-AddressString  
DEFINED in MAP-SM-DataTypes : 138

msisdn.....identifier of ISDN-AddressString  
DEFINED in MAP-SM-DataTypes : 143

msisdn.....identifier of ISDN-AddressString  
DEFINED in MAP-SM-DataTypes : 177

msisdn.....identifier of [3] ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 97

msisdn.....identifier of [0] ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 342

mNetworkCapability.....identifier of [0] MSNetworkCapability  
DEFINED in MAP-MS-DataTypes : 1944

MSNetworkCapability.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1948  
USED in MAP-MS-DataTypes : 1944

msNotReachable.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 1878

msPurged.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 2098

mRadioAccessCapability.....identifier of [1] MSRadioAccessCapability  
DEFINED in MAP-MS-DataTypes : 1945

MSRadioAccessCapability.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1952  
USED in MAP-MS-DataTypes : 1945

ms-classmark.....identifier of [5] NULL  
DEFINED in MAP-MS-DataTypes : 1964

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 64

ms-Classmark2.....identifier of [6] MS-Classmark2  
 DEFINED in MAP-MS-DataTypes : 1931

MS-Classmark2.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 1939  
 USED in MAP-MS-DataTypes : 97 1931

ms-Present.....identifier of Named Number, 0  
 DEFINED in MAP-SM-DataTypes : 216

mt-ForwardSM.....information object reference OPERATION, Information Object  
 DEFINED in MAP-ShortMessageServic : 96  
 USED in MAP-Protocol : 93 144  
 USED in MAP-ShortMessageServic : 15

MT-ForwardSM-Arg.....type reference SEQUENCE  
 DEFINED in MAP-SM-DataTypes : 118  
 USED in MAP-ShortMessageServic : 50 98  
 USED in MAP-SM-DataTypes : 18

MT-ForwardSM-Res.....type reference SEQUENCE  
 DEFINED in MAP-SM-DataTypes : 126  
 USED in MAP-ShortMessageServic : 51 100  
 USED in MAP-SM-DataTypes : 19

mt-IrRestart.....identifier of Named Number, 4  
 DEFINED in MAP-LCS-DataTypes : 393

MT-smsCAMELTDP-Criteria.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1417  
 USED in MAP-MS-DataTypes : 1415

mt-smsCAMELTDP-CriteriaList.....identifier of [4] MT-smsCAMELTDP-CriteriaList  
 DEFINED in MAP-MS-DataTypes : 864

mt-smsCAMELTDP-CriteriaList.....identifier of [11] MT-smsCAMELTDP-CriteriaList  
 DEFINED in MAP-MS-DataTypes : 1411

MT-smsCAMELTDP-CriteriaList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1414  
 USED in MAP-MS-DataTypes : 864 1411 2211

mt-smsCAMELTDP-CriteriaList.....identifier of [16] MT-smsCAMELTDP-CriteriaList  
 DEFINED in MAP-MS-DataTypes : 2211

mt-sms-CSI.....identifier of [3] SMS-CSI  
 DEFINED in MAP-MS-DataTypes : 863

mt-sms-csi.....identifier of Named Number, 9  
 DEFINED in MAP-MS-DataTypes : 1363

mt-sms-CSI.....identifier of [10] SMS-CSI  
 DEFINED in MAP-MS-DataTypes : 1410

mt-sms-csi.....identifier of Named Number, 4  
 DEFINED in MAP-MS-DataTypes : 1638

mt-sms-CSI.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 2163

mt-sms-CSI.....identifier of [15] SMS-CSI  
 DEFINED in MAP-MS-DataTypes : 2210

MT-SMS-TPDU-Type.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 1428  
 USED in MAP-MS-DataTypes : 1423

multicallBearerInfo.....identifier of [3] MulticallBearerInfo  
 DEFINED in MAP-MS-DataTypes : 568

MulticallBearerInfo.....type reference INTEGER  
 DEFINED in MAP-MS-DataTypes : 697  
 USED in MAP-MS-DataTypes : 568

multipleBearerNotSupported.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 569

multipleBearerRequested.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 511

multipleECT-Barred.....identifier of Named Number, 14

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 65

DEFINED in MAP-MS-DataTypes : 1031

multiPTY.....value reference SS-Code, '01010001'B  
DEFINED in MAP-SS-Code : 90

mw-Status.....identifier of MW-Status  
DEFINED in MAP-SM-DataTypes : 183

MW-Status.....type reference BIT STRING  
DEFINED in MAP-SM-DataTypes : 193  
USED in MAP-SM-DataTypes : 183

m-csi.....identifier of Named Number, 6  
DEFINED in MAP-MS-DataTypes : 1360

m-CSI.....identifier of [5] M-CSI  
DEFINED in MAP-MS-DataTypes : 1405

M-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1726  
USED in MAP-MS-DataTypes : 1405 2206

m-CSI.....identifier of Named Number, 7  
DEFINED in MAP-MS-DataTypes : 2159

m-CSI.....identifier of [12] M-CSI  
DEFINED in MAP-MS-DataTypes : 2206

NAEA-CIC.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 365  
USED in MAP-CommonDataTypes : 39 361

naea-PreferredCI.....identifier of [15] NAEA-PreferredCI  
DEFINED in MAP-MS-DataTypes : 779

NAEA-PreferredCI.....type reference SEQUENCE  
DEFINED in MAP-CommonDataTypes : 360  
USED in MAP-MS-DataTypes : 184 779  
USED in MAP-CommonDataTypes : 38  
USED in MAP-CH-DataTypes : 73 163

naea-PreferredCI.....identifier of [10] NAEA-PreferredCI  
DEFINED in MAP-CH-DataTypes : 163

naea-PreferredCIC.....identifier of [0] NAEA-CIC  
DEFINED in MAP-CommonDataTypes : 361

nameString.....identifier of [2] NameString  
DEFINED in MAP-LCS-DataTypes : 159

NameString.....type reference USSD-String  
DEFINED in MAP-LCS-DataTypes : 167  
USED in MAP-LCS-DataTypes : 159

navigation.....value reference LCSServiceTypeID, 8  
DEFINED in MAP-CommonDataTypes : 403

na-ESRD.....identifier of [3] ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 345

na-ESRK.....identifier of [4] ISDN-AddressString  
DEFINED in MAP-LCS-DataTypes : 346

nbrSB.....identifier of [2] MaxMC-Bearers  
DEFINED in MAP-CommonDataTypes : 476

nbrSB.....identifier of [3] MaxMC-Bearers  
DEFINED in MAP-SS-DataTypes : 196

nbrSN.....identifier of [5] MC-Bearers  
DEFINED in MAP-SS-DataTypes : 198

nbrUser.....identifier of [3] MC-Bearers  
DEFINED in MAP-CommonDataTypes : 477

nbrUser.....identifier of [8] MC-Bearers  
DEFINED in MAP-SS-DataTypes : 79

nbrUser.....identifier of [5] MC-Bearers  
DEFINED in MAP-SS-DataTypes : 167

nbrUser.....identifier of [4] MC-Bearers

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 66

DEFINED in MAP-SS-DataTypes : 197

neededLcsCapabilityNotSupportedInServingIdentifier of [1] NULL  
 DEFINED in MAP-ER-DataTypes : 199

negativePW-Check.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 428  
 USED in MAP-SupplementaryServi : 47 141 161 238  
 USED in MAP-Errors : 71

netDetNotReachable.....identifier of NotReachableReason  
 DEFINED in MAP-MS-DataTypes : 2043

netDetNotReachable.....identifier of NotReachableReason  
 DEFINED in MAP-MS-DataTypes : 2053

networkAccessMode.....identifier of [24] NetworkAccessMode  
 DEFINED in MAP-MS-DataTypes : 784

NetworkAccessMode.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 823  
 USED in MAP-MS-DataTypes : 784

networkNode-AreaRestricted.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 1328

networkNode-Number.....identifier of [1] ISDN-AddressString  
 DEFINED in MAP-SM-DataTypes : 85

networkNode-Number.....identifier of ISDN-AddressString  
 DEFINED in MAP-LCS-DataTypes : 81

NetworkResource.....type reference ENUMERATED  
 DEFINED in MAP-CommonDataTypes : 350  
 USED in MAP-CommonDataTypes : 37  
 USED in MAP-ER-DataTypes : 74 176 183

networkResource.....identifier of NetworkResource  
 DEFINED in MAP-ER-DataTypes : 176

networkResource.....identifier of NetworkResource  
 DEFINED in MAP-ER-DataTypes : 183

networkSignallInfo.....identifier of [10] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 104

networkSignallInfo.....identifier of [6] ExternalSignallInfo  
 DEFINED in MAP-CH-DataTypes : 209

networkSignallInfo.....identifier of [4] ExternalSignallInfo  
 DEFINED in MAP-SS-DataTypes : 314

new.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 500

newPasswordsMismatch.....identifier of Named Number, 2  
 DEFINED in MAP-ER-DataTypes : 143

noAdditionalInformation.....identifier of Named Number, 0  
 DEFINED in MAP-ER-DataTypes : 353

noCUG-Restrictions.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 1170

NoGroupCallNbParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 329  
 USED in MAP-Errors : 140 475  
 USED in MAP-ER-DataTypes : 45

noGroupCallNumberAvailable.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 473  
 USED in MAP-Group-Call-Operati : 27 53  
 USED in MAP-Errors : 83

noHandoverNumberAvailable.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 275  
USED in MAP-MobileServiceOpera : 92 330  
USED in MAP-Errors : 36

noPageResponse.....identifier of Named Number, 2  
DEFINED in MAP-ER-DataTypes : 258

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 67

noReply.....identifier of Named Number, 2  
DEFINED in MAP-CH-DataTypes : 135

noReplyConditionTime.....identifier of [7] Ext-NoRepCondTime  
DEFINED in MAP-MS-DataTypes : 1091

noReplyConditionTime.....identifier of [5] Ext-NoRepCondTime  
DEFINED in MAP-MS-DataTypes : 2244

noReplyConditionTime.....identifier of [5] NoReplyConditionTime  
DEFINED in MAP-SS-DataTypes : 76

NoReplyConditionTime.....type reference INTEGER  
DEFINED in MAP-SS-DataTypes : 82  
USED in MAP-SS-DataTypes : 30 76 104

noReplyConditionTime.....identifier of [7] NoReplyConditionTime  
DEFINED in MAP-SS-DataTypes : 104

noResponseFromBusyMS.....identifier of Named Number, 3  
DEFINED in MAP-CH-DataTypes : 414

noResponseFromFreeMS.....identifier of Named Number, 2  
DEFINED in MAP-CH-DataTypes : 413

normal.....identifier of Named Number, 0  
DEFINED in MAP-LCS-DataTypes : 389

NoRoamingNbParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 246  
USED in MAP-Errors : 126 300  
USED in MAP-ER-DataTypes : 33

noRoamingNumberAvailable.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 298  
USED in MAP-CallHandlingOperat : 40 118  
USED in MAP-Errors : 45

noSM-RP-DA.....identifier of [5] NULL  
DEFINED in MAP-SM-DataTypes : 135

noSM-RP-OA.....identifier of [5] NULL  
DEFINED in MAP-SM-DataTypes : 140

noSubscriberReply.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 318  
USED in MAP-CallHandlingOperat : 43 99  
USED in MAP-Errors : 47

NoSubscriberReplyParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 274  
USED in MAP-Errors : 130 320  
USED in MAP-ER-DataTypes : 36

noteMM-Event.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 503  
USED in MAP-Protocol : 41 137  
USED in MAP-MobileServiceOpera : 70

NoteMM-EventArgs.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2300  
USED in MAP-MobileServiceOpera : 160 505  
USED in MAP-MS-DataTypes : 137

NoteMM-EventRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2313  
USED in MAP-MobileServiceOpera : 161 507  
USED in MAP-MS-DataTypes : 138

noteMsPresentForGprs.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 489  
USED in MAP-Protocol : 40 137  
USED in MAP-MobileServiceOpera : 67

NoteMsPresentForGprsArg.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1851  
USED in MAP-MobileServiceOpera : 158 491  
USED in MAP-MS-DataTypes : 133

NoteMsPresentForGprsRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1858  
USED in MAP-MobileServiceOpera : 159 493

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 68

USED in MAP-MS-DataTypes : 134

noteSubscriberDataModified.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 306  
USED in MAP-Protocol : 42 138  
USED in MAP-MobileServiceOpera : 34

NoteSubscriberDataModifiedArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2283  
USED in MAP-MobileServiceOpera : 150 308  
USED in MAP-MS-DataTypes : 121

NoteSubscriberDataModifiedRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2294  
USED in MAP-MobileServiceOpera : 151 310  
USED in MAP-MS-DataTypes : 122

notForwarded.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1590

notificationToCSE.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 872

notificationToCSE.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 1445

notificationToCSE.....identifier of [0] NULL  
DEFINED in MAP-MS-DataTypes : 1472

notificationToCSE.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 1502

notificationToCSE.....identifier of [3] NULL  
DEFINED in MAP-MS-DataTypes : 1671

notificationToCSE.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 1731

notificationToCSE.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 1742

notificationToCSE.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 1786

notificationToCSE.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 2173

notificationToCSE.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 2181

notificationToCSE.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 2189

notificationToCSE.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 2325

notificationToCSE.....identifier of [4] NULL  
DEFINED in MAP-MS-DataTypes : 2334

notificationToMSUser.....identifier of [0] NotificationToMSUser  
DEFINED in MAP-MS-DataTypes : 1217

notificationToMSUser.....identifier of [1] NotificationToMSUser  
DEFINED in MAP-MS-DataTypes : 1259

NotificationToMSUser.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1273  
USED in MAP-MS-DataTypes : 83 1217 1259 1291

notificationToMSUser.....identifier of [1] NotificationToMSUser  
DEFINED in MAP-MS-DataTypes : 1291

notifyAndVerify-LocationAllowedIfNoRespoIdentifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1275

notifyAndVerify-LocationNotAllowedIfNoReidentifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1276

notifyLocationAllowed.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1274

notKnownToBePorted.....identifier of Named Number, 0

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 69

DEFINED in MAP-CH-DataTypes : 174

notProvidedFromSGSN.....identifier of [0] NULL  
DEFINED in MAP-MS-DataTypes : 2047

notProvidedFromVLR.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 2044

notReachable.....identifier of Named Number, 0  
DEFINED in MAP-CH-DataTypes : 133

NotReachableReason.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 2097  
USED in MAP-MS-DataTypes : 2043 2053

notRegistered.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 2101

npdbMismatch.....identifier of Named Number, 2  
DEFINED in MAP-ER-DataTypes : 214

nsapi.....identifier of [6] NSAPI  
DEFINED in MAP-MS-DataTypes : 2065

NSAPI.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 2079  
USED in MAP-MS-DataTypes : 2065

numberChanged.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 217  
USED in MAP-CallHandlingOperat : 37 94  
USED in MAP-Errors : 23

NumberChangedParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 218  
USED in MAP-Errors : 118 219  
USED in MAP-ER-DataTypes : 26

NumberOfForwarding.....type reference INTEGER  
DEFINED in MAP-CH-DataTypes : 91  
USED in MAP-CH-DataTypes : 20 96

numberOfForwarding.....identifier of [2] NumberOfForwarding  
DEFINED in MAP-CH-DataTypes : 96

numberOfPWAttemptsViolation.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 431  
USED in MAP-SupplementaryServi : 48 142 162 239  
USED in MAP-Errors : 72

numberOfRequestedVectors.....identifier of NumberOfRequestedVectors  
DEFINED in MAP-MS-DataTypes : 301

numberOfRequestedVectors.....identifier of NumberOfRequestedVectors  
DEFINED in MAP-MS-DataTypes : 737

NumberOfRequestedVectors.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 745  
USED in MAP-MS-DataTypes : 301 737

numberPortabilityStatus.....identifier of [13] NumberPortabilityStatus  
DEFINED in MAP-CH-DataTypes : 167

NumberPortabilityStatus.....type reference ENUMERATED  
DEFINED in MAP-CH-DataTypes : 173  
USED in MAP-CH-DataTypes : 167

odb.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 2141

odb-Data.....identifier of [8] ODB-Data  
DEFINED in MAP-MS-DataTypes : 985

ODB-Data.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1010

USED in MAP-MS-DataTypes : 61 985 2188 2260

odb-Data.....identifier of ODB-Data  
DEFINED in MAP-MS-DataTypes : 2188

odb-data.....identifier of [0] ODB-Data  
DEFINED in MAP-MS-DataTypes : 2260

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 70

odb-GeneralData.....identifier of ODB-GeneralData  
DEFINED in MAP-MS-DataTypes : 1011

ODB-GeneralData.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1016  
USED in MAP-MS-DataTypes : 1011 1320

odb-GeneralData.....identifier of [4] ODB-GeneralData  
DEFINED in MAP-MS-DataTypes : 1320

odb-HPLMN-Data.....identifier of ODB-HPLMN-Data  
DEFINED in MAP-MS-DataTypes : 1012

ODB-HPLMN-Data.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1052  
USED in MAP-MS-DataTypes : 1012

odb-Info.....identifier of [3] ODB-Info  
DEFINED in MAP-MS-DataTypes : 2130

ODB-Info.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2187  
USED in MAP-MS-DataTypes : 2130 2236 2288

odb-Info.....identifier of [3] ODB-Info  
DEFINED in MAP-MS-DataTypes : 2236

odb-Info.....identifier of [2] ODB-Info  
DEFINED in MAP-MS-DataTypes : 2288

offeredCamel4CSIs.....identifier of [6] OfferedCamel4CSIs  
DEFINED in MAP-MS-DataTypes : 234

offeredCamel4CSIs.....identifier of [6] OfferedCamel4CSIs  
DEFINED in MAP-MS-DataTypes : 435

offeredCamel4CSIs.....identifier of [8] OfferedCamel4CSIs  
DEFINED in MAP-MS-DataTypes : 1325

OfferedCamel4CSIs.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1633  
USED in MAP-MS-DataTypes : 75 234 435 1325 2136 2137  
USED in MAP-CH-DataTypes : 42 170 224 270

offeredCamel4CSIs.....identifier of [0] OfferedCamel4CSIs  
DEFINED in MAP-CH-DataTypes : 270

offeredCamel4CSIsInGMSC.....identifier of [20] OfferedCamel4CSIs  
DEFINED in MAP-CH-DataTypes : 224

offeredCamel4CSIsInSGSN.....identifier of [9] OfferedCamel4CSIs  
DEFINED in MAP-MS-DataTypes : 2137

offeredCamel4CSIsInVLR.....identifier of [8] OfferedCamel4CSIs  
DEFINED in MAP-MS-DataTypes : 2136

offeredCamel4CSIsInVMSC.....identifier of [16] OfferedCamel4CSIs  
DEFINED in MAP-CH-DataTypes : 170

OfferedCamel4Functionalities.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1646  
USED in MAP-MS-DataTypes : 76 2310

offeredCamel4Functionalities.....identifier of [8] OfferedCamel4Functionalities  
DEFINED in MAP-MS-DataTypes : 2310

old.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 499

omc-Id.....identifier of [3] AddressString  
DEFINED in MAP-OM-DataTypes : 40

onlyMSC.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 825

onlySGSN.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 826

OPERATION.....information object class reference CLASS  
DEFINED in Remote-Operations-Info : 13  
USED in MAP-Protocol : 12 131

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 71

USED in Remote-Operations-Info : 56 57 58  
 USED in MAP-MobileServiceOpera : 78 177 190 201 213 225 239 251 266  
   284 306 321 334 341 346 351 365 383  
   397 410 422 436 441 444 458 474 489  
   503  
 USED in MAP-OperationAndMainte : 19 51 66 80  
 USED in MAP-CallHandlingOperat : 26 81 105 121 134 146 159 174 187  
   201 215  
 USED in MAP-SupplementaryServi : 29 88 106 124 145 165 181 194 211  
   226 244 251 263 281  
 USED in MAP-ShortMessageServic : 23 67 83 96 115 128 138 143  
 USED in MAP-Group-Call-Operati : 20 46 57 64 69  
 USED in MAP-LocationServiceOpe : 19 53 68 87  
 USED in MAP-SecureTransportOpe : 20 41 53 63 71

operationCode.....identifier of [0] OperationCode  
 DEFINED in MAP-ST-DataTypes : 84

OperationCode.....type reference CHOICE  
 DEFINED in MAP-ST-DataTypes : 88  
 USED in MAP-ST-DataTypes : 84

OPERATION-PACKAGE.....information object class reference CLASS  
 DEFINED in Remote-Operations-Info : 55

operatorBarring.....identifier of Named Number, 1  
 DEFINED in MAP-ER-DataTypes : 115

operatorDeterminedBarring.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 998

operatorDeterminedBarring.....identifier of Named Number, 3  
 DEFINED in MAP-ER-DataTypes : 104

originalComponentIdentifier.....identifier of OriginalComponentIdentifier  
 DEFINED in MAP-ST-DataTypes : 43

OriginalComponentIdentifier.....type reference CHOICE  
 DEFINED in MAP-ST-DataTypes : 83  
 USED in MAP-ST-DataTypes : 43

orNotSupportedInGMSC.....identifier of [16] NULL  
 DEFINED in MAP-CH-DataTypes : 220

or-Capability.....identifier of [5] OR-Phase  
 DEFINED in MAP-CH-DataTypes : 99

or-Interactions.....identifier of Named Number, 12  
 DEFINED in MAP-MS-DataTypes : 1659

or-Interrogation.....identifier of [4] NULL  
 DEFINED in MAP-CH-DataTypes : 98

or-Interrogation.....identifier of [10] NULL  
 DEFINED in MAP-CH-DataTypes : 213

or-NotAllowed.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 348  
 USED in MAP-CallHandlingOperat : 35 92 116 129  
 USED in MAP-Errors : 44

OR-NotAllowedParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 201  
 USED in MAP-Errors : 127 350  
 USED in MAP-ER-DataTypes : 24

OR-Phase.....type reference INTEGER  
 DEFINED in MAP-CH-DataTypes : 128  
 USED in MAP-CH-DataTypes : 99

overrideCategory.....identifier of [1] OverrideCategory  
 DEFINED in MAP-SS-DataTypes : 172

OverrideCategory.....type reference ENUMERATED  
 DEFINED in MAP-SS-DataTypes : 179

USED in MAP-SS-DataTypes : 28 172

overrideDisabled.....identifier of Named Number, 1  
DEFINED in MAP-SS-DataTypes : 181

overrideEnabled.....identifier of Named Number, 0  
DEFINED in MAP-SS-DataTypes : 180

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 72

ownNumberPortedOut.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 175

o-andM-HPLMN.....identifier of Named Number, 1  
 DEFINED in MAP-CommonDataTypes : 384

o-andM-VPLMN.....identifier of Named Number, 2  
 DEFINED in MAP-CommonDataTypes : 385

O-BcsmCamelTDPCriteriaList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1540  
 USED in MAP-MS-DataTypes : 67 1403 2195 2214  
 USED in MAP-CH-DataTypes : 46 246 287

o-BcsmCamelTDPCriteriaList.....identifier of [13] O-BcsmCamelTDPCriteriaList  
 DEFINED in MAP-CH-DataTypes : 246

O-BcsmCamelTDPData.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1517  
 USED in MAP-MS-DataTypes : 1509

o-BcsmCamelTDPDataList.....identifier of O-BcsmCamelTDPDataList  
 DEFINED in MAP-MS-DataTypes : 1498

O-BcsmCamelTDPDataList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1508  
 USED in MAP-MS-DataTypes : 1498

O-BcsmCamelTDP-Criteria.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1546  
 USED in MAP-MS-DataTypes : 1541

o-BcsmCamelTDP-CriteriaList.....identifier of [4] O-BcsmCamelTDPCriteriaList  
 DEFINED in MAP-MS-DataTypes : 1403

o-BcsmCamelTDP-CriteriaList.....identifier of [1] O-BcsmCamelTDPCriteriaList  
 DEFINED in MAP-MS-DataTypes : 2195

o-BcsmCamelTDP-CriteriaList.....identifier of [3] O-BcsmCamelTDPCriteriaList  
 DEFINED in MAP-CH-DataTypes : 287

o-BcsmTriggerDetectionPoint.....identifier of O-BcsmTriggerDetectionPoint  
 DEFINED in MAP-MS-DataTypes : 1518

O-BcsmTriggerDetectionPoint.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 1528  
 USED in MAP-MS-DataTypes : 1518 1547

o-BcsmTriggerDetectionPoint.....identifier of O-BcsmTriggerDetectionPoint  
 DEFINED in MAP-MS-DataTypes : 1547

o-CauseValueCriteria.....identifier of [3] O-CauseValueCriteria  
 DEFINED in MAP-MS-DataTypes : 1552

O-CauseValueCriteria.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1596  
 USED in MAP-MS-DataTypes : 1552

o-csi.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 1354

o-CSI.....identifier of [0] O-CSI  
 DEFINED in MAP-MS-DataTypes : 1399

O-CSI.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1497  
 USED in MAP-MS-DataTypes : 65 1399 2194 2213  
 USED in MAP-CH-DataTypes : 44 238 284

o-csi.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 1634

o-CSI.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 2152

o-CSI.....identifier of [0] O-CSI  
DEFINED in MAP-MS-DataTypes : 2194

o-CSI.....identifier of [5] O-CSI  
DEFINED in MAP-CH-DataTypes : 238

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 73

o-CSI.....identifier of [1] O-CSI  
DEFINED in MAP-CH-DataTypes : 284

o-IM-BcsmCamelTDP-CriteriaList.....identifier of [19] O-BcsmCamelTDPCriteriaList  
DEFINED in MAP-MS-DataTypes : 2214

o-IM-CSI.....identifier of Named Number, 11  
DEFINED in MAP-MS-DataTypes : 1365

o-IM-CSI.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 2165

o-IM-CSI.....identifier of [18] O-CSI  
DEFINED in MAP-MS-DataTypes : 2213

padAccessCA-1200bps.....value reference BearerServiceCode, '00100010'B  
DEFINED in MAP-BS-Code : 68

padAccessCA-1200-75bps.....value reference BearerServiceCode, '00100011'B  
DEFINED in MAP-BS-Code : 69

padAccessCA-2400bps.....value reference BearerServiceCode, '00100100'B  
DEFINED in MAP-BS-Code : 70

padAccessCA-300bps.....value reference BearerServiceCode, '00100001'B  
DEFINED in MAP-BS-Code : 67

padAccessCA-4800bps.....value reference BearerServiceCode, '00100101'B  
DEFINED in MAP-BS-Code : 71

padAccessCA-9600bps.....value reference BearerServiceCode, '00100110'B  
DEFINED in MAP-BS-Code : 72

password.....identifier of Password  
DEFINED in MAP-MS-DataTypes : 2179

password.....identifier of [3] Password  
DEFINED in MAP-MS-DataTypes : 2253

password.....identifier of [2] Password  
DEFINED in MAP-MS-DataTypes : 2332

Password.....type reference NumericString  
DEFINED in MAP-SS-DataTypes : 243  
USED in MAP-SupplementaryServi : 67 230 248  
USED in MAP-MS-DataTypes : 149 2179 2253 2332  
USED in MAP-SS-DataTypes : 24

pcs-Extensions.....identifier of [1] PCS-Extensions  
DEFINED in MAP-ExtensionDataTypes : 32

PCS-Extensions.....type reference SEQUENCE  
DEFINED in MAP-ExtensionDataTypes : 52  
USED in MAP-ExtensionDataTypes : 32

pdpContextActivation.....identifier of Named Number, 8  
DEFINED in MAP-MS-DataTypes : 401

pdpContextDeactivation.....identifier of Named Number, 9  
DEFINED in MAP-MS-DataTypes : 402

pdp-Address.....identifier of [17] PDP-Address  
DEFINED in MAP-MS-DataTypes : 839

PDP-Address.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 922  
USED in MAP-MS-DataTypes : 839 2062

pdp-Address.....identifier of [3] PDP-Address  
DEFINED in MAP-MS-DataTypes : 2062

pdp-ChargingCharacteristics.....identifier of [1] ChargingCharacteristics  
DEFINED in MAP-MS-DataTypes : 846

PDP-Context.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 836  
USED in MAP-MS-DataTypes : 832

pdp-ContextActive.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 2060

pdp-ContextChangeOfPosition.....identifier of Named Number, 14

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 74

DEFINED in MAP-MS-DataTypes : 909

pdp-ContextEstablishment.....identifier of Named Number, 11  
DEFINED in MAP-MS-DataTypes : 907

pdp-ContextEstablishmentAcknowledgement.identifier of Named Number, 12  
DEFINED in MAP-MS-DataTypes : 908

pdp-ContextId.....identifier of ContextId  
DEFINED in MAP-MS-DataTypes : 837

pdp-ContextIdentifier.....identifier of [0] ContextId  
DEFINED in MAP-MS-DataTypes : 2059

PDP-ContextInfo.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 2058  
USED in MAP-MS-DataTypes : 2056

PDP-ContextInfoList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 2055  
USED in MAP-MS-DataTypes : 2051 2052

pdp-Type.....identifier of [16] PDP-Type  
DEFINED in MAP-MS-DataTypes : 838

PDP-Type.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 919  
USED in MAP-MS-DataTypes : 838 2061

pdp-Type.....identifier of [2] PDP-Type  
DEFINED in MAP-MS-DataTypes : 2061

permanent.....identifier of Named Number, 0  
DEFINED in MAP-SS-DataTypes : 175

PermittedEncryptionAlgorithms.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 487  
USED in MAP-MS-DataTypes : 472

PermittedIntegrityProtectionAlgorithms..type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 476  
USED in MAP-MS-DataTypes : 471

personTracking.....value reference LCSServiceTypeID, 2  
DEFINED in MAP-CommonDataTypes : 397

phase1.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1626

phase2.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1627

phase3.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1628

phase4.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1629

playTone.....identifier of Named Number, 6  
DEFINED in MAP-MS-DataTypes : 1653

plmn.....identifier of Named Number, 0  
DEFINED in MAP-CommonDataTypes : 351

plmnClientList.....identifier of [2] PLMNClientList  
DEFINED in MAP-MS-DataTypes : 1227

PLMNClientList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1246  
USED in MAP-MS-DataTypes : 1227

plmnoperator.....value reference SS-Code, '10110100'B  
DEFINED in MAP-SS-Code : 168

plmnOperatorServices.....identifier of Named Number, 2

DEFINED in MAP-LCS-DataTypes : 149

plmnRoamingNotAllowed.....identifier of Named Number, 0  
DEFINED in MAP-ER-DataTypes : 103

plmn-SpecificBarringType1.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1053

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 75

plmn-SpecificBarringType2.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1054

plmn-SpecificBarringType3.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1055

plmn-SpecificBarringType4.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1056

plmn-specificBS-1.....value reference BearerServiceCode, '11010001'B  
DEFINED in MAP-BS-Code : 110

plmn-specificBS-2.....value reference BearerServiceCode, '11010010'B  
DEFINED in MAP-BS-Code : 111

plmn-specificBS-3.....value reference BearerServiceCode, '11010011'B  
DEFINED in MAP-BS-Code : 112

plmn-specificBS-4.....value reference BearerServiceCode, '11010100'B  
DEFINED in MAP-BS-Code : 113

plmn-specificBS-5.....value reference BearerServiceCode, '11010101'B  
DEFINED in MAP-BS-Code : 114

plmn-specificBS-6.....value reference BearerServiceCode, '11010110'B  
DEFINED in MAP-BS-Code : 115

plmn-specificBS-7.....value reference BearerServiceCode, '11010111'B  
DEFINED in MAP-BS-Code : 116

plmn-specificBS-8.....value reference BearerServiceCode, '11011000'B  
DEFINED in MAP-BS-Code : 117

plmn-specificBS-9.....value reference BearerServiceCode, '11011001'B  
DEFINED in MAP-BS-Code : 118

plmn-specificBS-A.....value reference BearerServiceCode, '11011010'B  
DEFINED in MAP-BS-Code : 119

plmn-specificBS-B.....value reference BearerServiceCode, '11011011'B  
DEFINED in MAP-BS-Code : 120

plmn-specificBS-C.....value reference BearerServiceCode, '11011100'B  
DEFINED in MAP-BS-Code : 121

plmn-specificBS-D.....value reference BearerServiceCode, '11011101'B  
DEFINED in MAP-BS-Code : 122

plmn-specificBS-E.....value reference BearerServiceCode, '11011110'B  
DEFINED in MAP-BS-Code : 123

plmn-specificBS-F.....value reference BearerServiceCode, '11011111'B  
DEFINED in MAP-BS-Code : 124

plmn-specificSS-1.....value reference SS-Code, '11110001'B  
DEFINED in MAP-SS-Code : 137

plmn-specificSS-2.....value reference SS-Code, '11110010'B  
DEFINED in MAP-SS-Code : 138

plmn-specificSS-3.....value reference SS-Code, '11110011'B  
DEFINED in MAP-SS-Code : 139

plmn-specificSS-4.....value reference SS-Code, '11110100'B  
DEFINED in MAP-SS-Code : 140

plmn-specificSS-5.....value reference SS-Code, '11110101'B  
DEFINED in MAP-SS-Code : 141

plmn-specificSS-6.....value reference SS-Code, '11110110'B  
DEFINED in MAP-SS-Code : 142

plmn-specificSS-7.....value reference SS-Code, '11110111'B  
DEFINED in MAP-SS-Code : 143

plmn-specificSS-8.....value reference SS-Code, '11111000'B  
DEFINED in MAP-SS-Code : 144

plmn-specificSS-9.....value reference SS-Code, '11111001'B  
DEFINED in MAP-SS-Code : 145

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 76

plmn-specificSS-A.....value reference SS-Code, '11111010'B  
 DEFINED in MAP-SS-Code : 146

plmn-specificSS-B.....value reference SS-Code, '11111011'B  
 DEFINED in MAP-SS-Code : 147

plmn-specificSS-C.....value reference SS-Code, '11111100'B  
 DEFINED in MAP-SS-Code : 148

plmn-specificSS-D.....value reference SS-Code, '11111101'B  
 DEFINED in MAP-SS-Code : 149

plmn-specificSS-E.....value reference SS-Code, '11111110'B  
 DEFINED in MAP-SS-Code : 150

plmn-specificSS-F.....value reference SS-Code, '11111111'B  
 DEFINED in MAP-SS-Code : 151

plmn-specificTS-1.....value reference TeleserviceCode, '11010001'B  
 DEFINED in MAP-TS-Code : 72

plmn-specificTS-2.....value reference TeleserviceCode, '11010010'B  
 DEFINED in MAP-TS-Code : 73

plmn-specificTS-3.....value reference TeleserviceCode, '11010011'B  
 DEFINED in MAP-TS-Code : 74

plmn-specificTS-4.....value reference TeleserviceCode, '11010100'B  
 DEFINED in MAP-TS-Code : 75

plmn-specificTS-5.....value reference TeleserviceCode, '11010101'B  
 DEFINED in MAP-TS-Code : 76

plmn-specificTS-6.....value reference TeleserviceCode, '11010110'B  
 DEFINED in MAP-TS-Code : 77

plmn-specificTS-7.....value reference TeleserviceCode, '11010111'B  
 DEFINED in MAP-TS-Code : 78

plmn-specificTS-8.....value reference TeleserviceCode, '11011000'B  
 DEFINED in MAP-TS-Code : 79

plmn-specificTS-9.....value reference TeleserviceCode, '11011001'B  
 DEFINED in MAP-TS-Code : 80

plmn-specificTS-A.....value reference TeleserviceCode, '11011010'B  
 DEFINED in MAP-TS-Code : 81

plmn-specificTS-B.....value reference TeleserviceCode, '11011011'B  
 DEFINED in MAP-TS-Code : 82

plmn-specificTS-C.....value reference TeleserviceCode, '11011100'B  
 DEFINED in MAP-TS-Code : 83

plmn-specificTS-D.....value reference TeleserviceCode, '11011101'B  
 DEFINED in MAP-TS-Code : 84

plmn-specificTS-E.....value reference TeleserviceCode, '11011110'B  
 DEFINED in MAP-TS-Code : 85

plmn-specificTS-F.....value reference TeleserviceCode, '11011111'B  
 DEFINED in MAP-TS-Code : 86

polygon.....identifier of Named Number, 3  
 DEFINED in MAP-LCS-DataTypes : 220

positionMethodFailure.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 493  
 USED in MAP-LocationServiceOpe : 32 84  
 USED in MAP-Errors : 88

positionMethodFailure-Diagnostic.....identifier of [0] PositionMethodFailure-Diagnostic  
 DEFINED in MAP-ER-DataTypes : 366

PositionMethodFailure-Diagnostic.....type reference ENUMERATED

DEFINED in MAP-ER-DataTypes : 370  
USED in MAP-ER-DataTypes : 366

PositionMethodFailure-Param.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 365  
USED in MAP-Errors : 146 495  
USED in MAP-ER-DataTypes : 51

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 77

positionMethodNotAvailableInLocationAreaIdentifier of Named Number, 8  
DEFINED in MAP-ER-DataTypes : 379

positionMethodNotAvailableInNetwork....identifier of Named Number, 7  
DEFINED in MAP-ER-DataTypes : 378

preferentialCUG-Indicator.....identifier of CUG-Index  
DEFINED in MAP-MS-DataTypes : 1186

premiumRateEntertainmentOGCallsBarred..identifier of Named Number, 4  
DEFINED in MAP-MS-DataTypes : 1024

premiumRateInformationOGCallsBarred....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1023

prepareGroupCall.....information object reference OPERATION, Information Object  
DEFINED in MAP-Group-Call-Operati : 46  
USED in MAP-Protocol : 103 145  
USED in MAP-Group-Call-Operati : 13

PrepareGroupCallArg.....type reference SEQUENCE  
DEFINED in MAP-GR-DataTypes : 49  
USED in MAP-Group-Call-Operati : 32 48  
USED in MAP-GR-DataTypes : 14

PrepareGroupCallRes.....type reference SEQUENCE  
DEFINED in MAP-GR-DataTypes : 61  
USED in MAP-Group-Call-Operati : 33 50  
USED in MAP-GR-DataTypes : 15

prepareHandover.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 321  
USED in MAP-Protocol : 21 132  
USED in MAP-MobileServiceOpera : 38

PrepareHO-Arg.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 506  
USED in MAP-MobileServiceOpera : 124 323  
USED in MAP-MS-DataTypes : 34

PrepareHO-Res.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 564  
USED in MAP-MobileServiceOpera : 125 325  
USED in MAP-MS-DataTypes : 35

prepareSubsequentHandover.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 351  
USED in MAP-Protocol : 25 133  
USED in MAP-MobileServiceOpera : 42

PrepareSubsequentHO-Arg.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 611  
USED in MAP-MobileServiceOpera : 131 353  
USED in MAP-MS-DataTypes : 36

PrepareSubsequentHO-Res.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 622  
USED in MAP-MobileServiceOpera : 130 355  
USED in MAP-MS-DataTypes : 37

pre-pagingSupported.....identifier of [19] NULL  
DEFINED in MAP-CH-DataTypes : 114

pre-pagingSupported.....identifier of [17] NULL  
DEFINED in MAP-CH-DataTypes : 221

Priority.....type reference INTEGER  
DEFINED in Remote-Operations-Info : 118

priority.....identifier of [2] EMLPP-Priority  
DEFINED in MAP-GR-DataTypes : 56

priorityLevel0.....value reference EMLPP-Priority, 0  
DEFINED in MAP-CommonDataTypes : 467

priorityLevel1.....value reference EMLPP-Priority, 1  
DEFINED in MAP-CommonDataTypes : 468

priorityLevel2.....value reference EMLPP-Priority, 2  
DEFINED in MAP-CommonDataTypes : 469

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 78

priorityLevel3.....value reference EMLPP-Priority, 3  
DEFINED in MAP-CommonDataTypes : 470

priorityLevel4.....value reference EMLPP-Priority, 4  
DEFINED in MAP-CommonDataTypes : 471

priorityLevelA.....value reference EMLPP-Priority, 6  
DEFINED in MAP-CommonDataTypes : 465

priorityLevelB.....value reference EMLPP-Priority, 5  
DEFINED in MAP-CommonDataTypes : 466

privacyOverride.....identifier of [1] NULL  
DEFINED in MAP-LCS-DataTypes : 95

privacyOverrideNotApplicable.....identifier of Named Number, 3  
DEFINED in MAP-ER-DataTypes : 356

privacyViolation.....identifier of Named Number, 5  
DEFINED in MAP-LCS-DataTypes : 394

PrivateExtension.....type reference SEQUENCE  
DEFINED in MAP-ExtensionDataTypes : 38  
USED in MAP-ExtensionDataTypes : 15 36

privateExtensionList.....identifier of [0] PrivateExtensionList  
DEFINED in MAP-ExtensionDataTypes : 31

PrivateExtensionList.....type reference SEQUENCE OF  
DEFINED in MAP-ExtensionDataTypes : 35  
USED in MAP-ExtensionDataTypes : 31

processAccessSignalling.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 341  
USED in MAP-Protocol : 23 133  
USED in MAP-MobileServiceOpera : 40

ProcessAccessSignalling-Arg.....type reference [3] SEQUENCE  
DEFINED in MAP-MS-DataTypes : 627  
USED in MAP-MobileServiceOpera : 127 343  
USED in MAP-MS-DataTypes : 38

processGroupCallSignalling.....information object reference OPERATION, Information Object  
DEFINED in MAP-Group-Call-Operati : 64  
USED in MAP-Protocol : 104 146  
USED in MAP-Group-Call-Operati : 16

ProcessGroupCallSignallingArg.....type reference SEQUENCE  
DEFINED in MAP-GR-DataTypes : 86  
USED in MAP-Group-Call-Operati : 37 66  
USED in MAP-GR-DataTypes : 19

processUnstructuredSS-Request.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 181  
USED in MAP-Protocol : 78 142  
USED in MAP-SupplementaryServi : 18

protectedPayload.....identifier of ProtectedPayload  
DEFINED in MAP-ST-DataTypes : 27

protectedPayload.....identifier of ProtectedPayload  
DEFINED in MAP-ST-DataTypes : 35

ProtectedPayload.....type reference OCTET STRING  
DEFINED in MAP-ST-DataTypes : 47  
USED in MAP-ST-DataTypes : 14 27 35  
USED in MAP-ER-DataTypes : 80 398

protectedPayload.....identifier of ProtectedPayload  
DEFINED in MAP-ER-DataTypes : 398

protocolId.....identifier of ProtocolId  
DEFINED in MAP-CommonDataTypes : 199

ProtocolId.....type reference ENUMERATED

DEFINED in MAP-CommonDataTypes : 217  
USED in MAP-CommonDataTypes : 199

provideRoamingNumber.....information object reference OPERATION, Information Object  
DEFINED in MAP-CallHandlingOperat : 105  
USED in MAP-Protocol : 59 139  
USED in MAP-CallHandlingOperat : 14

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 79

ProvideRoamingNumberArg.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 203  
 USED in MAP-CallHandlingOperat : 57 108  
 USED in MAP-CH-DataTypes : 16

ProvideRoamingNumberRes.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 227  
 USED in MAP-CallHandlingOperat : 58 110  
 USED in MAP-CH-DataTypes : 17

provideSIWFNumber.....information object reference OPERATION, Information Object

DEFINED in MAP-CallHandlingOperat : 134  
 USED in MAP-Protocol : 61 139  
 USED in MAP-CallHandlingOperat : 16

ProvideSIWFNumberArg.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 291  
 USED in MAP-CallHandlingOperat : 61 136  
 USED in MAP-CH-DataTypes : 23

ProvideSIWFNumberRes.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 309  
 USED in MAP-CallHandlingOperat : 62 138  
 USED in MAP-CH-DataTypes : 24

provideSubscriberInfo.....information object reference OPERATION, Information Object

DEFINED in MAP-MobileServiceOpera : 239  
 USED in MAP-Protocol : 34 135  
 USED in MAP-MobileServiceOpera : 24

ProvideSubscriberInfoArg.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1911  
 USED in MAP-MobileServiceOpera : 144 241  
 USED in MAP-MS-DataTypes : 101

ProvideSubscriberInfoRes.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1918  
 USED in MAP-MobileServiceOpera : 145 243  
 USED in MAP-MS-DataTypes : 102

provideSubscriberLocation.....information object reference OPERATION, Information Object

DEFINED in MAP-LocationServiceOpe : 68  
 USED in MAP-Protocol : 112 147  
 USED in MAP-LocationServiceOpe : 13

ProvideSubscriberLocation-Arg.....type reference SEQUENCE

DEFINED in MAP-LCS-DataTypes : 91  
 USED in MAP-LocationServiceOpe : 44 70  
 USED in MAP-LCS-DataTypes : 13

ProvideSubscriberLocation-Res.....type reference SEQUENCE

DEFINED in MAP-LCS-DataTypes : 238  
 USED in MAP-LocationServiceOpe : 45 72  
 USED in MAP-LCS-DataTypes : 14

provisionedSS.....identifier of [7] Ext-SS-InfoList

DEFINED in MAP-MS-DataTypes : 984

psi-enhancements.....identifier of Named Number, 6

DEFINED in MAP-MS-DataTypes : 1640

ps-AttachedNotReachableForPaging.....identifier of [2] NULL

DEFINED in MAP-MS-DataTypes : 2049

ps-AttachedReachableForPaging.....identifier of [3] NULL

DEFINED in MAP-MS-DataTypes : 2050

ps-Detached.....identifier of [1] NULL

DEFINED in MAP-MS-DataTypes : 2048

ps-Domain.....identifier of Named Number, 1

DEFINED in MAP-MS-DataTypes : 1970

ps-LCS-NotSupportedByUE.....identifier of [2] NULL

DEFINED in MAP-MS-DataTypes : 425

ps-PDP-ActiveNotReachableForPaging.....identifier of [4] PDP-ContextInfoList  
DEFINED in MAP-MS-DataTypes : 2051

ps-PDP-ActiveReachableForPaging.....identifier of [5] PDP-ContextInfoList  
DEFINED in MAP-MS-DataTypes : 2052

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 80

ps-SubscriberState.....identifier of [4] PS-SubscriberState  
 DEFINED in MAP-MS-DataTypes : 1929

PS-SubscriberState.....type reference CHOICE  
 DEFINED in MAP-MS-DataTypes : 2046  
 USED in MAP-MS-DataTypes : 1929

purgedMS.....identifier of Named Number, 3  
 DEFINED in MAP-ER-DataTypes : 260

purgeMS.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 201  
 USED in MAP-Protocol : 18 131  
 USED in MAP-MobileServiceOpera : 17

PurgeMS-Arg.....type reference [3] SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 286  
 USED in MAP-MobileServiceOpera : 118 203  
 USED in MAP-MS-DataTypes : 20

PurgeMS-Res.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 293  
 USED in MAP-MobileServiceOpera : 119 205  
 USED in MAP-MS-DataTypes : 21

pvlr.....identifier of Named Number, 3  
 DEFINED in MAP-CommonDataTypes : 354

pw-RegistrationFailure.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 423  
 USED in MAP-SupplementaryServi : 46 237  
 USED in MAP-Errors : 70

PW-RegistrationFailureCause.....type reference ENUMERATED  
 DEFINED in MAP-ER-DataTypes : 140  
 USED in MAP-Errors : 111 425  
 USED in MAP-ER-DataTypes : 18

qoSNotAttainable.....identifier of Named Number, 6  
 DEFINED in MAP-ER-DataTypes : 377

qos-Negotiated.....identifier of [13] Ext-QoS-Subscribed  
 DEFINED in MAP-MS-DataTypes : 2072

qos-Requested.....identifier of [12] Ext-QoS-Subscribed  
 DEFINED in MAP-MS-DataTypes : 2071

qos-Subscribed.....identifier of [18] QoS-Subscribed  
 DEFINED in MAP-MS-DataTypes : 840

QoS-Subscribed.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 929  
 USED in MAP-MS-DataTypes : 84 840

qos-Subscribed.....identifier of [11] Ext-QoS-Subscribed  
 DEFINED in MAP-MS-DataTypes : 2070

quintupletList.....identifier of [1] QuintupletList  
 DEFINED in MAP-MS-DataTypes : 322

QuintupletList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 327  
 USED in MAP-MS-DataTypes : 322

rab-ConfigurationIndicator.....identifier of [13] NULL  
 DEFINED in MAP-MS-DataTypes : 463

rab-ConfigurationIndicator.....identifier of [19] NULL  
 DEFINED in MAP-MS-DataTypes : 529

rab-ConfigurationIndicator.....identifier of [7] NULL  
 DEFINED in MAP-MS-DataTypes : 620

rab-Id.....identifier of [12] RAB-Id

DEFINED in MAP-MS-DataTypes : 521

rab-Id.....identifier of RAB-Id  
DEFINED in MAP-MS-DataTypes : 536

rab-Id.....identifier of RAB-Id  
DEFINED in MAP-MS-DataTypes : 558

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 81

rab-Id.....identifier of RAB-Id  
 DEFINED in MAP-MS-DataTypes : 701

RAB-Id.....type reference INTEGER  
 DEFINED in MAP-MS-DataTypes : 705  
 USED in MAP-MS-DataTypes : 521 536 558 616 632 701

RadioResource.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 556  
 USED in MAP-MS-DataTypes : 554

radioResourceInformation.....identifier of [6] RadioResourceInformation  
 DEFINED in MAP-MS-DataTypes : 454

radioResourceInformation.....identifier of [7] RadioResourceInformation  
 DEFINED in MAP-MS-DataTypes : 515

radioResourceInformation.....identifier of RadioResourceInformation  
 DEFINED in MAP-MS-DataTypes : 557

RadioResourceInformation.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 711  
 USED in MAP-MS-DataTypes : 454 515 557

radioResourceList.....identifier of [7] RadioResourceList  
 DEFINED in MAP-MS-DataTypes : 457

radioResourceList.....identifier of [11] RadioResourceList  
 DEFINED in MAP-MS-DataTypes : 518

RadioResourceList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 553  
 USED in MAP-MS-DataTypes : 457 518

RAlidentity.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 2010  
 USED in MAP-MS-DataTypes : 106 1995

ranap-ServiceHandover.....identifier of [8] RANAP-ServiceHandover  
 DEFINED in MAP-MS-DataTypes : 459

ranap-ServiceHandover.....identifier of [14] RANAP-ServiceHandover  
 DEFINED in MAP-MS-DataTypes : 523

RANAP-ServiceHandover.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 546  
 USED in MAP-MS-DataTypes : 459 523

rand.....identifier of RAND  
 DEFINED in MAP-MS-DataTypes : 331

rand.....identifier of RAND  
 DEFINED in MAP-MS-DataTypes : 337

RAND.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 359  
 USED in MAP-MS-DataTypes : 331 337 388 748

rand.....identifier of RAND  
 DEFINED in MAP-MS-DataTypes : 388

rand.....identifier of RAND  
 DEFINED in MAP-MS-DataTypes : 748

readyForSM.....information object reference OPERATION, Information Object  
 DEFINED in MAP-ShortMessageServic : 143  
 USED in MAP-Protocol : 97 145  
 USED in MAP-ShortMessageServic : 19

ReadyForSM-Arg.....type reference SEQUENCE  
 DEFINED in MAP-SM-DataTypes : 201  
 USED in MAP-ShortMessageServic : 56 145  
 USED in MAP-SM-DataTypes : 24

ReadyForSM-Res.....type reference SEQUENCE  
  DEFINED in MAP-SM-DataTypes : 210  
    USED in MAP-ShortMessageServic : 57 147  
    USED in MAP-SM-DataTypes : 25

recall.....identifier of Named Number, 1  
  DEFINED in MAP-SS-DataTypes : 286

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 82

regionalSubscNotSupported.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 1331

regionalSubscriptionData.....identifier of [10] ZoneCodeList  
DEFINED in MAP-MS-DataTypes : 987

regionalSubscriptionIdentifier.....identifier of [5] ZoneCode  
DEFINED in MAP-MS-DataTypes : 1340

regionalSubscriptionResponse.....identifier of [5] RegionalSubscriptionResponse  
DEFINED in MAP-MS-DataTypes : 1321

RegionalSubscriptionResponse.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1327  
USED in MAP-MS-DataTypes : 1321 1394

regionalSubscriptionResponse.....identifier of [0] RegionalSubscriptionResponse  
DEFINED in MAP-MS-DataTypes : 1394

registerCC-Entry.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 263  
USED in MAP-Protocol : 84 143  
USED in MAP-SupplementaryServi : 24

RegisterCC-EntryArg.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 304  
USED in MAP-SupplementaryServi : 71 265  
USED in MAP-SS-DataTypes : 37

RegisterCC-EntryRes.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 323  
USED in MAP-SupplementaryServi : 72 267  
USED in MAP-SS-DataTypes : 38

registerPassword.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 226  
USED in MAP-Protocol : 81 143  
USED in MAP-SupplementaryServi : 21

registerSS.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 88  
USED in MAP-Protocol : 73 141  
USED in MAP-SupplementaryServi : 13

RegisterSS-Arg.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 71  
USED in MAP-SupplementaryServi : 61 90  
USED in MAP-SS-DataTypes : 14

registrationAllCF-Barred.....identifier of Named Number, 24  
DEFINED in MAP-MS-DataTypes : 1041

registrationCFNotToHPLMN-Barred.....identifier of Named Number, 25  
DEFINED in MAP-MS-DataTypes : 1042

registrationInternationalCF-Barred.....identifier of Named Number, 28  
DEFINED in MAP-MS-DataTypes : 1045

registrationInterzonalCFNotToHPLMN-BarreIdentifer of Named Number, 27  
DEFINED in MAP-MS-DataTypes : 1044

registrationInterzonalCF-Barred.....identifier of Named Number, 26  
DEFINED in MAP-MS-DataTypes : 1043

rejected.....identifier of Named Number, 1  
DEFINED in MAP-CH-DataTypes : 412

releaseCall.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1612

releaseGroupCall.....identifier of [2] NULL  
DEFINED in MAP-GR-DataTypes : 89

releaseTransaction.....identifier of Named Number, 1

DEFINED in MAP-MS-DataTypes : 898  
releaseTransaction.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1720  
RelocationNumber.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 699

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 83

USED in MAP-MS-DataTypes : 695

relocationNumberList.....identifier of [1] RelocationNumberList  
 DEFINED in MAP-MS-DataTypes : 566

RelocationNumberList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 694  
 USED in MAP-MS-DataTypes : 566

remoteUserFree.....information object reference OPERATION, Information Object  
 DEFINED in MAP-CallHandlingOperat : 187  
 USED in MAP-Protocol : 65 140  
 USED in MAP-CallHandlingOperat : 20

RemoteUserFreeArg.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 395  
 USED in MAP-CallHandlingOperat : 69 189  
 USED in MAP-CH-DataTypes : 31

RemoteUserFreeRes.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 405  
 USED in MAP-CallHandlingOperat : 70 191  
 USED in MAP-CH-DataTypes : 32

Remote-Operations-Information-Objects...module reference  
 DEFINED in Remote-Operations-Info : 3  
 USED in MAP-Protocol : 13  
 USED in MAP-MobileServiceOpera : 79  
 USED in MAP-OperationAndMainte : 20  
 USED in MAP-CallHandlingOperat : 27  
 USED in MAP-SupplementaryServi : 30  
 USED in MAP-ShortMessageServic : 24  
 USED in MAP-Group-Call-Operati : 21  
 USED in MAP-LocationServiceOpe : 20  
 USED in MAP-SecureTransportOpe : 21  
 USED in MAP-Errors : 102

replaceB-Number.....identifier of [4] NULL  
 DEFINED in MAP-CH-DataTypes : 400

ReportingState.....type reference ENUMERATED  
 DEFINED in MAP-CH-DataTypes : 332  
 USED in MAP-CH-DataTypes : 328

reportSM-DeliveryStatus.....information object reference OPERATION, Information Object  
 DEFINED in MAP-ShortMessageServic : 115  
 USED in MAP-Protocol : 94 144  
 USED in MAP-ShortMessageServic : 16

ReportSM-DeliveryStatusArg.....type reference SEQUENCE  
 DEFINED in MAP-SM-DataTypes : 142  
 USED in MAP-ShortMessageServic : 52 117  
 USED in MAP-SM-DataTypes : 20

ReportSM-DeliveryStatusRes.....type reference SEQUENCE  
 DEFINED in MAP-SM-DataTypes : 170  
 USED in MAP-ShortMessageServic : 53 119  
 USED in MAP-SM-DataTypes : 21

request.....identifier of Named Number, 0  
 DEFINED in MAP-SS-DataTypes : 285

requestedBasicServiceViolatesCUG-Constraidentifier of Named Number, 5  
 DEFINED in MAP-ER-DataTypes : 131

requestedCAMEL-SubscriptionInfo.....identifier of [3] RequestedCAMEL-SubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2142

RequestedCAMEL-SubscriptionInfo.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 2151  
 USED in MAP-MS-DataTypes : 2142 2266

requestedCamel-SubscriptionInfo.....identifier of [0] RequestedCAMEL-SubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2266

requestedDomain.....identifier of [4] DomainType  
DEFINED in MAP-MS-DataTypes : 1962

requestedInfo.....identifier of [2] RequestedInfo  
DEFINED in MAP-MS-DataTypes : 1914

RequestedInfo.....type reference SEQUENCE

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 84

DEFINED in MAP-MS-DataTypes : 1956  
 USED in MAP-MS-DataTypes : 1914 2107

requestedInfo.....identifier of [1] RequestedInfo  
 DEFINED in MAP-MS-DataTypes : 2107

requestedSS-Info.....identifier of [1] SS-ForBS-Code  
 DEFINED in MAP-MS-DataTypes : 2140

requestedSubscriptionInfo.....identifier of [1] RequestedSubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 2121

RequestedSubscriptionInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 2139  
 USED in MAP-MS-DataTypes : 2121

requestingNodeType.....identifier of [3] RequestingNodeType  
 DEFINED in MAP-MS-DataTypes : 743

RequestingNodeType.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 757  
 USED in MAP-MS-DataTypes : 743

requestorIDString.....identifier of [1] RequestorIDString  
 DEFINED in MAP-LCS-DataTypes : 173

RequestorIDString.....type reference USSD-String  
 DEFINED in MAP-LCS-DataTypes : 176  
 USED in MAP-LCS-DataTypes : 173

reset.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 436  
 USED in MAP-Protocol : 31 135  
 USED in MAP-MobileServiceOpera : 56

ResetArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1864  
 USED in MAP-MobileServiceOpera : 141 438  
 USED in MAP-MS-DataTypes : 91

resourceLimitation.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 202  
 USED in MAP-CallHandlingOperat : 48 140 153 170 209 223  
 USED in MAP-LocationServiceOpe : 33 95  
 USED in MAP-Errors : 19

ResourceLimitationParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 325  
 USED in MAP-Errors : 139 204  
 USED in MAP-ER-DataTypes : 44

responseTime.....identifier of [3] ResponseTime  
 DEFINED in MAP-LCS-DataTypes : 188

ResponseTime.....type reference SEQUENCE  
 DEFINED in MAP-LCS-DataTypes : 204  
 USED in MAP-LCS-DataTypes : 21 188

responseTimeCategory.....identifier of ResponseTimeCategory  
 DEFINED in MAP-LCS-DataTypes : 205

ResponseTimeCategory.....type reference ENUMERATED  
 DEFINED in MAP-LCS-DataTypes : 209  
 USED in MAP-LCS-DataTypes : 205

restoreData.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 444  
 USED in MAP-Protocol : 33 135  
 USED in MAP-MobileServiceOpera : 58

RestoreDataArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1869  
 USED in MAP-MobileServiceOpera : 142 446  
 USED in MAP-MS-DataTypes : 92

RestoreDataRes.....type reference SEQUENCE  
  DEFINED in MAP-MS-DataTypes : 1876  
    USED in MAP-MobileServiceOpera : 143 448  
    USED in MAP-MS-DataTypes : 93

restrictedArea.....identifier of Named Number, 2  
  DEFINED in MAP-MS-DataTypes : 2100

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 85

restrictedArea.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 257

resumeCallHandling.....information object reference OPERATION, Information Object  
DEFINED in MAP-CallHandlingOperat : 121  
USED in MAP-Protocol : 60 139  
USED in MAP-CallHandlingOperat : 15

ResumeCallHandlingArg.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 232  
USED in MAP-CallHandlingOperat : 59 123  
USED in MAP-CH-DataTypes : 18

ResumeCallHandlingRes.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 261  
USED in MAP-CallHandlingOperat : 60 125  
USED in MAP-CH-DataTypes : 19

re-attempt.....identifier of BOOLEAN  
DEFINED in MAP-MS-DataTypes : 386

re-synchronisationInfo.....identifier of Re-synchronisationInfo  
DEFINED in MAP-MS-DataTypes : 740

Re-synchronisationInfo.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 747  
USED in MAP-MS-DataTypes : 740

RNCId.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 682  
USED in MAP-MS-DataTypes : 509 614

rnc-Address.....identifier of [16] GSN-Address  
DEFINED in MAP-MS-DataTypes : 2075

roadsideAssistance.....value reference LCSServiceTypeID, 6  
DEFINED in MAP-CommonDataTypes : 401

roamerAccessToHPLMN-AP-Barred.....identifier of Named Number, 16  
DEFINED in MAP-MS-DataTypes : 1033

roamerAccessToVPLMN-AP-Barred.....identifier of Named Number, 17  
DEFINED in MAP-MS-DataTypes : 1034

roamingNotAllowed.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 239  
USED in MAP-MobileServiceOpera : 90 187 234  
USED in MAP-Errors : 29

roamingNotAllowedCause.....identifier of RoamingNotAllowedCause  
DEFINED in MAP-ER-DataTypes : 98

RoamingNotAllowedCause.....type reference ENUMERATED  
DEFINED in MAP-ER-DataTypes : 102  
USED in MAP-ER-DataTypes : 98

RoamingNotAllowedParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 97  
USED in MAP-Errors : 120 241  
USED in MAP-ER-DataTypes : 14

roamingNumber.....identifier of ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 189

roamingNumber.....identifier of ISDN-AddressString  
DEFINED in MAP-CH-DataTypes : 228

roamingOutsidePLMNIC-CallsBarred.....identifier of Named Number, 21  
DEFINED in MAP-MS-DataTypes : 1038

roamingOutsidePLMNIC-CallsBarred.....identifier of Named Number, 20  
DEFINED in MAP-MS-DataTypes : 1037

roamingOutsidePLMNOG-CallsBarred.....identifier of Named Number, 18

DEFINED in MAP-MS-DataTypes : 1035

roamingOutsidePLMN-Barred.....identifier of Named Number, 22  
DEFINED in MAP-MS-DataTypes : 1039

roamingOutsidePLMN-CountryBarred.....identifier of Named Number, 23  
DEFINED in MAP-MS-DataTypes : 1040

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 86

roamingRestrictedInSgsnDueToUnsupportedFIdentifier of [23] NULL  
   DEFINED in MAP-MS-DataTypes : 782  
  
 roamingRestrictedInSgsnDueToUnsupportedIdentifier of [11] NULL  
   DEFINED in MAP-MS-DataTypes : 1347  
  
 roamingRestrictionDueToUnsupportedFeaturIdentifier of [9] NULL  
   DEFINED in MAP-MS-DataTypes : 986  
  
 roamingRestrictionDueToUnsupportedFeaturIdentifier of [4] NULL  
   DEFINED in MAP-MS-DataTypes : 1339  
  
 routeingAreaIdentity.....identifier of [1] RAIdentity  
   DEFINED in MAP-MS-DataTypes : 1995  
  
 routeSelectFailure.....identifier of Named Number, 4  
   DEFINED in MAP-MS-DataTypes : 1531  
  
 routingAreaUpdating.....identifier of Named Number, 6  
   DEFINED in MAP-MS-DataTypes : 399  
  
 RoutingInfo.....type reference CHOICE  
   DEFINED in MAP-CH-DataTypes : 188  
   USED in MAP-CH-DataTypes : 273  
  
 routingInfo.....identifier of RoutingInfo  
   DEFINED in MAP-CH-DataTypes : 273  
  
 RoutingInfoForLCS-Arg.....type reference SEQUENCE  
   DEFINED in MAP-LCS-DataTypes : 67  
   USED in MAP-LocationServiceOpe : 42 55  
   USED in MAP-LCS-DataTypes : 11  
  
 RoutingInfoForLCS-Res.....type reference SEQUENCE  
   DEFINED in MAP-LCS-DataTypes : 73  
   USED in MAP-LocationServiceOpe : 43 57  
   USED in MAP-LCS-DataTypes : 12  
  
 RoutingInfoForSM-Arg.....type reference SEQUENCE  
   DEFINED in MAP-SM-DataTypes : 53  
   USED in MAP-ShortMessageServic : 46 69  
   USED in MAP-SM-DataTypes : 14  
  
 RoutingInfoForSM-Res.....type reference SEQUENCE  
   DEFINED in MAP-SM-DataTypes : 78  
   USED in MAP-ShortMessageServic : 47 71  
   USED in MAP-SM-DataTypes : 15  
  
 routingToNearestCommercialEnterprise....value reference LCSServiceTypeID, 7  
   DEFINED in MAP-CommonDataTypes : 402  
  
 rss.....identifier of Named Number, 7  
   DEFINED in MAP-CommonDataTypes : 358  
  
 ruf-Outcome.....identifier of [0] RUF-Outcome  
   DEFINED in MAP-CH-DataTypes : 406  
  
 RUF-Outcome.....type reference ENUMERATED  
   DEFINED in MAP-CH-DataTypes : 410  
   USED in MAP-CH-DataTypes : 406  
  
 sai-Present.....identifier of [9] NULL  
   DEFINED in MAP-MS-DataTypes : 1987  
  
 sai-Present.....identifier of [6] NULL  
   DEFINED in MAP-MS-DataTypes : 2001  
  
 sc-AddressNotIncluded.....identifier of Named Number, 0  
   DEFINED in MAP-SM-DataTypes : 194  
  
 sc-Congestion.....identifier of Named Number, 4  
   DEFINED in MAP-ER-DataTypes : 151  
  
 SecureTransportArg.....type reference SEQUENCE

DEFINED in MAP-ST-DataTypes : 25  
USED in MAP-SecureTransportOpe : 33 44 56 66 74  
USED in MAP-ST-DataTypes : 11

secureTransportClass1.....information object reference OPERATION, Information Object  
DEFINED in MAP-SecureTransportOpe : 41  
USED in MAP-Protocol : 120 148

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 87

USED in MAP-SecureTransportOpe : 13

secureTransportClass2.....information object reference OPERATION, Information Object  
DEFINED in MAP-SecureTransportOpe : 53  
USED in MAP-Protocol : 121 148  
USED in MAP-SecureTransportOpe : 14

secureTransportClass3.....information object reference OPERATION, Information Object  
DEFINED in MAP-SecureTransportOpe : 63  
USED in MAP-Protocol : 122 148  
USED in MAP-SecureTransportOpe : 15

secureTransportClass4.....information object reference OPERATION, Information Object  
DEFINED in MAP-SecureTransportOpe : 71  
USED in MAP-Protocol : 123 148  
USED in MAP-SecureTransportOpe : 16

secureTransportError.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 513  
USED in MAP-SecureTransportOpe : 26 48 58  
USED in MAP-Errors : 95

SecureTransportErrorParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 396  
USED in MAP-Errors : 156 515  
USED in MAP-ER-DataTypes : 54

SecureTransportRes.....type reference SEQUENCE  
DEFINED in MAP-ST-DataTypes : 33  
USED in MAP-SecureTransportOpe : 34 46 68  
USED in MAP-ST-DataTypes : 12

securityHeader.....identifier of SecurityHeader  
DEFINED in MAP-ST-DataTypes : 26

securityHeader.....identifier of SecurityHeader  
DEFINED in MAP-ST-DataTypes : 34

SecurityHeader.....type reference SEQUENCE  
DEFINED in MAP-ST-DataTypes : 41  
USED in MAP-ST-DataTypes : 13 26 34  
USED in MAP-ER-DataTypes : 79 397

securityHeader.....identifier of SecurityHeader  
DEFINED in MAP-ER-DataTypes : 397

securityParametersIndex.....identifier of SecurityParametersIndex  
DEFINED in MAP-ST-DataTypes : 42

SecurityParametersIndex.....type reference OCTET STRING  
DEFINED in MAP-ST-DataTypes : 69  
USED in MAP-ST-DataTypes : 42

segmentationProhibited.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 305

segmentationProhibited.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 738

selectedCodec.....identifier of [7] Codec  
DEFINED in MAP-MS-DataTypes : 574

selectedCodec.....identifier of [5] Codec  
DEFINED in MAP-MS-DataTypes : 635

selectedGSM-Algorithm.....identifier of [2] SelectedGSM-Algorithm  
DEFINED in MAP-MS-DataTypes : 630

SelectedGSM-Algorithm.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 668  
USED in MAP-MS-DataTypes : 630

selectedLSAIdentity.....identifier of [4] LSAIdentity  
DEFINED in MAP-MS-DataTypes : 1998

selectedLSA-Id.....identifier of [5] LSALidentity  
DEFINED in MAP-MS-DataTypes : 1983

selectedRab-Id.....identifier of [4] RAB-Id  
DEFINED in MAP-MS-DataTypes : 616

selectedRab-Id.....identifier of [4] RAB-Id

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 88

DEFINED in MAP-MS-DataTypes : 632

selectedUMTS-Algorithms.....identifier of [5] SelectedUMTS-Algorithms  
 DEFINED in MAP-MS-DataTypes : 570

SelectedUMTS-Algorithms.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 576  
 USED in MAP-MS-DataTypes : 570 629

selectedUMTS-Algorithms.....identifier of [1] SelectedUMTS-Algorithms  
 DEFINED in MAP-MS-DataTypes : 629

sendAuthenticationInfo.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 365  
 USED in MAP-Protocol : 26 134  
 USED in MAP-MobileServiceOpera : 45

SendAuthenticationInfoArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 735  
 USED in MAP-MobileServiceOpera : 132 367  
 USED in MAP-MS-DataTypes : 44

SendAuthenticationInfoRes.....type reference [3] SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 752  
 USED in MAP-MobileServiceOpera : 133 374  
 USED in MAP-MS-DataTypes : 45

sendEndSignal.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 334  
 USED in MAP-Protocol : 22 132  
 USED in MAP-MobileServiceOpera : 39

SendEndSignal-Arg.....type reference [3] SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 673  
 USED in MAP-MobileServiceOpera : 128 336  
 USED in MAP-MS-DataTypes : 39

SendEndSignal-Res.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 678  
 USED in MAP-MobileServiceOpera : 129 338  
 USED in MAP-MS-DataTypes : 40

sendGroupCallEndSignal.....information object reference OPERATION, Information Object  
 DEFINED in MAP-Group-Call-Operati : 57  
 USED in MAP-Protocol : 106 146  
 USED in MAP-Group-Call-Operati : 14

SendGroupCallEndSignalArg.....type reference SEQUENCE  
 DEFINED in MAP-GR-DataTypes : 66  
 USED in MAP-Group-Call-Operati : 34 59  
 USED in MAP-GR-DataTypes : 16

SendGroupCallEndSignalRes.....type reference SEQUENCE  
 DEFINED in MAP-GR-DataTypes : 71  
 USED in MAP-Group-Call-Operati : 35 61  
 USED in MAP-GR-DataTypes : 17

sendIdentification.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 213  
 USED in MAP-Protocol : 19 132  
 USED in MAP-MobileServiceOpera : 18

SendIdentificationArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 299  
 USED in MAP-MobileServiceOpera : 120 215  
 USED in MAP-MS-DataTypes : 22

SendIdentificationRes.....type reference [3] SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 309  
 USED in MAP-MobileServiceOpera : 121 217  
 USED in MAP-MS-DataTypes : 23

sendIMSI.....information object reference OPERATION, Information Object  
 DEFINED in MAP-OperationAndMainte : 80  
 USED in MAP-Protocol : 52 138

USED in MAP-OperationAndMainte : 15

sendRoutingInfo.....information object reference OPERATION, Information Object

DEFINED in MAP-CallHandlingOperat : 81

USED in MAP-Protocol : 58 139

USED in MAP-CallHandlingOperat : 13

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 89

SendRoutingInfoArg.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 93  
 USED in MAP-CallHandlingOperat : 55 84  
 USED in MAP-CH-DataTypes : 14

sendRoutingInfoForGprs.....information object reference OPERATION, Information Object  
 DEFINED in MAP-MobileServiceOpera : 458  
 USED in MAP-Protocol : 38 137  
 USED in MAP-MobileServiceOpera : 61

SendRoutingInfoForGprsArg.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1821  
 USED in MAP-MobileServiceOpera : 154 460  
 USED in MAP-MS-DataTypes : 125

SendRoutingInfoForGprsRes.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1828  
 USED in MAP-MobileServiceOpera : 155 462  
 USED in MAP-MS-DataTypes : 126

sendRoutingInfoForLCS.....information object reference OPERATION, Information Object  
 DEFINED in MAP-LocationServiceOpe : 53  
 USED in MAP-Protocol : 113 147  
 USED in MAP-LocationServiceOpe : 14

sendRoutingInfoForSM.....information object reference OPERATION, Information Object  
 DEFINED in MAP-ShortMessageServic : 67  
 USED in MAP-Protocol : 91 144  
 USED in MAP-ShortMessageServic : 13

SendRoutingInfoRes.....type reference [3] SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 148  
 USED in MAP-CallHandlingOperat : 56 86  
 USED in MAP-CH-DataTypes : 15

sendSubscriberData.....identifier of [0] NULL  
 DEFINED in MAP-MS-DataTypes : 237

serviceCentreAddress.....identifier of [2] AddressString  
 DEFINED in MAP-SM-DataTypes : 56

serviceCentreAddress.....identifier of AddressString  
 DEFINED in MAP-SM-DataTypes : 144

serviceCentreAddress.....identifier of AddressString  
 DEFINED in MAP-SM-DataTypes : 178

serviceCentreAddressDA.....identifier of [4] AddressString  
 DEFINED in MAP-SM-DataTypes : 134

serviceCentreAddressOA.....identifier of [4] AddressString  
 DEFINED in MAP-SM-DataTypes : 139

serviceGranted.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 997

serviceIndicator.....identifier of [2] ServiceIndicator  
 DEFINED in MAP-SS-DataTypes : 312

ServiceIndicator.....type reference BIT STRING  
 DEFINED in MAP-SS-DataTypes : 317  
 USED in MAP-SS-DataTypes : 312

serviceKey.....identifier of [1] ServiceKey  
 DEFINED in MAP-MS-DataTypes : 889

serviceKey.....identifier of ServiceKey  
 DEFINED in MAP-MS-DataTypes : 1462

serviceKey.....identifier of ServiceKey  
 DEFINED in MAP-MS-DataTypes : 1519

ServiceKey.....type reference INTEGER  
 DEFINED in MAP-MS-DataTypes : 1526  
 USED in MAP-MS-DataTypes : 70 889 1462 1519 1689 1728 1739 1803 2301

serviceKey.....identifier of [1] ServiceKey  
DEFINED in MAP-MS-DataTypes : 1689

serviceKey.....identifier of ServiceKey  
DEFINED in MAP-MS-DataTypes : 1728

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 90

serviceKey.....identifier of ServiceKey  
DEFINED in MAP-MS-DataTypes : 1739

serviceKey.....identifier of ServiceKey  
DEFINED in MAP-MS-DataTypes : 1803

serviceKey.....identifier of ServiceKey  
DEFINED in MAP-MS-DataTypes : 2301

serviceRequest.....identifier of Named Number, 7  
DEFINED in MAP-MS-DataTypes : 400

ServiceType.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1288  
USED in MAP-MS-DataTypes : 1284

serviceType.....value reference SS-Code, '10110101'B  
DEFINED in MAP-SS-Code : 170

serviceTypeIdentity.....identifier of LCSServiceTypeID  
DEFINED in MAP-MS-DataTypes : 1289

serviceTypeList.....identifier of [5] ServiceTypeList  
DEFINED in MAP-MS-DataTypes : 1234

ServiceTypeList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1283  
USED in MAP-MS-DataTypes : 1234

setReportingState.....information object reference OPERATION, Information Object  
DEFINED in MAP-CallHandlingOperat : 159  
USED in MAP-Protocol : 63 140  
USED in MAP-CallHandlingOperat : 18

SetReportingStateArg.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 325  
USED in MAP-CallHandlingOperat : 65 161  
USED in MAP-CH-DataTypes : 27

SetReportingStateRes.....type reference SEQUENCE  
DEFINED in MAP-CH-DataTypes : 340  
USED in MAP-CallHandlingOperat : 66 163  
USED in MAP-CH-DataTypes : 28

sgsn.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 759

sgsn-Address.....identifier of GSN-Address  
DEFINED in MAP-MS-DataTypes : 420

sgsn-Address.....identifier of [0] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1829

sgsn-Address.....identifier of [1] GSN-Address  
DEFINED in MAP-MS-DataTypes : 1853

sgsn-CAMEL-SubscriptionInfo.....identifier of [17] SGSN-CAMEL-SubscriptionInfo  
DEFINED in MAP-MS-DataTypes : 792

SGSN-CAMEL-SubscriptionInfo.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 858  
USED in MAP-MS-DataTypes : 792

sgsn-Capability.....identifier of [0] SGSN-Capability  
DEFINED in MAP-MS-DataTypes : 423

SGSN-Capability.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 427  
USED in MAP-MS-DataTypes : 423

sgsn-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 289

sgsn-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 390

sgsn-Number.....identifier of ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 419

sgsn-Number.....identifier of [3] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 1997

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 91

sgsn-Number.....identifier of [1] ISDN-AddressString  
 DEFINED in MAP-SM-DataTypes : 98

shapeOfLocationEstimateNotSupported.....identifier of Named Number, 6  
 DEFINED in MAP-LCS-DataTypes : 396

shapeOfLocationEstimateNotSupported.....identifier of [0] NULL  
 DEFINED in MAP-ER-DataTypes : 198

shortMessage.....identifier of Named Number, 4  
 DEFINED in MAP-MS-DataTypes : 397

shortMessageMO-PP.....value reference TeleserviceCode, '00100010'B  
 DEFINED in MAP-TS-Code : 46

shortMessageMT-PP.....value reference TeleserviceCode, '00100001'B  
 DEFINED in MAP-TS-Code : 45

shortTermDenial.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 434  
 USED in MAP-SupplementaryServi : 54 276  
 USED in MAP-Errors : 73

ShortTermDenialParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 337  
 USED in MAP-Errors : 142 436  
 USED in MAP-ER-DataTypes : 47

signallInfo.....identifier of SignallInfo  
 DEFINED in MAP-CommonDataTypes : 200

SignallInfo.....type reference OCTET STRING  
 DEFINED in MAP-CommonDataTypes : 207  
 USED in MAP-CommonDataTypes : 24 200 226  
 USED in MAP-SM-DataTypes : 34 108 114 121 127  
 USED in MAP-ER-DataTypes : 72 157

signallInfo.....identifier of SignallInfo  
 DEFINED in MAP-CommonDataTypes : 226

signallInfo.....identifier of LongSignallInfo  
 DEFINED in MAP-CommonDataTypes : 243

siWFSNumber.....identifier of [0] ISDN-AddressString  
 DEFINED in MAP-CH-DataTypes : 310

SIWFSSignallingModifyArg.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 314  
 USED in MAP-CallHandlingOperat : 63 148  
 USED in MAP-CH-DataTypes : 25

SIWFSSignallingModifyRes.....type reference SEQUENCE  
 DEFINED in MAP-CH-DataTypes : 320  
 USED in MAP-CallHandlingOperat : 64 150  
 USED in MAP-CH-DataTypes : 26

siwfs-SignallingModify.....information object reference OPERATION, Information Object  
 DEFINED in MAP-CallHandlingOperat : 146  
 USED in MAP-Protocol : 62 140  
 USED in MAP-CallHandlingOperat : 17

SMS-CAMEL-TDP-Data.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1687  
 USED in MAP-MS-DataTypes : 1683

sms-CAMEL-TDP-DataList.....identifier of [0] SMS-CAMEL-TDP-DataList  
 DEFINED in MAP-MS-DataTypes : 1668

SMS-CAMEL-TDP-DataList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1682  
 USED in MAP-MS-DataTypes : 1668

sms-CollectedInfo.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 1697

SMS-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1667  
USED in MAP-MS-DataTypes : 860 863 1406 1410 2204 2210

sms-DELIVER.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 1429

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 92

sms-DeliveryRequest.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1699

sms-STATUS-REPORT.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1431

sms-SUBMIT-REPORT.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1430

sms-TriggerDetectionPoint.....identifier of SMS-TriggerDetectionPoint  
DEFINED in MAP-MS-DataTypes : 1418

sms-TriggerDetectionPoint.....identifier of [0] SMS-TriggerDetectionPoint  
DEFINED in MAP-MS-DataTypes : 1688

SMS-TriggerDetectionPoint.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 1696  
USED in MAP-MS-DataTypes : 1418 1688

sm-DeliveryFailure.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 454  
USED in MAP-ShortMessageService : 39 93 111  
USED in MAP-Errors : 78

SM-DeliveryFailureCause.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 155  
USED in MAP-Errors : 112 456  
USED in MAP-ER-DataTypes : 19

sm-DeliveryOutcome.....identifier of SM-DeliveryOutcome  
DEFINED in MAP-SM-DataTypes : 145

SM-DeliveryOutcome.....type reference ENUMERATED  
DEFINED in MAP-SM-DataTypes : 165  
USED in MAP-SM-DataTypes : 26 145 156

SM-EnumeratedDeliveryFailureCause.....type reference ENUMERATED  
DEFINED in MAP-ER-DataTypes : 146  
USED in MAP-ER-DataTypes : 156

sm-EnumeratedDeliveryFailureCause.....identifier of SM-EnumeratedDeliveryFailureCause  
DEFINED in MAP-ER-DataTypes : 156

sm-RP-DA.....identifier of SM-RP-DA  
DEFINED in MAP-SM-DataTypes : 106

sm-RP-DA.....identifier of SM-RP-DA  
DEFINED in MAP-SM-DataTypes : 119

SM-RP-DA.....type reference CHOICE  
DEFINED in MAP-SM-DataTypes : 131  
USED in MAP-SM-DataTypes : 106 119

sm-RP-MTI.....identifier of [8] SM-RP-MTI  
DEFINED in MAP-SM-DataTypes : 62

SM-RP-MTI.....type reference INTEGER  
DEFINED in MAP-SM-DataTypes : 65  
USED in MAP-SM-DataTypes : 62

sm-RP-OA.....identifier of SM-RP-OA  
DEFINED in MAP-SM-DataTypes : 107

sm-RP-OA.....identifier of SM-RP-OA  
DEFINED in MAP-SM-DataTypes : 120

SM-RP-OA.....type reference CHOICE  
DEFINED in MAP-SM-DataTypes : 137  
USED in MAP-SM-DataTypes : 107 120

sm-RP-PRI.....identifier of [1] BOOLEAN  
DEFINED in MAP-SM-DataTypes : 55

sm-RP-SMEA.....identifier of [9] SM-RP-SMEA  
DEFINED in MAP-SM-DataTypes : 63

SM-RP-SMEA.....type reference OCTET STRING  
DEFINED in MAP-SM-DataTypes : 71  
USED in MAP-SM-DataTypes : 63

sm-RP-UI.....identifier of SignallInfo  
DEFINED in MAP-SM-DataTypes : 108

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 93

sm-RP-UI.....identifier of SignallInfo  
DEFINED in MAP-SM-DataTypes : 114

sm-RP-UI.....identifier of SignallInfo  
DEFINED in MAP-SM-DataTypes : 121

sm-RP-UI.....identifier of SignallInfo  
DEFINED in MAP-SM-DataTypes : 127

solsaSupportIndicator.....identifier of [2] NULL  
DEFINED in MAP-MS-DataTypes : 229

solsaSupportIndicator.....identifier of NULL  
DEFINED in MAP-MS-DataTypes : 428

specificCSIDeletedList.....identifier of [14] SpecificCSI-Withdraw  
DEFINED in MAP-MS-DataTypes : 2209

specificCSI-Withdraw.....identifier of [15] SpecificCSI-Withdraw  
DEFINED in MAP-MS-DataTypes : 1351

SpecificCSI-Withdraw.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1353  
USED in MAP-MS-DataTypes : 1351 2209

splitLeg.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1648

sres.....identifier of SRES  
DEFINED in MAP-MS-DataTypes : 332

SRES.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 361  
USED in MAP-MS-DataTypes : 332

ss-AccessBarred.....identifier of Named Number, 5  
DEFINED in MAP-MS-DataTypes : 1025

ss-CamelData.....identifier of SS-CamelData  
DEFINED in MAP-MS-DataTypes : 1469

SS-CamelData.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1478  
USED in MAP-MS-DataTypes : 1469

ss-Code.....identifier of SS-Code  
DEFINED in MAP-MS-DataTypes : 1074

ss-Code.....identifier of SS-Code  
DEFINED in MAP-MS-DataTypes : 1133

ss-Code.....identifier of SS-Code  
DEFINED in MAP-MS-DataTypes : 1202

ss-Code.....identifier of SS-Code  
DEFINED in MAP-MS-DataTypes : 1215

ss-Code.....identifier of SS-Code  
DEFINED in MAP-MS-DataTypes : 1303

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-MS-DataTypes : 2239

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-MS-DataTypes : 2250

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-MS-DataTypes : 2323

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-MS-DataTypes : 2330

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-CommonDataTypes : 474

ss-Code.....identifier of SS-Code  
DEFINED in MAP-SS-DataTypes : 72

ss-Code.....identifier of SS-Code  
DEFINED in MAP-SS-DataTypes : 90

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 94

ss-Code.....identifier of SS-Code  
DEFINED in MAP-SS-DataTypes : 148

ss-Code.....identifier of SS-Code  
DEFINED in MAP-SS-DataTypes : 161

ss-Code.....identifier of SS-Code  
DEFINED in MAP-SS-DataTypes : 184

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-SS-DataTypes : 305

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-SS-DataTypes : 328

ss-Code.....identifier of [0] SS-Code  
DEFINED in MAP-SS-DataTypes : 333

SS-Code.....type reference OCTET STRING  
DEFINED in MAP-SS-Code : 11  
USED in MAP-SupplementaryServi : 79 228  
USED in MAP-MS-DataTypes : 154 1074 1133 1202 1215 1303 1484 2239 2250  
2323 2330  
USED in MAP-CommonDataTypes : 76 474  
USED in MAP-SS-DataTypes : 64 72 90 148 161 184 256 271 305  
328 333  
USED in MAP-SS-Code : 21 25 28 30 32 34 36 40 42  
48 50 52 54 56 58 60 63 66  
68 72 75 77 79 81 84 87 90  
93 96 99 102 104 107 110 112 114  
117 119 121 123 125 128 130 132 136  
137 138 139 140 141 142 143 144 145  
146 147 148 149 150 151 153 156 159  
161 163 166 168 170 173 175 177 180  
USED in MAP-ER-DataTypes : 86 135

ss-Code.....identifier of [1] SS-Code  
DEFINED in MAP-ER-DataTypes : 135

ss-csi.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 1355

ss-CSI.....identifier of [2] SS-CSI  
DEFINED in MAP-MS-DataTypes : 1402

SS-CSI.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 1468  
USED in MAP-MS-DataTypes : 69 1402 2205

ss-CSI.....identifier of Named Number, 6  
DEFINED in MAP-MS-DataTypes : 2158

ss-CSI.....identifier of [11] SS-CSI  
DEFINED in MAP-MS-DataTypes : 2205

ss-Data.....identifier of [3] Ext-SS-Data  
DEFINED in MAP-MS-DataTypes : 1070

ss-Data.....identifier of [3] SS-Data  
DEFINED in MAP-SS-DataTypes : 87

SS-Data.....type reference SEQUENCE  
DEFINED in MAP-SS-DataTypes : 160  
USED in MAP-SS-DataTypes : 33 87

ss-ErrorStatus.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 391  
USED in MAP-MobileServiceOpera : 102 299  
USED in MAP-SupplementaryServi : 42 102 120 138 159 274 292  
USED in MAP-Errors : 64

ss-Event.....identifier of [2] SS-Code  
DEFINED in MAP-SS-DataTypes : 271

ss-EventList.....identifier of SS-EventList

DEFINED in MAP-MS-DataTypes : 1479

SS-EventList.....type reference SEQUENCE OF

DEFINED in MAP-MS-DataTypes : 1484

USED in MAP-MS-DataTypes : 1479

ss-EventSpecification.....identifier of [3] SS-EventSpecification

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 95

DEFINED in MAP-SS-DataTypes : 277

SS-EventSpecification.....type reference SEQUENCE OF  
 DEFINED in MAP-SS-DataTypes : 299  
 USED in MAP-SS-DataTypes : 277

SS-ForBS-Code.....type reference SEQUENCE  
 DEFINED in MAP-SS-DataTypes : 183  
 USED in MAP-SupplementaryServi : 63 108 126 147 167  
 USED in MAP-MS-DataTypes : 148 2140  
 USED in MAP-SS-DataTypes : 18

ss-Incompatibility.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 411  
 USED in MAP-MobileServiceOpera : 104 300  
 USED in MAP-SupplementaryServi : 45 103 140 275  
 USED in MAP-Errors : 67

SS-IncompatibilityCause.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 134  
 USED in MAP-Errors : 110 413  
 USED in MAP-ER-DataTypes : 17

SS-Info.....type reference CHOICE  
 DEFINED in MAP-SS-DataTypes : 84  
 USED in MAP-SupplementaryServi : 62 92 110 128 149  
 USED in MAP-SS-DataTypes : 15 261

ss-InfoFor-CSE.....identifier of [0] Ext-SS-InfoFor-CSE  
 DEFINED in MAP-MS-DataTypes : 2232

SS-InfoList.....type reference SEQUENCE OF  
 DEFINED in MAP-SS-DataTypes : 260  
 USED in MAP-SS-DataTypes : 27

ss-InvocationNotification.....information object reference OPERATION, Information Object  
 DEFINED in MAP-SupplementaryServi : 251  
 USED in MAP-Protocol : 83 143  
 USED in MAP-SupplementaryServi : 23

SS-InvocationNotificationArg.....type reference SEQUENCE  
 DEFINED in MAP-SS-DataTypes : 268  
 USED in MAP-SupplementaryServi : 69 253  
 USED in MAP-SS-DataTypes : 34

SS-InvocationNotificationRes.....type reference SEQUENCE  
 DEFINED in MAP-SS-DataTypes : 294  
 USED in MAP-SupplementaryServi : 70 255  
 USED in MAP-SS-DataTypes : 35

ss-List.....identifier of [3] SS-List  
 DEFINED in MAP-MS-DataTypes : 1319

ss-List.....identifier of [2] SS-List  
 DEFINED in MAP-MS-DataTypes : 1338

ss-List.....identifier of [1] SS-List  
 DEFINED in MAP-CH-DataTypes : 157

SS-List.....type reference SEQUENCE OF  
 DEFINED in MAP-SS-DataTypes : 255  
 USED in MAP-MS-DataTypes : 147 1319 1338  
 USED in MAP-CH-DataTypes : 58 157  
 USED in MAP-SS-DataTypes : 26

ss-NotAvailable.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 397  
 USED in MAP-MobileServiceOpera : 103 280  
 USED in MAP-SupplementaryServi : 43 178  
 USED in MAP-Errors : 65

SS-NotAvailableParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 302  
 USED in MAP-Errors : 152 399  
 USED in MAP-ER-DataTypes : 58

ss-Status.....identifier of [4] Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 1084

ss-Status.....identifier of [4] Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 1143

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 96

ss-Status.....identifier of [4] Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 1203

ss-Status.....identifier of Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 1216

ss-Status.....identifier of Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 1304

ss-Status.....identifier of [2] Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 2241

ss-Status.....identifier of [2] Ext-SS-Status  
DEFINED in MAP-MS-DataTypes : 2252

ss-Status.....identifier of [1] Ext-SS-Status  
DEFINED in MAP-CommonDataTypes : 475

ss-Status.....identifier of [4] SS-Status  
DEFINED in MAP-SS-DataTypes : 100

SS-Status.....type reference OCTET STRING  
DEFINED in MAP-SS-DataTypes : 108  
USED in MAP-Errors : 105 393  
USED in MAP-SS-DataTypes : 16 100 157 162 190 215 334  
USED in MAP-ER-DataTypes : 67 137

ss-Status.....identifier of [4] SS-Status  
DEFINED in MAP-SS-DataTypes : 157

ss-Status.....identifier of [4] SS-Status  
DEFINED in MAP-SS-DataTypes : 162

ss-Status.....identifier of SS-Status  
DEFINED in MAP-SS-DataTypes : 190

ss-Status.....identifier of [0] SS-Status  
DEFINED in MAP-SS-DataTypes : 215

ss-Status.....identifier of [1] SS-Status  
DEFINED in MAP-SS-DataTypes : 334

ss-Status.....identifier of [4] SS-Status  
DEFINED in MAP-ER-DataTypes : 137

ss-SubscriptionOption.....identifier of SS-SubscriptionOption  
DEFINED in MAP-MS-DataTypes : 1204

ss-SubscriptionOption.....identifier of SS-SubscriptionOption  
DEFINED in MAP-SS-DataTypes : 163

SS-SubscriptionOption.....type reference CHOICE  
DEFINED in MAP-SS-DataTypes : 170  
USED in MAP-MS-DataTypes : 146 1204  
USED in MAP-SS-DataTypes : 17 163

ss-SubscriptionViolation.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 404  
USED in MAP-MobileServiceOpera : 105 298  
USED in MAP-SupplementaryServi : 44 139 160 236  
USED in MAP-Errors : 66

SS-SubscriptionViolationParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 306  
USED in MAP-Errors : 153 406  
USED in MAP-ER-DataTypes : 59

startMonitoring.....identifier of Named Number, 1  
DEFINED in MAP-CH-DataTypes : 334

stateAttributes.....identifier of [5] StateAttributes  
DEFINED in MAP-GR-DataTypes : 84

StateAttributes.....type reference SEQUENCE  
DEFINED in MAP-GR-DataTypes : 114

USED in MAP-GR-DataTypes : 84

statusReport.....information object reference OPERATION, Information Object

DEFINED in MAP-CallHandlingOperat : 174

USED in MAP-Protocol : 64 140

USED in MAP-CallHandlingOperat : 19

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 97

StatusReportArg.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 355  
USED in MAP-CallHandlingOperat : 67 176  
USED in MAP-CH-DataTypes : 29

StatusReportRes.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 391  
USED in MAP-CallHandlingOperat : 68 178  
USED in MAP-CH-DataTypes : 30

stopMonitoring.....identifier of Named Number, 0

DEFINED in MAP-CH-DataTypes : 333

storedMSISDN.....identifier of ISDN-AddressString

DEFINED in MAP-SM-DataTypes : 171

storedMSISDN.....identifier of ISDN-AddressString

DEFINED in MAP-SM-DataTypes : 182

SubBusyForMT-SMS-Param.....type reference SEQUENCE

DEFINED in MAP-ER-DataTypes : 314  
USED in MAP-Errors : 136 450  
USED in MAP-ER-DataTypes : 40

subscriberBusyForMT-SMS.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 448  
USED in MAP-ShortMessageServic : 38 110  
USED in MAP-Errors : 77

SubscriberData.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 974  
USED in MAP-MS-DataTypes : 60 776

subscriberDataStored.....identifier of [1] AgeIndicator

DEFINED in MAP-MS-DataTypes : 238

SubscriberId.....type reference CHOICE

DEFINED in MAP-CommonDataTypes : 315  
USED in MAP-CommonDataTypes : 32

subscriberIdentity.....identifier of [0] SubscriberIdentity

DEFINED in MAP-MS-DataTypes : 2106

subscriberIdentity.....identifier of [0] SubscriberIdentity

DEFINED in MAP-MS-DataTypes : 2120

subscriberIdentity.....identifier of [0] SubscriberIdentity

DEFINED in MAP-MS-DataTypes : 2221

SubscriberIdentity.....type reference CHOICE

DEFINED in MAP-CommonDataTypes : 372  
USED in MAP-MS-DataTypes : 187 2106 2120 2221  
USED in MAP-CommonDataTypes : 41  
USED in MAP-LCS-DataTypes : 35 69 74

subscriberInfo.....identifier of SubscriberInfo

DEFINED in MAP-MS-DataTypes : 1919

SubscriberInfo.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1923  
USED in MAP-MS-DataTypes : 103 1919 2113  
USED in MAP-CH-DataTypes : 40 156

subscriberInfo.....identifier of SubscriberInfo

DEFINED in MAP-MS-DataTypes : 2113

subscriberInfo.....identifier of [7] SubscriberInfo

DEFINED in MAP-CH-DataTypes : 156

subscriberLocationReport.....information object reference OPERATION, Information Object

DEFINED in MAP-LocationServiceOpe : 87  
USED in MAP-Protocol : 114 147  
USED in MAP-LocationServiceOpe : 15

SubscriberLocationReport-Arg.....type reference SEQUENCE

DEFINED in MAP-LCS-DataTypes : 338  
USED in MAP-LocationServiceOpe : 46 89  
USED in MAP-LCS-DataTypes : 15

SubscriberLocationReport-Res.....type reference SEQUENCE  
DEFINED in MAP-LCS-DataTypes : 405  
USED in MAP-LocationServiceOpe : 47 91

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 98

USED in MAP-LCS-DataTypes : 16

subscriberNotMemberOfCUG.....identifier of Named Number, 1  
DEFINED in MAP-ER-DataTypes : 130

subscriberNotSC-Subscriber.....identifier of Named Number, 6  
DEFINED in MAP-ER-DataTypes : 153

subscriberState.....identifier of [1] SubscriberState  
DEFINED in MAP-MS-DataTypes : 1925

subscriberState.....identifier of [1] NULL  
DEFINED in MAP-MS-DataTypes : 1958

SubscriberState.....type reference CHOICE  
DEFINED in MAP-MS-DataTypes : 2040  
USED in MAP-MS-DataTypes : 107 1925

subscriberStatus.....identifier of [3] SubscriberStatus  
DEFINED in MAP-MS-DataTypes : 977

SubscriberStatus.....type reference ENUMERATED  
DEFINED in MAP-MS-DataTypes : 996  
USED in MAP-MS-DataTypes : 62 977

subscriptionWithdraw.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 278

subsequentHandoverFailure.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 278  
USED in MAP-MobileServiceOpera : 93 360  
USED in MAP-Errors : 37

success.....identifier of Named Number, 0  
DEFINED in MAP-CH-DataTypes : 382

successfulTransfer.....identifier of Named Number, 2  
DEFINED in MAP-SM-DataTypes : 168

SuperChargerInfo.....type reference CHOICE  
DEFINED in MAP-MS-DataTypes : 236  
USED in MAP-MS-DataTypes : 231 431

superChargerSupportedInHLR.....identifier of [27] AgeIndicator  
DEFINED in MAP-MS-DataTypes : 789

superChargerSupportedInServingNetworkEntIdentifier of [3] SuperChargerInfo  
DEFINED in MAP-MS-DataTypes : 231

superChargerSupportedInServingNetworkEntIdentifier of [2] SuperChargerInfo  
DEFINED in MAP-MS-DataTypes : 431

supplementaryService.....identifier of Named Number, 3  
DEFINED in MAP-MS-DataTypes : 396

supportedCamelPhases.....identifier of [0] SupportedCamelPhases  
DEFINED in MAP-MS-DataTypes : 226

supportedCamelPhases.....identifier of [4] SupportedCamelPhases  
DEFINED in MAP-MS-DataTypes : 433

supportedCamelPhases.....identifier of [6] SupportedCamelPhases  
DEFINED in MAP-MS-DataTypes : 1322

SupportedCamelPhases.....type reference BIT STRING  
DEFINED in MAP-MS-DataTypes : 1625  
USED in MAP-MS-DataTypes : 74 226 433 1322 2132 2133 2306  
USED in MAP-CH-DataTypes : 41 169 218 266

supportedCAMELPhases.....identifier of [5] SupportedCamelPhases  
DEFINED in MAP-MS-DataTypes : 2306

supportedCamelPhases.....identifier of SupportedCamelPhases  
DEFINED in MAP-CH-DataTypes : 266

supportedCamelPhasesInGMSC.....identifier of [15] SupportedCamelPhases  
DEFINED in MAP-CH-DataTypes : 218

supportedCamelPhasesInVMSC.....identifier of [15] SupportedCamelPhases  
DEFINED in MAP-CH-DataTypes : 169

supportedCCBS-Phase.....identifier of [16] SupportedCCBS-Phase

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 99

DEFINED in MAP-CH-DataTypes : 111

SupportedCCBS-Phase.....type reference INTEGER  
 DEFINED in MAP-CH-DataTypes : 137  
 USED in MAP-CH-DataTypes : 111

supportedGADShapes.....identifier of [9] SupportedGADShapes  
 DEFINED in MAP-LCS-DataTypes : 104

SupportedGADShapes.....type reference BIT STRING  
 DEFINED in MAP-LCS-DataTypes : 216  
 USED in MAP-LCS-DataTypes : 23 104

supportedLCS-CapabilitySets.....identifier of [5] SupportedLCS-CapabilitySets  
 DEFINED in MAP-MS-DataTypes : 233

SupportedLCS-CapabilitySets.....type reference BIT STRING  
 DEFINED in MAP-MS-DataTypes : 251  
 USED in MAP-MS-DataTypes : 27 233 434

supportedLCS-CapabilitySets.....identifier of [5] SupportedLCS-CapabilitySets  
 DEFINED in MAP-MS-DataTypes : 434

supportedSGSN-CAMEL-Phases.....identifier of [6] SupportedCamelPhases  
 DEFINED in MAP-MS-DataTypes : 2133

supportedSGSN-CAMEL-Phases.....identifier of [5] NULL  
 DEFINED in MAP-MS-DataTypes : 2144

supportedVLR-CAMEL-Phases.....identifier of [5] SupportedCamelPhases  
 DEFINED in MAP-MS-DataTypes : 2132

supportedVLR-CAMEL-Phases.....identifier of [4] NULL  
 DEFINED in MAP-MS-DataTypes : 2143

Supported-MAP-Operations....information object set reference OPERATION, Information Object Set  
 DEFINED in MAP-Protocol : 131

suppressIncomingCallBarring.....identifier of [23] NULL  
 DEFINED in MAP-CH-DataTypes : 118

suppressionOfAnnouncement.....identifier of [12] SuppressionOfAnnouncement  
 DEFINED in MAP-CH-DataTypes : 106

SuppressionOfAnnouncement.....type reference NULL  
 DEFINED in MAP-CH-DataTypes : 122  
 USED in MAP-CH-DataTypes : 21 106 210

suppressionOfAnnouncement.....identifier of [7] SuppressionOfAnnouncement  
 DEFINED in MAP-CH-DataTypes : 210

suppress-T-CSI.....identifier of NULL  
 DEFINED in MAP-CH-DataTypes : 267

suppress-VT-CSI.....identifier of [22] NULL  
 DEFINED in MAP-CH-DataTypes : 117

suppress-VT-CSI.....identifier of [19] NULL  
 DEFINED in MAP-CH-DataTypes : 223

suspended.....identifier of Named Number, 4  
 DEFINED in MAP-SS-DataTypes : 289

systemFailure.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 169  
 USED in MAP-MobileServiceOpera : 83 183 231 257 327 377 390 403 450  
 465 481 496  
 USED in MAP-OperationAndMainte : 24 58 73  
 USED in MAP-CallHandlingOperat : 31 88 112 143 156 166 182 197 211  
 225  
 USED in MAP-SupplementaryServi : 34 95 113 131 152 171 187 201 216  
 232 269 287  
 USED in MAP-ShortMessageServic : 28 73 90 103 133  
 USED in MAP-Group-Call-Operati : 25 52  
 USED in MAP-LocationServiceOpe : 24 59 74 93

USED in MAP-Errors : 14

SystemFailureParam.....type reference CHOICE  
DEFINED in MAP-ER-DataTypes : 175  
USED in MAP-Errors : 113 171  
USED in MAP-ER-DataTypes : 20

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 100

targetCellId.....identifier of [0] GlobalCellId  
DEFINED in MAP-MS-DataTypes : 507

targetCellId.....identifier of [0] GlobalCellId  
DEFINED in MAP-MS-DataTypes : 612

TargetCellOutsideGCA-Param.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 392  
USED in MAP-Errors : 155 283  
USED in MAP-ER-DataTypes : 61

targetCellOutsideGroupCallArea.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 281  
USED in MAP-MobileServiceOpera : 107 331  
USED in MAP-Errors : 38

targetMS.....identifier of [1] SubscriberIdentity  
DEFINED in MAP-LCS-DataTypes : 69

targetMS.....identifier of [0] SubscriberIdentity  
DEFINED in MAP-LCS-DataTypes : 74

targetMSC-Number.....identifier of [1] ISDN-AddressString  
DEFINED in MAP-MS-DataTypes : 613

targetMSsubscribedService.....identifier of Named Number, 4  
DEFINED in MAP-CommonDataTypes : 387

targetRNClId.....identifier of [1] RNClId  
DEFINED in MAP-MS-DataTypes : 509

targetRNClId.....identifier of [2] RNClId  
DEFINED in MAP-MS-DataTypes : 614

TBCD-STRING.....type reference OCTET STRING  
DEFINED in MAP-CommonDataTypes : 90  
USED in MAP-CommonDataTypes : 296 309 319

tBusy.....identifier of Named Number, 13  
DEFINED in MAP-MS-DataTypes : 1812

TEID.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 2087  
USED in MAP-MS-DataTypes : 2067 2068

teid-ForGnAndGp.....identifier of [8] TEID  
DEFINED in MAP-MS-DataTypes : 2067

teid-Forlu.....identifier of [9] TEID  
DEFINED in MAP-MS-DataTypes : 2068

telephony.....value reference TeleserviceCode, '00010001'B  
DEFINED in MAP-TS-Code : 41

teleservice.....identifier of [3] TeleserviceCode  
DEFINED in MAP-CommonDataTypes : 447

teleservice.....identifier of Ext-TeleserviceCode  
DEFINED in MAP-GR-DataTypes : 50

TeleserviceCode.....type reference OCTET STRING  
DEFINED in MAP-TS-Code : 11  
USED in MAP-CommonDataTypes : 64 447  
USED in MAP-TS-Code : 38 40 41 42 44 45 46 48 49  
50 51 55 58 67 68 69 71 72  
73 74 75 76 77 78 79 80 81  
82 83 84 85 86

teleserviceList.....identifier of [6] TeleserviceList  
DEFINED in MAP-MS-DataTypes : 981

TeleserviceList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1005  
USED in MAP-MS-DataTypes : 981 1317

teleserviceList.....identifier of [1] TeleserviceList  
DEFINED in MAP-MS-DataTypes : 1317

teleserviceNotProvisioned.....information object reference ERROR, Information Object  
DEFINED in MAP-Errors : 265  
USED in MAP-MobileServiceOpera : 99 277 295  
USED in MAP-CallHandlingOperat : 39 96

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 101

USED in MAP-SupplementaryServ : 39 99 117 135 156 175  
 USED in MAP-ShortMessageServic : 36 78  
 USED in MAP-Errors : 33

TeleservNotProvParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 238  
 USED in MAP-Errors : 124 267  
 USED in MAP-ER-DataTypes : 31

temporaryDefaultAllowed.....identifier of Named Number, 2  
 DEFINED in MAP-SS-DataTypes : 177

temporaryDefaultRestricted.....identifier of Named Number, 1  
 DEFINED in MAP-SS-DataTypes : 176

termAttemptAuthorized.....identifier of Named Number, 12  
 DEFINED in MAP-MS-DataTypes : 1810

terminateAllCallActivities.....identifier of Named Number, 1  
 DEFINED in MAP-CH-DataTypes : 449

terminateCallActivityReferred.....identifier of Named Number, 0  
 DEFINED in MAP-CH-DataTypes : 448

terminationCause.....identifier of [0] TerminationCause  
 DEFINED in MAP-LCS-DataTypes : 372

TerminationCause.....type reference ENUMERATED  
 DEFINED in MAP-LCS-DataTypes : 388  
 USED in MAP-LCS-DataTypes : 372

tif-csi.....identifier of Named Number, 2  
 DEFINED in MAP-MS-DataTypes : 1356

tif-CSI.....identifier of [3] NULL  
 DEFINED in MAP-MS-DataTypes : 1404

tif-CSI.....identifier of Named Number, 3  
 DEFINED in MAP-MS-DataTypes : 2155

tif-CSI.....identifier of [7] NULL  
 DEFINED in MAP-MS-DataTypes : 2201

tif-CSI-NotificationToCSE.....identifier of [8] NULL  
 DEFINED in MAP-MS-DataTypes : 2202

tmsi.....identifier of TMSI  
 DEFINED in MAP-MS-DataTypes : 300

TMSI.....type reference OCTET STRING  
 DEFINED in MAP-CommonDataTypes : 313  
 USED in MAP-MS-DataTypes : 177 300  
 USED in MAP-CommonDataTypes : 30 317

tmsi.....identifier of [1] TMSI  
 DEFINED in MAP-CommonDataTypes : 317

tNoAnswer.....identifier of Named Number, 14  
 DEFINED in MAP-MS-DataTypes : 1813

tooManyZoneCodes.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 1329

tpdu-TypeCriterion.....identifier of [0] TPDU-TypeCriterion  
 DEFINED in MAP-MS-DataTypes : 1419

TPDU-TypeCriterion.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1422  
 USED in MAP-MS-DataTypes : 1419

traceReference.....identifier of [1] TraceReference  
 DEFINED in MAP-OM-DataTypes : 38

TraceReference.....type reference OCTET STRING  
 DEFINED in MAP-OM-DataTypes : 44

USED in MAP-OM-DataTypes : 38 56

traceReference.....identifier of [1] TraceReference  
DEFINED in MAP-OM-DataTypes : 56

traceType.....identifier of [2] TraceType  
DEFINED in MAP-OM-DataTypes : 39

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 102

TraceType.....type reference INTEGER  
 DEFINED in MAP-OM-DataTypes : 46  
 USED in MAP-OM-DataTypes : 39

tracingBufferFull.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 289  
 USED in MAP-OperationAndMainte : 30 63  
 USED in MAP-Errors : 41

TracingBufferFullParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 242  
 USED in MAP-Errors : 125 291  
 USED in MAP-ER-DataTypes : 32

trafficCongestionReporting.....value reference LCSServiceTypeID, 5  
 DEFINED in MAP-CommonDataTypes : 400

transactionId.....identifier of [7] TransactionId  
 DEFINED in MAP-MS-DataTypes : 2066

TransactionId.....type reference OCTET STRING  
 DEFINED in MAP-MS-DataTypes : 2082  
 USED in MAP-MS-DataTypes : 2066

transferToThirdParty.....value reference SS-Code, '11000011'B  
 DEFINED in MAP-SS-Code : 180

translatedB-Number.....identifier of [3] ISDN-AddressString  
 DEFINED in MAP-CH-DataTypes : 399

translatedB-Number.....identifier of [1] ISDN-AddressString  
 DEFINED in MAP-SS-DataTypes : 311

tripletList.....identifier of [0] TripletList  
 DEFINED in MAP-MS-DataTypes : 321

TripletList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 324  
 USED in MAP-MS-DataTypes : 321

ts3G-25413.....identifier of Named Number, 2  
 DEFINED in MAP-CommonDataTypes : 259

ts3G-48006.....identifier of Named Number, 1  
 DEFINED in MAP-CommonDataTypes : 258

T-BcsmCamelTDPData.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1801  
 USED in MAP-MS-DataTypes : 1794

t-BcsmCamelTDPDataList.....identifier of T-BcsmCamelTDPDataList  
 DEFINED in MAP-MS-DataTypes : 1782

T-BcsmCamelTDPDataList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1793  
 USED in MAP-MS-DataTypes : 1782

t-BcsmTriggerDetectionPoint.....identifier of T-BcsmTriggerDetectionPoint  
 DEFINED in MAP-MS-DataTypes : 1802

T-BcsmTriggerDetectionPoint.....type reference ENUMERATED  
 DEFINED in MAP-MS-DataTypes : 1809  
 USED in MAP-MS-DataTypes : 87 1556 1802

T-BCSM-CAMEL-TDP-Criteria.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1555  
 USED in MAP-MS-DataTypes : 1544

t-BCSM-CAMEL-TDP-CriteriaList.....identifier of [8] T-BCSM-CAMEL-TDP-CriteriaList  
 DEFINED in MAP-MS-DataTypes : 1408

T-BCSM-CAMEL-TDP-CriteriaList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1543  
 USED in MAP-MS-DataTypes : 68 1408 2198 2200 2217

USED in MAP-CH-DataTypes : 47 288

t-BCSM-CAMEL-TDP-CriteriaList.....identifier of [4] T-BCSM-CAMEL-TDP-CriteriaList  
DEFINED in MAP-MS-DataTypes : 2198

t-BCSM-CAMEL-TDP-CriteriaList.....identifier of [4] T-BCSM-CAMEL-TDP-CriteriaList  
DEFINED in MAP-CH-DataTypes : 288

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 103

t-BCSM-TriggerDetectionPoint.....identifier of T-BcsmTriggerDetectionPoint  
 DEFINED in MAP-MS-DataTypes : 1556

t-CauseValueCriteria.....identifier of [1] T-CauseValueCriteria  
 DEFINED in MAP-MS-DataTypes : 1558

T-CauseValueCriteria.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1599  
 USED in MAP-MS-DataTypes : 1558

t-csi.....identifier of Named Number, 8  
 DEFINED in MAP-MS-DataTypes : 1362

t-csi.....identifier of Named Number, 3  
 DEFINED in MAP-MS-DataTypes : 1637

T-CSI.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1781  
 USED in MAP-MS-DataTypes : 86 1407 2197 2199 2216  
 USED in MAP-CH-DataTypes : 50 283

t-CSI.....identifier of Named Number, 1  
 DEFINED in MAP-MS-DataTypes : 2153

t-CSI.....identifier of [3] T-CSI  
 DEFINED in MAP-MS-DataTypes : 2197

t-CSI.....identifier of [0] T-CSI  
 DEFINED in MAP-CH-DataTypes : 283

udubFromBusyMS.....identifier of Named Number, 5  
 DEFINED in MAP-CH-DataTypes : 416

udubFromFreeMS.....identifier of Named Number, 4  
 DEFINED in MAP-CH-DataTypes : 415

umts-SecurityContextData.....identifier of [1] UMTS-SecurityContextData  
 DEFINED in MAP-MS-DataTypes : 346

UMTS-SecurityContextData.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 353  
 USED in MAP-MS-DataTypes : 346

unauthorisedMessageOriginator.....identifier of [1] NULL  
 DEFINED in MAP-ER-DataTypes : 121

unauthorizedCallSessionRelatedExternalCldentifier of Named Number, 7  
 DEFINED in MAP-ER-DataTypes : 361

unauthorizedCallSessionUnrelatedExternalIdentifier of Named Number, 6  
 DEFINED in MAP-ER-DataTypes : 360

unauthorizedLCSClient.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 487  
 USED in MAP-LocationServiceOpe : 31 83  
 USED in MAP-Errors : 87

unauthorizedLCSClient-Diagnostic.....identifier of [0] UnauthorizedLCSClient-Diagnostic  
 DEFINED in MAP-ER-DataTypes : 348

UnauthorizedLCSClient-Diagnostic.....type reference ENUMERATED  
 DEFINED in MAP-ER-DataTypes : 352  
 USED in MAP-ER-DataTypes : 348

UnauthorizedLCSClient-Param.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 347  
 USED in MAP-Errors : 145 489  
 USED in MAP-ER-DataTypes : 50

unauthorizedPrivacyClass.....identifier of Named Number, 5  
 DEFINED in MAP-ER-DataTypes : 359

unauthorizedRequestingNetwork.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 481

USED in MAP-LocationServiceOpe : 30 65 82 98  
USED in MAP-Errors : 86

UnauthorizedRequestingNetwork-Param.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 343  
USED in MAP-Errors : 144 483  
USED in MAP-ER-DataTypes : 49

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 104

undetermined.....identifier of Named Number, 0  
 DEFINED in MAP-ER-DataTypes : 141

UnexpectedDataParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 191  
 USED in MAP-Errors : 115 184  
 USED in MAP-ER-DataTypes : 22

unexpectedDataValue.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 182  
 USED in MAP-MobileServiceOpera : 85 185 198 209 232 246 260 274 292  
 314 329 357 379 391 418 430 452 467  
 483 498 510  
 USED in MAP-OperationAndMainte : 26 60 75 87  
 USED in MAP-CallHandlingOperat : 33 90 114 130 142 155 168 183 193  
 208 222  
 USED in MAP-SupplementaryServi : 36 97 115 133 154 173 189 203 218  
 234 259 271 289  
 USED in MAP-ShortMessageServic : 30 75 91 105 123 135 151  
 USED in MAP-Group-Call-Operati : 26 54  
 USED in MAP-LocationServiceOpe : 26 61 76 96  
 USED in MAP-SecureTransportOpe : 27 50 60  
 USED in MAP-Errors : 16

UnidentifiedSubParam.....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 222  
 USED in MAP-Errors : 119 228  
 USED in MAP-ER-DataTypes : 27

unidentifiedSubscriber.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 226  
 USED in MAP-MobileServiceOpera : 88 220 419 431  
 USED in MAP-OperationAndMainte : 29 62 77  
 USED in MAP-CallHandlingOperat : 50 167  
 USED in MAP-ShortMessageServic : 33 107  
 USED in MAP-LocationServiceOpe : 35 78  
 USED in MAP-Errors : 25

universal.....value reference SS-Code, '10110001'B  
 DEFINED in MAP-SS-Code : 161

unknownAlphabet.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 417  
 USED in MAP-SupplementaryServi : 49 190 207 222  
 USED in MAP-Errors : 68

unknownEquipment.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 233  
 USED in MAP-MobileServiceOpera : 89 405  
 USED in MAP-Errors : 26

unknownMSC.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 223  
 USED in MAP-MobileServiceOpera : 87 359  
 USED in MAP-Errors : 24

unknownOrUnreachableLCSClient.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 499  
 USED in MAP-LocationServiceOpe : 34 99  
 USED in MAP-Errors : 89

UnknownOrUnreachableLCSClient-Param....type reference SEQUENCE  
 DEFINED in MAP-ER-DataTypes : 384  
 USED in MAP-Errors : 147 501  
 USED in MAP-ER-DataTypes : 52

unknownServiceCentre.....identifier of Named Number, 3  
 DEFINED in MAP-ER-DataTypes : 150

unknownSubscriber.....information object reference ERROR, Information Object  
 DEFINED in MAP-Errors : 210  
 USED in MAP-MobileServiceOpera : 86 186 210 233 261 275 293 315 380  
 392 453 468 484 499 511  
 USED in MAP-OperationAndMainte : 28 88

USED in MAP-CallHandlingOperat : 36 93 181 210 224  
USED in MAP-SupplementaryServi : 37 260  
USED in MAP-ShortMessageServic : 32 77 124 153  
USED in MAP-LocationServiceOpe : 28 63 97  
USED in MAP-Errors : 22

unknownSubscriberDiagnostic.....identifier of UnknownSubscriberDiagnostic

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 105

DEFINED in MAP-ER-DataTypes : 208

UnknownSubscriberDiagnostic.....type reference ENUMERATED  
DEFINED in MAP-ER-DataTypes : 210  
USED in MAP-ER-DataTypes : 208

UnknownSubscriberParam.....type reference SEQUENCE  
DEFINED in MAP-ER-DataTypes : 205  
USED in MAP-Errors : 117 212  
USED in MAP-ER-DataTypes : 25

unstructuredSS-Notify.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 211  
USED in MAP-Protocol : 80 142  
USED in MAP-SupplementaryServi : 20

unstructuredSS-Request.....information object reference OPERATION, Information Object  
DEFINED in MAP-SupplementaryServi : 194  
USED in MAP-Protocol : 79 142  
USED in MAP-SupplementaryServi : 19

updateGprsLocation.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 225  
USED in MAP-Protocol : 20 132  
USED in MAP-MobileServiceOpera : 21

UpdateGprsLocationArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 417  
USED in MAP-MobileServiceOpera : 122 227  
USED in MAP-MS-DataTypes : 24

UpdateGprsLocationRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 440  
USED in MAP-MobileServiceOpera : 123 229  
USED in MAP-MS-DataTypes : 25

updateLocation.....information object reference OPERATION, Information Object  
DEFINED in MAP-MobileServiceOpera : 177  
USED in MAP-Protocol : 16 131  
USED in MAP-MobileServiceOpera : 15

UpdateLocationArg.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 214  
USED in MAP-MobileServiceOpera : 114 179  
USED in MAP-MS-DataTypes : 16

UpdateLocationRes.....type reference SEQUENCE  
DEFINED in MAP-MS-DataTypes : 265  
USED in MAP-MobileServiceOpera : 115 181  
USED in MAP-MS-DataTypes : 17

updateProcedure.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 277

uplinkAttached.....identifier of [6] NULL  
DEFINED in MAP-GR-DataTypes : 116

uplinkFree.....identifier of [3] NULL  
DEFINED in MAP-GR-DataTypes : 57

uplinkRejectCommand.....identifier of [2] NULL  
DEFINED in MAP-GR-DataTypes : 79

uplinkReleaseCommand.....identifier of [4] NULL  
DEFINED in MAP-GR-DataTypes : 81

uplinkReleaseIndication.....identifier of [1] NULL  
DEFINED in MAP-GR-DataTypes : 78

uplinkReleaseIndication.....identifier of [1] NULL  
DEFINED in MAP-GR-DataTypes : 88

uplinkRequest.....identifier of [0] NULL  
DEFINED in MAP-GR-DataTypes : 87

uplinkRequestAck.....identifier of [0] NULL  
DEFINED in MAP-GR-DataTypes : 77

uplinkSeizedCommand.....identifier of [3] NULL  
DEFINED in MAP-GR-DataTypes : 80

userInfo.....identifier of [2] NULL

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 106

DEFINED in MAP-ST-DataTypes : 86

USSD-Arg.....type reference SEQUENCE

DEFINED in MAP-SS-DataTypes : 220

USED in MAP-SupplementaryServi : 65 183 196 213

USED in MAP-SS-DataTypes : 20

ussd-Busy.....information object reference ERROR, Information Object

DEFINED in MAP-Errors : 420

USED in MAP-SupplementaryServi : 50 208 223

USED in MAP-Errors : 69

ussd-DataCodingScheme.....identifier of USSD-DataCodingScheme

DEFINED in MAP-SS-DataTypes : 221

ussd-DataCodingScheme.....identifier of USSD-DataCodingScheme

DEFINED in MAP-SS-DataTypes : 228

USSD-DataCodingScheme.....type reference OCTET STRING

DEFINED in MAP-SS-DataTypes : 232

USED in MAP-SS-DataTypes : 22 221 228

USED in MAP-LCS-DataTypes : 49 158 172 230

USSD-Res.....type reference SEQUENCE

DEFINED in MAP-SS-DataTypes : 227

USED in MAP-SupplementaryServi : 66 185 198

USED in MAP-SS-DataTypes : 21

ussd-String.....identifier of USSD-String

DEFINED in MAP-SS-DataTypes : 222

ussd-String.....identifier of USSD-String

DEFINED in MAP-SS-DataTypes : 229

USSD-String.....type reference OCTET STRING

DEFINED in MAP-SS-DataTypes : 237

USED in MAP-SS-DataTypes : 23 222 229

USED in MAP-LCS-DataTypes : 50 167 176 234

utranCodecList.....identifier of [0] CodecList

DEFINED in MAP-MS-DataTypes : 638

uui.....identifier of [1] UUI

DEFINED in MAP-CH-DataTypes : 250

UUI.....type reference OCTET STRING

DEFINED in MAP-CH-DataTypes : 258

USED in MAP-CH-DataTypes : 250

uuIndicator.....identifier of [0] UUIndicator

DEFINED in MAP-CH-DataTypes : 249

UUIndicator.....type reference OCTET STRING

DEFINED in MAP-CH-DataTypes : 255

USED in MAP-CH-DataTypes : 249

uus1.....value reference SS-Code, '10000001'B

DEFINED in MAP-SS-Code : 110

uus2.....value reference SS-Code, '10000010'B

DEFINED in MAP-SS-Code : 112

uus3.....value reference SS-Code, '10000011'B

DEFINED in MAP-SS-Code : 114

uusCFInteraction.....identifier of [2] NULL

DEFINED in MAP-CH-DataTypes : 251

uu-Data.....identifier of [10] UU-Data

DEFINED in MAP-CH-DataTypes : 242

UU-Data.....type reference SEQUENCE

DEFINED in MAP-CH-DataTypes : 248

USED in MAP-CH-DataTypes : 242

valueAddedServices.....identifier of Named Number, 1  
DEFINED in MAP-LCS-DataTypes : 148

VBSDataList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1884  
USED in MAP-MS-DataTypes : 988

TAG R5.61 Cross Reference Listing for MAP-Protocol      2003-03-27 10:33:38 PAGE 107

vbsGroupIndication.....identifier of [7] NULL  
 DEFINED in MAP-MS-DataTypes : 1341

vbsSubscriptionData.....identifier of [11] VBSDtoList  
 DEFINED in MAP-MS-DataTypes : 988

verticalCoordinateRequest.....identifier of [1] NULL  
 DEFINED in MAP-LCS-DataTypes : 187

vertical-accuracy.....identifier of [2] Vertical-Accuracy  
 DEFINED in MAP-LCS-DataTypes : 188

Vertical-Accuracy.....type reference OCTET STRING  
 DEFINED in MAP-LCS-DataTypes : 198  
 USED in MAP-LCS-DataTypes : 188

VGCSDataList.....type reference SEQUENCE OF  
 DEFINED in MAP-MS-DataTypes : 1887  
 USED in MAP-MS-DataTypes : 989

vgcsGroupIndication.....identifier of [8] NULL  
 DEFINED in MAP-MS-DataTypes : 1342

vgcsSubscriptionData.....identifier of [12] VGCSDataList  
 DEFINED in MAP-MS-DataTypes : 989

vlr.....identifier of Named Number, 0  
 DEFINED in MAP-MS-DataTypes : 758

vlr.....identifier of Named Number, 2  
 DEFINED in MAP-CommonDataTypes : 353

vlrCamelSubscriptionInfo.....identifier of [13] VlrCamelSubscriptionInfo  
 DEFINED in MAP-MS-DataTypes : 990

VlrCamelSubscriptionInfo.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1398  
 USED in MAP-MS-DataTypes : 990

vlr-Capability.....identifier of [6] VLR-Capability  
 DEFINED in MAP-MS-DataTypes : 221

VLR-Capability.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 225  
 USED in MAP-MS-DataTypes : 221 1874

vlr-Capability.....identifier of [6] VLR-Capability  
 DEFINED in MAP-MS-DataTypes : 1874

vlr-Number.....identifier of ISDN-AddressString  
 DEFINED in MAP-MS-DataTypes : 217

vlr-Number.....identifier of [0] ISDN-AddressString  
 DEFINED in MAP-MS-DataTypes : 288

vlr-Number.....identifier of [0] ISDN-AddressString  
 DEFINED in MAP-MS-DataTypes : 389

vlr-number.....identifier of [1] ISDN-AddressString  
 DEFINED in MAP-MS-DataTypes : 1978

vmsc.....identifier of Named Number, 5  
 DEFINED in MAP-CommonDataTypes : 356

vmsc-Address.....identifier of [2] ISDN-AddressString  
 DEFINED in MAP-CH-DataTypes : 160

voiceBroadcastCall.....value reference TeleserviceCode, '10010010'B  
 DEFINED in MAP-TS-Code : 69

VoiceBroadcastData.....type reference SEQUENCE  
 DEFINED in MAP-MS-DataTypes : 1899  
 USED in MAP-MS-DataTypes : 1885

voiceGroupCall.....value reference TeleserviceCode, '10010001'B

DEFINED in MAP-TS-Code : 68

VoiceGroupCallData.....type reference SEQUENCE

DEFINED in MAP-MS-DataTypes : 1894

USED in MAP-MS-DataTypes : 1888

vplmnAddressAllowed.....identifier of [19] NULL

TAG R5.61 Cross Reference Listing for MAP-Protocol 2003-03-27 10:33:38 PAGE 108

DEFINED in MAP-MS-DataTypes : 841

vt-BCSM-CAMEL-TDP-CriteriaList.....identifier of [6] T-BCSM-CAMEL-TDP-CriteriaList  
DEFINED in MAP-MS-DataTypes : 2200

vt-csi.....identifier of Named Number, 4  
DEFINED in MAP-MS-DataTypes : 1358

vt-CSI.....identifier of [7] T-CSI  
DEFINED in MAP-MS-DataTypes : 1407

vt-csi.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1636

vt-CSI.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 2154

vt-CSI.....identifier of [5] T-CSI  
DEFINED in MAP-MS-DataTypes : 2199

vt-IM-BCSM-CAMEL-TDP-CriteriaList.....identifier of [22] T-BCSM-CAMEL-TDP-CriteriaList  
DEFINED in MAP-MS-DataTypes : 2217

vt-IM-CSI.....identifier of Named Number, 13  
DEFINED in MAP-MS-DataTypes : 1367

vt-IM-CSI.....identifier of Named Number, 4  
DEFINED in MAP-MS-DataTypes : 2167

vt-IM-CSI.....identifier of [21] T-CSI  
DEFINED in MAP-MS-DataTypes : 2216

warningToneEnhancements.....identifier of Named Number, 13  
DEFINED in MAP-MS-DataTypes : 1660

whiteListed.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 768

wrongNetworkSignature.....identifier of Named Number, 1  
DEFINED in MAP-MS-DataTypes : 413

wrongPasswordAttemptsCounter.....identifier of WrongPasswordAttemptsCounter  
DEFINED in MAP-MS-DataTypes : 2180

WrongPasswordAttemptsCounter.....type reference INTEGER  
DEFINED in MAP-MS-DataTypes : 2185  
USED in MAP-MS-DataTypes : 2180 2254 2333

wrongPasswordAttemptsCounter.....identifier of [4] WrongPasswordAttemptsCounter  
DEFINED in MAP-MS-DataTypes : 2254

wrongPasswordAttemptsCounter.....identifier of [3] WrongPasswordAttemptsCounter  
DEFINED in MAP-MS-DataTypes : 2333

wrongUserResponse.....identifier of Named Number, 0  
DEFINED in MAP-MS-DataTypes : 412

xres.....identifier of XRES  
DEFINED in MAP-MS-DataTypes : 338

XRES.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 365  
USED in MAP-MS-DataTypes : 338

ZoneCode.....type reference OCTET STRING  
DEFINED in MAP-MS-DataTypes : 1311  
USED in MAP-MS-DataTypes : 1309 1340

ZoneCodeList.....type reference SEQUENCE OF  
DEFINED in MAP-MS-DataTypes : 1308  
USED in MAP-MS-DataTypes : 63 987

zoneCodesConflict.....identifier of Named Number, 2  
DEFINED in MAP-MS-DataTypes : 1330

---

## Annex B (informative): Fully expanded ASN.1 sources for abstract syntaxes of MAP

Annex B is not part of the standard, it is included for information purposes only.

For every (Value)Assignment in the root ASN.1 module all the used defined types and defined values, which are defined within the ASN.1 module or imported from ASN.1 modules, are replaced by the constructs this type or value is composed of.

The fully expanded ASN.1 root module is itself a correct and equivalent representation of the MAP-Protocol.

It allows to see at all the parameters, including all nested ones for a specific operationcode or errorcode at once.

Note that for those operations which use a result without parameters the word "RESULT" is not shown. Empty results are only defined in the ASN.1 description in clause 17.

---

### B.1 Fully Expanded ASN.1 Source of MAP-Protocol/TCAPMessages

```
-- Expanded ASN1 Module 'MAP-MobileServiceOperations'
--SIEMENS ASN.1 Compiler      R5.61 (Production_5.61)
--          Date: 2003-03-27 Time: 10:34:09
```

```
MAP-MobileServiceOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-MobileServiceOperations (5) version8 (8) }
```

#### DEFINITIONS

::=

BEGIN

```
EXPORTS
  updateLocation,
  cancelLocation,
  purgeMS,
  sendIdentification,
  updateGprsLocation,
  provideSubscriberInfo,
  anyTimeInterrogation,
  anyTimeSubscriptionInterrogation,
  anyTimeModification,
  noteSubscriberDataModified,
  prepareHandover,
  sendEndSignal,
  processAccessSignalling,
  forwardAccessSignalling,
  prepareSubsequentHandover,
  sendAuthenticationInfo,
  authenticationFailureReport,
  checkIMEI,
  insertSubscriberData,
  deleteSubscriberData,
  reset,
  forwardCheckSS-Indication,
  restoreData,
  sendRoutingInfoForGprs,
  failureReport,
  noteMsPresentForGprs,
  noteMM-Event;
```

```
updateLocation OPERATION ::= {
```

```

ARGUMENT SEQUENCE {
    imsi          OCTET STRING ( SIZE( 3 .. 8 ) ),
    msc-Number    [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    vlr-Number    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    Imsi          [10] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType    MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        },
        vlr-Capability [6] IMPLICIT SEQUENCE {
            supportedCamelPhases [0] IMPLICIT BIT STRING {
                phase1 (0),
                phase2 (1),
                phase3 (2),
                phase4 (3) ( SIZE( 1 .. 16 ) ) OPTIONAL,
            },
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId      MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType    MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                },
                solsaSupportIndicator [2] IMPLICIT NULL OPTIONAL,
                istSupportIndicator [1] IMPLICIT ENUMERATED {
                    basicLSTSupported (0),
                    istCommandSupported (1),
                    ...
                } OPTIONAL,
                superChargerSupportedInServingNetworkEntity [3] CHOICE {
                    sendSubscriberData [0] IMPLICIT NULL,
                    subscriberDataStored [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 6 ) )} OPTIONAL,
                    longFTN-Supported [4] IMPLICIT NULL OPTIONAL,
                    supportedLCS-CapabilitySets [5] IMPLICIT BIT STRING {
                        lcsCapabilitySet1 (0),
                        lcsCapabilitySet2 (1),
                        lcsCapabilitySet3 (2) ( SIZE( 2 .. 16 ) ) OPTIONAL,
                    },
                    offeredCamel4CSIs [6] IMPLICIT BIT STRING {
                        o-csi (0),
                        d-csi (1),
                        vt-csi (2),
                        t-csi (3),
                        mt-sms-csi (4),
                        mg-csi (5),
                        psi-enhancements (6) ( SIZE( 7 .. 16 ) ) OPTIONAL} OPTIONAL,
                    informPreviousNetworkEntity [11] IMPLICIT NULL OPTIONAL,
                    cs-LCS-NotSupportedByUE [12] IMPLICIT NULL OPTIONAL}
                },
                RESULT SEQUENCE {
                    hlr-Number      OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId      MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ),
                                extType    MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            } OPTIONAL,
                            ...
                        },
                        ERRORS {
                            systemFailure |
                        }
                    }
                }
            }
        }
    }
}

```

```

dataMissing |
unexpectedDataValue |
unknownSubscriber |
roamingNotAllowed }

CODE local : 2
}

cancelLocation OPERATION ::= {
ARGUMENT [3] IMPLICIT SEQUENCE {
identity CHOICE {
imsi OCTET STRING ( SIZE( 3 .. 8 ) ),
imsi-WithLMSI SEQUENCE {
imsi OCTET STRING ( SIZE( 3 .. 8 ) ),
lmsi OCTET STRING ( SIZE( 4 ) ),
... }},
cancellationType ENUMERATED {
updateProcedure ( 0 ),
subscriptionWithdraw ( 1 ),
... } OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
RESULT SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
ERRORS {
dataMissing |
unexpectedDataValue }
CODE local : 3
}

purgeMS OPERATION ::= {
ARGUMENT [3] IMPLICIT SEQUENCE {
imsi OCTET STRING ( SIZE( 3 .. 8 ) ),
vlr-Number [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
sgsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
RESULT SEQUENCE {
freezeTMSI [0] IMPLICIT NULL OPTIONAL,
freezeP-TMSI [1] IMPLICIT NULL OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
...
}
}

```

```

        ,
        ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
}
ERRORS  {
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber }
CODE    local    :67
}

sendIdentification OPERATION ::= {
ARGUMENT  SEQUENCE {
    tmsi          OCTET STRING ( SIZE( 1 .. 4 )),  

    numberRequestedVectors  INTEGER ( 1 .. 5 ) OPTIONAL,  

    segmentationProhibited  NULL OPTIONAL,  

    extensionContainer     SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId    MAP-EXTENSION .&extensionId ( {
                ,
                ...} ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ...
}
RESULT    [3] IMPLICIT SEQUENCE {
    imsi          OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,  

    currentSecurityContext [2] CHOICE {
        gsm-SecurityContextData [0] IMPLICIT SEQUENCE {
            kc          OCTET STRING ( SIZE( 8 )),  

            cksn        OCTET STRING ( SIZE( 1 )),  

            ... },
        umts-SecurityContextData [1] IMPLICIT SEQUENCE {
            ck          OCTET STRING ( SIZE( 16 )),  

            ik          OCTET STRING ( SIZE( 16 )),  

           ksi         OCTET STRING ( SIZE( 1 )),  

            ... } } OPTIONAL,
        extensionContainer [3] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId    MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...} { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions      [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ...
}
ERRORS  {
    dataMissing |
    unidentifiedSubscriber }
CODE    local    :55
}

updateGprsLocation OPERATION ::= {
ARGUMENT  SEQUENCE {
    imsi          OCTET STRING ( SIZE( 3 .. 8 )),  

    sgsn-Number    OCTET STRING ( SIZE( 1 .. 20 )) ( SIZE( 1 .. 9 )),  

    sgsn-Address   OCTET STRING ( SIZE( 5 .. 17 )),  

    extensionContainer     SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId    MAP-EXTENSION .&extensionId ( {
                ,
                ...} ),
                extType  MAP-EXTENSION .&ExtensionType ( {

```

```

        ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
    ...
sgsn-Capability      [0] IMPLICIT SEQUENCE {
    solsaSupportIndicator      NULL OPTIONAL,
    extensionContainer      [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
                extType     MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
    ...
superChargerSupportedInServingNetworkEntity [2] CHOICE {
    sendSubscriberData      [0] IMPLICIT NULL,
    subscriberDataStored      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 6 ) ) OPTIONAL,
    gprsEnhancementsSupportIndicator      [3] IMPLICIT NULL OPTIONAL,
    supportedCamelPhases      [4] IMPLICIT BIT STRING {
        phase1 (0 ),
        phase2 (1 ),
        phase3 (2 ),
        phase4 (3 ) ( SIZE( 1 .. 16 ) ) OPTIONAL,
    supportedLCS-CapabilitySets      [5] IMPLICIT BIT STRING {
        lcsCapabilitySet1 (0 ),
        lcsCapabilitySet2 (1 ),
        lcsCapabilitySet3 (2 ) ( SIZE( 2 .. 16 ) ) OPTIONAL,
    offeredCamel4CSIs      [6] IMPLICIT BIT STRING {
        o-csi (0 ),
        d-csi (1 ),
        vt-csi (2 ),
        t-csi (3 ),
        mt-sms-csi (4 ),
        mg-csi (5 ),
        psi-enhancements (6 ) ( SIZE( 7 .. 16 ) ) OPTIONAL} OPTIONAL,
    informPreviousNetworkEntity      [1] IMPLICIT NULL OPTIONAL,
    ps-LCS-NotSupportedByUE      [2] IMPLICIT NULL OPTIONAL}
RESULT   SEQUENCE {
    hlr-Number      OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    extensionContainer      SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
                extType     MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
    ...
} }
ERRORS   {
    systemFailure |
    unexpectedDataValue |
    unknownSubscriber |
    roamingNotAllowed }
CODE   local   :23
}

provideSubscriberInfo OPERATION ::= {
ARGUMENT   SEQUENCE {
    imsi      [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    lmsi      [1] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
    requestedInfo      [2] IMPLICIT SEQUENCE {
        locationInformation [0] IMPLICIT NULL OPTIONAL,
        subscriberState      [1] IMPLICIT NULL OPTIONAL,
        extensionContainer      [2] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
```

```

extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
currentLocation [3] IMPLICIT NULL OPTIONAL,
requestedDomain [4] IMPLICIT ENUMERATED {
    cs-Domain ( 0 ),
    ps-Domain ( 1 ),
    ... } OPTIONAL,
imei      [6] IMPLICIT NULL OPTIONAL,
ms-classmark [5] IMPLICIT NULL OPTIONAL},
extensionContainer [3] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
    extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
RESULT  SEQUENCE {
    subscriberInfo  SEQUENCE {
        locationInformation [0] IMPLICIT SEQUENCE {
            ageOfLocationInformation INTEGER ( 0 .. 32767 ) OPTIONAL,
            geographicalInformation [0] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
            vlr-number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
            locationNumber [2] IMPLICIT OCTET STRING ( SIZE( 2 .. 10 ) ) OPTIONAL,
            cellGlobalIdOrServiceAreaIdOrLAI [3] CHOICE {
                cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
                laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) OPTIONAL,
            extensionContainer [4] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...} ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...} { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ... },
selectedLSA-Id [5] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
msc-Number [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
sai-Present [9] IMPLICIT NULL OPTIONAL} OPTIONAL,
subscriberState [1] CHOICE {
    assumedIdle [0] IMPLICIT NULL,
    camelBusy [1] IMPLICIT NULL,
    netDetNotReachable ENUMERATED {
        msPurged ( 0 ),
        imsDetached ( 1 ),
        restrictedArea ( 2 ),
        notRegistered ( 3 ),
    notProvidedFromVLR [2] IMPLICIT NULL} OPTIONAL,
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...} ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {

```

```

... } OPTIONAL,
... } OPTIONAL,
... ,
locationInformationGPRS [3] IMPLICIT SEQUENCE {
    cellGlobalIdOrServiceAreaIdOrLAI [0] CHOICE {
        cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
        laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) OPTIONAL,
        routeingAreaIdentity [1] IMPLICIT OCTET STRING ( SIZE( 6 ) ) OPTIONAL,
        geographicalInformation [2] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
        sgsn-Number [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        selectedLSDIdentity [4] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
        extensionContainer [5] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ( {
                        ,
                        ... } ),
                    extType MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ... } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ...
                        sai-Present [6] IMPLICIT NULL OPTIONAL,
                        geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
                        currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
                        ageOfLocationInformation [9] IMPLICIT INTEGER ( 0 .. 32767 ) OPTIONAL} OPTIONAL,
                        ps-SubscriberState [4] CHOICE {
                            notProvidedFromSGSN [0] IMPLICIT NULL,
                            ps-Detached [1] IMPLICIT NULL,
                            ps-AttachedNotReachableForPaging [2] IMPLICIT NULL,
                            ps-AttachedReachableForPaging [3] IMPLICIT NULL,
                            ps-PDP-ActiveNotReachableForPaging [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
                                SEQUENCE {
                                    pdp-ContextIdentifier [0] IMPLICIT INTEGER ( 1 .. 50 ),
                                    pdp-ContextActive [1] IMPLICIT NULL OPTIONAL,
                                    pdp-Type [2] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
                                    pdp-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
                                    apn-Subscribed [4] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                    apn-InUse [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                    nsapi [6] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
                                    transactionId [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ) OPTIONAL,
                                    teid-ForeignAndGp [8] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                    teid-Forlu [9] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                    ggsn-Address [10] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
                                    qos-Subscribed [11] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                    qos-Requested [12] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                    qos-Negotiated [13] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                    chargingId [14] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                    chargingCharacteristics [15] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
                                    rnc-Address [16] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
                                    extensionContainer [17] IMPLICIT SEQUENCE {
                                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                            SEQUENCE {
                                                extId MAP-EXTENSION .&extensionId ( {
                                                    ,
                                                    ... } ),
                                                extType MAP-EXTENSION .&ExtensionType ( {
                                                    ,
                                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                                    ... } OPTIONAL,
                                                    ... } OPTIONAL,
                                                    ...
                                                    },
                                                ps-PDP-ActiveReachableForPaging [5] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
                                                SEQUENCE {
                                                    pdp-ContextIdentifier [0] IMPLICIT INTEGER ( 1 .. 50 ),
                                                    pdp-ContextActive [1] IMPLICIT NULL OPTIONAL,
                                                    pdp-Type [2] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
                                                    pdp-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
                                                    apn-Subscribed [4] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                                    apn-InUse [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                                    nsapi [6] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
                                                    transactionId [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ) OPTIONAL,
                                                    teid-ForeignAndGp [8] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                                    teid-Forlu [9] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                                }
                                            }
                                        }
                                    }
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

ggsn-Address      [10] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
qos-Subscribed    [11] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
qos-Requested     [12] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
qos-Negotiated    [13] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
chargingId        [14] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
chargingCharacteristics [15] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
rnc-Address       [16] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
extensionContainer [17] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        },
        ...
    },
    netDetNotReachable          ENUMERATED {
        msPurged      ( 0 ),
        imsIDetached   ( 1 ),
        restrictedArea  ( 2 ),
        notRegistered  ( 3 ) } OPTIONAL,
        imei           [5] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
        ms-Classmark2  [6] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
        gprs-MS-Class  [7] IMPLICIT SEQUENCE {
            mSNetworkCapability [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ),
            mSRadioAccessCapability [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 50 ) ) OPTIONAL} OPTIONAL},
        extensionContainer SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                }
            },
            ...
        },
        ERRORS {
            dataMissing |
            unexpectedDataValue
        }
        CODE local :70
    }

anyTimeInterrogation OPERATION ::= {
    ARGUMENT SEQUENCE {
        subscriberIdentity [0] CHOICE {
            imsi      [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
            msisdn    [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) )( SIZE( 1 .. 9 ) )),
        requestedInfo [1] IMPLICIT SEQUENCE {
            locationInformation [0] IMPLICIT NULL OPTIONAL,
            subscriberState     [1] IMPLICIT NULL OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    }
                },
                ...
            },
            currentLocation [3] IMPLICIT NULL OPTIONAL,
            requestedDomain [4] IMPLICIT ENUMERATED {
                cs-Domain ( 0 ),
                ps-Domain ( 1 ),
                ...
            } OPTIONAL,
            imei       [6] IMPLICIT NULL OPTIONAL,
            ms-classmark [5] IMPLICIT NULL OPTIONAL},
        }
}

```

```

gsmSCF-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
extensionContainer [2] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    }
  RESULT SEQUENCE {
    subscriberInfo SEQUENCE {
      locationInformation [0] IMPLICIT SEQUENCE {
        ageOfLocationInformation INTEGER ( 0 .. 32767 ) OPTIONAL,
        geographicalInformation [0] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
        vlr-number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        locationNumber [2] IMPLICIT OCTET STRING ( SIZE( 2 .. 10 ) ) OPTIONAL,
        cellGlobalIdOrServiceAreaIdOrLAI [3] CHOICE {
          cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
          laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) OPTIONAL,
        }
        extensionContainer [4] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
              extId MAP-EXTENSION .&extensionId ( {
                ,
                ...
              } ),
              extType MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
              } { @extId } ) OPTIONAL} OPTIONAL,
              pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
              } OPTIONAL,
              ...
            }
          ...
        }
        selectedLSA-Id [5] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
        msc-Number [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
        currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
        sai-Present [9] IMPLICIT NULL OPTIONAL} OPTIONAL,
        subscriberState [1] CHOICE {
          assumedIdle [0] IMPLICIT NULL,
          camelBusy [1] IMPLICIT NULL,
          netDetNotReachable ENUMERATED {
            msPurged ( 0 ),
            imsiDetached ( 1 ),
            restrictedArea ( 2 ),
            notRegistered ( 3 ),
          }
          notProvidedFromVLR [2] IMPLICIT NULL} OPTIONAL,
        extensionContainer [2] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
              extId MAP-EXTENSION .&extensionId ( {
                ,
                ...
              } ),
              extType MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
              } { @extId } ) OPTIONAL} OPTIONAL,
              pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
              } OPTIONAL,
              ...
            }
          ...
        }
        locationInformationGPRS [3] IMPLICIT SEQUENCE {
          cellGlobalIdOrServiceAreaIdOrLAI [0] CHOICE {
            cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
            laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) OPTIONAL,
            routeingAreaIdentity [1] IMPLICIT OCTET STRING ( SIZE( 6 ) ) OPTIONAL,
            geographicalInformation [2] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
            sgsn-Number [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
            selectedLSAIdentity [4] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
            extensionContainer [5] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                  } ),
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                  } { @extId } ) OPTIONAL} OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                  } OPTIONAL,
                  ...
                }
              ...
            }
          }
        }
      }
    }
  }
}

```

```

...},
extType MAP-EXTENSION.&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
sai-Present [6] IMPLICIT NULL OPTIONAL,
geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
ageOfLocationInformation [9] IMPLICIT INTEGER ( 0 .. 32767 ) OPTIONAL} OPTIONAL,
ps-SubscriberState [4] CHOICE {
    notProvidedFromSGSN [0] IMPLICIT NULL,
    ps-Detached [1] IMPLICIT NULL,
    ps-AttachedNotReachableForPaging [2] IMPLICIT NULL,
    ps-AttachedReachableForPaging [3] IMPLICIT NULL,
    ps-PDP-ActiveNotReachableForPaging [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
        SEQUENCE {
            pdp-ContextIdentifier [0] IMPLICIT INTEGER ( 1 .. 50 ),
            pdp-ContextActive [1] IMPLICIT NULL OPTIONAL,
            pdp-Type [2] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
            pdp-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
            apn-Subscribed [4] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
            apn-InUse [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
            nsapi [6] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
            transactionId [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ) OPTIONAL,
            teid-ForGnAndGp [8] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
            teid-ForIu [9] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
            ggsn-Address [10] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
            qos-Subscribed [11] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
            qos-Requested [12] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
            qos-Negotiated [13] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
            chargingId [14] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
            chargingCharacteristics [15] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
            rnc-Address [16] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
            extensionContainer [17] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION.&extensionId ( {
                            ... },
                            ... } ),
                            extType MAP-EXTENSION.&ExtensionType ( {
                                ...} { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ... },
                                ps-PDP-ActiveReachableForPaging [5] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
                                    SEQUENCE {
                                        pdp-ContextIdentifier [0] IMPLICIT INTEGER ( 1 .. 50 ),
                                        pdp-ContextActive [1] IMPLICIT NULL OPTIONAL,
                                        pdp-Type [2] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
                                        pdp-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
                                        apn-Subscribed [4] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                        apn-InUse [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
                                        nsapi [6] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
                                        transactionId [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ) OPTIONAL,
                                        teid-ForGnAndGp [8] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                        teid-ForIu [9] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                        ggsn-Address [10] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
                                        qos-Subscribed [11] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                        qos-Requested [12] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                        qos-Negotiated [13] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
                                        chargingId [14] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
                                        chargingCharacteristics [15] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
                                        rnc-Address [16] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
                                        extensionContainer [17] IMPLICIT SEQUENCE {
                                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                                SEQUENCE {
                                                    extId MAP-EXTENSION.&extensionId ( {
                                                        ... },
                                                        ... } ),
                                                        extType MAP-EXTENSION.&ExtensionType ( {
                                                            ...} { @extId } ) OPTIONAL} OPTIONAL,

```

```

    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
    netDetNotReachable          ENUMERATED {
        msPurged      ( 0 ),
        imsiDetached   ( 1 ),
        restrictedArea  ( 2 ),
        notRegistered   ( 3 ) } OPTIONAL,
    imei           [5] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
    ms-Classmark2     [6] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
    gprs-MS-Class    [7] IMPLICIT SEQUENCE {
        mSNetworkCapability [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ),
        mSRadioAccessCapability [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 50 ) ) OPTIONAL } OPTIONAL},
extensionContainer  SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ... } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ... } { @extId } ) OPTIONAL } OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... }
    ERRORS  {
        systemFailure |
        ati-NotAllowed |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber }
CODE local :71
}

```

```

anyTimeSubscriptionInterrogation OPERATION ::= {
    ARGUMENT  SEQUENCE {
        subscriberIdentity [0] CHOICE {
            imsi    [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
            msisdn  [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) )),
        requestedSubscriptionInfo [1] IMPLICIT SEQUENCE {
            requestedSS-Info   [1] IMPLICIT SEQUENCE {
                ss-Code      OCTET STRING ( SIZE( 1 ) ),
                basicService  CHOICE {
                    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
                    ...
                    longFTN-Supported [4] IMPLICIT NULL OPTIONAL } OPTIONAL,
                odb           [2] IMPLICIT NULL OPTIONAL,
            requestedCAMEL-SubscriptionInfo [3] IMPLICIT ENUMERATED {
                o-CSI       ( 0 ),
                t-CSI       ( 1 ),
                vt-CSI      ( 2 ),
                tif-CSI     ( 3 ),
                gprs-CSI    ( 4 ),
                mo-sms-CSI  ( 5 ),
                ss-CSI      ( 6 ),
                m-CSI       ( 7 ),
                d-csi       ( 8 ) } OPTIONAL,
            supportedVLR-CAMEL-Phases      [4] IMPLICIT NULL OPTIONAL,
            supportedSGSN-CAMEL-Phases    [5] IMPLICIT NULL OPTIONAL,
            extensionContainer             [6] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ... } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ... } { @extId } ) OPTIONAL } OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ...
                    additionalRequestedCAMEL-SubscriptionInfo [7] IMPLICIT ENUMERATED {
                        mt-sms-CSI ( 0 ),

```

```

mgcsi      ( 1 ),
o-IM-CSI   ( 2 ),
d-IM-CSI   ( 3 ),
vt-IM-CSI  ( 4 ),
... } OPTIONAL},
gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
extensionContainer [3] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
,
...} ),
extType   MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
longFTN-Supported [4] IMPLICIT NULL OPTIONAL,
...
RESULT  SEQUENCE {
callForwardingData [1] IMPLICIT SEQUENCE {
forwardingFeatureList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
SEQUENCE {
basicService CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
ss-Status       [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
noReplyConditionTime [7] IMPLICIT INTEGER ( 1 .. 100 ) OPTIONAL,
extensionContainer [9] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
,
...} ),
extType   MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
longForwardedToNumber [10] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL,
notificationToCSE NULL OPTIONAL,
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
,
...} ),
extType   MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
callBarringData [2] IMPLICIT SEQUENCE {
callBarringFeatureList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
SEQUENCE {
basicService CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
ss-Status       [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
,
...} ),
extType   MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {

```

```

    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
password      NumericString ( FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9" )) (SIZE( 4 ) ) OPTIONAL,
wrongPasswordAttemptsCounter INTEGER ( 0 .. 4 ) OPTIONAL,
notificationToCSE      NULL OPTIONAL,
extensionContainer      SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId      MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType      MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
odb-Info      [3] IMPLICIT SEQUENCE {
odb-Data      SEQUENCE {
odb-GeneralData      BIT STRING {
allOG-CallsBarred (0),
internationalOGCallsBarred (1),
internationalOGCallsNotToHPLMN-CountryBarred (2),
interzonalOGCallsBarred (6),
interzonalOGCallsNotToHPLMN-CountryBarred (7),
interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred (8),
premiumRateInformationOGCallsBarred (3),
premiumRateEntertainmentOGCallsBarred (4),
ss-AccessBarred (5),
allECT-Barred (9),
chargeableECT-Barred (10),
internationalECT-Barred (11),
interzonalECT-Barred (12),
doublyChargeableECT-Barred (13),
multipleECT-Barred (14),
allPacketOrientedServicesBarred (15),
roamerAccessToHPLMN-AP-Barred (16),
roamerAccessToVPLMN-AP-Barred (17),
roamingOutsidePLMNOG-CallsBarred (18),
allIC-CallsBarred (19),
roamingOutsidePLMNIC-CallsBarred (20),
roamingOutsidePLMNICCountryIC-CallsBarred (21),
roamingOutsidePLMN-Barred (22),
roamingOutsidePLMN-CountryBarred (23),
registrationAllCF-Barred (24),
registrationCFNotToHPLMN-Barred (25),
registrationInterzonalCF-Barred (26),
registrationInterzonalCFNotToHPLMN-Barred (27),
registrationInternationalCF-Barred (28) } ( SIZE( 15 .. 32 ) ),
odb-HPLMN-Data      BIT STRING {
plmn-SpecificBarringType1 (0),
plmn-SpecificBarringType2 (1),
plmn-SpecificBarringType3 (2),
plmn-SpecificBarringType4 (3)) ( SIZE( 4 .. 32 ) ) OPTIONAL,
extensionContainer      SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId      MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType      MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } },
notificationToCSE      NULL OPTIONAL,
extensionContainer      SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId      MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType      MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} ),

```

```

        ...
    ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    ...} OPTIONAL,
    ...
    ...} OPTIONAL,
camel-SubscriptionInfo [4] IMPLICIT SEQUENCE {
    o-CSI [0] IMPLICIT SEQUENCE {
        o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                o-BcsmTriggerDetectionPoint ENUMERATED {
                    collectedInfo ( 2 ),
                    ...
                    routeSelectFailure ( 4 ),
                    serviceKey INTEGER ( 0 .. 2147483647 ),
                    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    defaultCallHandling [1] IMPLICIT ENUMERATED {
                        continueCall ( 0 ),
                        releaseCall ( 1 ),
                        ...
                    },
                    extensionContainer [2] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ( {
                                    ...
                                    ...
                                } ),
                                extType MAP-EXTENSION .&ExtensionType ( {
                                    ...
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                                ...
                            } },
                            extensionContainer SEQUENCE {
                                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                    SEQUENCE {
                                        extId MAP-EXTENSION .&extensionId ( {
                                            ...
                                            ...
                                        } ),
                                        extType MAP-EXTENSION .&ExtensionType ( {
                                            ...
                                            ...
                                        } { @extId } ) OPTIONAL} OPTIONAL,
                                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                                            ...
                                        } OPTIONAL,
                                        ...
                                        ...
                                    } },
                                    ...
                                    camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                                    notificationToCSE [1] IMPLICIT NULL OPTIONAL,
                                    csiActive [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-BcsmCamelTDP-CriteriaList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    o-BcsmTriggerDetectionPoint ENUMERATED {
        collectedInfo ( 2 ),
        ...
        routeSelectFailure ( 4 ),
        destinationNumberCriteria [0] IMPLICIT SEQUENCE {
            matchType [0] IMPLICIT ENUMERATED {
                inhibiting ( 0 ),
                enabling ( 1 ),
            }
            destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
            destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
                INTEGER ( 1 .. 15 ) OPTIONAL,
            ...
        } OPTIONAL,
        basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        CHOICE {
            ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
            ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
        }
        callTypeCriteria [2] IMPLICIT ENUMERATED {
            forwarded ( 0 ),
            notForwarded ( 1 ) } OPTIONAL,
        ...
        o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
            OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        extensionContainer [4] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {

```

```

extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
... } OPTIONAL} OPTIONAL,
d-CSI      [2] IMPLICIT SEQUENCE {
dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    dialledNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceKey    INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling ENUMERATED {
        continueCall ( 0 ),
        releaseCall ( 1 ),
        ...
    },
extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
t-CSI      [3] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    t-BcsmTriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy          ( 13 ),
        tNoAnswer      ( 14 ),
    },
    serviceKey    INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling [1] IMPLICIT ENUMERATED {
        continueCall ( 0 ),
        releaseCall ( 1 ),
        ...
    },
extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            ...
},
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF

```

```

SEQUENCE {
  extId   MAP-EXTENSION.&extensionId ({
    ...
  }),
  extType  MAP-EXTENSION.&ExtensionType ({
    ...
  }) { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
  ...
  camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
  notificationToCSE [1] IMPLICIT NULL OPTIONAL,
  csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
  t-BCSM-CAMEL-TDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
    t-BCSM-TriggerDetectionPoint ENUMERATED {
      termAttemptAuthorized ( 12 ),
      ...
      tBusy ( 13 ),
      tNoAnswer ( 14 )},
    basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
    CHOICE {
      ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
      ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
      t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
      ...
    } OPTIONAL,
  vt-CSl [5] IMPLICIT SEQUENCE {
    t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      t-BcsmTriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy ( 13 ),
        tNoAnswer ( 14 )},
      serviceKey INTEGER ( 0 .. 2147483647 ),
      gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
      defaultCallHandling [1] IMPLICIT ENUMERATED {
        continueCall ( 0 ),
        releaseCall ( 1 ),
        ...
      },
      extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION.&extensionId ({
            ...
          }),
          extType  MAP-EXTENSION.&ExtensionType ({
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...
        } OPTIONAL,
        ...
      },
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION.&extensionId ({
            ...
          }),
          extType  MAP-EXTENSION.&ExtensionType ({
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...
        } OPTIONAL,
        ...
      },
      camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
      notificationToCSE [1] IMPLICIT NULL OPTIONAL,
      csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
    vt-BCSM-CAMEL-TDP-CriteriaList [6] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      t-BCSM-TriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy ( 13 ),
        ...
      }
    }
  }
}

```

```

tNoAnswer      ( 14 ) },
basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
  ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Telbservice  [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  ... } OPTIONAL,
tif-CSI        [7] IMPLICIT NULL OPTIONAL,
tif-CSI-NotificationToCSE [8] IMPLICIT NULL OPTIONAL,
gprs-CSI       [9] IMPLICIT SEQUENCE {
  gprs-CamelTDPDataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  gprs-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
    attach                  ( 1 ),
    attachChangeOfPosition   ( 2 ),
    pdp-ContextEstablishment ( 11 ),
    pdp-ContextEstablishmentAcknowledgement ( 12 ),
    pdp-ContextChangeOfPosition ( 14 ),
    ... },
  serviceKey            [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
  gsmSCF-Address        [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  defaultSessionHandling [3] IMPLICIT ENUMERATED {
    continueTransaction     ( 0 ),
    releaseTransaction      ( 1 ),
    ... },
  extensionContainer     [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId    MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType   MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
      camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
      extensionContainer   [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
          extId    MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType   MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
          notificationToCSE  [3] IMPLICIT NULL OPTIONAL,
          csi-Active        [4] IMPLICIT NULL OPTIONAL,
          ... } OPTIONAL,
        mo-sms-CSI         [10] IMPLICIT SEQUENCE {
        sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
          sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
            sms-CollectedInfo ( 1 ),
            ... ,
            sms-DeliveryRequest ( 2 ),
            serviceKey           [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address        [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            defaultSMS-Handling   [3] IMPLICIT ENUMERATED {
              continueTransaction ( 0 ),
              releaseTransaction   ( 1 ),
              ... },
            extensionContainer    [4] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                extId    MAP-EXTENSION .&extensionId ( {
                  ,
                  ... } ),
                extType   MAP-EXTENSION .&ExtensionType ( {
                  ,
                  ... } { @extId } ) OPTIONAL} OPTIONAL,

```

```

    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
    camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
    extensionContainer     [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ... },
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                csi-Active       [4] IMPLICIT NULL OPTIONAL,
                ... } OPTIONAL,
            ss-CSI           [11] IMPLICIT SEQUENCE {
                ss-CamelData    SEQUENCE {
                    ss-EventList   SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        OCTET STRING ( SIZE( 1 ) ),
                    gsmSCF-Address  OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    extensionContainer [0] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ... },
                    extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ...
                                notificationToCSE [0] IMPLICIT NULL OPTIONAL,
                                csi-Active       [1] IMPLICIT NULL OPTIONAL} OPTIONAL,
                m-CSI             [12] IMPLICIT SEQUENCE {
                    mobilityTriggers SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        OCTET STRING ( SIZE( 1 ) ),
                    serviceKey        INTEGER ( 0 .. 2147483647 ),
                    gsmSCF-Address   [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    extensionContainer [1] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                notificationToCSE [2] IMPLICIT NULL OPTIONAL,
                                csi-Active       [3] IMPLICIT NULL OPTIONAL,
                                ... } OPTIONAL,
                    extensionContainer [13] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {

```



```

        ... } OPTIONAL,
        ... } OPTIONAL,
mg-csi           [17] IMPLICIT SEQUENCE {
    mobilityTriggers   SEQUENCE ( SIZE(1 .. 10) ) OF
        OCTET STRING ( SIZE(1 ) ),
    serviceKey         INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address     [0] IMPLICIT OCTET STRING ( SIZE(1 .. 20) )( SIZE(1 .. 9) ),
    extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }),
                extType    MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ...
            notificationToCSE [2] IMPLICIT NULL OPTIONAL,
            csi-Active       [3] IMPLICIT NULL OPTIONAL,
            ... } OPTIONAL,
o-IM-CSI          [18] IMPLICIT SEQUENCE {
o-BcsmCamelTDPDataList SEQUENCE ( SIZE(1 .. 10) ) OF
    SEQUENCE {
        o-BcsmTriggerDetectionPoint ENUMERATED {
            collectedInfo      ( 2 ),
            ...
            routeSelectFailure ( 4 ),
        serviceKey         INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address     [0] IMPLICIT OCTET STRING ( SIZE(1 .. 20) )( SIZE(1 .. 9) ),
        defaultCallHandling [1] IMPLICIT ENUMERATED {
            continueCall      ( 0 ),
            releaseCall       ( 1 ),
            ...
        },
        extensionContainer [2] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    }),
                    extType    MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ...
                    },
                    extensionContainer   SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    }),
                    extType    MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ...
                    },
                    camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                    notificationToCSE     [1] IMPLICIT NULL OPTIONAL,
                    csiActive             [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-IM-BcsmCamelTDP-CriteriaList [19] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
    SEQUENCE {
        o-BcsmTriggerDetectionPoint ENUMERATED {
            collectedInfo      ( 2 ),
            ...
            routeSelectFailure ( 4 ),
        destinationNumberCriteria [0] IMPLICIT SEQUENCE {
            matchType        [0] IMPLICIT ENUMERATED {
                inhibiting   ( 0 ),
                enabling     ( 1 ),
            },
            destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                OCTET STRING ( SIZE(1 .. 20) )( SIZE(1 .. 9) ) OPTIONAL,
            destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE(1 .. 3) ) OF
        }
    }
}

```

```

    INTEGER ( 1 .. 15 ) OPTIONAL,
... } OPTIONAL,
basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
  ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
callTypeCriteria [2] IMPLICIT ENUMERATED {
  forwarded ( 0 ),
  notForwarded ( 1 ) } OPTIONAL,
... ,
o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL } OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL } OPTIONAL,
d-IM-CSI [20] IMPLICIT SEQUENCE {
dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
    dialledNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceKey INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling ENUMERATED {
      continueCall ( 0 ),
      releaseCall ( 1 ),
      ... },
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL } OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ... } ),
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL } OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                    csi-Active [4] IMPLICIT NULL OPTIONAL,
                    ... } OPTIONAL,
vt-IM-CSI [21] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
    t-BcsmTriggerDetectionPoint ENUMERATED {
      termAttemptAuthorized ( 12 ),
      ... ,
      tBusy ( 13 ),
      tNoAnswer ( 14 ) },
    serviceKey INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling [1] IMPLICIT ENUMERATED {
      continueCall ( 0 ),
      releaseCall ( 1 ),
      ... },
    ...
  }
}

```

```

extensionContainer      [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
        SEQUENCE {
            extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType    MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
            ...
        },
        extensionContainer  SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType    MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                    ...
                },
                camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                notificationToCSE     [1] IMPLICIT NULL OPTIONAL,
                csi-Active           [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
                vt-IM-BCSM-CAMEL-TDP-CriteriaList [22] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                    SEQUENCE {
                        t-BCSM-TriggerDetectionPoint ENUMERATED {
                            termAttemptAuthorized ( 12 ),
                            ...
                            tBusy          ( 13 ),
                            tNoAnswer      ( 14 )},
                        basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
                            CHOICE {
                                ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE(1 .. 5) ),
                                ext-Teleservice   [3] IMPLICIT OCTET STRING ( SIZE(1 .. 5) ) OPTIONAL,
                                t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
                                    OCTET STRING ( SIZE(1) ) OPTIONAL,
                                    ...
                                } OPTIONAL} OPTIONAL,
                        supportedVLR-CAMEL-Phases [5] IMPLICIT BIT STRING {
                            phase1 (0),
                            phase2 (1),
                            phase3 (2),
                            phase4 (3)} ( SIZE(1 .. 16) ) OPTIONAL,
                        supportedSGSN-CAMEL-Phases [6] IMPLICIT BIT STRING {
                            phase1 (0),
                            phase2 (1),
                            phase3 (2),
                            phase4 (3)} ( SIZE(1 .. 16) ) OPTIONAL,
                        extensionContainer [7] IMPLICIT SEQUENCE {
                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                                SEQUENCE {
                                    extId      MAP-EXTENSION .&extensionId ( {
                                        ,
                                        ...
                                    } ),
                                    extType    MAP-EXTENSION .&ExtensionType ( {
                                        ,
                                        ...
                                    } { @extId } ) OPTIONAL} OPTIONAL,
                                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                                        ...
                                    } OPTIONAL,
                                    ...
                                    ...
                                },
                                offeredCamel4CSIsInVLR [8] IMPLICIT BIT STRING {
                                    o-csi (0),
                                    d-csi (1),
                                    vt-csi (2),
                                    t-csi (3),
                                    mt-sms-csi (4),
                                    mg-csi (5),
                                    psi-enhancements (6)} ( SIZE(7 .. 16) ) OPTIONAL,
                                offeredCamel4CSIsInSGSN [9] IMPLICIT BIT STRING {
                                    o-csi (0),
                                    d-csi (1),
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```



```

t-CSI      ( 1 ),
vt-CSI     ( 2 ),
tif-CSI    ( 3 ),
gprs-CSI   ( 4 ),
mo-sms-CSI ( 5 ),
ss-CSI     ( 6 ),
m-CSI      ( 7 ),
d-csi      ( 8 ),
modifyNotificationToCSE           [1] IMPLICIT ENUMERATED {
  deactivate ( 0 ),
  activate   ( 1 ) } OPTIONAL,
modifyCSI-State                   [2] IMPLICIT ENUMERATED {
  deactivate ( 0 ),
  activate   ( 1 ) } OPTIONAL,
extensionContainer                [3] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL } OPTIONAL,
  pcs-Extensions      [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
  ... } OPTIONAL,
  ... } OPTIONAL,
  ...
  additionalRequestedCAMEL-SubscriptionInfo [4] IMPLICIT ENUMERATED {
    mt-sms-CSI   ( 0 ),
    mg-csi       ( 1 ),
    o-IM-CSI     ( 2 ),
    d-IM-CSI     ( 3 ),
    vt-IM-CSI    ( 4 ),
    ... } OPTIONAL } OPTIONAL,
extensionContainer                 [5] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL } OPTIONAL,
  pcs-Extensions      [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
  ... } OPTIONAL,
longFTN-Supported                [6] IMPLICIT NULL OPTIONAL,
  ...
  modificationRequestFor-ODB-data [7] IMPLICIT SEQUENCE {
    odb-data      [0] IMPLICIT SEQUENCE {
      odb-GeneralData BIT STRING {
        allOG-CallsBarred ( 0 ),
        internationalOGCallsBarred ( 1 ),
        internationalOGCallsNotToHPLMN-CountryBarred ( 2 ),
        interzonalOGCallsBarred ( 6 ),
        interzonalOGCallsNotToHPLMN-CountryBarred ( 7 ),
        interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred ( 8 ),
        premiumRateInformationOGCallsBarred ( 3 ),
        premiumRateEntertainmentOGCallsBarred ( 4 ),
        ss-AccessBarred ( 5 ),
        allECT-Barred ( 9 ),
        chargeableECT-Barred ( 10 ),
        internationalECT-Barred ( 11 ),
        interzonalECT-Barred ( 12 ),
        doublyChargeableECT-Barred ( 13 ),
        multipleECT-Barred ( 14 ),
        allPacketOrientedServicesBarred ( 15 ),
        roamerAccessToHPLMN-AP-Barred ( 16 ),
        roamerAccessToVPLMN-AP-Barred ( 17 ),
        roamingOutsidePLMNOG-CallsBarred ( 18 ),
        allIIC-CallsBarred ( 19 ),
        roamingOutsidePLMNIC-CallsBarred ( 20 ),
        roamingOutsidePLMNICountryIIC-CallsBarred ( 21 ),
        roamingOutsidePLMN-Barred ( 22 ),
        roamingOutsidePLMN-CountryBarred ( 23 ),
        registrationAllCF-Barred ( 24 ),
        registrationCFNotToHPLMN-Barred ( 25 ),
        ...
      }
    }
  }
}

```

```

registrationInterzonalCF-Barred (26),
registrationInterzonalCFNotToHPLMN-Barred (27),
registrationInternationalCF-Barred (28}) ( SIZE( 15 .. 32 ) ),
odb-HPLMN-Data BIT STRING {
    plmn-SpecificBarringType1 (0),
    plmn-SpecificBarringType2 (1),
    plmn-SpecificBarringType3 (2),
    plmn-SpecificBarringType4 (3}) ( SIZE( 4 .. 32 ) ) OPTIONAL,
extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ({
                ,
                ...
            }),
            extType MAP-EXTENSION .&ExtensionType ({
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
} OPTIONAL,
...
} OPTIONAL,
modifyNotificationToCSE [1] IMPLICIT ENUMERATED {
    deactivate (0),
    activate (1) } OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ({
                ,
                ...
            }),
            extType MAP-EXTENSION .&ExtensionType ({
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
} OPTIONAL,
...
} OPTIONAL)
RESULT SEQUENCE {
    ss-InfoFor-CSE [0] CHOICE {
        forwardingInfoFor-CSE [0] IMPLICIT SEQUENCE {
            ss-Code [0] IMPLICIT OCTET STRING ( SIZE( 1 )),
            forwardingFeatureList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 32 ) ) OF
                SEQUENCE {
                    basicService CHOICE {
                        ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 )),
                        ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 )) } OPTIONAL,
                    ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 )),
                    forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 )) ( SIZE( 1 .. 9 )) OPTIONAL,
                    forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 )) OPTIONAL,
                    forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 )) OPTIONAL,
                    noReplyConditionTime [7] IMPLICIT INTEGER ( 1 .. 100 ) OPTIONAL,
                    extensionContainer [9] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ({
                                    ,
                                    ...
                                }),
                                extType MAP-EXTENSION .&ExtensionType ({
                                    ,
                                    ...
                                }) { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                },
                longForwardedToNumber [10] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 )) ( SIZE( 1 .. 15 )) OPTIONAL},
        notificationToCSE [2] IMPLICIT NULL OPTIONAL,
        extensionContainer [3] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ({
                        ,
                        ...
                    }),
                    extType MAP-EXTENSION .&ExtensionType ({
                        ,
                        ...
                    }) { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                }
            }
        }
    }
}

```

```

... } OPTIONAL,
... },
callBarringInfoFor-CSE [1] IMPLICIT SEQUENCE {
    ss-Code [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    callBarringFeatureList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 32 ) ) OF
        SEQUENCE {
            basicService CHOICE {
                ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
                ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
                ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        },
        password [2] IMPLICIT NumericString ( FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9" ) ) (SIZE( 4 ) ) OPTIONAL,
        wrongPasswordAttemptsCounter [3] IMPLICIT INTEGER ( 0 .. 4 ) OPTIONAL,
        notificationToCSE [4] IMPLICIT NULL OPTIONAL,
        extensionContainer [5] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
camel-SubscriptionInfo [1] IMPLICIT SEQUENCE {
    o-CSI [0] IMPLICIT SEQUENCE {
        o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                o-BcsmTriggerDetectionPoint ENUMERATED {
                    collectedInfo ( 2 ),
                    ...
                    routeSelectFailure ( 4 ),
                    serviceKey INTEGER ( 0 .. 2147483647 ),
                    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    defaultCallHandling [1] IMPLICIT ENUMERATED {
                        continueCall ( 0 ),
                        releaseCall ( 1 ),
                        ...
                    },
                    extensionContainer [2] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ),
                                extType MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            } },
                            ...
                        } },
                        extensionContainer SEQUENCE {
                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    extId MAP-EXTENSION .&extensionId ( {
                                        ,
                                        ...
                                    } ),
                                    extType MAP-EXTENSION .&ExtensionType ( {
                                        ,
                                        ...
                                    } { @extId } ) OPTIONAL} OPTIONAL,
                                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                                        ...
                                    } OPTIONAL,
                                ...
                            } },
                            ...
                        } },
                        ...
                    } },
                    ...
                } },
                ...
            } },
            ...
        } },
        ...
    } },
    ...
}

```



```

... } OPTIONAL,
notificationToCSE      [3] IMPLICIT NULL OPTIONAL,
csi-Active           [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
t-CSI                 [3] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BcsmTriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
... ,
tBusy                ( 13 ),
tNoAnswer             ( 14 ) },
serviceKey             INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address        [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling    [1] IMPLICIT ENUMERATED {
continueCall          ( 0 ),
releaseCall           ( 1 ),
... },
extensionContainer     [2] IMPLICIT SEQUENCE {
privateExtensionList  [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
... },
extType   MAP-EXTENSION .&ExtensionType ( {
... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions        [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer     SEQUENCE {
privateExtensionList  [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId    MAP-EXTENSION .&extensionId ( {
... },
extType   MAP-EXTENSION .&ExtensionType ( {
... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions        [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE      [1] IMPLICIT NULL OPTIONAL,
csi-Active           [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
t-BCSM-CAMEL-TDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BCSM-TriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
... ,
tBusy                ( 13 ),
tNoAnswer             ( 14 ) },
basicServiceCriteria   [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
ext-BearerService     [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Telbservice       [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
... } OPTIONAL,
vt-CSI                 [5] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BcsmTriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
... ,
tBusy                ( 13 ),
tNoAnswer             ( 14 ) },
serviceKey             INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address        [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling    [1] IMPLICIT ENUMERATED {
continueCall          ( 0 ),
releaseCall           ( 1 ),
... },
extensionContainer     [2] IMPLICIT SEQUENCE {
privateExtensionList  [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF

```

```

SEQUENCE {
    extId   MAP-EXTENSION.&extensionId ({
        ,
        ...
    }),
    extType  MAP-EXTENSION.&ExtensionType ({
        ,
        ...
    }) { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
} OPTIONAL,
...
},
extensionContainer  SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION.&extensionId ({
                ,
                ...
            }),
            extType  MAP-EXTENSION.&ExtensionType ({
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
} OPTIONAL,
...
},
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE [1] IMPLICIT NULL OPTIONAL,
csi-Active [2] IMPLICIT NULL OPTIONAL) OPTIONAL,
vt-BCSM-CAMEL-TDP-CriteriaList [6] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
        t-BCSM-TriggerDetectionPoint ENUMERATED {
            termAttemptAuthorized ( 12 ),
            ...
            tBusy ( 13 ),
            tNoAnswer ( 14 ),
        },
        basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
            CHOICE {
                ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
                ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
                t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
                    OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    ...
} OPTIONAL,
        tif-CSI [7] IMPLICIT NULL OPTIONAL,
        tif-CSI-NotificationToCSE [8] IMPLICIT NULL OPTIONAL,
        gprs-CSI [9] IMPLICIT SEQUENCE {
            gprs-CamelTDPDataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    gprs-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
                        attach ( 1 ),
                        attachChangeOfPosition ( 2 ),
                        pdp-ContextEstablishment ( 11 ),
                        pdp-ContextEstablishmentAcknowledgement ( 12 ),
                        pdp-ContextChangeOfPosition ( 14 ),
                        ...
                    },
                    serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
                    gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    defaultSessionHandling [3] IMPLICIT ENUMERATED {
                        continueTransaction ( 0 ),
                        releaseTransaction ( 1 ),
                        ...
                    },
                    extensionContainer [4] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION.&extensionId ({
                                    ,
                                    ...
                                }),
                                extType  MAP-EXTENSION.&ExtensionType ({
                                    ,
                                    ...
                                }) { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
} OPTIONAL,
                    camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                    extensionContainer [2] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION.&extensionId ({
```

```

```

        ,
        ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        notificationToCSE [3] IMPLICIT NULL OPTIONAL,
        csi-Active [4] IMPLICIT NULL OPTIONAL,
        ... } OPTIONAL,
        mo-sms-CSI [10] IMPLICIT SEQUENCE {
        sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
        sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
        sms-CollectedInfo ( 1 ),
        ... ,
        sms-DeliveryRequest ( 2 ),
        serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        defaultSMS-Handling [3] IMPLICIT ENUMERATED {
        continueTransaction ( 0 ),
        releaseTransaction ( 1 ),
        ... },
        extensionContainer [4] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
        ,
        ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
        camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
        extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
        ,
        ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        notificationToCSE [3] IMPLICIT NULL OPTIONAL,
        csi-Active [4] IMPLICIT NULL OPTIONAL,
        ... } OPTIONAL,
        ss-CSI [11] IMPLICIT SEQUENCE {
        ss-CamelData SEQUENCE {
        ss-EventList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        OCTET STRING ( SIZE( 1 ) ),
        gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        extensionContainer [0] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
        ,
        ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
        extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
        ,
        ...}),
        ...
      
```

```

extType MAP-EXTENSION.&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
...
notificationToCSE [0] IMPLICIT NULL OPTIONAL,
csi-Active [1] IMPLICIT NULL OPTIONAL} OPTIONAL,
m-CSI [12] IMPLICIT SEQUENCE {
mobilityTriggers SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    OCTET STRING ( SIZE( 1 ) ),
serviceKey INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
extensionContainer [1] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
            ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
            ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
    notificationToCSE [2] IMPLICIT NULL OPTIONAL,
    csi-Active [3] IMPLICIT NULL OPTIONAL,
    ... } OPTIONAL,
extensionContainer [13] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
        extId MAP-EXTENSION.&extensionId ( {
            ...}),
        extType MAP-EXTENSION.&ExtensionType ( {
            ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
...
specificCSIDeletedList [14] IMPLICIT BIT STRING {
o-csi (0),
ss-csi (1),
tif-csi (2),
d-csi (3),
vt-csi (4),
mo-sms-csi (5),
m-csi (6),
gprs-csi (7),
t-csi (8),
mt-sms-csi (9),
mg-csi (10),
o-IM-CSI (11),
d-IM-CSI (12),
vt-IM-CSI (13) ( SIZE( 8 .. 32 ) ) OPTIONAL,
mt-sms-CSI [15] IMPLICIT SEQUENCE {
sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
        sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
            sms-CollectedInfo ( 1 ),
            ...
            sms-DeliveryRequest ( 2 ),
            serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            defaultSMS-Handling [3] IMPLICIT ENUMERATED {
                continueTransaction ( 0 ),
                releaseTransaction ( 1 ),
                ...
            },
            extensionContainer [4] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION.&extensionId ( {
                            ...
                            ...}),
                        extType MAP-EXTENSION.&ExtensionType ( {
                            ...
                            ...}),
                        ...
                    },
                    ...
                }
            }
        }
    }
}

```

```

        ... } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer     [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ... } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ... } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
notificationToCSE      [3] IMPLICIT NULL OPTIONAL,
csi-Active             [4] IMPLICIT NULL OPTIONAL,
        ... } OPTIONAL,
mt-smsCAMELTDP-CriteriaList [16] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    sms-TriggerDetectionPoint ENUMERATED {
        sms-CollectedInfo ( 1 ),
        ...
        sms-DeliveryRequest ( 2 ),
    tpdu-TypeCriterion [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        ENUMERATED {
            sms-DELIVER      ( 0 ),
            sms-SUBMIT-REPORT ( 1 ),
            sms-STATUS-REPORT ( 2 ),
            ... } OPTIONAL,
        ... } OPTIONAL,
    mg-csi                 [17] IMPLICIT SEQUENCE {
        mobilityTriggers  SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            OCTET STRING ( SIZE( 1 ) ),
        serviceKey         INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address     [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ... } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ... } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
notificationToCSE      [2] IMPLICIT NULL OPTIONAL,
csi-Active             [3] IMPLICIT NULL OPTIONAL,
        ... } OPTIONAL,
o-IM-CSI                 [18] IMPLICIT SEQUENCE {
o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    o-BcsmTriggerDetectionPoint ENUMERATED {
        collectedInfo ( 2 ),
        ...
        routeSelectFailure ( 4 ),
    serviceKey         INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address     [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling [1] IMPLICIT ENUMERATED {
        continueCall ( 0 ),
        releaseCall   ( 1 ),
        ...
    },
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ... } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ... } { @extId } ) OPTIONAL} OPTIONAL,
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
    
```

```

    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
extensionContainer   SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    extId   MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
    extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
        notificationToCSE     [1] IMPLICIT NULL OPTIONAL,
        csiActive            [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-IM-BcsmCamelTDP-CriteriaList [19] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    o-BcsmTriggerDetectionPoint ENUMERATED {
        collectedInfo      ( 2 ),
        ...
        routeSelectFailure ( 4 ),
destinationNumberCriteria [0] IMPLICIT SEQUENCE {
    matchType          [0] IMPLICIT ENUMERATED {
        inhibiting      ( 0 ),
        enabling        ( 1 ),
destinationNumberList     [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
    INTEGER ( 1 .. 15 ) OPTIONAL,
    ...
    } OPTIONAL,
basicServiceCriteria      [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
    ext-BearerService  [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
    ext-Teleservice    [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
callTypeCriteria         [2] IMPLICIT ENUMERATED {
        forwarded      ( 0 ),
        notForwarded   ( 1 ) } OPTIONAL,
        ...
        o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
    OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer        [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL} OPTIONAL,
d-IM-CSI               [20] IMPLICIT SEQUENCE {
dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    dialledNumber      OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceKey        INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling ENUMERATED {
        continueCall   ( 0 ),
        releaseCall    ( 1 ),
        ...
    },
extensionContainer   SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {

```

```

        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
        ... } OPTIONAL,
vt-IM-CSI [21] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BcsmTriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
        ,
tBusy ( 13 ),
tNoAnswer ( 14 ),
serviceKey INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling [1] IMPLICIT ENUMERATED {
continueCall ( 0 ),
releaseCall ( 1 ),
        },
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... },
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE [1] IMPLICIT NULL OPTIONAL,
csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
vt-IM-BCSM-CAMEL-TDP-CriteriaList [22] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BCSM-TriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
        ,
tBusy ( 13 ),
tNoAnswer ( 14 ),
basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ... } OPTIONAL} OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {

```

```

privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...
  } ),
  extType  MAP-EXTENSION .&ExtensionType ( {
    ...
  } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
} OPTIONAL,
...,

odb-Info      [3] IMPLICIT SEQUENCE {
  odb-Data      SEQUENCE {
    odb-GeneralData  BIT STRING {
      allOG-CallsBarred (0),
      internationalOGCallsBarred (1),
      internationalOGCallsNotToHPLMN-CountryBarred (2),
      interzonalOGCallsBarred (6),
      interzonalOGCallsNotToHPLMN-CountryBarred (7),
      interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred (8),
      premiumRateInformationOGCallsBarred (3),
      premiumRateEntertainmentOGCallsBarred (4),
      ss-AccessBarred (5),
      allECT-Barred (9),
      chargeableECT-Barred (10),
      internationalECT-Barred (11),
      interzonalECT-Barred (12),
      doublyChargeableECT-Barred (13),
      multipleECT-Barred (14),
      allPacketOrientedServicesBarred (15),
      roamerAccessToHPLMN-AP-Barred (16),
      roamerAccessToVPLMN-AP-Barred (17),
      roamingOutsidePLMNOG-CallsBarred (18),
      allIC-CallsBarred (19),
      roamingOutsidePLMNIC-CallsBarred (20),
      roamingOutsidePLMNICCountryIC-CallsBarred (21),
      roamingOutsidePLMN-Barred (22),
      roamingOutsidePLMN-CountryBarred (23),
      registrationAllCF-Barred (24),
      registrationCFNotToHPLMN-Barred (25),
      registrationInterzonalCF-Barred (26),
      registrationInterzonalCFNotToHPLMN-Barred (27),
      registrationInternationalCF-Barred (28)} ( SIZE( 15 .. 32 ) ),
  odb-HPLMN-Data  BIT STRING {
    plmn-SpecificBarringType1 (0),
    plmn-SpecificBarringType2 (1),
    plmn-SpecificBarringType3 (2),
    plmn-SpecificBarringType4 (3)} ( SIZE( 4 .. 32 ) ) OPTIONAL,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } },
    notificationToCSE NULL OPTIONAL,
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...
        } OPTIONAL,
        ...
      } OPTIONAL,
      ...
    } },
    ERRORS  {

```

```

atm-NotAllowed |
dataMissing |
unexpectedDataValue |
unknownSubscriber |
bearerServiceNotProvisioned |
teleserviceNotProvisioned |
callBarred |
illegalSS-Operation |
ss-SubscriptionViolation |
ss-ErrorStatus |
ss-Incompatibility |
informationNotAvailable }

CODE local : 65
}

noteSubscriberDataModified OPERATION ::= {
ARGUMENT SEQUENCE {
    imsi          OCTET STRING ( SIZE(3 .. 8 ) ),
    msisdn        OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ),
    forwardingInfoFor-CSE [0] IMPLICIT SEQUENCE {
        ss-Code        [0] IMPLICIT OCTET STRING ( SIZE(1 ) ),
        forwardingFeatureList [1] IMPLICIT SEQUENCE ( SIZE(1 .. 32 ) ) OF
            SEQUENCE {
                basicService CHOICE {
                    ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ),
                    ext-Teleservice  [3] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ) } OPTIONAL,
                    ss-Status       [4] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ),
                    forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ) OPTIONAL,
                    forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE(1 .. 21 ) ) OPTIONAL,
                    forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ) OPTIONAL,
                    noReplyConditionTime [7] IMPLICIT INTEGER ( 1 .. 100 ) OPTIONAL,
                    extensionContainer [9] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ) ,
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            } OPTIONAL,
                            ...
                        } OPTIONAL,
                        ...
                    longForwardedToNumber [10] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 15 ) ) OPTIONAL,
                    notificationToCSE [2] IMPLICIT NULL OPTIONAL,
                    extensionContainer [3] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ) ,
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            } OPTIONAL,
                            ...
                        } OPTIONAL,
                        ...
                    callBarringInfoFor-CSE [1] IMPLICIT SEQUENCE {
                        ss-Code        [0] IMPLICIT OCTET STRING ( SIZE(1 ) ),
                        callBarringFeatureList [1] IMPLICIT SEQUENCE ( SIZE(1 .. 32 ) ) OF
                            SEQUENCE {
                                basicService CHOICE {
                                    ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ),
                                    ext-Teleservice  [3] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ) } OPTIONAL,
                                    ss-Status       [4] IMPLICIT OCTET STRING ( SIZE(1 .. 5 ) ),
                                    extensionContainer SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
  SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
  } ) ,
  extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
  } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
  } OPTIONAL,
  ...
  } OPTIONAL,
  ...
  } OPTIONAL,
  ...
                                    } OPTIONAL,
                                    ...
                                } OPTIONAL,
                                ...
                            } OPTIONAL,
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
}

```

```

    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
password      [2] IMPLICIT NumericString ( FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9" )) (SIZE( 4 ) ) OPTIONAL,
wrongPasswordAttemptsCounter [3] IMPLICIT INTEGER ( 0 .. 4 ) OPTIONAL,
notificationToCSE      [4] IMPLICIT NULL OPTIONAL,
extensionContainer     [5] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
odb-Info       [2] IMPLICIT SEQUENCE {
odb-Data        SEQUENCE {
odb-GeneralData BIT STRING {
allOG-CallsBarred (0),
internationalOGCallsBarred (1),
internationalOGCallsNotToHPLMN-CountryBarred (2),
interzonalOGCallsBarred (6),
interzonalOGCallsNotToHPLMN-CountryBarred (7),
interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred (8),
premiumRateInformationOGCallsBarred (3),
premiumRateEntertainementOGCallsBarred (4),
ss-AccessBarred (5),
allECT-Barred (9),
chargeableECT-Barred (10),
internationalECT-Barred (11),
interzonalECT-Barred (12),
doublyChargeableECT-Barred (13),
multipleECT-Barred (14),
allPacketOrientedServicesBarred (15),
roamerAccessToHPLMN-AP-Barred (16),
roamerAccessToVPLMN-AP-Barred (17),
roamingOutsidePLMNOG-CallsBarred (18),
allIC-CallsBarred (19),
roamingOutsidePLMNIC-CallsBarred (20),
roamingOutsidePLMNICCountryIC-CallsBarred (21),
roamingOutsidePLMN-Barred (22),
roamingOutsidePLMN-CountryBarred (23),
registrationAllCF-Barred (24),
registrationCFNotToHPLMN-Barred (25),
registrationInterzonalCF-Barred (26),
registrationInterzonalCFNotToHPLMN-Barred (27),
registrationInternationalCF-Barred (28 }) ( SIZE( 15 .. 32 ) ),
odb-HPLMN-Data  BIT STRING {
plmn-SpecificBarringType1 (0),
plmn-SpecificBarringType2 (1),
plmn-SpecificBarringType3 (2),
plmn-SpecificBarringType4 (3)) ( SIZE( 4 .. 32 ) ) OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
notificationToCSE NULL OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} ),

```

```

... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
camel-SubscriptionInfo [3] IMPLICIT SEQUENCE {
o-CSI [0] IMPLICIT SEQUENCE {
o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
o-BcsmTriggerDetectionPoint ENUMERATED {
collectedInfo ( 2 ),
... ,
routeSelectFailure ( 4 ),
serviceKey INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling [1] IMPLICIT ENUMERATED {
continueCall ( 0 ),
releaseCall ( 1 ),
... },
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
, ...
...}),
extType MAP-EXTENSION .&ExtensionType ( {
, ...
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
, ...
...}),
extType MAP-EXTENSION .&ExtensionType ( {
, ...
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... ,
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE [1] IMPLICIT NULL OPTIONAL,
csiActive [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-BcsmCamelTDP-CriteriaList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
o-BcsmTriggerDetectionPoint ENUMERATED {
collectedInfo ( 2 ),
... ,
routeSelectFailure ( 4 ),
destinationNumberCriteria [0] IMPLICIT SEQUENCE {
matchType [0] IMPLICIT ENUMERATED {
inhibiting ( 0 ),
enabling ( 1 ),
destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
INTEGER ( 1 .. 15 ) OPTIONAL,
... } OPTIONAL,
basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
callTypeCriteria [2] IMPLICIT ENUMERATED {
forwarded ( 0 ),
notForwarded ( 1 ) } OPTIONAL,
... ,
o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {

```

```

extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
    ... } OPTIONAL,
    ... } OPTIONAL} OPTIONAL,
d-CSI      [2] IMPLICIT SEQUENCE {
dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    dialledNumber     OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceKey        INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling ENUMERATED {
        continueCall ( 0 ),
        releaseCall ( 1 ),
        ...
    },
extensionContainer  SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
        extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
            ... } OPTIONAL,
            ... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
t-CSI      [3] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    t-BcsmTriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy             ( 13 ),
        tNoAnswer         ( 14 ),
        serviceKey        INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address    [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        defaultCallHandling [1] IMPLICIT ENUMERATED {
            continueCall ( 0 ),
            releaseCall ( 1 ),
            ...
        },
        extensionContainer [2] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ...
            },
            extensionContainer  SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF

```

```

SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ({
    ,
    ...}),
  extType  MAP-EXTENSION .&ExtensionType ({
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
  ... } OPTIONAL,
  ... },
  camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
  notificationToCSE [1] IMPLICIT NULL OPTIONAL,
  csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
t-BCSM-CAMEL-TDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  t-BCSM-TriggerDetectionPoint ENUMERATED {
    termAttemptAuthorized ( 12 ),
    ...
    tBusy ( 13 ),
    tNoAnswer ( 14 )},
  basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  CHOICE {
    ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
    ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
  t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
    OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  ... } OPTIONAL,
  vt-CSl [5] IMPLICIT SEQUENCE {
  t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  t-BcsmTriggerDetectionPoint ENUMERATED {
    termAttemptAuthorized ( 12 ),
    ...
    tBusy ( 13 ),
    tNoAnswer ( 14 )},
  serviceKey INTEGER ( 0 .. 2147483647 ),
  gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  defaultCallHandling [1] IMPLICIT ENUMERATED {
    continueCall ( 0 ),
    releaseCall ( 1 ),
    ...
  },
  extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ({
        ,
        ...}),
      extType  MAP-EXTENSION .&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
      ... } OPTIONAL,
      ... },
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ({
          ,
          ...}),
        extType  MAP-EXTENSION .&ExtensionType ({
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      },
      camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
      notificationToCSE [1] IMPLICIT NULL OPTIONAL,
      csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
  vt-BCSM-CAMEL-TDP-CriteriaList [6] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  t-BCSM-TriggerDetectionPoint ENUMERATED {
    termAttemptAuthorized ( 12 ),
    ...
    tBusy ( 13 ),
  }
}

```

```

tNoAnswer      ( 14 ) },
basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
  ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Telbservice  [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  ... } OPTIONAL,
tif-CSI        [7] IMPLICIT NULL OPTIONAL,
tif-CSI-NotificationToCSE [8] IMPLICIT NULL OPTIONAL,
gprs-CSI       [9] IMPLICIT SEQUENCE {
  gprs-CamelTDPDataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  gprs-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
    attach                  ( 1 ),
    attachChangeOfPosition   ( 2 ),
    pdp-ContextEstablishment ( 11 ),
    pdp-ContextEstablishmentAcknowledgement ( 12 ),
    pdp-ContextChangeOfPosition ( 14 ),
    ... },
  serviceKey            [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
  gsmSCF-Address        [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  defaultSessionHandling [3] IMPLICIT ENUMERATED {
    continueTransaction     ( 0 ),
    releaseTransaction      ( 1 ),
    ... },
  extensionContainer     [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId    MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType   MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
      camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
      extensionContainer   [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
          extId    MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType   MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
          notificationToCSE  [3] IMPLICIT NULL OPTIONAL,
          csi-Active        [4] IMPLICIT NULL OPTIONAL,
          ... } OPTIONAL,
        mo-sms-CSI         [10] IMPLICIT SEQUENCE {
        sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
          sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
            sms-CollectedInfo ( 1 ),
            ... ,
            sms-DeliveryRequest ( 2 ),
            serviceKey           [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address        [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            defaultSMS-Handling   [3] IMPLICIT ENUMERATED {
              continueTransaction ( 0 ),
              releaseTransaction   ( 1 ),
              ... },
            extensionContainer     [4] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                extId    MAP-EXTENSION .&extensionId ( {
                  ,
                  ... } ),
                extType   MAP-EXTENSION .&ExtensionType ( {
                  ,
                  ... } { @extId } ) OPTIONAL} OPTIONAL,

```

```

    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
    camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
    extensionContainer     [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ... },
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                notificationToCSE  [3] IMPLICIT NULL OPTIONAL,
                csi-Active        [4] IMPLICIT NULL OPTIONAL,
                ... } OPTIONAL,
            ss-CSI             [11] IMPLICIT SEQUENCE {
                ss-CamelData     SEQUENCE {
                    ss-EventList    SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        OCTET STRING ( SIZE( 1 ) ),
                    gsmSCF-Address   OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    extensionContainer [0] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ... },
                    extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ...
                                notificationToCSE  [0] IMPLICIT NULL OPTIONAL,
                                csi-Active        [1] IMPLICIT NULL OPTIONAL} OPTIONAL,
                m-CSI              [12] IMPLICIT SEQUENCE {
                    mobilityTriggers  SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        OCTET STRING ( SIZE( 1 ) ),
                    serviceKey         INTEGER ( 0 .. 2147483647 ),
                    gsmSCF-Address   [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                    extensionContainer [1] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ... },
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ... } { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                notificationToCSE  [2] IMPLICIT NULL OPTIONAL,
                                csi-Active        [3] IMPLICIT NULL OPTIONAL,
                                ... } OPTIONAL,
                    extensionContainer       [13] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {

```



```

        ... } OPTIONAL,
        ... } OPTIONAL,
mg-csi           [17] IMPLICIT SEQUENCE {
    mobilityTriggers   SEQUENCE ( SIZE(1 .. 10) ) OF
        OCTET STRING ( SIZE(1 ) ),
        serviceKey      INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address  [0] IMPLICIT OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ),
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                        ,
                        ... } ),
                    extType    MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ... } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        notificationToCSE [2] IMPLICIT NULL OPTIONAL,
                        csi-Active     [3] IMPLICIT NULL OPTIONAL,
                        ... } OPTIONAL,
o-IM-CSI          [18] IMPLICIT SEQUENCE {
o-BcsmCamelTDPDataList SEQUENCE ( SIZE(1 .. 10) ) OF
    SEQUENCE {
        o-BcsmTriggerDetectionPoint ENUMERATED {
            collectedInfo   ( 2 ),
            ...
            routeSelectFailure ( 4 ),
            serviceKey      INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address  [0] IMPLICIT OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ),
            defaultCallHandling [1] IMPLICIT ENUMERATED {
                continueCall   ( 0 ),
                releaseCall    ( 1 ),
                ...
            },
            extensionContainer [2] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                    SEQUENCE {
                        extId      MAP-EXTENSION .&extensionId ( {
                            ,
                            ... } ),
                        extType    MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ... } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ...
            },
            extensionContainer   SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                    SEQUENCE {
                        extId      MAP-EXTENSION .&extensionId ( {
                            ,
                            ... } ),
                        extType    MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ... } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ...
            },
            camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
            notificationToCSE     [1] IMPLICIT NULL OPTIONAL,
            csiActive       [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-IM-BcsmCamelTDP-CriteriaList [19] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
    SEQUENCE {
        o-BcsmTriggerDetectionPoint ENUMERATED {
            collectedInfo   ( 2 ),
            ...
            routeSelectFailure ( 4 ),
            destinationNumberCriteria [0] IMPLICIT SEQUENCE {
                matchType      [0] IMPLICIT ENUMERATED {
                    inhibiting   ( 0 ),
                    enabling     ( 1 ) },
                destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
                    OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ) OPTIONAL,
                destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE(1 .. 3) ) OF

```

```

    INTEGER ( 1 .. 15 ) OPTIONAL,
... } OPTIONAL,
basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
CHOICE {
  ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
callTypeCriteria [2] IMPLICIT ENUMERATED {
  forwarded ( 0 ),
  notForwarded ( 1 ) } OPTIONAL,
... ,
o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId MAP-EXTENSION .&extensionId ( {
        ,
        ... } ),
      extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL } OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL } OPTIONAL,
d-IM-CSI [20] IMPLICIT SEQUENCE {
dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
    dialledNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceKey INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling ENUMERATED {
      continueCall ( 0 ),
      releaseCall ( 1 ),
      ... },
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL } OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ... } ),
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL } OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                    csi-Active [4] IMPLICIT NULL OPTIONAL,
                    ... } OPTIONAL,
vt-IM-CSI [21] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
    t-BcsmTriggerDetectionPoint ENUMERATED {
      termAttemptAuthorized ( 12 ),
      ... ,
      tBusy ( 13 ),
      tNoAnswer ( 14 ) },
    serviceKey INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling [1] IMPLICIT ENUMERATED {
      continueCall ( 0 ),
      releaseCall ( 1 ),
      ... },
    ...
  }
}

```

```

extensionContainer      [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
        SEQUENCE {
            extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...
            }) ,
            extType    MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
},
extensionContainer      SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
        SEQUENCE {
            extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...
            }) ,
            extType    MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
},
...
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE      [1] IMPLICIT NULL OPTIONAL,
csi-Active              [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
vt-IM-BCSM-CAMEL-TDP-CriteriaList [22] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
    t-BCSM-TriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy             ( 13 ),
        tNoAnswer         ( 14 )),
    basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
        CHOICE {
            ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE(1 .. 5) ),
            ext-Teleservice   [3] IMPLICIT OCTET STRING ( SIZE(1 .. 5) )) OPTIONAL,
        t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
            OCTET STRING ( SIZE(1 )) OPTIONAL,
            ...
        } OPTIONAL} OPTIONAL,
    allInformationSent [4] IMPLICIT NULL OPTIONAL,
    extensionContainer  SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }) ,
                extType    MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        },
        ...
    }
RESULT    SEQUENCE {
    extensionContainer  SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
            SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }) ,
                extType    MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions      [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        }
ERRORS   {
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber }
CODE     local   :5
}

```

```

prepareHandover OPERATION ::= {
  ARGUMENT [3] IMPLICIT SEQUENCE {
    targetCellId [0] IMPLICIT OCTET STRING ( SIZE( 5 .. 7 ) ) OPTIONAL,
    ho-NumberNotRequired NULL OPTIONAL,
    targetRNCellId [1] IMPLICIT OCTET STRING ( SIZE( 7 ) ) OPTIONAL,
    an-APDU [2] IMPLICIT SEQUENCE {
      accessNetworkProtocolId ENUMERATED {
        ts3G-48006 ( 1 ),
        ts3G-25413 ( 2 ),
        ...
      },
      signalInfo OCTET STRING ( SIZE( 1 .. 2560 ) ),
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ,
              ...
            }) ,
            extType MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ... } OPTIONAL,
          ... } OPTIONAL,
          multipleBearerRequested [3] IMPLICIT NULL OPTIONAL,
          imsi [4] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
          integrityProtectionInfo [5] IMPLICIT OCTET STRING ( SIZE( 18 .. 100 ) ) OPTIONAL,
          encryptionInfo [6] IMPLICIT OCTET STRING ( SIZE( 18 .. 100 ) ) OPTIONAL,
          radioResourceInformation [7] IMPLICIT OCTET STRING ( SIZE( 3 .. 13 ) ) OPTIONAL,
          allowedGSM-Algorithms [9] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
          allowedUMTS-Algorithms [10] IMPLICIT SEQUENCE {
            integrityProtectionAlgorithms [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
            encryptionAlgorithms [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                  }) ,
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                  }) { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                  ... } OPTIONAL,
                  ... } OPTIONAL,
                  ... } OPTIONAL,
                  ... } OPTIONAL,
                  radioResourceList [11] IMPLICIT SEQUENCE ( SIZE( 1 .. 7 ) ) OF
                    SEQUENCE {
                      radioResourceInformation OCTET STRING ( SIZE( 3 .. 13 ) ),
                      rab-Id INTEGER ( 1 .. 255 ),
                      ...
                    } OPTIONAL,
                    extensionContainer [8] IMPLICIT SEQUENCE {
                      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        SEQUENCE {
                          extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                          }) ,
                          extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                          }) { @extId } ) OPTIONAL} OPTIONAL,
                          pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ...
                            rab-Id [12] IMPLICIT INTEGER ( 1 .. 255 ) OPTIONAL,
                            bssmap-ServiceHandover [13] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                            ranap-ServiceHandover [14] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                            bssmap-ServiceHandoverList [15] IMPLICIT SEQUENCE ( SIZE( 1 .. 7 ) ) OF
                              SEQUENCE {
                                bssmap-ServiceHandover OCTET STRING ( SIZE( 1 ) ),
                                rab-Id INTEGER ( 1 .. 255 ),
                                ...
                              } OPTIONAL,
                              asciCallReference [20] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ) OPTIONAL,
                              geran-classmark [16] IMPLICIT OCTET STRING ( SIZE( 2 .. 87 ) ) OPTIONAL,
                              currentlyUsedCodec [17] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
                              availableCodecsList [18] IMPLICIT SEQUENCE {

```

```

  utranCodecList [0] IMPLICIT SEQUENCE {
    codec1      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ),
    codec2      [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec3      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec4      [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec5      [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec6      [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec7      [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    codec8      [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
    extensionContainer [9] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId      MAP-EXTENSION .&extensionId ( {
            ,
            ...} ),
          extType     MAP-EXTENSION .&ExtensionType ( {
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
      geranCodecList [1] IMPLICIT SEQUENCE {
        codec1      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ),
        codec2      [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec3      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec4      [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec5      [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec6      [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec7      [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec8      [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        extensionContainer [9] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
              extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...} ),
              extType     MAP-EXTENSION .&ExtensionType ( {
                ,
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ... } OPTIONAL,
              ... } OPTIONAL,
              ... } OPTIONAL,
              ... } OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
                  extType     MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    rab-ConfigurationIndicator [19] IMPLICIT NULL OPTIONAL}
      RESULT [3] IMPLICIT SEQUENCE {
        handoverNumber [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        relocationNumberList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 7 ) ) OF
          SEQUENCE {
            handoverNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            rab-Id        INTEGER ( 1 .. 255 ),
            ... } OPTIONAL,
            an-APDU       [2] IMPLICIT SEQUENCE {
              accessNetworkProtocolId ENUMERATED {
                ts3G-48006 ( 1 ),
                ts3G-25413 ( 2 ),
                ... },
              signallInfo   OCTET STRING ( SIZE( 1 .. 2560 ) ),
              extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                  SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                      ,
                      ...} ),
                    ...
                  }
                }
              }
            }
          }
        }
      }
    }
  }
}

```

```

extType MAP-EXTENSION .&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
multicallBearerInfo [3] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL,
multipleBearerNotSupported NULL OPTIONAL,
selectedUMTS-Algorithms [5] IMPLICIT SEQUENCE {
    integrityProtectionAlgorithm [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    encryptionAlgorithm [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
chosenRadioResourceInformation [6] IMPLICIT SEQUENCE {
    chosenChannelInfo [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    chosenSpeechVersion [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    ... } OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ,
                ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
selectedCodec [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL}
ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    noHandoverNumberAvailable |
    targetCellOutsideGroupCallArea }
CODE local : 68
}

sendEndSignal OPERATION ::= {
    ARGUMENT [3] IMPLICIT SEQUENCE {
        an-APDU SEQUENCE {
            accessNetworkProtocolId ENUMERATED {
                ts3G-48006 ( 1 ),
                ts3G-25413 ( 2 ),
                ...
            },
            signalInfo OCTET STRING ( SIZE( 1 .. 2560 ) ),
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...} ),
extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ... },
            extensionContainer [0] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {

```

```

        ,
        ...}),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
RESULT SEQUENCE {
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...}),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
CODE local :29
}

processAccessSignalling OPERATION ::= {
ARGUMENT [3] IMPLICIT SEQUENCE {
an-APDU SEQUENCE {
accessNetworkProtocolId ENUMERATED {
ts3G-48006 ( 1 ),
ts3G-25413 ( 2 ),
        ...
},
signallInfo OCTET STRING ( SIZE( 1 .. 2560 ) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...}),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
},
selectedUMTS-Algorithms [1] IMPLICIT SEQUENCE {
integrityProtectionAlgorithm [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
encryptionAlgorithm [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...}),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
},
selectedGSM-Algorithm [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
chosenRadioResourceInformation [3] IMPLICIT SEQUENCE {
chosenChannelInfo [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
chosenSpeechVersion [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ...
} OPTIONAL,
selectedRab-Id [4] IMPLICIT INTEGER ( 1 .. 255 ) OPTIONAL,
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
        ,
        ...}),
extType MAP-EXTENSION .&ExtensionType ( {
        ,
}

```

```

...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... ,
selectedCodec [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL)
CODE local : 33
}

forwardAccessSignalling OPERATION ::= {
ARGUMENT [3] IMPLICIT SEQUENCE {
an-APDU SEQUENCE {
accessNetworkProtocolId ENUMERATED {
ts3G-48006 ( 1 ),
ts3G-25413 ( 2 ),
... },
signallInfo OCTET STRING ( SIZE( 1 .. 2560 ) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
integrityProtectionInfo [0] IMPLICIT OCTET STRING ( SIZE( 18 .. 100 ) ) OPTIONAL,
encryptionInfo [1] IMPLICIT OCTET STRING ( SIZE( 18 .. 100 ) ) OPTIONAL,
keyStatus [2] IMPLICIT ENUMERATED {
old ( 0 ),
new ( 1 ),
... } OPTIONAL,
allowedGSM-Algorithms [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
allowedUMTS-Algorithms [5] IMPLICIT SEQUENCE {
integrityProtectionAlgorithms [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
encryptionAlgorithms [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
radioResourceInformation [6] IMPLICIT OCTET STRING ( SIZE( 3 .. 13 ) ) OPTIONAL,
extensionContainer [3] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
radioResourceList [7] IMPLICIT SEQUENCE ( SIZE( 1 .. 7 ) ) OF
SEQUENCE {
radioResourceInformation OCTET STRING ( SIZE( 3 .. 13 ) ),
rab-Id INTEGER ( 1 .. 255 ),
... } OPTIONAL,
bssmap-ServiceHandover [9] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
ranap-ServiceHandover [8] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
bssmap-ServiceHandoverList [10] IMPLICIT SEQUENCE ( SIZE( 1 .. 7 ) ) OF
SEQUENCE {
bssmap-ServiceHandover OCTET STRING ( SIZE( 1 ) ),

```

```

    rab-Id      INTEGER ( 1 .. 255 ),
    ... } OPTIONAL,
currentUsedCodec      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
availableCodecsList    [12] IMPLICIT SEQUENCE {
    utranCodecList [0] IMPLICIT SEQUENCE {
        codec1      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ),
        codec2      [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec3      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec4      [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec5      [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec6      [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec7      [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec8      [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
extensionContainer [9] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId      MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
        extType     MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
geranCodecList [1] IMPLICIT SEQUENCE {
        codec1      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ),
        codec2      [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec3      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec4      [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec5      [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec6      [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec7      [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
        codec8      [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 4 ) ) OPTIONAL,
extensionContainer [9] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId      MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
        extType     MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        extId      MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
        extType     MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
rab-ConfigurationIndicator [13] IMPLICIT NULL OPTIONAL}
CODE local :34
}

prepareSubsequentHandover OPERATION ::= {
ARGUMENT [3] IMPLICIT SEQUENCE {
    targetCellId      [0] IMPLICIT OCTET STRING ( SIZE( 5 .. 7 ) ) OPTIONAL,
    targetMSC-Number   [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    targetRNCId       [2] IMPLICIT OCTET STRING ( SIZE( 7 ) ) OPTIONAL,
    an-APDU          [3] IMPLICIT SEQUENCE {
        accessNetworkProtocolId ENUMERATED {
            ts3G-48006 ( 1 ),
            ts3G-25413 ( 2 ),
            ... },
        signallInfo      OCTET STRING ( SIZE( 1 .. 2560 ) ),
        extensionContainer SEQUENCE {
}
}
}
}

```

```

privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
selectedRab-Id [4] IMPLICIT INTEGER ( 1 .. 255 ) OPTIONAL,
extensionContainer [5] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
geran-classmark [6] IMPLICIT OCTET STRING ( SIZE(2 .. 87) ) OPTIONAL,
rab-ConfigurationIndicator [7] IMPLICIT NULL OPTIONAL}
RESULT [3] IMPLICIT SEQUENCE {
an-APDU SEQUENCE {
accessNetworkProtocolId ENUMERATED {
ts3G-48006 (1),
ts3G-25413 (2),
...},
signInfo OCTET STRING ( SIZE(1 .. 2560) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
ERRORS {
unexpectedDataValue |
dataMissing |
unknownMSC |
subsequentHandoverFailure }
CODE local : 69
}

sendAuthenticationInfo OPERATION ::= {
ARGUMENT SEQUENCE {
imsi [0] IMPLICIT OCTET STRING ( SIZE(3 .. 8) ),
numberOfRequestedVectors INTEGER ( 1 .. 5 ),
segmentationProhibited NULL OPTIONAL,
immediateResponsePreferred [1] IMPLICIT NULL OPTIONAL,
re-synchronisationInfo SEQUENCE {
rand OCTET STRING ( SIZE(16) ),
}
}
}

```

```

auts OCTET STRING ( SIZE( 14 ) ),
... } OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... ,
requestingNodeType [3] IMPLICIT ENUMERATED {
vlr ( 0 ),
sgsn ( 1 ),
... } OPTIONAL)
RESULT [3] IMPLICIT SEQUENCE {
authenticationSetList CHOICE {
tripletList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
SEQUENCE {
rand OCTET STRING ( SIZE( 16 ) ),
sres OCTET STRING ( SIZE( 4 ) ),
kc OCTET STRING ( SIZE( 8 ) ),
... },
quintupletList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
SEQUENCE {
rand OCTET STRING ( SIZE( 16 ) ),
xres OCTET STRING ( SIZE( 4 .. 16 ) ),
ck OCTET STRING ( SIZE( 16 ) ),
ik OCTET STRING ( SIZE( 16 ) ),
auth OCTET STRING ( SIZE( 16 ) ),
... } ) OPTIONAL,
... }
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... }
ERRORS {
systemFailure |
dataMissing |
unexpectedDataValue |
unknownSubscriber }
CODE local : 56
}

authenticationFailureReport OPERATION ::= {
ARGUMENT SEQUENCE {
imsi OCTET STRING ( SIZE( 3 .. 8 ) ),
failureCause ENUMERATED {
wrongUserResponse ( 0 ),
wrongNetworkSignature ( 1 )},
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... }
... ,
re-attempt BOOLEAN OPTIONAL,
accessType ENUMERATED {
}
}

```



```

extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
longForwardedToNumber [10] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL},
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
callBarringInfo [1] IMPLICIT SEQUENCE {
ss-Code      OCTET STRING ( SIZE( 1 ) ),
callBarringFeatureList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
SEQUENCE {
basicService CHOICE {
    ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
    ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) )} OPTIONAL,
ss-Status     [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
cug-Info      [2] IMPLICIT SEQUENCE {
cug-SubscriptionList SEQUENCE ( SIZE( 0 .. 10 ) ) OF
SEQUENCE {
cug-Index      INTEGER ( 0 .. 32767 ),
cug-Interlock   OCTET STRING ( SIZE( 4 ) ),
intraCUG-Options ENUMERATED {
    noCUG-Restrictions ( 0 ),
    cugIC-CallBarred ( 1 ),
    cugOG-CallBarred ( 2 )},
basicServiceGroupList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
CHOICE {
    ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
    ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) )} OPTIONAL,
extensionContainer [0] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...} ),
    ...
}

```

```

extType MAP-EXTENSION.&ExtensionType ({
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
cug-FeatureList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
SEQUENCE {
    basicService CHOICE {
        ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
        ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
    preferentialCUG-Indicator INTEGER ( 0 .. 32767 ) OPTIONAL,
    interCUG-Restrictions OCTET STRING ( SIZE( 1 ) ),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION.&extensionId ( {
                    ... } ),
                extType MAP-EXTENSION.&ExtensionType ( {
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                extensionContainer [0] IMPLICIT SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        SEQUENCE {
                            extId MAP-EXTENSION.&extensionId ( {
                                ... } ),
                            extType MAP-EXTENSION.&ExtensionType ( {
                                ...} { @extId } ) OPTIONAL} OPTIONAL,
                            pcs-Extensions [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                ... },
ss-Data [3] IMPLICIT SEQUENCE {
    ss-Code OCTET STRING ( SIZE( 1 ) ),
    ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
    ss-SubscriptionOption CHOICE {
        cliRestrictionOption [2] IMPLICIT ENUMERATED {
            permanent ( 0 ),
            temporaryDefaultRestricted ( 1 ),
            temporaryDefaultAllowed ( 2 ),
        overrideCategory [1] IMPLICIT ENUMERATED {
            overrideEnabled ( 0 ),
            overrideDisabled ( 1 ) } } OPTIONAL,
    basicServiceGroupList SEQUENCE ( SIZE( 1 .. 32 ) ) OF
        CHOICE {
            ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
            ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
        extensionContainer [5] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION.&extensionId ( {
                        ... } ),
                    extType MAP-EXTENSION.&ExtensionType ( {
                        ...} { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ... },
emlpp-Info [4] IMPLICIT SEQUENCE {
    maximumumentitledPriority INTEGER ( 0 .. 15 ),
    defaultPriority INTEGER ( 0 .. 15 ),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION.&extensionId ( {
                    ... } ),

```

```

extType MAP-EXTENSION.&ExtensionType ( {
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } } OPTIONAL,
odb-Data [8] IMPLICIT SEQUENCE {
    odb-GeneralData BIT STRING {
        allOG-CallsBarred (0),
        internationalOGCallsBarred (1),
        internationalOGCallsNotToHPLMN-CountryBarred (2),
        interzonalOGCallsBarred (6),
        interzonalOGCallsNotToHPLMN-CountryBarred (7),
        interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred (8),
        premiumRateInformationOGCallsBarred (3),
        premiumRateEntertainmentOGCallsBarred (4),
        ss-AccessBarred (5),
        allECT-Barred (9),
        chargeableECT-Barred (10),
        internationalECT-Barred (11),
        interzonalECT-Barred (12),
        doublyChargeableECT-Barred (13),
        multipleECT-Barred (14),
        allPacketOrientedServicesBarred (15),
        roamerAccessToHPLMN-AP-Barred (16),
        roamerAccessToVPLMN-AP-Barred (17),
        roamingOutsidePLMNOG-CallsBarred (18),
        allIC-CallsBarred (19),
        roamingOutsidePLMNIC-CallsBarred (20),
        roamingOutsidePLMNICCountryIC-CallsBarred (21),
        roamingOutsidePLMN-Barred (22),
        roamingOutsidePLMN-CountryBarred (23),
        registrationAllCF-Barred (24),
        registrationCFNotToHPLMN-Barred (25),
        registrationInterzonalCF-Barred (26),
        registrationInterzonalCFNotToHPLMN-Barred (27),
        registrationInternationalCF-Barred (28)} ( SIZE( 15 .. 32 ) ),
    odb-HPLMN-Data BIT STRING {
        plmn-SpecificBarringType1 (0),
        plmn-SpecificBarringType2 (1),
        plmn-SpecificBarringType3 (2),
        plmn-SpecificBarringType4 (3)} ( SIZE( 4 .. 32 ) ) OPTIONAL,
extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    extId MAP-EXTENSION.&extensionId ( {
        ,
        ...} ),
    extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
roamingRestrictionDueToUnsupportedFeature [9] IMPLICIT NULL OPTIONAL,
regionalSubscriptionData [10] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
vbsSubscriptionData [11] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
SEQUENCE {
    groupId OCTET STRING ( SIZE( 3 ) ),
    broadcastInitEntitlement NULL OPTIONAL,
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION.&extensionId ( {
                ,
                ...} ),
            extType MAP-EXTENSION.&ExtensionType ( {
                ,
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
vcgcsSubscriptionData [12] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF

```

```

SEQUENCE {
    groupId          OCTET STRING ( SIZE( 3 ) ),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        vlrCamelSubscriptionInfo [13] IMPLICIT SEQUENCE {
            o-CSI           [0] IMPLICIT SEQUENCE {
                o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        o-BcsmTriggerDetectionPoint ENUMERATED {
                            collectedInfo ( 2 ),
                            ...
                            routeSelectFailure ( 4 ),
                            serviceKey      INTEGER ( 0 .. 2147483647 ),
                            gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                            defaultCallHandling [1] IMPLICIT ENUMERATED {
                                continueCall ( 0 ),
                                releaseCall   ( 1 ),
                                ...
                            },
                            extensionContainer [2] IMPLICIT SEQUENCE {
                                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                    SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
  } ),
  extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
  } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
  } OPTIONAL,
  ...
                                    } OPTIONAL,
                                    ...
                                extensionContainer SEQUENCE {
                                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
  } ),
  extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
  } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
  } OPTIONAL,
  ...
  } OPTIONAL,
  ...
                                    camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                                    notificationToCSE [1] IMPLICIT NULL OPTIONAL,
                                    csiActive       [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
                                extensionContainer [1] IMPLICIT SEQUENCE {
                                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
  } ),
  extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
  } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
  } OPTIONAL,
  ...
  } OPTIONAL,
  ...
                                    ss-CSI           [2] IMPLICIT SEQUENCE {
  ss-CamelData   SEQUENCE {
  ss-EventList    SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  OCTET STRING ( SIZE( 1 ) ),
  gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  extensionContainer [0] IMPLICIT SEQUENCE {
  ...
  }
  }
                                    }
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ({
,
...}),
extType MAP-EXTENSION.&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ({
,
...}),
extType MAP-EXTENSION.&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
notificationToCSE [0] IMPLICIT NULL OPTIONAL,
csi-Active [1] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-BcsmCameITDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
o-BcsmTriggerDetectionPoint ENUMERATED {
collectedInfo (2),
...,
routeSelectFailure (4)},
destinationNumberCriteria [0] IMPLICIT SEQUENCE {
matchType [0] IMPLICIT ENUMERATED {
inhibiting (0),
enabling (1)},
destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ) OPTIONAL,
destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE(1 .. 3) ) OF
INTEGER (1 .. 15) OPTIONAL,
... } OPTIONAL,
basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE(1 .. 5) ),
ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE(1 .. 5) ) } OPTIONAL,
callTypeCriteria [2] IMPLICIT ENUMERATED {
forwarded (0),
notForwarded (1) } OPTIONAL,
... },
o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE(1 .. 5) ) OF
OCTET STRING ( SIZE(1) ) OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ({
,
...}),
extType MAP-EXTENSION.&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL} OPTIONAL,
tif-CSI [3] IMPLICIT NULL OPTIONAL,
m-CSI [5] IMPLICIT SEQUENCE {
mobilityTriggers SEQUENCE ( SIZE(1 .. 10) ) OF
OCTET STRING ( SIZE(1) ),
serviceKey INTEGER (0 .. 2147483647),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ),
extensionContainer [1] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ({
,
...}),
extType MAP-EXTENSION.&ExtensionType ({

```

```

... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
notificationToCSE [2] IMPLICIT NULL OPTIONAL,
csi-Active [3] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
mo-sms-CSI [6] IMPLICIT SEQUENCE {
sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
sms-CollectedInfo ( 1 ),
... ,
sms-DeliveryRequest ( 2 ),
serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultSMS-Handling [3] IMPLICIT ENUMERATED {
continueTransaction ( 0 ),
releaseTransaction ( 1 ),
... },
extensionContainer [4] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ( {
... },
extType MAP-EXTENSION.&ExtensionType ( {
... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ( {
... },
extType MAP-EXTENSION.&ExtensionType ( {
... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
vt-CSI [7] IMPLICIT SEQUENCE {
t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
t-BcsmTriggerDetectionPoint ENUMERATED {
termAttemptAuthorized ( 12 ),
... ,
tBusy ( 13 ),
tNoAnswer ( 14 ),
serviceKey INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling [1] IMPLICIT ENUMERATED {
continueCall ( 0 ),
releaseCall ( 1 ),
... },
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION.&extensionId ( {
... },
extType MAP-EXTENSION.&ExtensionType ( {
... } { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },

```

```

extensionContainer   SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ({
        ,
        ...}),
      extType  MAP-EXTENSION .&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
      notificationToCSE [1] IMPLICIT NULL OPTIONAL,
      csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
      t-BCSM-CAMEL-TDP-CriteriaList [8] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        t-BCSM-TriggerDetectionPoint ENUMERATED {
          termAttemptAuthorized ( 12 ),
        ...
        tBusy ( 13 ),
        tNoAnswer ( 14 )},
      basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
      CHOICE {
        ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
        ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
      t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ... } OPTIONAL,
      d-CSI [9] IMPLICIT SEQUENCE {
        dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          dialledNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
          serviceKey INTEGER ( 0 .. 2147483647 ),
          gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
          defaultCallHandling ENUMERATED {
            continueCall ( 0 ),
            releaseCall ( 1 ),
            ...
          },
        extensionContainer SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ({
              ,
              ...}),
            extType  MAP-EXTENSION .&ExtensionType ({
              ,
              ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ... } OPTIONAL,
              ... } OPTIONAL,
              ...
            camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
              SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ({
                  ,
                  ...}),
                extType  MAP-EXTENSION .&ExtensionType ({
                  ,
                  ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                  ... } OPTIONAL,
                  ... } OPTIONAL,
                  ...
                notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                csi-Active [4] IMPLICIT NULL OPTIONAL,
                ... } OPTIONAL,
                mt-sms-CSI [10] IMPLICIT SEQUENCE {
                  sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                  SEQUENCE {
                    sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
                      sms-CollectedInfo ( 1 ),
                    ...
                    sms-DeliveryRequest ( 2 ),
                    serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),

```

```

gsmSCF-Address      [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultSMS-Handling [3] IMPLICIT ENUMERATED {
    continueTransaction ( 0 ),
    releaseTransaction   ( 1 ),
    ...
},
extensionContainer    [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...
            },
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
            ...
        } OPTIONAL,
        ...
    camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
    extensionContainer     [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                },
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
                ...
            notificationToCSE [3] IMPLICIT NULL OPTIONAL,
            csi-Active       [4] IMPLICIT NULL OPTIONAL,
            ...
            ...
        mt-smsCAMELTDP-CriteriaList [11] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                sms-TriggerDetectionPoint ENUMERATED {
                    sms-CollectedInfo ( 1 ),
                    ...
                    sms-DeliveryRequest ( 2 ),
                tpdu-TypeCriterion [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
                    ENUMERATED {
                        sms-DELIVER ( 0 ),
                        sms-SUBMIT-REPORT ( 1 ),
                        sms-STATUS-REPORT ( 2 ),
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL} OPTIONAL,
            extensionContainer [14] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        },
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                    naea-PreferredCI [15] IMPLICIT SEQUENCE {
                        naea-PreferredCIC [0] IMPLICIT OCTET STRING ( SIZE( 3 ) ),
                        extensionContainer [1] IMPLICIT SEQUENCE {
                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
                                    },
                                    extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
                                    } { @extId } ) OPTIONAL} OPTIONAL,
                                    pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
                                    } OPTIONAL,
                                    ...
                                    ...
                                } OPTIONAL,
                                ...
                                gprsSubscriptionData [16] IMPLICIT SEQUENCE {
                                    completeDataListIncluded NULL OPTIONAL,

```

```

gprsDataList      [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
SEQUENCE {
    pdp-ContextId      INTEGER ( 1 .. 50 ),
    pdp-Type          [16] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
    pdp-Address        [17] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
    qos-Subscribed     [18] IMPLICIT OCTET STRING ( SIZE( 3 ) ),
    vplmnAddressAllowed [19] IMPLICIT NULL OPTIONAL,
    apn                [20] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ),
    extensionContainer [21] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType    MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions   [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
    ext-QoS-Subscribed [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
    pdp-ChargingCharacteristics [1] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL},
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId      MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType    MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions   [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
    roamingRestrictedInSgsnDueToUnsupportedFeature [23] IMPLICIT NULL OPTIONAL,
    networkAccessMode           [24] IMPLICIT ENUMERATED {
        bothMSCAndSGSN ( 0 ),
        onlyMSC        ( 1 ),
        onlySGSN        ( 2 ),
        ...
    } OPTIONAL,
    Isainformation          [25] IMPLICIT SEQUENCE {
        completeDataListIncluded NULL OPTIONAL,
        IsaOnlyAccessIndicator [1] IMPLICIT ENUMERATED {
            accessOutsideLSAsAllowed ( 0 ),
            accessOutsideLSAsRestricted ( 1 ) } OPTIONAL,
        IsaDataList         [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 20 ) ) OF
SEQUENCE {
            Isaidentity      [0] IMPLICIT OCTET STRING ( SIZE( 3 ) ),
            IsaAttributes    [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
            IsaActiveModeIndicator [2] IMPLICIT NULL OPTIONAL,
            extensionContainer [3] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                    extId      MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType    MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions   [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        extensionContainer [3] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                extId      MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType    MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions   [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
}

```

```

... } OPTIONAL,
Imu-Indicator [21] IMPLICIT NULL OPTIONAL,
lcsInformation [22] IMPLICIT SEQUENCE {
  gmlc-List [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
  lcs-PrivacyExceptionList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 4 ) ) OF
    SEQUENCE {
      ss-Code OCTET STRING ( SIZE( 1 ) ),
      ss-Status OCTET STRING ( SIZE( 1 .. 5 ) ),
      notificationToMSUser [0] IMPLICIT ENUMERATED {
        notifyLocationAllowed ( 0 ),
        notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
        notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
        ... ,
        locationNotAllowed ( 3 ) } OPTIONAL,
      externalClientList [1] IMPLICIT SEQUENCE ( SIZE( 0 .. 5 ) ) OF
        SEQUENCE {
          clientIdentity SEQUENCE {
            externalAddress [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
            extensionContainer [1] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ... } ),
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL } OPTIONAL,
              pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... },
          gmlc-Restriction [0] IMPLICIT ENUMERATED {
            gmlc-List ( 0 ),
            home-Country ( 1 ),
            ... } OPTIONAL,
          notificationToMSUser [1] IMPLICIT ENUMERATED {
            notifyLocationAllowed ( 0 ),
            notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
            notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
            ... ,
            locationNotAllowed ( 3 ) } OPTIONAL,
          extensionContainer [2] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
              SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                  ,
                  ... } ),
                extType MAP-EXTENSION .&ExtensionType ( {
                  ,
                  ... } { @extId } ) OPTIONAL } OPTIONAL,
              pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
            plmnClientList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
              ENUMERATED {
                broadcastService ( 0 ),
                o-andM-HPLMN ( 1 ),
                o-andM-VPLMN ( 2 ),
                anonymousLocation ( 3 ),
                targetMSsubscribedService ( 4 ),
                ... } OPTIONAL,
            extensionContainer [3] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ... } ),
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ... } { @extId } ) OPTIONAL } OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ... ,
                    ext-externalClientList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 35 ) ) OF

```

```

SEQUENCE {
    clientIdentity      SEQUENCE {
        externalAddress [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        },
        gmlc-Restriction [0] IMPLICIT ENUMERATED {
            gmlc-List ( 0 ),
            home-Country ( 1 ),
            ...
        } OPTIONAL,
        notificationToMSUser [1] IMPLICIT ENUMERATED {
            notifyLocationAllowed ( 0 ),
            notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
            notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
            ...
            locationNotAllowed ( 3 ) } OPTIONAL,
        extensionContainer [2] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        serviceTypeList [5] IMPLICIT SEQUENCE ( SIZE( 1 .. 32 ) ) OF
            SEQUENCE {
                serviceTypeIdentity INTEGER ( 0 .. 127 ),
                gmlc-Restriction [0] IMPLICIT ENUMERATED {
                    gmlc-List ( 0 ),
                    home-Country ( 1 ),
                    ...
                } OPTIONAL,
                notificationToMSUser [1] IMPLICIT ENUMERATED {
                    notifyLocationAllowed ( 0 ),
                    notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
                    notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
                    ...
                    locationNotAllowed ( 3 ) } OPTIONAL,
                extensionContainer [2] IMPLICIT SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        SEQUENCE {
                            extId   MAP-EXTENSION .&extensionId ( {
                                ,
                                ...
                            } ),
                            extType  MAP-EXTENSION .&ExtensionType ( {
                                ,
                                ...
                            } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL,
                molr-List [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
                    SEQUENCE {
                        ss-Code      OCTET STRING ( SIZE( 1 ) ),
                        ss-Status    OCTET STRING ( SIZE( 1 .. 5 ) ),
                        extensionContainer [0] IMPLICIT SEQUENCE {
                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
                                    } ),
                                    extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
                                    } )
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

    ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
    add-Ics-PrivacyExceptionList [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 4 ) ) OF
    SEQUENCE {
        ss-Code          OCTET STRING ( SIZE( 1 ) ),
        ss-Status         OCTET STRING ( SIZE( 1 .. 5 ) ),
        notificationToMSUser [0] IMPLICIT ENUMERATED {
            notifyLocationAllowed           ( 0 ),
            notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
            notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
            ...
            locationNotAllowed             ( 3 ) } OPTIONAL,
        externalClientList [1] IMPLICIT SEQUENCE ( SIZE( 0 .. 5 ) ) OF
        SEQUENCE {
            clientIdentity     SEQUENCE {
                externalAddress   [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
                extensionContainer [1] IMPLICIT SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ... } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ... } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ...
                            gmlc-Restriction [0] IMPLICIT ENUMERATED {
                                gmlc-List ( 0 ),
                                home-Country ( 1 ),
                                ... } OPTIONAL,
                            notificationToMSUser [1] IMPLICIT ENUMERATED {
                                notifyLocationAllowed           ( 0 ),
                                notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
                                notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
                                ...
                                locationNotAllowed             ( 3 ) } OPTIONAL,
                            extensionContainer [2] IMPLICIT SEQUENCE {
                                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    extId   MAP-EXTENSION .&extensionId ( {
  ,
  ... } ),
                                    extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ... } { @extId } ) OPTIONAL} OPTIONAL,
                                    pcs-Extensions [1] IMPLICIT SEQUENCE {
  ... } OPTIONAL,
  ... } OPTIONAL,
  ... } OPTIONAL,
  ...
  plmnClientList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  ENUMERATED {
  broadcastService      ( 0 ),
  o-andM-HPLMN        ( 1 ),
  o-andM-VPLMN        ( 2 ),
  anonymousLocation    ( 3 ),
  targetMSSubscribedService ( 4 ),
  ... } OPTIONAL,
  extensionContainer [3] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ( {
  ,
  ... } ),
  extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ... } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ... } OPTIONAL,
  ... } OPTIONAL,
  ...
  ...
  }
  }
                                    }
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

ext-externalClientList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 35 ) ) OF
SEQUENCE {
    clientIdentity SEQUENCE {
        externalAddress [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL) OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                },
                ...
            },
            gmlc-Restriction [0] IMPLICIT ENUMERATED {
                gmlc-List ( 0 ),
                home-Country ( 1 ),
                ...
            } OPTIONAL,
            notificationToMSUser [1] IMPLICIT ENUMERATED {
                notifyLocationAllowed ( 0 ),
                notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
                notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
                ...
                locationNotAllowed ( 3 ) } OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL) OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    },
                    ...
                },
                serviceTypeList [5] IMPLICIT SEQUENCE ( SIZE( 1 .. 32 ) ) OF
                SEQUENCE {
                    serviceTypeIdentity INTEGER ( 0 .. 127 ),
                    gmlc-Restriction [0] IMPLICIT ENUMERATED {
                        gmlc-List ( 0 ),
                        home-Country ( 1 ),
                        ...
                    } OPTIONAL,
                    notificationToMSUser [1] IMPLICIT ENUMERATED {
                        notifyLocationAllowed ( 0 ),
                        notifyAndVerify-LocationAllowedIfNoResponse ( 1 ),
                        notifyAndVerify-LocationNotAllowedIfNoResponse ( 2 ),
                        ...
                        locationNotAllowed ( 3 ) } OPTIONAL,
                    extensionContainer [2] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ),
                                extType MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL) OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            },
                            ...
                        },
                        istAlertTimer [26] IMPLICIT INTEGER ( 15 .. 255 ) OPTIONAL,
                        superChargerSupportedInHLR [27] IMPLICIT OCTET STRING ( SIZE( 1 .. 6 ) ) OPTIONAL,
                        mc-SS-Info [28] IMPLICIT SEQUENCE {
                            ss-Code [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                            ss-Status [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
                            nbrSB [2] IMPLICIT INTEGER ( 2 .. 7 ),
                            nbrUser [3] IMPLICIT INTEGER ( 1 .. 7 ),
                            extensionContainer [4] IMPLICIT SEQUENCE {
                                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                    SEQUENCE {
  extId MAP-EXTENSION .&extensionId ( {
  ,
  ...
  } ),
  extType MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
  } { @extId } ) OPTIONAL) OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
  } OPTIONAL,
  ...
                                    },
                                    ...
                                },
                                ...
                            },
                            ...
                        },
                        ...
                    }
                }
            }
        }
    }
}

```

```

        ,
        ...}),
extType MAP-EXTENSION.&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
cs-AllocationRetentionPriority [29] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
sgsn-CAMEL-SubscriptionInfo [17] IMPLICIT SEQUENCE {
gprs-CSI [0] IMPLICIT SEQUENCE {
        gprs-CamelTDPDataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
        gprs-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
            attach ( 1 ),
            attachChangeOfPosition ( 2 ),
            pdp-ContextEstablishment ( 11 ),
            pdp-ContextEstablishmentAcknowledgement ( 12 ),
            pdp-ContextChangeOfPosition ( 14 ),
            ...
        },
        serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
        gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        defaultSessionHandling [3] IMPLICIT ENUMERATED {
            continueTransaction ( 0 ),
            releaseTransaction ( 1 ),
            ...
        },
extensionContainer [4] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION.&extensionId ({
                ,
                ...}),
            extType MAP-EXTENSION.&ExtensionType ({
                ,
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
                camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                extensionContainer [2] IMPLICIT SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                        extId MAP-EXTENSION.&extensionId ({
                            ,
                            ...}),
                        extType MAP-EXTENSION.&ExtensionType ({
                            ,
                            ...} { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                            csi-Active [4] IMPLICIT NULL OPTIONAL,
                            ... } OPTIONAL,
mo-sms-CSI [1] IMPLICIT SEQUENCE {
        sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
                sms-CollectedInfo ( 1 ),
                ...
                sms-DeliveryRequest ( 2 ),
            serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            defaultSMS-Handling [3] IMPLICIT ENUMERATED {
                continueTransaction ( 0 ),
                releaseTransaction ( 1 ),
                ...
            },
            extensionContainer [4] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
                    extId MAP-EXTENSION.&extensionId ({
                        ,
                        ...}),
                    extType MAP-EXTENSION.&ExtensionType ({
                        ,
                    },
                },
            },
        },
    },
}

```

```

...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
mt-sms-CSI [3] IMPLICIT SEQUENCE {
sms-CAMEL-TDP-DataList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
sms-TriggerDetectionPoint [0] IMPLICIT ENUMERATED {
sms-CollectedInfo ( 1 ),
... ,
sms-DeliveryRequest ( 2 ),
serviceKey [1] IMPLICIT INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultSMS-Handling [3] IMPLICIT ENUMERATED {
continueTransaction ( 0 ),
releaseTransaction ( 1 ),
... },
extensionContainer [4] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
... },
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
notificationToCSE [3] IMPLICIT NULL OPTIONAL,
csi-Active [4] IMPLICIT NULL OPTIONAL,
... } OPTIONAL,
mt-smsCAMELTDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF

```

```

SEQUENCE {
  sms-TriggerDetectionPoint ENUMERATED {
    sms-CollectedInfo ( 1 ),
    ... ,
    sms-DeliveryRequest ( 2 ),
    tpdu-TypeCriterion [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
      ENUMERATED {
        sms-DELIVER ( 0 ),
        sms-SUBMIT-REPORT ( 1 ),
        sms-STATUS-REPORT ( 2 ),
        ... } OPTIONAL,
      ... } OPTIONAL,
  mg-csi [5] IMPLICIT SEQUENCE {
    mobilityTriggers SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      OCTET STRING ( SIZE( 1 ) ),
    serviceKey INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    extensionContainer [1] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ... },
            ... ) },
        extType MAP-EXTENSION .&ExtensionType ( {
          ... } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
      notificationToCSE [2] IMPLICIT NULL OPTIONAL,
      csi-Active [3] IMPLICIT NULL OPTIONAL,
      ... } OPTIONAL OPTIONAL,
  chargingCharacteristics [18] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL}
RESULT SEQUENCE {
  teleserviceList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 20 ) ) OF
    OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
  bearerServiceList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
    OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
  ss-List [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 30 ) ) OF
    OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  odb-GeneralData [4] IMPLICIT BIT STRING {
    allOG-CallsBarred ( 0 ),
    internationalOGCallsBarred ( 1 ),
    internationalOGCallsNotToHPLMN-CountryBarred ( 2 ),
    interzonalOGCallsBarred ( 6 ),
    interzonalOGCallsNotToHPLMN-CountryBarred ( 7 ),
    interzonalOGCallsAndInternationalOGCallsNotToHPLMN-CountryBarred ( 8 ),
    premiumRateInformationOGCallsBarred ( 3 ),
    premiumRateEntertainmentOGCallsBarred ( 4 ),
    ss-AccessBarred ( 5 ),
    allECT-Barred ( 9 ),
    chargeableECT-Barred ( 10 ),
    internationalECT-Barred ( 11 ),
    interzonalECT-Barred ( 12 ),
    doublyChargeableECT-Barred ( 13 ),
    multipleECT-Barred ( 14 ),
    allPacketOrientedServicesBarred ( 15 ),
    roamerAccessToHPLMN-AP-Barred ( 16 ),
    roamerAccessToVPLMN-AP-Barred ( 17 ),
    roamingOutsidePLMNOG-CallsBarred ( 18 ),
    allIC-CallsBarred ( 19 ),
    roamingOutsidePLMNIC-CallsBarred ( 20 ),
    roamingOutsidePLMNICCountryIC-CallsBarred ( 21 ),
    roamingOutsidePLMN-Barred ( 22 ),
    roamingOutsidePLMN-CountryBarred ( 23 ),
    registrationAllCF-Barred ( 24 ),
    registrationCFNotToHPLMN-Barred ( 25 ),
    registrationInterzonalCF-Barred ( 26 ),
    registrationInterzonalCFNotToHPLMN-Barred ( 27 ),
    registrationInternationalCF-Barred ( 28 ) } ( SIZE( 15 .. 32 ) ) OPTIONAL,
  regionalSubscriptionResponse [5] IMPLICIT ENUMERATED {
    networkNode-AreaRestricted ( 0 ),
    tooManyZoneCodes ( 1 ),
    zoneCodesConflict ( 2 ),
    regionalSubscNotSupported ( 3 ) } OPTIONAL,
  supportedCamelPhases [6] IMPLICIT BIT STRING {
    phase1 ( 0 ),
    ... }
  }
}

```

```

phase2 (1),
phase3 (2),
phase4 (3) } ( SIZE( 1 .. 16 ) ) OPTIONAL,
extensionContainer [7] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
... },
offeredCamel4CSIs [8] IMPLICIT BIT STRING {
o-csi (0),
d-csi (1),
vt-csi (2),
t-csi (3),
mt-sms-csi (4),
mg-csi (5),
psi-enhancements (6) } ( SIZE( 7 .. 16 ) ) OPTIONAL}
ERRORS {
dataMissing |
unexpectedDataValue |
unidentifiedSubscriber }
CODE local : 7
}

deleteSubscriberData OPERATION ::= {
ARGUMENT SEQUENCE {
imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
basicServiceList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 70 ) ) OF
CHOICE {
ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
ss-List [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 30 ) ) OF
OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
roamingRestrictionDueToUnsupportedFeature [4] IMPLICIT NULL OPTIONAL,
regionalSubscriptionIdentifier [5] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
vbsGroupIndication [7] IMPLICIT NULL OPTIONAL,
vgcsGroupIndication [8] IMPLICIT NULL OPTIONAL,
camelSubscriptionInfoWithdraw [9] IMPLICIT NULL OPTIONAL,
extensionContainer [6] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... } OPTIONAL,
... },
gprsSubscriptionDataWithdraw [10] CHOICE {
allGPRSData NULL,
contextIdList SEQUENCE ( SIZE( 1 .. 50 ) ) OF
INTEGER ( 1 .. 50 ) } OPTIONAL,
roamingRestrictedInSgsnDueToUnsupportedFeature [11] IMPLICIT NULL OPTIONAL,
lsInformationWithdraw [12] CHOICE {
allLSAData NULL,
lsIdentityList SEQUENCE ( SIZE( 1 .. 20 ) ) OF
OCTET STRING ( SIZE( 3 ) ) } OPTIONAL,
gmlc-ListWithdraw [13] IMPLICIT NULL OPTIONAL,
istInformationWithdraw [14] IMPLICIT NULL OPTIONAL,
specificCSI-Withdraw [15] IMPLICIT BIT STRING {
o-csi (0),
ss-csi (1),
tif-csi (2),
d-csi (3),
vt-csi (4),
mo-sms-csi (5),
m-csi (6),

```

```

gprs-csi (7),
t-csi (8),
mt-sms-csi (9),
mg-csi (10),
o-IM-CSI (11),
d-IM-CSI (12),
vt-IM-CSI (13}) (SIZE(8..32)) OPTIONAL}
RESULT SEQUENCE {
    regionalSubscriptionResponse [0] IMPLICIT ENUMERATED {
        networkNode-AreaRestricted (0),
        tooManyZoneCodes (1),
        zoneCodesConflict (2),
        regionalSubscNotSupported (3)} OPTIONAL,
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1..10)) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({

                },
                ...}),
                extType MAP-EXTENSION .&ExtensionType ({

                ,
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...} OPTIONAL,
                ...} OPTIONAL,
                ...
            }
    ERRORS {
        dataMissing |
        unexpectedDataValue |
        unidentifiedSubscriber }
CODE local : 8
}

reset OPERATION ::= {
    ARGUMENT SEQUENCE {
        hlr-Number OCTET STRING (SIZE(1..20)) (SIZE(1..9)),
        hlr-List SEQUENCE (SIZE(1..50)) OF
            OCTET STRING (SIZE(3..8)) OPTIONAL,
        ...
    }
CODE local : 37
}

forwardCheckSS-Indication OPERATION ::= {
    CODE local : 38
}

restoreData OPERATION ::= {
    ARGUMENT SEQUENCE {
        imsi OCTET STRING (SIZE(3..8)),
        lmsi OCTET STRING (SIZE(4)) OPTIONAL,
        extensionContainer SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1..10)) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ({

                    },
                    ...}),
                    extType MAP-EXTENSION .&ExtensionType ({

                    ,
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...} OPTIONAL,
                    ...} OPTIONAL,
                    ...
                },
                vlr-Capability [6] IMPLICIT SEQUENCE {
                    supportedCamelPhases [0] IMPLICIT BIT STRING {
                        phase1 (0),
                        phase2 (1),
                        phase3 (2),
                        phase4 (3)) (SIZE(1..16)) OPTIONAL,
                    extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1..10)) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ({

                                },
                                ...}),
                                extType MAP-EXTENSION .&ExtensionType ({

                                ,
                                ...} { @extId } ) ) OPTIONAL} OPTIONAL,
                            ...
                        }
                    }
                }
            }
        }
    }
}

```

```

    ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
  ...
  solsaSupportIndicator [2] IMPLICIT NULL OPTIONAL,
  istSupportIndicator [1] IMPLICIT ENUMERATED {
    basicIstSupported ( 0 ),
    istCommandSupported ( 1 ),
    ... } OPTIONAL,
  superChargerSupportedInServingNetworkEntity [3] CHOICE {
    sendSubscriberData [0] IMPLICIT NULL,
    subscriberDataStored [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 6 ) ) } OPTIONAL,
  longFTN-Supported [4] IMPLICIT NULL OPTIONAL,
  supportedLCS-CapabilitySets [5] IMPLICIT BIT STRING {
    lcsCapabilitySet1 ( 0 ),
    lcsCapabilitySet2 ( 1 ),
    lcsCapabilitySet3 ( 2 ) } ( SIZE( 2 .. 16 ) ) OPTIONAL,
  offeredCamel4CSIs [6] IMPLICIT BIT STRING {
    o-csi ( 0 ),
    d-csi ( 1 ),
    vt-csi ( 2 ),
    t-csi ( 3 ),
    mt-sms-csi ( 4 ),
    mg-csi ( 5 ),
    psi-enhancements ( 6 ) } ( SIZE( 7 .. 16 ) ) OPTIONAL } OPTIONAL}
RESULT SEQUENCE {
  hlr-Number OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  msNotReachable NULL OPTIONAL,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ... } ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ... } { @extId } ) OPTIONAL } OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
  }
  ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber }
  CODE local :57
}

sendRoutingInfoForGprs OPERATION ::= {
  ARGUMENT SEQUENCE {
    imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    ggsn-Address [1] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
    ggsn-Number [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    extensionContainer [3] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL } OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ...
          }
    }
  }
  RESULT SEQUENCE {
    sgsn-Address [0] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ),
    ggsn-Address [1] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
    mobileNotReachableReason [2] IMPLICIT INTEGER ( 0 .. 255 ) OPTIONAL,
    extensionContainer [3] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ...
          })
        }
      }
    }
  }
}

```

```

        ...} ),
      extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    ERRORS {
      absentSubscriber |
      systemFailure |
      dataMissing |
      unexpectedDataValue |
      unknownSubscriber |
      callBarred }
    CODE local :24
  }

failureReport OPERATION ::= {
  ARGUMENT SEQUENCE {
    imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    ggsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    ggsn-Address [2] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
    extensionContainer [3] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...} ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
        }
      RESULT SEQUENCE {
        ggsn-Address [0] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ,
              ...} ),
            extType MAP-EXTENSION .&ExtensionType ( {
              ,
              ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ... } OPTIONAL,
              ... } OPTIONAL,
              ...
            }
        }
      ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        unknownSubscriber }
      CODE local :25
    }

noteMsPresentForGprs OPERATION ::= {
  ARGUMENT SEQUENCE {
    imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    sgsn-Address [1] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ),
    ggsn-Address [2] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
    extensionContainer [3] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...} ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
        }
      }
    }
  }
}

```

```

RESULT SEQUENCE {
  extensionContainer [0] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...
        } OPTIONAL,
        ...
      } OPTIONAL,
    ...
  }
  ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber }
  CODE local : 26
}

noteMM-Event OPERATION ::= {
  ARGUMENT SEQUENCE {
    serviceKey INTEGER ( 0 .. 2147483647 ),
    eventMet [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    imsI [1] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    msisdn [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    locationInformation [3] IMPLICIT SEQUENCE {
      ageOfLocationInformation INTEGER ( 0 .. 32767 ) OPTIONAL,
      geographicalInformation [0] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
      vlr-number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
      locationNumber [2] IMPLICIT OCTET STRING ( SIZE( 2 .. 10 ) ) OPTIONAL,
      cellGlobalIdOrServiceAreaIdOrLAI [3] CHOICE {
        cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
        laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) } OPTIONAL,
      extensionContainer [4] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ,
              ...
            } ),
            extType MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ...
            } OPTIONAL,
            ...
          } OPTIONAL,
        ...
      },
      selectedLSA-Id [5] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
      msc-Number [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
      geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
      currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
      sai-Present [9] IMPLICIT NULL OPTIONAL} OPTIONAL,
      supportedCAMELPhases [5] IMPLICIT BIT STRING {
        phase1 ( 0 ),
        phase2 ( 1 ),
        phase3 ( 2 ),
        phase4 ( 3 ) } ( SIZE( 1 .. 16 ) ) OPTIONAL,
      extensionContainer [6] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ,
              ...
            } ),
            extType MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ...
            } OPTIONAL,
            ...
          } OPTIONAL,
        ...
      },
      locationInformationGPRS [7] IMPLICIT SEQUENCE {
        cellGlobalIdOrServiceAreaIdOrLAI [0] CHOICE {
          cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
          laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) } OPTIONAL,
        routeingAreaIdentity [1] IMPLICIT OCTET STRING ( SIZE( 6 ) ) OPTIONAL,
      }
    }
  }
}

```

```

geographicallInformation      [2] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
sgsn-Number                  [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
selectedLSAIdentity          [4] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
extensionContainer           [5] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        ...
    },
    sai-Present                 [6] IMPLICIT NULL OPTIONAL,
    geodeticInformation         [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
    currentLocationRetrieved   [8] IMPLICIT NULL OPTIONAL,
    ageOfLocationInformation   [9] IMPLICIT INTEGER ( 0 .. 32767 ) OPTIONAL} OPTIONAL,
    offeredCamel4Functionalities [8] IMPLICIT BIT STRING {
        initiateCallAttempt (0),
        splitLeg (1),
        moveLeg (2),
        disconnectLeg (3),
        entityReleased (4),
        dfc-WithArgument (5),
        playTone (6),
        dtmf-MidCall (7),
        chargingIndicator (8),
        alertingDP (9),
        locationAtAlerting (10),
        changeOfPositionDP (11),
        or-Interactions (12),
        warningToneEnhancements (13),
        cf-Enhancements (14) } ( SIZE( 15 .. 32 ) ) OPTIONAL}
RESULT  SEQUENCE {
    extensionContainer  SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            }
        },
        ...
    }
ERRORS  {
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber |
    mm-EventNotSupported }
CODE local : 89
}

END

```

--Expanded ASN1 Module 'MAP-OperationAndMaintenanceOperations'  
--SIEMENS ASN.1 Compiler R5.61 (Production\_5.61)  
-- Date: 2003-03-27 Time: 10:34:23

MAP-OperationAndMaintenanceOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-OperationAndMaintenanceOperations (6) version8 (8) }

## DEFINITIONS

::=

BEGIN

## EXPORTS

activateTraceMode,  
deactivateTraceMode,  
sendIMSI;

```

activateTraceMode OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi          [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
    traceReference [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ),
    traceType      [2] IMPLICIT INTEGER ( 0 .. 255 ),
    omc-Id        [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
    extensionContainer [4] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } OPTIONAL,
    ...
  }
  RESULT  SEQUENCE {
    extensionContainer [0] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } OPTIONAL,
    ...
  }
  ERRORS  {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    facilityNotSupported |
    unidentifiedSubscriber |
    tracingBufferFull }
  CODE local   : 50
}

deactivateTraceMode OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi          [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
    traceReference [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ),
    extensionContainer [2] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } OPTIONAL,
    ...
  }
  RESULT  SEQUENCE {
    extensionContainer [0] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } OPTIONAL,
    ...
  }
  ERRORS  {

```



```

basicServiceGroup           [9] CHOICE {
  ext-BearerService    [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Teleservice      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) OPTIONAL,
  networkSignallInfo   [10] IMPLICIT SEQUENCE {
    protocolId        ENUMERATED {
      gsm-0408         ( 1 ),
      gsm-0806         ( 2 ),
      gsm-BSSMAP       ( 3 ),
      ets-300102-1     ( 4 ),
    }
    signallInfo        OCTET STRING ( SIZE( 1 .. 200 ) ),
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId        MAP-EXTENSION .&extensionId ( {
            ,
            ...
          } ),
          extType      MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          } { @extId } ) OPTIONAL) OPTIONAL,
        }
      }
      pcs-Extensions    [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
      }
      camelInfo          [11] IMPLICIT SEQUENCE {
        supportedCamelPhases BIT STRING {
          phase1 (0),
          phase2 (1),
          phase3 (2),
          phase4 (3){ ( SIZE( 1 .. 16 ) ),
        }
        suppress-T-CSI     NULL OPTIONAL,
        extensionContainer SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
              extId        MAP-EXTENSION .&extensionId ( {
                ,
                ...
              } ),
              extType      MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
              } { @extId } ) OPTIONAL) OPTIONAL,
            }
          }
          pcs-Extensions    [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ...
          }
          offeredCamel4CSIs [0] IMPLICIT BIT STRING {
            o-csi (0),
            d-csi (1),
            vt-csi (2),
            t-csi (3),
            mt-sms-csi (4),
            mg-csi (5),
            psi-enhancements (6){ ( SIZE( 7 .. 16 ) ) OPTIONAL} OPTIONAL,
          suppressionOfAnnouncement [12] IMPLICIT NULL OPTIONAL,
          extensionContainer     [13] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
              SEQUENCE {
                extId        MAP-EXTENSION .&extensionId ( {
                  ,
                  ...
                } ),
                extType      MAP-EXTENSION .&ExtensionType ( {
                  ,
                  ...
                } { @extId } ) OPTIONAL) OPTIONAL,
              }
            }
            pcs-Extensions    [1] IMPLICIT SEQUENCE {
              ... } OPTIONAL,
              ... } OPTIONAL,
              ...
            }
            alertingPattern     [14] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            ccbs-Call          [15] IMPLICIT NULL OPTIONAL,
            supportedCCBS-Phase [16] IMPLICIT INTEGER ( 1 .. 127 ) OPTIONAL,
            additionalSignallInfo [17] IMPLICIT SEQUENCE {
              ext-ProtocolId    ENUMERATED {
                ets-300356      ( 1 ),
                ...
              }
              signallInfo        OCTET STRING ( SIZE( 1 .. 200 ) ),
              extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                  SEQUENCE {
                    extId        MAP-EXTENSION .&extensionId ( {
                      ,
                      ...
                    } ),
                    extType      MAP-EXTENSION .&ExtensionType ( {
                      ,
                      ...
                    } { @extId } ) OPTIONAL) OPTIONAL,
                  }
                }
              }
            }
          }
        }
      }
    }
  }
}

```

```

        ,
        ...}),
extType MAP-EXTENSION.&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
istSupportIndicator [18] IMPLICIT ENUMERATED {
    basicLSTSsupported ( 0 ),
    istCommandSupported ( 1 ),
    ... } OPTIONAL,
pre-pagingSupported [19] IMPLICIT NULL OPTIONAL,
callDiversionTreatmentIndicator [20] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
longFTN-Supported [21] IMPLICIT NULL OPTIONAL,
suppress-VT-CSI [22] IMPLICIT NULL OPTIONAL,
suppressIncomingCallBarring [23] IMPLICIT NULL OPTIONAL,
gsmSCF-InitiatedCall [24] IMPLICIT NULL OPTIONAL}
RESULT [3] IMPLICIT SEQUENCE {
    imsi [9] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
extendedRoutingInfo CHOICE {
    routingInfo CHOICE {
        roamingNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    forwardingData SEQUENCE {
        forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        forwardedToSubaddress [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
        forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        extensionContainer [7] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION.&extensionId ({
                        ,
                        ...}),
                    extType MAP-EXTENSION.&ExtensionType ({
                        ,
                        ...} { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ... } OPTIONAL,
                        ...
                        longForwardedToNumber [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL},
                    camelRoutingInfo [8] IMPLICIT SEQUENCE {
                        forwardingData SEQUENCE {
                            forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
                            forwardedToSubaddress [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
                            forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                            extensionContainer [7] IMPLICIT SEQUENCE {
                                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                    SEQUENCE {
  extId MAP-EXTENSION.&extensionId ({
  ,
  ...}),
  extType MAP-EXTENSION.&ExtensionType ({
  ,
  ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ... } OPTIONAL,
  ... } OPTIONAL,
  ...
  longForwardedToNumber [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL} OPTIONAL,
  gmscCamelSubscriptionInfo [0] IMPLICIT SEQUENCE {
  t-CSI [0] IMPLICIT SEQUENCE {
  t-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  t-BcsmTriggerDetectionPoint ENUMERATED {
  termAttemptAuthorized ( 12 ),
  ...
  tBusy ( 13 ),
  tNoAnswer ( 14 ),
  serviceKey INTEGER ( 0 .. 2147483647 ),
  gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
  defaultCallHandling [1] IMPLICIT ENUMERATED {
  continueCall ( 0 ),
  releaseCall ( 1 ),
  ...
  },
  extensionContainer [2] IMPLICIT SEQUENCE {
  ...
  }
  }
  }
  }
  }
  }
  }
                                    }
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE [1] IMPLICIT NULL OPTIONAL,
csi-Active [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
o-CSI [1] IMPLICIT SEQUENCE {
o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
o-BcsmTriggerDetectionPoint ENUMERATED {
collectedInfo ( 2 ),
... ,
routeSelectFailure ( 4 ),
serviceKey INTEGER ( 0 .. 2147483647 ),
gsmSCF-Address [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling [1] IMPLICIT ENUMERATED {
continueCall ( 0 ),
releaseCall ( 1 ),
... },
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
notificationToCSE [1] IMPLICIT NULL OPTIONAL,
csiActive [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,

```

```

        ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
o-BcsmCamelTDP-CriteriaList [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    o-BcsmTriggerDetectionPoint ENUMERATED {
        collectedInfo ( 2 ),
        ...
        routeSelectFailure ( 4 ),
    destinationNumberCriteria [0] IMPLICIT SEQUENCE {
        matchType [0] IMPLICIT ENUMERATED {
            inhibiting ( 0 ),
            enabling ( 1 ),
        destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
            INTEGER ( 1 .. 15 ) OPTIONAL,
        ... } OPTIONAL,
    basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        CHOICE {
            ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
            ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
    callTypeCriteria [2] IMPLICIT ENUMERATED {
        forwarded ( 0 ),
        notForwarded ( 1 ) } OPTIONAL,
        ...
o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
    OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
extensionContainer [4] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ...
            } ),
            extType MAP-EXTENSION .&ExtensionType ( {
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL} OPTIONAL,
t-BCSM-CAMEL-TDP-CriteriaList [4] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
    t-BCSM-TriggerDetectionPoint ENUMERATED {
        termAttemptAuthorized ( 12 ),
        ...
        tBusy ( 13 ),
        tNoAnswer ( 14 ) },
    basicServiceCriteria [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        CHOICE {
            ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
            ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
    t-CauseValueCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
        OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ... } OPTIONAL,
d-csi [5] IMPLICIT SEQUENCE {
    dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            dialledNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            serviceKey INTEGER ( 0 .. 2147483647 ),
            gsmSCF-Address OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            defaultCallHandling ENUMERATED {
                continueCall ( 0 ),
                releaseCall ( 1 ),
                ...
            },
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ...
                        } ),
                        extType MAP-EXTENSION .&ExtensionType ( {
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {

```

```

        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
extensionContainer [2] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ,
                ...
            ) ),
            extType MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            ) { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                csi-Active [4] IMPLICIT NULL OPTIONAL,
                ...
            ) OPTIONAL},
            extensionContainer [1] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        ) ),
                        extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        ) { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ... } OPTIONAL,
                            ... } OPTIONAL,
                            ...
                        ) } OPTIONAL,
cug-CheckInfo [3] IMPLICIT SEQUENCE {
    cug-Interlock OCTET STRING ( SIZE( 4 ) ),
    cug-OutgoingAccess NULL OPTIONAL,
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                ) ),
                extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                ) { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ... } OPTIONAL,
                    ... } OPTIONAL,
                    ...
                ) } OPTIONAL,
cugSubscriptionFlag [6] IMPLICIT NULL OPTIONAL,
subscriberInfo [7] IMPLICIT SEQUENCE {
    locationInformation [0] IMPLICIT SEQUENCE {
        ageOfLocationInformation INTEGER ( 0 .. 32767 ) OPTIONAL,
        geographicalInformation [0] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
        vlr-number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) )( SIZE( 1 .. 9 ) ) OPTIONAL,
        locationNumber [2] IMPLICIT OCTET STRING ( SIZE( 2 .. 10 ) ) OPTIONAL,
        cellGlobalIdOrServiceAreaIdOrLAI [3] CHOICE {
            cellGlobalIdOrServiceAreaIdFixedLength [0] IMPLICIT OCTET STRING ( SIZE( 7 ) ),
            laiFixedLength [1] IMPLICIT OCTET STRING ( SIZE( 5 ) ) OPTIONAL,
        }
        extensionContainer [4] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    ) ),
                    extType MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    ) { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ... } OPTIONAL,
                        ...
                    ) } OPTIONAL,
                    ...
                selectedLSA-Id [5] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
                msc-Number [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) )( SIZE( 1 .. 9 ) ) OPTIONAL,
                geodeticInformation [7] IMPLICIT OCTET STRING ( SIZE( 10 ) ) OPTIONAL,
                currentLocationRetrieved [8] IMPLICIT NULL OPTIONAL,
                sai-Present [9] IMPLICIT NULL OPTIONAL} OPTIONAL,
                subscriberState [1] CHOICE {

```



```

      ...
      ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
        ... } OPTIONAL,
        ...
      ...},
      ps-PDP-ActiveReachableForPaging [5] IMPLICIT SEQUENCE ( SIZE( 1 .. 50 ) ) OF
      SEQUENCE {
        pdp-ContextIdentifier [0] IMPLICIT INTEGER ( 1 .. 50 ),
        pdp-ContextActive [1] IMPLICIT NULL OPTIONAL,
        pdp-Type [2] IMPLICIT OCTET STRING ( SIZE( 2 ) ),
        pdp-Address [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 16 ) ) OPTIONAL,
        apn-Subscribed [4] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
        apn-InUse [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
        nsapi [6] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
        transactionId [7] IMPLICIT OCTET STRING ( SIZE( 1 .. 2 ) ) OPTIONAL,
        teid-ForGnAndGp [8] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
        teid-ForIu [9] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
        ggsn-Address [10] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
        qos-Subscribed [11] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
        qos-Requested [12] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
        qos-Negotiated [13] IMPLICIT OCTET STRING ( SIZE( 1 .. 9 ) ) OPTIONAL,
        chargingId [14] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
        chargingCharacteristics [15] IMPLICIT OCTET STRING ( SIZE( 2 ) ) OPTIONAL,
        mnc-Address [16] IMPLICIT OCTET STRING ( SIZE( 5 .. 17 ) ) OPTIONAL,
        extensionContainer [17] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ...
              ...
            },
            extType MAP-EXTENSION .&ExtensionType ( {
              ...
              ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ...
              ... } OPTIONAL,
              ...
            ...},
            netDetNotReachable ENUMERATED {
              msPurged ( 0 ),
              imsiDetached ( 1 ),
              restrictedArea ( 2 ),
              notRegistered ( 3 ) } OPTIONAL,
              imei [5] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
              ms-Classmark2 [6] IMPLICIT OCTET STRING ( SIZE( 3 ) ) OPTIONAL,
              gprs-MS-Class [7] IMPLICIT SEQUENCE {
                mSNetworkCapability [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ),
                mSRadioAccessCapability [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 50 ) ) OPTIONAL} OPTIONAL} OPTIONAL,
              ss-List [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 30 ) ) OF
                OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
              basicService [5] CHOICE {
                ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
                ext-Teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
              forwardingInterrogationRequired [4] IMPLICIT NULL OPTIONAL,
              vmsc-Address [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
              extensionContainer [0] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ( {
                    ...
                    ...
                  },
                  extType MAP-EXTENSION .&ExtensionType ( {
                    ...
                    ...
                  } { @extId } ) OPTIONAL} OPTIONAL,
                  pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                    ... } OPTIONAL,
                    ...
                  ...},
                  naea-PreferredCI [10] IMPLICIT SEQUENCE {
                    naea-PreferredCIC [0] IMPLICIT OCTET STRING ( SIZE( 3 ) ),
                    extensionContainer [1] IMPLICIT SEQUENCE {
                      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                      SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                          ...
                          ...
                        },
                        extType MAP-EXTENSION .&ExtensionType ( {
                          ...
                          ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        ...
                      ...},
                      ...
                    ...},
                    ...
                  ...},
                  ...
                ...},
                ...
              ...},
              ...
            ...},
            ...
          ...},
          ...
        ...},
        ...
      ...},
      ...
    ...},
    ...
  ...},
  ...

```

```

        ...
    } { @extId } ) OPTIONAL) OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
} OPTIONAL,
ccbs-Indicators [11] IMPLICIT SEQUENCE {
    ccbs-Possible [0] IMPLICIT NULL OPTIONAL,
    keepCCBS-CallIndicator [1] IMPLICIT NULL OPTIONAL,
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ...
                } ),
                extType MAP-EXTENSION .&ExtensionType ( {
                    ...
                } { @extId } ) OPTIONAL) OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        msisdn [12] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ) OPTIONAL,
        numberPortabilityStatus [13] IMPLICIT ENUMERATED {
            notKnownToBePorted (0),
            ownNumberPortedOut (1),
            foreignNumberPortedToForeignNetwork (2),
            ...
        } OPTIONAL,
        istAlertTimer [14] IMPLICIT INTEGER ( 15 .. 255 ) OPTIONAL,
        supportedCamelPhasesInVMSC [15] IMPLICIT BIT STRING {
            phase1 (0),
            phase2 (1),
            phase3 (2),
            phase4 (3) ( SIZE(1 .. 16 ) ) OPTIONAL,
        }
        offeredCamel4CSIsInVMSC [16] IMPLICIT BIT STRING {
            o-csi (0),
            d-csi (1),
            vt-csi (2),
            t-csi (3),
            mt-sms-csi (4),
            mg-csi (5),
            psi-enhancements (6) } ( SIZE(7 .. 16 ) ) OPTIONAL}
    }
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        or-NotAllowed |
        unknownSubscriber |
        numberChanged |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        absentSubscriber |
        busySubscriber |
        noSubscriberReply |
        callBarred |
        cug-Reject |
        forwardingViolation }
    CODE local :22
}

provideRoamingNumber OPERATION ::= {
    ARGUMENT SEQUENCE {
        imsi [0] IMPLICIT OCTET STRING ( SIZE(3 .. 8 ) ),
        msc-Number [1] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ),
        msisdn [2] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ) OPTIONAL,
        lmsi [4] IMPLICIT OCTET STRING ( SIZE(4 ) ) OPTIONAL,
        gsm-BearerCapability [5] IMPLICIT SEQUENCE {
            protocolId ENUMERATED {
                gsm-0408 (1),
                gsm-0806 (2),
                gsm-BSSMAP (3),
                ets-300102-1 (4) },
            signalInfo OCTET STRING ( SIZE(1 .. 200 ) ),
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10 ) ) OF
                    SEQUENCE {
                        ...
                    } ,
                    ...
                } ),
                extType MAP-EXTENSION .&ExtensionType ( {
                    ...
                } { @extId } ) OPTIONAL) OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        msisdn [12] IMPLICIT OCTET STRING ( SIZE(1 .. 20 ) ) ( SIZE(1 .. 9 ) ) OPTIONAL,
        numberPortabilityStatus [13] IMPLICIT ENUMERATED {
            notKnownToBePorted (0),
            ownNumberPortedOut (1),
            foreignNumberPortedToForeignNetwork (2),
            ...
        } OPTIONAL,
        istAlertTimer [14] IMPLICIT INTEGER ( 15 .. 255 ) OPTIONAL,
        supportedCamelPhasesInVMSC [15] IMPLICIT BIT STRING {
            phase1 (0),
            phase2 (1),
            phase3 (2),
            phase4 (3) ( SIZE(1 .. 16 ) ) OPTIONAL,
        }
        offeredCamel4CSIsInVMSC [16] IMPLICIT BIT STRING {
            o-csi (0),
            d-csi (1),
            vt-csi (2),
            t-csi (3),
            mt-sms-csi (4),
            mg-csi (5),
            psi-enhancements (6) } ( SIZE(7 .. 16 ) ) OPTIONAL}
    }
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        or-NotAllowed |
        unknownSubscriber |
        numberChanged |
        bearerServiceNotProvisioned |
        teleserviceNotProvisioned |
        absentSubscriber |
        busySubscriber |
        noSubscriberReply |
        callBarred |
        cug-Reject |
        forwardingViolation }
    CODE local :22
}

```

```

extId   MAP-EXTENSION .&extensionId ( {
    ,
    ...),
extType  MAP-EXTENSION .&ExtensionType ( {
    ,
    ...{ @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ... } OPTIONAL,
networkSignallInfo [6] IMPLICIT SEQUENCE {
    protocolId ENUMERATED {
        gsm-0408 ( 1 ),
        gsm-0806 ( 2 ),
        gsm-BSSMAP ( 3 ),
        ets-300102-1 ( 4 ),
    },
    signallInfo OCTET STRING ( SIZE( 1 .. 200 ) ),
extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...{ @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
suppressionOfAnnouncement [7] IMPLICIT NULL OPTIONAL,
gmsc-Address [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) )( SIZE( 1 .. 9 ) ) OPTIONAL,
callReferenceNumber [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ) OPTIONAL,
or-Interrogation [10] IMPLICIT NULL OPTIONAL,
extensionContainer [11] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...{ @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
            ...
            alertingPattern [12] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            ccbs-Call [13] IMPLICIT NULL OPTIONAL,
supportedCamelPhasesInGMSC [15] IMPLICIT BIT STRING {
    phase1 (0),
    phase2 (1),
    phase3 (2),
    phase4 (3) } ( SIZE( 1 .. 16 ) ) OPTIONAL,
additionalSignallInfo [14] IMPLICIT SEQUENCE {
    ext-ProtocolId ENUMERATED {
        ets-300356 ( 1 ),
        ...
    },
    signallInfo OCTET STRING ( SIZE( 1 .. 200 ) ),
extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...{ @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
orNotSupportedInGMSC [16] IMPLICIT NULL OPTIONAL,
pre-pagingSupported [17] IMPLICIT NULL OPTIONAL,
longFTN-Supported [18] IMPLICIT NULL OPTIONAL,
suppress-VT-CSI [19] IMPLICIT NULL OPTIONAL,
offeredCamel4CSIsInGMSC [20] IMPLICIT BIT STRING {

```

```

o-csi (0),
d-csi (1),
vt-csi (2),
t-csi (3),
mt-sms-csi (4),
mg-csi (5),
psi-enhancements (6}) ( SIZE( 7 .. 16 ) ) OPTIONAL)
RESULT SEQUENCE {
    roamingNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        }
    }
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        or-NotAllowed |
        absentSubscriber |
        noRoamingNumberAvailable }
    CODE local : 4
}

resumeCallHandling OPERATION ::= {
ARGUMENT SEQUENCE {
    callReferenceNumber [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 8 ) ) OPTIONAL,
    basicServiceGroup [1] CHOICE {
        ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
        ext-Telbservice [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
        forwardingData [2] IMPLICIT SEQUENCE {
            forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
            forwardedToSubaddress [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
            forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            extensionContainer [7] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                },
                longForwardedToNumber [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL} OPTIONAL,
                imsi [3] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
                cug-CheckInfo [4] IMPLICIT SEQUENCE {
                    cug-Interlock OCTET STRING ( SIZE( 4 ) ),
                    cug-OutgoingAccess NULL OPTIONAL,
                    extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                                } ),
                                extType MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                ...
                            } OPTIONAL,
                            ...
                        },
                        o-CSI [5] IMPLICIT SEQUENCE {
                            o-BcsmCamelTDPDataList SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
}

```

```

o-BcsmTriggerDetectionPoint ENUMERATED {
    collectedInfo      ( 2 ),
    ...
    routeSelectFailure ( 4 ),
    serviceKey         INTEGER ( 0 .. 2147483647 ),
    gsmSCF-Address     [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    defaultCallHandling [1] IMPLICIT ENUMERATED {
        continueCall   ( 0 ),
        releaseCall    ( 1 ),
        ...
    },
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        },
        extensionContainer   SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    }),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL,
                ...
            },
            camelCapabilityHandling [0] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
            notificationToCSE    [1] IMPLICIT NULL OPTIONAL,
            csiActive           [2] IMPLICIT NULL OPTIONAL} OPTIONAL,
            extensionContainer  [7] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        }),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL,
                    ...
                },
                ccbs-Possible       [8] IMPLICIT NULL OPTIONAL,
                msisdn              [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
                uu-Data              [10] IMPLICIT SEQUENCE {
                    uuIndicator      [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    uui               [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 131 ) ) OPTIONAL,
                    uusCFInteraction  [2] IMPLICIT NULL OPTIONAL,
                    extensionContainer [3] IMPLICIT SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                            SEQUENCE {
                                extId   MAP-EXTENSION .&extensionId ( {
                                    ,
                                    ...
                               }),
                                extType  MAP-EXTENSION .&ExtensionType ( {
                                    ,
                                    ...
                                } { @extId } ) OPTIONAL} OPTIONAL,
                                pcs-Extensions [1] IMPLICIT SEQUENCE {
                                    ...
                                } OPTIONAL,
                                    ...
                                } OPTIONAL,
                                ...
                            },
                            allInformationSent [11] IMPLICIT NULL OPTIONAL,
                            ...
                        },
                        d-csi              [12] IMPLICIT SEQUENCE {
                            dp-AnalysedInfoCriteriaList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    dialledNumber    OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                                    serviceKey       INTEGER ( 0 .. 2147483647 ),
                                    ...
                                }
                            }
                        }
                    }
                }
            }
        }
    }
}

```

```

gsmSCF-Address      OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
defaultCallHandling ENUMERATED {
    continueCall   ( 0 ),
    releaseCall    ( 1 ),
    ... },
extensionContainer  SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId    MAP-EXTENSION .&extensionId ( {
                ,
                ... } ),
            extType   MAP-EXTENSION .&ExtensionType ( {
                ,
                ... } { @extId } ) OPTIONAL } OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
                camelCapabilityHandling [1] IMPLICIT INTEGER ( 1 .. 16 ) OPTIONAL,
                extensionContainer [2] IMPLICIT SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                        SEQUENCE {
                            extId    MAP-EXTENSION .&extensionId ( {
                                ,
                                ... } ),
                            extType   MAP-EXTENSION .&ExtensionType ( {
                                ,
                                ... } { @extId } ) OPTIONAL } OPTIONAL,
                            pcs-Extensions [1] IMPLICIT SEQUENCE {
                                ... } OPTIONAL,
                                ... } OPTIONAL,
                                notificationToCSE [3] IMPLICIT NULL OPTIONAL,
                                csi-Active     [4] IMPLICIT NULL OPTIONAL,
                                ... } OPTIONAL,
                                o-BcsmCamelTDPCriteriaList [13] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                    SEQUENCE {
  o-BcsmTriggerDetectionPoint ENUMERATED {
  collectedInfo ( 2 ),
  ...
  routeSelectFailure ( 4 ),
  destinationNumberCriteria [0] IMPLICIT SEQUENCE {
  matchType      [0] IMPLICIT ENUMERATED {
  inhibiting   ( 0 ),
  enabling     ( 1 ),
  destinationNumberList [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
  destinationNumberLengthList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 3 ) ) OF
  INTEGER ( 1 .. 15 ) OPTIONAL,
  ... } OPTIONAL,
  basicServiceCriteria [1] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  CHOICE {
  ext-BearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ),
  ext-Telbservice  [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 5 ) ) } OPTIONAL,
  callTypeCriteria [2] IMPLICIT ENUMERATED {
  forwarded   ( 0 ),
  notForwarded ( 1 ) } OPTIONAL,
  ...
  o-CauseValueCriteria [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
  OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  extensionContainer [4] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  extId    MAP-EXTENSION .&extensionId ( {
  ,
  ... } ),
  extType   MAP-EXTENSION .&ExtensionType ( {
  ,
  ... } { @extId } ) OPTIONAL } OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
  ... } OPTIONAL,
  ... } OPTIONAL } OPTIONAL
  RESULT   SEQUENCE {
  extensionContainer SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
  SEQUENCE {
  extId    MAP-EXTENSION .&extensionId ( {
  ,

```

```

        ...} ),
      extType MAP-EXTENSION.&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL) OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      },
      ERRORS {
        forwardingFailed |
        orNotAllowed |
        unexpectedDataValue |
        dataMissing }
      CODE local : 6
    }

provideSIWFNumber OPERATION ::= {
  ARGUMENT SEQUENCE {
    gsm-BearerCapability [0] IMPLICIT SEQUENCE {
      protocolId ENUMERATED {
        gsm-0408 (1),
        gsm-0806 (2),
        gsm-BSSMAP (3),
        ets-300102-1 (4)},
      signalInfo OCTET STRING (SIZE(1 .. 200)),
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
          SEQUENCE {
            extId MAP-EXTENSION.&extensionId ( {
              ,
              ...} ),
            extType MAP-EXTENSION.&ExtensionType ( {
              ,
              ...} { @extId } ) OPTIONAL) OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ... } OPTIONAL,
              ... } OPTIONAL,
              ...
            },
            isdn-BearerCapability [1] IMPLICIT SEQUENCE {
              protocolId ENUMERATED {
                gsm-0408 (1),
                gsm-0806 (2),
                gsm-BSSMAP (3),
                ets-300102-1 (4)},
              signalInfo OCTET STRING (SIZE(1 .. 200)),
              extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
                  SEQUENCE {
                    extId MAP-EXTENSION.&extensionId ( {
                      ,
                      ...} ),
                    extType MAP-EXTENSION.&ExtensionType ( {
                      ,
                      ...} { @extId } ) OPTIONAL) OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                      ... } OPTIONAL,
                      ... } OPTIONAL,
                      ...
                    },
                    call-Direction [2] IMPLICIT OCTET STRING (SIZE(1)),
                    b-Subscriber-Address [3] IMPLICIT OCTET STRING (SIZE(1 .. 20))(SIZE(1 .. 9)),
                    chosenChannel [4] IMPLICIT SEQUENCE {
                      protocolId ENUMERATED {
                        gsm-0408 (1),
                        gsm-0806 (2),
                        gsm-BSSMAP (3),
                        ets-300102-1 (4)},
                      signalInfo OCTET STRING (SIZE(1 .. 200)),
                      extensionContainer SEQUENCE {
                        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
                          SEQUENCE {
                            extId MAP-EXTENSION.&extensionId ( {
                              ,
                              ...} ),
                            extType MAP-EXTENSION.&ExtensionType ( {
                              ,
                              ...} { @extId } ) OPTIONAL) OPTIONAL,
                            pcs-Extensions [1] IMPLICIT SEQUENCE {
                              ...
                            }
                          }
                        }
                      }
                    }
                  }
                }
              }
            }
          }
        }
      }
    }
  }
}

```

```

    ... } OPTIONAL,
    ... } OPTIONAL,
    ... },
lowerLayerCompatibility [5] IMPLICIT SEQUENCE {
    protocolId ENUMERATED {
        gsm-0408 (1),
        gsm-0806 (2),
        gsm-BSSMAP (3),
        ets-300102-1 (4),
    }
    signallInfo OCTET STRING (SIZE(1 .. 200)),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ,
                    ...
                }),
                extType MAP-EXTENSION .&ExtensionType ({
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
highLayerCompatibility [6] IMPLICIT SEQUENCE {
    protocolId ENUMERATED {
        gsm-0408 (1),
        gsm-0806 (2),
        gsm-BSSMAP (3),
        ets-300102-1 (4),
    }
    signallInfo OCTET STRING (SIZE(1 .. 200)),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ,
                    ...
                }),
                extType MAP-EXTENSION .&ExtensionType ({
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
extensionContainer [7] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
        SEQUENCE {
            extId MAP-EXTENSION .&extensionId ({
                ,
                ...
            }),
            extType MAP-EXTENSION .&ExtensionType ({
                ,
                ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ...
RESULT SEQUENCE {
    siWFSNumber [0] IMPLICIT OCTET STRING (SIZE(1 .. 20)) (SIZE(1 .. 9)),
    extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ,
                    ...
                }),
                extType MAP-EXTENSION .&ExtensionType ({
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ...
}
ERRORS {
    resourceLimitation |
    dataMissing |
    unexpectedDataValue |
    systemFailure }
CODE local : 31

```

```

} iwf-SignallingModify OPERATION ::= {
  ARGUMENT SEQUENCE {
    channelType [0] IMPLICIT SEQUENCE {
      protocolId ENUMERATED {
        gsm-0408 (1),
        gsm-0806 (2),
        gsm-BSSMAP (3),
        ets-300102-1 (4)},
      signallInfo OCTET STRING (SIZE(1 .. 200)),
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ({
              ,
              ...}),
            extType MAP-EXTENSION .&ExtensionType ({
              ,
              ...} { @extId }) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...} OPTIONAL,
          ...} OPTIONAL,
          ...} OPTIONAL,
        chosenChannel [1] IMPLICIT SEQUENCE {
          protocolId ENUMERATED {
            gsm-0408 (1),
            gsm-0806 (2),
            gsm-BSSMAP (3),
            ets-300102-1 (4)},
          signallInfo OCTET STRING (SIZE(1 .. 200)),
          extensionContainer SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
              SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                  ,
                  ...}),
                extType MAP-EXTENSION .&ExtensionType ({
                  ,
                  ...} { @extId }) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
              ...} OPTIONAL,
              ...} OPTIONAL,
              ...} OPTIONAL,
            extensionContainer [2] IMPLICIT SEQUENCE {
              privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
                SEQUENCE {
                  extId MAP-EXTENSION .&extensionId ({
                    ,
                    ...}),
                  extType MAP-EXTENSION .&ExtensionType ({
                    ,
                    ...} { @extId }) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                  ...} OPTIONAL,
                  ...} OPTIONAL,
                  ...
                }
              RESULT SEQUENCE {
                chosenChannel [0] IMPLICIT SEQUENCE {
                  protocolId ENUMERATED {
                    gsm-0408 (1),
                    gsm-0806 (2),
                    gsm-BSSMAP (3),
                    ets-300102-1 (4)},
                  signallInfo OCTET STRING (SIZE(1 .. 200)),
                  extensionContainer SEQUENCE {
                    privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
                      SEQUENCE {
                        extId MAP-EXTENSION .&extensionId ({
                          ,
                          ...}),
                        extType MAP-EXTENSION .&ExtensionType ({
                          ,
                          ...} { @extId }) OPTIONAL} OPTIONAL,
                      pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...} OPTIONAL,
                        ...} OPTIONAL,
                        ...
                      }
                    }
                  }
                }
              }
            }
          }
        }
      }
    }
  }
}

```

```

... } OPTIONAL,
extensionContainer [1] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
ERRORS {
resourceLimitation |
dataMissing |
unexpectedDataValue |
systemFailure }
CODE local : 32
}

setReportingState OPERATION ::= {
ARGUMENT SEQUENCE {
imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
lmsi [1] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
ccbs-Monitoring [2] IMPLICIT ENUMERATED {
stopMonitoring ( 0 ),
startMonitoring ( 1 ),
... } OPTIONAL,
extensionContainer [3] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
RESULT SEQUENCE {
ccbs-SubscriberStatus [0] IMPLICIT ENUMERATED {
ccbsNotIdle ( 0 ),
ccbsIdle ( 1 ),
ccbsNotReachable ( 2 ),
... } OPTIONAL,
extensionContainer [1] IMPLICIT SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...} ),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
ERRORS {
systemFailure |
unidentifiedSubscriber |
unexpectedDataValue |
dataMissing |
resourceLimitation |
facilityNotSupported }
CODE local : 73
}

statusReport OPERATION ::= {
ARGUMENT SEQUENCE {
imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
eventReportData [1] IMPLICIT SEQUENCE {
ccbs-SubscriberStatus [0] IMPLICIT ENUMERATED {

```

```

ccbsNotIdle      ( 0 ),
ccbsIdle        ( 1 ),
ccbsNotReachable ( 2 ),
... } OPTIONAL,
extensionContainer [1] IMPLICIT SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ... },
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ... } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
    callReportdata [2] IMPLICIT SEQUENCE {
      monitoringMode [0] IMPLICIT ENUMERATED {
        a-side   ( 0 ),
        b-side   ( 1 ),
        ... } OPTIONAL,
      callOutcome   [1] IMPLICIT ENUMERATED {
        success   ( 0 ),
        failure   ( 1 ),
        busy      ( 2 ),
        ... } OPTIONAL,
    extensionContainer [2] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ... },
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ... } OPTIONAL,
            ... } OPTIONAL,
            ... } OPTIONAL,
        extensionContainer [3] IMPLICIT SEQUENCE {
          privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
              extId   MAP-EXTENSION .&extensionId ( {
                ,
                ... },
              extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ... } { @extId } ) OPTIONAL} OPTIONAL,
              pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... }
            ...
        RESULT   SEQUENCE {
          extensionContainer [0] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
              SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                  ,
                  ... },
                extType  MAP-EXTENSION .&ExtensionType ( {
                  ,
                  ... } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                  ... } OPTIONAL,
                  ... } OPTIONAL,
                  ... }
            ...
        ERRORS  {
          unknownSubscriber |
          systemFailure |
          unexpectedDataValue |
          dataMissing }
        CODE   local   : 74
      }
    }

remoteUserFree OPERATION ::= {
  ARGUMENT  SEQUENCE {

```

```

imsi          [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
callInfo      [1] IMPLICIT SEQUENCE {
    protocolId   ENUMERATED {
        gsm-0408   ( 1 ),
        gsm-0806   ( 2 ),
        gsm-BSSMAP  ( 3 ),
        ets-300102-1 ( 4 ),
    }
    signalInfo   OCTET STRING ( SIZE( 1 .. 200 ) ),
    extensionContainer  SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            } OPTIONAL,
            ...
        },
        ccbs-Feature     [2] IMPLICIT SEQUENCE {
            ccbs-Index      [0] IMPLICIT INTEGER ( 1 .. 5 ) OPTIONAL,
            b-subscriberNumber [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
            b-subscriberSubaddress [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
            basicServiceGroup [3] CHOICE {
                bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
                ...
            },
            translatedB-Number [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
            replaceB-Number  [4] IMPLICIT NULL OPTIONAL,
            alertingPattern   [5] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            extensionContainer [6] IMPLICIT SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } },
                    RESULT   SEQUENCE {
                        ruf-Outcome      [0] IMPLICIT ENUMERATED {
                            accepted       ( 0 ),
                            rejected       ( 1 ),
                            noResponseFromFreeMS ( 2 ),
                            noResponseFromBusyMS ( 3 ),
                            udubFromFreeMS  ( 4 ),
                            udubFromBusyMS  ( 5 ),
                            ...
                        },
                        extensionContainer [1] IMPLICIT SEQUENCE {
                            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                                SEQUENCE {
                                    extId   MAP-EXTENSION .&extensionId ( {
  ,
  ...
                                    } ),
                                    extType  MAP-EXTENSION .&ExtensionType ( {
  ,
  ...
                                    } { @extId } ) OPTIONAL} OPTIONAL,
                                    pcs-Extensions [1] IMPLICIT SEQUENCE {
  ...
                                    } OPTIONAL,
                                    ...
                                } },
                                ERRORS   {
                                    unexpectedDataValue |
                                    dataMissing |
                                    incompatibleTerminal |
                                    absentSubscriber |
                                    systemFailure |
                                    busySubscriber }
                                CODE local :75
                            }
}

```

```

ist-Alert OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi          [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    extensionContainer [1] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    RESULT   SEQUENCE {
      istAlertTimer      [0] IMPLICIT INTEGER ( 15 .. 255 ) OPTIONAL,
      istInformationWithdraw [1] IMPLICIT NULL OPTIONAL,
      callTerminationIndicator [2] IMPLICIT ENUMERATED {
        terminateCallActivityReferred ( 0 ),
        terminateAllCallActivities ( 1 ),
        ... } OPTIONAL,
      extensionContainer [3] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
              ,
              ...
            }) ,
            extType  MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
        }
      }
    ERRORS  {
      unexpectedDataValue |
      resourceLimitation |
      unknownSubscriber |
      systemFailure |
      facilityNotSupported }
  CODE local :87
}

ist-Command OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi          [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    extensionContainer [1] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    RESULT   SEQUENCE {
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
              ,
              ...
            }) ,
            extType  MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
        }
      }
    ERRORS  {
      unexpectedDataValue |

```

```

resourceLimitation |
unknownSubscriber |
systemFailure |
facilityNotSupported }
CODE local : 88
}

END

--Expanded ASN1 Module 'MAP-SupplementaryServiceOperations'
--SIEMENS ASN.1 Compiler R5.61 (Production_5.61)
-- Date: 2003-03-27 Time: 10:34:48

MAP-SupplementaryServiceOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-
SupplementaryServiceOperations (8) version8 (8) }

DEFINITIONS

 ::=

BEGIN

EXPORTS
registerSS,
eraseSS,
activateSS,
deactivateSS,
interrogateSS,
processUnstructuredSS-Request,
unstructuredSS-Request,
unstructuredSS-Notify,
registerPassword,
getPassword,
ss-InvocationNotification,
registerCC-Entry,
eraseCC-Entry;

registerSS OPERATION ::= {
ARGUMENT SEQUENCE {
    ss-Code          OCTET STRING ( SIZE( 1 ) ),
    basicService     CHOICE {
        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
        teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        forwardedToNumber [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
        forwardedToSubaddress [6] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
        noReplyConditionTime [5] IMPLICIT INTEGER ( 5 .. 30 ) OPTIONAL,
        ... ,
        defaultPriority [7] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
        nbrUser        [8] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL,
        longFTN-Supported [9] IMPLICIT NULL OPTIONAL}
RESULT CHOICE {
    forwardingInfo [0] IMPLICIT SEQUENCE {
        ss-Code          OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        forwardingFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
            SEQUENCE {
                basicService     CHOICE {
                    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    ss-Status       [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
                    forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
                    forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    noReplyConditionTime [7] IMPLICIT INTEGER ( 5 .. 30 ) OPTIONAL,
                    ... ,
                    longForwardedToNumber [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL},
            ... },
    callBarringInfo [1] IMPLICIT SEQUENCE {
        ss-Code          OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        callBarringFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
            SEQUENCE {
                basicService     CHOICE {
                    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    ss-Status       [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    ... },
            ... },
        ... },
    ... },
    ... }
}

```

```

ss-Data      [3] IMPLICIT SEQUENCE {
  ss-Code      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  ss-Status     [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
  ss-SubscriptionOption CHOICE {
    cliRestrictionOption [2] IMPLICIT ENUMERATED {
      permanent          ( 0 ),
      temporaryDefaultRestricted ( 1 ),
      temporaryDefaultAllowed ( 2 ),
    },
    overrideCategory [1] IMPLICIT ENUMERATED {
      overrideEnabled ( 0 ),
      overrideDisabled ( 1 ) } OPTIONAL,
  },
  basicServiceGroupList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
  CHOICE {
    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
  ... ,
  defaultPriority INTEGER ( 0 .. 15 ) OPTIONAL,
  nbrUser        [5] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL}
}

ERRORS {
  systemFailure |
  dataMissing |
  unexpectedDataValue |
  bearerServiceNotProvisioned |
  teleserviceNotProvisioned |
  callBarred |
  illegalSS-Operation |
  ss-ErrorStatus |
  ss-Incompatibility }

CODE local : 10
}

eraseSS OPERATION ::= {
  ARGUMENT SEQUENCE {
    ss-Code      OCTET STRING ( SIZE( 1 ) ),
    basicService CHOICE {
      bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
      teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
    ... ,
    longFTN-Supported [4] IMPLICIT NULL OPTIONAL}
  },
  RESULT CHOICE {
    forwardingInfo [0] IMPLICIT SEQUENCE {
      ss-Code      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
      forwardingFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
      SEQUENCE {
        basicService CHOICE {
          bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
          teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
          ss-Status     [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
          forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
          forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
          forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
          noReplyConditionTime [7] IMPLICIT INTEGER ( 5 .. 30 ) OPTIONAL,
        ... ,
        longForwardedToNumber [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL},
      ... },
    callBarringInfo [1] IMPLICIT SEQUENCE {
      ss-Code      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
      callBarringFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
      SEQUENCE {
        basicService CHOICE {
          bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
          teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
          ss-Status     [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ... },
      ... },
    ss-Data      [3] IMPLICIT SEQUENCE {
      ss-Code      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
      ss-Status     [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
      ss-SubscriptionOption CHOICE {
        cliRestrictionOption [2] IMPLICIT ENUMERATED {
          permanent          ( 0 ),
          temporaryDefaultRestricted ( 1 ),
          temporaryDefaultAllowed ( 2 ),
        },
        overrideCategory [1] IMPLICIT ENUMERATED {
          overrideEnabled ( 0 ),
          overrideDisabled ( 1 ) } OPTIONAL,
      },
      basicServiceGroupList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
    }
  }
}

```

```

CHOICE {
    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    ...
    defaultPriority INTEGER ( 0 .. 15 ) OPTIONAL,
    nbrUser [5] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL}
}

ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    bearerServiceNotProvisioned |
    teleserviceNotProvisioned |
    callBarred |
    illegalSS-Operation |
    ss-ErrorStatus }
CODE local : 11
}

activateSS OPERATION ::= {
ARGUMENT SEQUENCE {
    ss-Code OCTET STRING ( SIZE( 1 ) ),
    basicService CHOICE {
        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
        teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ...
        longFTN-Supported [4] IMPLICIT NULL OPTIONAL}
    RESULT CHOICE {
        forwardingInfo [0] IMPLICIT SEQUENCE {
            ss-Code OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            forwardingFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
                SEQUENCE {
                    basicService CHOICE {
                        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                        teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
                        forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
                        forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        noReplyConditionTime [7] IMPLICIT INTEGER ( 5 .. 30 ) OPTIONAL,
                        ...
                        longForwardedToNumber [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL},
                    ...},
        callBarringInfo [1] IMPLICIT SEQUENCE {
            ss-Code OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
            callBarringFeatureList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
                SEQUENCE {
                    basicService CHOICE {
                        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                        teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        ...
                    },
            ss-Data [3] IMPLICIT SEQUENCE {
                ss-Code OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                ss-SubscriptionOption CHOICE {
                    ciRestrictionOption [2] IMPLICIT ENUMERATED {
                        permanent ( 0 ),
                        temporaryDefaultRestricted ( 1 ),
                        temporaryDefaultAllowed ( 2 ),
                    overrideCategory [1] IMPLICIT ENUMERATED {
                        overrideEnabled ( 0 ),
                        overrideDisabled ( 1 ) } OPTIONAL,
                basicServiceGroupList SEQUENCE ( SIZE( 1 .. 13 ) ) OF
                    CHOICE {
                        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                        teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                        ...
                        defaultPriority INTEGER ( 0 .. 15 ) OPTIONAL,
                        nbrUser [5] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL}
                }
            }
        }
    }
}
}

```

```

illegalSS-Operation |
ss-ErrorStatus |
ss-SubscriptionViolation |
ss-Incompatibility |
negativePW-Check |
numberOfPW-AttemptsViolation }
CODE local : 12
}

deactivateSS OPERATION ::= {
  ARGUMENT SEQUENCE {
    ss-Code OCTET STRING (SIZE(1)),
    basicService CHOICE {
      bearerService [2] IMPLICIT OCTET STRING (SIZE(1)),
      teleservice [3] IMPLICIT OCTET STRING (SIZE(1))} OPTIONAL,
    ...,
    longFTN-Supported [4] IMPLICIT NULL OPTIONAL}
  RESULT CHOICE {
    forwardingInfo [0] IMPLICIT SEQUENCE {
      ss-Code OCTET STRING (SIZE(1)) OPTIONAL,
      forwardingFeatureList SEQUENCE (SIZE(1..13)) OF
        SEQUENCE {
          basicService CHOICE {
            bearerService [2] IMPLICIT OCTET STRING (SIZE(1)),
            teleservice [3] IMPLICIT OCTET STRING (SIZE(1))} OPTIONAL,
            ss-Status [4] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
            forwardedToNumber [5] IMPLICIT OCTET STRING (SIZE(1..20))(SIZE(1..9)) OPTIONAL,
            forwardedToSubaddress [8] IMPLICIT OCTET STRING (SIZE(1..21)) OPTIONAL,
            forwardingOptions [6] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
            noReplyConditionTime [7] IMPLICIT INTEGER (5..30) OPTIONAL,
          ...,
          longForwardedToNumber [9] IMPLICIT OCTET STRING (SIZE(1..20))(SIZE(1..15)) OPTIONAL},
        ...},
    callBarringInfo [1] IMPLICIT SEQUENCE {
      ss-Code OCTET STRING (SIZE(1)) OPTIONAL,
      callBarringFeatureList SEQUENCE (SIZE(1..13)) OF
        SEQUENCE {
          basicService CHOICE {
            bearerService [2] IMPLICIT OCTET STRING (SIZE(1)),
            teleservice [3] IMPLICIT OCTET STRING (SIZE(1))} OPTIONAL,
            ss-Status [4] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
          ...},
        ...},
    ss-Data [3] IMPLICIT SEQUENCE {
      ss-Code OCTET STRING (SIZE(1)) OPTIONAL,
      ss-Status [4] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
      ss-SubscriptionOption CHOICE {
        cliRestrictionOption [2] IMPLICIT ENUMERATED {
          permanent (0),
          temporaryDefaultRestricted (1),
          temporaryDefaultAllowed (2)},
        overrideCategory [1] IMPLICIT ENUMERATED {
          overrideEnabled (0),
          overrideDisabled (1)} OPTIONAL,
      basicServiceGroupList SEQUENCE (SIZE(1..13)) OF
        CHOICE {
          bearerService [2] IMPLICIT OCTET STRING (SIZE(1)),
          teleservice [3] IMPLICIT OCTET STRING (SIZE(1))} OPTIONAL,
        ...,
        defaultPriority INTEGER (0..15) OPTIONAL,
        nbrUser [5] IMPLICIT INTEGER (1..7) OPTIONAL}}}
  ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    bearerServiceNotProvisioned |
    teleserviceNotProvisioned |
    callBarred |
    illegalSS-Operation |
    ss-ErrorStatus |
    ss-SubscriptionViolation |
    negativePW-Check |
    numberOfPW-AttemptsViolation }
CODE local : 13
}

interrogateSS OPERATION ::= {

```

```

ARGUMENT SEQUENCE {
  ss-Code          OCTET STRING ( SIZE( 1 ) ),
  basicService    CHOICE {
    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    ...
    longFTN-Supported [4] IMPLICIT NULL OPTIONAL}
  RESULT  CHOICE {
    ss-Status        [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    basicServiceGroupList [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 13 ) ) OF
      CHOICE {
        bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
        teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        ...
        forwardingFeatureList [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 13 ) ) OF
          SEQUENCE {
            basicService    CHOICE {
              bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
              teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
              ss-Status       [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
              forwardedToNumber [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
              forwardedToSubaddress [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
              forwardingOptions [6] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
              noReplyConditionTime [7] IMPLICIT INTEGER ( 5 .. 30 ) OPTIONAL,
              ...
              longForwardedToNumber [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 15 ) ) OPTIONAL,
            genericServiceInfo [4] IMPLICIT SEQUENCE {
              ss-Status        OCTET STRING ( SIZE( 1 ) ),
              cliRestrictionOption ENUMERATED {
                permanent      ( 0 ),
                temporaryDefaultRestricted ( 1 ),
                temporaryDefaultAllowed ( 2 ) } OPTIONAL,
              ...
              maximumEntitledPriority [0] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
              defaultPriority     [1] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
              ccbs-FeatureList   [2] IMPLICIT SEQUENCE ( SIZE( 1 .. 5 ) ) OF
                SEQUENCE {
                  ccbs-Index      [0] IMPLICIT INTEGER ( 1 .. 5 ) OPTIONAL,
                  b-subscriberNumber [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
                  b-subscriberSubaddress [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
                  basicServiceGroup [3] CHOICE {
                    bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
                    teleservice   [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
                    ... } OPTIONAL,
                  nbrSB           [3] IMPLICIT INTEGER ( 2 .. 7 ) OPTIONAL,
                  nbrUser         [4] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL,
                  nbrSN           [5] IMPLICIT INTEGER ( 1 .. 7 ) OPTIONAL}}
            }
          }
        }
      }
    }
  }
}

ERRORS {
  systemFailure |
  dataMissing |
  unexpectedDataValue |
  bearerServiceNotProvisioned |
  teleserviceNotProvisioned |
  callBarred |
  illegalSS-Operation |
  ss-NotAvailable }
CODE local :14
}

processUnstructuredSS-Request OPERATION ::= {
  ARGUMENT SEQUENCE {
    ussd-DataCodingScheme OCTET STRING ( SIZE( 1 ) ),
    ussd-String          OCTET STRING ( SIZE( 1 .. 160 ) ),
    ...
    alertingPattern     OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    msisdn             [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL}
  RESULT  SEQUENCE {
    ussd-DataCodingScheme OCTET STRING ( SIZE( 1 ) ),
    ussd-String          OCTET STRING ( SIZE( 1 .. 160 ) ),
    ...
  }
  ERRORs {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    unknownAlphabet |
    callBarred }
  CODE local :59
}

```

```

unstructuredSS-Request OPERATION ::= {
  ARGUMENT SEQUENCE {
    ussd-DataCodingScheme OCTET STRING ( SIZE( 1 ) ),
    ussd-String          OCTET STRING ( SIZE( 1 .. 160 ) ),
    ...
    alertingPattern      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    msisdn              [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL}
  RESULT   SEQUENCE {
    ussd-DataCodingScheme OCTET STRING ( SIZE( 1 ) ),
    ussd-String          OCTET STRING ( SIZE( 1 .. 160 ) ),
    ...
  }
  ERRORS   {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    absentSubscriber |
    illegalSubscriber |
    illegalEquipment |
    unknownAlphabet |
    ussd-Busy }
  CODE    local   : 60
}

unstructuredSS-Notify OPERATION ::= {
  ARGUMENT SEQUENCE {
    ussd-DataCodingScheme OCTET STRING ( SIZE( 1 ) ),
    ussd-String          OCTET STRING ( SIZE( 1 .. 160 ) ),
    ...
    alertingPattern      OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    msisdn              [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL}
  RETURN  RESULT   TRUE
  ERRORS   {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    absentSubscriber |
    illegalSubscriber |
    illegalEquipment |
    unknownAlphabet |
    ussd-Busy }
  CODE    local   : 61
}

registerPassword OPERATION ::= {
  ARGUMENT  OCTET STRING ( SIZE( 1 ) )
  RESULT    NumericString ( FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9" ) ) (SIZE( 4 ) )
  ERRORS   {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    callBarred |
    ss-SubscriptionViolation |
    pw-RegistrationFailure |
    negativePW-Check |
    numberOfPW-AttemptsViolation }
  CODE    local   : 17
}

getPassword OPERATION ::= {
  ARGUMENT  ENUMERATED {
    enterPW      ( 0 ),
    enterNewPW   ( 1 ),
    enterNewPW-Again ( 2 ) }
  RESULT    NumericString ( FROM ("0"|"1"|"2"|"3"|"4"|"5"|"6"|"7"|"8"|"9" ) ) (SIZE( 4 ) )
  CODE    local   : 18
}

ss-InvocationNotification OPERATION ::= {
  ARGUMENT SEQUENCE {
    imsi        [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
    msisdn      [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    ss-Event     [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    ss-EventSpecification [3] IMPLICIT SEQUENCE ( SIZE( 1 .. 2 ) ) OF
      OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
    extensionContainer [4] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    }
  }
}

```

```

SEQUENCE {
  extId  MAP-EXTENSION .&extensionId ({
    ,
    ...}),
  extType  MAP-EXTENSION .&ExtensionType ({
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions  [1] IMPLICIT SEQUENCE {
    ...
    } OPTIONAL,
    ...
    } OPTIONAL,
  ...
  b-subscriberNumber  [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
  ccbs-RequestState  [6] IMPLICIT ENUMERATED {
    request  ( 0 ),
    recall  ( 1 ),
    active  ( 2 ),
    completed  ( 3 ),
    suspended  ( 4 ),
    frozen  ( 5 ),
    deleted  ( 6 ) } OPTIONAL}
  RESULT  SEQUENCE {
    extensionContainer  SEQUENCE {
      privateExtensionList  [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId  MAP-EXTENSION .&extensionId ({
            ,
            ...}),
          extType  MAP-EXTENSION .&ExtensionType ({
            ,
            ...} { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions  [1] IMPLICIT SEQUENCE {
            ...
            } OPTIONAL,
            ...
            } OPTIONAL,
            ...
        }
    }
  ERRORS  {
    dataMissing |
    unexpectedDataValue |
    unknownSubscriber }
  CODE  local  :72
}

```

```

registerCC-Entry OPERATION ::= {
  ARGUMENT  SEQUENCE {
    ss-Code  [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
    ccbs-Data  [1] IMPLICIT SEQUENCE {
      ccbs-Feature  [0] IMPLICIT SEQUENCE {
        ccbs-Index  [0] IMPLICIT INTEGER ( 1 .. 5 ) OPTIONAL,
        b-subscriberNumber  [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
        b-subscriberSubaddress  [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 21 ) ) OPTIONAL,
        basicServiceGroup  [3] CHOICE {
          bearerService  [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
          teleservice  [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
          ...
        },
        translatedB-Number  [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        serviceIndicator  [2] IMPLICIT BIT STRING {
          clir-invoked  ( 0 ),
          camel-invoked  ( 1 ) } ( SIZE( 2 .. 32 ) ) OPTIONAL,
        callInfo  [3] IMPLICIT SEQUENCE {
          protocolId  ENUMERATED {
            gsm-0408  ( 1 ),
            gsm-0806  ( 2 ),
            gsm-BSSMAP  ( 3 ),
            ets-300102-1  ( 4 ) },
          signallInfo  OCTET STRING ( SIZE( 1 .. 200 ) ),
          extensionContainer  SEQUENCE {
            privateExtensionList  [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
              SEQUENCE {
                extId  MAP-EXTENSION .&extensionId ({
                  ,
                  ...}),
                extType  MAP-EXTENSION .&ExtensionType ({
                  ,
                  ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions  [1] IMPLICIT SEQUENCE {
                  ...
                  } OPTIONAL,
                  ...
                  } },
                  ...
                }
            }
        }
      }
    }
  }
}

```

```

networkSignalInfo [4] IMPLICIT SEQUENCE {
    protocolId ENUMERATED {
        gsm-0408 (1),
        gsm-0806 (2),
        gsm-BSSMAP (3),
        ets-300102-1 (4)},
    signalInfo OCTET STRING (SIZE(1 .. 200)),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
            SEQUENCE {
                extId MAP-EXTENSION.&extensionId ({
                    ...
                }),
                extType MAP-EXTENSION.&ExtensionType ({
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    },
    ...
}
RESULT SEQUENCE {
    ccbs-Feature [0] IMPLICIT SEQUENCE {
        ccbs-Index [0] IMPLICIT INTEGER (1 .. 5) OPTIONAL,
        b-subscriberNumber [1] IMPLICIT OCTET STRING (SIZE(1 .. 20)) (SIZE(1 .. 9)) OPTIONAL,
        b-subscriberSubaddress [2] IMPLICIT OCTET STRING (SIZE(1 .. 21)) OPTIONAL,
        basicServiceGroup [3] CHOICE {
            bearerService [2] IMPLICIT OCTET STRING (SIZE(1)),
            teleservice [3] IMPLICIT OCTET STRING (SIZE(1))} OPTIONAL,
        ...
    }
}
ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    callBarred |
    illegalSS-Operation |
    ss-ErrorStatus |
    ss-Incompatibility |
    shortTermDenial |
    longTermDenial |
    facilityNotSupported }
CODE local :76
}

eraseCC-Entry OPERATION ::= {
ARGUMENT SEQUENCE {
    ss-Code [0] IMPLICIT OCTET STRING (SIZE(1)),
    ccbs-Index [1] IMPLICIT INTEGER (1 .. 5) OPTIONAL,
    ...
}
RESULT SEQUENCE {
    ss-Code [0] IMPLICIT OCTET STRING (SIZE(1)),
    ss-Status [1] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
    ...
}
ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    callBarred |
    illegalSS-Operation |
    ss-ErrorStatus }
CODE local :77
}

```

END

--Expanded ASN1 Module 'MAP-ShortMessageServiceOperations'  
--SIEMENS ASN.1 Compiler R5.61 (Production\_5.61)  
-- Date: 2003-03-27 Time: 10:35:44

MAP-ShortMessageServiceOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-ShortMessageServiceOperations (9) version8 (8) }

## DEFINITIONS

:=

BEGIN

EXPORTS

sendRoutingInfoForSM,  
mo-ForwardSM,  
mt-ForwardSM,  
reportSM-DeliveryStatus,  
alertServiceCentre,  
informServiceCentre,  
readyForSM;

sendRoutingInfoForSM OPERATION ::= {  
 ARGUMENT SEQUENCE {  
 msisdn [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),  
 sm-RP-PRI [1] IMPLICIT BOOLEAN,  
 serviceCentreAddress [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ),  
 extensionContainer [6] IMPLICIT SEQUENCE {  
 privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF  
 SEQUENCE {  
 extId MAP-EXTENSION .&extensionId ( {  
 ,  
 ... } ),  
 extType MAP-EXTENSION .&ExtensionType ( {  
 ,  
 ... } { @extId } ) OPTIONAL } OPTIONAL,  
 pcs-Extensions [1] IMPLICIT SEQUENCE {  
 ... } OPTIONAL,  
 ... } OPTIONAL,  
 ... ,  
 gprsSupportIndicator [7] IMPLICIT NULL OPTIONAL,  
 sm-RP-MTI [8] IMPLICIT INTEGER ( 0 .. 10 ) OPTIONAL,  
 sm-RP-SMEA [9] IMPLICIT OCTET STRING ( SIZE( 1 .. 12 ) ) OPTIONAL}  
 RESULT SEQUENCE {  
 imsi OCTET STRING ( SIZE( 3 .. 8 ) ),  
 locationInfoWithLMSI [0] IMPLICIT SEQUENCE {  
 networkNode-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),  
 lmsi OCTET STRING ( SIZE( 4 ) ) OPTIONAL,  
 extensionContainer SEQUENCE {  
 privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF  
 SEQUENCE {  
 extId MAP-EXTENSION .&extensionId ( {  
 ,  
 ... } ),  
 extType MAP-EXTENSION .&ExtensionType ( {  
 ,  
 ... } { @extId } ) OPTIONAL } OPTIONAL,  
 pcs-Extensions [1] IMPLICIT SEQUENCE {  
 ... } OPTIONAL,  
 ... } OPTIONAL,  
 ... ,  
 gprsNodeIndicator [5] IMPLICIT NULL OPTIONAL,  
 additional-Number [6] CHOICE {  
 msc-Number [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),  
 sgsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) } OPTIONAL},  
 extensionContainer [4] IMPLICIT SEQUENCE {  
 privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF  
 SEQUENCE {  
 extId MAP-EXTENSION .&extensionId ( {  
 ,  
 ... } ),  
 extType MAP-EXTENSION .&ExtensionType ( {  
 ,  
 ... } { @extId } ) OPTIONAL } OPTIONAL,  
 pcs-Extensions [1] IMPLICIT SEQUENCE {  
 ... } OPTIONAL,  
 ... } OPTIONAL,  
 ... }  
 ERRORS {  
 systemFailure |  
 dataMissing |  
 unexpectedDataValue |  
 facilityNotSupported |  
 unknownSubscriber |  
 teleserviceNotProvisioned |  
 callBarred |

```

absentSubscriberSM }
CODE local : 45
}

mo-ForwardSM OPERATION ::= {
ARGUMENT SEQUENCE {
sm-RP-DA CHOICE {
imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
lmsi [1] IMPLICIT OCTET STRING ( SIZE( 4 ) ),
serviceCentreAddressDA [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ),
noSM-RP-DA [5] IMPLICIT NULL},
sm-RP-OA CHOICE {
msisdn [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
serviceCentreAddressOA [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ),
noSM-RP-OA [5] IMPLICIT NULL},
sm-RP-UI OCTET STRING ( SIZE( 1 .. 200 ) ),
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
...} OPTIONAL,
...} OPTIONAL,
...},
imsi OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL}
RESULT SEQUENCE {
sm-RP-UI OCTET STRING ( SIZE( 1 .. 200 ) ) OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
...} OPTIONAL,
...} OPTIONAL,
...}
ERRORS {
systemFailure |
unexpectedDataValue |
facilityNotSupported |
sm-DeliveryFailure }
CODE local : 46
}

mt-ForwardSM OPERATION ::= {
ARGUMENT SEQUENCE {
sm-RP-DA CHOICE {
imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
lmsi [1] IMPLICIT OCTET STRING ( SIZE( 4 ) ),
serviceCentreAddressDA [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ),
noSM-RP-DA [5] IMPLICIT NULL},
sm-RP-OA CHOICE {
msisdn [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
serviceCentreAddressOA [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ),
noSM-RP-OA [5] IMPLICIT NULL},
sm-RP-UI OCTET STRING ( SIZE( 1 .. 200 ) ),
moreMessagesToSend NULL OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ( {
,
...}),
extType MAP-EXTENSION .&ExtensionType ( {
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
...} OPTIONAL,
...}

```

```

    ... } OPTIONAL,
    ...
}
RESULT SEQUENCE {
  sm-RP-UI      OCTET STRING ( SIZE( 1 .. 200 ) ) OPTIONAL,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      ) ,
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      ) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    } OPTIONAL,
    ...
  }
  ERRORS {
    systemFailure |
    dataMissing |
    unexpectedDataValue |
    facilityNotSupported |
    unidentifiedSubscriber |
    illegalSubscriber |
    illegalEquipment |
    subscriberBusyForMT-SMS |
    sm-DeliveryFailure |
    absentSubscriberSM }
  CODE local : 44
}

reportSM-DeliveryStatus OPERATION ::= {
  ARGUMENT SEQUENCE {
    msisdn          OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    serviceCentreAddress OCTET STRING ( SIZE( 1 .. 20 ) ),
    sm-DeliveryOutcome ENUMERATED {
      memoryCapacityExceeded ( 0 ),
      absentSubscriber ( 1 ),
      successfulTransfer ( 2 ),
      absentSubscriberDiagnosticSM [0] IMPLICIT INTEGER ( 0 .. 255 ) OPTIONAL,
      extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          ) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          ) { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
          } OPTIONAL,
          ...
        } OPTIONAL,
        ...
      },
      gprsSupportIndicator [2] IMPLICIT NULL OPTIONAL,
      deliveryOutcomeIndicator [3] IMPLICIT NULL OPTIONAL,
      additionalSM-DeliveryOutcome [4] IMPLICIT ENUMERATED {
        memoryCapacityExceeded ( 0 ),
        absentSubscriber ( 1 ),
        successfulTransfer ( 2 ) } OPTIONAL,
        additionalAbsentSubscriberDiagnosticSM [5] IMPLICIT INTEGER ( 0 .. 255 ) OPTIONAL}
    }
    RESULT SEQUENCE {
      storedMSISDN OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
      extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          ) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          ) { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
          } OPTIONAL,
          ...
        } OPTIONAL,
        ...
      }
      ERRORS {
        dataMissing |
        ...
      }
    }
  }
}

```

```

unexpectedDataValue |
unknownSubscriber |
messageWaitingListFull }
CODE local :47
}

alertServiceCentre OPERATION ::= {
ARGUMENT SEQUENCE {
msisdn OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ),
serviceCentreAddress OCTET STRING ( SIZE(1 .. 20) ),
...
}
RETURN RESULT TRUE
ERRORS {
systemFailure |
dataMissing |
unexpectedDataValue }
CODE local :64
}

informServiceCentre OPERATION ::= {
ARGUMENT SEQUENCE {
storedMSISDN OCTET STRING ( SIZE(1 .. 20) ) ( SIZE(1 .. 9) ) OPTIONAL,
mw-Status BIT STRING {
sc-AddressNotIncluded (0),
mnrf-Set (1),
mcef-Set (2),
mnrg-Set (3) } ( SIZE(6 .. 16) ) OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
absentSubscriberDiagnosticSM INTEGER (0 .. 255) OPTIONAL,
additionalAbsentSubscriberDiagnosticSM [0] IMPLICIT INTEGER (0 .. 255) OPTIONAL}
CODE local :63
}

readyForSM OPERATION ::= {
ARGUMENT SEQUENCE {
imsi [0] IMPLICIT OCTET STRING ( SIZE(3 .. 8) ),
alertReason ENUMERATED {
ms-Present (0),
memoryAvailable (1)},
alertReasonIndicator NULL OPTIONAL,
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... },
RESULT SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... }
}
}

```

```

... } OPTIONAL,
...
}
ERRORS {
  dataMissing |
  unexpectedDataValue |
  facilityNotSupported |
  unknownSubscriber }
CODE local :66
}

END

-- Expanded ASN1 Module 'MAP-Group-Call-Operations'
--SIEMENS ASN.1 Compiler R5.61 (Production_5.61)
-- Date: 2003-03-27 Time: 10:35:53

MAP-Group-Call-Operations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-Group-Call-Operations (22) version8 (8) }

DEFINITIONS ::=

BEGIN

EXPORTS
  prepareGroupCall,
  sendGroupCallEndSignal,
  forwardGroupCallSignalling,
  processGroupCallSignalling;

prepareGroupCall OPERATION ::= {
  ARGUMENT SEQUENCE {
    teleservice OCTET STRING ( SIZE( 1 .. 5 ) ),
    asciCallReference OCTET STRING ( SIZE( 1 .. 8 ) ),
    codec-Info OCTET STRING ( SIZE( 5 .. 10 ) ),
    cipheringAlgorithm OCTET STRING ( SIZE( 1 ) ),
    groupKeyNumber [0] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
    groupKey [1] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
    priority [2] IMPLICIT INTEGER ( 0 .. 15 ) OPTIONAL,
    uplinkFree [3] IMPLICIT NULL OPTIONAL,
    extensionContainer [4] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          } { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
          } OPTIONAL,
          ...
        }
      ...
    }
  RESULT SEQUENCE {
    groupCallNumber OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    extensionContainer SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          } { @extId } ) OPTIONAL} OPTIONAL,
          pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
          } OPTIONAL,
          ...
        }
      ...
    }
  }
  ERRORS {
    systemFailure |
    noGroupCallNumberAvailable |
    unexpectedDataValue }
  CODE local :39
}

```

```

sendGroupCallEndSignal OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi      OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
    extensionContainer  SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    RESULT  SEQUENCE {
      extensionContainer  SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
              ,
              ...
            }) ,
            extType  MAP-EXTENSION .&ExtensionType ( {
              ,
              ...
            }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
      }
    CODE local : 40
  }
}

```

```

processGroupCallSignalling OPERATION ::= {
  ARGUMENT  SEQUENCE {
    uplinkRequest [0] IMPLICIT NULL OPTIONAL,
    uplinkReleaseIndication [1] IMPLICIT NULL OPTIONAL,
    releaseGroupCall [2] IMPLICIT NULL OPTIONAL,
    extensionContainer  SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    CODE local : 41
  }
}

```

```

forwardGroupCallSignalling OPERATION ::= {
  ARGUMENT  SEQUENCE {
    imsi      OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
    uplinkRequestAck [0] IMPLICIT NULL OPTIONAL,
    uplinkReleaseIndication [1] IMPLICIT NULL OPTIONAL,
    uplinkRejectCommand [2] IMPLICIT NULL OPTIONAL,
    uplinkSeizedCommand [3] IMPLICIT NULL OPTIONAL,
    uplinkReleaseCommand [4] IMPLICIT NULL OPTIONAL,
    extensionContainer  SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...
          }) ,
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...
          }) { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
      }
    stateAttributes [5] IMPLICIT SEQUENCE {
      downlinkAttached [5] IMPLICIT NULL OPTIONAL,
      ...
    }
  }
}

```

```

uplinkAttached [6] IMPLICIT NULL OPTIONAL,
dualCommunication [7] IMPLICIT NULL OPTIONAL,
callOriginator [8] IMPLICIT NULL OPTIONAL} OPTIONAL)
CODE local : 42
}

END

-- Expanded ASN1 Module 'MAP-LocationServiceOperations'
--SIEMENS ASN.1 Compiler R5.61 (Production_5.61)
-- Date: 2003-03-27 Time: 10:36:05

MAP-LocationServiceOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-
LocationServiceOperations (24) version8 (8) }

DEFINITIONS ::=

BEGIN

EXPORTS
provideSubscriberLocation,
sendRoutingInfoForLCS,
subscriberLocationReport;

sendRoutingInfoForLCS OPERATION ::= {
ARGUMENT SEQUENCE {
    mlcNumber [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
    targetMS [1] CHOICE {
        imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
        msisdn [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) )},
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }) ,
                extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
}
RESULT SEQUENCE {
    targetMS [0] CHOICE {
        imsi [0] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ),
        msisdn [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) )},
    lcsLocationInfo [1] IMPLICIT SEQUENCE {
        networkNode-Number OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        lmsi [0] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    }) ,
                    extType MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    }) { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        ...
    },
    gprsNodeIndicator [2] IMPLICIT NULL OPTIONAL,
    additional-Number [3] CHOICE {
        msc-Number [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        sgsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) )} OPTIONAL,
    extensionContainer [2] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                }) ,
                extType MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                }) { @extId } ) OPTIONAL} OPTIONAL,
        ...
    }
}

```

```

        ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
    } ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unknownSubscriber |
        absentSubscriber |
        unauthorizedRequestingNetwork }
CODE local : 85
}

provideSubscriberLocation OPERATION ::= {
ARGUMENT SEQUENCE {
locationType SEQUENCE {
    locationEstimateType [0] IMPLICIT ENUMERATED {
        currentLocation (0),
        currentOrLastKnownLocation (1),
        initialLocation (2),
        ...
        activateDeferredLocation (3),
        cancelDeferredLocation (4),
        ...
        deferredLocationEventType [1] IMPLICIT BIT STRING {
            msAvailable (0) (SIZE(1 .. 16)) OPTIONAL},
    mlc-Number OCTET STRING (SIZE(1 .. 20)) (SIZE(1 .. 9)),
lcs-ClientID [0] IMPLICIT SEQUENCE {
    lcsClientType [0] IMPLICIT ENUMERATED {
        emergencyServices (0),
        valueAddedServices (1),
        plmnOperatorServices (2),
        lawfullInterceptServices (3),
        ...
    },
lcsClientExternalID [1] IMPLICIT SEQUENCE {
    externalAddress [0] IMPLICIT OCTET STRING (SIZE(1 .. 20)) OPTIONAL,
    extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE (SIZE(1 .. 10)) OF
            SEQUENCE {
                extId MAP-EXTENSION.&extensionId ({
                    ,
                    ...
                }),
                extType MAP-EXTENSION.&ExtensionType ({
                    ...
                    ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ... } OPTIONAL,
lcsClientDialedByMS [2] IMPLICIT OCTET STRING (SIZE(1 .. 20)) OPTIONAL,
lcsClientInternalID [3] IMPLICIT ENUMERATED {
    broadcastService (0),
    o-andM-HPLMN (1),
    o-andM-VPLMN (2),
    anonymousLocation (3),
    targetMSsubscribedService (4),
    ...
} OPTIONAL,
lcsClientName [4] IMPLICIT SEQUENCE {
    dataCodingScheme [0] IMPLICIT OCTET STRING (SIZE(1)),
    nameString [2] IMPLICIT OCTET STRING (SIZE(1 .. 160)) (SIZE(1 .. 63)),
    ...
} OPTIONAL,
...
lcsAPN [5] IMPLICIT OCTET STRING (SIZE(2 .. 63)) OPTIONAL,
lcsRequestorID [6] IMPLICIT SEQUENCE {
    dataCodingScheme [0] IMPLICIT OCTET STRING (SIZE(1)),
    requestorIDString [1] IMPLICIT OCTET STRING (SIZE(1 .. 160)) (SIZE(1 .. 127)),
    ...
} OPTIONAL} OPTIONAL,
privacyOverride [1] IMPLICIT NULL OPTIONAL,
imsi [2] IMPLICIT OCTET STRING (SIZE(3 .. 8)) OPTIONAL,
msisdn [3] IMPLICIT OCTET STRING (SIZE(1 .. 20)) (SIZE(1 .. 9)) OPTIONAL,
lmsi [4] IMPLICIT OCTET STRING (SIZE(4)) OPTIONAL,
imei [5] IMPLICIT OCTET STRING (SIZE(8)) OPTIONAL,
lcs-Priority [6] IMPLICIT OCTET STRING (SIZE(1)) OPTIONAL,
}

```

```

lcs-QoS      [7] IMPLICIT SEQUENCE {
    horizontalAccuracy [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    verticalCoordinateRequest [1] IMPLICIT NULL OPTIONAL,
    verticalAccuracy     [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
    responseTime        [3] IMPLICIT SEQUENCE {
        responseTimeCategory ENUMERATED {
            lowdelay      ( 0 ),
            delaytolerant ( 1 ),
            ...
            ...
        } OPTIONAL,
    extensionContainer [4] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
    extensionContainer [8] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
            ...
        } OPTIONAL,
        ...
    } OPTIONAL,
    ...
    supportedGADShapes [9] IMPLICIT BIT STRING {
        ellipsoidPoint ( 0 ),
        ellipsoidPointWithUncertaintyCircle ( 1 ),
        ellipsoidPointWithUncertaintyEllipse ( 2 ),
        polygon ( 3 ),
        ellipsoidPointWithAltitude ( 4 ),
        ellipsoidPointWithAltitudeAndUncertaintyEllipsoid ( 5 ),
        ellipsoidArc ( 6 ) ( SIZE( 7 .. 16 ) ) OPTIONAL,
        lcs-ReferenceNumber [10] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
        lcsServiceTypeID [11] IMPLICIT INTEGER ( 0 .. 127 ) OPTIONAL,
        lcsCodeword [12] IMPLICIT SEQUENCE {
            dataCodingScheme [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
            lcsCodewordString [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 160 ) ) ( SIZE( 1 .. 127 ) ),
            ...
        } OPTIONAL}
    RESULT SEQUENCE {
        locationEstimate      OCTET STRING ( SIZE( 1 .. 20 ) ),
        ageOfLocationEstimate [0] IMPLICIT INTEGER ( 0 .. 32767 ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
        } OPTIONAL,
        ...
        add-LocationEstimate [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 91 ) ) OPTIONAL,
        deferreddmr-ResponseIndicator [3] IMPLICIT NULL OPTIONAL}
    ERRORS {
        systemFailure |
        dataMissing |
        unexpectedDataValue |
        facilityNotSupported |
        unidentifiedSubscriber |
        illegalSubscriber |
        illegalEquipment |
        absentSubscriber |
    }
}

```

```

unauthorizedRequestingNetwork |
unauthorizedLCSClient |
positionMethodFailure }
CODE local : 83
}

subscriberLocationReport OPERATION ::= {
ARGUMENT SEQUENCE {
lcs-Event ENUMERATED {
  emergencyCallOrigination ( 0 ),
  emergencyCallRelease ( 1 ),
  mo-lr ( 2 ),
  ... ,
  deferreddmr-Response ( 3 )},
lcs-ClientID SEQUENCE {
  lcsClientType [0] IMPLICIT ENUMERATED {
    emergencyServices ( 0 ),
    valueAddedServices ( 1 ),
    plmnOperatorServices ( 2 ),
    lawfullInterceptServices ( 3 ),
    ... },
  lcsClientExternalID [1] IMPLICIT SEQUENCE {
    externalAddress [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
    extensionContainer [1] IMPLICIT SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId MAP-EXTENSION .&extensionId ( {
            ,
            ... } ),
          extType MAP-EXTENSION .&ExtensionType ( {
            ,
            ... } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ... } OPTIONAL,
    lcsClientDialedByMS [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
    lcsClientInternalID [3] IMPLICIT ENUMERATED {
      broadcastService ( 0 ),
      o-andM-HPLMN ( 1 ),
      o-andM-VPLMN ( 2 ),
      anonymousLocation ( 3 ),
      targetMSsubscribedService ( 4 ),
      ... } OPTIONAL,
    lcsClientName [4] IMPLICIT SEQUENCE {
      dataCodingScheme [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
      nameString [2] IMPLICIT OCTET STRING ( SIZE( 1 .. 160 ) ) ( SIZE( 1 .. 63 ) ),
      ... } OPTIONAL,
    ... ,
    lcsAPN [5] IMPLICIT OCTET STRING ( SIZE( 2 .. 63 ) ) OPTIONAL,
    lcsRequestorID [6] IMPLICIT SEQUENCE {
      dataCodingScheme [0] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
      requestorIDString [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 160 ) ) ( SIZE( 1 .. 127 ) ),
      ... } OPTIONAL},
    lcsLocationInfo SEQUENCE {
      networkNode-Number OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
      lmsi [0] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
      extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
          SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
              ,
              ... } ),
            extType MAP-EXTENSION .&ExtensionType ( {
              ,
              ... } { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
        ... },
      gprsNodeIndicator [2] IMPLICIT NULL OPTIONAL,
      additional-Number [3] CHOICE {
        msc-Number [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        sgsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL},
      msisdn [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
      imsi [1] IMPLICIT OCTET STRING ( SIZE( 3 .. 8 ) ) OPTIONAL,
      imei [2] IMPLICIT OCTET STRING ( SIZE( 8 ) ) OPTIONAL,
      ...
    }
  }
}

```

```

na-ESRD      [3] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
na-ESRK      [4] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL,
locationEstimate [5] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
ageOfLocationEstimate [6] IMPLICIT INTEGER ( 0 .. 32767 ) OPTIONAL,
extensionContainer [7] IMPLICIT SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
    } OPTIONAL,
    ...
} OPTIONAL,
... ,
add-LocationEstimate [8] IMPLICIT OCTET STRING ( SIZE( 1 .. 91 ) ) OPTIONAL,
deferreddmr-IrData [9] IMPLICIT SEQUENCE {
    deferredLocationEventType BIT STRING {
        msAvailable ( 0 ) ( SIZE( 1 .. 16 ) ),
    }
    terminationCause [0] IMPLICIT ENUMERATED {
        normal          ( 0 ),
        errorundefined ( 1 ),
        internalTimeout ( 2 ),
        congestion      ( 3 ),
        mt-IrRestart    ( 4 ),
        privacyViolation ( 5 ),
        ...
    }
    shapeOfLocationEstimateNotSupported ( 6 ) OPTIONAL,
    lcsLocationInfo [1] IMPLICIT SEQUENCE {
        networkNode-Number OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
        lmsi [0] IMPLICIT OCTET STRING ( SIZE( 4 ) ) OPTIONAL,
        extensionContainer [1] IMPLICIT SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL,
                ...
            }
            gprsNodeIndicator [2] IMPLICIT NULL OPTIONAL,
            additional-Number [3] CHOICE {
                msc-Number [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ),
                sgsn-Number [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) ( SIZE( 1 .. 9 ) ) OPTIONAL} OPTIONAL,
            ...
        }
        lcs-ReferenceNumber [10] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL
    }
    RESULT SEQUENCE {
        extensionContainer SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                }
            ...
        }
    }
    ERRORS {
        systemFailure |
        dataMissing |
        resourceLimitation |
        unexpectedDataValue |
        unknownSubscriber |
        unauthorizedRequestingNetwork |
        unknownOrUnreachableLCSCClient }
CODE local :86
}

```

END

-- Expanded ASN1 Module 'MAP-SecureTransportOperations'  
 --SIEMENS ASN.1 Compiler R5.61 (Production\_5.61)  
 -- Date: 2003-03-27 Time: 10:36:14

MAP-SecureTransportOperations{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-SecureTransportOperations (26) version8 (8) }

## DEFINITIONS

::=

BEGIN

### EXPORTS

secureTransportClass1,  
 secureTransportClass2,  
 secureTransportClass3,  
 secureTransportClass4;

secureTransportClass1 OPERATION ::= {  
 ARGUMENT SEQUENCE {  
 securityHeader SEQUENCE {  
 securityParametersIndex OCTET STRING ( SIZE( 4 ) ),  
 originalComponentIdentifier CHOICE {  
 operationCode [0] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 errorCode [1] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 userInfo [2] IMPLICIT NULL},  
 initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,  
 ... },  
 protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}  
 RESULT SEQUENCE {  
 securityHeader SEQUENCE {  
 securityParametersIndex OCTET STRING ( SIZE( 4 ) ),  
 originalComponentIdentifier CHOICE {  
 operationCode [0] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 errorCode [1] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 userInfo [2] IMPLICIT NULL},  
 initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,  
 ... },  
 protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}

ERRORS {  
 secureTransportError |  
 dataMissing |  
 unexpectedDataValue }  
 CODE local :78  
 }

secureTransportClass2 OPERATION ::= {  
 ARGUMENT SEQUENCE {  
 securityHeader SEQUENCE {  
 securityParametersIndex OCTET STRING ( SIZE( 4 ) ),  
 originalComponentIdentifier CHOICE {  
 operationCode [0] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 errorCode [1] CHOICE {  
 localValue INTEGER,  
 globalValue OBJECT IDENTIFIER},  
 userInfo [2] IMPLICIT NULL},  
 initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,  
 ... },  
 protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}  
 ERRORS {  
 secureTransportError |  
 dataMissing |  
 unexpectedDataValue }

```

CODE local : 79
}

secureTransportClass3 OPERATION ::= {
  ARGUMENT SEQUENCE {
    securityHeader SEQUENCE {
      securityParametersIndex OCTET STRING ( SIZE( 4 ) ),
      originalComponentIdentifier CHOICE {
        operationCode [0] CHOICE {
          localValue INTEGER,
          globalValue OBJECT IDENTIFIER},
        errorCode [1] CHOICE {
          localValue INTEGER,
          globalValue OBJECT IDENTIFIER},
        userInfo [2] IMPLICIT NULL),
      initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,
      ... },
      protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}
    RESULT SEQUENCE {
      securityHeader SEQUENCE {
        securityParametersIndex OCTET STRING ( SIZE( 4 ) ),
        originalComponentIdentifier CHOICE {
          operationCode [0] CHOICE {
            localValue INTEGER,
            globalValue OBJECT IDENTIFIER},
          errorCode [1] CHOICE {
            localValue INTEGER,
            globalValue OBJECT IDENTIFIER},
          userInfo [2] IMPLICIT NULL),
        initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,
        ... },
        protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}
      CODE local : 80
    }
  }

secureTransportClass4 OPERATION ::= {
  ARGUMENT SEQUENCE {
    securityHeader SEQUENCE {
      securityParametersIndex OCTET STRING ( SIZE( 4 ) ),
      originalComponentIdentifier CHOICE {
        operationCode [0] CHOICE {
          localValue INTEGER,
          globalValue OBJECT IDENTIFIER},
        errorCode [1] CHOICE {
          localValue INTEGER,
          globalValue OBJECT IDENTIFIER},
        userInfo [2] IMPLICIT NULL),
      initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,
      ... },
      protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}
    CODE local : 81
  }
}

END

-- Expanded ASN1 Module 'MAP-Errors'
--SIEMENS ASN.1 Compiler R5.61 (Production_5.61)
-- Date: 2003-03-27 Time: 10:36:26

```

MAP-Errors{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-Errors (10) version8 (8) }

## DEFINITIONS

::=

## BEGIN

EXPORTS  
 systemFailure,  
 dataMissing,  
 unexpectedDataValue,  
 facilityNotSupported,  
 incompatibleTerminal,  
 resourceLimitation,  
 unknownSubscriber,  
 numberChanged,  
 unknownMSC,

```

unidentifiedSubscriber,
unknownEquipment,
roamingNotAllowed,
illegalSubscriber,
illegalEquipment,
bearerServiceNotProvisioned,
teleserviceNotProvisioned,
noHandoverNumberAvailable,
subsequentHandoverFailure,
targetCellOutsideGroupCallArea,
tracingBufferFull,
or-NotAllowed,
noRoamingNumberAvailable,
busySubscriber,
noSubscriberReply,
absentSubscriber,
callBarred,
forwardingViolation,
forwardingFailed,
cug-Reject,
ati-NotAllowed,
atsi-NotAllowed,
atm-NotAllowed,
informationNotAvailable,
illegalSS-Operation,
ss-ErrorStatus,
ss-NotAvailable,
ss-SubscriptionViolation,
ss-Incompatibility,
unknownAlphabet,
ussd-Busy,
pw-RegistrationFailure,
negativePW-Check,
numberOfPW-AttemptsViolation,
shortTermDenial,
longTermDenial,
subscriberBusyForMT-SMS,
sm-DeliveryFailure,
messageWaitingListFull,
absentSubscriberSM,
noGroupCallNumberAvailable,
unauthorizedRequestingNetwork,
unauthorizedLCSClient,
positionMethodFailure,
unknownOrUnreachableLCSClient,
mm-EventNotSupported,
secureTransportError;

```

```

systemFailure ERROR ::= {
PARAMETER CHOICE {
    networkResource      ENUMERATED {
        plmn          ( 0 ),
        hlr           ( 1 ),
        vlr           ( 2 ),
        pvr           ( 3 ),
        controllingMSC ( 4 ),
        vmsc          ( 5 ),
        eir           ( 6 ),
        rss            ( 7 ) },
extensibleSystemFailureParam   SEQUENCE {
    networkResource  ENUMERATED {
        plmn          ( 0 ),
        hlr           ( 1 ),
        vlr           ( 2 ),
        pvr           ( 3 ),
        controllingMSC ( 4 ),
        vmsc          ( 5 ),
        eir           ( 6 ),
        rss            ( 7 ) } OPTIONAL,
extensionContainer  SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId    MAP-EXTENSION .&extensionId ( {
                ,
                ...}),
            extType   MAP-EXTENSION .&ExtensionType ( {

```

```

        ...
    ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ...
    ...} OPTIONAL,
    ...
}
CODE local : 34
}

dataMissing ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ...
                ...}),
                extType MAP-EXTENSION .&ExtensionType ({
                    ...
                ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ...
                ...} OPTIONAL,
                ...
            ...
}
CODE local : 35
}

unexpectedDataValue ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ...
                ...}),
                extType MAP-EXTENSION .&ExtensionType ({
                    ...
                ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ...
                ...} OPTIONAL,
                ...
            ...
}
CODE local : 36
}

facilityNotSupported ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ...
                ...}),
                extType MAP-EXTENSION .&ExtensionType ({
                    ...
                ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {
                    ...
                ...} OPTIONAL,
                ...
            ...
},
shapeOfLocationEstimateNotSupported [0] IMPLICIT NULL OPTIONAL,
neededLcsCapabilityNotSupportedInServingNode [1] IMPLICIT NULL OPTIONAL}
CODE local : 21
}

incompatibleTerminal ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId MAP-EXTENSION .&extensionId ({
                    ...
                ...}),
                extType MAP-EXTENSION .&ExtensionType ({
                    ...
                ...} { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions      [1] IMPLICIT SEQUENCE {

```

```

        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
CODE local :28
}

resourceLimitation ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
CODE local :51
}

unknownSubscriber ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
unknownSubscriberDiagnostic ENUMERATED {
imsiUnknown ( 0 ),
gprsSubscriptionUnknown ( 1 ),
... ,
npdbMismatch ( 2 ) } OPTIONAL}
CODE local :1
}

numberChanged ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
CODE local :44
}

unknownMSC ERROR ::= {
CODE local :3
}

unidentifiedSubscriber ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),

```

```

extType MAP-EXTENSION .&ExtensionType ( {
    ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
    ... } OPTIONAL,
    ... } OPTIONAL,
    ...
}
CODE local :5
}

unknownEquipment ERROR ::= {
    CODE local :7
}

roamingNotAllowed ERROR ::= {
PARAMETER SEQUENCE {
    roamingNotAllowedCause ENUMERATED {
        plmnRoamingNotAllowed ( 0 ),
        operatorDeterminedBarring ( 3 ),
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ...
            }),
            extType MAP-EXTENSION .&ExtensionType ( {
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ...
}
CODE local :8
}

illegalSubscriber ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ...
           }),
            extType MAP-EXTENSION .&ExtensionType ( {
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ...
}
CODE local :9
}

illegalEquipment ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {
                ...
           }),
            extType MAP-EXTENSION .&ExtensionType ( {
                ...} { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ... } OPTIONAL,
                ... } OPTIONAL,
                ...
}
CODE local :12
}

bearerServiceNotProvisioned ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
            extId MAP-EXTENSION .&extensionId ( {

```

```

        ,
        ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
CODE    local    :10
}

teleserviceNotProvisioned ERROR ::= {
PARAMETER  SEQUENCE {
extensionContainer  SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId  MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
CODE    local    :11
}

noHandoverNumberAvailable ERROR ::= {
CODE    local    :25
}

subsequentHandoverFailure ERROR ::= {
CODE    local    :26
}

targetCellOutsideGroupCallArea ERROR ::= {
PARAMETER  SEQUENCE {
extensionContainer  SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId  MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
CODE    local    :42
}

tracingBufferFull ERROR ::= {
PARAMETER  SEQUENCE {
extensionContainer  SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE(1 .. 10) ) OF
SEQUENCE {
extId  MAP-EXTENSION .&extensionId ( {
        ,
        ...} ),
extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions      [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        }
CODE    local    :40
}

noRoamingNumberAvailable ERROR ::= {
PARAMETER  SEQUENCE {
extensionContainer  SEQUENCE {

```

```

privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ({
    ,
    ...
  }),
  extType  MAP-EXTENSION .&ExtensionType ({
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
  ...
}
CODE local : 39
}

absentSubscriber ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ({
        ,
        ...
      }),
      extType  MAP-EXTENSION .&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
      ...
    },
    absentSubscriberReason [0] IMPLICIT ENUMERATED {
      imsiDetach ( 0 ),
      restrictedArea ( 1 ),
      noPageResponse ( 2 ),
      ...
      purgedMS ( 3 ) OPTIONAL}
  }
CODE local : 27
}

busySubscriber ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ({
        ,
        ...
      }),
      extType  MAP-EXTENSION .&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
      ...
    },
    ccbs-Possible [0] IMPLICIT NULL OPTIONAL,
    ccbs-Busy [1] IMPLICIT NULL OPTIONAL}
  }
CODE local : 45
}

noSubscriberReply ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ({
        ,
        ...
      }),
      extType  MAP-EXTENSION .&ExtensionType ({
        ,
        ...} { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
      ...
    },
    CODE local : 46
  }
}

```

```

callBarred ERROR ::= {
PARAMETER CHOICE {
  callBarringCause      ENUMERATED {
    barringServiceActive ( 0 ),
    operatorBarring       ( 1 )},
  extensibleCallBarredParam SEQUENCE {
    callBarringCause      ENUMERATED {
      barringServiceActive ( 0 ),
      operatorBarring       ( 1 )} OPTIONAL,
    extensionContainer    SEQUENCE {
      privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
          extId   MAP-EXTENSION .&extensionId ( {
            ,
            ...}),
          extType  MAP-EXTENSION .&ExtensionType ( {
            ,
            ...{ @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
          ...
          ,
          unauthorisedMessageOriginator [1] IMPLICIT NULL OPTIONAL)}
CODE local :13
}

```

```

forwardingViolation ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...}),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...{ @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        ,
        CODE local :14
}

```

```

forwardingFailed ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...}),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...{ @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ... } OPTIONAL,
        ... } OPTIONAL,
        ...
        ,
        CODE local :47
}

```

```

cug-Reject ERROR ::= {
PARAMETER SEQUENCE {
  cug-RejectCause ENUMERATED {
    incomingCallsBarredWithinCUG           ( 0 ),
    subscriberNotMemberOfCUG              ( 1 ),
    requestedBasicServiceViolatesCUG-Constraints ( 5 ),
    calledPartySS-InteractionViolation ( 7 )} OPTIONAL,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...}),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
          ,
          }

```

```

...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 15
}

orNotAllowed ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 48
}

ati-NotAllowed ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 49
}

atsi-NotAllowed ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 60
}

atm-NotAllowed ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}

```

```

CODE local : 61
}

informationNotAvailable ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 62
}

illegalSS-Operation ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 16
}

ss-ErrorStatus ERROR ::= {
PARAMETER OCTET STRING ( SIZE( 1 ) )
CODE local : 17
}

ss-NotAvailable ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}
CODE local : 18
}

ss-SubscriptionViolation ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
...
}

```

```

CODE local : 19
}

ss-Incompatibility ERROR ::= {
PARAMETER SEQUENCE {
ss-Code [1] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
basicService CHOICE {
  bearerService [2] IMPLICIT OCTET STRING ( SIZE( 1 ) ),
  teleservice [3] IMPLICIT OCTET STRING ( SIZE( 1 ) ) } OPTIONAL,
ss-Status [4] IMPLICIT OCTET STRING ( SIZE( 1 ) ) OPTIONAL,
...
}
CODE local : 20
}

unknownAlphabet ERROR ::= {
CODE local : 71
}

ussd-Busy ERROR ::= {
CODE local : 72
}

pw-RegistrationFailure ERROR ::= {
PARAMETER ENUMERATED {
undetermined ( 0 ),
invalidFormat ( 1 ),
newPasswordsMismatch ( 2 )}
CODE local : 37
}

negativePW-Check ERROR ::= {
CODE local : 38
}

numberOfPW-AttemptsViolation ERROR ::= {
CODE local : 43
}

shortTermDenial ERROR ::= {
PARAMETER SEQUENCE {
...
}
CODE local : 29
}

longTermDenial ERROR ::= {
PARAMETER SEQUENCE {
...
}
CODE local : 30
}

subscriberBusyForMT-SMS ERROR ::= {
PARAMETER SEQUENCE {
extensionContainer SEQUENCE {
privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
SEQUENCE {
extId MAP-EXTENSION .&extensionId ({
,
...}),
extType MAP-EXTENSION .&ExtensionType ({
,
...} { @extId } ) OPTIONAL} OPTIONAL,
pcs-Extensions [1] IMPLICIT SEQUENCE {
... } OPTIONAL,
... } OPTIONAL,
... ,
gprsConnectionSuspended NULL OPTIONAL}
CODE local : 31
}

sm-DeliveryFailure ERROR ::= {
PARAMETER SEQUENCE {
sm-EnumeratedDeliveryFailureCause ENUMERATED {
memoryCapacityExceeded ( 0 ),
equipmentProtocolError ( 1 ),
equipmentNotSM-Equipped ( 2 ),
unknownServiceCentre ( 3 ),
sc-Congestion ( 4 ),
}
}
}
```

```

invalidSME-Address      ( 5 ),
subscriberNotSC-Subscriber ( 6 ),
diagnosticInfo          OCTET STRING ( SIZE( 1 .. 200 ) ) OPTIONAL,
extensionContainer       SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
}
CODE local :32
}

messageWaitingListFull ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    }
  }
CODE local :33
}

absentSubscriberSM ERROR ::= {
PARAMETER SEQUENCE {
  absentSubscriberDiagnosticSM INTEGER ( 0 .. 255 ) OPTIONAL,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    }
  }
  additionalAbsentSubscriberDiagnosticSM [0] IMPLICIT INTEGER ( 0 .. 255 ) OPTIONAL
}
CODE local :6
}

noGroupCallNumberAvailable ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType  MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
      pcs-Extensions [1] IMPLICIT SEQUENCE {
        ...
      } OPTIONAL,
      ...
    }
  }
CODE local :50
}

unauthorizedRequestingNetwork ERROR ::= {
PARAMETER SEQUENCE {

```

```

extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
        SEQUENCE {
            extId   MAP-EXTENSION .&extensionId ( {
                ,
                ...
            } ),
            extType  MAP-EXTENSION .&ExtensionType ( {
                ,
                ...
            } { @extId } ) OPTIONAL} OPTIONAL,
            pcs-Extensions [1] IMPLICIT SEQUENCE {
                ...
            } OPTIONAL,
            ...
            ...
        }
    CODE local :52
}

```

```

unauthorizedLCSClient ERROR ::= {
PARAMETER SEQUENCE {
    unauthorizedLCSClient-Diagnostic [0] IMPLICIT ENUMERATED {
        noAdditionalInformation ( 0 ),
        clientNotInMSPrivacyExceptionList ( 1 ),
        callToClientNotSetup ( 2 ),
        privacyOverrideNotApplicable ( 3 ),
        disallowedByLocalRegulatoryRequirements ( 4 ),
        ...
        unauthorizedPrivacyClass ( 5 ),
        unauthorizedCallSessionUnrelatedExternalClient ( 6 ),
        unauthorizedCallSessionRelatedExternalClient ( 7 ) } OPTIONAL,
    extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            }
        CODE local :53
    }
}

```

```

positionMethodFailure ERROR ::= {
PARAMETER SEQUENCE {
    positionMethodFailure-Diagnostic [0] IMPLICIT ENUMERATED {
        congestion ( 0 ),
        insufficientResources ( 1 ),
        insufficientMeasurementData ( 2 ),
        inconsistentMeasurementData ( 3 ),
        locationProcedureNotCompleted ( 4 ),
        locationProcedureNotSupportedByTargetMS ( 5 ),
        qosNotAttainable ( 6 ),
        positionMethodNotAvailableInNetwork ( 7 ),
        positionMethodNotAvailableInLocationArea ( 8 ),
        ...
    } OPTIONAL,
    extensionContainer [1] IMPLICIT SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
            SEQUENCE {
                extId   MAP-EXTENSION .&extensionId ( {
                    ,
                    ...
                } ),
                extType  MAP-EXTENSION .&ExtensionType ( {
                    ,
                    ...
                } { @extId } ) OPTIONAL} OPTIONAL,
                pcs-Extensions [1] IMPLICIT SEQUENCE {
                    ...
                } OPTIONAL,
                ...
            }
        CODE local :54
    }
}

```

```

unknownOrUnreachableLCSClient ERROR ::= {
PARAMETER SEQUENCE {
    extensionContainer SEQUENCE {
        privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
}

```

```

SEQUENCE {
  extId   MAP-EXTENSION .&extensionId ({
    ,
    ...
  }),
  extType  MAP-EXTENSION .&ExtensionType ({
    ,
    ...} { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
  ...
}

CODE local : 58
}

mm-EventNotSupported ERROR ::= {
PARAMETER SEQUENCE {
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId   MAP-EXTENSION .&extensionId ({
          ,
          ...
        }),
        extType  MAP-EXTENSION .&ExtensionType ({
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ...
        } OPTIONAL,
        ...
        ...
      }
    CODE local : 59
  }
}

secureTransportError ERROR ::= {
PARAMETER SEQUENCE {
  securityHeader SEQUENCE {
    securityParametersIndex OCTET STRING ( SIZE( 4 ) ),
    originalComponentIdentifier CHOICE {
      operationCode [0] CHOICE {
        localValue INTEGER,
        globalValue OBJECT IDENTIFIER},
      errorCode [1] CHOICE {
        localValue INTEGER,
        globalValue OBJECT IDENTIFIER},
      userInfo [2] IMPLICIT NULL},
      initialisationVector OCTET STRING ( SIZE( 14 ) ) OPTIONAL,
      ...
    },
    protectedPayload OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL}
  CODE local : 4
}
}

```

END

---

## B.2 Fully Expanded ASN.1 Source of MAP-DialogueInformation

```
-- Expanded ASN1 Module 'MAP-DialogueInformation'
--SIEMENS ASN.1 Compiler      R5.61 (Production_5.61)
--      Date: 2003-03-27 Time: 10:36:36
```

```
MAP-DialogueInformation{ 0 identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) modules (3) map-DialogueInformation (3) version8 (8) }
```

### DEFINITIONS

```
::=
```

### BEGIN

### EXPORTS

```
map-DialogueAS,
MAP-DialoguePDU,
map-ProtectedDialogueAS,
MAP-ProtectedDialoguePDU;
```

```
map-DialogueAS OBJECT IDENTIFIER ::= { ccitt (0) identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) 1 map-DialoguePDU (1) version1 (1) }
```

```
MAP-DialoguePDU ::= CHOICE {
    map-open      [0] IMPLICIT SEQUENCE {
        destinationReference [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
        originationReference [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
        ...
        extensionContainer SEQUENCE {
            privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                SEQUENCE {
                    extId   MAP-EXTENSION .&extensionId ( {
                        ,
                        ...
                    } ),
                    extType  MAP-EXTENSION .&ExtensionType ( {
                        ,
                        ...
                    } { @extId } ) OPTIONAL} OPTIONAL,
                    pcs-Extensions [1] IMPLICIT SEQUENCE {
                        ...
                    } OPTIONAL,
                    ...
                } OPTIONAL},
        map-accept     [1] IMPLICIT SEQUENCE {
            ...
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL},
        map-close      [2] IMPLICIT SEQUENCE {
            ...
            extensionContainer SEQUENCE {
                privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
                    SEQUENCE {
                        extId   MAP-EXTENSION .&extensionId ( {
                            ,
                            ...
                        } ),
                        extType  MAP-EXTENSION .&ExtensionType ( {
                            ,
                            ...
                        } { @extId } ) OPTIONAL} OPTIONAL,
                        pcs-Extensions [1] IMPLICIT SEQUENCE {
                            ...
                        } OPTIONAL,
                        ...
                    } OPTIONAL},
        map-refuse     [3] IMPLICIT SEQUENCE {
```

```

reason          ENUMERATED {
  noReasonGiven      ( 0 ),
  invalidDestinationReference ( 1 ),
  invalidOriginatingReference ( 2 ),
  encapsulatedAC-NotSupported ( 3 ),
  transportProtectionNotAdequate ( 4 )},
...,
extensionContainer   SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
} OPTIONAL,
alternativeApplicationContext OBJECT IDENTIFIER OPTIONAL},
map-userAbort       [4] IMPLICIT SEQUENCE {
  map-UserAbortChoice CHOICE {
    userSpecificReason [0] IMPLICIT NULL,
    userResourceLimitation [1] IMPLICIT NULL,
    resourceUnavailable [2] IMPLICIT ENUMERATED {
      shortTermResourceLimitation ( 0 ),
      longTermResourceLimitation ( 1 ),
    },
    applicationProcedureCancellation [3] IMPLICIT ENUMERATED {
      handoverCancellation ( 0 ),
      radioChannelRelease ( 1 ),
      networkPathRelease ( 2 ),
      callRelease ( 3 ),
    },
    associatedProcedureFailure ( 4 ),
    tandemDialogueRelease ( 5 ),
    remoteOperationsFailure ( 6 )},
  ...
},
extensionContainer   SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
} OPTIONAL},
map-providerAbort    [5] IMPLICIT SEQUENCE {
  map-ProviderAbortReason ENUMERATED {
    abnormalDialogue ( 0 ),
    invalidPDU ( 1 ),
  },
  ...
},
extensionContainer   SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
} OPTIONAL}
MAP-OpenInfo ::= SEQUENCE {
  destinationReference [0] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
  originationReference [1] IMPLICIT OCTET STRING ( SIZE( 1 .. 20 ) ) OPTIONAL,
  ...
},
extensionContainer   SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId   MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType  MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  ...
}
```

```

      ...} { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
      ... } OPTIONAL,
      ... } OPTIONAL}

MAP-AcceptInfo ::= SEQUENCE {
  ...,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...} ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL}
  }

MAP-CloseInfo ::= SEQUENCE {
  ...,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...} ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL}
  }

MAP-RefuseInfo ::= SEQUENCE {
  reason ENUMERATED {
    noReasonGiven ( 0 ),
    invalidDestinationReference ( 1 ),
    invalidOriginatingReference ( 2 ),
    encapsulatedAC-NotSupported ( 3 ),
    transportProtectionNotAdequate ( 4 )},
  ...,
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...} ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...} { @extId } ) OPTIONAL} OPTIONAL,
        pcs-Extensions [1] IMPLICIT SEQUENCE {
          ... } OPTIONAL,
          ... } OPTIONAL,
        alternativeApplicationContext OBJECT IDENTIFIER OPTIONAL}
  }

Reason ::= ENUMERATED {
  noReasonGiven ( 0 ),
  invalidDestinationReference ( 1 ),
  invalidOriginatingReference ( 2 ),
  encapsulatedAC-NotSupported ( 3 ),
  transportProtectionNotAdequate ( 4 )}

MAP-UserAbortInfo ::= SEQUENCE {
  map-UserAbortChoice CHOICE {
    userSpecificReason [0] IMPLICIT NULL,
    userResourceLimitation [1] IMPLICIT NULL,
    resourceUnavailable [2] IMPLICIT ENUMERATED {
      shortTermResourceLimitation ( 0 ),
      longTermResourceLimitation ( 1 )},
    applicationProcedureCancellation [3] IMPLICIT ENUMERATED {
      handoverCancellation ( 0 ),
      radioChannelRelease ( 1 ),
      networkPathRelease ( 2 ),
      callRelease ( 3 ),
```

```

associatedProcedureFailure ( 4 ),
tandemDialogueRelease ( 5 ),
remoteOperationsFailure ( 6 ) }},

...,
extensionContainer SEQUENCE {
  privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
    SEQUENCE {
      extId MAP-EXTENSION .&extensionId ( {
        ,
        ...
      } ),
      extType MAP-EXTENSION .&ExtensionType ( {
        ,
        ...
      } { @extId } ) OPTIONAL} OPTIONAL,
  pcs-Extensions [1] IMPLICIT SEQUENCE {
    ...
  } OPTIONAL,
  ...
}

MAP-UserAbortChoice ::= CHOICE {
  userSpecificReason [0] IMPLICIT NULL,
  userResourceLimitation [1] IMPLICIT NULL,
  resourceUnavailable [2] IMPLICIT ENUMERATED {
    shortTermResourceLimitation ( 0 ),
    longTermResourceLimitation ( 1 )},
  applicationProcedureCancellation [3] IMPLICIT ENUMERATED {
    handoverCancellation ( 0 ),
    radioChannelRelease ( 1 ),
    networkPathRelease ( 2 ),
    callRelease ( 3 ),
    associatedProcedureFailure ( 4 ),
    tandemDialogueRelease ( 5 ),
    remoteOperationsFailure ( 6 )} }

ResourceUnavailableReason ::= ENUMERATED {
  shortTermResourceLimitation ( 0 ),
  longTermResourceLimitation ( 1 ) }

ProcedureCancellationReason ::= ENUMERATED {
  handoverCancellation ( 0 ),
  radioChannelRelease ( 1 ),
  networkPathRelease ( 2 ),
  callRelease ( 3 ),
  associatedProcedureFailure ( 4 ),
  tandemDialogueRelease ( 5 ),
  remoteOperationsFailure ( 6 ) }

MAP-ProviderAbortInfo ::= SEQUENCE {
  map-ProviderAbortReason ENUMERATED {
    abnormalDialogue ( 0 ),
    invalidPDU ( 1 )},
  ...
  extensionContainer SEQUENCE {
    privateExtensionList [0] IMPLICIT SEQUENCE ( SIZE( 1 .. 10 ) ) OF
      SEQUENCE {
        extId MAP-EXTENSION .&extensionId ( {
          ,
          ...
        } ),
        extType MAP-EXTENSION .&ExtensionType ( {
          ,
          ...
        } { @extId } ) OPTIONAL} OPTIONAL,
    pcs-Extensions [1] IMPLICIT SEQUENCE {
      ...
    } OPTIONAL,
    ...
  } OPTIONAL}
}

MAP-ProviderAbortReason ::= ENUMERATED {
  abnormalDialogue ( 0 ),
  invalidPDU ( 1 ) }

map-ProtectedDialogueAS OBJECT IDENTIFIER ::= { ccitt (0) identified-organization (4) etsi (0) mobileDomain (0) gsm-Network (1) 1
map-ProtectedDialoguePDU (3) version1 (1) }

MAP-ProtectedDialoguePDU ::= SEQUENCE {
  encapsulatedAC OBJECT IDENTIFIER,
  securityHeader SEQUENCE {
    securityParametersIndex OCTET STRING ( SIZE( 4 ) ),
    originalComponentIdentifier CHOICE {
      operationCode [0] CHOICE {
        localValue INTEGER,
        ...
      }
    }
  }
}

```

```
globalValue   OBJECT IDENTIFIER},  
errorCode     [1] CHOICE {  
    localValue   INTEGER,  
    globalValue   OBJECT IDENTIFIER},  
    userInfo     [2] IMPLICIT NULL},  
initialisationVector   OCTET STRING ( SIZE( 14 ) ) OPTIONAL,  
... } OPTIONAL,  
protectedPayload   OCTET STRING ( SIZE( 1 .. 3438 ) ) OPTIONAL,  
... }
```

END

---

## Annex C :

### Void

## Annex D (informative): Clause mapping table

### D.1 Mapping of Clause numbers

The clause numbers have been modified according to table D.1.

**Table D.1: Clause mapping from Version 5.9.0 to Version 6.0.0**

| Old Clause No<br>(V5.9.0) | New Clause No<br>(V6.0.0) | Old Clause No<br>(V5.9.0) | New Clause No<br>(V6.0.0) |
|---------------------------|---------------------------|---------------------------|---------------------------|
| 1.1                       | 2                         | 17.*                      | 20.*                      |
| 1.2                       | 3                         | 18.*                      | 21.*                      |
| 2.*                       | 4.*                       | 19.*                      | 22.*                      |
| 3.*                       | 5.*                       | 19.0.*                    | 22.1.*                    |
| 4.*                       | 6.*                       | 19.1.*                    | 22.2.*                    |
| 5.*                       | 7.*                       | 19.2.*                    | 22.3.*                    |
| 6.*                       | 8.*                       | 19.3.*                    | 22.4.*                    |
| 7.*                       | 9.*                       | 19.4.*                    | 22.5.*                    |
| 8.*                       | 10.*                      | 19.5.*                    | 22.6.*                    |
| 9.*                       | 11.*                      | 19.6.*                    | 22.7.*                    |
| 10.*                      | 12.*                      | 19.7.*                    | 22.8.*                    |
| new11.*                   | 13.*                      | 19.8.*                    | 22.9.*                    |
| old11.*                   | 14.*                      | 19.9.*                    | 22.10.*                   |
| 12.*                      | 15.*                      | 19.10.*                   | 22.11.*                   |
| 13.*                      | 16.*                      | 19.11.*                   | 22.12.*                   |
| 14.*                      | 17.*                      | 20.*                      | 23.*                      |
| 15.*                      | 18.*                      | new22.*                   | 24.*                      |
| 16.*                      | 19.*                      | old21.*                   | 25.*                      |

## Annex E (informative): Change History

| SMG# | TDoc     | SPEC   | VERS  | CR   | REV | PHAS E | CAT | SUBJECT                                                                                            | NEW_VERS | WORKITEM      |
|------|----------|--------|-------|------|-----|--------|-----|----------------------------------------------------------------------------------------------------|----------|---------------|
| 04   | N2-99227 | 29.002 | 3.0.0 | A002 | 3   | R98    | A   | Use of E interface                                                                                 | 3.1.0    |               |
| 04   | N2-99578 | 29.002 | 3.0.0 | A003 |     | R98    | B   | Introduction of TIF-CSI for Call Deflection                                                        | 3.1.0    |               |
| 04   | N2-99233 | 29.002 | 3.0.0 | A004 |     | R98    | A   | Clarification in ASN.1 encoding of O-CSI and T-CSI                                                 | 3.1.0    |               |
| 04   | N2-99269 | 29.002 | 3.0.0 | A005 |     | R98    | C   | Introduction of MSISDN in USSD operation                                                           | 3.1.0    |               |
| 04   | N2-99650 | 29.002 | 3.0.0 | A006 |     | R98    | A   | Modification of the O-CSI ASN.1 structure                                                          | 3.1.0    |               |
| 04   | N2-99250 | 29.002 | 3.0.0 | A007 |     | R98    | A   | Adding of MAP_DELIMITER_req to the Status report operation                                         | 3.1.0    |               |
| 04   | N2-99628 | 29.002 | 3.0.0 | A008 |     | R98    | A   | Correction to the Purge MS "Detailed procedure in the HLR"                                         | 3.1.0    |               |
| 04   | N2-99677 | 29.002 | 3.0.0 | A009 |     | R98    | A   | Adding of MNP-indicator to the SRI ack                                                             | 3.1.0    |               |
| 04   | N2-99228 | 29.002 | 3.0.0 | A010 |     | R98    | F   | New subscription options for call forwarding                                                       | 3.1.0    |               |
| 04   | N2-99585 | 29.002 | 3.0.0 | A011 |     | R98    | C   | Adding the support of ANSI SCCP which is required in North America (World Zone 1)                  | 3.1.0    |               |
| 04   | N2-99515 | 29.002 | 3.0.0 | A012 |     | R98    | A   | Introduction of 3-digit MNCs correction                                                            | 3.1.0    |               |
| 04   | N2-99520 | 29.002 | 3.0.0 | A013 |     | R98    | F   | Export of NAEA-CIC                                                                                 | 3.1.0    |               |
| 04   | N2-99548 | 29.002 | 3.0.0 | A014 |     | R98    | D   | Clarification to text to identify how the LSA data relevant in the current VPLMN can be determined | 3.1.0    |               |
| 04   | 3C99-468 | 29.002 | 3.0.0 | A015 |     | R97    | F   | Alignment with 04.80                                                                               | 3.1.0    |               |
| 04   | N2-99519 | 29.002 | 3.0.0 | A016 |     | R98    | A   | VBS data                                                                                           | 3.1.0    |               |
| 04   | N2-99461 | 29.002 | 3.0.0 | A017 |     | R98    | F   | Introduction of Data Missing error to the Resume Call Handling                                     | 3.1.0    |               |
| 04   | N2-99583 | 29.002 | 3.0.0 | A018 |     | R97    | F   | Removal of 3-digit MNCs                                                                            | 3.1.0    |               |
| 04   | N2-99676 | 29.002 | 3.0.0 | A019 |     | R98    | A   | Corrections of mapping from MAP service to TC service                                              | 3.1.0    |               |
| 04   | 3C99-206 | 29.002 | 3.0.0 | A020 |     | R98    | B   | Introduction of UUS service to Resume Call Handling                                                | 3.1.0    |               |
| 05   | N2-99906 | 29.002 | 3.1.0 | 021  |     | R99    | A   | Clarification on VLR CAMEL Subscription Info                                                       | 3.2.0    | CAMEL Phase 2 |
| 05   | N2-99908 | 29.002 | 3.1.0 | 022  |     | R99    | A   | Clarification on DestinationNumberCriteria                                                         | 3.2.0    | CAMEL Phase 2 |
| 05   | N2-99910 | 29.002 | 3.1.0 | 023  |     | R99    | A   | Removal of TDP-Criteria from RCH                                                                   | 3.2.0    | CAMEL Phase 2 |
| 05   | N2-99934 | 29.002 | 3.1.0 | 025  |     | R99    | A   | Various corrections related to GGSN-HLR Interface.                                                 | 3.2.0    | GPRS          |
| 05   | N2-99936 | 29.002 | 3.1.0 | 034  |     | R99    | A   | Update Location handling for GPRS-only subscription                                                | 3.2.0    | GPRS          |
| 05   | N2-99938 | 29.002 | 3.1.0 | 035  |     | R99    | A   | Correction of OP & AC definitions for NoteMS-PresentForGPRS                                        | 3.2.0    | GPRS          |
| 05   | N2-99952 | 29.002 | 3.1.0 | 036  |     | R99    | A   | Removal of redundant information from RCH                                                          | 3.2.0    | UUS           |
| 05   | N2-99956 | 29.002 | 3.1.0 | 026  |     | R99    | A   | OR capability IE in PRN                                                                            | 3.2.0    | TEI           |
| 05   | N2-99964 | 29.002 | 3.1.0 | 024  | 1   | R99    | A   | GMSC-CAMEL phase 2 support IE in PRN                                                               | 3.2.0    | CAMEL Phase 2 |
| 05   | N2-99A19 | 29.002 | 3.1.0 | 028  |     | R99    | A   | Alignment of 29.002 with 02.67                                                                     | 3.2.0    | eMLPP         |
| 05   | N2-99A45 | 29.002 | 3.1.0 | 029  | 1   | R99    | B   | Non-CAMEL IST implementation                                                                       | 3.2.0    | IST           |
| 05   | N2-99B57 | 29.002 | 3.1.0 | 027  | 2   | R99    | B   | Addition of the information elements and the ASN.1 definitions for Pre-paging                      | 3.2.0    | Pre-Paging    |
| 05   | N2-99C27 | 29.002 | 3.1.0 | 042  |     | R99    | A   | Clarification on 'Supported CAMEL Phases' in ISD ack                                               | 3.2.0    | CAMEL Phase 2 |
| 05   | N2-99C78 | 29.002 | 3.1.0 | 044  |     | R99    | A   | Editing error correction on VLR capabilities                                                       | 3.2.0    | SoLSA         |
| 05   | N2-99D06 | 29.002 | 3.1.0 | 043  | 1   | R99    | A   | Addition of exception handling to the CancellationType                                             | 3.2.0    | GPRS          |
| 05   | N2-99D33 | 29.002 | 3.1.0 | 046  |     | R99    | A   | Clarification of LR-REJECT cause corresponding to RoamingRestrictionDueTo UnsupportedFeature       | 3.2.0    | TEI           |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                             | NEW_VERS | WORKITEM                     |
|------|-----------|--------|-------|-----|-----|--------|-----|-------------------------------------------------------------------------------------|----------|------------------------------|
| 05   | N2-99D35  | 29.002 | 3.1.0 | 047 |     | R99    |     | Clarification of returning the MSISDN in SRlack                                     | 3.2.0    | MNP                          |
| 06   | N2-99G06  | 29.002 | 3.2.0 | 033 | 3   | R99    | C   | Introduction of the Super-Charger Concept in TS 29.002                              | 3.3.0    | Super Charger                |
| 06   | N2-99G18  | 29.002 | 3.2.0 | 032 | 2   | R99    | C   | Introduction of White Book SCCP in MAP                                              | 3.3.0    | TEI                          |
| 06   | N2-99G50  | 29.002 | 3.2.0 | 070 |     | R99    | A   | Addition of GGSN number for the SRIforGPRS                                          | 3.3.0    | GPRS                         |
| 06   | N2-99J88  | 29.002 | 3.2.0 | 075 | 1   | R99    | B   | Introduction of Follow Me                                                           | 3.3.0    | Follow Me                    |
| 06   | N2-99K12  | 29.002 | 3.2.0 | 077 |     | R99    | A   | Use of SSN for GPRS                                                                 | 3.3.0    | GPRS                         |
| 06   | N2-99K24  | 29.002 | 3.2.0 | 069 |     | R99    | A   | Correction of the USSD procedure in the HLR.                                        | 3.3.0    | USSD & Follow Me             |
| 06   | N2-99K52  | 29.002 | 3.2.0 | 060 | 1   | R99    | C   | MAP Impacts for Location Services (LCS)                                             | 3.3.0    | Location Services            |
| 06   | N2-99K58  | 29.002 | 3.2.0 | 045 | 4   | R99    | B   | Authentication Enhancements                                                         | 3.3.0    | Security                     |
| 06   | N2-99K60  | 29.002 | 3.2.0 | 050 | 5   | R99    | C   | QoS-Subscribed field modification                                                   | 3.3.0    | QoS enhancements             |
| 06   | N2-99L20  | 29.002 | 3.2.0 | 073 | 1   | R99    | C   | Introduction of CAMEL Phase 3 in 3GPP TS 29.002                                     | 3.3.0    | CAMEL Phase 3                |
| 06   | N2-99J52  | 29.002 | 3.2.0 | 074 |     | R99    | D   | Restructuring of MAP Location Management Procedures for the Circuit Switched Domain | 3.3.0    | TEI                          |
| 06   | N2-99J92  | 29.002 | 3.2.0 | 068 |     | R99    | B   | Update of SDLs to support Super-Charger                                             | 3.3.0    | Super-Charger                |
|      |           |        | 3.3.0 |     |     |        |     | New version created to fix a CR implementation error                                | 3.3.1    |                              |
| 07   | N2B000436 | 29.002 | 3.3.1 | 048 | 5   | R99    | B   | Introduction of Multicall                                                           | 3.4.0    | Multicall                    |
| 07   | N2B000319 | 29.002 | 3.3.1 | 059 | 1   | R99    | B   | Alternative solution for ALR                                                        | 3.4.0    | CAMEL phase 3                |
| 07   | N2B000461 | 29.002 | 3.3.1 | 063 | 4   | R99    | B   | MNP Database Mismatch                                                               | 3.4.0    | MNP                          |
| 07   | N2B000375 | 29.002 | 3.3.1 | 066 | 5   | R99    | B   | Addition of the FTN-AddressString                                                   | 3.4.0    | Call Forwarding Enhancements |
| 07   | N2B000456 | 29.002 | 3.3.1 | 079 | 4   | R99    | C   | Correction of SS Invocation Notification for CCBS                                   | 3.4.0    | CAMEL Phase 3                |
| 07   | N2A000023 | 29.002 | 3.3.1 | 080 |     | R99    | F   | Corrections to ATSI, ATM, NCSD                                                      | 3.4.0    | CAMEL Phase 3                |
| 07   | N2B000046 | 29.002 | 3.3.1 | 083 |     | R99    | A   | Privacy notification/verification for call related privacy class                    | 3.4.0    | Location Services (LCS)      |
| 07   | N2B000142 | 29.002 | 3.3.1 | 084 | 2   | R99    | B   | Addition of CS Allocation/retention priority                                        | 3.4.0    | QoS enhancements             |
| 07   | N2B000144 | 29.022 | 3.3.1 | 086 | 1   | R99    | D   | Editorial cleanup of 29.002                                                         | 3.4.0    | TEI                          |
| 07   | N2B000100 | 29.002 | 3.3.1 | 087 |     | R99    | A   | Correction of LSA information                                                       | 3.4.0    | SoLSA                        |
| 07   | N2B000067 | 29.002 | 3.3.1 | 089 |     | R99    | F   | Security interworking between release 99 and pre-99 MSC/VLRs                        | 3.4.0    | Security                     |
| 07   | N2B000113 | 29.002 | 3.3.1 | 090 | 1   | R99    | B   | Improving GPRS charging efficiency                                                  | 3.4.0    | GPRS                         |
| 07   | N2B000120 | 29.002 | 3.3.1 | 094 | 2   | R99    | C   | QoS-Subscribed field enhancements                                                   | 3.4.0    | QoS enhancements             |
| 07   | N2B000322 | 29.002 | 3.3.1 | 095 | 1   | R99    | C   | RANAP support on the E-interface                                                    | 3.4.0    | Handover                     |
| 07   | N2B000191 | 29.002 | 3.3.1 | 099 |     | R99    | B   | UMTS Authentication                                                                 | 3.4.0    | Security                     |
| 07   | N2B000466 | 29.002 | 3.3.1 | 100 | 5   | R99    | C   | Support of 3G Handover, including Multicall                                         | 3.4.0    | Multicall                    |
| 07   | N2B000372 | 29.002 | 3.3.1 | 101 | 1   | R99    | B   | Introduction of Service Area Identification                                         | 3.4.0    | TEI                          |
| 07   | N2B000380 | 29.002 | 3.3.1 | 102 | 2   | R99    | F   | Clarification on Authentication Info Retrieval                                      | 3.4.0    | Security                     |
| 07   | N2B000330 | 29.002 | 3.3.1 | 103 | 1   | R99    | B   | Addition of UMTS security to MAP B interface                                        | 3.4.0    | Security                     |
| 07   | N2B000244 | 29.002 | 3.3.1 | 104 |     | R99    | F   | Re-Synchronisation Info                                                             | 3.4.0    | UMTS Security                |
| 07   | N2B000324 | 29.002 | 3.3.1 | 105 | 1   | R99    | C   | Introduction of additional service parameters for inter-system handover             | 3.4.0    | Handover                     |
| 07   | N2B000281 | 29.002 | 3.3.1 | 107 |     | R99    | D   | Removal of architectural information from clause 4                                  | 3.4.0    | TEI                          |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                                           | NEW_VERS | WORKITEM              |
|------|-----------|--------|-------|-----|-----|--------|-----|---------------------------------------------------------------------------------------------------|----------|-----------------------|
| 07   | N2-000454 | 29.002 | 3.3.1 | 110 | 1   | R99    | B   | Introduction of Authentication Failure Report                                                     | 3.4.0    | Security              |
| 07   | N2B000357 | 29.002 | 3.3.1 | 111 |     | R99    | B   | Use of MAP private extensions to implement region-specific requirements                           | 3.4.0    | TEI                   |
| 07   | N2B000470 | 29.002 | 3.3.1 | 112 |     | R99    | A   | Prioritisation of MAP application context related to VGCS/VBS                                     | 3.4.0    | ASCI Phase 2          |
| 07   | N2B000472 | 29.002 | 3.3.1 | 113 |     | R99    | F   | Correction of SS-Codes for LCS                                                                    | 3.4.0    | LCS                   |
| 08   | N4-000098 | 29.002 | 3.4.0 | 115 | 1   | R99    | F   | Minor corrections to CAMEL3 NSDC/ATM/ATSI information flows                                       | 3.5.0    | CAMEL Phase 3         |
| 08   | N4-000094 | 29.002 | 3.4.0 | 117 | 1   | R99    | A   | Using DSD to delete CCBS-B from the subscriber                                                    | 3.5.0    | CCBS                  |
| 08   | N4-000089 | 29.002 | 3.4.0 | 118 | 1   | R99    | F   | Indication in PRN of support of Long FTNs                                                         | 3.5.0    | CF enhancements       |
| 08   | N4-000073 | 29.002 | 3.4.0 | 120 | 1   | R99    | F   | QoS-Subscribed field enhancements                                                                 | 3.5.0    | QoS enhancements      |
| 08   | N4-000050 | 29.002 | 3.4.0 | 121 |     | R99    | F   | Correction of introduction of additional service parameters for inter-system handover             | 3.5.0    | Handover/Relocation   |
| 08   | N4-000100 | 29.002 | 3.4.0 | 122 | 2   | R99    | C   | Proposed information flow on NSDC                                                                 | 3.5.0    | CAMEL Phase 3         |
| 08   | N4-000321 | 29.002 | 3.4.0 | 124 | 3   | R99    | C   | CAMEL Subscription Info                                                                           | 3.5.0    | CAMEL Phase 3         |
| 08   | N4-000068 | 29.002 | 3.4.0 | 125 |     | R99    | A   | Clarification to GMLC List definition                                                             | 3.5.0    | LCS                   |
| 08   | N4-000320 | 29.002 | 3.4.0 | 127 | 1   | R99    | F   | Optionality of parameters in d-csi and in sms-csi                                                 | 3.5.0    | CAMEL Phase 3         |
| 08   | N4-000209 | 29.002 | 3.4.0 | 130 |     | R99    | F   | Version 3 tags for handover messages                                                              | 3.5.0    | Handover              |
| 08   | N4-000211 | 29.002 | 3.4.0 | 132 |     | R99    | A   | Correction of version handling at dialogue establishment                                          | 3.5.0    | TEI                   |
| 08   | N4-000357 | 29.002 | 3.4.0 | 133 | 1   | R99    | F   | Various corrections and/or cleanup to 29.002                                                      | 3.5.0    | TEI                   |
| 08   | N4-000217 | 29.002 | 3.4.0 | 134 |     | R99    | A   | Correction of errors in Figure 25.1/1: Macro Receive_Open_Ind                                     | 3.5.0    | TEI                   |
| 08   | N4-000326 | 29.002 | 3.4.0 | 135 | 1   | R99    | B   | Addition of charging characteristics per PDP context                                              | 3.5.0    | TEI                   |
| 08   | N4-000264 | 29.002 | 3.4.0 | 138 |     | R99    | F   | Clarification of SAI-ack segmentation procedure                                                   | 3.5.0    | Security              |
| 08   | N4-000392 | 29.002 | 3.4.0 | 139 | 1   | R99    | A   | Indication of unsupported position method                                                         | 3.5.0    | LCS                   |
| 08   | N4-000276 | 29.002 | 3.4.0 | 141 |     | R99    | A   | Clarification for ReportSM-DeliveryStatus operation                                               | 3.5.0    | GPRS                  |
| 08   | N4-000349 | 29.002 | 3.4.0 | 142 | 1   | R99    | C   | Addition of a parameter in the subsequent Handover from UMTS to GSM with Multicall                | 3.5.0    | Multicall             |
| 08   | N4-000278 | 29.002 | 3.4.0 | 143 |     | R99    | D   | Editorial correction to MSC-A handover SDLs                                                       | 3.5.0    | Multicall             |
| 08   | N4-000378 | 29.002 | 3.4.0 | 144 | 1   | R99    | A   | Use of NAM parameter with MAP-INSERT-SUBSCRIBER-DATA service between HLR and SGSN                 | 3.5.0    | GPRS                  |
| 08   | N4-000293 | 29.002 | 3.4.0 | 145 |     | R99    | F   | Addition of state attributes in Forward group call signalling                                     | 3.5.0    | ASCI                  |
| 08   | N4-000294 | 29.002 | 3.4.0 | 146 |     | R99    | F   | New user error 'target cell outside group call area' in MAP Prepare Handover message              | 3.5.0    | ASCI                  |
| 08   | N4-000374 | 29.002 | 3.4.0 | 149 |     | R99    | A   | Correction to the description of MAP-MO-Forward-Short-Message service                             | 3.5.0    | TEI                   |
| 08   | N4-000407 | 29.002 | 3.5.0 | 148 | 4   | R00    | B   | Changes to MAP for secure transport of MAP messages                                               | 4.0.0    | Security              |
| 08   |           | 29.002 | 4.0.0 |     |     | R00    |     | Version 4.0.1 created to allow inclusion of automatic update of Annexes A and B and of section 17 | 4.0.1    |                       |
| 09   | N4-000543 | 29.002 | 4.0.1 | 152 | 1   | R00    | F   | Clarifications for secure MAP transport                                                           | 4.1.0    | Core Network Security |
| 09   | N4-000539 | 29.002 | 4.0.1 | 153 | 1   | R00    | D   | Generalization of version handling text in clause 18.2.4                                          | 4.1.0    | TEI                   |
| 09   | N4-000491 | 29.002 | 4.0.1 | 158 |     | R00    | A   | Deletion of informative Annexe C                                                                  | 4.1.0    | TEI                   |
| 09   | N4-000540 | 29.002 | 4.0.1 | 159 |     | R00    | A   | Aligning 29.002 with 25.413 (UTRAN Iu Interface RANAP Signalling)                                 | 4.1.0    | Handover              |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                          | NEW_VERS | WORKITEM         |
|------|-----------|--------|-------|-----|-----|--------|-----|----------------------------------------------------------------------------------|----------|------------------|
| 09   | N4-000541 | 29.002 | 4.0.1 | 160 |     | R00    | A   | AUTS and AUTN parameter length                                                   | 4.1.0    | Security         |
| 09   | N4-000744 | 29.002 | 4.0.1 | 161 | 2   | R00    | A   | Clarification on Authentication Failure Report ack                               | 4.1.0    | Security         |
| 09   | N4-000666 | 29.002 | 4.0.1 | 163 | 1   | R00    | A   | Correction on Location Information                                               | 4.1.0    | CAMEL phase 3    |
| 09   | N4-000777 | 29.002 | 4.0.1 | 174 | 2   | R00    | A   | Optionality of parameters in GPRS-CSI                                            | 4.1.0    | CAMEL phase 3    |
| 09   | N4-000788 | 29.002 | 4.0.1 | 176 | 1   | R00    | A   | Correction to QoS indication                                                     | 4.1.0    | LCS              |
| 09   | N4-000747 | 29.002 | 4.0.1 | 178 | 1   | R00    | A   | Clarification of use of Radio Resource Information                               | 4.1.0    | Handover         |
| 09   | N4-000750 | 29.002 | 4.0.1 | 180 | 2   | R00    | A   | Correction to MSC-A handover SDLs                                                | 4.1.0    | TEI              |
| 09   | N4-000736 | 29.002 | 4.0.1 | 182 |     | R00    | A   | Removal of LSALidentity from NoteMM-EventArgs                                    | 4.1.0    | CAMEL phase 3    |
| 09   | N4-000772 | 29.002 | 4.0.1 | 184 |     | R00    | A   | LCS Support for CAMEL Phase 3                                                    | 4.1.0    | LCS              |
| 09   | N4-000751 | 29.002 | 4.0.1 | 186 | 1   | R00    | A   | Correction to MSC-A handover SDLs                                                | 4.1.0    | TEI              |
| 09   | N4-000779 | 29.002 | 4.0.1 | 188 |     | R00    | A   | Clarification for segmentation of D-CSI and SMS-CSI                              | 4.1.0    | CAMEL phase 3    |
| 10   | N4-000912 | 29.002 | 4.0.1 | 166 | 3   | Rel-4  | A   | Corrections and clarifications for USSD procedures on the HLR - gsmSCF interface | 4.2.0    | USSD             |
| 10   | N4-000908 | 29.002 | 4.1.0 | 191 | 1   | Rel-4  | A   | Corrections of ISD data structure for CAMEL phase 3                              | 4.2.0    | CAMEL phase 3    |
| 10   | N4-001069 | 29.002 | 4.1.0 | 193 | 2   | Rel-4  | A   | USSD Corrections for Follow Me                                                   | 4.2.0    | USSD             |
| 10   | N4-001071 | 29.002 | 4.1.0 | 196 | 1   | Rel-4  | A   | GSM to 3G Handover: MAP parameter Target Cell ID                                 | 4.2.0    | Handover         |
| 10   | N4-000921 | 29.002 | 4.1.0 | 198 |     | Rel-4  | A   | ASN.1 description of targetCellId                                                | 4.2.0    | Handover         |
| 10   | N4-001073 | 29.002 | 4.1.0 | 200 | 1   | Rel-4  | A   | IMSI in MAP_PREPARE_HANDOVER                                                     | 4.2.0    | Handover         |
| 10   | N4-001076 | 29.002 | 4.1.0 | 208 | 1   | Rel-4  | A   | Alignment of the Target RNC-ID                                                   | 4.2.0    | Handover         |
| 10   | N4-001089 | 29.002 | 4.1.0 | 211 | 1   | Rel-4  | A   | Export of GSN-Address data type                                                  | 4.2.0    | CAMEL phase 3    |
| 10   | N4-001095 | 29.002 | 4.1.0 | 212 |     | Rel-4  | A   | Transport of long RANAP messages on MAP-E interface                              | 4.2.0    | Handover         |
| -    | -         | 29.002 | 4.2.0 | -   | -   | Rel-4  | -   | Automatic update of annexes A and B                                              | 4.2.1    | -                |
| 11   | N4-010036 | 29.002 | 4.2.1 | 206 | 1   | Rel-4  | A   | Correction to LCS application context                                            | 4.3.0    | LCS              |
| 11   | N4-010276 | 29.002 | 4.2.1 | 215 | 2   | Rel-4  | B   | Add parameters to ISD and SRI for GPRS to handle ODB for PS                      | 4.3.0    | ODB enhancements |
| 11   | N4-010033 | 29.002 | 4.2.1 | 217 |     | Rel-4  | A   | Correction to maximum number of RAB's                                            | 4.3.0    | Multicall        |
| 11   | N4-010198 | 29.002 | 4.2.1 | 222 | 2   | Rel-4  | B   | PS domain support for LCS Release 4                                              | 4.3.0    | LCS              |
| 11   | N4-010058 | 29.002 | 4.2.1 | 224 |     | Rel-4  | A   | Failure of Update GPRS Location when HLR is not reachable                        | 4.3.0    | GPRS R97         |
| 11   | N4-010287 | 29.002 | 4.2.1 | 231 | 1   | Rel-4  | B   | Extension of call related privacy class for LCS Release 4                        | 4.3.0    | LCS              |
| 11   | N4-010375 | 29.002 | 4.2.1 | 232 | 2   | Rel-4  | B   | Maximum number of LCS Clients                                                    | 4.3.0    | LCS              |
| 11   | N4-010261 | 29.002 | 4.2.1 | 234 |     | Rel-4  | B   | MAP over IP according to SIGTRAN                                                 | 4.3.0    | SS7IP            |
| 11   | N4-010465 | 29.002 | 4.2.1 | 236 | 1   | Rel-4  | B   | Requesting node type in authentication set request                               | 4.3.0    | SEC1-EHCS        |
| 11   | N4-010360 | 29.002 | 4.2.1 | 246 |     | Rel-4  | A   | Adding EXPORT definition for LSALidentity                                        | 4.3.0    | Camel 3          |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                                | NEW_VERS | WORKITEM    |
|------|-----------|--------|-------|-----|-----|--------|-----|----------------------------------------------------------------------------------------|----------|-------------|
| 11   | N4-010361 | 29.002 | 4.2.1 | 247 |     | Rel-4  | A   | Removing duplicate parameters from ss-CSI                                              | 4.3.0    | CAMEL 3     |
| 11   | N4-010362 | 29.002 | 4.2.1 | 248 |     | Rel-4  | A   | Correction to description of SS-CSI in HLR to VLR information flow                     | 4.3.0    | CAMEL 3     |
| 11   | N4-010365 | 29.002 | 4.2.1 | 250 |     | Rel-4  | A   | GSM to UMTS handover: addition of MAP parameter RNC ID                                 | 4.3.0    | Handover    |
| 11   | N4-010393 | 29.002 | 4.2.1 | 252 |     | Rel-4  | A   | Clarification of the use of multicall bearer information                               | 4.3.0    | Multicall   |
| 11   | N4-010428 | 29.002 | 4.2.1 | 258 |     | Rel-4  | A   | Adding EXPORT definition for GeographicalInformation                                   | 4.3.0    | Camel 3     |
| 11   | N4-010446 | 29.002 | 4.2.1 | 260 |     | Rel-4  | A   | Failure of Authentication Parameter GPRS when HLR is not reachable                     | 4.3.0    | GPRS R97    |
| 11   | N4-010484 | 29.002 | 4.2.1 | 262 | 1   | Rel-4  | A   | Correction to D-CSI                                                                    | 4.3.0    | CAMEL 3     |
| 12   | N4-010728 | 29.002 | 4.3.0 | 239 | 4   | Rel-4  | A   | Addition of selected UMTS algorithm indication to the handover procedures              | 4.4.0    | Handover    |
| 12   | N4-010730 | 29.002 | 4.3.0 | 241 | 4   | Rel-4  | A   | Addition of allowed GSM algorithms indication to the handover procedures               | 4.4.0    | Handover    |
| 12   | N4-010733 | 29.002 | 4.3.0 | 244 | 4   | Rel-4  | A   | Addition of allowed UMTS algorithm indication to the handover procedures               | 4.4.0    | Handover    |
| 12   | N4-010735 | 29.002 | 4.3.0 | 245 | 4   | Rel-4  | A   | Addition of selected GSM algorithm indication to the handover procedures               | 4.4.0    | Handover    |
| 12   | N4-010739 | 29.002 | 4.3.0 | 254 | 2   | Rel-4  | A   | Addition of radio resource list to the handover procedures                             | 4.4.0    | Multicall   |
| 12   | NP-010247 | 29.002 | 4.3.0 | 256 | 3   | Rel-4  | A   | Addition of GSM channel type and GSM chosen channel indications to handover procedures | 4.4.0    | Handover    |
| 12   | N4-010787 | 29.002 | 4.3.0 | 264 | 3   | Rel-4  | A   | Add support in MAP for all shapes defined in 23.032                                    | 4.4.0    | LCS         |
| 12   | N4-010633 | 29.002 | 4.3.0 | 270 | 1   | Rel-4  | A   | Correction to description of RNCId parameter                                           | 4.4.0    | Handover    |
| 12   | N4-010635 | 29.002 | 4.3.0 | 272 | 1   | Rel-4  | A   | Correction to Encryption Information and Integrity Protection parameters               | 4.4.0    | Handover    |
| 12   | N4-010767 | 29.002 | 4.3.0 | 279 | 3   | Rel-4  | A   | Essential drawbacks on services due to introduction of Super-Charger function          | 4.4.0    | TEI         |
| 12   | N4-010741 | 29.002 | 4.3.0 | 283 | 1   | Rel-4  | A   | Introduction of selected Rab-id to the Process Access Signalling operation             | 4.4.0    | Multicall   |
| 12   | N4-010673 | 29.002 | 4.3.0 | 285 |     | Rel-4  | A   | Mistake in the definition of Authentication Failure Report Application Context         | 4.4.0    | SEC         |
| 12   | N4-010551 | 29.002 | 4.3.0 | 266 |     | Rel-4  | A   | Add support in MAP for Ellipsoid Point                                                 | 4.4.0    | LCS         |
| 12   | N4-010778 | 29.002 | 4.3.0 | 168 | 5   | Rel-4  | C   | Security Header modification                                                           | 4.4.0    | Security    |
| 12   | N4-010785 | 29.002 | 4.3.0 | 267 | 3   | Rel-4  | C   | Additional Parameters in Authentication Failure Report                                 | 4.4.0    | SEC1 - EHCS |
| 12   | N4-010783 | 29.002 | 4.3.0 | 268 | 3   | Rel-4  | F   | MS presence notification procedure for LCS                                             | 4.4.0    | LCS1        |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                       | NEW_VERS | WORKITEM      |
|------|-----------|--------|-------|-----|-----|--------|-----|-------------------------------------------------------------------------------|----------|---------------|
| 12   | N4-010790 | 29.002 | 4.3.0 | 289 | 2   | Rel-4  | F   | Component level granularity of protection                                     | 4.4.0    | SEC1          |
|      |           | 29.002 | 4.4.0 |     |     | Rel-4  |     | Corrupted headers fixed                                                       | 4.4.1    |               |
| 13   | N4-010840 | 29.002 | 4.4.1 | 290 |     | Rel-4  | F   | Clarifications on long forwarded-to numbers                                   | 4.5.0    | TEI4          |
| 13   | N4-010929 | 29.002 | 4.4.1 | 291 | 1   | Rel-4  | F   | Corrections for Deferred MT-LR                                                | 4.5.0    | LCS1          |
| 13   | N4-010930 | 29.002 | 4.4.1 | 292 | 2   | Rel-4  | F   | Clarifications on SupportedLCS-CapabilitySets                                 | 4.5.0    | LCS1          |
| 13   | N4-010958 | 29.002 | 4.4.1 | 295 | 2   | Rel4   | F   | Corrections on the introduction of LCS for PS domain                          | 4.5.0    | LCS1          |
| 13   | N4-010970 | 29.002 | 4.4.1 | 302 | 2   | Rel-4  | F   | Additional SGSN related values to Access Type                                 | 4.5.0    | SEC1-EHCS     |
| 13   | N4-010976 | 29.002 | 4.4.1 | 306 |     | Rel-4  | A   | Addition of data type definitions to EXPORT statements for the usage in CAP   | 4.5.0    | CAMEL3        |
| 13   | N4-011017 | 29.002 | 4.4.1 | 307 | 2   | Rel-4  | A   | Minimum MAP application context for intersystem MSC handover from GSM to UMTS | 4.5.0    | Handover      |
| 13   | N4-011019 | 29.002 | 4.4.1 | 309 | 2   | Rel-4  | A   | Minimum MAP application context for intersystem MSC handover from UMTS to GSM | 4.5.0    | Handover      |
| 13   | N4-010845 | 29.002 | 4.4.1 | 277 | 1   | Rel4   | F   | Correction on the SDL of NW initiated USSD operations                         | 4.5.0    | TEI           |
| 13   |           | 29.002 | 4.4.1 |     |     | Rel-4  |     | Editorial Clean up                                                            | 4.5.0    |               |
| 14   | N4-011031 | 29.002 | 4.5.0 | 313 |     | Rel-4  | A   | Clarification on LCS parameters in MAP                                        | 4.6.0    | LCS1          |
| 14   | N4-011043 | 29.002 | 4.5.0 | 314 |     | Rel-4  | F   | Handling of linked operations in the MAP protocol machine                     | 4.6.0    | TEI4          |
| 14   | N4-011285 | 29.002 | 4.5.0 | 316 |     | Rel-4  | F   | Corrections on the SDL diagrams for LCS                                       | 4.6.0    | LCS1          |
| 14   | N4-011198 | 29.002 | 4.5.0 | 318 | 1   | Rel-4  | A   | Indication of deletion of CSI in Notify Subscriber Data Change                | 4.6.0    | CAMEL3        |
| 14   | N4-011074 | 29.002 | 4.5.0 | 320 |     | Rel-4  | A   | Correct length of Add-GeographicalInformation                                 | 4.6.0    | LCS           |
| 14   | N4-011091 | 29.002 | 4.5.0 | 322 |     | Rel-4  | A   | Clarify encoding of RNC Id                                                    | 4.6.0    | Handover      |
| 14   | N4-011094 | 29.002 | 4.5.0 | 324 |     | Rel-4  | A   | Clarify encoding of RANAP parameters in MAP                                   | 4.6.0    | Handover      |
| 14   | N4-011097 | 29.002 | 4.5.0 | 325 |     | Rel-4  | F   | Clarifications on long forwarded-to numbers                                   | 4.6.0    | TEI4          |
| 14   | N4-011227 | 29.002 | 4.5.0 | 331 | 1   | Rel-4  | A   | Clarification of methodology for maintaining data consistency in Supercharger | 4.6.0    | TEI           |
| 14   | N4-011173 | 29.002 | 4.5.0 | 334 |     | Rel-4  | A   | Addition of RAB ID to Prepare Handover procedure                              | 4.6.0    | Multicall     |
| 14   | N4-011175 | 29.002 | 4.5.0 | 336 |     | Rel-4  | A   | Correction to the Allowed GSM Algorithms parameter                            | 4.6.0    | Handover      |
| 14   | N4-011177 | 29.002 | 4.5.0 | 337 | 1   | Rel-4  | F   | Correction of references                                                      | 4.6.0    | TEI4          |
| 14   | N4-011190 | 29.002 | 4.5.0 | 339 |     | Rel-4  | A   | CUG-Info is not exported from 29.002                                          | 4.6.0    | CAMEL3        |
| 14   | N4-011209 | 29.002 | 4.5.0 | 341 |     | Rel-4  | A   | Clarification on NSCD when data is withdrawn                                  | 4.6.0    | CAMEL phase 3 |
| 14   | N4-011211 | 29.002 | 4.5.0 | 343 |     | Rel-4  | A   | Clarification of sending CAMEL information in stand alone ISD case            | 4.6.0    | CAMEL phase 3 |
| 14   | N4-011262 | 29.002 | 4.5.0 | 344 |     | Rel-4  | F   | Correction of the priority for "SRI for LCS"                                  | 4.6.0    | LCS1          |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                           | NEW_VERS | WORKITEM      |
|------|-----------|--------|-------|-----|-----|--------|-----|-----------------------------------------------------------------------------------|----------|---------------|
| 14   | N4-011273 | 29.002 | 4.5.0 | 347 |     | Rel-4  | A   | ASN.1 correction                                                                  | 4.6.0    | CAMEL         |
| 14   | N4-011437 | 29.002 | 4.5.0 | 349 | 2   | Rel-4  | F   | Handling of MNRR in the HLR & SMS-GMSC                                            | 4.6.0    | TEI4          |
| 14   | N4-011433 | 29.002 | 4.5.0 | 354 | 1   | Rel-4  | A   | Minimum MAP application context for G2G inter-MSC handover                        | 4.6.0    | Handover      |
| 14   | N4-011439 | 29.002 | 4.5.0 | 359 | 2   | Rel-4  | A   | Alignment of parameter lengths with those prescribed in 08.08                     | 4.6.0    | TEI           |
| 14   | N4-011423 | 29.002 | 4.5.0 | 360 | 1   | Rel-4  | F   | Aligning the security header elements with TS33.200                               | 4.6.0    | TEI-4         |
| 14   | N4-011394 | 29.002 | 4.5.0 | 364 |     | Rel-4  | A   | Syntax error in the ATM result and ATSI result                                    | 4.6.0    | CAMEL phase 3 |
| 14   | N4-011381 | 29.002 | 4.6.0 | 355 | 1   | Rel-5  | B   | LCS Capability Handling for UE's                                                  | 5.0.0    | TEI5          |
| 15   | N4-020300 | 29.002 | 5.0.0 | 368 | 4   | Rel-5  | B   | Collective CAMEL Phase 4 CR                                                       | 5.1.0    | CAMEL4        |
| 15   | N4-020013 | 29.002 | 5.0.0 | 373 |     | Rel-5  | A   | Inclusion of complete ODB data in ATSI and NSDC                                   | 5.1.0    | CAMEL3        |
| 15   | N4-020266 | 29.002 | 5.0.0 | 381 | 2   | Rel-5  | B   | Introduction of the "Requestor ID"                                                | 5.1.0    | LCS1          |
| 15   | N4-020068 | 29.002 | 5.0.0 | 386 |     | Rel-5  | A   | Correction to AC version of gprsLocationInfoRetrievalContext                      | 5.1.0    | TEI4          |
| 15   | N4-020248 | 29.002 | 5.0.0 | 390 | 1   | Rel-5  | A   | Incomplete description of Restore Data parameters                                 | 5.1.0    | TEI4          |
| 15   | N4-020183 | 29.002 | 5.0.0 | 403 |     | Rel-5  | A   | Clarification on CODEC-Info                                                       | 5.1.0    | TEI           |
| 15   | N4-020250 | 29.002 | 5.0.0 | 407 | 1   | Rel-5  | A   | ODB alignment                                                                     | 5.1.0    | TEI4          |
| 16   | N4-020530 | 29.002 | 5.1.0 | 428 | 2   | Rel-5  | A   | LCS: error handling if shape not supported by GMLC                                | 5.2.0    | LCS1          |
| 16   | N4-020622 | 29.002 | 5.1.0 | 453 |     | Rel-5  | A   | Addition of Radio Resource List to the Forward Access Signalling operation        | 5.2.0    | Multicall     |
| 16   | N4-020641 | 29.002 | 5.1.0 | 460 |     | Rel-5  | A   | Clarification on Resume Call Handling                                             | 5.2.0    | TEI           |
| 16   | N4-020746 | 29.002 | 5.1.0 | 440 | 2   | Rel-5  | A   | Clarification on SendAuthenticationInfo                                           | 5.2.0    | TEI           |
| 16   | N4-020750 | 29.002 | 5.1.0 | 446 | 1   | Rel-5  | A   | Addition of Service Handover parameters to MAP Handover messages                  | 5.2.0    | Handover      |
| 16   | N4-020318 | 29.002 | 5.1.0 | 398 |     | Rel-5  | C   | Check of NAM and Requesting Node Type on receipt of SendAuthenticationInfo        | 5.2.0    | TEI4          |
| 16   | N4-020333 | 29.002 | 5.1.0 | 410 |     | Rel-5  | A   | Handling the MNRR flag in the HLR & SMS-GMSC                                      | 5.2.0    | TEI4          |
| 16   | N4-020499 | 29.002 | 5.1.0 | 420 | 1   | Rel-5  | A   | Clarification of introducing Session related and unrelated class                  | 5.2.0    | LCS1-PS       |
| 16   | N4-020511 | 29.002 | 5.1.0 | 430 | 1   | Rel-5  | A   | Corrections on the introduction of LCS for PS domain                              | 5.2.0    | LCS           |
| 16   | N4-020743 | 29.002 | 5.1.0 | 448 | 1   | Rel-5  | A   | Corrections in SS-code chapter                                                    | 5.2.0    | TEI           |
| 16   | N4-020408 | 29.002 | 5.1.0 | 423 |     | Rel-5  | C   | Clarification of handling of MT-SMS-TPDU-Type and SMS-TDP                         | 5.2.0    | CAMEL4        |
| 16   | N4-020410 | 29.002 | 5.1.0 | 425 |     | Rel-5  | A   | Clarify conditions to trigger restart of MTLR-Deferred procedure                  | 5.2.0    | LCS1          |
| 16   | N4-020468 | 29.002 | 5.1.0 | 414 | 1   | Rel-5  | F   | Corrections to the handling of Any Time Interrogation and Provide Subscriber Info | 5.2.0    | CAMEL4        |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                  | NEW_VERS | WORKITEM        |
|------|-----------|--------|-------|-----|-----|--------|-----|--------------------------------------------------------------------------|----------|-----------------|
| 16   | N4-020476 | 29.002 | 5.1.0 | 435 | 1   | Rel-5  | D   | Change PS-connected in PS-PDPactive                                      | 5.2.0    | CAMEL4          |
| 16   | N4-020483 | 29.002 | 5.1.0 | 422 | 1   | Rel-5  | F   | Triggering of gsmSCF for MT-SMS-CSI                                      | 5.2.0    | CAMEL4          |
| 16   | N4-020485 | 29.002 | 5.1.0 | 408 | 2   | Rel-5  | C   | Transferring the MS classmark & IMEI to the gsmSCF                       | 5.2.0    | CAMEL4          |
| 16   | N4-020543 | 29.002 | 5.1.0 | 441 |     | Rel-5  | F   | Correction of Object Identifiers for ASN.1 modules                       | 5.2.0    | TEI             |
| 16   | N4-020608 | 29.002 | 5.1.0 | 450 |     | Rel-5  | C   | Enhancement to LCS in the PS domain                                      | 5.2.0    | LCS             |
| 16   | N4-020623 | 29.002 | 5.1.0 | 454 |     | Rel-5  | F   | Addition of Location Information GPRS to Note MM Event operation         | 5.2.0    | CAMEL4-NMM      |
| 16   | N4-020703 | 29.002 | 5.1.0 | 421 | 4   | Rel-5  | B   | LCS: Codeword and Service Type                                           | 5.2.0    | LCS1            |
| 16   | N4-020756 | 29.002 | 5.1.0 | 436 | 2   | Rel-5  | B   | Splitting of CAMEL phase 4                                               | 5.2.0    | CAMEL4          |
| 17   | N4-021001 | 29.002 | 5.2.0 | 437 | 3   | Rel-5  | F   | Compatible upgrade to ASN.1:1997 of 29.002                               | 5.3.0    | TEI             |
| 17   | NP-020399 | 29.002 | 5.2.0 | 462 | 2   | Rel-5  | F   | Introduction of GERAN classmark                                          | 5.3.0    | TEI             |
| 17   | N4-020841 | 29.002 | 5.2.0 | 465 |     | Rel-5  | F   | Clarification on Call Deflection                                         | 5.3.0    | Call Deflection |
| 17   | N4-021040 | 29.002 | 5.2.0 | 470 | 1   | Rel-5  | F   | Correction to the usage of "Roaming not allowed" error                   | 5.3.0    | TEI5            |
| 17   | N4-021041 | 29.002 | 5.2.0 | 471 | 1   | Rel-5  | A   | Clarifications on Send Identification                                    | 5.3.0    | TEI             |
| 17   | N4-021094 | 29.002 | 5.2.0 | 479 | 2   | Rel-5  | C   | Handling of partial implementations of CAMEL phase 4                     | 5.3.0    | CAMEL4          |
| 17   | N4-021047 | 29.002 | 5.2.0 | 480 |     | Rel-5  | C   | Removal of ChargingNotification feature                                  | 5.3.0    | CAMEL4          |
| 17   | N4-020810 | 29.002 | 5.2.0 | 481 |     | Rel-5  | B   | CR29.002-443 (rel5) on extensions to ATM for CAMEL control of IMS        | 5.3.0    | IMS-CAMEL       |
| 17   | N4-020809 | 29.002 | 5.2.0 | 482 |     | Rel-5  | B   | CR to 29.002 for the support of the MAP Si interface                     | 5.3.0    | IMS-CAMEL       |
| 18   | N4-021290 | 29.002 | 5.3.0 | 499 |     | Rel-5  | A   | Correction to segmentation of O-CSI and T-CSI                            | 5.4.0    | CAMEL3          |
| 18   | N4-021418 | 29.002 | 5.3.0 | 508 |     | Rel-5  | A   | ODB correction                                                           | 5.4.0    | CAMEL3          |
| 18   | N4-021563 | 29.002 | 5.3.0 | 511 | 1   | Rel-5  | A   | Addtion of reference number to deferred location request procedure       | 5.4.0    | LCS1            |
| 18   | N4-021573 | 29.002 | 5.3.0 | 516 | 2   | Rel-5  | A   | Correction to the Service Handover parameters                            | 5.4.0    | Multicall       |
| 18   | N4-021299 | 29.002 | 5.3.0 | 442 | 3   | Rel-5  | F   | Description of MT SM delivery via two serving nodes                      | 5.4.0    | TEI5            |
| 18   | N4-021294 | 29.002 | 5.3.0 | 474 | 2   | Rel-5  | F   | Correction of handling of MT-SMS in the SGSN                             | 5.4.0    | CAMEL4          |
| 18   | N4-021124 | 29.002 | 5.3.0 | 475 |     | Rel-5  | F   | ODB and CB for SMS                                                       | 5.4.0    | TEI5            |
| 18   | N4-021153 | 29.002 | 5.3.0 | 486 |     | Rel-5  | F   | Correction of IMEI check for SGSN                                        | 5.4.0    | TEI5            |
| 18   | N4-021467 | 29.002 | 5.3.0 | 489 | 5   | Rel-5  | F   | Available codecs list and selected codec indication                      | 5.4.0    | TEI5            |
| 18   | N4-021194 | 29.002 | 5.3.0 | 490 |     | Rel-5  | F   | Clarification of the use of Requested CAMEL Subscription Info parameters | 5.4.0    | CAMEL4          |

| SMG# | TDoc      | SPEC   | VERS  | CR  | REV | PHAS E | CAT | SUBJECT                                                                               | NEW_VERS | WORKITEM  |
|------|-----------|--------|-------|-----|-----|--------|-----|---------------------------------------------------------------------------------------|----------|-----------|
| 18   | N4-021252 | 29.002 | 5.3.0 | 495 |     | Rel-5  | F   | Correction to RCH – adding O-CSI trigger criteria                                     | 5.4.0    | CAMEL4    |
| 18   | N4-021264 | 29.002 | 5.3.0 | 496 |     | Rel-5  | F   | Additional MM-Code for MG-CSI                                                         | 5.4.0    | CAMEL4    |
| 18   | N4-021296 | 29.002 | 5.3.0 | 497 | 1   | Rel-5  | F   | Additional handling of partial implementations of CAMEL phase 4                       | 5.4.0    | CAMEL4    |
| 18   | N4-021383 | 29.002 | 5.3.0 | 512 |     | Rel-5  | F   | Correcion of Codeword Handling                                                        | 5.4.0    | LCS1-PS   |
| 18   | N4-021443 | 29.002 | 5.3.0 | 513 |     | Rel-5  | F   | Reference to TS 23.078 in TS 29.002 regarding handling of VMSC address is missing     | 5.4.0    | CAMEL4    |
| 18   | N4-021524 | 29.002 | 5.3.0 | 521 | 1   | Rel-5  | F   | Editorial clean-up                                                                    | 5.4.0    | TEI5      |
| 18   | N4-021531 | 29.002 | 5.3.0 | 522 |     | Rel-5  | F   | Introduction of the CHOICE element “netDetNotReachable” for PS-SubscriberState        | 5.4.0    | CAMEL4    |
| 19   | N4-030324 | 29.002 | 5.4.0 | 523 | 3   | Rel-5  | F   | Clean-up of SMS procedures chapter                                                    | 5.5.0    | TEI5      |
| 19   | NP-030068 | 29.002 | 5.4.0 | 544 | 2   | Rel-5  | A   | Correction to interactions between CAMEL control of MO SMS and barring                | 5.5.0    | CAMEL3    |
| 19   | N4-030062 | 29.002 | 5.4.0 | 527 |     | Rel-5  | F   | LCS diagnostic alignment                                                              | 5.5.0    | LCS1      |
| 19   | N4-030300 | 29.002 | 5.4.0 | 532 | 1   | Rel-5  | A   | Correction to the definitions of Radio Resource List and BSSMAP Service Handover List | 5.5.0    | Multicall |
| 19   | N4-030304 | 29.002 | 5.4.0 | 540 | 2   | Rel-5  | A   | Handover of Group Calls where MSC-B has bearer established                            | 5.5.0    | TEI       |
| 19   | N4-030286 | 29.002 | 5.4.0 | 550 | 1   | Rel-5  | A   | Change of SS-Code List description for Insert Subscriber Data                         | 5.5.0    | TEI       |
| 19   | N4-030288 | 29.002 | 5.4.0 | 558 | 1   | Rel-5  | F   | Missing of “Continue Monitoring message” in SDL 21.7_3.2                              | 5.5.0    | TEI5      |
| 19   | N4-030296 | 29.002 | 5.4.0 | 562 | 1   | Rel-5  | F   | Alignment of TS 29.002 with TS 23.107 regarding QoS subscribed data                   | 5.5.0    | TEI5      |

---

## History

| <b>Document history</b> |                |             |
|-------------------------|----------------|-------------|
| V5.1.0                  | March 2002     | Publication |
| V5.2.0                  | June 2002      | Publication |
| V5.3.0                  | September 2002 | Publication |
| V5.4.0                  | December 2002  | Publication |
| V5.5.0                  | March 2003     | Publication |